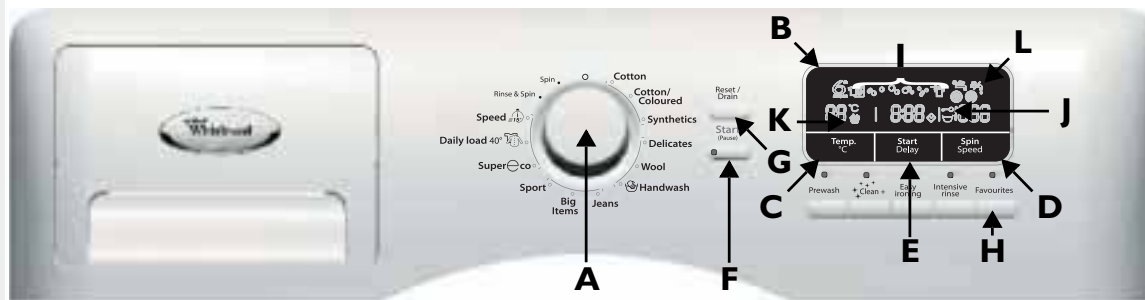
 


程序表

- A. 程序選擇按鈕
B. 顯示屏
C. 「水溫」按鈕
D. 「脫水轉速選擇」按鈕
E. 「預校開機時間」按鈕
F. 「開始/暫停」按鈕
G. 「重設/排水」按鈕
H. 「您想」記憶自選按鈕



I. 「洗衣程序」指示



J. 「兒童安全鎖」指示

K. 「過量洗衣劑」指示

L. 故障指示紅燈

洗衣程序	水溫 °C	衣服標籤	最大 洗衣量 公斤	衣物類型 / 注意事項 請遵從製造商的衣物標籤上的建議進行。	洗衣劑 及 添加劑			功能選擇				預校 開機 時間 ²⁾	轉速	
					預洗 	主洗 	柔順劑 	預洗	+Clean+ 	易燙貼 	深層過水 		脫水 轉速 選擇	最高 脫水 轉速 轉/分鐘
棉質	70 - 95 °C		8.0	一般至非常骯髒之床單、桌布及內衣褲、毛巾、襯衫等棉麻衣物。水溫80 °C或以上能消除細菌，確保您的衣物徹底潔淨。去除細菌效能是遵照2001年11月的NF EN 13697的標準進行測試的。	* ³⁾	是	*	*	*	*	*	*	*	最高
棉質 / 有顏色的	20 - 60 °C	   	8.0		* ³⁾	是	*	*	*	*	*	*	*	最高
合成纖維	20 - 60 °C	   	3.5	一般骯髒之外套、襯衫、恤衫等合成纖維(人造纖維、特雷維拉)或混棉衣物。	* ³⁾	是	*	*	*	*	*	*	*	最高
纖幼	20 - 40 °C	 	2.5	窗簾與質料纖幼之衣物、連身裙、恤衫及襯衫	* ³⁾	是	*	*	—	—	—	*	*	1000 ¹⁾
羊毛	20 - 40 °C	 	2.0	只可洗滌有羊毛標記並標明可機洗的羊毛衣物。此程序 (40 °C) 的機洗已通過Woolmark公司的測試。	—	是	*	—	—	—	—	*	*	1000 ¹⁾
 手洗	20 - 40 °C	 	2.0	標記為「手洗」的絲質、麻質、羊毛及人造絲的衣物。此程序 (40 °C) 的手洗羊毛已通過Woolmark公司的測試。	—	是	*	—	—	—	—	*	*	400 ¹⁾
牛仔布類	20 - 60 °C	 	7.0	一般骯髒之棉質牛仔裝及牛仔布類的衣物，例如褲子及外套。	*	是	*	*	*	—	—	*	*	最高
大型物件	20 - 60 °C	 	3.0	合成纖維被；羽毛，合成或人造纖維的床墊；浴室地毯及類似物件。	* ³⁾	是	*	*	—	—	*	*	*	1000 ¹⁾
運動衣物	20 - 30 °C	 	3.5	一般骯髒及汗濕的棉或微細纖維運動服。 此程序包已括預洗過程 - 可於預洗匣內加入洗衣劑。切不可加入柔順劑。	—	是	—	—	—	*	*	*	*	最高
超級慳電洗 	20 - 60 °C	 	8.0	輕微至中度骯髒的床單、桌布及內衣褲、毛巾、襯衫等棉麻衣物。 延長洗衣時間而獲得最佳的洗衣效果及減低能源消耗。 避免在夜間進行脫水時發出的噪音，可選擇脫水轉速為「0」在早上才進行脫水程序或按您的需要設定「預校開機時間」。	—	是	*	—	—	—	*	*	*	最高
60分鐘日日洗 	20 - 60 °C	   	6.0	輕微至中度骯髒的棉質或合成纖維紡織衣物。	—	是	*	—	—	*	*	*	*	最高
15分鐘極速洗 	20 - 30 °C	 	3.0	適合只穿著了短時間由棉質、人造纖維及混棉製成之外衣。	—	是	*	—	—	—	—	*	*	最高
過水 & 脫水	—	—	8.0	與「棉質」程序的最後一次過水及最後脫水相同。	—	—	*	—	—	—	*	*	*	最高
排水	—	—	8.0	此程序的強力脫水，與「棉質」程序的脫水過程相同。	—	—	—	—	—	—	—	*	*	最高

*：可選擇 / 是：須放入洗衣劑

1) 為更好地護理衣物，脫水轉速限制於這些程序。

2) 當使用「預校開機時間」功能時切勿使用液體洗衣劑。

3) 當使用「預洗」功能時切勿使用液體洗衣劑。

此洗衣機的羊毛及手洗程序均通過Woolmark公司的測試。

請按照Woolmark的「機洗」或「手洗」衣物標籤所提供的洗衣指示進行洗衣並且已詳細說明於此程序表上。M0702

惠而浦乃美國惠而浦 Whirlpool, U.S.A. 的註冊商標。

5019 301 06229



功能資料表					
程序	溫度 (攝氏°C)	洗衣量 (公斤)	耗水量 (公升)	耗電量 (千瓦/小時)	大約程序時間 (小時：分鐘)*
棉質	95	8.0	82**	2.40	2:10
棉質/有顏色的***	60	8.0	64	1.36	2:20
棉質/有顏色的	40	8.0	77	0.75	2:05
合成纖維	60	3.5	46**	0.85	1:35
合成纖維	40	3.5	42	0.50	1:20
纖幼	30	2.5	60	0.40	0:45
羊毛	40	2.0	60	0.60	0:45
手洗	40	2.0	45	0.60	0:40
牛仔布類	40	7.0	95	0.80	2:21
大型物件	60	3.0	74	0.75	1:30
運動衣物	30	3.5	54	0.55	1:34
超級慳電洗	60	8.0	75	0.95	4:00
60分鐘日日洗 40°	40	6.0	73	0.60	1:00
15分鐘極速洗	30	3.0	30	0.20	0:15

上述功能表之數據是標準於正常條件下測試而獲得，根據IEC/EN 60 456標準。與用戶使用時的實際耗水、耗電、水溫、水壓以及洗滌衣物種類有關。

* 時間顯示器可能與表中所列數值有所偏差，因為操作時應用了實際適用的調節設定。

** 於主洗步驟結束時及排水前自動注入冷水降低水溫。

*** 能源標籤參考程序。

加入洗衣劑，關閉機門並選擇程序

按「使用說明書」中的「洗衣劑及柔順劑」一節所述加入洗衣劑後，關好機門。

轉動程序選擇旋鈕至所需程序；位於「開/關」按鈕的燈會閃爍。

可按水溫按鈕或脫水轉速選擇按鈕變更顯示在屏幕裡的「水溫」及「脫水轉速」。

選擇任何所需的特別功能

當程序與附加功能的組合不適當，指示燈會自動熄滅及不適當的組合選擇會自動被取消。

「預洗」按鈕

- 適用於非常骯髒的衣物(含泥沙、粗粒)，洗衣時會延長15分鐘。
- 如選擇了「預洗」功能請不要用洗衣液進行主洗程序。

「Clean+」按鈕

- 如使用洗衣添加劑去除頑固污漬(例如 "碧蓮")請選此功能 - 可讓添加劑發揮最大的效益徹底潔淨及去除污漬。
- 可於「棉質」及「合成纖維」程序選用；使用30 °C或40 °C之水溫及最大洗衣量。
- 於主洗匣內加入適量洗衣添加劑(粉末)去除頑固污漬，及同時使用洗衣劑(只適宜使用洗衣粉)。請遵循製造商的建議用量。
- 程序將會延長10至15分鐘。

- 適宜使用氧性去污劑及漂白液。**不可使用鹼性或過硼酸鹽漂白液！**

「易燙貼」按鈕

- 可與「棉質」，「合成纖維」及「60分鐘日日洗」程序組合，令衣物更易熨燙。
- 避免衣物皺摺，注水量增加，並配合輕柔脫水。

「深層過水」按鈕

- 增加水量及延長過水時間。
- 此功能特別適用於軟性水質地區，清潔嬰兒衣物及對洗衣劑過敏人仕。

「脫水轉速」按鈕

- 每一程序自動預設脫水轉速。
- 按此按鈕選擇其它脫水轉速。
- 如選擇的脫水轉速為「0」，最後一次脫水將會取消，程序結束時只進行排水，但過水過程仍會進行脫水動作。
- 如您選擇「延遲脫水」，衣物會保留在最後一次過水中，不進行最後脫水步驟，以防衣物起皺及變色。
要啟動「延遲脫水」功能；重複的按「脫水轉速」按鈕至「延遲脫水」符號於顯示屏亮起。
 - 程序步驟顯示器的「延遲脫水」指示燈閃爍時，程序在「延遲脫水」時停止。「開始/暫停」按鈕的指示燈也會閃爍。
 - 結束「延遲脫水」功能及只進行排水而不進行脫水，按「開始/暫停」按鈕。

- 結束「延遲脫水」功能及將衣物進行脫水，按「脫水轉速」按鈕至所需轉速，然後按「開始/暫停」啟動運轉。
- 如果選擇「延遲脫水」功能，請不要讓衣物長時間浸泡太久。

儲存「您想」記憶自選程序

此洗衣機可儲存您於每個程序常用的洗衣設定，儲存後只須按一按鈕方便再度使用。

- 選擇所需程序，水溫，轉速及功能，按「您想」按鈕最少3秒。於「您想」按鈕旁邊的燈會閃爍然後亮起 - 此刻程序設定已儲存。

當要使用您個人化的程序設定，先選擇程序，按「您想」按鈕及「開始/暫停」按鈕啟動。

如要替換已儲存的程序設定，依照上述步驟置換。

預校開機時間

「預校開機時間」功能有利於用戶在方便的時間進行操作，例如於夜間使用便宜電力時。

- 選擇程序、水溫、脫水轉速及功能。
- 按「預校開機時間」按鈕選擇由0.5至23小時的預校時間。
- 按「開始/暫停」按鈕。
當預校時間開始倒數時，計時指示會顯示在預校時間之下而時與分鐘之間的冒號會閃爍。
- 當程序開始後預校時間會被程序剩餘的時間取替，而預校時間的指示燈將會熄滅。

如何取消「預校開機時間」

...當按「開始/暫停」按鈕前：

- 選擇其它程序或按「排水/重設」按鈕。

...當按「開始/暫停」按鈕後：

按「排水/重設」按鈕最少3秒，預校開機時間消失於顯示屏。

「放入衣物」指示燈

當洗衣程序開始前，指示燈亮起表示可以打開機門放入更多衣物。當按「開始/暫停」按鈕後，機門保持鎖定，便不能用力打開以免損壞機器直至洗衣程序結束。如在洗衣程序運行期間急需打開機門，請參閱「程序結束前重設」一節。

如果您要啟動洗程序但機門沒正確關上，「放入衣物」指示燈會閃爍。

啟動程序

打開水龍頭並按下「開始/暫停」按鈕；「開始/暫停」按鈕閃燈會亮起。「放入衣物」指示燈關滅，洗衣程序指示燈會顯示正進行之洗衣階段。於一些階段，會從新計算程序所餘時 - 此時顯示屏的「」指示燈會漸淡。

兒童安全鎖 —○

啟動兒童安全鎖防止兒童開始或更改洗衣操作。當程序選擇旋鈕位於「關/0」時，不能啟動或取消兒童安全鎖操作。要啟動兒童安全鎖：

- 轉動程序選擇旋鈕至其中一項程序。
- 同時按「水溫」及「脫水轉速」按鈕最少3秒。「兒童安全鎖」—○符號會閃爍然後亮起表示已啟動。

程序設定啟動後便不能作任何更改；只能把程序選擇旋鈕轉至「關/0」位置停止操作。

要取消兒童安全鎖設定：

- 同時按下兩個鑰匙—○符號的按鈕最少3秒。

紅燈故障指示燈

如任何紅燈於顯示屏亮起時，請查閱使用說明書中的「故障排除」指引。

程序結束

- 洗衣程序結束後，「End」及「Programme finished」指示會於顯示屏亮起。

- 將程序選擇旋鈕轉到「關/0」的位置。
- 關閉水龍頭。
- 打開機門並取出衣物。

- 讓機門微微打開，令洗衣鼓吹乾。
- 如您沒將程序選擇旋鈕轉到「關/0」的位置，洗衣機將於數分鐘後自動關機。

「過量洗衣劑」指示

當您使用過量洗衣劑時，此指示燈會於洗衣程序結束或因過多泡沫影響而中途亮起。請查閱使用說明書中的「故障排除」指引解除中途影響故障。

程序開始後更改及/或附加功能

- 按「開始/暫停」按鈕暫停洗衣程序。指示燈會閃動。
- 選擇新程序、水溫和任何附加功能，如需要時也可選另一脫水轉速。
- 再次按下「開始/暫停」按鈕。新程序在先前的程序中斷之處繼續進行。此程序無需添加洗衣劑。

程序結束前重設

在程序結束前，按「排水/重設」按鈕取消洗衣程序。

- 按「排水/重設」按鈕最少3秒，動畫符號會於顯示屏出現。機內積水。

惠而浦乃美國惠而浦 Whirlpool, U.S.A. 的註冊商標。

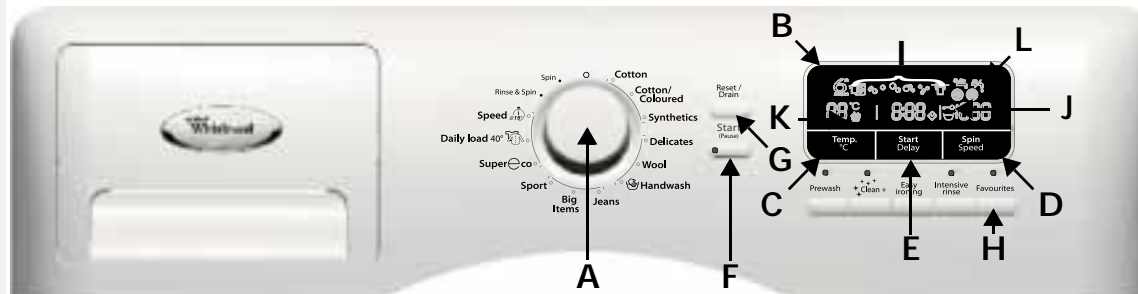
5019 301 06229

GB

 
PROGRAMME CHART



- A. Programme selector
B. Display
C. "Temperature" button
D. "Spin Speed" button
E. "Start delay" button
F. "Start (Pause)" button
G. "Reset/Drain" button
H. "Favourites" button



I. Programme sequence indication



J. "Child lock" indication



K. "Detergent overdosage" indication



L. Red failure indications



Programme	Temperature °C	Care Labels	Max Load kg	Type of wash/Notes <i>- Respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Selectable options			Start delay ²⁾	Spin	
					Pre-wash 	Main wash 	Softener 	Pre-wash 	+++ Clean + 	Easy ironing 	Intensive rinse 	Spin Speed 	Max Spin Speed rpm
Cotton	70 - 95 °C		8.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.									
Cotton / Coloured	20 - 60 °C		8.0	At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	* ³⁾	Yes	*	*	*	*	*	*	max.
Synthetics	20 - 60 °C		3.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	* ³⁾	Yes	*	*	*	*	*	*	max.
Delicates	20 - 40 °C		2.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	* ³⁾	Yes	*	*	—	—	—	*	1000 ¹⁾
Wool	20 - 40 °C		2.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	*	—	—	—	—	*	1000 ¹⁾
Handwash	20 - 40 °C		2.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	—	Yes	*	—	—	—	—	*	400 ¹⁾
Jeans	20 - 60 °C		7.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	*	Yes	*	*	*	—	—	*	max.
Big Items	20 - 60 °C		3.0	Blankets made of synthetic fibres; bed covers filled with feathers, polyester or other artificial fibers; sleeping bags, bathmats and similar items.	* ³⁾	Yes	*	*	—	—	*	*	1000 ¹⁾
Sport	20 - 30 °C		3.5	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. <i>This programme includes a prewash cycle – you can add detergent also to the prewash chamber. Do not add any softener.</i>	—	Yes	—	—	—	*	*	*	max.
Super Eco	20 - 60 °C		8.0	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.</i>	—	Yes	*	—	—	—	*	*	max.
Daily load 40°	20 - 60 °C		6.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	—	—	*	*	*	max.
Speed	20 - 30 °C		3.0	Refreshes briefly worn outer clothing made of cotton, artificial fibers and blends with cotton.	—	Yes	*	—	—	—	—	*	max.
Rinse & Spin	—	—	8.0	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	—	—	*	—	—	—	*	*	max.
Spin	—	—	8.0	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	—	—	—	—	—	—	—	*	max.





- * optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in these programmes.
2) Do not use liquid detergent when activating the "Start Delay".
3) Do not use liquid detergent for the main wash when activating the "Prewash" option.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06229

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	95	8.0	82**	2.40	2:10
Cotton / Coloured***	60	8.0	64	1.36	2:20
Cotton / Coloured	40	8.0	77	0.75	2:05
Synthetics	60	3.5	46**	0.85	1:35
Synthetics	40	3.5	42	0.50	1:20
Delicates	30	2.5	60	0.40	0:45
Wool	40	2.0	60	0.60	0:45
 Handwash	40	2.0	45	0.60	0:40
Jeans	40	7.0	95	0.80	2:21
Big Items	60	3.0	74	0.75	1:30
Sport	30	3.5	54	0.55	1:34
Super Eco 	60	8.0	75	0.95	4:00
Daily load 40° 	40	6.0	73	0.60	1:00
Speed 	30	3.0	30	0.20	0:15

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The time indicated on the display can deviate from the values in the table, because it takes into account the operation conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Turn the programme selector to the desired programme; the light of the "Start (Pause)" button blinks. The **temperature** and **spin speed** indicated on the display can be altered by pressing the "Temperature" button or the "Spin Speed" button.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically.

Unsuitable combinations of options are deselected automatically.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the "Prewash" option.

"Clean+" button

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Selectable for programmes "Cotton" and "Synthetics"; choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- Prolongs the programme by approx. 10 to 15 minutes.

- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

 
 
 
"Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

"Spin Speed" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.
- If you select "Rinse hold" , the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the "Rinse hold", press the "Spin Speed" button repeatedly until the "Rinse hold" symbol  on the display lights up.
 - The wash programme stops to "Rinse hold" when the "Rinse hold" symbol  on the display blinks; the light of "Start (Pause)" blinks as well.
 - To terminate the "Rinse hold" by draining the water, without any spinning, press the "Start (Pause)" button.
 - To terminate the "Rinse hold" by spinning the laundry, press the "Spin Speed" button to select the desired spin speed and then "Start (Pause)" to start the spin cycle.
 - Do not leave the laundry to soak for too long in the "Rinse hold".

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and option(s), push and hold the "Favourites" button for at least 3 seconds. The lamp next to "Favourites" shortly blinks and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, push the "Favourites" button and start by pushing "Start (Pause)".

If you want to replace the saved programme setting by another one, proceed as already described above.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature, spin speed and options.
- Press the "Start delay" button to select a delay time from 0:30 to 23:00 hours.
- Press the "Start (Pause)" button.
 - The countdown of the delay time begins; the clock symbol next to the delay time and the colon between hours and minutes blink.
 - The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.

To cancel the "Start delay"

..before you press the "Start (Pause)" button:

- Select another programme or press the "Reset/Drain" button.

 
..after having pressed the "Start (Pause)" button:

Press the "Reset/Drain" button for at least 3 seconds; the start delay time disappears from the display.

"ADD GARMENT" INDICATION

 
Before starting a programme, the symbol lights to show that the door can be opened to add more washing. As soon as you press "Start (Pause)", the door will lock until the end of the programme and must on no account be forced open. In case you have to open it urgently during a running programme, refer to "Reset a running programme before the end". If you try to start a wash programme and the door is not properly closed, the "Add garment" indication will blink.

PROGRAMME START

 
Open the tap and press the "Start (Pause)" button; the blinking "Start (Pause)" button light becomes constant. The "Add garment" indication goes out, and the lit bubbles indicate that the programme is in process. In some phases, the remaining programme time is newly calculated - if this is the case, the "6th sense" indication  on the display will fade.

CHILD LOCK

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.
- Press the "Temperature" and the "Spin Speed" button simultaneously for at least 3 seconds. The "Child lock" symbol  will shortly blink and then light up to indicate that the child lock is active.


The programme setting cannot be changed anymore; the only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock:

- Press again the 2 buttons marked with the key symbol  simultaneously for at least 3 seconds.

RED FAILURE INDICATIONS

If one of the red failure indications on the display lights up, refer to the "Troubleshooting Guide" in your "Instructions for Use".

PROGRAMME END

- The display shows "End", and the "Programme finished" indication  lights up.
 - Turn the programme selector to the "Off/O" position.
 - Close the water tap.
 - Open the door and unload the machine.
- Leave the door ajar to allow the drum to dry.
- If you do not turn the programme selector to the "Off/O" position, the washing machine will switch off automatically after a few minutes.

DETERGENT OVERDOSAGE INDICATION

This indication lights up when you added too much detergent. It can appear either when a wash programme is finished, or when too much foam interrupted the wash programme - in this case refer to the "Troubleshooting Guide" in your Instructions for Use to manage the programme interruption.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the "Start (Pause)" button to pause the programme. The light blinks.
- Select the new programme, temperature, any options and another spin speed if you want.
- Press the "Start (Pause)" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

The "Reset/Drain" button cancels a programme before the end.

- Press the "Reset/Drain" button for at least 3 seconds; an animation appears on the display. Any existing water is drained out before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06229