


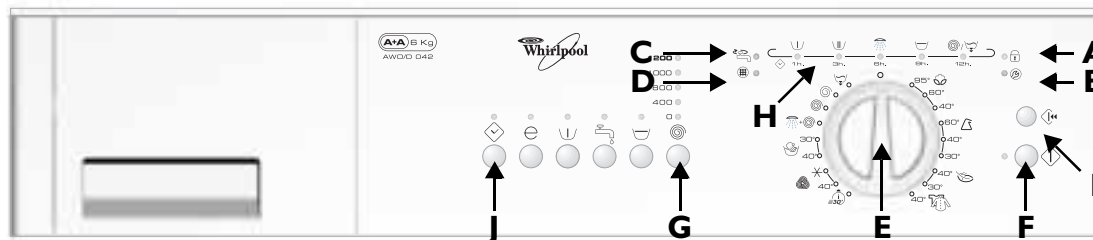






 
















 

 










**A. “Door open” indication**

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

**B. “Service” indication** **C. “Water tap closed” indication** **D. “Clean pump” indication** **E. Programme selector** **F. “Start/Pause” button** **G. Spin speed selector** **H. Programme sequence indicator**

and Start delay indicators

**I. “Reset” button** **J. “Start delay” button**

Programme		Care Labels	Max. Load kg	Type of wash/Notes  - For temperature selection, respect the manufacturer's recommendations on the care label	Detergents and additives			Special options					Max Spin Speed rpm	
					Pre-wash 	Main wash 	Softener 	Start delay <sup>3)</sup> 	Eco 	Pre-wash 	Cold Wash 	Rinse hold 		Variable spin 
<b>Cotton</b> 60 - 95 °C	 60 - 95 °C	 	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected.</i>	*	Yes <sup>2)</sup>	*	*	*	*	*	*	*	1200
<b>Cotton</b> 40 °C	 40 °C		5.0											
<b>Synthetics</b> 30 - 40 - 60 °C	 30 - 40 - 60 °C	   	2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes <sup>2)</sup>	*	*	*	*	*	*	*	1000 <sup>1)</sup>
<b>Delicates</b> 30 - 40 °C	 30 - 40 °C	 	1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	*	Yes <sup>2)</sup>	*	*	—	*	*	*	*	1000 <sup>1)</sup>
<b>Daily load</b> 40 °C	 40 °C	   	3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	*	—	—	*	*	*	1200
<b>Quick wash</b> 30 °C	 30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	*	*	—	—	*	*	*	1200
<b>Wool</b> Cold - 40 °C	 ❄ - 40 °C		1.0	Only woollens, labelled with the Woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	—	Yes	*	*	—	—	*	*	*	1000 <sup>1)</sup>
<b>Handwash</b> 30 - 40 °C	 40 °C		1.0	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	—	Yes	*	*	—	—	*	*	*	400 <sup>1)</sup>
Rinse & Spin		—	6.0	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	—	—	*	*	—	—	—	*	*	1200
Spin		—	6.0	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	—	—	—	*	—	—	—	—	*	1200
Gentle Spin		—	1.0	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	—	—	—	*	—	—	—	—	*	1000 <sup>1)</sup>
Drain		—	—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required  
<sup>1)</sup> For improved garment care, spin speed is restricted in these programmes.  
<sup>2)</sup> Do not use liquid detergent for the main wash when activating the prewash option.  
<sup>3)</sup> Do not use liquid detergent when activating the Start delay.

## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	6.0	59*	1.90	2:00
Cotton	60	6.0	49	1.14	2:10
Cotton with "Eco"***	60	6.0	49	1.02	2:20
Cotton	40	5.0	56	0.70	2:00
Synthetics	60	2.5	50*	0.80	1:35
Synthetics	40	2.5	46	0.50	1:20
Delicates	30	1.5	60	0.50	0:45
Daily load	40	3.0	41	0.50	1:00
Quick wash	30	3.0	41	0.40	0:30
Wool	40	1.0	60	0.50	0:45
Handwash	40	1.0	45	0.50	0:40
Handwash	30	1.0	45	0.40	0:40


Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

Close the door and turn the programme selector to the desired programme and temperature. The indication lamp next to the "Start/Pause" button  flashes.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

### "Prewash" button

 
- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Cold wash" button

 

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30° on the care label.
- Selectable only on the lowest temperature step of each programme.

### "Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily load" and "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indication is on. The indication lamp next to the "Start/Pause" button  flashes.


### Terminate the "Rinse hold" option




- Press the "Start/Pause" button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the "Start/Pause" button .

## "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

 
## START DELAY

The "Start Delay"  allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the start delay.

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1, 3, 6, 9 or 12 hours.
- Press the "Start/Pause" button . The indication next to the "Start delay" button flashes and goes off when the programme starts.
- Once having pressed the "Start/Pause" button , the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication.
- After the "Start/Pause" button  has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

## To cancel the "Start delay"



### ..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the "Reset" button .

### ..after having pressed the "Start/Pause" button:

- Press the "Reset" button  for at least 3 seconds - the start delay indicator light goes out.

## PROGRAMME START

Open the tap and press the "Start/Pause" button . The indication lamp next to the "Start/Pause" button  lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

When the programme phase is finished, the corresponding indication goes out.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

 
### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").



### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.


## PROGRAMME END

 
- All the lights of the programme sequence indicator are off, and the "Door open" indication  lights up.
- Turn the programme selector to the "Off/O" position.
  - Close the water tap.
  - Open the door and unload the machine.
  - Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the "Start/Pause" button  to pause the programme. The light flashes.
- Select the new programme (with temperature), any options and another spin speed if you want.
- Press the "Start/Pause" button  again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The "Reset" button  cancels a programme before the end.

- Press the "Reset" button  for at least 3 seconds. Any existing water is drained out before the door can be opened.