


GB

- A. Programme selector
B. Option buttons
C. “Temperature” button °C
D. “Start delay” button
E “Spin” button
F. “Start(Pause)” button
G. “Reset/Drain” button
H. Display
I. “Favourite” button

PROGRAMME CHART

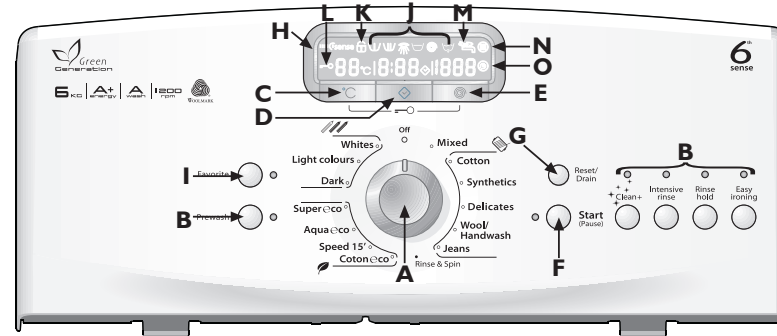

J. Programme sequence indicator



K. “Lid open” indication
L. “Child lock” indication
Your washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- M. “Water tap closed” indication
N. “Clean pump” indication
O. “Service” indication

Programme	Temperature	Care Labels	Max. Load kg	Type of wash / Notes <i>- Respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Options					Start delay	Spin	
					Pre-wash	Main wash	Softener	Pre-wash	Clean +	Intensive rinse	Rinse hold	Easy ironing		Spin	Max spin speed rpm
Mixed	20 - 60°C		3.0	Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers.	—	Yes	*	—	—	*	*	*	*	*	Max.
Fabrics	Cotton	20 - 95°C	6.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	Max.
	Synthetics	20 - 60°C	3.0	Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	Max.
	Delicates	20 - 40°C	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	—	—	*	—	*	*	1000 ¹⁾
	Wool / Handwash	20 - 40°C	1.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable. Select spin speed according to the manufacturer's recommendation on the care label. This programme is tested and approved by The Woolmark Company for machine- and handwashable wool.	—	Yes	*	—	—	—	*	—	*	*	1000 ¹⁾
	Jeans	20 - 60°C	5.0	Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.	*	Yes	*	*	*	—	*	—	*	*	Max.
Colours	Whites	20 - 60°C	6.0	Normally to heavily soiled and robust cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	—	—	*	*	—	*	*	Max.
	Light colours	20 - 60°C	4.0	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	—	—	*	—	*	*	1000 ¹⁾
	Dark	20 - 60°C	4.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a liquid detergent for dark garments with this programme.	*	Yes	*	*	—	*	*	—	*	*	Max.
Economy	Super ^{eco}	20 - 60°C	6.0	Heavily soiled and robust laundry made of cotton, synthetics and their blends. Economical energy consumption by prolonged wash duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to “0” and start spin programme in the morning, or by defining programme start with “Start delay” accordingly. - For garments with a high share of synthetic fibres, we recommend to use a laundry net.	—	Yes	*	—	—	*	*	—	*	*	Max.
	Aqua ^{eco}	20 - 40°C	2.5	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener.	—	Yes	—	—	—	—	*	—	*	*	Max.
	Speed 15'	20 - 30°C	3.0	Briefly worn clothing made of cotton, artificial fibers and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	—	—	—	*	—	*	*	Max.
	Coton ^{eco}	60°C	6.0	Heavily soiled and robust laundry washable at 60°C such as bed linen, table linen towels etc.. The extended programme duration enables economic energy and water consumption while maintaining good washing results.	—	Yes	*	—	—	*	*	—	*	*	Max.
Rinse & Spin	—	—	6.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the “Cotton” programme.	—	—	*	—	—	*	*	—	*	*	Max.

*: optional / Yes : dosing required

¹⁾ For improved garment care, spin speed is restricted in these programmes.

The Wool / Handwash cycle of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as “machine wash” or “hand wash” provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart.

M0703

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 11067

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	ApproxProgrammeDuration (hours : minutes) ☺
Mixed	40	3.0	40	0.45	1:00
Whites	40	6.0	48	0.75	2:45
Light colours	40	4.0	70	0.55	1:20
Dark	40	4.0	41	0.58	1:44
Cotton	95	6.0	55*	1.90	2:00
Cotton	60	6.0	48	1.14	2:30
Cotton	40	6.0	48	0.70	2:30
Cotton**	40	3.0	35	0.57	2:05
Synthetics	60	3.0	48*	0.90	1:40
Synthetics	40	3.0	48	0.55	1:25
Delicates	40	1.5	50	0.55	0:45
Wool/Handwash	40	1.0	40	0.55	0:35
Jeans	40	5.0	64	0.70	2:43
SuperEco	60	6.0	55	0.78	4:00
Aqua Eco	40	2.5	19	0.45	1:00
Speed 15	30	3.0	30	0.15	0:15
Eco Cotton**	60	6.0	48	0.90	3:30
Eco Cotton**	60	3.0	35	0.78	2:30

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programmes for Energy Label.

ADD DETERGENTS, CLOSE THE LID AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the programme selector to the desired programme. The light of the **"Start (Pause)"** button blinks.
2. The **temperature** and **spin speed** indicated on the display can be altered by pressing the "Temperature" button or the "Spin" button.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Clean+" button

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option).
- Respect the manufacturer's dosing instructions.
- Prolongs the programme by approx. 10 to 15 minutes.

- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave items to soak for too long.

Note: The programme stops to "Rinse hold" at the time the "Rinse hold" symbol on the display lights up. The light next to the **"Start(Pause)"** button blinks.

Terminate the "Rinse hold" option:

- Press the **"Start(Pause)"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, press and hold the **"Reset/Drain"** button for a few seconds to start the drain programme.

"Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Mixed" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.
- Reduces creasing by an increased water quantity and a very gentle spin.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and option(s), push and hold the **"Favourites"** button for at least 3 seconds.

The lamp next to **"Favourites"** shortly flashes and then lights up - the programme settings is saved.

Next time you want to use your individual programme settings, select the programme, push the **"Favourites"** button and start by pushing **"Start(Pause)"**.

If you want to replace the saved programme setting by another one:

- Select programme temperature, spin speed and options as desired and then press and hold the **"Favourites"** button for at least 3 seconds. The previously saved programme setting will be replaced by the new one.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature, spin speed and options.
- Press the "Start delay" button to select the delay time up to 23 hours.
- Press the **"Start(Pause)"** button. The countdown of the delay time begins; the clock symbol next to the delay time and the dot between hours and minutes blink.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **"Start(Pause)"** button, the number of hours preselected can be reduced by pressing and holding the "Start delay" button. From one hour on, the delay time can also be reduced in steps of 10 minutes.

To cancel the "Start delay"

..before you press the "Start(Pause)" button:

- Select another programme or press the **"Reset/Drain"** button.

..after having pressed the "Start(Pause)" button:

- Press **"Start (Pause)"** - the delay time disappears from the display; press **"Start (Pause)"** again to start the selected programme immediately.

PROGRAMME START

Open the tap and press the **"Start(Pause)"** button. The blinking light next to the **"Start(Pause)"** button becomes constant. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

"LID OPEN" INDICATION

Before starting and after end of a programme, the symbol appears on the display to show that the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme before the end".

LOCK BUTTONS

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press the temperature and spin speed button simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your "Instructions for Use"; if the fault persists, contact our After Sales Service.

"Water tap closed"

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

"Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use ("Removing the Filter").

PROGRAMME END

- The symbols of the programme sequence indicator are dark, and the "Lid open" indication lights up.
 1. Turn the programme selector to the "Off/O" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open to allow the inside of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start(Pause)"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start(Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.