



## SELECTION OF PROGRAM

## Program

Program	Washing Time (Minutes)	Times of Rinse	Spin Time (Minutes)	Scope of Application
Big Items	3+17	2	4	Heavily soiled bed sheets, tablecloths, underwear, towels, shirts and other cotton fabrics.
Standard	15	2	3	Normally soiled and daily used blouses, shirts made of polyester (Diolen, Trevira). Polyamide (Perlon, Nylan) or blends with cotton.
Gentle	8	2	2	Lightly or normally soiled cotton or mixed fabrics.
Quick Wash	6	1	3	Shortly worn outer clothing made of cotton, Polyester, Polyamide and blends with cotton.
Wool	6	2	2	Machine washable wool with woolmark label.

- Double Power Wash will be applied on Big Items Program.  
At the first stage, wash with a relatively lower water level (around 70% of the default water level). Remove stubborn stains thoroughly with highly concentrated detergent and strong washing power. After 3 minutes' washing, the washing machine will refill water automatically till it reaches the default water level and thus it starts the second stage of washing.
- The washing time and spin time based on the seventh water level in this table.
- Softener can be added automatically by the washing machine via the softener inlet for programs with 2 rinse cycles.
- When Quick Wash Program is selected, soaking program and functions program selector do not operate.
- The default washing program is the Standard Program.

## Washing Program Selection and Display (with six combinations of programs for selection)

Program \ Display	Soaking	Wash	Rinse	Spin
Preset Wash Program		☀	☀	☀
Full Program	☀	☀	☀	☀
Wash Only		☀		
Spin Only				☀
Wash + Rinse		☀	☀	
Rinse + Spin			☀	☀

- Mode indicated by display light:

☀ (flashing): indicates the on-going process

☀ (flashing): buzzer alarm indicates failure of operation due to faults.

## WASH PROCEDURE AND PRODUCT SPECIFICATIONS

## Wash Procedures

1. Put drain hose in place.
2. Connect water inlet pipe properly and turn on water tap.
3. Connect to the power source and press the "ON/OFF" button.
4. Press the "Program" button to set the wash program or use the default washing program.
5. Press "Process" button to select your own required combination of washing programs other than the full automatic program.
6. Press "Water Level" button for desired water level.
7. Select "Intensive Rinse" in "Function" button to achieve effective rinsing effect.
8. Select "Double Foam Removal" in "Function" button to wash more soiled clothes.
9. Select "Basket Cleaning" in "Function" to clean the washing tub.
10. Choose "Washing Time" and "Spin Time" buttons to change the preset washing time and spin time.
11. Choose "Delay Time" button to decide when to start washing.
12. Empty the laundry of all coins, banknotes and other foreign objects before loading it evenly into the tub.
13. Place in detergent. Softener and bleach agent may also be added according to needs.
14. Close the machine lid.
15. Press "Start/Pause" button and the machine will begin water intake.

- \* The machine will be in delay time mode if the delay timer is selected.
- \* When washing is finished, the buzzer will be on. The machine will shut off automatically in three minutes.

## PRODUCT SPECIFICATIONS

Rated Voltage	220V~
Rated Frequency	50Hz
Rated Input Power	460W
Washing Capacity	7.0Kg
Weight	35Kg
Dimensions	547x559x936mm
Cabinet Size	540x540mm
Water Pressure	0.02-0.78MPa



## NOTES ON CONTROL PANEL

### 1. On/Off Switch

- Press the switch to connect the mains; press it again to cut off power supply.
- The machine will automatically shut off in 3 minutes after completion of wash program or when the machine is in abnormal operation mode.
- The washing machine will be in fuzzy logic status when you press the Start/Pause button after it is switched on. The washing machine will start operating, self-checking, setting the water level and completing the whole washing process. If you press any other buttons (except On/Off Switch and Start/Pause button), the washing machine will automatically quit the fuzzy logic mode and enters into manual control mode; if you do not press any buttons, the machine will shut off automatically after 3 minutes.

### 2. Start/Pause

- Press the button to start operation. Press it again to suspend operation during the washing process.

### 3. Function Selection

- "Memory" function provides users with the same wash program as last time, i.e. the washing machines will automatically save the last wash program you have utilized. Choosing this function enables the washing machine to operate according to the automatic memory.
- Basket Cleaning is used only for the cleaning of the washing basket. The preset water level is the 7th water level. It presets for washing, rinsing and spinning. The number of time for rinsing is one time and Standard Wash Program is indicated.
- Choose "Intensive Rinse" according to the degree of dirtiness. "Additional Rinsing" means adding one more time of rinse on standard rinse.
- Double Foam Removal is an innovative means of rinse. During the rinse process, water is continuously added in to help drain soap bubbles and dirt through the drain pipe and spillway, thus to realize thorough cleaning of foam.

### 4. Washing Time / Spin Time

- Press these 2 buttons to change manually the default washing time and spin time.
- One minute is deducted for every single press; if you press and hold, the number will decrease by degrees and loop.
- When washing time is 0 minute, press the button to return to 25 minutes; when spin time is 0 minute, press it again to return to 7 minutes.
- Press the two buttons simultaneously to check the set washing time and spin time.
- The buttons do not function when wash program is in operation or in pause mode.

### 5. "Safety Lock" button

- Press the "Delay Time" and the "Spin Time" buttons simultaneously during the process of setting wash time or operation of the machine. All 9 buttons on the control panel will be locked.
- Again press simultaneously the "Delay Timer" and the "Spin Time" buttons, the buttons are unlocked.
- When faults occur, the locked buttons will be automatically unlocked. When the faults are resolved, the buttons will be locked automatically.

### 6. Delay Time (Presetting the time to finish washing)

- Press this button to preset the time to finish washing. The selection ranges between 0 and 12 hours. One hour is added for every single press.
- When the preset time is less than the washing time, press "Start/Pause" and the washing machine will operate accordingly.
- When setting the timer, the unit of time shown in the digital bar is hour, which indicates the finishing time of washing. When setting the timer, the indicating sign ". ." lights up, after setting the timer, if you press the "Start/Pause" button, the machine will enter preset mode automatically; After 10 seconds, other indicator lights will all go out except the flashing sign ". .". Except On/Off Switch and "Start/Pause" buttons, a timed process of 10 seconds will be shown when you press other buttons. Before washing, all indicator lights resumed to the status before they go out. Due to the difference in water intake level, the final finishing time may be slightly difference from the designated finishing time.

### 7. Process

- Press this button when the machine is in pause or set mode. You may select combination of wash program other than preset program.
- Lights of respective programs will be on when this button is pressed and preparing for operation.
- The flashing display light indicates the progress of wash program.

### 8. Water Level Selection

- Among the third, fifth, seventh and ninth water levels, one of them will be selected, based on the laundry load, to start automatic washing when the machine is in fuzzy logic control mode.
- Press "Water Level" button to select water level by yourself and quit the fuzzy logic control mode.
- When you choose "Mini, 3, 5, 7, 9" water level, the light indicating water level lights up; when you choose "2, 4, 6, 8, 10" water level, the light indicating water level flashes.

### 9. Program

- For more details, please refer to the introduction of "Program" at the back of this page.

## CONSUMPTION OF WATER AND HANDLING OF ABNORMAL CONDITIONS

### Consumption of Water

Water Level	Wash Load (kg)	Water Consumed (~L)
9/10	5.0-7.0	60/64
7/8	3.5-5.0	48/50
5/6	2.0-3.5	43/45
3/4	1.0-2.0	37/40
Mini /2	0-1.0	25/30

### Handling of Abnormal Conditions

Manifestation	Causes and Handling
E1	After automatic adjustment for two times, imbalanced problem of Spin is still unresolved. Please place the laundry evenly. Or the lid is not properly closed, or has been opened by someone during washing process. Close the lid to resume operation. "E1" status will continue until faults are attended.
E3	Indicating faults in drainage (Drainage time exceeds 5 minutes). The drain pipe is not put down, or clogged, or frozen. Put the drain pipe down and clear it up. Open and close the lid once to resume operation. If still unattended, the machine will shut down after 1.5 hr.
E4	Indicating failure to attain the best water level after 30-minute water intake. To be treated and checked as "Malfunction of wash". If the problem is solved, open and close the lid again to resume water intake. If the problem is unattended, the machine will shut down automatically after 1 hr.
Attention	If the problem still remains unsolved, contact the service people for repair. You are not allowed to disassemble the machine by yourselves.

### The following symptom is not a fault:

- If the drum stops spinning during the spinning process, "b1" or "b2" will be displayed. This means the clothes have shifted to one side while spinning, creating an imbalance. The machine will fill with water again to attempt to redistribute the clothes and will begin spinning again if the imbalance is corrected.



Whirlpool is committed to continue product enhancement.  
Product materials and specifications are subject to changes without prior notice.



## 洗衣程序選擇

### 洗衣程序

洗衣程序	洗衣時間 (約分鐘)	過水次數	脫水時間 (約分鐘)	適用範圍
大型衣物	3+17	2	4	洗滌一般到非常骯髒的床單、桌布及內衣褲、毛巾、恤衫等棉麻類衣物。
標準	15	2	3	洗滌一般骯髒，需要經常更換的衣物，如恤衫，罩衫等滌綸、錦綸和混棉類衣物。
輕柔	8	2	2	適合洗滌不太髒的、質地較柔軟的衣物，如棉質及合成纖維。
快速	6	1	3	穿著時間短的外衣如綿質、滌綸及混棉類衣物。
羊毛	6	2	2	有純羊毛標記，並可機洗的羊毛衣物。

- 當選擇大件衣物程序時，洗滌程序為雙重強力洗衣程序。  
第一階段以較低水位洗衣（約為設定水位的70%），以高濃縮洗衣液和強力洗速度，可充分分解頑固污漬。經過3分鐘沖洗後，洗衣機自動注水，並到達設定水位，然後開始第二階段的洗衣程序。
- 本欄顯示的時間，表示此程序在第7水位段時的洗衣和脫水時間。
- 當過水次數為兩次時，可將柔順劑放在柔順劑投放孔中，由洗衣機自動注入。
- 當選擇快速洗衣程序時，“浸泡”過程和功能選擇按鍵不起作用。
- 標準程序是預設的洗衣程序。

洗衣程序選擇和顯示，共有六種洗衣組合，可供選擇。

程序方式 \ 顯示	浸泡	主洗	過水	脫水
預設洗衣程序		☀	☀	☀
全程序	☀	☀	☀	☀
主洗		☀		
脫水				☀
主洗+過水		☀	☀	
過水+脫水			☀	☀

- 洗衣程序指示燈顯示狀態

☀（閃爍）：表示在進行的洗衣程序。

☀（閃爍）+ 蜂鳴器響聲：表示洗衣期間，遇到故障，不能正常運作。

## 洗衣步驟、產品規格

### 洗衣步驟

- 放下排水管。
- 接好進水管，開啟水龍頭。
- 連接電源，按下電源按鈕。
- 按下“洗衣程序”鍵，選擇洗衣程序或使用預設的洗衣程序。
- 若需選擇洗衣程序，請按“過程選擇”鍵，選擇洗衣組合，或使用洗衣機預設程序組合。
- 按下“水位選擇”鍵，選擇洗衣水位。
- 若需更好的過水效果，可按下“功能選擇”鍵，選擇“深層過水”功能。
- 若清洗較骯髒的衣物，可按下“功能選擇”鍵，選擇“雙重除泡”功能。
- 若需清潔洗衣桶，可按下“功能選擇”鍵，選擇“洗衣桶清洗”功能。
- 按下“洗衣時間”、“脫水時間”鍵，可以改變洗衣機預設的洗衣時間、脫水時間。
- 若需要啟動預約洗衣時間，可按下“預約時間”鍵，選擇預約時間。
- 取出衣物口袋中的所有硬幣、紙幣等外物，然後將衣物均勻地放入洗衣桶內。
- 放入洗衣粉，也可根據需要放入柔順劑、漂白劑等。
- 蓋上洗衣機蓋板。
- 按下“啟動/暫停”鍵，洗衣機開始操作。

- \* 如選擇了時間掣預約開機，則洗衣機進入延遲開機狀態。
- \* 洗衣完畢後，蜂鳴器會自動發出蜂鳴聲，約三分鐘後，會自動中斷電源並關閉洗衣機。

### 產品規格

額定電壓	220V~
額定頻率	50Hz
額定輸入功率	460W
洗衣脫水容量	7.0千克
重量	35千克
外形尺寸	547×559×936毫米
機身尺寸	540×540毫米
進水壓力	0.02-0.78MPa



## 快速用戶指南

# 操作面板說明

### 1. 電源開關

- 按下電源掣，啟動電源，再按便關掉電源。
- 洗衣結束約3分鐘後或發生故障時，會自動關機。
- 啟動電源掣後，如按啟動/暫停鍵，洗衣機會處於巧思智能控制狀態，它會自動進行運轉、檢測、設定水位，並完成整個洗衣程序；如按下其他鍵(除電源開關掣和啟動/暫停鍵外)，洗衣機將會自動退出巧思智能控制狀態而進入人手設定狀態；如不按任何鍵，3分鐘後，洗衣機將自動停機。

### 2. 啟動/暫停功能

- 按該鍵洗衣機開始操作，再按該鍵，中途暫停操作。

### 3. 功能選擇

- “記憶”功能，可提供給用戶與上次洗衣相同的洗衣程序，即洗衣機會自動保存您最近一次完成的洗衣程序。選擇此功能可以使洗衣機自動按記憶的程序運行。
- “洗衣桶清洗”功能，只用於對洗衣桶的清潔，預設水位為第7段水位，預設洗衣、過水和脫水功能，過水次數為一次，並顯示標準洗衣程序。
- 根據衣物的髒污程度，可選擇“深層過水”功能，它是在標準過水次數上增加一次。
- “雙重除泡”功能是一種創新的過水方式，在過水過程中不斷注入清水，使皂沫和污垢先後通過排水口和溢水口排出，實現使用泡沫的徹底潔淨功能。

### 4. 洗衣時間/脫水時間

- 可通過這兩個按鍵，人手改變洗衣或脫水的預設時間。
- 每按鍵一次減少1分鐘，按下不放，數字便循環遞減跳動。
- 當洗衣時間為0分鐘時，再按鍵回到25分鐘；當脫水時間為0分鐘時，再按鍵回到7分鐘。
- 分別按這兩個鍵，可查看當前設定的洗衣或脫水時間。
- 洗衣程序運行或暫停時，這兩個鍵無效。

### 5. 安全鎖鍵

- 在預約時間開機或洗衣機運行過程中，同時按下“預約時間”和“脫水時間”兩個鍵，面板上所有9個按鍵均被鎖定。
- 再次同時按下“預約時間”和“脫水時間”，按鍵鎖定狀態即被取消。
- 若發生故障，產品會自動取消鎖鍵功能，故障解除後自動恢復鎖鍵功能。

### 6. 預約時間(洗衣結束後，預約時間)

- 按此按鍵可以預約洗衣結束時間，選擇範圍為0~12小時。每按一次鍵，增加1小時。
- 當預約設定時間少於洗衣時間時，按“啟動/暫停”鍵，洗衣機將直接運行。
- 預約時間時，數字顯示的時間單位為小時，表示在該顯示的時間之後完成洗衣。設定預約時間時，預約顯示圖標“.”發亮，設定預約時間後，一旦按“啟動/暫停”鍵，洗衣機將自動進入預約狀態；10秒之後除預約顯示圖標“.”閃爍外，其餘指示燈均熄滅。除電源開關鍵和“啟動/暫停”鍵外，按其他鍵將顯示預約過程約10秒。洗衣開始前，所有指示燈將自動恢復到熄滅前的狀態。因進水量的不同，實際完成時間與預約時間可能稍有不同。

### 7. 過程選擇

- 洗衣機在暫停或設定狀態，按此鍵可選擇洗衣機預設程序以外的洗衣過程組合。
- 顯示燈長亮，說明已選擇該洗衣過程並等待進行。
- 顯示燈閃爍，說明該洗衣過程正在進行。

### 8. 水位選擇

- 洗衣機在巧思智能控制狀態下，按啟動/暫停鍵，洗衣機會根據衣物的重量自動設定3、5、7、9四個水位的其中一個，進行全自動清洗。
- 若要自行設定水位，可根據洗衣量，人手按此鍵設定水位，並退出巧思智能控制功能。
- 選擇“少量、3、5、7、9”水位時，水位指示燈長亮；選擇“2、4、6、8、10”水位段時，水位指示燈閃爍。

### 9. 洗衣程序

- 詳見本頁背面的“洗衣程序”簡介。

VS884F



# 洗衣用水量、故障處理

## 洗衣用水量

水位	洗衣容量（千克）	洗衣用水量（約公升）
9/10	5.0-7.0	60/64
7/8	3.5-5.0	48/50
5/6	2.0-3.5	43/45
3/4	1.0-2.0	37/40
少量 /2	0-1.0	25/30

## 故障處理

現象	原因及處理
E1	表示兩次脫水的不平衡狀態，依然無法自動處理，請人手均勻放置衣物，蓋好蓋板。或洗衣機運作時，蓋板未蓋好，請蓋好蓋板。洗衣機會自動繼續運轉。在人手處理前，洗衣機一直保持“E1”顯示狀態。
E3	表示在5分鐘內，無法完成排水。可能是排水管未放下、堵塞、結冰，請放下或疏通排水管，開、閉蓋板一次，洗衣機便可繼續操作。如無人處理，洗衣機在約1.5小時後，自動中斷電源並關機。
E4	表示進水30分鐘後，仍未達到設定水位。按說明書的“洗衣不運作”一節進行檢查，故障排除後，開、閉蓋板一次，便可恢復進水。如無人處理，洗衣機約在1小時後自動中斷電源並關機。
注意	如經以上處理，問題仍未解決，請聯絡我們的維修部門及有關專業人員進行維修，用戶不可擅自拆裝本產品。

## 下列現象不是出現故障：

- 脫水時停止脫水，顯示b1或b2：脫水不平衡自動處理狀態，這是由於衣物在洗衣桶內偏向一邊，安全開關啟動的原故。重新進水後，波輪攪拌，消除衣物的偏側情況，便可重新脫水。



本公司秉承不斷改良產品的宗旨，如產品物料及規格有變動，恕不另行通知

W 10343930