


## ZT

 
## 程序圖表

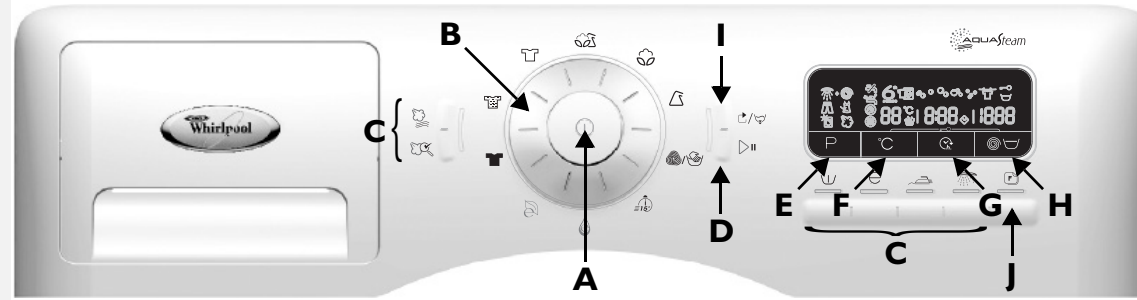

- A. 「開/關」指示燈 ①  
 B. 程序選擇掣  
 C. 特別功能掣  
 D. 「開始/暫停」掣 ▷||  
 E. 特別程序掣 P  
 F. 「溫度」掣 °C  
 G. 「預調開機時間」掣 ⌚  
 H. 脫水轉速掣 ⌀  
 (連延遲過水 ▢)  
 I. 重設/排水掣 ↺/▽  
 J. 「您想程序」掣 ①



## 程序步驟指示燈



## 兒童安全鎖指示燈

## 洗衣劑過量指示燈

## 紅色故障指示燈 (視乎型號而定)

控制面板上的掣為觸摸掣，只需用指尖輕輕觸碰即可激活或取消 (On/Off 開關掣除外，該掣必須用力按下)。操作一個掣時寧靜無聲。碰觸一個不可選定的掣時會得到兩聲“嗶”響聲。

溫度			溫度 °C	護理 標籤	最高 衣物量 (公斤)	衣物類型 / 備註  - 按照護理標籤上製造商的建議進行。	洗衣劑及添加劑		特別功能							預調 開機 時間	脫水			
							「預 洗」	主洗	柔順劑	「預 洗」	「節 能」	易熨貼	深層 過水	蒸汽 除漬	蒸汽 消毒		脫水 轉速	最高 脫水 轉速 rpm		
日日洗		Mixed		20-60 °C		6.0	由棉，麻，人造纖維及其混合織物製成的，輕微或普通骯髒的厚重衣物。 一小時程序。確認每次僅清洗顏色相類似的衣物。如十分骯髒，可加入氧基去污劑。	—	有	*	—	—	*	*	—	—	*	*	最高	
特別程序	棉質	Cotton		20-95 °C		9.0	一般至非常骯髒之床單，桌布及內衣褲，毛巾，襯衫等棉麻衣物。	*	有	*	*	*	*	*	*	*	*	*	最高	
	合成纖維	Synthetics		20-60 °C		3.5	一般骯髒之男女襯衫，單衫等滌綸（迪奧綸，特雷維拉），錦綸（貝龍，尼龍）或混棉織物。	*	有	*	*	*	*	*	*	*	*	最高		
	羊毛 / 手洗	Wool/ Handwash		20-40 °C		2.0	帶有羊毛標籤並標出可機洗的羊毛衣物，如標有手洗的絲，麻，羊毛或合成纖維衣物。 本程序獲國際羊毛局 (Woolmark Company) 測試並同意用於洗滌可機洗之羊毛衣物。關於脫水轉速的選擇，請遵循護理標籤上的製造商建議。	—	有	*	—	—	—	—	—	—	*	*	1000 <sup>1)</sup>	
	白色	White		20-60 °C		9.0	一般到十分骯髒的厚重白色棉質衣物。 通過選擇更低的洗衣溫度，以及除了洗衣劑外，另外加入氧基去污劑來節省耗電量。	—	有	*	—	—	—	—	—	—	—	*	*	最高
	淺彩色	Light colours		20-60 °C		6.0	由纖細織物製成的白色和顏料染色衣物。 利用輕柔洗衣程序來避免衣物變暗色或變黃。使用增強型洗滌劑，如有需要也使用氧基去污劑和漂白劑。切勿使用洗衣液。	—	有	*	—	—	—	—	—	—	—	*	*	1000 <sup>1)</sup>
	深色	Dark		20-60 °C		6.0	棉質，棉混紡和滌綸的黑色和暗色衣物。 減少褪色和局部變色的特殊程序。用此程序加入洗衣液來清洗深色衣物。	—	有	*	—	—	—	*	—	—	—	*	*	1000 <sup>1)</sup>
	超慳電洗	SuperEco		20-60 °C		9.0	一般至非常骯髒之床單，桌布及內衣褲，毛巾，襯衫等棉麻衣物。 通過延長洗衣時間，可大大提高節能。適合在電費較低的夜間使用，從而進一步節省。為避免夜間脫水的噪音，可將脫水轉速設定為「0」，並在早晨啟動脫水程序，或利用「預調開機時間」來設定程序的啟動。	—	有	*	—	—	—	*	—	—	—	*	*	最高
	慳水洗	AquaEco		20-40 °C		3.0	合成纖維或棉和合成纖維混紡的輕微骯髒衣物。 節能程序，耗電量極少。使用洗衣液和對於 3 公斤衣物的最少建議用量。請勿使用柔順劑。	—	有	—	—	—	—	—	—	—	—	*	*	最高
	極速 15	Speed 15		20-30 °C		3.0	穿著時間短之外衣等棉質，人造纖維，及混棉織物。 清新程序使用建議的最少洗衣劑量。	—	有	*	—	—	—	—	—	—	—	—	*	*
特別程序	過水及脫水	Rinse & Spin		—	—	9.0	過水和深度脫水程序。 與「棉質」程序的最後一次過水及最後脫水相同。	—	—	*	—	—	—	*	—	—	—	*	*	最高
	脫水	Spin		—	—	9.0	深度脫水。 與「棉質」程序的脫水步驟相同。	—	—	—	—	—	—	—	—	—	—	*	*	最高
	牛仔布衣物	Jeans		20-60 °C		7.0	一般骯髒的棉質牛仔布織物和由厚牛仔綢做的衣物如褲子和茄克。	*	有	*	*	*	—	—	*	*	*	*	最高	
	纖細衣物	Delicates		20-40 °C		2.5	窗簾與質料纖細之連身裙、半截裙及男女襯衫等衣物。	*	有	*	*	—	—	—	—	—	—	*	*	1000 <sup>1)</sup>
	蒸汽 自動 清潔	Steam Auto Clean		—	—	—	自清潔程序 清潔洗衣機內部，幫助防止異味或積聚物形成。 如您從來都沒有或甚少使用 60°C 的溫度洗衣，或您的洗衣機很長時間沒有使用時，請經常運行此程序。重要事項：請勿裝入任何衣物！ 此程序進行期間，會有「St」字樣在顯示器上顯示出來。	—	—	—	—	—	—	—	—	—	—	*	—	—
蒸汽清新	Steam Refresh		—		1.0	清潔和烘幹棉質和/或用過的人造纖維質衣物 在 20 分鐘內進行清新，降低異味，減少皺折並令衣物就緒穿著或使用。程序結束後，在使用衣物前，應立即把衣物掛在衣架上 10 分鐘。此程序進行期間，會有「St」字樣在顯示器上顯示出來。	—	—	—	—	—	—	—	—	—	—	—	*	—	—

- \*: 選項 / 有: 需要調整劑量  
 1) 為了改進衣物護理，這些程序中的脫水轉速將會受到限制。  
 2) 只有在 40 到 60°C 溫度範圍內才可以選擇。

此機器的羊毛和手洗步驟獲國際羊毛局 (Woolmark Company) 測試並同意用於洗滌標記為「機洗」或「手洗」之羊毛衣物，但必須按照衣物標籤和本程序圖表上的指示洗滌衣物。M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06435



6<sup>th</sup>  
sense

傳感器技術會按照程序時間，耗水，和耗電量來自動適應您的洗衣量。

## 水電消耗資料表

溫度	溫度 (°C)	衣物量 (公斤)	耗水量 (公升)	能耗 (kWh)	大約 . 程序持續時間 (小時：分鐘)*
日日洗	40	6.0	73	0.60	1:00
棉質	95	9.0	87**	2.60	2:20
棉質	60	9.0	64	1.53	2:30
棉質連「節能」***	60	9.0	64	1.35	4:00
棉質	40	9.0	82	0.80	2:15
合成纖維	60	3.5	46**	0.85	1:35
合成纖維	40	3.5	42	0.50	1:20
羊毛 / 手洗	40	2.0	45	0.60	0:40
白色	40	9.0	82	0.90	2:30
淺色	40	6.0	70	0.50	1:20
深色	40	6.0	49	0.60	1:40
超恆電洗	60	9.0	80	1.08	4:00
恆水洗	40	3.0	19	0.45	1:00
極速 15	30	3.0	30	0.20	0:15
牛仔布衣物	40	7.0	95	0.85	2:32
纖細衣物	30	2.5	60	0.40	0:45
蒸汽自動清潔	N	N	11	0.50	0:35
蒸汽清新	N	1.0	0.5	0.20	0:10

能源消耗值，是根據 IEC/EN 60 456 標準所規定的正常條件下測量而獲得。由於供水壓力和溫度以及洗衣量和衣物類型的不同，各家庭的能源消耗值與上表中的數值可能會有不同。

\* 顯示器所顯示的時間也可能與表中所列數值有所偏差，因為時間按洗衣時的家庭實際情況計算。

\*\* 要在水泵排水前降低水溫，主洗步驟結束時會加入一些冷水。

\*\*\* 能源標籤的參考程序 (洗衣劑盒隔片已拆下來使用洗衣粉劑)。

## 加入洗衣劑，關閉機門並選擇程序。

按照首頁指示的量和您的《使用指示》中“洗衣劑及添加劑”一章的說明加入洗衣劑 (如有需要，可拆下洗衣劑盒隔片來使用洗衣粉劑)。

- 按「開/關」掣 。等待直至程序掣四周的指示燈循環結束並只有一個指示燈亮著。「開始/暫停」掣指示燈閃爍。
- 碰觸相應的程序掣來選擇**想要的程序**。這點由藍色的指示燈指示出來。或碰觸顯示器上的「特別程序」掣 來選擇特別程序，直至想要程序的標誌亮著。
- 可按下「溫度」或「脫水轉速」掣來交替顯示 °C 指出的溫度和脫水轉速

## 選擇所需的任何附加功能

如程序和 / 或選項組合不可能，則選項指示燈會短暫閃爍並再次熄滅，並發出一聲響聲。

**預洗"按鈕"**

- 僅適用於非常肮髒的衣物 (例如含泥沙、污粒)。洗衣時間約增加 15 分鐘。
- 如果您啟動了「預洗」功能，請勿使用洗衣液進行主洗。

**「節能」掣**

- 通過更改溫度與稍微延長洗衣時間，既可獲得出色洗衣效果，又可減少能耗。

**「易熨貼」掣**

- 通過增加水量和極端柔和的脫水來減少皺折形成。
- 「深層過水」掣**
- 加入更多的水，過水步驟延長。
- 此功能尤其適合水質非常柔軟的地區以及洗滌嬰兒及皮膚敏感人士的衣物。

**「蒸汽除漬」掣**

- 在洗衣循環期間利用熱蒸汽處理衣物，以清除污跡。
- 從 40 到 60°C 溫度的棉質和 / 或人造纖維衣物可選用此掣。
- 「蒸汽消毒」掣**
- 除菌並對衣物進行消毒。
- 適用於棉質和 / 或人造纖維，護理標籤 標明在 40 到 60°C 溫度範圍的衣物，最大洗衣量為 6 公斤。
- 程序將延長約 半小時到一小時，視衣物的大小而定。

**「脫水轉速」掣 (含「延遲過水」)**

- 每一程序均有一個自動預設的脫水轉速。
- 按此掣以另設脫水轉速。
- 碰觸「開始/暫停」掣後：
- 如您選擇的脫水轉速為「0」，那么機器只進行排水而不脫水。即使如此，在過水期間仍會保持中間脫水階段。
- 如您選擇了「延遲過水」，衣物將會浸泡在最后一次過水的水中而不會進入最終脫水循環，這樣可避免產生皺折或變色。

- 如您想推遲脫水或只想排水，可選擇「延遲過水」。
- 請勿讓衣物浸泡在肥皂水裏時間過長。
- 當顯示器上的「延遲過水」 標誌閃爍時，程序就會停止在「延遲過水」 階段。「開始/暫停」掣也會閃爍。
- 欲終止「延遲過水」並排水且不脫水，可碰觸「開始/暫停」掣。
- 欲終止程序並進行脫水，可碰觸「脫水轉速」選擇想要的脫水轉速，然后碰觸「開始/暫停」掣來開始脫水循環。

## 保存您的您想程序

如某個程序設定您最常用，機器可向您提供保存程序設定的可能性，日後您只需按一下某個掣即可再次使用它。

- 選擇想要的程序，溫度，脫水轉速和選項。碰觸並按住「**您想程序**」掣 3 秒鐘以上。「**您想程序**」 旁邊的指示燈機會短暫閃爍並亮著 - 程序設置就會被保存下來。

下一次當您想使用自己的個人程序時，可選擇程序，短暫碰觸「**您想程序**」掣並碰觸 「開始 / 暫停」掣來開始即可 。

如您想用另一個程序替代已保存的程序：

- 按照上述的做法執行 - 先前保存的程序設置將會被新程序所替代。

## 預調開機時間

「預校開機時間」 可方便用戶使用洗衣機，例如在晚上電費較低時使用。如果您啟動了「預校開機時間」功能，請勿使用洗衣液。

- 選擇程序、溫度、脫水轉速及特別功能。
- 碰觸「預校開機時間」掣 來選擇從 0:30 到 23 小時的一個預校開機時間步驟。顯示器上預校開機時間旁邊機會出現一個時鐘標誌。
- 碰觸「**預校開機時間**」掣 。指示燈停止閃爍繼並變為一直發亮。預調時間開始倒數；顯示器上的時鐘標誌以及小時與分鐘之間的冒號閃爍。
- 程序開始時，顯示器上的延遲時間消失，而代之以剩餘程序時間。
- 通過碰觸「預校開機時間」掣可以改變預選的小時數。

欲取消「**預校開機時間**」

...按下「**開始/暫停**」掣前：

- 碰觸其它程序掣或把預校時間調成“0:00” - 數秒鐘後，預校時間將會消失。

...碰觸「**開始/暫停**」掣後：

把預校時間調成“0:00” - 數秒鐘後，預校時間將會消失。或碰觸「**開始/暫停**」掣 - 預校時間消失。如您想立即開始選定的程序，可再次碰觸「**開始/暫停**」掣。

## 「加入衣物」指示燈

程序開始之前，標誌會亮著以指明可以打開機門。一旦按下了「**開始/暫停**」掣，機門就會鎖定，直至程序結束為止，決不能嘗試強行打開機門。當需要在程序進行期間緊急打開機門時，請參閱「結束前取消運行中的程序」。如您嘗試開始洗衣成但機門還沒有正確關閉時，「加入衣物」指示燈就會閃爍。

## 程序開始

打開水龍頭并碰觸「**開始/暫停**」掣 。「**開始/暫停**」掣指示燈由閃爍變為亮著。「開門」指示燈熄滅，發亮的泡泡表示程序進行中。在某些階段裏，程序剩余時間被重新計算 - 如出現這種情況，則顯示器上的「第六感」指示 將會變成灰色，剩余時間將會被一個動畫所取代。



## 兒童安全

激活兒童安全鎖可以防止幼童擅自開始洗衣程序或改變運行中程序的設置。欲激活兒童安全鎖

- 洗衣機將被接通 。
- 同時按下「溫度」°C 和「脫水轉速」 掣數秒鐘，直至顯示器上的鑰匙標誌 閃爍 - 鑰匙標誌隨後會變成亮著，以表示兒童安全說激活。

程序設置再也不能被修改了。唯一的修改可能就是碰觸並按住重設 / 排水掣數秒鐘來重設運行中的程序，或按下「**Off/On**」 關閉洗衣機。

欲取消兒童安全鎖功能，其做法與激活該功能相同。

## 紅色故障指示燈

如顯示器上的紅色故障指示燈之一亮著，請參閱您的「《使用指示》」中的「疑難排解指南」。

## 程序結束

- 顯示器上顯示出「End」(結束) 並「程序結束」指示燈 亮著。
- 1. 按下「**On/Off**」 掣關機。
- 2. 關閉水龍頭。
- 3. 打開機門並取出衣物。
- 4. 讓機門稍微打開，令滾筒風乾。
- 如您沒有關機，指示燈將會在數分鐘後自動熄滅來節省耗電量。只有「End」(結束) 保持在顯示器上顯示出來。

## 洗衣劑過量指示燈

如您使用了過多的洗衣劑，程序結束時該標誌就會亮著。下次應使用更少的洗衣劑。

## 程序開始後改變程序及 / 或特別功能

- 碰觸「**開始/暫停**」掣 來暫停程序。指示燈閃爍。
- 選擇新程序、溫度、任何特別功能，如需要的話也可選另一脫水轉速。
- 再次碰觸「**開始/暫停**」掣 。新程序在先前的程序中斷之處繼續進行。此程序無需添加洗衣劑。

## 結束前取消運行中的程序


通過「**重設/排水**」掣 / 可在結束前取消程序。碰觸並按住「**重設/排水**」掣 / 3 秒鐘以上，顯示器上會出現一個動畫。洗衣水被排走。此標誌會保持一會兒，直至您打開機蓋為止。

Whirlpool is a registered trademark of Whirlpool USA

**5019 301 06435**



- A. "On/Off" button
- B. Programme selection buttons
- C. Option buttons
- D. "Start (Pause)" button
- E. "Special programmes" button
- F. "Temperature" button
- G. "Start delay" button
- H. "Spin speed" button (with "Rinse hold" )
- I. "Reset/Drain" button
- J. "Favourites" button

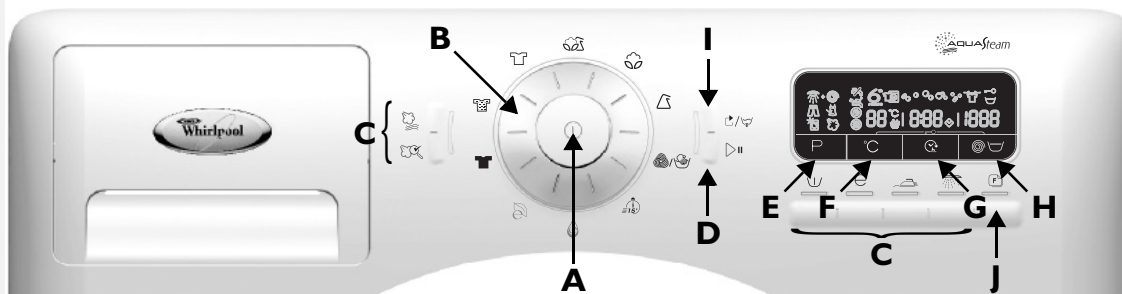

## Programme sequence indication



"Child lock" indication

"Detergent overdosage" indication

Red failure indications (depending on model)

The buttons of the control panel are touch buttons which are activated or deactivated by a simple touch with the fingertip (except the "On/Off" button - it must be pressed down). When operating a button, there is a quiet click. Touching a button which is not selectable is answered by a double beep.

Programme		Temperature °C	Care Labels	Max. Load kg	Type of wash/Notes	Detergents and additives			Special options						Start delay	Spin	
					- Respect the manufacturer's recommendations on the care label	Pre-wash	Main wash	Softener	Pre-wash	Eco	Easy ironing	Intensive rinse	Steam Stain Removal <sup>2)</sup>	Steam Sanitization <sup>2)</sup>		Spin speed	Max. Spin Speed
<b>Mixed</b>		20 - 60 °C		6.0	<b>Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends.</b> Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers.	—	Yes	*	—	—	*	*	—	—	*	*	max.
<b>SPECIAL PROGRAMMES</b>	<b>Cotton</b>	20 - 95 °C		9.0	<b>Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.</b>	*	Yes	*	*	*	*	*	*	*	*	*	max.
	<b>Synthetics</b>	20 - 60 °C		3.5	<b>Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.</b>	*	Yes	*	*	*	*	*	*	*	*	*	max.
	<b>Wool/ Handwash</b>	20 - 40 °C		2.0	<b>Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable.</b> This programme is tested and approved by The Woolmark Company for machine- and handwashable wool. Select spin speed according to the manufacturer's recommendations on the care label.	—	Yes	*	—	—	—	—	—	—	*	*	1000 <sup>1)</sup>
	<b>White</b>	20 - 60 °C		9.0	<b>Normally to heavily soiled and robust white cotton laundry.</b> Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	—	—	—	—	—	—	*	*	max.
	<b>Light colours</b>	20 - 60 °C		6.0	<b>White and pastel shaded garments made of delicate fabrics.</b> Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	—	Yes	*	—	—	—	—	—	—	*	*	1000 <sup>1)</sup>
	<b>Dark</b>	20 - 60 °C		6.0	<b>Black and dark garments made of cotton, cotton blends and polyester.</b> Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	—	Yes	*	—	—	—	*	—	—	*	*	1000 <sup>1)</sup>
	<b>SuperEco</b>	20 - 60 °C		9.0	<b>Normally to heavily soiled and robust underwear, table and bed linen, towels and shirts made of cotton and linen.</b> Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.	—	Yes	*	—	—	—	*	—	—	*	*	max.
	<b>AquaEco</b>	20 - 40 °C		3.0	<b>Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments.</b> Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener.	—	Yes	—	—	—	—	—	—	—	*	*	max.
	<b>Speed 15</b>	20 - 30 °C		3.0	<b>Briefly worn clothing made of cotton, artificial fibers and blends with cotton.</b> Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	—	—	—	—	—	—	*	*	max.
	<b>Rinse &amp; Spin</b>	—	—	9.0	<b>Rinse and intensive spin programme.</b> Same as the last rinse and the final spin in the "Cotton" programme.	—	—	*	—	—	—	*	—	—	*	*	max.
<b>SPECIAL PROGRAMMES</b>	<b>Spin</b>	—	—	9.0	<b>Intensive spin programme.</b> Same as the spin cycle in the "Cotton" programme.	—	—	—	—	—	—	—	—	—	*	*	max.
	<b>Jeans</b>	20 - 60 °C		7.0	<b>Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.</b>	*	Yes	*	*	*	—	—	*	*	*	*	max.
	<b>Delicates</b>	20 - 40 °C		2.5	<b>Curtains and delicate clothing, dresses, skirts, shirts and blouses.</b>	*	Yes	*	*	—	—	—	—	—	*	*	1000 <sup>1)</sup>
	<b>Steam Auto Clean</b>	—	—	—	<b>Self-cleaning programme. Cleans the interior of your washing machine and thus helps to avoid smells or deposits.</b> Run this programme regularly if you never or seldom wash your laundry at temperatures over 60°C or if your washing machine has not been in use for a long time. <b>IMPORTANT: Do not load any laundry!</b> During this programme "St" appears on the display.	—	—	—	—	—	—	—	—	—	*	—	—
	<b>Steam Refresh</b>	—		1.0	<b>Clean and dry laundry items made of cotton and/or synthetics which were already used.</b> Refreshes, reduces smells, moderates creasing and makes the items ready to wear or use within 20 minutes. After programme end, immediately put the laundry on hangers for 10 minutes before using. During this programme "St" appears on the display.	—	—	—	—	—	—	—	—	—	*	—	—

- \* optional / Yes : dosing required
- <sup>1)</sup> For improved garment care, spin speed is restricted in these programmes.
- <sup>2)</sup> Only selectable within the temperature range of 40 to 60°C.

The Wool/Handwash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06435





## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Mixed	40	6.0	73	0.60	1:00
Cotton	95	9.0	87**	2.60	2:20
Cotton	60	9.0	64	1.53	2:30
Cotton with "Eco"***	60	9.0	64	1.35	4:00
Cotton	40	9.0	82	0.80	2:15
Synthetics	60	3.5	46**	0.85	1:35
Synthetics	40	3.5	42	0.50	1:20
Wool/Handwash	40	2.0	45	0.60	0:40
White	40	9.0	82	0.90	2:30
Light colours	40	6.0	70	0.50	1:20
Dark	40	6.0	49	0.60	1:40
SuperEco	60	9.0	80	1.08	4:00
AquaEco	40	3.0	19	0.45	1:00
Speed 15	30	3.0	30	0.20	0:15
Jeans	40	7.0	95	0.85	2:32
Delicates	30	2.5	60	0.40	0:45
Steam Auto Clean	—	—	11	0.50	0:35
Steam Refresh	—	1.0	0.5	0.20	0:10

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The time indicated on the display can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label (with separator in detergent dispenser removed for use of powder detergent).

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use (remove separator in detergent dispenser for use of powder detergent if necessary).

1. Push the **"On/Off"** button . Wait until the light loop around the programme buttons has finished and only one programme button lights up. The **"Start (Pause)"** button light blinks.
2. Select the **desired programme** by touching the corresponding programme button. It is marked by a blue light. Or select a "special programme" by touching the "Special programmes" button on the display until the symbol of the desired programme lights up.
3. The **temperature** and **spin speed** indicated on the display can be altered by touching the "Temperature" button or the "Spin speed" button .

## SELECT ANY DESIRED OPTION

If a combination of programme and/or options is not possible, the option light briefly blinks and and switches off again, and a signal sounds.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Eco" button

- With a modified temperature profile and an extended wash duration, the optimum combination of good wash result and lower energy consumption is achieved.

### "Easy ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

### "Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water or for washing baby linen and helping people with allergies.

### "Steam Stain Removal" button

- Treats the laundry with hot steam during the wash cycle in order to help removing stains.
- Selectable for laundry made of cotton and/or synthetics within temperature range of 40 to 60°C.

### "Steam Sanitization" button

- Eliminates bacteria and helps sanitizing the laundry.
- Appropriate for cotton and/or synthetic laundry items with care label within temperature range of 40 to 60°C and up to a maximum load of 6 kg.
- Prolongs the programme by approx. half an hour to an hour, depending on the load size.

### "Spin speed" button (incl. "Rinse hold" )

- Every programme has a predefined spin speed.
- Touch the button to set another spin speed.
- If you select spin speed "0", the water is drained out only, without spinning. However, intermediate spin phases remain during rinse.
- If you select "Rinse hold" , the laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
  - Select "Rinse hold" if you want to postpone spinning to a later time or if you want to drain only.
  - Do not leave the laundry to soak in the rinse hold for too long.
  - The programme stops to "Rinse hold" , when the "Rinse hold" symbol on the display blinks. The **"Start (Pause)"** button blinks as well.
  - To terminate the "Rinse hold" by draining the water, without any spinning, touch the **"Start (Pause)"** button.
  - To terminate the programme by spinning the laundry, touch the "Spin speed" button to select the desired spin speed and then the **"Start (Pause)"** button to start the spin cycle.

## SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just touching one button.

- Select the desired programme, temperature, spin speed and option(s), touch and hold the **"Favourites"** button for at least 3 seconds. The lamp next to the **"Favourites"** shortly blinks and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, shortly touch the **"Favourites"** button and start by touching **"Start (Pause)"** .

**If you want to replace the saved programme setting by another one:**

- Proceed as already described above - the previously saved programme setting will be replaced by the new one.

## START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature, spin speed and options.
- Touch the "Start delay" button to select a delay time step between 0:30 and 23:00 hours. A clock symbol appears next to the delay time on the display.
- Touch the **"Start (Pause)"** button . The light stops blinking and becomes constant. The countdown of the delay time begins. The clock symbol and the colon between hours and minutes on the display blink.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- The number of hours preselected can be changed by touching the "Start delay" button.

### To cancel the "Start delay"

**...before you touch the "Start (Pause)" button:**

- Touch another programme button or set start delay time to "0:00" - the time delay disappears after a few seconds.

**...after having touched the "Start (Pause)" button:**

Set the delay time to "0:00" - the time delay disappears after a few seconds. Or touch **"Start (Pause)"** - the delay time disappears. Touch **"Start (Pause)"** again if you want to start the selected programme immediately.

## "ADD GARMENT" INDICATION

Before starting a programme, the symbol lights to show that the door can be opened to add more washing. As soon as you press **"Start (Pause)"**, the door will lock until the end of the programme and must on no account be forced open. In case you have to open it urgently during a running programme, refer to "Reset a running programme before the end". If you try to start a wash programme and the door is not properly closed, the "Add garment" indication will blink.

## PROGRAMME START

Open the tap and touch the **"Start (Pause)"** button . The blinking **"Start (Pause)"** button light becomes constant. The "Door open" indication goes off, and the lit bubbles indicate that the programme is in process. In some phases, the remaining programme time is newly calculated - if this is the case, the "6<sup>th</sup> Sense" indication on the display will fade, and the remaining programme time is replaced by an animation.

## CHILD LOCK

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. To activate the child lock:

- The washing machine has to be switched on .
- Touch the "Temperature" and the "Spin speed" buttons simultaneously for a few seconds until the key symbol on the display blinks - the key symbol will light afterwards to show that the child lock is active.

The programme setting cannot be changed anymore. The only change possible is to either reset the running programme by touching and holding "Reset/Drain" for a few seconds, or to switch the washing machine off by pushing **"On/Off"** .

To deactivate the child lock, proceed in the same way as for activating it.

## RED FAILURE INDICATIONS

If one of the red failure indications on the display lights up, refer to the "Troubleshooting Guide" in your "Instructions for Use".

## PROGRAMME END

- The display shows "End", and the "Programme finished" indication lights up.
  1. Switch the machine off by pushing **"On/Off"** .
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.
- If you do not switch the washer off, the display lights go out automatically after a few minutes to save energy. Only "End" will remain visible on the display.

## DETERGENT OVERDOSAGE INDICATION

The symbol will light up at the end of the programme if you used too much detergent. Use less detergent next time.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Touch the **"Start (Pause)"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Touch the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## RESET A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

Touch and hold the **"Reset/Drain"** button for at least 3 seconds. An animation appears on the display. The water is drained out. It may last a while until you can open the door.