

1. OVERVIEW



ON button



OFF button



Programme selection button

Press button P (repeatedly) until the required programme number appears on the display.



Fault indication and wash time display

In normal operation it indicates the remaining time (h:mm), whereas with "Delayed start" selected it indicates the time remaining until programme start (hh).

In the presence of a fault indication "F." - , consult the section "5. What to do if ...".



Rinse aid level indicator and salt level indicator

They light up when rinse aid or salt need to be added. Add just before starting a wash cycle.



Set the detergent

Press button P (repeatedly) to set the type of detergent used.

Powder, gel, tablets (standard): indicator off
Detergent with rinse aid: left indicator
Detergent with salt + rinse aid: right indicator



This deactivates the rinse aid and/or salt indicator.

Half Load/Multizone button

Load the **top** or **bottom** rack only.

Press once = wash **top** rack (the indicator/symbol lights up)

Press twice = wash **bottom** rack (the indicator/symbol lights up)

Press 3 times = **Off** (Half load/Multizone deactivated).
When washing without the top rack, press the "Half load" (i.e. "wash bottom rack") button. "twice (the corresponding indicator/symbol lights up).



Power Clean

High pressure with an additional jet for better washing results and greater bottom rack load flexibility.



"Delayed start" button

Press the button (repeatedly) to delay the start of the programme. Adjustable from 1 to 24 hours. With each press of the button, the delayed start indicator increases by one hour and after 24 restarts from 00. Then press the START button. The dishwasher will start after the set time.



START button

The indicator lights up during operation, flashes when a fault occurs, and goes off at the end of the programme.



RESET button - for programme change or indication of faults

Press this button to cancel a started programme and selected extra functions. Press this button to cancel the main fault indicators (F.); also refer to the section "5. What to do if...". The programme can then be selected and started.

Running programme indicator

A LED light projected on the floor indicates that the dishwasher is working.

 


Table 1.1.

Table of programmes					Detergent dispenser		Consumption ¹⁾		
P	Programmes	Available options	Loading instructions		large	small	Litres	kWh	Minutes
1	Sensor + 40-70°C		Normally or heavily soiled crockery, including pots and pans.		X	X	7-17	0.99-1.75	65-220 ± ¹⁾
2	Pre-Rinse cold		Crockery to be washed later.		—	—	4.0	0.03	14 ± ¹⁾
3	Glasses 40°C		Light soiling, for example glasses and cups.		X	—	10.0	0.85	100 ± ¹⁾
4	Quickwash 40°C		Lightly soiled crockery, without dry residuals.		X	—	10.0	0.65	30 ± ¹⁾
5	Eco ²⁾ 50°C		Normally soiled crockery. Energy-saving programme.		X	X	11.0	1.05	155 ± ¹⁾
6	Hygienic + ³⁾		Normally or heavily soiled crockery, with additional antibacterial action. An interruption of the programme (e.g. due to door opening) can compromise elimination of germs.		X	X	13.0	1.50	115 ± ¹⁾
7	Nightrinse 55°C		Normally soiled crockery, gentle and quiet (39 dbA) thanks to the lower pressure jet.		X	X	13.0	1.20	290 ± ¹⁾

¹⁾ Programme data obtained in conformity with European standard EN 50242. The data may vary, for example, according to different loads, extra functions, sensor settings (only with sensor programmes), water supply temperatures, water hardness and power supply voltage.

²⁾ Energy label programme in compliance with EN 50242. - **Information for Test Laboratories:** for more detailed information on the EN comparison test and other tests, contact the following address: "nk_customer@whirlpool.com".

³⁾ The antibacterial action has been shown in collaboration with the Pasteur Institute, Lille (France), in conformity with. Standard NF EN 13697 - November 2001.



2. QUICK REFERENCE GUIDE

Detailed instructions are given in the following pages, see also chapter "5. What to do if..."

1. **Switch on the appliance** Open the dishwasher door.
Press the **ON** button.
2. **Select a programme** Press the button **(P)** or **(▶)** to bring up the desired programme on the display.
Select options, if available.
3. **Select the type of detergent** The detergent selection procedure varies depending on the dishwasher model.
Chapter "1. Overview" provides instructions for selecting detergent type.
4. **Fill in the detergent**

4a. Powder/gel/tabs
Fill the detergent dispenser compartments in accordance with the wash programme selected. Large compartment **A** for every wash cycle, additional small compartment **B** for programmes with pre-wash (see table 1.1.).


 
4b. Combined action detergents (2 in 1/3 in 1/... etc.)
Place the detergent in compartment **A** or in the cutlery basket, as per the manufacturer's recommendations.

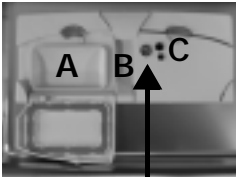
5. **Check the rinse aid level**


Visual indicator in dispenser **C**

dark ⇒ sufficient rinse aid present,
clear ⇒ add rinse aid (approx. 100 ml).


The indicator lamp on the control panel lights up when rinse aid needs to be added. Not all models are equipped with such an indicator.


6. **Check the salt level** Depending on the model:
 

window in salt reservoir cap on bottom of appliance inside

orange ⇒ when sufficient salt is present,
clear ⇒ when salt needs to be added.

The indicator lamp on the control panel lights up when salt needs to be added. Even once salt has been added, the indicator lamp only switches off after several wash cycles!


7. **Load the racks** Make sure that the spray arms can turn freely and are not impeded by crockery or cutlery in the racks.
Detailed instructions on loading the racks are given in chapter "3. How to use the appliance", under "How to load the racks".
8. **Start the appliance** Press the **START** button.
9. **Turn on the water tap and close the dishwasher door** When the door is closed the dishwasher starts automatically.

Change the programme in progress:

 - Press the **RESET** button.
 - Close the door.
 - (Water drains for up to 60 seconds)
 - Open the door.
 - Select a new programme.
 - Press the **START** button.

Wash cycle

If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted. Care must be taken when opening the door, as steam will escape!
10. **End of programme** At the end of the programme an acoustic signal will sound.
The **START** indicator lamp switches off.
11. **Open the door, switch off the appliance** Press the **OFF** button. All the indicator lamps switch off.
12. **Turn off the water tap, unload the racks** Unload the appliance, starting from the lower rack in order to avoid any residual drips of water falling onto crockery below.

3. HOW TO USE THE APPLIANCE

PROGRAMME SELECTION

Press the button **(P)** or **(D)** to bring up the desired programme on the display. The appliance must be switched on. If required, select options (if supplied). The corresponding indicator lamp switches on. Appropriate programmes and relative available options are detailed in table 1.1 on page 1.



Programme times stated in the table were obtained under normal conditions and may vary depending on conditions. Differences of up to 20 minutes are possible with sensor programmes as a result of the appliance's automatic calibration system.

HOW TO FILL THE DETERGENT DISPENSER



Only fill the detergent dispenser prior to starting a wash programme. **Only** use detergents specially recommended for dishwashers, observing the manufacturer's recommended dosage. Observe the manufacturer's safety warnings!

Open the detergent dispenser compartments by pushing the left lever (lever 1) of the dispenser.

a. Powder/gel/tabs

Fill the detergent dispenser compartments in accordance with the wash programme selected (table 1.1).

Programmes without pre-wash:

pour the entire recommended dosage into compartment **A**.

Programmes with pre-wash:

pour 2/3 of the recommended dosage into the large compartment **A** and 1/3 into the small compartment **B**.


Dishwasher tabs should be placed, according to the manufacturer's recommendations, in compartment **A** or in the cutlery basket.

If the "Half load" option is selected, detergent dosage should be reduced by approximately 1/3.

b. Combined action detergents (2 in 1/3 in 1/... etc.)

Combined action detergents should be placed, according to the manufacturer's recommendations, in compartment **A** or in the cutlery basket.

Firmly press the detergent compartment lid shut after filling.

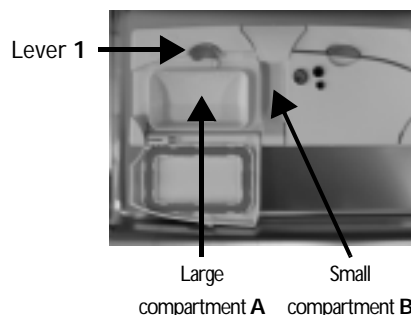

Detergents with rinse aid incorporated may be effective only with longer programmes. In the case of shorter programmes, detergent residue may be a problem (if necessary, use powder detergent). Detergents with rinse aid incorporated tend to form excess suds.



The guarantee is not applicable if faults are caused by the use of these products.


HOW TO CHECK/FILL/ADJUST RINSE AID



Not necessary when using a combined action detergent.

a. How to check the rinse aid level

Check the visual indicator **C** on the rinse aid dispenser: dark = sufficient rinse aid, clear = add rinse aid.


In the case of appliances with an electric indicator on the control panel, the rinse aid indicator lamp  lights up red when rinse aid needs to be added.

b. How to fill the rinse aid dispenser

Open the rinse aid dispenser by pressing the right lever (lever 2) of the dispenser.

Fill the dispenser with rinse aid up to the "max" line (approx. 100 ml).

Shut the lid again.

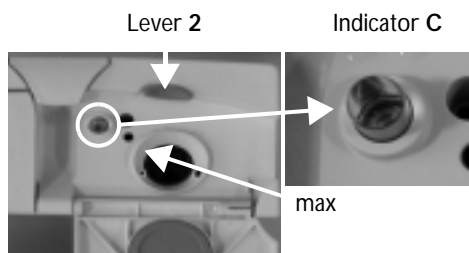

Only use rinse aids recommended for use in domestic dishwashers. **Immediately** wipe away any rinse aid spilt accidentally. This prevents the formation of excess suds which can cause a fault function of the appliance.

3. HOW TO USE THE APPLIANCE

c. How to adjust the rinse aid dosage regulator

The rinse aid dosage can be adjusted to the detergent used. The lower the setting, the less rinse aid is dispensed (factory setting: position 4).

Press the lever **2** to open the cover.

Using a coin or similar object, turn the arrow to the desired setting.

After adjusting the rinse aid setting, shut the cover again.





If there are streaks: reduce the dosage by turning the dial to a lower setting (1-3). If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6). Plastic dishes have more difficulty drying and a higher rinse aid setting will not improve the situation.

HOW TO CHECK/FILL/ADJUST SALT



Only use regeneration salt specifically for dishwashers.

a. How to check the salt level

Depending on the model, check the visual indicator . The window on the salt reservoir cap is clear when salt needs to be added and orange when the salt present is sufficient. In the case of appliances with an electric indicator on the control panel, the salt indicator  lamp lights up red when salt needs to be added.

b. How to fill the salt container

- Remove the lower rack.
- Turn the salt container cap anti-clockwise to open it.
- When using the dishwasher for the first time, fill the salt container to the rim with water.
- Using the funnel provided, fill with regeneration salt to the rim (the first time, min. 1.5 kg/max. 2 kg).
- Stir with the handle of a wooden spoon to help dissolve the salt.
- Close the cap of the salt container by turning it clockwise.
- Reinsert the lower rack.



Once regeneration salt is added, **immediately** start a wash programme (the "Pre-wash" programme alone is **not** sufficient). Residual saline solution or grains of salt can lead to deep-down corrosion, irreparably damaging the stainless steel components. The guarantee is not applicable if faults are caused by such circumstances.



The salt level indicator lamp may remain lit for the duration of several wash cycles. If the water hardness level falls within category 1 (soft), **no** salt is required.

c. How to set the water hardness level

- Switch on the appliance.
- Select the 2nd programme "P2" - consult the table 1.1 in chapter 1.
- Press the START button for at least 5 seconds until the START indicator lamp flashes.
- The set water hardness level is shown on the display (if present) or the START button flashes.
- With each successive touch of the START button the setting increases and when it reaches 7 it returns to 1 again.
- The appliance must be switched off to memorise the new setting.

Water hardness	German degrees °dH	French degrees °fH	English degrees °eH	Flashing frequency or display setting
1 soft	0 - 5	0 - 9	0 - 6.3	1 / 1x
1 - 2 medium	6 - 10	10 - 18	7 - 12.6	2 / 2x
2 medium	11 - 15	19 - 27	13.3 - 18.9	3 / 3x
3 medium-hard	16 - 21	28 - 37	19.6 - 25.9	4 / 4x
4 hard	22 - 28	38 - 50	26.6 - 35	5 / 5x
4 very hard	29 - 35	51 - 63	35.7 - 44.1	6 / 6x
4 extremely hard	36 - 60	64 - 107	44.8 - 74.9	7 / 7x



Water hardness level is factory set at 3 for medium-hard water (display 4 or 4 flashes of the START button).



Water hardness level 4 with combined action detergent
Even if you use a combined action detergent which includes salt, you must still add regeneration salt since such detergents are not effective enough at softening hard water.
If the appliance is equipped with the function "Select detergent" (see chapter "1. Overview"), set the detergent dispenser system to the "no salt" setting so that the salt indicator lamp remains activated ("Detergent with rinse aid").

3. HOW TO USE THE APPLIANCE

HOW TO LOAD THE RACKS


UPPER RACK - depending on model

- Multipurpose support* **A** Three possible positions for long for utensils, cups and glasses.
- Dish holder* **B** In horizontal position for cups/long utensils, in raised position for plates and stemware.
- Adjustable glass holder* **C** Depending on the position, for small glasses or stemware.




Long-handled utensils (kitchen knives) must be arranged with the sharp end facing in towards the appliance.

- Cutlery basket* **D** It can be placed on the upper rack when the "Half load/Multizone" function is selected.
- Rack vertical height adjustment* **E** The top rack height can be adjusted even when loaded.
Lower adjustment: pull the two handles **E** outwards and lower the rack.
Upper adjustment: pull the two handles **E** up until the rack fits in place (standard position).

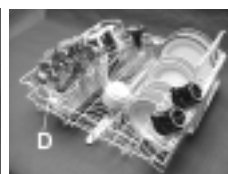


The two handles **E** must be on same level.

Washing without the upper rack
If the appliance is equipped with the adjustable retainers shown in the figure the upper rack can be removed to wash large plates and trays, etc. Open the two retainers **F** and remove the rack from the guides.

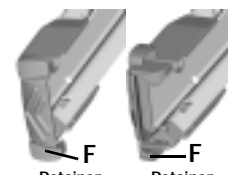


When the upper rack is in place the retainers must always be closed.

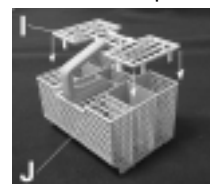

LOWER RACK - depending on model

- Plate holder* **G** Partially folding for maximum rack loading flexibility.
- Cutlery basket* **H** or
- Cutlery basket* **J** The grill element **I** supplied can be inserted to keep cutlery separate.
- Zone* **K** Intensive wash with "Power Clean".

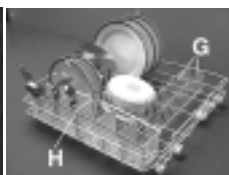

Sharp utensils that might cause injury must be placed in the cutlery basket with the sharp end facing downwards. Arrange crockery so that water does not collect in cavities, ensuring that the spray arms turn freely. Only use dishwasher-proof crockery and dishes. Do not use the dishwasher for washing wooden items, aluminium, tin, silver cutlery or decorated crockery (unglazed).

WASH CYCLE

The appliance door must be closed and the water tap open.

To add dishes, open the door with caution:



Beware of hot steam.

Close the door. The programme resumes from where it was interrupted.



The wash cycle can be interrupted at any time by pressing RESET.

Changing the programme in progress/Resetting

- Keep the START button pressed for 2 seconds until the START indicator lamp switches off.
- (Water drains for up to 60 seconds).
- The appliance is now ready to be restarted.

Full integrated models

- Press the START/RESET button (for 2 seconds).
- Close the door.
- (Water drains for up to 60 seconds).
- The appliance is now ready to be restarted.

PROGRAMME END

Exercise caution when opening the door: beware of **hot steam**.

Only press the **OFF** button once the START indicator lamp has switched off. All the indicator lamps switch off. Unload the appliance, starting from the lower rack in order to avoid any residual drips of water falling onto crockery below.



For even better drying results, leave the dishwasher door open a little before unloading in order to allow the steam to dissipate, helping the dishes to dry. The underside of the kitchen worktop must be protected (see instructions in "Maintenance and Installation").

4. PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing

The packaging materials are 100% recyclable and marked with the recycling symbol. .

2. Removing the packaging and inspecting the contents

After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.

3. Before using the dishwasher for the first time

- The appliance is designed to operate at ambient temperatures of between 5°C and 45°C.
- This dishwasher has been tested by the manufacturer to ensure it functions correctly. Such testing may leave slight drips/ water marks which will disappear with the first wash.

4. Energy and water savings

- Do not rinse crockery under running water.
- Always fully load the dishwasher before running it or select the "Half load/Multizone" function (if available).
- If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type ("70°C Max" or "90°C Max").

5. Child safety

- Keep the packaging materials out of the reach of children.
- Children must not be allowed to play with the dishwasher.
- Store the detergent, rinse aid and salt out of the reach of children.

6. Safety warnings

- The appliance is not intended for use by children or physically or mentally impaired persons, unless adequately supervised by a responsible adult capable of guaranteeing safe use of the appliance.
- Do not operate the appliance in the open air.
- Do not store flammable materials in close proximity to the dishwasher.
- The water in the dishwasher is not potable.
- Do not use solvents inside the dishwasher: **risk of explosion!**
- Be careful when the door is open: **risk of tripping!**
- The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it.
- Sharp items that might cause injury (e.g. knives), must be placed in the cutlery basket with the sharp end facing downwards. Long-handled utensils must be arranged horizontally in the upper rack, with the sharp end facing away from the front of the appliance.
- Before cleaning or carrying out maintenance, switch off the appliance and turn off the water tap; also after programme end in the event of any malfunction.
- Repairs and technical modifications must be carried out exclusively by a qualified technician.

7. Resistance to frost

If the appliance is placed in surroundings exposed to the risk of frost, it must be drained completely.


Turn off the water tap, remove the inlet and outlet hoses, and let all the water drain away. Make sure there is at least 1 kg of dissolved regeneration salt in the salt container, to protect the appliance from temperatures of up to -21°C. When the programme resumes, an error message may be displayed.

"F1"/START indicator flashes once: pour half a litre of warm water into the bottom of the dishwasher.

"F6"/START indicator flashes 6 times: the appliance must remain at an ambient temperature of min. 5°C for at least 24 hours.

After eliminating these faults, RESET the appliance (see chapter "5. What to do if...").

8. Disposal

- The appliance is manufactured using recyclable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal regulations. Make it unusable by cutting off the power cord. To prevent situations of potential danger to children (e.g. danger of suffocation), break the lock of the door so that it can no longer be closed.
- This appliance is marked according to the European directive 2002/96/CE on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is scrapped suitably, you can help prevent potentially damaging consequences for the environment and health. Unsuitable disposal of an appliance of this type as household waste could have detrimental effects on the environment. The symbol  on the appliance, or on documentation enclosed with the appliance, indicates that this product must not be treated as household waste, but must be delivered to the nearest collection centre for the recycling of electrical and electronic appliances. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For further information on the treatment, recovery and recycling of this appliance, contact your competent local authority, the collection service for household waste or the shop where you purchased the appliance.

EC Declaration of conformity

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 2006/95/CE, 89/336/CE, 93/68/CE and 2002/95/CE (RoHS Directive).



Loading Capacity: 12 place settings.

5. WHAT TO DO IF...

If a fault occurs, **before contacting** the After-sales Service, make the following checks to try and remedy the problem. Most faults can be remedied by taking the following courses of action, quickly restoring normal appliance operation.

The appliance...	Possible causes/solutions
...is not working/will not start	<ul style="list-style-type: none"> - The appliance must be switched on. - Check the household circuit fuse if there is no power supply. - The dishwasher door must be closed. - Check whether the "Delayed start" function (if available) has been selected. If it has, the appliance will only start once the set time has elapsed. If necessary, set the delayed start to "0" (RESET the appliance).
... shows "F1" on the display or the START indicator lamp flashes once	<ul style="list-style-type: none"> - The water supply temperature must be above 3°C.
... shows "F4" on the display or the START indicator lamp flashes 4 times	<ul style="list-style-type: none"> - The filters must not be dirty or clogged. - The drain hose must not be kinked. - The closure disk of the syphon hose connection must be removed.
... shows "F6" on the display or the START indicator lamp flashes 6 times	<ul style="list-style-type: none"> - The water tap must be open. - The water inlet hose must not be kinked and the relative inlet filter in the water tap connector must not be clogged.
... shows "F7" on the display or the START indicator lamp flashes 7 times	<ul style="list-style-type: none"> - The water tap must be fully open during water inlet (minimum capacity: 0.5 litres per minute). - The water inlet hose must not be kinked and the relative inlet filter in the water tap connector must not be dirty.
... shows "F8" on the display or the START indicator lamp flashes 8 times	<ul style="list-style-type: none"> - The filters must not be dirty or clogged. - Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - The drain hose must be fitted correctly (for high built-in appliances, leave min. 200-400 mm from the lower edge of the appliance - see instructions in "Maintenance and Installation").
... shows other "F" faults on the display or the START indicator lamp flashes Xx times	<ul style="list-style-type: none"> - Reset the appliance (see below).

After taking the above course of action, the fault message must be reset. In the majority of cases the fault is thus eliminated.

RESET: ⇒ Press the START button for approx. 2 seconds until the indicator lamp switches off or press the RESET button (depending on model).
 ⇒ Close the door.
 ⇒ Water drains automatically for up to 60 seconds.
 ⇒ The appliance is now ready to be restarted.

Crockery and cutlery ...	Possible causes/solutions
...are not perfectly clean/have food residues	<ul style="list-style-type: none"> - Arrange crockery so that items do not touch each other. Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - If necessary, use more detergent, observing the manufacturer's indications as regards dosage. Always store detergent in a dry place and do not store it for excessively long periods of time. - For heavily soiled crockery, select a wash programme with a higher temperature (see table 1.1 on the first page). - If you select the "Half load/Multizone" function (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results.

5. WHAT TO DO IF...

Crockery and cutlery ...	Possible causes/solutions
...are not perfectly clean/have food residues	<ul style="list-style-type: none"> - In the event of frequent use of the Eco programme 50°C (if available), from time to time select the intensive 70°C programme (if available). - The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see the instructions in "Maintenance and installation"). - The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.
...have deposits: - regeneration salt residue	<ul style="list-style-type: none"> - In areas with very hard water, more regeneration salt needs to be added (see page 4, "How to check/fill/adjust salt"). - Close the salt container lid properly. - If you use a combined action detergent which includes salt, do not add any additional regeneration salt.
- rust marks	<ul style="list-style-type: none"> - Salty or acidic food residues can cause rust marks even on stainless steel cutlery. To avoid this, always use the pre-wash programme if the dishes are to be washed later.
- other marks	<ul style="list-style-type: none"> - In the presence of marks, increase the rinse aid dosage (see page 3, "How to check/fill/adjust rinse aid"). - If you use a combined action detergent, possibly add more rinse aid.
- streaks	<ul style="list-style-type: none"> - In the presence of streaks, reduce the rinse aid dosage (page 3, "How to check/fill/adjust rinse aid"). If you use a combined action detergent which includes rinse aid, do not add any additional rinse aid.
- suds	<ul style="list-style-type: none"> - Only use the amount of detergent/rinse aid required, since excessive amounts can lead to excess suds.
- opaque glasses, etc.	<ul style="list-style-type: none"> - Only use dishwasher-proof crockery and dishes.
...have discoloured plastic parts	Tomato sauce, for example, can lead to discolouring of plastic parts. Powder detergent is recommended as it allows slightly higher doses to be used for improved whitening. Programmes with higher wash temperatures should be used.
...are not dry	<ul style="list-style-type: none"> - Arrange crockery so that water does not collect in cavities. - Increase the dosage of rinse aid (see page 3, "How to check/fill/adjust rinse aid"). - Dishes dry better if the dishwasher door is left open a little before unloading; this allows the steam to dissipate. - With the Rapid 40°C programme (if available), dishes may not be perfectly dry since this is a short programme. If necessary, select a longer programme.

If, after carrying out the above checks, the fault persists, switch off the appliance and turn off the water tap. Contact the After-sales Service (see warranty).

Before contacting our After-Sales Service, take note of the following:

- the description of the fault,
- the appliance type and model,
- the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side:



We reserve the right to make technical modifications.