



PRECISION SHOOTING EQUIPMENT INC.  
2727 N. FAIRVIEW AVE. TUCSON, AZ 85705 • PSEARCHERY.COM  
PN: 81934

COMPOUND BOW USER'S GUIDE



# Thank You!

From the entire PSE family thank you for purchasing a PSE bow! Your bow was manufactured from the finest materials available and handcrafted with pride in the USA. With proper care, you will enjoy the use of this product for years to come.

Please read this entire booklet before shooting or adjusting your bow. Remember, many adjustments to a compound bow require the use of a bow press. Whenever shooting a bow, be certain of your target as well as what else lies down range!

**NOTE: IMPORTANT WARRANTY REGISTRATION INFORMATION IS ON PAGE 27**

## PSE COMPOUND BOW OWNER'S INFORMATION

Fill in the following information for your personal records.

**Bow Model** \_\_\_\_\_

**Bow Serial Number:** \_\_\_\_\_

See page 27 for the serial number location on your bow

**Purchased From:** \_\_\_\_\_

**Purchase Date:** \_\_\_\_\_

**Draw Length:** \_\_\_\_\_ **Draw Weight:** \_\_\_\_\_

## PAGE INDEX

<u>SUBJECT</u>	<u>PAGE</u>
General operating instructions .....	4
Compound bow terminology.....	5
PSE cable configurations.....	6
PSE bow press info .....	7-9
Installation of accessories.....	10
Setting up your bow .....	11
PSE String Stop and FRS Flex Rod installation and adjustments.....	12
Shock-Modz and Limb Damper installation and adjustments.....	13
Micro LAS adjustments .....	14
Draw stop adjustments.....	15
Evolve cam (ECS) adjustments.....	16
Cam adjustments .....	17
PSE Pro Series draw setting charts.....	18
PSE Core Series draw setting charts.....	19
PSE Target Series draw setting charts .....	20
PSE Stinger Max cam adjustments.....	21
Stinger Max cam draw setting charts .....	22
PSE Uprising- draw length adjustments.....	23
PSE Mini Burner draw setting charts .....	24
PSE Online store information.....	25
PSE Website and Social Media Information .....	26
PSE Warranty Registration Information .....	27

## GENERAL OPERATING INSTRUCTIONS

- Always inspect your bow thoroughly before each shooting session to ensure that it is in good working order. Check for worn, loose or missing components and have them replaced at an authorized PSE dealer as required, i.e. bushings, spacers, etc.
- To avoid product damage or personal injury, inspect your arrows to ensure that they are straight, undamaged and that each nock is in good condition. A cracked nock can break when fired from the bow and cause the bow to "dry fire" resulting in possible injury to the archer and damage to the bow. Dry-firing is drawing and releasing the bowstring without an arrow on the string.
- When purchasing arrows for your bow, consult the selection chart from the arrow manufacturer and select the correct arrow for your application. Always use an arrow that is at least 5 grains per pound of peak bow weight. Failure to do so could cause personal injury and damage to your bow.

## BOW MAINTENANCE

Your PSE bow will give you many years of use if maintained and cared for properly. It is a mechanical device that is subject to wear and therefore must be inspected periodically and given proper adjustments and service. It is recommended that this service be performed at least once a year by an authorized PSE dealer. All components, including string, cables, axles, e-clips, limbs and riser should be carefully inspected for damage or wear.

### STRINGS AND CABLES

Apply a light coat of high quality bowstring wax to your string and cable each time you shoot your bow. It is especially important **NOT** to wax the area of the string that wraps around the idler wheel. This area of the string should be treated with a cam lubricant. This will help reduce wear on your string and cables. Inspect the string and cables regularly and replace them when there is evidence of wear, every 5000 shots or every 12 months.

**IMPORTANT:** Before servicing any PSE bow in a bow press, back out each limb bolt the maximum number of turns from bottom.

- Keep synthetic cables and strings waxed. Apply bow string wax to your synthetic cables and string before each shooting session.
- Strings and cables must be replaced periodically. A worn cable or string can suddenly break causing serious injury to the archer and damage to the bow. It is recommended that the string and cables be replaced at least every 5,000 shots or 12 months. **PSE recommends that this work be performed by an authorized PSE dealer.**
- Always store your bow in a cool dry place. High temperatures, such as those that can occur in the interior of a vehicle, can cause serious damage to your bow.
- After use in high humidity or damp conditions, wipe metal components of your bow with a light oil.

## SAFETY


As with any weapon, safe operation of your PSE bow must always be the highest priority.

**ALWAYS WEAR SAFETY GLASSES WHEN HANDLING A BOW.**

Do not attempt to use your bow without proper instruction. Doing so can result in serious injury.

- NEVER DRY-FIRE YOUR BOW.** Dry-firing is drawing and releasing the bowstring without an arrow on the string. Dry-firing will likely cause damage to the bow and serious injury to the archer. **In the event of a dry-fire, have an authorized PSE dealer inspect the bow for damage.**
- Always be sure of your intended target as well as what lies behind the target area. An arrow can travel a considerable distance, so it is important to have a safe and sound backstop.
- If you draw a bow and need to let it down, do so in a slow and careful manner. Keep your support arm straight and prepare for a rapid and violent let-down. Avoid hitting your hand on protruding accessories such as the cable guard or quiver. Keep your head and face back and out of danger during let-down. Never draw a bow with a peak weight above your comfort level. Always use a wrist sling when drawing a bow.
- Never modify any part of the bow or its components by drilling extra holes or removing material. This voids the warranty and presents safety problems.
- It is not recommended to time the bow using a draw board unless the draw board is operated by a winch or other mechanical pulling device.







## PSE COMPOUND BOW TERMINOLOGY

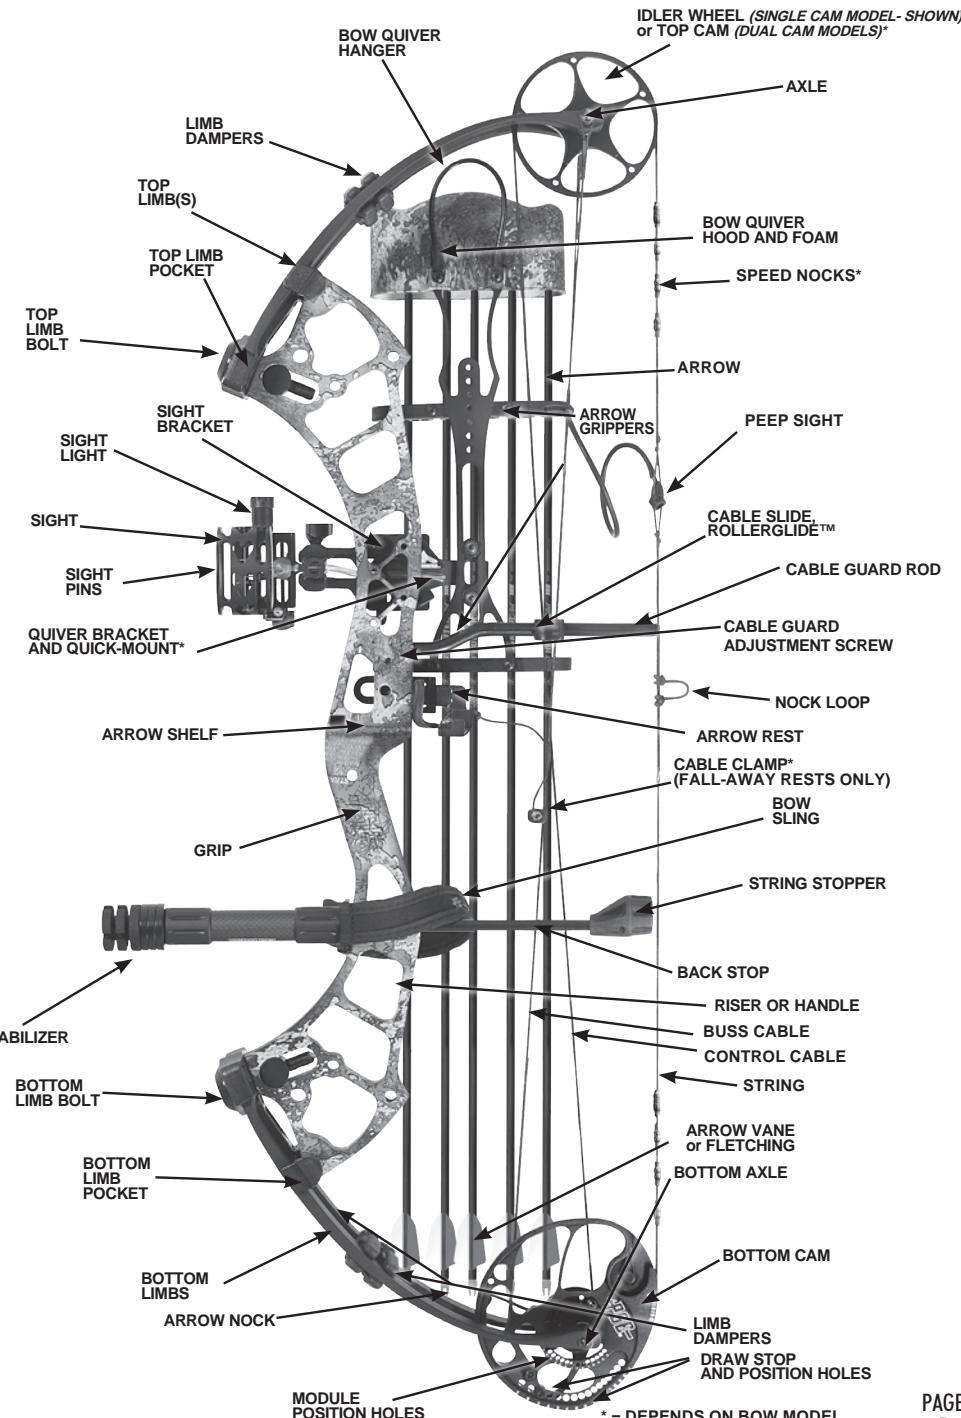

\* = DEPENDS ON BOW MODEL

## CABLE CONFIGURATIONS

## EVOLVE (ECS) CAM BOW

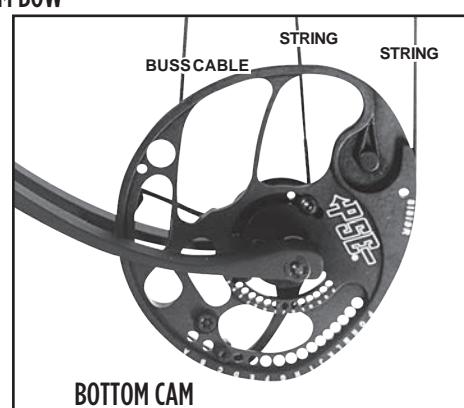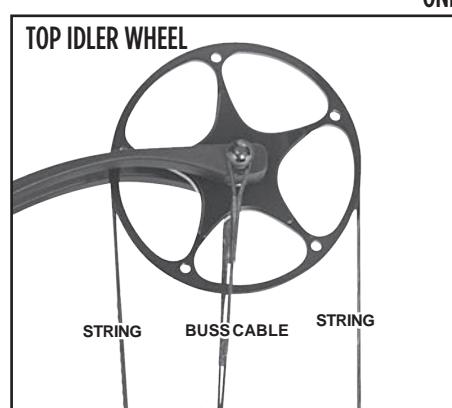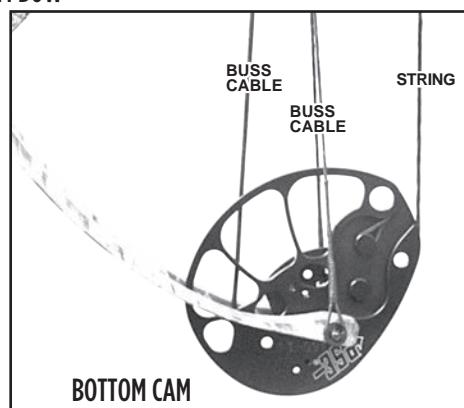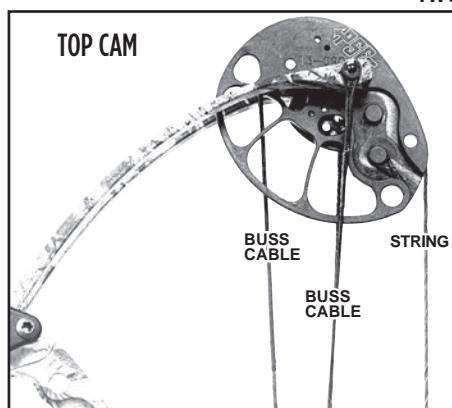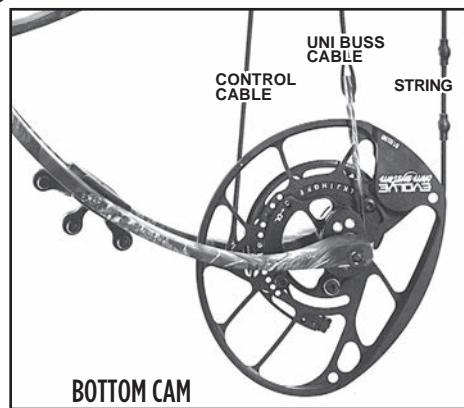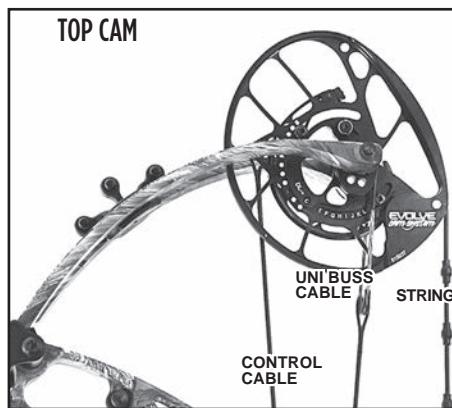

## PSE X TECHNOLOGY

PSE X Technology bows come with many unique features that will enhance your archery experience.

## USING A BOW PRESS WITH X TECHNOLOGY BOWS

ALL PSE X Technology bows **MUST** be serviced in an approved bow press and require special consideration. Do not attempt to service these bows in any bow press without reviewing the procedures described herein.

Use of a non-approved bow press or improper use of an approved bow press **WILL** result in damage to the bow and possible personal injury. Damages incurred by improper use or maintenance will not be covered under the warranty. See the PSE website at [www.psearchery.com](http://www.psearchery.com) for a list of approved bow presses.

There are two basic types of approved presses available: compression-type and pull-type. (Page 8)

## COMPRESSION-TYPE BOW PRESS: (PREFERRED)

This type of press pushes in a horizontal direction against the tips of the limbs. No other support for the bow is required.

**WHEN USING ANY BOWPRESS, BACK EACH LIMB BOLT OUT THE MAXIMUM NUMBER OF TURNS INDICATED ON YOUR BOW'S HANG TAG.** Position the bow in the press and crank press inward to apply a compression force against the limb tips as shown below.



**COMPRESS ONLY FAR ENOUGH TO LOOSEN THE STRING AND CABLES. OVER COMPRESSING COULD BREAK THE LIMBS AND CAUSE PERSONAL INJURY.**


**ANY DAMAGES INCURRED FROM OVER-COMPRESSING WILL NOT BE COVERED UNDER WARRANTY.**



X Technology continued on next page

## PSE X TECHNOLOGY USING A BOW PRESS

## PULL-TYPE BOW PRESS

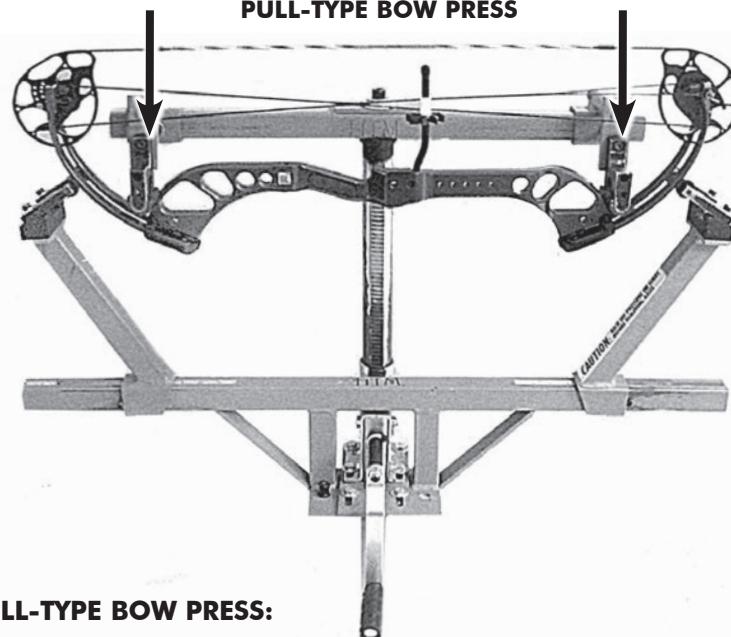


## PULL-TYPE BOW PRESS:

This type of press pulls the riser of the bow in a vertical direction between rollers that compress the limbs.



When using this type press it is very important to position the rollers and pressure points correctly! See Figure 1.

Back each limb bolt out the maximum number of turns indicated on your bow's hang tag and position the pressure points on the riser as close to the limbs as possible **WITHOUT** making contact with the limbs as shown in the photo below.

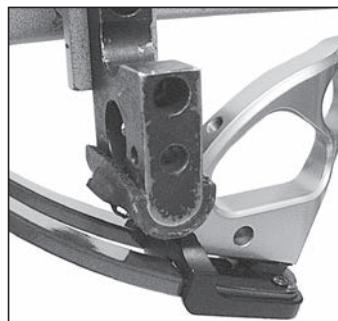

**THE PRESSURE POINTS MUST NOT CONTACT THE LIMBS AT ANY TIME DURING SERVICING.**

## PULL-TYPE BOW PRESS

## PSE X TECHNOLOGY USING A BOW PRESS (Continued)



Position the limb rollers outward on the limbs so that when the riser is pulled down the bow does not slip through/between the rollers before releasing tension on the string and cables. The rollers must be at least 4" from the limb pockets or the limbs will break. While placing tension on the limbs, **BE VERY CAREFUL NOT TO PULL THE RISER DOWN TOO FAR. DEFLECT THE LIMBS JUST ENOUGH TO REMOVE THE STRING AND CABLES.** Never allow the rollers to go past the end of the limb belly (thinnest part).


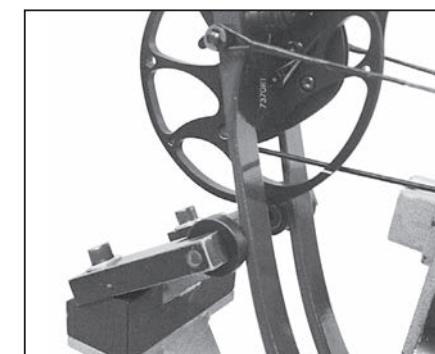


Figure 1

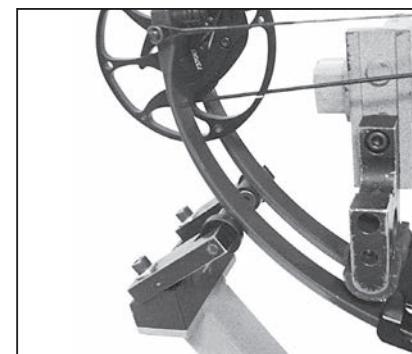

### SERVICING BOWS WITH PSE LARGE CAMS CAUTION • CAUTION • CAUTION!

When servicing bows with PSE large cams, such as the Full Throttle™, it is important to use a bow press that has enough clearance for the cams.

On some bow presses the cams may make contact with the area shown in Figure 1 when compressing the limbs. Watch very carefully as the bow is compressed. If either cam comes in contact with the bow press, **STOP IMMEDIATELY OR PERMANENT DAMAGE TO BOW COMPONENTS MAY OCCUR.**

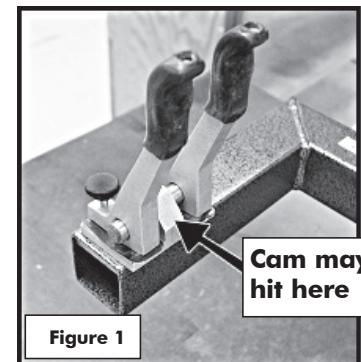


Figure 1

Contact the bow press manufacturer for further information.

## INSTALLATION OF ACCESSORIES

**Arrow rest:** The arrow rest should be installed according to the instructions received with the product. It is usually mounted to the riser in the threaded hole on the side opposite the shelf (Hole "A") using the hardware provided with the arrow rest.


**Sight:** The sight should be installed according to the instructions received with the product. It is usually mounted to the riser in the threaded holes (Holes "B") on the side opposite the shelf using the hardware provided with the sight. Some bows are equipped with multiple sight mounting holes which allow the sight to be moved up or down.

**Stabilizer:** The stabilizer should be mounted according to the manufacturer's recommendation. It is usually mounted in the threaded hole on the front of the riser (Hole "C").

**Bow Sling:** The bow sling attaches to the riser of the bow generally with the stabilizer. If a stabilizer is not used, attach the sling to the riser with the correct sized bolt (5/16"- 24) using the hole provided for the stabilizer (Hole "C").

**Posi-Lock:** Insert the posi-lock (Figure A) into the recessed area behind the rest mounting hole. (fits most arrow rest extension bars) See your dealer for the correct Posi-Lock to fit your arrow rest.

Figure A

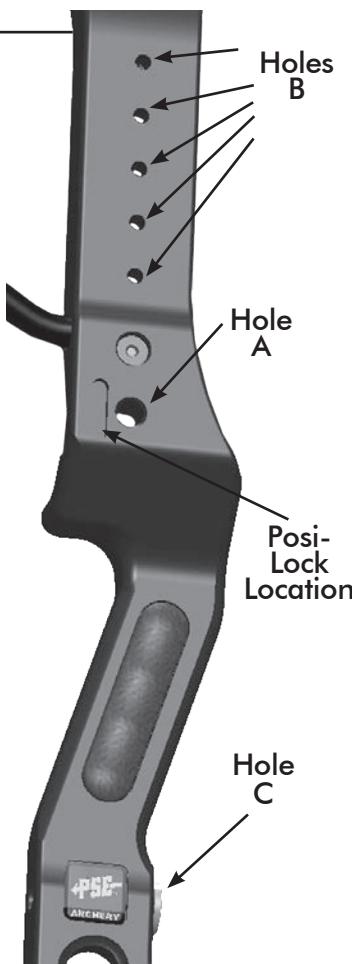

## OTHER ADJUSTMENTS

**Draw Weight:** Your bow is factory-set to within 2 lbs. of the peak draw weight. Changes in draw weight can be made by turning the limb bolt in or out. Before making any changes in weight, turn the limb bolt clockwise to the bottom position. Never use extreme torque when turning the bolt or damage to the limb may occur. The limb bolt may then be turned counterclockwise to obtain the desired weight, but **NEVER** more than the number of turns indicated on the hang tag.

### Make sure to make equal turns on BOTH limb bolts


Adjust each limb exactly the same. Does not pertain to models using the PSE Micro LAS system.

## SETTING UP YOUR BOW

### NOCKING POINT PLACEMENT:

#### Release Aid shooters:

Install the nocking point so that the arrow passes the center of the arrow rest mounting hole and runs parallel to the shelf.

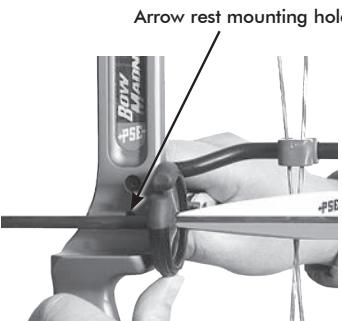

**Finger shooters:** Install the nocking point so that the arrow passes the center of the arrow rest mounting hole and runs slightly point-down.




### ARROW REST ADJUSTMENT:

When shooting with a release aid, the in/out (windage) position of the arrow rest should be adjusted so that a nocked arrow on the arrow rest runs parallel to an arrow shaft held against the sight window surface when viewed from above. When shooting with fingers the arrow on the arrow rest should point slightly outside (point end further away) of the arrow shaft held against the sight window surface.

### SIGHT ADJUSTMENT:



When adjusting the sight pin locations, always remember to "follow the group". That is, if the shot group is to the left of the target, move the sight pins to the left. If the shot group is low, move the sight pins down.

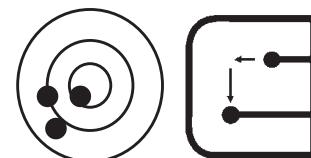

Your Authorized PSE dealer is supplied with technical information on PSE bows and cams. Please see your dealer for assistance when making these adjustments.

## PSE STRING STOP (ON SELECTED MODELS)

Adjust the String Stop by loosening the orientation set screw and then rotating and sliding the rod in and out to the desired position and bumper-to-string orientation. The String Stop design allows for the bumper to be positioned so the string strikes the center of the bumper. Tighten the orientation set screw after all adjustments are made.

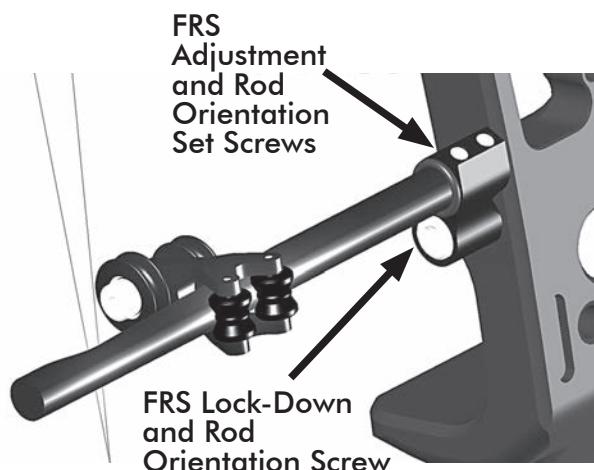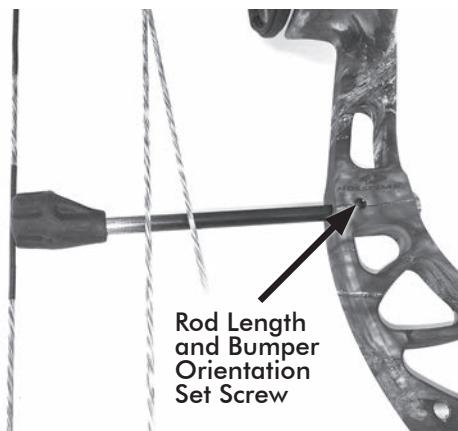


## FRS FLEX ROD INSTALLATION:

Install the FRSas shown. To adjust for cable clearance, first remove cables from the Roller Glide, then loosen Adjustment/Lock-Down screw to rotate the FRS Mounting Block until desired cable clearance is obtained. Tighten the Adjustment/Lock-Down Screw to lock into place. Place cables back into correct Roller Glide position.

## INSTALLING LIMB DAMPERS

If your split limb bow is equipped with limb dampers, the proper placement of the dampers is at least 1/2" away from the cam.

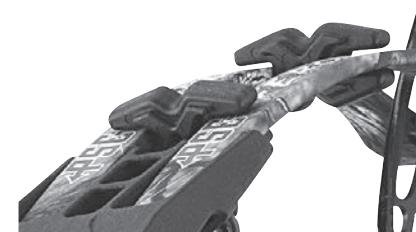

## INSTALLING SHOCK MODZ™ LIMB DAMPERS

Shock-Modz™ can be installed in four (4) different orientations between the top and bottom split limbs.

Be sure to position the Shock-Modz™ at least 1/2" away from the cam. They can be placed inside the limb as shown- or outside the limb.




## PSE ASYMMETRIC IDLER

PSE single cam bows are equipped with a special asymmetric idler wheel, which is assembled on the top limbs. It is essential that the idler be oriented properly.

The wide edge of the idler always goes to the cable guard side of the bow.

The illustration shows the proper orientation of the idler for a right-handed bow when viewed while holding the bow as it is shot.

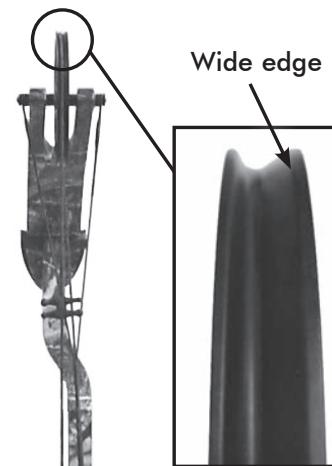

## MICRO-LAS (SINGLE SCREW ADJUSTMENTS)

### (PERFORM-X™ AND SHOOTDOWN™ MODELS)

The Micro LAS (Lateral Adjustment System) is a PSE feature that allows micro-lateral adjustments to aid in bow tuning. Paper-tuning your bow allows you to properly adjust your rest and your string position using LAS adjustments.

The Micro LAS is an additional feature to assist in fine-tuning your bow after setting your arrow rest to center.

**To Adjust:** Turn Adjustment Screw (Fig. A) clockwise/counter-clockwise to adjust lateral position of the pocket to help with left/right bow tuning. **Do not loosen the set screws in the barrel.** (Fig. B)

When paper tuning your bow and adjusting it for a left or right paper tear, move the LAS in the same direction that you would move your arrow rest if you were adjusting that. When completed adjust the backstop bumper to the center of the string.

- ◀ **TO TUNE OUT A LEFT TEAR,  
ADJUST THE LAS TO THE RIGHT**
- ▶ **TO TUNE OUT A RIGHT TEAR,  
ADJUST THE LAS TO THE LEFT**

Fine adjustments to the top and bottom LAS adjustment screws allow you to fine tune your string position perfectly.


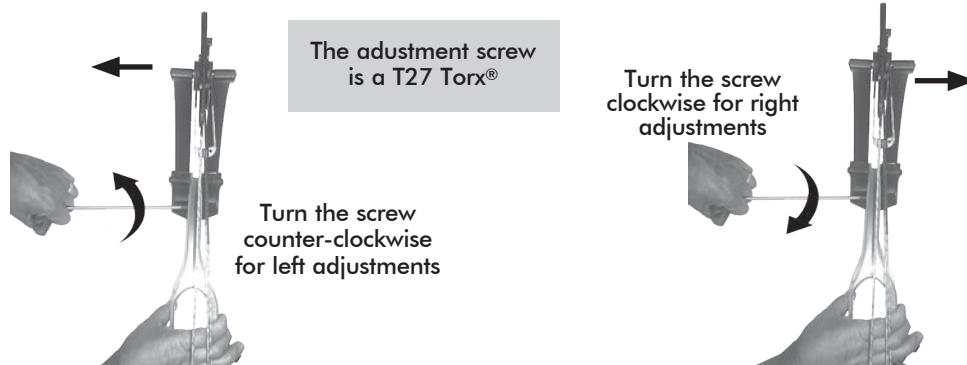


Fig. A  
Adjustment Screw





Fig. B  
Set Screws

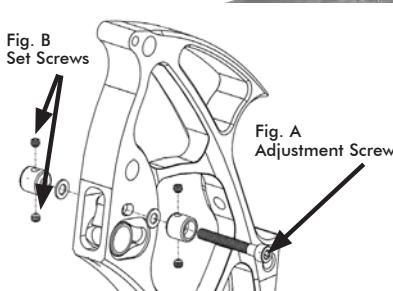

## INFORMATION ON DRAW STOP ADJUSTMENTS:

The position of the draw stop must match the setting on the inner cam. For example, if the cam is set on "E", the draw stop must be placed in one of the draw stop holes marked with an "E".

If the inner cam is in the "B" setting, the stop must be in the "B" position. Certain hybrid cams have top and bottom stops. They can be shot with both stops for a harder "wall" or with only the top stop for a softer "wall". Never shoot hybrid cams with the two stop option with only the bottom stop. In either case, the stops need to be in the holes marked with the same marking as the inner-cam setting.

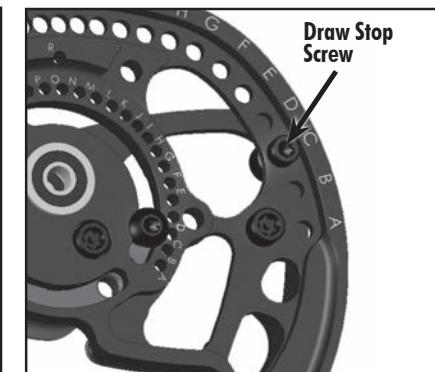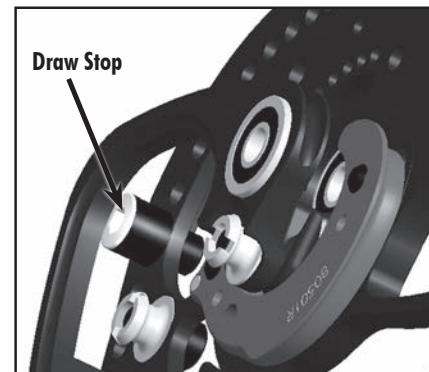

Note: This only applies to the 2020 PSE Stinger Max




Your Authorized PSE dealer is supplied with technical information on PSE bows and cams. Please see your dealer for assistance when making these adjustments.

## EVOLVE™ (ECS) CAM ADJUSTMENTS

To change draw length on the ECS: Loosen the two 8-32 size 15 Torx® screws holding the module to the cam approximately 1-1/2 turns, move the module to the desired setting. The setting will be in the window marked "DL" move the module to the same setting on both top and bottom cams.

To change let-off on the ECS: Loosen the two size 10 Torx® screws holding the stop on the module approximately 1-1/2 turns and slide to the desired position. Move the stop to the same setting on both top and bottom modules. There are 3 settings, each corresponds to a change in Let-off of 5%. The standard module let-off options are 80, 85 and 90%. An aftermarket low let-off Module is available with let off settings of 65, 70 and 75%. Please see your PSE dealer for information.

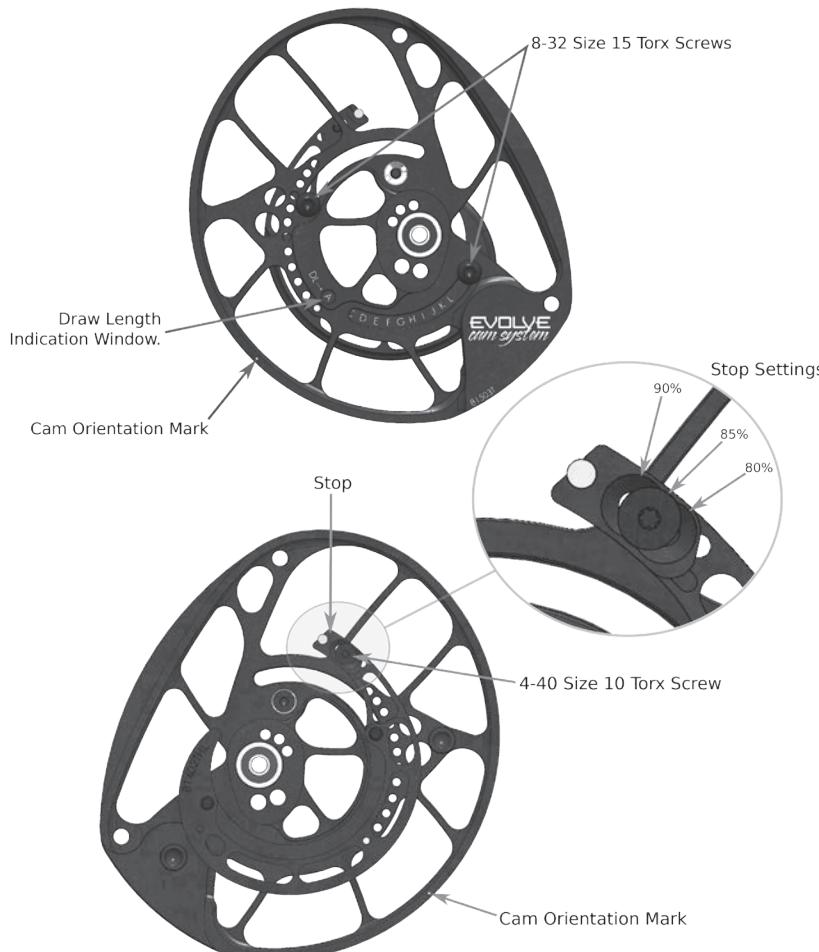

## CAM ADJUSTMENTS

**WHEELS/CAMS:** Many PSE wheels and cams have adjustable features. Each one comes from the factory set up and ready to use but there may be occasions that you need to adjust the characteristics of your bow. In some cases you will need a PSE Tune Chart to determine what to adjust, and you may need to see a PSE Dealer for information. If you are not sure of the adjustment you are making, stop and see your PSE Dealer for assistance. In some cases, an appropriate bow press will be needed to make adjustments to cams and wheels. If you do not have an appropriate press, see your PSE Dealer.


**CAM ORIENTATION:** On cams with orientation marks, a reference mark is found to indicate an approximate orientation. This line is for reference only is meant to give approximate orientation only and may vary between bow models. The orientation of the cams may be changed slightly by twisting or untwisting the string or cables.

**ALL INNER-CAMS:** The inner-cam system allows draw length adjustments over a prescribed range usually without putting the bow in a bow press. There are two types of inner-cam systems: discrete setting inner-cams and Posi-Lock inner cams.

Discrete setting inner-cams have the adjustment screws going through a specific hole in the inner-cam and threading into the cam. The screws need to be completely removed to make adjustments. The "A" setting is the longest draw length for that bow and draw lengths get shorter as you progress through the alphabet (A to B, B to C, etc.)

Posi-lock adjustable inner-cams are adjustable in  $\frac{1}{2}$ " draw length increments. The "A" setting is the longest setting for the cam. Draw lengths get shorter as you progress through the alphabet ("A" to "B", "B" to "C", etc.) by roughly  $\frac{1}{2}$ " per letter.

To adjust draw length, loosen the two 8-32 button head screws two full turns. This will allow the inner-cam to be lifted far enough to disengage the positioning pin and allow the inner-cam to rotate to a new position. Some cams may require the 8-32 button head screws to move to alternate locations to reach the new draw length adjustment position. Some draw length adjustment positions may not be accessible without putting the bow in a bow press. When the new draw length adjustment position has been achieved with the inner-cam, tighten the two 8-32 button head screws and move the draw stop to the matching setting ("A" and "A", "B" and "B").

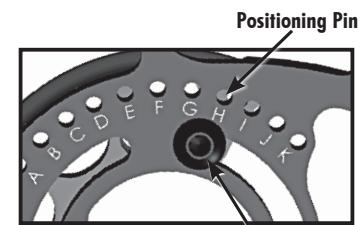

In cases where there is an inner-cam on both the top and bottom cam, both cams must be set in the same letter position for the bow to tune and shoot properly. In cases where there is a separate draw stop, the draw stop must be moved to the hole marked with the letter corresponding to the inner-cam setting.

DRAW WEIGHTS ARE ±2 POUNDS &amp; ROUNDED TO NEAREST 1/2 POUND.

PEAK WEIGHT	STEALTH MACH 1 EC CAM	CA STEALTH SD EC CAM	CA STEALTH 35 EC CAM	XPEDITE LD EC CAM	EVO NXT 35 LD SE CAM	EVO NXT 33 EC CAM	EVO NXT 31 EC CAM	BANDIT NXT EM CAM	DRIVE 3B 3B CAM	DRIVE 3D SB CAM	DRIVE XL 3B CAM
LIMB BOLT TURNS: % ADJUST FROM PEAK	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%	10 26%
80 lbs.					80 to 59	80 to 58	80 to 58	80 to 58	80 to 58	80 to 58	80 to 58
70 lbs.	70 to 51.5	70 to 51.5	70 to 52	70 to 52	70 to 50.5	70 to 50.5	70 to 50.5	70 to 50.5	70 to 50.5	70 to 50.5	70 to 50.5
65 lbs.	65 to 48	65 to 48	65 to 48	65 to 48	65 to 47	65 to 47	65 to 47	65 to 47	65 to 47	65 to 47	65 to 47
60 lbs.	60 to 44.5	60 to 44.5	60 to 44	60 to 44	60 to 43	60 to 43	60 to 43	60 to 43	60 to 43	60 to 43	60 to 43
50 lbs.	50 to 37	50 to 37	50 to 36.5	50 to 36.5	50 to 36	50 to 36	50 to 36	50 to 36	50 to 36	50 to 35	50 to 35
40 lbs.			40 to 30						40 to 29		40 to 28

DRAW LENGTHS ARE APPROXIMATE.

DRAW SETTING	STEALTH MACH 1 EC CAM	CA STEALTH SD EC CAM	CA STEALTH 35 EC CAM	XPEDITE LD EC CAM	EVO NXT 35 LD SE CAM	EVO NXT 33 EC CAM	EVO NXT 31 EC CAM	BANDIT NXT EM CAM	DRIVE 3B 3B CAM	DRIVE 3D SB CAM	DRIVE XL 3B CAM
A	30 1/2	27 1/2	32	30	32	31	32	30 1/2	26	31	25 1/2
B	30	27	31 1/2	29 1/2	31 1/2	30 1/2	31 1/2	30 1/2	25	31 1/2	32
C	29 1/2	26 1/2	31	29	31	30	31	29 1/2	25	30	24 1/2
D	29	26	30 1/2	28 1/2	30 1/2	29 1/2	30 1/2	29 1/2	24 1/2	30 1/2	31
E	28 1/2	25 1/2	30	28	30	29	30	28 1/2	24	29	23 1/2
F	28	25	29 1/2	27 1/2	29 1/2	28 1/2	29 1/2	28	23 1/2	28 1/2	29 1/2
G	27 1/2	24 1/2	29	27	29	28	29	27 1/2	23	28	22 1/2
H	27	24	28 1/2	26 1/2	28 1/2	27 1/2	28 1/2	27	22 1/2	27 1/2	28 1/2
I	26 1/2	23 1/2	28	26	28	27	28	26 1/2	22	27	28
J	26	23	27 1/2	25 1/2	27 1/2	26 1/2	27 1/2	26	21 1/2	26 1/2	27 1/2
K	25 1/2	22 1/2	27	25	27	26	27	25 1/2	21	26	27
L	25	22	26 1/2	24 1/2	26 1/2	25 1/2	26 1/2	25	20 1/2	25 1/2	26 1/2
M		21 1/2									

DRAW LENGTHS ARE APPROXIMATE.

## 2020 CORE SERIES

DRAW WEIGHTS ARE ±2 POUNDS &amp; ROUNDED TO NEAREST 1/2 POUND.

PEAK WEIGHT	BOWMADNESS UNLEASHED	BRUTE NXT BT CAM	STINGER MAX SS CAM	UPRISING	MINI BURNER	MUDDAWG	D3	DISCOVERY
LIMB BOLT TURNS: % ADJUST FROM PEAK	13 33%	8 63%	15 60%	8 80%	10 87%	13 35%	8 85%	6 33%
70 lbs.	70 to 47	70 to 27*	70 to 28	70 to 12*				
60 lbs.	60 to 40							
55 lbs.		55 to 20*	55 to 22					
50 lbs.								
40 lbs.					40 to 5*	40 to 26	40 to 6*	40 to 27
29 lbs.					29 to 4*		29 to 20	

\*Draw Weight varies with Draw Length setting.

## CORE SERIES BOWS DRAW SETTING CHART

DRAW SETTING	BOWMADNESS UNLEASHED	BRUTE NXT BT CAM	STINGER MAX SS CAM	UPRISING	MINI BURNER	MUDDAWG	D3	DISCOVERY
A	30 1/2	30	29 1/2	29				
B	30	29 1/2	29					
C	29 1/2	28 1/2	28					
D	29	28 1/2	28					
E	28	27 1/2	27					
F	28	27 1/2	27					
G	27 1/2	27	26 1/2	26				
H	27	26 1/2	26					
I	26 1/2	26						
J	26	25 1/2						
K	25 1/2	25						
L	25	24 1/2						
M		24						
N		23 1/2						
O		23						
P		22 1/2						

DRAW LENGTHS ARE APPROXIMATE.

UP TO 30"

UP TO 30"

14" - 30" (SEE D3 INNER CAM FOR DRAW LENGTH SETTINGS)

21 1/2" - 30" (SEE STINGER MAX ADJUSTMENT CHART.)

16" - 26 1/2" (SEE MINIBURNER ADJUSTMENT CHART.)

DRAW WEIGHTS ARE  $\pm 2$  POUNDS & ROUNDED TO NEAREST 1/2 POUND.

PEAK WEIGHT	PERFORM-X		PERFORM-X		PERFORM-X		PERFORM-X		SUPRA FOCUS		SUPRA FOCUS-XL		SUPRA FOCUS-XL-LD		CENTRIX LD		CENTRIX SD	
	3D	SD	SE CAM	EM CAM	SE CAM	SD-SE	SE CAM	EM CAM	EM CAM	SE CAM	SE CAM	3B CAM	3B CAM	SB CAM	SB CAM	SB CAM	SB CAM	
LIME BOLT TURNS:	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	
% ADJUST FROM PEAK	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	26%	
70 lbs.																		
60 lbs.	60 to 44	60 to 44	60 to 44	60 to 44	60 to 44	60 to 44	60 to 44	60 to 44	60 to 44									
50 lbs.	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5	50 to 36.5									
40 lbs.	40 to 29	40 to 29	40 to 29	40 to 29	40 to 29	40 to 29	40 to 29	40 to 29	40 to 29									

DRAW LENGTHS ARE APPROXIMATE.

## TARGET SERIES BOWS: DRAW SETTING CHART

DRAW SETTINGS	PERFORM-X		PERFORM-X		PERFORM-X		PERFORM-X		SUPRA FOCUS		SUPRA FOCUS-EM		SUPRA FOCUS-XL		SUPRA FOCUS-XL-LD		CENTRIX LD		CENTRIX SD	
	3D	SD	SE CAM	EM CAM	SE CAM	SD-SE	SE CAM	EM CAM	EM CAM	SE CAM	SE CAM	3B CAM	3B CAM	SB CAM	SB CAM	SB CAM	SB CAM	SB CAM	SB CAM	
A	32	30 1/2	27	30	31 1/2	28 1/2	30	31 1/2	28 1/2	30	33 1/2	32	33 1/2	32	33 1/2	32	33 1/2	32	33 1/2	
B	31 1/2	30	26 1/2	29 1/2	31	28	29 1/2	28	29 1/2	29	32 1/2	33	32 1/2	33	32 1/2	33	32 1/2	33	32 1/2	
C	31	29 1/2	26	29	30 1/2	27 1/2	29	30 1/2	27 1/2	29	32 1/2	31	32 1/2	31	32 1/2	31	32 1/2	31	32 1/2	
D	30 1/2	29	25 1/2	28 1/2	30	27	28 1/2	27	28 1/2	28	30 1/2	32	30 1/2	32	30 1/2	32	30 1/2	32	30 1/2	
E	30	28 1/2	25	28	29	29 1/2	26 1/2	28	29 1/2	28	31 1/2	30	31 1/2	30	31 1/2	30	31 1/2	30	31 1/2	
F	29 1/2	28	24 1/2	27 1/2	29	26	27 1/2	27	27 1/2	28	29 1/2	31	29 1/2	31	29 1/2	31	29 1/2	31	29 1/2	
G	29	27 1/2	24	27	28 1/2	25 1/2	27	28 1/2	25 1/2	27	30 1/2	29	30 1/2	29	30 1/2	29	30 1/2	29	30 1/2	
H	28 1/2	27	23 1/2	26 1/2	28	25	26 1/2	25	26 1/2	26	28 1/2	30	28 1/2	30	28 1/2	30	28 1/2	30	28 1/2	
I	28	26 1/2	23	26	27 1/2	24 1/2	26	27 1/2	24 1/2	26	29 1/2	28	29 1/2	28	29 1/2	28	29 1/2	28	29 1/2	
J	27 1/2	26	22 1/2	25 1/2	27	24	25 1/2	27	25 1/2	24	29	27 1/2	29	27 1/2	27	29	27 1/2	29	27 1/2	
K	27	25 1/2	22	25	26 1/2	23 1/2	25	26 1/2	23 1/2	25	28 1/2	27	28 1/2	27	28 1/2	27	28 1/2	27	28 1/2	
L	26 1/2	25	21 1/2	24 1/2	26	23	24 1/2	23	24 1/2	23	24 1/2	28	24 1/2	28	24 1/2	28	24 1/2	28	24 1/2	
M			21									22 1/2								

DRAW LENGTHS ARE APPROXIMATE.

## PSE SS CAM INFORMATION BOWS: PSE STINGER™ MAX AND S3DA MODEL

### ADJUSTING THE SS CAM:

Select the "PERFORMANCE" or "GROW WITH YOU" cable position based on the desired draw characteristics and peak weight range.

Rotate the inner-cam position (A thru P) to match the desired draw length. To adjust, loosen each #8-32 button head screw approx. 2 full turns. Rotate into position and tighten screws.  
NOTE: the 3rd tapped hole position in the inner-cam may be used if the screw becomes hidden behind the limb.



"Performance" Setting




"Grow With You" Setting

# PSE STINGER™ MAX: DRAW SETTING CHARTS

STINGER EXTREME- 70# PEAK PERFORMANCE CABLE SETTINGS							STINGER EXTREME- 70# PEAK "GROW WITH YOU" CABLE SETTINGS						
Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	Draw Weight 15 Turns Off	Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	
A	30	70	45	A	29-1/2	62	A	29-1/2	62	A	29-1/2	62	
B	29-1/2	70	45	B	29	61-1/2	B	29	61-1/2	B	29	61-1/2	
C	29	70	45	C	28-1/2	61	C	28-1/2	61	C	28-1/2	61	
D	28-1/2	70	45	D	28	60-1/2	D	28	60-1/2	D	28	60-1/2	
E	28	70	45	E	27-1/2	60-1/2	E	27-1/2	60-1/2	E	27-1/2	60-1/2	
F	27-1/2	70	45	F	27	60-1/2	F	27	60-1/2	F	27	60-1/2	
G	27	70	45	G	26-1/2	60	G	26-1/2	60	G	26-1/2	60	
H	26-1/2	70	45	H	26	60	H	26	60	H	26	60	
I	26	70	45	I	25-1/2	59	I	25-1/2	59	I	25-1/2	59	
J	25-1/2	70	45	J	25	58-1/2	J	25	58-1/2	J	25	58-1/2	
K	25	70	45	K	24-1/2	57	K	24-1/2	57	K	24-1/2	57	
L	24-1/2	70	45	L	24	55	L	24	55	L	24	55	
M	24	69-1/2	45	M	23-1/2	53	M	23-1/2	53	M	23-1/2	53	
N	23-1/2	69-1/2	45	N	23	51-1/2	N	23	51-1/2	N	23	51-1/2	
O	23	69-1/2	45	O	22-1/2	50	O	22-1/2	50	O	22-1/2	50	
P	22-1/2	69-1/2	45	P	22	48	P	22	48	P	22	48	

STINGER EXTREME - 55# PEAK PERFORMANCE CABLE SETTINGS		STINGER EXTREME - 55# PEAK "GROW WITH YOU" CABLE SETTINGS					
Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	Draw Weight 15 Turns Off	Inner Cam Stop Setting	Draw Length Setting	Draw Weight at Bottom	Draw Weight 15 Turns Off
A	30	55	35	A	29-1/2	49-1/2	33
B	29-1/2	55	35	B	29	49-1/2	31-1/2
C	29	55	35	C	28-1/2	49	31
D	28-1/2	55	35	D	28	49	31
E	28	55	35	E	27-1/2	48	30-1/2
F	27-1/2	55	35	F	27	48	30-1/2
G	27	55	35	G	26-1/2	47-1/2	30
H	26-1/2	55	35	H	25-7/8	47-1/2	30
I	26	55	35	I	25-1/4	46	29-1/2
J	25-1/2	55	35	J	24-3/4	45	29
K	25	55	35	K	24	44	28
L	24-1/2	55	35	L	23-1/2	43-1/2	27
M	24	55	35	M	23	42	26
N	23-1/2	55	35	N	22-1/2	40-1/2	25-1/2
O	23	55	35	O	22	39	24-1/2
P	22-1/2	55	35	P	21-1/2	38	23

## PSE UPRISING™ - DRAW LENGTH ADJUSTMENT

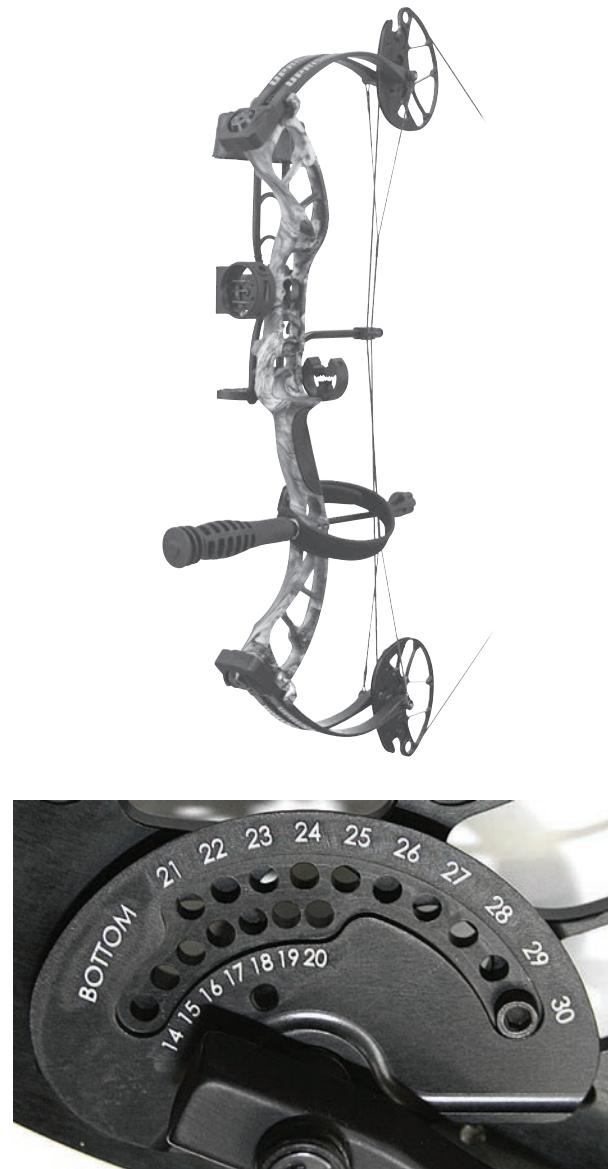

To adjust draw length, simply place the screw in the desired draw length on each cam.

## PSE MINI BURNER™ 29 lb MODEL

"Performance" Cable Setting			"Grow With You" Cable Setting			
Setting	Draw Length	Draw Weight at Bottom Out	Setting	Draw Length at Bottom Out	Draw Weight at Bottom Out	
	10 Turns	10 Turns		10 Turns	10 Turns	
A-L	26 1/2	40	18.7	A-L	26 1/2	37.5
B-L	26	40	17.8	B-L	26	37.5
C-L	25 1/2	40	16.5	C-L	25 1/4	37.5
D-L	25	40	16.4	D-L	24 3/4	37.5
E-L	24 1/2	40	15.9	E-L	24	36.6
F-L	23 3/4	40	15.5	F-L	23 1/2	36.6
G-L	23	40	14.5	G-L	23	36.6
H-L	22 1/2	40	14.8	H-L	22	36.6
I-L	21 3/4	40	14.3	I-L	21 1/2	35.7
C-S	21 1/2	40	13.3	C-S	21 1/4	35.7
J-L	21	40	12.9	J-L	21	33.9
E-S	20 1/4	40	12.4	E-S	20	33.9
D-S	19 1/2	40	11.9	D-S	19 1/2	33.9
G-S	19	40	11.4	G-S	19	31.3
F-S	18 1/2	40	10.5	F-S	18 1/4	31.3
I-S	17 3/4	40	10.5	I-S	17 1/2	31.4
H-S	17 1/4	40	10.5	H-S	17	31.4
J-S	16	40	10.5	J-S	16	26.6
						4.4

\*Draw Length and Draw Weights are approximate. May vary.

## PSE MINI BURNER™: DRAW SETTING CHARTS

"Performance" Cable Setting			"Grow With You" Cable Setting			
Setting	Draw Length	Draw Weight at Bottom Out	Setting	Draw Length at Bottom Out	Draw Weight at Bottom Out	
	10 Turns	10 Turns		10 Turns	10 Turns	
A-L	26 1/2	40	18.7	A-L	26 1/2	37.5
B-L	26	40	17.8	B-L	26	37.5
C-L	25 1/2	40	16.5	C-L	25 1/4	37.5
D-L	25	40	16.4	D-L	25	37.5
E-L	24 1/2	40	15.9	E-L	24 1/2	36.6
F-L	23 3/4	40	15.5	F-L	23 3/4	36.6
G-L	23	40	14.5	G-L	23	36.6
H-L	22 1/2	40	14.8	H-L	22	36.6
I-L	21 3/4	40	14.3	I-L	21 1/2	35.7
C-S	21 1/2	40	13.3	C-S	21 1/4	35.7
J-L	21	40	12.9	J-L	21	33.9
E-S	20 1/4	40	12.4	E-S	20	33.9
D-S	19 1/2	40	11.9	D-S	19 1/2	33.9
G-S	19	40	11.4	G-S	19	31.3
F-S	18 1/2	40	10.5	F-S	18 1/4	31.3
I-S	17 3/4	40	10.5	I-S	17 1/2	31.4
H-S	17 1/4	40	10.5	H-S	17	31.4
J-S	16	40	10.5	J-S	16	26.6
						4.4

## BUY PSE SIGNATURE ITEMS ONLINE!

For PSE shooters, our brand name means more than just a bow; it represents a lifestyle. PSE customers live our brand 24/7 through shirts, hats, gear, and other PSE-branded accessories. We've dramatically expanded our Signature Series line with an exciting selection of new products...so don't wait!



PSE ARCHERY

HOME HATS MENS APPAREL LADIES APPAREL ACCESSORIES YOUTH OUTERWEAR

All New PSE Apparel is Now Here! [Shop Now](#)

RETAILERS, & EMPLOYEES [CLICK HERE FOR SPECIAL PRICING AND EXCLUSIVE OFFERS!](#)

FEATURED PRODUCTS

HEADWEAR MENS TEES LADIES APPAREL ACCESSORIES

[www.psearcherystore.com](http://www.psearcherystore.com)

THE PSE WEBSITE AND SOCIAL MEDIA SITES ARE YOUR  
RESOURCE FOR THE LATEST NEWS AND PRODUCTS



[www.psearchery.com](http://www.psearchery.com)  
 [www.facebook.com/OfficialPSEArchery](http://www.facebook.com/OfficialPSEArchery)  
 [twitter.com/psebows](http://twitter.com/psebows)  
 [www.youtube.com/user/psebows](http://www.youtube.com/user/psebows)  
 [www.instagram.com/psebows](http://www.instagram.com/psebows)  
 [www.pinterest.com/psearchery](http://www.pinterest.com/psearchery)

# ! IMPORTANT WARRANTY REGISTRATION

TO ACTIVATE YOUR BOW WARRANTY, PSE BOW REGISTRATION  
MUST BE RECEIVED BY PSE WITHIN 30 DAYS OF PURCHASE.

REGISTER YOUR BOW ONLINE OR COMPLETE THE INFORMATION  
AND MAIL-IN THE WARRANTY CARD INSERT.

## ONLINE WARRANTY REGISTRATION

Log on at: [www.psearchery.com/registration](http://www.psearchery.com/registration)



The PSE serial number is laser  
etched into your riser- opposite  
the shelf area.

NOTE: IF THE WARRANTY CARD IS NOT PRESENT, PLEASE USE THE FORM BELOW.

## MAIL-IN WARRANTY REGISTRATION

Fill out the form below completely, remove it, place in a stamped envelope and mail to:

**PSE WARRANTY REGISTRATION**  
P.O. Box 5487 Tucson, AZ 85703



SERIAL # OF BOW (SEE ABOVE FOR SERIAL # LOCATION) \_\_\_\_\_

BOW MODEL \_\_\_\_\_

DEALER NAME OR WHERE PURCHASED \_\_\_\_\_

YOUR NAME \_\_\_\_\_

YOUR ADDRESS \_\_\_\_\_ APT # \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

COUNTRY \_\_\_\_\_ EMAIL ADDRESS \_\_\_\_\_

DATE PURCHASED \_\_\_\_\_ / \_\_\_\_\_ / \_\_\_\_\_

PHONE (\_\_\_\_\_) \_\_\_\_\_