



Synway SMG-B Series Analog Gateway

SMG1004B

SMG1008B

SMG1016B4

SMG1032B4

Analog Gateway

User Manual

Version 1.1.0

Synway Information Engineering Co., Ltd

www.synway.net

Content

Content	i
Copyright Declaration.....	iii
Revision History	iv
Chapter 1 Product Introduction.....	1
1.1 Typical Application	2
1.2 Feature List.....	2
1.3 Hardware Description	4
1.3.1 SMG-B 4-port Analog Gateway.....	4
1.3.2 SMG-B 8-port Analog Gateway.....	5
1.3.3 SMG-B 16-port Analog Gateway.....	5
1.3.4 SMG-B 32-port Analog Gateway (Unsupported).....	7
1.4 Indicator Info	7
Chapter 2 Quick Guide	9
Chapter 3 WEB Configuration	14
3.1 System Login	14
3.2 Operation Info	16
3.2.1 System Info.....	16
3.2.2 Channel State	17
3.2.3 Call Count.....	18
3.2.4 SIP Message Count.....	19
3.3 Quick Config	19
3.4 VoIP Settings	21
3.4.1 SIP.....	22
3.4.2 SIP Compatibility.....	23
3.4.3 SIP Station	26
3.4.4 SIP Server	27
3.4.5 NAT Setting.....	29
3.4.6 Media.....	31
3.5 Advanced Settings.....	33
3.5.1 FXS.....	34
3.5.2 FXO	36
3.5.3 Tone Detector	37
3.5.4 Tone Generator.....	39
3.5.5 DTMF.....	40
3.5.6 Ringing Scheme	41
3.5.7 Fax.....	42
3.5.8 Function Key.....	43
3.5.9 Dialing Rule	44
3.5.10 Dialing Timeout.....	48
3.5.11 Cue Tone	49
3.5.12 Color Ring.....	50
3.5.13 QoS	51

3.6	Port Settings	52
3.6.1	FXS.....	52
3.6.2	FXO	57
3.6.3	Port Group	61
3.7	Route Settings	65
3.7.1	Routing Parameters.....	66
3.7.2	IP to Tel.....	66
3.7.3	Tel to IP.....	69
3.8	Number Manipulation.....	71
3.8.1	IP to Tel CallerID.....	71
3.8.2	IP to Tel CalleeID	75
3.8.3	Tel to IP CallerID.....	76
3.8.4	Tel to IP CalleeID.....	79
3.9	System Tools	80
3.9.1	Management.....	81
3.9.2	Network	82
3.9.3	Upgrade.....	83
3.9.4	Signaling Capture	84
3.9.5	Data Recording.....	85
3.9.6	Call Log	85
3.9.7	Operation Log.....	86
3.9.8	Backup & Upload.....	87
3.9.9	Factory Reset	88
3.9.10	System Monitor.....	88
3.9.11	Centralized Manage.....	89
3.9.12	PING Test	90
3.9.13	TRACERT Test	91
3.9.14	Change Password	92
3.9.15	Restart	92
Appendix A Technical Specifications.....		93
Appendix B Troubleshooting		94
Appendix C Technical/sales Support		97

Copyright Declaration

All rights reserved; no part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, without prior written permission from Synway Information Engineering Co., Ltd (hereinafter referred to as 'Synway').

Synway reserves all rights to modify this document without prior notice. Please contact Synway for the latest version of this document before placing an order.

Synway has made every effort to ensure the accuracy of this document but does not guarantee the absence of errors. Moreover, Synway assumes no responsibility in obtaining permission and authorization of any third party patent, copyright or product involved in relation to the use of this document.

Revision History

Version	Date	Comments
Version 1.0.0	2015-06	Initial publication
Version 1.0.1	2015-08	New revision
Version 1.0.2	2015-10	New revision
Version 1.0.2	2015-12	New revision on Version 1.0.2
Version 1.1.0	2016-03	New revision

Note: Please visit our website <http://www.synway.net> to obtain the latest version of this document.

Chapter 1 Product Introduction

Thank you for choosing Synway SMG-B Series Analog Gateway!

The Synway SMG-B series analog gateway products (hereinafter referred to as ‘SMG-B analog gateway’) are mainly used for connecting traditional phone sets, fax machines and PBXes with the IP telephony network or IP PBX. It provides a powerful, reliable and cost-effective VoIP solution for such occasions as IP call centers and multi-branch agencies.

See below table for the modules of SMG-B series analog gateway:

Module	Amount of FXS Port	Amount of FXO Port
SMG1004B-4S	4	0
SMG1004B-2S2O	2	2
SMG1004B-4O	0	4
SMG1008B-8S	8	0
SMG1008B-4S4O	4	4
SMG1008B-8O	0	8
SMG1016B4-16S	16	0
SMG1016B4-8S8O	8	8
SMG1016B4-16O	0	16
SMG1032B4-32S	32	0
SMG1032B4-24S8O	24	8
SMG1032B4-16S16O	16	16
SMG1032B4-32O	0	32

Table 1 Model List

Note: The modules written in black are supported, while those in gray are not yet supported.

1.1 Typical Application

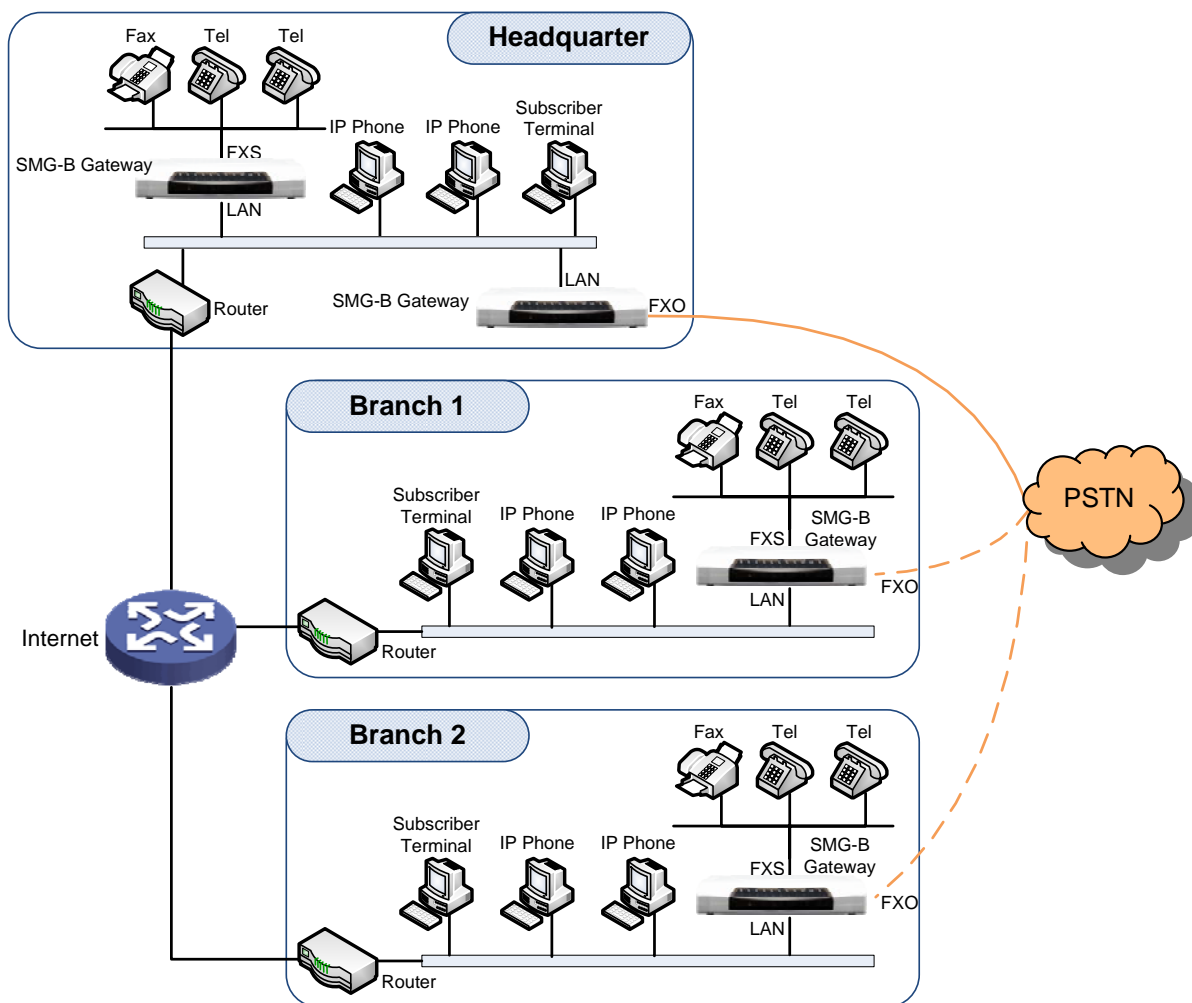


Figure 1-1 Typical Application

1.2 Feature List

Basic Features	Description
TDM Call	Call initiated from TDM to IP, via routing and number manipulation to obtain the called IP address.
IP Call	Call initiated from IP to TDM, via routing and number manipulation to obtain the call destination.
Number Manipulation	Peels off some digits of a phone number from left/right, or adds a prefix/suffix to a phone number.
Call Forward	Three options available: Unconditional, Busy and No Reply.
Call Waiting	When an FXS channel receives another call while it is in conversation, it will have the newly received call keep waiting. Once the current call is finished, the new one will ring the FXS channel and wait for its answer.

Auto Dial	If there is no dialing operation in a designated time period after pickup, the preset auto dial number will be called.
Do Not Disturb	Rejects all the incoming calls to the channel.
CID	Displays the CallerID.
Echo Cancellation	Provides the echo cancellation feature for a call conversation over the FXS channel.
TDM/VoIP Routing	Sets a routing path: from IP to TDM or from TDM to IP.
Fax	Provides multiple fax parameters: fax mode, maximum fax rate, fax train mode, error correction mode, etc.
Communication without Power	Provides composite modules to enable a direct connection of the station which is linked with the FXS port and the trunk which is linked with the FXO port to keep the calls between the FXS port and PSTN uninterrupted during power outage.
Communication without Network	Automatically routes a call to the FXO port in case of network failure or call timeout.
Send Polarity Reversal Signal	Sends the polarity reversal signal to a corresponding FXS channel when the called party pick-up behavior is detected.
Detect Polarity Reversal Signal	Turns a corresponding channel into the talking state when the FXO port detects the polarity reversal signal.
Simultaneous Register to Multiple Servers	Registers the gateway to a master registrar server and a spare registrar server simultaneously.
IMS Network	Registers the gateway to a server under IMS network.
SIP Station	Supports a SIP terminal to be registered to the gateway and become a SIP station.
Group Ringing	Rings all the idle FXS ports in a port group.
Ringing by Turns	Rings the FXS ports in a port group by turns according to the <i>Rule for Ringing by Turns</i> .
Preemptive Answer	When a channel in a port group is ringing, another channel in the same port group can press the preemptive answer keyboard shortcut to transfer the call from the ringing channel to the current channel.
Centralized Manage	The gateway can register to Synway DCMS and accept the management of the platform.
Signaling & Protocol	Description
SIP Signaling	Supported protocol: SIP V1.0/2.0, RFC3261.
Voice	CODEC G.711A, G.711U, G.729A/B, G.723, G.722, AMR, iLBC DTMF Mode RFC2833, SIP INFO, INBAND
Network	Description
Network Protocol	Supported protocol: TCP/UDP, HTTP, ARP/RARP, DNS, NTP, TFTP, TELNET, STUN.
Static IP	IP address modification support.
DHCP	IP address dynamic allocation support.

DNS	Domain Name Service support.
Security	Description
Admin Authentication	Supports admin authentication to guarantee the resource and data security.
System Monitor	Monitors the running status of the system and the server.
Maintain & Upgrade	Description
WEB Configuration	Support of configurations through the WEB user interface.
Language	Chinese, English.
Software Upgrade	Support of user interface, gateway service, kernel and firmware upgrades based on WEB.
Tracking Test	Support of Ping and Tracert tests based on WEB.
SysLog Type	Three options available: ERROR, WARNING, INFO, DEBUG.

1.3 Hardware Description

1.3.1 SMG-B 4-port Analog Gateway

The SMG-B 4-port analog gateway has three types: SMG1004B-4S (4 FXS ports), SMG1004B-2S2O (2 FXS ports and 2 FXO ports) and SMG1004B-4O (4 FXO ports). It supports one LAN and adopts an external 12V power supply. See below for product appearance (taking SMG1004B-4S for example).

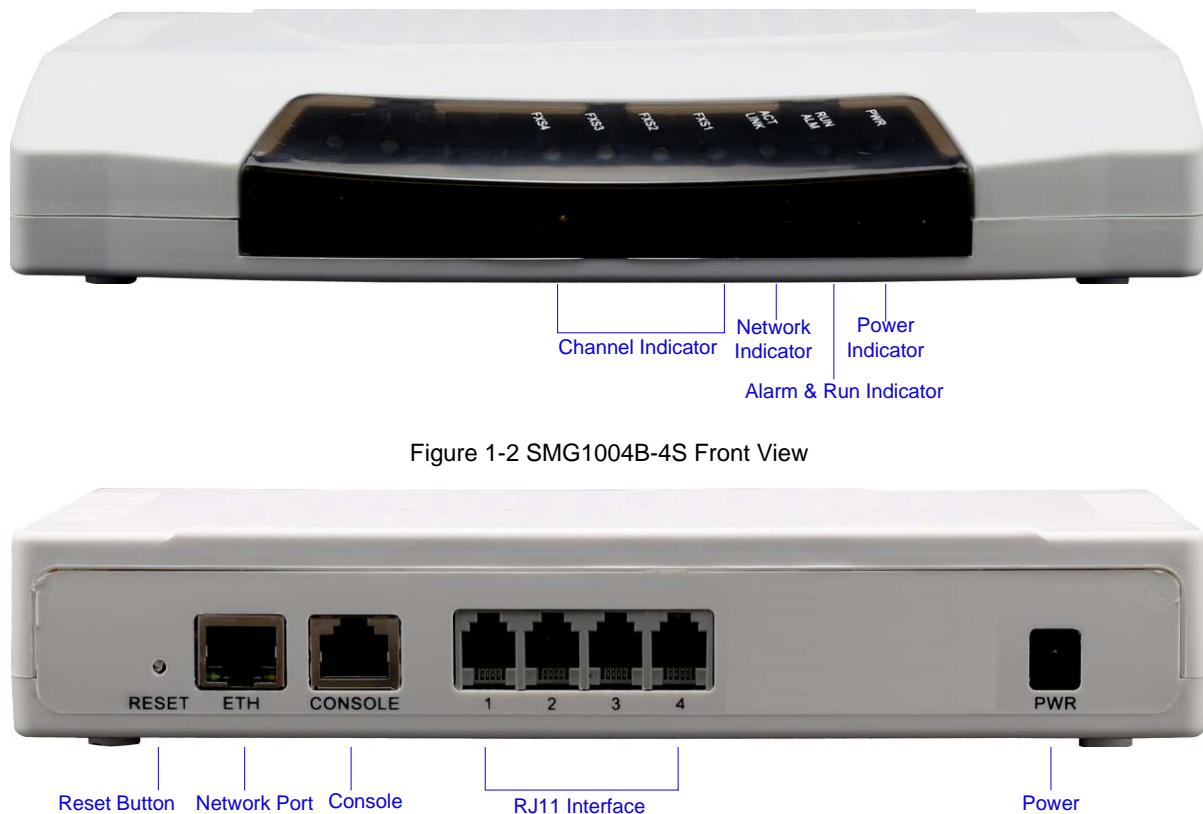


Figure 1-2 SMG1004B-4S Front View

Figure 1-3 SMG1004B-4S Rear View

1.3.2 SMG-B 8-port Analog Gateway

The SMG-B 8-port analog gateway has three types: SMG1008B-8S (8 FXS ports), SMG1008B-4S4O (4 FXS ports and 4 FXO ports) and SMG1008B-8O (8 FXO ports). It supports one LAN and adopts an external 12V power supply. See below for product appearance (taking SMG1008B-8S for example).

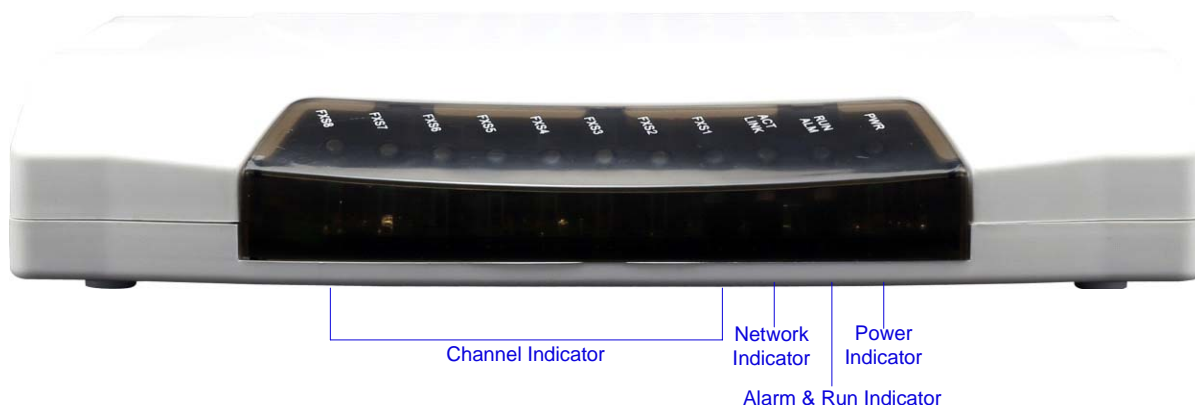


Figure 1-4 SMG1008B-8S Front View

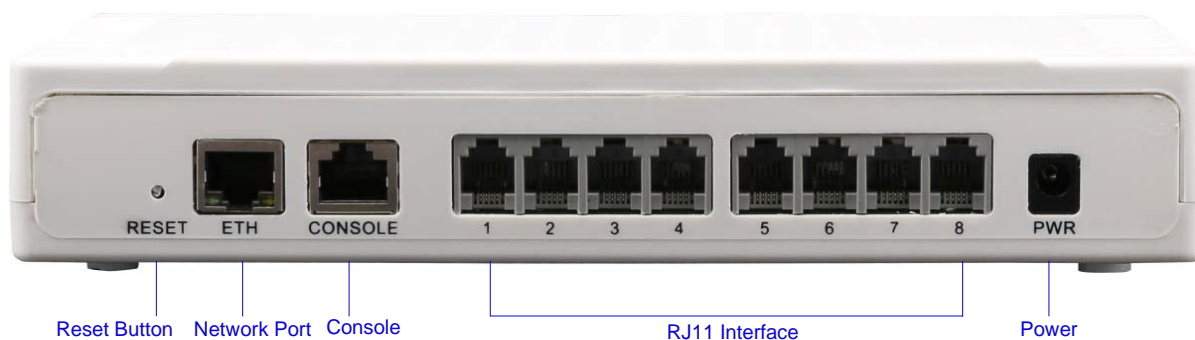


Figure 1-5 SMG1008B-8S Rear View

1.3.3 SMG-B 16-port Analog Gateway

The SMG-B 16-port analog gateway has three types: SMG1016B4-16S (16 FXS ports), SMG1016B4-8S8O (8 FXS ports and 8 FXO ports) and SMG1016B4-16O (16 FXO ports). It supports one LAN. See below for product appearance (taking SMG1016B4-16S for example).



Figure 1-6 SMG1016B4-16S Front View



Figure 1-7 SMG1016B4-16S Rear View

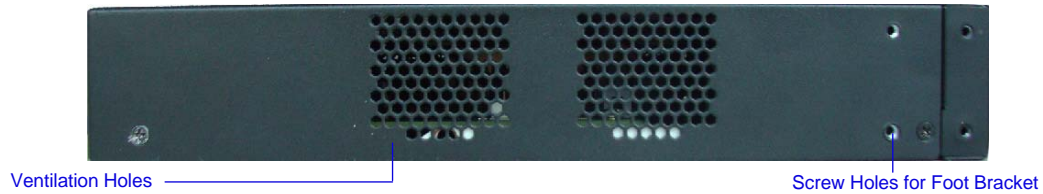


Figure 1-8 SMG1016B4-16S Left View

The table below gives a detailed introduction to the interfaces, buttons and LEDs illustrated above:

Interface	Description
LAN	Amount: 1
	Type: RJ-45
	Bandwidth: 10/100 Mbps
	Self-Adaptive Bandwidth Supported
	Auto MDI/MDIX Supported
	Built-in Link indicator and ACTIVE indicator. For more details, refer to 1.4 Indicator Info
FXS	Amount: Depends on the model of SMG-B analog gateway
	Type: RJ-11, RJ-45
	Maximum Transmission Distance: 5000m
	Charge Mode: Negative Anti-billing Supported
Console Port	Amount: 1
	Type: RS-232
	Baud Rate: 115200bps
	Connector: RJ45 to DB-9 Connector
	Data Bits: 8 bits
	Stop Bit: 1 bit
	Parity Unsupported
	Flow Control Unsupported
External Power Supply Interface	Provide the 12V voltage with positive inside and negative outside, and the current is larger than 3A
Button	Description
Reset Button	Restore the gateway to factory settings by pressing this button persistently for 3 seconds
LED	Description
Power Indicator	Indicates the power state. It lights up when the gateway starts up with the power

	cord well connected
Run & Alarm Indicator	Indicates the running status. For more details, refer to 1.4 Indicator Info .
Network Indicator	Indicates the connection status of the network. For more details, refer to 1.4 Indicator Info
Channel Indicator	<ol style="list-style-type: none"> When the channel is idle, the LED Lights up; When the channel is off-hook, the LED flashes slowly; When the channel is ringing, the LED flashes fast.

For other hardware parameters, refer to [Appendix A Technical Specifications](#).

1.3.4 SMG-B 32-port Analog Gateway (Unsupported)

The SMG-B 32-port analog gateway has four types: SMG1032B4-32S (32 FXS ports), SMG1032B4-24S8O (24 FXS ports and 8 FXO ports), SMG1032B4-16S16O (16 FXS ports and 16 FXO ports) and SMG1032B4-32O (32 FXO ports). It supports one LAN.

1.4 Indicator Info

The SMG-B analog gateway is equipped with two indicators denoting the system's running status: Run & Alarm Indicator (bi-color LED) and Network Indicator (bi-color LED). The table below explains the states and meanings of the two indicators.

LED	State	Description
Run & Alarm Indicator	Go out	System is not yet started.
	Orange LED light up	Device works normal upon system startup.
	Orange LED flash fast	Device works normal upon system startup.
	Green LED flash slowly	Device works normal during system runtime.
	Others	Device works abnormal
Network Indicator	Go out	No network connection
	Red LED light up and flash	Bandwidth 10 Mbps
	Orange LED light up and flash	Bandwidth 100Mbps
LINK Indicator	Go out	Network is not yet connected or the network connection is 10Mbps
	Green LED light up	Connect to 100Mbps network, and network connection is normal.
ACTIVE Indicator	Go out	Connect to 10Mbps network: communication is normal; While connect to 100Mbps network: Communication is abnormal.
	Orange LED light up and flash	Communication is normal.

Note:

- The startup process consists of two stages: System Booting and Gateway Service Startup. The system booting costs about 1 minute and once it succeeds, the run & alarm indicator is orange and lights up or flashes. Then after the gateway service is successfully started and the device begins to work normally, the run & alarm indicator is green and flashes slowly.
- During runtime, if the run & alarm indicator is orange and lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself,

please contact our technicians for help. Go to [Appendix C Technical/sales Support](#) to find the contact way.

Chapter 2 Quick Guide

This chapter is intended to help you grasp the basic operations of the SMG-B analog gateway in the shortest time.

Step 1: Confirm that your packing box contains all the following things.

- SMG-B Series Analog Gateway *1
- External 12V Power Adapter *1 (Unnecessary for SMG-16B)
- Network Cable *1
- Warranty Card *1
- Installation Manual *1

Step 2: Connect the network cable.

These series products provide RJ-45 interfaces.

Step 3: Connect the telephone line.

The SMG-B 8-port analog gateway provides RJ11 interfaces. You can use a common telephone line directly or construct a telephone line by yourself according to Figure 2-1. Note that only the middle two cores in the RJ11 jack are valid for use.

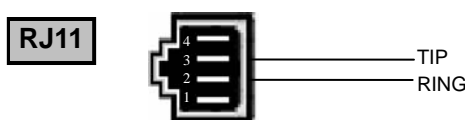


Figure 2-1 RJ11 Connection

The SMG-B 16-port analog gateway has four 8-pin RJ45 jacks each of which can be connected to four 2-pin RJ11 jacks via a 4-way hub. Take the first RJ45 jack for example, the matching relationship among the channel number, the pins of the RJ45 jack and the 4-way hub is shown in the table below.

Interface	Channel Number	Pins of the RJ45 Jack	4-way Hub
First RJ45 Jack	1	1 st and 2 nd pins	1 st jack
	2	3 rd and 4 th pins	2 nd jack
	3	5 th and 6 th pins	3 rd jack
	4	7 th and 8 th pins	4 th jack

Table 2-1 Matching Relationship among Channel Number, Pins of RJ45 Jack and 4-way Hub

Step 4: Power on and start the gateway.

To use the SMG-B 8-port analog gateway, you need an external power supply. Insert it to the power interface of the SMG-8B series analog gateway and power it on with 100~240V AC. See the figure below:

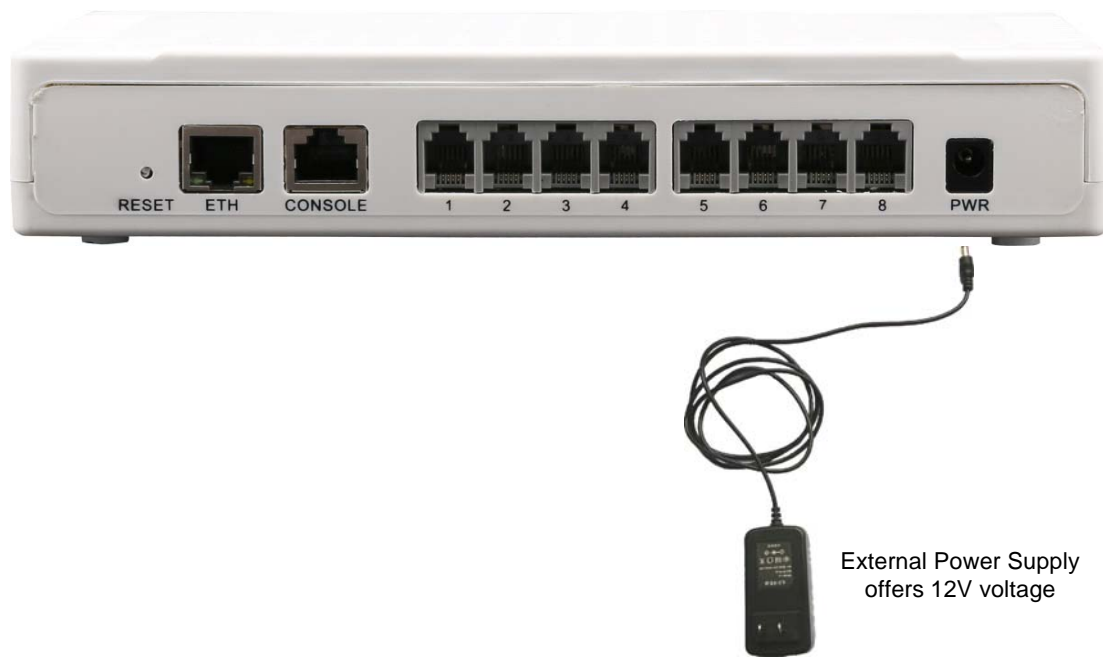


Figure 2-2 SMG-B Power Connection

Step 5: Log in the gateway.

Enter the original IP address (192.168.1.101) of the SMG-B analog gateway in the browser to go to the WEB interface of the gateway. The original username and password of the gateway are both 'admin'. For detailed instructions about login, refer to [3.1 System Login](#). We suggest you change the initial username and password via 'System Tools → Change Password' on the WEB interface as soon as possible after your first login. For detailed instructions about changing the password, refer to [3.9.14 Change Password](#). After changing the password, you are required to log in again.

Step 6: Modify IP address of the gateway.

You can modify the IP address of the gateway via 'System Tools → Network' on the WEB interface to put it within your company's LAN. Refer to [3.9.2 Network](#) for detailed instructions about IP modification. After changing the IP address, you shall log in the gateway again using your new IP address.

Step 7: Make phone calls.

Note: For your easy understanding and manipulation, all examples given in this step do not involve registration, that is, SIP initiates calls in a point-to-point mode.

Situation 1: Call from a station to another (Tel→Tel)

The gateway allows two FXS ports to call each other by default. Just use a station connected with an FXS port to dial the number of the destination FXS port and you can make a Tel→Tel call. The default number of an FXS port is 80XX, among which XX represents the corresponding port number. For example, the default number corresponding to Port 1 is 8001, and that corresponding to Port 8 is 8008.

Actually a Tel→Tel call on the gateway is accomplished via the routing of Tel→IP→IP→Tel. For detailed introductions and configuration guide, refer to [Q2](#) in Appendix B.

Situation 2: Call from a station to an IP phone (Tel→IP)

1. Go to 'Advanced Settings → Dialing Rule' on the WEB interface and click the 'Add New' button to add a new dialing rule. Refer to [3.5.9 Dialing Rule](#) for detailed instructions. Enter either a particular number or a string of 'x's to represent several random numbers. For example, 'xxx' denotes 3 random numbers. You may use the default value of 'Index' and are

required not to leave 'Description' empty.

Example: Set **Index** to **99**, fill in **Description** with **test** and configure **Dial Rule** to **123**.

2. Go to 'Port Settings → Port Group' on the WEB interface and click the 'Add New' button to create a new port group and add FXS ports which are connected with stations to it. Refer to [3.6.3 Port Group](#) for detailed instructions. You may use the default values of other configuration items and are required not to leave 'Description' empty.

Example: Provided the FXS port which is connected with a station is Port1, check the checkbox before **Port1**, set **Index** to **1**, fill in **Description** with **test**, and keep the default values of other configuration items.

3. Go to 'Route Settings → Tel→IP' on the WEB interface and click the 'Add New' button to add a new routing rule. Refer to [3.7.3 Tel→IP](#) for detailed instructions. Select the port group created in Step2 as 'Source Port Group' and fill in 'Destination IP' and 'Destination Port' with the IP address and the Port number you plan to call. You may use the default values of other configuration items and are required not to leave 'Description' empty.

Example: Provided the remote IP address intended to call is 192.168.0.111 and the port is 5060. Set **Index** to **63**, **Source Port Group** to **1**, fill in **Description** with **test**, configure **Destination IP** to **192.168.0.111**, **Destination Port** to **5060**, and keep the default values of other configuration items.

4. Pick up the station and dial the number set in Step1 to ring the remote IP phone. If you have set a particular number in Step 1, only this number you can dial; if you have set a string of 'x's, how many 'x's there are, how many random numbers you can dial.

Example: Pick up the station and dial 123. Then the IP phone with the IP address 192.168.0.111 and the port 5060 will ring.

Situation 3: Call from an IP phone to a station (IP →Tel)

1. Go to 'Port Settings → Port Group' on the WEB interface and click the 'Add New' button to create a new port group and add FXS ports which are connected with stations to it. Refer to [3.6.3 Port Group](#) for detailed instructions. You may use the default values of other configuration items and are required not to leave 'Description' empty.

Example: Provided the FXS port which is connected with a station is Port1, check the checkbox before **Port1**, set **Index** to **1**, fill in **Description** with **test**, and keep the default values of other configuration items.

2. Go to 'Route Settings → IP→Tel' on the WEB interface and click the 'Add New' button to add a new routing rule. Refer to [3.7.2 IP→Tel](#) for detailed instructions. Fill in 'Source IP' with the IP address which initiates the call and select the port group created in Step1 as 'Destination Port Group'. You may use the default values of other configuration items and required not to leave 'Description' empty.

Example: Provided the IP address of the IP phone which initiates the call is 192.168.0.111. Set **Index** to **63**, **Destination Port Group** to **1**, fill in **Description** with **test**, configure **Source IP** to **192.168.0.111**, and keep the default values of other configuration items.

3. Pick up the IP phone and call the IP address and port of the SMG-B analog gateway to ring the station.

Example: Provided the IP address of the SMG-B analog gateway is 192.168.0.101 and the port is 5060, use the IP phone to call the IP address 192.168.0.101 and the station connected with Port1 will ring.

Step 8: Enable the auto dial feature. (Skip this step if not necessary.)

Go to the Port Settings interface to enable the auto dial feature and set the parameters 'Auto Dial Number' and 'Wait Time before Auto Dial'. If there is no dialing operation in a time period (i.e. Wait Time before Auto Dial) after pickup, the port will automatically call the preset number (i.e. Auto Dial Number). Refer to [3.6.1 FXS](#) for detailed instructions.

Step 9: Enable the DND (do not disturb) feature. (Skip this step if not necessary.)

Go to the Port Settings interface to enable the DND feature. Then, the FXS port will reject all incoming calls. Refer to [3.6.1 FXS](#) for detailed instructions.

Step 10: Enable the call waiting feature. (Skip this step if not necessary.)

Go to the Port Settings interface to enable the call waiting feature. Then the corresponding FXS port while in conversation can accept another call from IP and keep it in the waiting state. Once the current conversation is finished and the station hangs up, the call in the waiting state will ring the station and wait for answer. During the time in the waiting state, it will always hear the ringback tone from the FXS port. Refer to [3.6.1 FXS](#) for detailed instructions.

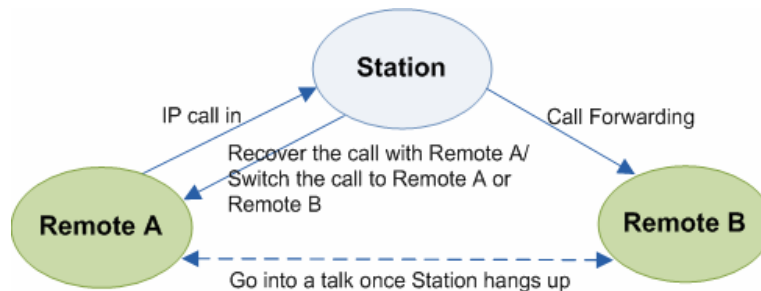
Step 11: Perform call forwarding. (Skip this step if not necessary.)**Situation 1: Hook-flash operation**

Figure 2-3 Call Forward via Hook-flash

As shown above, Remote A initiates and establishes a call with Station. Then by a hook-flash operation, that is, a rapid clap on the hook or pressing the 'flash' button on the phone set, Station can forward the call to Remote B.

Once a flash is generated, Station will go into the dialing state (the FXS port sends it dialing tones) before it dials the forwarding number.

If the dialing succeeds, the FXS port will send ringback tones to Station. Provided Remote B picks up the call, at this time Station can:

- Directly talk with Remote B;
- Perform another hook-flash operation to switch the call to either Remote A or Remote B.
- Hang up to make Remote A and Remote B go into a direct talk with each other.

If the dialing fails, the FXS port will send busy tones to Station. At this time Station can:

- Hang up to go back to the ringing state; then pick up the call again to recover the talk with Remote A.
- Perform the hook-flash operation again without hanging up the call to recover the talk with Remote A.

Once Station recovers the call with Remote A, it can forward the call again by a new hook-flash operation.

Situation 2: Automatic call forward

Go to the port setting interface to enable the automatic call forward feature and fill in a forward number. According to what you set, the SMG-B analog gateway can automatically forward the incoming calls on three conditions: unconditional, busy, no reply. Note that this feature is applicable only to a single port, but not to a port group consisting of more than one port. Refer to [3.6.1 FXS](#) for detailed instructions.

Special Instructions:

- As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.
- During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Otherwise it may lead to a drop in performance or unexpected errors.

Chapter 3 WEB Configuration

3.1 System Login

Type the IP address into the browser and enter the login interface. See Figure 3-1.

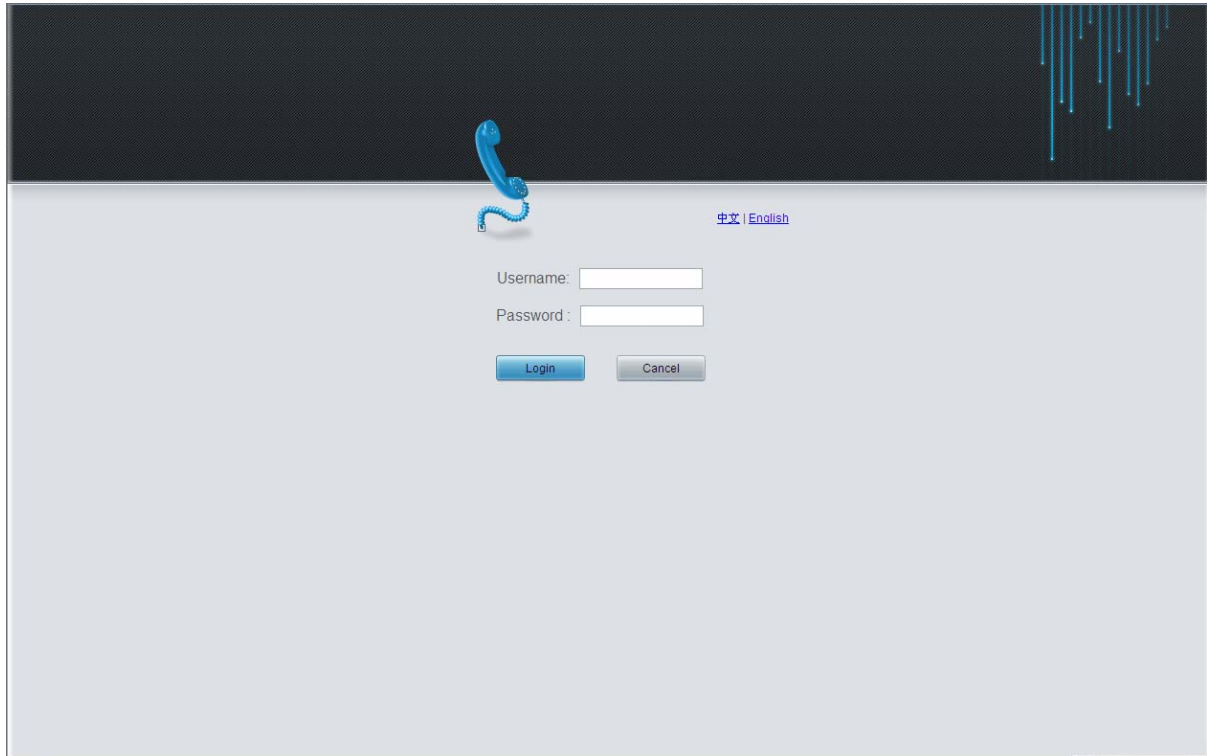


Figure 3-1 Login Interface

The gateway only serves one user, whose original username and password are both 'admin'. You can change the username and the password via 'System Tools → Change Password' on the WEB interface. For detailed instructions, refer to [3.9.14 Change Password](#).

The prompt "New UI language is being set. Please do not leave this page." will display on the interface upon your first login after changing the UI language. See Figure 3-2.

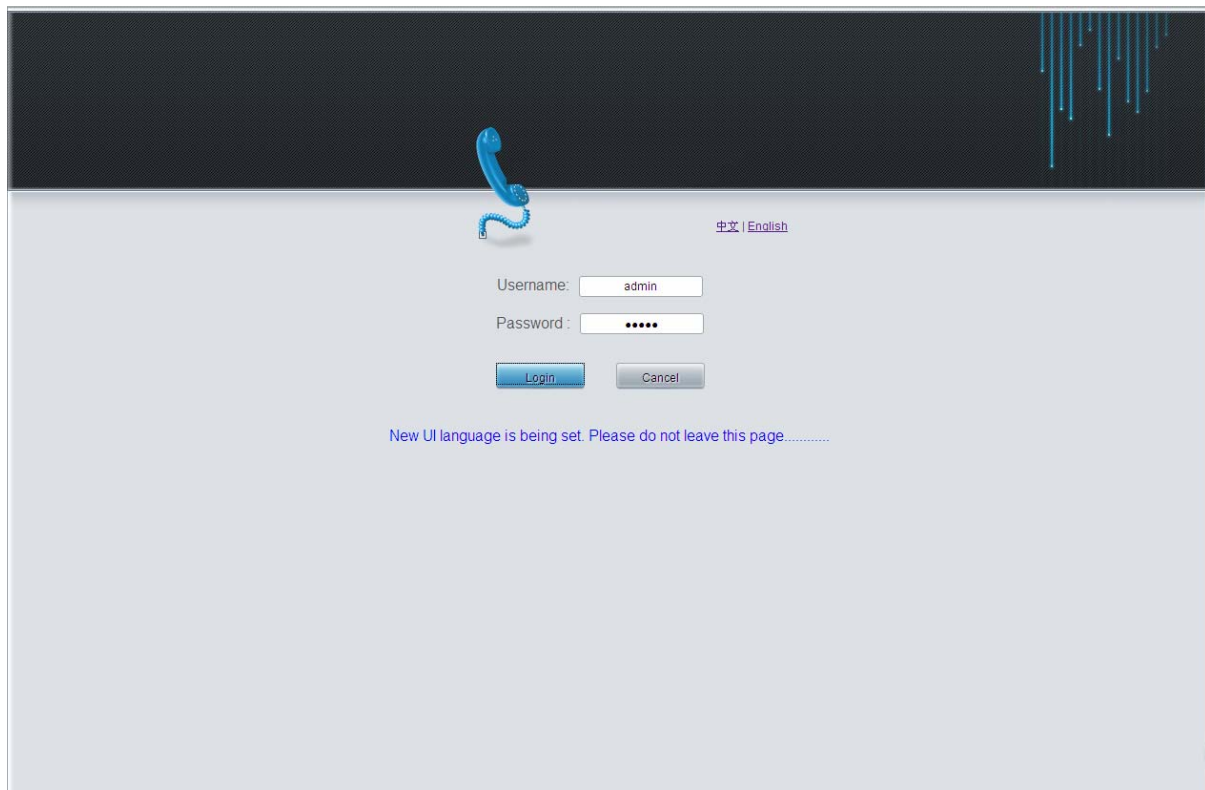


Figure 3-2 Login Interface after Language Modified

After login, you can see the main interface as below.

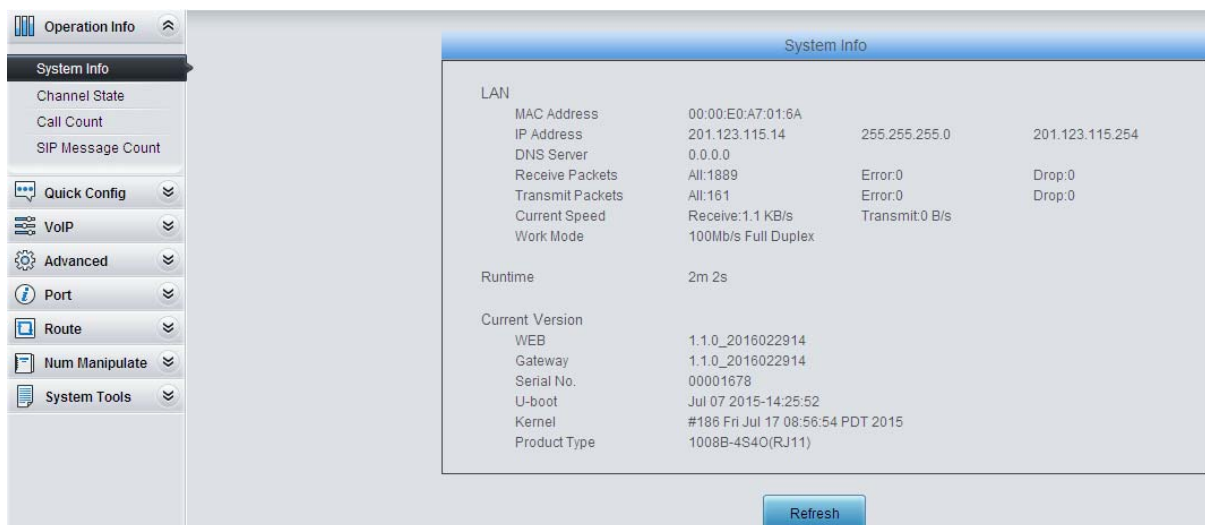


Figure 3-3 Main Interface

3.2 Operation Info

Operation Info includes four parts: **System Info**, **Channel State**, **Call Count** and **SIP Message Count**, showing the current running status of the gateway. See Figure 3-4.

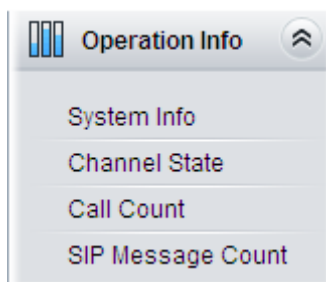


Figure 3-4 Operation Info

3.2.1 System Info



Figure 3-5 System Info Interface

See Figure 3-5 for the system info interface. You can click **Refresh** to obtain the latest system information. The table below explains the items shown in Figure 3-5.

Item	Description
MAC Address	MAC address of LAN.
IP Address	The three parameters from left to right are IP address, subnet mask and default gateway of LAN.
DNS Server	DNS server address of LAN.
Receive Packets	The amount of receive packets after the gateway's startup, including three options:










	All, Error and Drop.
Transmit Packets	The amount of transmit packets after the gateway's startup, including three options: All, Error and Drop.
Current Speed	Show the current speed of data receiving and transmitting.
Work Mode	Show the work mode of the network, including four modes: 10 Mbps Half Duplex, 10 Mbps Full Duplex, 100 Mbps Half Duplex, 100 Mbps Full Duplex.
Runtime	Time of the gateway keeping running normally after startup, which will be automatically updated.
WEB	Current version of the WEB interface.
Gateway	Current version of the gateway service.
Serial Num	Unique serial number of an SMG-B analog gateway.
U-boot	Current version of Uboot.
Kernel	Current version of the system kernel on the gateway.
Product Type	The type of current analog gateway.







3.2.2 Channel State

Channel State									
Channel	Type	Number	Voltage(v)	State	Direction	CallerID	CalleeID	Reg Status	Polarity Reversal Count
1	FXS	8001	0		---	---	---	Unregistered	---
2	FXS	8002	0		---	---	---	Unregistered	---
3	FXS	8003	0		---	---	---	Unregistered	---
4	FXS	8004	0		---	---	---	Unregistered	---
5	FXO	8005	0		---	---	---	Unregistered	---
6	FXO	8006	0		---	---	---	Unregistered	---
7	FXO	8007	0		---	---	---	Unregistered	---
8	FXO	8008	0		---	---	---	Unregistered	---

Figure 3-6 Channel State Interface

See Figure 3-6 for the channel state interface where shows the channel type, the voltage and the channel state for each channel on the gateway. The table below explains the items shown in Figure 3-6.

Item	Description												
Channel	Channel number on the device.												
Type	Type of the channel on the device. If this item shows ---, it means this channel is unavailable, that is, the corresponding module to this channel is not inserted or damaged.												
Number	The number corresponding to the port.												
Voltage	Line voltage on the channel, calculated by volt (V).												
State	Displays the channel state in real time. You can move the mouse onto the channel state icon for detailed state information.												
	<table><tr><th>State</th><th>Icon</th><th>Description</th></tr><tr><td>Idle</td><td></td><td>The channel is available.</td></tr><tr><td>Off-hook</td><td></td><td>The channel picks up the call.</td></tr><tr><td>Wait Answer</td><td></td><td>The channel receives the ringback tone and is waiting for the called party to pick up the phone.</td></tr></table>	State	Icon	Description	Idle		The channel is available.	Off-hook		The channel picks up the call.	Wait Answer		The channel receives the ringback tone and is waiting for the called party to pick up the phone.
	State	Icon	Description										
	Idle		The channel is available.										
	Off-hook		The channel picks up the call.										
Wait Answer		The channel receives the ringback tone and is waiting for the called party to pick up the phone.											

	<i>Ringing</i>		The channel is in the ringing state.
	<i>Talking</i>		The channel is in a conversation.
	<i>Dialing</i>		The channel is dialing.
	<i>Pending</i>		The channel is in the pending state.
	<i>Internal State</i>		Internal state of the channel.
	<i>Unusable</i>		The channel is unavailable.
Direction	Displays the direction of the call on channel.		
CallerID	Displays the CallerID of the call on channel.		
CalleeID	Displays the CalleeID of the call on channel.		
Reg Status	Displays the registration status of the port.		
Polarity Reversal Count	The counts of the polarity reversal detected by the FXO port.		

3.2.3 Call Count

Call Count								
Call Direction	Total Calls	Successful Calls	Busy	No Answer	Call Forward	Routing Failure	Dialing Failure	Unknown Failure
IP->Tel	0	0	0	0	0	0	0	0
Tel->IP	0	0	0	0	0	0	0	0
<div>Refresh</div>								

Figure 3-7 Call Count Interface

See Figure 3-7 for the call count Interface. The above list shows the detailed information about all the calls counted from the startup of the gateway service to the latest open or refresh of this interface. You can click **Refresh** to obtain the current call count information. The table below explains the items shown in Figure 3-7.

Item	Description
Call Direction	A condition for call count, two options available: <i>IP→Tel</i> and <i>Tel→IP</i> .
Total Calls	Total number of calls in a specified call direction.
Successful Calls	Total number of successful calls in conversation.
Busy	Total number of calls which fail as the called party has been occupied and replies a busy message.
No Answer	Total number of calls which fail as the called party does not pick up the call in a long time or the calling party hangs up the call before the called party picks it up.
Call Forward	Total number of calls which have been forwarded.
Routing Failure	Total number of calls which fail because no routing rules are matched.
Dialing Failure	Total number of calls which fail as the called party number does not conform to the dialing rule or due to dialing timeout.
Unknown Failure	Total number of calls which fail due to unknown reasons.

3.2.4 SIP Message Count

Request								
Request	REGISTER	INVITE	ACK	INFO	BYE	CANCEL	NOTIFY	OPTION
Send	0	1	1	0	1	0	0	0
Send Repeatedly	0	0	0	0	0	0	0	0
Receive	0	1	1	0	1	0	0	0
Receive Repeatedly	0	0	0	0	0	0	0	0

Common Response						
Common Response	100 Trying	180 Ringing	183 Session Process	200 OK	486 Busy	487 Request Already Terminated
Send	1	1	0	2	0	0
Receive	1	1	0	2	0	0

Figure 3-8 SIP Message Count Interface

See Figure 3-8 for the SIP Message Count interface. This is used to record the amount of the normal SIP messages that are sent/received or repeatedly sent/received during the period from the startup of the gateway service to the latest open or refresh of the interface. Click **Refresh** to refresh the count of SIP messages, or click **Clear** to clear the current count of SIP messages.

3.3 Quick Config

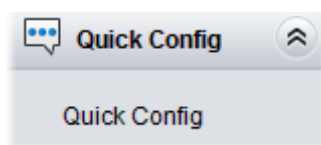


Figure 3-9 Quick Config Interface

See Figure 3-9 for the Quick Config interface. Follow the gateway Quick Configuration wizard and you can easily complete the settings on network, SIP and FXS/FXO. The gateway can work normally after configuration.

See Figure 3-10 for the Quick Config-Network Settings interface. Refer to 3.9.2 Network for detailed settings. After configuration, click **Next** to enter the SIP Settings interface.

Quick Config-Network Settings	
Network Type:	Static
IP Address (I)	192.168.1.101
Subnet Mask (U)	255.255.255.0
Default Gateway (D)	192.168.1.1
DNS Server (P)	0.0.0.0
Speed and Duplex Mode	Automatic Detection
<input type="button" value="Next"/>	

Figure 3-10 Quick Config-Network Settings Interface

See Figure 3-11 for the Quick Config-SIP Settings interface. The configuration items on this interface are the same as those on the SIP interface. Refer to [3.4.1 SIP](#) for detailed settings. You are required to fill with the information about the registrar if the gateway must be registered. After configuration, click **Back** to go back to the Network Settings interface; click **Next** to enter the FXS Settings interface.

Quick Config-SIP Settings

Registrar IP Address

Registrar Port

Spare Registrar IP Address

Spare Registrar Port

Registry Validity Period (s)

Figure 3-11 Quick Config-SIP Settings Interface

See Figure 3-12 for the FXS Settings interface. The configuration items on this interface are the same as those on the FXS interface. Refer to [3.6.1 FXS](#) for detailed settings. After configuration, click **Back** to go back to the SIP Settings interface; click **Next** to enter the FXO Settings interface.

FXS Settings												
Port	Type	SIP Account	Authentication Username	Auto Dial Num	Forbid Outgoing Call	DND	Forward	FWD Type	FWD Number	CID	Call Waiting	Reg Stat
1	FXS	8001	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregiste
2	FXS	8002	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregiste
3	FXS	8003	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregiste
4	FXS	8004	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregiste

4 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 Pages Total

Figure 3-12 FXS Settings Interface

See Figure 3-13 for the FXO Settings Interface. The configuration items on this interface are the same as those on the FXO interface. Refer to [3.6.2 FXO](#) for detailed settings. After configuration, click **Back** to back to the FXS Settings interface; click **Next** to enter the Quick Config-Completion interface. See Figure 3-14.

FXO Settings									
Port	Type	SIP Account	Authentication Username	Connection Method	Bound Number	Forbid Outgoing Call	Caller ID Detection	Reg Status	Echo Can
5	FXO	8005	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enabl
6	FXO	8006	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enabl
7	FXO	8007	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enabl
8	FXO	8008	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enabl

4 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 Pages Total

Figure 3-13 FXO Settings Interface



Figure 3-14 Quick Config-Completion Interface

Click **Back** to go back to the FXS Settings interface; click **Finish** to finish the Quick Config wizard and now the gateway can work normally with basic configuration.


3.4 VoIP Settings

VoIP Settings includes six parts: **SIP**, **SIP Compatibility**, **SIP Station**, **SIP Server**, **NAT Setting** and **Media**. See Figure 3-15. **SIP Settings** is used to configure the general SIP parameters, **SIP Compatibility** is used to set which SIP servers and SIP messages will the gateway be compatible with, **SIP Station** is to set the basic information of the SIP station, **SIP Server** is to set the basic information of the SIP server, **NAT Setting** is used to configure the parameters for NAT, and **Media Settings** is to set the RTP port and the payload type.



Figure 3-15 VoIP Settings

3.4.1 SIP

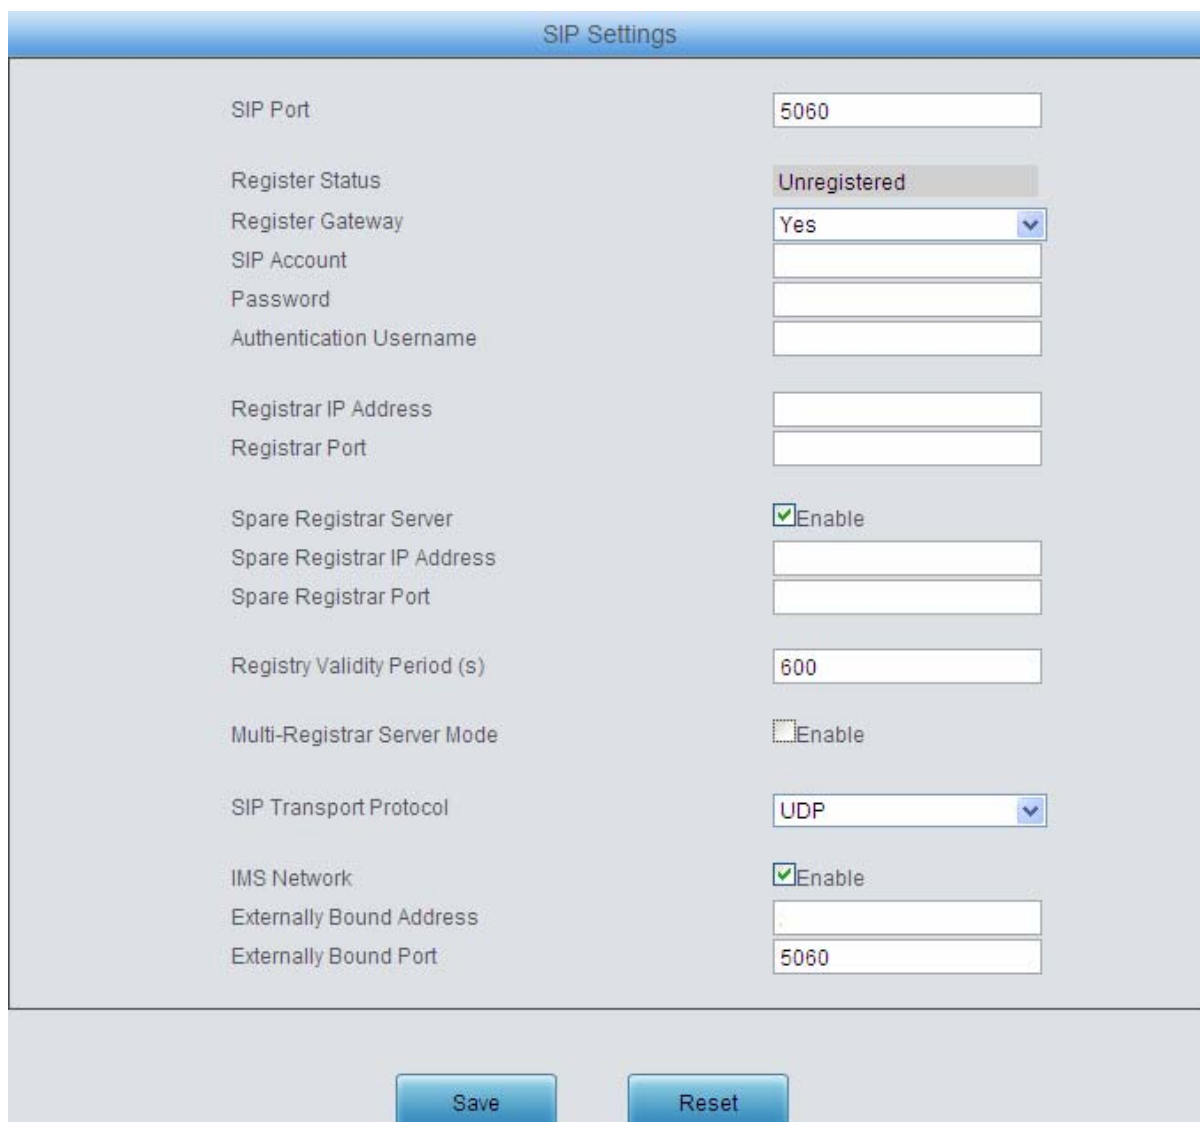

The image shows a web-based configuration interface titled "SIP Settings". It contains various input fields and checkboxes for configuring SIP parameters. At the bottom, there are "Save" and "Reset" buttons.

Item	Value / Status
SIP Port	5060
Register Status	Unregistered
Register Gateway	Yes
SIP Account	
Password	
Authentication Username	
Registrar IP Address	
Registrar Port	
Spare Registrar Server	<input checked="" type="checkbox"/> Enable
Spare Registrar IP Address	
Spare Registrar Port	
Registry Validity Period (s)	600
Multi-Registrar Server Mode	<input type="checkbox"/> Enable
SIP Transport Protocol	UDP
IMS Network	<input checked="" type="checkbox"/> Enable
Externally Bound Address	
Externally Bound Port	5060

Figure 3-16 SIP Settings Interface

See Figure 3-16 for the SIP settings interface where you can configure the general SIP parameters. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions. The table below explains the items shown in Figure 3-16.

Item	Description
SIP Port	Monitoring port of SIP signaling. The value range of it must be grater than 1024 and less than 65535, with the default value of 5060.
Register Status	Registration status of the gateway. When Register Gateway is set to <i>No</i> , the value of this item is <i>Unregistered</i> ; when Register Gateway is set to <i>Yes</i> , the value of this item is either <i>Failed</i> or <i>Registered</i> .
Register Gateway	Sets whether to register the gateway as a whole. The default value is <i>No</i> . Only when this configuration is set to <i>Yes</i> can you see the configuration items SIP Account and Password .

SIP Account	When the gateway initiates a call to SIP, this item corresponds to the username of SIP.
Password	Registration password of the gateway. To register the gateway to SIP, both configuration items SIP Account and Password should be filled in.
Authentication Username	Authentication username for registration.
Registrar IP Address	Address of the registry server for the gateway to register.
Registrar Port	Signaling port of the registry server.
Spare Registrar Server	Check the enable checkbox to enable the spare registrar server. By default, it is disabled .
Spare Registrar IP Address	Address of the spare registry server for the gateway to register. The gateway will enable the spare registrar server if the master registrar server has no reply, or the master server is detected with no response in case the item Detection Server Cycle is enabled.
Spare Registrar Port	Signaling port of the spare registry server.
Registry Validity Period	Validity period of the SIP registry. Once the registry is overdue, the gateway should be registered again. This configuration item is valid only when Register Gateway is set to Yes. Range of value: 10~3600, calculated by s, with the default value of 600.
Multi-Registrar Server Mode	Tick the checkbox before to enable the multi-registrar server mode. By default, it is disabled .
SIP Transport Protocol	There are two modes UDP and TCP available for running the SIP protocol. The default value is UDP .
IMS Network	Once this feature is enabled, the gateway will send signaling messages to the corresponding externally bound address and port when it registers to the server. By default, this feature is disabled . Only when this feature is enabled will these items Externally Bound Address , Externally Bound Port and Authentication Username be shown.
Externally Bound Address	Externally bound IP address for registration.
Externally Bound Port	Externally bound port for registration.

3.4.2 SIP Compatibility

See Figure 3-17 for the SIP Compatibility interface where you can configure the SIP parameters to determine which SIP servers and SIP messages will the gateway be compatible with. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations.

SIP Compatibility

Obtain CalleeID from	"Request" Field ▼
Set CallerID position	Username of From Field ▼
Obtain CallerID from	Username of From Field ▼
Use Contact Address	<input type="checkbox"/> Enable
Call Transfer Mode	Internal Handling ▼
Call Flash Mode	Platform to Handle SIP I ▼
Hold Music Source	Remote ▼
Two Stage Dialing for SIP Incoming Call	<input type="checkbox"/> Enable
Maximum Wait Answer Time (s)	<input style="width: 100px;" type="text" value="60"/>
SIP Station Supported	<input type="checkbox"/> Enable
Set SIP Identifying	<input style="width: 100px;" type="text" value="Gateway"/>
Call Abnormal Hangup Detection	<input checked="" type="checkbox"/> Enable
Cycle(s)	<input style="width: 100px;" type="text" value="0"/>
Server Status Detection	<input checked="" type="checkbox"/> Enable
Cycle(s)	<input style="width: 100px;" type="text" value="0"/>
Send Cue Tone	<input type="checkbox"/> Enable
SIP Encryption	<input checked="" type="checkbox"/> Enable
Encryption Criterion	VOS1.1 ▼
Identifier	<input style="width: 100px;" type="text"/>
Key	<input style="width: 100px;" type="text"/>
RTP Encryption	<input type="checkbox"/> Enable
Ignore ACK	<input type="checkbox"/> Enable

Figure 3-17 SIP Compatibility Setting Interface

The table below explains the items shown in Figure 3-17.

Item	Description
Obtain CalleeID from	There are two optional ways to obtain the called party number: from "To" Field and from "Request" Field. The default value is "Request" Field.
Set CallerID Position	There are two options to set the position of the calling party number: "Displayname

	of From Field' and "Username of From Field". The default value is "Username of From Field".
Obtain CallerID from	There are two optional ways to obtain the calling party number: from "Displayname of From Field" and from "Username of From Field". The default value is "Username of From Field".
Use Contact Address	Sets whether to send the request message according to the content of Contact, with the default setting of <i>disabled</i> . As it is disabled, if the Contact field indicates an IP address within the LAN, the request message will be sent according to the source address; if the Contact field indicates an IP address belonging to the WAN, the request message will be sent according to this IP address.
Call Transfer Mode	There are two optional ways to deal with call transfer: <i>Internal Handling</i> and <i>Platform to Handle SIP Info</i> . The default value is <i>Internal Handling</i> .
Call Flash Mode	There are two optional ways to deal with call flash: <i>Internal Handling</i> and <i>Platform to Handle SIP Info</i> . The default value is <i>Internal Handling</i> .
Hold Music Source	Sets the source of the hold music, with the default value of Remote . This feature gets valid only when you choose the mode <i>Platform to Handle SIP Info</i> .
Two Stage Dialing for SIP Incoming Call	Once this feature is enabled, the incoming call from SIP should perform the two stage dialing operation. By default this feature is disabled.
Maximum Wait Answer Time	Sets the maximum time for the SIP channel to wait for the answer from the called party of the outgoing call it initiates. If the call is not answered within the specified time period, it will be canceled by the channel automatically. The default value is 60, calculated by s.
SIP Station Supported	Once this feature is enabled, a SIP terminal can be registered to the gateway and becomes a SIP station. By default this feature is disabled.
Set SIP Identifying	Sets the SIP identifying content in the SIP call message. The default setting is <i>Gateway</i> .
Abnormal Call Hangup Detection	Sets the interval between checks of the remote end's abnormal hangup, with the default value of 0 (feature disabled), calculated by s. It is suggested to set to 10s if this feature is necessary to be used.
Server Status Detection Cycle	The interval of sending a heartbeat packet to detect the master registrar server status, with the default value of 0 (feature disabled), calculated by s. It is suggested to set to 15s if this feature is necessary to be used.
Send Cue Tone	Sets whether to send a cue tone once the server gets disconnected, with the default setting of <i>disabled</i> .
SIP Encryption	Once this feature is enabled, you can encrypt the SIP signal following selecting an encryption criterion and setting a key. By default it is <i>disabled</i> .
Encryption Criterion	The criterion used to encrypt the SIP signal. At present only VOS1.1 is supported.
Identifier	The identifier field of the VOS encryption, which is used to obtain the key of the SIP encryption.
Key	The key to encrypt the SIP signal.
RTP Encryption	Once this feature is enabled, you can encrypt the RTP package. By default it is <i>disabled</i> .

Ignore ACK	Once this feature is enabled, the gateway is not necessary to wait for the ACK message after sending the 200OK message to establish a call. By default it is <i>disabled</i> .
-------------------	--

3.4.3 SIP Station

A SIP terminal can be registered to the gateway and becomes a SIP station. Enable the feature of '**SIP Station Supported**' on [3.4.2 SIP Compatibility](#), and you will see the item SIP Station on the VoIP Settings menu. Click '**SIP Station**' to go into the SIP Station interface. By default, there is no available SIP station. See Figure 3-18 below.

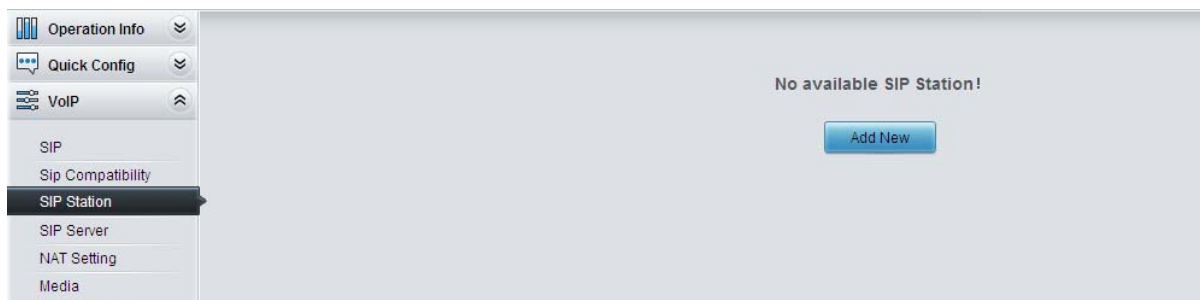


Figure 3-18 SIP Station Setting Interface

Click **Add New** to add SIP stations manually. See Figure 3-19. You can configure basic SIP station information on this interface. The bound port to a SIP station must be an FXO port and unique. The username must be the same as that used to register the SIP terminal to the gateway.

Figure 3-19 Add New SIP Station

The table below explains the items shown above:

Item	Description
Number	The logical number for a SIP station to register to the gateway.
Username	The username used to register a SIP station to the gateway.

Password	The password used to register a SIP station to the gateway.
Bound Port	The FXO port which is bound to the SIP station.
Description	It is user-defined, with the default value of <i>default</i> .
Batch Setting	Used to set multiple SIP stations at the same time.

After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings. See Figure 3-20 for the applied SIP station information.


SIP Station									
Check	Number	Username	IP Address	Bound Port	Register Status	Register Duration (s)	Voice Channel State	Description	Modify
<input type="checkbox"/>	0	123	--	5	Unregistered	--	--	default	
<div> <input type="button" value="Check All"/> <input type="button" value="Uncheck All"/> <input type="button" value="Inverse"/> <input type="button" value="Delete"/> <input type="button" value="Clear All"/> <input type="button" value="Add New"/> </div>									
1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total									

Figure 3-20 SIP Station Interface


Click **Modify** in the above figure to modify the configuration of the SIP station. See Figure 3-21. The configuration items on this interface are the same as those on the **Add New SIP Station** interface.

SIP Station

Number:

Username:

Password:

Bound Port: 

Description:

Batch Setting: ☐ Enable

Figure 3-21 SIP Station Modification Interface

To delete a SIP station, check the checkbox before the corresponding index in Figure 3-20 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all SIP stations at a time, click the **Clear All** button in Figure 3-20.

3.4.4 SIP Server

The gateway supports the multi-registrar server feature. Enable the feature of '**Multi-Registrar Server Mode**' on the [SIP](#) interface (see [3.4.1 SIP](#)) and you will see the item SIP Server under the VoIP Settings menu. Click '**SIP Server**' to go into the SIP Server interface. By default, there is no available SIP server. See Figure 3-22 below.

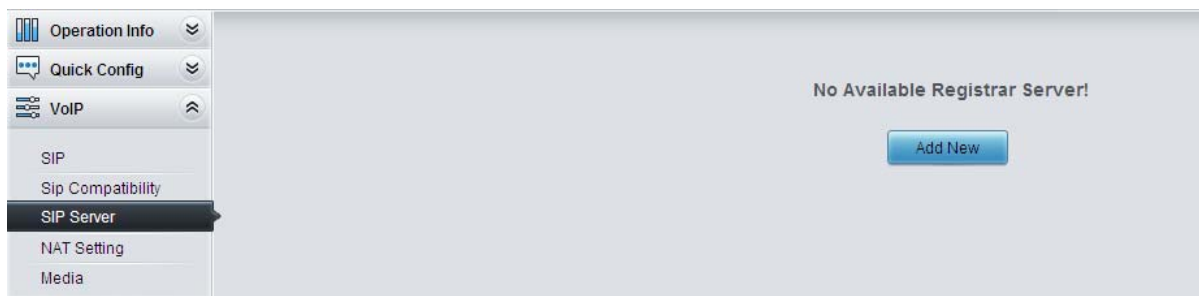


Figure 3-22 SIP Server Interface

Click **Add New** to add SIP servers manually. See Figure 3-23. You can configure basic SIP server information on this interface.

Figure 3-23 Add New SIP Server

All the items except Index and Description are the same as those on [the SIP](#) interface ([3.4.1 SIP](#)).

Item	Description
Index	The index of each SIP server. The gateway supports up to 8 SIP servers.
Description	More information about each SIP server, with the default value of <i>default</i> .

After configuration, click **Save** to save the above settings into the gateway or click **Cancel** to cancel the settings. See Figure 3-24 for the SIP server management interface.


Check	Index	Description	IP Address	Port	IMS Network	Externally Bound Address	Externally Bound Port	Registry Validity Period	Port	Port Group	Modify
<input type="checkbox"/>	1	defalut	201.123.115.233	5060	Enable	201.123.123.145	5060	600	---	---	
<input type="checkbox"/>	2	defalut	201.123.115.233	5060	Disable	---	---	600	---	---	

2 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-24 SIP Server Management

Click **Modify** in the above figure to modify the configuration of the SIP server. See Figure 3-25.

The configuration items on this interface are the same as those on the **Add New SIP Server** interface.

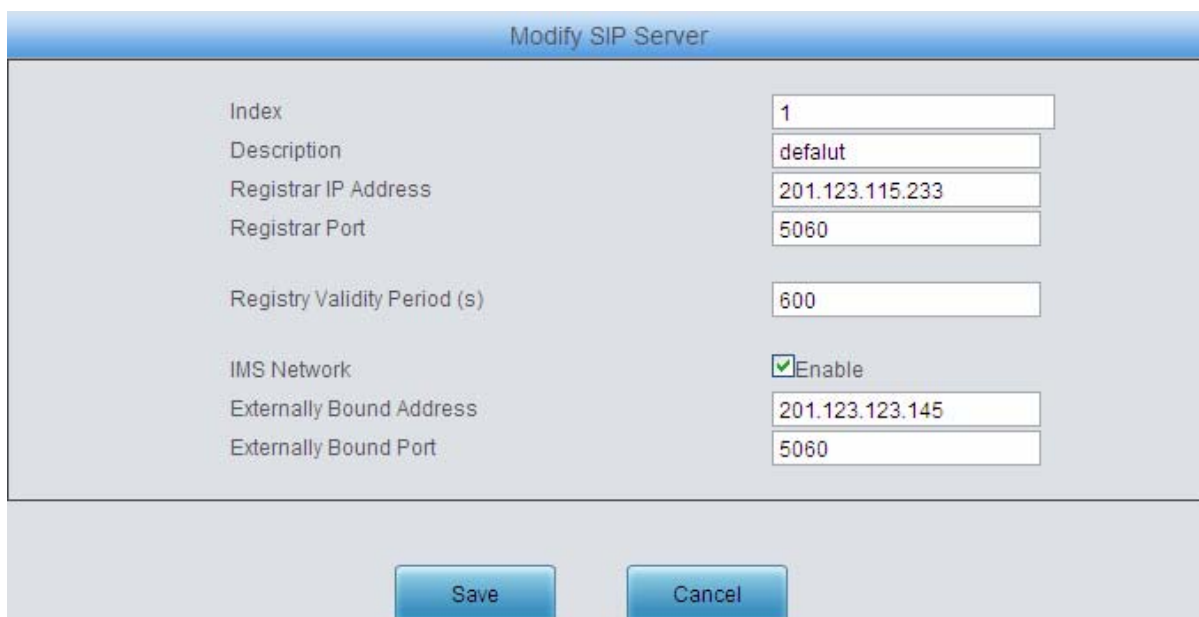

The 'Modify SIP Server' interface contains the following fields and controls:

Field	Value
Index	1
Description	defalut
Registrar IP Address	201.123.115.233
Registrar Port	5060
Registry Validity Period (s)	600
IMS Network	<input checked="" type="checkbox"/> Enable
Externally Bound Address	201.123.123.145
Externally Bound Port	5060


At the bottom of the interface are two buttons: 'Save' and 'Cancel'.

Figure 3-25 SIP Server Modification Interface

To delete a SIP server, check the checkbox before the corresponding index in Figure 3-24 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all SIP servers at a time, click the **Clear All** button in Figure 3-24.

3.4.5 NAT Setting

See Figure 3-26 for the NAT setting interface where you can configure the parameters for NAT. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations.

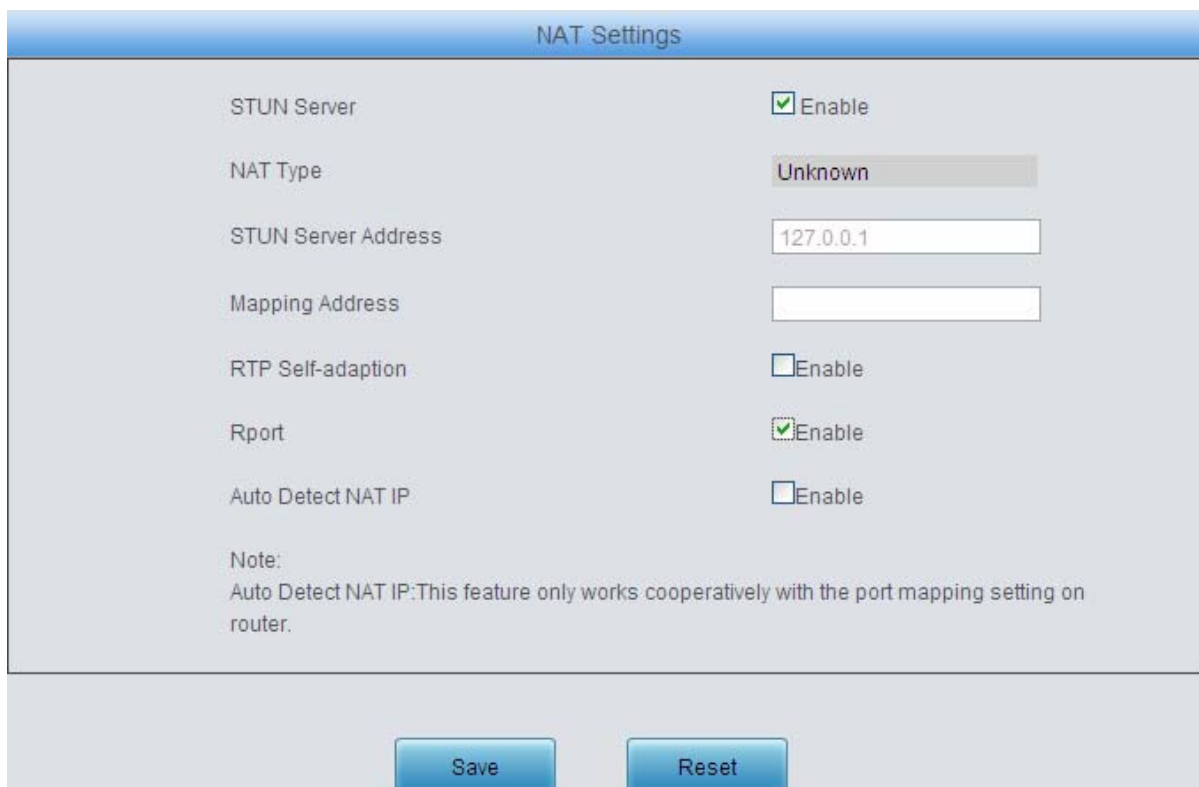

The 'NAT Settings' interface contains the following fields and controls:

Field	Value
STUN Server	<input checked="" type="checkbox"/> Enable
NAT Type	Unknown
STUN Server Address	127.0.0.1
Mapping Address	
RTP Self-adaption	<input type="checkbox"/> Enable
Rport	<input checked="" type="checkbox"/> Enable
Auto Detect NAT IP	<input type="checkbox"/> Enable

Below the settings is a 'Note' section:

Note:
Auto Detect NAT IP: This feature only works cooperatively with the port mapping setting on router.

At the bottom of the interface are two buttons: 'Save' and 'Reset'.

Figure 3-26 NAT Setting Interface

The table below explains the items shown in Figure 3-26.

Item	Description
STUN Server	Sets whether to enable the STUN server for NAT traversal. By default the STUN server is disabled.
NAT Type	Detected NAT (Network Address Translation) type. The gateway will return the NAT type automatically in case STUN Server is enabled. It includes 9 types: unknown; no NAT; ConeNat; RestrictedNat; PortRestrictedNat; Symmetric NAT; Symmetric NAT with firewall; can't detect over (fail to send detect message) and fail to detect (No reply from the stun server).
STUN Server Address	Address of the server for STUN traversal.
Mapping Address	It should be filled in when there exists NAT or other mapping relationships which leads to the failure of direct communication between the gateway and the destination address, so as to ask the remote end to send signaling messages or voice data to it during the signaling or voice communication between the gateway and the destination. Note: Once this item is filled out, it will be used as the first choice even if Rport and NAT IP are enabled.
RTP Self-adaption	When this feature is enabled, the RTP reception address or port carried by the signaling message from the remote end, if not consistent with the actual state, will be updated to the actual RTP reception address or port. By default, this feature is <i>disabled</i> .
Rport	When this feature is enabled, a corresponding Rport field will be added to the Via message of SIP. The default value is <i>enabled</i> .
Auto Detect NAT IP	When this feature is enabled, the gateway will parse the corresponding address and port in the message returned by Rport so as to use them for the following communication. By default, this feature is <i>disabled</i> . Note: This feature gets valid only when Rport is enabled.

3.4.6 Media

Media Parameters

DTMF Transmit Mode

RFC2833 ▼

RFC2833 Payload

101

RTP Port Range

50000,50767

Silence Suppression

Disable ▼

JitterMode

Static Mode ▼

JitterBuffer(ms)

20

Voice Gain Output from IP (dB)

0

AGC

☒ Enable

Target Energy Threshold (dB)

0

Maximum Gain Threshold (dB)

48

Maximum Attenuation Threshold (dB)

0

Minimum Input Energy (dB)

-60

CODEC Priority

Check	Priority	CODEC	Packing Time	Bit Rate (kbs)
<input checked="" type="checkbox"/>	1	G711A ▼	20 ▼	64 ▼
<input checked="" type="checkbox"/>	2	G711U ▼	20 ▼	64 ▼
<input checked="" type="checkbox"/>	3	G729 ▼	20 ▼	8 ▼
<input checked="" type="checkbox"/>	4	G723 ▼	30 ▼	6.3 ▼
<input checked="" type="checkbox"/>	5	G722 ▼	30 ▼	64 ▼
<input checked="" type="checkbox"/>	6	AMR ▼	20 ▼	4.75 ▼
<input checked="" type="checkbox"/>	7	iLBC ▼	30 ▼	13.3 ▼

Save

Reset

Figure 3-27 Media Settings Interface

See Figure 3-27 for the media settings interface where you can configure the RTP port and payload type depending on your requirements. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions. The table below explains the items shown in Figure 3-27.

Item	Description
DTMF Transmit Mode	Sets the transmit mode for the IP channel to send DTMF signals. The optional values are <i>RFC2833</i> , <i>In-band</i> and <i>Signaling</i> , with the default value of <i>RFC2833</i> .
RFC2833 Payload	Payload of the RFC2833 formatted DTMF signals on the IP channel. Range of value: 90~127, with the default value of 101.

RTP Port Range	Supported RTP port range for the IP end to establish a call conversation, with the lower limit of 10000 and the upper limit of 60000 and the difference between larger than 480. The default value is 50000-50767.
Silence Suppression	Sets whether to send comfort noise packets to replace RTP packets or never to send RTP packets to reduce the bandwidth usage when there is no voice signal throughout an IP conversation. The optional values are <i>Enable</i> and <i>Disable</i> , with the default value of <i>Disable</i> .
JitterMode	Sets the mode for the Jitter buffer. The optional mode is <i>Static Mode</i> and <i>Adaptive Mode</i> , with the default value of <i>Static Mode</i> .
JitterBuffer	Acceptable jitter for data packets transmission over IP, which indicates the buffering capacity. A larger JitterBuffer means a higher jitter processing capability but as well as an increased voice delay, while a smaller JitterBuffer means a lower jitter processing capability but as well as a decreased voice delay. Range of value: 20~200, calculated by ms, with the default value of 20. Note: This is only valid if the Jitter Mode is set to Static Mode.
Voice Gain Output from IP	Adjusts the gain of the voice output from IP. Range of value: -24~12, calculated by dB, with the default value of 0.
AGC	If the AGC (Automatic Gain Control) feature is enabled, the gateway will automatically adjust the input signal amplitude, increasing that of small signals and decreasing that of large signals.
Target Energy Threshold	Set the target energy of the AGC, range of value: -50~0, calculated by dB, with the default value of 0.
Maximum Gain Threshold	Set the maximum gain threshold that will be applied to the signal. Range of value: 0~48, calculated by dB, with the default value of 48.
Maximum Attenuation Threshold	Set the maximum attenuation that will be applied to the signal. Range of value: -42~0, calculated by dB, with the default value of 0.
Minimum Input Energy	Set the minimum threshold for the energy processed by AGC. Signals below this threshold will not be processed by AGC. Range of value: -60~ -25, calculated by dB, with the default value of -60.

CODEC Priority	Supported CODECs and their corresponding priority for the IP end to establish a call conversation. The table below explains the sub-items:	
	Sub-item	Description
	<i>Priority</i>	Priority for choosing the CODEC in an SIP conversation. The smaller the value is, the higher the priority will be.
	<i>CODEC</i>	Three optional CODECs are supported: G711A, G711U, G729A/B, G723, G722, AMR and iLBC.
	<i>Packing Time</i>	Time interval for packing an RTP packet, calculated by ms.
	<i>Bit Rate</i>	The number of thousand bits (excluding the packet header) that are conveyed per second.
	By default, all of the seven CODECs are supported and ordered G711A, G711U, G729A/B, G723, G722, AMR and iLBC by priority from high to low.	
	The packing time and bit rate supported by different CODECs are listed in the table below. Those values in bold face are the default values.	
	CODEC	Packing Time (ms) Bit Rate (kbps)
	G711A	10 / 20 / 30 / 40 / 60 64
	G711U	10 / 20 / 30 / 40 / 60 64
	G729A/B	10 / 20 / 30 / 40 / 60 8
	G723	30 / 60 5.3 / 6.3
	G722	10 / 20 / 30 / 40 64
	AMR	20 / 40 / 60 4.75
	iLBC	20 / 40 / 60 15.2
		30 / 60 13.3


3.5 Advanced Settings

Advanced Settings includes thirteen parts: **FXS**, **FXO**, **Tone Detector**, **Tone Generator**, **DTMF**, **Ringing Scheme**, **Fax**, **Function Key**, **Dialing Rule**, **Dialing Timeout**, **Cue Tone**, **Color Ring** and **QoS**. See Figure 3-28. **FXS** is used to configure the general properties of the FXS port; **FXO** is used to configure the general properties of the FXO port; **Tone Detector** is used to configure some properties of detected tones; **Tone Generator** is used to configure some properties of tones sent from gateway; **DTMF** is used to set the properties related to DTMF; **Ringing Scheme** is used to set the ringing scheme for the FXS port; **Fax** is used to configure multiple fax parameters; **Function Key** is used to set a cluster of combination keys for you to query a related number; **Dialing Rule** and **Dialing Timeout** are used to set the judging conditions for dialing; **Cue Tone** is used to set the gateway language for playing voice and the voice file used for the two-stage dialing; **Color Ring** is used to upload the color ring file which can be set as a ringback tone for an incoming call from IP to FXS port; **QoS** uses the differentiated services technology to increase the gateway's service quality.



Figure 3-28 Advanced Settings

3.5.1 FXS



Item	Value/Setting
Hook-flash Detection	<input checked="" type="checkbox"/> Enable
Minimum Time (ms)	80
Maximum Time (ms)	700
CID Transmit Mode	FSK
Occasion to Send FSK CallerID	After the first ring
Send Polarity Reversal Signal	<input type="checkbox"/> Enable
Handling of Call from Internal Station	Platform Handling
Light Up Mode for Voice Message	Not Light Up
Echo Cancellation	
Work Mode	Near-end cancell:
Non-linear Processing	<input checked="" type="checkbox"/> Enable
Fixed Window Size (Near-end, Narrowband 8kHz)	16ms

Save Reset

Figure 3-29 FXS Configuration Interface

See Figure 3-29 for the FXS configuration interface. The table below explains the items shown in the above figure.

Item	Description
Hook-flash Detection	Sets whether to enable the hook-flash detection feature or not, with the default setting of being disabled.

Minimum Time	Time length for judging a flash operation. Only a hook-flash operation which lasts a time more than the value of this configuration item will be regarded as a valid flash operation. Range of value: 80~ Maximum Time , calculated by ms, with the default value of 80.
Maximum Time	Time length for judging a flash operation. Only a hook-flash operation which lasts a time less than the value of this configuration item will be regarded as a valid flash operation. Those lasting a time longer than the value of this configuration item will be regarded as hangup operations. Range of value: 32~2000, calculated by ms, with the default value of 700.
Minimum Time Length of On-hook Detection	The minimum time length for detecting whether the phone is on-hook or not. Range of value: 64~2000, calculated by ms, with the default value of 64. Note: This item is valid only when the item Hook-flash Detection is disabled.
CID Transmit Mode	The mode adopted by the FXS port to send the CallerID. The optional values are <i>FSK</i> and <i>DTMF</i> , with the default value of <i>FSK</i> .
Occasion to Send FSK CallerID	Sets when to send the CallerID, before rings or after the 1 st Ring. The default value is <i>after 1st Ring</i> .
Send Polarity Reversal Signal	Once this feature is enabled, the gateway will send the polarity reversal signal to a corresponding FXS channel when it detects the called party pick-up behavior. By default, this feature is <i>disabled</i> .
Handling of Call from Internal Station	Sets the handling mode for the calls from station to station, two options available: Internal Handling and Platform Handling, with the default value of Platform Handling.
Light Up Mode for Voice Message	Sets the light up mode for the voice message of the phone, There are two options: <i>Not Light Up</i> and <i>Light Up by FSK</i> , with the default value of <i>Not Light Up</i> .
Work Mode	Sets the work mode for the echo canceller. There are two options: <i>Near-end cancellation</i> and <i>Both near-end and far-end cancellation</i> , with the default value of <i>Near-end cancellation</i> .
Non-linear Processing	Sets whether to enable the mode of non-linear processing. By default, this feature is <i>enabled</i> .
Fixed Window Size	Sets the size of the window for the fixed cancellation.
Moving Window Size	Sets the size of the window for the moving cancellation.

After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions.

3.5.2 FXO

The screenshot displays the 'FXO' configuration window. It contains several sections of settings:

- Calling Party Detection Time (s):** 10
- Silence Detection(FXO will Hang up the Call upon Detecting the Silence.):** ☒ Enable
- Energy Threshold of Silence (dB):** -45
- Time Threshold of Silence (s):** 60
- Time Threshold to Avoid on-line Voice Dithering (ms):** 48
- Incoming Call from PSTN**
 - FSK Standard:** GR-30(North America, China) [dropdown]
 - Reception Interval of DTMF CallerID (ms):** 200
- Outgoing Call to PSTN**
 - Flash Time (ms):** 100
 - Delay after Dial (ms):** 1000
 - Two Stage Dialing Mode:** ☐ Enable
 - Maximum Wait Answer Time (s)(Valid when Polarity Reversal Enabled):** 25
 - Communicate without Network:** ☒ Enable
 - Delay to Send 200 OK to IP Side (Invalid if Polarity Reversal is enabled):** ☐ Enable
- Echo Canceller**
 - Work Mode:** Near Far Ending [dropdown]
 - Non Linear Process:** ☒ Enable
 - Fixed Window Size(Near,8kHz):** 8ms [dropdown]
 - Moving Window Size(Far,8kHz):** 8ms [dropdown]

At the bottom, there are 'Save' and 'Reset' buttons.

Figure 3-30 FXO Configuration Interface

The table below explains the particular configuration items for FXO.

Item	Description
Calling Party Detection Time	The maximum waiting time for the detection of the calling party number from FXO port. Range of value: 1~20, calculated by s, with the default value of 10.
Silence Detection	Used to detect whether the line is silent or not according to the energy threshold and time threshold of silence. FXO will hang up the call automatically if these conditions are satisfied. The default setting is being disabled.
FSK Standard	Standard for sending FSK formatted CallerID, which varies in different countries and districts. The optional values are: <i>ETSI (Europe)</i> , <i>GR-30 (North America, China)</i> and <i>NIT (Japan)</i> , with the default value of <i>GR-30</i> .
Reception Interval of DTMF CallerID	The time interval between digits of the DTMF CallerID from FXO port, calculated by ms, with the default value of 200.
Flash Time	Sets the time for generating a flash signal on the analog trunk. Range of value: 32~1000, calculated by ms, with the default value of 100.
Delay after Dial	Sets the delay to send the CallerID to PBX after you pick up and dial. Range of value: 200~2000, calculated by ms, with the default value of 1000.

Two Stages Dialing Mode	Sets whether it is necessary to perform the two-stages dialing operation to call the remote end via an FXO port. By default this feature is disabled.
Maximum Wait Answer Time	The maximum time to wait the answer of the remote side for an outgoing call from FXO port. This item is valid only when Polarity Reversal is enabled. It is calculated by s, with the default value of 25.
Communication without Network	Automatically routes a call to the FXO port in case of network failure or call timeout. The default value is <i>enabled</i> .
Delay to Send 200 OK to IP Side	Once this feature is enabled, the gateway will delay to send 200 OK message to the IP side. The default value is <i>disabled</i> .
Work Mode	Sets the work mode for the echo canceller. There are two options: <i>Near-end cancellation</i> and <i>Both near-end and far-end cancellation</i> , with the default value of <i>Near-end cancellation</i> .
Non-linear Processing	Sets whether to enable the mode of non-linear processing. By default, this feature is <i>enabled</i> .
Fixed Window Size	Sets the size of the window for the fixed cancellation.
Moving Window Size	Sets the size of the window for the moving cancellation.

After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions.

3.5.3 Tone Detector




Tone Detector										
Check	Index	Tone	Type	The 1st Mid-frequency	The 2nd Mid-frequency	Duration at ON State	Duration at OFF State	Period Count	Energy	Modify
<input type="checkbox"/>	0	Dial Tone	Continuous Tone	450	0	1500	0	0	8	
<input type="checkbox"/>	1	Busy Tone	Periodic Tone	450	0	350	350	2	0	
<input type="checkbox"/>	2	Ringback Tone	Periodic Tone	450	0	1000	4000	1	0	

Figure 3-31 Tone Parameters Setting Interface

See Figure 3-31 for the Tone Parameters setting interface. At most three pieces of tone parameters are allowed to set. By default, there are already three pieces of tone parameters on the gateway which you can modify or delete according to your actual requirement.

Click **Modify** in Figure 3-31 to modify the tone parameter. See Figure 3-32 for the tone parameter modification interface.

Tone Parameters

Index:

0 ▼

Tone:

Dial Tone ▼

Type :

Continuous Tone ▼

The 1st Mid-frequency:

450

The 2nd Mid-frequency:

0

Duration at ON State:

1500

Duration at OFF State:

0

Period Count :

0

Energy :

8

Save

Close

Figure 3-32 Modify Tone Parameter

The table below explains the items shown in the above figure.

Item	Description
Index	The unique index of each group of tone detectors.
Tone	There are three options: Dial Tone , Busy Tone and Ringback Tone .
Type	There are two options: Continuous Tone and Periodic Tone .
The 1st Mid-frequency	The 1 st center frequency. Range of value: 300~3400, calculated by Hz. The default value is 450.
The 2nd Mid-frequency	The 2 nd center frequency. Range of value: 0 or 300~3400, calculated by Hz. The default value is 0.
Duration at ON State	The duration of tones at on state. The default setting: Dial Tone is 1500ms, Busy Tone is 350ms, Ringback Tone is 1000ms.
Duration at OFF State	The duration of tones at off state. The default setting: Dial Tone is 0ms, Busy Tone is 350ms, Ringback Tone is 4000ms.
Period Count	Sets the count of periods as the condition to determine a periodic tone. The default setting: Dial Tone is 0, Busy Tone is 2, Ringback Tone is 1.
Energy	Sets the energy threshold for the tone detector to detect the on-line tone. To increase the accuracy, you can adjust the value according to the tone volume on the line. Range of value: -18~11, calculated by dB. The default value is 0.

To delete a piece of tone, check the checkbox before the corresponding index in Figure 3-31 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all tone at a time, click the **Clear All** button in Figure 3-31.

3.5.4 Tone Generator

Tone Generator

Tone Energy (dB)

Dial Tone	<input type="text" value="450/1500"/>	<p>FreqA/TimeA,FreqB+FreqC/TimeB</p> <p>Repeatedly play tones in turn: first, TimeA, a single tone with FreqA, then, Time B, a dual tone composed of FreqB and FreqC.</p>
Ringback Tone	<input type="text" value="450/1000,0/4000"/>	<p>FreqA+FreqB+FreqC/TimeA,FreqD/TimeB</p> <p>Repeatedly play tones in turn: first, TimeA, a triple tone composed of FreqA, FreqB and FreqC, then, TimeB, a single tone with FreqD.</p>
Busy Tone	<input type="text" value="450/350,0/350"/>	<p>Note:</p> <p>The play time is calculated by ms and cannot be larger than 16383ms for each toneunit. A tone is allowed to contain at most 5 different toneunits and 4 different frequencies, but the frequency and duration of the first toneunit cannot be 0. Frequency being 0 means the toneunit is a piece of silence.</p>
Call Wait Tone	<input type="text" value="450/200,0/600,450/200,0/1000"/>	

Figure 3-33 Tone Generator Setting Interface

See Figure 3-33 for the Tone Generator Setting interface. By default, there are four tones on it: Dial Tone—a single tone with 450HZ frequency, plays continuously; Ringback Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 1s play and 4s pause; Busy Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 350ms play and 350ms pause. Call Wait Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 200ms play and 600ms pause, then 200ms play and 1s pause. You can configure the tone generator manually. The exact explanation about the format and the meaning is described on the right of the interface. The value range of the tone energy herein above is -18~11, calculated by dB, with the default value of 0.

3.5.5 DTMF

The image shows a web-based configuration interface for DTMF. It is divided into two main sections: 'DTMF Detector' and 'DTMF Generator'. The 'DTMF Detector' section includes five settings: 'Minimum Energy Threshold (dB)' set to -45, 'Maximum Threshold of Signal Twist (dB)' set to 3, 'Input Signal Gain (dB)' set to 0, 'Voice Path Delay (ms)' set to 20, and a checkbox for 'DTMF Display via Channel Status' which is currently disabled. The 'DTMF Generator' section includes three settings: 'DTMF Energy (dB)' set to 0, 'Duration at ON (ms)' set to 100, and 'Duration at OFF (ms)' set to 32. At the bottom of the interface are two buttons: 'Save' and 'Reset'.

Figure 3-34 DTMF Detector Configuration Interface


See Figure 3-34 for the DTMF configuration, including two parts: DTMF Detector and DTMF Generator. The table below explains the items shown in the above figure.

Item	Description
Minimum Energy Threshold	Set the minimum energy threshold of the DTMF signal. Range of value: -96~-1. The default value is -45.
Maximum Threshold of Signal Twist	Set the maximum threshold of the DTMF signal twist. Range of value: 0~12. The default value is 3.
Input Signal Gain	Set the input gain of the DTMF signal. Range of value: -24~24, calculated by dB. The default value is 0.
Voice Path Delay	Once this feature is enabled, the DTMF in the voice data will be clamped, Range of value: 0~20, calculated by ms. The default value is 20.
DTMF Display via Channels Status	Once this feature is enabled, the received/sent DTMF will be displayed upon you putting the mouse on the icon of channel status. The default value is disabled.
DTMF Energy	Energy of the DTMF signal sent by the gateway. Range of value: -18~11, calculated by dB, with the default value of 0.
Duration at ON	Set the duration of the DTMF signal at ON state. Range of value: 0~16383, calculated by ms, with the default value of 100.
Duration at OFF	Set the duration of the DTMF signal at OFF state. Range of value: 0~16383, calculated by ms, with the default value of 32.

After configuration, click **Save** to save your settings into the gateway. If a dialog box pops up after

you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions. Click **Reset** to restore the configurations.

3.5.6 Ringing Scheme

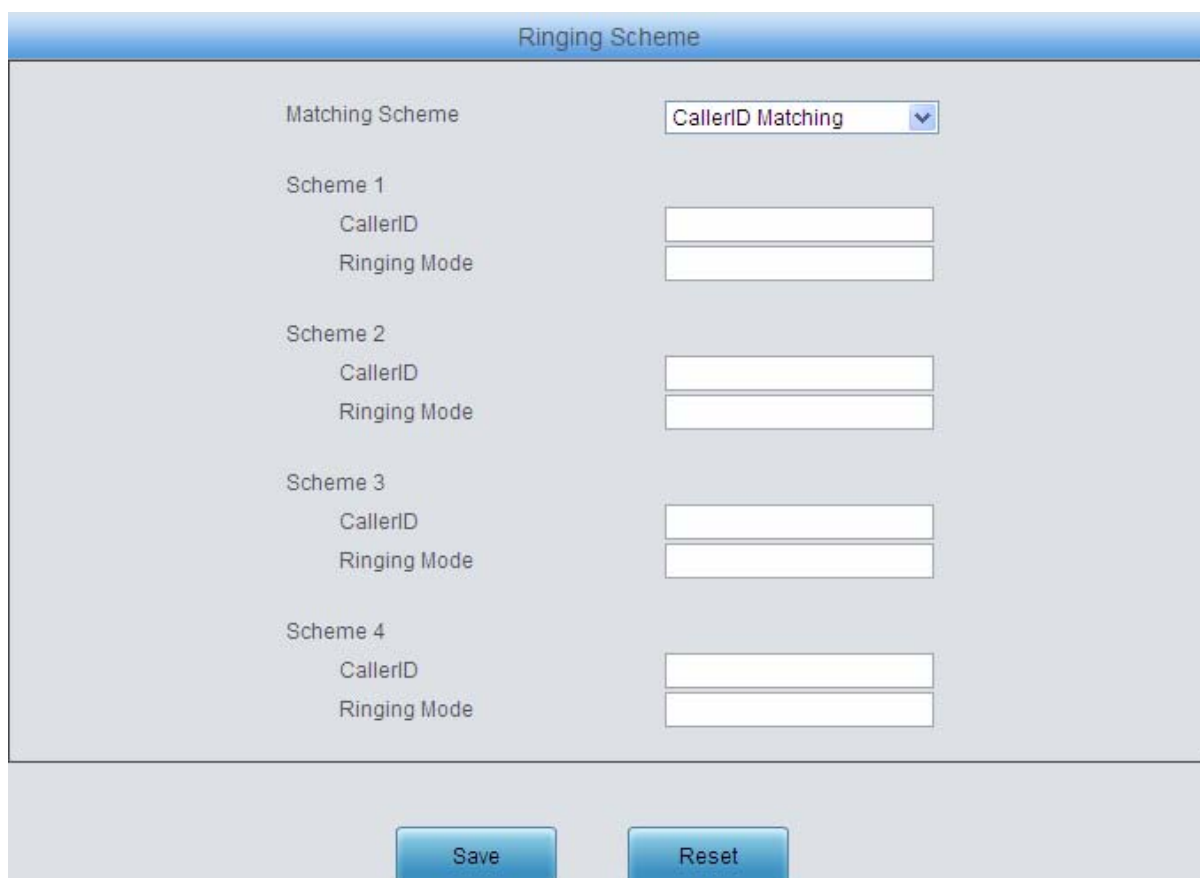

The image shows a web-based configuration interface titled "Ringing Scheme". At the top, there is a "Matching Scheme" dropdown menu currently set to "CallerID Matching". Below this, there are four sections labeled "Scheme 1", "Scheme 2", "Scheme 3", and "Scheme 4". Each section contains two input fields: "CallerID" and "Ringing Mode". At the bottom of the interface, there are two buttons: "Save" and "Reset".

Figure 3-35 Ringing Scheme Configuration Interface

See Figure 3-35 for the Ringing Scheme Configuration interface. The gateway can execute different ringing schemes according to the callerID or Alter-Info..

The table below explains the items shown in the above figure.

Item	Description
CallerID	<p>The gateway will match the CallerID set in this item to that of the incoming call. If they are matched, the current ringing scheme will be executed; otherwise, the default ringing scheme (1 sec on and 4 sec off) will work.</p> <p>The rule to fill in the CallerID is the same as that of 3.5.9 Dialing Rule. Multiple CallerIDs are supported; they should be separated by “,”</p>
Alter-Info Value	<p>The gateway will match the alter-info value set in this item to that of the incoming call. If they are matched, the current ringing scheme will be executed; otherwise, the default ringing scheme (1 sec on and 4 sec off) will work..</p>

<i>Ringing Scheme</i>	<p>The ringing scheme can be "1,X,Y" or "2,X,Y,M,N", in which, the number 1 or 2 denotes one group or two groups; X, M denote the duration at on state while Y, N denote the duration at off state.</p> <p>Note: N - the last duration at OFF cannot be less than 1700s if the item "Occasion to Send FSK CallerID" is set to After the first ring.</p>
------------------------------	---

After configuration, click **Save** to save the above settings into the gateway or click **Reset** to restore the configurations.

3.5.7 Fax

Figure 3-36 Fax Configuration Interface (Disable by default)

See Figure 3-36 for the default fax mode configuration. The table below explains the items shown in the above figure.

Item	Description
<i>Fax Mode</i>	The real-time IP fax mode. The optional values are <i>T.38</i> , <i>Pass-through</i> and <i>Disable</i> , and the default value is <i>Disable</i> which means to disable both T.38 and Pass-through.

See Figure 3-37 for the fax configuration under the T.38 mode.

Figure 3-37 Fax Configuration Interface (T.38 Mode)

Users can configure the general fax parameters via this interface. After configuration, click **Save** to save your settings into the gateway. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.15 Restart](#) for detailed instructions. click **Reset** to restore the configurations. The table below explains the configuration items in Figure 3-37.

Item	Description
T38 Fax Port	The port for T.38 faxing, providing two options: Use Original Voice Port and Use New Port . The default setting is <i>Use Original Voice Port</i> .
T38 Version	Version of T.38 which is defined by ITU-T.
T38 Negotiation	The Negotiation mode of T.38, providing two options: <i>Initiate Negotiation as Fax Sender</i> and <i>Initiate Negotiation as Fax Receiver</i> . The default value is <i>Initiate Negotiation as Fax Receiver</i> .
Maximum Fax Rate	Sets the maximum faxing rate for both receiving and transmitting. Range of value: 14400, 9600 and 4800, calculated by bps, with the default value of 14400.
Fax Train Mode	Sets the train mode for T.38 fax. The optional values are <i>transferredTCF</i> and <i>localTCF</i> , with the default value of <i>transferredTCF</i> .
Error Correction Mode	Sets the error correction mode for T.38 fax. The optional values are <i>t38UDPRedundancy</i> (Redundancy Error Correction) and <i>t38UDPFEC</i> (Forward Error Correction), with the default value of <i>t38UDPRedundancy</i> .

If you set **Fax Mode** to *Pass-through*, you can see the interface shown as Figure 3-38.

Figure 3-38 Fax Configuration Interface (Pass-through Mode)

The table below explains the configuration item in the above figure.

Item	Description
Pass-through Payload	RTP Payload under the pass-through fax mode. Range of value: 96~127, with the default value of 102.

3.5.8 Function Key

See Figure 3-39 for the Function Key Configuration interface. Here you can set a cluster of combination keys to query a related number.

Function Key			
Function	Enable	Function Key	Mode
Device Function			
Query LAN	<input checked="" type="checkbox"/>	*11*	Default
Query Phone Number	<input checked="" type="checkbox"/>	*20*	Default
Phone Test	<input checked="" type="checkbox"/>	*30*	Default
Set LAN	<input checked="" type="checkbox"/>	*61*	Default
Query WEB Port	<input checked="" type="checkbox"/>	*70*	Default
Service Available			
Blind Transfer	<input checked="" type="checkbox"/>	*010*	Default
Call Forward Unconditional Activate	<input checked="" type="checkbox"/>	*030*	Default
Call Forward Unconditional Deactivate	<input checked="" type="checkbox"/>	*031*	Default
Call Forward Busy Activate	<input checked="" type="checkbox"/>	*040*	Default
Call Forward Busy Deactivate	<input checked="" type="checkbox"/>	*041*	Default
Call Forward No Reply Activate	<input checked="" type="checkbox"/>	*050*	Default
Call Forward No Reply Deactivate	<input checked="" type="checkbox"/>	*051*	Default
Do Not Disturb Activate	<input checked="" type="checkbox"/>	*060*	Default
Do Not Disturb Deactivate	<input checked="" type="checkbox"/>	*061*	Default
Register	<input checked="" type="checkbox"/>	*020*	Default
Unregister	<input checked="" type="checkbox"/>	*021*	Default
Query Register Status	<input checked="" type="checkbox"/>	*022*	Default
<input type="button" value="Save"/>			

Figure 3-39 Function Key Configuration Interface

Click “Enable” to enable the corresponding function key. The gateway will use the default function keys when the mode is set to default; and it will allow you to set new function keys when the mode is set to user-defined. Click **Save** to save your settings into the gateway.

Note: Phone Test is used just to see if the phone can work normally. It requires you to hang up the phone after dialing the corresponding combination keys. Then the gateway will ring the phone. At that time, pick up the phone and you can hear the voice prompt played by the gateway (e.g. ‘Test successful.’)

When the **Blind Transfer** feature is enabled, set a corresponding function key in the box behind. After you transfer a call by rapidly clapping on the hook switch, dial the set function key for **Blind Transfer** and then the called party number. After that, hang up the call once hearing the howler tone to let the subsequent call procedure go out of your control.

3.5.9 Dialing Rule

Considering efficiency, it is not acceptable that the gateway reports to the PBX or relevant devices every time it receives a number. Instead, we hope that the gateway can automatically judge the received number to see if it meets the set rule, if it is complete and if it is qualified to make outgoing calls. Therefore, a whole dialing plan, which consists of multiple dialing rules specifying the auto judging conditions, is required. Each dialing rule has a priority, which is used to restrict the sequence and avoid conflict.

Standard Mode

Character Mode

Dialing Rule				
Check	Index	Dialing Rule	Description	Modify
<input type="checkbox"/>	81	400xxxxxxx	default	
<input type="checkbox"/>	82	40[1-9]xxxxx	default	
<input type="checkbox"/>	83	4[1-9]xxxxxx	default	
<input type="checkbox"/>	84	800xxxxxxx	default	
<input type="checkbox"/>	85	80[1-9]xxxxx	default	
<input type="checkbox"/>	86	8[1-9]xxxxxx	default	
<input type="checkbox"/>	87	[2-3,5-7]xxxxxxx	default	
<input type="checkbox"/>	88	1[3-5,7-8]xxxxxxxxxxx	default	
<input type="checkbox"/>	89	100xx	default	
<input type="checkbox"/>	90	95xxx	default	
<input type="checkbox"/>	91	123xx	default	
<input type="checkbox"/>	92	111xx	default	
<input type="checkbox"/>	93	11[0,2-9]	default	
<input type="checkbox"/>	94	120	default	
<input type="checkbox"/>	95	0[3-9]xxxxxxxxxxx	default	
<input type="checkbox"/>	96	02xxxxxxxxxxx	default	
<input type="checkbox"/>	97	010xxxxxxxxxxx	default	
<input type="checkbox"/>	98	01[3-5,7-8]xxxxxxxxxxx	default	
<input type="checkbox"/>	99	.	default	

Check All

Uncheck All

Inverse

Delete

Clear All

Add New

19 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-40 Dialing Rule Configuration Interface (Standard)

See Figure 3-40 for the Dialing Rule Configuration interface under the standard mode. The list in the above figure shows the dialing rules with their priorities and description, which can be added by the **Add New** button on the bottom right corner. See Figure 3-41 for the dialing rule adding interface.

Dialing Rule

Index: 98

Description:

Dialing Rule:

Figure 3-41 Add New Dialing Rule

The table below explains the items shown in Figure 3-41.

Item	Description
Index	The unique index of each dialing rule, which denotes its priority. A dialing rule with a smaller index value has a higher priority and will be checked earlier while matching.
Description	Remarks for the dialing rule. It can be any information, but can not be left empty.
Dialing Rule	Up to 99 dialing rules can be configured in the gateway, and the maximum length of

each dialing rule is 127 characters. See below for the meaning of each character in the dialing rule. The gateway will do instant matching for your dialing number based on the dialing rule and regard your dialing as finished upon receiving '#' or dialing timeout.

Character	Description
"0"~"9"	Digits 0~9.
"A"~"D"	Letters A~D.
"X"	A random number. A string of 'x's represents several random numbers. For example, 'xxx' denotes 3 random numbers.
"."	'.' indicates a random amount (including zero) of characters after it.
"[]"	'[]' is used to define the range for a number. Values within it only can be digits '0~9', punctuations '-' and ','. For example, [1-3,6,8] indicates any one of the numbers 1, 2, 3, 6, 8.
"_"	'_' is used only in '[]' between two numbers to indicates any number between these two numbers.
" , "	',' is used to separate numbers or number ranges, representing alternatives.
"*"	Only represents symbol '*'.
"#"	Only set it at the beginning of the string, representing symbol '#'.

There are 19 dialing rules already configured on the gateway for easy use. See below for detailed information.

Priority	Dialing Rule	Description
99	.	Any number in any length.
98	01[3-5,7-8]xxxxxxxx.	Any 12-digit number starting with 013, 014, 015, 017 or 018
97	010xxxxxxxx	Any 11-digit number starting with 010
96	02xxxxxxxx	Any 11-digit number starting with 02
95	0[3-9]xxxxxxxx	Any 12-digit number starting with 03, 04, 05, 06, 07, 08 or 09
94	120	Number 120.
93	11[0,2-9]	Number 110, 112, 113, 114, 115, 116, 117, 118 or 119
92	111xx	Any 5-digit number starting with 111
91	123xx	Any 5-digit number starting with 123
90	95xxx	Any 5-digit number starting with 95
89	100xx	Any 5-digit number starting with 100
88	1[3-5,7-8]xxxxxxxx	Any 11-digit number starting with 13, 14, 15, 17 or 18
87	[2-3,5-7]xxxxxx	Any 8-digit number starting with 2, 3, 5, 6 or 7

	86	8[1-9]xxxxxx	Any 8-digit number starting with 81, 82, 83, 84, 85, 86, 87, 88 or 89
	85	80[1-9]xxxxx	Any 8-digit number starting with 801, 802, 803, 804, 805, 806, 807, 808 or 809
	84	800xxxxxxx	Any 10-digit number starting with 800
	83	4[1-9]xxxxxx	Any 8-digit number starting with 41, 42, 43, 44, 45, 46, 47, 48 or 49.
	82	40[1-9]xxxxx	Any 8-digit number starting with 401, 402, 403, 404, 405, 406, 407, 408 or 409
	81	400xxxxxxx	Any 10-digit number starting with 400

After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-40 to modify the dialing rules. See Figure 3-42 for the dialing rule modification interface. The configuration items on this interface are the same as those on the **Add New Dialing Rule** interface.

Figure 3-42 Modify Dialing Rule

To delete a dialing rule, check the checkbox before the corresponding index in Figure 3-40 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all dialing rules at a time, click the **Clear All** button in Figure 3-40.

See Figure 3-43 for the Dialing Rule Configuration interface under the Character mode. You can edit the dialing rule list to add a new one or modify an old one. The exact meaning of each rule element is described on the page.

Standard Mode Character Mode

Dialing Rule

Note: The Dialing Rule contains such fields as Dialing Rule and Description.
The priority decreases from top to bottom; adjacent fields are separated by a space; Symbol . denotes any string.
Don't forget to save the configuration after your modification!

400xxxxxx default
40[1-9]xxxx default
4[1-9]xxxx default
800xxxxxx default
80[1-9]xxxx default
8[1-9]xxxx default
[2-3,5-7]xxxxxx default
1[3-5,7-8]xxxxxxxx default
100xx default
95xxx default
123xx default
111xx default
11[0,2-9] default
120 default
0[3-9]xxxxxxxxxx default

20 Items Total

Save

Figure 3-43 Dialing Rule Configuration Interface (Character)

3.5.10 Dialing Timeout


Dialing Timeout Info		
Inter Digit Timeout (s)	Description	Modify
6	example	

Figure 3-44 Dialing Timeout Info Interface

See Figure 3-44 for the dialing timeout info interface. The table below explains the items shown in the above figure.

Item	Description
Inter Digit Timeout	Sets the largest interval between two digits of a dialing number. Range of value: 1~10, calculated by s, with the default value of 6. In case your dialing rules do not include ".", the call will fail if there is no digit dialed or no dialing rule matched during this interval; in case your dialing rules include ".", the gateway will wait until this interval ends and match to the dialing rule "." if there is no digit dialed or no other dialing rule matched during this interval.
Description	More information about the configuration item Inter Digit Timeout , such as the reason for adopting the current value.

Click **Modify** in Figure 3-44 to modify the dialing timeout info. See Figure 3-45 for the dialing timeout info modification interface. The configuration items on this interface are the same as those on the **Dialing Timeout Info Interface**.

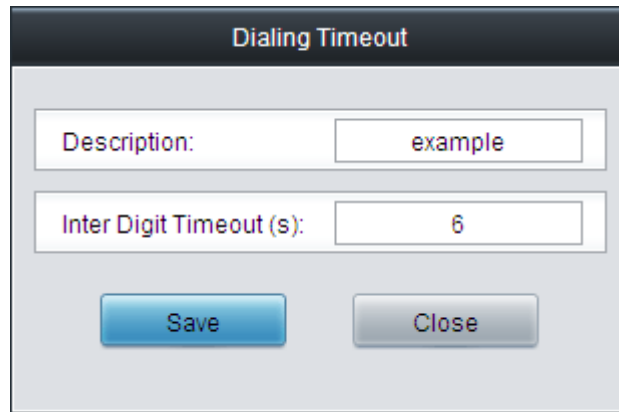

The image shows a 'Dialing Timeout' configuration window. It has a title bar 'Dialing Timeout'. Inside, there are two input fields: 'Description:' with the value 'example' and 'Inter Digit Timeout (s):' with the value '6'. At the bottom, there are two buttons: 'Save' and 'Close'.

Figure 3-45 Modify Dialing Timeout Info

After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings.

3.5.11 Cue Tone



The image shows the 'Cue Tone' configuration interface. It has a title bar 'Cue Tone'. Below the title bar, there is a 'Language' dropdown menu set to 'Chinese' and a 'Save' button. Below this, there is an 'Upload' section. It contains the text 'Upload a file of cue tone', a dropdown menu set to 'File of cue tone for IVR', a 'Browse...' button, and an 'Upload' button. Below the 'Upload' button, there is a note: 'Note: The file should be a wav file with 8000Hz sampling rate, 16-bit mono, A-law formatted, and less than 100KB in size.'

Figure 3-46 Cue Tone Interface

See Figure 3-46 for the Cue Tone interface. The table below explains the items shown in the above figure.

Item	Description
Language	Sets the language for the gateway to play voice, including two options Chinese and English. The default setting is <i>Chinese</i> .
Upload a file of cue tone	Uploads a user-defined cue tone file to the gateway.

Click **Save** to save the above settings into the gateway.

3.5.12 Color Ring

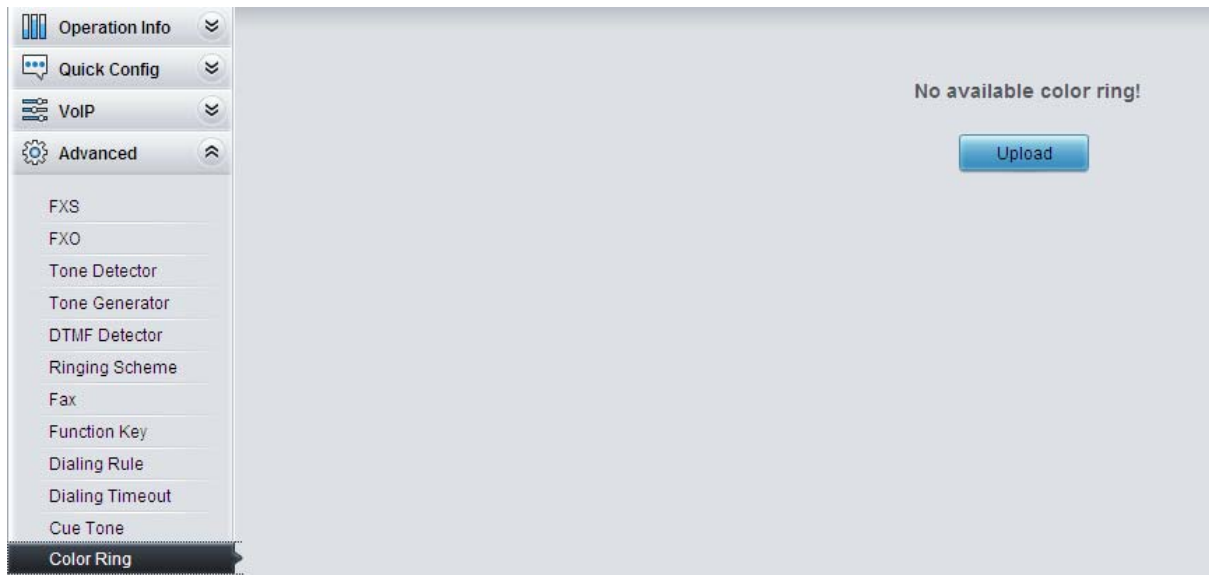


Figure 3-47 Coloring Ring Interface

By default, there is no available color ring on the gateway. See Figure 3-47. Click **Upload** to upload a new color ring manually. Follow Figure 3-48 to upload the required color ring file to the gateway.

Figure 3-48 Color Ring Upload Interface

The table below explains the items shown above:

Item	Description
Index	The unique index of each color ring to be uploaded.
Description	It is user-defined, with the default value of <i>default</i> .
Color Ring	The file of the color Ring to be uploaded.

After configuration, click **Upload** to upload the color ring file to the gateway or click **Return** to cancel the upload. See Figure 3-49 for the Color Ring Management interface after the upload.

Check	Index	Color Ring	Port	Modify
<input type="checkbox"/>	1	ringtone1	---	

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-49 Color Ring Management Interface

Click **Modify** in Figure 3-49 to modify the configuration of the color ring. See below for the color ring modification interface. The configuration items on this interface are the same as those on the **Color Ring Upload** interface.

Color Ring-Modify

Index: 1

Description: ringtone1

Upload: ☐

Figure 3-50 Color Ring Modification Interface

To delete a color ring, check the checkbox before the corresponding index in Figure 3-49 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all color rings at a time, click the **Clear All** button in Figure 3-50.

3.5.13 QoS

QoS

QoS ☒ Enable

Media Premium QoS: 46

Control Premium QoS: 26

Figure 3-51 Differentiated Services Setting Interface

See Figure 3-51 for the Differentiated Services setting interface. Using this technology, the gateway can meet various application requirements under a limited bandwidth and ensure neither delay nor discard for important services so as to improve its quality of services.

The table below explains the items shown in the above figure.

Item	Description
QoS	Sets whether to enable the QoS differentiated services. By default, it is disabled.

Media Premium QoS	Sets the priority of the media premium for QoS. A media premium QoS with a bigger value has a higher priority. The value range is 0~63, with the default value of 46.
Control Premium QoS	Sets the priority of the control premium for QoS. A control premium QoS with a bigger value has a higher priority. The value range is 0~63, with the default value of 26.

3.6 Port Settings

Port Settings includes three parts: **FXS**, **FXO** and **Port Group**. See Figure 3-52.



Figure 3-52 Port Settings

3.6.1 FXS

FXS Settings																			
Port	Type	SIP Account	Authentication Username	Auto Dial Num	Forbid Outgoing Call	DND	Forward	FWD Type	FWD Number	CD	Call Waiting	Reg Status	Echo Cancellation	Color Ring	Color Ring Index	Server Index	Input Gain	Output Gain	Modify
1	FXS	8001	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregistered	Enable	Disable	---	---	0	0	
2	FXS	8002	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregistered	Enable	Disable	---	---	0	0	
3	FXS	8003	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregistered	Enable	Disable	---	---	0	0	
4	FXS	8004	---	---	Disable	Disable	Disable	---	---	Enable	Disable	Unregistered	Enable	Disable	---	---	0	0	

Figure 3-53 FXS Settings Interface

See Figure 3-53 for the FXS settings interface. The list in the above figure shows the feature and properties of each FXS port. Click **Modify** in Figure 3-53 to modify the properties of the corresponding port. See Figure 3-54 for the FXS modification interface.

FXS-Modify

Port	<input style="width: 90%;" type="text" value="1"/>
Type	<input style="width: 90%;" type="text" value="FXS"/>
Register Port	<input style="width: 90%;" type="text" value="Yes"/>
SIP Account	<input style="width: 90%;" type="text" value="8001"/>
Password	<input style="width: 90%;" type="text"/>
Authentication Username	<input style="width: 90%;" type="text"/>
Server Index	<input style="width: 90%;" type="text" value="1:201.123.115.233"/>
Auto Dial Number <input style="width: 90%;" type="text"/>	
Wait Time before Auto Dial (s)	<input style="width: 90%;" type="text" value="0"/>
Input Gain (dB)	<input style="width: 90%;" type="text" value="0"/>
Output Gain (dB)	<input style="width: 90%;" type="text" value="0"/>
Echo Canceller	<input checked="" type="checkbox"/> Enable
Forbid Outgoing Call	<input type="checkbox"/> Enable
CID	<input checked="" type="checkbox"/> Enable
Call Waiting	<input type="checkbox"/> Enable
DND (Do Not Disturb)	<input type="checkbox"/> Enable
Call Forward	<input checked="" type="checkbox"/> Enable
Forward Type	<input style="width: 90%;" type="text" value="Unconditional"/>
Forward Number	<input style="width: 90%;" type="text"/>
Color Ring	<input checked="" type="checkbox"/> Enable
Color Ring Index	<input style="width: 90%;" type="text" value="1"/>
Advanced Configuration	<input checked="" type="checkbox"/> Enable
Talkback	<input checked="" type="checkbox"/> Enable
Bound Number	<input style="width: 90%;" type="text"/>

Note: 'Auto Dial Number' goes into effect only if no dialing occurs during 'Wait Time before Auto Dial'.

Figure 3-54 FXS Modification

The table below explains the configuration items on the FXS modification interface.

Item	Description
Port	Serial number of the FXS port on the device.
Type	Type of the port on the device (FXS). This item is not configurable.
Register Port	Sets whether to register the port to the SIP server. When this item is set to <i>No</i> , the item Reg Status on the FXS settings interface (Figure 3-53) shows <i>Unregistered</i> ; when this item is set to <i>Yes</i> , the item Reg Status shows <i>Failed</i> or <i>Registered</i> .

SIP Account	When the port initiates a call to SIP, this item corresponds to the username of SIP. The default SIP account is 80XX among which XX represents the corresponding port number. For example, the default SIP account corresponding to Port 1 is 8001, and that corresponding to Port 8 is 8008.
Password	Registration password of the port. To register a port to the SIP server, both items SIP Account and Password must be filled in.
Authentication Username	Authentication username of a port, used to register the port to the SIP server when IMS network is enabled. Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.
Server Index	The index of the SIP server which will be quoted by the current FXS port.
Auto Dial Number, Wait Time before Auto Dial	The FXS port will dial the Auto Dial Number if there is no dialing operation after pickup within a designated time period (i.e. Wait Time before Auto Dial).
Input Gain, Output Gain	Adjusts the gain of the voice input to/ output from the FXS port. Range of value: -24~12, calculated by dB, with the default value of 0.
Echo Canceller	The echo cancellation feature for a call conversation over the FXS channel. By default, this feature is enabled and the effect can reach 128ms.
Forbid Outgoing Call	If this feature is enabled, the FXS port will be forbidden to call out. The default setting is <i>disabled</i> .
CID	CallerID. If this feature is enabled, the FXS port will send the CallerID of the incoming IP call together with the ringing tone to the corresponding station. The default setting is <i>enabled</i> . CallerID displays digits only and will filter out any other characters if exist.
Call Waiting	If this feature is enabled, the FXS port in conversation can accept another call from IP and keep it in the waiting state. Once the current conversation is finished and the station hangs up, the call in the waiting state will ring the station and wait for answer. The default setting is <i>disabled</i> .
DND	Do Not Disturb. If this feature is enabled, the FXS port will reply the 403 message to reject all incoming calls. The default setting is <i>disabled</i> .
Call Forward	The automatic call forward feature for the FXS port. Once this feature is enabled, the FXS port will forward incoming IP calls according to FWD Type . Note: To enable this feature, do not put the FXS port into a port group with other ports. The default setting is <i>disabled</i> .

FWD Type	Forward conditions for the FXS port to forward incoming IP calls. The optional values are:	
	Option	Description
	<i>Unconditional</i>	The FXS port will forward all incoming IP calls to the preset FWD Num immediately when it receives them.
	<i>Busy</i>	The FXS port will forward incoming IP calls to the preset FWD Num if it is busy upon receiving them.
	<i>No Reply</i>	The FXS port will forward incoming IP calls to the preset FWD Num if the corresponding station does not answer them in a designated time period (i.e. Time for No Reply Forward). Only when this forward condition is selected does the configuration item Time for No Reply Forward become valid.
	This item is valid only when Call Forward is set to <i>Enable</i> .	
FWD Num	The number to which the incoming IP call is forwarded. If the Call Forward feature is enabled, this item can not be left empty.	
Color Ring	Sets whether to enable the color ring feature or not, with the default setting of being <i>disabled</i> . Note: Only when there are available color rings will this item appear.	
Color Ring Index	The index of the color ring which will be quoted by the current FXS port.	
Talkback	With this feature enabled and a number bound, the port can talkback to its bound number. That is, they can start a call with each other as soon as picking up the phone. The default setting is <i>disabled</i> . Note: This feature is only used in the case of channel registration.	
Bound Number	Sets the bound number for talkback.	

After configuration, click **Modify** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings.

Or you can click **Batch** to modify several pieces of FXS settings at the same time. See Figure 3-55 below for the FXS batch modification interface. The configuration items on this interface are the same as those on the FXS modification interface (Figure 3-54).

FXS-Batch Modify

Starting Port

Ending Port

Register Port

Starting SIP Account

Starting Authentication Password

Starting Authentication Username

Server Index

SIP Account Batch Rule

SIP Account Batch Step Size

Authentication Password Batch Rule

Authentication Password Batch Step Size

Authentication Username Batch Rule

Authentication Username Batch Step Size

Auto Dial Number

☒ Enable

Auto Dial Number

Wait Time before Auto Dial (s)

Input Gain (dB)

Output Gain (dB)

CID

☒ Enable

Echo Canceller

☒ Enable

Forbid Outgoing Call

☐ Enable

Call Waiting

☐ Enable

DND (Do Not Disturb)

☐ Enable

Call Forward

☒ Enable

Forward Type

Forward Number

Color Ring

☒ Enable

Color Ring Index

Note: 'Auto Dial Number' goes into effect only if no dialing occurs during 'Wait Time before Auto Dial'.

Figure 3-55 FXS Batch Modification


Some configuration items on this interface are the same as those on the **FXS Modification Interface**. The others are described in the table below.

Item	Description
Starting Port	The starting serial number of the FXS port on the device in the batch setting.
Ending Port	The ending serial number of the FXS port on the device in the batch setting.
Starting SIP Account	The starting SIP account in the batch setting.

Starting Authentication Password	The starting authentication password in the batch setting.
Starting Authentication Username	The starting authentication username in the batch setting.
SIP Account Batch Rule	The rule for batch setting the SIP account, including Increase and Decrease two options.
SIP Account Batch Step Size	Sets the increase or decrease step size of the SIP account in the batch setting.
Authentication Password Batch Rule	The rule for batch setting the authentication password, including Increase and Decrease two options.
Authentication Password Batch Step Size	Sets the increase or decrease step size of the authentication password in the batch setting.
Authentication Username Batch Rule	The rule for batch setting the authentication username, including Increase and Decrease two options.
Authentication Username Batch Step Size	Sets the increase or decrease step size of the authentication username in the batch setting.

After configuration, click **Modify** to save the settings into the gateway, or click **Cancel** to cancel the settings.


3.6.2 FXO

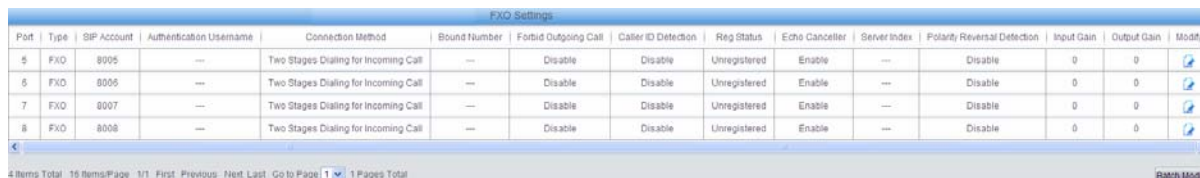

Port	Type	SIP Account	Authentication Username	Connection Method	Bound Number	Forbid Outgoing Call	Caller ID Detection	Reg Status	Echo Canceller	Server Index	Polarity Reversal Detection	Input Gain	Output Gain	Modify
5	FXO	8005	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enable	---	Disable	0	0	
6	FXO	8006	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enable	---	Disable	0	0	
7	FXO	8007	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enable	---	Disable	0	0	
8	FXO	8008	---	Two Stages Dialing for Incoming Call	---	Disable	Disable	Unregistered	Enable	---	Disable	0	0	

Figure 3-56 FXO Settings Interface

See Figure 3-56 for the FXO Settings interface. The list in the above figure shows the feature and properties of each FXO port. Click **Modify** in Figure 3-56 to modify the properties of the corresponding port. See Figure 3-57 for the FXO Modification interface.

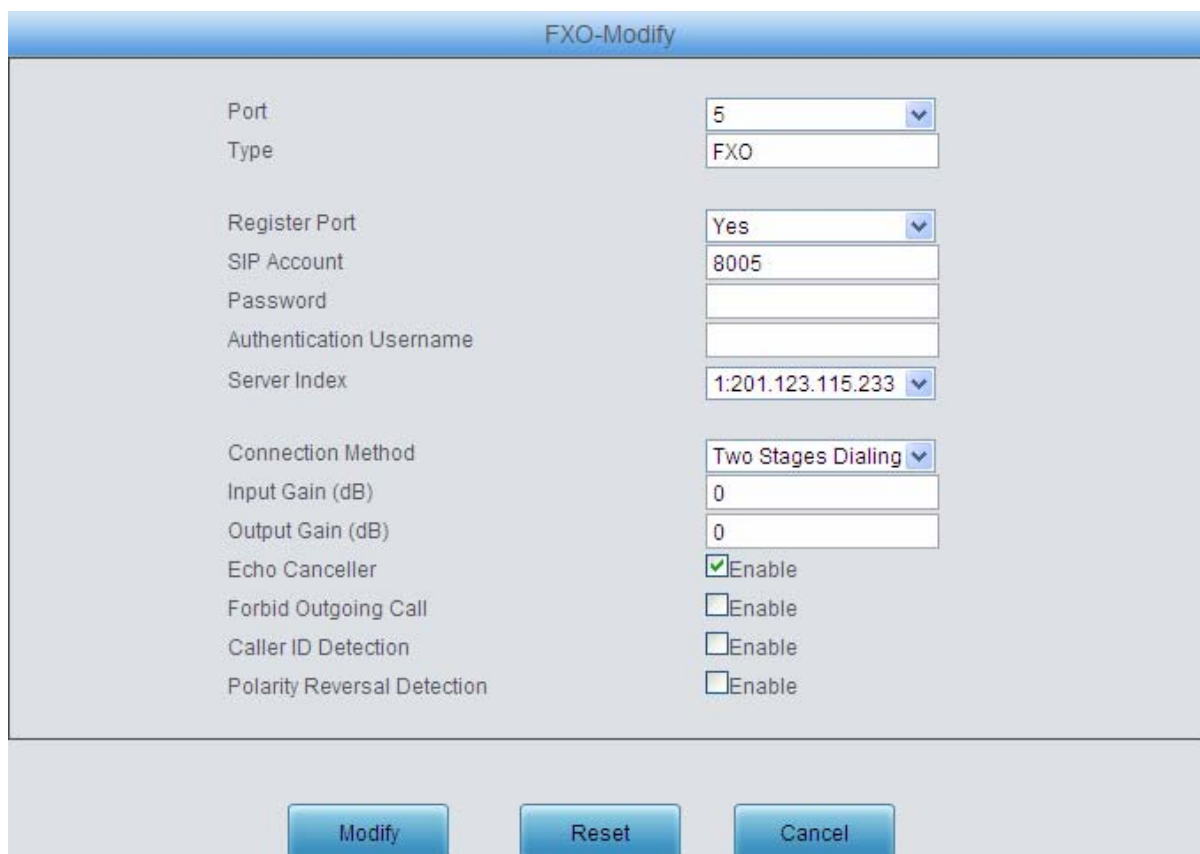

The image shows a software window titled "FXO-Modify". It contains several configuration fields:

- Port:** A dropdown menu with the value "5" selected.
- Type:** A text field containing "FXO".
- Register Port:** A dropdown menu with "Yes" selected.
- SIP Account:** A text field containing "8005".
- Password:** An empty text field.
- Authentication Username:** An empty text field.
- Server Index:** A dropdown menu with "1:201.123.115.233" selected.
- Connection Method:** A dropdown menu with "Two Stages Dialing" selected.
- Input Gain (dB):** A text field containing "0".
- Output Gain (dB):** A text field containing "0".
- Echo Canceller:** A checkbox that is checked, with the label "Enable".
- Forbid Outgoing Call:** An unchecked checkbox with the label "Enable".
- Caller ID Detection:** An unchecked checkbox with the label "Enable".
- Polarity Reversal Detection:** An unchecked checkbox with the label "Enable".

At the bottom of the window, there are three buttons: "Modify", "Reset", and "Cancel".

Figure 3-57 FXO Modification

The table below explains the configuration items on the FXO modification interface.

Item	Description
Port	Serial number of the FXO port on the device.
Type	Type of the port on the device (FXO). This item is not configurable.
Register Port	Sets whether to register the port to the SIP server. When this item is set to <i>No</i> , the item Reg Status on the FXO settings interface (Figure 3-56) shows <i>Unregistered</i> ; when this item is set to <i>Yes</i> , the item Reg Status shows <i>Failed</i> or <i>Registered</i> .
SIP Account	Registration account of an FXO port. The default SIP account is 80XX among which XX represents the corresponding port number. For example, the default SIP account corresponding to Port 1 is 8001, and that corresponding to Port 32 is 8032.
Password	Registration password of the port. To register a port to the SIP server, both items SIP Account and Password must be filled in.
Authentication Username	Authentication username of a port, used to register the port to the SIP server when IMS network is enabled. Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.
Server Index	The index of the SIP server which will be quoted by the current FXO port.

Connection Method	FXO connection methods include:	
	Option	Description
	<i>Static Binding</i>	Bind the number which corresponds to an FXS port to an FXO port. The number will be listed in the Bound Number column. This helps to achieve the corresponding binding between an FXO port and an FXS port (two-way).
	<i>Two Stages Dialing Mode (default)</i>	Under this mode, an incoming call from an FXO port will go into the IVR system. Then IVR will play a speech prompt "Please dial the extension number". If you fail to input the correct target station number before IVR finishes the third repeat of the prompt, the FXO will hang up the call automatically; otherwise, the corresponding station will ring.
Note: Both items Connection Method and Bound Number will be hidden if the SIP Station feature is enabled on the SIP Settings interface.		
Input Gain, Output Gain	Adjusts the gain of the voice input to/ output from the FXO port. Range of value: -24~12, calculated by dB, with the default value of 0.	
Echo Celler	The echo cancellation feature for a call conversation over the FXO channel. By default, this feature is enabled and the effect can reach 128ms.	
Forbid Outgoing Call	If this feature is enabled, the FXO port will be forbidden to call out. The default setting is <i>disabled</i> .	
Caller ID Detection	If this feature is enabled, the FXO port will detect the caller IDs from the incoming calls. The default setting is <i>disabled</i> .	
Polarity Reversal Detection	Once this feature is enabled, only when the FXO port detects the polarity reversal signal will the corresponding channel go into the talking state. The default setting is <i>disabled</i> . Note: This feature and the Two Stages Dialing feature cannot be enabled at the same time.	

After configuration, click **Modify** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings.

Or you can click **Batch** to modify several pieces of FXO settings at the same time. See Figure 3-58 below for the FXO Batch Modification interface. The configuration items on this interface are the same as those on the FXO Modification interface (Figure 3-57).

The screenshot shows the 'FXO-Batch Modify' configuration window. It contains the following fields and values:

- Starting Port: 5
- Ending Port: 8
- Register Port: Yes
- Starting SIP Account: (empty)
- Starting Authentication Password: (empty)
- Starting Authentication Username: (empty)
- Server Index: 1:201.123.115.233
- SIP Account Batch Rule: Increase
- SIP Account Batch Step Size: 1
- Authentication Password Batch Rule: Increase
- Authentication Password Batch Step Size: 1
- Authentication Username Batch Rule: Increase
- Authentication Username Batch Step Size: 1
- Connection Method: Two Stages Dialing
- Input Gain (dB): 0
- Output Gain (dB): 0
- Echo Canceller: ☒ Enable
- Forbid Outgoing Call: ☐ Enable
- Caller ID Detection: ☐ Enable
- Polarity Reversal Detection: ☐ Enable

At the bottom of the window are two buttons: 'Save' and 'Cancel'.

Figure 3-58 FXO Batch Modification

Some configuration items on this interface are the same as those on the **FXO Modification Interface**. The others are described in the table below.

Item	Description
Starting Port	The starting serial number of the FXO port on the device in the batch setting.
Ending Port	The ending serial number of the FXO port on the device in the batch setting.
Starting SIP Account	The starting SIP account in the batch setting.
Starting Authentication Password	The starting authentication password in the batch setting.
Starting Authentication Username	The starting authentication username in the batch setting.
SIP Account Batch Rule	The rule for batch setting the SIP account, including Increase and Decrease two options.
SIP Account Batch Step Size	Sets the increase or decrease step size of the SIP account in the batch setting.

Authentication Password Batch Rule	The rule for batch setting the authentication password, including Increase and Decrease two options.
Authentication Password Batch Step Size	Sets the increase or decrease step size of the authentication password in the batch setting.
Authentication Username Batch Rule	The rule for batch setting the authentication username, including Increase and Decrease two options.
Authentication Username Batch Step Size	Sets the increase or decrease step size of the authentication username in the batch setting.

After configuration, click **Save** to save the settings into the gateway, or click **Cancel** to cancel the settings.

3.6.3 Port Group

Port Group Settings									
Check	Index	Description	SIP Account	Authentication Username	Ports	Port Select Mode	Rule for Ringing by Turns	Timeout for Ringing by Turns (s)	Preemptive Answer
<input type="checkbox"/>	1	default	900	900	1,2,3,4	Increase	---	---	---

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-59 Port Group Settings Interface

See Figure 3-59 for the port group settings interface. A port group is a set containing single or multiple ports, used to specify such properties as **Port Selection** and **Authentication Mode** for all the ports in it. A new port group can be added by the **Add New** button on the bottom right corner of the above list. See Figure 3-60 for the port group adding interface. Note that a port which has been occupied by one port group cannot be chosen by others.

Port Group-Add

Index 2

Description default

Register Port Group YES

SIP Account

Password

Authentication Username

Server Index 1:201.123.115.233

Authentication Mode Do Not Register

Port Select Mode Ringing by Turns

Rule for Ringing by Turns 1,2,3,4,5,5

Timeout for Ringing by Turns (s) 20

Port

☐ Port 1(FXS) ☐ Port 2(FXS) ☐ Port 3(FXS) ☐ Port 4(FXS)
☐ Port 5(FXO) ☐ Port 6(FXO) ☐ Port 7(FXO) ☐ Port 8(FXO)

Check All

Inverse

Check All FXO Ports

Check All FXS Ports

Save

Cancel

Figure 3-60 Add New Port Group

The table below explains the items in the above figure.

Item	Description
Index	The unique index of each port group, which is mainly used in the configuration of routing rules and number manipulation rules to correspond to port groups.
Description	More information about each port group, with default value of <i>default</i> .
Register Port Group	To register the port group to the SIP server. Only when this configuration item is set to Yes can you see the configuration items SIP Account and Password .
SIP Account	When the port group initiates a call to SIP, this item corresponds to the username of SIP.
Password	Registration password of the port group. To register the port group to the SIP server, both configuration items SIP Account and Password should be filled in.
Authentication Username	Authentication username of a port, used to register the port to the SIP server when IMS network is enabled. Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.
Server Index	The index of the sip server which will be quoted by the current FXS port.

Authentication Mode	Sets the way for SIP to make outgoing calls (Tel→IP) on the gateway.	
	Option	Description
	<i>Do Not Register (default)</i>	SIP initiates a call in a point-to-point mode.
	<i>Register Gateway</i>	SIP initiates a call with the registered SIP account and password of the whole gateway. (Refer to 3.4.1 SIP for gateway registration.)
	<i>Register Port Group</i>	SIP initiates a call with the registered SIP account and password of the port group.
	<i>Register Port</i>	SIP initiates a call with the registered SIP account and password of the port.
Register Status	Registration status of the port group. When Register Port Group is set to <i>No</i> , the value of this item is <i>Unregistered</i> ; when Register Port Group is set to <i>Yes</i> , the value of this item may be <i>Failed</i> or <i>Registered</i> .	

Port Select Mode	When the port group receives a call, it will choose a port based on the select mode set by this configuration item to ring or to connect. The optional values and their corresponding meanings are described in the table below.														
	<table><tr><th>Option</th><th>Description</th></tr><tr><td><i>Increase (default)</i></td><td>Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Decrease</i></td><td>Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Cyclic Increase</i></td><td>Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Cyclic Decrease</i></td><td>Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Group Ringing</i></td><td>Ring all the idle FXS ports in this port group.</td></tr><tr><td><i>Ringing by Turns</i></td><td>Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-60. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20.</td></tr></table>	Option	Description	<i>Increase (default)</i>	Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.	<i>Decrease</i>	Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.	<i>Cyclic Increase</i>	Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.	<i>Cyclic Decrease</i>	Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.	<i>Group Ringing</i>	Ring all the idle FXS ports in this port group.	<i>Ringing by Turns</i>	Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-60. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20.
	Option	Description													
	<i>Increase (default)</i>	Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.													
	<i>Decrease</i>	Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.													
	<i>Cyclic Increase</i>	Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.													
	<i>Cyclic Decrease</i>	Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.													
<i>Group Ringing</i>	Ring all the idle FXS ports in this port group.														
<i>Ringing by Turns</i>	Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-60. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20.														
Preemptive Answer Keyboard Shortcut	<p>When a channel in a port group is ringing, another channel in the same port group can press the keyboard shortcut set by this item to transfer the call from the ringing channel to the current channel.</p> <p>Note: This item will become invalid if the gateway works under the port select mode <i>Group Ringing</i> or <i>Ringing by Turns</i>.</p>														
Port	The ports in the port group. If the checkbox before a port is grey, it indicates that the port is not available or has been occupied. All selected ports for a port group will be displayed in the Ports column in Figure 3-59. Note: When a port group contains multiple ports, the automatic call forward feature is invalid.														

After configuration, click **Save** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings. **Check All** means to select all available ports on the current page; **Inverse** means to uncheck the selected items and check the unselected. **Check All FXO Ports** means to select all available FXO ports on the current page; **Check All FXS Ports** means to select all available FXS ports on the current page.

Click **Modify** at the end of the list in **Port Group Settings Interface** to modify the properties of a port group. See Figure 3-61 for the port group modification interface. The configuration items on this interface are the same as those on the **Add New Port Group** interface.

Figure 3-61 Modify Port Group


To delete a port group, check the checkbox before the corresponding index in Figure 3-59 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all port groups at a time, click the **Clear All** button in Figure 3-59.

3.7 Route Settings

Route Settings is used to specify the routing rules for calls on two directions: IP→Tel and Tel→IP. See Figure 3-62.

Figure 3-62 Route Settings

3.7.1 Routing Parameters

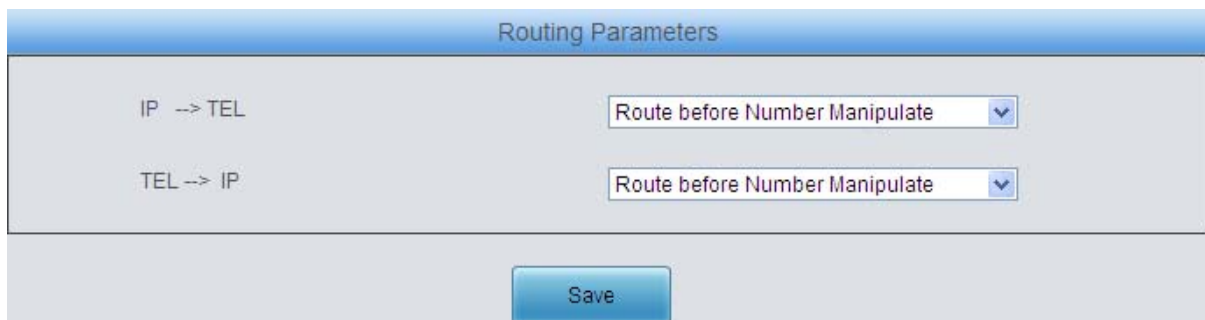

The figure shows a web-based configuration interface titled "Routing Parameters". It contains two rows of configuration options. The first row is for "IP --> TEL" and the second row is for "TEL --> IP". Each row has a dropdown menu with the text "Route before Number Manipulate". Below these rows is a blue "Save" button.

Figure 3-63 Routing Parameters Configuration Interface

See Figure 3-63 for the routing parameters configuration interface. On this interface, you can set the routing rules for calls respectively on two directions IP→Tel and Tel→IP to be routing before or after number manipulation. The default value is *Route before Number Manipulate*.

After configuration, click **Save** to save the above settings into the gateway.

3.7.2 IP to Tel



The figure shows a web-based configuration interface for "IP to Tel" routing rules. On the left is a sidebar menu with options: Operation Info, Quick Config, VoIP, Advanced, Port, Route, Routing Parameters, IP-->Tel (selected), and Tel-->IP. The main area has two tabs: "Standard Mode" (selected) and "Character Mode". Below the tabs, it says "No available routing rule!" and there is a blue "Add New" button.

Figure 3-64 IP→Tel Routing Rule Configuration Interface (Standard)

See Figure 3-64 for the IP→Tel routing rule configuration interface. By default, there is no available routing rule on the gateway. The IP→Tel routing rule configuration has two modes: Standard and Character.

Under the Standard mode, click **Add New** to add them manually. See Figure 3-65. You may use the default values of all the configuration items herein.

Figure 3-65 Add New Routing Rule (IP→Tel)

The table below explains the items shown in the above figure.

Item	Description
Index	The unique index of each routing rule, which denotes its priority. A routing rule with a smaller index value has a higher priority. If a call matches several routing rules, it will be processed according to the one with the highest priority.
Description	More information about each routing rule, with the default value of <i>default</i> .
Source IP	IP address from where the call is initiated. This item can be set to a specific IP address or "*" which indicates any IP address
CallerID Prefix, CalleelD Prefix	A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by []. '[]' represents a character within the range it defines. Values in [] only can be characters '0~9', "[*]", "#", punctuations '-' and ',' ('-' is used between two characters to indicates any character between these two characters. ',' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with Source IP specify a routing rule for calls. Note: "[*]" represents TFM symbol *, while "*" represents any string.
Route by Number	When this feature is enabled, the gateway will route a call from IP to a corresponding port based on its number. And the number of the port which this call will be routed to can be set via the item SIP Account on the FXS or FXO Settings interface. In such case, the configuration item Call Destination goes invalid and shows <i>Route by Number</i> on the routing rule configuration interface. The default setting is <i>disabled</i> .

Call Destination

Port group to which the call will be routed.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

See Figure 3-66 for the IP→Tel routing rule configuration interface after your configuration. There is a rule displayed with Index 63 and Call Destination 'Route by Number', having no restriction on Source IP, CallerID Prefix and CalleeID Prefix, which indicates the gateway will route a call from any IP address to a corresponding port based on its number.

Press the **Add New** button on the bottom right corner of the list to add a new routing rule.

IP->Tel Routing Rule							
Check	Index	Source IP	CallerID Prefix	CalleeID Prefix	Call Destination	Description	Modify
<input type="checkbox"/>	63	*	*	*	Route by Number	default	
<div> <input type="button" value="Check All"/> <input type="button" value="Uncheck All"/> <input type="button" value="Inverse"/> <input type="button" value="Delete"/> <input type="button" value="Clear All"/> <input type="button" value="Add New"/> </div>							
1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page <input type="text" value="1"/> 1 Pages Total							

Figure 3-66 IP→Tel Routing Rule Configuration Interface

Click **Modify** in Figure 3-66 to modify a routing rule. The configuration items on the IP→Tel routing rule modification interface are the same as those on the **Add New Routing Rule (IP→Tel)** interface. Note that the item **Index** cannot be modified.

To delete a routing rule, check the checkbox before the corresponding index in Figure 3-66 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all routing rules at a time, click the **Clear All** button in Figure 3-66.

See Figure 3-67 for the IP→Tel Routing Rule Configuration Interface under the Character mode. You can edit the routing rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode
Character Mode

IP->Tel Routing Rule

Note: The routing information contains such fields as Source IP, CallerID Prefix, CalleeID Prefix, Route by Number, Destination Port Group and Description.

The priority decreases from top to bottom; adjacent fields are separated by a space

Symbol * in Source IP, CallerID Prefix and CalleeID Prefix indicates any IP address or string; When Route by Number is set to 1, the Destination Port Group will be enabled.

Don't forget to save the configuration after your modification!

***00 default

1 Items Total

Save

Figure 3-67 IP→Tel Routing Rule Configuration Interface (Character)

3.7.3 Tel to IP



Figure 3-68 Tel→IP Routing Rule Configuration Interface (Standard)

See Figure 3-68 for the Tel→IP routing rule configuration interface. By default, there is no available routing rule on the gateway. The Tel→IP routing rule configuration has two modes: Standard and Character.

Under the Standard mode, click **Add New** to add them manually. See Figure 3-69. You may use the default values of all the configuration items herein except for **Destination IP** and **Destination Port**.

Figure 3-69 Add New Routing Rule (Tel→IP)

The table below explains the items shown in the above figure.

Item	Description
Index	The unique index of each routing rule, which denotes its priority. A routing rule with a smaller index value has a higher priority. If a call matches several routing rules, it will be processed according to the one with the highest priority.
Description	More information about each routing rule, with the default value of <i>default</i> .

Source Port Group (Call Initiator)	Port group from which the call is initiated. This item can be set to a specific port group or "*" which indicates any port group.
CallerID Prefix, CalleelD Prefix	A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or characters ranges defined by []. '[]' represents a character within the range it defines. Values in [] only can be digits '0~9', "[*]", "#", punctuations '-' and ','; '-' is used between two characters to indicates any characters between these two characters. ',' is used to separate characters or characters ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with Source Port Group (Call Initiator) specify a routing rule for calls. Note: "[*]" represents DTFM symbol *, while "*" represents any string.
Destination IP, Destination Port	IP address and port number of the remote end to which the call will be routed.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

See Figure 3-70 for the Tel→IP routing rule configuration interface after your configuration. There is a rule displayed with Index 63, Destination IP '192.168.1.101' and Destination Port '5060' (i.e. default IP address and port of the gateway), having no restriction on Call Initiator, CallerID Prefix and CalleelD Prefix, which indicates all the outgoing calls from Tel which conform to the dialing rule will be routed to the gateway.


Tel→IP Routing Rule								
Check	Index	Call Initiator	CallerID Prefix	CalleelD Prefix	Destination IP	Destination Port	Description	Modify
<input type="checkbox"/>	63	*	*	*	192.168.1.101	5060	default	
<div> <input type="button" value="Check All"/> <input type="button" value="Uncheck All"/> <input type="button" value="Inverse"/> <input type="button" value="Delete"/> <input type="button" value="Clear All"/> <input type="button" value="Add New"/> </div>								
1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total								

Figure 3-70 Tel→IP Routing Rule Configuration Interface

Click **Modify** in Figure 3-70 to modify a routing rule. The configuration items on the Tel→IP routing rule modification interface are the same as those on the **Add New Routing Rule (Tel→IP)** interface. Note that the item **Index** cannot be modified.

To delete a routing rule, check the checkbox before the corresponding index in Figure 3-70 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all routing rules at a time, click the **Clear All** button in Figure 3-70.

See Figure 3-71 for the Tel→IP Routing Rule Configuration Interface under the Character mode. You can edit the routing rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode | Character Mode

Tel->IP Routing Rule

Note: The routing information contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Destination IP, Destination Port and Description
 The priority decreases from top to bottom; adjacent fields are separated by a space
 CallerID Prefix, CalleeID Prefix, Destination IP Symbol * indicates any character; Source Port Group set to 0 denotes any port group.
 Don't forget to save the configuration after your modification!

0 * * * 0 default

1 Items Total

Save

Figure 3-71 Tel->IP Routing Rule Configuration Interface (Character)

3.8 Number Manipulation

Number Manipulation includes four parts: **IP->Tel CallerID**, **IP->Tel CalleeID**, **Tel->IP CallerID** and **Tel->IP CalleeID**. See Figure 3-72.

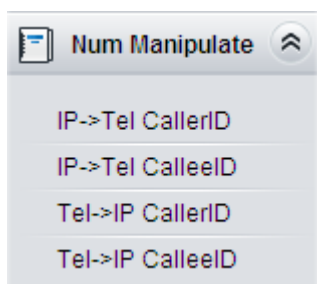


Figure 3-72 Number Manipulation

3.8.1 IP to Tel CallerID

Standard Mode | Character Mode

IP->Tel CallerID Number Manipulation Rule

Check	Index	Call Initiator	CallerID Prefix	CalleeID Prefix	Stripped Digits from Left	Stripped Digits from Right	Reserved Digits from Right	Prefix to Add	Suffix to Add	Description	Modify
<input type="checkbox"/>	63	*	*	*	0	0	20			default	

Check All | Uncheck All | Inverse | Delete | Clear All | Add New

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-73 IP->Tel CallerID Manipulation Interface (Standard)

See Figure 3-73 for the IP->Tel CallerID manipulation interface under the Standard mode. A new number manipulation rule can be added by the **Add New** button on the bottom right corner of the list in the above figure. See Figure 3-74 for the IP->Tel CallerID manipulation rule adding interface. You may use the default values of all the configuration items herein.

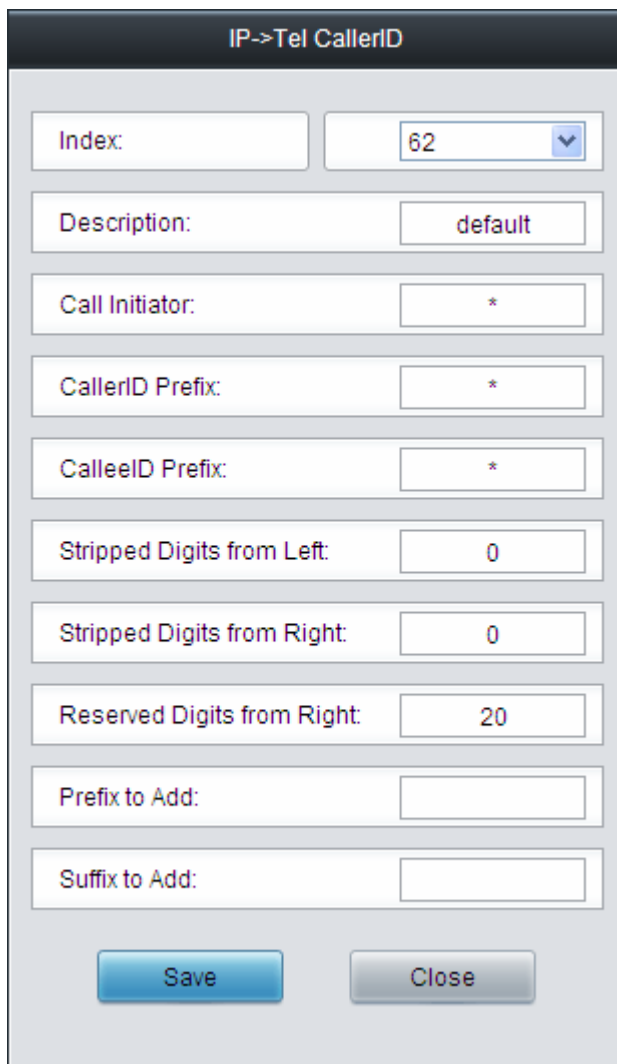


Figure 3-74 Add IP→Tel CallerID Manipulation Rule

The table below explains the items shown in the above figure.


Item	Description
<i>Index</i>	The unique index of each number manipulation rule, which denotes its priority. A number manipulation rule with a smaller index value has a higher priority. If a call matches several number manipulation rules, it will be processed according to the one with the highest priority.
<i>Description</i>	More information about each number manipulation rule, with the default value of <i>default</i> .
<i>Call Initiator</i>	IP address from where the call is initiated. This item can be set to a specific IP address or "*" which indicates any IP address.

CallerID Prefix, CalleeID Prefix	<p>A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by []. '[' represents a character within the range it defines. Values in [] only can be digits '0~9', "[*]", "#", punctuations '-' and ',' . ('-' is used between two characters to indicates any character between these two characters. ',' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with Call Initiator specify a number manipulation rule for calls.</p> <p>Note: "[*]" represents DTFM symbol *, while "*" represents any string.</p>
Stripped Digits from Left	The amount of digits to be deleted from the left end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.
Stripped Digits from Right	The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.
Reserved Digits from Right	The amount of digits to be reserved from the right end of the number. Only when the value of this item is less than the length of the current number will some digits be deleted from left; otherwise, the number will not be manipulated. The default value is 20.
Prefix to Add	Designated information to be added to the left end of the current number.
Suffix to Add	Designated information to be added to the right end of the current number.

Note: The number manipulation is performed in 5 steps by the order of the following configuration items: **Stripped Digits from Left**, **Stripped Digits from Right**, **Reserved Digits from Right**, **Prefix to Add** and **Suffix to Add**.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-73 to modify a number manipulation rule. See Figure 3-75 for the IP→Tel CallerID manipulation rule modification interface. The configuration items on this interface are the same as those on the **Add IP→Tel CallerID Manipulation Rule** interface. Note that the item **Index** cannot be modified.

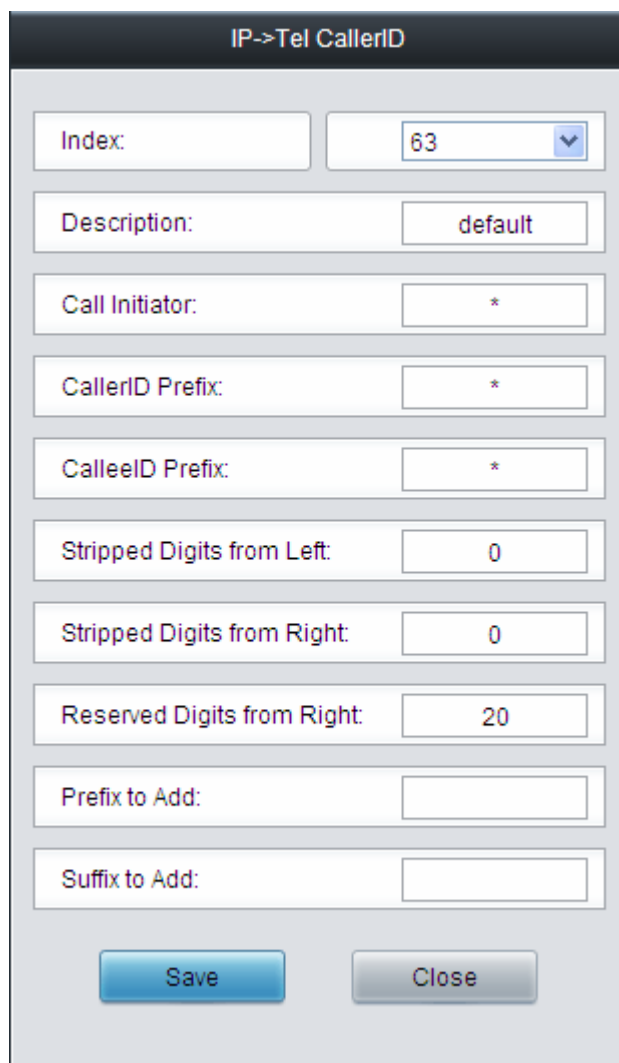

The image shows a configuration window titled "IP->Tel CallerID". It contains several input fields and buttons:

- Index:** A dropdown menu showing "63".
- Description:** A text field containing "default".
- Call Initiator:** A text field containing "*".
- CallerID Prefix:** A text field containing "*".
- CalleeID Prefix:** A text field containing "*".
- Stripped Digits from Left:** A text field containing "0".
- Stripped Digits from Right:** A text field containing "0".
- Reserved Digits from Right:** A text field containing "20".
- Prefix to Add:** An empty text field.
- Suffix to Add:** An empty text field.
- Buttons:** "Save" and "Close" buttons at the bottom.

Figure 3-75 Modify IP→Tel CallerID Manipulation Rule

To delete a number manipulation rule, check the checkbox before the corresponding index in Figure 3-73 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all number manipulation rules at a time, click the **Clear All** button in Figure 3-73.

See Figure 3-76 for the IP→Tel CallerID Manipulation Interface under the Character mode. You can edit the number manipulation rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode Character Mode

IP->Tel CallerID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Call Initiator, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description
 The priority decreases from top to bottom; by default, the rule will be inserted to the end after you click 'Add'. If you want to increase its priority, please copy it to the corresponding position.
 Adjacent fields are separated by a space; Symbol * in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.
 Don't forget to save the configuration after your modification!

*** 0 0 20 <@#> <@#> default

1Items Total

Save

Figure 3-76 IP→Tel CallerID Manipulation Interface (Character)

3.8.2 IP to Tel CalleeID

The number manipulation process for IP→Tel CalleeID is almost the same as that for IP→Tel CallerID; only the number to be manipulated changes from CallerID to CalleeID. See, Figure 3-78 for IP→Tel CalleeID manipulation interface. The configuration items on this interface are the same as those on **IP→Tel CallerID Manipulation Interface** (Figure 3-73).

Standard Mode Character Mode

IP->Tel CalleeID Number Manipulation Rule

Check	Index	Call Initiator	CallerID Prefix	CalleeID Prefix	Stripped Digits from Left	Stripped Digits from Right	Reserved Digits from Right	Prefix to Add	Suffix to Add	Description	Modify
<input type="checkbox"/>	63	*	*	*	0	0	20			default	

Check All Uncheck All Inverse Delete Clear All Add New

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-77 IP→Tel CalleeID Manipulation Interface(Standard)

Standard Mode Character Mode

IP->Tel CalleeID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Call Initiator, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description
 The priority decreases from top to bottom; by default, the rule will be inserted to the end after you click 'Add'. If you want to increase its priority, please copy it to the corresponding position.
 Adjacent fields are separated by a space; Symbol * in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.
 Don't forget to save the configuration after your modification!

*** 0 0 20 <@#> <@#> default

1Items Total

Save

Figure 3-78 IP→Tel CalleeID Manipulation Interface (Character)

3.8.3 Tel to IP CallerID

Tel->IP CallerID Number Manipulation Rule											
Check	Index	Call Initiator	CallerID Prefix	CalleeID Prefix	Stripped Digits from Left	Stripped Digits from Right	Reserved Digits from Right	Prefix to Add	Suffix to Add	Description	Modify
<input type="checkbox"/>	63	*	*	*	0	0	20			default	

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-79 Tel→IP CallerID Manipulation Interface (Standard)

See Figure 3-79 for the Tel→IP CallerID manipulation interface under the Standard mode. A new number manipulation rule can be added by the **Add New** button on the bottom right corner of the list in the above figure. See Figure 3-80 for the Tel→IP CallerID manipulation rule adding interface. You may use the default values of all the other configuration items herein.

Tel->IP CallerID

Index:

62

Description:

default

Source Port Group:

*

CallerID Prefix:

*

CalleeID Prefix:

*

Stripped Digits from Left:

0

Stripped Digits from Right:

0

Reserved Digits from Right:

20

Prefix to Add:

Suffix to Add:

Figure 3-80 Add Tel→IP CallerID Manipulation Rule

The table below explains the items shown in the above figure.

Item	Description
Index	The unique index of each number manipulation rule, which denotes its priority. A number manipulation rule with a smaller index value has a higher priority. If a call

	matches several number manipulation rules, it will be processed according to the one with the highest priority.
Description	More information about each number manipulation rule, with the default value of <i>default</i> .
Source Port Group (Call Initiator)	Port group from which the call is initiated. This item can be set to a specific port group or '*' which indicates any port group.
CallerID Prefix, CalleeID Prefix	A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by []. '[' represents a character within the range it defines. Values in [] only can be digits '0~9', "[*]", "#", punctuations '-' and ';'. '-' is used between two characters to indicates any character between these two characters. ';' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with Call Initiator specify a number manipulation rule for calls. Note: "[*]" represents DTFM symbol *, while "*" represents any string.
Stripped Digits from Left	The amount of digits to be deleted from the left end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.
Stripped Digits from Right	The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.
Reserved Digits from Right	The amount of digits to be reserved from the right end of the number. Only when the value of this item is less than the length of the current number will some digits be deleted from left; otherwise, the number will not be manipulated. The default value is 20.
Prefix to Add	Designated information to be added to the left end of the current number.
Suffix to Add	Designated information to be added to the right end of the current number.

Note: The number manipulation is performed in 5 steps by the order of the following configuration items: **Stripped Digits from Left**, **Stripped Digits from Right**, **Reserved Digits from Right**, **Prefix to Add** and **Suffix to Add**.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-79 to modify a number manipulation rule. See Figure 3-81 for the Tel→IP CallerID manipulation rule modification interface. The configuration items on this interface are the same as those on the **Add Tel→IP CallerID Manipulation Rule** interface. Note that the item **Index** cannot be modified.

Tel->IP CallerID

Index:

63

Description:

default

Source Port Group:

*

CallerID Prefix:

*

CalleeID Prefix:

*

Stripped Digits from Left:

0

Stripped Digits from Right:

0

Reserved Digits from Right:

20

Prefix to Add:

Suffix to Add:

Save

Close

Figure 3-81 Modify Tel→IP CallerID Manipulation Rule

To delete a number manipulation rule, check the checkbox before the corresponding index in Figure 3-79 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all number manipulation rules at a time, click the **Clear All** button in Figure 3-79.

See Figure 3-82 for the Tel→IP CallerID Manipulation Interface under the Character mode. You can edit the number manipulation rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode Character Mode

Tel→IP CallerID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description
The priority decreases from top to bottom; Adjacent fields are separated by a space.
Symbol * in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.
Don't forget to save the configuration after your modification!

0 * * 0 0 20 <@#> <@#> default

1 Items Total

Save

Figure 3-82 Tel→IP CallerID Manipulation Interface (Character)

3.8.4 Tel to IP CalleeID

The number manipulation process for Tel→IP CalleeID is almost the same as that for Tel→IP CallerID; only the number to be manipulated changes from CallerID to CalleeID. See Figure 3-83, Figure 3-84 for the Tel→IP CalleeID manipulation interface. The configuration items on this interface are the same as those on **Tel→IP CallerID Manipulation Interface** (Figure 3-79).

Standard Mode Character Mode

Tel→IP CalleeID Number Manipulation Rule

Check	Index	Call Initiator	CallerID Prefix	CalleeID Prefix	Stripped Digits from Left	Stripped Digits from Right	Reserved Digits from Right	Prefix to Add	Suffix to Add	Description	Modify
<input type="checkbox"/>	63	*	*	*	0	0	20			default	

Check All Uncheck All Inverse Delete Clear All Add New

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-83 Tel→IP CalleeID Manipulation Interface (Standard)

Standard Mode Character Mode

Tel→IP CalleeID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description
The priority decreases from top to bottom; Adjacent fields are separated by a space.
Symbol * in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.
Don't forget to save the configuration after your modification!

0 * * 0 0 20 <@#> <@#> default

1 Items Total

Save

Figure 3-84 Tel→IP CalleeID Manipulation Interface (Character)

3.9 System Tools

System Tools is mainly for gateway maintenance. It provides such features as IP modification, data backup and connectivity check. See Figure 3-85 for details.



Figure 3-85 System Tools

3.9.1 Management

The screenshot shows the 'Management Parameters' configuration window. It is organized into four main sections, each with its own set of parameters:

- WEB Management:**
 - WEB Port:** A text input field containing the value '80'.
 - Access Setting:** A dropdown menu currently set to 'Allow All IPs'.
- SYSLOG Parameters:**
 - SYSLOG:** Radio buttons for 'Yes' (selected) and 'No'.
 - Server Address:** A text input field containing '201.123.115.20'.
 - SYSLOG Level:** A dropdown menu currently set to 'INFO'.
- CDR Parameters:**
 - Send CDR:** Radio buttons for 'Yes' (selected) and 'No'.
 - Server Address:** A text input field containing '127.0.0.1'.
 - Server Port:** A text input field containing '3'.
- Time Parameters:**
 - NTP:** Radio buttons for 'Yes' (selected) and 'No'.
 - NTP Server Address:** A text input field containing 'time.nist.gov'.
 - Synchronizing Cycle:** A text input field containing '3600'.
 - Daily Restart:** Radio buttons for 'Yes' (selected) and 'No'.
 - Restart Time:** Two dropdown menus for hours and minutes, both set to '0'.
 - System Time:** A checkbox labeled 'Modify' followed by a timestamp '2015-11-09 15:20:54'.
 - Time Zone:** A dropdown menu currently set to 'GMT+8:00 (Beijing, Singapore, Taipei, Kual...'.

At the bottom of the window, there are two buttons: 'Save' and 'Reset'.

Figure 3-86 Management Parameters Setting Interface

See Figure 3-86 for the Management Parameters Setting interface. The table below explains the items shown in the above figure.

Item	Description
WEB Port	The port which is used to access the gateway via WEB. The default value is 80.
Access Setting	Sets the IP addresses which can access the gateway via WEB. By default, all IPs are allowed. You can set an IP whitelist to allow all IPs within it to access the gateway freely. Also can set an IP blacklist to forbid all IPs within it to access the gateway.
SYSLOG	Sets whether to enable SYSLOG. It is required to fill in SYSLOG Server Address and SYSLOG Level in case SYSLOG is enabled. By default, SYSLOG is disabled.
Server Address	Sets the SYSLOG server address for log reception.
SYSLOG Level	Sets the SYSLOG level. There are three options: <i>ERROR</i> , <i>WARNING</i> , <i>INFO</i> and <i>DEBUG</i> . The default value is <i>INFO</i> .
Send CDR	Sets whether to enable the feature of sending CDR. It is required to fill in Server Address and Server Port in case Send CDR is enabled. By default, Send CDR is disabled.

Server Address	The address of the server to receive CDR.
Server Port	The port of the server to receive CDR.
NTP	Sets whether to enable the NTP time synchronization feature. It is required to fill in NTP Server Address , Synchronizing Cycle and Time Zone in case NTP is enabled. By default, NTP is enabled.
NTP Server Address	Sets the Server address for NTP time synchronization. By default, the address is time.nist.gov
Synchronizing Cycle	Sets the cycle for NTP time synchronization, calculated by s, with the default value of 3600.
Daily Restart	Sets whether to restart the gateway regularly every day at the preset Restart Time . By default, this feature is disabled.
Restart Time	Sets the time to restart the gateway regularly.
System Time	The system time. Check the checkbox before Modify and change the time in the edit box when NTP is disabled.
Time Zone	The time zone of the gateway.

3.9.2 Network

Network Settings

Network Type: Static

IP Address (I): 192.168.1.101

Subnet Mask (U): 255.255.255.0

Default Gateway (D): 192.168.1.1

DNS Server (P): 0.0.0.0

Speed and Duplex Mode: Automatic Detection

Save Reset

Note: The service will be restarted automatically after saving the current setting. Please log in again using your new IP address if the IP address has been modified!

Figure 3-87 Network Settings Interface

See Figure 3-87 for the network settings interface. A gateway has only one LAN, which can be configured with network type, IP address, subnet mask, default gateway and DNS server. Network Type has two options: Static and DHCP.

After configuration, click **Save** to save the above settings into the gateway or click **Reset** to restore the configurations. After changing the IP address, you shall log in the gateway again using your new IP address.

3.9.3 Upgrade

Current Version	
Serial Num	00001678
WEB	Version 1.1.0_2016022914
Service	Version 1.1.0_2016022914
U-boot	Version Jul 07 2015-14:25:52
Kernel	Version #186 Fri Jul 17 08:56:54 PDT 2015
Product Type	1008B-4S40(RJ11)

Select an Update File

Figure 3-88 Upgrade Interface

See Figure 3-88 for the upgrade interface where you can upgrade the WEB, gateway service, kernel and firmware to new versions. Select the upgrade package “*.tar.gz” (The gateway will do MD5 verification before upgrading and will not start to upgrade until it passes the verification.) via **Browse...** and click **Update**. Then the file uploading interface will appear. See Figure 3-89.

Current Version	
Serial Num	00001678
WEB	Version 1.1.0_2016022914
Service	Version 1.1.0_2016022914
U-boot	Version Jul 07 2015-14:25:52
Kernel	Version #186 Fri Jul 17 08:56:54 PDT 2015
Product Type	1008B-4S40(RJ11)

Select an Update File

42%

The file is uploading. Please do not leave this page!....

Upgrade Information

start upload upgrade file...

Figure 3-89 File Uploading Interface

After a successful uploading of the file, the gateway will start to upgrade the system. See Figure 3-90 and you can learn the detailed upgrading information from the upgrade information box at the bottom.

The screenshot displays the 'System Upgrading Interface'. At the top, a table titled 'Current Version' lists the following information:

Current Version	
Serial Num	00001678
WEB	Version 1.1.0_2016022914
Service	Version 1.1.0_2016022914
U-boot	Version Jul 07 2015-14:25:52
Kernel	Version #186 Fri Jul 17 08:56:54 PDT 2015
Product Type	1008B-4S40(RJ11)

Below the table is a 'Select an Update File' section with a text input field containing 'C:\Documents and Sett' and a 'Browse ...' button. Underneath are two buttons: 'Update' and 'Reset'.

A blue banner indicates 'Upload completion!'. Below this is a progress bar showing '11%' completion.

A message states: 'System updating, please do not leave this page!.....'.

The 'Upgrade Information' section contains a scrollable text box with the following commands:

```
kill -9 942...
SmgMonitor pid=
SMGSvr pid=
DbgSvr pid=942
943
944
945
do killall DbgSvr
copy package file to storage...
```

Figure 3-90 System Upgrading Interface

Note that clicking **Reset** can only delete the selected update file but not cancel the operation of **Update**.

Note: Please contact our technicians if you need to downgrade the gateway to an old version. An improper operation may cause unexpected problems.

3.9.4 Signaling Capture

The screenshot shows the 'Packet Capture' interface. It features two sections for configuration:

- Signaling Packet Capture:** A dropdown menu is set to 'SIP&Syslog'.
- RTP Packet Capture:** A dropdown menu is set to 'RTP Port Range' with a text input field containing '50000,50767'.

At the bottom right, there are two buttons: 'Start' and 'Stop'.

Figure 3-91 Signaling Capture Interface

See Figure 3-91 for the Signaling Capture interface. Packet capture contains Signaling Packet Capture and RTP Packet Capture. You can select either of them to start the capture according to your requirement. Click **Start** to start capturing packets. Click **Stop** to stop the capture and download the captured packets.

3.9.5 Data Recording



Figure 3-92 Data Recording Interface

See Figure 3-92 for the Debug & Record interface. You can select a channel and the recording mode to start the data recording. Click **Start** to start the corresponding recording. Click **Stop** to stop the recording and download the recorded file.

3.9.6 Call Log

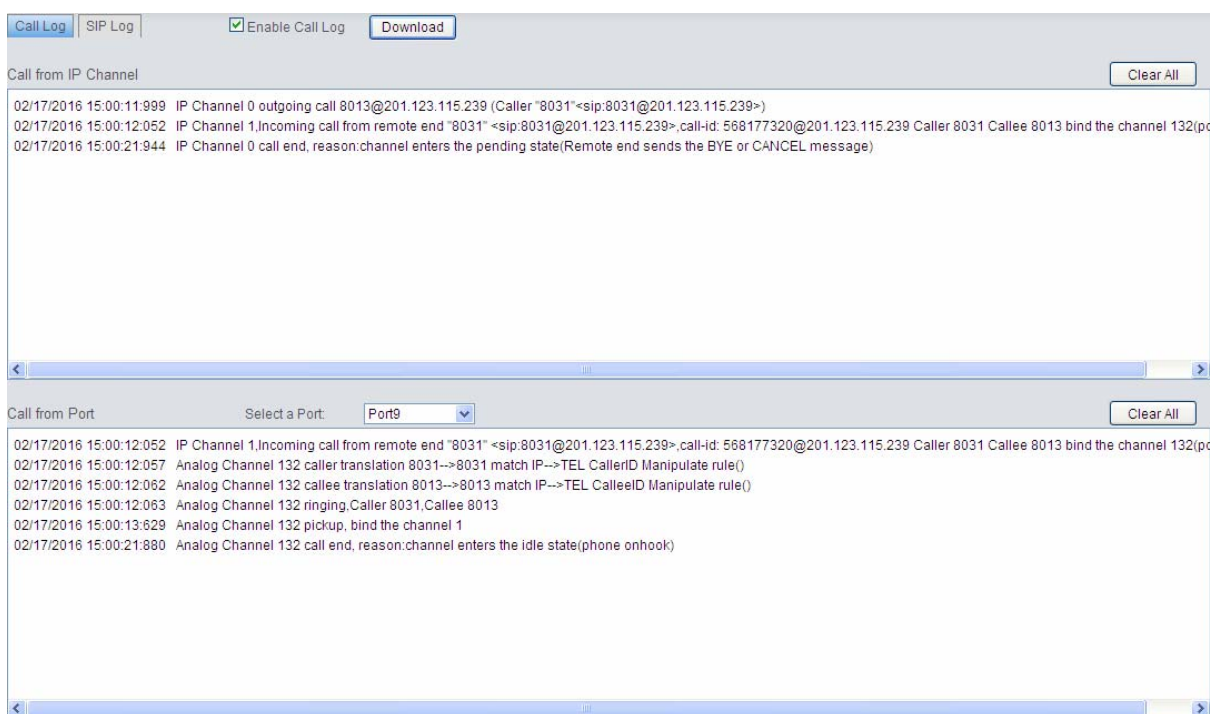


Figure 3-93 Call Log Interface

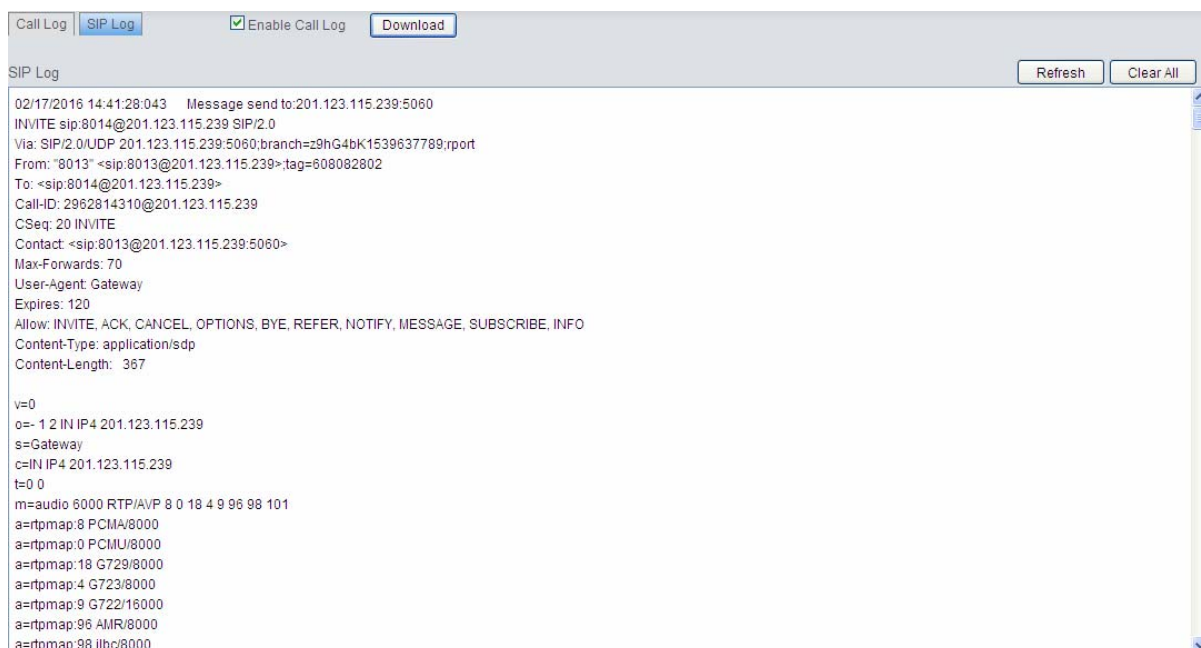


Figure 3-94 SIP Log Interface

See Figure 3-93, Figure 3-94 for the Call Log interface. Click the checkbox before **Enable Call Log** to enable the call log feature, including **Call Log** and **SIP Log**. **Call from IP Channel** displays the call log information generated on all IP channels, and **Call from Port** displays the call log information generated on the port you select. All the SIP related information will be displayed in **SIP Log**.

3.9.7 Operation Log

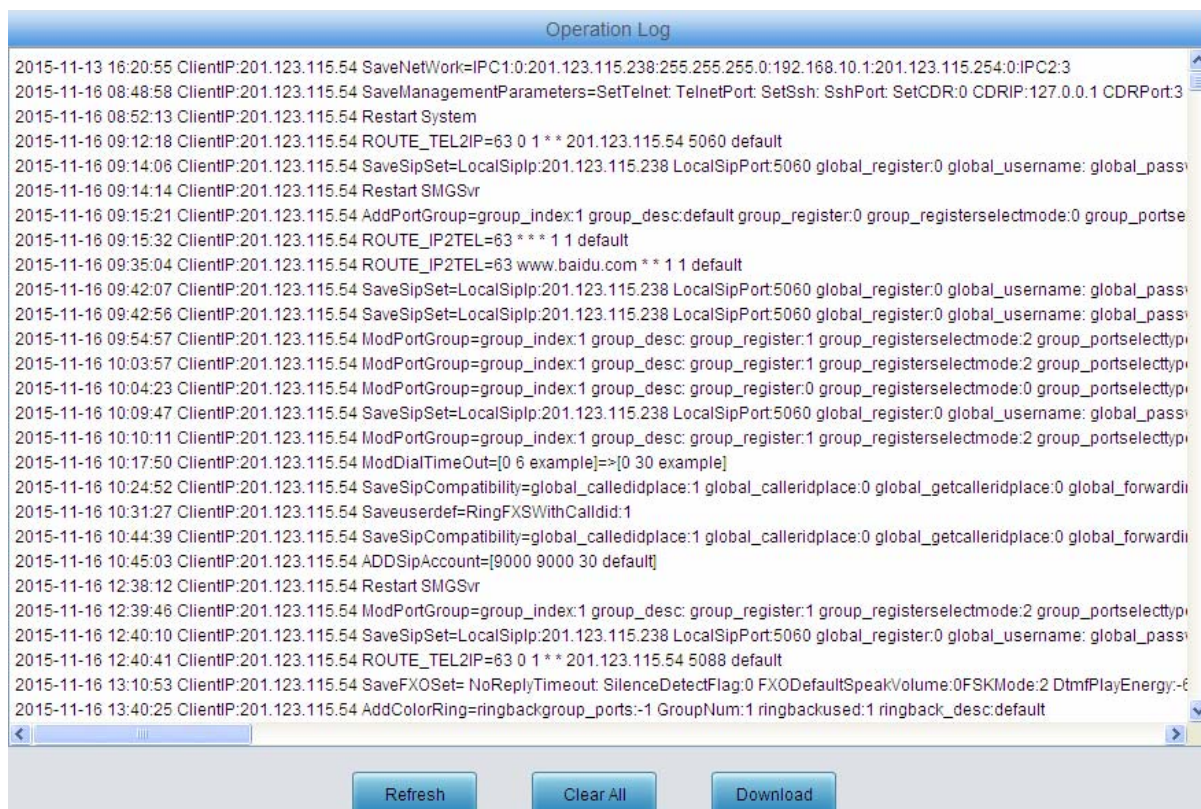


Figure 3-95 Operation Log Interface

See Figure 3-95 for the Operation Log interface, which is used to check the operation records on WEB. Click **Refresh** to refresh the log; click **Clear All** to clear all the operation logs and click **Download** to download the logs.

Note: The sign <@#> here means the configuration item is unconfigured.


3.9.8 Backup & Upload

Figure 3-96 Backup & Upload Interface

See Figure 3-96 for the backup and upload interface. To back up the configuration file to your PC, just click **Backup**. To upload a configuration file, select it via **Browse...** and click **Upload**.

Figure 3-97 Backup & Upload & Prompt Interface

Click **OK** on the prompt box (Figure 3-97) to upload the configuration file to the gateway. Now the prompt information 'System is rebooting, please do not leave this page' appears. See Figure 3-98. The gateway will overwrite the current configurations with the uploaded data after restart. Click **Cancel** to cancel this upload directly.

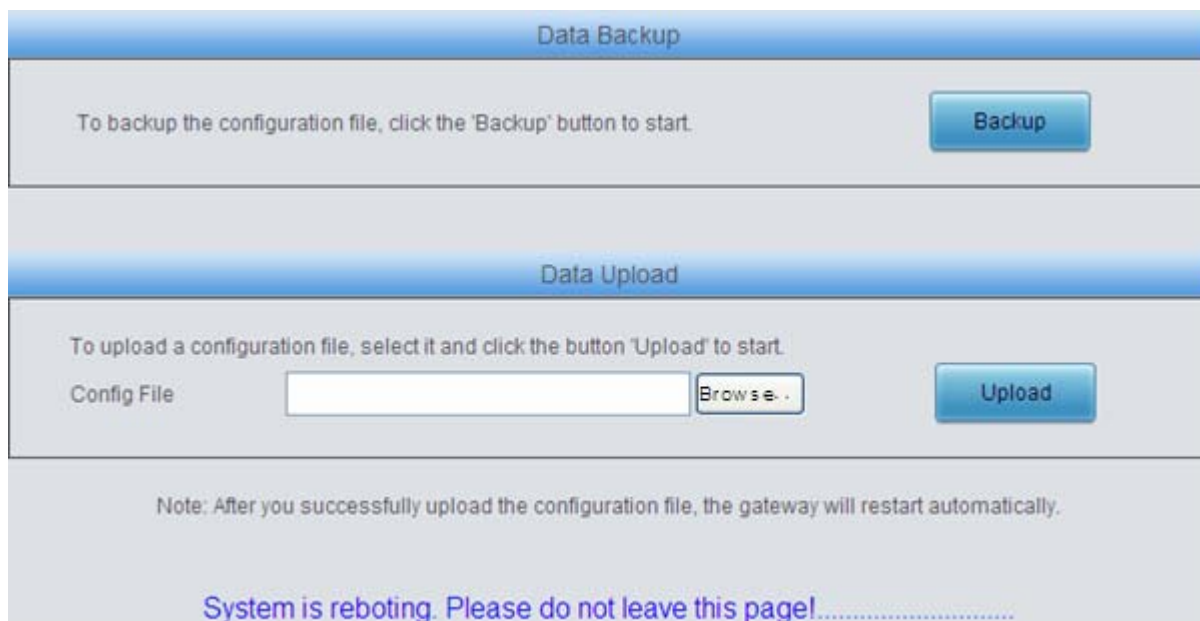

The interface is divided into two main sections: 'Data Backup' and 'Data Upload'. The 'Data Backup' section has a single 'Backup' button. The 'Data Upload' section includes a text input for 'Config File', a 'Browse...' button, and an 'Upload' button. A note at the bottom states: 'Note: After you successfully upload the configuration file, the gateway will restart automatically.' Below the note, a blue message reads: 'System is rebooting. Please do not leave this page!.....'

Figure 3-98 Configuration File Uploading Interface

3.9.9 Factory Reset




The interface has a title bar 'Factory Reset'. Below it, a text box says: 'Click the button 'Reset' below to restore to factory settings.' A large 'Reset' button is centered. At the bottom, a note reads: 'Note: After you successfully restore the gateway to factory settings, the gateway will restart automatically and its IP address will be restored to the default one.'

Figure 3-99 Factory Reset Interface

See Figure 3-99 for the factory reset interface. Click **Reset** to restore all configurations on the gateway to factory settings.

3.9.10 System Monitor

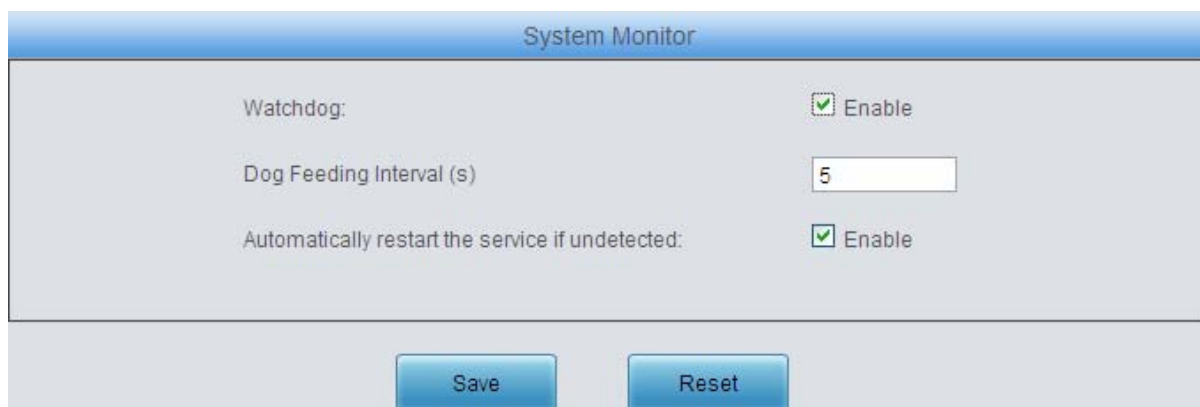

The interface has a title bar 'System Monitor'. It contains three settings: 'Watchdog:' with a checked checkbox and the word 'Enable'; 'Dog Feeding Interval (s)' with a text input containing the number '5'; and 'Automatically restart the service if undetected:' with a checked checkbox and the word 'Enable'. At the bottom, there are 'Save' and 'Reset' buttons.

Figure 3-100 System Monitor Configuration Interface

See Figure 3-100 for the System Monitor Configuration interface. Watchdog is a timing reset system used to avoid application crash. You can set the dog feeding interval when this feature is

enabled. The feeding interval is calculated by s, with the value range of 1~15s. By default, this feature is enabled with the default value of 5s. As the feature 'Automatically restart the service if undetected' is enabled, the service application will restart automatically if it is not detected by the gateway guard application. By default, this feature is enabled.

3.9.11 Centralized Manage

Figure 3-101 Centralized Manage Setting Interface

See Figure 3-101 for the Centralized Manage Setting interface. The gateway can register to a centralized management platform and accept the management of the platform. The table below explains the items shown in above figures.

Item	Description
Company Name	The name used to register the gateway to Synway DCMS.
Gateway Description	The description displayed on Synway DCMS after the gateway is registered to Synway DCMS, giving an easy identification of the gateway in device grouping.
Centralized Management Protocol	Sets the centralized management protocol. It only supports SNMP currently.
SNMP Version	Sets the version of SNMP, three options available: V1, V2 and V3, with the default value of V2.
SNMP Server Address	IP address of SNMP.
Monitoring Port	Monitoring Port for SNMP on the gateway.
Community String	Community string used for information acquisition.
Account	The account of SNMP, only valid when the SNMP version is set to V3.

Grade	The grade of SNMP, three options available: Neither authenticated nor encrypted, Authenticated but not encrypted and Authenticated and encrypted, with the default value of <i>Neither authenticated nor encrypted</i> . It is only valid when the SNMP version is set to V3.
Authentication Password	The authentication password required to enter when the item Grade is set to Authenticated but not encrypted or Authenticated and encrypted.
Encryption Password	The encryption password required to enter when the item Grade is set to Authenticated and encrypted.
Working Status	The status of the connection between the gateway and the centralized management server.

3.9.12 PING Test

Figure 3-102 Ping Test Interface

See Figure 3-102 for the Ping test interface. A Ping test can be initiated from the gateway on a designated IP address to check the connection status between them. The table below explains the configuration items shown in the above figure.

Item	Description
Destination Address	Destination IP address or domain name on which the Ping test is executed.
Ping Count	The number of times that the Ping test should be executed. Range of value: 1~100.
Package Length	Length of the data package used in the Ping test. Range of value: 56~1024 bytes.
Info	The information returned during the Ping test, helping you to learn the network connection status between the gateway and the destination address.

After configuration, click **Start** to execute the Ping test; click **End** to terminate it immediately.

3.9.13 TRACERT Test

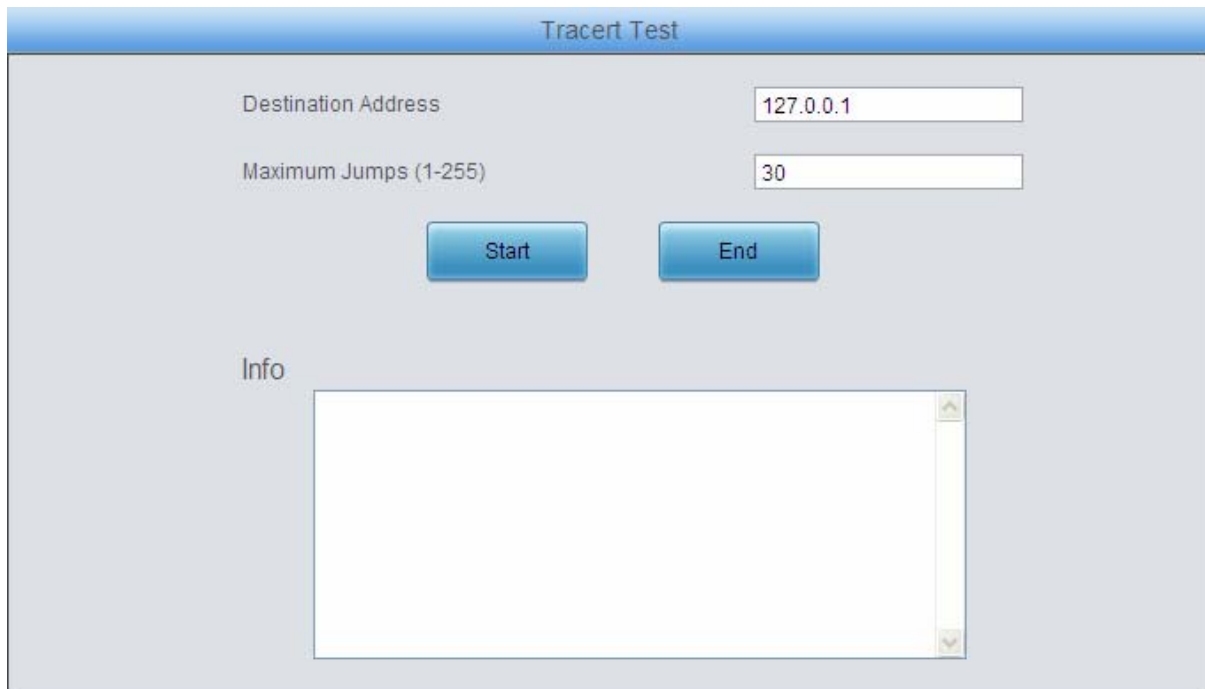
The image shows a web-based interface titled "Tracert Test". It features two input fields: "Destination Address" with the value "127.0.0.1" and "Maximum Jumps (1-255)" with the value "30". Below these fields are two buttons labeled "Start" and "End". At the bottom, there is an "Info" section with a large, empty text area for displaying test results.

Figure 3-103 Tracert Test Interface

See Figure 3-103 for the Tracert test interface. A Tracert test can be initiated from the gateway on a designated IP address to check the routing status between them. The table below explains the configuration items shown in the above figure.

Item	Description
Source IP Address	Source IP address where the Tracert test is initiated.
Destination Address	Destination IP address on which the Tracert test is executed.
Maximum Jumps	Maximum number of jumps between the gateway and the destination address which are returned by the Tracert test. Range of value: 1~255.
Info	The information returned during the Tracert test, helping you to learn the detailed information about the jumps between the gateway and the destination address.

After configuration, click **Start** to execute the Tracert test; click **End** to terminate it immediately.

3.9.14 Change Password




The 'Change Password' interface features a light blue header bar with the title 'Change Password'. Below the header, there are five input fields arranged vertically. The first field is labeled 'Current Username' and contains the text 'admin'. The second field is labeled 'Current Password'. The third field is labeled 'New Username'. The fourth field is labeled 'New Password'. The fifth field is labeled 'Confirm New password'. At the bottom of the interface, there are two blue buttons: 'Save' and 'Reset'.

Figure 3-104 Password Changing Interface

See Figure 3-104 for the Password Changing interface where you can change username and password of the gateway. Enter the current password, the new username and password, and then confirm the new password. After configuration, click **Save** to apply the new username and password or click **Reset** to restore the configurations. After changing the username and password, you are required to log in again.

3.9.15 Restart

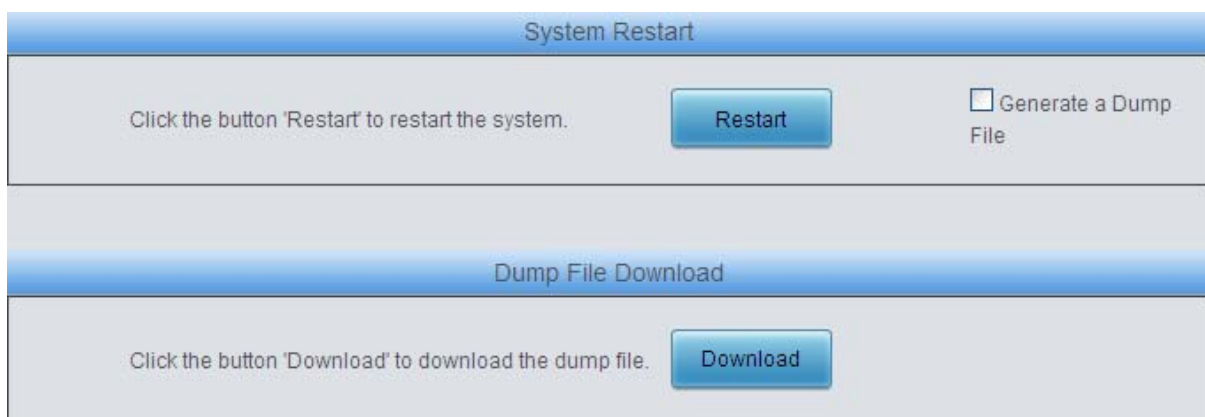

The 'System Restart' interface has a light blue header bar with the title 'System Restart'. Below the header, there is a text instruction: 'Click the button 'Restart' to restart the system.' To the right of this text is a blue 'Restart' button. Further to the right is a checkbox labeled 'Generate a Dump File'. Below this section, there is another light blue header bar with the title 'Dump File Download'. Below this header, there is a text instruction: 'Click the button 'Download' to download the dump file.' To the right of this text is a blue 'Download' button.

Figure 3-105 System Restart Interface

See Figure 3-105 for the Restart interface. Click **Restart** to restart the whole gateway system. A dump file will be generated each time you restart the system. Click **Download** and you can download it to help troubleshoot issues.

Appendix A Technical Specifications

Dimensions

SMG1004B, SMG1008B: 220×148×40 mm³

SMG1016B4: 440×44×267 mm³

Weight

SMG1004B, SMG1008B: 0.375 kg

SMG1016B4: 2.530 kg

Environment

Operating temperature: 0℃—45℃

Storage temperature: -20℃—85℃

Humidity: 8%—90% non-condensing

Storage humidity: 8%—90% non-condensing

LAN

Amount: 1 (10/100 BASE-TX (RJ-45))

Self-adaptive bandwidth supported

Auto MDI/MDIX supported

FXS Port

Amount: 4/8/16

Type: RJ11, RJ45

Maximum transmission distance: 5000m

Impedance

Telephone line impedance: Compliant with the national standard impedance for three-component network

Console Port

Amount: 1 (RS-232)

Baud rate: 115200bps

Connector: RJ45 to DB-9 Connector

Data bits: 8 bits

Stop bit: 1 bit

Parity unsupported

Flow control unsupported

Note: Follow the above settings to configure the serial port; or it may work abnormally.

Power Requirements

Input power:

SMG1004B, SMG1008B: 12V the direct current bigger than 3A

SMG1016B4: 100~240V AC

Signaling & Protocol

SIP signaling

Supported protocol: SIP V1.0/2.0, RFC3261

Audio Encoding & Decoding

G.711A 64 kbps

G.711U 64 kbps

G.729A/B 8 kbps

G.723 5.3/6.3 kbps

G.722 64 kbps

AMR 4.75 kbps

iLBC 13.3/15.2 kbps

Sampling Rate

8kHz

Appendix B Troubleshooting

Q1. What to do if I forget the IP address of the SMG-B gateway?

There are two ways to get the IP address:

- 1) Long press the Reset button on the gateway to restore to factory settings. The default IP address is 192.168.1.101
- 2) Dial the corresponding function key through an FXS port to query the IP address. See [3.5.8 Function Key](#) for more details.

Q2. The SMG-B gateway only supports routing on two directions, i.e. Tel→IP and IP→Tel. What to do if I want to make a Tel→Tel call?

By default, you can make Tel→Tel calls without any routing configuration.

If you need to make Tel→Tel calls in a specific way, try via the routing of Tel→IP→IP→Tel. See below for detailed introductions.

Provided you are going to initiate a call from Port Group 1 to Port Group 2; the IP address and port number of your gateway are 192.168.1.101 and 5060 respectively.

- a) Add a new routing rule on the Tel→IP routing rule configuration interface. Select a port group (e.g. **Port Group 1**) as 'Source Port Group' to initiate the call and fill in 'Destination IP' and 'Destination Port' with the gateway's IP address (e.g. **192.168.1.101**) and port number (e.g. **5060**). Then the call initiated from the station corresponding to Port Group 1 will be routed to the gateway.
- b) Add a new routing rule on the IP→Tel routing rule configuration interface. Fill in 'Source IP' with the gateway's IP address (e.g. **192.168.1.101**) and select a port group (e.g. **Port Group 2**) as 'Destination Port Group' to be called. Then if the IP end of the gateway calls itself, the station corresponding to Port Group 2 will ring.
- c) Finishing the above configurations, you can perform a Tel→Tel call from Port Group 1 to Port Group 2 simply by the way you make a Tel→IP call.

Q3. Does call forwarding involve routing and number manipulation?

Case 1: If the forwarding number is the number of the gateway port. There is no need to use routing and number manipulation rules. Because the gateway will find the corresponding number according to the forwarding number and make a call.

Case 2: If the forwarding number is not the number of the gateway port. It is required to use routing and number manipulation rules. A call forward procedure can be regarded as a Tel→IP call. It uses the routing rules and number manipulation rules in the same way as the Tel→IP call. A complete call forward is performed as follows:

- a) An incoming IP call to the gateway rings the port which matches the IP→Tel routing and number manipulation rules and obtains a new CallerID.
- b) Then the gateway uses the newly obtained CallerID and the call forward number, via the Tel→IP routing and number manipulation rules, to make another call from the port to a remote IP address.

Q4. In what cases can I conclude that the SMG-B gateway is abnormal and turn to Synway's technicians for help?

- a) During runtime, the run indicator does not flash or the alarm indicator lights up or flashes,

and such error still exists even after you restart the device or restore it to factory settings.

- b) Voice problems occur during call conversation, such as that one party or both parties cannot hear the voice or the voice quality is unacceptable.
- c) The port of the gateway is well connected, but the channel indicator never lights up after the gateway startup or the color it lights up does not comply with the actual state or port type.

Other problems such as inaccessible calls, failed registrations, incorrect numbers and abnormal dialing operations on the FXS port are probably caused by configuration errors. We suggest you refer to [Chapter 3 WEB Configuration](#) for further examination. If you still cannot figure out or solve your problems, please feel free to contact our technicians.

Q5. What to do if I cannot enter the WEB interface of the SMG-B gateway after login?

This problem may happen on some browsers. To settle it, follow the instructions here to configure your browser. Enter 'Tools > Internet Options > Security Tab', and add the current IP address of the gateway into 'Trusted Sites'. If you changes the IP address of the gateway, add your new IP address into the above settings too.

Q6. How many ports can be rung by turns according to the *Ringling by Turns* rule?

According to the 180s ringing timeout limit in RFC3261 protocol, the time used for ringing all ports by turns cannot exceed 180s. Therefore, based on the minimum timeout 15s for each port in the ringing queue, the maximum number of ports for ringing by turns is 12.

For example, if you set **Timeout for Ringling by Turns** to 20s, the maximum number of ports for ringing by turns should be $180s/20s=9$; if you set **Timeout for Ringling by Turns** to 30s, the maximum number of ports for ringing by turns should be $180s/30s=6$.

Q7. Is there any cell-phone APP can make calls to the SMG-B gateway?

Yes. Linphone is a soft SIP phone that is supported by multiple platforms, such as Linux, Windows, iOS, Android, etc. It must be registered to the SIP registrar server before dialing to other SIP devices or PSTN telephones,

Q8. Does the SMG-B gateway support fax?

Yes. Currently the SMG-B gateway supports two fax modes: T.38 and Pass-Through.

Q9. Which RTP codecs are supported by the SMG-B gateway?

At present, the supported RTP codecs are: G.711A, G.711u, G.729, G.723, G.722, AMR and iLBC.

Q10. How to configure the features **Communication without Power** and **Communication without Network** for the SMG analog gateway?

The feature **Communication without Power** is implemented with the help of composite modules equipped in the gateway. Once the power to the device is cut off, the station which is linked with the FXS port on the composite module and the trunk which is linked with the FXO port on the same module will connect to each other directly and keep the good communications between phones and networks. What you need to do is just to configure the composite module properly at your purchase of our gateway.

The feature **Communication without Network** is implemented via the WEB management over the analog gateway. It will automatically route a call to the FXO port in case of network failure or call timeout.

Refer to [Q2](#) in this chapter for detailed information.

Appendix C Technical/sales Support

Thank you for choosing Synway. Please contact us should you have any inquiry regarding our products. We shall do our best to help you.

Headquarters

Synway Information Engineering Co., Ltd

<http://www.synway.net/>

9F, Synway D&R Center, No.3756, Nanhuan Road, Binjiang District,
Hangzhou, P.R.China, 310053

Tel: +86-571-88860561

Fax: +86-571-88850923

Wechat QR Code: Scan the QR code below to add us on Wechat.



Technical Support

Tel: +86-571-88864579

Mobile: +86-18905817070

Email: techsupport@sanhuid.com

Email: techsupport@synway.net

MSN: synway.support@hotmail.com

Sales Department

Tel: +86-571-88860561

Tel: +86-571-88864579

Fax: +86-571-88850923

Email: sales@synway.net