



Ruijie Reyee RG-EG Series Routers

Web-Based Configuration Guide

Copyright Statement

Ruijie Networks©2021

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerpt, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

Exemption Statement

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

Preface

Thank you for using our products.

Audience

This manual is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Obtaining Technical Assistance

- Ruijie Networks Website: <https://www.ruijienetworks.com/>
- Technical Support Website: <https://ruijienetworks.com/support>
- Case Portal: <https://caseportal.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: service_rj@ruijienetworks.com
- Skype: [service_rj@ruijienetworks.com](https://www.ruijienetworks.com)

Related Documents

Documents	Description
Command Reference	Describes the related configuration commands, including command modes, parameter descriptions, usage guides, and related examples.
Hardware Installation and Reference Guide	Describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

Conventions

This manual uses the following conventions:

Convention	Description
boldface font	Commands, command options, and keywords are in boldface .
<i>italic</i> font	Arguments for which you supply values are in <i>italics</i> .
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

1 Overview

eWeb is a Web-based network management system that manages or configures devices. You can access eWeb via browsers such as Google Chrome.

Web-based management involves a Web server and a Web client. The Web server is integrated in a device, and is used to receive and process requests from the client, and return processing results to the client. The Web client usually refers to a browser, such as Google Chrome IE, or Firefox.

1.1 Conventions

In this document, texts in bold are names of buttons (for example, **OK**) or other graphical user interface (GUI) elements (for example, **DHCP Security**).


2 Configuration Guide

2.1 Preparation

Scenario

As shown in the figure below, an administrator can access the device from a browser and configure the device through the eWeb management system.

Figure 2-1 Data Exchange Principle

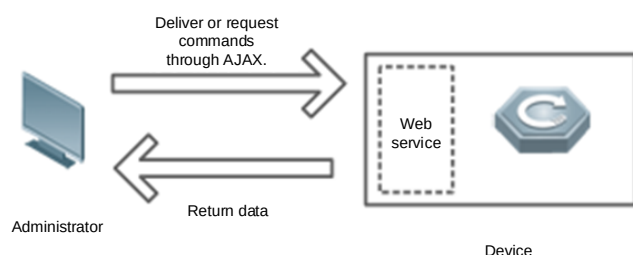

Remarks	The eWeb management system combines various device commands and then delivers them to the device through AJAX requests. The device then returns data based on the commands. A Web service is available on the device to process basic HTTP protocol requests.
----------------	---

Deployment

Configuration Environment Requirements

Client requirements:

- An administrator can log into the eWeb management system from a Web browser to manage devices. The client refers to a PC or some other mobile endpoints such as laptops or tablets.
- Google Chrome, Firefox, IE10.0 and later versions, and some Chromium-based browsers (such as 360 Extreme Explorer) are supported. Exceptions such as garble or format error may occur if an unsupported browser is used.
- 1024 x 768 or a higher resolution is recommended. If other resolutions are used, the page fonts and formats may not be aligned and the GUI is less artistic, or other exceptions may occur.
- The client IP address is set in the same LAN network as the device IP address, such as 192.168.110.X. The subnet mask is 255.255.255.0. The default management address is 192.168.110.1. Alternatively, you can set the IP assignment mode to **Obtain an IP address automatically**.


Server requirements:

- You can log into the eWeb management system through a LAN port or from Ruijie Cloud on an external network.
- The device is enabled with Web service (enabled by default).

- The device is enabled with login authentication (enabled by default).
- The default IP address of an EG device is 192.168.110.1. The default IP address of an AP is 10.44.77.254.

To log into the eWeb management system of an EG device, open the Google Chrome browser, and enter 192.168.110.1 into the address bar, and press **Enter**.

Figure 2-2 Login Page

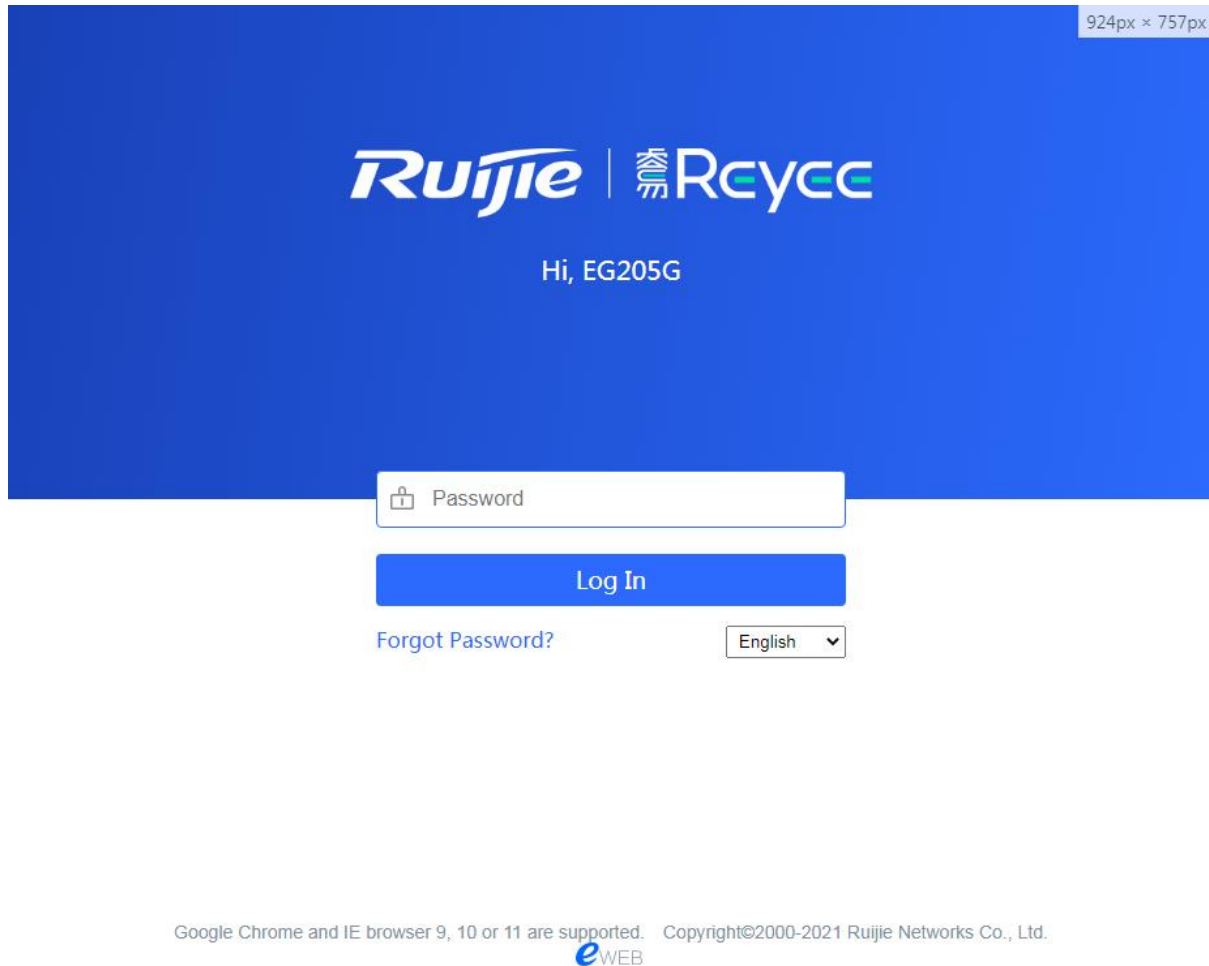

Enter the password and click **Login**.

2.2 Network Setup


You will enter the **Network Setup** page without login at initial setup.

2.2.1 Discover Device

The page displays online device count and network status.

You can add the device to **My Network** before configuring the network. If the device works in the standalone mode, this feature is not supported.


Figure 2-3 Discover Device

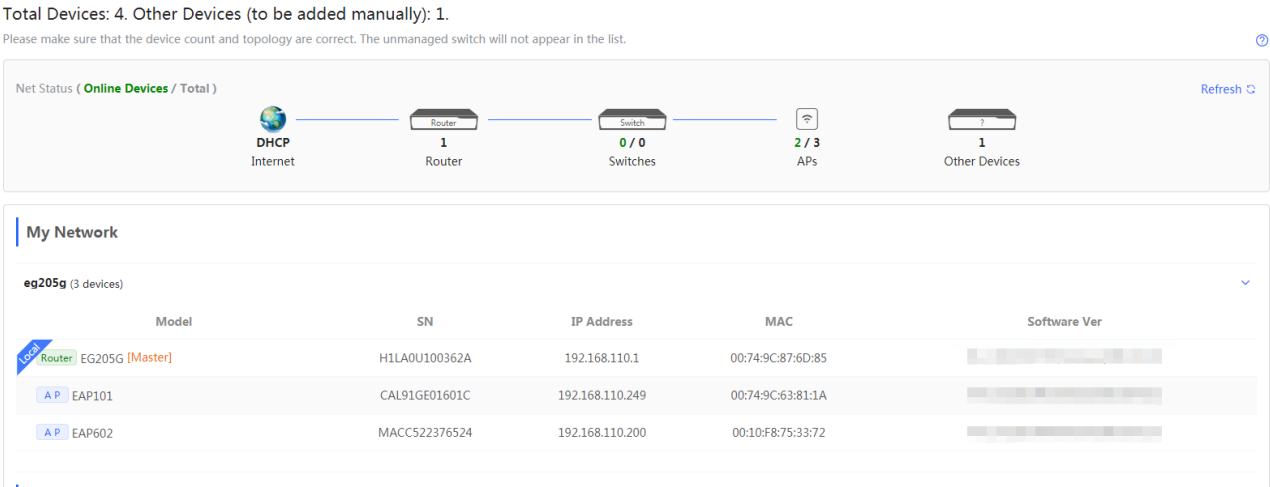

2.2.2 Add to My Network

Select the target device and click **Add to My Network**. If the target device is not configured yet, you can add the device directly without a password.

Figure 2-4 Add Device to My Network

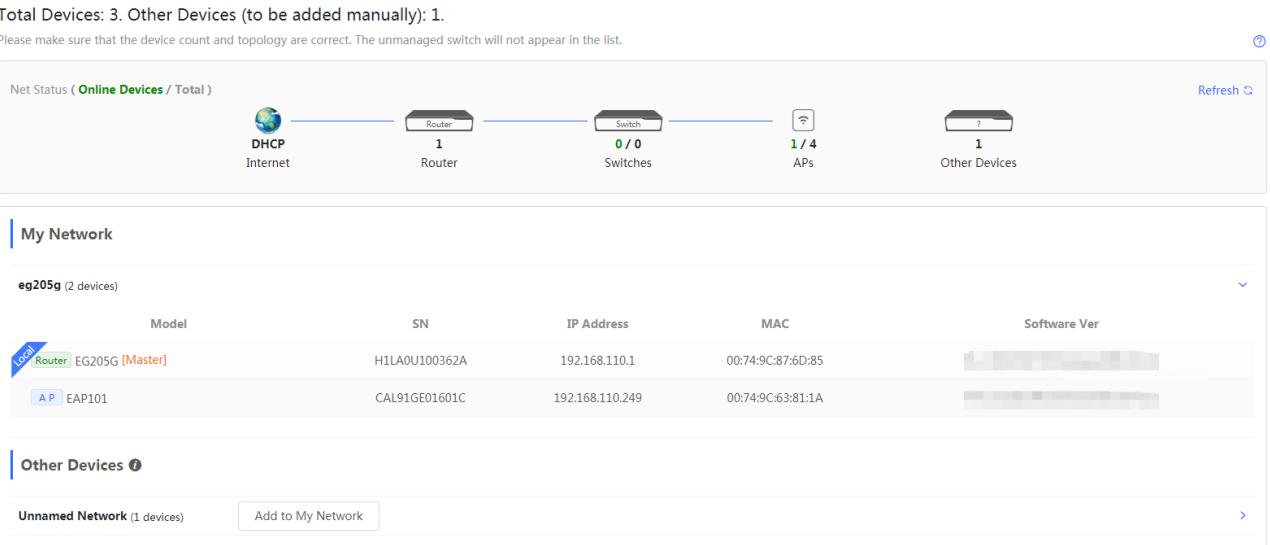

2.2.3 Create Network & Connect

If the device is configured for the first time, the network name, management password and SSID are required. If the device is already configured, the management password will not be displayed here. You can navigate to **Network > Password** to change the management password.

If the device is detected disconnected to Ruijie Cloud, the Ruijie Cloud page will be embedded for you to bind your account after the device accesses the Internet successfully. If the device is already connected to Ruijie Cloud, the eWeb homepage will be displayed after this step.

Figure 2-5 Create Network

* Network Name

eg205g

IP Assignment

☐ PPPoE ☒ DHCP ☐ Static IP

Current Settings: DHCP

* SSID

Ightest

☒ Security ☐ Open

* WiFi Password

🔍

* Country/Region

China (CN)

▼

* Time Zone

(GMT+7:00)Indian/Christmas


▼

Previous

Finish


Click **Create Network & Connect**, and it takes about 60 seconds to deliver and activate settings. The following message will appear after Internet connection is set up.

Figure 2-6 Connect to Internet

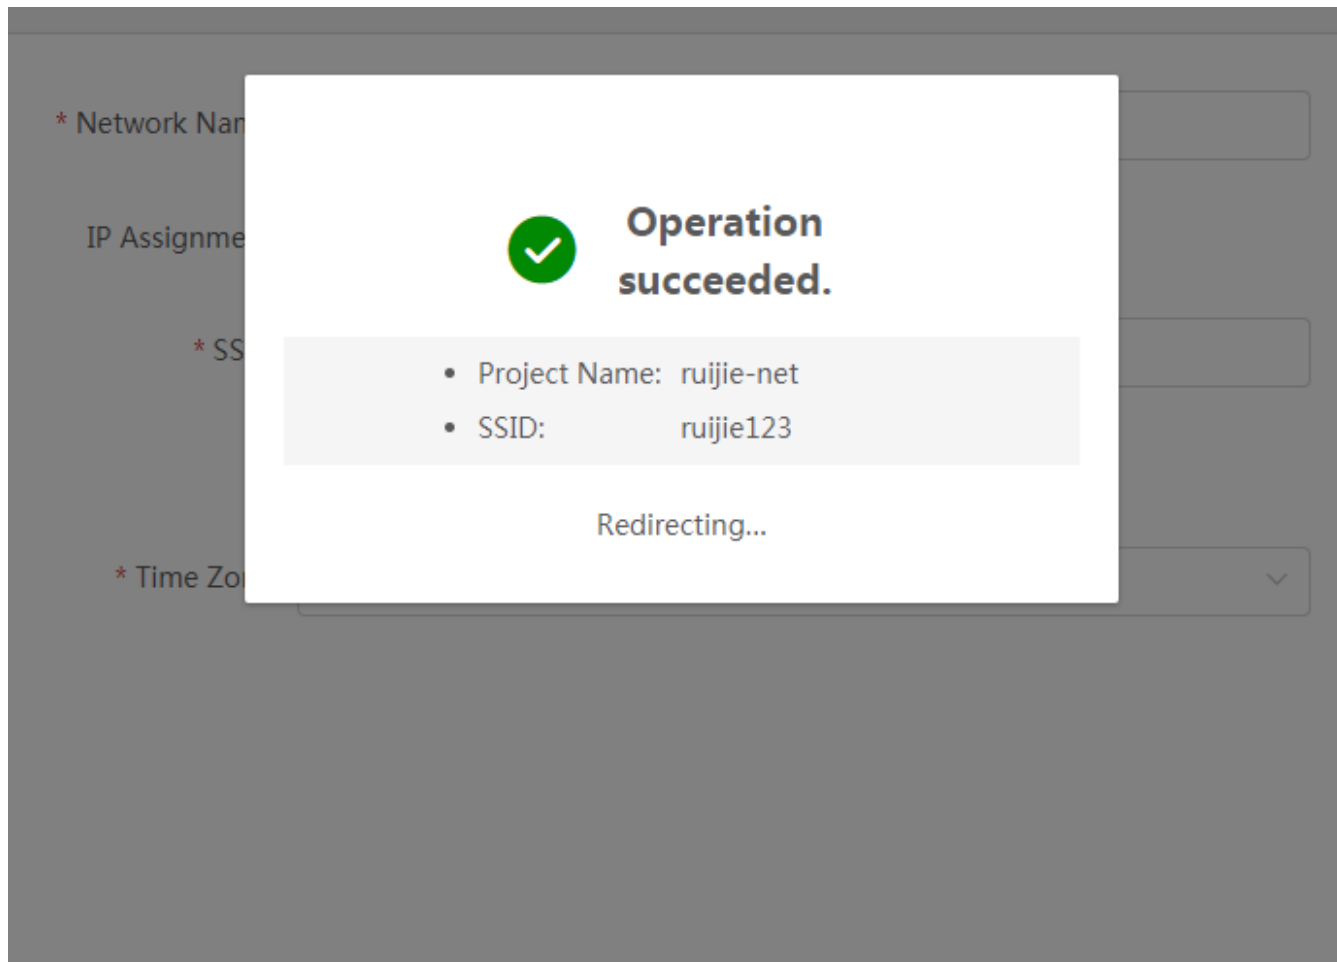

If the Internet connection failed, please follow the instruction in the prompt message.

Figure 2-7 Failed Connection

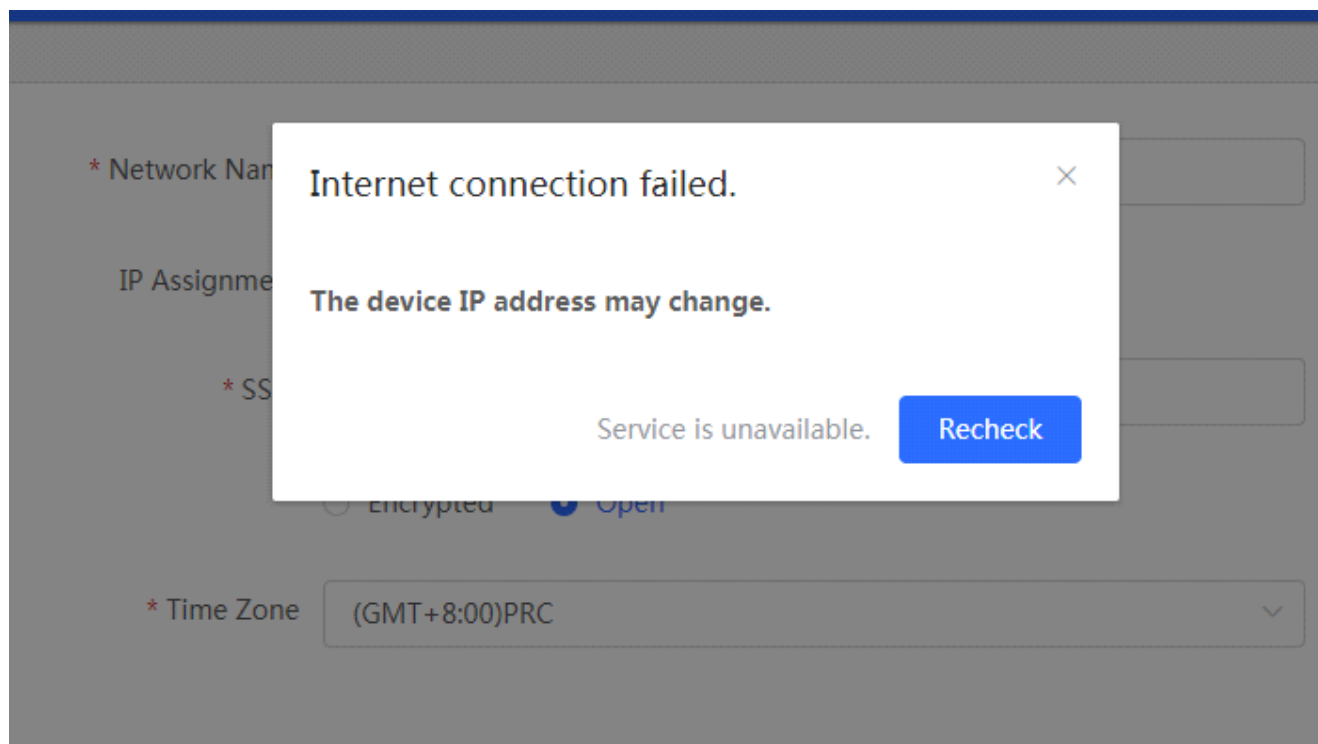

2.2.4 Cloud Service

The **Network Setup** module requires a Ruijie Cloud account. If you are a new user, please register an account first at the [Ruijie Cloud](#) website.

Figure 2-8 Log In with Ruijie Cloud Account

Please enter your account to log in.


 Please enter the username.

 Please enter the password.

I have read and agreed to [the Privacy Policy](#).

If the device works in the standalone mode, log in and the account will be binded with Ruijie Cloud automatically. If the device works in the self-organizing network mode, the following page will appear.

Figure 2-9 Select Template

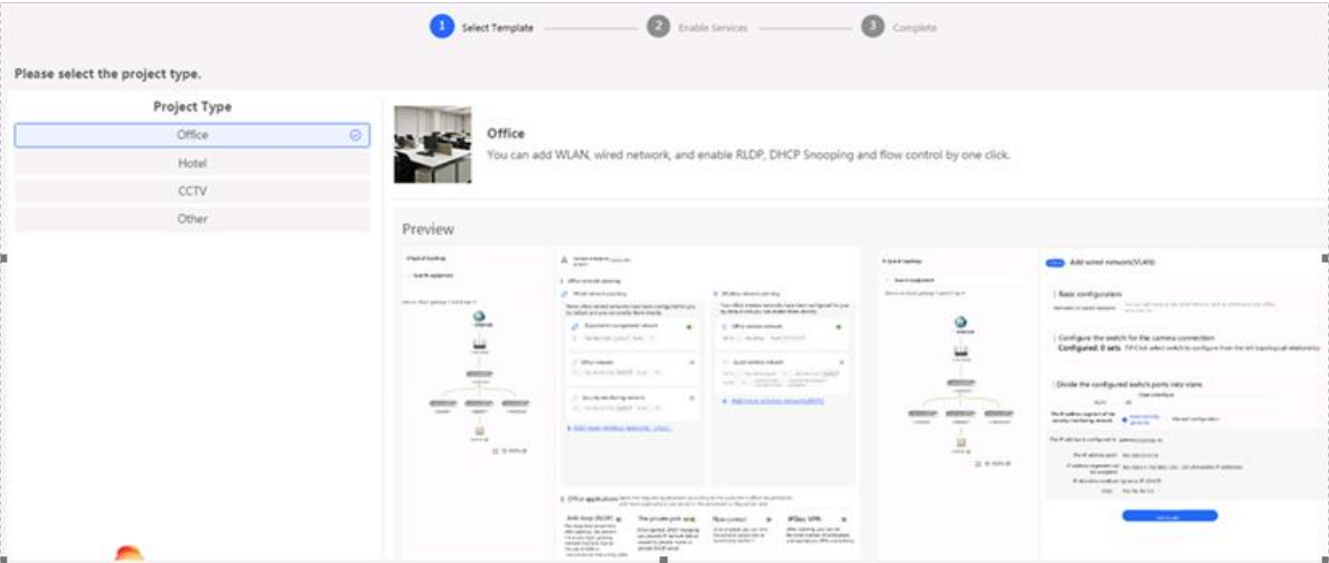

It takes about 3 minutes to discover devices and generate a topology. The following confirmation box will appear:

Figure 2-10 Confirm Device Status



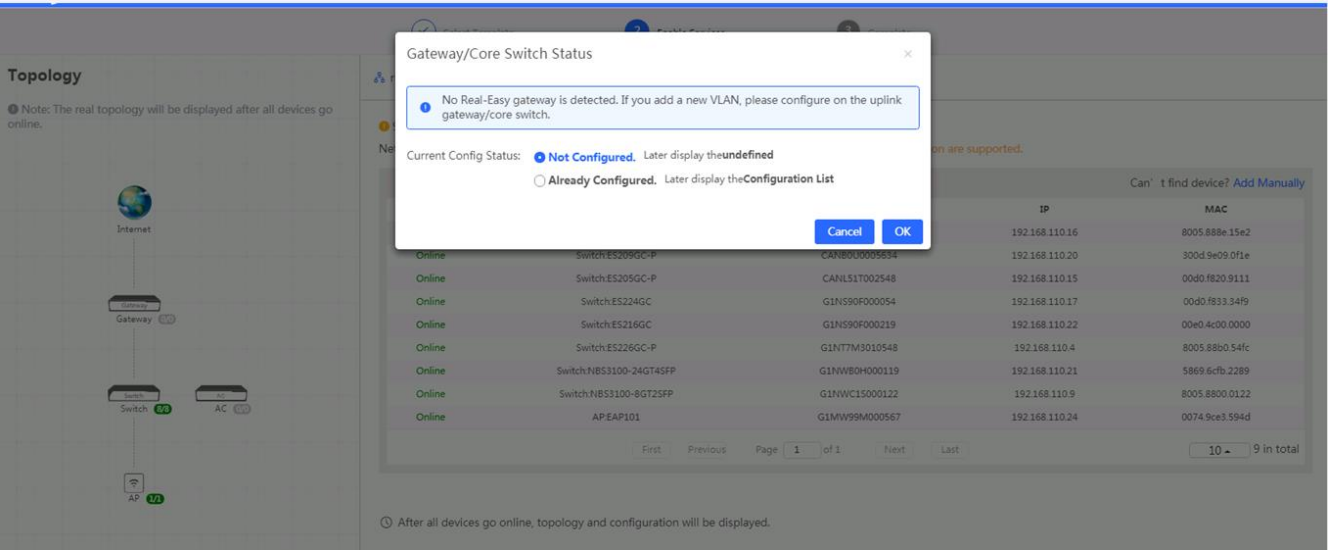


Figure 2-11 Enable Services

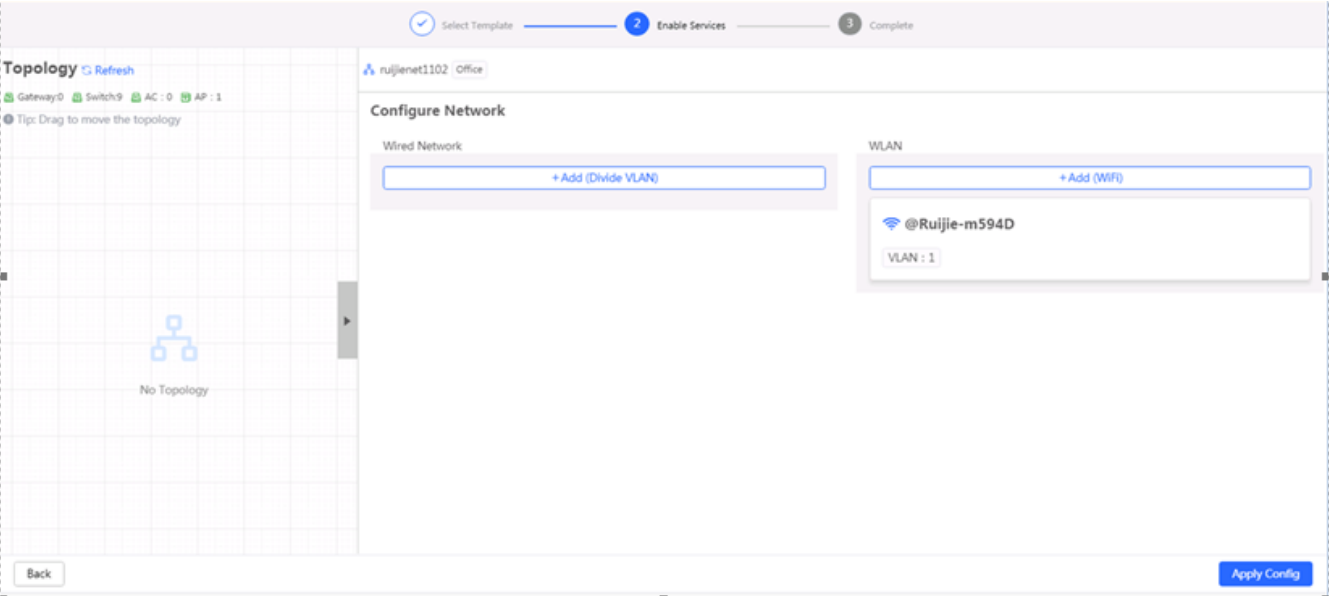

Click **Apply Config**. The following page will appear after configuration is delivered successfully.


Figure 2-12 Complete

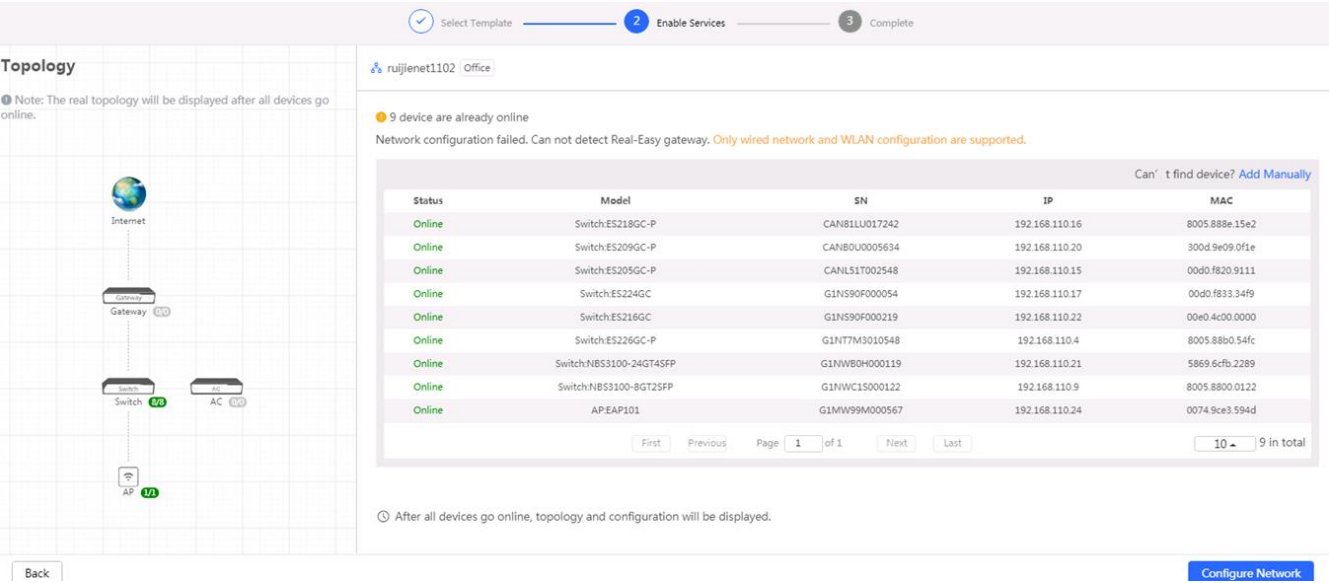

2.3 Work Mode

The eWeb menu varies with different work modes. The EG device works in the **Router** mode and the EAP device works in the **AP** mode by default. The work mode is displayed on the **Route > Overview** page.

Figure 2-13 Device Overview

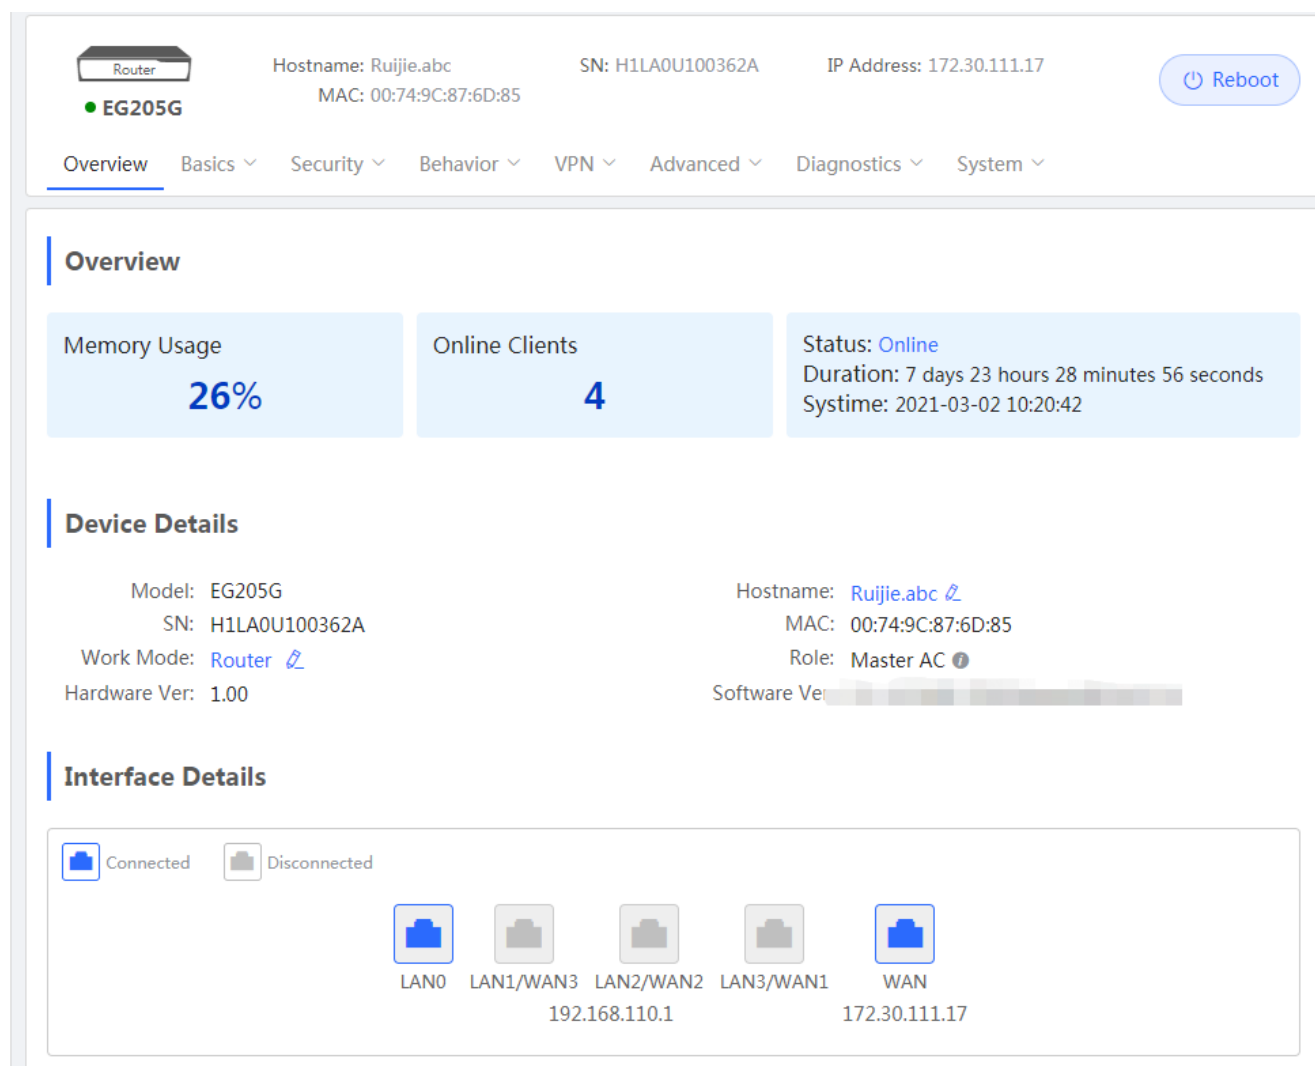

Click the current work mode, and the following page will appear. You can switch over the work mode here.

Figure 2-14 Work Mode

Description:

1. The device IP address may change upon mode change.
2. Change the endpoint IP address and ping the device.
3. Enter the new IP address into the address bar of the browser to access EWEB.
4. The system menu varies with different work modes.
5. The device will be restored and rebooted upon mode change.

Work Mode Router ?

Self-Organizing ☒ ? i **Tip**

Network

AC ☒ ?

Save

2.3.1 Router Mode

The **Router** mode indicates NAT forwarding.

The EG device in the **Router** mode contains networking, network setup and gateway features including VPN and behavior management.

The AP in the **Router** mode contains networking, network setup and some radio features.

2.3.2 AC/AP Mode

The device in the **AC** mode supports router-on-a-stick.

The **AP** mode refers to fit AP mode. All WAN ports are enabled with DHCP by default. You can configure a WAN port with a static IP address or enable PPPoE manually.

2.4 Self-Organizing Network

Click the current work mode, and the following page will appear. You can enable or disable self-organizing network here.

Figure 2-15 Self-Organizing Network

Description:

1. The device IP address may change upon mode change.
2. Change the endpoint IP address and ping the device.
3. Enter the new IP address into the address bar of the browser to access EWEB.
4. The system menu varies with different work modes.
5. The device will be restored and rebooted upon mode change.

Work Mode ?

Self-Organizing ☒ ? **Tip**

Network


AC ☒ ?

2.4.1 Enable

If self-organizing network is enabled, the device in the network will be discovered and discover other devices. These devices will form a network and be synchronized with network settings.

The menu on the left contains all network settings, including wireless management, switch management and system management.

Figure 2-16 Enable Self-Organizing Network

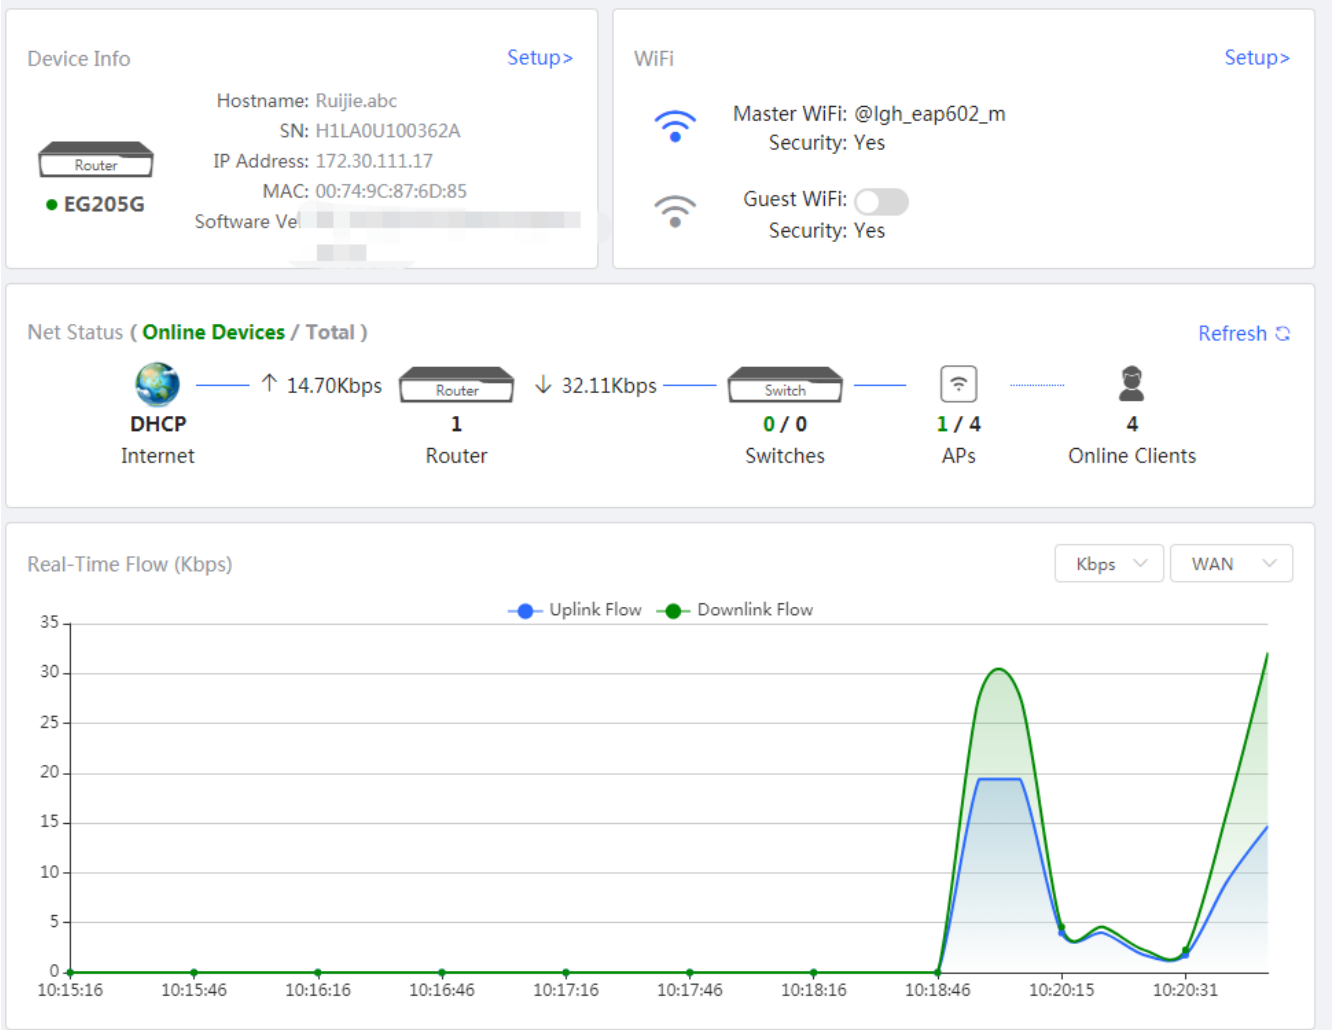

If there is a wireless router enabled with self-organizing network in the network, the **Router** module will appear in the menu on the left. Click **Router** [Gateway](#), and a horizontal menu will be displayed.

Figure 2-17 Router Menu


● **EG205G**

Hostname: Ruijie.abc
MAC: 00:74:9C:87:6D:85

SN: H1LA0U100362A

IP Address: 172.30.111.17

Reboot

Overview Basics Security Behavior VPN Advanced Diagnostics System

Overview

Memory Usage
26%

Online Clients
4

Status: **Online**
Duration: 7 days 23 hours 30 minutes 23 seconds
Systime: 2021-03-02 10:22:09

Device Details

Model: EG205G
SN: H1LA0U100362A
Work Mode: **Router**
Hardware Ver: 1.00

Hostname: **Ruijie.abc**
MAC: 00:74:9C:87:6D:85
Role: **Master AC**
Software Ver:

Interface Details

Connected Disconnected

LAN0

LAN1/WAN3
192.168.110.1

LAN2/WAN2

LAN3/WAN1

WAN
172.30.111.17

2.4.2 Disable

If self-organizing network is disabled, the device will work in the standalone mode.

After self-organizing network is disabled, a horizontal menu will be displayed vertically on the left.

Figure 2-18 Disable Self-Organizing Network

Overview

Online Clients

Basics

Security

Behavior

VPN

Advanced

Diagnostics

System

Overview

Memory Usage

30%

Online Clients

6

Status: Online

Duration: 44Min16Sec

Systime: 2020-12-17 14:55:25

Device Details

Model: EG205G

MAC: 00:74:9C:87:6D:85

Software Ver:

Hostname: Ruijie

Work Mode: Router

SN: H1LA0U100362A

Hardware Ver: 1.00

Interface Details

Connected

Disconnected

LAN0

LAN1/WAN3

LAN2/WAN2

LAN3/WAN1

WAN

192.168.110.1


172.30.111.17

3 eWeb Configuration

3.1 Overview

The **Overview** page displays login device, wireless information, network status and real-time flow.

Figure 3-1 Overview

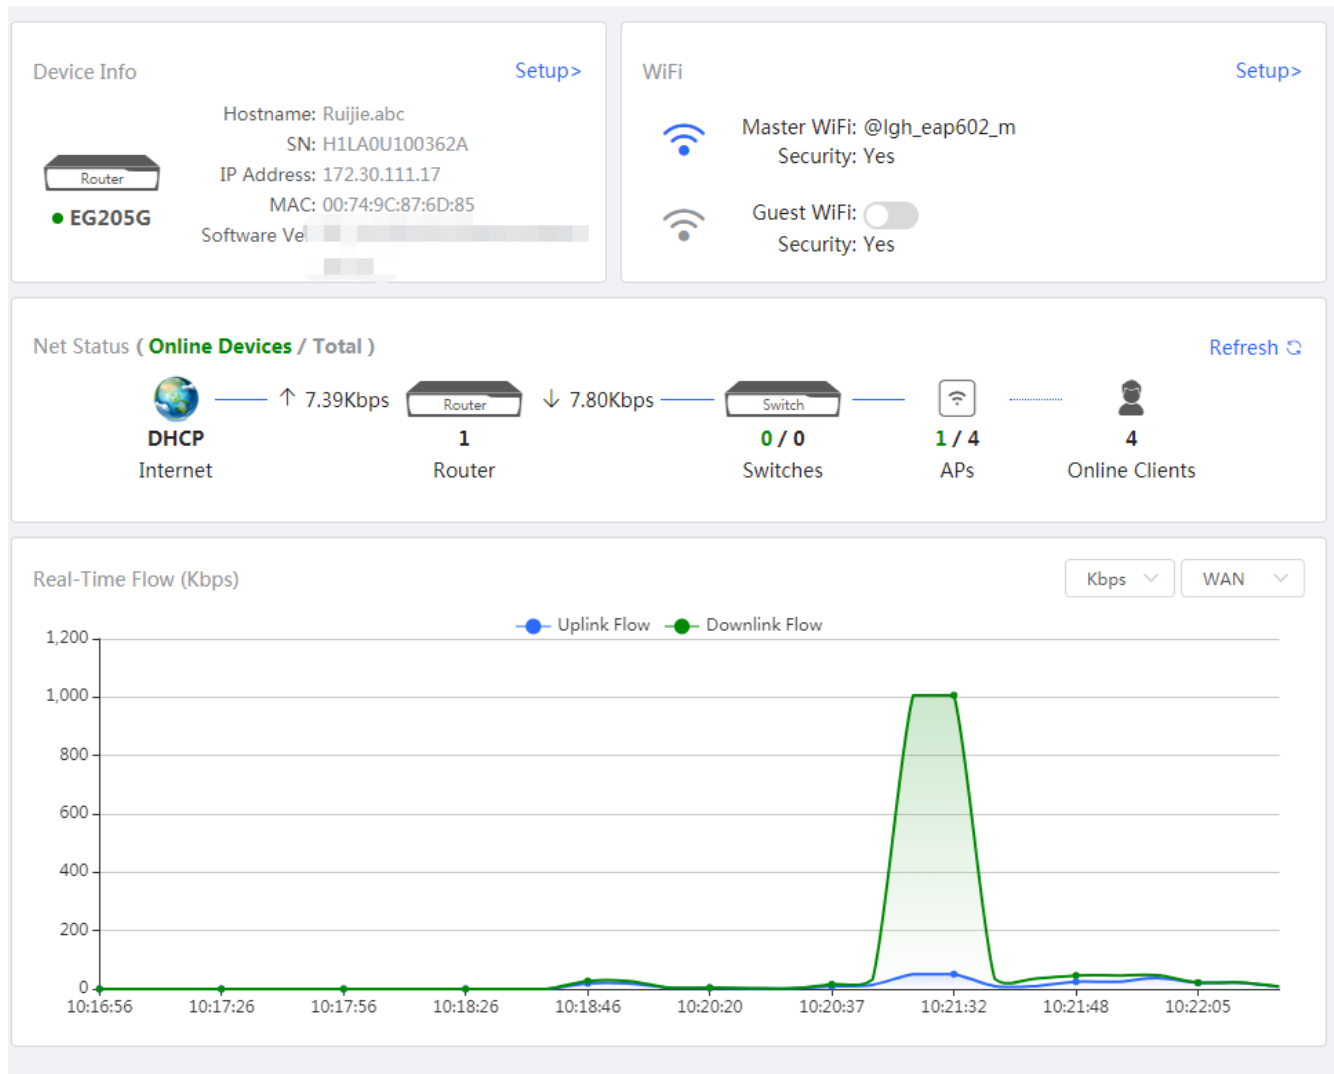

3.2 Online Clients

The **Online Clients** module is supported by the **Router** mode of the EG device.

Figure 3-2 Online Clients

**Online Clients**

The client going offline will not disappear immediately. Instead, the client will stay in the list for three more minutes.

**Online Clients**Search by IP/MAC/Username

Refresh

Username/Type	IP Address/MAC	Current Rate	Wireless Info	Access Control
RAP2200E-150848 Wired	192.168.110.152 00:d0:f8:15:08:48	Up:0.00bps Down:0.00bps	--	Go
EW1800GX-PRO-8C5826 Wired	192.168.110.14 30:0d:9e:8c:58:26	Up:2.96Kbps Down:5.87Kbps	--	Go
R03605 Wired	192.168.110.136 c8:5b:76:94:00:3c	Up:211.00bps Down:0.00bps	--	Go
-- Wired	192.168.110.13 90:e7:10:db:20:ae	Up:853.00bps Down:628.00bps	--	Go

<
1
>
10/page

Total 4


3.3 Router

If there is a wireless router enabled with self-organizing network in the network, the **Gateway** module will appear in the menu on the left. Click **Router** [Gateway](#), and a horizontal menu will be displayed.

3.3.1 Overview


If the EG device works in the **AC** mode, the **Router** module does not contain **Security**, **Behavior** and **VPN**.

Figure 3-3 Overview

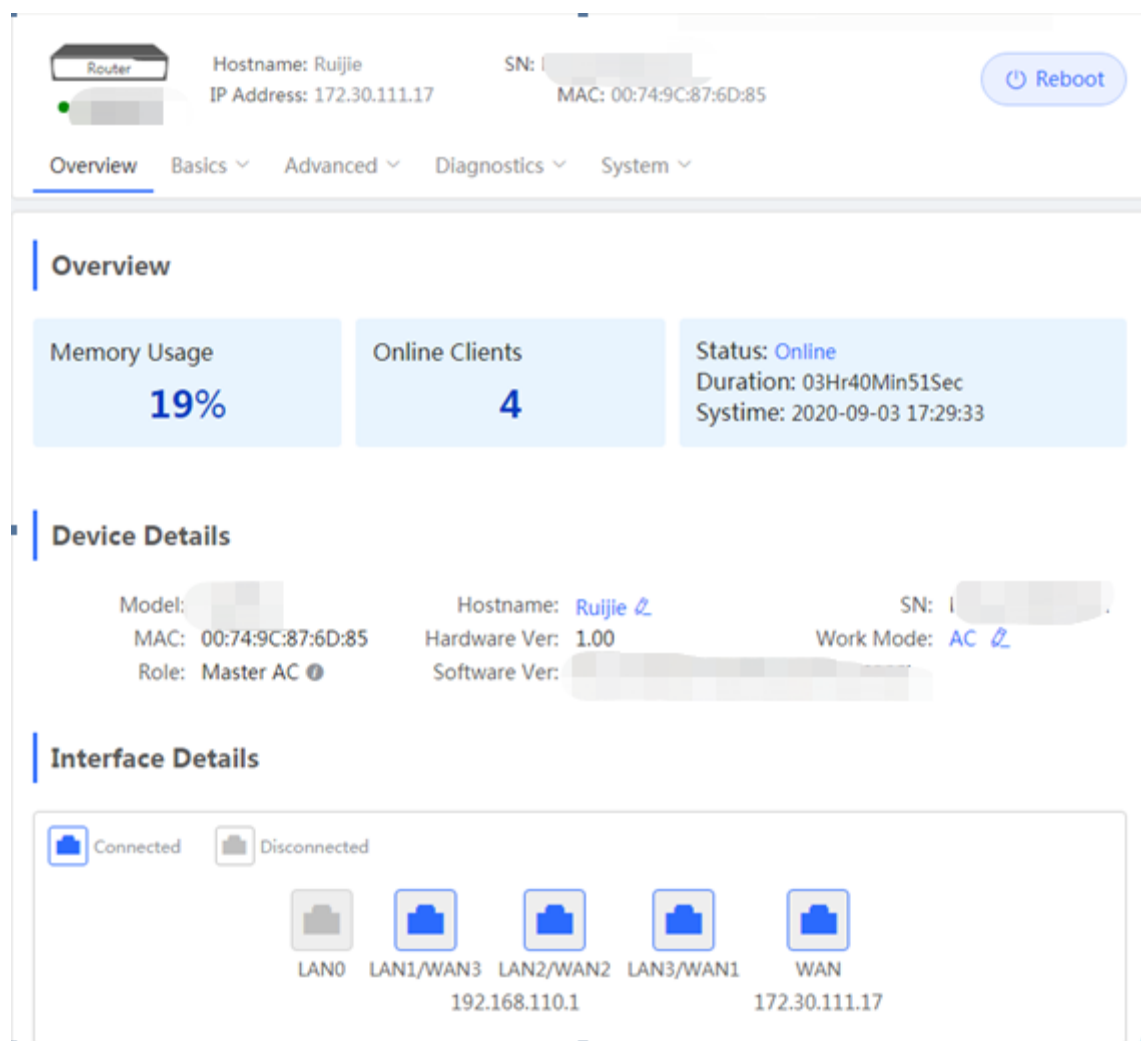

This chapter describes the Web configuration process of an EG device in the **Router** mode.

Figure 3-4 Router Mode

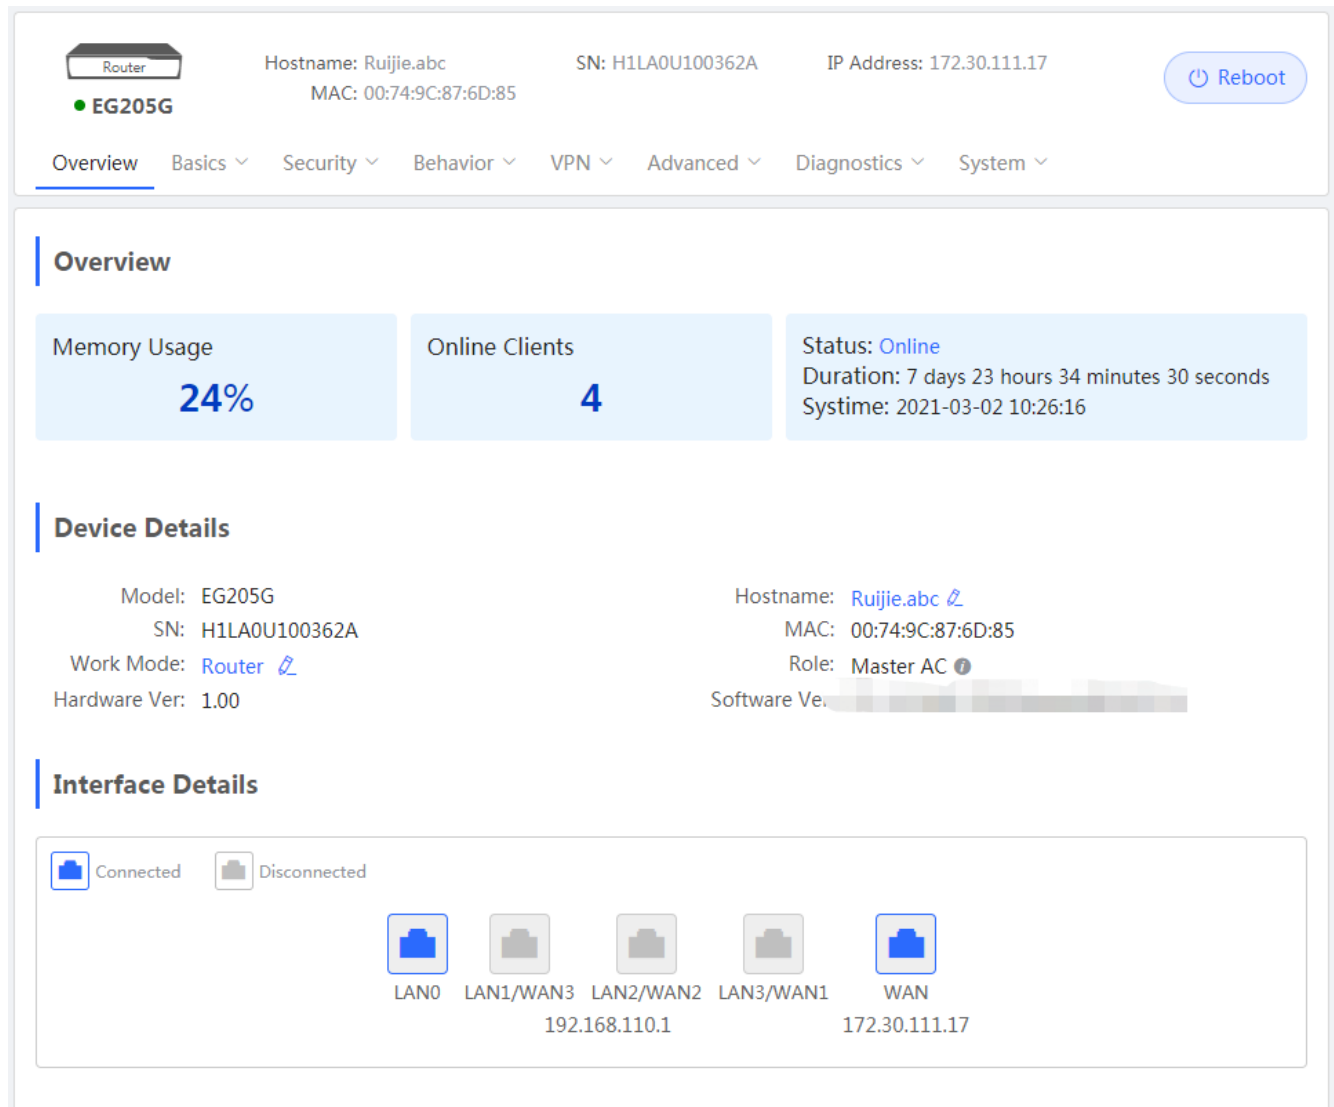

3.3.2 Basics

3.3.2.1 WAN

The **WAN** module allows you to configure WAN settings. There are three IP assignment modes available: **Static IP Address**, **DHCP** and **PPPoE**. WAN settings support multiple lines (some models support only dual-line). If you select more than one line, you can configure each specific line, e.g., WAN and WAN1, and ISP/load settings.

Figure 3-5 WAN Settings

**WAN Settings**
Configure WAN settings.



Single Line

Dual-Line

Three Lines

Four Lines

* Internet

DHCP

▼

No username or password is required for DHCP clients.

IP Address

172.30.111.17

Subnet Mask

255.255.255.0

Gateway

172.30.111.1

DNS Server

172.30.44.20 192.168.5.28

Advanced Settings

* MTU

1499

Range: 576-1500.

* MAC

00:74:9c:87:6d:85

802.1Q Tag

* Default Preference

0

A smaller value indicates a higher preference.

Private Line

?

Save

Figure 3-6 ISP/Load Settings

WAN Settings

Configure WAN settings.

Single Line

Dual-Line

Three Lines

Four Lines

WAN

WAN1

WAN2

ISP/Load Settings

Load Balancing Settings

Traffic will be routed based on ISP settings preferentially. The remaining traffic will be managed according to load mode.

1. Balanced mode: The traffic will be spread across multiple links according to the weight of each WAN port. For example, if WAN and WAN1 weight are set to 3 and 2 respectively, 60% of the total traffic will be routed over WAN and 40% over WAN1.

2. Primary & secondary mode: All traffic is routed over the primary interface. Once the primary interface fails, traffic will be switched over to the secondary interface. If there are multiple primary and secondary interfaces, please configure their weight (See balanced mode).

Load Mode

Balanced

Balancing Policy

Based on Link

If you fail to access online bank service, please select Based on Src IP Address.

* WAN Weight

1

* WAN1 Weight

1

* WAN2 Weight

1

Save

3.3.2.2 LAN

The **LAN** module contains **LAN Settings**, **Port VLAN**, **DHCP Clients**, **Static IP Addresses**, **DHCP Option** and **DNS Proxy**.

3.3.2.2.1 LAN Settings

The **LAN** module allows you to set the IP address of the LAN port and DHCP status.

Figure 3-7 LAN Settings

LAN Settings

?

LAN Settings

+ AddDelete Selected

Up to 8 entries can be added.

☐	IP Address	Subnet Mask	VLAN ID	Remark	DHCP Server	Start	IP Count	Lease Time(Min)	Action
☐	192.168.110.1	255.255.255.0	Default VLAN	-	Enabled	192.168.110.1	254	30	Edit Delete

Click **Add** to add a VLAN. In the displayed dialog box, configure settings and click **OK**.

Figure 3-8 Add IP Address

Add

* IP Address

* Subnet Mask

255.255.255.0

* VLAN ID

Remark

Remark

* MAC

00:D0:F8:B9:8E:5A

DHCP Server

* Start

* IP Count

* Lease Time(Min)

30

DNS Server

- ?

Cancel

OK

You can click  in the upper right corner to see description about each configuration item.

If an EAP device working in the AP mode supports port VLAN, there will be a port VLAN toggle displayed here.

Figure 3-9 Port VLAN

LAN Settings

Port VLAN

LAN Settings

Port VLAN

LAN Settings

+ Add

Delete Selected

Up to 4 entries can be added.

	VLAN ID	Remark	Action
☐	11	-	Edit Delete

3.3.2.2.2 DHCP Clients

The **DHCP Clients** page displays DHCP clients.

Figure 3-10 DHCP Clients

DHCP Clients

View DHCP clients.

List sorting: dynamic --> static.

DHCP Clients

Example: 00:11:22:33:44:55

Refresh

+ Batch Convert

Up to 500 entries can be added.

☐	No.	Hostname	MAC	IP Address	Remaining Lease Time(Min)	Status
☐	1	NBS3100-24GT4SFP-P-150861	00:d0:f8:15:08:62	192.168.110.178	22	Convert to Static IP
☐	2	R06823	f8:bc:12:5d:44:7d	192.168.110.5	17	Convert to Static IP
☐	3	*	00:d3:f8:15:08:5c	192.168.110.89	24	Convert to Static IP
☐	4	-	00:d0:f8:ff:ff:09	192.168.110.76	-	Convert to Static IP

Click **Convert to Static IP** in the **Action** column to convert a DHCP-assigned IP address to a static IP address. Alternatively, select DHCP-assigned IP addresses and click **Batch Convert** to convert more than one IP address.

3.3.2.2.3 Static IP Addresses

The **Static IP Addresses** module allows you to add, delete and edit static IP addresses.

Figure 3-11 Static IP Addresses

Static IP Address List

Static IP Address List

Example: 00:11:22:33:44:55

+ Add


Delete Selected

Up to 500 entries can be added.

☐	No.	IP Address	MAC	Action
No Data				

Click **Add** to add a static IP address manually. In the displayed dialog box, configure settings and click **OK**.

Figure 3-12 Add Static IP Address

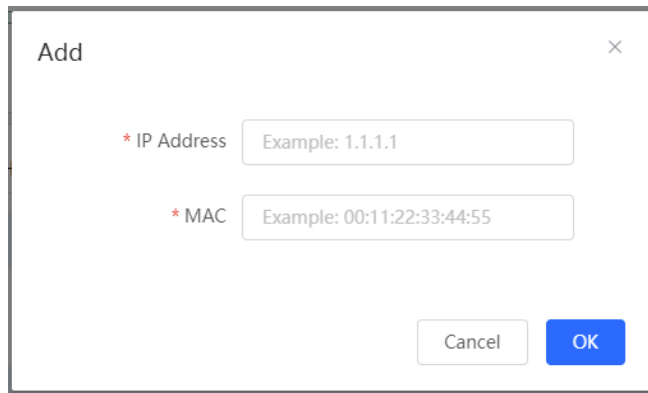


The 'Add' dialog box is used to add a new DHCP option. It contains two required fields: 'IP Address' with an example of '1.1.1.1' and 'MAC' with an example of '00:11:22:33:44:55'. At the bottom, there are 'Cancel' and 'OK' buttons.

3.3.2.2.4 DHCP Option

The **DHCP Option** module allows you to configure DHCP option settings.

Figure 3-13 DHCP Option

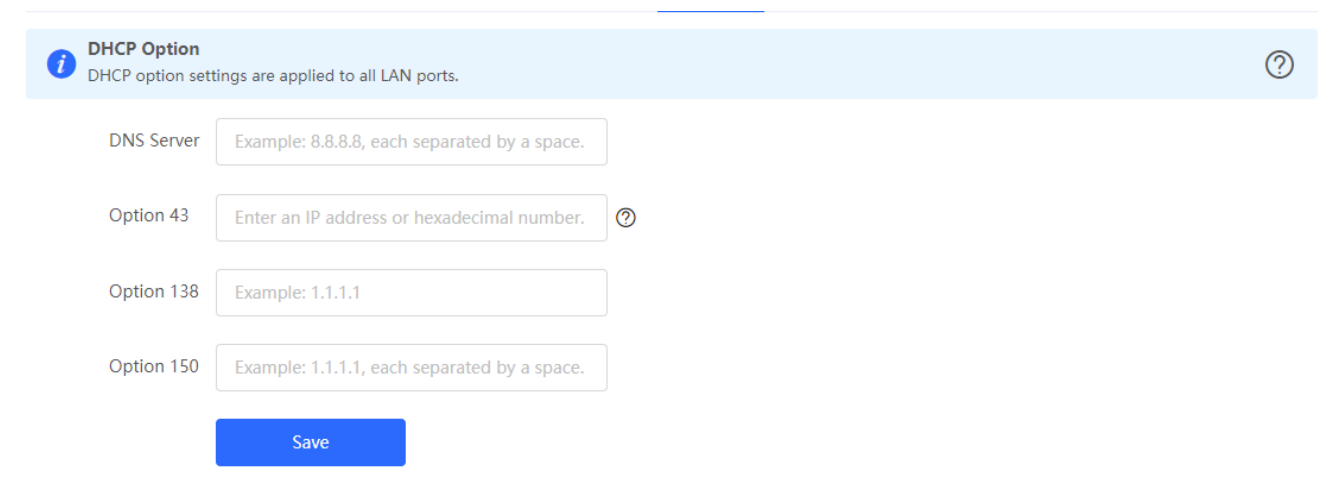

The DHCP Option configuration page features a light blue header with an information icon and the text 'DHCP Option' and 'DHCP option settings are applied to all LAN ports.' Below the header, there are four input fields: 'DNS Server' (example: 8.8.8.8, each separated by a space), 'Option 43' (example: Enter an IP address or hexadecimal number), 'Option 138' (example: 1.1.1.1), and 'Option 150' (example: 1.1.1.1, each separated by a space). A blue 'Save' button is located at the bottom.

3.3.2.2.5 DNS Proxy

The **DNS Proxy** module allows you to configure DNS proxy settings.

Figure 3-14 DNS Proxy

 **DNS Proxy**

DNS proxy is not required. The device will obtain the DNS server address from the uplink device by default.



DNS Proxy ☐

Save

3.3.2.3 IPv6 Address

After you enable **IPv6 Address**, the IPv6 tab pages of all WAN ports will be displayed in **WAN Settings**.

Figure 3-15 WAN Settings

IPv6 Address

i

1. When IPv6 is enabled, the MTU of IPv4 WAN port must be greater than 1280.

2. If you want to set more than one IPv6 LAN, please choose Port VLAN to set only one VLAN to UNTAG and set the other VLANs to Not Join.

IPv6 Address

WAN Settings

LAN Settings

DHCPv6 Client

WAN_V6

* Internet

DHCP

No username or password is required for DHCP clients.

IPv6 Address

0:0::0

IPv6 Prefix

Gateway

0:0::0

DNS Server

0:0::0

NAT66

Advanced Settings

* Default Preference

0

A smaller value indicates a higher preference.

Save

Figure 3-16 LAN Settings

IPv6 Address

1. When IPv6 is enabled, the MTU of IPv4 WAN port must be greater than 1280.

2. If you want to set more than one IPv6 LAN, please choose Port VLAN to set only one VLAN to UNTAG and set the other VLANs to Not Join.

IPv6 Address

WAN Settings

LAN Settings

DHCPv6 Client

LAN Settings

+ Add

Delete Selected

Up to 8 entries can be added.

	VLAN ID	IPv6 Assignment	Subnet Prefix Name	Subnet ID	Subnet Prefix Length	IPv6 Address/Prefix Length	Action
☐	Default	Auto		0	64		Edit Delete

Figure 3-17 Add LAN

Add

* VLAN ID

Select

IPv6 Assignment

Auto

IPv6 Address/Prefix

0:0::0

Length

Advanced Settings

Subnet Prefix Name

Default

Subnet Prefix Length

64

Subnet ID

0

* Lease Time(Min)

30

DNS Server

Example: 0:0::0, each separated by a comm

Cancel

OK

Figure 3-18 DHCPv6 Client

IPv6 Address

1. When IPv6 is enabled, the MTU of IPv4 WAN port must be greater than 1280.

2. If you want to set more than one IPv6 LAN, please choose Port VLAN to set only one VLAN to UNTAG and set the other VLANs to Not Join.

IPv6 Address

WAN Settings

LAN Settings

DHCPv6 Client

DHCP Clients

You can view the DHCP client information on this page.

DHCP Clients

Search by DUID

No.	Hostname	IPv6 Address	Remaining Lease Time(Min)	DUID
No Data				

<

1

>

10/page

Total 0

3.3.2.4 PoE

The **PoE** page displays PoE status and power consumption. Only the models ending with -P, e.g., EG105G-P and EG210G-P, support this feature.

Figure 3-19 PoE

PoE

PoE Consumption Details

Max Consumption
30.0W

Current Consumption
0.0W

Remaining Consumption
30.0W

PoE Device Panel

Powered On

Powered Off

Current Consumption: 0.0W

Current Consumption: 0.0W

0

3.3.2.5 IPTV/VLAN

Figure 3-20 IPTV/VLAN

**IPTV/VLAN settings.****IPTV/VLAN**

* Mode Custom

* LAN0 Internet

* LAN1 IPTV

* LAN2 IP-Phone

* LAN3/WAN1 Internet

* IPTV VLAN ID 10

* IP-Phone VLAN ID 20


Internet VLAN ☐ 802.1Q Tag

Save

3.3.2.6 Port VLAN

The **Port VLAN** page displays VLAN information.

Figure 3-21 Port VLAN

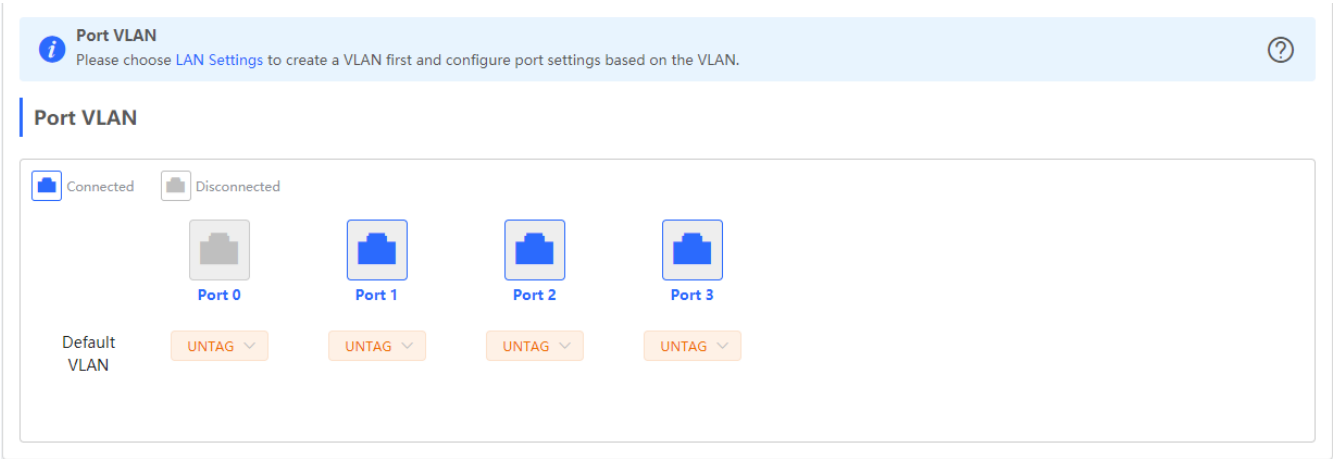

3.3.3 Security

3.3.3.1 ARP List

The **ARP List** page displays ARP entries.

Figure 3-22 ARP List

ARP List

 The device learns IP-MAC mapping of all devices connected to its interfaces. You can bind or filter the MAC address.

Enable ARP guard and configure IP-MAC binding to improve network security.



ARP Guard

ARP Guard ☐

Only the devices configured with IP-MAC binding are

allowed to access the Internet.

ARP List

Example: 1.1.1.1



+ Add

 Delete Selected

Up to 256 IP-MAC bindings can be added.

☐	No.	MAC	IP Address	Type	Action
☐	1	00:d3:f8:15:08:5c	192.168.110.89	Dynamic	Bind
☐	2	00:d0:f8:15:10:68	192.168.110.212	Dynamic	Bind
☐	3	00:d0:f8:15:08:62	192.168.110.178	Dynamic	Bind
☐	4	f8:bc:12:5d:44:7d	192.168.110.5	Dynamic	Bind
☐	5	00:d0:f8:15:01:a8	192.168.110.33	Dynamic	Bind
☐	6	00:74:9c:71:00:b9	172.30.111.1	Dynamic	Bind

Total 6


10/page

 **1** 

Go to page


1

Figure 3-23 ARP Guard

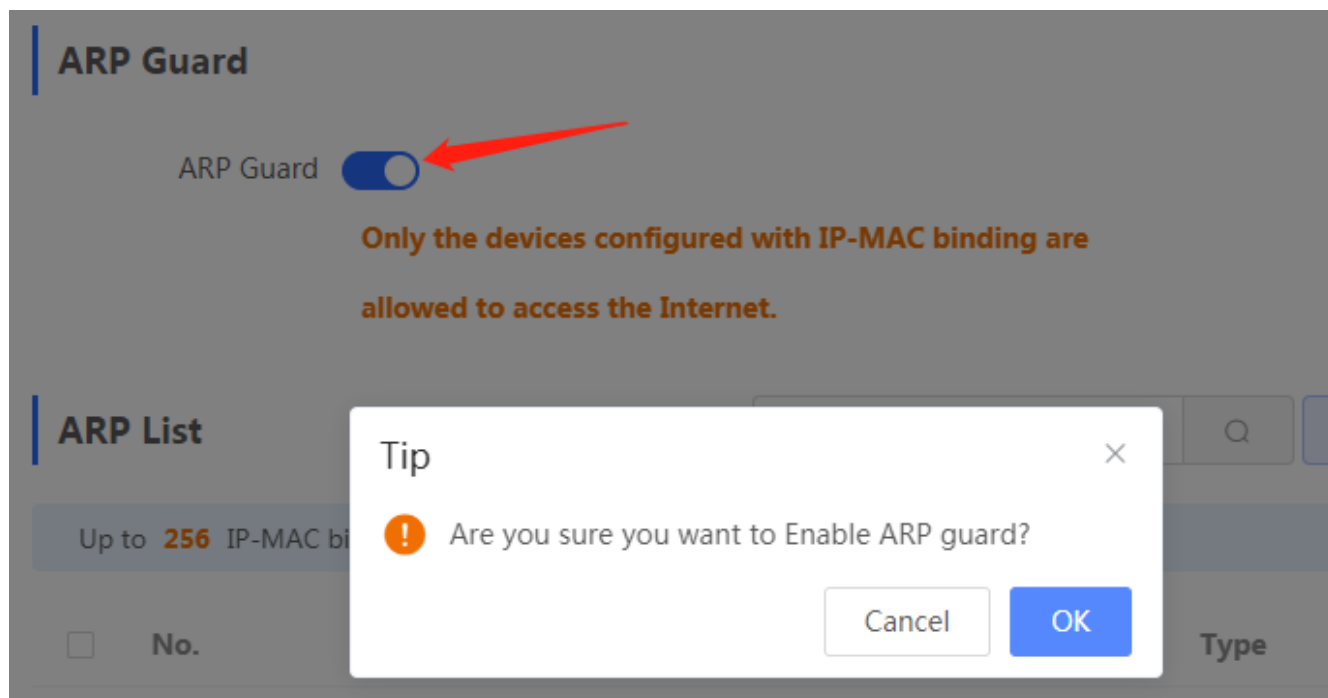

Click **Add** to add an IP-MAC binding. In the displayed dialog box, enter or select an IP address and a MAC address and click **OK**.

Figure 3-24 Add IP-MAC Binding

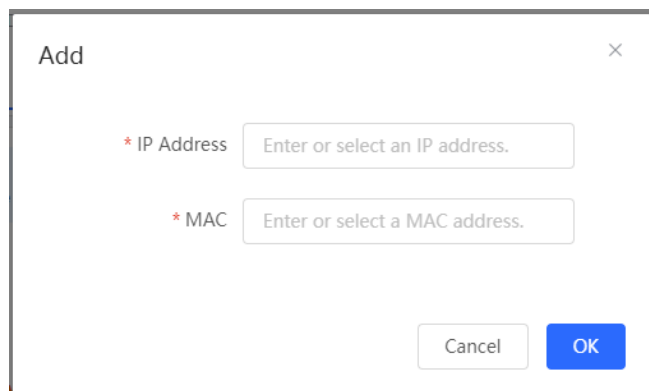

Click **Delete** in the **Action** column. The message "Are you sure you want to delete the entry?" is displayed. In the displayed dialog box, click **OK**. The message "Delete operation succeeded." is displayed.

3.3.3.2 MAC Filtering

The **MAC Filtering** module allows you to add, delete and edit MAC filtering entries.

Figure 3-25 MAC Filtering

MAC Filtering

Enable MAC address filtering and configure the filtering type to control the host's access to the Internet.

MAC Filtering

Click to enable MAC address filtering.

Filtering Type

Blacklist

Save

Filtering Rule List

+ Add

Delete Selected

Up to 80 rules can be added.

	MAC	Remark	Action
		No Data	

<

1

>

10/page

Total 0

Click **Add** to add a filtered MAC address. In the displayed dialog box, enter or select a MAC address and click **OK**.

Figure 3-26 Add Filtered MAC Address

Add

×

* MAC

Enter or select a MAC address.

Remark

Cancel

OK


Click **Delete** in the **Action** column. The message "Are you sure you want to delete the entry?" is displayed. In the displayed dialog box, click **OK**. The message "Delete operation succeeded." is displayed.

3.3.4 Behavior

3.3.4.1 App Control


The **App Control** module allows you to add, delete and edit application control policies.

Figure 3-27 App Control

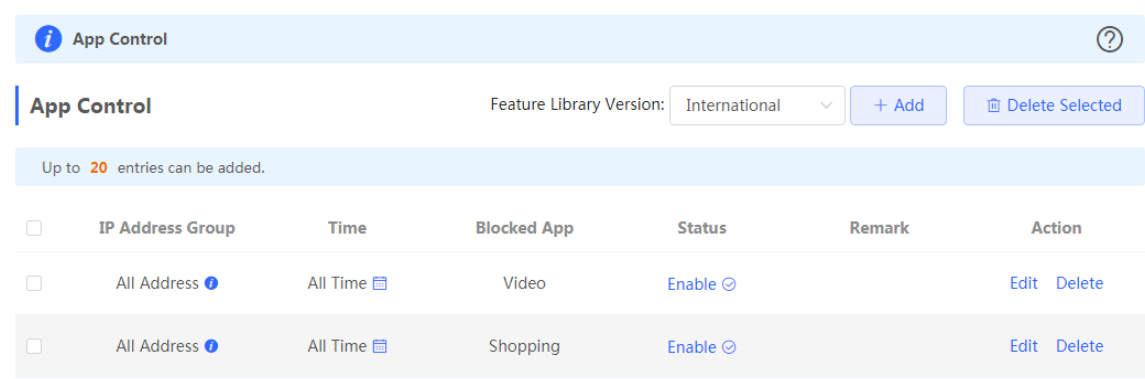


Select a feature library version from the dropdown list. In the displayed dialog box, click **OK** to confirm switchover.

Figure 3-28 Switch Feature Library Version

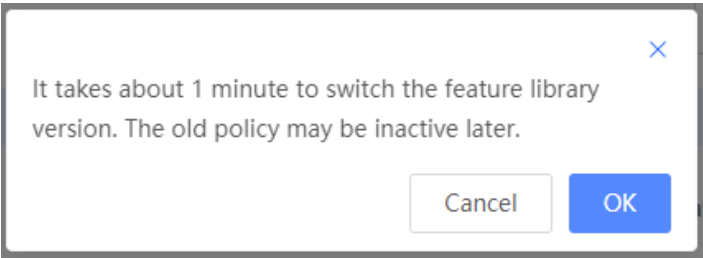


Click **Add** to add an application control policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-29 Add Application Control Policy

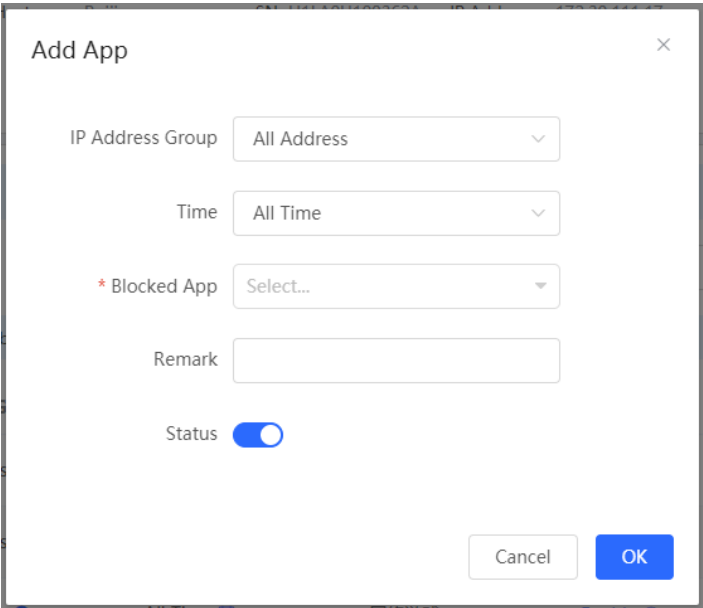

Define IP address groups on the **Address Management** page and you can select IP address groups here.

Figure 3-30 Select IP Address Group

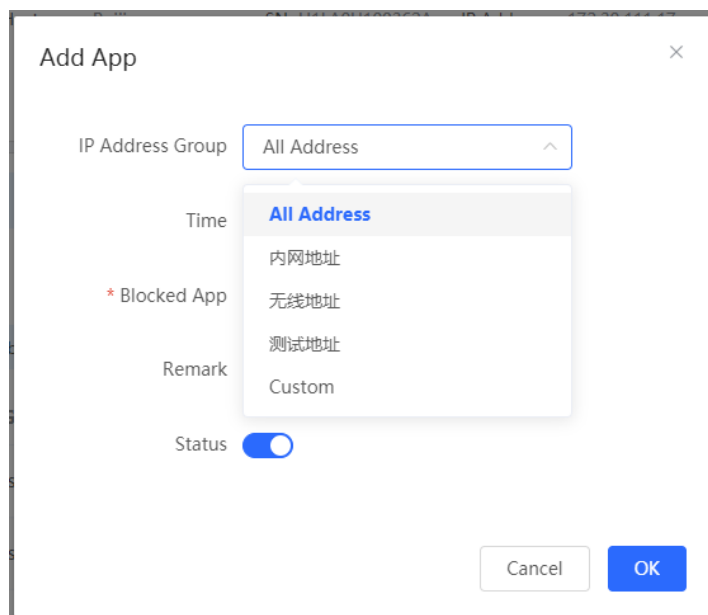


The 'Add App' dialog box contains the following fields and options:

- IP Address Group:** A dropdown menu with 'All Address' selected.
- Time:** A dropdown menu with 'All Address' selected. A list is open showing options: 'All Address' (highlighted), '内网地址' (Intranet Address), '无线地址' (Wireless Address), '测试地址' (Test Address), and 'Custom'.
- * Blocked App:** A dropdown menu (text is partially obscured).
- Remark:** A text input field.
- Status:** A toggle switch currently turned on.
- Buttons:** 'Cancel' and 'OK' buttons at the bottom right.

Define time objects on the **Time Management** page and you can select time objects here.

Figure 3-31 Select Time

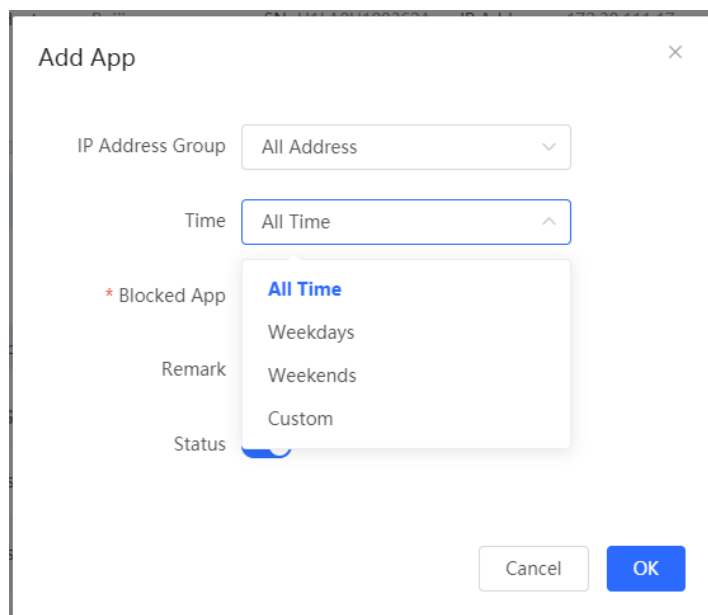


The 'Add App' dialog box contains the following fields and options:

- IP Address Group:** A dropdown menu with 'All Address' selected.
- Time:** A dropdown menu with 'All Time' selected. A list is open showing options: 'All Time' (highlighted), 'Weekdays', 'Weekends', and 'Custom'.
- * Blocked App:** A dropdown menu (text is partially obscured).
- Remark:** A text input field.
- Status:** A toggle switch currently turned on.
- Buttons:** 'Cancel' and 'OK' buttons at the bottom right.

Select the target application from the **Blocked App** dropdown list and click **OK**.

Figure 3-32 Select Blocked App

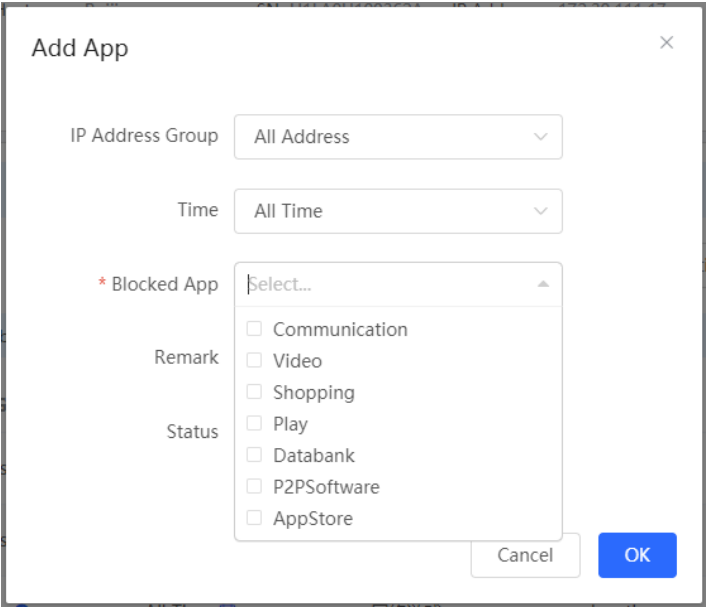


3.3.4.2 Website Management

3.3.4.2.1 Website Filtering

The **Website Filtering** module allows you to add, delete and edit website filtering policies.

Figure 3-33 Website Filtering

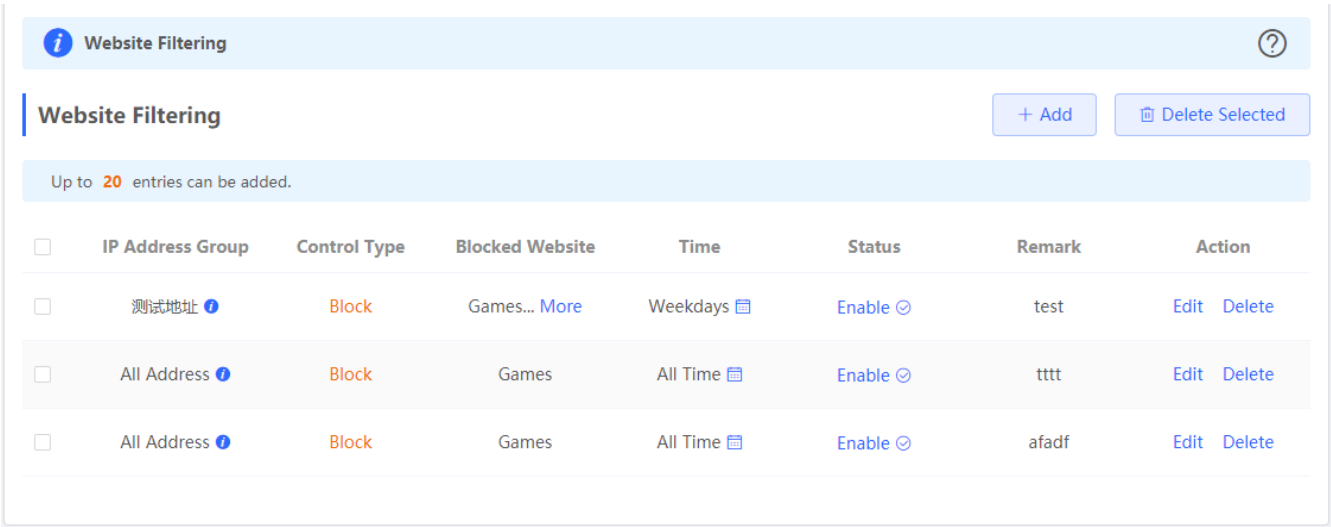

Click **Add** to add a website filtering policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-34 Add Website Filtering Policy

Add Website Filtering

IP Address Group

All Address

Time

All Time

* Blocked Website

Select...

Remark

Status

Cancel

OK

3.3.4.2.2 Website Group

The **Website Group** module allows you to add, delete and edit website grouping policies.

Figure 3-35 Website Group

Website Group

The group member can be a complete URL (example: www.baidu.com) or a domain (example: *.56.com).

Website Group

+ Add

Delete Selected

Up to 20 entries can be added.

	Group Name	Member	Action
☐	Games	duowan.com... More	Edit Delete
☐	Finance	*.10jqka.com.cn... More	Edit Delete
☐	Communication	*.baihe.com... More	Edit Delete
☐	Shopping	*.taobao.com... More	Edit Delete
☐	Live	*.55bbs.com... More	Edit Delete
☐	Lusic	*.1ting.com... More	Edit Delete
☐	Entertainment	67.com... More	Edit Delete

Click **Add** to add a website filtering policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-36 Add Website Grouping Policy

Add Group

* Group Name

Please enter a group name 1-64 charact

* Member

The group member can be a complete URL (example: www.baidu.com) or a domain (example: *.56.com).

Cancel

OK

3.3.4.3 QQ Management

The **QQ Management** module allows you to add, delete and edit QQ management policies.

Figure 3-37 QQ Management

Blacklist Mode

Only the blacklisted QQ will be blocked.

?

QQ Blacklist

+ Add

Delete Selected

Up to 20 entries and 200 QQ can be added.

☐	IP Address Group	Time	QQ	Status	Remark	Action
☐	All Address	All Time	1234567	Enable	test	Edit Delete

Click **Add** to add a QQ management policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-38 Add QQ Management Policy

Add

IP Address Group

All Address

Time

All Time

* QQ

The QQ must be a string consisting of 5-11 digits, each separated by a newline character.

Remaining 199

Remark

Status

Cancel

OK

3.3.4.4 Access Control

The **Access Control** module allows you to add, delete and edit access control policies.

Figure 3-39 Access Control

ACL

Configure ACL based on IP addresses. **Reverse flow mismatches** .
The policy cannot take effect on the WAN port to block the traffic among the internal users between an L2TP server and an L2TP client. The policy only takes effect in the LAN network.

i

Example: **Configure a deny ACL entry containing source IP address 192.168.1.0/24 and destination IP address 192.168.2.0/24.** Device configured with IP address 192.168.1.x will fail to access device 192.168.2.x. **But device 192.168.2.x will be allowed to access device 192.168.1.x.**
Tip: **Configure one more deny ACL entry containing source IP address 192.168.2.0/24 and destination IP address 192.168.1.0/24.** The two devices will be mutually unreachable.

?

ACL List

+ Add

Delete Selected

Up to 50 entries can be added.

☐	Rule	Control Type	Wireless Schedule	Interface	Effective State	Remark	Action
☐	Src IP Address 1.1.1.1 : 1111 Dest IP Address 2.2.2.2 : 222 Protocol All Protocols	Allow	All Time	WAN	Active	test	Edit Delete

Total 1


10/page

< 1 >

Go to page 1

Click **Add** to add a MAC-based policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-40 Add MAC-Based ACL

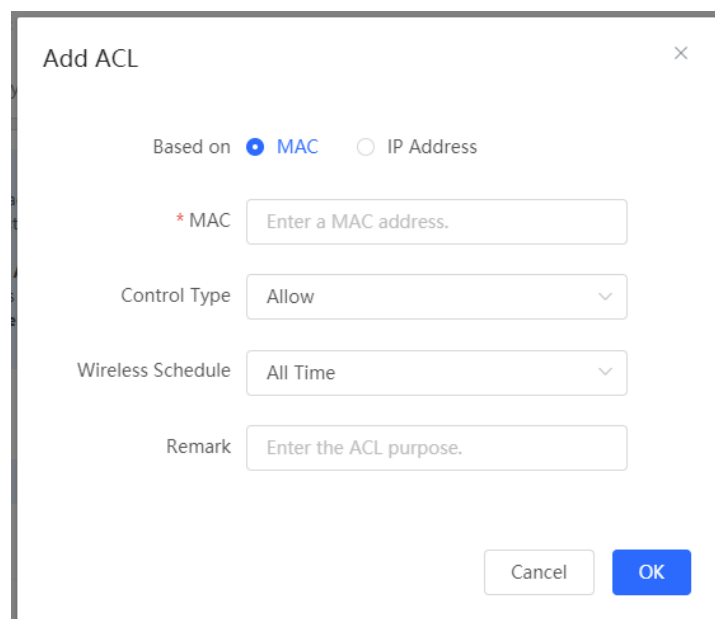


The dialog box titled "Add ACL" has a close button (X) in the top right corner. It contains the following fields and controls:

- Based on:** Two radio buttons, "MAC" (selected) and "IP Address".
- * MAC:** A text input field with the placeholder text "Enter a MAC address."
- Control Type:** A dropdown menu with "Allow" selected.
- Wireless Schedule:** A dropdown menu with "All Time" selected.
- Remark:** A text input field with the placeholder text "Enter the ACL purpose."
- Buttons:** "Cancel" and "OK" buttons at the bottom right.

Click **Add** to add an IP address-based policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-41 Add IP Address-Based ACL

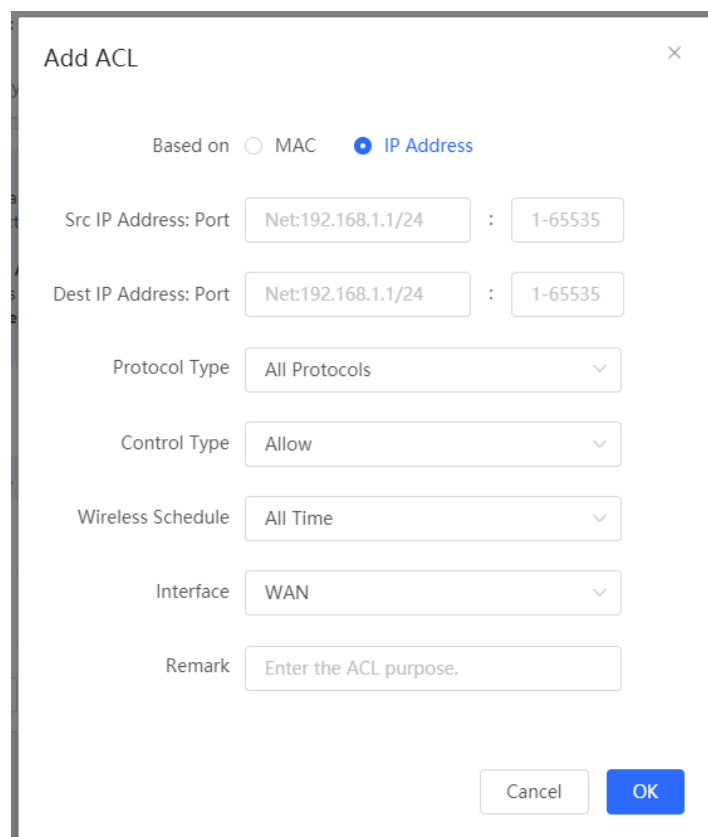

The dialog box titled "Add ACL" has a close button (X) in the top right corner. It contains the following fields and controls:

- Based on:** Two radio buttons, "MAC" and "IP Address" (selected).
- Src IP Address: Port:** Two input fields, the first with "Net:192.168.1.1/24" and the second with "1-65535", separated by a colon.
- Dest IP Address: Port:** Two input fields, the first with "Net:192.168.1.1/24" and the second with "1-65535", separated by a colon.
- Protocol Type:** A dropdown menu with "All Protocols" selected.
- Control Type:** A dropdown menu with "Allow" selected.
- Wireless Schedule:** A dropdown menu with "All Time" selected.
- Interface:** A dropdown menu with "WAN" selected.
- Remark:** A text input field with the placeholder text "Enter the ACL purpose."
- Buttons:** "Cancel" and "OK" buttons at the bottom right.

3.3.4.5 Address Management


The **Address Management** module allows you to add, delete and edit IP address groups.

Figure 3-42 IP Address Management



Click **Add** to add an IP address group. In the displayed dialog box, configure settings and click **OK**.

Figure 3-43 Add IP Address Group

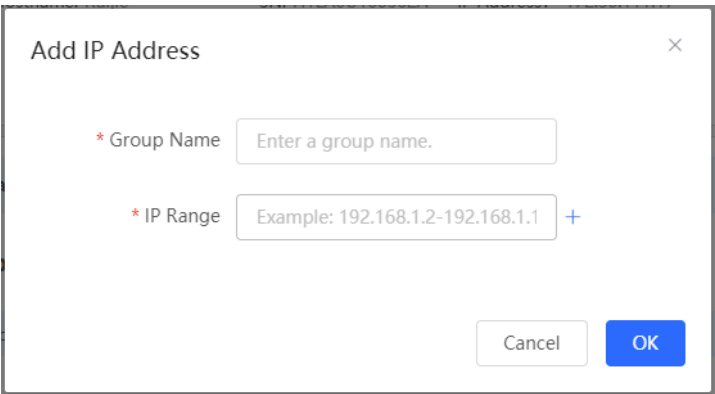

3.3.4.6 Time Management

The **Time Management** module allows you to add, delete and edit time objects.

Figure 3-3-41 Time List

Time List

Time List

+ AddDelete Selected

Up to 20 entries can be added.

☐	Time Name	Time Span	Action
☐	All Time		Edit Delete
☐	Weekdays		Edit Delete
☐	Weekends		Edit Delete

Click **Add** to add a time object. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-42 Add Time Object

Add Time

* Time Name

Please enter a time name.

* Time

Please Select Time

Cancel

OK

Click in the time list or in the **Add Time** box, and a time management page will appear.

Figure 3-3-43 Select Time

×

	Mon	Tue	Wed	Thu	Fri	Sat	Sun
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
23:59							

Close

Select the time and click **OK**.

3.3.5 VPN

3.3.5.1 IPSec

The **IPSec** module contains **IPSec Security Policy** and **IPSec Connection Status**.

3.3.5.1.1 IPSec Security Policy

The **IPSec Security Policy** module allows you to add, delete and edit IPSec security policies.

Figure 3-3-44 IPSec Security Policy

IPSec Security Policy

Note: Example: IP address/number of subnet mask bits.

Tip: If it is set to 192.168.110.x/24, the address range is from 192.168.110.1 to 192.168.110.254.

?

Policy List

[+ Add](#)

Up to 1 entries can be added.

Policy Type	Policy Name	Peer Gateway	Local Subnet	Peer Subnet	Status	Action
Client	aaa	1.1.1.1	1.1.1.0/24	2.1.1.0/24	Enable ☺	Edit Delete

Click **Add** to add a client-based policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-45 Add Client-Based Policy

Add

×

Policy Type

☒ Client ☐ Server

* Policy Name

Length: 1-28 characters long.

* Peer Gateway

IP/Domain

+

Interface

Auto

?

* Local Subnet

Example: 192.168.110.0/24

* Peer Subnet

Example: 192.168.110.0/24

+

* Pre-shared

Key

Status

☒

1. Set IKE Policy

2. Connection Policy

Cancel

OK

Click **Add** to add a server-based policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-46 Add Server-Based Policy

Add

×

Policy Type

☐ Client

☒ Server

* Policy Name

Length: 1-28 characters long.

Interface

Auto

?

* Local Subnet

Example: 192.168.110.0/24

* Pre-shared

Key

Status

☒

1. Set IKE Policy

2. Connection Policy

Cancel

OK

Only one policy can be added currently.

3.3.5.1.2 IPSec Connection Status

The **IPSec Connection Status** page displays IPSec connections.

Figure 3-3-47 IPSec Connection Status

[illegible]

3.3.5.2 L2TP

3.3.5.2.1 L2TP Settings

Layer 2 Tunneling Protocol (L2TP) is a computer networking protocol used by Internet service providers (ISPs) to enable virtual private network (VPN) operations. Because it does not provide any security for data such as encryption and confidentiality, an encryption protocol such as Internet Protocol security (IPsec) is often used with L2TP, namely, L2TP/IPsec.

Figure 3-3-48 L2TP Server Settings

 L2TP Settings 

Enable L2TP ☒

L2TP Type ☒ L2TP Server ☐ L2TP Client

* Local Address

* IP Range 

* DNS Server

IPSec Security 

* PPP Hello Interval Sec

Save

Figure 3-3-49 L2TP Client Settings

L2TP Settings

Enable L2TP

☒

L2TP Type

☐ L2TP Server ☒ L2TP Client

* Username

* Password

Interface

Tunnel IP

☒ Dynamic ☐ Static

* Server Address

* Peer Subnet

IPSec Security

Work Mode

☒ NAT ☐ Router

* PPP Hello Interval

Sec

Save

3.3.5.2.2 Tunnel List

Figure 3-3-50 L2TP Tunnel List

Tunnel List

Delete Selected

	Username	Server/Client	Tunnel Name	Virtual Local IP	Access Server IP	Peer Virtual IP	DNS	Action
No Data								

3.3.5.3 PTP

Figure 3-3-51 PTP Server Settings

 **PTP Settings**



Enable PTP ☒

PTP Type ☒ PTP Server ☐ PTP Client

* Local Address

* IP Range 

* DNS Server

* PPP Hello Interval Sec

Figure 3-3-52 PTP Client Settings

i PPTP Settings ?

Enable PPTP ☒

PPTP Type ☐ PPTP Server ☒ PPTP Client

* Username

Username of PPTP user

* Password

Password of PPTP user 👁

Interface

WAN ▼

Tunnel IP ☒ Dynamic ☐ Static

* Server Address

Example: 1.1.1.1

* Peer Subnet

Example: 192.168.110.0/24

Work Mode ☒ NAT ☐ Router

* PPP Hello Interval

10

Sec

Save

Figure 3-3-53 PPTP Tunnel List

i Tunnel List ?

Delete Selected

☐	Username	Server/Client	Tunnel Name	Virtual Local IP	Access Server IP	Peer Virtual IP	DNS	Action
No Data								

3.3.5.4 VPN Clients

Figure 3-3-54 VPN Clients

 VPN Clients



VPN Client List

+ Add

 Delete Selected

Up to **30** entries can be added.

☐	Username	Service Type	Network Mode	Peer Subnet	Status	Action
No Data						

Click **Add** to add a vpn client. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-55 VPN Clients

Add User

×

Service Type

ALL

▼

* Username

Please enter a username.

* Password

Please enter a password.



Network Mode

PC to Router

▼

Status

☒

Cancel

OK

3.3.6 Advanced

3.3.6.1 Routing

3.3.6.1.1 PBR

The **PBR** module allows you to add, delete and edit policy-based routes.

Figure 3-3-56 PBR List

PBR

Route Priority: PBR > Static Routing > ISP Routing.

Note: PBR is more flexible than destination-based routing.

PBR List

+ Add

Delete Selected

Up to 30 entries can be added.

☐	Name	Protocol Type	Src IP Address	Dest IP Address	Src Port Range	Dest Port Range	Outbound Interface	Status	Action
No Data									

Click **Add** to add a policy-based route. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-57 Add PBR

Add PBR

*

Name

Protocol Type

IP

Src IP/IP Range

All IP Addresses

Dest IP/IP Range

All IP Addresses

Outbound Interface

WAN

Status


Cancel

OK

3.3.6.1.2 Static Routing

The **Static Routing** module allows you to add, delete and edit static routes.

Figure 3-3-58 Static Route List

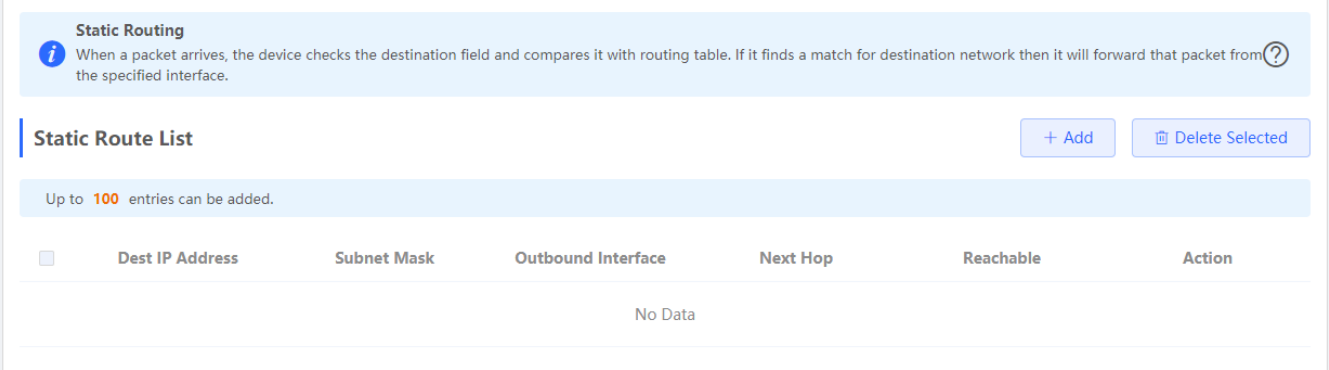

Click **Add** to add a static route. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-59 Add Static Route

Edit

*

 Dest IP Address

*

 Subnet Mask

255.255.255.0

*

 Outbound Interface

Select

▼

*

 Next Hop

Cancel

OK

3.3.6.2 Flow Control

3.3.6.2.1 Smart Flow Control

The **Smart Flow Control** module allows you to configure smart flow control.

Figure 3-3-60 Smart Flow Control


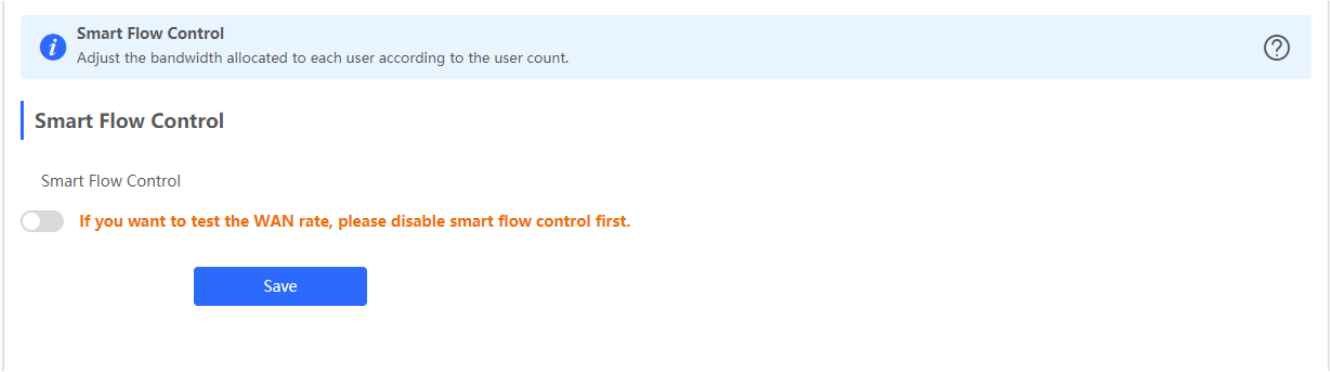


Figure 3-3-61 Enable Smart Flow Control

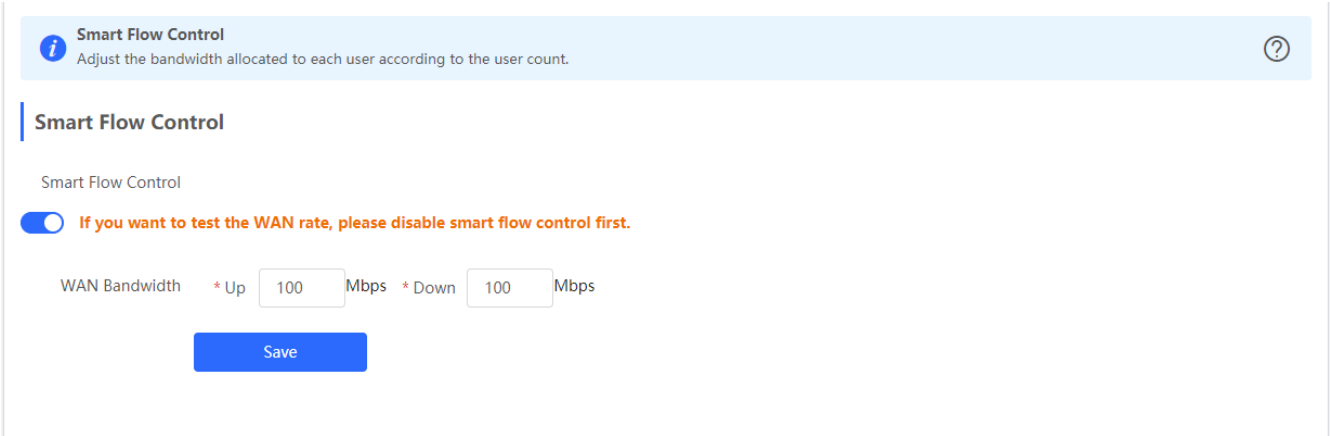


If there is more than one WAN port, **WAN Bandwidth** settings of each port will be displayed accordingly.

3.3.6.2.2 Custom Policy

The **Custom Policy** module allows you to add, delete and edit custom flow control policies.

Figure 3-3-62 Custom Flow Control Policy

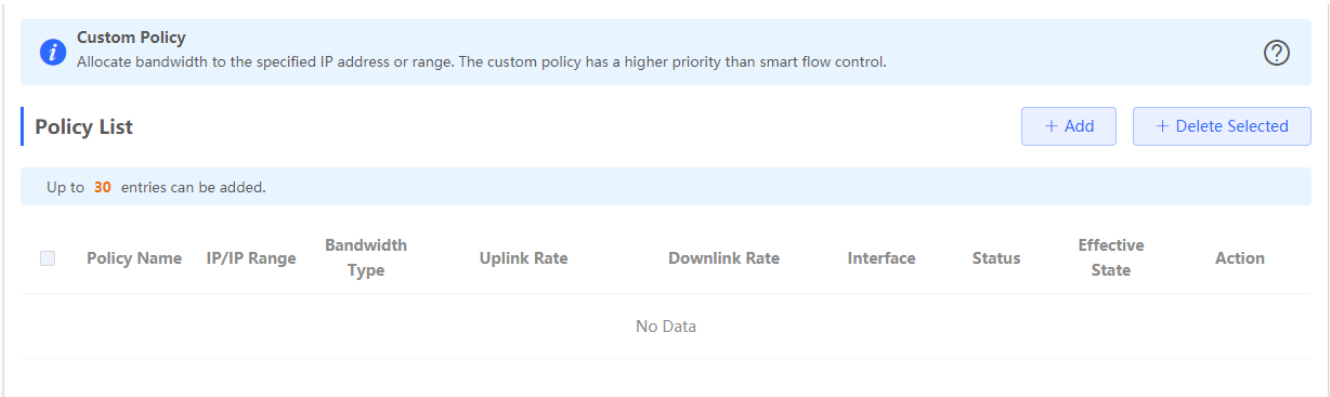

Click **Add** to add a custom flow control policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-63 Add Flow Control Policy

Add

*

Policy Name

*

IP/IP Range

Example: 192.168.1.2-192.168.1.100

Bandwidth Type

Share

Uplink Rate

*

CIR

*

PIR

Kbps

Downlink Rate

*

CIR

*

PIR

Kbps

Interface

WAN

Status

Cancel

OK

3.3.6.3 PPPoE Server

3.3.6.3.1 Global Settings

Figure 3-3-64 Global Settings

Global Settings

i

1. MAC binding and MAC filtering are not valid for PPPoE clients.

2. The IP address of the PPPoE server cannot overlap with any interface IP range.

3. The authentication function is not valid for PPPoE clients.

?

PPPoE Server

Enable

•

Disable

Mandatory PPPoE Dialup

Enable

•

Disable

* Local Address

10.44.66.99

* IP Range

10.44.66.100-10.44.66.200

VLAN

Default VLAN

▼

Primary DNS Server

Example: 1.1.1.1

Secondary DNS Server

Example: 1.1.1.1

* Unanswered LCP

10

Range: 1-60

Packet Limit

Auth Mode

✓

PAP

✓

CHAP

✓

MSCHAP

✓

MSCHAP2

Save

3.3.6.3.2 Account Settings

Figure 3-3-65 Account Settings

Account Settings

The account management is not in effect.Enable smart flow control

Account List

+ AddDelete Selected

Up to 65 entries can be added. Clients 0

	Username	Password	Expire Date	Status	Account Management	Remark	Action
No Data							

Click **Add** to add a account. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-66 Add Account Settings

Add

*

Username

Please enter a username.

*

Password

Please enter a password.

Expire Date

Select a time.

Remark

Length: 1-50 characters long.

Status

Flow Control

The account management is not in effect.Enable smart flow control

Cancel

OK

3.3.6.3.3 Account Management

Figure 3-3-67 Account Management

Account Management List

+ Add

+ Delete Selected

Up to 10 entries can be added.

The account management is not in effect.[Enable smart flow control](#)

☐	Account Name	Uplink Rate	Downlink Rate	Interface	Action
No Data					

Click **Add** to add a IP In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-68 Add Account Management

Add

×

* Account Name

Uplink Rate

* CIR

* PIR

Kbps

Downlink Rate

* CIR

* PIR

Kbps

Interface

WAN

▼

Cancel

OK

3.3.6.3.4 Exceptional IP Address

Figure 3-3-69 Exceptional IP Address

Exceptional IP Address					
Exceptional IP Address List					
Up to 5 entries can be added.					
☐	Start IP Address	End IP Address	Remark	Status	Action
No Data					

Click **Add** to add a IP In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-70 Add Exceptional IP Address

Add

×

* Start IP

Address

* End IP

Address

Remark

Status


☒

Cancel

OK

3.3.6.3.5 Online Clients

Figure 3-3-71 Online Clients

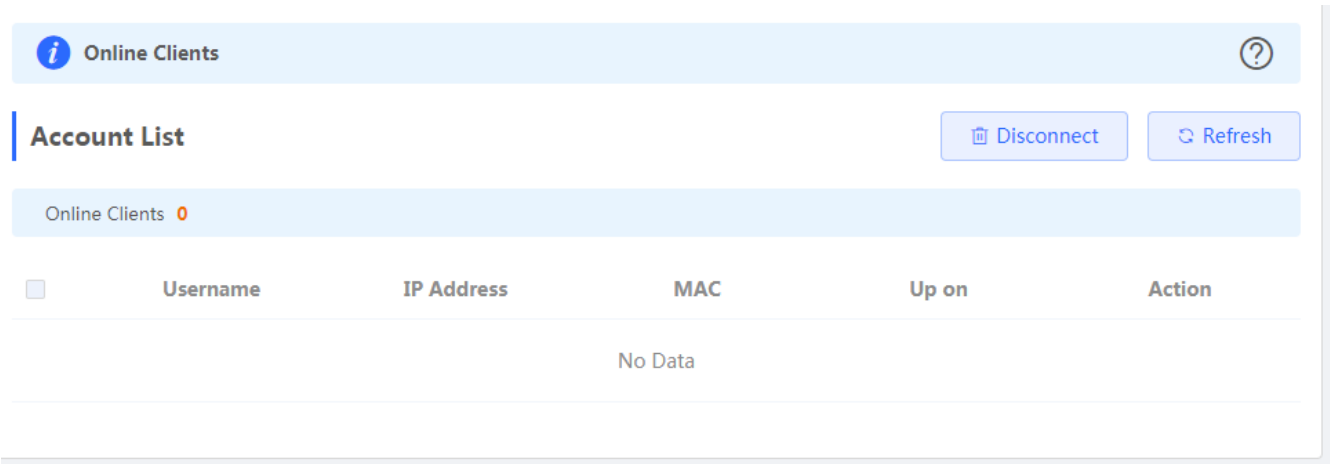

3.3.6.4 Authentication

3.3.6.4.1 Cloud Auth

Figure 3-3-72 Cloud Auth



Ruijie Cloud supports voucher authentication, local account authentication, SMS authentication and one-click authentication. Please log into Ruijie Cloud to enable authentication. [View](#)



If the IP address of the EAP device is in the authentication IP range, please choose **Whitelist** to add the EAP MAC address to the MAC address whitelist.

Authentication ☒

* Server Type

* Auth Server URL

Client Escape ☒ [Enable](#)

* IP/IP Range

3.3.6.4.2 Local Account Auth

Figure 3-3-73 Cloud Auth

Local Account Auth

1. Enable account authentication and create an account.

i

2. A user logs in with the account created in step 1 and will be allowed to access the Internet.

?

Make sure that the device can access the Internet. Otherwise, the Portal page may not pop up on the terminal.

If the IP address of the EAP device is in the authentication IP range, please choose Whitelist to add the EAP MAC address to the MAC address whitelist.

Local Account Auth

Accounts

0

* Auth IP/IP Range

Example: 1.1.1.1-1.1.1.100

Add

Save

Account Settings

Search by Username

Search

+ Add

🗑

Delete Selected

Up to 200 accounts can be added.

☐	Username	Password	MAC	Action
No Data				

Click **Add** to add a Account In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-74 Add Account

Add Account

* Username

Username

* Password

Password

Cancel

OK

3.3.6.4.3 Authorized Auth

Figure 3-3-75 Authorized Auth

Authorized Auth

An authenticated user can authorize guests by scanning his QR code.

i

Make sure that the device can access the Internet. Otherwise, the Portal page may not pop up on the terminal.

?

If the IP address of the EAP device is in the authentication IP range, please choose Whitelist to add the EAP MAC address to the MAC address whitelist.

Authorized Auth

☒

Popup Message

* Auth IP/IP Range

Example: 1.1.1.1-1.1.1.100

Add

Limit Online Duration

☐

* Authorization IP/IP

Example: 1.1.1.1-1.1.1.100

Range

Save

3.3.6.4.4 QR Code Auth

Figure 3-3-76 QR Code Auth

QR Code Auth

A user can access the Internet by scanning the specified QR code.

i

Make sure that the device can access the Internet. Otherwise, the Portal page may not pop up on the terminal.

?

If the IP address of the EAP device is in the authentication IP range, please choose Whitelist to add the EAP MAC address to the MAC address whitelist.

QR Code Auth

* Authorization IP/IP Range

Example: 1.1.1.1-1.1.1.100

Add

Limit Online Duration

QR Code Generator

* Dynamic QR Code

defqrcode

Popup Message



Please print and paste the QR code for guests to scan.

Save

3.3.6.4.5 WhiteList

Figure 3-3-77 User Whitelist

User Whitelist

+ Add

Delete Selected

Up to 50 entries can be added.

	IP/IP Range	Action
No Data		

<

1

>

10/page

Total 0

Click **Add** to add a User In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-78 Add User

Add

* IP/IP Range

Example: 1.1.1.1-1.1.1.100

Cancel

OK

Figure 3-3-79 IP Whitelist

IP Whitelist

+ Add

Delete Selected

Up to 50 entries can be added.

☐	IP/IP Range	Action
No Data		

<

1

>

10/page

Total 0

Click **Add** to add a IP In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-80 Add IP

Add

* IP/IP Range

Example: 1.1.1.1-1.1.1.100

Cancel

OK

Figure 3-3-81 URL Whitelist

URL Whitelist

+ Add

Delete Selected

Up to 100 entries can be added.

☐	URL	Action
☐	ruijienetworks.com	Edit Delete

<

1

>

10/page

Total 1

Click **Add** to add a URL In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-82 Add URL

Add

* URL

Cancel

OK

Figure 3-3-83 MAC Whitelist

MAC Whitelist

+ Add

Delete Selected

Up to 250 entries can be added.

☐	MAC	Action
No Data		

<

1

>

10/page

Total 0

Click **Add** to add a MAC In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-84 Add MAC

Add

×

* MAC

Example: 00:11:22:33:44:55

Cancel

OK

Figure 3-3-85 MAC Blacklist

MAC Blacklist

+ Add

🗑 Delete Selected

Up to 250 entries can be added.

☐	MAC	Action
No Data		

<

1

>

10/page ▾

Total 0

Click **Add** to add a MAC In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-86 Add MAC

Add

×

* MAC

Example: 00:11:22:33:44:55

Cancel

OK

3.3.6.4.6 Online Users

Figure 3-3-87 Online Users

i Online Clients

Auth Settings

Idle Client Timeout Min (Range: 5-65535)

Save

Online Clients

Search by IP Address

☐	Username	IP	MAC	Up on	Duration(Sec)	Auth Type	Status	Action
No Data								

< 1 >

10/page

Total 0

3.3.6.5 Session Limit

The **Session Limit** module allows you to add, delete and edit session limit policies.

Figure 3-3-88 IP Session Limit

i IP Session Limit
Configure the max number of IP sessions. ?

Rule List

Up to 20 entries can be added.

☐	Name	IP Range	Session Count Limit	Status	Action
No Data					

Click **Add** to add a session limit policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-89 Add Session Limit Policy

Add

*

Name

*

Start IP Address

Example: 1.1.1.1

*

End IP Address

Example: 1.1.1.1

*

Session Count Limit

1000

Status

Cancel

OK

3.3.6.6 Port Mapping

3.3.6.6.1 Port Mapping

The **Port Mapping** module allows you to add, delete and edit port mapping policies.

Figure 3-3-90 Port Mapping List

i

Port Mapping

?

Port Mapping List

+ Add

🗑

 Delete Selected

Up to 50 entries can be added.

☐	Name	Protocol	External IP Address	External Port	Internal IP Address	Internal Port	Action
☐	est-ap	TCP	172.30.111.23	6677	192.168.110.73	80	Edit Delete
☐	est-cpe	TCP	172.30.111.23	6688	192.168.110.76	80	Edit Delete
☐	msw	TCP	172.30.111.23	3366	192.168.110.89	80	Edit Delete
☐	msw-ssh	TCP	172.30.111.23	6699	192.168.110.89	54133	Edit Delete

Click **Add** to add a port mapping policy. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-91 Add Port Mapping Policy

Add

*

Name

Protocol

UDP

External IP Address

Default: WAN IP address.

*

External Port/Range

Example: X or X-X (Range: 1-6553!)

*

Internal IP Address

Enter or select an IP address.

*

Internal Port/Range

Example: X or X-X (Range: 1-6553!)

Cancel

OK

3.3.6.6.2 NAT-DMZ

The NAT-DMZ module allows you to add, delete and edit NAT-DMZ rules.

Figure 3-3-92 NAT-DMZ Rule List

i

NAT-DMZ

You can view NAT-DMZ settings and edit or delete the rule.

?

NAT-DMZ Rule List

+ Add

🗑

 Delete Selected

There are 1 outbound interfaces. Up to 1 rules can be added.

☐	Name	Outbound Interface	Dest IP Address	Status	Action
No Data					

Click **Add** to add a NAT-DMZ rule. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-93 Add NAT-DMZ Rule

Add Rule

*

Name

*

Dest IP Address

Example: 1.1.1.1

Outbound Interface

WAN

Status

Cancel

OK

3.3.6.7 Dynamic DNS

3.3.6.7.1 Peanut Shell NAT

It is recommended to use WeChat or Peanut Shell to scan the QR code.

Figure 3-3-94 Peanut Shell NAT

Peanut Shell NAT

It is recommended to use WeChat or Peanut Shell to scan the QR code.

Peanut Shell NAT

Enable

Click to switch the status.

Save

Service Status

Online

Scan to Login



3.3.6.7.2 Dynamic DNS

It is recommended to use Peanut Shell for NAT, including TCP, UDP, HTTP and HTTPS mapping.

Figure 3-3-95 Dynamic DNS

 **Dynamic DNS**
It is recommended to use Peanut Shell for NAT, including TCP, UDP, HTTP and HTTPS mapping.

Dynamic DNS

* Preferred Interface

WAN

* Username

15396042844

* Password

.....

Log In

Delete

Link Status

Connection success.

Domain

emptynamea.vicp.net

3.3.6.7.3 No-IP DNS

Figure 3-3-96 No-IP DNS

 **No-IP DNS**

No-IP DNS

* Service Interface

WAN

* Username

Register

* Password

Domain

Log In

Delete

Link Status

-

Domain

-

3.3.6.7.4 DynDNS

Figure 3-3-97 Local DNS

**Peanut Shell NAT**

It is recommended to use WeChat or Peanut Shell to scan the QR code.

Enable ☐

Save

Service Status -

3.3.6.8 Local DNS

The **Local DNS** module allows you to configure a local DNS server.

Figure 3-3-98 Local DNS

**Local DNS server**

The local DNS server is not required to be configured. By default, the device will get the DNS server address from the uplink device.

Local DNS server

Save

3.3.6.9 Other Settings

Figure 3-3-99 Other Settings

i Other Settings

Other Settings

Enable RIP&RIPng ☒

Encryption

Plain Text

* Password

Please enter a pa

Enable Advanced ☒ ?

Security

Disable ICMPv6 Error ☒

Messages

☐ Destination Unreachable

☐ Datagram Too Big

☐ Time Exceeded

☐ Parameter Problem

Save

3.3.7 Diagnostics

3.3.7.1 Network Check

Figure 3-3-99 Network Check

i Network Check ?

Start


Click **Start**, and click **OK** in the confirmation box. After the test finishes, the result will be displayed.

Figure 3-3-100 Result



If any problem occurs, the result will be displayed as follows:

Figure 3-3-101 Issue & Advice

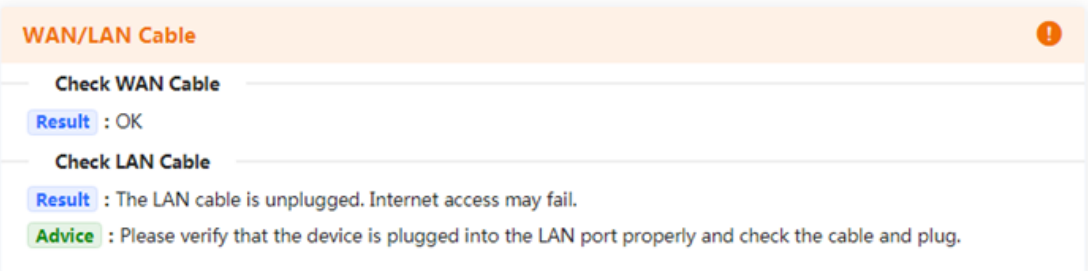


Please fix the problem by taking the suggested action.

3.3.7.2 Alarms


The **Alarms** module allows you to view and manage alarms in the network.

Figure 3-3-102 Alarms

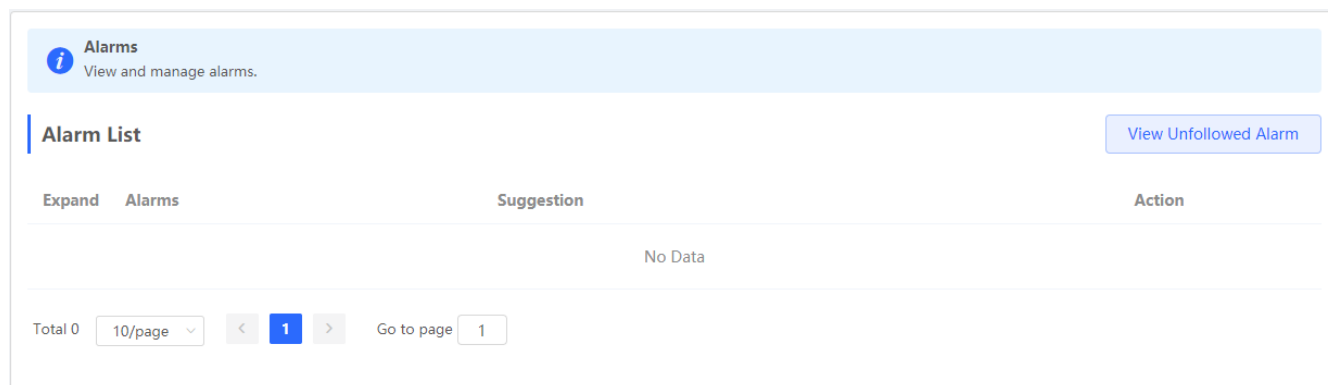


Click **Unfollow** in the **Action** column to unfollow an alarm. In the confirmation box, click **OK**.

Figure 3-3-103 Unfollow Alarm

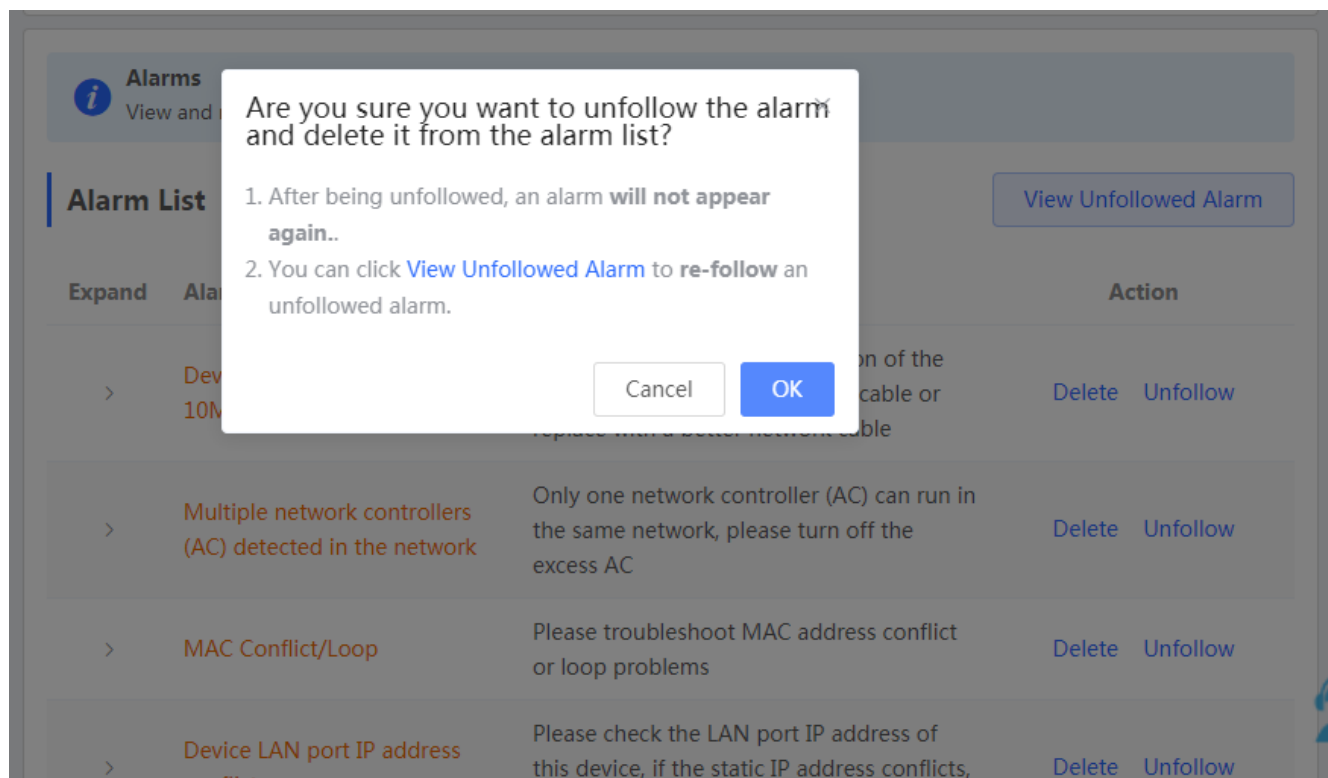

Click **View Unfollowed Alarm**, and you can view and follow the alarm again.

Figure 3-3-104 Re-follow Alarm

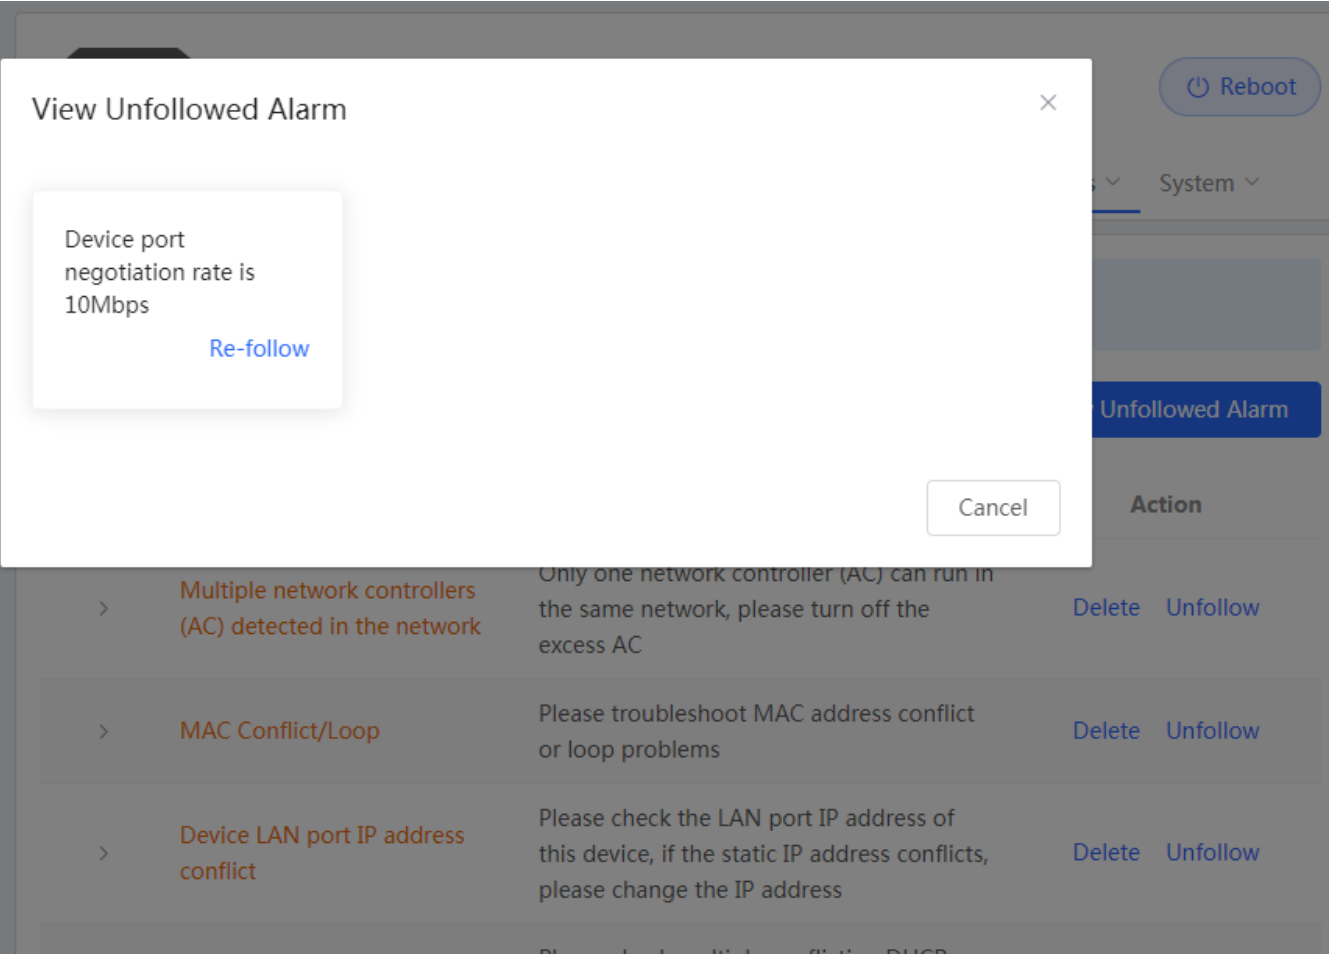

3.3.7.3 Network Tools

The **Network Tools** module provides the following network tools to detect the network status: **Ping**, **Traceroute**, and **DNS Lookup**.

Figure 3-3-105 Ping Test and Result

Network Tools

Tool

☒ Ping

☐ Traceroute

☐ DNS Lookup

* IP Address/Domain

www.google.com

* Ping Count

4

* Packet Size

64

Bytes

Start

Stop

Result

Figure 3-3-106 Traceroute Test and Result

Network Tools

Tool

☐ Ping

☒ Traceroute

☐ DNS Lookup

* IP Address/Domain

www.google.com

* Max TTL

20

Start

Stop

Result

Figure 3-3-107 DNS Lookup Test and Result

Network Tools

Tool

☐ Ping

☐ Traceroute

☒ DNS Lookup

* IP Address/Domain

www.google.com

Start


Stop

Result

3.3.7.4 Packet Capture

The **Packet Capture** module allows you to perform packet capture and download the result for troubleshooting.

Figure 3-3-108 Packet Capture

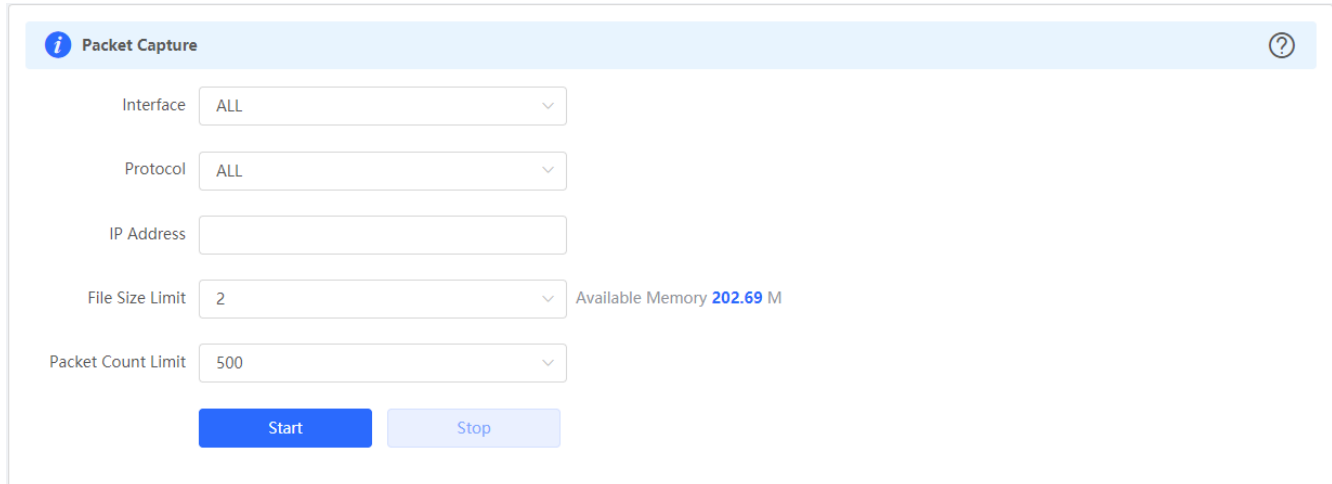


The screenshot shows the 'Packet Capture' configuration page. At the top, there is a blue header bar with an information icon and a help icon. Below the header, the configuration options are as follows:

- Interface:** A dropdown menu set to 'ALL'.
- Protocol:** A dropdown menu set to 'ALL'.
- IP Address:** An empty text input field.
- File Size Limit:** A dropdown menu set to '2'. To its right, it says 'Available Memory 202.69 M'.
- Packet Count Limit:** A dropdown menu set to '500'.

At the bottom of the configuration area, there are two buttons: a blue 'Start' button and a light blue 'Stop' button.

Specify an IP address and click **Start**. After a few seconds, click **Stop**.

Figure 3-3-109 Start Packet Capture

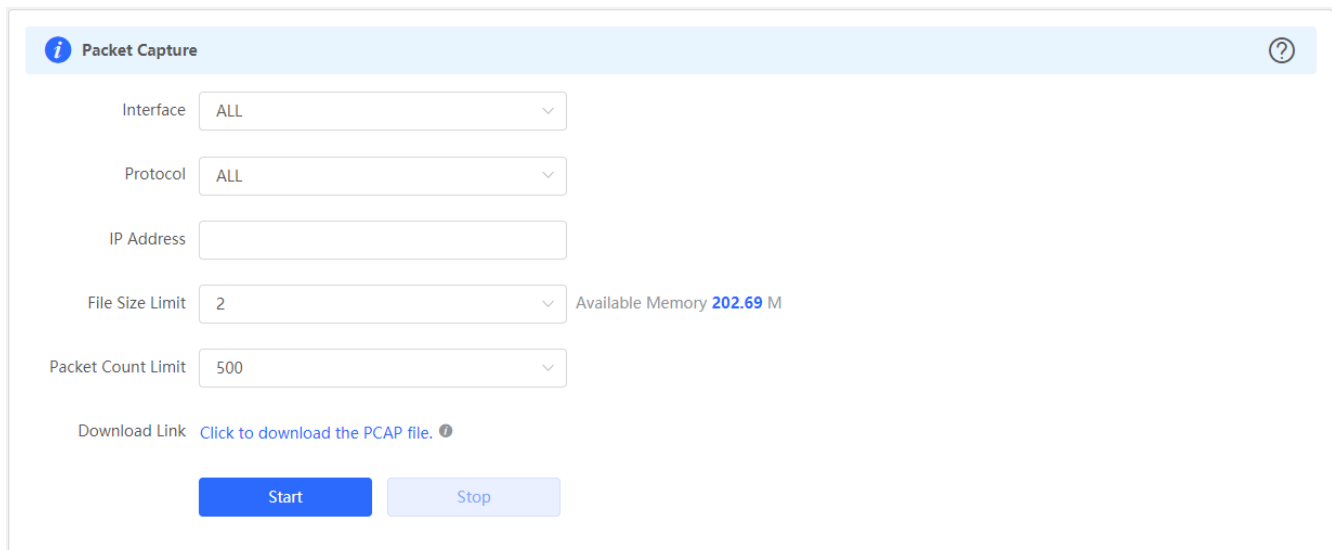

This screenshot is identical to the previous one, showing the 'Packet Capture' configuration page. However, a new element has been added at the bottom of the configuration area:

- Download Link:** A text label followed by a blue hyperlink that says 'Click to download the PCAP file.' and a small help icon.

The 'Start' and 'Stop' buttons remain at the bottom.

Click to download the packet capture result in the PCAP format.

3.3.7.5 Fault Collection

The **Fault Collection** module allows you to collect faults by one click and download the fault information to the local device.

Figure 3-3-110 Fault Collection

 **Fault Collection**

Compress the configuration file for engineers to identify fault.

Start

3.3.8 System

3.3.8.1 Session Timeout

The **Session Timeout** module allows you to set the session timeout period for login to the eWeb management system.

Figure 3-3-111 Session Timeout

 **Session Timeout**



* Session Timeout Sec

Save

3.3.8.2 Backup & Import

The **Backup & Import** module allows you to import a configuration file and apply the imported settings. It also allows exporting the configuration file to generate a backup.

Figure 3-3-112 Backup & Import

 **Backup & Import**

If the target version is much later than the current version, some configuration may be missing.
It is recommended to choose [Reset](#) before importing the profile. The device will be rebooted automatically later.



Backup Profile

Backup Profile


Import Profile

File Path

3.3.8.3 Restore


The **Restore** module allows you to restore the device to factory settings.

Figure 3-3-113 Restore

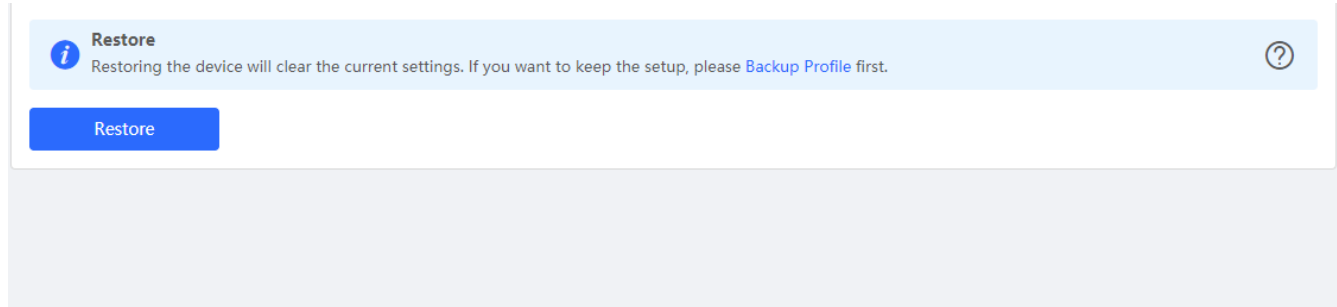

Please exercise caution if you want to restore the factory settings.

Figure 3-3-114 Confirm Restore

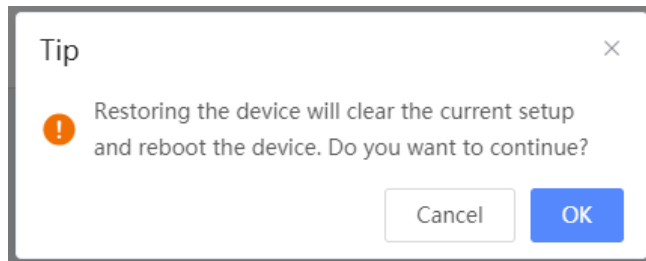


Click **OK** to restore all default values. This function is recommended when the network configuration is incorrect or the network environment is changed..

3.3.8.4 Online upgrade

Click **Upgrade Now**. The device downloads the upgrade package from the network, and upgrades the current version. The upgrade operation retains configuration of the current device. Alternatively, you can select **Download File** to the local device and import the upgrade package on the [Local Upgrade](#) page. If there is no available new version, the device displays a prompt indicating that the current version is the latest.


Figure 3-3-115 Online Upgrade

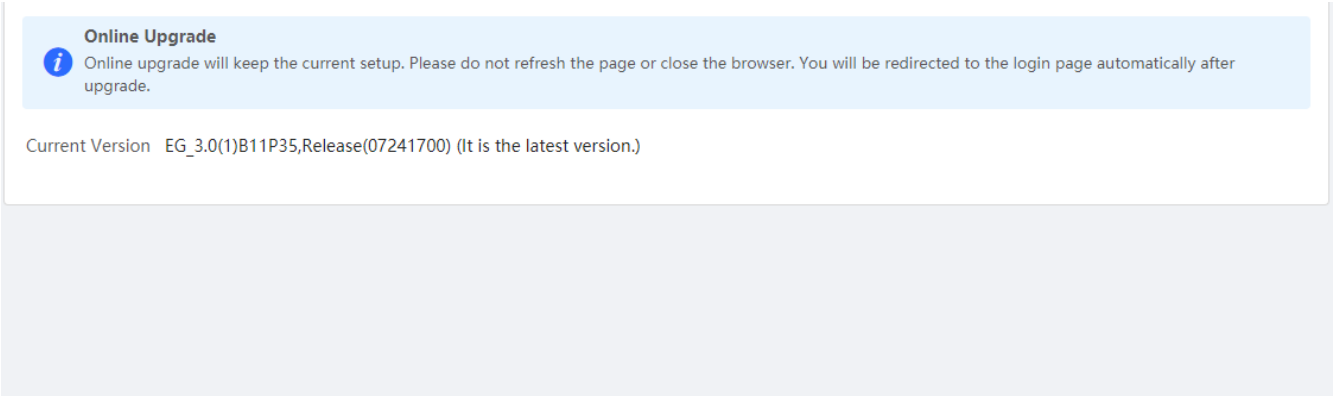

3.3.8.5 Local Upgrade

Click **Browse** to select an upgrade package, and click **Upload**. After uploading and checking the package, the device displays the upgrade package information and a prompt asking for upgrade confirmation. Click **OK** to start the upgrade.


Figure 3-3-116 Local Upgrade

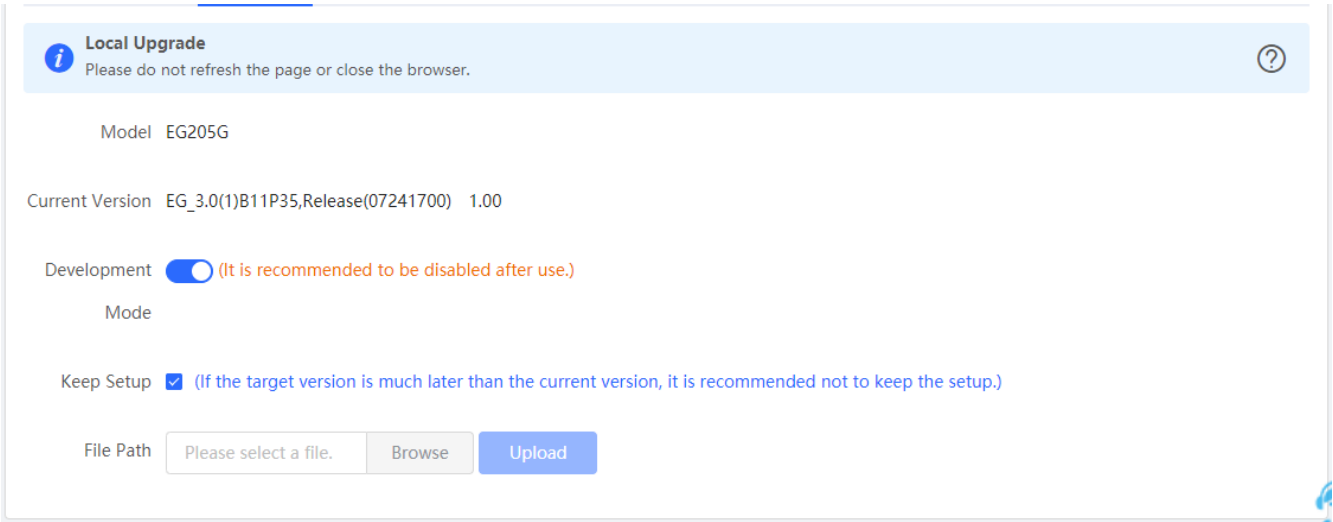

3.3.8.6 Reboot

The **Reboot** module allows you to reboot the device immediately.

Figure 3-3-117 Reboot

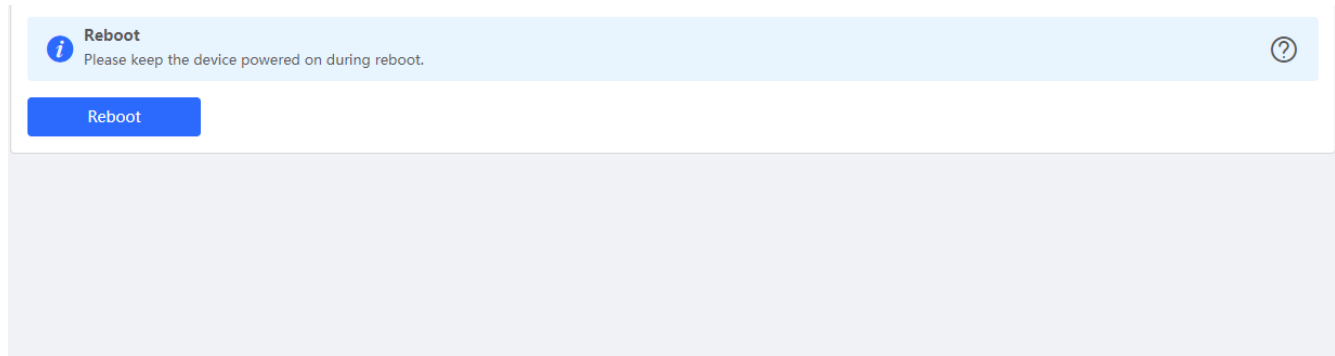


The screenshot shows a configuration page for a 'Reboot' function. At the top, there is a light blue header bar with an information icon (i) on the left, the title 'Reboot', and a help icon (?) on the right. Below the header, the text 'Please keep the device powered on during reboot.' is displayed. A blue button labeled 'Reboot' is positioned below the text. The main content area below the button is a large, empty light gray rectangle.

Click **Reboot**, and click **OK** in the confirmation box. The device is rebooted and you need to log into the eWeb management system again after the reboot. Do not refresh the page or close the browser during the reboot. After the device is successfully rebooted and the eWeb service becomes available, you will be redirected to the login page of the eWeb management system.

3.3.8.7 Scheduled Reboot

The **Scheduled Reboot** module allows you to reboot the device at a scheduled time.

Figure 3-3-118 Scheduled Reboot

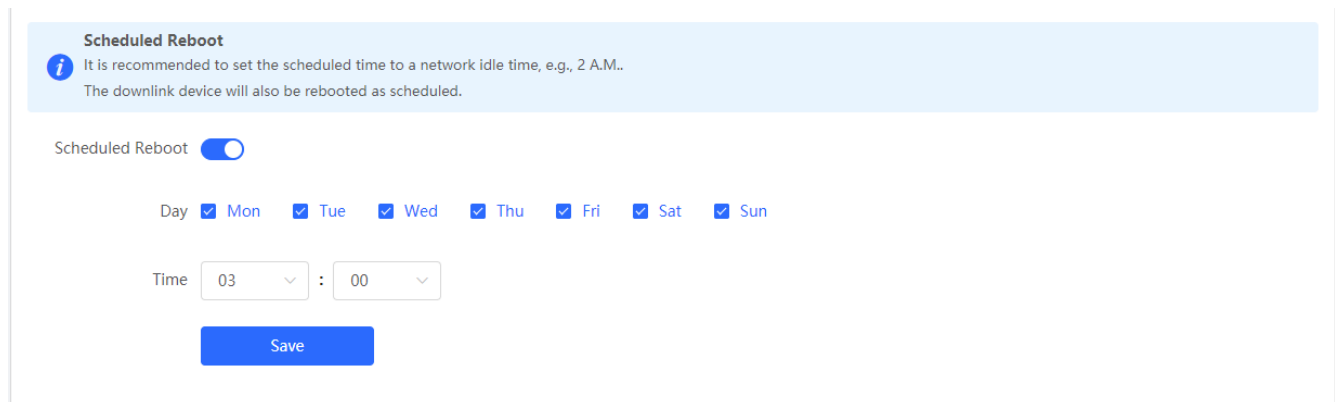

The screenshot shows the 'Scheduled Reboot' configuration page. It features a light blue header bar with an information icon (i), the title 'Scheduled Reboot', and a help icon (?). Below the header, the text reads: 'It is recommended to set the scheduled time to a network idle time, e.g., 2 A.M.. The downlink device will also be rebooted as scheduled.' A toggle switch for 'Scheduled Reboot' is currently turned on. Below the toggle, there are seven checkboxes for the days of the week: Mon, Tue, Wed, Thu, Fri, Sat, and Sun, all of which are checked. Underneath the day selection, there is a 'Time' field with two dropdown menus; the first is set to '03' and the second to '00'. A blue 'Save' button is located at the bottom of the configuration area.

Enable scheduled reboot, select the time and click **Save**.

3.4 Wireless

3.4.1 APs

The **APs** module allows you to group, upgrade and delete APs.

Figure 3-4-1 AP List

AP List

AP List

Group: All Groups

Expand

Advanced Search

List Filter

Batch Action

	Action	Hostname	IP Address	MAC	Status	Model	Clients	Software Ver
☐	Manage Reboot	Ruijie	192.168.110.200	00:10:F8:75:33:72	Online	EAP602	0	AP_3.0(1)B2P32,Release(07210117)

Total 1

10/page

< 1 >

Go to page 1

Click **Expand**, and all groups will be displayed on the left column. You can add, delete, edit and search groups. Up to 8 groups can be added.

Figure 3-4-2 Group Management

AP List

Search by Group

All Groups

Default

+

Click **Advanced Search**, and you can search APs by SN, model, software version, MAC address and status.

Figure 3-4-3 Advanced Search

Group: **All Groups** Collapse Advanced Search

Advanced Search

SN

Model

Software

Ver

MAC

Status

All


▼

Search

Cancel


Click **List Filter**, and you can select columns to be displayed in the list.

Figure 3-4-4 List Filter

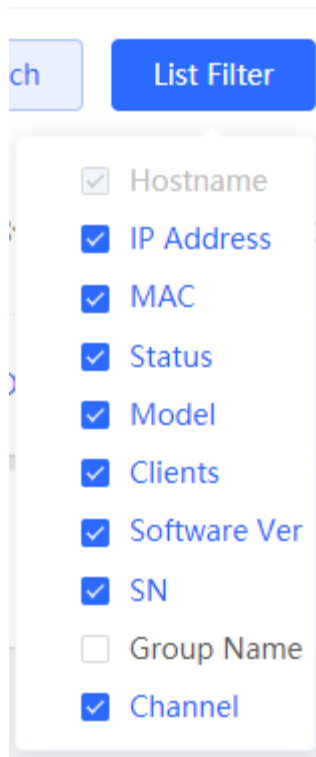

Select the target devices and click **Batch Action**. The following actions are available:

Figure 3-4-5 Batch Action

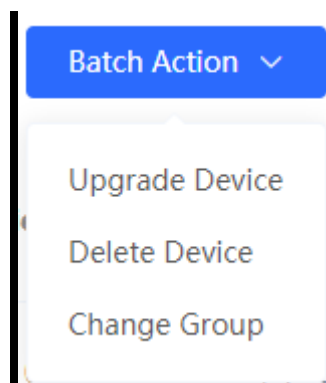

Upgrade Device: If there is a new version available, you can upgrade the devices in batches.


Delete Device: You can delete the devices in batches.

Change Group: You can move the devices from one group to another. The devices will be applied with the new group settings.

3.4.2 Clients

The **Clients** module displays the wireless clients.


Figure 3-4-6 Wireless Client List

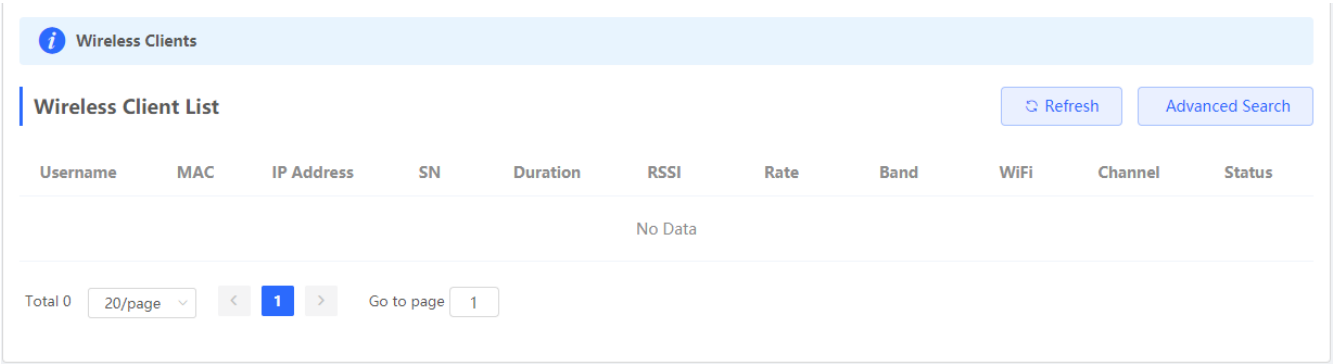

Click **Advanced Search**, and you can search clients by SN and MAC address.

This is a fuzzy search. You can enter an incomplete MAC address or part of an SN.

Figure 3-4-7 Advanced Search

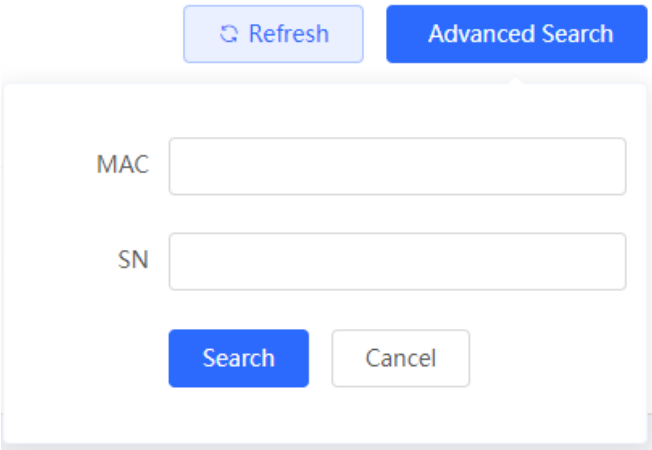

3.4.3 Blacklist/Whitelist

The **Blacklist/Whitelist** module allows you to configure global blacklist/whitelist and SSID-based blacklist/whitelist.

3.4.3.1 Global Blacklist/Whitelist

Figure 3-4-8 Global Blacklist/Whitelist

☒ All STAs except blacklisted STAs are allowed to access WiFi.

☐ Only the whitelisted STAs are allowed to access WiFi.

Blocked WLAN Clients

+ AddDelete Selected

Up to 30 members can be added.

☐	MAC	Remark	Action
☐	00:74:9C:63:81:AA	test	EditDelete
☐	22:16:87 OUI	test	EditDelete

Click **Add** to add a blacklisted or whitelisted client. In the displayed dialog box, configure settings and click **OK**.

Figure 3-4-9 Add Client

Add

Match Type

☒ Full☐ Prefix (OUI)

* MAC

Example: 00:11:22:33:44:55

Remark

Cancel

OK

3.4.3.2 SSID-based Blacklist/Whitelist

Select an SSID from the left column and configure its blacklist or whitelist.

Figure 3-4-10 SSID-basd Blacklist/Whitelist

Blacklist/Whitelist is used to allow or reject a client's request to connect to the WiFi network.

Note: OUI matching rule and SSID-based blacklist/whitelist are supported by only RAP Net and P32 (and later versions).

Rule:
1. In the Blacklist mode, the clients in the blacklist are not allowed to connect to the WiFi network.
2. In the Whitelist mode, only the clients in the whitelist are allowed to connect to the WiFi network.

Device Group:

Default

SSID-Based Blacklist/Whitelist

master wifi

wifi1

wifi2 test

333

All STAs except blacklisted STAs are allowed to access WiFi.

Only the whitelisted STAs are allowed to access WiFi.

Blocked WLAN Clients

+ Add

Delete Selected

Up to 30 members can be added.

	MAC	Remark	Action
☐	8C:AB:8E:A2:21:67	test	<a>Edit <a>Delete
☐	9C:AB:8E OUI	OUI	<a>Edit <a>Delete

3.4.4 Radio Frequency

The **Radio Frequency** module allows you to configure client count limit and channel width.

Figure 3-4-11 Radio Frequency (EG Device)

Tip: Changing configuration requires a reboot and clients will be reconnected.

Radio Frequency

Device Group:

Default

Country/Region

China (CN)

2.4G Channel Width

Auto

5G Channel Width

Auto

Client Count Limit

32

Client Count Limit

32

Save

Only the AP supports power and roaming sensitivity settings.

Figure 3-4-12 Radio Frequency (EAP)

Tip: Changing configuration requires a reboot and clients will be reconnected.

Radio Frequency

Country/Region

China (CN)

2.4G Channel Width

Auto

5G Channel Width

Auto

Client Count Limit

32

Client Count Limit

32

The settings are valid for only current device

2.4G Channel

Auto

5G Channel

Auto

Transmit Power

Auto

Transmit Power

Auto

Roaming Sensitivity

30%

Roaming Sensitivity

20%

Save

3.4.5 WiFi

The WiFi module allows you to configure WiFi settings for all devices.

3.4.5.1 WiFi Settings

The WiFi Settings module allows you to configure the primary WiFi.

Figure 3-4-13 WiFi Settings

Tip: Changing configuration requires a reboot and clients will be reconnected.

WiFi Settings

Device Group:

Default

* SSID

lghtest

Band

2.4G

Security

WPA_WPA2-PSK

* WiFi Password

Expand

Save


3.4.5.2 Guest WiFi

The guest WiFi is disabled by default. You can enable guest WiFi on this page or homepage.

AP isolation is enabled by default and cannot be edited.


Set a schedule, and the guest WiFi will be enabled only during this period time. When the time expires, the guest WiFi will be disabled.

Figure 3-4-14 Guest WiFi

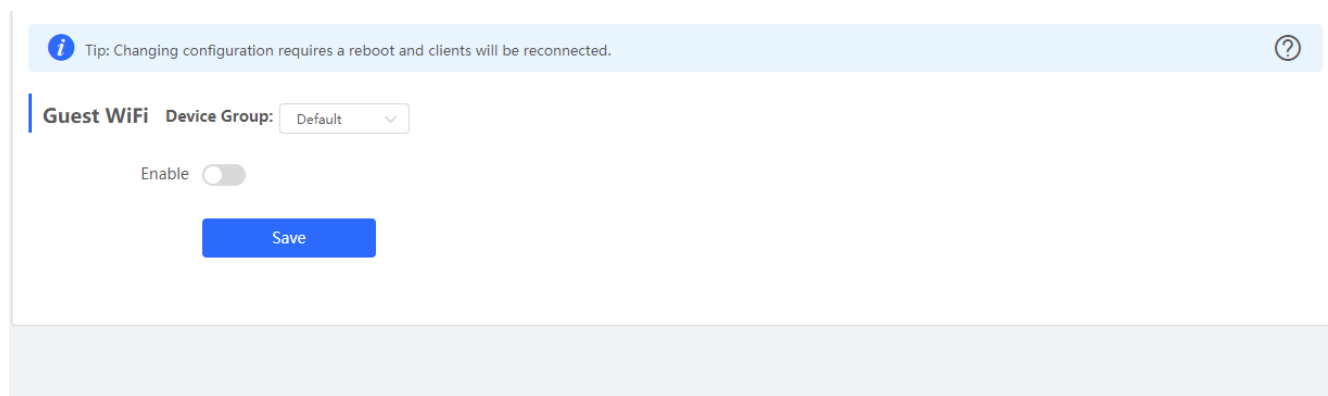

The screenshot shows the 'Guest WiFi' configuration page. At the top, there is a light blue banner with an information icon and the text: 'Tip: Changing configuration requires a reboot and clients will be reconnected.' Below the banner, the page title 'Guest WiFi' is followed by a 'Device Group' dropdown menu set to 'Default'. The 'Enable' toggle switch is currently turned off (grey). A blue 'Save' button is located below the toggle switch.

Figure 3-4-15 Enable Guest WiFi

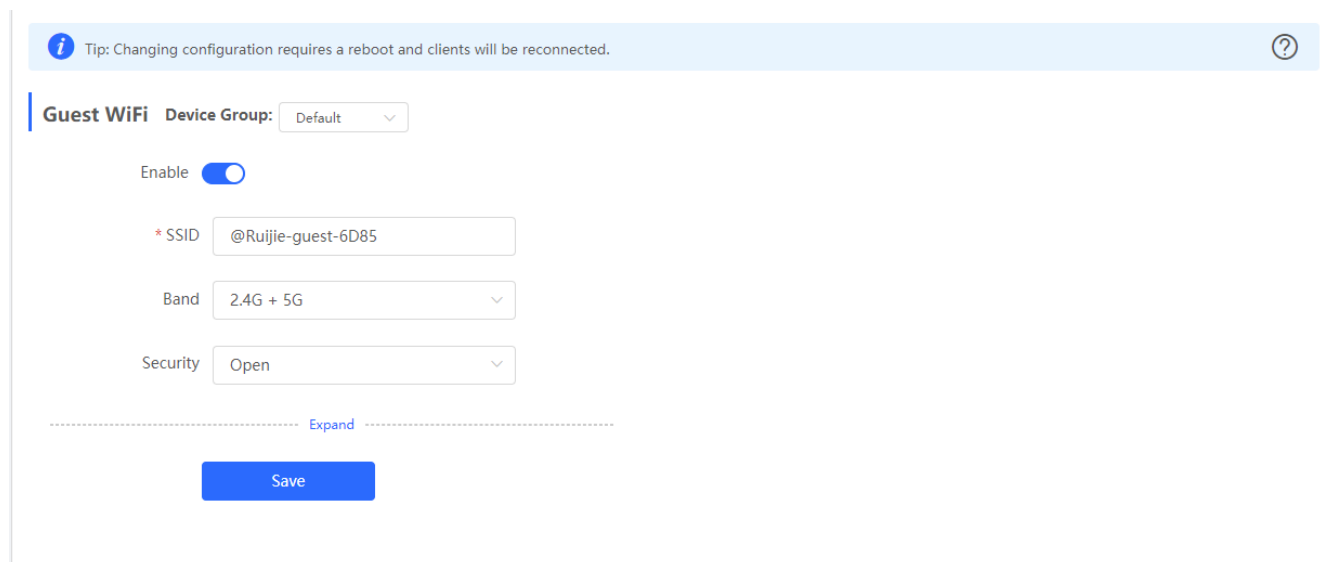

The screenshot shows the 'Guest WiFi' configuration page with the 'Enable' toggle switch turned on (blue). Below the toggle, the following settings are visible: '* SSID' is '@Ruijie-guest-6D85', 'Band' is '2.4G + 5G', and 'Security' is 'Open'. Each setting is in a dropdown menu. Below these settings, there is a dashed line with the word 'Expand' in blue. A blue 'Save' button is located at the bottom of the configuration area.

3.4.5.3 WiFi List

The **WiFi List** displays all WiFi networks. The primary WiFi is also listed here and cannot be deleted.

Figure 3-4-16 WiFi List

Tip: Changing configuration requires a reboot and clients will be reconnected.

WiFi List

Device Group: Default

+ Add

Up to 8 SSIDs can be added.

SSID	Band	Security	Hidden	VLAN ID	Action
lghtest	2.4G	WPA_WPA2-PSK	No	Default VLAN	<a>Edit <a>Delete
ttttt	2.4G + 5G	OPEN	No	Default VLAN	<a>Edit <a>Delete
333	2.4G + 5G	OPEN	No	Default VLAN	<a>Edit <a>Delete
lghtest_5g	5G	WPA_WPA2-PSK	No	Default VLAN	<a>Edit <a>Delete

Click **Add** to add a WiFi network. In the displayed dialog box, configure settings and click **OK**.

Figure 3-4-17 Add WiFi

Add

The configuration will take effect after being delivered to EAP.

* SSID

Band

2.4G + 5G

Security

Open

Expand

Cancel

OK

You can click  in the upper right corner to see description about each configuration item.

3.4.5.4 Healthy Mode

The **Healthy Mode** module allows you to enable health mode and set a schedule.

Figure 3-4-18 Healthy Mode

Tip: Changing configuration requires a reboot and clients will be reconnected.

Healthy Mode

Device Group:

Default

Healthy Mode

Save

3.4.5.5 Load Balancing

Load Balancing

+ Add

Delete Selected

Up to 32 entries can be added.
Add APs in an area into a group and enable load balancing. When load is unbalanced in the group, clients will automatically associate to an AP with lighter load.
Example: Add AP1 and AP2 into a group and select client load balancing. Set both the client count threshold and difference to 3. AP1 is associated with 5 clients and AP2 is associated with 2 clients, triggering load balancing. New clients' attempt to associate to AP1 will be denied, and therefore they can associate only to AP2.

	Group Name	Type	Rule	Members	Action
☐	111111	Client Load Balancing	Threshold: 1 Client Count Difference: 1 Max Denial Count: 2	7Members Details	Edit Delete
☐	testliu	Client Load Balancing	Threshold: 5 Client Count Difference: 5 Max Denial Count: 5	12Members Details	Edit Delete

Click **Add** to add a Load Balancing. In the displayed dialog box, configure settings and click **OK**.

Add

* Group Name

* Type

Client Load Balancing

* Rule

When an AP is associated with

3

i

 clients and the difference between the currently associated client count and client count on the AP with the lightest load reaches

3

, clients can associate only to another AP in the group. After a client association is denied by an AP for

10

 times, the client will be allowed to associate to the AP upon the next attempt.

* Members

Enter an AP name or SN.

Cancel

OK

3.4.6 LAN Ports

The **LAN Ports** module allows you to configure LAN ports.

Figure 3-4-19 LAN Ports

LAN Port Settings

The configuration takes effect only for the AP with a LAN port, e.g., EAP101.

Note: The configured LAN port settings prevail. **The EAP device with no LAN port settings will be enabled with default settings.**

Default Settings

VLAN ID

Add VLAN

(Range: 2-232 and 234-4090. A blank value indicates the same VLAN as WAN port.)

Applied to

EAP device with no LAN port settings

Save

LAN Port Settings

+ Add

Delete Selected

Up to 8 VLAN IDs or 32 APs can be added (0 APs have been added).

	VLAN ID	Applied to	Action
		No Data	

Click **Add** to add a LAN port. In the displayed dialog box, configure settings and click **OK**.

Figure 3-4-20 Add LAN Port

Add

×

VLAN ID

(Range: 2-232 and 234-4090. A blank value indicates the same VLAN as WAN port.)

* Applied to

▼

Cancel

OK

3.4.7 LED

The **LED** module allows you to enable LED.

Figure 3-4-21 LED

 **LED Status Control**
Control the LED status of **the downlink AP**.

LED ☒

Save

3.4.8 WIO

3.4.8.1 Network Optimization



Description:

This feature will optimize the self-organizing network to maximize the WLAN performance. Please make sure that all APs have been online.

Notes:

1. During network optimization, the APs will switch channels, forcing the clients to go offline. The process will last for a while, subject to the quantity of devices. It is recommended you enable network optimization at night.
2. If dynamic channel allocation is running in the backend, network optimization will fail. Please try again later.
3. The configuration cannot be rolled back once optimization starts.

☐ I have read the notes.

Network Optimization

Scheduled Optimization

Scheduled Optimization



Scheduled Optimization

Optimize the network performance at a scheduled time for a better user experience.

Enable ☒

Day Sun

Time 03 : 00

Save

3.4.8.2 Optimization Record


Overview



Last Optimized
You have optimized 101 APs and improved the performance by 75.77%!

Overview

Details

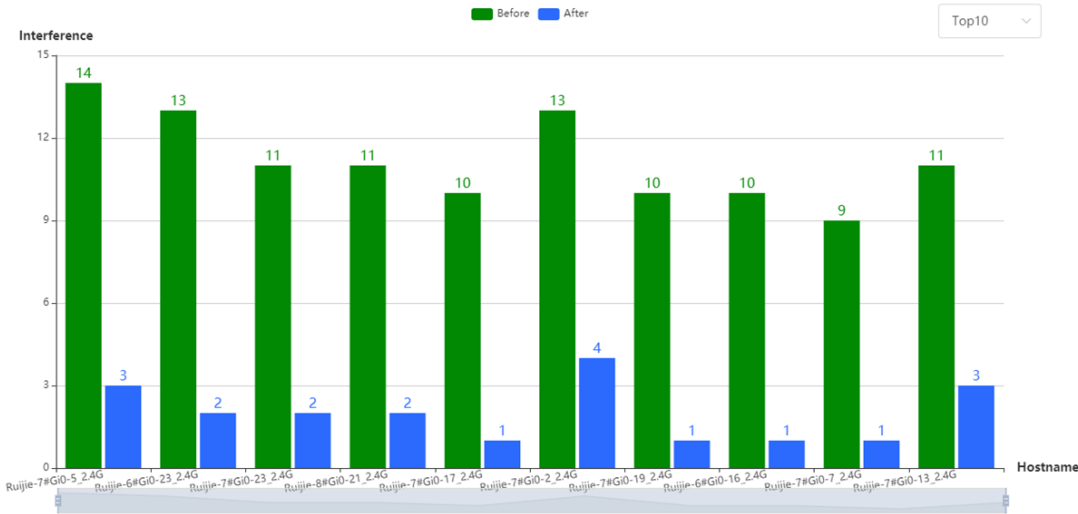

Details

Last Optimized: [redacted]
You have optimized 101 APs and improved the performance by 75.77%!

Overview

Details

Hostname	Band	SN	Channel (Before/After)	Channel Width (Before/After)	Transmit Power (Before/After)	Sensitivity (Before/After)	CCI (Before/After)	ACI (Before/After)	Interference (Before/After)
Ruijie-7#Gi0-5	2.4G	CAN [redacted]	0/6	20	auto/45	0/74	14/3	0	14/3
Ruijie-6#Gi0-23	2.4G	GI [redacted]	0/11	20	100/45	0/80	13/2	0	13/2
Ruijie-7#Gi0-23	2.4G	CA [redacted]	0/6	20	100/45	0/74	11/2	0	11/2
Ruijie-8#Gi0-21	2.4G	CA [redacted]	0/6	20	auto/45	0/74	11/2	0	11/2
Ruijie-7#Gi0-17	2.4G	CAN [redacted]	0/1	20	100/45	0/74	10/1	0	10/1
Ruijie-7#Gi0-2	2.4G	CAN [redacted]	0/11	20	auto/45	0/74	13/4	0	13/4
Ruijie-7#Gi0-19	2.4G	CA [redacted]	0/1	20	100/45	0/74	10/1	0	10/1
Ruijie-6#Gi0-16	2.4G	GI [redacted]	0/1	20	100/45	0/80	10/1	0	10/1
Ruijie-7#Gi0-7	2.4G	CA [redacted]	0/1	20	100/45	0/74	9/1	0	9/1
Ruijie-7#Gi0-13	2.4G	CAN [redacted]	0/1	20	auto/45	0/74	11/3	0	11/3

< 1 2 3 4 5 6 ... 20 >

10/page

Total 200

3.5 Switches

The **Switches** page displays all switches in the current network.

Figure 3-5-1 Switch List

Switch List
View switches in the current network.

Switch List

Delete Offline Devices

Batch Upgrade

☐	Action	Hostname	IP Address	MAC	Status	Model	Software Ver	SN
☐	Manage	Ruijie 🔗	192.168.110.89	00:D3:F8:15:08:5B	Online	NBS5200-24SFP/8GT4XS	[redacted]	G1NW31N000:
☐	Manage	Ruijie 🔗	192.168.110.178	00:D0:F8:15:08:61	Online	NBS3100-24GT4SFP-P	[redacted]	12349425700

< 1 >

10/page

Total 2

Click **Manage** in the **Action** column, and the switch management page will be displayed.

Figure 3-5-2 Switch Management



● NBS5200-24SFP/8GT4XS

Hostname: Ruijie

MAC: 00:D3:F8:15:08:5B

SN: G1NW31N000172

IP Address: 192.168.110.89

Reboot

Home

VLAN

Monitor ▾

Ports ▾

L2 Multicast

L3 Interfaces

Security ▾

Advanced ▾

Diagnostics ▾

System ▾

Basic Info

Hostname: [Ruijie](#)

Model: NBS5200-24SFP/8GT4XS

Status: ● Online

Master Device IP: [192.168.110.1](#)

Work Mode: [Self-Organizing Network](#)

MGMT IP: [192.168.110.89](#)

MAC: 00:D3:F8:15:08:5B

SN: G1NW31N000172


Software Ver: [V200R001C00](#)

Systime: 2021-03-02 14:53:46

Duration: 03Hr03Min37Sec

Port Info [Panel View](#)

The flow data will be updated every 5 minutes. [Refresh](#)

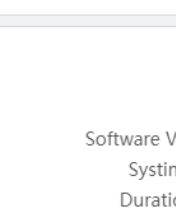

Port	Rate	Rx/Tx Speed (kbps)	Rx/Tx Bytes	Rx/Tx Packets	CRC/FCS Error Packets	Corrupted/Oversized Packets	Conflicts
Gi1	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi2	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi3	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi4	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi5	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0

Click RITA for help.

See *Ruijie RG-NBS Series Switches Web-Based Configuration Guide* for details.

3.6 System

3.6.1 Time

The **Time** module allows you to set the system time. The system time is synchronized with the NTP server by default.

Select a time zone and set at least one NTP server, and click **Save**.

Figure 3-6-1 System Time

 **System Time**

Configure and view system time (The device has no RTC module. The time settings will not be saved upon reboot).



Current Time

2020-06-23 14:46:52

Edit

* Time Zone

(GMT+8:00)Asia/Shanghai

▼

* NTP Server

0.cn.pool.ntp.org

Add

1.cn.pool.ntp.org

Delete

cn.pool.ntp.org

Delete

pool.ntp.org

Delete

asia.pool.ntp.org

Delete

europa.pool.ntp.org

Delete

rdar.darkorb.net

Delete

Save

You can also edit the time manually by clicking **Edit**.

Edit

×

* Time

⌚ Select a time.

Current Time

Cancel

OK

3.6.2 Password

The **Device Password** module allows you to set the device's login password. You need to log into the system again after changing the password.

Figure 3-6-2 Device Password

 **Device Password**

Change the device password. Please log in again with the new password later.



* Old Password

* New Password

* Confirm Password

Save

3.6.3 Scheduled Reboot

The **Scheduled Reboot** module allows you to reboot all devices at a scheduled time.

Figure 3-6-3 Scheduled Reboot

 **Scheduled Reboot**

It is recommended to set the scheduled time to a network idle time, e.g., 2 A.M.
The downlink device will also be rebooted as scheduled.

Scheduled Reboot ☐

Save

3.6.4 Reboot & Reset

The **Reboot & Reset** module allows you to reboot or reset all devices in the network.

Figure 3-6-4 Reboot

 **Network Management**



 The action here may affect the whole network. Please be cautious. If the page does not respond, please log in again.

Network Management

Action

Reboot Reset

Select

All Devices Specified Devices

OK

If you click **Reboot**, you will be allowed to select all devices or specified devices for the action.

If you click **Reset**, all devices in the network will be reset to the factory settings. You can select whether to unbind the account.

Figure 3-6-5 Reset

Network Management

The action here may affect the whole network. Please be cautious. If the page does not respond, please log in again.

Network Management

Action

Reboot

Reset

Option

Unbind Account

(The devices of this account will be removed from Ruiji Cloud and will not be managed by this account).

OK

4 FAQs

Q1: I failed to log into the eWeb management system. What can I do?

Perform the following steps:

- (1) Check that the network cable is properly connected to the LAN port of the device and the corresponding LED indicator blinks or is steady on.
- (2) Before accessing the configuration GUI, set the IP assignment mode to **Obtain an IP address automatically** (recommended), so that the server with DHCP enabled can automatically assign an IP address to the PC. To designate a static IP address to the PC, set the IP address of the PC in the same network segment as the IP address of the management interface. For example, if the default IP address of the management interface is 192.168.110.1 and the subnet mask is 255.255.255.0, set the IP address of the PC to 192.168.110.X (X is any integer ranging from 2 to 254), and the subnet mask is 255.255.255.0.
- (3) Run the **ping** command to test the connectivity between the PC and the device.
- (4) If the login failure persists, restore the device to factory settings.

Q2: What can I do if I forget my username and password? How to restore the factory settings?

To restore the factory settings, power on the device, and press and hold the **Reset** button for 5s or more, and release the **Reset** button after the system LED indicator blinks. The device automatically restores the factory settings and restarts. The original configuration will be lost after the factory settings are restored. After the restoration, the default management address is http://10.44.77.200. You can set the username and password upon first login.

Q3: The subnet mask value needs to be specified to divide the address range for certain functions. What are the common subnet mask values?

A subnet mask is a 32-bit binary address that is used to differentiate between the network address and host address. The subnet and the quantity of hosts in the subnet vary with the subnet mask.

Common subnet mask values include 8 (default subnet mask 255.0.0.0 for class A networks), 16 (default subnet mask 255.255.0.0 for class B networks), 24 (default subnet mask 255.255.255.0 for class C networks), and 32 (default subnet mask 255.255.255.255 for a single IP address).