

# Solid-State Memory Camcorder

## Operating Instructions

Before operating the unit, please read this manual thoroughly  
and retain it for future reference.

PMW-320K  
PMW-320L

**XDCMEX** **SXS** **HDMI**

**CINEALTA** **Exmor** **i**  
FULL HD 3CMOS

Printed on recycled paper.

<http://www.sony.net/>  
Printed in Japan

---

© 2010 Sony Corporation



## WARNING

**To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.**

**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

### Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### WARNING

Excessive sound pressure from earphones and headphones can cause hearing loss. In order to use this product safely, avoid prolonged listening at excessive sound pressure levels.

### For the customers in the U.S.A.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

All interface cables used to connect peripherals must be shielded in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **For the customers in Canada**

This Class A digital apparatus complies with Canadian ICES-003.

#### **For the customers in Europe**

This product with the CE marking complies with the EMC Directive issued by the Commission of the European Community. Compliance with this directive implies conformity to the following European standards:

- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environments: E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors), E4 (controlled EMC environment, ex. TV studio).

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

#### **For the State of California, USA only**

Perchlorate Material - special handling may apply, See

[www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

Perchlorate Material : Lithium battery contains perchlorate.

#### **For the customers in Taiwan only**



廢電池請回收

### **AVERTISSEMENT**

**Afin de réduire les risques d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.**

**Afin d'écartier tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.**

#### **AVERTISSEMENT**

Une pression acoustique excessive en provenance des écouteurs ou du casque peut provoquer une baisse de l'acuité auditive.

Pour utiliser ce produit en toute sécurité, évitez l'écoute prolongée à des pressions sonores excessives.

#### **Pour les clients au Canada**

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

#### **Pour les clients en Europe**

Ce produit portant la marque CE est conforme à la Directive sur la compatibilité électromagnétique (EMC) émise par la Commission de la Communauté européenne.

La conformité à cette directive implique la conformité aux normes européennes suivantes :

- EN55103-1 : Interférences électromagnétiques (émission)

- EN55103-2 : Sensibilité électromagnétique (immunité)

Ce produit est prévu pour être utilisé dans les environnements électromagnétiques suivants : E1 (résidentiel), E2 (commercial et industrie légère), E3 (urbain extérieur) et E4 (environnement EMC contrôlé, ex. studio de télévision).

Le fabricant de ce produit est Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japon.

Le représentant autorisé pour EMC et la sécurité des produits est Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Allemagne. Pour toute question concernant le service ou la garantie, veuillez consulter les adresses indiquées dans les documents de service ou de garantie séparés.

## **WARNUNG**

**Um die Gefahr von Bränden oder elektrischen Schlägen zu verringern, darf dieses Gerät nicht Regen oder Feuchtigkeit ausgesetzt werden.**

**Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur qualifiziertem Fachpersonal.**

### **WARNUNG**

Zu hoher Schalldruck von Ohrhörern und Kopfhörern kann Gehörschäden verursachen.

Um dieses Produkt sicher zu verwenden, vermeiden Sie längeres Hören bei sehr hohen Schalldruckpegeln.

## **Für Kunden in Europa**

Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt die EMV-Richtlinie der EG-Kommission.

Angewandte Normen:

- EN55103-1: Elektromagnetische Verträglichkeit (Störaussendung)
- EN55103-2: Elektromagnetische Verträglichkeit (Störfestigkeit)

Für die folgenden elektromagnetischen Umgebungen: E1 (Wohnbereich), E2 (kommerzieller und in beschränktem Maße industrieller Bereich), E3 (Stadtbereich im Freien) und E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio).

Der Hersteller dieses Produkts ist Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan.

Der autorisierte Repräsentant für EMV und Produktsicherheit ist Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Deutschland. Bei jeglichen Angelegenheiten in Bezug auf Kundendienst oder Garantie wenden Sie sich bitte an die in den separaten Kundendienst- oder Garantiedokumenten aufgeführten Anschriften.

# Table of Contents

<b>Foreword .....</b>	<b>11</b>
Before Use.....	11

---

## Chapter 1 : Overview

<b>Features .....</b>	<b>12</b>
<b>Using the CD-ROM .....</b>	<b>13</b>
<b>Reading the CD-ROM Manuals .....</b>	<b>14</b>
<b>Locations and Functions of Parts and Controls.....</b>	<b>14</b>
Power Supply .....	14
Accessory Attachments.....	15
Operating and Connectors Section.....	16
Monochrome LCD Panel .....	26
Auto Focus Lens (Supplied with the PMW-320K).....	27
Viewfinder.....	28
<b>Viewfinder Screen Display.....</b>	<b>30</b>

---

## Chapter 2 : Preparations

<b>Preparing a Power Supply .....</b>	<b>34</b>
Using a Battery Pack.....	34
Using AC Power .....	35
<b>Attaching the Viewfinder .....</b>	<b>36</b>
Attaching the Supplied Viewfinder.....	36
Adjusting the Viewfinder Position.....	36
Adjusting the Viewfinder Angle.....	37
Lifting Up the Viewfinder Barrel and Eyepiece .....	37
Adjusting the Viewfinder Focus and Screen.....	38
Using the BKW-401 Viewfinder Rotation Bracket .....	38
Attaching a 5-inch Electronic Viewfinder .....	39
<b>Setting the Area of Use .....</b>	<b>41</b>
<b>Setting the Date/Time of the Internal Clock .....</b>	<b>42</b>
<b>Mounting and Adjusting the Lens.....</b>	<b>42</b>
Adjusting the Flange Focal Length.....	43
<b>Preparing the Audio Input System .....</b>	<b>44</b>
Connecting a Microphone to the MIC IN Connector.....	44

Connecting Microphones to the AUDIO IN Connectors.....	45
Attaching a UHF Portable Tuner (for a UHF Wireless Microphone System) .....	46
<b>Tripod Mounting .....</b>	<b>47</b>
<b>Connecting a Video Light .....</b>	<b>48</b>
<b>Using the Shoulder Strap .....</b>	<b>48</b>
<b>Adjusting the Shoulder Pad Position .....</b>	<b>49</b>

---

## **Chapter 3 : Adjustments and Settings**

<b>Setting the Video Format .....</b>	<b>50</b>
Changing the Video Format .....	51
<b>Adjusting the Black Balance and the White Balance .....</b>	<b>51</b>
Adjusting the Black Balance .....	51
Adjusting the White Balance .....	52
<b>Setting the Electronic Shutter.....</b>	<b>54</b>
Shutter Modes .....	54
Selecting the Shutter Mode and Shutter Speed .....	55
<b>Changing the Reference Value for Automatic Iris Adjustment .....</b>	<b>56</b>
<b>Zooming .....</b>	<b>57</b>
Switching between Zoom Modes.....	57
Using Manual Zoom .....	57
Using Servo Zoom .....	57
<b>Adjusting the Focus .....</b>	<b>58</b>
Adjusting in Full MF Mode .....	58
Adjusting in MF Mode .....	58
Adjusting in AF Mode .....	59
Using Macro Mode .....	59
<b>Adjusting the Audio Level .....</b>	<b>59</b>
Manually Adjusting the Audio Levels of the Audio Inputs from the AUDIO IN CH-1/CH-2 Connectors .....	59
Manually Adjusting the Audio Level of the MIC IN Connector ....	60
Recording Audio on Channels 3 and 4 .....	60
<b>Setting the Time Data.....</b>	<b>62</b>
Setting the Timecode.....	62
Setting the User Bits.....	62
Synchronizing the Timecode.....	63
<b>Checking Camcorder Settings and Status Information (Status Screens).....</b>	<b>64</b>

---

## Chapter 4 : Shooting

<b>Handling SxS Memory Cards.....</b>	<b>66</b>
About SxS Memory Cards .....	66
Loading and Ejecting SxS Memory Cards .....	67
Selecting the SxS Memory Card to Use.....	68
Formatting (Initializing) SxS Memory Cards .....	68
Checking the Remaining Recording Time.....	69
Restoring SxS Memory Cards.....	69
<b>Basic Operations .....</b>	<b>70</b>
Playing Recorded Clips.....	71
Deleting Recorded Clips .....	72
<b>Advanced Operations .....</b>	<b>73</b>
Recording Shot Marks.....	73
Setting OK Marks .....	73
Starting to Record from Pre-stored Video (Picture Cache Function) .....	73
Recording Time-lapse Video (Interval Rec Function).....	74
Shooting Stop Motion Animations (Frame Rec Function) .....	76
Shooting with Slow & Quick Motion .....	77
Framing Shots with the Freeze Mix Function.....	78
<b>Planning Metadata Operations .....</b>	<b>79</b>
Loading a Planning Metadata File into Camcorder's Internal Memory .....	80
Defining Clip Names in Planning Metadata .....	81
Defining Shot Mark Names in Planning Metadata .....	82

---

## Chapter 5 : Clip Operations

<b>Clip Playback .....</b>	<b>83</b>
Thumbnail Screen .....	83
Playing Clips .....	85
Using Thumbnails to Search Inside Clips .....	86
<b>Thumbnail Operations .....</b>	<b>87</b>
THUMBNAIL Menu Configuration .....	87
Basic THUMBNAIL Menu Operations .....	88
Changing the Thumbnail Screen Type.....	88
Displaying Clip Properties .....	89
Adding and Deleting OK Marks (HD Mode Only) .....	90
Copying Clips .....	90
Deleting Clips.....	91
Displaying the Expand Thumbnail Screen.....	92
Displaying the Shot Mark Thumbnail Screen (HD Mode Only) ....	93

Adding and Deleting Shot Marks (HD Mode Only) .....	93
Changing Clip Index Pictures (HD Mode Only).....	94
Dividing Clips (HD Mode Only) .....	94

---

## Chapter 6 : Menu and Detailed Settings

<b>Setup Menu Organization and Levels.....</b>	<b>95</b>
Setup Menu Organization .....	95
Setup Menu Levels.....	95
<b>Basic Setup Menu Operations .....</b>	<b>97</b>
<b>Menu List.....</b>	<b>99</b>
OPERATION Menu.....	99
PAINT Menu.....	115
MAINTENANCE Menu .....	121
FILE Menu .....	134
<b>Assigning Functions to Assignable Switches .....</b>	<b>138</b>
Functions That Can Be Assigned to the ASSIGN. 0 Switch .....	138
Functions That Can Be Assigned to the ASSIGN. 2 Switch .....	139
Functions That Can Be Assigned to the ASSIGN. 1 and 3 Switches, the ASSIGNABLE 4 and 5 Switches, and the COLOR TEMP. Button.....	139
Functions That Can Be Assigned to the RET Button on the Lens	141
<b>Adjusting Picture Characteristics to Match the PMW-EX1R .....</b>	<b>142</b>

---

## Chapter 7 : Saving and Loading User Setting Data

<b>Saving and Loading Settings.....</b>	<b>143</b>
Saving Setting Data.....	143
Loading Setting Data.....	144
Resetting a File after Changing Its Contents.....	144
<b>Saving and Loading Scene Files .....</b>	<b>145</b>
Saving Scene Files .....	145
Loading Scene Files .....	145
<b>Saving and Loading Lens Files.....</b>	<b>146</b>
Setting Lens File Data.....	146
Saving Lens Files .....	146
Loading Lens Files .....	147
Loading Lens Files Automatically .....	147



---

## Chapter 8 : Connecting External Devices

<b>Connecting External Monitors .....</b>	<b>148</b>
<b>Operating Clips with a Computer .....</b>	<b>150</b>
Using the ExpressCard Slot of a Computer .....	150
USB Connection with a Computer .....	150
<b>Connecting an External Device (i.LINK Connection) .....</b>	<b>152</b>
Recording the Camera Picture on an External Device .....	152
Nonlinear Editing .....	153
Recording External Input Signals .....	153
<b>Configuring a Shooting and Recording System .....</b>	<b>154</b>

---

## Chapter 9 : Maintenance

<b>Testing the Camcorder .....</b>	<b>155</b>
<b>Maintenance .....</b>	<b>155</b>
Cleaning the Viewfinder .....	155
Note about the Battery Terminal .....	155
<b>Operation Warnings .....</b>	<b>156</b>
Error Indication .....	156
Warning Indication .....	157

---

## Appendix

<b>Important Notes on Operation .....</b>	<b>163</b>
<b>Exchanging the Battery of the Internal Clock .....</b>	<b>165</b>
<b>Specifications .....</b>	<b>165</b>
General .....	165
Camera Block .....	166
Audio Block .....	166
Display .....	166
Media Block .....	167
Inputs/Outputs .....	167
Lens Block (PMW-320K Only) .....	167
Supplied Accessories .....	168
Recommended Additional Equipment .....	168
<b>Chart of Optional Components and Accessories .....</b>	<b>170</b>
<b>About i.LINK .....</b>	<b>171</b>
<b>MPEG-2 Video Patent Portfolio License .....</b>	<b>172</b>
<b>About Bitmap Fonts .....</b>	<b>172</b>

**About OpenSSL ..... 173**

**Index..... 176**

# Foreword

## Before Use

After purchasing the PMW-320K/320L Solid-State Memory Camcorder, before operating, it is necessary to set the area of use.

(Unless this setting is made, the camcorder will not operate.)

*For details of these settings, see “Setting the Area of Use” (page 41).*

### Note

Before attaching/removing optional components or accessories to/from the PMW-320K/320L (referred to as “the camcorder”), be sure to turn the power of the camcorder off.

# Chapter 1 Overview

## Features

The camcorder is a shoulder-mount HD memory camcorder. It is provided with three  $\frac{1}{2}$ -type (diagonal 8 mm ( $\frac{11}{32}$  inches)) full-HD (1920×1080) “Exmor” CMOS image sensors.

### $\frac{1}{2}$ -type bayonet mount

The camcorder is provided with a  $\frac{1}{2}$ -type bayonet mount (flange focal length 38 mm ( $\frac{1}{2}$  inches), allowing you to use Sony  $\frac{1}{2}$ -type bayonet mount exchangeable lenses.

### SxS memory cards as recording media

Using SxS memory cards, the camcorder offers nonlinear capabilities such as instant random access and file-based operation.

### Light weight, low power consumption

Design features such as CMOS image sensors, custom video signal processing ICs, and SxS memory card recording enable fanless operation and power consumption of 15 W or less. The camcorder’s light weight (3.2 kg (7 lb 0.88 oz)) and low center of gravity make it easy to carry on the shoulder while ensuring superior stability.

### HD recording using the “MPEG-2 Long GOP” codec

The camcorder records 1920 × 1080, 1440 × 1080, and 1280 × 720 HD images using “MPEG-2 Long GOP” codec compression. It offers a choice of bit rates: either 35 Mbps (HQ mode) or 25 Mbps (SP mode).

By utilizing an efficient compression format, the camcorder records high-quality HD images for long recording time of approx. 100 minutes at 35 Mbps (HQ mode) or approx. 140 minutes at 25 Mbps (SP mode) on a single 32-GB SxS memory card.

### Multi-format support

The camcorder supports interlace format recording (1080/59.94i or 1080/50i), progressive format recording (1080/29.97P, 1080/23.98P, 720/59.94P, 720/29.97P, 720/23.98P, or 1080/25P, 720/50P, 720/25P), thus offering the flexibility needed for worldwide HD recording. (For 23.98P, native frequency recording is possible.)

It also supports recording and playback of SD signals (both NTSC and PAL). The camcorder has an optional capability to record and play back SD signals in DVCAM-AVI format, and can output HD signals down-converted to SD.

### A special auto focus lens

The camcorder is provided with the  $\frac{1}{2}$ -type auto focus lens, which ensures high-quality shooting in all situations from wide angle to telephoto (PMW-320K only).

### A variety of functions for improved performance under various shooting conditions

- Picture Cache function
- Optical ND filters and electrical CC filters
- Hyper gamma
- Slow shutter function
- Frame Recording function
- Time lapse function (interval recording)
- Slow & quick motion function
- Freeze mix function
- Focus magnification function
- Digital extender function <sup>1)</sup>
- Image inversion function
- Assignable switches
- 3.5-inch high-resolution color LCD viewfinder
- Remote control

1) When the optional CBK-CE01 50 Pin Interface and Digital Extender is installed

### Wireless LAN support

You can connect this camcorder to a computer over a wireless LAN (Wi-Fi connection) by installing the optional CBK-UPG02 Hardware

Upgrade Key and connecting the optional CBK-WA01 Wi-Fi Adapter to the external device connector.

A Wi-Fi connection allows you to transfer planning metadata from a computer to this camcorder, and to transfer clips and other files from this camcorder to a computer. You can also use the Live Logging function to transfer proxy AV data to a computer as you shoot, for logging of the video currently being shot.

---

### **Inherits unique features of XDCAM EX series**

---

The camcorder inherits the workflow features of the XDCAM EX series, including thumbnail display and metadata management, and improves them by introducing an improved man-machine interface.

---

### **XDCAM EX web sites**

---

For information about XDCAM EX, visit Sony professional products web site.

---

### **Camcorder system configuration**

---

When you install the optional CBK-CE01 50 Pin Interface and Digital Extender, you can mount the XDCA-55 HD Camera Adaptor and connect the XDCU-50 HD Camera Extension Unit to configure a system for shooting and recording. When the CBK-CE01 is installed, you can also connect the HDCA-702 MPEG TS Adaptor instead of the camera adaptor. This allows you to convert this camcorder's HDSDI output to a MPEG HD transport stream.

## **Using the CD-ROM**

Two CD-ROMs are supplied with the camcorder. The CD-ROM labeled "Manuals for Solid-State Memory Camcorder" contains the PDF files of the Operating Instructions and Supplement for the camcorder (Japanese, English, French, German, Italian, Spanish and Chinese).

The supplied CD-ROM (labeled "Utility Software for Solid-State Memory Camcorder and Recorder") contains application and device driver software required to access to SxS memory cards from a computer and to manage material shot with the camcorder.

Information about how to install the software is provided in PDF format.

#### **Note**

You must install the SxS device driver on your computer if your computer is equipped with an ExpressCard slot and you want to use it to access SxS memory cards.

# Reading the CD-ROM Manuals

## Preparations

The following program must be installed on your computer in order to read the documents contained on the CD-ROM.

Adobe Reader Version 6.0 or higher

### Memo

If Adobe Reader is not installed, you can download it from the following URL:

<http://www.adobe.com/>

Adobe and Adobe Reader are trademarks of Adobe Systems Incorporated in the United States and/or other countries.

## To read the documents

Do the following:

### 1 Insert the CD-ROM in your CD-ROM drive.

A cover page appears automatically in your browser.

If it does not appear automatically in the browser, double-click on the index.htm file on the CD-ROM.

### 2 Select and click on the manual that you wish to read.

This opens the PDF file.

### Memo


The files may not be displayed properly, depending on the version of Adobe Reader. In such a case, install the latest version you can download from the URL mentioned in "Preparations" above.

### Note

If you have lost or damaged the CD-ROM, you can purchase a new one to replace it. Contact a Sony service representative.

# Locations and Functions of Parts and Controls

## Power Supply

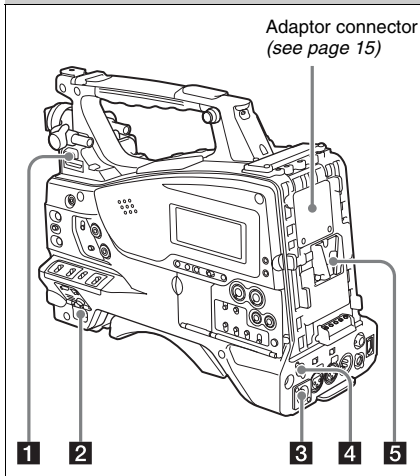

### 1 LIGHT switch

Determines how a video light connected to the LIGHT connector (*see page 16*) is turned on and off.

**AUTO:** When the POWER switch of the video light is in the on position, the video light is turned on automatically while the camcorder is recording.

**MANUAL:** You can turn the video light on or off manually, using its own switch.

### Note

When the camcorder is set for recording in Picture Cache mode, it is not possible to turn on the light before operation to start recording is carried out (or while data is being stored in memory).

### 2 POWER switch

Turns the main power supply on and off.

### 3 DC IN (DC power input) connector (XLR type, 4-pin, male)

To operate the camcorder from an AC power supply, connect an optional DC power cord to this terminal and then connect the cord to the DC output terminal of the BC-L70, BC-L160, or another battery charger.

### 4 DC OUT 12V (DC power output) connector (4-pin, female)

Supplies power for an optional WRR-860C/861/862 UHF Synthesized Diversity Tuner (maximum 0.5 A).

#### Note

Do not connect any equipment other than the UHF synthesized diversity tuner.

### 5 Battery attachment shoe

Attach a BP-L80S Battery Pack. Alternatively, you can attach an AC-DN2B/DN10 AC Adaptor to operate the camcorder on AC power supply.

*For details, see “Preparing a Power Supply” (page 34).*

*For details, see “Attaching a UHF Portable Tuner (for a UHF Wireless Microphone System)” (page 46).*


#### Note

For your safety, and to ensure proper operation of the camcorder, Sony recommends the use of the BP-L80S Battery Pack.

### Adaptor connector

Enables connection of an XDCA-55 HD Camera Adaptor or an HDCA-702 MPEG TS Adaptor. To connect an adaptor, remove the cover from the connector and install the optional CBK-CE01 50 Pin Interface and Digital Extender.

## Accessory Attachments

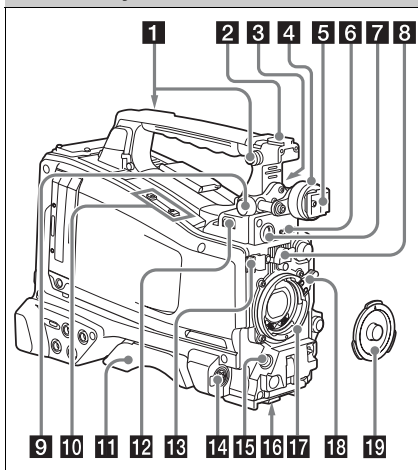

### 1 Shoulder strap fitting

Attach the supplied shoulder strap (*see page 48*).

### 2 Accessory fitting shoe

Attach an optional accessory such as a video light (*see page 48*).

### 3 Viewfinder front-to-back positioning lever

To adjust the viewfinder position in the front-to-back direction, loosen this lever and the LOCK knob. After adjustment, retighten this lever and the LOCK knob.

### 4 Viewfinder left-to-right positioning ring

Loosen this ring to adjust the left-to-right position of the viewfinder (*see page 36*).

### 5 Viewfinder fitting shoe

Attach the viewfinder.

### 6 VF (viewfinder) connector (26-pin, rectangular)

Connect the cable of the supplied viewfinder.

### 7 VF (viewfinder) connector (20-pin, round)

Connect the cable of the optional DXF-51, DXF-C50W or DXF-20W viewfinder.

*For connecting the DXF-51 or DXF-C50W, optional parts are required. Consult a Sony service*

*representative for information about connecting the DXF-51 or DXF-C50W.*

### 8 Lens mount securing rubber

After locking the lens in position using the lens locking lever, fit this rubber over the lower of the two projections. This fixes the lens mount, preventing it from coming loose.

### 9 Viewfinder front-to-back positioning knob (LOCK knob)

Loosen this knob to adjust the front-to-back position of the viewfinder (*see page 36*).

### 10 Fitting for optional microphone holder

Fit an optional CAC-12 Microphone Holder (*see page 45*).

### 11 Shoulder pad

Raise the shoulder pad fixing lever to adjust the position in the front-to-rear direction. Adjust the position for maximum convenience when operating the camcorder on your shoulder (*see page 49*).

### 12 LIGHT (video light) connector (2-pin, female)

A video light with a maximum power consumption of 50 W, such as the Anton Bauer Ultralight 2 or equivalent can be connected (*see page 48*).

### 13 Lens cable clamp

Clamp a lens cable.

### 14 MIC IN (microphone input) (+48 V) connector (XLR type, 5-pin, female)

Connect a stereo microphone to this connector. The power (+48 V) is supplied via this connector.

### 15 LENS connector (12-pin)

Connect a lens cable to this connector. This connector is not used for a 1/2-inch lens which is connected by a hot shoe inside the lens mount.

#### Note

When connecting or disconnecting the lens cable to this connector, power off the camcorder first.

### 16 Tripod mount

When using the camcorder on a tripod, attach the tripod adaptor (optional).

### 17 Lens mount (special bayonet mount)

Attach the lens.

On the inner side of the lens mount is a 14-pin connector (two 7-pin connectors) for connecting the lens.

*Consult a Sony service representative for information about available lenses.*

#### Note

The auto iris function is not available if the mounted lens has a 7-pin connector for connection to the camera.

The video level indication and the iris position indication are also disabled.

### 18 Lens locking lever

After inserting the lens in the lens mount, rotate the lens mount ring with this lever to lock the lens in position.

After locking the lens, be sure to use the lens mount securing rubber to prevent the lens from becoming detached.


### 19 Lens mount cap

Remove by pushing up the lens locking lever.

When no lens is mounted, keep this cap fitted for protection from dust.

## Operating and Connectors Section

### Front

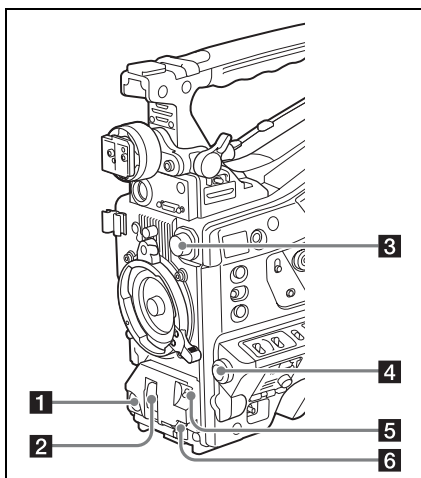



## 1 REC START (recording start) button

Press to start recording. Press it again to stop recording. The effect is the same as that of the REC button on the lens.

## 2 SHUTTER selector

Set to ON to use the electronic shutter. Push to SELECT to switch the shutter speed or shutter mode setting. When this switch is operated, the new setting appears on the viewfinder screen for about three seconds.

For details, see “Setting the Electronic Shutter” (page 54).

## 3 FILTER selector

Switches between four ND filters built into this camcorder.

When this selector is used, the new setting appears on the viewfinder screen for about three seconds.

FILTER selector setting	ND filter
1	CLEAR
2	1/4 ND (attenuates light to approximately 1/4)
3	1/16 ND (attenuates light to approximately 1/16)
4	1/64 ND (attenuates light to approximately 1/64)

You can change a MAINTENANCE menu setting so that different white balance settings can be stored for different FILTER selector positions. This allows you to automatically obtain optimum white balance for the current shooting conditions in linkage with the filter selection.

For details, see “Adjusting the White Balance” (page 52).

## 4 MENU knob

Changes the item selection or a setting within the menu (see page 97).

## 5 AUTO W/B BAL (automatic white/black balance adjustment) switch

Activates the automatic white/black balance adjustment functions.

**WHITE:** Adjust the white balance automatically.

If the WHITE BAL switch (see page 19) is set to A or B, the white balance setting is stored in the corresponding memory. If the WHITE BAL switch is set to PRST, the

automatic white balance adjustment function does not operate.

**BLACK:** Adjust the black set and black balance automatically.

You can use the AUTO W/B BAL switch even when the ATW (Auto Tracing White Balance) function is operating.


If you push the switch to the WHITE side once more during the automatic white balance adjustment, the adjustment is cancelled and the white balance setting returns to the original setting.

If you push the switch to the BLACK side once more during the automatic black balance adjustment, the adjustment is cancelled and the black balance setting returns to the original setting.

## 6 MIC (microphone) LEVEL control

Adjusts the input level of audio channels 1, 2, 3 and 4 (see page 59).

### Right side (near the front)

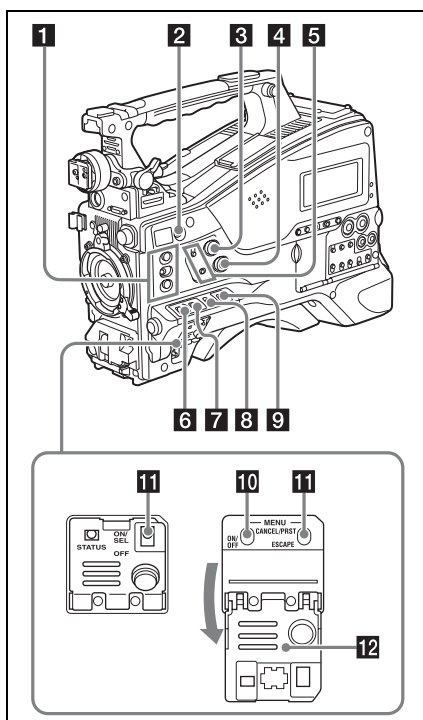

## 1 ASSIGN. (assignable) 1/2/3 switches


You can assign the desired functions to these switches on OPERATION >Assignable SW in the setup menu (see page 138). EZ Mode is assigned to the ASSIGN. 1 switch, and Off is assigned to the ASSIGN. 2/3 switches as the factory default setting. The ASSIGN.1/3 switches are provided with an indicator to show whether a function is assigned to the switch (ON) or not (OFF).

**2 COLOR TEMP. (color temperature) button**

Press to light the button and change the color temperature for shooting (factory default setting). You can use this as an assignable switch (see page 138).

**3 ALARM (alarm tone volume adjustment) knob**

Controls the volume of the warning tone that is output via the built-in speaker or optional earphones. When the knob is turned to the minimum position, no sound can be heard. However, if MAINTENANCE >Audio >Min Alarm Volume in the setup menu is set to [Set], the alarm tone is audible even when this volume control is at the minimum position.

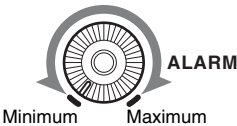

**4 MONITOR (monitor volume adjustment) knob**

Controls the volume of the sound other than the warning tone that is output via the built-in speaker or earphones. When the knob is turned to the minimum position, no sound can be heard.

**5 MONITOR (audio monitor selection) switches**

By means of combinations of the two switches, you can select audio that you want to hear through the built-in speaker or earphones.

**Position of down-side switch:** CH-1/2

Position of up-side switch	Audio output
CH-1/CH-3	Channel 1 audio
MIX	Channels 1 and 2 mixed audio (stereo) <sup>a)</sup>

Position of up-side switch	Audio output
CH-2/CH-4	Channel 2 audio

**Position of down-side switch:** CH-3/4

Position of up-side switch	Audio output
CH-1/CH-3	Channel 3 audio
MIX	Channels 3 and 4 mixed audio (stereo) <sup>a)</sup>
CH-2/CH-4	Channel 4 audio

a) By connecting stereo headphones to the EARPHONE jack, you can hear the audio in stereo. (Under MAINTENANCE >Audio in the setup menu, Headphone Out must be set to STEREO.)

**6 ASSIGN. (assignable) 0 switch**

You can assign the desired function to this switch on OPERATION >Assignable SW in the setup menu (see page 139). Off is assigned to this switch when the camcorder is shipped from the factory. This is a momentary type switch. Each press of the switch turns the function assigned to this switch on or off.

**7 GAIN selector**

Switches the gain of the video amplifier to match the lighting conditions during shooting. The gains corresponding to the L, M, and H settings can be selected on OPERATION >Gain Switch in the setup menu (see page 107). (The factory settings are L=0 dB, M=6 dB, and H=12 dB.) When this switch is adjusted, the new setting appears on the viewfinder screen for about three seconds.

**8 OUTPUT/DCC (output signal/dynamic contrast control) switch**

Switches the video signal output from the camera module, between the following two.  
**BARS:** Output the color bar signal.  
**CAM:** Output the video signal being shot. When this is selected, you can switch DCC <sup>1)</sup> on and off.

1) **DCC (Dynamic Contrast Control):** Against a very bright background with the iris opening adjusted to the subject, objects in the background will be lost in the glare. The DCC function will suppress the high intensity and restore much of the lost detail and is particularly effective in the following cases.

- Shooting people in the shade on a sunny day

- Shooting a subject indoors, against a background through a window
- Any high contrast scene

## 9 WHITE BAL (white balance memory) switch

Controls adjustment of the white balance.

**PRST:** Adjust the color temperature to the preset value (the factory default setting: 3200K). Use this setting when you have no time to adjust the white balance.

**A or B:** Recall the white balance adjustment settings already stored in A or B. Push the AUTO W/B BAL switch (*see page 17*) on the WHITE side, to automatically adjust the white balance, and save the adjustment settings in memory A or memory B.

**B (ATW<sup>1</sup>):** When this switch is set to B and OPERATION >White Setting >White Switch<B> is set to [ATW] in the setup menu, ATW is activated.

You can use the AUTO W/B BAL switch even when ATW is in use.

When this switch is adjusted, the new setting appears on the viewfinder screen for about three seconds.

1) **ATW (Auto Tracing White Balance):** The white balance of the picture being shot is adjusted automatically for varying lighting conditions.

## 10 MENU ON/OFF switch

To use this switch, open the cover.

This switch is used to display the menu on the viewfinder screen or the test signal screen. Each time the switch is pushed down, the menu screen is turned on and off.

The function of this switch is the same as that of the MENU button in the thumbnail screen operations section.

## 11 STATUS ON/SEL/OFF (menu display on/page selection/display off) switch

**MENU CANCEL/PRST (preset) / ESCAPE switch**

When the menu is not displayed, this switch functions as the STATUS ON/SEL/OFF switch. When the menu is displayed, the switch functions as the MENU CANCEL/PRST/ESCAPE switch. (To use the MENU CANCEL/PRST/ESCAPE switch, open the cover.)

Use the STATUS ON/SEL/OFF switch in the following way.

**ON/SEL:** Each time this switch is pushed upward, a window to confirm the menu settings and status of the camcorder appears on the viewfinder screen (*see page 64*). The window consists of five pages, which are switched each time the switch is pushed upward. Each page is displayed for about 10 seconds.

**OFF:** To clear the page immediately after display, push this switch down to the OFF position.

Use the MENU CANCEL/PRST/ESCAPE in the following way.

**CANCEL/PRST:** Pushing this switch up to this position after a setting is changed in the setup menu displays the message to confirm whether the previous settings are cancelled. Pushing this switch up to this position again cancels the previous settings.

Pushing this switch up to this position before a setting is changed in the setup menu or after a setting change is cancelled in the setup menu displays the message to confirm whether the setting is reset to the initial value.


Pushing this switch up to this position again resets the settings to the initial value.

**ESCAPE:** Use this switch when the menu page, which has a hierarchical structure, is opened. Each time the switch is pushed to this position, the page returns to one stage higher in the hierarchy.

## 12 Cover

Open this cover to use the MENU ON/OFF switch or the MENU CANCEL/PRST/ESCAPE switch.

## Right side (near the rear)

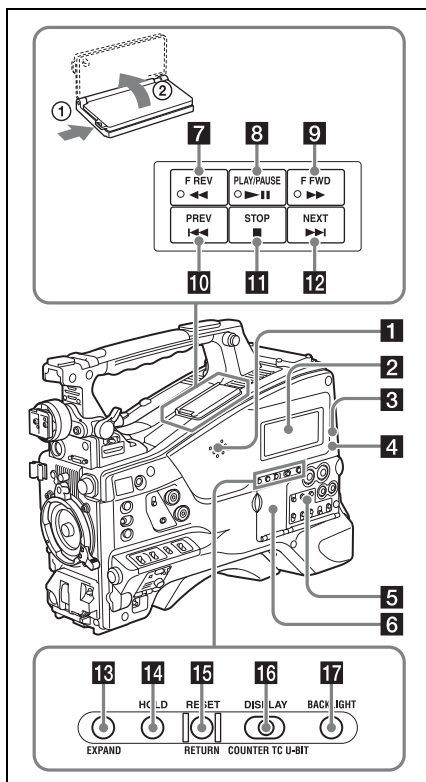

### 1 Built-in speaker

The speaker can be used to monitor E-E<sup>1)</sup> sound during recording, and playback sound during playback. The speaker also sounds alarms to reinforce visual warnings (*see page 156*).

If you connect earphones to the EARPHONE jack, the speaker output is suppressed automatically.

1) **E-E**: Abbreviation of “Electric-to-Electric”. In E-E mode, video and audio signals input to the camcorder are output after passing through internal electric circuits only. This can be used to check input signals.

### 2 Monochrome LCD panel

Displays remaining battery capacity, remaining media capacity, audio levels, time data, and so on (*see page 26*).

### 3 WARNING indicator

Lights up or flashes when an abnormality occurs (*see page 156*).

### 4 ACCESS lamp

Lights up in blue when data is written to or read from the recording media.

### 5 Protection cover of the audio control section

Open to access the audio control section (*see page 22*).

### 6 Protection cover of the thumbnail screen operations section

Open to access the thumbnail screen operations section (*see page 22*).

### 7 F REV (fast reverse) button and indicator

This plays back at high speed in the reverse direction. The playback speed changes in the order  $\times 4 \rightarrow \times 15 \rightarrow \times 24$  with each press of the button. The indicator lights during high-speed playback in the reverse direction.

### 8 PLAY/PAUSE button and indicator

Press this button to view play back video images using the viewfinder screen. The indicator lights during playback.

Press this button again during playback to pause, outputting a still image. At this time the indicator flashes at a rate of once per second.

Pressing the F REV or F FWD button during playback or pause starts high speed playback in the forward or reverse direction.

### 9 F FWD (fast forward) button and indicator

This plays back at high speed in the forward direction. The playback speed changes in the order  $\times 4 \rightarrow \times 15 \rightarrow \times 24$  with each press of the button. The indicator lights during high-speed playback in the forward direction.

### 10 PREV button

This jumps to the first frame of the current clip. If you press this together with the F REV button, the jump is to the first frame of the first recorded clip on the recording media.

If you press this button twice in rapid succession, the jump is to the first frame of the last preceding

clip (or the first frame of the current clip when no preceding clips exist).

## 11 STOP button

Press this button to stop playback.

## 12 NEXT button

This jumps to the first frame of the next clip.

If you press this together with the F FWD button, the jump is to the first frame of the last recorded clip on the recording media.

## 13 EXPAND (expand function) button

If you press this button when the thumbnail screen is displayed, the duration of the selected clip is divided into fractions, and the first frame of each of the divisions is shown in a further thumbnail display (expand function). For an HD recorded MP4 clip, its duration is divided into 12. If an SD recorded AVI clip comprises multiple files, the divisions are displayed for the individual files.

For MP4 clips, each time you press this button the division is repeated. Hold down the SHIFT button and press this button to step back through the division process.

## 14 HOLD (display hold) button

Pressing this button instantly freezes the time data displayed in the monochrome LCD panel. (The timecode generator continues running.) Pressing this button again releases the hold.

*For details of the counter display, see page 26.*

## 15 RESET/RETURN button

Resets the value shown in the time counter display in the monochrome LCD panel.

According to the settings of the PRESET/REGEN/CLOCK switch (see page 22) and the F-RUN/SET/R-RUN switch (see page 22), this button resets the display as follows.

Settings of switches	To reset
<b>DISPLAY switch:</b> COUNTER	Counter to 0:00:00:00
<b>DISPLAY switch:</b> TC	Timecode to 00:00:00:00
<b>PRESET/REGEN/ CLOCK switch:</b> PRESET	
<b>F-RUN/SET/R-RUN switch:</b> SET	

Settings of switches	To reset
<b>DISPLAY switch:</b> U-BIT	User bits data <sup>a)</sup> to 00 00 00 00
<b>PRESET/REGEN/ CLOCK switch:</b> PRESET	
<b>F-RUN/SET/R-RUN switch:</b> SET	

a) Of the timecode bits for every frame recorded on the media, those bits which can be used to record useful information for the user such as scene number, shooting place, etc.

*For details, see "Setting the Time Data" (page 62).*

This button returns to the previous screen when pressed during thumbnail screen display, expand thumbnail screen display, or shot mark thumbnail screen display.

## 16 DISPLAY switch

This cycles the data displayed in the time counter display in the monochrome LCD panel through the sequence COUNTER, TC, and U-BIT (see page 26).

**COUNTER:** Display the elapsed recording/playback time (hours, minutes, seconds, frames).


**TC:** Display timecode.

**U-BIT:** Display user bits data.

## 17 BACKLIGHT button

Turns the backlight of the monochrome LCD on and off. The backlight of the monochrome LCD panel will be turned on when the camcorder is powered on for the first time after shipped from the factory.

## Thumbnail screen operations section and audio control section

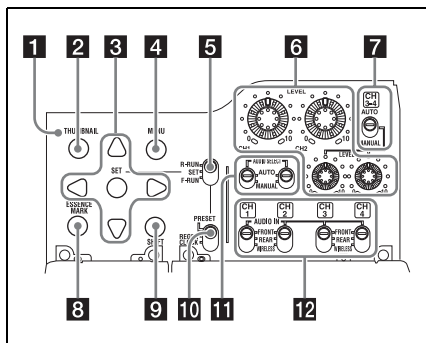

### 1 THUMBAIL indicator

This lights when thumbnail screen is displayed.

### 2 THUMBAIL button

Press this button to display the thumbnail screen (*see page 83*) and to carry out a thumbnail operation.

Press once more to return to the original display.

### 3 SET (set) button and arrow buttons

Use these buttons to make timecode and user bit settings, and for thumbnail screen operations (*see page 88*).

When the menu is displayed, press this button to select an item or to confirm the setting change.

### 4 MENU button

Each press of this button turns the setup menu display on and off.

The function of this button is the same as that of the MENU ON/OFF switch.

### 5 F-RUN/SET/R-RUN (free run/set/recording run) switch

Selects the operating mode of the internal timecode generator. The operating mode is set as explained below, depending on the position of the switch.

**F-RUN:** Timecode keeps advancing, regardless of whether the camcorder is recording. Use this setting when synchronizing the timecode with external timecode.

**SET:** Sets the timecode or user bits.

**R-RUN:** Timecode advances only during recording. Use this setting to have a consecutive timecode on the recording media.

For details, see “Setting the Timecode” (*page 62*) and “Setting the User Bits” (*page 62*).

### 6 LEVEL CH1/CH2/CH3/CH4 (audio channel 1/2/3/4 recording level) knobs

Adjust the audio levels to be recorded on channels 1, 2, 3, and 4 when the AUDIO SELECT CH1/CH2 and AUDIO SELECT CH 3-4 switches are set to MANUAL.

### 7 AUDIO SELECT CH 3-4 (audio channel 3/4 adjustment method selection) switch

Select the audio level adjustment method for each of audio channels 3 and 4.

**AUTO:** Automatic adjustment

**MANUAL:** Manual adjustment

### 8 ESSENCE MARK button

By pressing this button when the thumbnail display of a clip is on the screen, you can view the following thumbnail display of the shot-marked frames of that clip, depending on the item selected in a list displayed on the screen.

**All:** Thumbnail display of all frames marked with essence marks.

**Shot Mark1:** Thumbnail display of the frames marked with Shot Mark 1

**Shot Mark2:** Thumbnail display of the frames marked with Shot Mark 2

You can also select Shot Mark 0 and Shot Mark 3 to Shot Mark 9.

If you have recorded clips by using planning metadata that defined names for Shot Mark 0 to Shot Mark 9, the defined names are displayed instead of the above item names in the list.

### 9 SHIFT button

Use this in combination with other buttons.

### 10 PRESET/REGEN (regeneration)/CLOCK switch

Selects the type of timecode to record.

**PRESET:** Record new timecode on the media.

**REGEN:** Record timecode continuous with the existing timecode recorded on the media. Regardless of the setting of the F-RUN/SET/R-RUN switch, the camcorder operates in R-RUN mode.

**CLOCK:** Record timecode synchronized to the internal clock. Regardless of the setting of the F-RUN/SET/R-RUN switch, the camcorder operates in F-RUN mode.

## 11 AUDIO SELECT CH1/CH2 (audio channel 1/2 adjustment method selection) switches

Select the audio level adjustment method for each of audio channels 1 and 2.

**AUTO:** Automatic adjustment

**MANUAL:** Manual adjustment

## 12 AUDIO IN CH1/CH2/CH3/CH4 (audio channel 1/2/3/4 input selection) switches


Select the audio input signals to be recorded on audio channels 1, 2, 3 and 4.

**FRONT:** Audio input signals from the microphone connected to the MIC IN connector

**REAR:** Audio input signals from an audio device connected to the AUDIO IN CH-1/CH-2 connectors

**WIRELESS:** Audio input signals from the UHF portable tuner if it is installed

## Left side and upper section

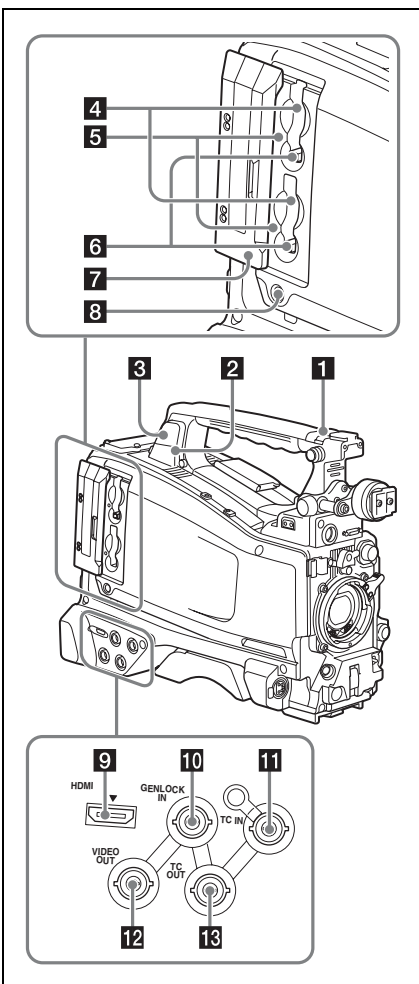

## 1 ASSIGNABLE 4/5 switches

You can assign the desired functions to these switches on OPERATION > Assignable SW in the setup menu (see page 139).

Off is assigned to these switches when the camcorder is shipped from the factory.

2 PC connector

Used to put this camcorder into USB connection mode and use it as an external storage device for a computer. When a computer without ExpressCard slot is connected to this connector, every memory card inserted in the camcorder is recognized as a drive for that computer.

3 External device connector

Connect an optional CBK-WA01 Wi-Fi Adapter. Connecting a CBK-WA01 allows Wi-Fi connection (wireless LAN connection) between the camcorder and a computer.

Notes

- When you connect a CBK-WA01, install the optional CBK-UPG02 Hardware Upgrade Key.
- Use this connector only for connecting a CBK-WA01. Do not connect and use a USB hub or similar products.

For details on how to use the CBK-WA01, refer to the Supplement supplied in the CD-ROM (labeled “Manuals for Solid-State Memory Camcorder”).

4 SxS memory card slots

These two slots (A and B) can receive SxS memory cards or other recording media (see page 67).

5 ACCESS lamps

Indicate the state of slots A and B (see page 67). You can check whether the lamps are lit even when the slot cover is closed.

6 EJECT buttons

To remove the recording media from the slot, press the EJECT button to release the lock, then press the button once more. This makes the media come out of the slot partially (see page 68).

7 Slot cover

Slide to the left and right to open and close.

8 SLOT SELECT (SxS memory card select) button

When SxS memory cards are loaded in both card slots A and B, press this button to select the card you want to use (see page 68).

9 HDMI <sup>1)</sup> output connector

Outputs HDMI signals for video monitoring. When a video monitor provided with an HDMI signal input connector is connected to this

connector, you can monitor picture being shot (camera picture) or playback picture.

1) The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

10 GENLOCK IN (genlock signal input) connector (BNC type)

This connector inputs a reference signal when the camcorder is to be genlocked or when timecode is to be synchronized with external equipment. Available reference signals vary depending on the current system frequency as shown in the following table.

System frequency	Available reference signals
1080/59.94i	1080/59.94i, 480/59.94i
1080/29.97P	1080/59.94i, 480/59.94i
1080/23.98P (PsF output)	1080/23.98PsF, 480/59.94i
1080/23.98P (Pulldown output)	1080/59.94i, 480/59.94i
720/59.94P	1080/59.94i, 720/59.94P, 480/59.94i
720/29.97P	1080/59.94i, 720/59.94P, 480/59.94i
720/23.98P	1080/59.94i, 720/59.94P, 480/59.94i
480/59.94i	1080/59.94i, 480/59.94i
480/29.97P	1080/59.94i, 480/59.94i
1080/50i	1080/50i, 576/50i
1080/25P	1080/50i, 576/50i
720/50P	1080/50i, 720/50P, 576/50i
720/25P	1080/50i, 720/50P, 576/50i
576/50i	1080/50i, 576/50i
576/25P	1080/50i, 576/50i

(Genlock for the camera module supports horizontal sync signals only.) Use MAINTENANCE > GENLOCK in the setup menu to adjust the genlock H-phase (phase of horizontal sync signal).

11 TC IN (timecode input) connector (BNC type)

To apply an external lock to the timecode of the camcorder, input the reference timecode.

For details, see “Setting the Timecode” (page 62).




## 12 VIDEO OUT connector (BNC type)

Outputs video signals for monitoring. The output signals can be selected either composite video or HD-Y depending on the setting of OPERATION >Input/Output >Output&i.LINK in the setup menu.

## 13 TC OUT (timecode output) connector (BNC type)

To lock the timecode of an external VTR to the timecode of this camcorder, connect this connector to the external VTR's timecode input connector.

## Rear

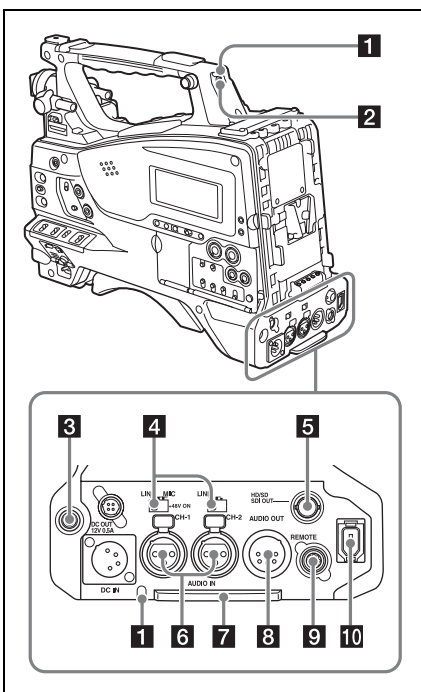

## 1 TALLY (back tally) indicators (red)

Light up during recording. They will not light if the TALLY switch is set to OFF. These indicators also flash to indicate warnings (see page 20). The tally indicator on the front of the viewfinder and the REC indication on the viewfinder screen light or flash in the same manner.

For details, see “Operation Warnings” (page 156).

## 2 TALLY switch

Set to ON to activate the TALLY indicator function.

## 3 EARPHONE jack (stereo, minijack)

You can monitor the E-E sound during recording and playback sound during playback. When an alarm is indicated, you can hear the alarm sound through the earphone. Plugging an earphone into the jack automatically cuts off the built-in speaker.

You can select monaural or stereo on MAINTENANCE >Audio in the setup menu.

## 4 AUDIO IN selectors

Select the audio source you connect to the AUDIO IN CH-1/CH-2 connectors.

**LINE:** When connecting a stereo amplifier or other external audio signal source

**MIC:** When connecting a microphone that does not require 48 V power supply

**+48V:** When connecting a microphone that requires 48 V power supply

## 5 HD/SD SDI OUT connector (BNC type)

Outputs an HDSDI or SDSDI signal (with embedded audio). The output from this connector can be turned on or off by OPERATION >Input/Output >SDI Output in the setup menu.

## 6 AUDIO IN CH-1/CH-2 (audio channel 1 and channel 2 input) connectors (XLR type, 3-pin, female)

These are audio input connectors for channels 1 and 2 to which you can connect audio equipment or a microphone.

## 7 Bottom cover

This is provided for protecting the cables connected to the connectors on the rear panel. By loosening the screws which retain the cover to the bottom of the camcorder, you can adjust the position of the cover depending on the size and shape of the microphone or audio cable plugs. After adjusting the position, tighten the screws to secure the cover.

## 8 AUDIO OUT connector (XLR type, 5-pin, male)

Outputs the audio signals recorded on audio channels 1 and 2 or audio channels 3 and 4. The audio signals are selected by the MONITOR switch.

## 9 REMOTE connector (8-pin)

Connect a remote control unit, which makes it possible to control the camcorder remotely.


### Note

Before connecting/disconnecting the Remote Control Unit to/from the camcorder, be sure to turn off the camcorder POWER switch.

## 10 i.LINK (HDV/DV) connector (6-pin, IEEE1394 compliant, S400)

To input and output HDV/DV streams, connect to an HDV/DV device.

## Monochrome LCD Panel

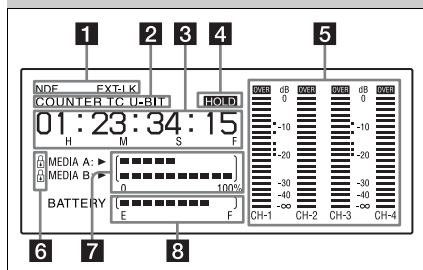

### 1 Timecode status

**NDF:** Appears when non-drop-frame timecode is selected.

**EXT-LK:** Appears when the internal timecode generator is locked to an external signal input to the TC IN (timecode input) connector.

### 2 Counter display mode

Shows the type of information selected by the DISPLAY switch to be displayed in the time counter display.

**COUNTER:** Counter values

**TC:** Timecode

**U-BIT:** User bits data

### 3 Time counter display

Switches displays of time counter values, timecode, and user bits data, depending on the position of the DISPLAY switch.

When the HOLD button is pressed to hold the timecode value, the timecode is displayed in the format shown below. When the HOLD button is pressed again to release the hold, the timecode is displayed in the normal format.



The three dots indicates that timecode is displayed in the hold mode.

### 4 HOLD indication

Appears when the timecode generator output is displayed in the hold mode.

### 5 Audio level indicators

Indicate the audio recording or playback levels of channels 1 to 4.

### 6 Lock icon

Appears when the recording media is write-protected.


### 7 Remaining media capacity indicator

Shows bar segments indicating the remaining capacity of recording media in the slots.

### 8 Remaining battery capacity indicator

Shows bar segments indicating the remaining battery capacity.

## Auto Focus Lens (Supplied with the PMW-320K)

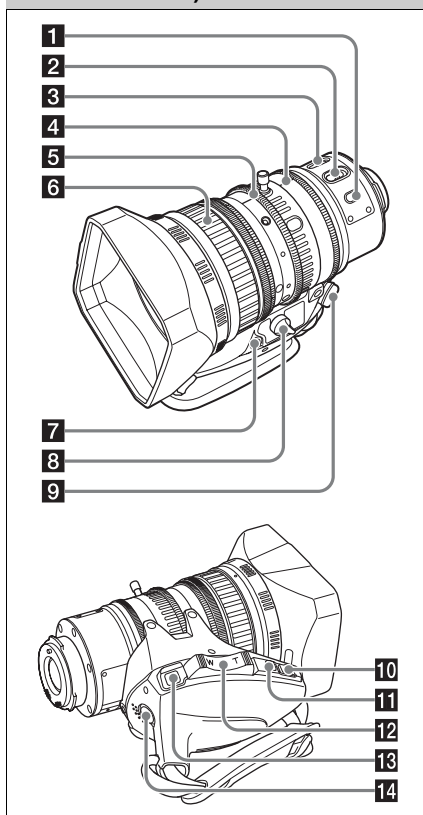

### 1 PUSH AF (auto focus) button

When the focus adjustment is in the manual mode, by pressing this button you can use the auto focus for an instantaneous adjustment to the subject.

When the button is pressed, the auto focus operates until the image is in focus, then disengages.

Even when the FOCUS switch is set to A (auto), by pressing this button, you can restart the auto focus.

### 2 FOCUS switch

**A (auto):** The auto focus function is constantly active. Even with the switch in the A position, you can manually adjust the focus by operating the focus ring.

**M (manual):** The manual mode allows focusing adjustment with the focus ring.

In manual mode, auto focus adjustment is also possible, by pressing the PUSH AF button.

### 3 MACRO switch

When this switch is in the ON position, the macro mode is enabled, allowing focusing over the whole range (5 cm<sup>1)</sup> to ∞) including the macro range (from 5 cm<sup>1)</sup> to 90 cm from the front of the lens).

This operation is independent of whether the focus adjustment mode is auto or manual.

In the macro range, the auto focusing speed is lower.

1) At the wide-angle setting

### 4 Iris ring

For manual iris adjustment, set the IRIS switch to the M (manual) position, then turn this ring.

### 5 Zoom ring

For manual zoom adjustment, set the ZOOM switch to the MANUAL position, then turn this ring.

### 6 Focus ring

Turn this ring to adjust the focus.

This ring can be turned endlessly in both directions. The faster you turn, the faster the focusing mechanism operates, to minimize the amount of turning required for focusing. When you slide the focus ring back (toward the camcorder), the focus mode becomes Full MF mode (*see page 58*).

### 7 Flange focal length adjustment button

Press this to adjust the flange focal length (the distance from the lens mounting flange plane to the focusing plane) (*see page 43*).

### 8 Zoom control connector (8-pin)

Connecting an optional zoom servo controller allows remote control of zooming.

### 9 ZOOM switch

**SERVO:** Motorized zoom. Operate the zoom with the power zoom lever.

**MANU. (manual):** Manual zoom. Operate the zoom with the zoom ring.

## 10 PUSH AUTO button

When the IRIS switch is in the M position for manual adjustment, press this button for an instantaneous auto adjustment.

The iris is automatically adjusted while the button is held down.

## 11 IRIS switch

**A (auto):** The iris is adjusted automatically.

**M (manual):** Adjust the iris with the iris ring.

## 12 Power zoom lever

This is enabled when the ZOOM switch is in the SERVO position. Press the W end for wide-angle and the T end for telephoto.

Press the lever harder for a faster zoom action.

### Notes on auto focus

- In the following cases, it may be difficult to focus on the subject. If this does happen, use manual focusing.
  - If the subject has no contrast
  - If the subject is moving rapidly
  - When shooting point light sources, under street lighting or at night
  - When there are very bright objects close to the subject
  - When shooting through a glass window
- If there are a number of objects within the screen at close and far range, the focus may not be on the intended subject. In this case, with the subject on which you want to focus in the center of the screen, press the PUSH AF button.
- After focusing with the PUSH AF button, if you operate the zoom or adjust the iris, the depth of field may become shallower, losing crisp focus. In such cases, press the PUSH AF button once more.
- If you focus at wide-angle then zoom to telephoto, the subject may no longer be in focus.
- It may take time until the image is in focus while using the slow shutter mode.

### Note on zoom speed

Depending on the shooting distance, the zoom speed may fall as the lens approaches the telephoto end.

## 13 RET (return video) button

You can use this as an assignable switch (*see page 141*).

Use this to check the video when Lens RET is assigned to this button (factory default setting). If you press this during recording pause, the last few


seconds recorded appear on the viewfinder screen (recording review) (*see page 71*).

Pressing this button (single click) during recording or playback records a Shot Mark 1 mark, and double-clicking records a Shot Mark 2 mark (*see page 73*).

## 14 VTR button

Use this to start and stop recording. Press once to start recording, then press once more to stop.

## Viewfinder

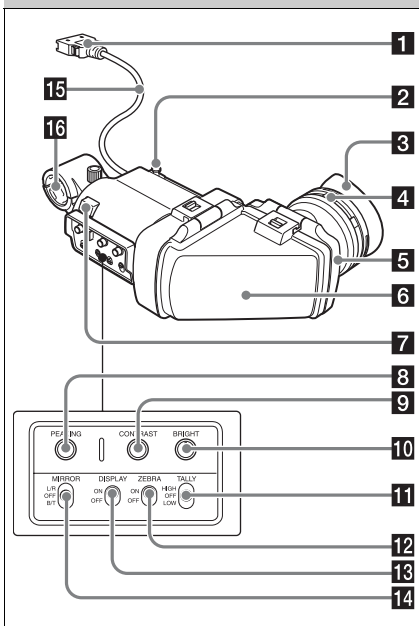

### 1 Plug

Connect to the VF connector (26-pin) on the camcorder.

### 2 Stopper

Prevents the viewfinder from coming off the camcorder when it is slid from side to side.

### 3 Eyecup

### 4 Diopter adjustment ring

Allows for optimal focus adjustment.

### 5 Eyepiece

You can raise this up when required by the situation.

**6 Viewfinder barrel**

You can raise this up or rotate when required by the situation.

**7 Tally indicator**

Lights up when recording is started by a press of the REC START button on this camcorder, the VTR button on the lens, or the VTR button on the remote control unit.

When an abnormality occurs, the tally indicator flashes to indicate a warning.

**8 PEAKING control**

Turning this control clockwise adjusts the picture sharpness, and makes focusing easier. This control has no effect on the output signals of the camcorder.

**9 CONTRAST control**

Adjusts the contrast of the screen. This control has no effect on the output signals of the camcorder.

**10 BRIGHT control**

Adjusts the brightness of the screen. This control has no effect on the output signals of the camcorder.

**11 TALLY switch**

Controls the tally indicator located on the front of the viewfinder.

**HIGH:** The tally indicator brightness is set to high.

**OFF:** The tally indicator is disabled.

**LOW:** The tally indicator brightness is set to low.

**12 ZEBRA (zebra pattern) switch**

Controls the zebra pattern display on the viewfinder screen as follows.

**ON:** Display a zebra pattern.

**OFF:** Do not display a zebra pattern.

**13 DISPLAY switch**

Turns the display of text information on and off.

**ON:** Display text information.

**OFF:** Do not display text information.

**14 MIRROR switch**

The image display on the monitor screen becomes reversed horizontally or vertically when the viewfinder barrel is raised up or rotated. Use this switch to control the image display in such situation.

**L/R:** Reverse the image horizontally.

**OFF:** Do not reverse the image.

**B/T:** Reverse the image vertically.

**15 Viewfinder cable****16 Microphone holder**


# Viewfinder Screen Display

The viewfinder screen displays not only the video picture but also characters and messages indicating the camcorder settings and operating status, a center marker, a safety zone marker, etc. When the menu screen is not displayed and the DISPLAY switch is set to ON, the items for which an ON setting was made with OPERATION >Super Impose in the setup menu or with related switches are displayed at the top and bottom of the screen.

Caution messages are indicated for three seconds when you carry out operations to change camcorder settings. Adjustment execution messages are indicated while adjustments proceed. When adjustments are finished, messages showing the results of adjustments appear for three seconds.

Not only these indications are displayed on the viewfinder screen, but a menu setting enables them to be output as video signals. All items that can be displayed on the viewfinder screen are shown below.

## Top of viewfinder screen

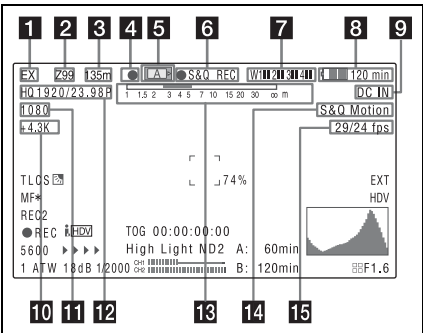

### 1 Extender settings

Indicates the setting of the digital extender function (when optional CBK-CE01 is installed) of this camcorder and the setting of the lens extender.

**EX:** The lens extender is on.

**08:** The lens shrinker is on.

**x2D:** The optional digital extender function of this camcorder is on.

**Ex2D:** The lens extender and the optional digital extender function of this camcorder are both on.

Digital extender function can be turned on or off by an assignable switch to which Digital Extender is assigned.

### 2 Zoom position (when the serial lens is mounted)

Indicates the zoom position of the zoom lens in the range from 0 to 99.

### 3 Focus position (when the serial lens is mounted)

Indicates the focus position as distance to the subject (in units of m).

### 4 Green tally

Lights when the camcorder is the following states.

- MAINTENANCE >Camera Config >HD-SDI Remote I/F is set to [G-Tally] in the setup menu and a recording control signal is output from the HD/SD SDI OUT connector.
- Green tally signal received (when a camera adaptor is mounted on the camcorder and a camera extension unit is connected)

### 5 Media status

Displays the name of the currently active media slot (A or B).

### 6 Recording mode/operation status

Indicates the current recording mode/operation status as follows.

Indication	Meaning
●REC	Recording in progress
STBY	Standby for recording
●CACHE	Standby in Picture Cache mode
●INT REC	Recording in progress in Interval Recording mode
●INT STBY	Standby for next recording in Interval Recording mode
INT STBY	Standby in Interval Recording mode
●FRM REC	Recording in progress in Frame Recording mode
●FRM	Standby for next recording in Frame Recording mode
FRM STBY	Standby in Frame Recording mode

Indication	Meaning
●S&Q REC	Recording in progress in Slow & Quick Motion mode
S&Q STBY	Standby in Slow & Quick Motion mode
●CALL	Being called from a connected device
►REVIEW	During recording review

## 7 Wireless receiver reception level

When a wireless receiver is installed in the camcorder, “W” appears together with four segment reception level indicators for each of the channels (1 to 4) that can be used by the receiver. The indications are as follows.

**In normal situation:** The number of white segments indicates the strength of the signal level.

**Muting (for an analog receiver) or error rate aggravation (for a digital receiver):** The number of gray segments indicates the strength of the signal level.

**Reception level over peak:** “P” is displayed instead of the indicators.<sup>1)</sup>

**Tuner battery is low:** The channel number and indicator of the corresponding channel flash.<sup>1)</sup>

1) When an optional DWR-S01D is used

## 8 Battery remaining/voltage capacity

The following is displayed depending on the type of power source.

Type of power source	What is displayed
InfoLithium battery	Remaining battery capacity icon and remaining recording time
Anton Bauer battery	Remaining battery capacity (% indication)
Other type than above	Input voltage

## 9 External power input

Appears when power is supplied from an external power source connected to the DC IN connector.

## 10 Color temperature

Displays a color temperature calculated from the gain of R and B, in the range 1.5 K to 50.0 K (in steps of 0.1 K). The +/- signs may be displayed depending on the Offset White setting (*see page 111*).

**No display:** Offset White is OFF

**+**: The value of Offset White is greater than 3200K.

**-**: The value of Offset White is less than 3200K.

## 11 Number of system lines

Indicates the number of system lines (1080/720/576/480) of video currently being recorded or played back.

## 12 Video format

Indicates the format of video being currently played back or recorded (*see page 50*).

The video aspect ratio (16:9 or 4:3) can also be displayed when the recording format is set to DVCAM.

## 13 Depth of field indication (when the serial lens is mounted) Error/warning indication

A bar indicates the depth of field. The display unit is meters or feet, as selected by OPERATION >Display On/Off >Lens Info in the setup menu. An error or warning message is displayed here depending on the situation.

Under this area, you can also display the name of the next clip to be recorded (*see page 114*).

## 14 Special recording mode indication


The following is displayed when the camcorder is in a special recording mode.

- Frame Rec (Frame Recording mode)
- Interval Rec (Interval Recording mode)
- S&Q Motion (Slow & Quick Motion mode)

## 15 Special recording mode settings indication

Appears when the camcorder is in a special recording mode.

Bottom of viewfinder screen

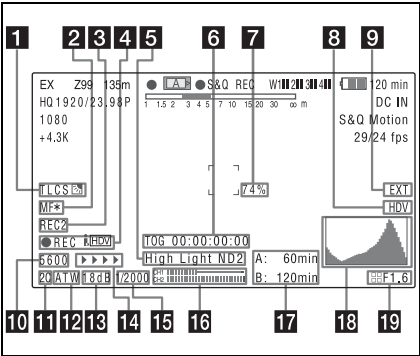

1 TLCS iris control mode

The following icons are displayed to indicate the video level control modes based on the Total Level Control System (TLCS).

Icon	TLCS control mode
	Backlight mode
	Standard mode
	Spotlight mode

2 Focus adjustment mode (when the auto focus lens is mounted)

Indicates the current focus adjustment mode of the camcorder.

- AF (Auto Focus mode)
- MF (Manual Focus mode)
- MF\* (Manual Focus mode when the MF Assist function is on)
- Full MF (Full Manual Focus mode)

3 External device control

“REC2” is displayed when MAINTENANCE >Camera Config >HD-SDI Remote I/F is set to [Chara] in the setup menu and a recording control signal is output from the HD/SD SDI OUT connector.

4 Operation status of connected i.LINK device

The operating format (HDV or DV) and operation status of that device are indicated as follows.

Indication	Meaning
●REC	HDV recording in progress

Indication	Meaning
STBY	Standby for HDV recording
●REC	DV recording in progress
STBY	Standby for DV recording

5 Video level indication

An indication is displayed together with an appropriate ND filter position number when the light level of the subject is too high or too low.

6 Timecode  
Caution message

Indicates the elapsed recording/playback time, timecode, user bits data or other information selected by the DISPLAY switch (*see page 21*). Also indicates a caution message when caution is required such as when you try to change settings.

7 Brightness level

Indicates the average brightness level (%) of the detection area.

8 External input source

Indicates the type of external input signal (HDV) to be recorded.

9 Recording of external input

Indicates “EXT” when an external input is recorded.

10 Electric color temperature filter

Appears when the CC 5600K function is set to on.

11 Filter position

Indicates the currently selected ND filter position number. (*see page 17*). When ELECTRICAL CC is assigned to an assignable switch, the electrical filter position (A/B/C/D) appears to the right of the ND filter position (1 to 4), as shown on the previous page.

12 White balance memory

Indicates the currently selected white balance automatic adjustment memory.  
ATW: ATW (Auto Tracing White Balance) mode  
W:A: Memory A mode  
W:B: Memory B mode  
W:P: Preset mode  
3200: When the assignable switch to which Color Temp SW 3200K has been assigned is on  
4300: When the assignable switch to which Color Temp SW 4300K has been assigned is on



- 5600:** When the assignable switch to which Color Temp SW 5600K has been assigned is on
- 6300:** When the assignable switch to which Color Temp SW 6300K has been assigned is on

### 13 Gain value

Indicates the gain value (in dB) of the video amplifier, as set by the GAIN selector.

### 14 Recording status indication

When the Rec Status Indicator item of the Operation menu is set to [On], ► marks are displayed as the recording proceeds.

### 15 Shutter

Indicates the shutter speed or the shutter mode.

For details, see “Setting the Electronic Shutter” (page 54).

### 16 Audio level meters

Indicate the audio levels of channel 1 and channel 2.

### 17 Remaining media capacity

Indicates the recording time remaining for each of the media loaded in the slots. The available time for recording with the current video format (recording bit rate) is calculated according to the remaining space of each media and indicated in time units of minutes. A lock icon appears if the media is write-protected.

### 18 Histogram

Shows a pixel distribution of video luminance (HD mode only).

### 19 Iris position (when the lens is mounted)

Indicates the iris position and the setting for iris override (reference value for the lens iris) (see page 56).

The iris override setting is indicated by four segments indicator as follows.

Reference value	Indicator	
-0.25	<input type="checkbox"/>	Lower left segment is lit in white.
-0.5	<input type="checkbox"/> <input type="checkbox"/>	Left two segments are lit in white.
-0.75	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Left two segments and lower right segment are lit in white.
-1	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	All segments are lit in white.

Reference value	Indicator	
+0.25	<input checked="" type="checkbox"/>	Lower left segment is lit in grey.
+0.5	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	Left two segments are lit in grey.
+0.75	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	Left two segments and lower right segment are lit in grey.
+1	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	All segments are lit in grey.

## Preparing a Power Supply

For safety, use only the Sony battery packs and AC adaptors listed below.

- BP-L80S Lithium-ion Battery Pack
- AC power using the AC-DN2B/DN10 AC Adaptor

**CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. When you dispose of the battery, you must obey the law in the relative area or country.

**ATTENTION**

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Lorsque vous mettez la batterie au rebut, vous devez respecter la législation en vigueur dans le pays ou la région où vous vous trouvez.

**VORSICHT**

Explosionsgefahr bei Verwendung falscher Batterien. Batterien nur durch den vom Hersteller empfohlenen oder einen gleichwertigen Typ ersetzen. Wenn Sie die Batterie entsorgen, müssen Sie die Gesetze der jeweiligen Region und des jeweiligen Landes befolgen.

## Using a Battery Pack

When a BP-L80S Battery Pack is used, the camcorder will operate continuously for approximately 285 minutes.

**WARNING**

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**AVERTISSEMENT**

N'exposez pas les batteries à une chaleur excessive, au soleil ou près d'un feu par exemple.

**WARNUNG**

Akkus dürfen keinesfalls übermäßiger Wärmeeinwirkung ausgesetzt werden, wie z.B. Sonneneinstrahlung, Feuer o. ä.

**Note**

The battery pack operating time depends on the frequency of use of the battery pack, and the ambient temperature when used.

Before use, charge the battery pack with a charger suitable for each battery.


*For details on the battery charging procedure, refer to the battery charger operation manual.*

**Note on using the battery pack**


A warm battery pack may not be able to be fully recharged.

## To attach the battery pack

- 1 Press the battery pack against the back of the camcorder, aligning the line on the side of the battery pack with the matching line on the camcorder.**

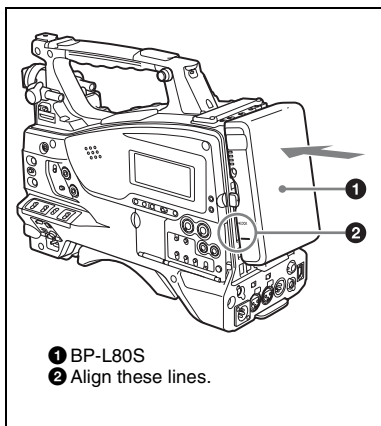

- 2 Slide the battery pack down until its "LOCK" arrow points at the matching line on the camcorder.**

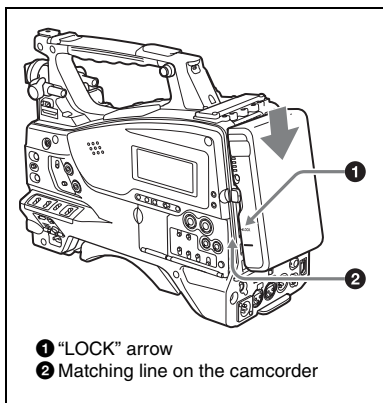


### Note

If the battery pack is not attached correctly, the terminal may be damaged.

## To detach the battery pack

Holding the release button in, pull the battery pack up.

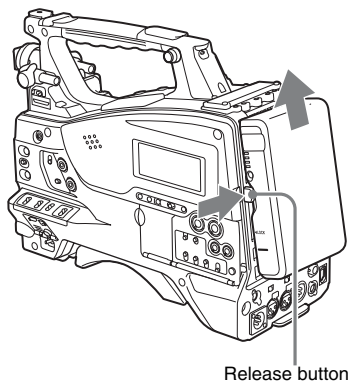


### Notes

- During recording and playback (while the ACCESS lamp on the right-side panel is lit in blue and the ACCESS lamp in the card slot section is lit in orange), be careful never to remove the battery pack.
- Make sure to power the camcorder off before replacing the battery pack.

## Using AC Power

Mount an AC-DN2B/DN10 on the camcorder in the same way as a battery pack, then connect to the AC power supply.

The AC-DN2B/DN10 can supply up to 100 W of power.

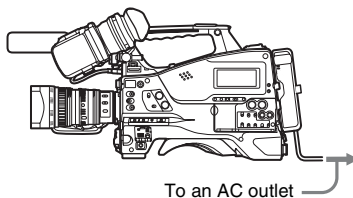

# Attaching the Viewfinder

## CAUTION

When the viewfinder is attached, do not leave the camcorder with the eyepiece facing the sun. Direct sunlight can enter through the eyepiece, be focused in the viewfinder and cause fire.


## Attaching the Supplied Viewfinder

### Note

When attaching the viewfinder, make notes of the following points.


- Be sure to power off the camcorder before coupling the viewfinder connector to the camcorder's VF connector (26-pin). If you make this connection when the camcorder power is on, the viewfinder may not function properly.
- Couple the viewfinder connector firmly to the camcorder's VF connector (26-pin). If the coupling is loose, noise may appear on the video or the tally indicator may not operate properly.

- 1 **Loosen the viewfinder left-to-right positioning ring, 2 attach the viewfinder to the viewfinder fitting shoe, and 3 tighten the viewfinder left-to-right positioning ring.**

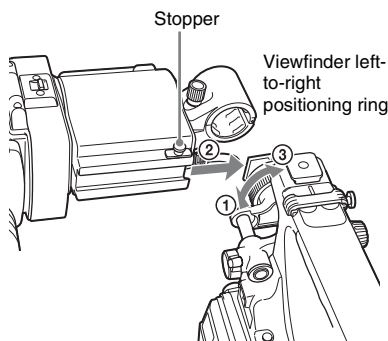

- 2 **Couple the viewfinder connector to the VF connector (26-pin).**

VF connector (26-pin)

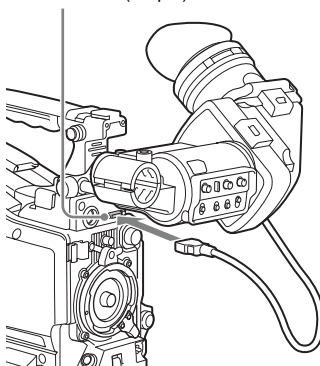


## Detaching the viewfinder

You can detach the viewfinder by following the attaching procedure in reverse order, but there is an additional action to take: when detaching the viewfinder from the fitting shoe, pull up the stopper.

## Adjusting the Viewfinder Position

To adjust the viewfinder left-to-right position, loosen the left-to-right positioning ring, and to adjust the front-to-back position, loosen the front-to-back positioning knob.


Viewfinder left-to-right positioning ring

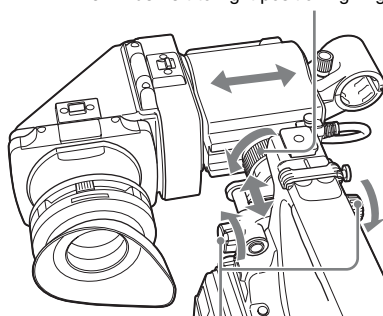

Viewfinder front-to-back positioning knob

## Adjusting the Viewfinder Angle

You can adjust the angle of the viewfinder.

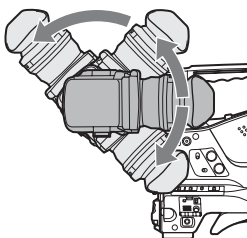


### To reverse the display (image/text indication) vertically

The viewfinder can be rotated as much as 180 degrees toward the direction facing the subject. When you do this, the picture and other information displayed in the viewfinder appear upside down. To restore the normal display, set the MIRROR switch on the rear panel of the viewfinder to B/T.

## Lifting Up the Viewfinder Barrel and Eyepiece


You can view the LCD screen inside the viewfinder or its mirrored image by lifting up the viewfinder barrel or the eyepiece. This section describes how to lift up the viewfinder barrel and detach it. The eyepiece can also be lifted up and detached in the same way.

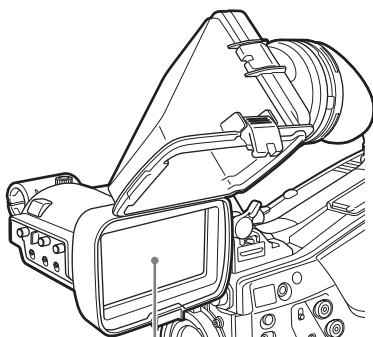

LCD screen


### To raise up the viewfinder barrel

Push the clip on the bottom to release (①) and flip up the viewfinder barrel (②). It locks at the 120-degree position.

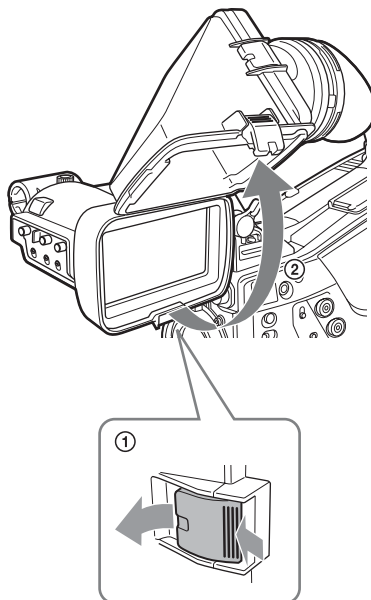

Normally use it in the locked position. Although you can open it farther from the lock position, once return it to the closed position to lock it at the 120-degree position again.

### To detach the viewfinder barrel

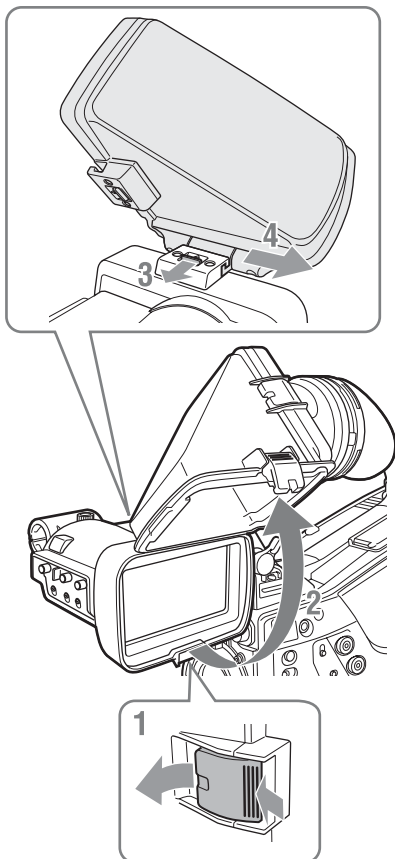

- 1** Push the clip on the bottom to release.
- 2** Flip up the viewfinder barrel.
- 3** Slide the knob on the top to the opposite side of the viewfinder barrel.
- 4** Detach the viewfinder barrel by horizontally sliding it.


### To reverse the display (image/text indication) horizontally

By setting the MIRROR switch on the rear panel of the viewfinder to L/R, you can reverse the picture and other information displayed in the viewfinder horizontally.

## Adjusting the Viewfinder Focus and Screen

### To adjust the viewfinder focus

Turn the diopter adjustment ring until the viewfinder image is sharpest.

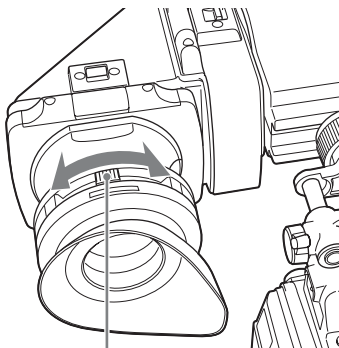


Diopter adjustment ring

You can also attach a commercially available protection filter, close-up lens, etc. that is 52 mm in diameter.

### To adjust the viewfinder screen

Adjust the brightness, contrast, and peaking of the viewfinder screen with the controls shown below.

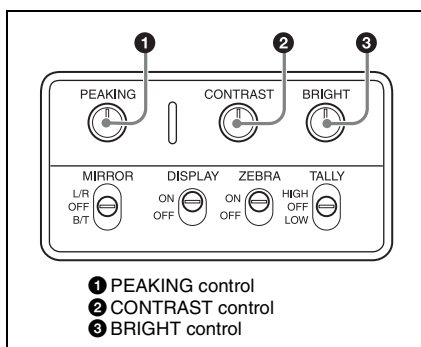


## Using the BKW-401 Viewfinder Rotation Bracket


By fitting an optional BKW-401 Viewfinder Rotation Bracket, you can rotate the viewfinder out of the way so that your right leg does not hit

the viewfinder while you are carrying the camcorder.


- 1 Loosen the front-to-back viewfinder positioning levers and the front-to-back viewfinder positioning knobs, and then pull the viewfinder slide assembly forward.

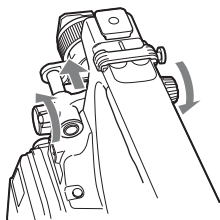

- 2 Using a 2.5 mm diameter hexagonal wrench, detach the viewfinder slide assembly.

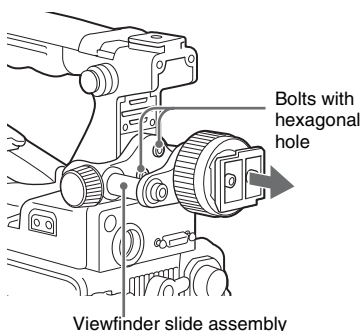


- 3 Attach the BKW-401 with the supplied bolts.

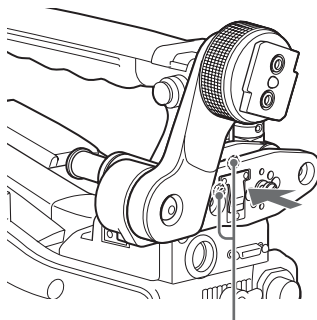

Bolts supplied with the BKW-401

- 4 Adjust the front-to-back position so that the arm of the BKW-401 does not touch the handle when it is raised.

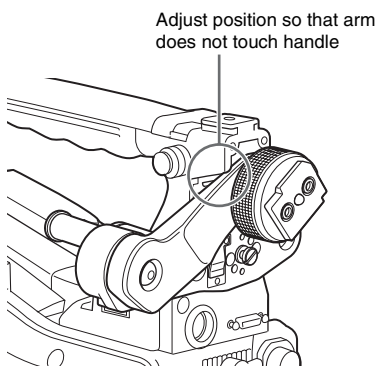

## Attaching a 5-inch Electronic Viewfinder


You can attach an optional DXF-51 or DXF-C50W (5-inch) Electronic Viewfinder. To attach it, an Accessory Shoe Kit (service part number: A-8274-968-B) is required.

*For details, consult a Sony service representative.*

### Note

It is not possible to use the supplied viewfinder and a 5-inch viewfinder at the same time.

Remove the cover of the grip, and attach the shoe and stopper screw of the Accessory Shoe Kit.

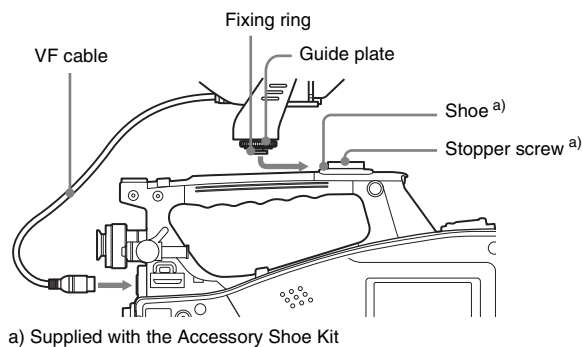




# Setting the Area of Use

## When using the camcorder for the first time

The area of use is not factory preset. Before using the camcorder, you need to set this item. (You cannot use the camcorder without setting this item.)

## To set the area of use

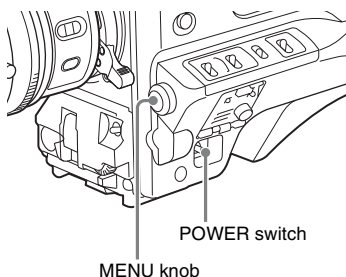


### 1 Set the POWER switch to the ON position.

The screen for setting the area of use appears in the viewfinder.



### 2 Press the MENU knob.

The settings for selectable areas of use are displayed.

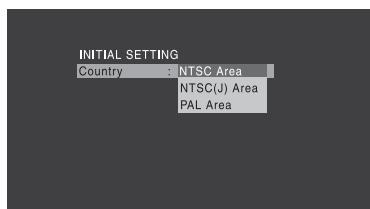

### 3 Turn the MENU knob to select the desired area of use.

Setting	Area of use
NTSC Area	NTSC area (for areas other than Japan) <sup>a)</sup>
NTSC(J) Area	NTSC area (Japan) <sup>b)</sup>
PAL Area	PAL area <sup>c)</sup>

- a) The composite signal output from this camcorder is an NTSC signal with a black setup (7.5 IRE). The system frequency is 59.94i.
- b) The composite signal output from this camcorder is an NTSC signal with no black setup. The system frequency is 59.94i.
- c) The composite signal output from this camcorder is a PAL signal. The system frequency is 50i.

### 4 Set the following items.

- Time Zone
- Date/Time

See "Basic Setup Menu Operations" (page 97).

### 5 Turn the MENU knob to select "Finish", then press the MENU knob.


The camcorder is now ready for use.

## Setting the Date/Time of the Internal Clock


You can set or change the date and time of the internal clock. The date and time set are reflected in the timecode.

For menu operations, see “Basic Setup Menu Operations” (page 97).

- 1 Select **MAINTENANCE >Clock Set >Date/Time** in the setup menu.

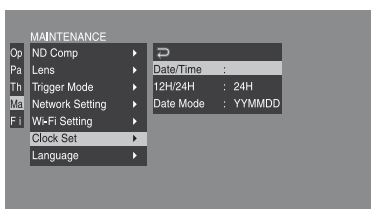

- 2 Press the **MENU** knob.  
The Date/Time setting window appears.

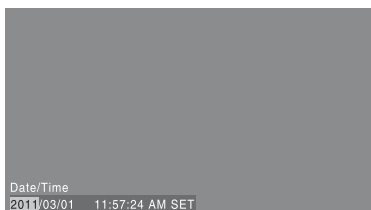

- 3 Turn the **MENU** knob to display the desired value, and press the knob.  
The selection shifts to the next item on the right.
- 4 To continue the remaining settings, repeat step 3.
- 5 Making sure that “SET” is selected, press the **MENU** knob.  
The internal clock is set with the date and time set in steps 3 and 4.

### To cancel the setting


Before executing step 5, push the **MENU CANCEL/PRST/ESCAPE** switch up to the **CANCEL/PRST** side.

## Mounting and Adjusting the Lens

### Note

Always power the camcorder off before mounting or removing a lens.

For information about using the lens, refer to the operation manual for the lens.

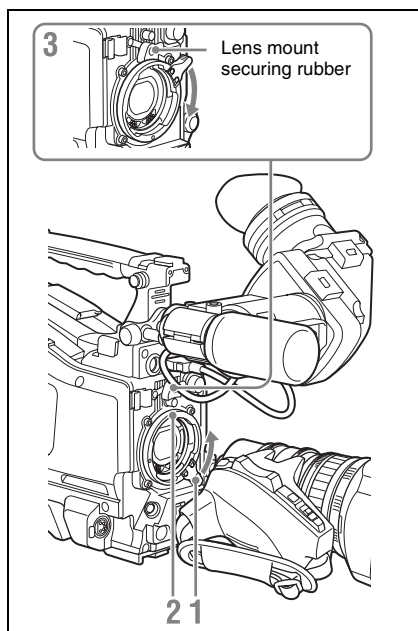

- 1 Push the lens locking lever up and remove the lens mount cap from the lens mount.
- 2 Align the center pin on the lens with the center slot in the lens mount, and insert the lens into the mount.
- 3 Holding the lens in place, push the lens locking lever down to lock the lens.

### Caution

If the lens is not firmly locked, it may come off while the camcorder is being used. This could cause a serious accident. Make sure the lens is

firmly locked. It is recommended that the lens mount securing rubber be put on the lens locking lever as illustrated above.


### If you have attached an aberration correction lens

The aberration correction function is activated automatically. Starting the camcorder with an aberration correction lens may require more time than normally because of data loading at start-up. The lens supplied with the PMW-320K is an aberration correction lens. Contact a Sony service representative for information about other aberration correction lenses.

## Adjusting the Flange Focal Length

If the lens does not stay in focus properly as you zoom from telephoto to wide angle, adjust the flange focal length (the distance from the plane of the lens mounting flange to the imaging plane). Make this adjustment just one time after mounting or changing the lens.

When carrying out the adjustment, use the supplied flange focal length adjustment chart as the subject.

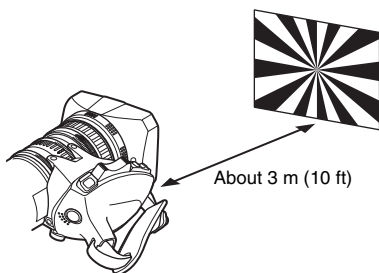

### Notes

- If you use a subject with insufficient contrast, or move the camcorder or subject during adjustment, this will cause an adjustment error.
- Place the subject (the flange focal length adjustment chart) so that it appears at the center of the screen at the telephoto end. Arrange so that no nearby object (no object closer to the camera than the chart) enters the screen at the wide-angle end.

## Carrying out the adjustment

### When using the auto focus lens

With the lens supplied with the PMW-320K, zoom and focus operations automatically adjust the flange focal length.

- 1 **Open the iris, position the supplied flange focal length adjustment chart approximately 3 meters (10 ft) away from the camcorder, and arrange the lighting to obtain a satisfactory video output.**
- 2 **Set the ZOOM switch to SERVO (power zoom mode).**
- 3 **Hold down the flange focal length adjustment button for 3 seconds.**

The flange focal length adjustment starts.

### During adjustment

The message "AUTO FB Adjust EXECUTING" appears on the viewfinder screen.

### If the adjustment completes correctly

The message on the viewfinder screen changes to "Auto FB Adjust: OK".

### If the flange focal length adjustment does not complete correctly

Check the subject and lighting conditions, and repeat the adjustment.

### When using a non-auto focus lens

- 1 **Set the iris to manual.**
- 2 **Open the iris, position the supplied flange focal length adjustment chart approximately 3 meters (10 ft) away from the camcorder, and arrange the lighting to obtain a satisfactory video output.**
- 3 **Loosen the fixing screws on the F.f or F.B ring (flange focal length adjustment ring).**
- 4 **Use manual or power zoom to set the lens to telephoto.**
- 5 **Point the camcorder at the chart by turning the focus ring and focus on it.**
- 6 **Set the zoom ring to wide angle.**
- 7 **Turn the F.f or F.B ring until the chart is in focus, being careful not to disturb the focus ring.**


- 8 Repeat steps 4 to 7 until the chart stays in focus all the way from wide angle to telephoto.
- 9 Tighten the F.f or F.B ring fixing screws.

## Preparing the Audio Input System

### Connecting a Microphone to the MIC IN Connector


Attach the supplied microphone to the microphone holder of the supplied viewfinder.

- 1 Loosen the screw (①) and open the microphone holder clamp (②).

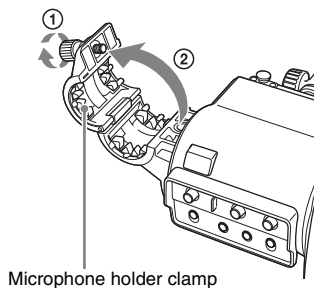


- 2 Place the microphone in the microphone holder.

- ① Place the microphone in the holder so that "UP" is at the top.
- ② Close the microphone holder.
- ③ Tighten the screw.

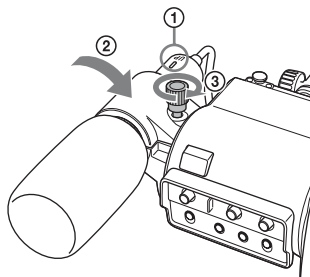

- 3 Plug the microphone cable into the MIC IN connector, then set the AUDIO IN CH1/CH2/CH3/CH4 switch for the

channel on which you want to record the audio from this microphone to **FRONT**.

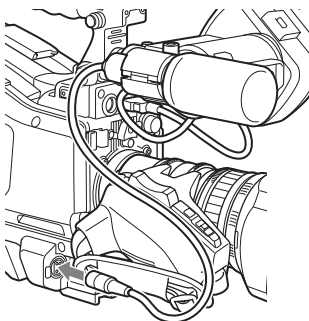

#### 4 Secure the microphone cable with the cable clamp.

### Connecting Microphones to the AUDIO IN Connectors



You can connect up to two monaural microphones to the AUDIO IN CH1/CH2 connectors, using an optional CAC-12 Microphone Holder.

The following is the procedure for attaching an electret condenser microphone such as the ECM-674/678.

*On how to attach the CAC-12, refer to the operation manual for the CAC-12.*

#### 1 Attach the electret condenser microphone.

- ① Loosen the ball joint lock lever.
- ② Wind the microphone spacer (sheet type, supplied with the microphone) around the microphone, while peeling off the protective sheets on both sides of the microphone spacer.
- ③ Place the microphone in the holder so that "UP" is at the top.
- ④ Close the microphone holder.
- ⑤ Tighten the screw.
- ⑥ Position so that the microphone does not interfere with the viewfinder and tighten the ball joint lock lever.

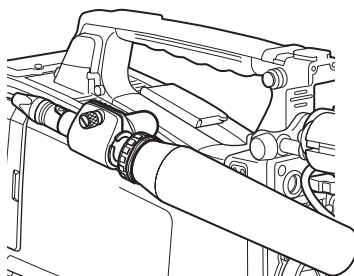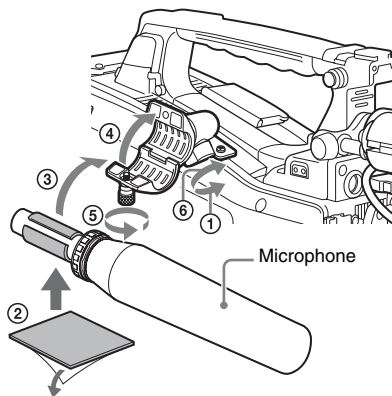

#### 2 Connect the microphone cable to the AUDIO IN CH-1 or CH-2 connector.


#### 3 Set the switches as follows.

- Set the AUDIO IN selectors indicated below, depending on the power supply type of the microphone.

**Internal power supply: MIC**

**External power supply: +48V**

- Set the AUDIO IN CH-1/CH-2 switch for the channel to which the microphone is connected to REAR.

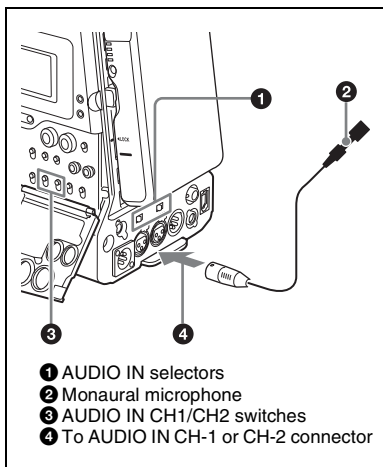

#### 4 Switch the input level to match the sensitivity of the microphone used.

Switch the input level by changing the setting of MAINTENANCE >Audio >Rear MIC CH1/CH2 Ref in the setup menu (factory default setting is -60 dB). *For details, see page 123.*

#### Notes

- If the input level on the camcorder is not at an appropriate setting for the microphone sensitivity, loud sounds may be distorted, and the signal-to-noise ratio may be affected.
- In order for the AUDIO IN CH-1 and CH-2 connectors on the camcorder to be able to provide a phantom 48 V power supply, female XLR connectors (3-pin) are fitted. If the microphone cable has a female connector, use an adaptor.
- When you detach a CAC-12 Microphone Holder once you have attached to the camcorder, be careful not to lose the two screws fixing the CAC-12 (in step 1). After detaching the CAC-12, be sure to put the two screws back into their original places.

### Attaching a UHF Portable Tuner (for a UHF Wireless Microphone System)

To use a Sony UHF wireless microphone system, power the camcorder off and then fit one of the following UHF portable tuners.

- DWR-S01D Digital Wireless Receiver
- WRR-855S UHF Synthesized Tuner Unit
- WRR-860C/861/862 UHF Synthesized Diversity Tuner

*For details of these units, refer to the operation manuals for them.*


#### Note

The optional WRR Mount Bracket (service part number: A-8278-057-B) is required to fit the WRR-862.

*For details, contact your vendor or a Sony service representative*


### To fit the DWR-S01D or WRR-855S

- 1 Remove the four fixing screws holding the cover of the portable tuner/receiver housing slot located in the rear of the camcorder, to remove the cover.

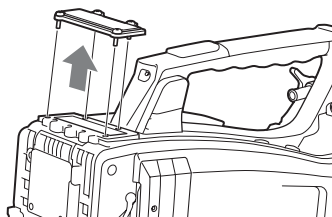

- 2 Insert the DWR-S01D or WRR-855S into the housing slot, and fasten the four fixing screws.


DWR-S01D or WRR-855S

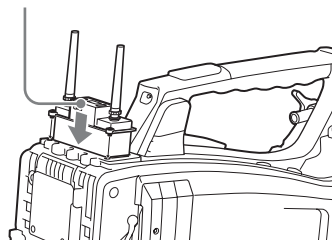


- 3 Set the AUDIO IN selector for the channel to which you want to input audio signal to WIRELESS (see page 23).

# Tripod Mounting

- 1 Attach the optional VCT-14/U14 Tripod Adaptor to the tripod.

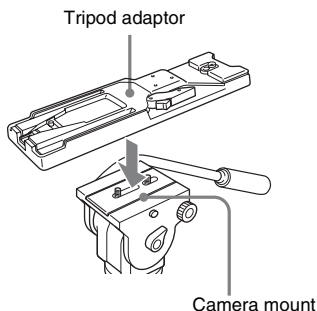


- 2 Mount the camcorder on the tripod adaptor.

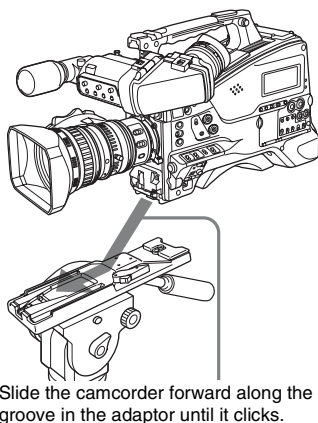

## To remove the camcorder from the tripod adaptor

Hold down the red button and pull the lever in the direction of the arrow.

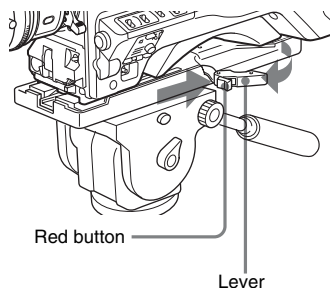

### Note

The tripod adaptor pin may remain in the engaged position even after the camcorder is removed. If this happens, press the red button and move the lever as shown above until the pin returns to the stowed position. If the pin remains in the engaged position, you will not be able to mount the camcorder on the tripod adaptor.

## Connecting a Video Light

With this camcorder, you can use the Anton Bauer Ultralight 2 or equivalent video light (powered by 12 V with maximum power consumption of 50 W).

- If you connect the video light to the LIGHT connector on the camcorder and set the LIGHT switch to AUTO, you can turn the light on and off automatically as you start and stop recording on this camcorder.
- The output of the LIGHT connector on the camcorder is controlled to 12 V even when the camcorder is supplied with over 12 V power (through the DC IN connector or battery pack). The brightness or color temperature of the light will not change according to voltage increase.

### Notes

- Do not use a video light with power consumption of over 50 W.
- The brightness or color temperature of the light will change when the voltage (supplied through the DC IN connector or from the battery pack) is under 12 V.

## To attach the video light

Fit the video light to the accessory fitting shoe on the camcorder grip, and connect the video light cable to the LIGHT connector.

### Note


The accessory fitting shoe on the camcorder is of the  $\frac{1}{4}$ -inch tapped hole type. If you want to replace this with a slide-type shoe, use the supplied cold shoe kit. On how to fit the cold shoe kit, refer to “Using a External Hard Disk” in the Supplement supplied in the CD-ROM (labeled “Manuals for Solid-State Memory Camcorder”).

## Using the Shoulder Strap


### To attach the shoulder strap

#### 1 Fit one of the clips to a shoulder strap fitting.

Pull up the strap to lock the fitting.

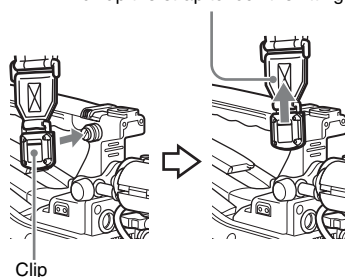


#### 2 Fit the other clip to the shoulder strap fitting on the other side of the grip in the same way as in step 1.

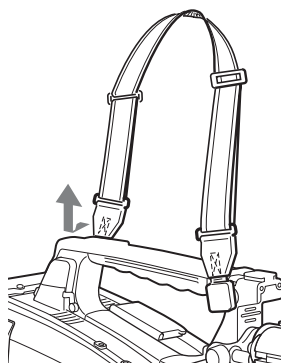




## To remove the shoulder strap

Press here and pull in the direction shown by the arrow to release.

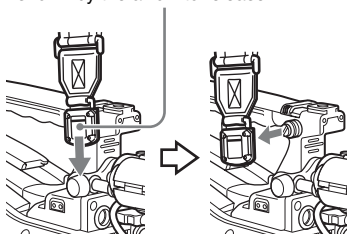

## Adjusting the Shoulder Pad Position

You can slide the shoulder pad back and forth within a 40 mm range. This adjustment helps you get the best balance for shooting with the camcorder on your shoulder.

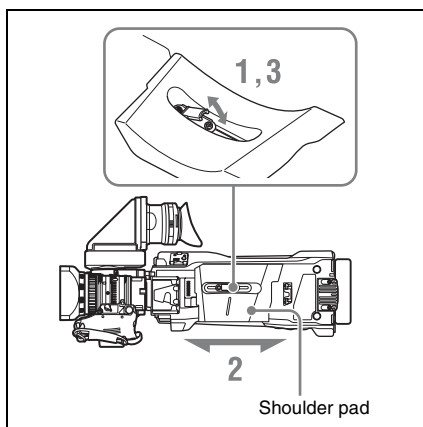

- 1** Raise the lever in the center of the shoulder pad to unlock the shoulder pad.
- 2** Slide the shoulder pad backward or forward until it is in the most convenient position.
- 3** Bring down the lever to lock the shoulder pad in the selected position.

For menu operations, see “Basic Setup Menu Operations” (page 97).

## Setting the Video Format

The following recording formats can be selected for different combinations of video resolution and system frequency.

OPERATION >Format menu settings				Video format (recording format/system frequency)	Frame size
HD/SD	HD System Line	Rec Format	System Frequency <sup>a)</sup>		
HD	1080	HQ 1920	59.94i	HQ 1920/59.94i	1920×1080
			50i	HQ 1920/50i	
			29.97P	HQ 1920/29.97P	
			25P	HQ 1920/25P	
			23.98P	HQ 1920/23.98P	
		HQ 1440	59.94i	HQ 1440/59.94i	1440×1080
			50i	HQ 1440/50i	
			29.97P	HQ 1440/29.97P	
			25P	HQ 1440/25P	
			23.98P	HQ 1440/23.98P	
		SP 1440	59.94i	SP 1440/59.94i	
			50i	SP 1440/50i	
			23.98P <sup>b)</sup>	SP 1440/23.98P	
	720	HQ 1280	59.94P	HQ 1280/59.94P	720×1280
			50P	HQ 1280/50P	
			29.97P	HQ 1280/29.97P	
			25P	HQ 1280/25P	
			23.98P	HQ 1280/23.98P	
SD	—	DVCAM	59.94i	DVCAM/59.94i	720×480
			50i	DVCAM/50i	720×576
			29.97P <sup>c)</sup>	DVCAM/29.97P	720×480
			25P <sup>c)</sup>	DVCAM/25P	720×576

a) **59.94i/29.97P/59.94P/23.98P**: When OPERATION >Format >Country in the setup menu is set to [NTSC Area] or [NTSC(J) Area]

**50i/25P/50P**: When OPERATION >Format >Country in the setup menu is set to [PAL Area]


b) 59.94i after 2-3 pulldown is recorded

c) Converted to PsF and recorded

## Changing the Video Format

Refer to the above table and change the settings of the relevant items.

- 1 Select **OPERATION >Format** in the setup menu (see page 99).

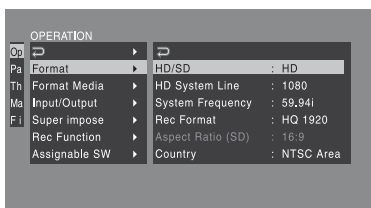

- 2 Turn the MENU knob to select the item to change, and press the knob.
- 3 Turn the MENU knob to change the setting, and press the knob.  
A confirmation message appears.
- 4 Select [Execute] to execute, or select [Cancel] to cancel, and then press the MENU knob.
- 5 When the setting of HD/SD or Country was changed, power the camcorder off and on again.

## Adjusting the Black Balance and the White Balance

To ensure excellent image quality when using this camcorder, conditions may require that both the black balance and the white balance be adjusted. Black balance and white balance adjustment values that are automatically set by the camcorder and the various settings are stored in the camcorder memory and retained even when the power is turned off.

### Black balance adjustment

The black balance will require adjustment in the following cases.

- When the camcorder is used for the first time
- When the camcorder has not been used for a long time
- When the camcorder is used under conditions in which the surrounding temperature has changed greatly
- When the GAIN selector (L/M/H/Turbo) values have been changed by using OPERATION >Gain Switch in the setup menu.

It is not usually necessary to adjust the black balance when using the camcorder after it has been off.

### White balance adjustment

Always readjust the white balance when the lighting conditions change.

## Adjusting the Black Balance

In automatic black balance mode, adjustments are performed in the following order: black set and black balance. Manual black balance adjustment can be selected from the setup menu.

### Note

Automatic black balance adjustment is disabled in the following case.

- During recording
- In a special recording modes (Picture Cache Rec, Interval Rec, Frame Rec, Slow & Quick)
- When the shutter mode is SLS

## 1 Set the OUTPUT/DCC switch to CAM.

## 2 Push the AUTO W/B BAL switch to BLACK and release the switch.

The message “Executing...” appears during execution, and changes to “Done” when the adjustment finishes. Adjustment values are saved to memory automatically.

### Notes

- During the black balance adjustment, the iris is automatically closed.
- During the black balance adjustment, the gain selection circuit is automatically activated so you may see flickering on the viewfinder screen, but this is not a fault.
- Output from the i.LINK connector stops temporarily if you execute black balance adjustment during i.LINK output. Output from the connector resumes when black balance adjustment finishes.

## If automatic black balance adjustment cannot be made

If the black balance adjustment cannot be completed normally, an error message will appear for about three seconds on the viewfinder screen. Possible messages are listed below.

Error message	Meaning
NG: Iris Not Closed	The lens iris did not close; adjustment was impossible.
NG: Timeout	Adjustment could not be completed within the standard number of attempts.
NG: Out of Range	The difference between the reference value and the current value is so great that it exceeds the range. Adjustment was impossible.

If any of the above error messages is displayed, retry the black balance adjustment.

If the error message occurs again, an internal check is necessary.

*For information about this internal check, contact your vendor or a Sony service representative.*

### Note

If the lens cable is not firmly connected to the LENS connector, it may not be possible to adjust the lens iris. If this happens, the black balance will be incorrect.

## Adjusting the White Balance

## 1 Set the switches and selectors as shown below.

- GAIN switch: L (set to a gain value that is as small as possible)
- OUTPUT/DCC switch: CAM
- WHITE BAL switch: A or B <sup>1)</sup>

1) Adjustment values are saved to memory B only when OPERATION >White Setting >White Switch<B> in the setup menu, is set to [Memory].


## 2 Set the FILTER selector to suit the lighting conditions as follows.

## 3 Place a white test card under the same lighting conditions as for the subject to be shot and zoom up to it.

Alternatively, any white object such as a cloth or a wall can be used.

The absolute minimum white area is as follows.

Rectangle centered on the screen. The lengths of the sides are 70% of the length and width of the screen.

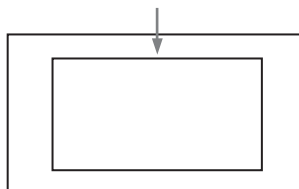

### Note

Make sure there are not bright spots in the rectangle.

## 4 Adjust the lens iris.

**Manually adjusted lens:** set the iris to an appropriate setting.

**Lens with automatic iris:** set the automatic/manual switch on the lens to automatic.

## 5 Push the AUTO W/B BAL switch to WHITE and then release the switch.

The message “Executing...” appears during execution, and changes to “OK: (color temperature of subject)” when the adjustment finishes.

The adjustment values are saved automatically in the memory selected in step 1 (A or B).

**Note**

If the camcorder has a zoom lens with an automatic iris, the iris may hunt <sup>1)</sup> during the adjustment. To prevent this, adjust the iris gain knob (indicated as IG, IS, or S) on the lens.

*For details, refer to the lens operation manual.*

1) **Hunting:** Repeated brightening and darkening of the image, resulting from repeated response to automatic iris control.

**If the automatic white balance adjustment cannot be made**

If the white balance adjustment cannot be completed normally, an error message will appear for about three seconds on the viewfinder screen. Possible messages are listed below.

Error message	Meaning
NG: Low Light	The white video level is too low. Either open the lens iris or increase the gain.
NG: Timeout	Adjustment could not be completed within the standard number of attempts.
NG: High Light	The white video level is too high. Either stop down the lens iris or change the ND filter.

If any of the above error messages is displayed, retry the white balance adjustment. If the error message occurs again, an internal check is necessary.

*For information about this internal check, contact your vendor or a Sony service representative.*

**If you have no time to adjust the white balance**

Set the WHITE BAL switch to PRST. This makes it possible to automatically set the white balance to 5600K (factory default value) by pressing the COLOR TEMP. button. The color temperature to which the white balance is set when the COLOR TEMP. button is pressed can be selected from among 3200K, 4300K, 5600K, and 6300K on OPERATION >Assignable SW in the setup menu. You can also assign color temperatures to the ASSIGN. 1/3 switches or ASSIGNABLE 4/5 switches.

**To change the color temperature when the ND filter is switched**

You can assign electrical CC (color correction) filters to ND filters (see page 17). This allows you to change the color temperature automatically when the ND filter is switched.

- 1 **Set MAINTENANCE >White Filter >ND Filter C.Temp in the setup menu (see page 129) to On.**
- 2 **To assign an electrical CC filter to FILTER selector position number 1, select [ND FLT C.Temp<1>]. To assign it to positions 2 to 4, select [ND FLT C.Temp<2-4>].**
- 3 **Turn the MENU knob to select the desired color temperature.**  
As you turn the MENU knob, the color temperature changes as follows: 3200K ↔ 4300K ↔ 5600K ↔ 6300K.
- 4 **Repeat steps 2 and 3 as required.**

**To switch between electrical CC filters with an assignable switch**

You can assign the function that switches between electrical CC filters to an assignable switch. This allows you to switch between color temperatures (3200K/4300K/5600K/6300K) that have been assigned to up to four positions (A to D) with each press of the assignable switch. Regardless of assignments to assignable switches, you can also switch between the color temperatures assigned to each position from a RM-B150/B170/B750 Remote Control Unit.

- 1 **Select MAINTENANCE >White Filter in the setup menu (see page 129).**
- 2 **Select the position to which to assign a CC filter by selecting one of [Electrical CC<A>] to [Electrical CC <D>], and then turn the MENU knob to select the desired color temperature.**  
As you turn the MENU knob, the color temperature changes as follows: 3200K ↔ 4300K ↔ 5600K ↔ 6300K.

**To set no color temperature**

Select “-----” with Electrical CC<C> or <D> selected.

When the assignable switch is pressed, the setting for that position is not displayed. For example, if “-----” is set for one position, then switching between the remaining three positions is carried out.

- 3 Repeat step 2 as required.**
- 4 Assign the electrical CC filter switching function (ELECTRICAL CC) to an assignable switch (see page 141).**

---

**White balance memory**


---

Values stored in memory are held until the white balance is next adjusted even when the camcorder power is turned off.

The camcorder has two white balance memories, A and B. You can automatically save adjustment values for each ND filter in the memory that corresponds to the WHITE BAL switch setting (A or B). The camcorder has four built-in ND filters, allowing you to save a total of eight adjustment values ( $4 \times 2$ ). However, the contents of the memories are not linked to ND filter settings in the following cases.

- When the number of memories allocated to each of A and B is limited to one by setting OPERATION >White Setting >Filter White Memory in the setup menu to Off.
- When the electrical CC filter switching function has been assigned to an assignable switch, or when a remote control unit has been connected. (In these cases, the contents of white balance memory are linked to electrical CC filter positions (A to D).)

Also, when OPERATION >White Setting >White Switch<B> in the setup menu is set to [ATW (Auto Tracing White Balance)], and the WHITE BAL switch is set to B, the ATW function is activated to automatically adjust the white balance of the picture being shot for varying lighting conditions.

## Setting the Electronic Shutter

### Shutter Modes

The shutter modes that can be used with the electronic shutter and the shutter speeds that can be selected are listed below.

---

**Standard mode**


---

Select this mode for shooting fast-moving subjects with little blurring.

You can set the shutter speed in one of two shutter modes: Speed mode, in which the speed is set in seconds, and Angle mode, in which the speed is set in degrees.

**Speed mode**

System frequency	Shutter speed (unit: seconds)
59.94i	$1/60, 1/100, 1/120, 1/125, 1/250, 1/500,$
59.94P	$1/1000, 1/2000$
50i	
50P	
29.97P	$1/40^a, 1/50^a, 1/60, 1/100, 1/120, 1/125,$ $1/250, 1/500, 1/1000, 1/2000$
25P	$1/33^a, 1/50^a, 1/60, 1/100, 1/120, 1/125,$ $1/250, 1/500, 1/1000, 1/2000$
23.98P	$1/32^a, 1/48^a, 1/50^a, 1/60, 1/96, 1/100,$ $1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000$

a) This speed cannot be selected when the camcorder is in Slow & Quick Motion mode and OPERATION >Rec Function >Frame Rate in the setup menu is set to a value that is greater than the system frequency.

**Angle mode**

$180^\circ, 90^\circ, 45^\circ, 22.5^\circ$ , and  $11.25^\circ$

---

**ECS (Extended Clear Scan) mode**


---

Select this mode for obtaining images with no horizontal bands of noise when shooting subjects such as monitor screens.

As shown in the following tables, the range of shutter speeds that can be set varies depending on whether the Slow & Quick Motion (S&Q) function is on or off.

### System lines: 1080

System frequency	Shutter speed (unit: Hz)	
	S&Q: Off	S&Q: On
59.94i	60.00 to 3800	—
50i	50.00 to 3500	—
29.97P	29.99 to 4100	32.01 to 4100
23.98P	23.99 to 3700	32.02 to 3700
25P	25.00 to 3900	32.03 to 3900

### System lines: 720

System frequency	Shutter speed (unit: Hz)	
	S&Q: Off	S&Q: On
59.94P	60.07 to 4100	32.01 to 4100
50P	50.03 to 3900	32.03 to 3900
29.97P	29.99 to 4100	32.01 to 4100
23.98P	23.99 to 3700	32.02 to 3700
25P	25.00 to 3900	32.03 to 3900

## SLS (slow speed shutter) mode

Select this mode for shooting subjects in low level lighting conditions.

### Number of accumulated frames

2, 3, 4, 5, 6, 7, 8, 16, 32, 64

### Notes

- SLS mode cannot be used when the video format is SP 1440/23.98P or when the camcorder is in Slow & Quick Motion mode.
- It is not possible to output the color bar signal, turn the SLS mode on or off, or change the number of accumulated frames when the number of accumulated frames is set to 16, 32 or 64.

## Selecting the Shutter Mode and Shutter Speed

### Notes

- When the automatic iris is used, the iris opens wider as the shutter speed increases, thus reducing the depth of field.
- The selectable shutter speeds vary depending on the current system frequency.

## To switch between Speed mode and Angle mode


- Select **OPEARTION >Shutter Select >Shutter Select** in the setup menu (see page 111).
- Turn the **MENU knob** to select **Second or Degree**, and then press the knob.

## To set the shutter mode and standard-mode shutter speed

Once the shutter speed is selected, it is retained even when the camcorder power is turned off.

- Push the **SHUTTER selector** from **ON** to **SELECT**.  
The current shutter setting indication appears for about three seconds.
- Before the shutter setting indication disappears, push the **SHUTTER selector** down to **SELECT** again and repeat this until the desired mode or speed appears.  
When all modes and speeds are displayed, the display changes in the following order.

Speed Mode (with system frequency 59.94i)



### Note

Depending on the frame rate setting (see page 78), some shutter speeds cannot be selected in Slow & Quick Motion mode. These speeds are replaced by the slowest selectable shutter speed.

**Example:** If you perform Slow & Quick Motion shooting when setting the frame rate to 60 and the video format to HQ1280/29.97P

The shutter speed is indicated as follows.

When Slow & Quick Motion mode is off  
1/40 → 1/50 → 1/60 → 1/100 → ...

When Slow & Quick Motion mode is on  
1/60 → 1/60 → 1/60 → 1/100 → ...

---

## To set the shutter speed in ECS or SLS mode

---

- 1** Set the shutter mode to ECS or SLS (*see the previous item*).
- 2** Turn the MENU knob to select the desired frequency or number of frames.

## Changing the Reference Value for Automatic Iris Adjustment

The reference value for automatic iris adjustment can be changed to aid the shooting of clear pictures of back-lit subjects, or to prevent blown-out highlights. The reference value for the lens iris can be set within the following range with respect to the standard value.

- 0.25 to 1 (increasing by increments of 0.25):  
About 0.25 to 1 stop further open
- -0.25 to -1 (decreasing by increments of 0.25):  
About 0.25 to 1 stop further close

Also you can set the area where light detection occurs.

---

### To change the reference value

---

- 1** Set OPERATION >Auto Iris >Iris Override in the setup menu to On (*see page 109*).
- 2** Set the MENU ON/OFF switch to OFF.
- 3** Turn the MENU knob to change the reference value.

#### Note

Be sure to confirm that the current shutter mode is not ECS.

An indicator of the current reference value is shown at the iris position indication (*see page 33*) on the viewfinder screen.

#### To make the iris more open

Turn the MENU knob counterclockwise as seen from the front of the camcorder.  
Select one of 0.25, 0.5, 0.75, or 1.

#### To stop down the iris

Turn the MENU knob clockwise as seen from the front of the camcorder.  
Select one of -0.25, -0.5, -0.75, or -1.

The changed reference value is retained until the power of the camcorder is turned off. Even if the reference value is changed, it reverts to the standard value every time the power is turned on.



## To set the automatic iris window

### 1 Set OPERATION >Auto Iris >Iris Window Indication in the setup menu to On.

The current automatic iris window appears on the viewfinder screen.

If it is not necessary to display the auto iris window on the screen, set to Off.

### 2 Turn the MENU knob to select Iris Window, and then press the knob.

### 3 Turn the MENU knob until the desired auto iris window appears, and then press the knob.



The shaded parts indicate the area where light detection

If you select “Var”, the following items become effective and you can set the window of the desired size. Set the following items with MAINTENANCE >Auto Iris2.

Item	Setting
Iris Var Width	The width of the window
Iris Var Height	The height of the window
Iris Var H Pos	The position of the window in the horizontal direction
Iris Var V Pos.	The position of the window in the vertical direction.

When you exit the menu, the auto iris window selected in step 3 appears.

Unless you need to keep this window displayed, set OPERATION >Auto Iris >Iris Window Indication in the setup menu to Off.

## To counter problems with very bright highlights

If the subject is too bright, the iris may close too much, leaving the overall image dark, or the highlights may be blown out. In such cases, setting the highlight clip function on reduces the luminance range, avoiding problems from the automatic iris correction.

Set OPERATION >Auto Iris >Clip High Light in the setup menu to On.

## Zooming

The lens supplied with the PMW-320K allows you to shoot with manual and servo zooming.

## Switching between Zoom Modes

Set the ZOOM switch to SERVO (servo zoom) or MANU (manual zoom).

## Using Manual Zoom

With the ZOOM switch set to MANU, turn the zoom ring.

## Using Servo Zoom

With the ZOOM switch set to SERVO, operate the power zoom lever. The current lens zoom position appears in the viewfinder, over the range 0 (wide-angle) to 99 (telephoto) (*see page 30*). Push to the W (wide) side when you want wide-angle, and push to the T (telephoto) side when you want telephoto. The zoom speed increases when you push the lever deeply, and decreases when you push less deeply.

## Adjusting the Focus

The lens supplied with the PMW-320K allows you to adjust the focus in the following three ways.

### Full MF (full manual focus) mode

This mode supports focusing with the focus ring only.

Without changing your grip, you can focus all the way from  $\infty$  to the shortest shooting distance.

### MF (manual focus) mode

In this mode, auto focus is enabled temporarily when you press the PUSH AF button.

You can also use the MF assist function.

### AF (auto focus) mode

In this mode, auto focus is always enabled.

The focus ring and the PUSH AF button are also enabled.

#### Note

The lens is designed with an extra margin at the infinity position ( $\infty$ ), to compensate for focus drifting due to variations in temperature. When shooting a subject at infinity in MF or Full MF mode, check the picture in the viewfinder as you focus.

## Adjusting in Full MF Mode

When you slide the focus ring back (toward the camcorder), the focus mode becomes Full MF mode, in which all focus adjustments are manual.


#### Note

When you slide the focus ring back, the focus instantly moves to the mark position.

Focus by turning the focus ring while viewing the viewfinder.

The distance indications on the ring are valid in Full MF mode. The distances where the picture is in focus correspond to absolute positions of the focus ring.

White line indicating the current distance

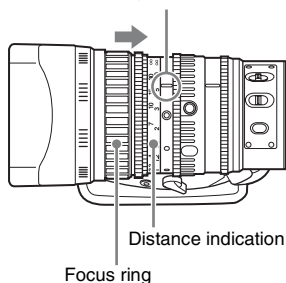

## Peaking

You can turn the PEAKING knob on the viewfinder to use the peaking function. Edges are emphasized in the monitor picture, which facilitates manual focusing.

The recorded video signals are not affected.

## Adjusting in MF Mode

When you slide the focus ring forward (toward the lens hood), and set the FOCUS switch to M (manual), the focus mode becomes MF mode, in which focus adjustments are manual but auto focus is available only when necessary.

## Using the focus ring

Focus by turning the focus ring while viewing the viewfinder.

The distance indications on the ring are invalid in MF mode.

## One-push auto focus

Press the PUSH AF button. Auto focus is enabled temporarily (one-push auto focus).

One-push auto focus ends when the subject is brought into focus.

## MF assist function

When the MF assist function is on (*see page 140*), auto focus starts when you stop adjusting with the focus ring, enabling fine adjustments with the subject at the center of the screen.

Auto focusing by the MF assist function ends when the fine adjustments end.

## Adjusting in AF Mode

When you slide the focus ring forward, and set the FOCUS switch to A (auto), the focus mode becomes AF mode, in which auto focus is always active.

The distance indications on the ring are invalid in AF mode.

### Focusing in AF mode

In AF mode, the camcorder monitors the video for changes, and starts auto focus whenever it detects a change. Auto focusing ends when the subject is in focus, but the auto focus function remains on standby.

In AF mode, you can also start auto focusing by pressing the PUSH AF button or by turning the focus ring.

## Using Macro Mode

When the focus mode is MF or AF, you can set the MACRO switch to the ON side to enable macro mode. Macro mode allows you to focus over the range that includes the macro area. Macro mode is disabled in Full MF mode.

## Adjusting the Audio Level


When you set the AUDIO SELECT switch to AUTO, the input levels of analog audio signals recorded on each channel are adjusted automatically. You can also make manual adjustments.

### Note

Even if you set the AUDIO SELECT switch to AUTO, the input levels of digital audio signals are not adjusted automatically.

### Target audio level for manual audio level adjustment

Make adjustment using  $-20$  dB as the target level. If the audio level meter shows a maximum level of 0 dB, then it indicates that the input audio level is excessive.

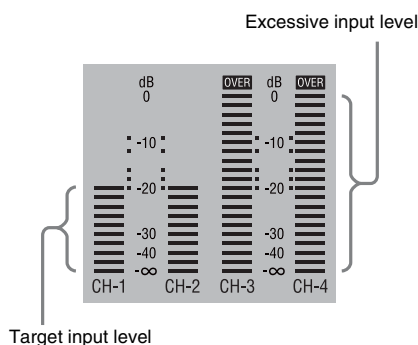

## Manually Adjusting the Audio Levels of the Audio Inputs from the AUDIO IN CH-1/CH-2 Connectors

- 1 To adjust the signal input to the AUDIO IN CH1 or CH2 connector, set the AUDIO IN CH-1 or CH-2 switch to REAR.

To adjust both input signals, set both switches to REAR.

- 2 Set the AUDIO SELECT switch(es) corresponding to the channel(s) selected in step 1 to MANUAL.
- 3 With the LEVEL control(s) for the channel(s) selected in step 1, adjust so that the audio level meter shows up to -20 dB for a normal input volume.

### Correspondence between recording level adjustments and audio level controls

On MAINTENANCE >Audio in the setup menu, you can select which audio level control controls the audio recording level of the input to each of the AUDIO IN CH-1/CH-2 connectors. The correspondences between the settings of the menu items and the controls are as follows.

#### Rear1/WRR Level: Channel 1 recording level

Setting	Knob
Side1	LEVEL (CH1) knob
Front	MIC LEVEL control
Front+Side1	LEVEL (CH1) knob and MIC LEVEL control (linked operation)

#### Rear2/WRR Level: Channel 2 recording level

Setting	Knob
Side2	LEVEL (CH2) knob
Front	MIC LEVEL control
Front+Side2	LEVEL (CH2) knob and MIC LEVEL control (linked operation)

#### Note

When you have operation of the LEVEL (CH1/CH2) knobs and MIC LEVEL control linked together, if the MIC LEVEL control is set to 0, the audio signals on channels 1 and 2 cannot be recorded. Check the position of the MIC LEVEL control before adjusting the LEVEL (CH1/CH2) knobs.

## Manually Adjusting the Audio Level of the MIC IN Connector

- 1 Set either or both of the AUDIO IN switch(es) to FRONT.

- 2 Set the AUDIO SELECT switch(es) for the desired channel(s) selected in step 1 to MANUAL.
- 3 Turn the MIC LEVEL control, and adjust so that the audio level meter shows up to -20 dB for a normal input volume.

### Correspondence between recording level adjustments and audio level controls

On MAINTENANCE >Audio in the setup menu, you can select which audio level control controls the audio recording level of the front microphone input. The correspondences between the settings of the menu items and the controls are as follows.

#### MIC CH1 Level: Channel 1 recording level

Setting	Knob
Side1	LEVEL (CH1) knob
Front	MIC LEVEL control
Front+Side1	LEVEL (CH1) knob and MIC LEVEL control (linked operation)

#### MIC CH2 Level: Channel 2 recording level

Setting	Knob
Side2	LEVEL (CH2) knob
Front	MIC LEVEL control
Front+Side2	LEVEL (CH2) knob and MIC LEVEL control (linked operation)

#### Note

When you have operation of the MIC LEVEL control and LEVEL (CH1/CH2) knobs linked together, if the LEVEL (CH1/CH2) controls are set to 0, the audio signals on channels 1 and 2 cannot be recorded. Check the position of the LEVEL (CH1/CH2) knobs before adjusting the MIC LEVEL control.

## Recording Audio on Channels 3 and 4

### Selecting the recorded audio

You can select the audio recorded on audio channels 3 and 4 with the AUDIO IN CH3/CH4 switches.

CH3 switch	Channel 3 recording target
FRONT	Front microphone audio
REAR	Audio signal input to AUDIO IN CH-1 connector
WIRELESS	Wireless microphone audio

CH4 switch	Channel 4 recording target
FRONT	Front microphone audio
REAR	Audio signal input to AUDIO IN CH-2 connector
WIRELESS	Wireless microphone audio

You can have the selection made automatically, as follows.

### To automatically select the same audio as on channels 1 and 2

Set MAINTENANCE >Audio >Audio CH3/4 Mode of the setup menu to [Ch 1/2].

## Adjusting the audio recording levels

### To adjust automatically

Set the AUDIO SELECT CH 3-4 switch to AUTO.

### To adjust manually

- 1 Set the AUDIO SELECT CH 3-4 switch to MANUAL.
- 2 Select the knobs that adjust the audio levels with the Audio CH3 Level and Audio CH4 Level items under MAINTENANCE >Audio in the setup menu.

**Audio CH3 Level:** Channel 3 recording level

Setting	Knob
Side3	LEVEL (CH3) knob
Front	MIC LEVEL control
Front+Side3	LEVEL (CH3) knob and MIC LEVEL control (linked operation)

**Audio CH4 Level:** Channel 4 recording level

Setting	Knob
Side4	LEVEL (CH4) knob
Front	MIC LEVEL control
Front+Side4	LEVEL (CH4) knob and MIC LEVEL control (linked operation)

You can now adjust the levels of audio channels 3 and 4 with the knobs selected here.

# Setting the Time Data

## Note

When picture cache mode is enabled, it is not possible to set time data, even if you set the F-RUN/SET/R-RUN switch to SET. If you want to set time data, first exit picture cache mode.

## Setting the Timecode

The timecode setting range is from 00 : 00 : 00 : 00 to 23 : 59 : 59 : 29 (hours : minutes : seconds : frames).

- 1 Set the DISPLAY switch to TC.**
- 2 Set the PRESET/REGEN/CLOCK switch to PRESET.**
- 3 Set the F-RUN/SET/R-RUN switch to SET.**  
The first (leftmost) digit of timecode flashes.
- 4 Use the up and down arrow buttons to change values, and use the left and right arrow buttons to move the flashing digit. Repeat until all digits are set.**  
  
**To reset the timecode value to 00:00:00:00**  
Press the RESET/RETURN button.
- 5 Set the F-RUN/SET/R-RUN switch to F-RUN or R-RUN.**  
**F-RUN:** Free run. The timecode generator keeps running.  
**R-RUN:** Recording run. The timecode generator runs only while recording.

### To set the drop frame mode/non-drop frame mode

You can select the drop frame (DF) mode or non-drop frame (NDF) mode on MAINTENANCE >Timecode in the setup menu.

### To make the timecode consecutive

When the F-RUN/SET/R-RUN switch is set to R-RUN, recording a number of scenes on the media normally produces consecutive timecode. However, once you remove the media and record on another media, the timecode will no longer be consecutive when you use the original media again for recording. In this case, to make the timecode consecutive, set the PRESET/REGEN/CLOCK switch to REGEN.

### Saving the real Time in the Timecode

Setting the PRESET/REGEN/CLOCK switch to CLOCK saves the real time in the timecode. When it is necessary to set the actual time, use MAINTENANCE >Clock Set >Date/Time in the setup menu.

*For details, see "Setting the Date/Time of the Internal Clock" (page 42).*

## Setting the User Bits

By setting the user bits (up to 8 hexadecimal digits), you can record user information such as the date, time, or scene number on the timecode track.

- 1 Set the DISPLAY switch to U-BIT.**
- 2 Set the F-RUN/SET/R-RUN switch to SET.**  
The first (leftmost) digit flashes.
- 3 Use the up and down arrow buttons to change values, and use the left and right arrow buttons to move the flashing digit. Repeat until all digits are set.**  
  
**To reset the user bit data to 00 00 00 00**  
Press the RESET/RETURN button.
- 4 Set the F-RUN/SET/R-RUN switch to F-RUN or R-RUN, corresponding to the desired operating mode for the timecode generator.**

### To store the user bit setting in memory

The user bit setting (apart from the real time) is automatically retained in memory even when the power is turned off.


## Synchronizing the Timecode

You can synchronize the internal timecode generator of this camcorder with an external generator for the regeneration of an external timecode. You can also synchronize the timecode generators of other camcorders/VTRs with the internal generator of this camcorder.


### Connections for timecode synchronization

Connect both the reference video signal and the external timecode as illustrated below.

#### Example 1: Synchronizing with an external timecode

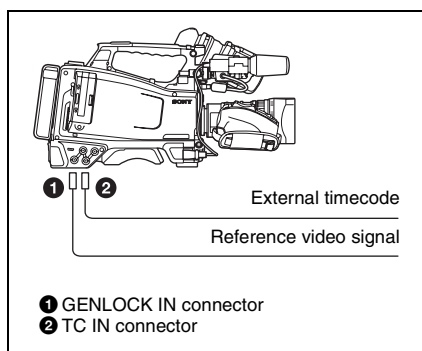

#### Example 2: Interconnecting a number of camcorders (including one reference camcorder)

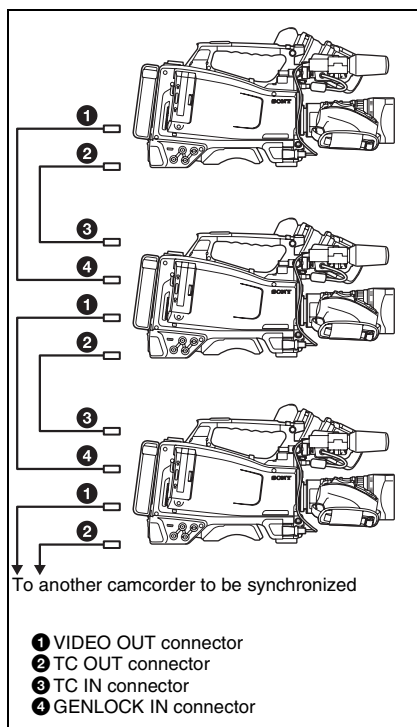

### To lock the timecode to an external source

- 1 Turn on the **POWER** switch.
- 2 Set the **PRESET/REGEN/CLOCK** switch to **PRESET**.
- 3 Set the **F-RUN/SET/R-RUN** switch to **F-RUN**.
- 4 Set the **DISPLAY** switch to **TC**.
- 5 Supply a timecode signal and a reference video signal complying with the SMPTE standard and in proper phase relationship, to the **TC IN** connector and to the **GENLOCK IN** connector, respectively.

This operation synchronizes the internal timecode generator with the external timecode. After about 10 seconds, you can disconnect the external timecode without losing the synchronization.

#### Notes

- When you finish the above procedure, the internal timecode is immediately synchronized with the external timecode and the counter display will show the value of the external timecode. However, wait for a few seconds until the sync generator stabilizes before recording.
- If the frequency of the reference video signal is not the same as the system frequency of the camcorder, the camcorder cannot be correctly genlocked. In such a case, the internal timecode is not correctly synchronized with the external timecode.

#### User bit settings during timecode synchronization

When the timecode is synchronized, only the time data is synchronized with the external timecode value.

#### To release the timecode synchronization

First disconnect the external timecode, then set the F-RUN/SET/R-RUN switch to R-RUN.

#### To change the power supply from the battery pack to an external power supply during timecode synchronization

To maintain a continuous power supply, connect the external power supply to the DC IN connector before removing the battery pack. You may lose timecode synchronization if you remove the battery pack first.

#### Camcorder synchronization during timecode synchronization

During timecode synchronization, the camcorder is genlocked to the reference video signal input from the GENLOCK IN connector.

## Checking Camcorder Settings and Status Information (Status Screens)

The status screens allow you to check camcorder settings and various types of status information. There are five status screens, listed below.

Status screen	Information displayed
CAMERA status	Settings and status information related to shooting
AUDIO status	Settings and status information related to audio input and output
VIDEO status	Settings and status information related to recording and playback
ASSIGN SWITCH status	Names of functions assigned to assignable switches
BATTERY/MEDIA status	Status of the battery mounted on the camcorder and the media status

#### To display status screens

With no menu is displayed, push the STATUS ON/SEL/OFF switch up to the ON/SEL side. Each push selects the next status screen, in the order given in the table above.

#### CAMERA status screen

This screen displays settings and status information related to shooting.

CAMERA				1/5
White Bal	B: 1200K	Gain	L: 0dB	
	A: 4700K		M: 9dB	
	PRST: 3200K		H: 18dB	
Zoom Speed	: 70	Zebra 1	: On	70%
Skin Detail	: OFF	2	: Off	

**White Bal:** White balance status

**Gain:** GAIN switch status

**Zoom Speed:** Zoom speed set with the lens  
ZOOM button


**Zebra:** Zebra status

**Skin Detail:** Skin details status



## AUDIO status screen

This screen displays settings and status information related to audio input and output.

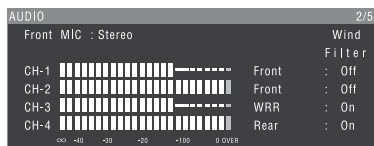

**CH-1/CH-2/CH-3/CH-4:** Audio level meters and input sources

**Wind Filter:** Wind filter settings

## VIDEO status screen

This screen displays settings and status information related to recording and playback.



**Video Format:** Video format

**Rec Mode:** Recording bit rate (HD mode only)

**Output&i.LINK:** Output&i.LINK setting and i.LINK usage status


**SDI Output:** HD/SD SDI OUT connector output setting

**HDMI Output:** HDMI connector output setting

**Down Converter:** SD output down converter setting (HD mode only)


## ASSIGN SWITCH status screen

This screen displays the names of the functions assigned to assignable switches

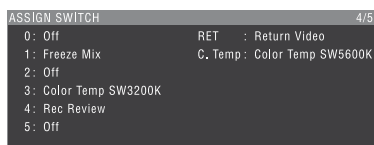

## BATTERY/MEDIA status screen

This screen displays the status of the battery mounted on the camcorder and the media status.

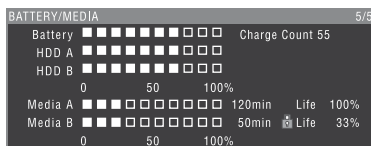

**Battery:** The remaining battery capacity

**Charge Count:** The number of times the battery has been charged

**HDD A/HDD B:** Remaining battery capacity of PHU-220R

**Media A/Media B:**

- Remaining capacity of media
- Recordable time
- Approximate writable lifetime (Life)  
"Life 100%" is shown for unused media.

## Handling SxS Memory Cards

This camcorder records video and audio on SxS memory cards (not supplied) loaded into one or both of its memory card slots.

You can use the camcorder with the following devices to make recording.

- PHU-220R Professional Harddisk Unit
- MEAD-MS01/SD01 Media Adaptor (when the recording mode is FAT), or QDA-EX1 XQD ExpressCard Adapter (when the recording mode is FAT/UDF)

For details, refer to the Supplement supplied in the CD-ROM (labeled “Manuals for Solid-State Memory Camcorder”).

### About SxS Memory Cards

#### SxS memory cards that can be used with this camcorder

Use the following Sony SxS memory cards (SxS PRO or SxS-1) with this camcorder.

##### SxS PRO

- SBP-32 (32 GB)
- SBP-64A (64 GB)

##### SxS-1

- SBS-32G1A (32 GB)
- SBS-64G1A (64 GB)

Proper operation cannot be guaranteed when memory cards other than SxS PRO and SxS-1 are used.


The memory cards listed above comply with the ExpressCard memory card standard.

- SxS, SxS PRO and SxS-1 are trademarks of Sony Corporation.
- The ExpressCard label and logo are property of the Personal Computer Memory Card


International Association (PCMCIA) and are licensed to Sony Corporation. Other trademarks and trade names are the property of their respective owners.

#### Notes on the use of SxS memory cards

- Recorded data may be lost or corrupted in the following cases.
  - When the camcorder is subjected to shock or vibrations during reading, writing, or formatting of an SxS memory card, and when the camcorder is powered off or an SxS memory card is removed during reading, writing, or formatting
  - When the camcorder is used in an environment subject to static electricity or electric noise
- Do not use or store SxS memory cards in locations that are:
  - Outside the specified environmental ranges
  - Very hot, such in as vehicles parked in the sun during summer, or exposed to direct sunlight, or near heaters
  - Subject to high humidity and corrosion
- When inserting a memory card, insert with the label side facing the correct direction.
- Carry and store SxS memory cards in their cases, and lock the cases securely.

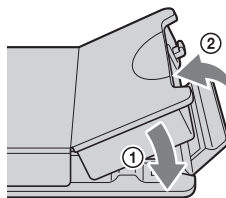


- Guard against accidents and inadvertent data loss by backing up the data stored on SxS memory cards. Sony cannot be responsible for any consequences of damage to or loss of data stored on SxS memory cards.
- Do not attach anything other than the supplied labels in the designated label space. When attaching a label, make sure it does not protrude beyond the label space.

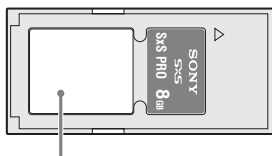


Label space

- Use this camcorder to format SxS memory cards that will be used with this camcorder. When memory cards are formatted on another unit, the format is regarded as an invalid format, making it necessary to format the memory cards again. However, note that the format and delete functions of this camcorder do not completely remove data from memory cards. Before discarding or disposing of a memory card, erase it using commercial data erasure software, or physically destroy it. Sony cannot be responsible for any failure to erase data completely.
- Clip operations may not be possible when the remaining capacity of the media is low. In this case, use a computer to delete unneeded files and try again.
- Open the memory card case completely before storing a card in the case or removing a card from the case.



## Preventing accidental erasure

You can prevent accidental recording, editing, and deletion of data on an SxS memory card by setting the write protect switch to the WP side.

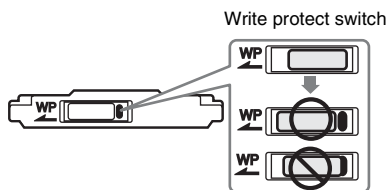


### Note

Do not touch the write protect switch while an SxS memory card is loaded in a card slot. Eject the card before setting the write protect switch.

## Loading and Ejecting SxS Memory Cards

### To load SxS memory cards

- 1 Slide the cover to the left to open.
- 2 Insert an SxS memory card into a card slot.

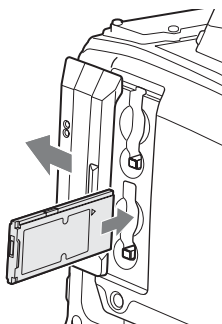

Insert with the label side facing right.

The ACCESS lamp lights in orange, and then lights in green to indicate that the memory card is usable.

- 3 Close the cover.


### ACCESS lamp status indications

Card slots A and B each have an ACCESS lamp to indicate the slot status.

Lamp	Slot status
Lights in orange	Accessing the SxS memory card (lights during data reading and writing)
Lights in green	Standby (the loaded SxS memory card is ready for recording or playback)
Not lit	<ul style="list-style-type: none"> <li>• No SxS memory card is loaded.</li> <li>• An unusable card is loaded.</li> <li>• An SxS memory card is loaded, but the other slot is selected.</li> </ul>


## To eject SxS memory cards

- 1 **Open the cover, and then press the EJECT button to release the lock and pull the button out.**

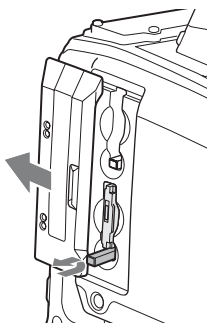

Press the button once to release the lock.

- 2 **Press the EJECT button again to eject the card.**

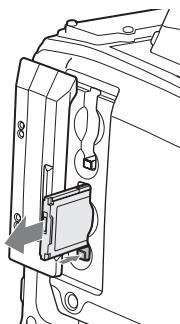

### Note

Data integrity cannot be guaranteed if you power the camcorder off or remove a memory card while the card is being accessed. Doing so may corrupt all data recorded on the card. Always make sure that the ACCESS lamp is lit green or not lit before you power the camcorder off or remove a memory card.

## Selecting the SxS Memory Card to Use

When SxS memory cards are loaded in both slot A and slot B, you can press the SLOT SELECT button to select the SxS memory card to use.

The camcorder switches automatically to the other card if the selected card becomes full during recording.

### Note

The SLOT SELECT button is disabled during playback. Even when pressed, it does not change the selected slot. Button operations are enabled when a thumbnail screen (see page 83) is displayed.

## Formatting (Initializing) SxS Memory Cards

When you load an unformatted SxS memory card, or load an SxS memory card that has been formatted to other specifications, a message “Cannot Use Media(A)/Unsupported File System” appears in the viewfinder. In this case, format the memory card in the following way.

### Note

SxS memory cards must be formatted on an XDCAM EX device. Cards in other formats cannot be used.

## To format (initialize) a memory card

- 1 **Select OPERATION > Format Media in the setup menu (see page 100).**
- 2 **Select [Media(A)] (slot A) or [Media(B)] (slot B).**
- 3 **Turn the MENU knob to select [Execute], and then press the knob.**  
The confirmation message for formatting is displayed on the viewfinder screen.
- 4 **Turn the MENU knob to select “Execute”, and press the knob.**

Execution of the format starts.

During execution of the format, a progress indication appears (%), and the ACCESS lamp lights in orange.

### Recording and playback during format execution

Even during execution of a format, recording and playback are possible using an SxS memory card loaded into the other card slot.

### If the format operation fails

A format operation may fail because the SxS memory card is write protected, or because it is not the type of card specified for use with this camcorder.


In this case, an error message appears. Following the instructions in the error message and exchange the card for an SxS memory card that can be used with this camcorder.

### Notes

- All data is erased when you format a memory card, including setup files and all of the recorded video data.
- Use the format function of this camcorder to format SxS memory cards for use on this camcorder. The formats of cards formatted on other devices are not recognized as valid formats, making it necessary to format them again on this camcorder.

## Checking the Remaining Recording Time


You can check the remaining capacity of the SxS memory cards loaded in the two slots by checking the recording media remaining capacity display in the viewfinder.

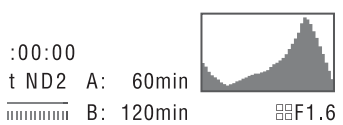

The camcorder calculates the remaining recording time for the media in each slot on the basis of the current video format (recording bit rate), and displays it in units of minutes.

You can also check the remaining time in the BATTERY/MEDIA status screen (*see page 65*).

### Note

The  mark appears when a memory card is write protected.

## When to exchange SxS memory cards

- The warning message “Media Near Full” appears, the WARNING indicator and the REC indication on the viewfinder screen flash, and the buzzer sounds when the total remaining recording time of the two memory cards falls to five minutes during recording. Exchange one of the cards for media with available recording capacity.
- If you continue recording, the message “Media Full” appears and recording stops when the total remaining recording time falls to 0.

### Note

About up to 600 clips can be recorded on one SxS memory card.

The display of remaining recording time changes to “0” and the message “Media Full” appears when the clip limit is reached.

## Restoring SxS Memory Cards

If for any reason an error should occur in a memory card, the card must be restored before use.

When you load an SxS memory card that needs to be restored, a message appears in the viewfinder to ask whether you want to restore it.

### To restore a card

Turn the MENU knob to select “Execute”, and then press the knob.

The restoration starts.

During the restoration, a execution message appears, the progress is displayed (%), and the ACCESS lamp lights in orange.

When the restoration finishes, a completion message is displayed for three seconds.

### If restoration fails

- Write protected SxS memory cards and cards on which memory errors have occurred cannot be restored. A warning message appears for such cards. Follow the instructions in the message and unprotect the card or replace it with another card.
- SxS memory cards on which memory errors have occurred may become usable if they are reformatted.
- In some cases, some clips can be restored while others cannot. The restored clips can be played normally.
- If the message “Could not Restore Some Clips” keeps appearing after repeated attempts at restoration, it may be possible to restore the SxS memory card with the following procedure.

- ① Use the camcorder’s copy function (*see page 90*) or the supplied application software (*see page 151*) to copy the required clips to another SxS memory card.
- ② Format the unusable SxS memory card on the camcorder.

- ③ Copy the required clips back to the newly formatted SxS memory card.

### Recording and playback during restoration

Even while restoration is in progress, you can record and play an SxS memory card in the other card slot.

#### Note

For restoration of media recorded with this camcorder, be sure to use this camcorder. Media recorded with a device other than this camcorder or with another camcorder of different version (even of the same model) may not be restored using this camcorder.

## Basic Operations

This section explains the basic shooting and recording procedures.

Before starting to shoot, inspect the camera system to verify that it is operating properly.

- 1 Attach a fully charged battery pack** (*see page 34*).
- 2 Load one or two SxS memory cards** (*see page 67*).  
If you load two cards, the camcorder switches automatically to the second card when the first card becomes full.
- 3 Set the camcorder's POWER switch** (*see page 14*) to **ON**.
- 4 Make the following settings.**  
**Marker display:** On (*see page 105*)  
**Iris:** Auto (*see page 56*)  
**Zoom:** Auto (*see page 57*)  
**Camera output:** Select the picture currently being shot (camera picture), and turn the DCC function on (*see page 18*).  
**Timecode advance mode:** F-RUN (Free Run) or R-RUN (Rec Run) (*see page 62*)  
**Audio input channel selection:** Auto (*see page 25*)
- 5 Push the AUTO W/B BAL switch to the BLACK side to adjust the black balance** (*see page 51*).
- 6 Select a filter according to the lighting conditions, and adjust the white balance** (*see page 52*).
- 7 Point the camcorder at the subject, and adjust the focus** (*see page 58*) and zoom.
- 8 If you are using the electronic shutter, select an appropriate shutter mode and speed** (*see page 54*).
- 9 Do one of the following to start recording.**

- Press the REC START button (*see page 17*).
- Press the VTR button on the lens (*see page 28*).
- Turn on the assignable switch to which the Rec function has been assigned (*see page 139*).

During recording, the TALLY indicators, the tally indicator on the front panel of the viewfinder, and the REC indication on the viewfinder screen light. Adjust the zoom and focus as required.

#### Notes

- Never remove the battery pack while the camcorder is recording (while the ACCESS lamp on the right-side panel is lit in blue and the ACCESS lamp in the card slot section is lit in orange). Doing so risks the loss of several seconds of data before the recording was interrupted, because internal processing will not end normally.
- The playback control buttons (EJECT, F REV, F FWD, NEXT, PREV, PLAY/PAUSE, STOP) do not function during recording.

## 10 To stop recording, perform one of the operations listed in step 9.

The TALLY indicators, the tally indicator on the front panel of the viewfinder, and the REC indication on the viewfinder screen go out, and camcorder enters recording standby (STBY) mode.

A clip is created from the video and audio data and the metadata recorded between steps 9 and 10.

### To check the recording (recording review)


With the camcorder in recording standby (STBY) mode, turn on the assignable switch to which the Rec Review function or the Freeze Mix function has been assigned (*see page 138*).

The camcorder plays the entire last clip, or the last few seconds of that clip (3 seconds or 10 seconds), and then returns to standby mode.

You can use MAINTENANCE >Camera Config >Rec Review in the setup menu (*see page 127*) to change the playback time. When the Rec Review function is assigned to the RET button on the lens, you can also conduct a review by using the RET button.

## 11 Repeat steps 9 and 10 to continue recording.

With each repetition, another clip is created on the memory card.

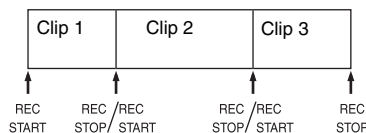

#### Notes

- You cannot resume recording for about one second after stopping recording.
- The maximum number of clips that can be recorded on one memory card is 600. Even if the memory card has enough free capacity to record more clips, when 600 clips have been recorded, no further recording is possible.

### Clip file sizes

The XDCAM EX-series products limit the maximum file size of an HD clip to 4 GB and that of an SD clip to 2 GB.

If you continue recording for an extended period, recorded materials may be segmented into multiple files, depending on the file size (the maximum number of partitions is 99).

The camcorder regards continuous recording as one clip even if it has been segmented into multiple files.

### Clip names

Eight-character clips names (consisting of a four-character prefix and a four-digit number) are generated automatically for clips recorded by this camcorder.

#### Example: ABCD0001

You can also use OPERATION >Clip >Title Prefix (*see page 113*) in the setup menu to set the clip name prefix to a user-specified string of characters (four to 46 characters in length). (A user-specified prefix cannot be changed after recording.)

The four-digit number at the end of clip names is generated automatically, counting up in order as clips are recorded.

## Playing Recorded Clips

When the camcorder is in standby (STBY) mode, you can play all or part of the most recently recorded clip (*see page 71*).

- 1 Insert the SxS memory card to play** (*see page 67*).
- 2 Press the PREV button** (*see page 20*) **or the F REV button** (*see page 20*) **to cue up the clip to play.**
- 3 Press the PLAY/PAUSE button.**  
The PLAY/PAUSE indicator lights, and the playback picture appears in the viewfinder.

#### **To pause the playback**

Press the PLAY/PAUSE button.

The PLAY/PAUSE indicator flashes during pause.

Press the button again to return to playback mode.

#### **To play at high speed**

Press the F FWD button (*see page 20*) or the F REV button (*see page 20*).

To return to normal playback, press the PLAY/PAUSE button.

#### **To switch between memory cards**

When two memory cards are loaded, press the SLOT SELECT button (*see page 24*) to select the active slot.

It is not possible to switch between memory cards during playback.

#### **To end playback**

**Press the STOP button:** Playback stops, and the camcorder enters E-E mode.

**Press the THUMBNAIL button:** Playback stops, and a thumbnail screen (*see page 83*) appears in the viewfinder.

Playback also stops and the timecode screen appears in the viewfinder when you start recording during playback, and when you eject an SxS memory card.

## **Deleting Recorded Clips**

You can use the assignable switches to delete the last recorded clips (Last Clip DEL function).

*You can also use the THUMBNAIL menu to delete all recorded clips (All Clips DEL function) or to delete selected clips. For details, see "Deleting Clips" (page 91).*

- 1 Turn on the assignable switch to which the Last Clip DEL function has been assigned** (*see page 139*).  
A confirmation message appears.



# Advanced Operations

## Recording Shot Marks

On this camcorder, two types of shot marks are available in HD mode. You can record them at user-specified positions to make it easier for editors to cue up those positions.

You can record up to 127 shot marks per clip.

### Note

Shot marks cannot be recorded in SD mode.

*You can also use the THUMBNAIL menu to add and delete shot marks in clips. For details, see “Adding and Deleting Shot Marks (HD Mode Only)” (page 93).*

## To record shot marks

Do one of the following.

- Turn on an assignable switch to which Shot Mark 1 or Shot Mark 2 has been assigned (see page 138).
- If Lens RET has been assigned to the RET button on the lens, operate as follows.

**To record shot mark 1:** Press the RET button once.

**To record shot mark 2:** Press the RET button twice in quick succession.

When a shot mark is recorded, a “Shot Mark 1” or “Shot Mark 2” indication appears in the viewfinder for about three seconds near the timecode indication.

## Setting OK Marks

To make it easier for editors to select good clips, you can set OK marks in clips recorded in HD mode.

### Notes

- OK marks cannot be set in SD mode.
- OK marks cannot be set or deleted during recording or playback.

## To add/delete OK marks

You can also use the THUMBNAIL menu to add and delete OK marks in previously recorded clips.

*For details, see “Adding and Deleting OK Marks (HD Mode Only)” (page 90).*

## Starting to Record from Pre-stored Video (Picture Cache Function)

The camcorder is equipped with enough internal memory to pre-store up to 15 seconds of video and audio data in a picture cache. This allows you to begin recording a specified number of seconds in advance of the time when you press a recording start button.

## Selecting picture cache mode and setting the picture cache time

Before recording in picture cache mode, you must select picture cache mode and set the picture cache time (the number of seconds of video and audio data stored to memory) in the OPERATION menu.

The picture cache time determines how far in advance you can start recording, counting back in seconds from the operation that starts recording. Note that it may not be possible to start this far in advance in the special cases explained in the following notes.

### Notes

- Storage of picture data to memory begins when you select picture cache mode. Therefore, if you start recording immediately after selecting picture cache mode, the picture data from before the selection is not recorded.
- No data is recorded to picture cache memory during playback or recording review and display of thumbnails. It is not possible to record picture data from the time you were conducting playback or a recording review.

## To select picture cache mode and set the picture cache time

### Notes

- Picture cache recording is not possible in Frame Rec, Interval Rec, and Slow & Quick Motion mode. The camcorder exits Frame Rec, Interval Rec, or Slow & Quick Motion mode whenever you select picture cache mode. The camcorder exits picture cache mode

automatically whenever you select Frame Rec, Interval Rec, or Slow & Quick Motion mode.

- The data stored in picture cache memory is cleared when you change the system settings, for example by selecting a different video format. Picture data from before the change is not recorded even if you start recording immediately after the change. The camcorder exits picture cache mode automatically.
- It is not possible to set the picture cache time during recording.

## 1 In the setup menu, select OPERATION >Rec Function >Picture Cache Rec.

For menu operations, see “Basic Setup Menu Operations” (page 97).

## 2 Turn the MENU knob to select [On], and then press the knob.

## 3 Select [P. Cache Rec Time], turn the MENU knob to select the desired picture cache time, and then press the knob.

You can select from 0-2sec, 2-4sec, 4-6sec, 6-8sec, 8-10sec, 10-12sec, 12-14sec, and 13-15sec.

Once made, picture cache mode settings remain in effect until changed.

Instead of carrying out steps 1 and 2, you can also select picture cache mode by using an assignable switch to which the Picture Cache function has been assigned (*see page 138*).

### Camcorder data handling while recording in picture cache mode

Recording procedures in picture cache mode are basically the same as normal recording procedures. However, note the following differences with respect to how the camcorder handles video, time, and output data.

- If you start recording while the media is being accessed, the start point of the video that is actually recorded may be later than the currently specified picture cache time. Because the delay increases as the number of recorded clips increases, you should avoid rapid start-and-stop recording operations in picture cache mode.
- Regardless of the setting of the F-RUN/SET/R-RUN switch, the advance mode of the internal timecode generator is always F-RUN.

- In picture cache mode, you cannot set time data by setting the F-RUN/SET/R-RUN switch to SET.

To set time data, exit picture cache mode.

- If the remaining free capacity of the media in the currently selected slot is less than the picture cache time, and the media in the other slot has enough remaining capacity, then data is recorded to the media in the other slot.

However, no data is recorded when there is no media in the other slot, and when the media in the other slot does not have enough remaining capacity. (A message appears in the viewfinder to inform you that there is not enough remaining capacity.)


- Shot marks are not recorded if they are set before the recording start operation.
- When you select a video format that supports i.LINK HDV output and play a clip that was recorded in picture cache mode, two or more frames with the same picture and timecode may follow on each other.
- i.LINK output is possible during picture cache recording. However, the picture cache time is limited.

### If power is lost during recording

- If you set the camcorder's POWER switch to OFF, the camcorder is powered off automatically after a few seconds, during which the media is accessed to record the video and audio data stored in the camcorder's memory up to that point.
- If power is lost because the battery was removed, the DC cable was disconnected, or the power was turned off on the AC adaptor side, then the video and audio data stored in memory is lost. The data stored in memory is not recorded. Be careful to avoid this when exchanging the battery.

## Recording Time-lapse Video (Interval Rec Function)

The camcorder's Interval Rec function allows you to capture time-lapse video to the camcorder's internal memory. This function is an effective way to shoot slow-moving subjects. When you start recording, the camcorder automatically records a specified number of frames at a specified interval time.

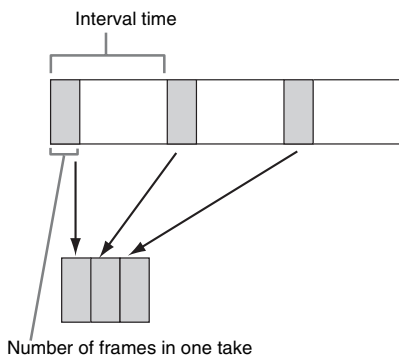

A pre-lighting function is available when Interval Rec is enabled. This function automatically turns on a video light before recording starts, which allows you to record pictures under stable light and color temperature conditions.

## Interval Rec settings and shooting

### Notes

- The Interval Rec function cannot be used at the same time as the picture cache, Frame Rec, or Slow & Quick Motion function. When you select Interval Rec mode, the picture cache, Frame Rec, and Slow & Quick Motion functions are disabled. When you select picture cache, Frame Rec, or Slow & Quick Motion mode, the Interval Rec function is disabled.
- The data stored in picture cache memory is cleared when you change the system settings, for example by selecting a different video format. Picture data from before the change is not recorded even if you start recording immediately after the change. The camcorder exits picture cache mode automatically.
- Interval Rec settings cannot be changed during recording.
- Interval Rec is disabled when the following formats are selected.
  - SP 1440/59.94i or SP 1440/50i, when the output setting is HD and OPERATION >Input/Output >i.LINK I/O in the setup menu is set to [Enable]
  - SP 1440/23.98P (pull-down recording)
  - Other than HQ 1920/23.98P or HQ 1280/23.98P, when the output setting is SD and OPERATION >Input/Output >i.LINK I/O in the setup menu is set to [Enable]

### To make Interval Rec settings

#### 1 Select OPERATION >Rec Function >Interval Rec in the setup menu.

For menu operations, see “Basic Setup Menu Operations” (page 97).

#### 2 Turn the MENU knob to select [On], and then press the knob.

The camcorder enters Interval Rec mode, the “Interval” indication on the viewfinder screen flashes.

#### 3 Select [Number of Frames], turn the MENU knob to select the number of frames to record in one take, and then press the knob.

You can select from 1, 3, 6, 9 (or from 2, 6, 12 when the video format setting is 720/59.94P or 720/50P).

#### 4 Select [Interval Time], turn the MENU knob to select the desired interval, and then press the knob.

You can select 1 to 10/15/20/30/40/50 sec, 1 to 10/15/20/30/40/50 min, 1 to 4/6/12/24 hour.

#### 5 As required, select [Pre-Lighting], turn the MENU knob to select the length of lighting time before recording starts, and then press the knob.

You can select 1 to 10/15/20/30/40/50 sec, 1 to 10/15/20/30/40/50 min, 1 to 4/6/12/24 hour.

### Notes

- If you want to turn the video light on before the start of recording, set the camcorder’s LIGHT switch to [AUTO]. The video light’s switch must also be turned on. When this is done, the video light turns on and off automatically. However, the video light remains lit when the time that it is off is five seconds or less.
- If you set the LIGHT switch to [MANUAL] and turn the video light’s switch on, the video light is always lit. (It does not go on and off automatically.)

The camcorder exits Interval Rec mode when it is powered off, but the number of frames, interval time, and pre-lighting settings are maintained.

You do not need to set them again the next time you shoot in Interval Rec mode.

### To shoot in Interval Rec mode

Make the settings and preparations described in “Basic Operations” (page 70), secure the camcorder so that it does not move, and begin shooting.

When recording starts, the “Interval” indication in the viewfinder changes from flashing to lit, and

“INT REC” and “INT STBY” appear alternatively at the position of the REC indication. The TALLY indicators and the tally indicator on the front panel of the viewfinder light as they do during normal recording. If you are using the pre-lighting function, the video light comes on before recording starts.

### To stop shooting

Stop the recording.

When shooting ends, the video data stored in memory up to that point is written to the media.

### To exit Interval Rec mode

Do one of the following.

- Set the POWER switch to OFF.
- With the camcorder in recording standby mode, set OPERATION >Rec Function >Interval Rec in the setup menu to “Off”.

### Limitations during recording

- The i.LINK (HDV/DV) connector cannot be used.
- Regardless of the setting of the F-RUN/SET/R-RUN switch, the advance mode of the internal timecode generator is always F-RUN.
- Audio cannot be recorded.
- Recording review is not possible.
- If you press the SLOT SELECT button, the camcorder completes recording of the specified number of frames, creates a clip, and switches to the other media.
- Genlock is not possible.

### If power is lost during recording

- If you set the camcorder’s POWER switch to OFF, the camcorder is powered off automatically after a few seconds, during which the media is accessed to record the video and audio data stored in the camcorder’s memory up to that point.
- If power is lost because the battery was removed, the DC cable was disconnected, or the power was turned off on the AC adaptor side, then the video and audio data shot up to that point may be lost (maximum 10 seconds). Be careful to avoid this when exchanging the battery.

## Shooting Stop Motion Animations (Frame Rec Function)

The Frame Rec function is useful for shooting stop motion animations, such as animations with puppets or clay figures.

Each time that you press the recording start button, the camcorder shoots a specified number of frames and then stops.

### Frame Rec settings and shooting

#### Notes

- The Frame Rec function cannot be used at the same time as the picture cache, Interval Rec, or Slow & Quick Motion function. When you select Frame Rec mode, the picture cache, Interval Rec, and Slow & Quick Motion functions are disabled. When you select picture cache, Interval Rec, or Slow & Quick Motion mode, the Frame Rec function is disabled.
- The data stored in memory is cleared when you change the system settings, for example by selecting a different video format. Picture data from before the change is not recorded even if you start recording immediately after the change. The camcorder exits Frame Rec mode automatically.
- Frame Rec settings cannot be changed during recording.
- Frame Rec is disabled when the following formats are selected.
  - SP 1440/59.94i or SP 1440/50i, when the output setting is HD and OPERATION >Input/Output >i.LINK I/O in the setup menu is set to Enable
  - SP 1440/23.98P (pull-down recording)
  - Other than HQ 1920/23.98P or HQ 1280/23.98P, when the output setting is SD and OPERATION >Input/Output >i.LINK I/O in the setup menu is set to Enable

### To make Frame Rec settings

#### 1 Select OPERATION >Rec Function >Frame Rec in the setup menu.

*For menu operations, see “Basic Setup Menu Operations” (page 97).*

#### 2 Turn the MENU knob to select [On], and then press the knob.

The camcorder enters Frame Rec mode, the “Frame Rec” indication on the viewfinder screen flashes.

#### 3 Select [Number of Frames], turn the MENU knob to select the number of

### frames to record in one take, and then press the knob.

You can select from 1, 3, 6, 9 (or from 2, 6, 12 when the video format setting is 720/59.94P or 720/50P).

The camcorder exits Frame Rec mode when it is powered off, but the setting for the number of frames setting is maintained. You do not need to set it again the next time you shoot in Frame Rec mode.

### To shoot in Frame Rec mode

Make the settings and preparations described in “Basic Operations” (page 70), secure the camcorder so that it does not move, and begin shooting.

When recording starts, the “Frame Rec” indication in the viewfinder changes from flashing to lit, and “FRM REC” and “FRM STBY” appear alternatively at the position of the REC indication. The TALLY indicators and the tally indicator on the front panel of the viewfinder light as they do during normal recording.

### To stop shooting

Stop the recording.

When shooting ends, the video data stored in memory up to that point is written to the media.

### To exit Interval Rec mode

Do one of the following.

- Set the POWER switch to OFF
- With the camcorder in recording standby mode, set OPERATION >Rec Function >Interval Rec in the setup menu to [Off].

### Limitations during recording

- The i.LINK (HDV/DV) connector cannot be used.
- Regardless of the setting of the F-RUN/SET/R-RUN switch, the advance mode of the internal timecode generator is always R-RUN.
- Audio cannot be recorded.
- Recording review is not possible.
- If you press the SLOT SELECT button, the camcorder completes recording of the specified number of frames, creates a clip, and switches to the other media.
- Genlock is not possible.

### If power is lost during recording

- If you set the camcorder’s POWER switch to OFF, the camcorder is powered off automatically after a few seconds, during which the media is accessed to record the video and audio data stored in the camcorder’s memory up to that point.
- If power is lost because the battery was removed, the DC cable was disconnected, or the power was turned off on the AC adaptor side, then the video and audio data shot up to that point may be lost (maximum 10 seconds). Be careful to avoid this when exchanging the battery.

## Shooting with Slow & Quick Motion

When the camcorder is in HD mode and the video format (*see page 50*) is set to one of the formats listed below, you can specify a recording frame rate that is different from the playback frame rate.

### When the Country setting is [NTSC Area]/

[NTSC Area(J)]: HQ 1920/29.97P, HQ 1920/23.98P, HQ 1280/59.94P, HQ 1280/29.97P, HQ 1280/23.98P

### When the Country setting is [PAL Area]: HQ

1920/25P, HQ 1280/50P, HQ 1280/25P

By shooting with a frame rate that differs from the playback frame rate, you can obtain slow and quick motion effects that are smoother than low-speed or high-speed playback of content recorded at the normal frame rate.

### Example

When the video format is HQ 1280/23.98P, you can obtain quick-motion effects by setting the frame rate to 1 to 23, and obtain slow-motion effects by setting the frame rate to 25 to 60.

## Slow & Quick Motion settings and shooting

### Notes

- The Slow & Quick Motion function cannot be used at the same time as the picture cache, Interval Rec, or Frame Rec function. When you select Slow & Quick Motion mode, the picture cache, Interval Rec, and Frame Rec functions are disabled. When you select picture cache, Frame Rec, or Interval Rec mode, the Slow & Quick Motion function is disabled.

- Slow & Quick Motion is disabled when the slow shutter function (viewfinder display “SLS”) function is enabled. The slow shutter function is disabled when the Slow & Quick Motion function is enabled.
- Slow & Quick Motion is disabled when OPERATION >Input/Output >i.LINK I/O in the setup menu is set to [Enable]. When Slow & Quick Motion is enabled, i.LINK I/O is fixed as [Disable].
- Slow & Quick Motion settings cannot be changed during recording.

## To make Slow & Quick Motion settings

### 1 Select OPERATION >Rec Function > Slow & Quick in the setup menu.

For menu operations, see “Basic Setup Menu Operations” (page 97).

### 2 Turn the MENU knob to select [On], and then press the knob.

The camcorder enters Slow & Quick Motion mode, and the “S&Q STBY” indication in the viewfinder lights.

### 3 Select [Frame Rate], turn the MENU knob to select the recording frame rate, and then press the knob.

The setting range for the frame rate is as follows.

System lines	Frame rate
1080	1 to 30
720	1 to 60

When you finish making these settings, the system frequency and the frame rate appear at the top of the viewfinder screen. You can change the frame rate while viewing the display in the viewfinder by turning the MENU knob.

The Slow & Quick Motion mode setting and the frame rate are retained even after the camcorder is powered off.

## To shoot in Slow & Quick Motion mode

Shoot as described in “Basic Operations” (page 70).

When recording starts, the “S&Q STBY” indication in the viewfinder changes to the “● S&Q REC” indication. The TALLY indicators and the tally indicator on the front panel of the viewfinder light as they do during normal recording.

## To stop shooting

Stop the recording.

## Note

It takes longer than normal for recording to stop when Frame Rate is set to a low value (for a slow frame rate).

## To exit Slow & Quick Motion mode

With the camcorder in recording standby mode, set OPERATION >Rec Function > Slow & Quick in the setup menu to “Off”.

## Limitations during recording

- The i.LINK (HDV/DV) connector cannot be used.
- Regardless of the setting of the F-RUN/SET/R-RUN switch, the advance mode of the internal timecode generator is always R-RUN.
- Audio cannot be recorded when the recording and playback frame rates differ.
- Recording review is not possible.
- If you change the recording frame rate to a value faster than the current shutter speed, the shutter speed is changed to the slowest value for which shooting is possible.

**Example:** If the frame rate is 32 and the shutter speed is  $\frac{1}{40}$ , and you change the frame rate to 55, then the shutter speed is changed to  $\frac{1}{60}$ .

If it is not possible to select a shutter speed that is slower than the recording frame rate.

- Genlock is not possible.

## Framing Shots with the Freeze Mix Function

The freeze mix function allows you to temporarily overlap a still image (freeze picture) from a clip shot in HD mode onto the current camera picture. This makes it easier to frame the shot.

## Note

The freeze mix function is not available in the following cases.

- When the recording format is SP 1440/23.98P
- When the video formats of the recorded picture and the camera picture differ
- When you are shooting in Slow & Quick Motion mode or slow shutter mode
- When there is i.LINK input

## To display a freeze mix picture

- 1 **Play a clip or conduct a recording review of a clip with the same format as the camera picture.**

## 2 Display the picture that you want to use as the frame, and then turn on the assignable switch to which the Freeze Mix function has been assigned.

The recording review picture is frozen and overlaps the camera picture.

### Note

The following functions are disabled at the freeze mix times.

- Menu operations
- During Focus Mag display
- Marker display
- Zebra display
- Peaking display
- Skin details display

## To cancel the freeze mix display

Do one of the following.

- Press an assignable switch again to which the Freeze Mix function has been assigned. The freeze mix display is canceled and the display returns to the normal camera picture.
- Start recording (*see page 70*). Normal recording starts.

# Planning Metadata Operations

Planning metadata is information about shooting and recording plans, recorded in an XML file.

```
<?xml:version="1.0" encoding="UTF-8"?>

<PlanningMetadata
  xmlns="http://xmlns.sony.net/pro/metadata/planningmetadata"
  assignId="P0001" creationDate="2011-08-20T17:00:00+09:00"
  lastUpdate="2011-09-28T10:30:00+09:00" load="false" version="1.00">

  <PropertylessPropertyId="assignment" update="2011-08-20T09:00:00+09:00"
  modifiedBy="Chris">

  <TitlespusAscii="Typhoon" xml:lang="en">Typhoon_Strikes_Tokyo</Titles>

  </Properties>

</PlanningMetadata>
```

Example of a planning metadata file

You can shoot using clip names and shot mark names defined in advance in a planning metadata file.

The camcorder can display clip names and shot mark names defined in the following languages.

- English
- Chinese
- German
- French <sup>1)</sup>
- Italian
- Spanish
- Dutch <sup>1)</sup>
- Portuguese
- Swedish
- Norwegian
- Danish
- Finnish <sup>1)</sup>

1) Some characters are displayed as different but similar characters.

### Note

If you define clip name and shot mark names in languages other than the above, they may not be displayed on the viewfinder screen.

On the viewfinder screen, only alphanumeric characters and symbols can be displayed.

## Loading a Planning Metadata File into Camcorder's Internal Memory

To record planning metadata together with recording clips, you need to load a planning metadata file into the camcorder's memory before starting to shoot.

There are two ways to load files.

- Load a file that has been written to the following directories on an SxS memory card.

Media	Directory to which files are written
SxS memory card	BPAV/General/Sony/Planning
SDHC	PRIVATE/SONY/BPAV/General/Sony/Planning

- When a Wi-Fi connection is made between the camcorder and a computer, operate the Web menu built in the camcorder from the computer to transfer a file.

*For details on how to use the Web menu to load a planning metadata file, refer to the Supplement supplied in the CD-ROM (labeled "Manuals for Solid-State Memory Camcorder").*

### To load a planning metadata file by menu operation

Do the following procedures with OPERATION >Planning Metadata in the setup menu.

- 1 **Insert an SxS memory card into the memory card slot A or B, and set Load/Slot(A) or Load/Slot(B) to [Execute].**

A file list appears.

#### Note

The file list displays up to 64 files.

Even if the total number of planning metadata files is 64 or less, all of the planning metadata files may not appear if the directory where they are located on the SxS memory card (General/Sony/Planning) contains 512 or more files.

- 2 **Turn the MENU knob to select a file to load and press the knob.**

### To display detailed information in planning metadata

After loading planning metadata into the camcorder, you can check the detailed

information that it contains, such as file names, date and time of creation, and titles.

- 1 **Under OPERATION >Plan.Metadata >Properties in the setup menu, select [Execute].**

- 2 **Turn the MENU knob to select [Execute], and then press the knob.**  
The PLANNING METADATA PROPERTIES list appears.  
The list contains the following information.

Item	Information
File Name	File name
Assign ID	Assign ID
Created	Date and time of creation
Modified	Date and time of most recent modification
Modified by	Name of person who modified the file
Title	Title1 specified in file (ASCII format clip name)
Title2	Title2 specified in file (UTF-8 format clip name)
Material Gp	Number of clips in material group a)
Shot Mark0 to Shot Mark9	Names defined in file for Shot Mark 0 to Shot Mark 9

- a) Material group: A group of clips recorded with the same planning metadata.

You can turn the MENU knob to scroll the list.  
After turning the MENU knob to select an item, you can press the SET button to display the selected item only.

### To clear the planning metadata loaded

- 1 **Under OPERATION >Plan.Metadata >Clear in the setup menu, select [Execute].**

- 2 **Turn the MENU knob to select [Execute], and then press the knob.**  
Deletion of the file starts.  
The message "Clear Planning Metadata File OK" appears when the deletion finishes.



## Defining Clip Names in Planning Metadata

The following two types of clip name strings can be written in a planning metadata file.

- The ASCII format name that appears in the viewfinder
- The UTF-8 format name that is actually registered as the clip name

You can select which type of clip name is displayed with OPERAION >Planning Metadata >Clip Name Disp in the setup menu.

When a clip name is set with planning metadata, the name is displayed under the depth of field indication on the viewfinder screen.

### Note

When you define both of ASCII format name and UTF-8 format name with planning metadata, the UTF-8 format string is used as the clip name string. If you define either of ASCII format name and UTF-8 format name with planning metadata, the defined format name is displayed though it is not selected by menu setting.

### Clip name string example

Use a text editor to modify the two fields in the <Title> tag that contain the clip name strings. The shaded fields in the example are clip name strings. “Typhoon” is described in ASCII format (up to 44 characters). “Typhoon\_Strikes\_Tokyo” is described in UTF-8 format (up to 44 bytes). “sp” indicates a space and ↵ indicates a carriage return.

```
<?xmlspversion="1.0"spencoding="UTF-8"?>↵
<PlanningMetadataspxmlns="http://xmlns.sony.net/pro/metadata/planningmetadata"spassignId="P0001"spcreationDate="2011-08-20T17:00:00+09:00"splastUpdate="2011-09-28T10:30:00+09:00"spversion="1.00">↵
  <PropertiessppropertyId="assignment"spupdate="2011-09-20T10:30:00+09:00"spmodifiedBy="Chris">↵
    <TitlespusAscii="Typhoon"spxml:lang="en">Typhoon_Strikes_Tokyo
  </Title>↵
```

```
</Properties>↵
</PlanningMetadata>↵
```

### Notes

- When you create a file, enter each statement as a single line with a CRLF only after the last character in the statement line, and do not enter spaces except where specified.
- Up to 44 bytes (or characters) string is available for the clip name.  
If the UTF-8 format string exceeds 44 bytes, 44 bytes string is used as the clip name.  
If only ASCII format name is specified, 44 characters string is used as the clip name.  
When neither an ASCII format name string nor UTF-8 format name string can be used, the standard format clip name is used.

*You can use the Sony Planning Metadata Add-in application software supplied with the CBK-WA01 Wi-Fi Adapter to define clip names. For details, refer to the Operating Instructions supplied with the CBK-WA01.*

## To set clip names

- 1 Load a planning metadata file that contains clip names into this camcorder.**
- 2 Set OPERATION >Clip >Auto Naming in the setup menu to [Plan].**

Each time that you record a clip, the unit automatically generates a name consisting of the clip name defined in the planning metadata file, with the addition of an underbar (\_) and a five-digit serial number (00001 to 99999).

### Examples:

Typhoon\_Strikes\_Tokyo\_00001,  
Typhoon\_Strikes\_Tokyo\_00002, ...

### Note

When you load another planning metadata file, the serial number returns to 00001 with the next recording operation.

### To select the clip name display format

When names are defined in both ASCII format and UTF-8 format, you can use OPERATION >Clip >Clip Name Disp in the setup menu to select which of the names to display on the viewfinder screen.

**To display ASCII format names:** Select Title1(ASCII).

The clip name becomes

“Typhoon\_Strikes\_Tokyo\_SerialNumber”, but “Typhoon\_SerialNumber” is displayed on the screens.

**To display UTF-8 format names:** Select Title2(UTF-8).

The clip name becomes “Typhoon\_Strikes\_Tokyo\_SerialNumber”, and the same name is displayed on the screens.

## Defining Shot Mark Names in Planning Metadata

When you use planning metadata to set shot marks, you can define names for Shot Mark 0 to Shot Mark 9.

When you record shot marks, you can add the shot mark name strings defined in the planning metadata.

### Note

Shot Mark 1 and Shot Mark 2 can be recorded on the camcorder. Shot Mark 3 to Shot Mark 9 and Shot Mark 0 can be recorded by operation from a computer which is connected with the camcorder via Wi-Fi.

### Shot mark name string example

Use a text editor to modify the fields in the <Meta name> tag.

The shaded fields in the example are essence mark name strings. Names can be either in ASCII format (up to 32 characters) or UTF-8 format (up to 16 characters).

“sp” indicates a space and ↵ indicates a carriage return.

### Note

If a name string contains even one non-ASCII character, the maximum length of that string is 16 characters.

```
<?xmlspversion="1.0"spencoding="
UTF-8"?>↵
<PlanningMetadata xmlns="http://
xmlns.sony.net/pro/metadata/
planningmetadata"spassignId="
H00123"spcreationDate="
2011-04-15T08:00:00Z"splastUpdate="
2011-04-15T15:00:00Z"spversion=
"1.00">↵
<PropertiessppropertyId=
"assignment"spclass="original"sp
update="2011-04-15T15:00:00Z"sp
```

```
modifiedBy="Chris">↵
<TitlespusAscii="Football
Game"spxml:lang="en">
Football Game 15/04/2011</
Title>↵
<Metaspname="_ShotMark1"sp
content="Goal"/>↵
<Metaspname="_ShotMark2"sp
content="Shoot"/>↵
<Metaspname="_ShotMark3"sp
content="Corner Kick"/>↵
<Metaspname="_ShotMark4"sp
content="Free Kick"/>↵
<Metaspname="_ShotMark5"sp
content="Goal Kick"/>↵
<Metaspname="_ShotMark6"sp
content="Foul"/>↵
<Metaspname="_ShotMark7"sp
content="PK"/>↵
<Metaspname="_ShotMark8"sp
content="1st Half"/>↵
<Metaspname="_ShotMark9"sp
content="2nd Half"/>↵
<Metaspname="_ShotMark0"sp
content="Kick Off"/>↵
</Properties>↵
</PlanningMetadata>↵
```

### Note

When you create a definition file, enter each statement as a single line with a CRLF only after the last character in the statement line, and do not enter spaces except where specified, except within essence mark name strings.

*You can use the Sony Planning Metadata Add-in application software supplied with the CBK-WA01 Wi-Fi Adapter to Essence mark names. For details, refer to the Operating Instructions supplied with the CBK-WA01.*

## Clip Playback

A thumbnail screen appears if you press the THUMBNAIL button in E-E or playback mode. Thumbnail screens display lists of the clips stored on SxS memory cards in the form of index pictures. (A message appears if you insert a memory card that contains no clips.)

You can select any clip (*see page 85*) in a thumbnail screen and start playback of that clip (*see page 85*).

### Thumbnail Screen


In thumbnail screens, the timecode of the index picture appears beneath the thumbnail for each clip. (An OK mark also appears when a clip has been marked with an OK mark.)

#### Note

Normal thumbnail screens display SD clips only or HD clips only, even if the SxS memory card contains clips in both formats. You can select the format to display by selecting a mode with OPERATION > Format > HD/SD (*see page 99*) in the setup menu.

If you want to display all recorded clips, regardless of the HD/SD mode, switch to the all clips thumbnail screen. However, it is not possible to start playback from the all clips thumbnail screen (*see page 88*).

### HD mode thumbnail screen

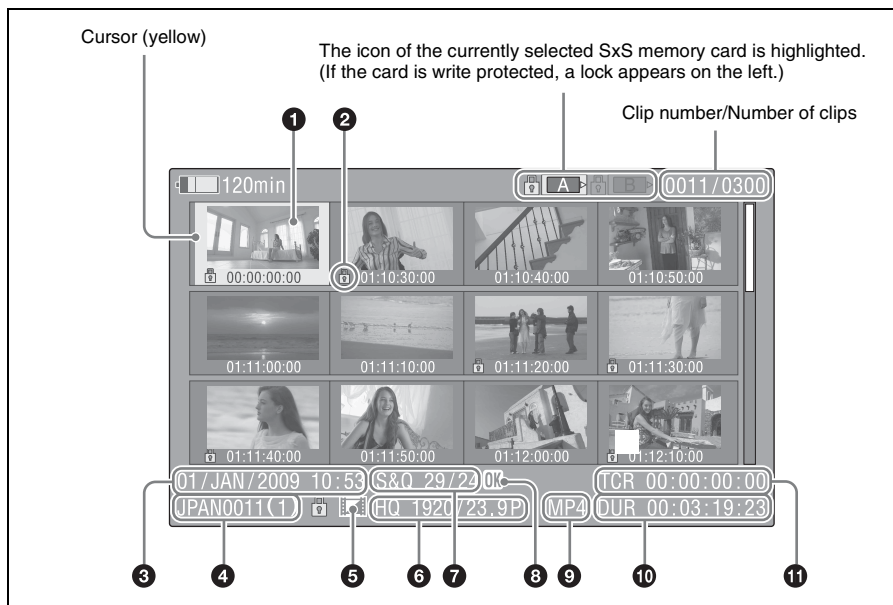

**1 Index picture**

When a clip is recorded, its first frame is set automatically as the index picture. You can change to index picture to any frame (*see page 94*).

**2 Lock mark**

Indicates the selected clip is marked with an OK mark and protected.

**3 Date and start time of recording****4 Clip name****5 Independent AV file icon**

This appears only when a clip is an independent AV file. SxS memory cards may contain independent files that have been added directly from a computer. Because independent files lack the associated management files, some operations and information displays may not be available.

**6 Video format of recording****7 Special recording information**

This displays the mode of clips that have been recorded in a special mode (Slow & Quick Motion, Interval Rec, Frame Rec). For Slow & Quick Motion clips, the frame rates are displayed to the right as [Recording frame rate/Playback frame rate] fps.

**8 OK mark**

An OK mark appears only when the clip has been marked with an OK mark (*see page 90*).


**9 File format**

Indicates the file format of the selected clip (MP4).

**10 Clip duration****11 Timecode**

This is the timecode of the index picture.

## SD mode thumbnail screen

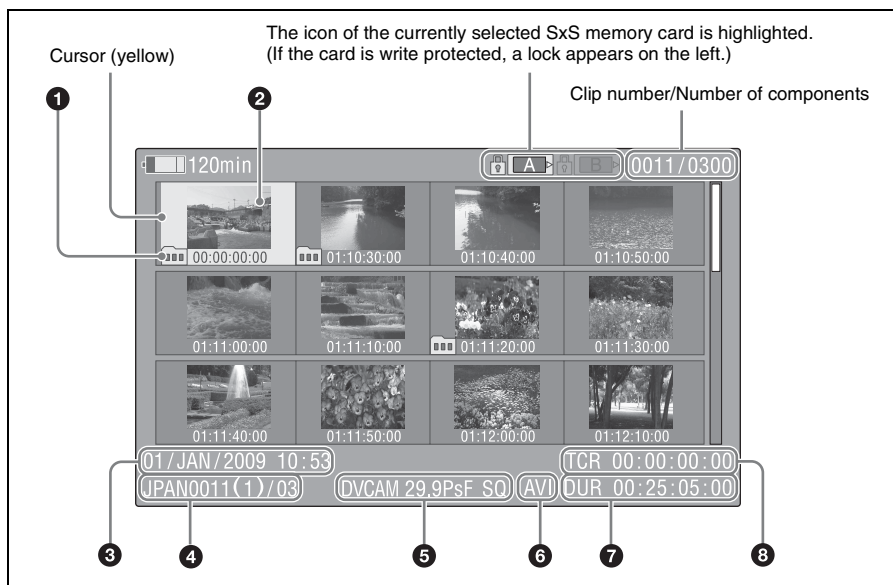**1 Take mark**

Indicates that the file size is larger than 2 GB, and that the clip has been split before being saved. You can check the segment files on the expand thumbnail screen (*see page 92*).

**2 Index picture**

When a clip is recorded, its first frame is set automatically as the index picture.

### 3 Date and start time of recording

### 4 Clip name/Number of components

The number after the clip name (delimited by /) is the number of components. This appears only for clips larger than 2 GB in size, which have been split into smaller files for storage.

### 5 Video format of recording

### 6 File format

Indicates the file format of the selected clip (AVI).

### 7 Clip duration

### 8 Timecode

This is the timecode of the index picture.

## To switch between SxS memory cards

When two SxS memory cards are loaded, you can switch between them by pressing the SLOT SELECT button.

### Note

While an expand thumbnail screen (*see page 92*) or a shot mark (essence mark) thumbnail screen (*see page 93*) is displayed, SxS memory cards cannot be switched.

## To hide the thumbnail screen

Press the THUMBNAIL button.

## Playing Clips

### To select clip thumbnails

Do one of the following to move the yellow cursor to the clip that you want to select.

- Press an arrow button (↑, ↓, ←, →).
- Turn the MENU knob.
- Press the PREV or NEXT button.

#### To select the first thumbnail

With the F REV button held down, press the PREV button.

#### To select the last thumbnail

With the F FWD button held down, press the NEXT button.

## To play clips sequentially starting from a selected clip

### 1 Select the thumbnail of the clip that you want to play first.

### 2 Press the PLAY/PAUSE button.

Play begins from the top of the selected clip.

Play continues through all clips after the selected clip.

When the last clip has been played to the end, the camcorder enters pause (still image) mode at the last frame of the last clip.

Press the THUMBNAIL button to return to the thumbnail screen.

### Notes

- There may be momentary picture breakup or still image display at the transition from one clip to another. During this time, the playback controls and the THUMBNAIL button cannot be operated.
- When you select a clip in the thumbnail screen and begin playback, there may be momentary picture breakup at the top of the clip. To view the top of the clip without breakup, put the camcorder into playback mode, pause, use the PREV button to return to the top of the clip, and start playback again.
- On SxS memory cards that contain both HD-mode and SD-mode clips, you cannot play all clips in sequence. For example, while an HD mode thumbnail screen is displayed, only HD mode clips are played in sequence.

### To pause playback

Press the PLAY/PAUSE button.

The PLAY/PAUSE indicator flashes while playback is paused.

Press the button again to return to playback mode.

### To play at high speed

Press the F FWD button (*see page 20*) or the F REV button (*see page 20*).

To return to normal playback, press the PLAY/PAUSE button.

### To stop playback

**Press the STOP button:** Playback stops and the camcorder enters E-E mode.

**Press the THUMBNAIL button:** Playback stops and the thumbnail screen (*see page 83*) appears in the viewfinder.

Playback also stops if you eject the memory card. In this case, the camera picture appears in the viewfinder.

---

## To cue up clips

---

### To return to the top of the current clip

Press the PREV button.

- During playback or F FWD, this jumps to the top of the current clip and starts playback.
- During F REV or pause, this jumps to the top of the current clip and displays a still image.
- Each subsequent press of the button moves to the previous clip.

### To play from the top of the first clip

Simultaneously press the PREV and F REV buttons. This jumps to the top of the first clip on the SxS memory card.

### To jump to the top of the next clip

Press the NEXT button.

- During playback or F FWD, this jumps to the top of the next clip and starts playback.
- During F REV or pause, this jumps to the top of the next clip and displays a still image.
- Each subsequent press of the button moves to the next clip.

### To play from the top of the last clip

Simultaneously press the NEXT and F FWD buttons. This jumps to the top of the last clip on the SxS memory card.

---

## To add a shot mark during play (HD mode only)

---

You can add shot marks to clips during play by using the same method used during recording (*see page 73*).

### Notes

- Shot marks cannot be recorded when the SxS memory card is write protected.
- Shot marks cannot be added at the first frame of each clip or last frame of the last clip.

## Using Thumbnails to Search Inside Clips

You can switch a thumbnail screen to the following thumbnail search screens, which allow you quickly find the clips you want.

- Expand thumbnail screen
- Shot mark thumbnail screen (HD mode only)

Like the normal thumbnail screen and the OK clip thumbnail screen, these screens allow you to

select clip thumbnails (*see page 85*) and to start clip playback (*see page 85*).

---

## To search for scenes in clips with the expand thumbnail screen

---

The expand thumbnail screen is convenient when you want to find and cue up a specific scene in a long clip.

To display the expand thumbnail screen, select a clip in the thumbnail screen and press the EXPAND button (*see page 21*) or select THUMBNAIL >Thumbnail View >Forward Expansion in the setup menu. The selected clip is displayed as follows.

**HD mode:** The clip is divided into 12 equally-sized blocks, and a thumbnail of the first frame in each block is displayed.

**SD mode:** Only in the case of clips that have been split into partial files because the file size was larger than 2 GB, a thumbnail of the first frame of each partial file is displayed.

This helps you to quickly cue up to a desired scene in a clip of long duration.

*See “Displaying the Expand Thumbnail Screen” (page 92) for more information about the expand thumbnail screen.*

---

## To search for shot marks in clips with the shot mark thumbnail screen (HD mode only)

---

When a clip contains one or more shot marks, you can easily find them with the shot mark thumbnail screen. The shot mark thumbnail screen displays a thumbnail of each shot mark frame in the clip. To display the shot mark thumbnail screen, press the ESSENCE MARK button (*see page 22*) or select THUMBNAIL >Thumbnail View >Essence Mark Thumbnail in the setup menu.

*See “Displaying the Shot Mark Thumbnail Screen (HD Mode Only)” (page 93) for more information about the shot mark thumbnail screen.*

# Thumbnail Operations

You can use the THUMBNAIL menu to perform various operations on clips, to check clip properties, and to change clip metadata.

## THUMBNAIL Menu Configuration

Menu items	Sub-items	Description
Clip Properties	—	Displays detailed properties ( <i>see page 89</i> ).
Set Index Picture <sup>a)</sup>	—	Changes index pictures in the expand thumbnail screen or the shot mark thumbnail screen ( <i>see page 94</i> ).
Thumbnail View	Forward Expansion	<ul style="list-style-type: none"> <li>Displays the expand thumbnail screen (<i>see page 92</i>).</li> <li>In the expand thumbnail screen, increases the number of divisions (<i>see page 92</i>).</li> </ul>
	Back Expansion	In the expand thumbnail screen, decreases the number of divisions.
	Essence Mark Thumbnail <sup>a)</sup>	Displays the shot mark thumbnail screen ( <i>see page 93</i> ).
	Clip Thumbnail	Displays the normal thumbnail screen.
	All Clip Thumbnail	Displays the all clips thumbnail screen ( <i>see page 88</i> ).
Set Shot Mark <sup>a)</sup>	Add Shot Mark1	In the expand thumbnail screen or the shot mark thumbnail screen, adds a Shot Mark1 mark ( <i>see page 93</i> ).
	Delete Shot Mark1	In the expand thumbnail screen or the shot mark thumbnail screen, deletes a Shot Mark1 mark ( <i>see page 94</i> ).
	Add Shot Mark2	In the expand thumbnail screen or the shot mark thumbnail screen, adds a Shot Mark2 mark ( <i>see page 93</i> ).
	Delete Shot Mark2	In the expand thumbnail screen or the shot mark thumbnail screen, deletes a Shot Mark2 mark ( <i>see page 94</i> ).
Add OK Mark <sup>a)</sup>	—	Adds an OK mark and protects a clip ( <i>see page 90</i> ).
Delete OK Mark <sup>a)</sup>	—	Deletes an OK mark and unprotects a clip ( <i>see page 90</i> ).
Copy Clip	—	Copies a clip ( <i>see page 90</i> ).
Delete Clip	—	Deletes a clip ( <i>see page 91</i> ).
Divide Clip <sup>a)</sup>	—	Divides a clip ( <i>see page 94</i> ).
Filter Clips <sup>a)</sup>	—	Displays the OK clip thumbnail screen ( <i>see page 88</i> ).
Copy All	All Clips	Batch copies groups of clips/files ( <i>see page 91</i> ).
	General Files	
	All Clips & General Files	
Delete All Clips	Execute/Cancel	Deletes all unprotected clips ( <i>see page 91</i> ).


a) HD mode only

## Basic THUMBNAIL Menu Operations

See “Basic Setup Menu Operations” (page 97) for information about menu operations.

### To display the THUMBNAIL menu

- 1 Press the **THUMBNAIL** button to display the thumbnail screen.
- 2 Set the **MENU ON/OFF** switch to **ON**, or press the **MENU** button.
- 3 Turn the **MENU knob** to select “**TH**”, and then press the knob. Or press the  $\uparrow$  or  $\downarrow$  button to select “**TH**”, and then press the **SET** button.  
The **THUMBNAIL** menu appears.

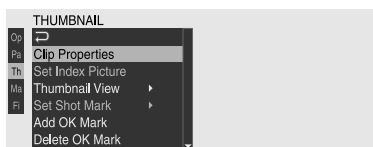

To hide the **THUMBNAIL** menu, press the **MENU** button again.

### To select menu items and sub-items

Do one of the following.

- Turn the **MENU knob** to select an item or sub-item, and then press the knob.
- Press the arrow buttons ( $\uparrow$ ,  $\downarrow$ ,  $\leftarrow$ ,  $\rightarrow$ ) to select an item or sub-item, and then press the **SET** button.

According to the selected item or sub-item, a selection list or a clip properties screen appears (see page 89).

To return to the previous state, push the **MENU CANCEL/PRST/ESCAPE** switch down to the **ESCAPE** side.

#### Notes

- When an **SxS** memory card is write protected, it is not possible to copy, delete, or divide clips, to change index pictures, or to add and delete **OK** marks and shot marks.
- Some items cannot be selected, depending on the state of the camcorder when the menu was displayed.

### To hide the clip properties screen

Do one of the following.

**Press the RESET/RETURN button:** This returns to the **THUMBNAIL** menu.

**Press the THUMBNAIL button:** The camcorder enters **E-E** mode, and the camera picture appears.

**Press the PLAY/PAUSE button:** Playback from the selected clip starts.

## Changing the Thumbnail Screen Type

### To display OK clip thumbnails (HD mode only)

From among all clips stored on the currently selected **SxS** memory card, the **OK** clip thumbnail screen displays only clips which have been marked with an **OK** mark.

When the normal thumbnail screen is displayed, you can select **THUMBNAIL >Filter Clips** to switch to the **OK** clip thumbnail screen.

See “Adding and Deleting **OK** Marks (HD Mode Only)” (page 90) for information about how to add **OK** marks.

### To display the all clips thumbnail screen

The all clips thumbnail screen displays thumbnails of all of the clips on the selected memory card, including both **HD-mode** and **SD-mode** clips. This is useful when you want to check whether the memory card contains clips in another mode.

You can switch to the all clips thumbnail screen by selecting **THUMBNAIL >All Clip Thumbnail** in the setup menu in the normal thumbnails screen.

Pressing the **RESET/RETURN** button returns you to the normal thumbnails screen, where you can perform playback and other clip operations.


#### Note

You cannot start playback from the all clips thumbnail screen.



## Displaying Clip Properties

The clip properties screen appears when you select Clip Properties in the THUMBNAIL menu.

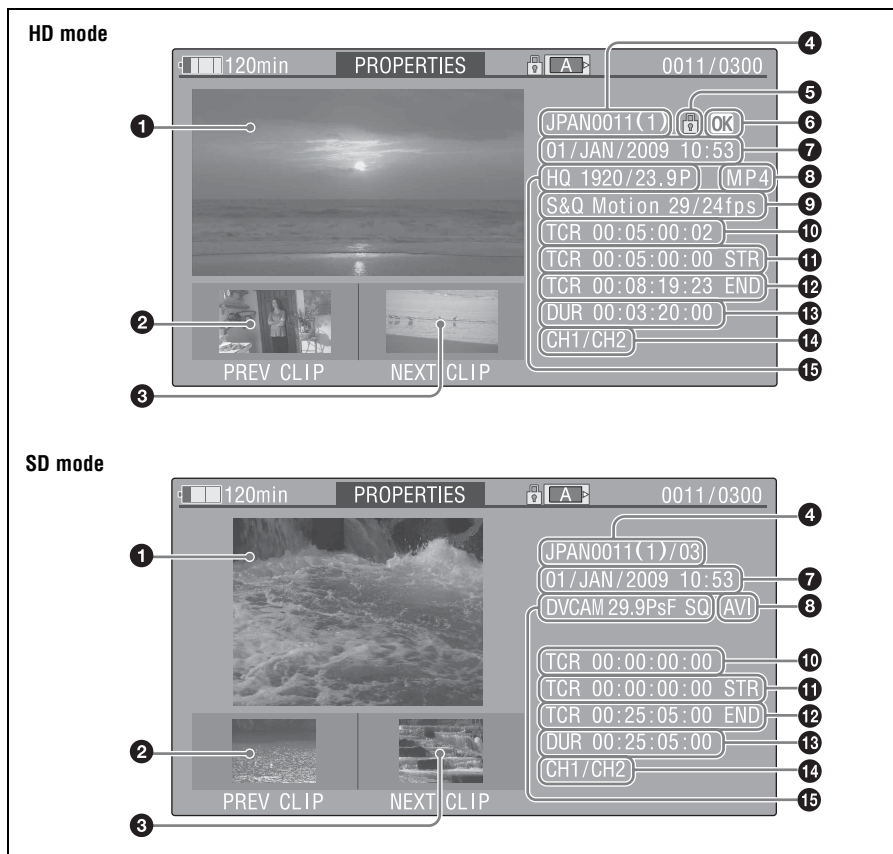

### 1 Image of the current clip

### 2 Image of the previous clip

Press the PREV button to display the properties of the previous clip.

### 3 Image of the next clip

Press the NEXT button to display the properties of the next clip.

### 4 Clip name

In SD mode, only for clips that have been divided because the file size was greater than 2 GB, the number of component clips appears after the clip name.

When clip names are 12 characters or longer, only the first five characters and the last five characters are displayed. If you want to check the abbreviated characters, press the MENU knob to switch to long display mode. In long display mode, up to 53 characters are displayed in clip names.

Press the MENU knob again to exit long display mode. Pressing the PREV or NEXT button to display the previous or next clip also exists long display mode.

### 5 Lock mark (HD mode only)

This appears when the clip is marked with an OK mark and protected.

**6 OK mark (HD mode only)**

This appears only when an OK mark has been added.

**7 Date and start time of recording****8 File format**

The file format of the clip (MP4 or AVI) appears.

**9 Special recording information (HD mode only)**

This displays the mode of clips that have been recorded in a special mode (Slow & Quick Motion, Interval Rec, Frame Rec).

For Slow & Quick Motion clips, the frame rates are displayed to the right as [Recording frame rate/Playback frame rate].

**10 Timecode of the displayed image****11 Timecode of the recording start point****12 Timecode of the recording end point****13 Duration****14 Recorded audio channels****15 Video format of recording**

## Adding and Deleting OK Marks (HD Mode Only)

You can add OK marks to clips. This makes it possible to display thumbnails of only the clips that you need by pressing the THUMBNAIL button.

Clips with OK marks cannot be deleted or divided. If you want to delete or divide such a clip, delete the OK mark first.

---

### To add an OK mark

---

**1 In the thumbnail screen, select THUMBNAIL >Add OK Mark.**

The screen changes to the clip properties screen, and a confirmation message appears beneath the index picture.

**2 Select [Execute], and press the MENU knob.**

An OK mark is added to the selected clip.

---

### To delete an OK mark

---

A Delete OK Mark item appears in the THUMBNAIL menu when you have selected a clip that has an OK mark.

**1 In the thumbnail screen, select THUMBNAIL >Delete OK Mark.**

The screen changes to the clip properties screen, and a confirmation message appears beneath the index picture.

**2 Select [Execute], and press the MENU knob.**

The OK mark is deleted from the selected clip.

## Copying Clips

You can copy clips to other SxS memory cards. Clips are copied to destination SxS memory cards using the same names as the original clips.

### Notes

- If a clip with the same name already exists at the copy destination SxS memory card, a one-digit number in parentheses is added to the original name. The number in parentheses is the smallest number that does not exist at the copy destination.

#### Examples:

ABCD0002→ABCD0002(1)

ABCD0002(1)→ABCD0002(2)

ABCD0005(3)→ABCD0005(4)

- If the parenthetical numbers (1) to (9) already exist at the copy destination, it is not possible to copy any more clips under that name. (A tenth clip cannot be copied.)
- A message appears if there is not enough free capacity at the copy destination SxS memory card. Exchange the card for one with more free capacity.
- When multiple clips are recorded in a source SxS memory card, it may not be possible to copy all clips to the end. Depending on memory characteristics and usage of the memory cards, this can occur even when the source and destination memory cards have the same capacity.

**1 In the thumbnail screen, select the thumbnail of the clip to copy, and then select THUMBNAIL >Copy Clip.**

The screen changes to the properties screen of that clip, and a confirmation message appears beneath the index picture.

## 2 Select [Execute], and press the MENU knob.

The copy starts.

During the copy, an execution message and progress bar are displayed.

When the copy finishes, the display returns to the thumbnail screen.

### To cancel a copy operation

Press the RESET/RETURN button.

The copy is cancelled, and the display returns to the thumbnail screen.

## To batch copy groups of clips/files

You can batch copy groups of clips from one SxS memory card to another SxS memory card.

When both HD-mode and SD-mode clips exist on the source SxS memory card, only clips in the currently selected mode are copied. This is a convenient way to extract clips in one of the modes.

You can also copy of the files in the General directory, either together with or separately from clips.

### 1 In the thumbnail screen, select the thumbnails of the clips to copy and then select THUMBNAİL >Copy All >All Clips.

The confirmation message “Copy All Clip?” appears.

### 2 Select [Execute], and press the MENU knob.

The copy starts.

During the copy, the progress of the copy is displayed.

If you executed the copy in HD mode, only HD-mode clips are copied.

If you executed the copy in SD mode, only SD-mode clips are copied.

### To cancel the copy operation

Press the RESET/RETURN button.

### When the copy finishes

A completion message appears, and the THUMBNAİL menu screen appears again.

### To copy all files in the General directory

To copy all files only, without copying clips, select THUMBNAİL >Copy All >General Files in step 1.

To copy all files together with all clips, select THUMBNAİL >Copy All >All Clips & General Files in step 1.

## Deleting Clips

You can delete clips from SxS memory cards.

### Note

HD clips with OK marks cannot be deleted.

If you want to delete such clips, first delete the OK marks (see page 90).

### 1 In the thumbnail screen, select the thumbnail of the clip to delete, and then select THUMBNAİL >Delete Clip.

The screen changes to the properties screen of that clip, and a confirmation message appears beneath the index picture.

### 2 Select [Execute], and press the MENU knob.

The clip is deleted.

In the thumbnail screen, the clips that followed the deleted clip move up one position.

## To batch delete groups of clips

You can batch delete groups of clips from an SxS memory card.

### Notes

- When both HD-mode and SD-mode clips exist on the SxS memory card, only clips in the currently selected mode are deleted.
- In HD mode, clips with OK marks are not deleted, even when a deletion is executed for a group of clips that includes them.

### 1 In the thumbnail screen, select the thumbnails of the clips to delete and then select THUMBNAİL >Delete All Clips.

The confirmation message “Delete All Clips?” appears.

### 2 Select [Execute], and press the MENU knob.

The deletion starts.

During the deletion, the progress of the deletion is displayed.

If you executed the deletion in HD mode, only HD-mode clips are deleted.  
If you executed the deletion in SD mode, only SD-mode clips are deleted.

**To cancel the deletion**

Press the RESET/RETURN button.

**When the deletion finishes**

A completion message appears, and the THUMBNAIL menu screen appears again.

**Displaying the Expand Thumbnail Screen**

The expand thumbnail screen allows you to search inside clips by using thumbnails (see page 86), to change index pictures (see page 94), and to add and delete shot marks (see page 93).


**To display the screen**

In the thumbnail screen, select a thumbnail and press the EXPAND button (see page 21) or select THUMBNAIL >Thumbnail View >Forward Expansion.

An expand thumbnail screen for the selected clip appears.

**Expand thumbnail screen in HD mode**

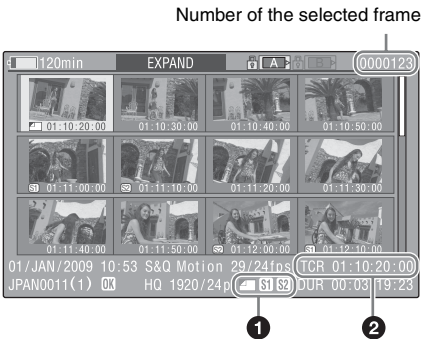


In HD mode, the selected clip is divided into 12 equally-sized blocks, and a thumbnail of the first frame in each block is displayed.



Clip properties are shown at the bottom of the screen.  
Except for the items listed below, the information displayed here is the same as the information displayed in the normal thumbnail screen.

**1 Frame information**

This displays frame information using icons.

	Index picture
	Frame with Shot Mark1
	Frame with Shot Mark2


The same icons are also displayed beneath the thumbnails. However, when several icons could be displayed for the same frame, one icon is selected for display, in the order of priority Index picture > Shot Mark 1 > Shot Mark2.

**2 Timecode**

This displays the timecode of the selected frame in the expand thumbnail screen.

**Expand thumbnail screen in SD mode**

In SD mode, only in the case of clips that have been split into partial files because the file size was larger than 2 GB, a thumbnail of the first frame of each partial file is displayed.

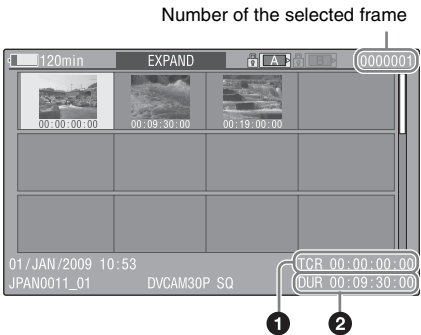

Clip properties are displayed at the bottom of the screen.  
Except for the items listed below, the information displayed here is the same as the information displayed in the normal thumbnail screen.

**1 Timecode**

This is the timecode of the selected partial file.

**2 Duration**

This is the duration of the selected partial file.

**To increase the number of divisions**

When you press the EXPAND button, or select THUMBNAIL >Thumbnail View >Forward Expansion, the divided clip or file is further

divided into 12 equally-sized blocks (a clip or file that has been divided into 12 is further divided into 12, for  $12 \times 12 = 144$  divisions). You can repeat the same operation to increase the number of division.

### To return to the previous division level

Press the EXPAND button with the SHIFT button held down, or select THUMBNAIL > Thumbnail View > Back Expansion. The expand thumbnail screen returns to the previous division level.

## Displaying the Shot Mark Thumbnail Screen (HD Mode Only)

In the shot mark thumbnail screen (shown only in HD mode), you can search for shot marks in clips (see page 86), change index pictures (see page 94), and add and delete shot marks (see page 93).

- 1 In the thumbnail screen, select the thumbnail of a clip, and press the ESSENCE MARK button (see page 22) or select THUMBNAIL > Thumbnail View > Essence Mark Thumbnail.

The shot mark thumbnail screen appears, and a selection list is displayed.

- 2 Select the type of the essence mark thumbnail screen.

**All:** Thumbnail display of all frames marked with essence marks.

**Shot Mark1:** Display only frames marked with Shot Mark1 marks.

**Shot Mark2:** Display only frames marked with Shot Mark2 marks.

You can also select Shot Mark 0 and Shot Mark 3 to Shot Mark 9.

If you have recorded clips by using planning metadata that defined names for Shot Mark 0 to Shot Mark 9, the defined names are displayed instead of the above item names in the list.

## Example shot mark thumbnail screen (with Shot Mark1 selected)



The properties of the clip appear at the bottom of the screen.

Except for the following item, the information displayed here is the same as the information displayed in the expand thumbnail screen.

### 1 Timecode

This is the timecode of the selected frame in the shot mark thumbnail screen.

## Adding and Deleting Shot Marks (HD Mode Only)

In the shot mark thumbnail screen (see page 93) or the expand thumbnail screen (see page 92), you can add thumbnails to any frame of clips recorded in HD mode, and delete recorded shot marks.

### To add shot marks

- 1 Select the frame where you want to add a shot mark, and then select THUMBNAIL > Set Shot Mark > Add Shot Mark1 (or Add Shot Mark2).

The properties screen of the selected frame appears, and a confirmation message appears below the image.

- 2 Select [Execute], and press the MENU knob.

## To delete shot marks

- 1 **Select the frame where you want to delete a shot mark, and then select THUMBNAIL > Set Shot Mark > Delete Shot Mark1 (or Delete Shot Mark2).**  
The properties screen of the selected frame appears, and a confirmation message appears below the image.
- 2 **Select [Execute], and press the MENU knob.**

## Changing Clip Index Pictures (HD Mode Only)

In the shot mark thumbnail screen (*see page 93*) or the expand thumbnail screen (*see page 92*), you can set the selected frame as the clip index picture in HD mode.

- 1 **Select the thumbnail of the frame that you want to use as the index picture, and then select THUMBNAIL > Set Index Picture.**  
The properties screen of the selected frame appears, and a confirmation message appears below the image.
- 2 **Select [Execute], and press the MENU knob.**

### Note

Even if you set the index picture to a frame that is not the first frame of a clip, playback of that clip from a thumbnail screen always begins at the first frame.

## Dividing Clips (HD Mode Only)

In the expand thumbnail screen (*see page 92*) and the shot mark thumbnail screen (*see page 93*), HD-mode clips can be divided into two clips at the selected frame.

- 1 **Select the thumbnail of the frame where you want to divide the clip, and then select THUMBNAIL > Divide Clip.**

The properties screen of the selected frame appears, and a confirmation message appears below the image.

- 2 **Select [Execute], and press the MENU knob.**

The clip is divided at the selected frame, and two clips with different names are created.

The first four characters of the clip name are taken from the name of the original clips, and the last four characters are new serial numbers.

**Example:** When the name of a newly recorded clip would be EFGH0100, and a clip named ABCD0002 is divided, the names of the two newly created clips are ABCD0100 and ABCD0101.

### Note

When there is not enough remaining capacity on the SxS memory cards to store the divided clips, a message appears to inform you that there is not enough capacity.

## Setup Menu Organization and Levels

On this camcorder, settings for shooting and playback are made in the setup menu, which appears in the viewfinder.

The setup menu can also be displayed on an external video monitor (*see page 148*).

### Setup Menu Organization

The setup menu consists of the following menus.

#### **Op: OPERATION menu**

Settings related to shooting, except settings related to picture quality (*see page 99*)

#### **Pa: PAINT menu**

Settings related to picture quality (*see page 115*)

#### **Th: THUMBAIL menu**

Settings related to clip thumbnails (*see page 87*)

#### **Note**

The THUMBAIL menu is used only when a thumbnail screen (*see page 83*) is displayed. It is disabled when no thumbnail screen is displayed.

#### **Ma: MAINTENANCE menu**

Settings related to audio and timecode (*see page 121*)

#### **Fi: FILE menu**

Settings related to file operations (*see page 134*)

### Setup Menu Levels

*See “THUMBAIL Menu Configuration” (page 87) for the organization of the THUMBAIL menu.*

#### **OPERATION Menu (*see page 99*)**

##### OPERATION

- Format
- Format Media
- Input/Output
- Super Impose
- Rec Function
- Assignable SW
- VF Setting
- Marker
- Gain Switch
- TLCS
- Zebra
- Display On/Off
- Auto Iris
- White Setting
- Offset White
- Shutter Select
- Time Zone
- Clip
- Plan.Metadata

## PAINT Menu (*see page 115*)

### PAINT

- Switch Status
- White
- Black
- Flare
- Gamma
- Black Gamma
- Knee
- White Clip
- Detail(HD Mode)
- Detail(SD Mode)
- Aperture
- Skin Detail
- Matrix
- Multi Matrix
- V Modulation
- Low Key Saturation

## FILE Menu (*see page 134*)

### FILE

- All
- Scene
- Reference
- Lens

## MAINTENANCE Menu (*see page 121*)

### MAINTENANCE

- White Shading
- Battery
- Audio
- WRR Setting
- Timecode
- Essence Mark
- Camera Config
- Preset White
- White Filter
- Auto Iris2
- Flicker Reduce
- Genlock
- ND Comp
- Lens
- Trigger Mode
- Network Setting
- Wi-Fi Setting
- Clock set
- Language
- Hours Meter
- Version



# Basic Setup Menu Operations

## To display the setup menu

Set the MENU ON/OFF switch to ON, or press the MENU button.

The camcorder enters menu mode and the menu list appears on the screen.

A cursor appears over the first two characters of the most recently used menu, and the corresponding menu item selection area appears to the right.

**Example: When the cursor is positioned at the OPERATION menu**

Menu list



Menu item selection area

### Note

The setup menu cannot be used when the camcorder is in focus magnification mode. Exit focus magnification mode by pressing the assignable switch to which the Focus Mag function has been assigned.

## To make menu settings

**1 Turn the MENU knob, or press the  $\uparrow$  or  $\downarrow$  button, to move the cursor to the item that you want to set.**

A list of selectable menu items appears in the menu item selection area to the right of the icon.

**2 Press the MENU knob or the SET button.**

The cursor moves to the menu item selection area.

You can also move the cursor to the menu item selection area by pressing the  $\Rightarrow$  button.

- The menu item selection area displays a maximum of seven lines. You can scroll through menus with more than seven lines by moving the cursor up and down. Triangles appear at the upper right and lower right of the menu item selection area to indicate that a menu is scrollable.




Appears when more menu items are available below the last line. ( $\blacktriangle$  appears when more menu items are available above the first line.)

Menu item selection area

- $\blacktriangleright$  appears to the right when more detailed sub-items are available.
- Settings appear to the right when a menu item has no sub-items.
- You can select  $\Leftarrow$  to return to the previous level.

**3 Turn the MENU knob, or press the  $\uparrow$  or  $\downarrow$  button, to move the cursor to the item that you want to set, and then confirm by pressing the MENU knob or the SET button.**

The sub-items area appears to the right of the menu item selection area, and the cursor moves to the first sub-item.

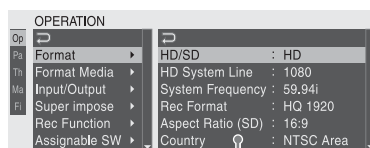


Sub-items area

- Displays sub-items and their current settings
- To return to the previous level, select  $\Leftarrow$  press the  $\Leftarrow$  button, or push the MENU CANCEL/PRST/ESCAPE switch down to the ESCAPE side.

- 4 Turn the MENU knob, or press the  $\uparrow$  or  $\downarrow$  button, to move the cursor to the sub-item that you want to set, and then confirm the selection by pressing the MENU knob or the SET button.

The settings of the selected sub-item appear, and the cursor moves to the currently selected value.

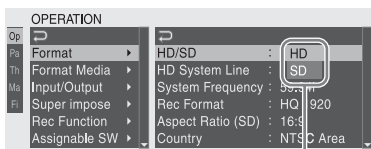

Settings area

- The settings area displays a maximum of seven lines. You can scroll through menus with more than seven sub-items by moving the cursor up and down. Triangles appear at the upper right and lower right of the settings area to indicate that a sub-item menu is scrollable.
- For sub-items with a large settings range (for example, -99 to +99), the settings area is not displayed. Instead, the sub-item name is highlighted to indicate that the sub-item can be set.

- 5 Turn the MENU knob, or press the  $\uparrow$  or  $\downarrow$  button, to select the value to set, and then confirm by pressing the MENU knob or the SET button.

The setting is changed, and the display is updated to show the new setting.

If you select [Execute] for an executable item, the corresponding function is executed.

#### Items that require confirmation before execution

In step 3, the menu disappears and a confirmation message appears if you select an item that requires confirmation before execution. Follow the instructions in the message to execute or cancel the operation.

#### To enter text

Some items, such as time data or file names, must be set by entering text. When you select one of these items, the text entry area is highlighted, with “SET” displayed to the right.

- 1 Turn the MENU knob, or press the  $\uparrow$  or  $\downarrow$  button, to select a character, and then confirm by pressing the MENU knob or the SET button.

The cursor moves to the next position.

To return to the previous position, push the MENU CANCEL/PRST/ESCAPE switch down to the ESCAPE side.

- 2 Select characters for all positions up to the last.

The cursor moves to “SET”.

- 3 Press the MENU knob or the SET button.

This confirms the setting.

#### To cancel the setting change

Push the MENU CANCEL/PRST/ESCAPE switch down to the ESCAPE side.

#### To reset a setting to the initial value

- 1 Before a setting is changed or after a setting change is cancelled, push the MENU CANCEL/PRST/ESCAPE switch up to the CANCEL/PRST side.

- 2 When the message to confirm whether the current setting is reset to the initial value, push the MENU CANCEL/PRST/ESCAPE switch up to the CANCEL/PRST side again.

The current setting is reset to the initial value.

#### To exit the menu

Set the MENU ON/OFF switch to OFF or press the MENU button.

The normal camera picture reappears.

# Menu List

## OPERATION Menu

Settings in bold are the factory default values.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Format</b> Specifies the camcorder's operating mode and recording format.	HD/SD	<b>HD/SD</b>	Switches between HD or SD as the operating mode (execute by selecting Execute).
	HD System Line	<b>1080/720</b>	When the operating mode is HD, sets the number of system lines to 1080 or 720 (execute by selecting Execute).
	System Frequency	The available settings vary depending on the settings in HD/SD, HD System Line, and Country.	Selects the system frequency (execute by selecting Execute).
		<b>59.94i/29.97P/23.98P</b>	When the HD/SD setting is [HD], the HD System Line setting is [1080], and the Country setting is other than [PAL Area].
		<b>59.94P/29.97P/23.98P</b>	When the HD/SD setting is [HD], the HD System Line setting is [720], and the Country setting is other than [PAL Area].
		<b>59.94i/29.97P</b>	When the HD/SD setting is [SD], and the Country setting is other than [PAL Area].
		<b>50i/25P</b>	<ul style="list-style-type: none"><li>When the HD/SD setting is [HD], the HD System Line setting is [1080], and the Country setting is [PAL Area].</li><li>When the HD/SD setting is [SD], and the Country setting is [PAL Area].</li></ul>
		<b>50P/25P</b>	When the HD/SD setting is [HD], the HD System Line setting is [720], and the Country setting is [PAL Area].

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Format</b> Specifies the camcorder's operating mode and recording format.	Rec Format	The available settings vary depending on the settings in HD/SD, HD System Line, and System Frequency.	Selects the recording format (execute by selecting Execute).
		<b>HQ 1920/HQ 1440</b>	When the HD/SD setting is [HD], the HD System Line setting is [1080], and the System Frequency setting is [29.97P] or [25P].
		<b>HQ 1920/HQ 1440/SP 1440</b>	When the HD/SD setting is [HD], the HD System Line setting is [1080], and the System Frequency setting is other than [29.97P] and [25P].
		<b>HQ 1280</b>	When the HD/SD setting is [HD], and the HD System Line setting is [720].
		<b>DVCAM</b>	When the HD/SD setting is [SD].
	Aspect Ratio (SD)	<b>16:9/4:3</b>	Selects the aspect ratio when SD mode (recording format: DVCAM) is selected (execute by selecting Execute).
<b>Format Media</b> Executes a media format.	Country	NTSC Area/NTSC(J) Area/PAL Area	Selects the area of use (execute by selecting Execute).
	Media(A)	Execute/Cancel	Initializes the SxS memory card in slot A (execute by selecting Execute).
	Media(B)	Execute/Cancel	Initializes the SxS memory card in slot B (execute by selecting Execute).

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Input/Output</b> Makes settings related to I/O signals.	Output& i.LINK	<b>HD&amp;HDV/SD&amp;HDV/SD&amp;DV/480P (576P)</b>	Selects the signals output from the video connectors and the i.LINK (HDV/DV) connector. <ul style="list-style-type: none"> <li>When the HD/SD setting is SD, “SD&amp;DV” is selected.</li> <li>On 480P576P, “480P” can be selected when the Country setting is other than “PAL Area”, and “576P” can be selected when the Country setting is “PAL Area”.</li> </ul>
	23.98P Output	<b>PsF/Pull Down</b>	When the video format is HQ 1920/23.98P or HQ 1440/23.98P, selects whether to use progressive output (PsF) or pulldown output (Pull Down).
	Source Select	<b>Camera/i.LINK</b>	Selects whether to use the video camera picture (Camera) or the signal input from the i.LINK (HDV/DV) connector (i.LINK) as the video input source.
	i.LINK I/O	Enable/ <b>Disable</b>	Selects whether to enable or disable input and output of signals via the i.LINK (HDV/DV) connector. When Enable is selected, you can execute auto black balance adjustment during i.LINK output.
	SDI Output	<b>On/Off</b>	Turns on or off the output of signals from the HD/SD SDI OUT connector.
	HDMI Output	<b>On/Off</b>	Turns on or off the output of signals from the HDMI connector.
	SDI/HDMI Out Super	On/ <b>Off</b>	Turns on or off the superimposition of text information on the output of the HD/SD SDI OUT and HDMI connectors.
	Video Out Super	On/ <b>Off</b>	Turns on or off the superimposition of text information on the output of the VIDEO OUT connector.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Input/Output</b> Makes settings related to I/O signals.	Down Converter	Crop/Letter/ <b>Squeeze</b>	<p>Selects the signal conversion mode for output of SD signals.</p> <p><b>Crop:</b> Crop the edges of the 16:9 picture and output as a 4:3 picture.</p> <p><b>Letter:</b> Mask the top and bottom of the 4:3 picture and display in the center of the screen as a 16:9 picture.</p> <p><b>Squeeze:</b> Squeeze the 16:9 picture horizontally and output as a 4:3 picture.</p>
	Wide ID	<b>Through</b> /Auto	<p>Selects whether to add a wide ID signal to the SD output signal.</p> <p><b>Through:</b> Output without adding a wide ID signal.</p> <p><b>Auto:</b> Add and output a wide ID signal when the Down Converter setting is Squeeze.</p>
<b>Super Impose</b> Makes settings related to superimposed text and markers.	Super(VF Display)	<b>On</b> /Off	<p>When the setting of Input/Output &gt;SDI/HDMI Out Super or Video Out Super is On, superimpose text information on the output from the HD/SD SDI OUT connector, HDMI connector, and VIDEO OUT connector, as specified (On or Off) for each item.</p>
	Super(Menu)	<b>On</b> /Off	
	Super(Timecode)	<b>On</b> / <b>Off</b>	
	Super(Marker)	<b>On</b> / <b>Off</b>	<p>When the setting of Input/Output &gt;Video Out Super is On, specifies whether to superimpose markers on the output from the VIDEO OUT connector.</p>
	Super(Rec Status Indicator)	<b>On</b> / <b>Off</b>	<p>Selects whether to superimpose (On) or not impose (Off) the recording status indication on the following two outputs.</p> <ul style="list-style-type: none"> <li>• Output from the VIDEO OUT connector with Input/Output &gt;Video Out Super set to [On]</li> <li>• Output from the SDI connector and the HDMI connector with Input/Output &gt;SDI/HDMI Out Super set to [On]</li> </ul>

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Rec Function</b> Makes settings related to special recording modes.  <b>Note</b> When Picture Cache is assigned to an assignable switch, this item is disabled (displayed in grey).	Slow & Quick	On/Off	Turns the Slow & Quick Motion function on or off. (When this is set to On, the Picture Cache Rec, Interval Rec, and Frame Rec sub-items are set to Off.)
	Frame Rate	The available settings vary depending on the Format >HD System Line setting.  When Format >Country is set to other than [PAL Area]: 1 to <b>30</b> When Format >Country is set to [PAL Area]: 1 to <b>25</b> to 30  When Format >Country is set to other than [PAL Area]: 1 to <b>30</b> to 60 When Format >Country is set to [PAL Area]: 1 to <b>25</b> to 60	When the Slow & Quick setting is On, sets the frame rate for Slow & Quick Motion shooting.  When the HD System Line setting is 1080.  When the HD System Line setting is 720.
	Picture Cache Rec	On/Off	Turns the picture cache function on or off. (When this is set to On, the Slow & Quick, Interval Rec, Frame Rec sub-items are set to Off.)
	P. Cache Rec Time	<b>0-2sec</b> /2-4sec/4-6sec/ 6-8sec/8-10sec/10-12sec/ 12-14sec/13-15sec	When the Picture Cache Rec setting is On, set the picture cache time.
	Interval Rec	On/Off	Turns the Interval Rec function on or off. (When this is set to On, the Slow & Quick, Picture Cache Rec, and Frame Rec sub-items are set to Off.)
	Frame Rec	On/Off	Turns the Frame Rec function on or off. (When this is set to On, the Slow & Quick, Picture Cache Rec, and Interval Rec sub-items are set to Off.)
	Number of Frames	The available settings vary depending on the settings in Format >HD System Line and Format >System Frequency.  <b>2frame</b> /6frame/12frame	When Interval Rec or Frame Rec is set to On, specifies the number of frames to shoot in one Interval Rec or Frame Rec take.  When the HD System Line setting is 720, and the System Frequency setting is 59.94P or 50P.
		<b>1frame</b> /3frame/6frame/ 9frame	When the HD System Line setting is other than 720, or the System Frequency setting is other than 59.94P or 50P.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Rec Function</b> Makes settings related to special recording modes.  <b>Note</b> When Picture Cache is assigned to an assignable switch, this item is disabled (displayed in grey).	Interval Time	1/2/3/4/5/6/7/8/9/10/15/20/30/40/50 (sec) 1/2/3/4/5/6/7/8/9/10/15/20/30/40/50 (min) 1/2/3/4/6/12/24 (hour)	When the Interval Rec setting is On, sets the interval for Interval Rec shooting.
	Pre-Lighting	Off/2sec/5sec/10sec	If you want the video light to be turned on before Interval Rec shooting, select a number of seconds before the start of shooting. If you do not want it to be turned on, select Off.
<b>Assignable SW</b> Assigns functions to assignable switches. <i>See “Assigning Functions to Assignable Switches” (page 138) for more information about assigning functions.</i>	<0>	<i>See page 138.</i>	Assigns function to ASSIGN. 0 switch.
	<1>		Assigns function to ASSIGN. 1 switch.
	<2>		Assigns function to ASSIGN. 2 switch.
	<3>		Assigns function to ASSIGN. 3 switch.
	<4>		Assigns function to ASSIGNABLE 4 switch.
	<5>		Assigns function to ASSIGNABLE 5 switch.
	RET		Assigns function to RET button on the lens.
	C. Temp		Assigns function to COLOR TEMP. button.
	Zoom Speed	0 to <b>20</b> to 99	When Zoom has been assigned to the ASSIGNABLE 4 or 5 switch, specifies the zoom speed.  <b>Note</b> When the lens supplied with the PMW-320K is used, zooming may not operate smoothly if the zoom speed is low.



OPERATION			
Menu items	Sub-item	Settings	Description
<b>VF Setting</b> Makes settings related to the viewfinder screen.	Color	–99 to <b>±0</b> to +99	Adjusts the density of the colors displayed in the viewfinder screen.
	Mode	<b>Color/B&amp;W</b>	Selects Color or B&W as the display mode of the viewfinder screen. (Even when B&W is selected, some indications are always displayed in color. Examples include tally indications, thumbnails, and the skin gate area.)
	Peaking Type	<b>Normal/Color/Both</b>	Selects the peaking type. <b>Normal:</b> Normal peaking <b>Color:</b> Color peaking <b>Both:</b> Both
	Peaking Frequency	<b>Normal/High</b>	Selects Normal or High as the peaking frequency.
	Peaking Color	<b>White/Red/Yellow/Blue</b>	When the Peaking Type setting is Color, selects the peaking color from among White, Red, Yellow, and Blue.
	Peaking Level	Low/ <b>Mid</b> /High	When the Peaking Type setting is Both, selects the color peaking level from among Low, Mid, and High.
	DXF Rec Tally	<b>Upper/Both</b>	When a separately sold viewfinder is installed, specified whether to light the tally indicator on the upper side only (Upper), or on both the upper and lower sides (Both).
<b>Marker</b> Makes settings related to marker display in the viewfinder screen.	Setting	<b>On/Off</b>	Turns all markers on or off.  <b>Note</b> When Marker is assigned to the ASSIGN. 2 switch, this setting is disabled.
	Center Marker	1/2/3/4/ <b>Off</b>	When the center marker is displayed, selects the type. Select Off if you do not want to display the marker.  <b>Note</b> When Safety Zone, User Box, and Guide Frame are set to [On], this setting cannot be turned on.
	Center H Position	–40 to <b>0</b> to 40	Specifies the horizontal position of the center marker.
	Center V Position	–40 to <b>0</b> to 40	Specifies the vertical position of the center marker.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Marker</b> Makes settings related to marker display in the viewfinder screen.	Safety Zone	On/ <b>Off</b>	Turns the safety zone display on or off.  <b>Note</b> When Center Marker, User Box, and Guide Frame are set to [On], this setting cannot be turned on.
	Safety Area	80%/ <b>90%</b> /92.5%/95%	Selects the safety zone range.
	Aspect Marker	Line/Mask/ <b>Off</b>	When an aspect marker is to be displayed, selects the display method. Select Off if you do not want to display the marker. <b>Line:</b> Show as white lines. <b>Mask:</b> Display by lowering the video signal level of areas outside the marker range.
	Aspect Select	15:9/14:9/13:9/ <b>4:3</b> / 1.66:1/1.85:1/2.35:1/ 2.4:1	Selects the aspect ratio of the marker.
	Aspect Mask	0% to <b>30%</b> to 90% (10% step)	When the Aspect Marker setting is Mask, specifies the video signal level of areas outside the marker range as a percentage value relative to the video signal level of areas inside the marker range.
	User Box	On/ <b>Off</b>	Turns the box cursor display on or off.  <b>Note</b> When Center Marker, Safety Zone, and Guide Frame are set to [On], this setting cannot be turned on.
	User Box Width	40 to <b>500</b> to 999	Specifies the box cursor width (distance from the center to the left and right edges).
	User Box Height	70 to <b>500</b> to 999	Specifies the box cursor height (distance from the center to the top and bottom edges).
	User Box H Position	-479 to <b>0</b> to 479	Specifies the horizontal position of the box cursor center.
	User Box V Position	-464 to <b>0</b> to 464	Specifies the vertical position of the box cursor center.
	Guide Frame	On/ <b>Off</b>	Turns display of the guide frame on or off.  <b>Note</b> When Center Marker, Safety Zone, and User Box are set to [On], this setting cannot be turned on.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Gain Switch</b> Makes settings related to the GAIN switch.	Gain Low	–3dB/ <b>0dB</b> /3dB/6dB/9dB/12dB/18dB	Specifies the gain value for the L position of the GAIN switch.
	Gain Mid	–3dB/0dB/3dB/ <b>6dB</b> /9dB/12dB/18dB	Specifies the gain value for the M position of the GAIN switch.
	Gain High	–3dB/0dB/3dB/6dB/9dB/ <b>12dB</b> /18dB	Specifies the gain value for the H position of the GAIN switch.
	Gain Turbo	–3dB/0dB/3dB/6dB/9dB/12dB/18dB/ <b>24dB</b>	Specifies the gain value for the Turbo Gain function, which can be assigned to an assignable switch.
	Shockless Gain	On/ <b>Off</b>	Turns shockless gain (a function that switches smoothly when the gain is switched) on or off.
<b>TLCS</b> Makes settings related to total level control.	Mode	Backlight/ <b>Standard</b> /Spotlight	Selects the auto iris mode used when the TLCS system is activated. <b>Backlight:</b> Backlight mode (lessens the blackout of the main subject that occurs under backlit conditions) <b>Standard:</b> Standard mode <b>Spotlight:</b> Spotlight mode (lessens the whiteout of the main subject that occurs under a spotlight)
	Speed	–99 to <b>±0</b> to +99	Specifies the control speed (speed of reaction to changes in the video) used when the TLCS system is activated. (Larger values specify quicker reaction times.)
	AGC	On/ <b>Off</b>	Turns the AGC (auto gain control) function on or off.
	AGC Limit	3dB/6dB/9dB/ <b>12dB</b> /18dB	Specifies the maximum gain used when AGC is on.
	AGC Point	F5.6/F4/ <b>F2.8</b>	Specifies the F value where control by auto iris switches to control by AGC, used when AGC is on.
	Auto Shutter	On/ <b>Off</b>	Turns the auto shutter function on or off.
	Auto Shutter Limit	1/100 / 1/150 / 1/200 / <b>1/250</b>	Selects the maximum shutter speed used when auto shutter is on.
	Auto Shutter Point	F5.6/F8/F11/ <b>F16</b>	Specifies the F value where control by auto iris switches to control by auto shutter, used when auto shutter is on.
<b>Zebra</b> Makes settings related to zebra displays.	Zebra Select	<b>1/2</b> /BOTH	Selects the zebra pattern type (Zebra1, Zebra2, Both).
	Zebra1 Level	50% to <b>70%</b> to 107%	Specifies the Zebra1 display level.
	Zebra1 Aperture Level	1 to <b>10%</b> to 20%	Specifies the Zebra1 aperture level.
	Zebra2 Level	52% to <b>100%</b> to 109%	Specifies the Zebra2 display level.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Display On/Off</b> Selects the items to display in the viewfinder screen.	Video Level Warnings	<b>On/Off</b>	Turns the warnings that appear when the video level is too bright or too dark on or off.
	Brightness Display	<b>On/Off</b>	Turns the numerical indication of the video brightness on or off.
	Histogram Display	<b>On/Off</b>	Turns the histogram display of video signal levels on or off (in HD mode only).
	Lens Info	<b>Off/Meter/Feet</b>	Selects whether or not to display the depth of field indication and the unit for display of the depth of field. <b>Meter:</b> Displayed in meters <b>Feet:</b> Displayed in feet <b>Off:</b> Do not display
	Focus Position	<b>On/Off</b>	Turns the indication of the lens focus position on or off.
	Zoom Position	<b>On/Off</b>	Turns the indication of the lens zoom position on or off.
	Audio Level Meter	<b>On/Off</b>	Turns the display of the audio level meters on or off.
	Timecode	<b>On/Off</b>	Turns the display of time data (timecode, user bits, counter, duration) on or off.
	Battery Remain	<b>On/Off</b>	Turns the indications of the remaining battery time and input voltage on or off.
	Media Remain	<b>On/Off</b>	Turns the indication of the remaining media capacity on or off.
	TLCS Mode	<b>On/Off</b>	Turns the indication of the TLCS operating mode on or off.
	Focus Mode	<b>On/Off</b>	Turns the indication of the focus operating mode on or off.
	White Balance Mode	<b>On/Off</b>	Turns the indication of the white balance mode on or off.
	Filter Position	<b>On/Off</b>	Turns the indication of the ND filter setting on or off.
	Iris Position	<b>On/Off</b>	Turns the indication of the iris position on or off.
	Gain Setting	<b>On/Off</b>	Turns the indication of the gain setting on or off.
	Shutter Setting	<b>On/Off</b>	Turns the indications of the shutter mode and shutter speed on or off.
	Color Temp	<b>On/Off</b>	Turns the indication of the color temperature on or off.
	Video Format	<b>On/Off</b>	Turns the indication of the video format on or off.
	System Line	<b>On/Off</b>	Turns the indication of the system lines on or off.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Display On/Off</b> Selects the items to display in the viewfinder screen.	Rec Mode	<b>On/Off</b>	Turns the indication of special recording modes (S&Q, Interval, Frame Rec, Picture Cache Rec) on or off.
	Extender	<b>On/Off</b>	Turns the lens extender indication on or off.
	WRR RF Level	<b>On/Off</b>	Turns the indication of the digital wireless receiver reception level on or off.
	Clip Number(PB)	<b>On/Off</b>	Turns the indication of clip information on or off.
<b>Auto Iris</b> Makes settings related to auto iris.	Iris Override	<b>On/Off</b>	Turns iris override (a setting that opens or closes the iris more than normal) on or off.
	Iris Speed	-99 to <b>±0</b> to +99	Specifies the iris control speed (speed of reaction to changes in the video). (Larger values specify quicker reaction times.)
	Clip High light	<b>On/Off</b>	Turns on or off the function that disregards highlights and forces a flatter reaction to high luminance.
	Iris Window	<b>1/2/3/4/5/6/Var</b>	Selects the auto iris detection window type. <b>Var:</b> Variable
	Iris Window Indication	<b>On/Off</b>	Turns the indication of the auto iris detection window frame on or off.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>White Setting</b> Makes settings related to auto white balance adjustments.	White Switch<B>	<b>Memory/ATW</b>	Specifies the operating mode selected by the B position of the WHITE BAL switch. <b>Memory:</b> Auto white balance <b>ATW:</b> Auto tracing white balance
	Shockless White	Off/1/2/3	Specifies the reaction speed when the WHITE BAL switch setting is changed. Off is an instant reaction, and 1 is faster than 2 or 3.
	ATW Speed	1/2/3/4/5	Specifies the reaction speed when the White Switch<B> setting is [ATW]. 1 is the fastest reaction.
	AWB Fixed Area	On/Off	Specifies whether auto white balance is executed at the center of the screen. <b>On:</b> Execute in an area corresponding to 25% of the height and width of the screen. <b>Off:</b> Execute in an area corresponding to 70% of the height and width of the screen.
	Filter White Memory	On/Off	Specifies whether to allocate a white balance memory area for each FILTER knob position. <b>On:</b> Allocation a white balance memory area for each FILTER knob position. <b>Off:</b> Use A/B memory regardless of the filter position.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Offset White</b> Makes settings related to white balance offset values.	Offset White <A>	On/Off	Specifies whether to add (On) or not to add (Off) an offset value to the white balance value in memory A.
	Warm Cool <A>	Approximate color temperature	When the setting of Offset White<A> is [On], specifies (as a color temperature) the offset to add to the white balance value in memory A. (Note that the error range becomes larger for higher offset color temperatures. Adjust while viewing the actual video.)
	Warm Cool Balance<A>	-99 to $\pm 0$ to +99	Specifies a more precise color temperature, for use when satisfactory video cannot be obtained with the Warm Cool <A> setting.
	Offset White <B>	On/Off	When this is set to [On], the offset adjusted set with this item is added to the white balance of channel B.
	Warm Cool <B>	Approximate color temperature	When the setting of Offset White<B> is [On], specifies (as a color temperature) the offset to add to the white balance value in memory B. (Note that the error range becomes larger for higher offset color temperatures. Adjust while viewing the actual video.)
	Warm Cool Balance<B>	-99 to $\pm 0$ to +99	Specifies a more precise color temperature, for use when satisfactory video cannot be obtained with the Warm Cool <B> setting.
	Offset White <ATW>	On/Off	When this item is set to [On], the offset value adjusted here is added to the ATW white balance value.
	Warm Cool <ATW>	Display adjustment guide color temperature	When Offset White <ATW> is [On], use color temperature to set an offset value to add to the ATW white balance value (the higher the offset color temperature, the greater the error, so make adjustment while observing the video).
<b>Shutter Select</b> Makes settings related to shutter speed selection.	Shutter Select	Second/Degree	Specifies the unit used to select shutter speeds. <b>Second:</b> Select in units of seconds. <b>Degree:</b> Select in units of degrees.
<b>Time Zone</b> Specifies the time zone.	Zone	-12:00 to +0:00 to +14:00 (in steps of 30 minutes)	Specifies a difference from UTC (Greenwich Mean Time) in units of 30 minutes.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Clip</b> Make settings for clip name or clip management.  <div>Note</div> Do not assign clip names that begin with the “.” (period) symbol. Clips with names in which the first character is “.” cannot be viewed on the application software for computers.	Auto Naming	Title/ <b>Plan</b>	Selects the clip naming format.  <b>Title:</b> Name specified by Title Prefix <b>Plan:</b> Name specified in planning metadata (if no name is specified in planning metadata, the name specified by Title Prefix is selected.)



OPERATION			
Menu items	Sub-item	Settings	Description
<b>Clip</b>	Title Prefix	Text input	Specifies the title part (4 to 46 alphanumeric characters) of clip titles.
Make settings for clip name or clip management.			When the currently specified title is eight characters or fewer in length, the entire title appears. When the title is longer than eight characters, the first seven characters appear and a “...” symbol appears in place of the eighth character.
<b>Note</b>			Displays the Character Set screen.
Do not assign clip names that begin with the “.” (period) symbol.			<b>Character Set screen configuration</b>
Clips with names in which the first character is “.” cannot be viewed on the application software for computers.			<ul style="list-style-type: none"> <li>Character selection area (three lines)</li> </ul>
			Select the character to insert at the title prefix cursor position.
			!#\$%()+,-.:@[^\_~0123456789
			abcdefghijklmnopqrstuvwxyz
			ABCDEFGHIJKLMNOPQRSTUVWXYZ
			WXYZ
			<ul style="list-style-type: none"> <li>Cursor operation area (one line)</li> </ul>
			<b>Space:</b> Changes the character at the cursor position to a space
			<b>INS:</b> Inserts a space at the cursor position
			<b>DEL:</b> Deletes the character at the cursor position
			←: Moves the cursor to the left
			→: Moves the cursor to the right
			<b>ESC:</b> Cancels the change and return to the normal menu
			<b>END:</b> Executes the change and return to the normal menu
			<ul style="list-style-type: none"> <li>Title prefix area (one line)</li> </ul>
			An area to enter the title
			<b>To set titles</b>
			1 Turn the MENU knob or press the arrow buttons to select a character, highlighting it, in the character selection area, and then press the MENU knob or the SET button to insert it at the cursor position in the title prefix area. (The cursor moves to the right.)
			2 Repeat step 1 to add more characters to the title (using Space, INS, and DEL as required).
			3 When you have finished entering the title, select END to close the Character Set screen.

OPERATION			
Menu items	Sub-item	Settings	Description
<b>Clip</b> Make settings for clip name or clip management.  <b>Note</b> Do not assign clip names that begin with the “.” (period) symbol. Clips with names in which the first character is “.” cannot be viewed on the application software for computers.	Number Set	<b>0001</b> to 9999	Specifies the initial value of the numeric part (four digits) of clip names (unless the name specified in planning metadata with Auto Naming set to [Plan]).
	Name Display	Off/ <b>On</b>	Selects whether to display the name of the next clips to be recorded in E-E mode (On) or not (Off).
	Update	Media<A>/Media<B>	Updates the management files on the media in the selected slot (execute by selecting Execute).
<b>Plan.Metadata</b> Makes settings for operating planning metadata.	Load/Slot(A)	Execute/Cancel	Executes load of planning metadata from the SxS memory card in slot A. Select [Execute] to show the list of the planning metadata files stored in the slot A SxS memory card and select a file to execute the load.
	Load/Slot(B)	Execute/Cancel	Executes load of planning metadata from the SxS memory card in slot B. Select [Execute] to show the list of the planning metadata files stored in the slot B SxS memory card and select a file to execute the load.
	Properties	Execute/Cancel	Displays the detailed information in the planning metadata loaded on the camcorder (execute by selecting [Execute]).
	Clear	Execute/Cancel	Clears the planning metadata loaded on the camcorder (execute by selecting [Execute]).
	Clip Name Disp	<b>Title1(ASCII)</b> Title2(UTF-8)	Selects the display mode of the clip name specified in planning metadata ( <i>see page 81</i> ).

## PAINT Menu

Settings in bold are the factory default values.

PAINT			
Menu items	Sub-item	Settings	Description
<b>Switch Status</b> Turns various signal correction functions and a test signal on or off.	Gamma	<b>On/Off</b>	Turns gamma correction on or off.
	Black Gamma	<b>On/Off</b>	Turns black gamma correction on or off.
	Matrix	<b>On/Off</b>	Turns linear matrix correction and user matrix correction on or off.
	Knee	<b>On/Off</b>	Turns knee correction on or off.
	White Clip	<b>On/Off</b>	Turns white clip correction on or off.
	Detail	<b>On/Off</b>	Turns detail correction on or off.
	Aperture	<b>On/Off</b>	Turns aperture correction on or off.
	Flare	<b>On/Off</b>	Turns flare correction on or off.
<b>White</b> Sets the color temperature, and performs manual white balance adjustment.	Test Saw	<b>On/Off</b>	Turns the test saw signal on or off.
	Color Temp <A>	1500K to <b>3200K</b> to 50000K (reference values)	Displays the white balance color temperature saved in memory A.
	Color Temp BAL <A>	-99 to <b>±0</b> to +99	Specifies the white balance gain values saved in memory A (linked R gain and B gain).
	R Gain <A>	-99 to <b>±0</b> to +99	Specifies the white balance R gain value saved in memory A.
	B Gain <A>	-99 to <b>±0</b> to +99	Specifies the white balance B gain value saved in memory A.
	Color Temp <B>	1500K to <b>3200K</b> to 50000K (reference values)	Displays the white balance color temperature saved in memory B.
	Color Temp BAL <B>	-99 to <b>±0</b> to +99	Specifies the white balance gain values saved in memory B (linked R gain and B gain).
	R Gain <B>	-99 to <b>±0</b> to +99	Specifies the white balance R gain value saved in memory B.
<b>Black</b> Specifies the black level (level of the unilluminated parts of the video). You can achieve a desired look by adjusting the black level for deeper or shallower blacks.	B Gain <B>	-99 to <b>±0</b> to +99	Specifies the white balance B gain value saved in memory B.
	Master Black	-99 to <b>±0</b> to +99	Specifies the master black level.
	R Black	-99 to <b>±0</b> to +99	Specifies the R black level.
	B Black	-99 to <b>±0</b> to +99	Specifies the B black level.

PAINT			
Menu items	Sub-item	Settings	Description
<b>Flare</b> Makes settings related to flare. Flare is light generated from a bright image region that spreads broadly across the image, adding light to dark regions and reducing contrast. It is caused by reflection inside the lens system.	Flare	<b>On/Off</b>	Turns flare correction on or off.
	Master Flare	–99 to <b>±0</b> to +99	Sets the master flare correction level.
	R Flare	–99 to <b>±0</b> to +99	Sets the R flare correction level.
	G Flare	–99 to <b>±0</b> to +99	Sets the G flare correction level.
	B Flare	–99 to <b>±0</b> to +99	Sets the B flare correction level.
<b>Gamma</b> Makes settings related to gamma. Gamma correction allows you to significantly alter the impression made by the video by adjusting the contrast.	Gamma	<b>On/Off</b>	Turns gamma correction on or off.
	Step Gamma	0.35 to <b>0.45</b> to 0.90 (0.05 step)	Specifies a gamma correction value in steps of 0.05
	Master Gamma	–99 to <b>±0</b> to +99	Specifies the master gamma level.
	R Gamma	–99 to <b>±0</b> to +99	Specifies the R gamma level.
	G Gamma	–99 to <b>±0</b> to +99	Specifies the G gamma level.
	B Gamma	–99 to <b>±0</b> to +99	Specifies the B gamma level.
	Gamma Select	The available settings vary depending on the setting in Gamma Category (see “Description”).	Select the gamma table to use in gamma correction. <b>When Gamma Category is STD:</b> <b>1 DVW:</b> DVW camcorder equivalent <b>2 ×4.5:</b> ×4.5 gain <b>3 ×3.5:</b> ×3.5 gain <b>4 240M:</b> SMPTE-240M equivalent <b>5 R709:</b> ITU-R709 equivalent (default setting) <b>6 ×5.0:</b> ×5.0 gain <b>When Gamma Category is HG:</b> <b>1 3250:</b> Condense 325% video input to 100% video output <b>2 4600:</b> Condense 460% video input to 100% video output <b>3 3259:</b> Condense 325% video input to 109% video output <b>4 4609:</b> Condense 460% video input to 109% video output (default setting)
	Gamma Category	<b>STD/HG</b>	Selects use of standard gamma (STD) or HyperGamma (HG).
<b>Black Gamma</b> Makes settings related to black gamma correction. Black gamma correction allows you to reproduce gradations and color nuances in black or near-black (dark) parts of the picture.	Black Gamma	<b>On/Off</b>	Turns black gamma correction on or off.
	Gamma Level	–99 to <b>±0</b> to +99	Specifies the master black gamma level.
	Range	Low/L Mid/H.Mid/ <b>High</b>	Selects the black gamma correction effective range. <b>LOW:</b> 0 to 3.6% <b>L.MID:</b> 0 to 7.2% <b>H MID:</b> 0 to 14.4% <b>HIGH:</b> 0 to 28.8%

PAINT			
Menu items	Sub-item	Settings	Description
<b>Knee</b> Makes settings related to knee correction. Knee correction is processing that prevents washout by compressing the bright parts of the video according to an upper limit for the dynamic range of the recorded and output picture. The signal level where knee processing begins is called the “knee point”, and the slope of knee compression is called the “knee slope”.	Knee	<b>On/Off</b>	Turns knee correction on or off.
	Knee Point	50.0% to <b>90.0%</b> to 109.0%	Specifies the knee point.
	Knee Slope	–99 to <b>±0</b> to +99	Specifies the knee slope.
	Knee Saturation	<b>On/Off</b>	Turns the knee saturation function on or off.
	Knee Saturation Level	–99 to <b>±0</b> to +99	Specifies the knee saturation level.
<b>White Clip</b> Makes settings related to white clipping adjustments. White clipping is processing that limits the maximum level of video output signals. The maximum video signal output value is called the “white clip level”.	White Clip	<b>On/Off</b>	Turns white clipping adjustment on or off.
	Level	90.0% to <b>109.0%</b>	Specifies the white clip level.

PAINT			
Menu items	Sub-item	Settings	Description
<b>Detail(HD Mode)/ Detail(SD Mode)</b> Makes settings related to details adjustments in HD mode and SD mode. Detail adjustment is processing that improves the clarity of the video by adding detail signals to the edges of the subject.	Detail	<b>On/Off</b>	Turns detail adjustment on or off.
	Level	–99 to <b>±0</b> to +99	Specifies the detail level.
	H/V Ratio	–99 to <b>±0</b> to +99	Specifies the mix ratio between the H detail level and the V detail level.
	Crispening	–99 to <b>±0</b> to +99	Specifies the crispening level.
	Level Depend	<b>On/Off</b>	Turns the level depend adjustment function on or off.
	Level Depend Level	–99 to <b>±0</b> to +99	Specifies the level depend level.
	Frequency	–99 to <b>±0</b> to +99	Specifies the central frequency for H detail signals. Larger values give finer details.
	Knee Aperture	<b>On/Off</b>	Turns the knee aperture function on or off.
	Knee Aperture Level	–99 to <b>±0</b> to +99	Specifies the knee aperture level.
	Limit	–99 to <b>±0</b> to +99	Specifies the detail limiter values for both the white-side and black-side direction.
	White Limit	–99 to <b>±0</b> to +99	Specifies the white-side detail limiter value.
	Black Limit	–99 to <b>±0</b> to +99	Specifies the black-side detail limiter value.
	V-BLK Limit	–99 to <b>±0</b> to +99	Specifies the black-side V detail limiter value.
	V Detail Creation	NAM/G/R+G/Y	Selects the source signal used to generate the V detail signal. <b>NAM:</b> A V detail signal created from the R signal, or a V detail signal created from the G signal, or a V detail signal created from the B signal, whichever is the signal with the highest level <b>G:</b> G signal <b>G+R:</b> Composite signal comprising the G signal and R signal in a 1:1 ratio <b>Y:</b> Y signal
<b>Aperture</b> Makes settings related to aperture correction. Aperture correction is processing to improve resolution by adding high-frequency aperture signals to the video signal, which corrects degeneration due to high-frequency characteristics.	Aperture	<b>On/Off</b>	Turns aperture correction on or off.
	Level	–99 to <b>±0</b> to +99	Sets the aperture level.

PAINT			
Menu items	Sub-item	Settings	Description
<b>Skin Detail</b> Makes settings related to skin detail correction. Skin detail correction is processing that increases or decreases the detail level of a specified color range (skin tone range), for the purpose of obtaining attractive reproduction of skin tones.	Skin Detail	On/Off	Turns skin detail correction on or off.
	Area Detection	Color detection screen	Detects the color to be targeted by skin detail correction.
	Area Indication	On/Off	Turns on or off the function that displays a zebra pattern in the area targeted by skin detail correction.
	Level	-99 to $\pm 0$ to +99	Specifies the skin detail level.
	Saturation	-99 to $\pm 0$ to +99	Specifies the saturation of the color targeted by skin detail correction.
	Hue	0 to 359	Specifies the hue of the color targeted by skin detail correction.
	Width	0 to 40 to 90	Specifies a range for the hue of the color targeted by skin detail correction.
<b>Matrix</b> Makes settings related to matrix correction. Matrix correction allows you to adjust the color and vividness of the video. Depending on the effect you want, you can select one from among a number of preset matrixes, which define different parameter sets. Or you can select a user matrix with your own parameters.	Matrix	On/Off	Turns the matrix correction function on or off.
	Preset Matrix	On/Off	Turns the preset matrix function on or off.
	Preset Select	1/2/3/4/5/6	Selects a preset matrix. <b>1:</b> SMPTE-240M equivalent <b>2:</b> ITU-709 equivalent <b>3:</b> SMPTE WIDE equivalent <b>4:</b> SD equivalent <b>5:</b> EBU equivalent <b>6:</b> Standard
	User Matrix	On/Off	Turns the user matrix function on or off.
	User Matrix R-G	-99 to $\pm 0$ to +99	Specifies a freely defined R-G user matrix.
	User Matrix R-B	-99 to $\pm 0$ to +99	Specifies a freely defined R-B user matrix.
	User Matrix G-R	-99 to $\pm 0$ to +99	Specifies a freely defined G-R user matrix.
	User Matrix G-B	-99 to $\pm 0$ to +99	Specifies a freely defined G-B user matrix.
	User Matrix B-R	-99 to $\pm 0$ to +99	Specifies a freely defined B-R user matrix.
	User Matrix B-G	-99 to $\pm 0$ to +99	Specifies a freely defined B-G user matrix.

PAINT			
Menu items	Sub-item	Settings	Description
<b>Multi Matrix</b> Makes settings related to multi matrix correction. Multi-matrix correction allows specific colors to be selected for saturation correction in a 16-axis hue space.	Multi Matrix	On/Off	Turns the multi matrix correction function on or off.
	Area Indication	On/Off	Turns on or off the function that displays a zebra pattern in the color area targeted by multi matrix correction.
	Color Detection	Color detection screen	Detects colors targeted by multi matrix correction.
	Axis	B/B+/MG-/MG/MG+/R/R+/YL-/YL/YL+/G-/G/G+/CY/CY+/B-	Specifies a color targeted by multi matrix correction (16-axis mode)
	Hue	-99 to $\pm 0$ to +99	Specifies the hue of the color targeted by multi matrix correction for each 16-axis mode.
	Saturation	-99 to $\pm 0$ to +99	Specifies the saturation of the color targeted by multi matrix correction for each 16-axis mode.
<b>V Modulation</b> Makes settings related to V modulation shading. V modulation shading corrects vertical imbalances in sensitivity arising from the relationship between a lens and prism.	V Modulation	On/Off	Turns V modulation shading on or off.
	Master V Modulation	-99 to $\pm 0$ to +99	Specifies the master V modulation level.
	R V Modulation	-99 to $\pm 0$ to +99	Specifies the V modulation level of R signals.
	G V Modulation	-99 to $\pm 0$ to +99	Specifies the V modulation level of G signals.
	B V Modulation	-99 to $\pm 0$ to +99	Specifies the V modulation level of B signals.
<b>Low Key Sat.</b> Makes settings related to low key saturation correction. You can correct the saturation of colors in dark parts of the video only.	Low Key Saturation	On/Off	Turns low key saturation correction on or off.
	Level	-99 to $\pm 0$ to +99	Specifies the saturation of colors in low luminance areas.
	Range	Low/L Mid/H.Mid/High	Specifies the luminance level for which low key saturation is enabled.



## MAINTENANCE Menu

Settings in bold are the factory default values.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>White Shading</b> Makes settings related to white shading. White shading is required for each different lens to correct irregularities arising from lens characteristics. It corrects luminance and color irregularities in bright areas.	Channel Select	<b>Red</b> /Green/Blue	Selects the target of white shading correction.
	R/G/B White H Saw	–99 to <b>±0</b> to +99	Specifies a SAW white shading correction value for the horizontal direction.
	R/G/B White H Para	–99 to <b>±0</b> to +99	Specifies a parabola white shading correction value for the horizontal direction.
	R/G/B White V Saw	–99 to <b>±0</b> to +99	Specifies a SAW white shading correction value for the vertical direction.
	R/G/B White V Para	–99 to <b>±0</b> to +99	Specifies a parabola white shading correction value for the vertical direction.
	White Saw/Para	<b>On</b> /Off	Turns the white shading SAW and parabola correction functions on or off.
<b>Battery</b> Makes settings related to batteries.	Info Before End	<b>5%</b> /10%/15%...95%/100%	Specifies a threshold value that triggers a “Battery Near End” warning when a BP-GL95A battery pack is used.
	Info End	<b>0%</b> /1%/2%/3%/4%/5%	Specifies a threshold value that triggers a “Battery End” warning when a BP-GL95A battery pack is used.
	Sony Before End	<b>11.5V</b> to 17V (0.1V step)	Specifies a threshold value that triggers a “Battery Near End” warning when a BP-L60S/L80S battery pack is used.
	Sony End	<b>11.0V</b> to 11.5V (0.1V step)	Specifies a threshold value that triggers a “Battery End” warning when a BP-L60S/L80S battery pack is used.
	Other Before End	11.5V to <b>11.8V</b> to 17.0V (0.1V step)	Specifies a threshold value that triggers a “Battery Near End” warning when a non-Sony battery pack is used.
	Other End	<b>11.0V</b> to 14.0V (0.1V step)	Specifies a threshold value that triggers a “Battery End” warning when a non-Sony battery pack is used.
	DC In Before End	11.5V to <b>11.8V</b> to 17.0V (0.1V step)	Specifies a threshold value that triggers a “Battery Near End” warning when an external power source is connected to the DC IN connector.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Battery</b> Makes settings related to batteries.	DC In End	<b>11.0V</b> to 14.0V (0.1V step)	Specifies a threshold value that triggers a “Battery End” warning when an external power source is connected to the DC IN connector.
	Detected Battery	Info/Sony/Other/DC IN	Displays the results of automatic battery pack type detection.
	Type Detection	<b>Auto</b> /Other	<b>Auto:</b> Detect the battery type automatically. <b>Other:</b> Fix battery type detection as “Other”.
	Segment No.10	11.0V to <b>17.0V</b> (0.1V step)	Specify voltage threshold values that cause remaining capacity segments to go off in the display of remaining battery capacity ( <i>see page 31</i> ). (The segments go off below the specified value.)
	Segment No.9	11.0V to <b>16.0V</b> to 17.0V (0.1V step)	
	Segment No.8	11.0V to <b>15.0V</b> to 17.0V (0.1V step)	
	Segment No.7	11.0V to <b>14.0V</b> to 17.0V (0.1V step)	These values are used when the battery type has been found to be “Other”.
	Segment No.6	11.0V to <b>13.5V</b> to 17.0V (0.1V step)	
	Segment No.5	11.0V to <b>13.0V</b> to 17.0V (0.1V step)	
	Segment No.4	11.0V to <b>12.5V</b> to 17.0V (0.1V step)	
	Segment No.3	11.0V to <b>12.0V</b> to 17.0V (0.1V step)	
	Segment No.2	11.0V to <b>11.5V</b> to 17.0V (0.1V step)	
	Segment No.1	<b>11.0V</b> to 17.0V (0.1V step)	

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Audio</b> Makes settings related to audio.	Front MIC Select	Mono/ <b>Stereo</b>	Selects whether the front microphone is monaural (Mono) or stereo (Stereo).
	Audio CH3/4 Mode	Ch1/2 / <b>Switch</b>	Selects the input signals for the AUDIO IN CH3/CH4 connectors. <b>Ch1/2:</b> The same signals as the AUDIO IN CH1/ CH2 connectors. <b>Switch:</b> The signals selected with the AUDIO IN CH3/CH4 switches.
	Front MIC CH1 Ref	-70dB/-60dB/- <b>50dB</b> / -40dB/-30dB/-20dB	Selects the reference level for channel 1 of the front microphone.
	Front MIC CH2 Ref	-70dB/-60dB/- <b>50dB</b> / -40dB/-30dB/-20dB	Selects the reference level for channel 2 of the front microphone.
	Rear MIC CH1 Ref	-70dB/- <b>60dB</b> -50dB/ -40dB/-30dB/-20dB	Selects the reference input level when the setting of the AUDIO IN CH1 switch is MIC.
	Rear MIC CH2 Ref	-70dB/- <b>60dB</b> -50dB/ -40dB/-30dB/-20dB	Selects the reference input level when the setting of the AUDIO IN CH2 switch is MIC.
	Line Input Ref	<b>+4dB</b> /0dB/-3dB/EBUL	Selects the reference input level when the AUDIO IN CH1 and AUDIO IN CH2 switches are set to LINE.
	Min Alarm Volume	<b>Off</b> /Set	Selects the volume when the ALARM knob is turned all the way down. <b>Off:</b> Almost inaudible <b>Set:</b> Fairly audible
	Speaker Attenuate	<b>Off</b> /3dB/6dB/9dB/12dB	Selects the volume from the monitor speaker (does not affect earphone volume).
	Headphone Out	<b>Mono</b> /Stereo	Selects whether the earphones are monaural (Mono) or stereo (Stereo).
	Reference Level	- <b>20dB</b> /-18dB/-16dB/ -12dB/EBUL	Selects the output level of the 1 kHz test signal.
	Reference Out	<b>0dB</b> /+4dB/-3dB/EBUL	Specifies the output level with respect to the reference input level.
	CH1&2 AGC Mode	<b>Mono</b> /Stereo	For automatic adjustment of the input level of analog audio signals recorded on channels 1 and 2, specifies whether to make the adjustments separately for each channel (Mono) or in stereo mode (Stereo).

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Audio</b> Makes settings related to audio.	CH3&4 AGC Mode	<b>Mono</b> /Stereo	For automatic adjustment of the input level of analog audio signals recorded on channels 3 and 4, specifies whether to make the adjustments separately for each channel ( <b>Mono</b> ) or in stereo mode ( <b>Stereo</b> ).
	AGC Spec	<b>-6dB</b> /-9dB/-12dB/-15dB/-17dB	Selects the AGC saturation level.
	Limiter Mode	<b>Off</b> /-6dB/-9dB/-12dB/-15dB/-17dB	For manual audio level adjustments, selects the saturation level for the limiter applied to loud input signals. Select <b>Off</b> if you do not wish to use the limiter.
	Output Limiter	On/ <b>Off</b>	Turns the audio output limiter on or off.
	CH1 Wind Filter	On/ <b>Off</b>	Turns the channel 1 wind filter on or off.
	CH2 Wind Filter	On/ <b>Off</b>	Turns the channel 2 wind filter on or off.
	CH3 Wind Filter	On/ <b>Off</b>	Turns the channel 3 wind filter on or off.
	CH4 Wind Filter	On/ <b>Off</b>	Turns the channel 4 wind filter on or off.
	Audio SG (1KHz)	On/ <b>Off</b> /Auto	Selects whether to output ( <b>On</b> ) or not output ( <b>Off</b> ) a 1 kHz test signal in color bar mode. <b>Auto</b> : Output a test signal only when the AUDIO SELECT CH1 switch is set to <b>AUTO</b> .
	MIC CH1 Level	Side1/ <b>Front</b> /Front+Side1	For recording input audio from the front microphone on channel 1, selects the knob that adjusts the audio level. <b>Side1</b> : The LEVEL knob (left) on the side panel <b>Front</b> : The MIC LEVEL control on the front panel <b>Front+Side1</b> : Adjust with both the LEVEL knob (left) and the MIC LEVEL control.
	MIC CH2 Level	Side2/ <b>Front</b> /Front+Side2	For recording input audio from the front microphone on channel 2, selects the knob that adjusts the audio level. <b>Side2</b> : The LEVEL knob (right) on the side panel <b>Front</b> : The MIC LEVEL control on the front panel <b>Front+Side2</b> : Adjust with both the LEVEL knob (right) and the MIC LEVEL control.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Audio</b> Makes settings related to audio.	Rear1/WRR Level	<b>Side1</b> /Front/Front+Side1	<p>Selects the knob that adjusts the audio levels of a wireless microphone and a device connected to the AUDIO IN CH1 connector on the rear panel.</p> <p><b>Side1:</b> The LEVEL knob (left) on the side panel</p> <p><b>Front:</b> The MIC LEVEL control on the front panel</p> <p><b>Front+Side1:</b> Adjust with both the LEVEL knob (left) and the MIC LEVEL control.</p>
	Rear2/WRR Level	<b>Side2</b> /Front/Front+Side2	<p>Selects the knob that adjusts the audio levels of a wireless microphone and a device connected to the AUDIO IN CH2 connector on the rear panel.</p> <p><b>Side2:</b> The LEVEL knob (right) on the side panel</p> <p><b>Front:</b> The MIC LEVEL control on the front panel</p> <p><b>Front+Side2:</b> Adjust with both the LEVEL knob (right) and the MIC LEVEL control.</p>
	Audio CH3 Level	<b>Side3</b> /Front/Front+Side3	<p>Selects the knob that adjusts the level of audio recorded on channel 3.</p> <p><b>Side3:</b> The LEVEL knob on side panel</p> <p><b>Front:</b> The MIC LEVEL control on the front panel</p> <p><b>Front+Side3:</b> Adjust with both the LEVEL knob and the MIC LEVEL control.</p>
	Audio CH4 Level	<b>Side4</b> /Front/Front+Side4	<p>Selects the knob that adjusts the level of audio recorded on channel 4.</p> <p><b>Side4:</b> The LEVEL knob on side panel</p> <p><b>Front:</b> The MIC LEVEL control on the front panel</p> <p><b>Front+Side4:</b> Adjust with both the LEVEL knob and the MIC LEVEL control.</p>

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>WRR Setting</b> Makes settings related to the wireless tuner.	WRR Valid CH Sel	All/CH1	Selects whether to enable channels 1 and 2 of the wireless receiver (All) or channel 1 only (CH1).
	WRR CH Select	TX1/TX2	Specifies the target channel for other sub-items. <b>TX1:</b> Channel 1 <b>TX2:</b> Channel 2
	WRR Delay Comp	On/Off	Enables (On) or disables (Off) delay compensation for wireless audio input. (When On is selected, the audio in all E-E output is delayed by about 8 ms.)
	TX	---	Displays the name of the transmitter whose signals are being received on the channel selected by WRR CH SELECT.
	TX Audio Peak	---/Peak	Displays whether the AF level of the transmitter whose signals are being received on the channel selected by WRR CH SELECT are over peak.
	TX Input Level	---/Mic/Line	Displays whether the input level of the transmitter whose signals are being received on the channel selected by WRR CH SELECT is set to microphone (Mic) or line (Line).
	TX ATT Level	---	Sets the ATT level of the transmitter whose signals are being received on the channel selected by WRR CH SELECT. (The setting range varies depending on the transmitter.)
	TX LCF Freq	---	Sets the low cut filter frequency of the transmitter whose signals are being received on the channel selected by WRR CH SELECT. (The setting range varies depending on the transmitter.)
	TX System Delay	Auto/0.0ms to 8.0ms	Specifies the amount of audio delay. <b>Auto:</b> Automatically adjusts the amount of delay so that the delay in the audio received from the wireless transmitter is zero. <b>0.0ms to 8.0ms:</b> Sets the amount of anticipated wireless system delay, for cases in which several wireless systems are being used over a devices such as an audio mixer.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Timecode</b> Makes settings related to timecode.	TC Out	<b>Auto/Generator</b>	Selects the source for timecode output. <b>Auto:</b> During recording, output values generated by the timecode generator, and during playback output values obtained by the timecode reader. <b>Generator:</b> Output values generated by the timecode generator during both recording and playback.
	DF/NDF	<b>DF/NDF</b>	When the Country setting is other than [PAL Area], selects drop-frame mode (DF) or non-drop-frame mode (NDF).
	LTC UBIT	<b>Fix/Time</b>	Specifies the data recorded in LTC user bits. <b>Fix:</b> Record user-specified data. <b>Time:</b> Record the current time.
	Counter Display	<b>Counter/Duration</b>	Select the method used to reset the counter value displayed on the viewfinder screen. <b>Counter:</b> Continue to increment until the RESET button is pressed. <b>Duration:</b> Reset each time that recording is started.
<b>Essence Mark</b> Makes settings related to shot marks and clip index picture thumbnails.	Ret Shot Mark 1	<b>On/Off</b>	Specify whether to input Shot Mark1 marks using the RET button on the lens.
	Ret Shot Mark 2	<b>On/Off</b>	Specify whether to input Shot Mark2 marks using the RET button on the lens.
<b>Camera Config</b> Makes settings related to various camcorder operations.	Rec Tally Blink	<b>On/Off</b>	Turns warning flashes by the TALLY indicator on or off. The warnings alert you an almost exhausted battery pack or low remaining media capacity.
	Rec Review	<b>3sec/10sec/Clip</b>	Selects the recording review time. <b>Clip:</b> Review all of the most recently recorded clip.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Camera Config</b> Makes settings related to various camcorder operations.	HD SDI Remote I/F	<b>Off</b> /Chara/G-Tally/ R-Tally	<p>Selects whether to use the function that enables recording control from this camcorder or an external device connected to the HD/SD SDI OUT connector (HDSDI output). When the function is used, also selects the indication that shows whether the external device is recording.</p> <p><b>Off:</b> Do not use the remote recording control function.</p> <p><b>Chara:</b> Indicate by the external device control indication on the viewfinder screen.</p> <p><b>G-Tally:</b> Indicate by the green tally indicator control the viewfinder (green tally).</p> <p><b>R-Tally:</b> Indicates by the recording mode/operation status indication on the viewfinder screen.</p>
	Color Bars Select	<b>ARIB</b> /100%/75%/SMPTE	Selects the color bar type.
	RM Common Memory	<b>On</b> /Off	Selects whether to share (On) or not share (Off) settings between times when a remote control unit is connected and times when the camcorder is used locally.
	RM Rec Start	<b>RM</b> /CAM/PARA	<p>For times when a remote control unit is connected, selects whether recording start/stop buttons are enabled on the camcorder or the remote control unit.</p> <p><b>RM:</b> Remote control unit</p> <p><b>CAM:</b> Camcorder</p> <p><b>PARA:</b> Both</p>
	Image Invert	On/ <b>Off</b>	Turns the function that inverts images vertically on or off.
	Rec Start/Stop Beep	On/ <b>Off</b>	<p>Specifies whether to generate (On) or not generate (Off) a beep alarm when recording starts/stops.</p> <p>With this item set to [On], a single beep sounds when recording starts and a double beep sounds when recording stops.</p>
	Rec Status Indicator	On/ <b>Off</b>	Specifies whether to display the recording status indicator in the viewfinder.




MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Preset White</b> Makes settings related to white balance preset values.	Color Temp<P>	1500K to <b>3200K</b> to 50000K (reference values)	Specifies the white balance preset value.
	Color Temp Balance<P>	-99 to <b>±0</b> to +99	Specifies finer color temperature settings, for use when satisfactory video cannot be obtained with Color Temp<P>.
	R Gain <P>	-99 to <b>±0</b> to +99	Specifies the R gain preset value.
	B Gain <P>	-99 to <b>±0</b> to +99	Specifies the B gain preset value.
	AWB Enable <P>	On/ <b>Off</b>	Turns on and off execution of the AWB (auto white balance) function when the WHITE BAL switch is set to PRST.
<b>White Filter</b> Makes settings related to filters.	ND Filter C.Temp	On/ <b>Off</b>	Turns the function that assigns electrical CC filters to ND filters on or off.
	ND FLT C.Temp<1>	<b>3200K</b> /4300K/5600K/6300K	Selects the color temperature for when electrical CC filters are assigned to ND filters.
	ND FLT C.Temp<2-4>	3200K/4300K/ <b>5600K</b> /6300K	Selects the color temperature for when electrical CC filters are assigned to ND filters.
	Electrical CC<A>	<b>3200K</b> /4300K/5600K/6300K	Selects the color temperature for when the electrical CC filter switching function is assigned to an assignable switch.
	Electrical CC<B>	3200K/ <b>4300K</b> /5600K/6300K	Selects the color temperature for when the electrical CC filter switching function is assigned to an assignable switch.
	Electrical CC<C>	3200K/4300K/ <b>5600K</b> /6300K/----	Selects the color temperature for when the electrical CC filter switching function is assigned to an assignable switch. Select "----" if you do not want to use C.
	Electrical CC<D>	3200K/4300K/5600K/ <b>6300K</b> /----	Selects the color temperature for when the electrical CC filter switching function is assigned to an assignable switch. Select "----" if you do not want to use D.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Auto Iris2</b> Makes settings related to auto iris.	Iris Window	1/2/3/4/5/6/Var	Selects the type of iris detection window. <b>Var:</b> Variable
	Iris Window Ind	On/Off	Turns on or off the function that displays a frame marker for the auto iris detection window.
	Iris Level	-99 to $\pm 0$ to +99	Adjusts the level of the auto iris target value.
	Iris APL Ratio	-99 to $\pm 0$ to +99	Adjusts the mix ratio of auto iris detection peak value and average value (available when OPERATION > TLCS > Mode is set to [Standard]).
	Iris Var Width	40 to <b>500</b> to 999	Adjusts the width of the detection window when the setting of Iris Window is VAR.
	Iris Var Height	70 to <b>500</b> to 999	Adjusts the height of the detection window when the setting of Iris Window is VAR.
	Iris Var H Position	-249 to <b>0</b> to +249	Specifies the horizontal position of the detection window when the setting of Iris Window is VAR.
	Iris Var V Position	-249 to <b>0</b> to +249	Specifies the vertical position of the detection window when the setting of Iris Window is VAR.
	Iris Speed	-99 to $\pm 0$ to +99	Specifies the control speed (speed of reaction to changes in the video). (Larger values specify quicker reaction times.)
	Clip High Light	On/Off	Turns on or off the function that disregards highlights and forces a flatter reaction to high luminance.
<b>Flicker Reduce</b> Makes settings related to flicker reduction. Reduces the flicker that can occur when a subject is shot under a light source with a periodically varying brightness, such as fluorescent lights, due to the relationship with the camcorder's recording frame rate.	Mode	Auto/On/Off	Enables or disables flicker reduction. <b>On:</b> Always enabled. <b>Auto:</b> Enabled when flicker is detected. <b>Off:</b> Disabled
	Frequency	60Hz/50Hz	Set to the frequency of the lighting fixture that is causing the flicker. (The factory default setting is 50 Hz when the Country setting is "PAL Area", 60 Hz when it is other than "PAL Area".)
<b>Genlock</b> Makes settings related to genlock.	H Phase(HD)	-999 to $\pm 0$ to +999	Specifies the H phase of HD output when genlock is enabled.
	H Phase(SD)	-99 to $\pm 0$ to +99	Specifies the H phase of SD output when genlock is enabled.
	Reference	Internal/Genlock	Displays the type of reference signal used by the camcorder.

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>ND Comp</b> Makes settings related to ND filter color compensation. Although the differences are very slight, each of the built-in ND filters has different color characteristics. When you switch between ND filters, the white balance may be disturbed. You can correct for these slight color differences automatically by registering compensation values for each filter.	ND Offset Adjust	On/Off	ND filter color compensation function.
	Clear ND Offset	Execute/Cancel	Clears ND filter color compensation values (execute by selecting [Execute]).
<b>Lens</b> Executes auto flange back adjustment.	Auto FB Adjust	Execute/Cancel	Executes auto flange back adjustment, only for supported lenses (execute by selecting [Execute]).
<b>Trigger Mode</b> Makes settings related to triggers for starting and stopping recording.	i.LINK Trigger Mode	Internal/ <b>Both</b> /External	Select Internal when recording start and stop operations target SxS memory cards only. Select External when they target only devices connected to the i.LINK (HDV/DV) or HD/SD SDI OUT connectors. Select Both when they target both memory cards and external devices.
<b>Network Setting a)</b> Makes settings for network connection.  <b>Notes</b> <ul style="list-style-type: none"> <li>The CBK-WA01 Wi-Fi Adapter is required.</li> <li>This item is disabled (displayed in grey) during recording and play.</li> </ul> <i>For details on network connection, refer to the Supplement supplied in the CD-ROM (labeled "Manuals for Solid-State Memory Camcorder").</i>	DHCP	Enable/ <b>Disable</b>	Selects whether to acquire the IP address automatically from a DHCP server (Enable) or not (Disable).
	IP Address	0.0.0.0 to 255.255.255.255 <b>(192.168.1.10)</b>	When DHCP is set to [Disable], sets the IP address.
	Subnet Mask	0.0.0.0 to <b>255.255.255.255</b>	When DHCP is set to [Disable], sets the subnet mask.
	Default Gateway	<b>0.0.0.0</b> to 255.255.255.255	When DHCP is set to [Disable], sets the default gateway.
	User Name	<b>admin</b>	Sets a desired user name in 1 to 31 alphanumeric characters.
	Password	<b>pmw-320</b> (model name)	Sets a password (model name) in 0 to 31 alphanumeric characters.
	Set	Execute/Cancel	Confirms the settings in Network Settings (execute by selecting [Execute]).
	MAC Address		Displays the MAC address.
	Net Config Reset	Execute/Cancel	Resets the settings in Network Settings to the preset values (execute by selecting [Execute]).

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Wi-Fi Setting <sup>a)</sup></b> Makes settings for Wi-Fi connection.	Scan Networks	Execute/Cancel	When Wi-Fi is set to [Enable], scan the available network connection.
	SSID	Network connection name	Sets the network connection name of up to 32 characters.
<b>Notes</b> <ul style="list-style-type: none"> <li>The CBK-WA01 Wi-Fi Adapter is required.</li> <li>This item is disabled (displayed in grey) during recording and play.</li> </ul> <p><i>For details on Wi-Fi connection, refer to the Supplement supplied in the CD-ROM (labeled "Manuals for Solid-State Memory Camcorder").</i></p>	Network Type	Infra/ <b>Adhoc</b>	Selects the connection mode. <b>Infra:</b> Infrastructure mode <b>Adhoc:</b> Ad hoc mode
	Ch	1 to 11	When Network Type is set to [Adhoc], set the wireless channel.
	Authentication	<b>Open</b> /Shared/WPA/WPA2	Selects the network authentication. <b>OPEN:</b> Open system authentication <b>SHARED:</b> Shared key authentication <b>WPA:</b> WPA (Wi-Fi Protected Access) authentication <b>WPA2:</b> WPA2 (Wi-Fi Protected Access 2) authentication
	Encryption	<b>Disable</b> /WEP/TKIP/AES	Selects whether to apply data encryption and the type of data encryption. <b>Disable:</b> Do not apply data encryption. <b>WEP:</b> Apply WEP (Wired Equivalent Privacy) when Authentication is set to [Open] or [Shared] <b>TKIP:</b> Apply TKIP (Temporal Key Integrity Protocol) when Authentication is set to [WPA] or [WPA2] <b>AES:</b> Apply AES (Advanced Encryption Standard) when Authentication is set to [WPA] or [WPA2]
	WEP Key Index	1/2/3/4	When Encryption is [WEP], selects the key index.
	Input Select	When Encryption is set to [WEP]: <b>ASCII5</b> , ASCII11, HEX10, HEX26 When Encryption is set to [TKIP] or [AES]: ASCII8-63, HEX64	Selects the input format depending on the network key (or security key). <b>ASCII5:</b> Five characters ASCII format <b>ASCII11:</b> 13 characters ASCII format <b>HEX10:</b> 10 hexadecimal digits <b>HEX26:</b> 26 hexadecimal digits <b>ASCII8-63:</b> 8 to 63 characters ASCII 8-bit format <b>HEX64:</b> 64 hexadecimal digits (characters)
	Key		Sets the network key (or security key).

MAINTENANCE			
Menu items	Sub-item	Settings	Description
<b>Wi-Fi Setting <sup>a)</sup></b> Makes settings for Wi-Fi connection.  <b>Notes</b> <ul style="list-style-type: none"> <li>The CBK-WA01 Wi-Fi Adapter is required.</li> <li>This item is disabled (displayed in grey) during recording and play.</li> </ul>	Set		Enables settings for Wi-Fi Setting when Wi-Fi is set to [Enable] (execute by selecting [Execute]).
	Wi-Fi Status	 Connecting	Displays "Connecting" while connection is being attempted. Displays black squares to show the connection status by the number of squares when the camcorder is connected to a computer or a LAN.
	Wireless Mode	802.11b/802.11g/802.11n	Displays an IEEE802.11 standard.
	Wi-Fi	Enable/ <b>Disable</b>	Selects whether to enable or disable Wi-Fi connection.
<i>For details on Wi-Fi connection, refer to the Supplement supplied in the CD-ROM (labeled "Manuals for Solid-State Memory Camcorder").</i>			
<b>Clock Set</b> Sets the internal clock.	Date/Time		Sets the current date and time.
	12H/24H	12H/ <b>24H</b>	Selects the 12-hour format (12H) or the 24-hour format (24H) for display of times.
	Date Mode	<b>YYMMDD</b> /MMDDYY/DDMMYY	Selects the display format for dates. <b>YYMMDD</b> : Year, Month, Day <b>MMDDYY</b> : Month, Day, Year <b>DDMMYY</b> : Day, Month Year
<b>Language</b> Selects the language for messages.	Language	<b>English</b> /Chinese	Selects the language for messages from English or Chinese.
<b>Hours Meter</b> Makes settings related to the digital hours meter.	Hours(Sys)		Displays the cumulative hours of use (cannot be reset).
	Hours(Reset)		Displays the hours of use (can be reset).
	Reset	Execute/Cancel	Resets Hours(Reset) to 0. (Execute by selecting Execute.)
<b>Version</b> Displays the version of the camcorder, and updates the camcorder.	Version		Displays the software version of the camcorder (Vx.xx).
	Version Up	Execute/Cancel	Updates the camcorder (execute by selecting Execute).
<b>Note</b> This cannot be selected unless an SxS memory card is inserted.			

a) When the optional CBK-UPG02 is installed.

# FILE Menu

Settings in bold are the factory default values.

FILE			
Menu items	Sub-item	Settings	Description
<b>All</b> Makes settings related to ALL file operations.	Display Mode	<b>Date&amp;Time</b> /Model Name	Selects the items to be displayed in the list box that appears when a file is saved or loaded.
	All File Load	Execute/Cancel	Loads an ALL file (execute by selecting Execute).
	All File Save	Execute/Cancel	Stores an ALL file (execute by selecting Execute).
	File ID		Assigns a name to a file. Names can be up to 16 characters in length.
	All Preset	Execute/Cancel	Return all items to their preset values (execute by selecting Execute).
	Store All Preset	Execute/Cancel	Store the current settings of all items as the preset values (execute by selecting Execute).
	Clear All Preset	Execute/Cancel	Clear the preset values of all items (execute by selecting Execute).
	3Sec Clr Preset	<b>On/Off</b>	Turns on or off the function that clears each preset value when the MENU CANCEL/PRST/ESCAPE switch is pushed up and held for three seconds on the CANCEL/PRST side.
	Network Data	<b>Off</b> /On	Selects whether to load (On) or not load (Off) network settings when loading an ALL file.
<b>Scene</b> Makes settings related to scene file operations.	<input type="checkbox"/> 1	Standard	File number and file ID
	<input type="checkbox"/> 2	Standard	File number and file ID
	<input type="checkbox"/> 3	Standard	File number and file ID
	<input type="checkbox"/> 4	Standard	File number and file ID
	<input type="checkbox"/> 5	Standard	File number and file ID
	<input type="checkbox"/> Standard		Standard settings
	Display Mode	<b>Date&amp;Time</b> /Model Name	Selects the items to be displayed in the list box that appears when a file is saved or loaded.
	Scene Recall Mem	Execute/Cancel	Loads a file from internal memory (execute by selecting Execute).
	Scene Store Mem	Execute/Cancel	Stores a file in internal memory (execute by selecting Execute).
	Scene Recall SxS	Execute/Cancel	Loads a file from an SxS memory card (execute by selecting Execute).
	Scene Store SxS	Execute/Cancel	Stores a file to an SxS memory card (execute by selecting Execute).
	File ID		Assigns a name to a file. Names can be up to 16 characters in length.

FILE			
Menu items	Sub-item	Settings	Description
<b>Reference</b> Makes settings related to reference file operations.	Reference Store	Execute/Cancel	Stores the current settings of reference file items in the reference file that is maintained in internal memory (execute by selecting Execute).
	Reference Clear	Execute/Cancel	Clear the reference file (execute by selecting Execute).
	Reference Load SxS	Execute/Cancel	Load a reference file from an SxS memory card (execute by selecting Execute).
	Reference Save SxS	Execute/Cancel	Store a reference file to an SxS memory card (execute by selecting Execute).
	File ID		Assigns a name to a file. Names can be up to 16 characters in length.
	Scene White Data	On/Off	Selects whether to load (On) or not load (Off) white balance data when Scene >Scene Recall or Scene >Standard is executed.
<b>Lens</b> Makes settings related to lens file operations.	Display Mode	<b>Date&amp;Time/Model Name</b>	Selects the items to be displayed in the list box that appears when a file is saved or loaded.
	Lens Recall Mem	Execute/Cancel	Loads a file from internal memory (execute by selecting Execute).
	Lens Store Mem	Execute/Cancel	Stores a file in internal memory (execute by selecting Execute).
	Lens Recall SxS	Execute/Cancel	Loads a file from an SxS memory card (execute by selecting Execute).
	Lens Store SxS	Execute/Cancel	Stores a file to an SxS memory card (execute by selecting Execute).
	File ID		Assigns a name to the most recently loaded file. Names can be up to 16 characters in length.
	Source		Displays the number of the selected file.
	Lens No Offset	Execute/Cancel	Clears a file (execute by selecting Execute).

FILE			
Menu items	Sub-item	Settings	Description
<b>Lens</b> Makes settings related to lens file operations.	Lens Auto Recall	<b>Off/On/Serial Number</b>	When the installed lens supports serial communication, specifies whether to automatically load that reference file. <b>Off:</b> Do not use this function. <b>On:</b> Load the reference for the model name and reflect the contents of the file. <b>Serial Number:</b> For lenses that support serial number communication, load the lens file that corresponds to the serial number and model name, and reflect the contents of that file. For lenses that do not support serial number communication, load the reference for the model name (in the same way as when On is selected).
	Serial Number		Displays the serial number of the installed lens (only for lenses that support serial communication).
	Lens ID		Displays the model name of the installed lens (only for lenses that support serial communication).
	L Manufacturer		Displays the name of the manufacturer of the installed lens (only for lenses that support serial communication).
	M V Modulation	–99 to <b>±0</b> to +99	Sets a vertical SAW shading compensation value in the lens file.
	Lens Center H	–40 to <b>0</b> to 40	Sets a center marker horizontal position in the lens file.
	Lens Center V	–40 to <b>0</b> to 40	Sets a center marker vertical position in the lens file.
	Lens R Flare	–99 to <b>±0</b> to +99	Sets a R flare level in the lens file.
	Lens G Flare	–99 to <b>±0</b> to +99	Sets a G flare level in the lens file.
	Lens B Flare	–99 to <b>±0</b> to +99	Sets a B flare level in the lens file.
	Lens W-R Offset	–99 to <b>±0</b> to +99	Sets a R white balance compensation value in the lens file.
	Lens W-B Offset	–99 to <b>±0</b> to +99	Sets a B white balance compensation value in the lens file.
	Shading Ch Sel	<b>Red/Green/Blue</b>	Selects the white shading compensation target.
	L R/G/B H Saw	–99 to <b>±0</b> to +99	Sets a horizontal SAW white shading compensation value in the lens file.
	L R/G/B H Para	–99 to <b>±0</b> to +99	Sets a horizontal parabola white shading compensation value in the lens file.



FILE			
Menu items	Sub-item	Settings	Description
<b>Lens</b> Makes settings related to lens file operations.	L R/G/B V Saw	–99 to $\pm 0$ to +99	Sets a vertical SAW white shading compensation value in the lens file.
	L R/G/B V Para	–99 to $\pm 0$ to +99	Sets a vertical parabola white shading compensation value in the lens file.

# Assigning Functions to Assignable Switches

Using the Assignable SW item of the OPERATION menu, you can assign user-specified functions to the ASSIGN. 0 to 3 switches, the ASSIGNABLE 4 and 5 switches, the COLOR TEMP. button, and the RET button on the lens.

The following tables lists the functions that are assigned when the camcorder is shipped from the factory.

Switch or button	Function	Assignable SW setting
ASSIGN. 0 switch	No assignment	Off
ASSIGN. 1 switch	Execute EZ mode, according to the setting of OPERATION > TLCS.	EZ Mode
ASSIGN. 2 switch	No assignment	Off
ASSIGN. 3 switch	No assignment	Off
ASSIGNABLE 4 switch	No assignment	Off
ASSIGNABLE 5 switch	No assignment	Off
RET button	<b>During recording or playback:</b> Write a shot mark. <b>In the other states:</b> Conduct a recording review (if playback is allowed).	Lens RET
COLOR TEMP. button	Adjust the white balance with the preset white balance value of 5600K.	Color Temp SW 5600K

## Functions That Can Be Assigned to the ASSIGN. 0 Switch

Assignable switch setting	Function	State when camcorder is next powered on
Off	No assignment	—
Marker	Turn the display of all markers on or off.	Setting retained
ATW Hold	Hold the white balance setting in the ATW (auto-tracking white balance) mode	—
Picture Cache	Turn the picture cache function on or off.	Setting retained
Freeze Mix	Execute the freeze mix function.	—
Focus Mag	Turn the focus magnification function on or off.	Setting not retained
Zebra	Turn zebra display on or off.	Setting not retained
Shot Mark1	Write Shot Mark1.	—
Shot Mark2	Write Shot Mark2.	—
OK Mark	Add or delete an OK mark.	—

## Functions That Can Be Assigned to the ASSIGN. 2 Switch

### Note

Immediately after you assign a function to the ASSIGN. 2 switch or you switch the recording format, the setting of the switch at that point may not match the camcorder's internal state. After assigning a function, switch the ASSIGN. 2 switch or power the camcorder off and on again.

Assignable switch setting	Function
Off	No assignment
Front Mic	Switch between stereo and monaural when a stereo microphone is connected.
Marker	Turn the display of all markers on or off.
Picture Cache <sup>a)</sup>	Turn the picture cache function on or off.
Zebra	Turn zebra display on or off.
Digital Extender <sup>b)</sup>	Turn the screen magnification function on or off Turn the screen magnification function on or off when the optional CBK-CE01 50 Pin Interface and Digital Extender is installed.

### Note

a) Immediately after you assign a functionThe OPERATION >Rec Function item in the setup menu is disabled (displayed in grey) and cannot be set when the Picture Cache function is turned on.

b) When the digital extender function is turned on, it is not possible to show the return video.

## Functions That Can Be Assigned to the ASSIGN. 1 and 3 Switches, the ASSIGNABLE 4 and 5 Switches, and the COLOR TEMP. Button

Assignable switch setting	Function	State when camcorder is next powered on
Off	No assignment	—
Front Mic	Switch between stereo (On) and monaural (Off) when a stereo microphone is connected.	Setting retained
Marker	Turn the display of all markers on or off.	Setting retained
Last Clip Delete	Delete the most recently recorded clip.	—
ATW	Turn ATW (auto tracing white balance) mode on or off.	Setting not retained
ATW Hold	Hold the white balance setting in the ATW mode.	—
EZ Mode	Execute EZ mode according to the setting of OPERATION >TLCS.	Setting retained
Turbo Gain	Execute Turbo Gain according to the setting of OPERATION >Gain Switch >Gain Turbo.	Setting not retained
Rec Review	Conduct a recording review.	—
Rec	Start or stop recording.	—
Picture Cache	Turn the picture cache function on or off.	Setting retained
Freeze Mix	Execute the freeze mix function.	Setting not retained
Spotlight	Turn the spotlight function in auto iris mode on or off.	Setting retained
Backlight	Turn the backlight function in auto iris mode on or off.	Setting retained
EVF Mode	Switch the viewfinder screen between B&W (On) and color (Off).	Setting retained

Assignable switch setting	Function	State when camcorder is next powered on
BRT Disp	Turn the display of the brightness level on or off.	Setting retained
Histogram	Turn the histogram display on or off.	Setting retained
Lens Info	Switch the depth of field indication between off, displayed in meters, and displayed in feet.	Setting retained
Zoom Tele/Wide	When a lens that supports serial communication is installed, assign the Zoom Tele function to ASSIGNABLE 4, and assign the Zoom Wide function to ASSIGNABLE 5 (displayed only when <4> and <5> are set).	—
Zoom Wide/Tele	When a lens that supports serial communication is installed, assign the Zoom Wide function to ASSIGNABLE 4, and assign the Zoom Tele function to ASSIGNABLE 5 (displayed only when <4> and <5> are set).	—
Manual Focus Assist	Turn the manual focus assist function on or off.	Setting retained
Focus Mag	Turn the focus magnification function on or off.	Setting not retained
Zebra	Turn zebra display on or off.	Setting not retained
Lens RET	Display return video signals when the optional CBK-CE01 is installed and a camera extension unit is connected. When a camera extension unit is not connected, function as follows. <b>During recording or playback:</b> Write a shot mark. <b>In the other states:</b> Conduct a recording review (if playback is allowed).	—
Return Video a)	Display return video signals when the optional CBK-CE01 is installed and a camera extension unit is connected.	—
Return Video2	For future system extension. Currently not works.	—
Return Video3	For future system extension. Currently not works.	—
Return Video4	For future system extension. Currently not works.	—
Shot Mark1	Write Shot Mark1.	—
Shot Mark2	Write Shot Mark2.	—
OK Mark	Add or delete an OK mark.	—
Color Temp SW 3200K	Adjust the white balance with a 3200K preset value.	Setting retained
Color Temp SW 4300K	Adjust the white balance with a 4300K preset value.	Setting retained
Color Temp SW 5600K	Adjust the white balance with a 5600K preset value.	Setting retained
Color Temp SW 6300K	Adjust the white balance with a 6300K preset value.	Setting retained

Assignable switch setting	Function	State when camcorder is next powered on
Electrical CC	<p>Function that switches the electrical CC filter (3200K/4300K/5600K/6300K) applied to white balance adjustment values.</p> <p>Each press of the switch or button switches in the order 3200K→4300K→5600K→6300K.</p> <p>These can also be applied from a menu (apply with Electrical CC&lt;A&gt;&lt;B&gt;&lt;C&gt;&lt;D&gt;).</p> <p><b>Note</b></p> <p>This function is not available when White Filter &gt;ND Filter C.Temp in the Maintenance menu is set to On. If you set ND Filter C.Temp to On after assigning the function, the assignable switch ceases to function.</p>	Setting retained
CC5600K	Apply a 5600K electrical CC filter to white balance adjustment values.	Setting retained
Digital Extender <sup>a)</sup>	Turn the screen magnification function on or off Turn the screen magnification function on or off when the optional CBK-CE01 50 Pin Interface and Digital Extender is installed.	Setting not retained

a) When the digital extender function is turned on, it is not possible to show the return video.

## Functions That Can Be Assigned to the RET Button on the Lens

Assignable switch setting	Function	State when camcorder is next powered on
Off	No assignment	—
Lens RET	<p>Display return video signals when the optional CBK-CE01 is installed and a camera extension unit is connected.</p> <p>When a camera extension unit is not connected, function as follows.</p> <p><b>During recording or playback:</b> Write a shot mark.</p> <p><b>In the other states:</b> Conduct a recording review (if playback is allowed).</p>	—
Return Video <sup>a)</sup>	Display return video signals when the optional CBK-CE01 is installed and a camera extension unit is connected.	—
Rec Review	Execute recording review.	—
Shot Mark1	Write Shot Mark1.	—
Shot Mark2	Write Shot Mark2.	—
OK Mark	Add or delete an OK mark.	—
Focus Mag	Turn the focus magnification function on or off.	Setting not retained

a) When the digital extender function is turned on, it is not possible to show the return video.

# Adjusting Picture Characteristics to Match the PMW-EX1R

You can make the following menu settings to adjust picture characteristics to match those of the PMW-EX1R.

Menu item	Setting	
	HD	SD
PAINT >Black Gamma	Black Gamma: OFF	Black Gamma: ON Gamma Level: -16
PAINT >Matrix	Preset Select: 6	Preset Select: 4
PAINT >Gamma	Gamma Select: 5 R709	Gamma Select: 4 240M

## Chapter 7

## Saving and Loading User Setting Data

## Saving and Loading Settings

You can save setup menu settings in the camcorder's internal memory and on SxS memory cards. This allows you to quickly recall an appropriate set of menu settings for the current situation.

Setting data is saved in the following categories.

**ALL files:** ALL files save the setting data of all menus. You can save up to 64 ALL files on an SxS memory card.

**Note**

Device specific data (shading, output levels, and other data that requires adjustment for the specific device) is not saved.

**Scene files:** Scene file save adjustments to PAINT menu items for the purpose of shooting a particular scene. You can save up to five scene files in the camcorder's internal memory and up to 64 scene files on an SxS memory card.

**Reference files:** Reference files save the reference values that are set when you execute FILE > Scene > Standard in the setup menu. You can save one reference file in the camcorder's internal memory and one on an SxS memory card.

**Lens files:** Lens files save the setting data used to compensate for lens characteristics, such as flare, white shading, white balance and center markers. You can save up to 32 lens files in the camcorder's internal memory and up to 64 lens files on an SxS memory card.

The first settings stored in a file are called "preset" values.

Even after loading files to set up the camcorder, and overwriting original files with new settings, you can still recover preset values and reset files to their initial states (see page 144).

## Saving Setting Data

This section explains how to save setting data in an ALL file.

Before starting, insert a writable SxS memory card into a memory card slot.

See "Basic Setup Menu Operations" (page 97) for information about menu operations.

**1 Select FILE > All in the setup menu.**

**To assign a name to the data before saving it**

Assign a name before proceeding to step 2.

For details, see "To assign names to files" (page 144).

**2 Select All File Save > Execute.**

An ALL file list box appears.

File numbers where "No File" is displayed are empty file numbers. File numbers with a file name or a date and time are the number of files that already contain data.

**3 Turn the MENU knob to select the desired file number.****4 Press the MENU knob.**

A confirmation message appears.

**5 To execute the save, select [Execute], and then press the MENU knob. To cancel the save, select [Cancel], and then press the MENU knob.**

If you choose to execute the save, the ACCESS lamp lights (in blue on the right-side panel and in orange in the card slot section). A completion message appears and the ACCESS lamp goes out when the data has been saved to the SxS memory card.

**If an error message appears**

One of the following error messages may appear during execution of the save, or as soon as you select [Execute]. In this case, the file is not saved to the SxS memory card.

Error message	Problem	What to do
NG:Cannot Save	No recordable media is inserted.	Insert recordable media.
NG:Media Full	The media is full.	Use media with free capacity remaining.

### To assign names to files

Assigning a name before you save data in an ALL file can make it easier to distinguish your files. The following characters can be used in file names.

Alphanumeric characters (a–z, A–Z, 0–9) and special characters ( ! # \$ % & ' ( ) \* + , - . / : ; < = > ? @ [ \ ] ~ )

- 1 **Select FILE >All >File ID in the setup menu.**
- 2 **Turn the MENU knob to select a character, and then press the MENU knob.**
- 3 **Repeat step 3.**
- 4 **When you have finished entering characters, press the MENU knob to move the cursor to “SET”, and then press the MENU knob.**  
The specified name is displayed.  
When you save the file (*see page 143*), the data will be saved under this name.

### Loading Setting Data

#### Note

When you load a file from an SxS memory card, the data saved in the camcorder's internal memory is overwritten.

*See “Basic Setup Menu Operations” (page 97) for information about menu operations.*

- 1 **Select FILE >All in the setup menu.**
- 2 **Select All File Load >Execute.**  
A list box of ALL files appears.  
File numbers where “No File” is displayed are empty file numbers. File numbers with a file name or a date and time are the number of files that already contain data.

- 3 **Turn the MENU knob to select the desired file number.**

- 4 **Press the MENU knob.**

A confirmation message appears.

- 5 **To execute the load, select [Execute], and then press the MENU knob.**

**To cancel the load, select [Cancel], and then press the MENU knob.**

If you choose to execute the load, the ACCESS lamp lights (in blue on the right-side panel and in orange in the card slot section). The ACCESS lamp goes out and a completion message appears when the data has been loaded from the SxS memory card.

#### If an error message appears

One of the following error messages may appear during execution of the load, or as soon as you select [Execute]. In this case, the file is not loaded from the SxS memory card.

Error message	Problem	What to do
NG:No Data	<ul style="list-style-type: none"> <li>• There is no readable media</li> <li>• The specified file does not exist on the media</li> </ul>	Insert the media that contains the file you want.

### Resetting a File after Changing Its Contents

*See “Basic Setup Menu Operations” (page 97) for information about menu operations.*

- 1 **Select FILE >All in the setup menu.**
- 2 **Select [All Preset], and then press the MENU knob.**
- 3 **To execute the reset, select [Execute], and then press the MENU knob.**  
**To cancel the reset, select [Cancel], and then press the MENU knob.**  
If you choose to execute the reset, all settings in the ALL file are reset to preset values.



# Saving and Loading Scene Files

Scene files allow you to save the following types of data.

- Values set in the PAINT menu
- Shutter speeds set in standard mode or ECS mode
- White balance data

The data that is saved and loaded depends on the setting of FILE >Reference >Scene White Data in the setup menu.

## Saving Scene Files

To save a scene file to an SxS memory card, insert the card into a memory card slot and then proceed as follows.

See “Basic Setup Menu Operations” (page 97) for information about menu operations.

### 1 Select FILE >Scene in the setup menu.

**To assign a name to the data before saving it**

Assign a name before proceeding to step 2.

For details, see “To assign names to files” (page 144).

### 2 Select Scene Store Mem or Scene Store SxS.

Select Scene Store Mem if you want to save the data in the camcorder’s internal memory, and select Scene Store SxS if you want to save the data on an SxS memory card.

### 3 Press the MENU knob.

A list box of scene files appears.

File numbers where “No File” is displayed are empty file numbers

### 4 Select the file number under which you want to save the data, and then press the MENU knob.

A confirmation message appears.

### 5 To execute the save, select [Execute], and then press the MENU knob. To cancel the save, select [Cancel], and then press the MENU knob.

If you selected Scene Store SxS in step 2, the ACCESS lamp lights when you execute the save (in blue on the right-side panel and in orange in the card slot section).

When the data has been saved to the SxS memory card, a completion message appears and the ACCESS lamp goes out.

## Loading Scene Files

To load a scene file from an SxS memory card, insert the SxS memory card into a memory card slot, and then proceed as follows.

See “Basic Setup Menu Operations” (page 97) for information about menu operations.

### 1 Select FILE >Scene in the setup menu.

### 2 Select Scene Recall Mem or Scene Recall SxS.

Select Scene Recall Mem if you want to load the file from the camcorder’s internal memory, and select Scene Recall (SxS) if you want to load the file from an SxS memory card.

### 3 Press the MENU knob.

A list box of scene files appears. File numbers where “No File” is displayed are empty file numbers.

### 4 Select the desired file number, and then press the MENU knob.

A confirmation message appears.

### 5 To execute the load, select [Execute], and then press the MENU knob. To cancel the load, select [Cancel], and then press the MENU knob.

If you selected Scene Recall SxS in step 2, the ACCESS lamp lights when you execute the load (in blue on the right-side panel and in orange in the card slot section).

When the data has been loaded from the SxS memory card, a completion message appears and the ACCESS lamp goes out.

**Note**

The settings data (ALL file, scene file, reference file, lens file) of this camcorder and the PMW-350 are not compatible.

## Saving and Loading Lens Files

### Setting Lens File Data

Use **FILE > Lens** (*see page 135*) in the setup menu to set the data in lens files.

You can set the following data and save it as a lens file.

Setting data	Sub-items
V modulation shading compensation values	M V Modulation
Center marker position	Lens Center H Lens Center V
Flare level	Lens R Flare Lens G Flare Lens B Flare
White balance compensation value	Lens W-R Offset Lens W-B Offset
White shading compensation value	L R/G/B H Saw L R/G/B H Para L R/G/B V Saw L R/G/B V Para

*See “Basic Setup Menu Operations” (page 97) for information about menu operations.*

### Saving Lens Files

To save a lens file to an SxS memory card, insert the card into a memory card slot and then proceed as follows.

*See “Basic Setup Menu Operations” (page 97) for information about menu operations.*

#### **1 Select FILE > Lens in the setup menu.**

**To assign a name to the data before saving it**

Assign a name before proceeding to step 2.

*For details, see “To assign names to files” (page 144).*

## 2 Select Lens Store Mem or Lens Store SxS, and press the MENU knob.

Select Lens Store Mem if you want to save the data in the camcorder's internal memory, and select Lens Store SxS if you want to save the data on an SxS memory card.

## 3 To execute the save, select [Execute], and then press the MENU knob. To cancel the save, select [Cancel], and then press the MENU knob.

If you select [Execute], a list box of lens file number appears. File numbers where "No File" is displayed are empty file numbers.

## 4 Select the file number under which you want to save the data, and then press the MENU knob.

A confirmation message appears.

## 5 To execute the save, select [Execute], and then press the MENU knob. To cancel the save, select [Cancel], and then press the MENU knob.

If you selected Lens Store SxS in step 2, the ACCESS lamp lights when you execute the save (in blue on the right-side panel and in orange in the card slot section).

When the data has been saved to the SxS memory card, a completion message appears and the ACCESS lamp goes out.

## Loading Lens Files

To load a lens file from an SxS memory card, insert the SxS memory card into a memory card slot, and then proceed as follows.

See "Basic Setup Menu Operations" (page 97) for information about menu operations.

- 1 Select FILE >Lens in the setup menu.
- 2 Select Lens Recall Mem or Lens Recall SxS, and press the MENU knob.  
Select Lens Recall Mem if you want to load the file from the camcorder's internal memory, and select Lens Recall SxS if you want to load the file from an SxS memory card.
- 3 To execute the load, select [Execute], and then press the MENU knob.

## To cancel the load, select [Cancel], and then press the MENU knob.

If you select [Execute], a list box of lens files appears. File numbers where "No File" is displayed are empty file numbers.

## 4 Select the desired file number, and then press the MENU knob.

A confirmation message appears.

## 5 To execute the load, select [Execute], and then press the MENU knob. To cancel the load, select [Cancel], and then press the MENU knob.

If you selected Lens Recall SxS in step 2, the ACCESS lamp lights when you execute the load (in blue on the right-side panel and in orange in the card slot section).

When the specified lens file has been loaded from the SxS memory card, a completion message appears and the ACCESS lamp goes out.

## Loading Lens Files Automatically

When you are using a lens that support serial communication, you can set up the camcorder by automatically loading the lens file that corresponds to the lens settings (Lens Auto Recall function).

To use the Lens Auto Recall function, set FILE >Lens >Lens Auto Recall in the setup menu to one of the following.

**On:** Load the lens file that corresponds to the model name.

**Off:** Do not use the Lens Auto Recall function.


**Serial Number:** Load the lens file that corresponds to the model name and serial number (when the lens supports communication of the serial number).

If the lens does not support communication of the serial number, both settings load the lens file that corresponds to the model name.

You can connect a control device such as an RM-B150/B170/B750 Remote Control Unit or RCP-1001/1501 Remote Control Panel and operate this camcorder. For details on connection and operation of the control device, refer to the Supplement supplied in the CD-ROM (labeled “Manuals for Solid-State Memory Camcorder”).

## Connecting External Monitors

Select the output signal and use an appropriate cable for the monitor to be connected.

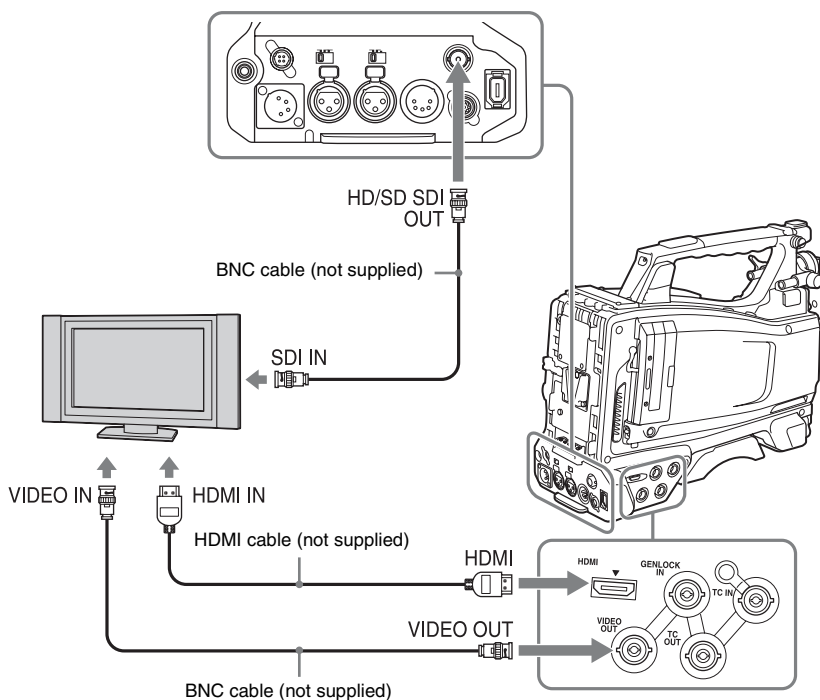

Regardless of whether the signal is HD or SD, the same status information and menus can be displayed on the external monitor as those on the viewfinder screen.

### Note

SD signals down-converted for output have the following restrictions:  
 Images of 50P/50i/25P are output as PAL signals, those of 59.94P/59.94i/29.97P are output as NTSC signals, and those of 23.98P are output as 2-3 pulled-down NTSC signals.

## HD/SD SDI OUT connector (BNC)

The HD/SD SDI OUT connector can be used to connect a device that supports SDI. The device type can be a monitor, switcher, or VTR or other recording device.

The output from this connector can be turned on and off with OPERATION >Input/Output >SDI Output in the setup menu (*see page 101*).

For connection, use a BNC cable (not supplied).

## HDMI connector

The HDMI connector can be used to connect a device that supports HDMI. The device type can be a monitor or VTR or other recording device.

The output from this connector can be turned on and off with OPERATION >Input/Output >HDMI Output in the setup menu (*see page 101*).

For connection, use an HDMI cable (not supplied).

## VIDEO OUT connector

The VIDEO OUT connector can be used to connect a device that supports analog composite signal. The device type can be a monitor or VTR or other recording device.

The analog composite signal output from this connector is the same as the NTSC or PAL encoded signal that is output from the HD/SD SDI OUT connector when the setting of output is SD signal (you can switch between NTSC and PAL with OPERATION >Format >Country in the setup menu (*see page 99*)).

To input the VIDEO OUT connector output signal to an external analog composite device, it may be necessary to change the input signal setting of that external device to be matched with the analog composite signal setting for the VIDEO OUT connector.

To input camcorder output audio to an external device such as a monitor or VTR or other recording device, connect the audio output of the AUDIO OUT connector to the audio input of that external device.

For connection, use a BNC cable (not supplied).

## i.LINK (HDV/DV) connector

The i.LINK (HDV/DV) connector supports HDV and DV input/output. However, DV streams cannot be recorded on this camcorder.

This connector can be used to connect a device that supports i.LINK (HDV). The device type can be a monitor, read/write device such as VTR or HDD, or computer.

### To input/output HDV signals

HDV input/output is supported when the video format is an HDV compatible format (SP 1440/59.94i, SP 1440/50i, or SP 1440/23.98P), Input/Output >Output&i.LINK in the OPERATION menu is set to [HD&HDV] or [SD&HDV], and Input/Output >i.LINK I/O is set to [Enable]. When the video format is SP 1440/23.98P, a 59.94i HDV signal subjected to 2-3 pulldown processing is output.

### To input/output DV signals

DV input/output is supported under either of the following conditions.

- Input/Output >i.LINK I/O in the OPERATION menu is set to [Enable] on SD mode.
- On HD mode, the video format is other than DV incompatible formats (HQ 1920/23.98P, HQ 1440/23.98P, and HQ 1280/23.98P), Input/Output >Output&i.LINK is set to [SD&DV], and Input/Output >i.LINK I/O is set to [Enable].

## Operating Clips with a Computer

The clips recorded on SxS memory cards with this camcorder can be controlled on a computer or edited using the optional nonlinear editing software.

For these purposes, the clips on an SxS memory card can be operated by directly loading the card in a computer or by connecting the camcorder or the optional SBAC-US10 SxS Memory Card USB Reader/Writer to the computer, using an USB cable as shown below.

### Using the ExpressCard Slot of a Computer

If the computer is equipped with an ExpressCard/34 or ExpressCard/54 slot, you can directly insert the SxS memory card containing clips recorded with this camcorder and access to the files.

*For the operating requirements for the computer, see "Using the CD-ROM" (page 13).*


#### Note

The SxS Device Driver Software and SxS UDF driver software on the CD-ROM supplied with the camcorder must be installed on your computer. Before installation, be sure to read the enclosed SxS Device Driver Software End-User License Agreement.

*For information on installation of the driver software, refer to the ReadMe on the supplied CD-ROM.*

*For support information for the driver software, visit the following URL:*

<http://www.sony.net/SxS-Support/>

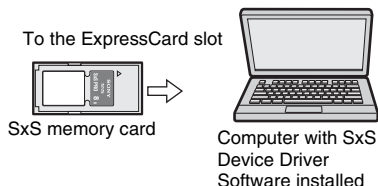

### With a Windows computer

Check that a Removable Disk appears in My Computer. This indicates normal status.

### With a Macintosh computer


An icon is displayed on the menu bar.

## USB Connection with a Computer

### Preparations

When you connect the camcorder to a computer using a USB cable (not supplied), the memory card in the slot is acknowledged as an extended drive by the computer.

When two memory cards are mounted in this camcorder, they are acknowledged as two independent extended drives by the computer.

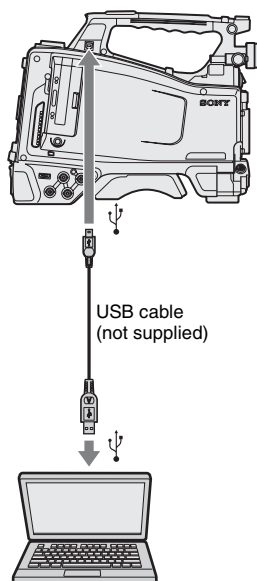

#### Notes

- When connecting the USB cable to the computer, be careful to check the form and direction of the PC connector.
- The camcorder does not work on the bus power from the computer.

### To start USB connection

#### Note

When a computer is connected to the PC connector of the camcorder and at the same time an optional PHU-220R Professional Harddisk Unit (powered from a battery) is connected to the computer, battery exhaustion on the PHU-220R (indicated by a Battery End warning) disables the following.

- To guard the PHU-220R against access from the computer
- To disconnect the PHU-220R's cable from the memory card slot or plug again the cable into the slot
- To turn on the tally indicator on the viewfinder screen to warn the operator

When you connect a computer to the USB connector with a USB cable (not supplied), the message “Connect USB Now?” is displayed to prompt you to confirm that you wish to enable the USB connection.

If you select “Cancel” or push the MENU CANCEL/PRST/ESCAPE down to the ESCAPE side or if you disconnect the USB cable, the message “Connect USB Now?” disappears.



If you select “Execute” and press the MENU knob, the USB connection is enabled and this camcorder is recognized as an extension drive. You can carry out the same operations by using the arrow buttons (↑, ↓, ⇐, ⇒) (see page 22).



If the USB connection is enabled during recording/playback operation, the operation is stopped and the message “USB Connecting” appears on the viewfinder screen.

At this time, the output signal from the VIDEO OUT connector, HDMI connector, and HD/SD SDI OUT connector changes to a black signal.

#### Notes

- The camcorder cannot be operated for recording, playback, and so on while the message “USB Connecting” is displayed.
- When the computer accesses the media loaded in the camcorder, do not try to carry out the following operations.
  - Operating the camcorder (turning the power on/off, switching the operation mode, etc.)
  - Removing or loading a media from an active slot (being accessed from the computer)
  - Removing or connecting the USB cable

## Disabling the USB connection

To disable the USB connection, follow the same procedure as that for removing a device from the computer.

To enable the USB connection again, first disconnect the USB cable and then reconnect it. The message “Connect USB Now?” appears again.

#### Note

If you connect the camcorder to the computer using an i.LINK cable, you cannot use the computer to operate files stored in a recording media loaded in the memory card slot of this camcorder.

## To remove an SxS memory card

### Windows

- 1 Click on the icon of “Safely Remove Hardware” on the task bar of the computer.
- 2 Select “Safely remove SxS Memory Card - Drive(X:)” from the displayed menu.
- 3 Check that the Safe To Remove Hardware message appears then remove the card.

### Macintosh

Drag the SxS memory card icon on the desktop to Trash.

If the SxS memory card icon is located on Finder, click on the eject icon on its side.

## To use the supplied application software

To copy clips to the local disk of your computer and perform other management tasks, install the application software on the supplied CD-ROM. Install the application software on the supplied CD-ROM to your computer.

Although the data regarding recorded materials are stored over multiple files and folders, you can easily handle the clips without considering such data and directory structure by using the application software.

#### Note

If you operate, e.g. copy the clips on the SxS memory card by using the Explorer (Windows) or Finder (Macintosh), the subsidiary data contained by the clips may not be maintained. To avoid such a problem, use the application software.

*For the operating requirements, installation and operations, refer to the Installation Guide or Help (User's Guide) contained in the supplied CD-ROM.*

*For information on the dedicated application software, visit Sony professional products web site.*

### To use a nonlinear editing system

For a nonlinear editing system, optional editing software that corresponds to the recording formats used with this camcorder is required. Store the clips to be edited on the HDD of your computer in advance, using the supplied application software.

Some editing software may not operate properly. Be sure to confirm before use that it conforms to the recording formats used with this camcorder.

## Connecting an External Device (i.LINK Connection)

You can record the same images as those recorded on the memory card in this camcorder on an external device connected to the i.LINK (HDV/DV) connector, or record the playback picture of the external device on the memory card in the camcorder.

When you connect the camcorder to a non-linear editing system that supports HDV format, you can edit the images recorded on the memory card in the camcorder.

### Notes

- When you set OPERATION >Input/Output >Output&i.LINK in the setup menu to [480P (570P)], no signal is output from the HD/SD SDI OUT connector.
- Use the i.LINK (HDV/DV) connector only for one-to-one i.LINK connection.
- When you change a setting which affects output signals from the i.LINK (HDV/DV) connector, such as HD/SD, HD System Line, System Frequency, and Rec Format under OPERATION >Format in the setup menu or i.LINK I/O and Down Converter under OPERATION >Input/Output in the setup menu, disconnect the i.LINK cable and change the setting. Changing such a setting with the i.LINK cable connected may cause improper operation of the connected i.LINK device.
- The external signal input via the i.LINK connection that can be recorded on the camcorder is HDV streams only. You cannot record DV streams via the i.LINK connection.

## Recording the Camera Picture on an External Device

The picture being shot with this camcorder is output as an HDV or DV stream via the i.LINK (HDV/DV) connector. It can be recorded on a connected HDV or DVCAM recorder in synchronization with a recording start/stop operation on this camcorder.

- 1 Perform the preparatory settings of the camcorder.**



- Set OPERATION >Input/Output >Output & i.LINK in the setup menu (*see page 101*) to “HD & HDV” or “SD & HDV”.

**HD & HDV or SD & HDV:** To output an HDV stream in HD mode when the video format is set to an HDV compatible format (SP 1440/59.94i, SP 1440/50i, or SP 1440/23.94P)

**SD & DV:** To output a DV stream

- Set OPERATION >Input/Output >i.LINK I/O in the setup menu to [Enable].
- Set MAINTENANCE >Trigger Mode >i.LINK Trigger Mode in the setup menu (*see page 131*) to [Both] or [External].

**Both:** To perform recording both on the memory card in this camcorder and on the external device

**External:** To perform recording only on the external device





## 2 Set the external device to recording standby status.

*For operations of the external device, refer to the operation manual of that device.*

## 3 Start recording.

The external device starts recording in synchronization.

The status of the external device is displayed in the i.LINK status indication area (*see page 32*) on the viewfinder screen.

Indication	Status of the external device
STBY 	In HDV recording standby
●REC 	In HDV recording
STBY 	In DV recording standby
●REC 	In DV recording

### Notes

- Operation may be different depending on the type of external device.
- When you execute the operation to make a recording on the recording media loaded in the camcorder while HDV signals are output from the i.LINK (HDV/DV) connector, HDV signal output stops for about one second before the recording starts, and then it resumes.
- While you can record shot marks on the memory card during recording, they are not added to the pictures recorded on the external device.

## Nonlinear Editing

You can transfer an HDV stream to a nonlinear editing system connected via the i.LINK (HDV/DV) connector.

### Notes

- The i.LINK (HDV/DV) connector of this camcorder is a 6-pin connector. Check the number of pins of the i.LINK connector on your computer and use an appropriate i.LINK cable.
- In searching pictures of this camcorder on the computer, it may take some time until the display is reflected on the computer.
- If the playback clip is short or the playback starting point is near the end of the clip, the i.LINK signal may be interrupted between the clip and the next clip. When you try to capture such a signal using the nonlinear editing system, a malfunction may occur, depending on the nonlinear editing software in use.
- If you specify a search speed other than 4, 15, or 24 times normal with the nonlinear editing system, no i.LINK signal is fed out. In such a case, the picture on the viewfinder monitor may stay frozen.
- High-speed playback picture may not be displayed on the computer screen, depending on the nonlinear editing software in use.

### Setting on this camcorder

Set OPERATION >Input/Output >i.LINK I/O in the setup menu to [Enable].

*For operations of the nonlinear editing software, refer to the operation manual of the software.*

## Recording External Input Signals

The HDV stream input from a device connected via the i.LINK (HDV/DV) connector can be recorded on an SxS memory card in this camcorder.

The timecodes superimposed on the i.LINK input are recorded regardless of the settings of the camcorder.

### Note

DV stream cannot be recorded.

## 1 Set the external signal to a format that can be recorded on the camcorder.

Select an HDV compatible format (SP 1440/59.94i, SP 1440/50i, or SP 1440/23.94P) for the video format.

## 2 Make the following settings with OPERATION >Input/Output in the setup menu (see page 101).

- Set Output&i.LINK to [HD&HDV] or [SD&HDV].
- Set i.LINK I/O to [Enable].
- Set Source Select to [i.LINK].

The input video is displayed on the viewfinder screen or the monitor connected to the VIDEO OUT connector.

Audio signals are output through the built-in speaker, the headphones connected to the EARPHONE connector, and the speaker of the monitor connected to the VIDEO OUT connector.

## 3 Start the recording.

### Notes

- An error is generated in the following cases. In such a case, cancel Recording mode.
  - The video format of input signal does not match that specified on the camcorder.
  - A copy-protected stream is being fed in.
- If the input to the camcorder becomes no signal during recording, the TALLY indicators, the tally indicator on the front of the viewfinder, and the REC indication (●REC) on the viewfinder screen flash, indicating that no signal is being recorded on the SxS memory card. When an input signal is resumed, recording is restarted, incrementing the clip number on the memory card.

## Configuring a Shooting and Recording System

If you install the optional CBK-CE01 on this camcorder, you can attach the XDCA-55 HD Camera Adaptor and connect the XDCU-50 HD Camera Extension Unit.

This allows you to configure a shooting and recording system consisting of multiple camcorders with camera extension units connected to a remote control unit. For more information about the XDCA-55 and XDCU-50, refer to their respective operation manuals.

### Note

When using the camcorder in this system, do not connect a video light to the camcorder.

## Testing the Camcorder

Check the functions of the camcorder before setting out for a shooting session, preferably by recording and playing back video and audio signals.

## Maintenance

### Cleaning the Viewfinder

Use a dust blower to clean the lens, the LCD screen, and mirror inside the viewfinder barrel.

**Note**

Never use organic solvents such as thinners.

### Note about the Battery Terminal

The battery terminal of this unit (the connector for battery packs and AC adaptors) is a consumable part.

Power may not be supplied to the unit properly if the pins of the battery terminal are bent or deformed by shock or vibrations, or if they become corroded due to prolonged outdoor use. Periodic inspections are recommended to keep the unit working properly and to prolong its usable lifetime.

Contact a Sony service or sales representative for more information about inspections.

# Operation Warnings

If a problem occurs when the camcorder is powered or is being operated, a warning is issued by various visible and audible indicators. These visible and audible indicators are:

- Error/warning message (“A” in the “Layout of the table of warning messages” below)
- WARNING indicator (“B”), warning sound from the speaker and earphones (“C”), tally/REC indication (“D”), and battery remaining indicator (“E”).


A warning message, and the REC indication appear on the viewfinder screen.


The volume of the warning sound can be adjusted with the ALARM knob. Set the ALARM knob to the minimum position to suppress the sound.


## Layout of the table of warning messages

A	WARNING indicator	Warning sound	Tally/REC	Battery remaining
	B	C	D	E
	Problem	Operation in the recorder module	Action to take	

- The operation of the WARNING indicator, the tally/REC indication, and the battery indicator is represented by graphic symbols as follows.

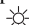 : Continuous

 : 1 flash/s


 : 4 flashes/s

- The warning sounds are represented by graphic symbols as follows.













●)))))))))))))))))) : Continuous beep







●)))))))))) : 1 beep/s

## Error Indication

E*****	WARNING indicator	Warning sound	Tally/REC	Battery remaining
	—	●))))))))))))))))))		—
	Problem	Operation in the recorder module	Action to take	
	The camcorder is abnormal.	Recording stops.	Turn off the power and confirm whether an error occurs on the connected devices, the cables, and the media or not. (If power cannot be turned off by setting the POWER switch to OFF, remove the battery pack or the AC power source.) If the problem continues after the camcorder is restarted, contact your Sony service representative.	

## Warning Indication





Media Near Full	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●))))))))))		—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	Free space on the SxS memory card has become insufficient.	Recording continues.	Replace it with another at the earliest opportunity.	
Media Full	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●))))))))))		—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	No space is left on the SxS memory card. Recording, clip copying and clip division cannot be performed.	Recording stops.	Replace it with another.	
Battery Near End	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●))))))))))		
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The battery power will be exhausted soon.	Recording continues.	Charge the battery pack at the earliest opportunity.	
Battery End	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●))))))))))		
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The battery pack is exhausted. Recording cannot be performed.	Recording stops.	Connect a power source via the DC IN connector or stop operation to charge the battery pack.	
Temperature High	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●))))))))))		—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The internal temperature has risen above a safe operation limit.	Recording continues.	Suspend operation, turn off the power, and wait until the temperature falls.	

Voltage Low	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●)))))))))		
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The DC IN voltage has become low (stage 1).	Recording continues.	Check the power supply.	
Insufficient Voltage	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●)))))))))		
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The DC IN voltage is too low (stage 2). Recording cannot be performed.	Recording stops.	Connect other power source.	
Battery Error Please Change Battery.	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	An error was detected with the battery pack.	Recording stops.	Replace the battery pack with a normal one.	
Backup Battery End Please Change.	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The remaining power of the backup battery is insufficient.	Recording continues.	Refer to a Sony service representative to replace the battery with a new one.	
Unknown Media(A) <sup>1)</sup> Please Change.	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	A partitioned memory card or one that contains recorded clips exceeding the number permitted with this camcorder is loaded.	Recording continues.	This card cannot be used with this camcorder. Remove it and load a compatible card.	

Reached Clip Number Limit Cannot Record to Media(A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The maximum number of clips for a single memory card is reached. No more clip can be recorded on the card.	Recording stops.	Replace it with another card.	
Media Error Media(A) <sup>1)</sup> Needs to be Restored	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	An error occurred with the memory card. The card requires restoration.	Recording stops.	Remove the card, load it again, and restore it.	
Media Error Cannot Record to Media(A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	Recording cannot be done, as the memory card is defective.	Recording stops.	As playback may be possible, it is recommended to replace it with another card after copying the clips, as required.	
Media Error Cannot Use Media(A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	Neither recording nor playback can be done, as the memory card is defective.	Recording stops.	It cannot be operated with this camcorder. Replace it with another card.	
Cannot Use Media(A) <sup>1)</sup> Unsupported File System	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	A card of a different file system was inserted.	Recording stops.	It cannot be used with this camcorder. Replace it with another card.	

Video Format Mismatch	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The external signal input via the i.LINK connection cannot be recorded, as the Video Format setting is different from the signal format of the external input signal.	Recording stops.	Change settings of OPERATION >Format in the setup menu to match it to that of the external signal.	
Copy Protected Input Cannot Record	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The external signal input via the i.LINK connection cannot be recorded, as the stream is copy-protected.	Recording stops.	Check the input signal.	
DVCAM Input Signal! Cannot Record	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The external signal input via the i.LINK connection cannot be recorded, as it is a DV stream.	Recording stops.	—	
Media Error Playback Halted	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	An error occurred in reading data from the memory card, and playback cannot be continued.	Recording stops.	If this frequently occurs, change the memory card after copying the clips, as required.	
Media(A) <sup>1)</sup> Error	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	Recording cannot be done, as an error occurred with the memory card.	Recording stops.	If this frequently occurs, change the memory card.	



HDD A <sup>2)</sup> Battery Near End	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●)))))))))		—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The battery power of the connected HDD will be exhausted soon.	Recording continues.	Change the battery at the earliest opportunity.	
HDD A <sup>2)</sup> Battery End	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
		●)))))))))		—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The battery of the connected HDD is exhausted. Recording cannot be performed.	Recording stops.	Stop operation to change the battery.	
Not Enough Capacity Change Media (A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	There is not enough capacity for copying.	Recording continues (disallowing copy).	Replace the card in slot A with another one.	
Reached Duplication Limit Change Media (A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The card has already ten clips having the same name as that you tried to duplicate.	Recording continues (disallowing copy).	Replace the card in slot A with another one.	
Not Enough Capacity Cannot Divide	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	There is not enough capacity for dividing a clip.	Recording continues (disallowing divide).	—	
Will Switch Slots Soon	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	Will switch to other slot soon.	Recording continues.	Make sure that a memory card is loaded in the other slot.	

No Clip	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	There is no clip to be displayed.	Recording continues.	—	
No OK Clip	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	There is no clip with the OK mark.	Recording continues.	—	
Same File Already Exists Change Media(A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The card has already clips having the same name as that you tried to duplicate.	Recording continues (disallowing copy).	Replace the card in slot A with another one.	
Media Reached Rewriting Limit Change Media (A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The memory card comes to the end of its service life.	Recording stops.	Make a backup copy and replace the card with another one as soon as possible. Recording/playback may not be performed properly if you continue to use the card. For details, refer to the operating instructions of the memory card.	
Unsupported Clip Included Cannot Use Media (A) <sup>1)</sup>	<b>WARNING indicator</b>	<b>Warning sound</b>	<b>Tally/REC</b>	<b>Battery remaining</b>
	—	—	—	—
	<b>Problem</b>	<b>Operation in the recorder module</b>	<b>Action to take</b>	
	The inserted memory card contains clips recorded in a format that is not supported by this camcorder.	—	The card in slot A cannot be used with this camcorder.	

1) (B) for the card in slot B

2) B for a HDD connected to slot B

# Appendix

## Important Notes on Operation

### Use and storage

#### Do not subject the camcorder to severe shocks

- The internal mechanism may be damaged or the body warped.
- If an accessory mounted on the accessory shoe is subjected to severe shock, the accessory shoe may be damaged. In such a case, stop using it and contact your dealer or a Sony service representative.

#### Do not cover the camcorder while operating

Putting a cloth, for example, over the camcorder can cause excessive internal heat build-up.

#### After use

Always turn off the POWER switch.

#### Before storing the camcorder for a long period

Remove the battery pack.

#### Shipping

- Remove the media before transporting the camcorder.
- If sending the camcorder by truck, ship, air or other transportation service, pack it in the shipping carton of the camcorder.

#### Care of the camcorder

Remove dust and dirt from the surfaces of the lenses or optical filters using a blower. If the body of the camcorder is dirty, clean it with a soft, dry cloth. In extreme cases, use a cloth steeped in a little neutral detergent, then wipe dry. Do not use organic solvents such as alcohol or thinners, as these may cause discoloration or other damage to the finish of the camcorder.

#### In the event of operating problems

If you should experience problems with the camcorder, contact a Sony service representative.

### Use and storage locations

Store in a level, ventilated place. Avoid using or storing the camcorder in the following places.

- In excessive heat or cold (operating temperature range: 0°C to 40°C (32°F to 104°F))
- Remember that in summer in warm climates the temperature inside a car with the windows closed can easily exceed 50°C (122°F).
- In damp or dusty locations
- Locations where the camcorder may be exposed to rain
- Locations subject to violent vibration
- Near strong magnetic fields
- Close to radio or TV transmitters producing strong electromagnetic fields.
- In direct sunlight or close to heaters for extended periods

#### To prevent electromagnetic interference from portable communications devices

The use of portable telephones and other communications devices near this camcorder can result in malfunctions and interference with audio and video signals.

It is recommended that the portable communications devices near this camcorder be powered off.

#### Note on laser beams

Laser beams may damage the CMOS image sensors.

If you shoot a scene that includes a laser beam, be careful not to let the laser beam be directed into the lens of the camcorder.

### Fitting the zoom lens

It is important to fit the lens correctly, as otherwise damage may result. *Be sure to refer to the section "Mounting and Adjusting the Lens" (page 42).*

### Viewfinder

Do not leave the camcorder with the eyepiece pointing directly at the sun. The eyepiece lens can concentrate the sun's rays and melt the interior of the viewfinder.

## About the LCD panels

The LCD panel fitted to this unit is manufactured with high precision technology, giving a functioning pixel ratio of at least 99.99%. Thus a very small proportion of pixels may be “stuck”, either always off (black), always on (red, green, or blue), or flashing. In addition, over a long period of use, because of the physical characteristics of the liquid crystal display, such “stuck” pixels may appear spontaneously. These problems are not a malfunction. Note that any such problems have no effect on recorded data.

## Phenomena specific to CMOS image sensors

The following phenomena that may appear in images are specific to CMOS (Complementary Metal Oxide Semiconductor) image sensors. They do not indicate malfunctions.

### White flecks

Although the CMOS image sensors are produced with high-precision technologies, fine white flecks may be generated on the screen in rare cases, caused by cosmic rays, etc. This is related to the principle of CMOS image sensors and is not a malfunction.

The white flecks especially tend to be seen in the following cases:

- when operating at a high environmental temperature
- when you have raised the master gain (sensitivity)
- when operating in Slow-Shutter mode

The problem may be alleviated by executing automatic black balance adjustment.

### Aliasing

When fine patterns, stripes, or lines are shot, they may appear jagged or flicker.

### Flicker

If recording is made under lighting produced by discharge tubes, such as fluorescent, sodium, or mercury-vapor lamps, the screen may flicker, colors may vary, or horizontal stripes may appear distorted.



In such cases, set the flicker-reduction function to auto mode (*see page 130*).

If the frame rate selected for recording is close to the power-supply frequency, flicker may not be reduced sufficiently even if you activate the Flicker-Reduction function. In such cases, use the electronic shutter.

### Focal plane

Owing to the characteristics of the pickup elements (CMOS image sensors) for reading video signals, subjects that quickly move across the screen may appear slightly skewed.

### Flash band

The luminance at the top and bottom of the screen may change when shooting a flashlight beam or a light source that quickly flashes.

You can use the supplied application software to correct clips that contain frames with flash bands.

## Note on data compatibility with other XDCAM EX-series products

When you use a PMW-EX1/EX3/EX30 to play materials recorded on the camcorder, any media in which clips of formats not supported by the PMW-EX1/EX3/EX30 have been recorded cannot be used.

The PMW-EX1/EX3/EX30 cannot divide a clip recorded on this camcorder, even if the clip is in a video format supported by the PMW-EX1/EX3/EX30.

## Fragmentation

If pictures cannot be recorded/reproduced properly, try formatting the recording medium. While repeating picture recording/playback with a certain recording medium for an extended period, files in the medium may be fragmented, disabling proper recording/storage. In such a case, make a backup of clips in the medium then perform formatting of the medium using OPERATION >Format Media (*see page 100*) in the setup menu.

# Exchanging the Battery of the Internal Clock

The camcorder's internal clock is powered by a lithium battery. If the message "BackUp Battery End" appears in the viewfinder, this battery must be exchanged. Contact a Sony service representative.

# Specifications

## General

### Power requirements

12 V DC (11 V to 17.0 V)

### Power consumption

Approx. 17 W

Main unit (camcorder) + LCD viewfinder + auto focus lens + microphone

During recording, power source: battery pack

### Notes

- Do not use a video light with power consumption of over 50 W.
- When connecting a device to the DC OUT connector, use one with current consumption of 0.5 A or less.

### Operating temperature

0°C to 40°C (32°F to 104°F)

### Storage temperature

-20°C to +60°C (-4°F to 140°F)

### Recording/playback formats

#### Video

HD HQ Mode: MPEG-2 MP@HL, 35 Mbps/  
VBR

1920 × 1080/59.94i, 50i, 29.97P, 25P,  
23.98P

1440 × 1080/59.94i, 50P, 29.97P, 25P,  
23.98P

1280 × 720/59.94P, 50P, 29.97P, 25P,  
23.98P

HD SP Mode: MPEG-2 MP@H-14, 25 Mbps/  
CBR

1440 × 1080 /59.94i, 50i  
(23.98P is converted to 59.94i in 2-3 pull-  
down processing.)

SD Mode: DVCAM

720 × 480/59.94i

720 × 576/50i

720 × 480/29.97P

720 × 576/25P

Audio

LPCM (16 bits, 48 kHz, HD: 4 channels, SD: 2 channels)

Recording/playback time

With one SBP-32/SBS-32G1A  
SP or DVCAM mode: Approx.130 min.  
HQ mode: Approx. 100 min.  
With one SBP-64A/SBS-64G1A  
SP mode: About 280 minutes  
DVCAM mode: About 260 minutes  
HQ mode: About 200 minutes

Note

The actual recording/playback time may differ slightly from the values shown here, depending on usage conditions, memory characteristics, etc.

Continuous operation time

With the BP-L80S  
Approx. 285 min.

Mass

Main body only: 3.2 kg (7 lb 0.88 oz)

Dimensions

See page 169.

Supplied accessories

See page 168.

Camera Block

Pickup device

$\frac{1}{2}$ -type, CMOS image sensor  
Effective picture elements:  
1920 (H)  $\times$  1080 (V)

Format

3-chip RGB

Optical system

F1.6 prism system

ND filters

- 1: Clear
- 2:  $\frac{1}{4}$ ND
- 3:  $\frac{1}{16}$ ND
- 4:  $\frac{1}{64}$ ND

Sensitivity

F10 (System frequency: 59.94i)  
F11 (System frequency: 50i)  
(2000lx, 89.9% reflection)

Minimum illumination

0.05 lx (F1.6, +24 dB, 64-frame accumulation)

Video S/N

54 dB

Horizontal resolution

1000TV lines or more

Gain

-3, 0, 3, 6, 9, 12, 18, 24 dB, AGC

Shutter speed

59.94i/P, 50i/P:  $\frac{1}{60}$  to  $\frac{1}{2000}$  sec.  
29.97P:  $\frac{1}{40}$  to  $\frac{1}{2000}$  sec.  
25P:  $\frac{1}{33}$  to  $\frac{1}{2000}$  sec.  
23.94P:  $\frac{1}{32}$  to  $\frac{1}{2000}$  sec.

Slow shutter

2 to 8, 16, 32, 64 frames

Audio Block

Sampling frequency

48 kHz

Quantization

16 bits

Headroom

20 dB (the factory default setting)  
(20, 18, 16, 12 dB)

Frequency response

MIC: 50 Hz to 20 kHz (within  $\pm 3$  dB)  
LINE: 20 Hz to 20 kHz (within  $\pm 3$  dB)  
WRR Analog: 50 Hz to 20 kHz (within  $\pm 3$  dB)  
WRR Digital: 20 Hz to 20 kHz (within  $\pm 3$  dB)

Dynamic range

90 dB (typical)

Distortion

0.08% max. (with input level 40dBu)

Built-in speaker

Monaural  
Output: 300 mW

Display

Viewfinder (supplied)

Screen size

8.8 cm diagonal (3.5-inch)

Aspect ratio

16:9

Picture elements

640 (H)  $\times$  3  $\times$  480 (V) Sequence delta

## Media Block

<b>Card slots</b>
Type: Express Card34
Number of slots: 2
Connector: Conforms to PCMCIA Express Card Standard
<b>Writing rate</b>
50 Mbps or more
<b>Reading rate</b>
50 Mbps or more

## Inputs/Outputs

<b>Input/Output connectors</b>
<b>Signal inputs</b>
AUDIO IN CH1/CH2: XLR type, 3-pin, female -60 dBu/-4 dBu (0 dBu=0.775 Vrms)
MIC IN: XLR type, 5-pin, female -60 dBu
GENLOCK IN: BNC type 1.0 Vp-p, 75 Ω, unbalanced
TC IN: BNC type 0.5 V to 18 Vp-p, 10 kΩ
<b>Signal outputs</b>
VIDEO OUT: BNC type
HDMI: Type A, 19-pin
HD/SD SDI OUT 1/2: BNC type
AUDIO OUT: XLR type, 5-pin, male 0 dBu
TC OUT: BNC type 1.0 Vp-p, 75 Ω
EARPHONE (stereo minijack) 8 Ω, -∞ to -18 dBs variable

<b>Others</b>
DC IN: XLR type, 4-pin, male 11 to 17 V DC
DC OUT: 4-pin 11 to 17 V DC, maximum rated current: 0.5 A
LENS: 12-pin Supplying power to the lens 11 to 17 V DC, maximum rated current: 1.0 A
REMOTE: 8-pin
LIGHT: 2-pin
USB: 4-pin
i.LINK (HDV/DV): 6-pin, complies with IEEE1394
VF: 26-pin, rectangular, 20-pin round For wireless receiver: D-sub 15-pin

## Lens Block (PMW-320K Only)

<b>Focal length</b>
5.8 mm ( <sup>1</sup> / <sub>4</sub> inches) to 93 mm (3 <sup>3</sup> / <sub>4</sub> inches) (equivalent to 31.4 mm (1 <sup>1</sup> / <sub>4</sub> inches) to 503 mm (19 <sup>7</sup> / <sub>8</sub> inches) on 35 mm (1 <sup>7</sup> / <sub>16</sub> inches) lens)
<b>Zoom</b>
Servo/Manual selectable
<b>Zoom ratio</b>
16×
<b>Maximum relative aperture</b>
1:1.9
<b>Iris</b>
Auto/Manual selectable F1.9 to F16 and C (close)
<b>Focus</b>
Auto/Manual selectable Ranges: 800 mm (31 <sup>1</sup> / <sub>2</sub> inches) to ∞ (Macro OFF) 50 mm (2 inches) to ∞ (Macro ON, Wide)
<b>Filter thread</b>
M82 mm, pitch 0.75 mm
<b>Macro</b>
ON/OFF switchable

## Supplied Accessories

Viewfinder (1)  
 Shoulder strap (1)  
 Stereo microphone (1)  
 Windscreen (1)  
 Cold shoe kit (1 set)  
 Lens mount cap  
 Flange back adjustment chart  
 Auto focus lens (supplied with the PMW-320K) (1)  
 Operating Instructions  
   English version (1)  
 CD-ROM  
   - Utility Software for XDCAM (application software, device driver software)  
   - Manuals for Solid-State Memory Camcorder (PDF Operating Instructions and Supplement) (1)

## Recommended Additional Equipment

### Option key

**Hardware Upgrade Key**  
 CBK-UPG02

### Power supply and related equipment

**AC Adaptor**  
 AC-DN10/DN2B

**Battery Pack**  
 BP-L80S

**Battery Charger**  
 BC-L160/L500/L70

### Lens, Viewfinder and Related Equipment

**Lens**  
<sup>1</sup>/<sub>2</sub>-type bayonet mount lenses only

**Viewfinder**  
 DXF-20W/51/C50W

**Viewfinder Rotation Bracket**  
 BKW-401

#### Note

The viewfinder able to use the BKW-401 is DXF-20W besides the supplied camcorder.

## Equipment for remote control

### Remote Control Unit

RM-B170/B750  
 RCP-1000/1500/1530  
 RCP-751/921  
 RCP-1001/1501

#### Note

The command network unit (CNU) is not supported.

### 50 Pin Interface and Digital Extender

CBK-CE01

### HD Camera Extension Unit

XDCU-50

### HD Camera Adaptor

XDCA-55 (when an optional CBK- CE01 is installed)

### MPEG TS Adaptor

HDCA-702 (when an optional CBK- CE01 is installed)

### Wi-Fi Adaptor

CBK-WA01 (when an optional CBK-UPG02 is installed)

### Media Adaptor

MEAD-MS01 (for “Memory Stick PRO-HG Duo HX” series)

MEAD-SD01 (for SDHC card)

### XQD ExpressCard Adaptor

QDA-EX1 (for XQD memory card)

### Media

#### SxS Memory Card

SxS PRO SBP-32 (32 GB)  
 SxS PRO SBP-64A (64 GB)  
 SxS-1 SBS-32G1A (32 GB)  
 SxS-1 SBS-64G1A (64 GB)

### Professional Harddisk Unit

PHU-220R

### Audio equipment

#### Microphone

ECM-678/674/673/680S

#### Microphone Holder

CAC-12

#### Wireless Microphone

DWR-S01D  
 WRR-855S/860C/861/862



Other peripheral devices

Tripod adaptor

VCT-14/U14

Video Light

UC-D200A (PROTECH)

Ultralight (Anton Bauer)

Pad

CBK-SP01 Soft Type Shoulder Pad

Equipment for maintenance and easier handling


Hard Carrying Case

LC-H300

Soft Carrying Case

LC-DS300SFT

Dimensions

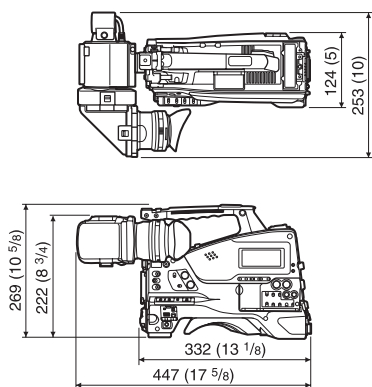


(in mm (inches))

Design and specifications are subject to change without notice.

Notes

- Always make a test recording, and verify that it was recorded successfully.  
SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF FAILURE OF THIS UNIT OR ITS RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS TO RECORD CONTENT OF ANY TYPE.
- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.

# Chart of Optional Components and Accessories

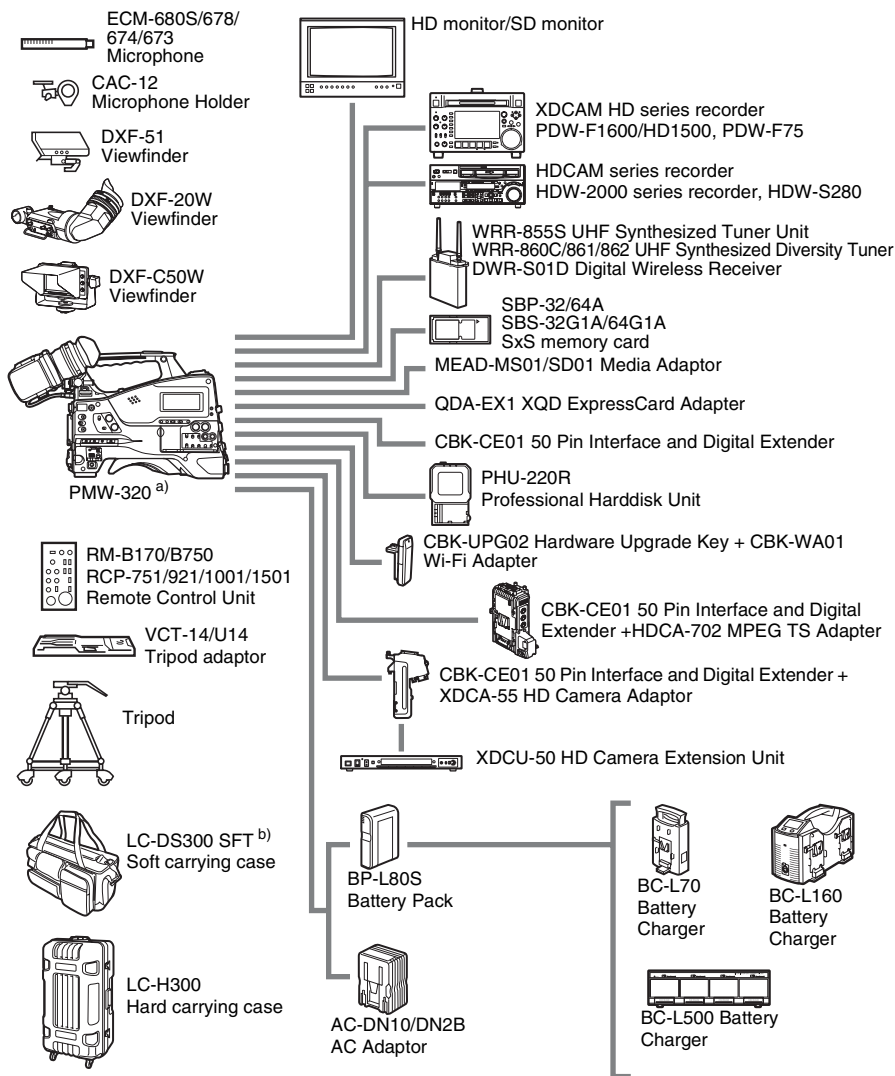

a) The PMW-320L requires a separately sold lens.

b) The carrying case is large enough to hold the camcorder with lens and microphone mounted. However, remove them if they protrude more than 25 cm (9 <sup>7</sup>/<sub>8</sub> inches) from the front of the main unit.

# About i.LINK

This section explains the specifications and features of i.LINK.

## What is i.LINK?

i.LINK is a digital serial interface designed to integrate devices equipped with i.LINK connectors. i.LINK allows your device to:

- Perform two-way transmission and reception of data such as digital audio and digital video signals.
- Control other i.LINK devices.
- Easily connect multiple devices with a single i.LINK cable.

Your i.LINK device is capable of connecting to a wide range of digital AV devices for data transfer and other operations.

Other advantages include the following feature.

When connected to multiple i.LINK devices, your i.LINK device can perform data transfer and other operations not only

with the directly connected devices but also with any of the devices that are connected to those devices. Therefore, you do not need to be concerned with device connection order. However, depending on the features and specifications of the connected devices, you may need to use certain functions differently, and you may not be able to transfer data or perform certain operations.

i.LINK, a nickname for IEEE 1394 proposed by Sony, is a trademark supported by many companies worldwide.

IEEE 1394 is an international standard defined by IEEE, the Institute of Electrical and Electronics Engineers, Inc.

### Note

The camcorder can be connected to one device with the i.LINK cable (DV cable). When you connect with an HDV or DV device that has two or more i.LINK connectors, refer to the operating instructions supplied with the connected device.

## About data transfer speed of i.LINK

i.LINK defines a maximum data transfer speed of approximately 100, 200 and 400 Mbps<sup>1)</sup> that are described as S100, S200 and S400 respectively. For i.LINK devices, a maximum data transfer speed that the device supports is identified on “Specifications” page of the operating instructions supplied with the device or near its i.LINK connector.

- 1) When connecting with the device that support different data transfer speed, the actual data transfer speed may be different from those described on the i.LINK connectors.

## What is Mbps?

Mega bits per second. A measure of the rate at which data is transmitted per second. In case of 100 Mbps, 100 Mega bits of data can be transmitted per second.


## i.LINK operation with your camcorder

For details on operation when other equipment with i.LINK (HDV or DV) connector is connected, see *page 152*.

*For details on connection with i.LINK cable and necessary software, refer to the operating instructions supplied with the connected device.*

## About the required i.LINK cable

Use the Sony 6-pin-to-4-pin or 6-pin-to-6-pin i.LINK cable to connect the i.LINK devices.

i.LINK and  are trademarks.

## MPEG-2 Video Patent Portfolio License

ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206.

“PACKAGED MEDIA” means any storage media storing MPEG-2 video information such as DVD movie which are sold/distributed to general consumers. Disc replicators or sellers of the PACKAGED MEDIA need to obtain licenses for their own business from MPEG LA. Please contact MPEG LA for any further information. MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206 <http://www.mpegla.com>

## About Bitmap Fonts

This product uses RICOH Bitmap Fonts produced and sold by Ricoh Company, Ltd.

# About OpenSSL

Because it uses the OpenSSL Toolkit, this product uses software developed by the OpenSSL Project (<http://www.openssl.org/>).

## OpenSSL License

-----

```
/* =====
 * Copyright (c) 1998-2008 The OpenSSL Project. All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 * notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in
 * the documentation and/or other materials provided with the
 * distribution.
 *
 * 3. All advertising materials mentioning features or use of this
 * software must display the following acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
 *
 * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
 * endorse or promote products derived from this software without
 * prior written permission. For written permission, please contact
 * openssl-core@openssl.org.
 *
 * 5. Products derived from this software may not be called "OpenSSL"
 * nor may "OpenSSL" appear in their names without prior written
 * permission of the OpenSSL Project.
 *
 * 6. Redistributions of any form whatsoever must retain the following
 * acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit (http://www.openssl.org/)"
 *
 * THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS" AND ANY
 * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
 * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
 * PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
 * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
 * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
```

- \* NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
- \* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
- \* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
- \* STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
- \* ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
- \* OF THE POSSIBILITY OF SUCH DAMAGE.

\* =====

- \* This product includes cryptographic software written by Eric Young
- \* (eay@cryptsoft.com). This product includes software written by Tim
- \* Hudson (tjh@cryptsoft.com).
- \*
- \* /

Original SSLeay License

-----

```
/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
 * All rights reserved.
 *
 * This package is an SSL implementation written
 * by Eric Young (eay@cryptsoft.com).
 * The implementation was written so as to conform with Netscapes SSL.
 *
 * This library is free for commercial and non-commercial use as long as
 * the following conditions are aheared to. The following conditions
 * apply to all code found in this distribution, be it the RC4, RSA,
 * lhash, DES, etc., code; not just the SSL code. The SSL documentation
 * included with this distribution is covered by the same copyright terms
 * except that the holder is Tim Hudson (tjh@cryptsoft.com).
 *
 * Copyright remains Eric Young's, and as such any Copyright notices in
 * the code are not to be removed.
 * If this package is used in a product, Eric Young should be given attribution
 * as the author of the parts of the library used.
 * This can be in the form of a textual message at program startup or
 * in documentation (online or textual) provided with the package.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 * 1. Redistributions of source code must retain the copyright
 * notice, this list of conditions and the following disclaimer.
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in the
 * documentation and/or other materials provided with the distribution.
 * 3. All advertising materials mentioning features or use of this software
 * must display the following acknowledgement:
 * "This product includes cryptographic software written by
 * Eric Young (eay@cryptsoft.com)"
 * The word 'cryptographic' can be left out if the rouines from the library
 * being used are not cryptographic related :-).
```

```

* 4. If you include any Windows specific code (or a derivative thereof) from
* the apps directory (application code) you must include an acknowledgement:
* "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"
*
* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND
* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.
*
* The licence and distribution terms for any publically available version or
* derivative of this code cannot be changed. i.e. this code cannot simply be
* copied and put under another distribution licence
* [including the GNU Public Licence.]
*/

```

# Index

## A

AC power 35  
 ACCESS lamps 20, 24  
 Accessories (optional) 170  
 Accessory fitting shoe 15  
 Adaptor connector 15  
 ALARM knob 18  
 Application software 151  
 Area setting 41  
 Arrow buttons (⇐, ⇒, ⬆, ⬇) 22  
 ASSIGN. 0 switch 18  
 ASSIGN. 1/2/3 switches 17  
 ASSIGNABLE 4/5 switches 23  
 Assignable switches, assigning functions 138  
 ATW (Auto Tracing White Balance) 19  
 Audio control section 22  
 AUDIO IN CH1/CH2 connectors 25  
 AUDIO IN CH-1/CH-2/CH-3/CH-4  
   switches 23  
 AUDIO IN selectors 25  
 Audio input system 44  
 Audio level  
   adjusting 59  
   adjusting playback level 18  
   meters 33  
 AUDIO OUT connector 26  
 AUDIO SELECT CH-1/CH-2 switches 23  
 AUTO W/B BAL switch 17

## B

BACKLIGHT button 21  
 Battery  
   attachment shoe 15  
   of the internal clock, exchanging 165  
   pack 34  
   remaining 31  
 BKW-401 38  
 Black balance, adjusting 51  
 BRIGHT control 29

## C

Camera adaptor 15  
 Clip(s)  
   batch copy 91  
   copying 90  
   cue up 86  
   defining names 81  
   deleting 72, 91  
   displaying properties 89  
   dividing 94  
   operating with a computer 150  
   operations 83  
   playing 71, 85  
   selecting 85  
 Clock setting 42  
 Color LCD 20  
 COLOR TEMP. button 18  
 Color temperature 31  
 Computer, connecting 150  
 Connection 148  
   computer 150  
   monitors 148  
   using i.LINK 152  
   using USB 150  
 CONTRAST control 29  
 Cover 19

## D

Date, setting 42  
 DC IN connector 15  
 DC OUT 12V connector 15  
 DCC (Dynamic Contrast Control) 18  
 Depth of field 31  
 Diopter adjustment ring 28  
 DISPLAY switches 21, 29

## E

EARPHONE jack 25  
 EJECT buttons 24  
 Electric color temperature filter 32  
 ESSENCE MARK button 22  
 EXPAND button 21  
 Expand thumbnail screen  
   displaying 92  
   to increase the number of divisions 92  
 Extender 30  
 External device connector 24



External devices 148  
     control 32  
 External input 32  
 External power source 31  
 Eyecup 28

## F

F FWD button/indicator 20  
 F REV button/indicator 20  
 Filter position 32  
 FILTER selector 17  
 Fitting for optional microphone holder 16  
 Flange focal length, adjusting 27, 43  
 Focus  
     adjusting 58  
     adjustment mode 32  
     position 30  
     ring 27  
 FOCUS switch 27  
 Frame Rec 76  
 Framing shots 78  
 Freeze Mix 78  
 F-RUN/SET/R-RUN switch 22

## G

GAIN selector 18  
 Gain value 33  
 GENLOCK IN connector 24  
 Green tally 30

## H

HD/SD SDI OUT connector 25  
 HDMI output connector 24  
 Histogram 33  
 HOLD button 21

## I

i.LINK 171  
     cable 171  
     connection 152  
 i.LINK (HDV/DV) connector 26  
 Index picture 84  
     changing 94  
 Initial value 98  
 Input source 32  
 Internal clock 42

Interval Rec 74  
 Iris  
     position 33  
     ring 27  
 IRIS switch 28

## L

LCD panel 20  
 Lens  
     cable clamp 16  
     locking lever 16  
     mount 16  
     mount cap 16  
     mount securing rubber 16  
     mounting 42  
 LENS connector 16  
 Lens file(s)  
     loading 147  
     loading automatically 147  
     saving 146  
     setting data 146  
 LEVEL CH-1/CH-2/CH-3/CH-4 knobs 22  
 LIGHT connector 16  
 LIGHT switch 14

## M

MACRO switch 27  
 Maintenance 155  
 Media  
     remaining capacity 26, 33  
     status 30  
 MENU button 22  
 MENU CANCEL/PRST/ESCAPE switch 19  
 MENU knob 17  
 MENU ON/OFF switch 19  
 MIC IN (+48 V) connector 16  
 MIC LEVEL control 17  
 Microphone holder 29  
     fitting 16  
 Microphone, connecting 44  
 MIRROR switch 29  
 MONITOR knob 18  
 MONITOR switches 18  
 Monitor, connecting 148  
 Monochrome LCD Panel 26  
 MPEG TS adaptor 15

**N**

ND filter 17  
 NEXT button 21  
 Nonlinear editing 152, 153  
 Number of system lines 31

**O**

OK mark(s) 84, 90  
   adding 90  
   deleting 90  
   setting 73  
 Operation status 30  
   of i.LINK device 32  
 Optional components 170  
 OUTPUT/DCC switch 18

**P**

PC connector 24  
 PEAKING control 29  
 Picture Cache 73  
 Planning metadata 79  
 PLAY/PAUSE button/indicator 20  
 Plug 28  
 Power source voltage/battery remaining  
   capacity 31  
 Power supply 34  
 POWER switch 14  
 Preset values, resetting 144  
 PRESET/REGEN/CLOCK switch 22  
 PREV button 20  
 PUSH AF button 27  
 PUSH AUTO button 28

**R**

REC START button 17  
 Recording  
   external input signals 153  
   from pre-stored video 73  
   on an external device 152  
   remaining time 69  
   review 71  
   time-lapse video 74  
 Recording mode 30  
   special settings indication 31  
 REMOTE connector 26  
 Reset 98, 144

RESET/RETURN button 21  
 RET button 28

**S**

Scene files  
   loading 145  
   saving 145  
 Search  
   with the expand thumbnail screen 86  
   with the shot mark thumbnail screen 86  
 SET button 22  
 Setup menu 95  
   basic operations 97  
   FILE menu 134  
   MAINTENANCE menu 121  
   menu list 99  
   OPERATION menu 99  
   PAINT menu 115  
 SHIFT button 22  
 Shooting 66  
   basic operations 70  
   stop motion animations 76  
   with Slow & Quick motion 77  
 Shot mark thumbnail screen 93  
 Shot mark(s)  
   adding 93  
   adding during playback 86  
   defining names 82  
   deleting 94  
   recording 73  
 Shoulder pad 16  
   adjusting the position 49  
 Shoulder strap fitting 15  
 Shoulder strap, using 48  
 Shutter  
   setting 54  
   speed 55  
 SHUTTER selector 17  
 Slot cover 24  
 SLOT SELECT button 24  
 Speaker 20  
 Specifications 165  
 Status information 64  
 STATUS ON/SEL/OFF switch 19  
 Status screens 64  
   ASSIGN SWITCH 65  
   AUDIO 65  
   BATTERY/MEDIA 65  
   CAMERA 64

- VIDEO 65
- STOP button 21
- Stopper 28
- SxS memory card slots 24
- SxS memory cards 66
  - ejecting 68
  - formatting 68
  - loading 67
  - restoring 69
  - selecting 68

## T

- TALLY indicators 25
- Tally indicators 29
- TALLY switch 25, 29
- TC IN connector 24
- TC OUT connector 25
- Testing 155
- THUMBNAIL button 22
- THUMBNAIL indicator 22
- THUMBNAIL menu 87
  - operations 88
- Thumbnail screen 83
  - displaying OK clip thumbnails only 88
  - displaying the all clips thumbnail 88
- Thumbnail(s)
  - changing the screen type 88
  - operations 87
- Time, setting 42
- Timecode 32
  - setting 62
  - synchronizing 63
- TLCS automatic adjustment 56
- TLCS control mode 32
- Tripod mount 16
- Tripod, mounting 47

## U

- UHF portable tuner, attaching 46
- USB connection 150
- User bits setting 62
- User setting data
  - loading 144
  - saving 143

## V

- VF connector 15

- Video format 31, 90
  - setting 50
- Video level indication 32
- Video light, connecting 48
- VIDEO OUT connector 25
- Viewfinder 28
  - adjusting focus 38
  - adjusting position 36
  - adjusting screen 38
  - adjusting the angle 37
  - attaching 36
  - attaching a 5-inch viewfinder 39
  - cable 29
  - cleaning 155
  - connectors 15
  - fitting shoe 15
  - positioning knob 16
  - positioning lever 15
  - positioning ring 15
  - raising up the barrel and eyepiece 37
  - screen display 30
- Voltage capacity 31

## W

- WARNING indicator 20
- Warnings 156
- WHITE BAL switch 19
- White balance memory 32
- White balance, adjusting 52
- Wi-Fi adapter 24
- Wireless microphone reception level 31
- Write protect 26, 67

## X

- XDCAM EX web sites 13

## Z

- ZEBRA switch 29
- Zoom 57
  - control connector 27
  - position 30
  - power zoom lever 28
  - ring 27
- ZOOM switch 27