

# BOMAG

---

## FAYAT GROUP

### Operating instructions Maintenance instructions

*Original operating instructions*


*BSS0134T*

---

## BMP 8500

---

S/N 101 720 11 1930 >

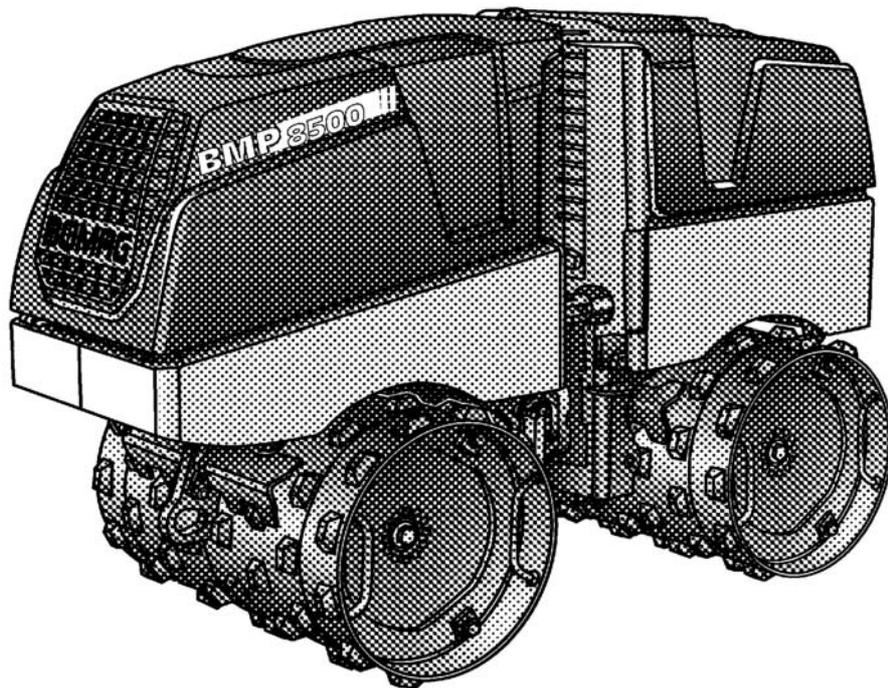

---

### Multi-purpose compactor

---

If the machine is equipped with a battery :

**CALIFORNIA**

**Proposition 65 Warning**

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**Wash hands after handling.**

If the machine is equipped with a diesel engine :

**CALIFORNIA**

**Proposition 65 Warning**

The engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

**BOMAG machines are products from the wide range of BOMAG compaction equipment.**

**BOMAG's vast experience in connection with state-of-the-art production and testing methods, such as lifetime tests of all important components and highest quality demands guarantee maximum reliability of your machine.**

This manual comprises:

- Safety regulations
- Operating instructions
- Maintenance instructions
- Trouble shooting

Using these instructions will

- help you to become familiar with the machine.
- avoid malfunctions caused by unprofessional operation.

Compliance with the maintenance instructions will

- enhance the reliability of the machine on construction sites,
- prolong the lifetime of the machine,
- reduce repair costs and downtimes.

BOMAG GmbH will not assume liability for the function of the machine

- if it is handled in a way that does not comply with the usual modes of use,
- if it is used for purposes other than the ones it is intended for (see safety regulations).

No warranty claims can be lodged in case of damage resulting from

- operating errors,
- insufficient maintenance and
- wrong fuels and lubricants.

#### **Please note!**

This manual was written for operators and maintenance personnel on construction sites.

Always keep this manual close at hand, e.g. in the tool compartment of the machine or in a specially provided container. These operating and maintenance instructions are part of the machine.

You should only operate the machine after you have been instructed and in compliance with these instructions.

Strictly observe the safety regulations.

Please observe also the guidelines of the Civil Engineering Liability Association "Safety Rules for the Operation of Road Rollers and Soil Compactors" and all relevant accident prevention regulations.

**For your own personal safety you should only use original spare parts from BOMAG.**

**In the course of technical development we reserve the right for technical modifications without prior notification.**

These operating and maintenance instructions are also available in other languages.

Furthermore, the spare parts catalogue is available from your BOMAG dealer against the serial number of your machine.

Your BOMAG dealer will also supply you with information about the correct use of our machines in soil and asphalt construction.

The above notes do not constitute an extension of the warranty and liability conditions specified in the general terms of business of BOMAG GmbH.

We wish you successful work with your BOMAG machine.

BOMAG GmbH

Printed in Germany

Copyright by BOMAG

#### FCC Notice

1) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

3) This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Foreword

### Please fill in

.....

Machine type (Fig. 1)

.....

Serial-number (Fig. 1 and 2)

.....

Motor type (Fig. 3)

.....

Motor number (Fig. 3)

#### **i** Note

*Supplement the above data together with the commissioning protocol.*

*During commissioning our organisation will instruct you in the operation and maintenance of the machine.*

*Please observe strictly the safety regulations and all notes on risks and dangers!*

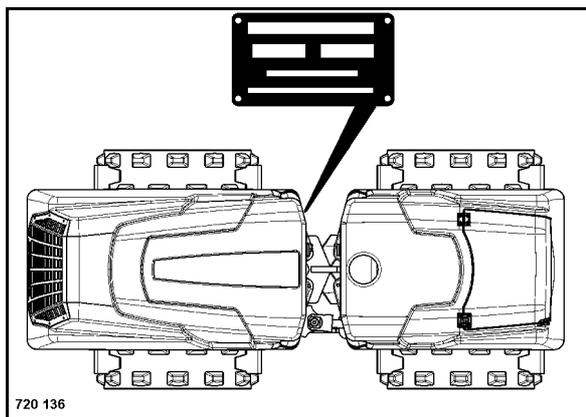


Fig. 1

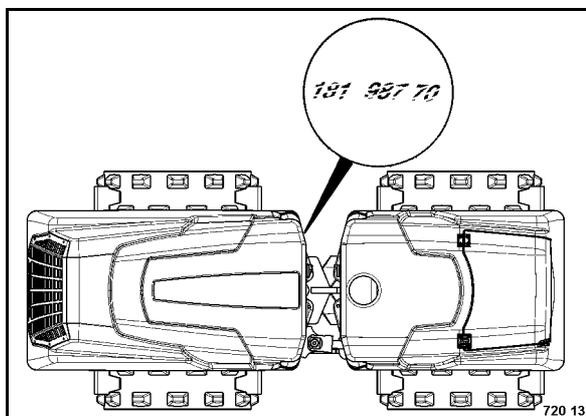


Fig. 2

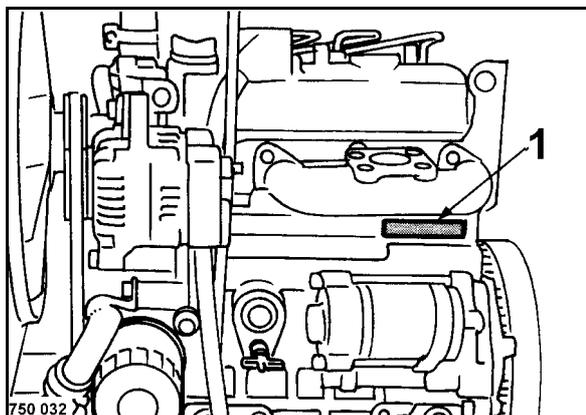


Fig. 3


<b>Technical Data</b>	<b>7</b>
<b>Safety regulations</b>	<b>13</b>
<b>Indicators and Controls</b>	<b>23</b>
3.1 General notes	26
3.2 Description of indicators and control elements	26
<b>Operation</b>	<b>31</b>
4.1 General	32
4.2 Tests before taking into operation	32
4.3 BOSS safety system	33
4.4 Starting the engine	34
4.5 Driving the machine (cable remote control)	36
4.6 Safety inspection for the cable remote control	39
4.7 Switching the vibration on and off	39
4.8 Shut down the engine	41
4.9 Shutting down the engine manually	42
4.10 Starting operation of the radio remote control	43
4.11 Replacing, recharging the radio remote control power pack	47
4.12 Safety inspection for the radio remote control	49
4.13 Switching off of the radio remote control in case of radio interferences	50
4.14 Switching ECO-mode on and off	50
4.15 Entering the machine type code	51
4.16 Teaching the BOSS safety system transponder	52
4.17 Assembling/removing the drum extension	53
4.18 Loading and transport	53
<b>Maintenance</b>	<b>55</b>
5.1 General notes on maintenance	56
5.2 Fuels and lubricants	57
5.3 Table of fuels and lubricants	60
5.4 Running-in instructions	61
5.5 Maintenance table	62
5.6 Check the engine oil level	65
5.7 Checking the hydraulic oil level	65
5.8 Checking the fuel level	66
5.9 Check the water separator	66
5.10 Checking the coolant level	67
5.11 Check the air intake hose	69
5.12 Changing engine oil and oil filter	69
5.13 Checking, tensioning, replacing the V-belt	71
5.14 Clean the cooling fins on engine and hydraulic oil cooler	72
5.15 Change the oil in the vibrator shaft housing	73
5.16 Checking the central screw of the drive hub	75

## Table of Contents

5.17	Draining the fuel tank sludge	77
5.18	Changing the fuel pre-cleaner, bleeding the fuel system	77
5.19	Battery service, checking the main battery switch	79
5.20	Check the rubber buffers	80
5.21	Checking, adjusting the valve clearance	81
5.22	Safety field measurement of the Boss safety system	82
5.23	Change hydraulic oil and filter	83
5.24	Change the coolant	84
5.25	Change the fuel lines	86
5.26	Checking the injection pressure	86
5.27	Checking the fuel injection pump	87
5.28	Checking the fuel injection timing	87
5.29	Check, clean, replace the combustion air filter	89
5.30	Adjust the scrapers	92
5.31	Tightening torques for screws with metric unified thread	92
5.32	Engine conservation	93
<b>Trouble shooting</b>		<b>95</b>
6.1	General notes	96
6.2	Engine problems	97
6.3	Problems with remote control Hetronic with spiral cable	99
6.4	Problems with radio remote control Hetronic in radio operation	102
6.5	Faults in BOSS safety system	104
6.6	Fault indicator	105
6.7	Fault code	106
6.8	Input codes for BLM control	119

## **1 Technical Data**

## Technical Data

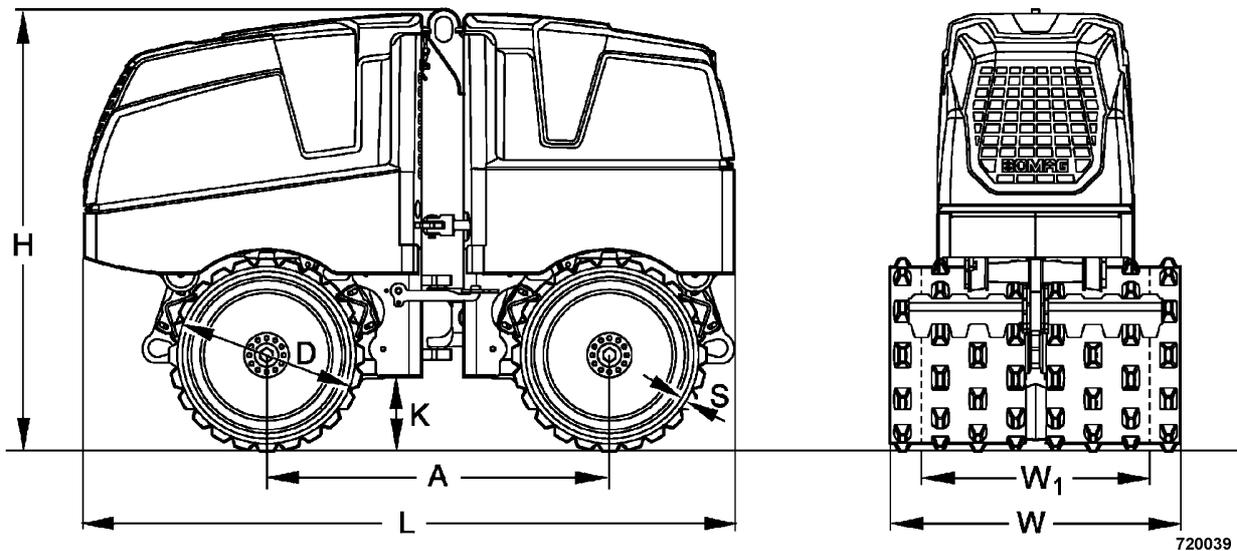

720039

Dimensions in mm (inches)	A	D	H	K	L	S	W	W <sub>1</sub>
<b>BMP 8500</b>	1000 (39.4)	520 (20.5)	1275 (50.2)	222 (8.7)	1897 (74.7)	25 (1.0)	850 (33.5)	610 (24.2)

\*

### BMP 8500

#### Weights

Operating weight (CECE)	kg (lbs)	1595 (3516)
Basic weight	kg	1585 (3494)
Mean axle load (CECE)	kg	775 (1709)

#### Travel characteristics

Travel speed (1) forward/reverse	km/h (mph)	1,3 (0.8)
Travel speed (2) forward/reverse	km/h (mph)	2,5 (1.6)
Max. gradability without/with vibration (soil dependent)	%	55/45

#### Drive

Engine manufacturer		Kubota
Type		D 1005
Cooling		Water
Number of cylinders		3
Rated power ISO 9249	kW (hp)	14,5 (19.4)
Rated speed	rpm	2600
Drive system		hydrostatic
Driven drums		front + rear

#### Brakes

Service brake		hydrostatic
Parking brake		mechanical

\*

**BMP 8500**

### Steering

Type of steering	Articulated joint
Steering operation	hydrostatic

### Vibration system

Vibrating drum	front + rear
Drive system	hydrostatic
Frequency	Hz 42
Amplitude 1/2	mm (in) 1,12/0,56 (0.04/0.02)
Centrifugal force 1/2	kN (lbf) 72/36 (16186/8093)

### Filling capacities

Fuel (diesel)	l (gal us)	24 (6.3)
Hydraulic oil	l (gal us)	17 (4.5)
Engine oil	l (gal us)	4,7 (1.24)
Coolant	l (gal us)	4,5 (1.19)
Vibration housing	l (gal us)	2x 1,7 (2x 0.45)

### Safety field system

Performance level	PL c
Reach of the safety field in front of/behind the machine	m (ft) > 1,20 (> 3,94)

### Safety field control

Voltage	V	8 ... 30
Current consumption at 12 V	A	1.5
Protection class		IP 55
Safety field frequency	kHz	125
Operating temperature	°C (°F)	-20 ... +80 (-4 ... +176)
Storage temperature	°C (°F)	-40 ... +85 (-40 ... +185)

### Transponder in remote control

Voltage (cable operation)	V	9 ... 30
Voltage (battery operation)	V	3.6
Transmitting frequency range	MHz	868/916
Operating temperature	°C (°F)	-20 ... +80 (-4 ... +176)
Storage temperature	°C (°F)	-40 ... +85 (-40 ... +185)

### Safety field antenna

Protection class	IP 55
Operating temperature	°C (°F) -20 ... +80 (-4 ... +176)
Storage temperature	°C (°F) -40 ... +85 (-40 ... +185)

### Radio remote control

Manufacturer	HETRONIC
--------------	----------

### Transmitter

Frequency band	F-band
----------------	--------

## Technical Data

*		
		<b>BMP 8500</b>
Transmitting frequency range	MHz	868 / 916
Number of channels		1
Reach, depending on environment	m (ft)	approx. 30 (98.4)
Current draw	mA	approx. 10
Weight	kg (lbs)	approx. 1.6 (3.5)

### Receiver

Receiver frequency range	MHz	868 / 916
Current draw	mA	approx. 10

### Transmitter power pack

Voltage	V	3.6
Capacity	Ah	1.2

### Battery charger

Operating voltage	V (AC)	110/230
	V (DC)	12 - 24

\* The right for technical modifications remains reserved

The following noise and vibration data acc. to

- EC Machine Regulation edition 2006/42/EC
- the noise regulation 2000/14/EG, noise protection guideline 2003/10/EC
- Vibration Protection Regulation 2002/44/EC

were determined during conditions typical for this type of equipment and by application of harmonized standards.

During operation these values may vary because of the existing operating conditions.

### **Noise value**

**Sound pressure level on the place of the operator:**

$L_{pA} = 85 \text{ dB(A)}$ , determined acc. to ISO 11204 and EN 500

**Guaranteed sound power level:**

$L_{WA} = 103 \text{ dB(A)}$ , determined acc. to ISO 3744 and EN 500

### **Danger**

**Wear your personal noise protection means (ear defenders) before starting operation.**



## **2 Safety regulations**

### General

**This BOMAG machine has been built in compliance with the latest technical standard and complies with the applicable regulations and technical rules. However, dangers for persons and property may arise from this machine, if:**

- it is used for purposes other than the ones it is intended for,
- it is operated by untrained personnel,
- it is changed or converted in an unprofessional way,
- the safety instructions are not observed.

**Each person involved in the operation, maintenance and repair of the machine must therefore read and comply with these safety regulations. If necessary, this must be confirmed by obtaining the signature of the customer.**

Furthermore, the following obviously also applies:

- applicable accident prevention instructions,
- generally accepted safety and road traffic regulations,
- country specific safety regulations. It is the duty of the operator to be acquainted with these instructions and to apply these accordingly. This applies also for local regulations concerning different types of handling work. Should the recommendations in these instructions be different from the regulations valid in your country, you must comply with the safety regulations valid in your country.

### Intended use

This machine must only be used for:

- Compaction of cohesive soils in trench construction
- Construction backfills
- Earthwork in sewer and pipeline construction
- Earthwork in railway and dam construction
- Earthwork in sanitary landfill construction
- Subbase and foundation work

The place of the operator is behind the machine.

When operating the machine from the opposite side, actuation of travel controls will cause ma-

chine movements, which are not in compliance with the movement of the control elements.

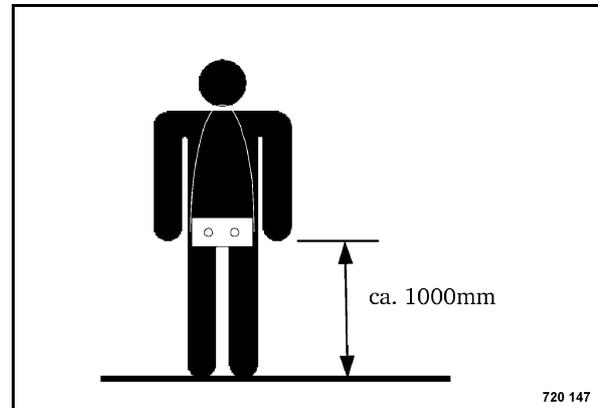


Fig. 4

- The remote control must be carried in front of the body, as intended (Fig. 4).

### Unintended use

Danger may arise from the machine if it is used for purposes other than the one it is intended for.

Any danger caused by unintended use is the sole responsibility of the customer or driver/operator, the manufacturer cannot be made liable.

Examples for unintended use are:

- work with vibration on hard concrete, cured bitumen layers or extremely frozen ground
- driving on unstable subbases or insufficient grip or too small contact area (danger of tipping over)
- using the machine on for towing
- operating the machine without visual contact

The transport of persons is prohibited.

Starting and operation of the machine in explosive environments and in underground mining is prohibited.

### Remaining dangers, remaining risks

Despite careful work and compliance with standards and regulations it cannot be ruled out that further dangers may arise when working with and handling the machine.

Both the machine as well as all other system components comply with the currently valid safety regulations. Nevertheless, remaining risks cannot be ruled out completely, even when using the ma-

chine for the purpose it is intended for and following all information given in the operating instructions.

A remaining risk can also not be excluded beyond the actual danger zone of the machine. Persons remaining in this area must pay particular attention to the machine, so that they can react immediately in case of a possible malfunction, an incident or failure etc.

All persons remaining in the area of the machine must be informed about the dangers that arise from the operation of the machine.

### Regular safety inspections

Have the machine inspected by an expert (capable person) as required for the condition the machine is working under, but at least once every year.

### Who is allowed to operate the machine?

Only trained, instructed and authorized persons of at least 18 years of age are permitted to drive and operate this machine. For operation of the machine the responsibilities must be clearly specified and complied with.

Persons under the influence of alcohol, medicine or drugs are not allowed to operate, service or repair the machine.

Maintenance and repair work requires specific knowledge and must therefore only be performed by trained specialists.

### Conversions and alterations to the machine

Unauthorized conversions to the machine are prohibited for safety reasons.

Original parts and accessories have been specially designed for this machine. We wish to make expressly clear that we have not tested or authorized any original parts or special equipment not supplied by us. The installation and/or use of such products can impair the active and/or passive driving safety. The manufacturer expressly excludes any liability for damage resulting from the use of non-original parts or accessories.

### Damage, deficiencies, misuse of safety installations

Machines which are not safe to operate or in traffic must be immediately taken out of service and shall not be used, until these deficiencies have been properly rectified.

Safety installations and switches must neither be removed nor must they be made ineffective.

### Safety notes in the operating and maintenance instructions:

#### **Danger**

Sections marked like this point out possible dangers for persons.

#### **Caution**

Sections marked like this point out possible dangers for the machine or for parts of the machine.

#### **Note**

Sections marked like this provide technical information concerning the optimal economical use of the machine.

#### **Environment**

Sections marked like this highlight activities for the safe and environmental disposal of fuels and lubricants as well as replaced parts.

Observe all environment protection regulations.

### Loading the machine

Use only stable loading ramps of sufficient load bearing capacity. The ramp inclination must be less than the gradability of the machine.

Make sure that persons are not endangered by the machine tipping or sliding off.

Always engage the articulation lock before loading, lifting and transporting the machine.

Use only safe lifting gear of sufficient load bearing capacity. Minimum lifting capacity of lifting gear: see operating weight in chapter "Technical Data".

For lifting the machine attach the lifting gear only to the lifting eye provided for this purpose.

## Safety regulations

Check lifting eye for damage before use. Do not use a damaged or in any other way impaired lifting eye.

The machine must not swing about when being lifted.

Do not step or stand under suspended loads.

Lash the machine down, so that it is secured against rolling, sliding and turning over.

Check the fastening of the central lifting hook before each use.

### Recovering/towing the machine

The machine can be recovered by lifting it out of the danger area.

### Recovering/towing the machine

The machine can be recovered by lifting it out of the danger area.

#### **Danger**

**Life hazard!**

**Lift the machine only with suitable lifting gear.**

**Weight: see chapter "Technical Data".**

### Starting the machine

#### Before starting

When operating several machines with radio remote controls the system numbers of the individual control units must be checked.

Use only machines which are serviced at regular intervals.

Become acquainted with the equipment, the control elements, the working principle of the machine and the working area.

Wear your personal protective outfit (hard hat, safety boots, etc.).

Before starting the machine check whether:

- persons or obstructions are near the machine
- the machine shows any obvious faults
- all guards and safety elements are in place
- brakes, control elements and horn are working
- engine hood is closed and locked

Do not start the machine with defective gauges, control lights or control elements.

Do not take any loose objects with you or fasten them to the machine.

#### Starting

For starting set all control levers to 'neutral position'.

Do not use any starting aids like start pilot or ether.

After starting check all gauges and control lights.

#### Starting with jump wires

Connect positive with positive and negative with negative (ground cable) – always connect the ground strap last and disconnect it first! A wrong connection will cause severe damage in the electric system.

Do not start the engine by shorting the electric terminals on the starter motor, because the machine may start to drive immediately.

Do not use any starting aids like start pilot or ether.

#### Starting and operation of the machine is closed rooms and trenches

Exhaust gases are highly dangerous! Always ensure an adequate supply of fresh air when starting and operating in closed rooms and trenches!

### Driving the machine

#### Persons in the danger area

Before taking up work, also after breaks, you should always convince yourself that the danger zone is free of persons or obstructions, especially when driving in reverse.

Give warning signals, if necessary. Stop work immediately if persons remain in the danger zone, despite the warning.

#### Driving

Do not use the machine to transport persons.

In case of unusual noises and development of smoke perform trouble shooting and have the fault corrected.

Always keep a sufficient distance to excavation walls and embankments and do not use working methods that could impair the stability of the machine.

Do not work with vibration on hard concrete, cured bitumen layers or extremely frozen ground.

### Driving on inclinations and slopes

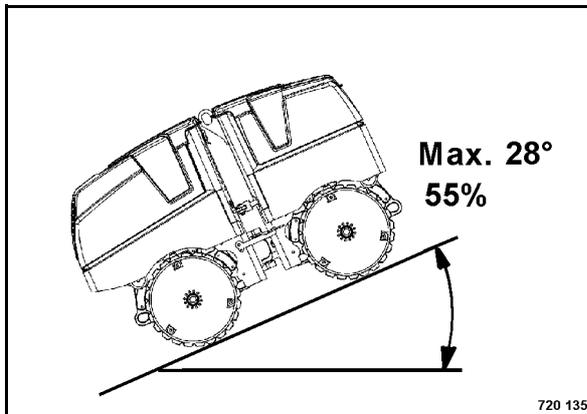


Fig. 5

Do not drive on gradients exceeding the maximum gradability of the machine.

On slopes drive extremely careful and always directly up or down the slope. Change to a lower gear before starting to drive.

Wet and loose soils considerably reduce the ground adhesion of the machine on inclinations and slopes. Higher risk of accident!

### Inclination

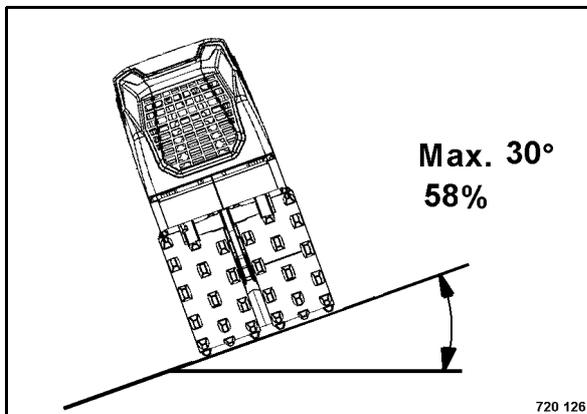


Fig. 6

The tipping angle was measured in static condition on level, hard ground with the machine stopped, no steering and without vibration.

With loose soil, acceleration/deceleration, running vibration, steering or attached accessories the tipping angle may be considerably lower.

Driving across slopes should therefore be strictly avoided, because of the high risk of tipping over and the related risk of severe or even fatal accidents.

You should therefore always drive straight up or down a slope.

### Behaviour in traffic

Match the speed to the working conditions.

Always give way to loaded transport vehicles.

Keep away from edges and embankments.

### Checking the effect of vibration

When compacting with vibration you must check the effect on nearby buildings and underground supply lines (gas, water, sewage, electric power), if necessary stop compaction work with vibration.

Do not activate the vibration on hard (frozen, concrete) ground. Danger of bearing damage!

### Parking the machine

Park the machine on horizontal, level, firm ground.

Before leaving the machine:

- shut the engine down, pull the ignition key off
- secure the machine against unintended use.
- Pull off the main battery switch.

Mark machines, which could be in the way, with a clearly visible sign.

### Refuelling

Do not inhale any fuel fumes.

Refuel only with the engine shut down.

Do not refuel in closed rooms.

No open fire, do not smoke.

Monitor the entire refuelling process.

Do not spill any fuel. Catch running out fuel, do not let it seep into the ground.

Wipe off spilled fuel. Keep dirt and water away from the fuel.

A leaking fuel tank can cause an explosion. Ensure tight fit of the fuel tank cover, if necessary replace immediately.

### Fire protection measures

Familiarise yourself with the location and the operation of fire fighting equipment. Observe all fire reporting and fire fighting possibilities.

### Maintenance work

Comply with the maintenance work described in the operating and maintenance instructions, including the information concerning the replacement of parts.

Maintenance work must only be performed by qualified and authorized persons.

Keep unauthorized persons away from the machine.

Do not perform maintenance work while the machine is driving or the engine is running.

Park the machine on horizontal, level, firm ground.

Pull off the ignition key and switch off the main battery switch.

### Work on hydraulic lines

Relieve hydraulic pressures before working on hydraulic lines. Hydraulic oil escaping under pressure can penetrate the skin and cause severe injury. When being injured by hydraulic oil consult a medical doctor immediately, as otherwise this may cause severe infections.

Do not step in front of or behind the drums when performing adjustment work in the hydraulic system.

Do not change the setting of pressure relief valves.

Drain the hydraulic oil at operating temperature – danger of scalding!

Catch running out hydraulic oil and dispose of environmentally.

Always catch and dispose of hydraulic oils separately.

Do not start the engine after draining the hydraulic oil.

Once all work is completed (with the system still depressurized!) check all connections and fittings for leaks.

### Changing hydraulic hoses

Hydraulic hoses must be visually inspected at regular intervals.

Hydraulic hoses must be immediately replaced if:

- the outer layer is damaged down to the inlay (e.g. chafing, cuts, cracks)
- the outer layer is brittle (formation of cracks in the hose material)

- the hose shows deformations in pressurized and depressurized condition, which do not comply with the genuine shape of the hydraulic hose
- the hose shows deformations in bends, e.g. squeezing, buckling, layer separation, formation of blisters
- parts of the hose are leaking.
- hoses are not correctly installed.
- the hydraulic hose has separated from the fitting
- the fitting shows corrosion that impairs both function and strength.
- hoses are mixed up by mistake.
- fittings are damaged or deformed, whereby the function and strength of the hose/hose connection is impaired.

Only genuine BOMAG replacement hydraulic hoses ensure that the correct hose type (pressure range) is used at the right location.

### Working on the engine

Shut the engine down before opening the engine hood.

Drain the engine oil at operating temperature – danger of scalding!

Wipe off spilled oil, catch running out oil and dispose of environmentally.

Store used filters and other oil contaminated materials in a separate, specially marked container and dispose of environmentally.

Do not leave any tools or other objects, that could cause damage, in the engine compartment.

### Working on electric parts of the machine

#### **Caution**

**Disconnect the minus pole first and the plus pole after.**

**Connect the battery in reverse order. Connect the plus pole first and the minus pole after.**

Before starting to work on electric parts of the machine disconnect the battery and cover it with insulating material.

Do not use fuses with higher ampere ratings and do not repair fuses with a piece of wire. Fire hazard!

### Working on the battery

When working on the battery do not smoke, do not use open fire!

Do not let acid come in contact with hands or clothes! When injured by acid flush off with clear water and seek medical advice.

Metal objects (e.g. tools, rings, watch straps) must not come in contact with the battery poles – danger of short circuit and burning!

When recharging non-serviceable batteries remove all plugs, to avoid the accumulation of explosive gases.

Observe the applicable instructions when starting with an auxiliary battery.

Dispose of old batteries according to regulations.

Switch off the charging current before removing the charging clamps.

Ensure sufficient ventilation, especially if the battery is to be charged in a closed room.

### Working on the fuel system

Do not inhale any fuel fumes.

Avoid open fire, do not smoke, do not spill any fuel.

Catch running out fuel, do not let it seep into the ground and dispose off environmentally.

### Cleaning work

Do not perform cleaning work while the motor is running.

Do not use gasoline or other easily inflammable substances for cleaning.

When cleaning with steam cleaning equipment do not subject electrical parts and insulation material to the direct jet of water, or cover it beforehand.

- Do not guide the water jet into the exhaust and into the air filter.

### After maintenance work

After all maintenance work is completed reinstall all guards and safety installations.

### Repair

Mark a defective machine by attaching a warning tag to the dashboard.

Before starting electric welding work on the machine, all electrical components must be disconnected from the power supply.

Repair work must only be performed by qualified and authorized persons. Use our repair instructions for this work.

Exhaust gases are highly dangerous! Always ensure an adequate supply of fresh air when starting in closed rooms!

### Test

The safety of compaction equipment must be checked by a specialist as required in dependence on the application and the operating conditions, however at least once every year.

### Radio remote control

**The machine must only be operated within the field of vision of the operator.**

The radio remote control must only be used by trained and authorized persons.

The safety features incorporated in the radio remote control must be checked at regular intervals.

A defective radio remote control must no longer be used.

In case of radio interferences watch the fault code display and switch to cable remote control, if necessary

The machine will stop when the reach of the radio remote control is exceeded.

In case of defects the radio remote control must be immediately taken out of service. The transmitter must be switched off via the emergency stop function. The connecting cable must be disconnected from the machine related socket on the receiver. The radio remote control must only be repaired by the manufacturer or specialists authorized by the manufacturer.

When working on plug connections the machine battery must be disconnected or the connecting cable of the receiver pulled off.

All work related with the initial installation of a system or with repair work must only be performed by qualified personnel.

The person performing the work is fully liable for professional execution of repair and maintenance work in compliance with the regulations of the manufacturer.

Warranty on spare parts can only be granted if these parts were installed in compliance with our regulations and instructions and by personnel au-

## Safety regulations

thorized by us. We will not assume liability for changes and modifications not performed by us.

### **Information and safety stickers/decals on the machine**

Keep safety stickers in good and legible condition (see parts manual) and comply with their meaning.

Replace damaged and illegible stickers/decals.

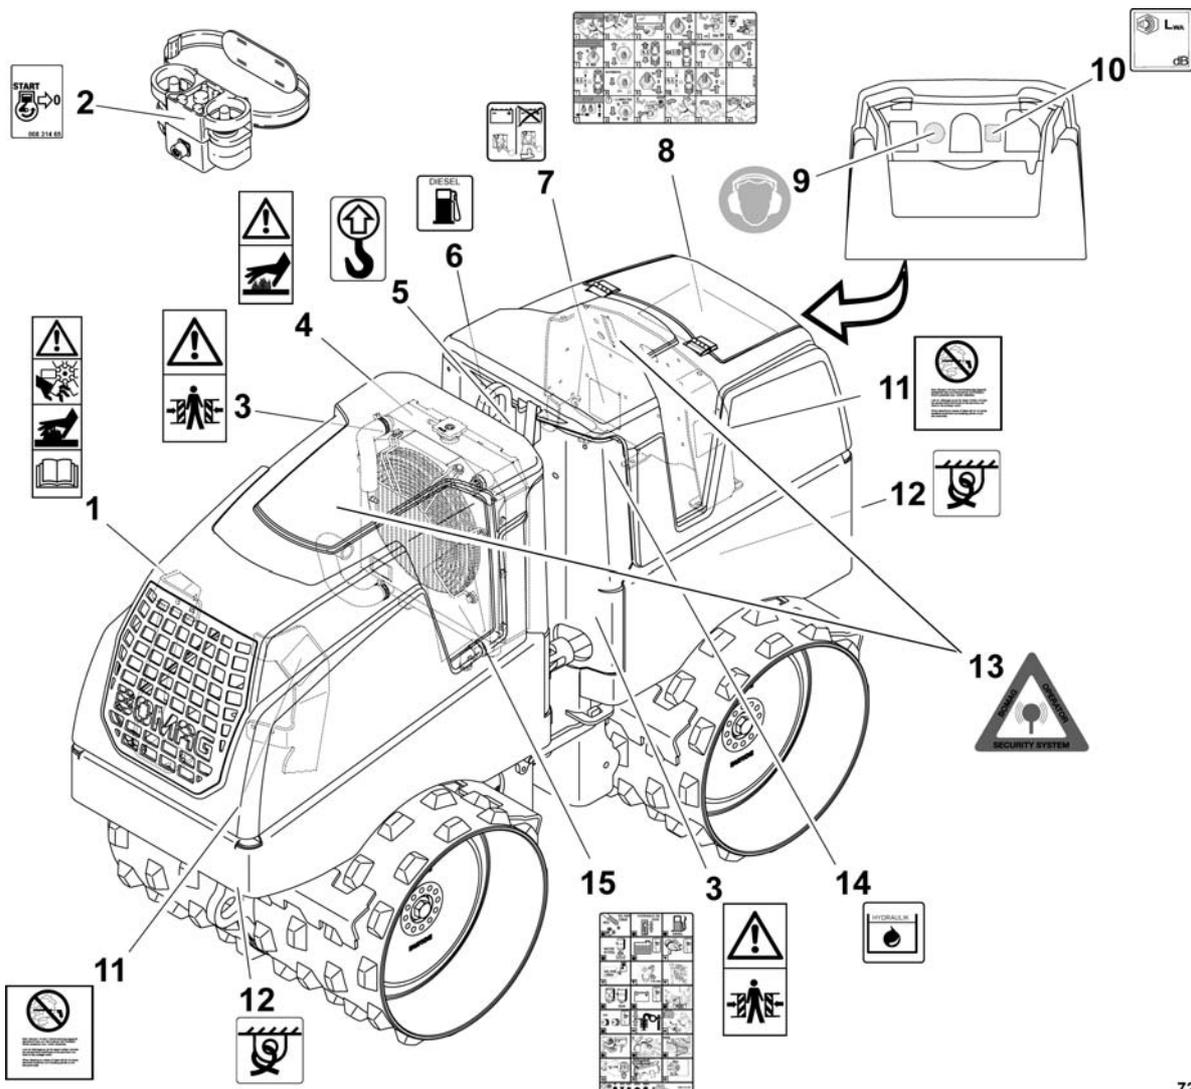


Fig. 7

720149

**Stickers and decals**

- |   |   |    |   |
|---|---|----|---|
| 1 | Warning sticker: Hand injuries and hot surface, read operating instructions | 10 | Information sticker "Guaranteed sound capacity level" |
| 2 | Information sticker "Engine start"  | 11 | Maintenance sticker "High pressure cleaner"           |
| 3 | Warning sticker "Danger of crushing"  | 12 | Information sticker "Lashing points"                  |
| 4 | Warning sticker "Hot surface"   | 13 | Information sticker "Safety field"                    |
| 5 | Information sticker "Lifting point"   | 14 | Information sticker "Hydraulic oil"                   |
| 6 | Information sticker "Diesel"  | 15 | Maintenance sticker                                   |
| 7 | Information sticker "Battery disconnecting switch"                          |    |   |
| 8 | Brief operating instructions  |    |   |
| 9 | Instruction sticker: "Wear ear defenders"                                   |    |   |

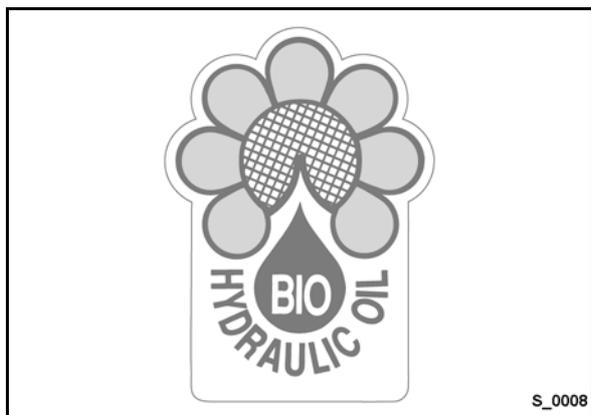


Fig. 8

### Information sticker "Bio Hydraulic Oil"\*



Fig. 9

### Information sticker "Panolin 46"\*\*

\* Optional equipment

\*\* Optional equipment

### **3 Indicators and Controls**

## Indicators and Controls

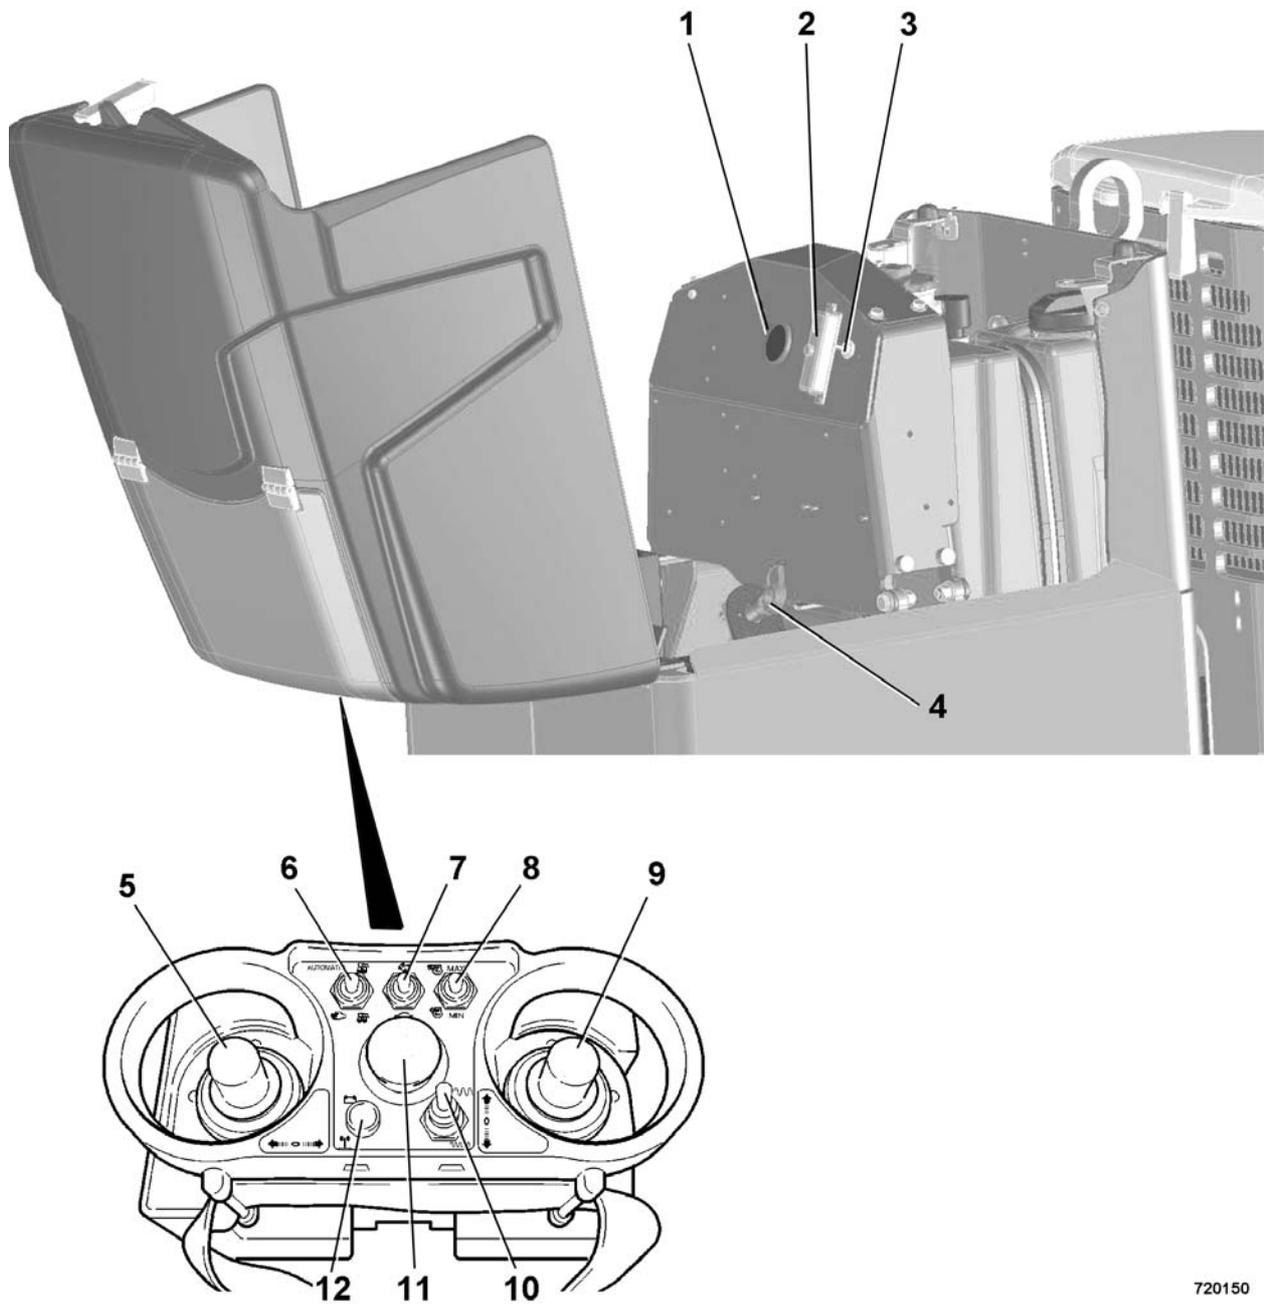


Fig. 10

720150

- 1 Display module
- 2 Fuse box
- 3 Toggle switch for cable remote control/radio remote control
- 4 Main battery switch
- 5 Steering lever
- 6 Toggle switch, vibration automatic/manual
- 7 Toggle switch, travel ranges
- 8 Toggle switch, engine speed
- 9 Travel lever
- 10 Toggle switch for vibration high/low amplitude
- 11 Emergency stop switch
- 12 Control light data transfer/power pack radio remote control

### 3.1 General notes

If you are not yet familiar with the control and display elements on this machine you should read this section thoroughly before starting any operation on the machine. Here all functions are described in detail.

Section 4 "Operation" contains only brief descriptions of the individual control steps.

### 3.2 Description of indicators and control elements

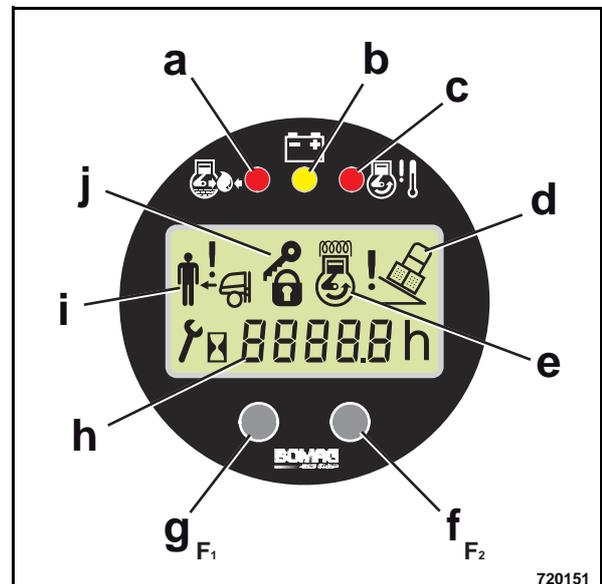


Fig. 11

#### No. 1 = Display module

- a red** = Engine oil pressure warning lamp  
Lights if the engine oil pressure is too low  
Check engine oil level, repair the engine if necessary.
- b yellow** = Charge control lamp  
Lights if the battery is not being charged.  
Check the V-belt, if necessary repair the generator.
- c red** = Coolant temperature warning light  
Lights red if the temperature of the engine coolant is too high
- d** = Tipping angle warning indicator  
Lights when the tipping angle of the machine has reached > 45° in lateral direction or > 60° in travel direction.  
The machine will stop, vibration is shut down.  
Restart the machine and move it carefully out of the danger area.
- e** = Preheating control  
Preheating for starting at low temperatures.

- f** = Function key F2  
To enter code numbers in connection with function key F1
- g** = Function key F1  
To enter code numbers in connection with function key F2
- h** = Operating hour meter  
Counts the operating hours while the engine is running.  
All maintenance work must be performed according to the indicated operating hours.  
Display of machine type code, remote control code and fault codes.
- i** = Display of safety field system  
Lights when the operator is within the safety field. The machine stops.  
Move the travel lever accordingly to free the machine from the obstruction.
- j** = not used

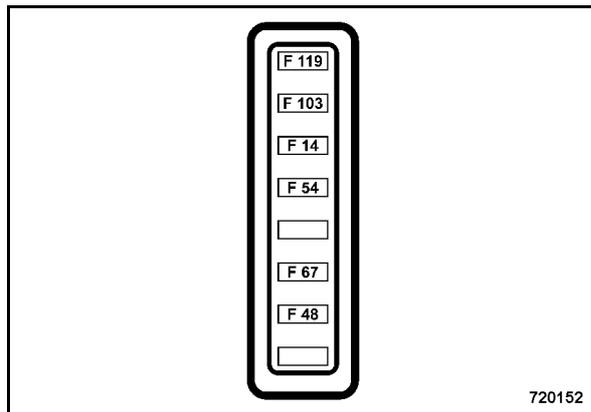


Fig. 12

### No. 2 = Fuse box

- F119 = (20A) Fuse for starter motor
- F103 = (10A) Fuse potential 15
- F14 = (25A) Fuse for engine solenoid
- F54 = (5A) Fuse for cable remote control
- F67 = (25A) Fuse control (potential 30)
- F48 = (30A) Preheating

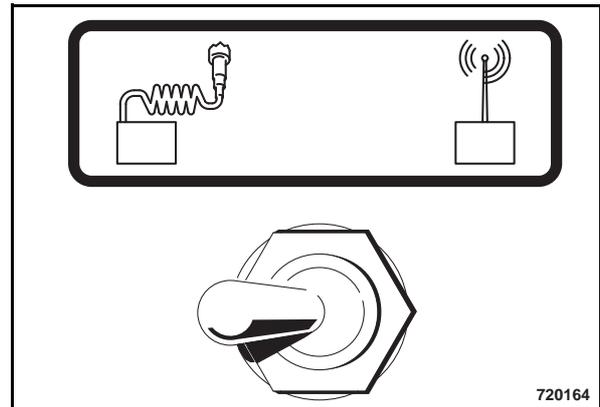


Fig. 13

### No. 3 = Toggle switch for cable remote control/radio remote control

Position left = Cable remote control

Position right = Radio remote control\*

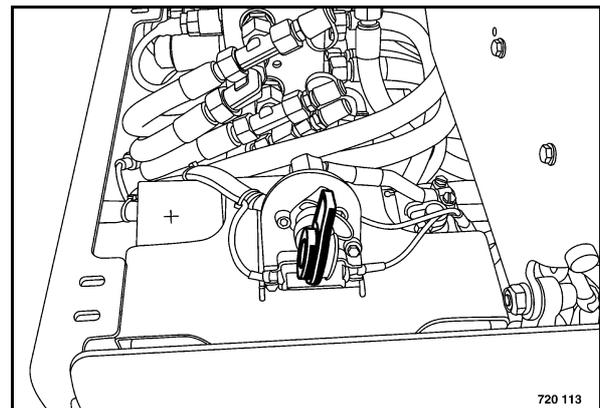


Fig. 14

### No. 4 = Main battery switch

Disconnects the ground contact in the electric circuit of the machine.

#### **i** Note

*If the power pack of the radio remote control is to be charged, the main battery switch must remain switched on when the engine is shut down.*

\* Optional equipment

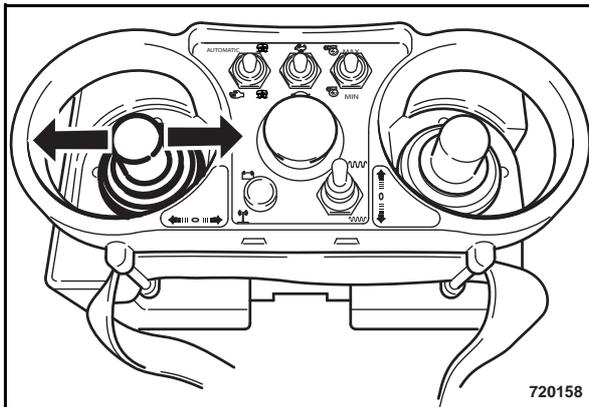


Fig. 15

**No. 5 = Steering lever**

- Middle position = Straight ahead
- Position left = Driving to the left
- Position right = Driving to the right

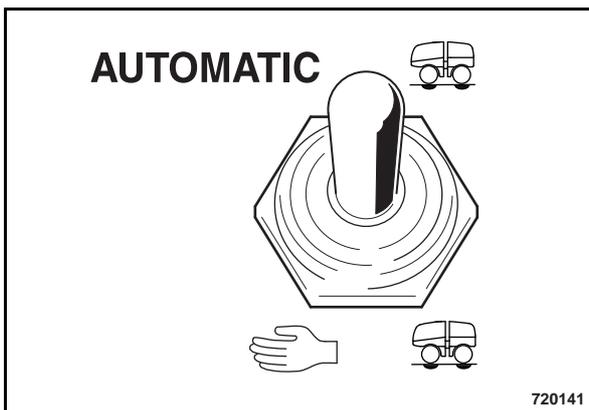


Fig. 16

**No. 6 = Toggle switch, vibration automatic/manual**

- Position Manual = Vibration comes on when switching on the toggle switch for vibration in high/low amplitude.

**i Note**

*Machine switches automatically to speed range 1*

- AUTOMATIC position = Vibration comes on automatically when moving the travel lever, after the toggle switch for vibration with high/low amplitude has been actuated to any desired position.

Vibration switches off automatically when the travel lever is returned to position "0"

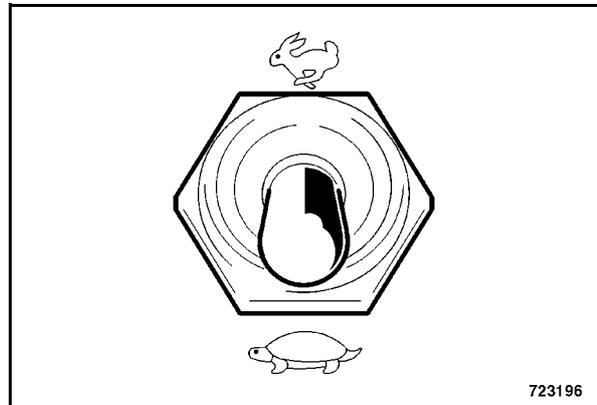


Fig. 17

**No. 7 = Toggle switch, travel ranges**

- Position "turtle" = 1. Travel speed range: 0 ... 1.3 km/h
- Position "rabbit" = 2nd travel speed range: 0 ... 2.7 km/h, driving with vibration not possible

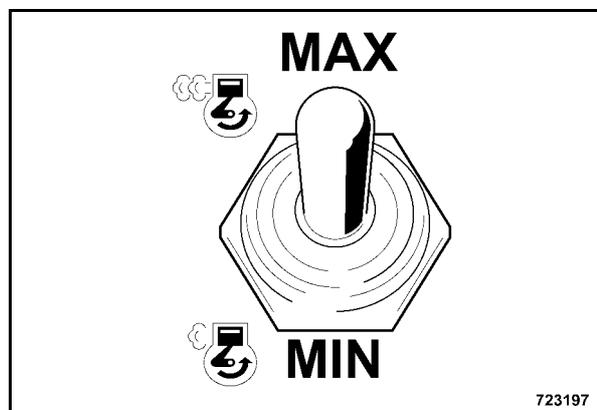


Fig. 18

**No. 8 = Toggle switch, engine speed**

- Position "MIN" = idle speed of engine
- Position "MAX" = maximum engine speed

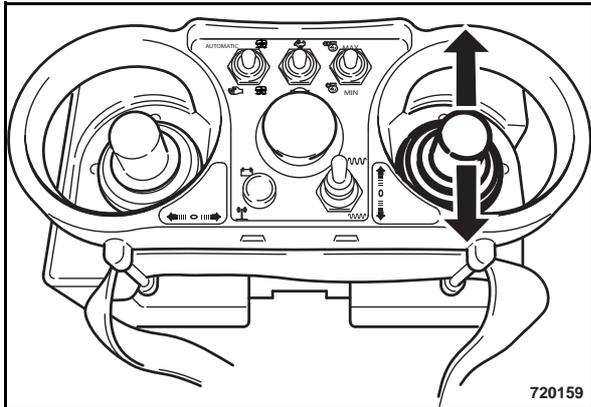


Fig. 19

**No. 9 = Travel lever**

- Middle position = Stop position
- Position front = Forward travel
- Position rear = Reverse travel

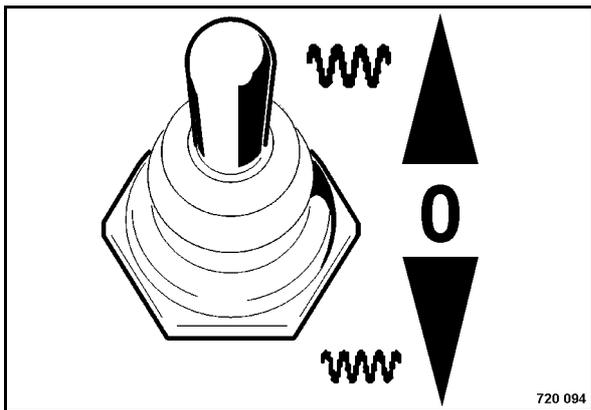


Fig. 20

**No. 10 = Toggle switch for vibration high/low amplitude**

- Position "front" = high amplitude
- Position "middle" = vibration switched off
- Position "rear" = low amplitude

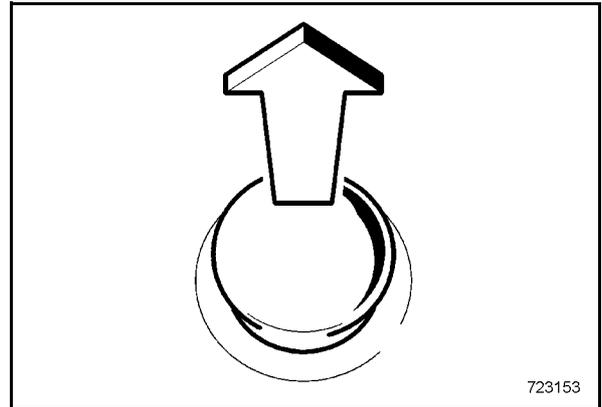


Fig. 21

**No. 11 = Emergency stop push button**

- actuated = transmitter and diesel engine will be switched off.
- unlocked = switches the transmitter on when the ignition is switched on.

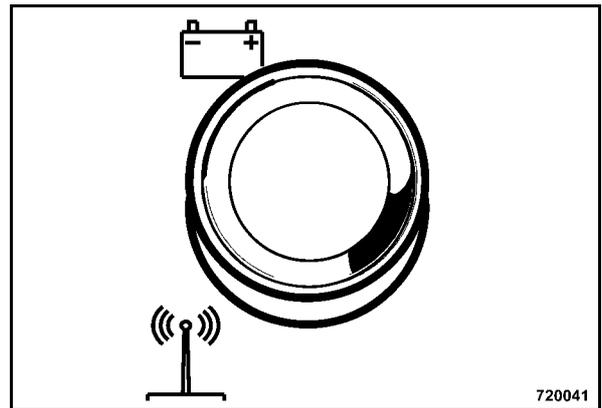


Fig. 22

**No. 12 = Control light data transfer/power pack radio remote control**

- Flashes green when the transmitter is switched on.
- Lights red when the accumulator voltage drops too low.

## Indicators and Controls

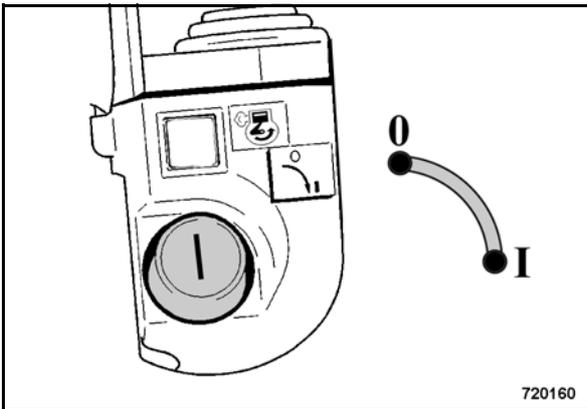


Fig. 23

### No. 13 = Ignition switch

Position 0 = Ignition/engine off, key can be pulled out

Position I = Ignition on, charge control and oil pressure warning lights are on.

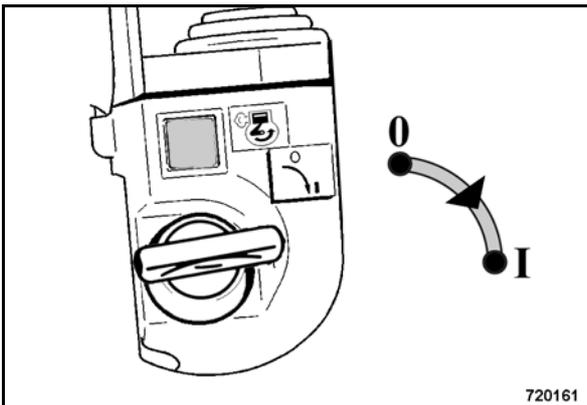


Fig. 24

### No. 14 = Start button

To start the engine in ignition switch position "I".

#### **Caution**

Perform the starting process for maximum 15 to 20 seconds without interruption and pause for about 1 minute between starting attempts.

Should the engine not start in this time, perform trouble shooting and rectify the cause.

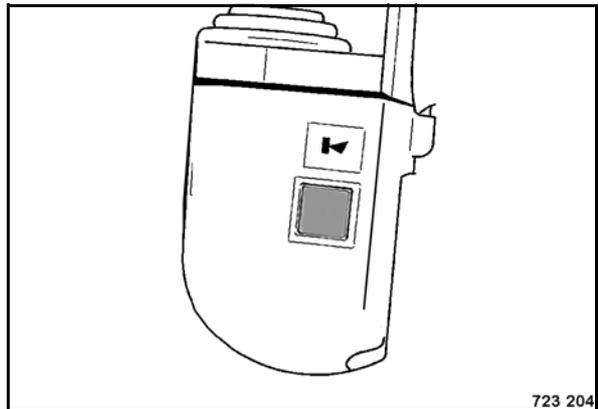


Fig. 25

### No. 15 = Horn button

to signalize a danger situation.

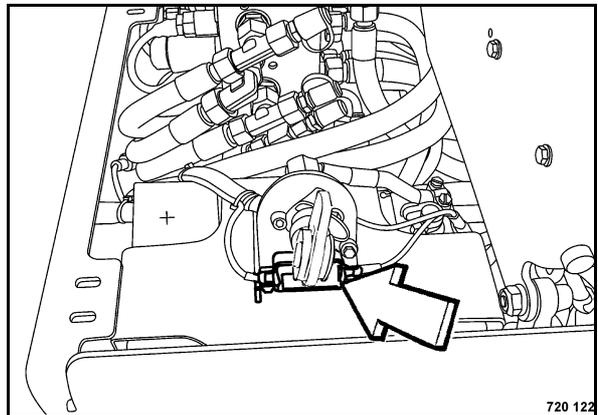


Fig. 26

### No. 16 = Main fuse for battery

80A = (F00)

## 4 Operation

### 4.1 General

If you are not yet acquainted with the controls and indicating elements on this machine you should thoroughly read chapter 3 "Indicators and control elements" before starting work.

All indicators and control elements are described in detail in this chapter.

### 4.2 Tests before taking into operation

Before the everyday use or before a longer working period the following tests and inspections must be performed.

#### **Danger**

**Danger of injury!**

**Please observe strictly the safety regulations in chapter 2 of these operating and maintenance instructions.**

- Park the machine on ground as level as possible.
- The operator must become acquainted with the size of the safety field.

#### **Check:**

- fuel tank and fuel lines for leaks
- engine, radiator and hydraulic system for leaks
- screw joints for tight fit
- machine for condition, cleanliness, damage
- Function of remote control and emergency stop.
- presence of the appropriate operating and maintenance instructions
- proper maintenance of the machine

#### **Note**

*For a description of the following tasks refer to the chapter "maintenance every 10 operating hours".*

- Engine oil level, top up if necessary
- Hydraulic oil level, top up if necessary.
- Fuel level, top up if necessary.
- Fuel filter, drain water
- Coolant level, top up if necessary

### 4.3 BOSS safety system

#### Function

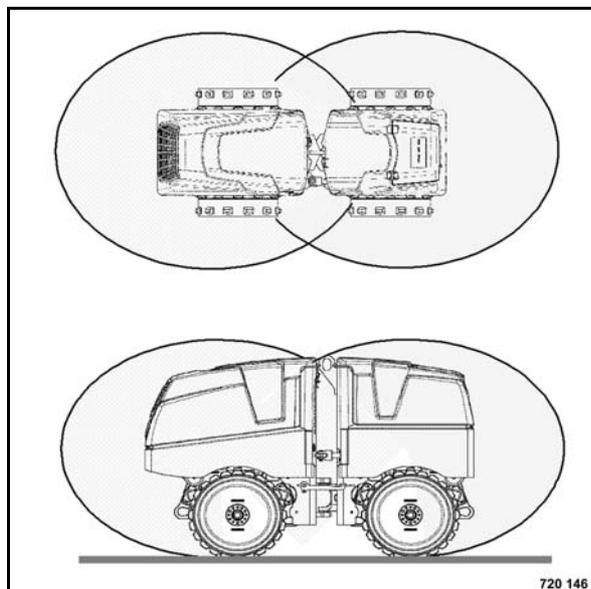


Fig. 27

The machine is surrounded by 2 spherical electromagnetic safety fields (Fig. 27). If the machine operator with the remote control enters into the field, which stretches in travel direction, the machine will stop immediately.

- Shift the travel lever to neutral position and exit the field, which corresponds with the travel direction.
- Operate the machine to the opposite direction (picture), so that the operator is no longer in the safety field of the machine.

#### **⚠ Caution**

**The operator must become acquainted with the size of the safety field before he starts operation.**

**If an operator is between 2 machines in both safety fields, both corresponding travel directions of the associated machines will be stopped. The operator must leave the safety field to be able to move the machine again.**

**The minimum distance between operator and machine must be 2 m. When falling short of a distance of 1.2 m, the corresponding travel direction will be stopped.**

#### **⚠ Danger**

**Danger of squashing!**

**Only operators carrying the associated remote control are protected.**

**There is no protection for persons laying on the ground.**

## 4.4 Starting the engine

**⚠ Danger**

Wear your personal noise protection means (ear defenders) before starting operation.

**⚠ Danger**

Exhaust gases are highly dangerous!

Always ensure an adequate supply of fresh air when starting and operating in closed rooms and trenches!

**⚠ Caution**

In this chapter it is assumed that the operator is fully acquainted with the function of the different control elements on the machine.

- Open the rear hood.

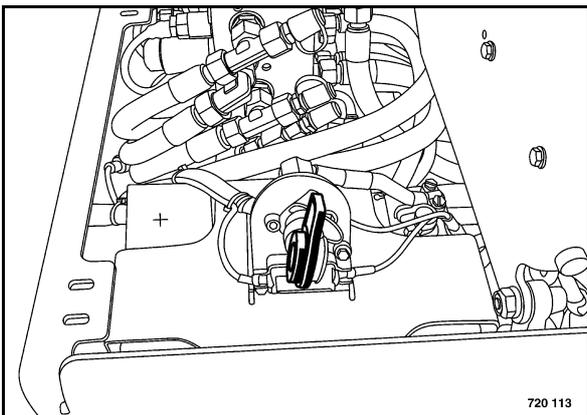


Fig. 28

- Switch on the main battery switch (Fig. 28).
- Strap the control to your body and plug the spiral cable into the remote control, if required.

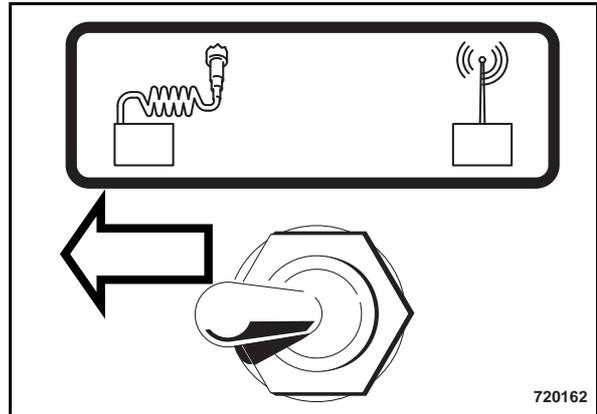


Fig. 29

- For cable operation of the machine switch the toggle switch (Fig. 29) to the left.

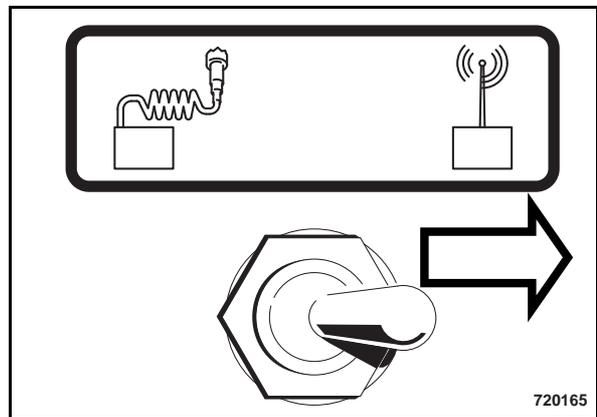


Fig. 30

- For radio operation of the machine switch the toggle switch (Fig. 30) to the right.

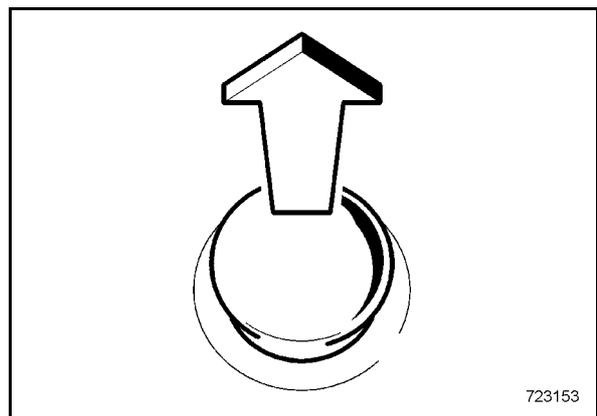


Fig. 31

- If necessary unlock the emergency stop switch (Fig. 31).

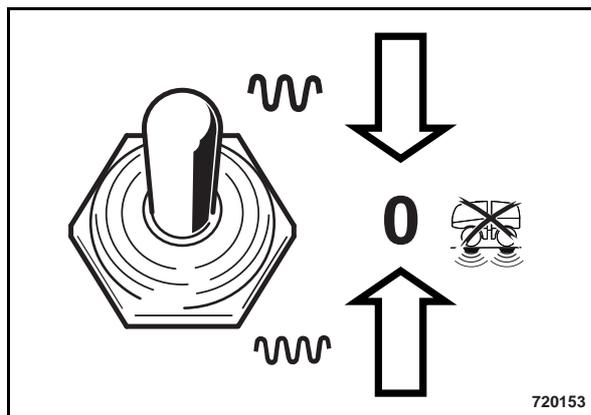


Fig. 32

- Set the vibration toggle switch (Fig. 32) to position "0".

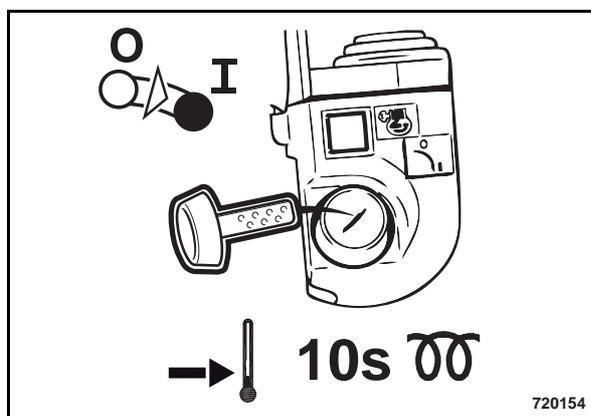


Fig. 33

- Switch on the ignition (Fig. 33).
- Under cold outside temperatures preheat for approx. 10 seconds before starting.

**⚠ Caution**

Do not use any starting aid spray .

**i Note**

With the ignition switch in position "I" the machine type code will appear in the display module for approx. 3 seconds.

The machine will emit a short horn signal. This indicates that the machine is ready for operation.

**i Note**

If the horn does not sound, there must be fault on the machine.

The control emits two short buzzer signals. This indicates that the control is ready for operation.

**i Note**

If the buzzer does not sound, there must be a fault in the control or the power pack of the control is empty.

**i Note**

All normal work functions can only be operated from a defined neutral position, i.e. the respective control elements must be in rest position when switching the sender on. If this is not true, the engine cannot be started.

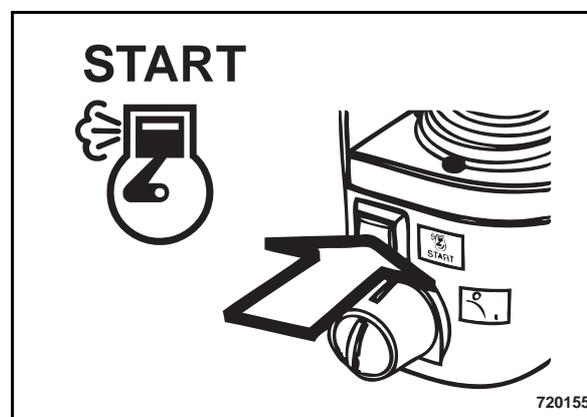


Fig. 34

- Press the start button to start the engine(Fig. 34).

**⚠ Caution**

Run the engine warm for a short while before starting work. Do not rev up a cold engine to high idle speed/full load speed.

**Starting with jump wires**

- Open the rear hood.

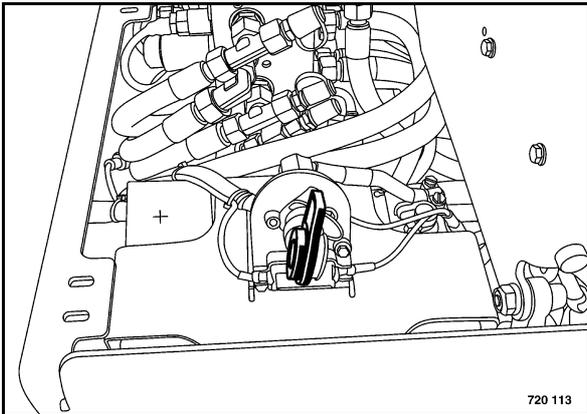


Fig. 35

- Switch on the main battery switch (Fig. 35).

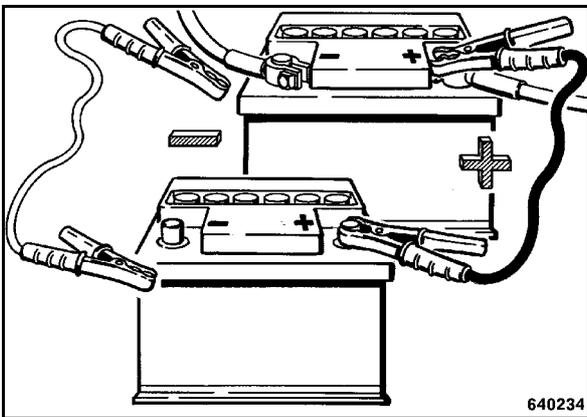


Fig. 36

### **⚠ Caution**

**A wrong connection will cause severe damage in the electric system.**

- Bridge the machine only with a 12 Volt battery.
- When starting with an external battery connect the plus poles (Fig. 36) first and the minus poles (ground cable) after.
- Start the engine as described above
- After starting disconnect the cable from the minus poles (ground cable) first and from the plus poles last.
- Fold the control box back in and close the hood.

## 4.5 Driving the machine (cable remote control)

### **⚠ Danger**

**Danger of accident!**

**Before starting to drive make sure that the drive range is absolutely safe.**

**Wet and loose soils considerably reduce the ground adhesion of the machine on inclinations and slopes.**

**Do not drive up and down inclinations exceeding the maximum gradability of the machine (see technical data).**

**Slowly return the travel lever towards neutral when driving down slopes.**

**Before starting to drive check the function of the remote control.**

**During operation of the machine with remote control the operator must always stay behind or beside the machine. Specified directions apply only if the operator is standing behind the machine. If the operator is standing in front of the machine all machine movements will be opposite to the movement of the control lever.**

**The machine must only be operated with remote control strapped to the body.**

**The machine must only be operated within the field of vision of the operator.**

**The minimum distance between operator and machine must be 2 m.**

- Do not overstretch the spiral cable.

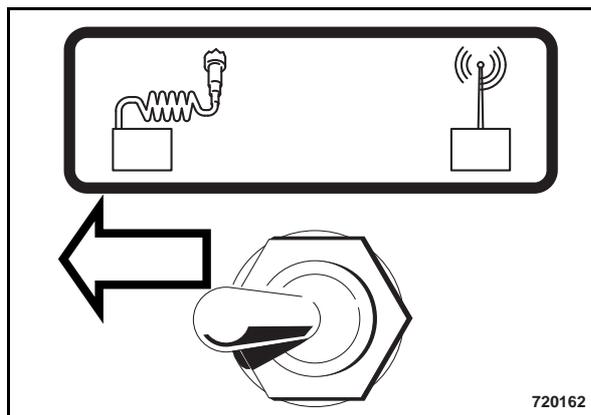


Fig. 37

- Before starting the engine switch the toggle switch for cable/radio remote control (Fig. 37) to the left to position "Cable remote control"
- Start the engine.

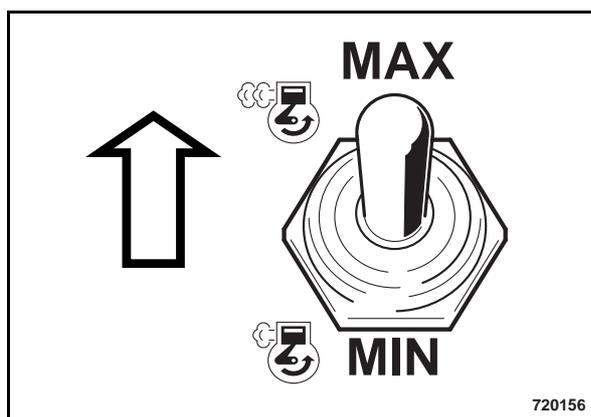


Fig. 38

- Turn the rotary switch for engine speed (Fig. 38) to position MAX.

**i Note**

*If the machine is not operated over a period of 10 seconds, the engine will be switched to "Eco-mode" (low idle speed).*

*The engine will return to high idle as soon as either the steering or travel lever is actuated.*

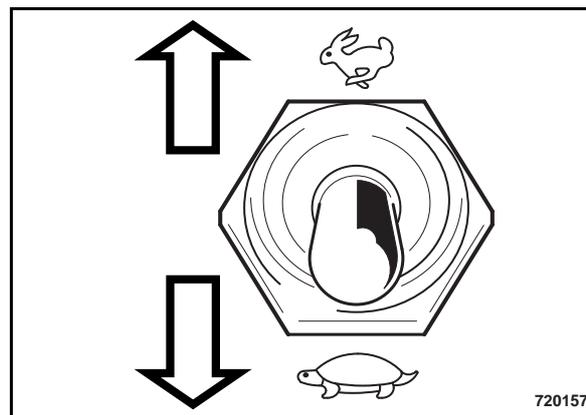


Fig. 39

- Switch the toggle switch for travel speed ranges (Fig. 39) to the desired speed range.

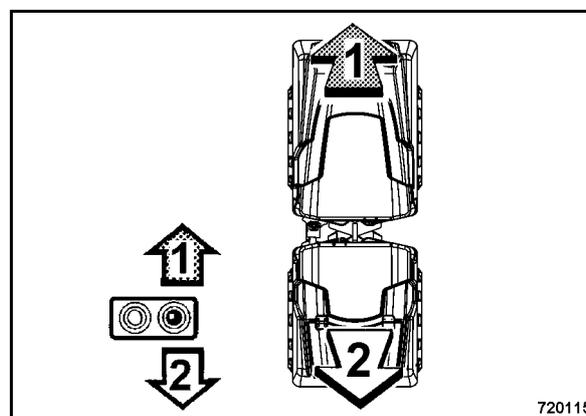


Fig. 40

- Actuate the travel lever (Fig. 40).

The machine drives with a speed which corresponds with the displacement of the travel control levers.

- Standstill = Travel lever in middle position
- Forward travel = Shift the travel lever forward
- Reverse travel = Pull the travel lever back

### Stopping the machine

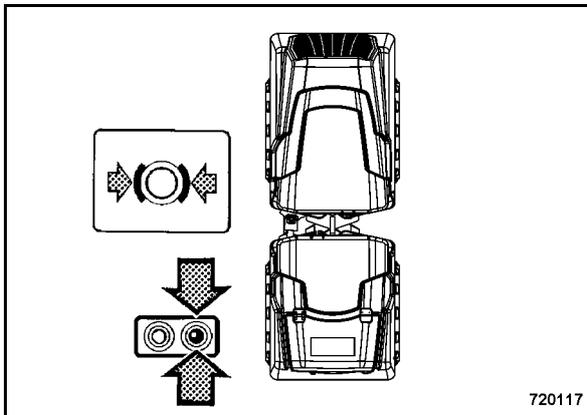


Fig. 41

- Travel lever (Fig. 41) in middle position. The machine will brake.

### Steering the machine

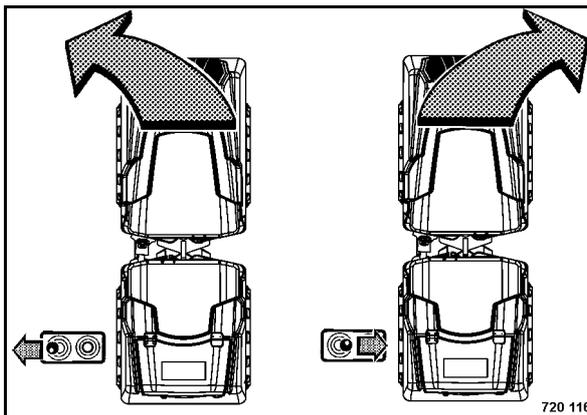


Fig. 42

- Actuate the travel levers (Fig. 42) accordingly.

Straight ahead = Steering lever in middle position

To drive to the right = Move the travel lever to the right

To drive to the left = Move the travel lever to the left

### Cleaning after use



Keep the cable remote control clean.

Rests of concrete, clay or mortar may damage the bellows on travel levers and sealing caps on toggle switches, so that water can enter.

Do not use a water jet or a high pressure or steam cleaner for cleaning.

- After work clean the cable remote control with a clean cloth or brush.
- Check the state of bellows and sealing caps at regular intervals, have replaced by an expert, if necessary.

## 4.6 Safety inspection for the cable remote control

This safety inspection must be performed regularly once every week, especially after longer breaks.

### **⚠ Danger**

**Danger of injury!**

Make sure that there are no persons within the danger zone.

### **⚠ Caution**

Rests of mortar or concrete may restrict the movement of the travel control levers. Check from time to time (with the sender switched off!) whether both travel control levers return reliably to their neutral position when being released.

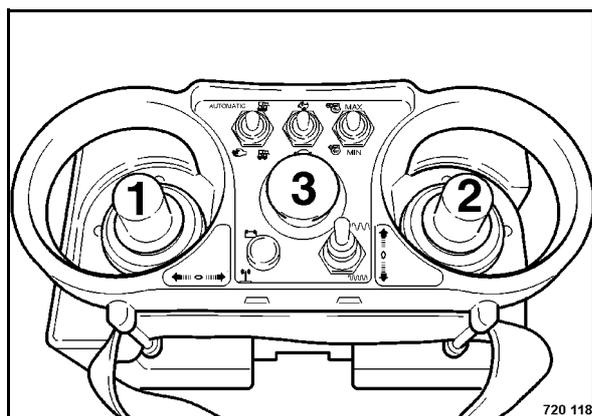


Fig. 43

- With the machine shut down actuate and hold one of the travel levers 1 or 2 (Fig. 43).
- Try to start the diesel engine.

The diesel engine must not start.

- Return the travel lever to neutral position (rest position).
- Start the engine and actuate the control lever again.

The functions must now work as usual.

- Operate the emergency stop switch (3).

The machine must stop and the engine must be shut down.

## 4.7 Switching the vibration on and off

### **⚠ Danger**

**Risk of damage!**

When compacting with vibration you must check the effect of nearby buildings and underground supply lines (gas, water, sewage, electric power), if necessary stop compaction with vibration.

Do not activate the vibration on hard (frozen, concrete) ground. Danger of bearing damage!

### Automatic

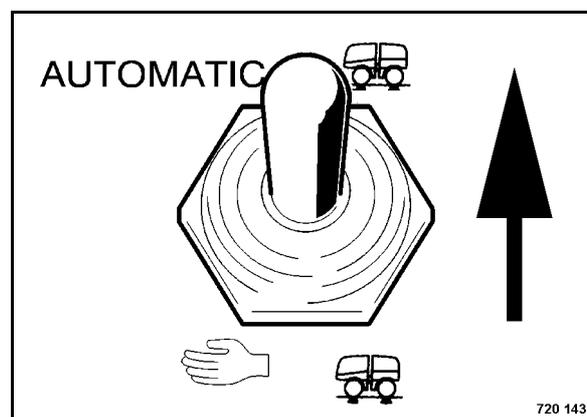


Fig. 44

- Set the vibration switch (Fig. 44) to "Automatic".

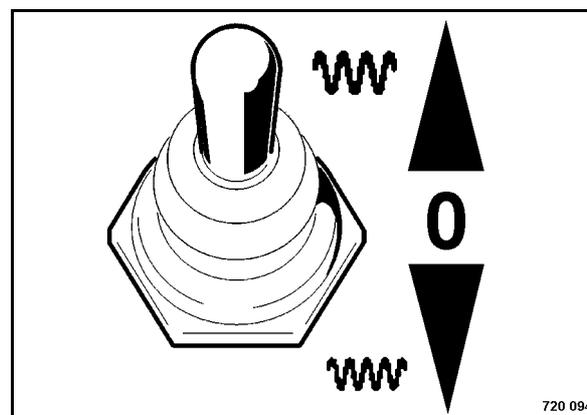


Fig. 45

- Choose the amplitude (Fig. 45).

## Operation

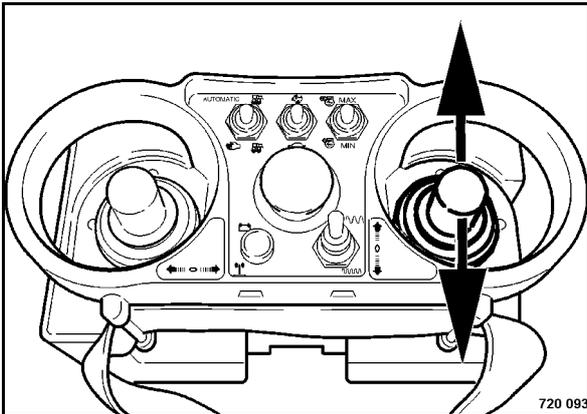


Fig. 46

- Move the travel lever (Fig. 46) forward or back.

The machine starts to move and the vibration switches on automatically.

The vibration will switch off when the machine comes to a halt.

### Manual

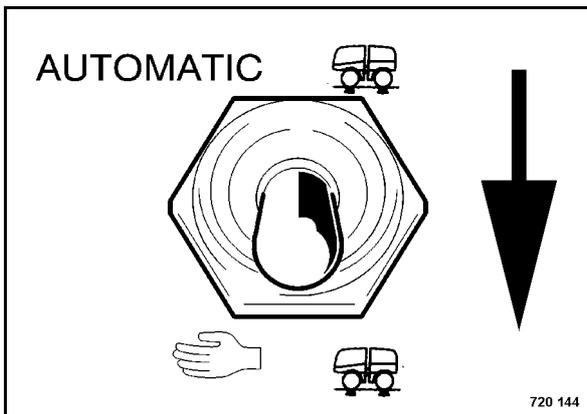


Fig. 47

- Set the vibration switch (Fig. 47) to position "Manual".

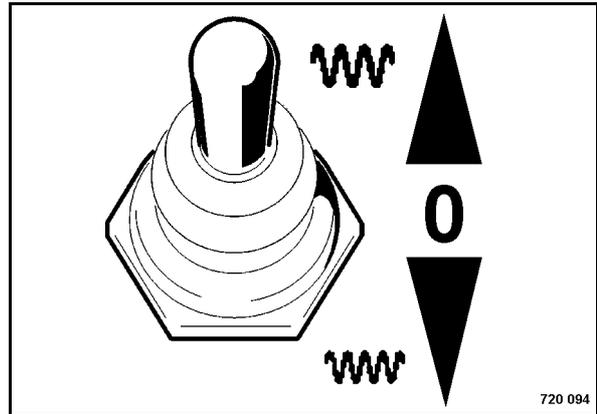


Fig. 48

- Choose the amplitude (Fig. 48).

Vibration switches on.

## 4.8 Shut down the engine

- Switch the vibration off, if necessary.

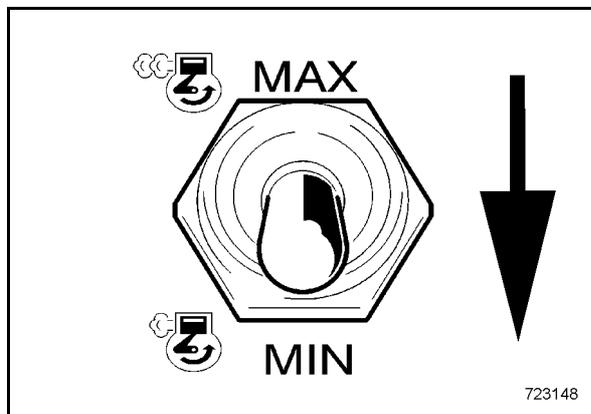


Fig. 49

- Change to idle speed (Fig. 49) and let the engine run for another few minutes for cooling.

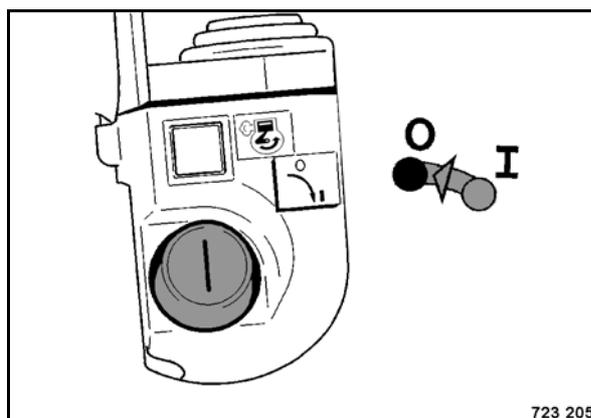


Fig. 50

- Turn the ignition switch (Fig. 50) to position "0".

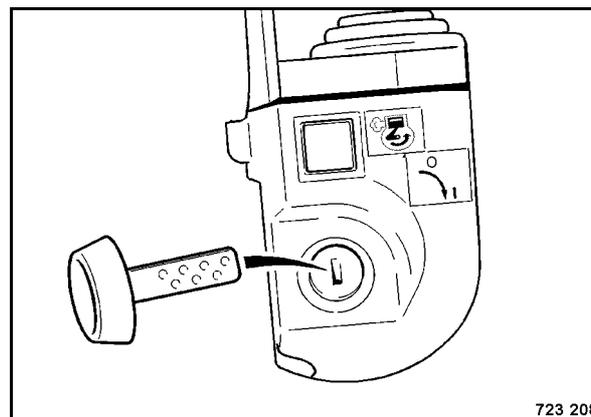


Fig. 51

- Pull off the ignition key (Fig. 51) and store it in a safe place.

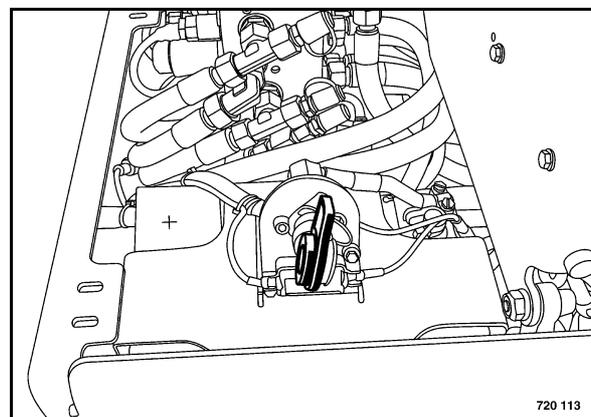


Fig. 52

- Switch off and pull out the main battery switch (Fig. 52).
- Plug the safety cap on the lock.

**⚠ Danger**

**Danger of accident!**

**Secure the machine against unauthorized use.**

## 4.9 Shutting down the engine manually

**⚠ Caution**

If the engine is not automatically shut down when turning the ignition switch to position "0", you may switch it off manually.

**⚠ Danger**

You should immediately investigate the cause for the engine not shutting down and repair the machine accordingly.

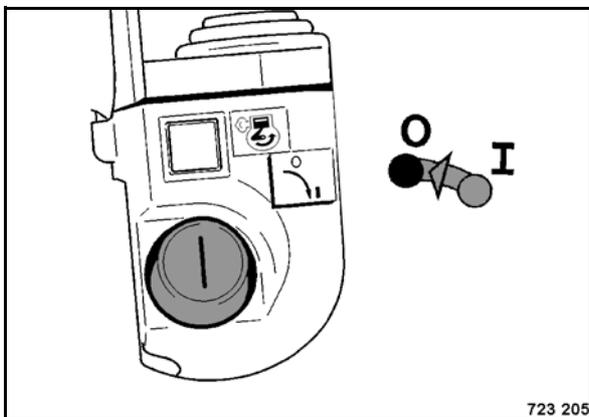


Fig. 53

- Turn the ignition switch (Fig. 53) to position "0".

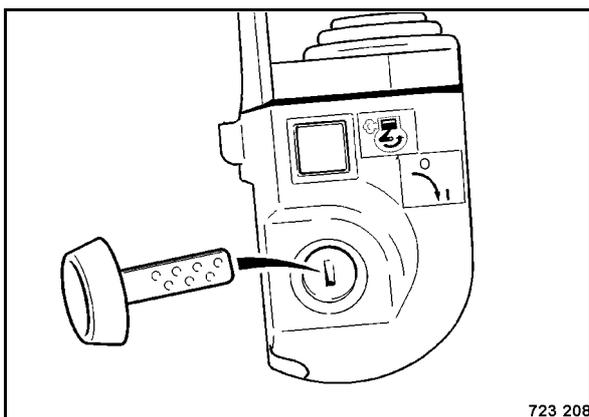


Fig. 54

- Pull off the ignition key (Fig. 54) and store it in a safe place.
- Fold the engine hood open

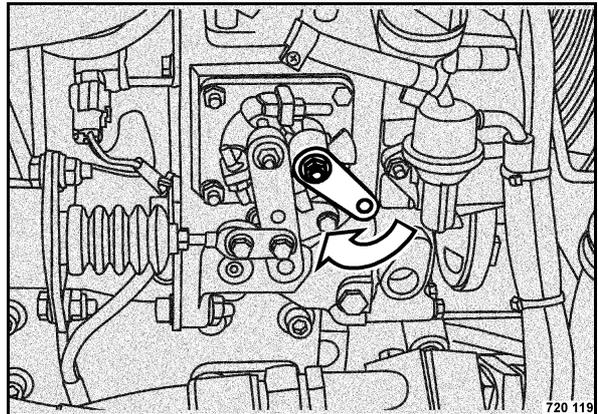


Fig. 55

- Keep the hand lever (Fig. 55) on the engine depressed, until the engine shuts down.
- Open the rear hood.

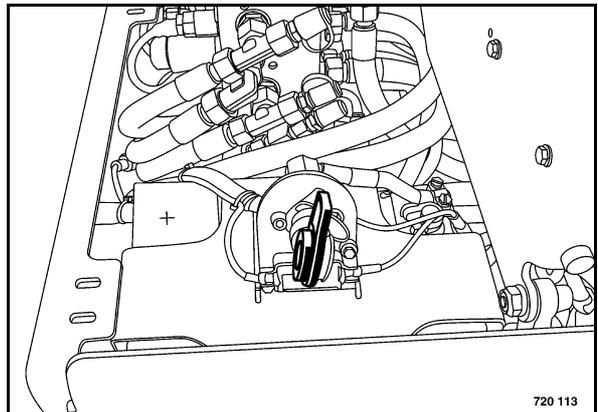


Fig. 56

- Switch off and pull out the main battery switch (Fig. 56).
- Remove the guard.
- Close engine hood and rear hood again.

**⚠ Danger**

**Danger of accident!**

**Secure the machine against unauthorized use.**

## 4.10 Starting operation of the radio remote control

**⚠ Danger**

The minimum distance between operator and machine must be 2 m.

**⚠ Caution**

Use the transmitter only if the type approval has been granted.

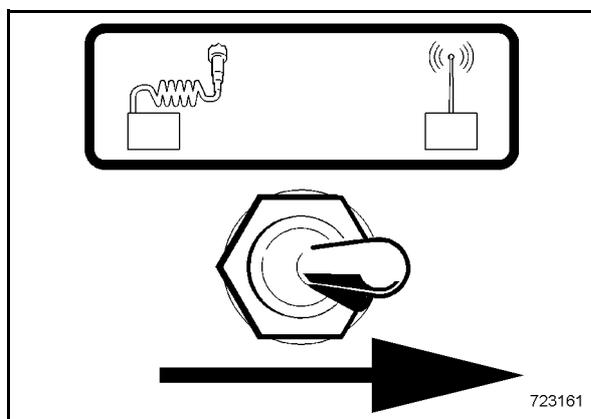


Fig. 57

- Set the toggle switch (Fig. 57) to remote control position.

### Inserting the replacement power pack

**⚠ Caution**

Change the power pack only when the sender is switched off.

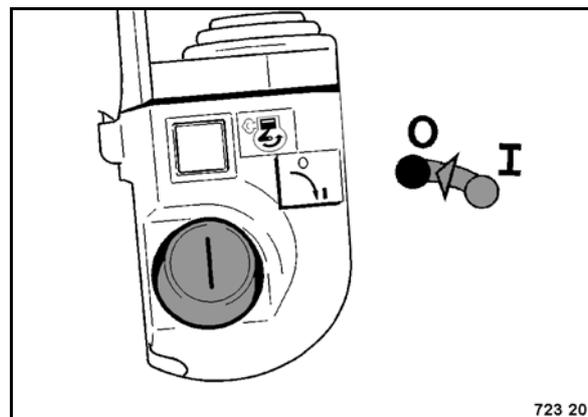


Fig. 58

- Turn the ignition switch to position "0" (Fig. 58) and pull it off.

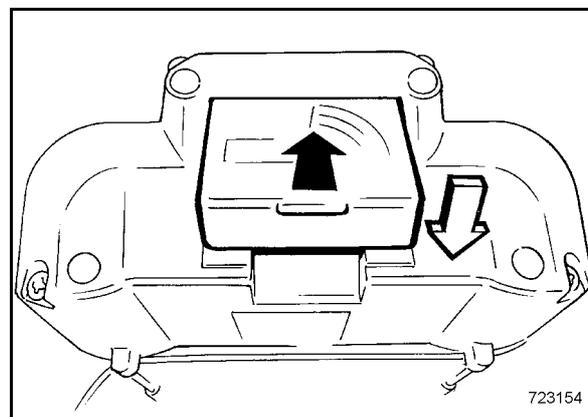


Fig. 59

- Insert the replacement power pack into the receptacle (Fig. 59) and let it click into place.

**i Note**

*Make sure the power pack clicks into place.*

### Duty time with a fully charged power pack:

approx. 100 hours

### Switching on the transmitter

**⚠ Danger**

**Life hazard!**

In order to avoid unauthorized operation of the machine do not leave the activated transmitter unattended.

Operate the transmitter only if the machine is in your field of vision.

## Operation

### **i** Note

All normal work functions can only be operated from a defined neutral position, i.e. the respective control elements must be in rest position when switching the sender on. If this is not true, the engine cannot be started.

- Strap the transmitter to your body, adjust the belts accordingly.

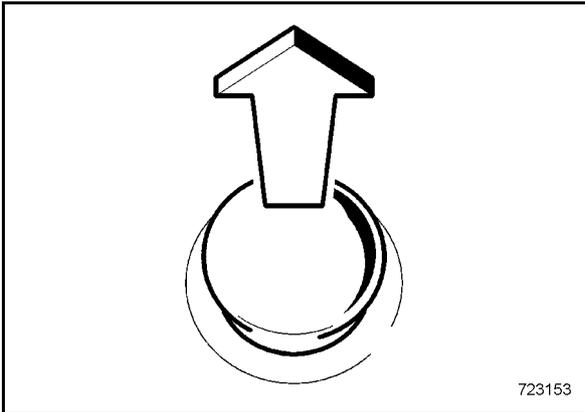


Fig. 60

- If necessary unlock the emergency stop switch (Fig. 60).

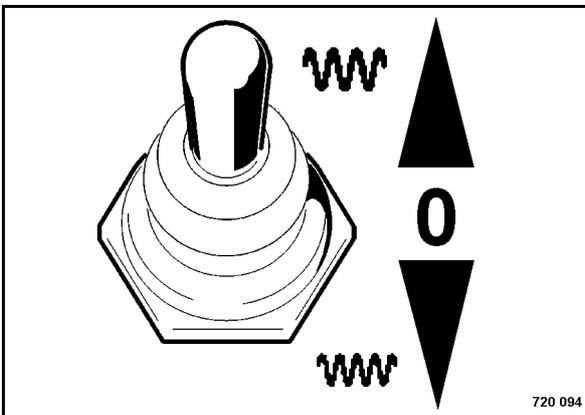


Fig. 61

- Set the vibration toggle switch (Fig. 61) to position "0".

## Starting the engine

### **i** Note

Before starting the engine both travel levers and the vibration control lever must be in rest position (neutral).

The radio remote control is equipped with a re-start lock.

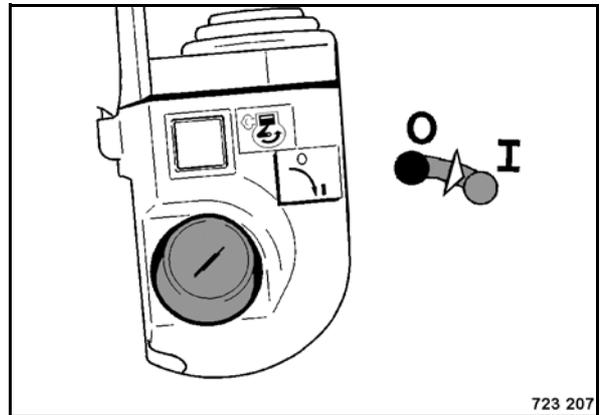


Fig. 62

- Switch on the ignition (Fig. 62).

The green control light on the transmitter starts to flash and a buzzer signal sounds. The transmitter is ready for operation.

After a period of approx. 5 to 10 seconds the signal horn on the machine starts to sound.

The machine is now ready for operation.

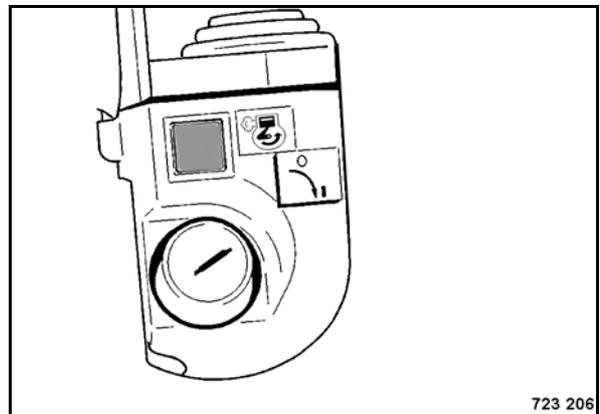


Fig. 63

- Press the start button to start the engine (Fig. 63).

### **i** Note

Run the engine warm for a short while before starting work.

### Long distance shut-down

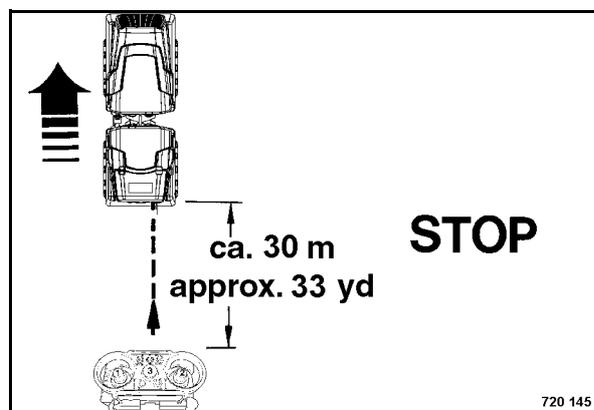


Fig. 64

If the distance (Fig. 64) between transmitter and receiver exceeds 30 m, the machine will stop.

**i Note**

To continue travelling reduce the distance and restart the machine.

### Work function

**⚠ Danger**

Life hazard!

Move the machine only when it is directly in sight.

The functions of operating elements and controls are identical with the ones for the cable remote control (see previous description).

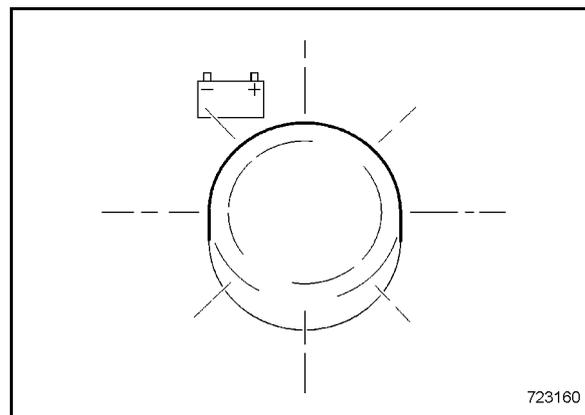


Fig. 65

**i Note**

If the battery voltage drops down to a too low level during operation (power pack discharged), the red warning light on the control (Fig. 65) will light up approx. 10 minutes before the engine is shut down. The warning buzzer starts to sound approx. 1 minute before the shut down

Drive the machine to a safe place as soon as possible, so that it will not stop all of a sudden.

If necessary switch over to operation with cable remote control and plug the spiral cable into the remote control. During cable operation of the machine the power pack is automatically charged.

Replace or recharge the power pack.

### Switching off the transmitter (engine)

**⚠ Caution**

Do not shut the engine down all of a sudden from full load, but let it idle for a while in position "Min" for temperature equalization.

If the radio remote control is not going to be used for a longer period of time we strictly recommend to take the batteries out of the transmitter and to recharge them approx. every four weeks. This avoids complete discharging and prolongs the lifetime of the power packs.

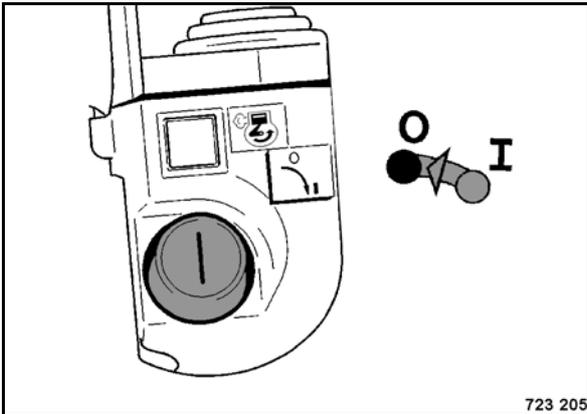


Fig. 66

- Turn the ignition key (Fig. 66) to position "0". Transmitter and engine will be switched off after two seconds, the green control light on the transmitter goes out.

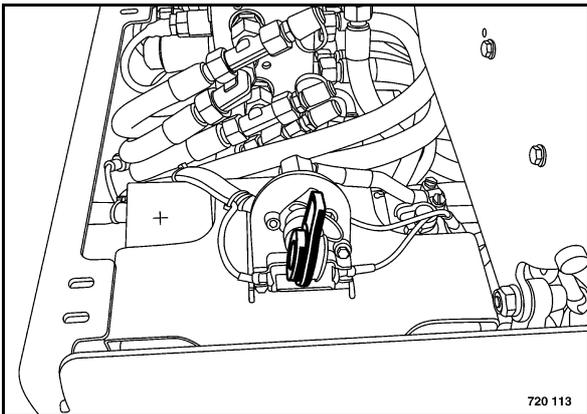


Fig. 67

- Switch off and pull out main battery switch 1 (Fig. 67).
- Plug the safety cap on the lock.

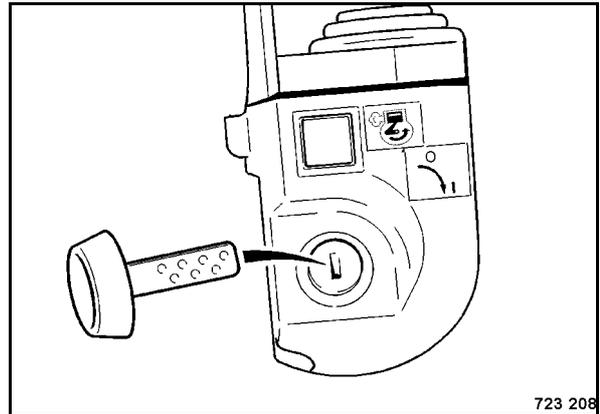


Fig. 68

- Pull off the ignition key (Fig. 68) and store it in a safe place.

### **i** Note

*If the power pack of the remote control is to be recharged via the remote control cable, the main battery switch (Fig. 67) must be switched on.*

### Cleaning after use

#### **⚠** Caution

**Keep the radio remote control clean.**

**Rests of concrete, clay or mortar may damage the bellows on travel levers and sealing caps on toggle switches, so that water can enter.**

**Do not use a water jet or a high pressure or steam cleaner for cleaning.**

- After work clean the transmitter with a clean cloth or brush.
- Check the state of bellows and sealing caps at regular intervals, have replaced by an expert, if necessary.

## 4.11 Replacing, recharging the radio remote control power pack

### **i** Note

As standard the power pack is recharged in the machine through the spiral cable. A separate battery charger is available as an option. The recharging time is approx. 6 hours.

### **!** Danger

Operate the battery charger only in dry rooms at temperatures of min. 0 °C to max. 40 °C!

A charged power pack is a concentrated energy source! Do not store charged power packs in a tool box or similar, because metal parts may cause a short circuit. Short circuits may also be caused by keys etc. in a trouser pocket.

### **!** Caution

Change the power pack only when the sender is switched off.

Before connecting the battery charger make sure that the mains voltage is in accordance with the specifications mentioned on the battery charger.

Strictly follow the operating instructions for the battery charger.

### **i** Note

Ageing of the power pack reduces the discharging capacity and therefore the operating time of the sender.

The full discharging capacity is only reached after several charging cycles.

### **i** Note

As the charging of the power pack succeeds, the charging current drops, so that overcharging of the power pack is almost impossible. However, if the control is switched off for a couple of days (holidays, bad weather) you should also disconnect the charging unit from the mains supply or switch off the main battery switch.

## Charging the power pack in the machine

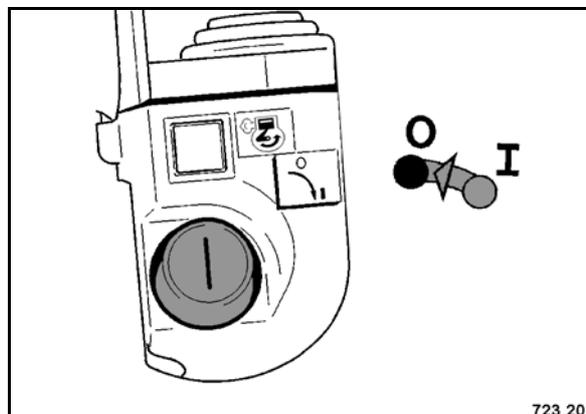


Fig. 69

- Switch off the transmitter (Fig. 69) with the ignition key.
- Plug the spiral cable into the transmitter

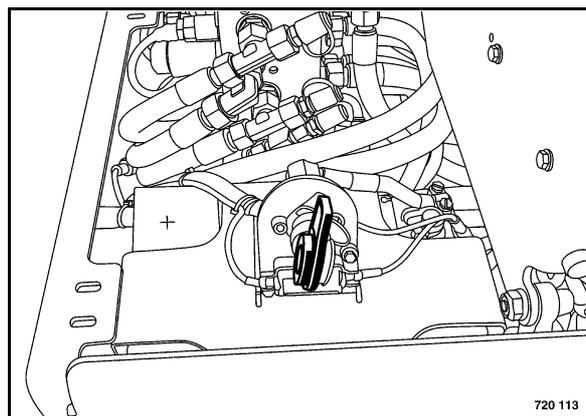


Fig. 70

- The main battery switch (Fig. 70) must be switched on.

### **i** Note

The power pack recharging time is approx. 6 hours.

## Charging the power pack with the external battery charger

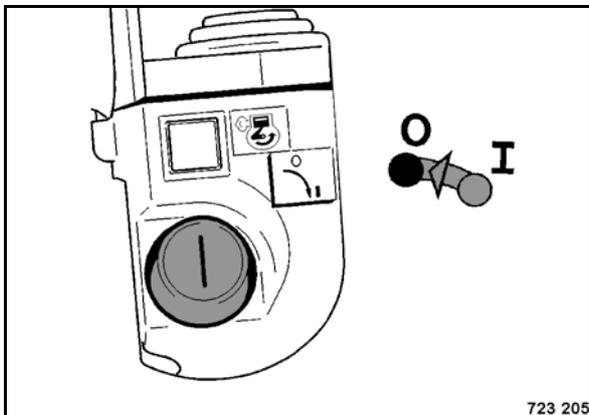


Fig. 71

- Switch off the transmitter (Fig. 71) with the ignition key.

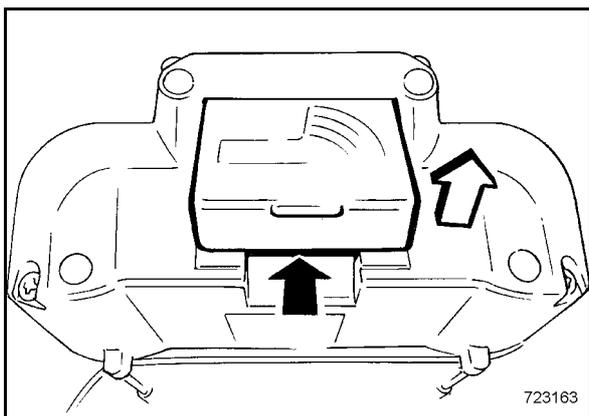


Fig. 72

- Press the power pack forward and lift it out of the housing (Fig. 72).

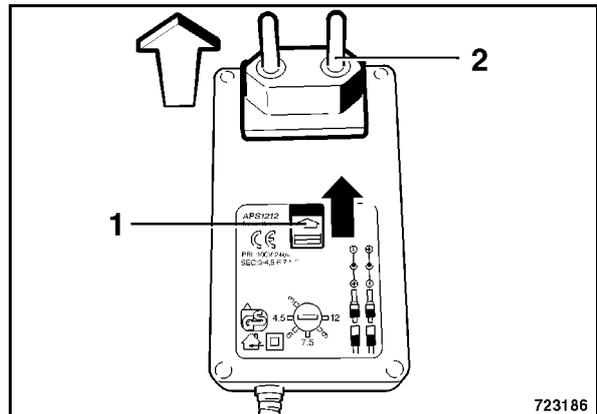


Fig. 73

- Push lock 1 (Fig. 73) on the mains unit of the battery charger forward and pull plug (2) upward out of the mains unit.

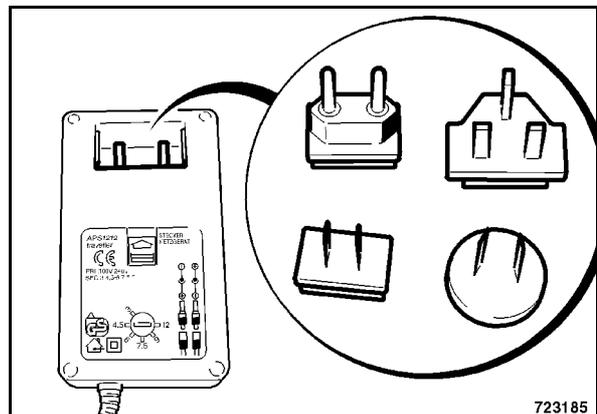


Fig. 74

- Plug the corresponding plug (Fig. 74) onto the mains unit of the battery charger.

### **i** Note

*The type of plug to be chosen depends on the country. Observe local conditions and regulations.*

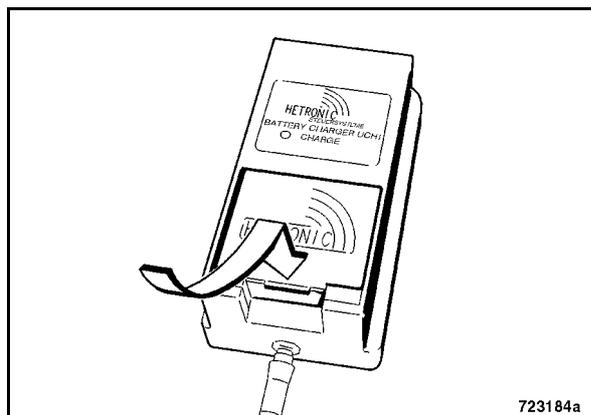


Fig. 75

- Insert the power pack into the battery charger (Fig. 75).

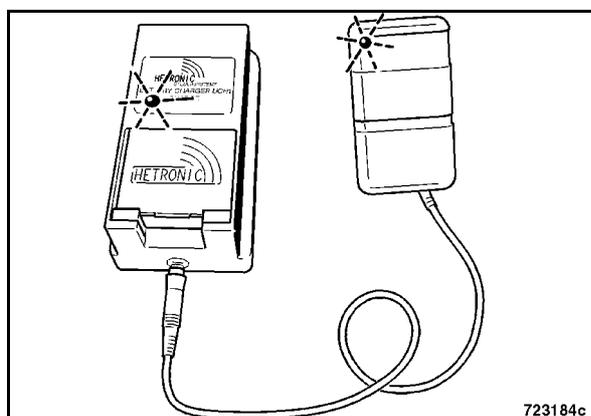


Fig. 76

- Connect the battery charger to a power source (Fig. 76).

The two light emitting diodes on battery charger and mains unit must light up.

**i Note**

*The power pack recharging time is approx. 6 hours.*

*When charging is completed the green LED on the charger will start to flash.*

## 4.12 Safety inspection for the radio remote control

This safety inspection must be performed regularly once every week, especially after longer breaks.

**⚠ Danger**

**Danger of injury!**

**Make sure that there are no persons within the danger zone.**

**⚠ Caution**

**Rests of mortar or concrete may restrict the movement of the travel control levers. Check from time to time (with the sender switched off!) whether both travel control levers return reliably to their neutral position when being released.**

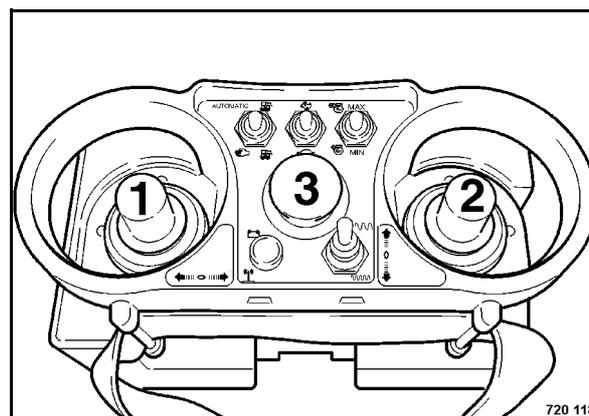


Fig. 77

- With the transmitter switched off actuate and hold one of the travel levers 1 or 2 (Fig. 77).
- Switch on the transmitter and try to start the diesel engine.

The diesel engine must not start.

- Return the travel lever to neutral position (rest position).
- Start the engine and actuate the travel lever again.

The functions must now work as usual.

- Operate the emergency stop switch (3).

The machine must stop and the engine must be shut down.

### 4.13 Switching off of the radio remote control in case of radio interferences

The radio remote control is automatically switched off whenever the radio connection to the receiver is interrupted or disturbed for more than 2 seconds.

#### Resetting the control after switching off by radio interference

- Step into the radio transmission range of the machine.

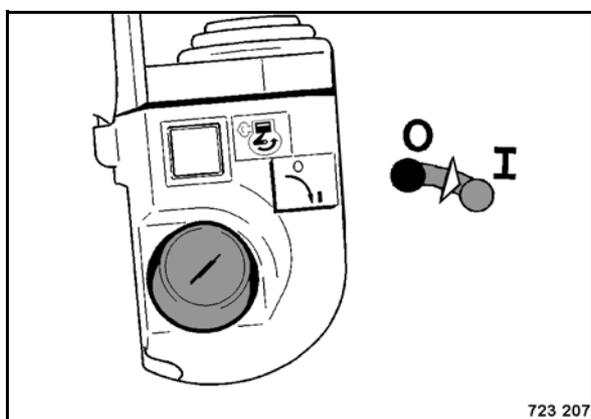


Fig. 78

- Switch on the ignition (Fig. 78) and restart the machine.

Operation can be resumed.

### 4.14 Switching ECO-mode on and off

#### Input of code numbers

**⚠ Caution**

The code can only be entered when the engine is shut down.

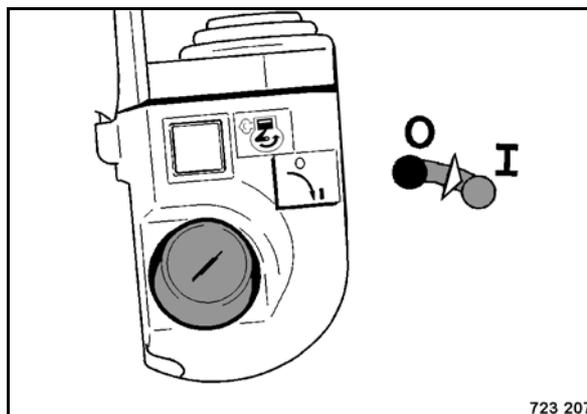


Fig. 79

- Switch on the ignition (Fig. 79).
- Open the flap in the rear hood.

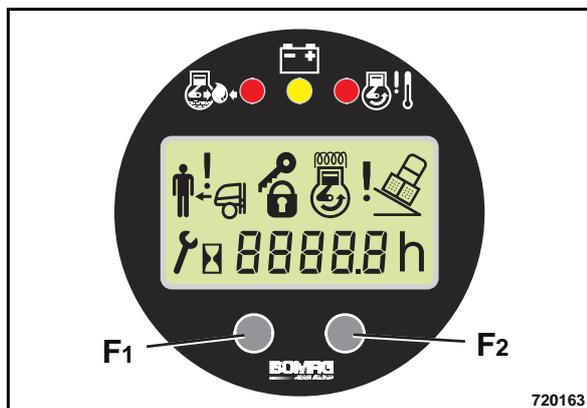


Fig. 80

- Keep both function keys F<sub>1</sub> and F<sub>2</sub> (Fig. 80) in the display module depressed for two seconds.

The display shows "0000", whereby the first digit is flashing.

- The value of the flashing digit can be increased by pressing the function key F<sub>1</sub>.

- If the value "9" is displayed and the function key F<sub>1</sub> is pressed again, the display will jump back to the value "0".
- When pressing the function key F<sub>2</sub> the flashing digit will move one digit to the right.
- If the fourth digit in the display is flashing function key F<sub>2</sub> is pressed again to confirm the entry.

The desired function is now executed or the desired value is displayed.

- To cancel the display function you must either enter code number "0000" or switch off the ignition.

### Setting ECO-mode

- Enter "5055" to start the procedure.
- Enter "5057" to switch off ECO-mode or "5058" to switch on ECO-mode.
- Enter "5056" to finish the procedure.

#### **i** Note

Input code "5059" is used to display the status of ECO-mode.

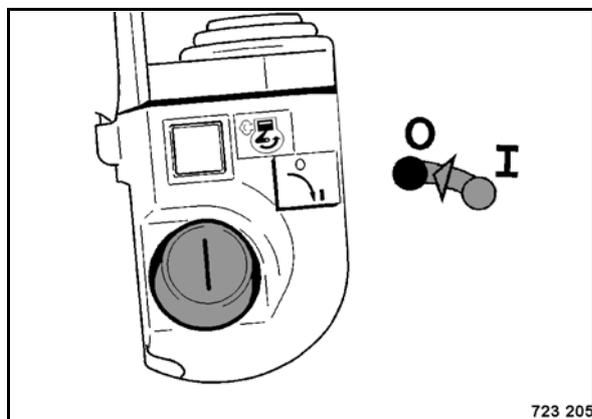


Fig. 81

- Switch off the ignition (Fig. 81).

## 4.15 Entering the machine type code

#### **⚠** Caution

After replacing the machine control (BLM) the machine type code must be entered again.

The machine must not be operated with a wrong type settings, as otherwise the correct function of the control can no longer be assured.

The code can only be entered when the engine is shut down.

#### **i** Note

A description of the procedure for entering code numbers can be found in the chapter "Switching ECO-mode on or off".

- Enter "7010" to start the procedure.

This code number activates the function "Adjusting machine type". The display module now permanently shows code "7010".

- Enter "7104".

The display module now permanently shows code "7104".

- Enter "7011" to finish the procedure.

This code number confirms the entered machine type.

After having confirmed the machine type the control switches off, restarts automatically after 3 seconds and is then ready for starting.

#### **i** Note

Whenever switching the ignition on the machine type will appear in the display module for 3 seconds.

## 4.16 Teaching the BOSS safety system transponder

When replacing a defective remote control only units with a completely black housing must be used. Please follow the described procedure when installing new components of the radio system or the safety system (BOSS):

- Shut down the engine,
- switch off the main battery switch,
- replace defective components,
- switch on the main battery switch,
- plug the spiral cable into the remote control.

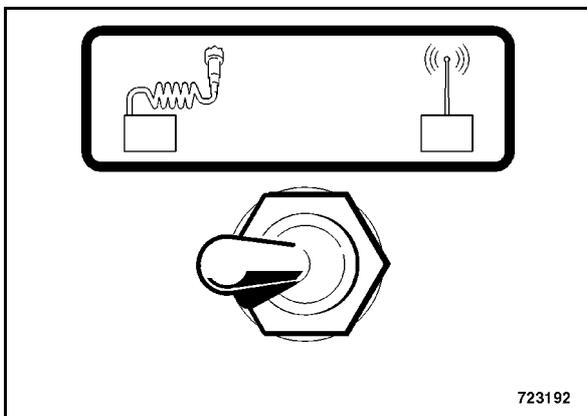


Fig. 82

- Turn the tumbler switch for the cable remote control to position "Left", cable operation (Fig. 82).

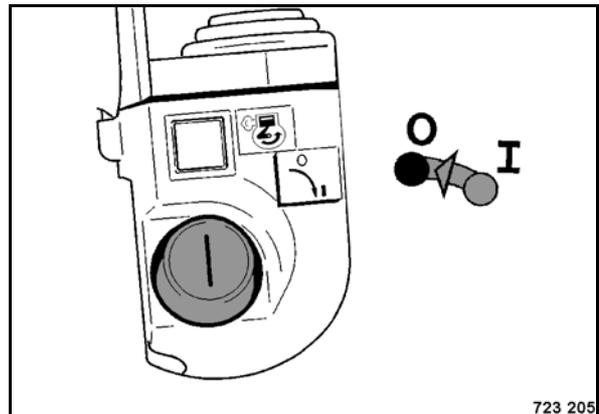


Fig. 83

- Turn the ignition switch to position I (Fig. 83), charge control lamp and oil pressure control lamp come on.
- Move the remote control out of the safety field.
- The safety field control lamp goes out at the latest after 2 seconds.

The machine is now ready for operation.

## 4.17 Assembling/removing the drum extension

### Assembly

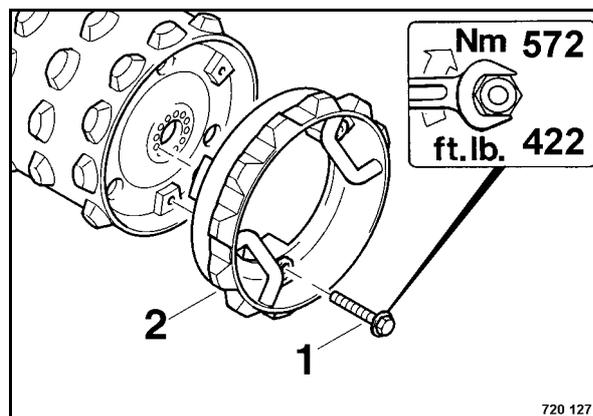


Fig. 84

- Attach drum extensions 2 (Fig. 84) to the drums, turn three fastening screws (1) into each drum and tighten.

### Removal

- Unscrew the fastening screws and take off the drum extensions.
- Turn the fastening screws back into the drum and fasten.

#### **⚠ Caution**

In order to protect the threads turn the fastening screws into the drums, even after removing the drum extensions.

#### **⚠ Danger**

**Danger of turning over!**

When using drums with a working width of 610 mm the second speed range must not be switched on.

## 4.18 Loading and transport

#### **⚠ Danger**

**Danger of accident! Life hazard!**

Use only stable loading ramps of sufficient load bearing capacity. The ramp inclination must be less than the gradability of the machine.

Make sure that persons are not endangered by the machine tipping or sliding off.

Always engage the articulation lock before loading, lifting and transporting the machine.

Use only safe lifting gear of sufficient load bearing capacity Minimum lifting capacity of lifting gear: see operating weight in chapter "Technical Data".

For lifting the machine attach the lifting gear only to the lifting eye provided for this purpose.

Check lifting eye for damage before use. Do not use a damaged or in any other way impaired lifting eye.

The machine must not swing about when being lifted.

Do not step or stand under suspended loads.

Lash the machine down, so that it is secured against rolling, sliding and turning over.

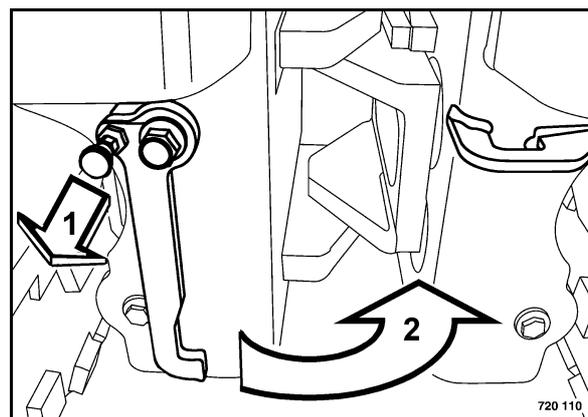


Fig. 85

- After driving the machine on the transport vehicle pull out the locking bolt (1) (Fig. 85) and engage the articulation lock in the locking eye (2). Let the locking bolt click into place.

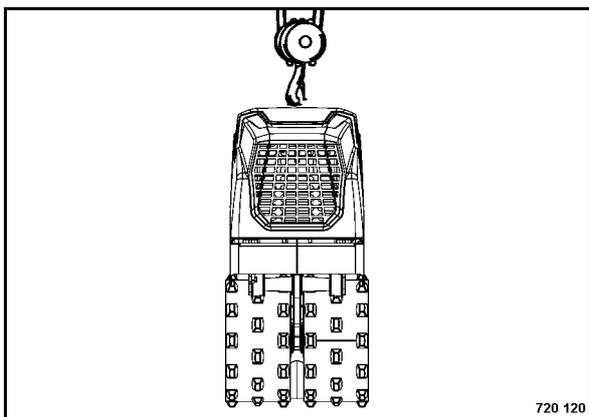


Fig. 86

Use the central lifting facility (Fig. 86) to lift the machine.

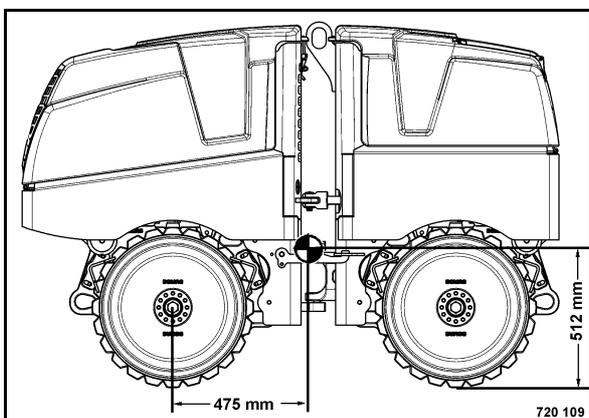


Fig. 87

- Position of centre of gravity (Fig. 87).

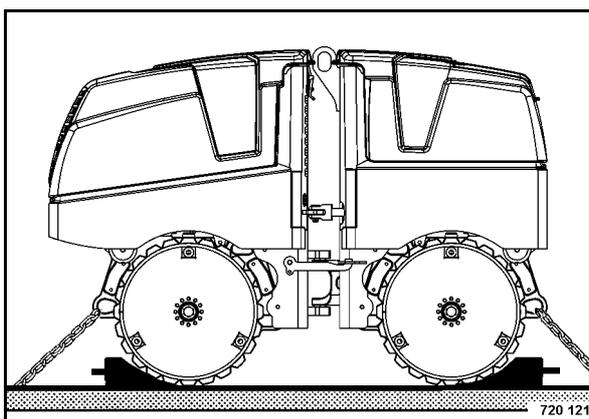


Fig. 88

- Drive the machine onto the transport vehicle and lash it down by the two lashing eyes (Fig. 88).

### **▲ Danger**

**Danger of accident!**

**The machine cannot be steered if the articulation lock is applied.**

- After transport release the articulation lock again and store it in the receptacle.

## **5 Maintenance**

### 5.1 General notes on maintenance

When performing maintenance work always comply with the appropriate safety regulations.

Thorough maintenance of the machine guarantees far longer safe functioning of the machine and prolongs the lifetime of important components. The effort needed for this work is only little compared with the problems that may arise when not observing this rule.

The terms right/left correspond with travel direction forward.

- Always clean machine and engine thoroughly before starting maintenance work.
- For maintenance work stand the machine on level ground.
- Always remove the main battery switch for all maintenance work.
- Perform maintenance work only with the motor switched off.
- Relieve hydraulic pressures before working on hydraulic lines.
- Before working on electric parts of the machine disconnect the battery and cover it with insulation material.
- When working in the area of the articulated joint attach the articulation lock (transport lock).

#### Environment

**During maintenance work catch all oils and fuels and do not let them seep into the ground or into the sewage system. Dispose of oils and fuels environmentally.**

**Keep used filters in a separate waste container and dispose of environmentally.**

**Catch biodegradable oils separately.**

#### Notes on the fuel system

The lifetime of the diesel engine depends to a great extent on the cleanliness of the fuel.

- Keep fuel free of contaminants and water, since this will damage the injection elements of the engine.

- Drums with inside zinc lining are not suitable to store fuel.
- When choosing the storage place for fuel make sure that spilled fuel will not harm the environment.
- Do not let the hose stir up the slurry at the bottom of the drum.
- The fuel drum must rest for a longer period of time before drawing off fuel.
- The rest in the drum is not suitable for the engine and should only be used for cleaning purposes.

#### Notes on the performance of the engine

On diesel engines both combustion air and fuel injection quantities are thoroughly adapted to each other and determine power, temperature level and exhaust gas quality of the engine.

If your engine has to work permanently in "thin air" (at higher altitudes) and under full load, you should consult the customer service of BOMAG or the customer service of the engine manufacturer.

#### Notes on the cooling system

Prepare and check coolant with highest care, since otherwise the engine may be damaged by corrosion, cavitation and freezing.

The coolant is prepared by mixing a cooling system protection agent (ethylene glycol) into the coolant.

Mixing with cooling system protection agent is necessary in all climatic zones. It prevents corrosion, lowers the freezing point and raises the boiling point of the coolant.

#### Notes on the hydraulic system

During maintenance work on the hydraulic system cleanliness is of major importance. Make sure that no dirt or other contaminating substances can enter into the system. Small particles can produce flutes in valves, cause pumps to seize, clog nozzles and pilot bores, thereby making expensive repairs inevitable.

- If, during the daily inspection of the oil level the hydraulic oil level is found to have dropped, check all lines, hoses and components for leaks.

- Seal leaks immediately. If necessary inform the responsible customer service.
- We recommend to use the BOMAG filling and filtering unit with fine filter to fill the system. This ensures finest filtration of the hydraulic oil, prolongs the lifetime of the hydraulic oil filter and protects the hydraulic system.
- Clean fittings, filler covers and the area around such parts before disassembly to avoid entering of dirt.
- Do not leave the tank opening unnecessarily open, but cover it so that nothing can fall in.

## 5.2 Fuels and lubricants

### Engine oil

#### Quality

Lubrication oils are classified according to their performance and quality class. Oils according to other comparable specifications may be used.

If low sulphur fuel (< 0.05%) is used, you must only use engine oils of API<sup>\*</sup>-classification CF, CF-4, CG-4, CH-4 and CI-4.

For operation of an engine with high sulphur fuels it is recommended to use an engine oil of classification CF or higher with a total base number of at least 10.



**Caution**

**Engine oils of classification CJ-4 must not be used!**

#### Oil viscosity

Since lubrication oil changes its viscosity with the temperature, the ambient temperature at the operating location of the engine is of utmost importance when choosing the viscosity class (SAE-class) .

Optimal operating conditions can be achieved by using the following oil viscosity chart as a reference.

Ambient temperature	Viscosity
over 25 °C!	SAE 30 SAE10W-30 SAE 15W-40
0°C to 25°C	SAE 20 SAE10W-30 SAE 15W-40
below 0 °C	SAE 10 SAE10W-30 SAE 15W-40

\* American Petroleum Institute

### Oil change intervals

The longest permissible time a lubrication oil should remain in an engine is 1 year. If the following oil change intervals are not reached over a period of 1 year, the oil change should be performed at least once per year, irrespective of the operating hours reached.

API: CF, CF-4,  
CG-4,CH-4 and  
CI-4 = 250 operating hours

### Fuels

#### Quality

Cetan index number: The recommended minimum index number for the Cetan value is 45. A Cetan index number higher than 50 should preferably be used, especially at ambient temperatures below -20 °C and when working at altitudes of 1500 m and more.

Diesel fuel specifications: With respect to the percentage (ppm) of sulphur the fuel used in the engine must comply with all relevant exhaust emission regulations in the area of use of the engine.

It is highly recommended to use a fuel with a sulphur content of less than 0,10 % (1000 ppm).

When using a diesel fuel with a high sulphur content of 0.50 % (5000 ppm) to 1.0 % (10.000 ppm), the engine oil change intervals must be observed.

#### Caution

**Do not use any fuels with a sulphur content of more than 1,0 % (10000 ppm).**

It is recommended to use diesel fuel that complies with the specifications EN590 or ASTM D975.

Diesel fuel with the designation no. 2-D is a distillate fuel with low volatility, which is especially suitable for industrial engines and heavy-duty commercial vehicles (SAE J313 JUN87).

Since KUBOTA diesel engines with a rated power of less than 56 kW (75 HP) comply with the exhaust emission standard of EPA -stage 4, the use of low or ultra-low sulphur fuel is mandatory for these engines, if the engines are operated within the validity area of the EPA standard. As an alternative to no. 2-D you may also use diesel fuel no. 2-D S500 or S15; with ambient temperatures be-

\* United States Environmental Protection Agency

low -10 °C the diesel fuel no. 1-D S500 or S15 should be used for no. 1-D.

The fuel level should always be topped up in due time so that the fuel tank is never run dry, as otherwise filter and injection lines need to be bled.

### Winter fuel

#### Danger

#### Fire hazard!

**Diesel fuels must never be mixed with gasoline.**

For winter operation use only winter diesel fuel, to avoid clogging because of paraffin separation. At very low temperatures disturbing paraffin separation can also be expected when using winter diesel fuel.

### Coolant

Always use a mixture of anti-freeze agent and clean, dehardened water with a mixing ratio of 1:1.

Under particularly extreme temperature conditions you should consult the service representation of the engine manufacturer with respect to the anti-freeze agent to be used.

There are various types of anti-freeze agents available. For this engine you should use ethylene glycol.

Before filling in the coolant mixed with anti-freeze agent the radiator must be flushed with clean water. This procedure should be repeated two to three times to clean the inside of radiator and engine block.

Mixing the anti-freeze agent: Prepare a mixture of 50 % anti-freeze agent and 50 % low mineral, clean water. Stir well before filling it into the radiator. The method for mixing water and anti-freeze agent depends on the brand of the anti-freeze agent. In this respect see standard SAE J1034 and also the standard SAE J814c.

Add anti-freeze agent: If the coolant level drops because of evaporation, only clean water is to be used for topping up. In case of leakages you must always fill in anti-freeze agents of the same brand and the same mixing ratio.

**⚠ Caution**

**Do not mix different coolants and additives of any other kind.**

Do not use any radiator cleaning agent after the anti-freeze agent has been mixed in. The anti-freeze agent also contains a corrosion protection agent. If this mixes with cleaning agent it may cause the development of sludge, which could damage the cooling system.

**Anti-freeze concentration**

50% = -37 °C

**♻ Environment**

**Coolant must be disposed of environmentally.**

**Mineral oil based hydraulic oil**

The hydraulic system is operated with hydraulic oil HV 46 (ISO) with a kinematic Viskosität von 46 mm<sup>2</sup>/s bei 40 °C und 8 mm<sup>2</sup>/s bei 100 °C betrieben. For topping up or for oil changes use only high-quality hydraulic oil, type HVLP according to DIN 51524, part 3, or hydraulic oils type HV according to ISO 6743/3. The viscosity index (VI) should be at least 150 (observe information of manufacturer).

**Bio-degradable hydraulic oil**

The hydraulic system can also be operated with a synthetic ester based biodegradable hydraulic oil.

The biologically quickly degradable hydraulic oil Panolin HLP Synth.46 meets all demands of a mineral oil based hydraulic oil according to DIN 51524.

In hydraulic systems filled with Panolin HLP Synth.46 always use the same oil to top up.

When changing from mineral oil based hydraulic oil to an ester based biologically degradable oil, you should consult the lubrication oil service of the oil manufacturer for details.

**⚠ Caution**

**Check the filter more frequently after this change.**

**Perform regular oil analyses for content of water and mineral oil.**

**Replace the hydraulic oil filter element every 500 operating hours.**

### 5.3 Table of fuels and lubricants

Assembly	Fuel or lubricant		Quantity
	Summer	Winter	Attention Observe the level marks
Engine			
- Engine oil	Engine oil API: CF, CF-4, CG-4, CH-4 or CI-4 SAE 10W-40 (-20 °C to +40 °C) (BOMAG PN 009 920 06; 20 l) SAE 10W-30 (-15 °C to +30 °C) SAE 15W-40 (-15 °C to + 40 °C)		approx. 4.7 litres
- Fuel	SAE 30 (+5 °C to +30 °C) Diesel	SAE 10 (-30 °C to -5 °C) Winter diesel fuel (down to -12°C)	approx. 24 litres
- Coolant	Mixture of water and anti-freeze agent (BOMAG PN 009 940 08; 20 l)		approx. 4.0 litres
Hydraulic system	Hydraulic oil (ISO), HLP 46 (BOMAG PN 009 930 09; 20 l) or ester based biodegradable hydraulic oil		approx. 17 litres
Vibration housing	Engine oil SAE 15W/40		2 x 1.7 l

## 5.4 Running-in instructions

### **i** Note

*The maintenance plan inside the engine hood of the machine assists you when servicing the machine!*

**The following maintenance work must be performed when running in new machines or overhauled engines:**

### **⚠** Caution

**Up to approx. 250 operating hours check the engine oil level twice every day.**

**Depending on the load the engine is subjected to, the oil consumption will drop to the normal level after approx. 100 to 250 operating hours.**

### **Maintenance after 50 operating hours**

- Change engine oil and filter
- Check the engine for leaks
- Retighten the fastening screws on air filter, exhaust and other attachments.
- Check screw connections on the machine, retighten as necessary.
- Retighten fastening screws of engine mounts
- Check the central screw of the drive hub, retighten if necessary

**5.5 Maintenance table**

No.	Maintenance work	Comment	every 10 operating hours, daily	every 250 oper. hours	every 500 oper. hours	every 1000 oper. hours	every 2000 oper. hours	every 3000 oper. hours	as required
5.6	Check the engine oil level	Dipstick mark	X						
5.7	Check the hydraulic oil level	Inspection glass	X						
5.8	Check the fuel level		X						
5.9	Check the water separator		X						
5.10	Check the coolant level		X						
5.11	Check the air intake hose			X					
5.12	Change engine oil and oil filter*	at least 1x per year see foot note		X					
5.13	Check, tension, replace the V-belt			X					
5.14	Clean radiator cooling fins			X					
5.15	Change the oil in the vibrator shaft housing	min. 1x per year		X					
5.16	Check the central screw of the drive hub**	see foot note		X					
5.17	Drain the fuel tank sludge				X				
5.18	Change the fuel pre-cleaner, bleed the fuel system				X				
5.19	Service the battery, check the battery main switch	pole grease			X				
5.20	Check the rubber buffers				X				
5.21	Check, adjust the valve clearance	0.145 ... 0.185 mm				X			
5.22	Check the safety field in front of/behind the machine					X			
5.23	Change hydraulic oil and filter***	at least every 2 years					X		

No.	Maintenance work	Comment	every 10 operating hours, daily	every 250 oper. hours	every 500 oper. hours	every 1000 oper. hours	every 2000 oper. hours	every 3000 oper. hours	as required
5.24	Change the coolant						X		
5.25	Changing the fuel lines						X		
5.26	Check the injection pressure						X		
5.27	Check the fuel injection pump							X	
5.28	Check the fuel injection timing							X	
5.29	Check, clean, change the combustion air filter	min. 1x per year							X
5.30	Adjust the scrapers								X
5.31	Tightening torques								X
5.32	Engine conservation								X

\* Running-in instructions: Oil change after 50 and 250 operating hours, then every 250 operating hours When using fuels with a sulphur content higher than 0.5% the oil change intervals must be halved.

\*\* Running-in instructions: check tightening torque after 50 and 250 operating hours, then every 250 operating hours

\*\*\* Also in case of repair in the hydraulic system.



## 5.6 Check the engine oil level

### Caution

The machine must be in horizontal position. When the engine is warm, shut it down and check the oil level after five minutes. With a cold engine the oil level can be checked immediately.

For quality of oil refer to the "table of fuels and lubricants".

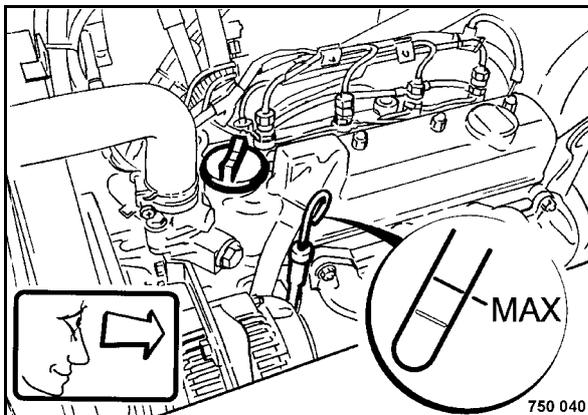


Fig. 89

- Pull the dipstick (Fig. 89) out, wipe it off with a lint-free, clean cloth and reinsert it until it bottoms.
- Pull the dipstick back out.

The oil level must always be between the "MIN"- and "MAX"-marks.

- If the oil level is too low top up oil immediately.
- If the oil level is too high, determine the cause and drain the oil off.

## 5.7 Checking the hydraulic oil level

### Caution

If, during the daily inspection of the oil level the hydraulic oil level is found to have dropped, check all lines, hoses and components for leaks.

In hydraulic systems filled with Panolin HLP Synth. 46 use only the same oil to top up. With other ester based oils consult the lubrication oil service of the respective oil manufacturer.

For quality of oil refer to the "table of fuels and lubricants".

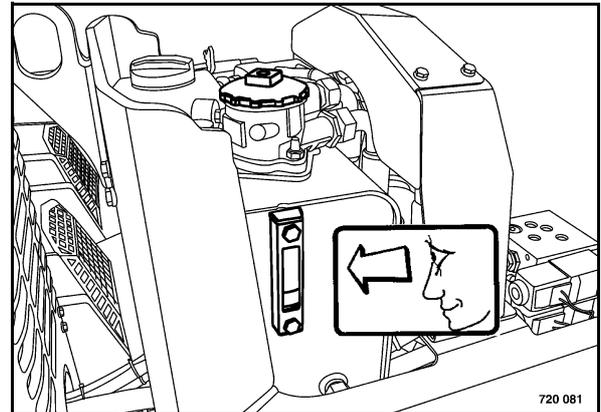


Fig. 90

- Check the hydraulic oil level in the inspection glass (Fig. 90) .
- If necessary remove the cover from the filter.
- Fill up hydraulic oil up to the MAX mark in the inspection glass.
- Screw the cover back on.

## 5.8 Checking the fuel level

### **⚠ Danger**

**Fire hazard! Health hazard!**

**When working on the fuel system do not use open fire, do not smoke, do not spill any fuel.**

**Do not refuel in closed rooms.**

**Do not inhale any fuel fumes.**

**Shut down the engine.**

### **⚠ Caution**

**For quality and quantity of fuel refer to the "table of fuels and lubricants".**

### **♻ Environment**

**Catch running out fuel, do not let it seep into the ground.**

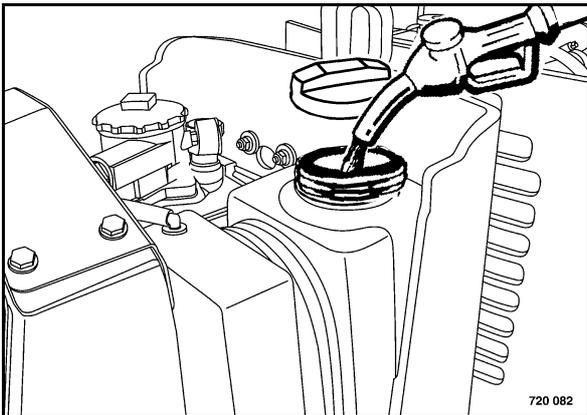


Fig. 91

- Clean the area around the filler cover, unscrew the filler cover (Fig. 91).

### **⚠ Caution**

**Contaminated fuel can cause malfunction or even damage of the engine.**

- Fill in fuel through a funnel with screen.
- Close the tank again.

## 5.9 Check the water separator

### **i Note**

*The service intervals for the water separator depend on the water content in the fuel and can therefore not be determined precisely. After taking the engine into operation you should therefore check the water separator every day for signs of water.*

### **♻ Environment**

**Any fuel must be caught and disposed of in an environmentally friendly manner.**

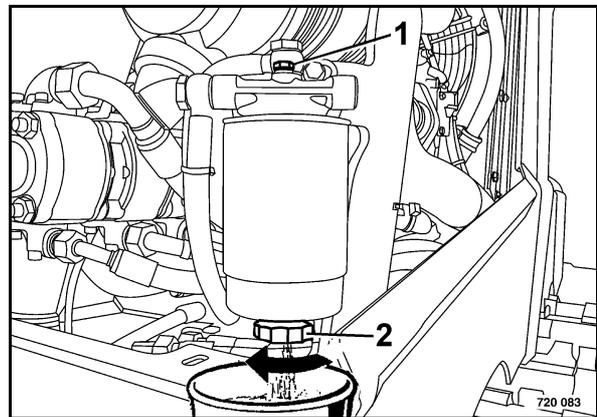


Fig. 92

- Slacken the bleeding screw (1) (Fig. 92) for a few turns.
- Slacken the drain plug (2) for a few turns and catch running out fuel / water.
- Tighten drain and bleeding plugs again and check for leaks, if necessary replace the seal ring.

## 5.10 Checking the coolant level

**⚠ Danger**

**Danger of scalding!**

Open the cap on the coolant compensation tank only when the engine is cold.

**⚠ Caution**

If, during the daily inspection the coolant level is found to have dropped, check all lines, hoses and engine for leaks.

For quality of coolant refer to "fuels and lubricants".

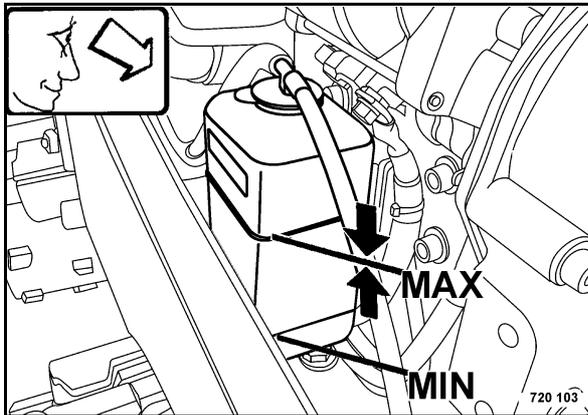


Fig. 93

- Check the coolant level (Fig. 93).
- To top up unscrew the filler cap and fill in coolant up to the MAX-mark.

**Every 10 operating hours**



## 5.11 Check the air intake hose

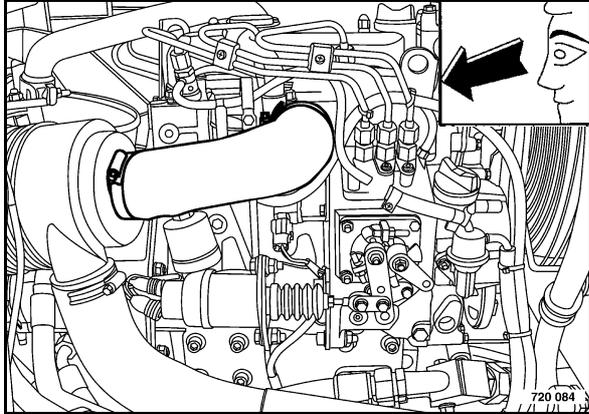


Fig. 94

- Check the fastening of the hose clamps (Fig. 94), tighten if necessary.
- Check the condition of the air intake hose, replace if necessary.

## 5.12 Changing engine oil and oil filter

### **⚠ Danger**

**Danger of scalding!**

When draining off hot oil.

By hot oil when unscrewing the engine oil filter.

### **⚠ Caution**

The oil change at 250 operating hours refers to the use of fuels with a sulphur content of less than 0.5%. When using fuels with a sulphur content higher than 0.5% the oil change intervals must be halved.

Drain the engine oil only when the engine is warm.

For quality and quantity of oil refer to the "table of fuels and lubricants".

### **♻ Environment**

Catch running out oil and dispose of environmentally together with the oil filter cartridge.

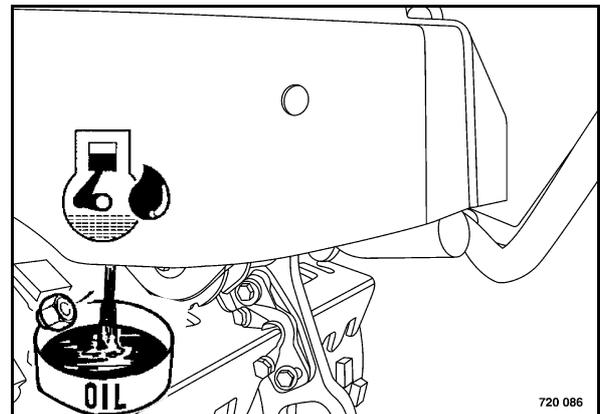


Fig. 95

- Unscrew the drain plug (Fig. 95) and catch running out oil.
- Turn the drain plug tightly back in.

## Every 250 operating hours

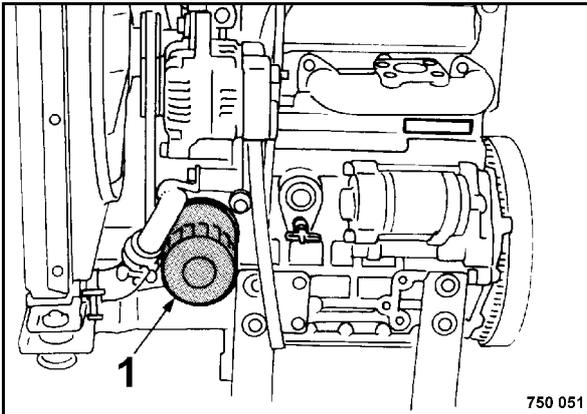


Fig. 96

- Unscrew the filter cartridge (1) (Fig. 96) using an appropriate filter wrench.
- Clean the sealing face on the filter carrier from any dirt.

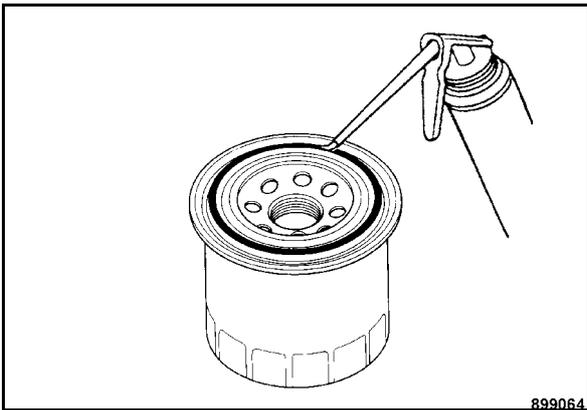


Fig. 97

- Slightly oil the rubber seal on the new filter cartridge (Fig. 97).
- Turn the new filter cartridge on by hand, until the seal contacts.
- Tighten the filter element for another half turn.

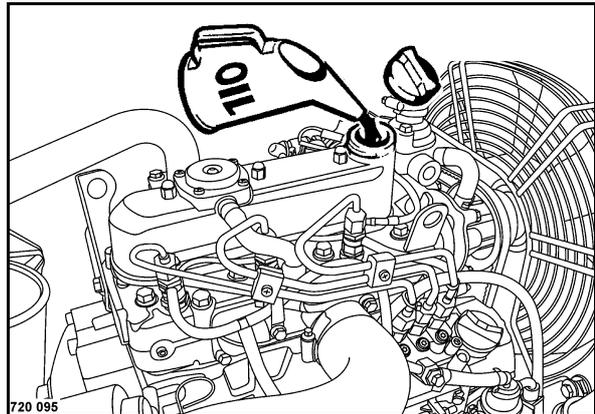


Fig. 98

- Fill in new engine oil (Fig. 98).
- Tighten the oil filler cap properly.

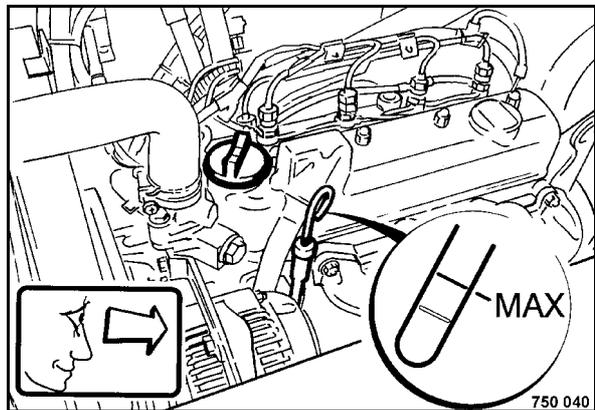


Fig. 99

- After a short test run check the oil level once again (Fig. 99), if necessary top up to the top mark (MAX).

## 5.13 Checking, tensioning, re- placing the V-belt

### **⚠ Danger**

**Danger of accident!**

Perform this work only with the engine shut down.

### Checking the V-belt

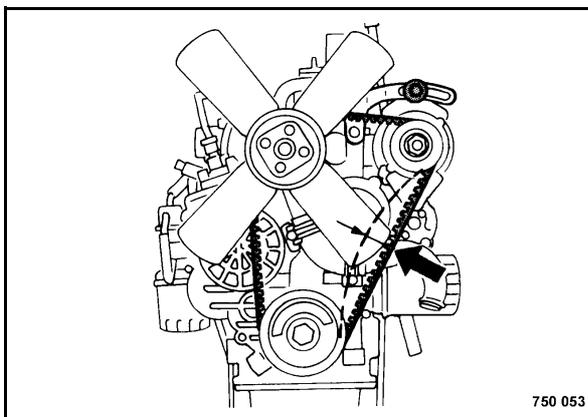


Fig. 100

- Check the entire circumference of the V-belt (Fig. 100) for damage and cracks. Replace damaged or cracked V-belts.
- Check with thumb pressure whether the V-belt can be depressed more than 7 to 9 mm between the V-belt pulleys, retighten if necessary.

### Tensioning the V-belt

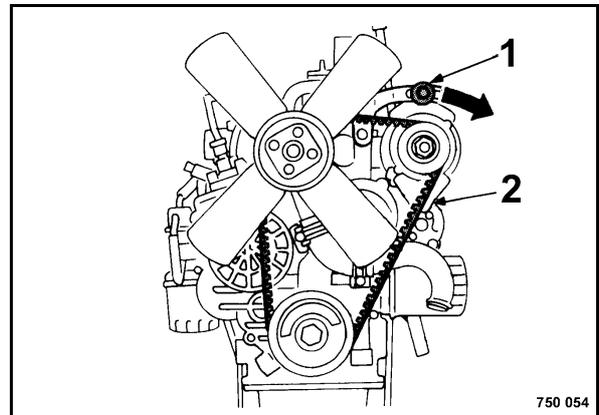


Fig. 101

- Slacken the fastening screws 1 and 2 (Fig. 101) slightly.
- Press the generator in direction outward using a lever, until the correct V-belt tension is reached.
- Retighten all fastening screws and check the V-belt tension once again.

### Changing the V-belt

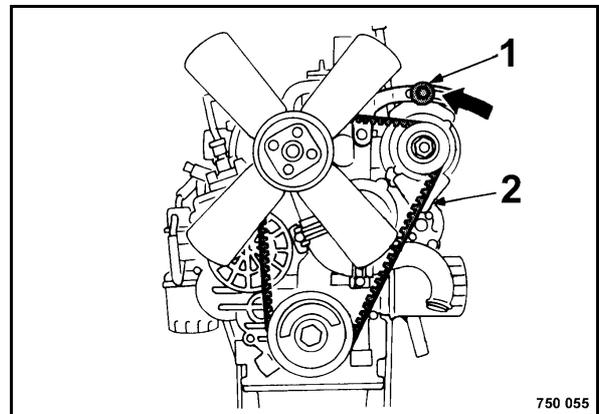


Fig. 102

- Slacken slightly the fastening screws 1 and 2 (Fig. 102) slightly.
- Press the generator completely against the engine.
- Take the old V-belt off.
- Fit the new V-belt to the V-belt pulleys.
- Tension the V-belt as previously described.

**⚠ Caution**

Check the V-belt tension again after a running time of 30 minutes.

## 5.14 Clean the cooling fins on engine and hydraulic oil cooler

**⚠ Danger**

**Danger of injury!**

Perform cleaning work only after the engine has cooled down and with the engine stopped.

**⚠ Caution**

Do not damage any cooling fins on the cooler core when cleaning.

**i Note**

*Dirt on fan blades and radiator reduce the cooling effect. Dirt deposits in these areas are substantially supported by oil and fuel on these surfaces. For this reason you should always seal any oil or fuel leaks in the vicinity of the cooling fan or the radiator and clean the cooling surfaces after.*

### Cleaning with compressed air

**i Note**

*Start to blow out from the exhaust side.*

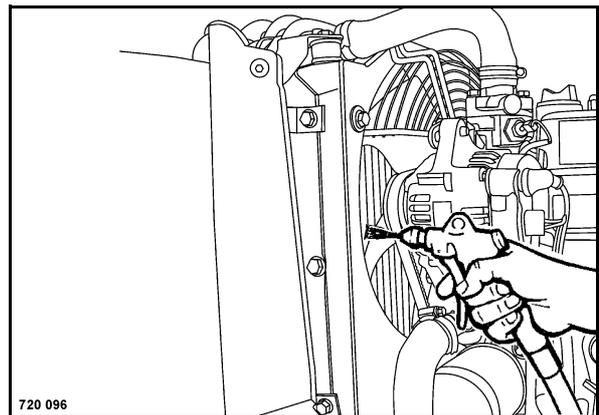


Fig. 103

- Blow the cooler (Fig. 103) out with compressed air from the air discharge side.
- Blow the cooler out with compressed air from the air supply side.

## Cleaning with cold cleansing agent

### Caution

Protect electrical equipment such as generator and starter against the direct water jet.

- Spray engine and cooler with a suitable cleansing agent, e.g. cold cleanser, let it soak in for a while and spray it off with a strong water jet.
- Run the engine warm for a while to avoid corrosion.

## 5.15 Change the oil in the vibrator shaft housing

### Caution

Change the oil at operating temperature. For this purpose run the machine approx. half an hour with vibration.

### Environment

Catch running out oil and dispose of environmentally.

### Danger

Danger of injury!

Do not step under suspended loads.

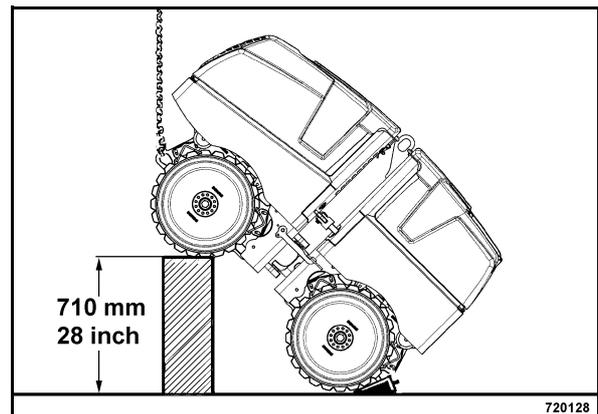


Fig. 104

- Lift the machine up and support it safely (Fig. 104).

## Every 250 operating hours

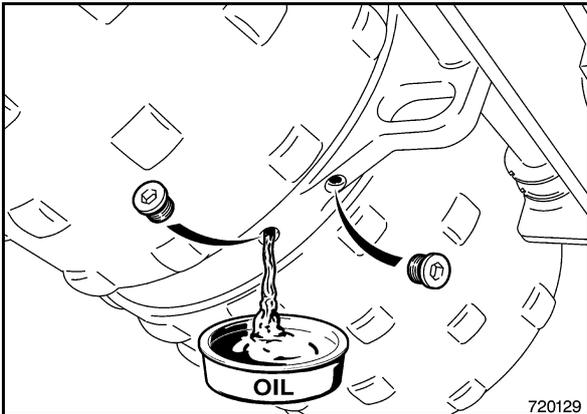


Fig. 105

- Unscrew the drain and filling plug on the front drum (Fig. 105).
- Drain and catch all oil.

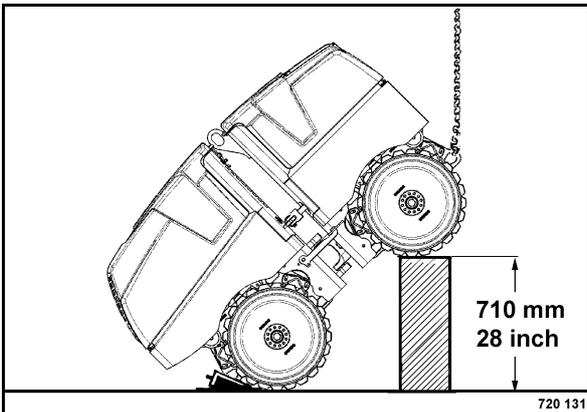


Fig. 106

- Jack up the opposite side of the machine and secure it adequately (Fig. 106).

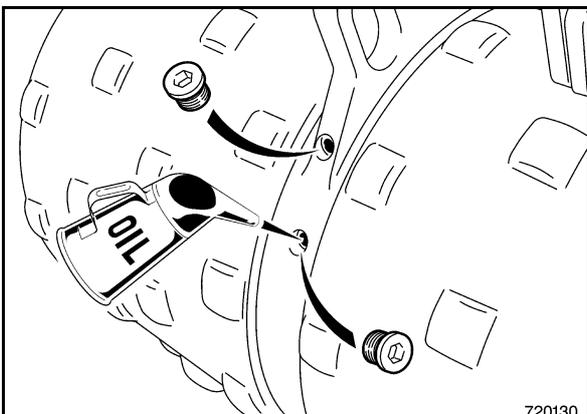


Fig. 107

- Top up oil through the oil drain hole in the bottom drum.

For quality and quantity of oil refer to the table of fuels and lubricants.

- Screw the drain and ventilation plugs back in.

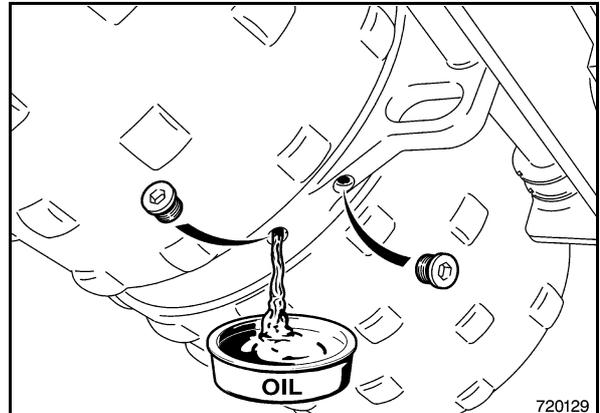


Fig. 108

- Unscrew the drain and ventilation plugs (Fig. 105) from the upper drum.
- Drain and catch all oil.

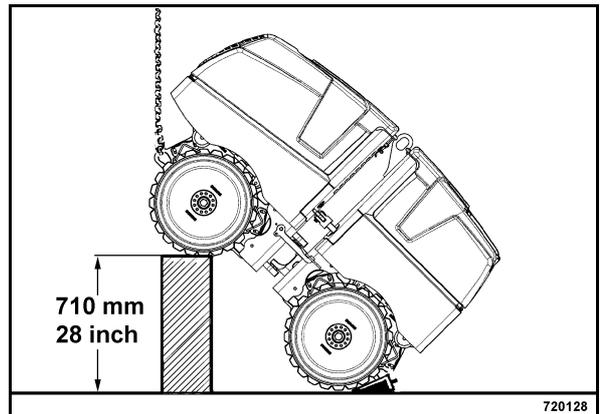


Fig. 109

- Jack up the opposite side of the machine and secure it adequately (Fig. 104).

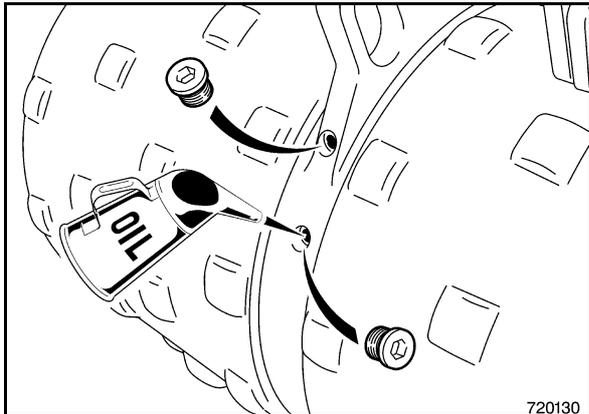


Fig. 110

- Top up oil through the oil drain hole in the bottom drum.

**For quality and quantity of oil refer to the table of fuels and lubricants.**

- Screw the drain and ventilation plugs back in.

## 5.16 Checking the central screw of the drive hub

**⚠ Caution**

Check the tightening torque of the central screw on all 4 drive hubs.

**Tightening torque: 900 Nm.**

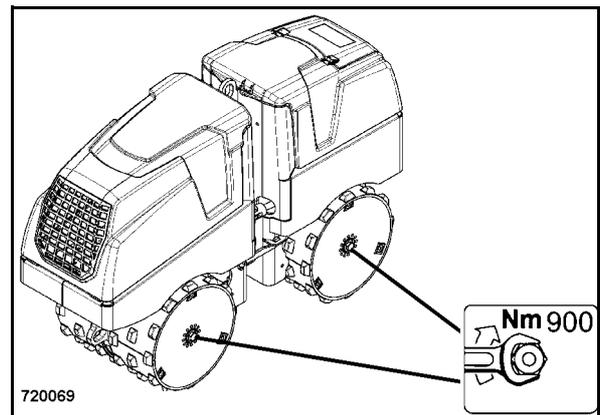


Fig. 111

- Check the tightening torque of the central screw on all 4 drive hubs (Fig. 104).

**Every 250 operating hours**



## 5.17 Draining the fuel tank sludge

### **⚠ Danger**

Fire hazard!

When working on the fuel system do not use open fire, do not smoke.

Do not spill any fuel.

### **⚠ Danger**

Health hazard!

Do not inhale any fuel fumes.

### **♻ Environment**

Catch running out fuel, do not let it seep into the ground.

### **i Note**

When performing this work the fuel tank shall only hold max. 5 litres of fuel, pump off if necessary.

- Fold out the rear frame

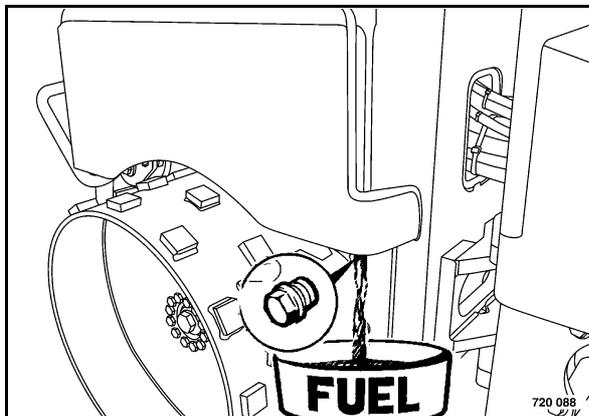


Fig. 112

- Place the suitable container under the fuel tank drain plug(Fig. 112).
- Unscrew the plug and drain off fuel.
- Once all fuel has run out screw the drain plug back in with a new seal ring.
- Fill the fuel tank with clean fuel.

## 5.18 Changing the fuel pre-cleaner, bleeding the fuel system

### **⚠ Danger**

Fire hazard!

When working on the fuel system do not use open fire, do not smoke.

Do not spill any fuel.

### **⚠ Danger**

Health hazard!

Do not inhale any fuel fumes.

### **♻ Environment**

Catch running out fuel, do not let it seep into the ground.

Dispose of the used fuel filter environmentally.

### Change the fuel filter cartridge

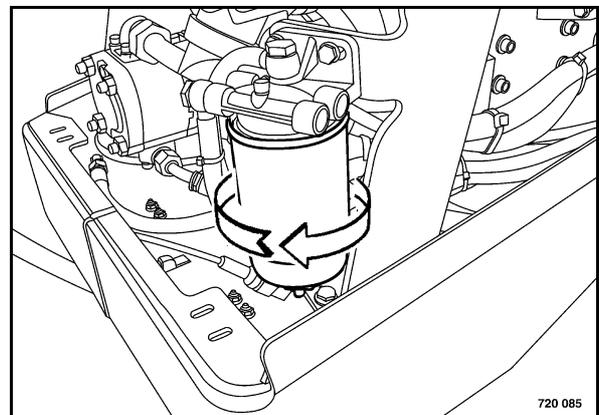


Fig. 113

- Loosen and unscrew the fuel filter cartridge (Fig. 113) using an appropriate filter wrench.
- Cleaning the sealing face on the filter head.

## Every 500 operating hours

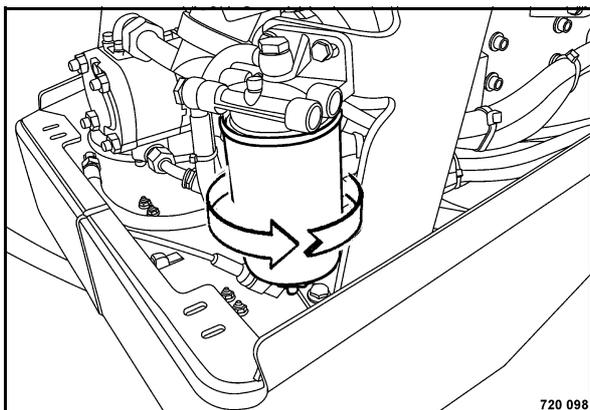


Fig. 114

- Apply a thin film of fuel to the seals and screw the new filter cartridge (Fig. 114) on hand-tight.

### Bleed the fuel system

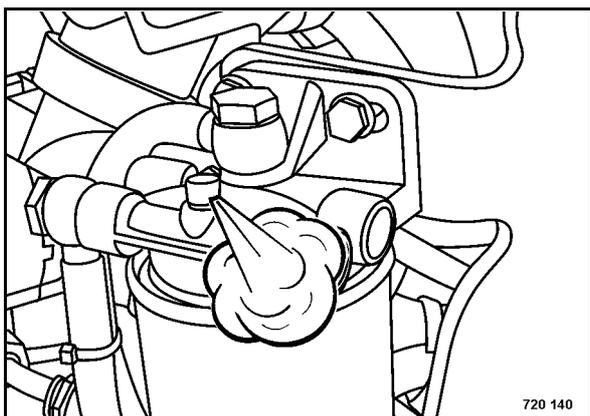


Fig. 115

- Open the bleeding screw on the fuel filter (Fig. 115) and crank the engine with the starter, until fuel runs out without air bubbles.
- Retighten the bleeding screw.

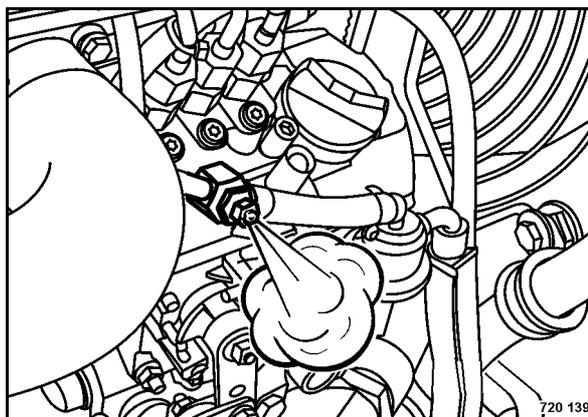


Fig. 116

- Open the bleeding screw on the injection pump (Fig. 116) and crank the engine with the starter, until fuel runs out without air bubbles.
- Retighten the bleeding screw.

## 5.19 Battery service, checking the main battery switch

### **⚠ Danger**

**Danger of cauterisation ! Danger of explosion!**

**When working on the battery do not use open fire, do not smoke!**

**The battery contains acid. Do not let acid come in contact with skin or clothes!**

**Wear protective clothing!**

**Do not lay any tools on the battery!**

**For recharging remove the plugs from the battery to avoid the accumulation of highly explosive gases.**

### **♻ Environment**

**Dispose of the old batteries environmentally.**

### **i Note**

*Maintenance free batteries also need care. Maintenance free only means that the fluid level does not need to be checked. Each battery suffers under self-discharge, which may, if not checked occasionally, even cause damage to the battery as a result of exhaustive discharge.*

**The following therefore applies for the service life:**

- Switch off all consumers.
- Check open-circuit voltage of the battery at regular intervals. At least once per month.

Reference values: 12.6 V = fully charged; 12.3 V = 50% discharged.

- Recharge the battery immediately after an open-circuit voltage of 12.25 V or less is reached. Do not perform quick charging.

The open-circuit voltage of the battery occurs approx. 10 hours after the last charging process or one hour after the last discharge.

- After each charging process allow the battery to rest for one hour before taking it into service.
- For resting periods of more than one month you should always disconnect the battery. Do

not forget to perform regular open-circuit voltage measurements.

### **⚠ Caution**

**Exhausted batteries (batteries with formation of sulphate on the plates) are not covered under warranty!**

- Open the maintenance flap and remove the battery cover.

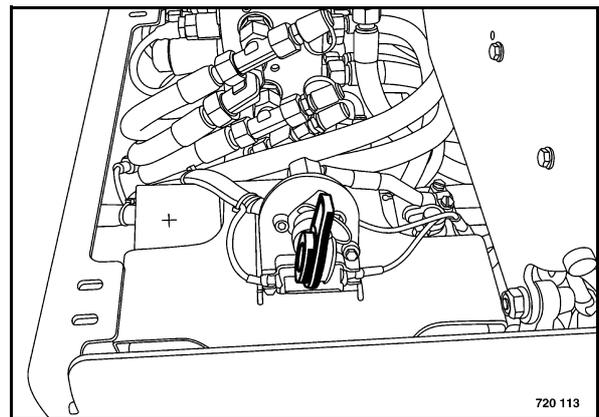


Fig. 117

- Clean the outside of the battery (Fig. 117).
- Clean battery poles and pole clamps and grease them with pole grease (Vaseline).
- Check the fastening of the battery.
- On serviceable batteries check the acid level, if necessary top up to the filling mark with distilled water.

### **Checking the main battery switch**

- Turn the main battery switch to "horizontal" position and check by voltage measurement (ignition key test) whether the batteries are disconnected from the electric system of the machine.

## 5.20 Check the rubber buffers

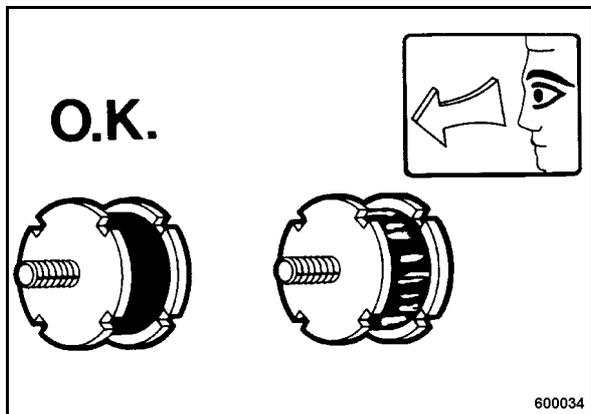


Fig. 118

- Check all rubber buffers (Fig. 118) for tight fit, cracks and damage and replace immediately if damaged.

## 5.21 Checking, adjusting the valve clearance

### Caution

We recommend to have this work carried out by trained personnel or our after sales service.

Check and adjust only when the engine is cold. Cylinder 1 is on the flywheel side.

- Disassemble cylinder head cover and glow plug.

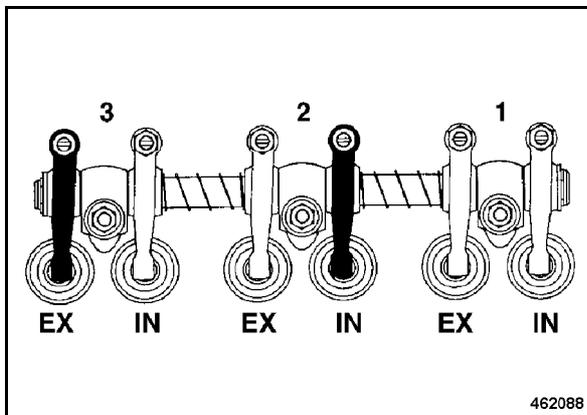


Fig. 119

### Crankshaft position 1

IN = Intake valve  
EX = Exhaust valve

- Crank the engine until both valves on cylinder 1 are "overlapping".
- Perform the adjustment of the valve by following the adjustment diagram 1" (Fig. 119), black mark.

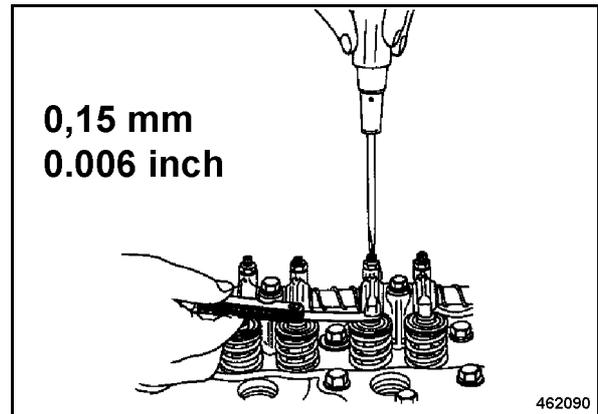


Fig. 120

- Check the gap between rocker arm and valve with a feeler gauge (Fig. 120).

Valve clearance for intake and exhaust valve:  
0.145 - 0.185 mm

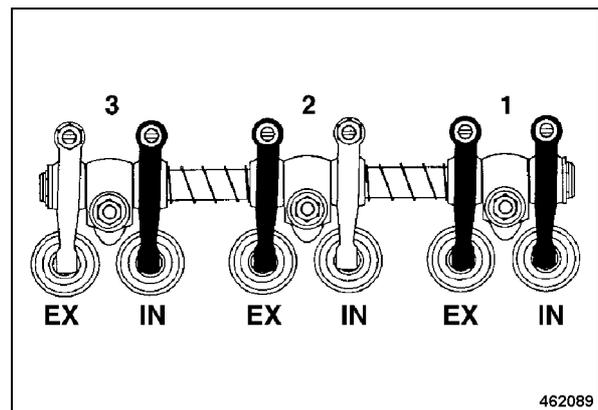


Fig. 121

### Crankshaft position 2

IN = Intake valve  
EX = Exhaust valve

- Turn the crankshaft one revolution (360 °) further.
- Perform the adjustment of the valve by following the adjustment diagram 2" (Fig. 121), black mark.
- Assemble the cylinder head cover with a new gasket.

### Note

After a short test run check the engine for leaks.

## 5.22 Safety field measurement of the Boss safety system

### **⚠ Danger**

**Danger of injury!**

The safety field of the machine must be measured at a height of one meter, also after maintenance/repair work on the safety system.

A safety field length  $< 1.20$  m is not permitted.

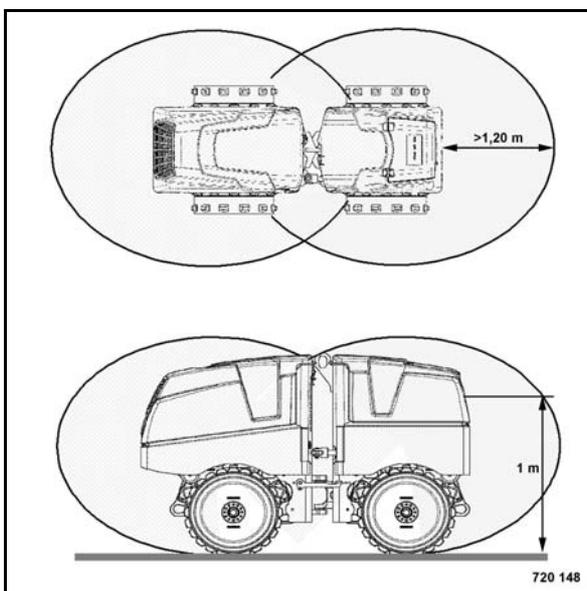


Fig. 122

- Step behind the machine with the remote control and allow the machine to move towards you, until it stops.
- Measure the distance between machine and remote control housing.

**Nominal value:**

$>1.20$  m

### **⚠ Danger**

**Danger of injury!**

If the safety distance is fallen short of stop the machine and have the safety system repaired. It is not permitted to continue operation.

- Repeat this inspection in front of the machine.

## 5.23 Change hydraulic oil and filter

### **i** Note

See also the notes on the hydraulic system in the chapter "General notes on maintenance".

### **⚠** Danger

**Danger of scalding!**

**When draining off hot hydraulic oil!**

### **⚠** Caution

The hydraulic oil must also be changed after major repairs in the hydraulic system.

Perform the oil change when the hydraulic oil is warm.

Replace the hydraulic oil filter element with every hydraulic oil change.

Clean the area round hydraulic oil tank, filler opening and breather filter.

Do not start the engine after draining the hydraulic oil.

Do not use any detergents to clean the system.

For quality and quantity of oil refer to the "table of fuels and lubricants".

When changing from mineral oil based hydraulic oil to an ester based biologically degradable oil, you should consult the lubrication oil service of the oil manufacturer for details.

### **♻** Environment

**Catch running out oil and dispose of environmentally.**

- Drive the machine, until the hydraulic oil has reached operating temperature.
- Shut down the engine.

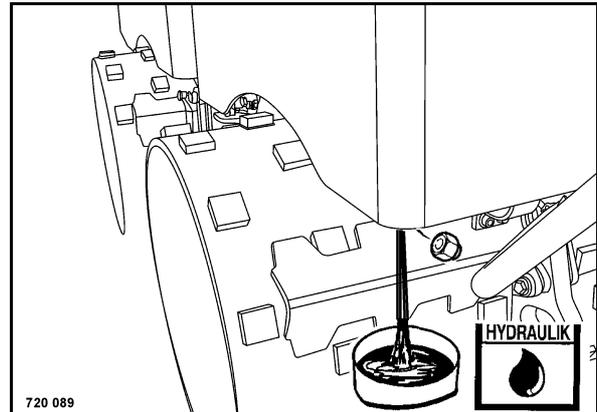


Fig. 123

- Unscrew the plug (Fig. 123) and drain off all hydraulic oil.
- Turn the plug tightly back in.

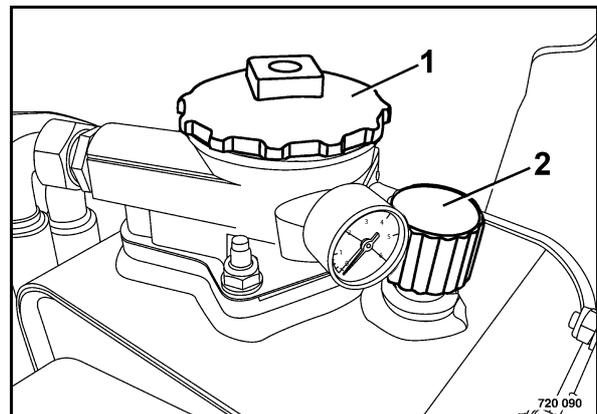


Fig. 124

- Unscrew the filter cover 1 (Fig. 124) and take out the filter element.

### **i** Note

We recommend to use the BOMAG filling and filtering unit with fine filter to fill the system. This ensures finest filtration of the hydraulic oil, prolongs the lifetime of the hydraulic oil filter and protects the hydraulic system.

- Fill in new hydraulic oil.
- Insert a new filter and reassemble the filter cover.
- Replace the breather filter (2).
- Perform a test run and check the system for leaks.

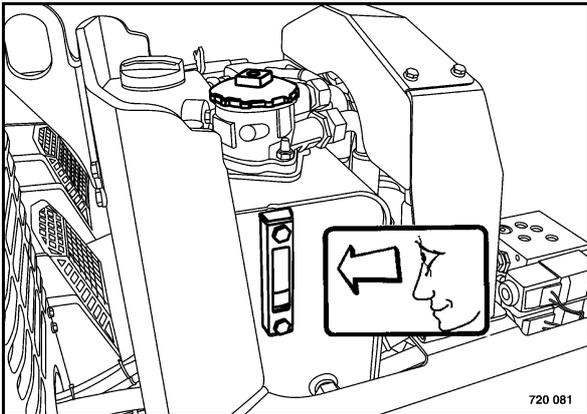


Fig. 125

- Check the oil level in the inspection glass (Fig. 125).

## 5.24 Change the coolant

### **Danger**

**Danger of scalding!**

Change the coolant only when the engine is cold.

Do not remove the radiator cap when the engine is still hot.

Always wear gloves when handling anti-freeze agent.

### **Caution**

Always screw the radiator cap tightly back on (second detent).

Always fill the engine cooling system with an anti-freeze mixture (corrosion protection).

Do not use more than 50% anti-freeze.

Do not mix different coolants and additives of any other kind. If necessary flush the cooling system 2-3 times with clear water.

For quality and quantity of coolant refer to the "table of fuels and lubricants".

### **Environment**

Catch running out coolant and dispose of environmentally.

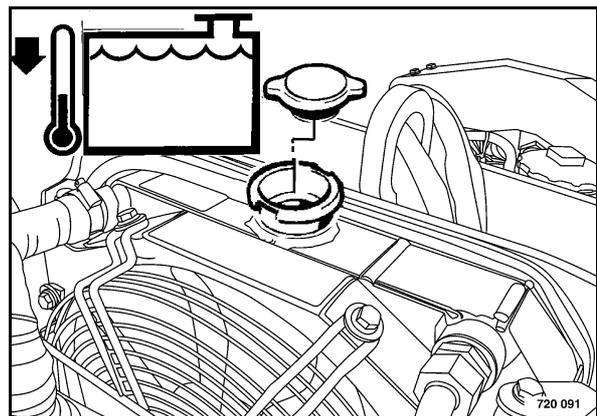


Fig. 126

- Remove the radiator cap (Fig. 126).

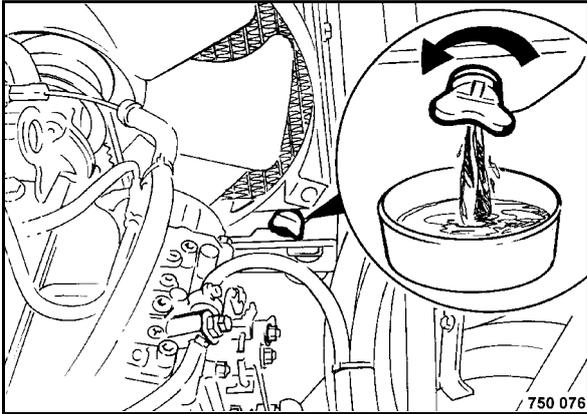


Fig. 127

- Unscrew the drain valve (Fig. 127) from the radiator.
- Drain the coolant completely off and collect it.
- Screw the drain valve back in.
- Check the condition of radiator hoses, if necessary replace all radiator hoses.

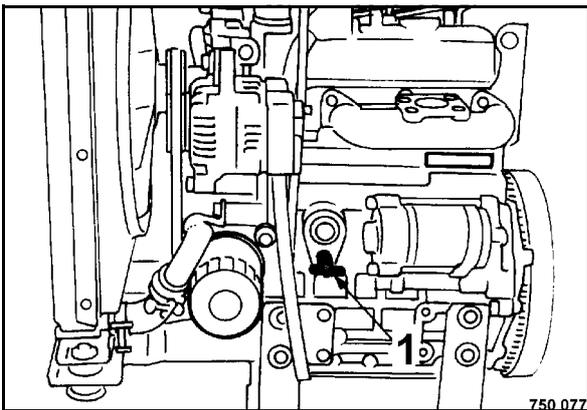


Fig. 128

- Open the drain valve (Fig. 128) on the engine.
- Drain the coolant completely off the engine block and collect it.
- Close the drain tap again.

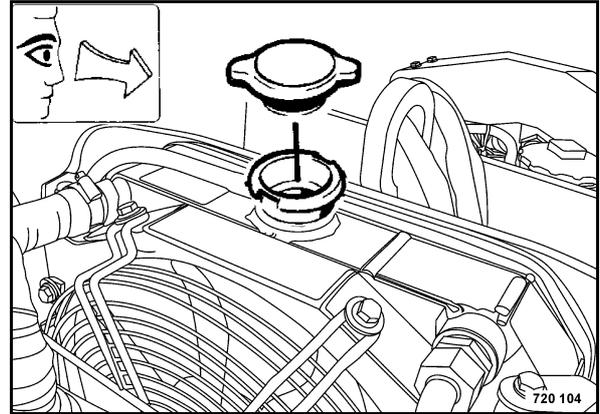


Fig. 129

- Fill in coolant until the level reaches the bottom edge of the radiator filler socket (Fig. 129).

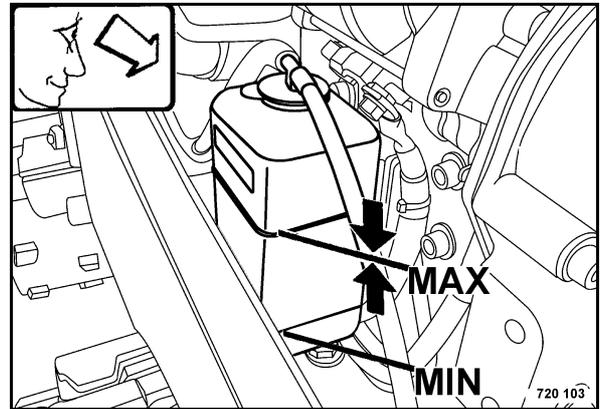


Fig. 130

- Fill in coolant up to the MAX mark (Fig. 130).
- Reattach the radiator cap and the cap of the compensation tank.
- Start the diesel engine and run it warm to operating temperature.
- Let the engine cool down and check the coolant level again, if necessary top up in the compensation tank.

## 5.25 Change the fuel lines

### **i** Note

*For safety reasons this work should be performed every two years.*

*Hoses consist of rubber or plastic material and age over the course of time.*

### **⚠** Danger

**Fire hazard!**

**When working on the fuel system do not use open fire, do not smoke and do not spill any fuel.**

**Do not inhale any fuel fumes.**

### **♻** Environment

**Catch running out fuel, do not let it seep into the ground.**

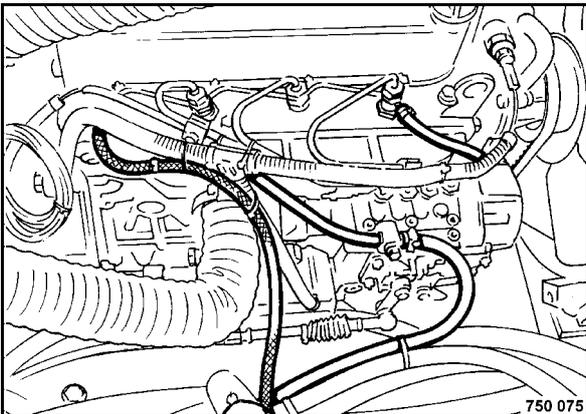


Fig. 131 084

- Replace all fuel hoses (Fig. 131) including their hose clips.

## 5.26 Checking the injection pressure

### **i** Note

*This work must only be performed by authorized service personnel.*

---

## 5.27 Checking the fuel injection pump

---

**i Note**

*This work must only be performed by authorized service personnel.*

---

## 5.28 Checking the fuel injection timing

---

**i Note**

*This work must only be performed by authorized service personnel.*

**Every 3000 operating hours**



## 5.29 Check, clean, replace the combustion air filter

### ⚠ Caution

Do not use gasoline or hot fluids to clean the filter cartridge.

After cleaning the filter cartridge must be inspected with a torch for damage.

Dry air filter cartridges with damaged filter element or seal must be replaced in any case.

The dry air filter element must be replaced after 3 times cleaning, but at the latest after one year, irrespective of the operating hours.

Each cleaning interval must be marked with a cross on the cover of the filter element.

Cleaning does not make sense if the cartridge is covered with a sooty deposit. Use a new filter cartridge.

Incorrectly handled filter elements may become ineffective because of damage (e.g.: cracks) and cause engine damage.

When working in dusty environments the filter service may become due considerably earlier. This may be noticed by a drop in engine power and black exhaust fumes.

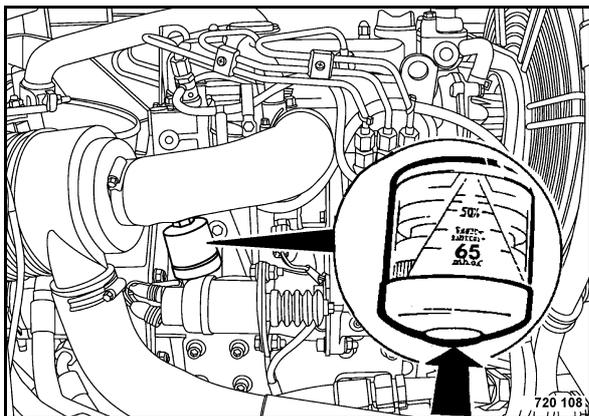


Fig. 132

Servicing of the dry air filter is necessary when the yellow piston (Fig. 132) has reached the inscription "Service", but at the latest after one year.

After completion of the filter service reset the indicator back to "Zero" by pressing the button.

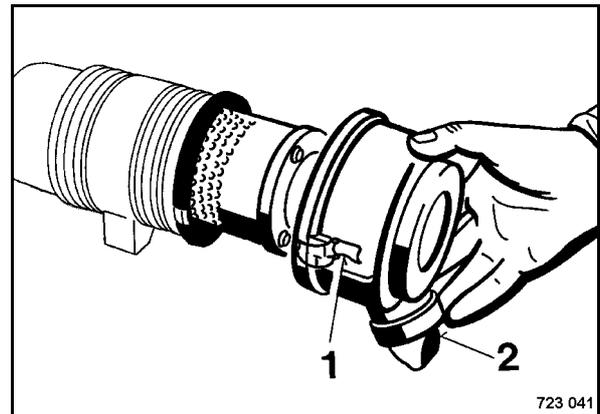


Fig. 133

- Open both clamps 1 (Fig. 133).
- Remove the filter hood.
- Clean filter hood and dust discharge valve (2).

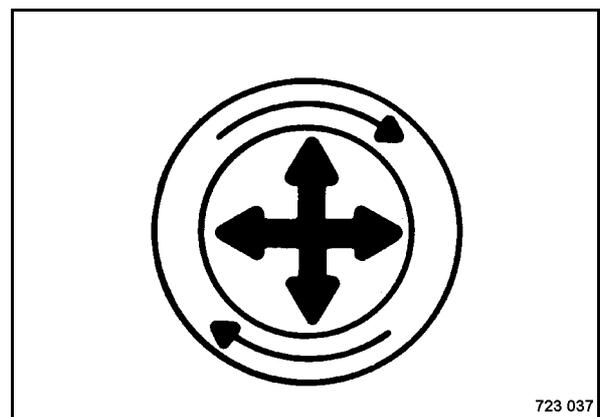


Fig. 134

- Carefully loosen the filter element.

The filter element is located directly on the outlet tube, thereby providing a seal on the inside of the filter cover. Carefully remove the filter element, in order to reduce the released amount of dust. To release the seal pull the filter element carefully up, down and sideways or turn it (Fig. 134).

## As required

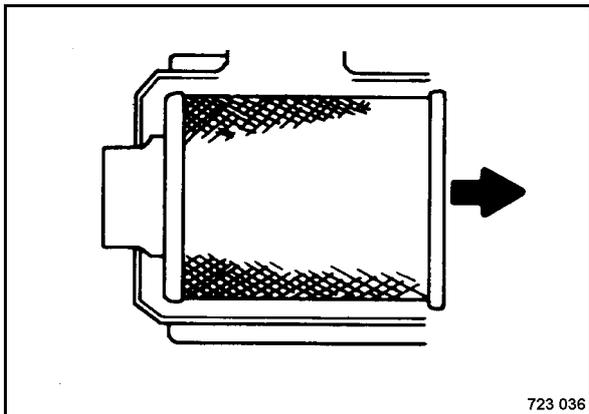


Fig. 135

- Pull the filter element (Fig. 135) carefully out of the housing.



### Caution

**Avoid contact between filter element and housing.**

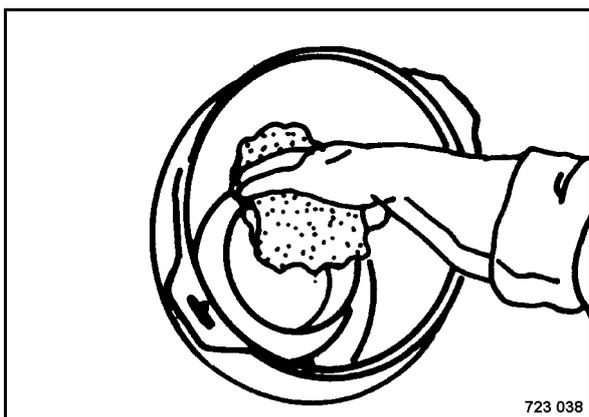


Fig. 136

- Clean the sealing face on the outlet tube (Fig. 136).

Dust on the outer diameter of the outlet tube can impair effective sealing.

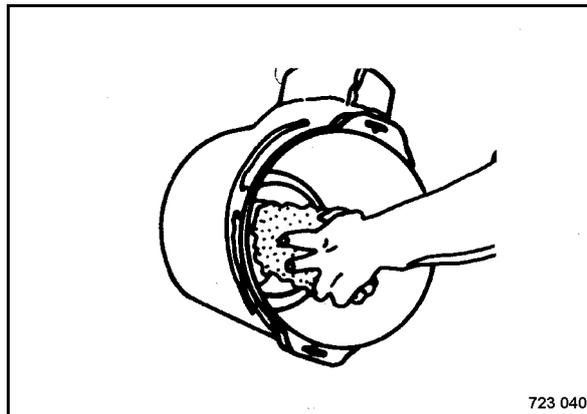


Fig. 137

- Thoroughly clean the inside of the outlet tube (Fig. 137) and the filter housing.

Dirt that may incidentally drop into the outlet tube will reach the engine and cause wear.

- Check the old filter element.

The old filter element can be of help to discover foreign particles on the sealing face, which could lead to leaks. A dust strip on the clean air side of the filter may be a sign for this. Eliminate the problem before installing a new filter element.

- Clean or replace the filter element.
- Examine the filter element thoroughly for damage.

Before installing the new filter element check it for possible damage from transport, cleaning or incorrect handling. Especially on the inside of the open end (sealing area). Do not install a damaged filter element.

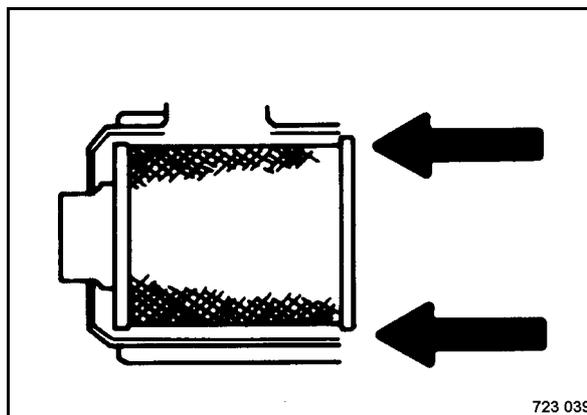


Fig. 138

- Insert the filter element (Fig. 138).

The radial sealing area is located at the inside of the open filter edge. This critical sealing area must be under slight tension after the filter has been installed. In order to achieve a tight seal apply pressure to the outer edge of the filter and not to the moveable centre.

- Reinstall the filter hood with the dust discharge valve.

**⚠ Caution**

The dust discharge valve must point vertically downwards.

### Dry cleaning of the filter cartridge

**⚠ Danger**

Eye injury!

Wear protective clothing (goggles, gloves).

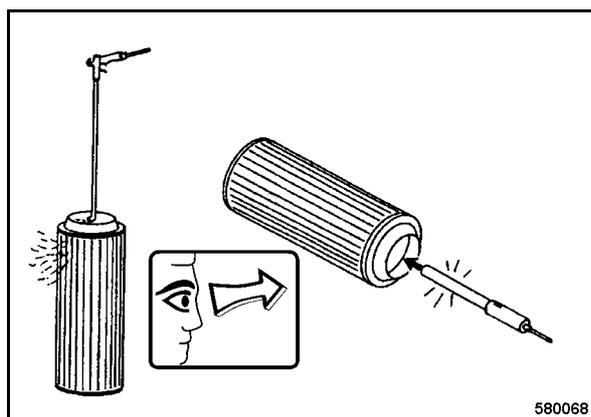


Fig. 139

**i Note**

For cleaning purposes fit a tube to the compressed air gun (Fig. 139), the end of which should be bent for approx. 90°.

The length should reach down to the bottom of the cartridge.

- Blow the cartridge out with compressed air (max. 5 bar) from inside to outside by moving the tube up and down inside the cartridge, until it is free of dust.
- Examine the filter cartridge with a torch for cracks and holes in the paper bellows.

**⚠ Caution**

Do not continue to use a damaged filter element. If in doubt use a new filter element.

### 5.30 Adjust the scrapers

**i Note**

If the scrapers (2 per drum) are worn, they must be adjusted or replaced.

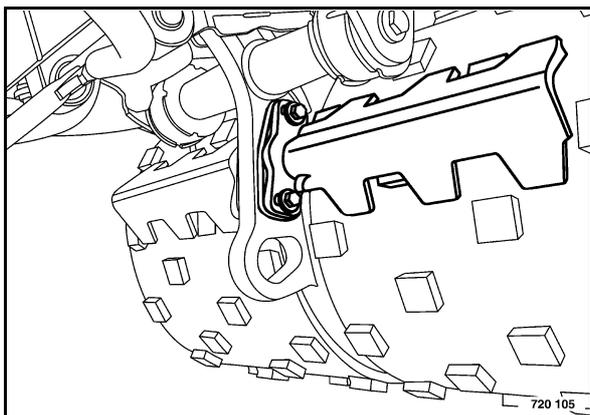


Fig. 140

- Loosen the fastening screws (Fig. 140) on both sides of the machine.
- Adjust the scrapers to a distance of approx. 5 mm to the drum.
- Tighten the fastening screws.

### 5.31 Tightening torques for screws with metric unified thread

Bolt dimensions	Tightening torques Nm*		
	8.8	10.9	12.9
M4	3	5	5
M5	6	9	10
M6	10	15	18
M8	25	35	45
M10	50	75	83
M12	88	123	147
M14	137	196	235
M16	211	300	358
M18	290	412	490
M20	412	578	696
M22	560	785	942
M24	711	1000	1200
M27	1050	1480	1774
M30	1420	2010	2400

Fig. 141

\* Strength classes for screws with untreated, non-lubricated surface. Screw quality designations are stamped on the screw heads.

8.8 = 8G

10.9 = 10K

12.9 = 12K

- Drum extension - drum  
= 652 Nm

The values result in a 90% utilization of the screw's yield point at a coefficient of friction total = 0,14. Compliance with the specified tightening torques is checked with torque wrenches. When using MoS<sub>2</sub> lubricants the specified tightening torques do not apply.

**i Note**

Self-locking nuts must always be replaced once they have been unscrewed.

## 5.32 Engine conservation

If the engine is to be shut down for a longer period of time (e.g. during winter) we recommend the following conservation measures for the engine to avoid corrosion:

- Clean the engine, including the cooling system with cold cleansing agent and a water jet or, even better, with a steam jet.
- Run the engine warm and shut it down.
- Drain the still warm engine oil and fill in anti-corrosion engine oil.
- Drain the fuel from the fuel tank, mix it well with 10% anti-corrosion oil and fill it in again. Instead of mixing anti-corrosion oil with the fuel it is also possible to fill the tank with injection pump testing oil with anti-corrosive properties (e.g. Calibration Fluid B).
- Run the engine for 10 minutes until all lines, filter, pump and nozzles are filled with the conserving mixture and the new engine oil is distributed to all parts.
- After this test run remove the cylinder head covers and the lateral cover of the injection pump, spray the rocker chambers and the spring chamber in the injection pump with a mixture of diesel fuel with 10% anti-corrosion oil. Reassemble hoods and covers.
- Crank the engine several times by hand (without ignition) in order to spray the combustion chamber.
- Take the V-belt off and spray the grooves in the pulleys with anti-corrosion oil. Remove the anti-corrosion oil before taking the machine into operation.
- Close the air intake opening on the air filter and the exhaust opening.

### **i** Note

*Depending on weather conditions, these conserving measures will provide protection for approx. 6 - 12 months.*

*The conserving oil must be replaced by engine oil according to the API- (MIL) classification before taking the machine into operation. Refer to the section "Fuels and lubricants".*

*Anti-corrosion oils are those that comply with the specification MIL-L-21260 B or TL 9150-037/2 or Nato Code C 640/642.*

### Caution

**Mark a machine with a conserved engine by attaching a clearly visible warning tag.**



## **6 Troubleshooting**

---

### 6.1 General notes

---

**The following work must only be carried out by qualified and trained personnel or by the BOMAG sales service.**

**Please observe strictly the safety regulations in chapter 2 of these operating and maintenance instructions.**

Malfunctions are frequently caused by incorrect operation of the machine or insufficient maintenance. Whenever a fault occurs you should therefore thoroughly read these instruction on correct operation and maintenance. If you cannot locate the cause of a fault or rectify it yourself by following the trouble shooting chart, you should contact the service departments at our branch offices or dealers.

On the following pages you will find a selection of fault remedies. It goes without saying that not all possible reasons for faults could be listed.

** Danger**

**Danger of injury!**

**Do not touch rotating parts of the engine.**

## 6.2 Engine problems

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
Engine does not start	Fuel tank empty	Fill fuel tank
	Fuel filter clogged, in winter due to paraffin separation	Change the filter, use winter fuel
Engine does not start	Fuel lines leaking	Check all line connections for leaks and tighten the fittings
	Battery not charged or not connected	Charge the battery, check the pole clamps
	Operating error	see section "Starting the engine"
	Incorrect valve clearance	Adjust the valve clearance
	Inclination switch has switched off	Reduce the inclination
Poor starting of engine or engine works irregularly with poor power	Battery power too low	Have battery checked
	Battery pole clamps loose or oxidized, causing the starter to turn too slow	Clean the pole clamps, tighten and cover them with acid-free grease
	Especially in winter: use of too viscous engine oil	Use an engine oil complying with the ambient temperatures
	Fuel supply too low, fuel system clogged by paraffin separation during winter	Change the fuel filter. Check the line connections for leaks and tighten the fittings. Use winter fuel under cold conditions
	The specified valve clearance is not correct	Adjust the valve clearance
Injection valve or injection pump defective	Have examined by a specialist	
Engine loses power and speed, excessive exhaust smoke	Engine oil level too high	Drain the oil down to the top dipstick mark
	Air filter dirty	clean, if necessary use a new one
	Poor compression due to burned or broken piston rings or incorrect valve clearance	Have piston rings and pistons examined by a specialist, adjust the valve clearance
	Injection valve defective	Have examined by a specialist

## Trouble shooting

Fault	Possible cause	Remedy
Engine over-heating, engine must be shut down immediately!	Cooling fins heavily soiled Injection valve defective Engine oil level too high Injection pump displacement not correctly adjusted Lack of cooling air	Clean the cooling fins Have examined by a specialist Drain the oil down to the top dipstick mark Have corrected by a specialist Remove any clogging from the cooling air duct
Engine has too low oil pressure, engine must be immediately shut down!	Leaks in the lubrication system, oil level too low Engine oil with wrong SAE viscosity class	Check fittings on oil lines and lubrication oil filter for leaks, if necessary tighten all fittings Fill up engine oil up to the mark on the dipstick Change the engine oil
Charge control light lights up during operation	The generator does not charge the battery, because of defect on generator or regular	Have examined by a specialist

### **6.3 Problems with remote control Hetronic with spiral cable**

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
Engine stops without any reason	Engine oil pressure too low or engine oil pressure switch defective (does the oil pressure control lamp light up while the engine is running?)	Check engine oil level or oil pressure switch
	Battery	Check battery terminals for tight fit (intermittent contact?) Check the main battery switch Replace the battery
	Emergency stop push button	Switch operated? Display off, pull button out Switch defective? replace
	Fuses F 54, F 67, F 103 defective	Replace the fuses (may be damaged by vibration)
	Toggle switch cable/radio S101	Check plug connections, bridge switch for testing
	Relay K 11	Replace the relay Check the plug connections in the relay base
	Spiral cables	Check the continuity of the individual cables Check the cables for short circuit to the housing Replace the cables
	All wiring looms	Check all wiring looms for intermittent contact, to do so wobble all cables while the engine is running, especially close to the plug connections Check also the plug connections on the regulator and the ground cable between engine and frame.
	Transmitter	Replace the transmitter

## Trouble shooting

Fault	Possible cause	Remedy
	Inclination sensor	Check the sensor signal, input code 1405 Bridge connections 5 and 6 on the plug for the inclination sensor If necessary replace the sensor
	Regulator	Pull off the four-pin plug above the regulator, if OK, replace the regulator
	A 70 module (BLM)	Replace the module
	Main wiring loom	Replace the main wiring loom
	Engine wiring harness	Replace the engine wiring loom
Ignition on, display module on, but starting not possible	Travel lever not in "0"-position	Actuate the travel lever and return it to "0"-position Check with input code 2500 and 2501
	Fuse F 119	Replace the fuses (may be damaged by vibration)
	Battery	A clicking sound on module A 70 indicates that the battery is empty, if necessary replace the battery
	Inclination sensor	Check the sensor signal, (input code 1405) Bridge connections 5 and 6 on the plug for the inclination sensor If necessary replace the sensor
	Relay K 39	Check the relay control with code 5070 (start repetition lock!) Replace the relay Check the plug connections in the relay base
	Transmitter	Replace the transmitter
	A 70 module (BLM)	Replace the module
	All wiring looms	Check all wiring looms for intermittent contact, to do so wobble all cables, especially close to the plug connections, while the engine is running Check also the plug connections on the regulator and the ground cable between engine and frame.
After starting still no function	Not waited for horn signal before starting	Press the horn button or wait for the horn signal before starting

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
	Emergency stop push button	Switch operated? Display off, pull button out Switch defective? Replace
	Transmitter	Replace the transmitter
	Spiral cables	Check the continuity of the individual cables Check the cables for short circuit to the housing Replace the cables
	A 70 module (BLM)	Replace the module
	Main wiring loom	Replace the main wiring loom
Display module shows CTO when ignition is on	Spiral cables	Check the continuity of the individual cables Check the cables for short circuit to the housing Replace the cables
	Main wiring loom	Check whether plug X3:30 or X3:31 is loose Check for short circuit between X24:6 and 7, or CAN+ und CAN- or 8 and 3 on the display module
	A 70 module (BLM)	Replace the module
Engine not running at max. speed, otherwise OK	Toggle switch for speed S 134	Toggle switch in position "Max" ? Check with input code 2505 If necessary replace the toggle switch
	Fuse F 14	Replace the fuses (may be damaged by vibration)
	Engine solenoid Y 46 (adjustment)	Adjust the engine solenoid if the fuse keeps blowing
	Relay K 114	Check the relay control with code 5050 Replace the relay Check the plug connections in the relay base
	A 70 module (BLM)	Replace the module
	Main wiring loom	Replace the main wiring loom
	Engine wiring harness	Replace the engine wiring loom

### 6.4 Problems with radio remote control Hetronic in radio operation

#### **i** Note

Assumed that the function is correct when using the spiral cable.

Steel ropes or metal attachments on the frame can disturb the radio connection.

Fault	Possible cause	Remedy
Machine does not respond	Incorrect or defective aerial	Replace the aerial (observe the frequency of the aerial) Check the plug connection between aerial and receiver
	The receiver is electrically not or not correctly connected	Check the plug connection between receiver and machine
	Receiver and transmitter have different system numbers	Installation of transmitter and receiver with identical system-no.
	Power pack empty or defective	Charge or replace the power pack
	Distance between machine and transmitter more than 30 m	Move closer to the machine
	Toggle switch radio/cable (S101)	Check the plug connection Bridge switch for testing
	Transmitter or receiver defective	Replace transmitter or receiver
Ignition on, display module on, but starting not possible	Power pack empty or defective	Charge or replace the power pack
	Transmitter or receiver defective	Replace transmitter or receiver
Engine stops without any reason	Power pack empty or defective	Charge or replace the power pack
	Disturbance caused by other radio systems	Check whether the problem arises when other radio signals are transmitted nearby (airport, construction crane, etc.) If necessary continue in cable operation
	Incorrect or defective aerial	Replace the aerial (observe the frequency of the aerial) Check the plug connection between aerial and receiver
	Distance between machine and transmitter more than 30 m	Move closer to the machine
	Toggle switch radio/cable (S101)	Check the plug connection Bridge switch for testing

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
	Emergency stop push button	Switch operated? Display off, pull button out Switch defective? replace
	Transmitter or receiver defective	Replace transmitter or receiver
	Main wiring loom	Replace the main wiring loom

### 6.5 Faults in BOSS safety system

Fault	Possible cause	Remedy
no travel movements, steering is still possible	The operator is inside the safety field	Leave the safety field
	Transponder (in transmitter) has not been taught	see chapter Safety equipment, teaching the BOSS safety system transponder
	Safety antenna front / rear defective or not plugged in	Replace the antenna, check plug connection
	Distance between machine and transmitter more than 30 m	Move closer to the machine
	Safety field control defective or not plugged in	Replace the safety field control or check the plug connection
	Transmitter defective	Replace the transmitter
	Wiring loom for safety field antennas	Replace the wiring loom for safety field antennas

#### **Danger**

#### **Danger of injury!**

**After maintenance and/or repair work on the safety system the safety field length must be checked again, see corresponding chapter.**

## 6.6 Fault indicator

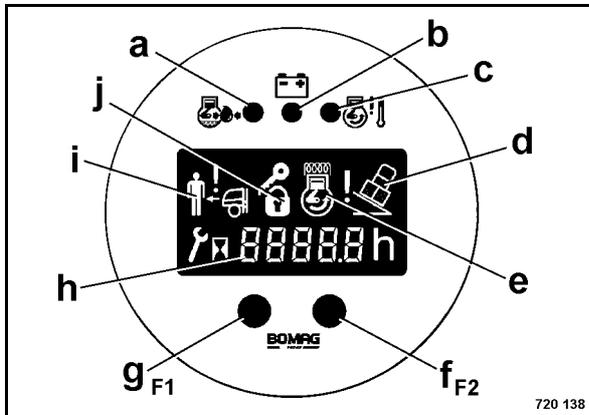


Fig. 142

Faults are displayed in the display module h (Fig. 142) in form of flashing fault codes. If several faults occur at the same time, these will be indicated by flashing codes, one after the other.

### 6.7 Fault code

#### Overview

Fault code	Function group
1000 - 1999	Travel system
2000 - 2499	Steering
2500 - 2999	Remote controls
5000 - 5499	Diesel engine
7000 - 7499	Input codes for machine parameterization
7500 - 7999	Operating hour meter, load spectrum (input codes)
8000 - 8999	Severe software error
9000 - 9998	External IO nodes, joysticks, data collectors (CAN communication and hardware defects )
9999	Unknown fault, displayed value higher than +/- 10000, automatic output by the BMFSA

#### Fault codes of travel functions

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
1030	Output is switched off, function no longer possible	<b>Output valve traveling forward, Y 16</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:22	-
1031	Output is switched off, function no longer possible	<b>Output valve traveling forward, Y 16</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:22	-
1032	Output is switched off, function no longer possible	<b>Output valve traveling forward, Y 16</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:22	1030 1031 1032

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
1033	Engine is shut down	<b>Output valve travelling forward, Y 16</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:22	1030 1031 1032
1040	Output is switched off, function no longer possible	<b>Output valve travelling reverse, Y 17</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:24	-
1041	Output is switched off, function no longer possible	<b>Output valve travelling reverse, Y 17</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:24	-
1042	Output is switched off, function no longer possible	<b>Output valve travelling reverse, Y 17</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:24	1040 1041 1042
1043	Engine is shut down	<b>Output valve travelling reverse, Y 17</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:24	1040 1041 1042
1050	Output is switched off, function no longer possible	<b>Output valve 2. gear, Y 03</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:11	-
1051	Output is switched off, function no longer possible	<b>Output valve 2. gear, Y 03</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:11	-

## Trouble shooting

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
1052	Output is switched off, function no longer possible	<b>Output valve 2. gear, Y 03</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:11	1050 1051 1052
1053	Output is switched off, engine runs only with idle speed	<b>Output valve 2. gear, Y 03</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:11	1050 1051 1052
1060	Output is switched off, function no longer possible	<b>Output brake valve, Y 04</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:40	-
1061	Output is switched off, function no longer possible	<b>Output brake valve, Y 04</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:40	-
1062	Output is switched off, function no longer possible	<b>Output brake valve, Y 04</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:40	1060 1061 1062
1063	Output is switched off, engine runs only with idle speed	<b>Output brake valve, Y 04</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:40	1060 1061 1062
1305	Output is switched off, function no longer possible	<b>Output valve vibration low ampl., Y 56</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:12	-

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
1306	Output is switched off, function no longer possible	<b>Output valve vibration low ampl., Y 56</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:12	-
1307	Output is switched off, function no longer possible	<b>Output valve vibration low ampl., Y 56</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:12	1305 1306 1307
1308	Output is switched off, engine runs only with idle speed 2nd gear is inhibited	<b>Output valve vibration low ampl., Y 56</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:12	1305 1306 1307
1310	Output is switched off, function no longer possible	<b>Output valve vibration high ampl., Y 57</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:13	-
1311	Output is switched off, function no longer possible	<b>Output valve vibration high ampl., Y 57</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:13	-
1312	Output is switched off, function no longer possible	<b>Output valve vibration high ampl., Y 57</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:13	1310 1311 1312
1313	Output is switched off, engine runs only with idle speed 2nd gear is inhibited	<b>Output valve vibration high ampl., Y 57</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:13	1310 1311 1312

## Trouble shooting

### Fault codes steering

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
2010	Output is switched off, function no longer possible	<b>Output valve steering right, Y 237</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:19	1010
2011	Output is switched off, function no longer possible	<b>Output valve steering right, Y 237</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:19	-
2012	Output is switched off, function no longer possible	<b>Output valve steering right, Y 237</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:19	1010 1011 1012
2013	Engine is shut down	<b>Output valve steering right, Y 237</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:19	1010 1011 1012
2020	Output is switched off, function no longer possible	<b>Output valve steering left, Y 238</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:21	-
2021	Output is switched off, function no longer possible	<b>Output valve steering left, Y 238</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:21	-
2022	Output is switched off, function no longer possible	<b>Output valve steering left, Y 238</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:21	1020 1021 1022

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
2023	Engine is shut down	<b>Output valve steering left, Y 238</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:21	1020 1021 1022

### Fault codes of remote control

Code	Fault reaction	Description of fault	Possible cause
2500	Engine is stopped, all functions are locked, horn sounds	<b>Operation of two remote control system at the same time</b>	A remote control with cable and a wireless remote control are operated at the same time.
2600	Engine stopped, emergency stop relay in the control is switched off, all outputs on control are switched off	<b>Remote control emergency stop</b>	Emergency stop on remote control operated
2601	Engine stopped, emergency stop relay in the control is switched off, all outputs on control are switched off	<b>Fault in data transfer between remote control sender and receiver</b>	Battery empty Radio signal transmission is disturbed Distance between sender and machine too big
2605*	Engine stopped, emergency stop relay in the control is switched off, all outputs on control are switched off	<b>Receive signal too weak</b>	Radio signal transmission is disturbed Distance between sender and machine too big
2611	Engine is shut down.	<b>CANopen – fault in bus communication</b>	
2612	Engine is shut down.	<b>CANopen – fault in bus communication</b>	
2613	Engine is shut down	<b>CANopen – fault in bus communication</b>	

\* Output of error code 2605 only with software version older than 1.11!

## Trouble shooting

### General fault codes diesel engine, machine

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5015	Only warning, horn sounds, display module is dark,	<b>Potential 15 missing</b> Control has switched relay K11, no voltage	Fuse F 103 defective Relay K11 defective Cable breakage in wiring loom	X3:20	not possible
5016	Output is switched off, function no longer possible	<b>Battery voltage too low</b> Battery voltage already below 11 Volt when switching on	Battery acid level too low Battery defective Battery discharged		0561
5020	Only warning, horn sounds	<b>Input engine oil pressure, B 06</b> Oil pressure switch delivers the signal "no engine oil pressure"	The oil pressure switch has measured a too low oil pressure. The engine may be shut down. Should this message be displayed even though the engine is not running, the following faults should be examined: Current path has short circuit to ground Engine oil level not correct Engine oil pump defective Pressure relief valve after engine oil filter soiled Oil pressure switch defective	X3:03	5020
5021	Engine shut down by too low oil pressure	<b>Input engine oil pressure, B 06</b> Fault 5 0 2 0 present longer than 8 seconds Engine is shut down	see fault code 5 0 2 0	X3:03	5020

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5025	Engine running	<b>No rotary speed signal from the generator regulator</b> Only warning	Generator regulator defective Line between regulator and control interrupted	X3:41	-
5031	Machine standing	<b>Engine stops, engine stalled</b>	Lack of fuel Engine stopped even though the BLM control did not submit a corresponding command		
5040	Output is switched off, engine stops	<b>Output HW-shutdown solenoid, Y 13</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:10	-
5041	Output is switched off, engine stops	<b>Output HW-shutdown solenoid, Y 13</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Valve defective	X3:10	-
5042	Output is switched off, engine stops	<b>Output HW-shutdown solenoid, Y 13</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:10	5040 5041 5042
5043	Output is switched off, engine stops	<b>Output HW-shutdown solenoid, Y 13</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:10	5040 5041 5042

## Trouble shooting

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5050	Output is switched off, engine runs only with idle speed	<b>Output relay K 114, engine speed solenoid</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:09	-
5051	Output is switched off, engine runs only with idle speed	<b>Output relay K 114, engine speed solenoid</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through	X3:09	-
5052	Output is switched off, engine runs only with idle speed	<b>Output HW-shut-down solenoid, Y 13</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:09	5050 5051 5052
5053	Output is switched off, engine runs only with idle speed	<b>Output relay K 114, engine speed solenoid</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:09	5050 5051 5052
5054		<b>Input AUX – signal engine solenoid Y 13</b>	Wire breakage in current path	X3:04	-
5060	Output switched off, no potential 15 on machine, control is working, engine is stopped or cannot be started	<b>Output relay K 11, changeover of potential 15</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:07	-

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5061	Output switched off, no potential 15 on machine, control is working, engine is stopped or cannot be started	<b>Output relay K 11, changeover of potential 15</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through	X3:07	-
5062	Output switched off, no potential 15 on machine, control is working, engine is stopped or cannot be started	<b>Output relay K 11, changeover of potential 15</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:07	5060 5061 5062
5063	Output switched off, no potential 15 on machine, control is working, engine is stopped or cannot be started	<b>Output relay K 11, changeover of potential 15</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:07	5060 5061 5062
5070	Output switched off, engine cannot be started	<b>Output relay K 39, starter</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:06	-
5071	Output switched off, engine cannot be started	<b>Output relay K 39, starter</b> Short-circuit current flow out of this output Output was switched off!	Wire breakage in current path Current path connected to +12V Lines rubbed through	X3:06	-
5072	Output switched off, engine cannot be started	<b>Output relay K 39, starter</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:06	5070 5071 5072
5073	All outputs switched off, engine stopped, safety relay switched off	<b>Output relay K 39, starter</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:06	5070 5071 5072

## Trouble shooting

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5080 5085	Output switched off, horn cannot sound	<b>Output horn, H 07</b> Too high current flow out of this output Output was switched off!	Excessive current flow in current path, probably because of a defective coil or a short circuit to ground	X3:08 X3:36	-
5081 5086	Output switched off, horn cannot sound	<b>Output horn, H 07</b> Short-circuit current flow out of this output Output was switched off!	Short circuit to ground in the current path Lines rubbed through Horn defective	X3:08 X3:36	-
5082 5087	Output switched off, horn cannot sound	<b>Output horn, H 07</b> No or too low current flow out of this output	Wire breakage in current path Current path connected to +12V	X3:08 X3:36	5080 5081 5082
5083 5088	Horn may sound continuously	<b>Output horn, H 07</b> Although the output is switched off, voltage is present	Current path connected to +12V	X3:08 X3:36	5080 5081 5082
5090	Machine does not start	<b>Input inclination switch B56</b> The machine cannot be started, because the input does not receive a signal from the inclination switch	Wire breakage in current path Switch defective The switch is in actuated state (incorrect installation position)	X3:23	1405
5091	Shut down of diesel engine	<b>Input inclination switch B56</b> The diesel engine is shut down because the input on the control does not receive a signal from the inclination sensor	Wire breakage in current path Switch defective The switch is in actuated state (machine has turned over) The machine must first be shut down after it has been placed in correct position.	X3:23	1405

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
5092	Shut down of diesel engine	<b>Input inclination switch B56</b> The diesel engine is shut down because the input on the control does not receive a signal from the inclination sensor + Start lock activated	The switch is in actuated state (machine has turned over) + Start lock activated Wire breakage in current path Switch defective	X3:23	1405
5100	Warning horn sounds, <b>only warning!</b>	<b>Input coolant temperature sensor, B53</b> Coolant temperature too high	Lack of coolant Radiator defective Sensor defective	X3:05	5100
5101	Vibration and 2. gear switched off	<b>Input coolant temperature sensor, B53</b> Coolant temperature too high over a longer period of time	Lack of coolant Radiator defective Sensor defective	X3:05	5100

### Fault in BOSS safety system

Code	Fault reaction	Description of fault	Possible cause
6001	Machine travels for 15min. without activated BOSS safety system. Attention: Only for servicing purposes!	Warning that service mode is active	Service mode activated via input code
6010	Travel movement not possible, only steering	Fault of front safety field antenna (W12)	Wire breakage in current path, front safety field antenna defective
6011	Travel movement not possible, only steering	Fault of rear safety field antenna (W13)	Wire breakage in current path, rear safety field antenna defective
6012	Travel movement not possible, only steering	Transponder fault (no feedback)	Fault in radio link of safety system, transponder of remote control defective
6013	Travel movement not possible, only steering	Transponder fault	Internal fault in transponder of remote control
6014	Travel movement not possible, only steering	Fault in safety field control (A115)	Internal fault in safety field control

## Trouble shooting

Code	Fault reaction	Description of fault	Possible cause
6015	Travel movement not possible, only steering	Fault in bus communication between safety field control and transponder	Wire breakage in current path
6016		Reception quality safety field control	

## Faults in parameterization

Code	Fault reaction	Description of fault	Possible cause	Terminal on BLM	Input code for diagnose
7010	Machine cannot be started, module is not completely initialized	No machine type set	Module is new, parameters were deleted		0725

## 6.8 Input codes for BLM control

### Outputs for travel functions

Input code	Description of display function	Display values
1010	<b>Output valve steering right, Y 237</b> Voltage at output	Display value = output voltage in Volt
1011	<b>Output valve steering right, Y 237</b> Current at output	Display value = output current in Amperè
1012	<b>Output valve steering right, Y 237</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
1015	<b>Valve control, steering</b>	0100 = steering to the left 0010 = Valve not triggered 0011 = steering to the right
1020	<b>Output valve steering left, Y 238</b> Voltage at output	Display value = output voltage in Volt
1021	<b>Output valve steering left, Y 238</b> Current at output	Display value = output current in Amperè
1022	<b>Output valve steering left, Y 238</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
1030	<b>Output valve travelling forward, Y 16</b> Voltage at output	Display value = output voltage in Volt
1031	<b>Output valve travelling forward, Y 16</b> Current at output	Display value = output current in Amperè
1032	<b>Output valve travelling forward, Y 16</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
1035	<b>Valve control, travel system</b>	0100 = Driving forward 0010 = Drum stopped 0011 = Driving reverse
1040	<b>Output valve travelling reverse, Y 17</b> Voltage at output	Display value = output voltage in Volt
1041	<b>Output valve travelling reverse, Y 17</b> Current at output	Display value = output current in Amperè
1042	<b>Output valve travelling reverse, Y 17</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered

## Trouble shooting

Input code	Description of display function	Display values
1050	<b>Output valve 2. gear, Y 03</b> Voltage at output	Display value = output voltage in Volt
1051	<b>Output valve 2. gear, Y 03</b> Current at output	Display value = output current in Amperè
1052	<b>Output valve 2. gear, Y 03</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
1060	<b>Output brake valve, Y 04</b> Voltage at output	Display value = output voltage in Volt
1061	<b>Output brake valve, Y 04</b> Current at output	Display value = output current in Amperè
1062	<b>Output brake valve, Y 04</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered

## Outputs for work functions

Input code	Description of display function	Display values
1305	<b>Output valve vibration low amplitude, Y 56</b> Voltage at output	Display value = output voltage in Volt
1306	<b>Output valve vibration low amplitude, Y 56</b> Current at output	Display value = output current in Amperè
1307	<b>Output valve vibration low amplitude, Y 56</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
1310	<b>Output valve vibration high amplitude, Y 57</b> Voltage at output	Display value = output voltage in Volt
1311	<b>Output valve vibration high amplitude, Y 57</b> Current at output	Display value = output current in Amperè
1312	<b>Output valve vibration high amplitude, Y 57</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered

### Inputs logic and power module

Input code	Description of display function	Display values
1400	<b>Input signal L from generator regulator</b>	12 V > Generator stopped Ground, 0 V > Generator running
1401	<b>Input oil pressure switch, B 06</b>	12 V > No oil pressure Ground, 0 V > Oil pressure
1402	<b>Input limit switch engine speed solenoid, Aux</b>	12 V > Solenoid retracted 0V Ground > Solenoid not in end position
1405	<b>Input inclination sensor, B 56</b>	12 V > Inclination less than 45° 0V Ground > Inclination higher than 45°
1409	<b>Activation input, cable remote control, S 101</b>	12 V > Operating mode cable remote control
1410	<b>Activation input, radio remote control, S 101</b>	12 V > Operating mode wireless

### Diesel engine, machine electrics

Input code	Description of display function	Display values
5010	<b>Engine speed</b>	Display value = 1/min
5020	<b>Engine oil pressure, B 06</b> Shows status of input engine oil pressure	0000 = No engine oil pressure 0001 = Engine oil pressure OK
5030	<b>Inclination sensor, B 56</b> Shows the switching state of the inclination switch	0000 = No signal, machine inclined more than 45°, or switch defective 0001 = OK, inclination of machine less than 45°
5040	<b>Output bia winding of shut-down solenoid, Y 13</b> Voltage at output	Display value = output voltage in Volt
5041	<b>Output bia winding of shut-down solenoid, Y 13</b> Current at output	Display value = output current in Amperè
5042	<b>Output bia winding of shut-down solenoid, Y 13</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5050	<b>Output relay K 114, engine speed solenoid</b> Voltage at output	Display value = output voltage in Volt

## Trouble shooting

Input code	Description of display function	Display values
5051	<b>Output relay K 114, engine speed solenoid</b> Current at output	Display value = output current in Amperè
5052	<b>Output relay K 114, engine speed solenoid</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5055	<b>Enable parameter change ECO-mode</b>	
5056	<b>Confirm parameter change ECO-mode</b>	<b>Subsequently switch off the ignition!</b>
5057	<b>ECO-mode off</b>	<b>Enter code number 5055 first!</b>
5058	<b>ECO-mode on</b>	<b>Enter code number 5055 first!</b>
5059	<b>Display of ECO-mode setting</b>	0 = ECO-mode off 1 = ECO-mode on
5060	<b>Output relay K 11, potential changeover</b> Voltage at output	Display value = output voltage in Volt
5061	<b>Output relay K 11, potential changeover</b> Current at output	Display value = output current in Amperè
5062	<b>Output relay K 11, potential changeover</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5070	<b>Output relay K 39, starter</b> Voltage at output	Display value = output voltage in Volt
5071	<b>Output relay K 39, starter</b> Current at output	Display value = output current in Amperè
5072	<b>Output relay K 39, starter</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5080	<b>Output horn, H 07</b> Voltage at output	Display value = output voltage in Volt
5081	<b>Output horn, H 07</b> Current at output	Display value = output current in Amperè
5082	<b>Output horn, H 07</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5085	<b>Output 2 horn, H 07</b> Voltage at output	Display value = output voltage in Volt
5086	<b>Output 2 horn, H 07</b> Current at output	Display value = output current in Amperè

Input code	Description of display function	Display values
5087	<b>Output 2 horn, H 07</b> Logic level of control	0000 = Output not triggered 0001 = Output triggered
5100	<b>Coolant temperature sensor, B 53</b>	0000 = Temperature too high, excessive temperature 0001 = Temperature OK

### Checking the function of the remote controls

Input code	Description of display function	Display values
2500	<b>Actuation of travel lever on remote control, S 138</b>	0100 = Travel lever shifted forward 0010 = Travel lever not moved 0001 = Travel lever shifted backward
2501	<b>Actuation of steering joystick on remote control, S 137</b>	0100 = Joystick actuated to the left 0010 = Joystick not moved 0001 = Joystick actuated to the right
2502	<b>Position of switch for vibration, S 36</b>	0100 = Switch operated to forward, vibration high amplitude 0010 = Switch not operated 0001 = Switch operated to reversed, vibration low amplitude
2503	<b>Position of switch for type of vibration, S 132</b>	0100 = Switch operated to forward, automatic operation 0010 = Switch not operated, manual operation
2504	<b>Position of switch for fast speed, S 133</b>	0100 = Switch operated to forward, fast speed selected 0010 = Switch not operated, fast speed disabled
2505	<b>Position of switch for engine speed, S 134</b>	0100 = Switch operated to forward, high engine speed 0010 = Switch not operated, idle speed
2506	<b>Position of button for horn, S 03</b>	0000 = Button not operated 0001 = Button operated

#### **i** Note

With the input codes listed above it is possible to check the transfer of the individual switching sig-

nals from the remote controls to the central control unit.

For this purpose start the machine and subsequently press the horn button to bring the remote

## Trouble shooting

control sender in operating mode for this function test.

For testing the spiral cable switch the operating mode switch to cable operation, connect the spiral cable to the sender and start the machine.

If the engine starts, the spiral cable is OK.

## System information

Input code	Description of display function	Display values
0555	<b>Software Version</b> Shows the software version number.	3-digit version number
0561	<b>Supply voltage</b> Shows the voltage value	Display value = voltage in V

## Setting the remote control type

Input code	Description of display function	Display values
0660	<b>Switches on function "Set remote control type"</b>	See adjustment instructions
0661	<b>confirms the entered remote control type</b>	See adjustment instructions
0662	<b>Preselect radio remote control, default setting</b>	See adjustment instructions

## Fault log

Input code	Description of display function	Display values
0700	<b>Switch on function „Show stored faults“</b>	See adjustment instructions
0701	<b>Switch off function "Show stored faults"</b>	See adjustment instructions
0710	<b>Delete all stored faults</b>	See adjustment instructions

## BOSS safety system

Input code	Description of display function	Display values
6000	<b>Enable service mode</b>	6000
6001	<b>Service mode active, machine travels for 15min. without activated BOSS safety system. Attention: Only for servicing purposes!</b>	6001 = service mode active
6002	<b>Service mode inactive</b>	

### Reading out the operating hour meter

<b>Input code</b>	<b>Description of display function</b>	<b>Display values</b>
7500	<b>Display of hours, operating hour meter</b>	The full hours are displayed
7501	<b>Display of minutes, operating hour meter</b>	The minute digits of the operating hour meter are displayed

### Setting the machine type

<b>Input code</b>	<b>Description of display function</b>	<b>Display values</b>
7010	<b>Switches on function "Set machine type"</b>	See adjustment instructions
7011	<b>Confirms entered machine type</b>	See adjustment instructions
7103	<b>Preselect machine type BMP 8500 with protection bow</b>	See adjustment instructions
7104	<b>Preselect machine type BMP 8500 without protection bow</b>	See adjustment instructions



## We will help you - immediately!

Operating, maintenance, repair instructions and spare parts catalogues



### - in situ:

- Safe and simple trouble shooting
- Secure access to required spare parts
- Easy to understand – from experts for users

Contact us or your BOMAG distributor!

Head Office/Hauptsitz  
BOMAG  
Hellerwald  
D-56154 Boppard  
Germany  
Telefon: +49 6742 100-0  
Fax: +49 6742 3090  
E-Mail: [info@bomag.com](mailto:info@bomag.com)



BOMAG  
Niederlassung Berlin  
Gewerbestraße 3  
15366 Hoppegarten  
GERMANY  
Tel.: +49 3342 369410  
Fax: +49 3342 369436  
e-mail: [nlberlin@bomag.com.de](mailto:nlberlin@bomag.com.de)

BOMAG  
Niederlassung Boppard  
Hellerwald  
56154 Boppard  
GERMANY  
Tel.: +49 6742 100360  
Fax: +49 6742 100392  
e-mail: [nlboppard@bomag.com](mailto:nlboppard@bomag.com)

BOMAG  
Niederlassung Chemnitz  
Querstraße 6  
09247 Chemnitz  
GERMANY  
Tel.: +49 3722 51590  
Fax: +49 3722 515951  
e-mail: [nlchemnitz@bomag.com](mailto:nlchemnitz@bomag.com)

BOMAG  
Niederlassung Hannover  
Dieselstraße 44  
30827 Garbsen-Berenbostel  
GERMANY  
Tel.: +49 5131 70060  
e-mail: [nlhannover@bomag.de](mailto:nlhannover@bomag.de)

BOMAG  
Niederlassung München  
Otto-Hahn-Ring 3  
85301 Schweitenkirchen  
GERMANY  
Tel.: +49 8444 91840  
e-mail: [nlmuenchen@bomag.de](mailto:nlmuenchen@bomag.de)

BOMAG  
Niederlassung Stuttgart  
Uferstraße 22  
73630 Remshalden-Grünbach  
GERMANY  
Tel.: +49 7151 986293  
e-mail: [nlstuttgart@bomag.de](mailto:nlstuttgart@bomag.de)

BOMAG (China) Construction  
Machinery Co., Ltd  
No. 2808, west Huancheng Road,  
Shanghai Comprehensive Industrial  
Zone Fengxian Shanghai 201401  
CHINA  
Tel.: +86 21 3365 5566  
Fax: +86 21 3365 5508  
e-mail: [china@bomag.com](mailto:china@bomag.com)

BOMAG France S.A.S.  
2, avenue du Général de Gaulle  
91170 VIRY-CHATILLON  
FRANCE  
Tel.: +33 1 69578600  
Fax: +33 1 69962660  
e-mail: [france@bomag.com](mailto:france@bomag.com)

BOMAG (GREAT BRITAIN), LTD  
Sheldon Way, Larkfield  
Aylesford  
Kent ME20 6SE  
GREAT BRITAIN  
Tel.: +44 1622 716611  
Fax: +44 1622 710233  
e-mail: [gb@bomag.com](mailto:gb@bomag.com)

BOMAG Italia Srl.  
Z.I. Via Mella, 6  
25015 Desenzano del Garda (BS)  
ITALY  
Tel.: +39 030 9127263  
Fax: +39 030 9127278  
e-mail: [italy@bomag.com](mailto:italy@bomag.com)

BOMAG (CANADA), INC.  
3455 Semenyk Court  
Mississauga, Ontario  
CANADA  
Tel.: +1 905 361 9961  
Fax: +1 905 361 9962  
e-mail: [canada@bomag.com](mailto:canada@bomag.com)

BOMAG Maschinenhandelsgesellschaft  
m.b.H.  
Porschestraße 9  
1230 Wien  
Tel.: +43 1 69040-0  
Fax: [austria@bomag.com](mailto:austria@bomag.com)  
e-mail: [austria@bomag.com](mailto:austria@bomag.com)

FAYAT BOMAG Polska Sp. z o.o.  
Ul. Szyszkowa 52  
02-285 Warszawa  
POLAND  
Tel.: +48 22 4820400  
Fax: +48 22 4820401  
e-mail: [poland@bomag.com](mailto:poland@bomag.com)

FAYAT BOMAG Rus OOO  
Klyazma block, h 1-g  
141400 Khimki, Moscow region, RF  
RUSSIA  
Tel.: +7 (495) 2879290  
Fax: +7 (495) 2879291  
e-mail: [russia@bomag.com](mailto:russia@bomag.com)

BOMAG GmbH, Singapore  
300, Beach Road  
The Concourse, , 18-06  
Singapore 199555  
SINGAPORE  
Tel.: +65 294 1277  
Fax: +65 294 1377  
e-mail: [singapore@bomag.com](mailto:singapore@bomag.com)

BOMA Equipment Hong Kong LTD  
Room 1003, 10/F Charm Centre  
700, Castle Peak Road  
Kowloon,  
HONG KONG  
Tel.: +852 2721 6363  
Fax: +852 2721 3212  
e-mail: [bomahk@bomag.com](mailto:bomahk@bomag.com)

BOMAG Americas, Inc.  
2000 Kentville Road  
Kewanee, Illinois 61443  
U.S.A.  
Tel.: +1 309 8533571  
Fax: +1 309 8520350  
e-mail: [usa@bomag.com](mailto:usa@bomag.com)

Printed in Germany