

EMF Meter

Model EMF510



Introduction

Thank you for selecting the Extech EMF510 EMF Meter. This instrument measures electromagnetic field radiation levels near power lines, appliances and industrial devices. Electromagnetic radiation is a ubiquitous type of energy that takes many forms such as radio waves, microwaves, X-rays, and gamma rays. The EMF510 measures radiation from voltage, current, electrical, and magnetic fields.

This device is shipped fully tested and calibrated and, with proper use, will provide years of reliable service. Please visit our website (www.extech.com) to check for the latest version and translations of this User Manual, Product Updates, Product Registration, and Customer Support.

Features

- Backlit LCD
- Compact, light-weight, easy-to-use, ergonomic design
- Wristlet for easy, one-handed operation

Safety

Please read the entire User Manual and Quick Start before operating this device. Use the meter only as specified and do not attempt to service or open the meter housing. Do not allow children to handle the meter. Please dispose of batteries and meter responsibly and in accordance with all applicable laws and regulations.




WARNINGS

- Use caution when working in the vicinity of powerful radiation sources.
- Persons with electronic implants (e.g. cardiac pacemakers) should avoid powerful radiation sources.
- Observe all relevant safety regulations.
- Carefully read the operating instructions for equipment generating or conducting electromagnetic energy that will be measured.
- Do not operate near combustible gases or in damp environments.
- Be aware that the field strength in the near vicinity of radiators increases proportionally to the inverse cube of the distance. This means that enormous field strengths can result in the immediate vicinity of small radiation sources (e.g. leaks in waveguides or inductive ovens).
- Field-strength measurement devices can underrate pulsed signals, particularly with radar signals, in which case significant measurement errors can result.
- All field-strength measuring devices have a limited specified frequency range. Fields with spectral components outside of this frequency range are generally incorrectly evaluated and tend to be underrated. Before using field-strength measuring devices be certain that all field components to be measured lie in the specified frequency range of the measuring device.


Meter Description

1. LCD Display
2. ON/OFF button
3. Up arrow/Backlight button
4. Range button
5. Unit button
6. Down arrow/SET button
7. MAX/MIN Record button
8. Display Hold Button
9. EMF Sensor

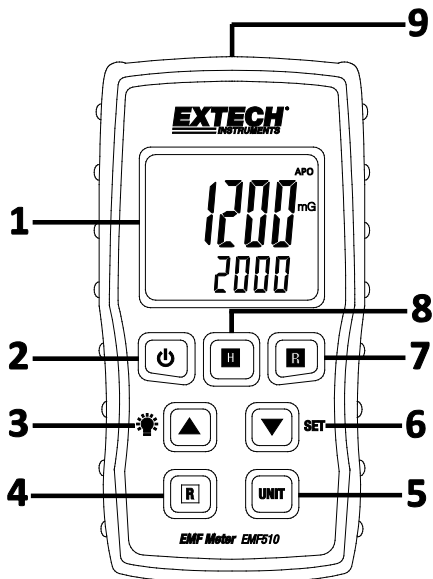

LCD Description

1. MAX/MIN Record Icon
2. MAX Display
3. MIN Display
4. Display Hold
5. Low Battery Indicator
6. Auto Power OFF
7. Unit of Measure and EMF Reading
8. Selected EMF Range

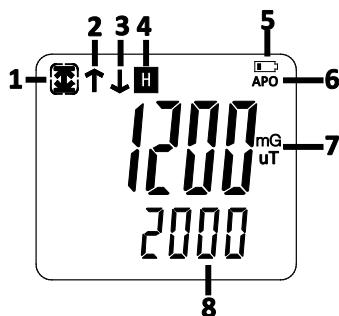

Operation

Taking a Measurement

The EMF510 is a single axis meter. To get an indication of all three axes you must take one reading for each plane.

1. Short press the  power button. If the LCD does not switch on, check the batteries located in the rear battery compartment.
2. Press the **UNIT** button to select the desired unit of measure.
3. Press the **R** (range) button to select the desired range.
4. Position the sensor (top of the meter) at different angles toward the source and observe the EMF signals.
5. Record the highest reading obtained from the various positions tested.
6. To power OFF the meter, short press the  button.

Power

Short press the power button to power the meter ON or OFF.

Backlight

The LCD is equipped with backlighting for easier viewing, especially in dimly lit areas. Press the  backlight button to turn the backlight on. The backlight will automatically turn off after several seconds.

Range Button

Short press the **R** (range) button located on the bottom left of the meter (next to the unit button) to toggle between the two available ranges. The lower display will show the selected range.

Unit Button

Short press the **UNIT** button to toggle between micro Tesla and milli Gauss.

Hold Button

Short press the hold (**H**) button to freeze/unfreeze a reading on the display. Hold is not operational while in record mode.

Auto Power OFF (APO)

In order to conserve battery life, the meter will automatically shut off after approximately 10 minutes of inactivity.

To set APO ON or OFF as the default condition:

1. Long press the **SET** button. The lower display will show 'PoFF'.
2. Short press the  or  button to enable APO (YES) or disable APO (NO) as shown in the upper display.
3. Short press the **R** (record) button to save the selection.
4. The meter will return to normal operating mode after approximately 10 seconds.

Note: APO is not operational in record mode.

MAX/MIN Record Function

In this mode, the meter records the maximum and minimum values over time.

1. Press the **R** (record) button to start recording. The  record icon will appear on the display.
2. Press the **R** (record) button again to display the maximum value recorded. The  icon will appear on the display.
3. Press the **R** (record) button again to display the minimum value recorded. The  icon will appear on the display.
4. Press the **H** (hold) button to clear the recorded data. The previous data will be erased and the meter will start recording new data.
5. Long press the **R** (record) button to exit the record mode.

Maintenance

Battery Replacement

1. Power OFF the meter.
2. Remove the flat head screw that secures the battery compartment at the back of the meter.
3. Open the battery compartment and replace the 3 'AAA' 1.5V batteries observing correct polarity. Re-assemble the meter before use

Safety: Please dispose of batteries responsibly; never dispose of batteries in a fire, batteries may explode or leak. If the meter is not to be used for 60 days or more, remove the battery and store separately.

Cleaning and Storage

Periodically wipe the case with a damp cloth and mild detergent; do not use abrasives or solvents.

Specifications

General			
Display		Backlit LCD 1.38 x 1.18" (35 x 30mm)	
Band width		30 to 300 Hz	
Axis		Single Axis	
Measurements		Electromagnetic field tester (EMF)	
Tripod mount		On back of meter	
Operating Humidity		80% RH Max	
Operating Temperature		32 to 122°F (0 to 50°C)	
Over Limit Display		"- - - -"	
Power Supply		3 x 1.5V AAA batteries	
Power Consumption		Approximately 5mA DC	
Weight		3.5oz (100g)	
Dimensions (HxWxD)		4.2 x 2.3 x 1.0" (107x 58x 25mm)	
EMF			
Units	Range	Resolution	Accuracy
uT	0.00 to 20.00	0.01	±(5%rdg + 3dgt) @50 or 60Hz
	20.0 to 200.0	0.1	
mG	0.0 to 200.0	0.1	
	200 to 2000	1	

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. We offer NIST traceable calibration for most of our products. Contact our Customer Service Department for information on calibration service availability. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 239-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2017 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous offrons l'étalonnage traçable NIST pour la plupart de nos produits. Contactez notre service clientèle pour obtenir des informations sur la disponibilité des services d'étalonnage. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 239-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2017 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio al Cliente para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Ofrecemos calibración rastreable a NIST para la mayoría de nuestros productos, para información sobre la disponibilidad del servicio de calibración por favor llame a nuestro Departamento de Servicio al Cliente.

Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 239-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2017 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com