

MT Series

Installation manual

Retain for future use

Variable speed drives
for AC motors

**0.5 HP (0.37 KW)...60 HP (45 KW) / 200 - 240V
1 HP (0.75 KW)...100 HP (75 KW) / 380 - 480V**



Table of Contents

Before you begin	4
Steps for setting up the drive	5
Preliminary recommendations	6
Drive ratings	7
Dimensions and weights	9
Mounting and temperature conditions	10
Mounting in a wall-mounted or floor-standing enclosure	12
Installing the graphic display terminal	14
Position of the charging LED	15
Installing option cards	16
Installing the EMC plates	18
Wiring recommendations	19
Power terminals	21
Control terminals	23
Option terminals	25
Connection diagrams	30
Operation on an IT (Isolated or impedance grounded neutral) system	39
Electromagnetic compatibility, wiring	40

MT Series Before you begin

Read and understand these instructions before you begin any procedure with this drive.



DANGER

HAZARDOUS VOLTAGE

- Read and understand this manual before installing or operating the MT Series drive. Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- The user is responsible for compliance with all international and national electrical standards in force concerning protective grounding of all equipment.
- Many parts in this variable speed drive, including printed wiring boards, operate at line voltage. **DO NOT TOUCH.**
Use only electrically insulated tools.
- **DO NOT** touch unshielded components or terminal strip screw connections with voltage present.
- **DO NOT** short across terminals PA and PC or across the DC bus capacitors
- Install and close all covers before applying power or starting and stopping the drive.
- Before servicing the variable speed drive
 - Disconnect all power
 - Place a "DO NOT TURN ON" label on the variable speed drive disconnect
 - Lock the disconnect in the open position
- Disconnect all power including external control power that may be present before servicing the drive. **WAIT 15 MINUTES** for the DC bus capacitors to discharge. Then follow the DC bus voltage measurement procedure on page [15](#) to verify that the DC voltage is less than 45 Vdc. The drive LEDs are not accurate indicators of the absence of DC bus voltage.

Electric shock will result in death or serious injury.

CAUTION

IMPROPER DRIVE OPERATION

- If the drive is not switched on for a long period, the performance of its electrolytic capacitors will be reduced.
- If it is stopped for a prolonged period, turn the drive on every two years for at least 5 hours to restore the performance of the capacitors, then check its operation. It is recommended that the drive is not connected directly to the line voltage. The voltage should be increased gradually using an adjustable AC source.

Failure to follow these instructions can result in equipment damage.

Steps for setting up the drive

INSTALLATION

■ 1 Take delivery of the drive

- Check that the catalog number printed on the label is the same as that on the purchase order
- Remove the MT from its packaging and check that it has not been damaged in transit

■ 2 Check the line voltage

- Check that the line voltage is compatible with the voltage range of the drive (see pages 7 and 8)

■ 3 Mount the drive

- Mount the drive in accordance with the instructions in this document
- Install any internal and external options

■ 4 Wire the drive

- Connect the motor, ensuring that its connections correspond to the voltage
- Connect the line supply, after making sure that it is turned off
- Connect the control
- Connect the speed reference

Steps 1 to 4 must be performed with the power off



PROGRAMMING

- 1 Please refer to the programming manual


Preliminary recommendations

Handling and storage

To protect the drive prior to installation, handle and store the device in its packaging. Ensure that the ambient conditions are acceptable.

CAUTION
DAMAGED EQUIPMENT Do not operate or install any drive that appears damaged. Failure to follow this instruction can result in equipment damage.

Handling on installation

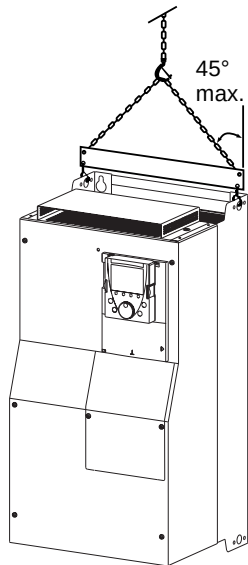

MT Series drives up to ratings MT220 and MT425 can be removed from their packaging and installed without a handling device.

A hoist must be used with higher ratings; for this reason they are fitted with handling "lugs". The precautions described below must be observed.

Precautions

Read and understand the instructions in the "programming manual".

CAUTION
INCOMPATIBLE LINE VOLTAGE Before powering up and configuring the drive, ensure that the line voltage is compatible with the supply voltage range shown on the drive nameplate. The drive may be damaged if the line voltage is not compatible. Failure to follow this instruction can result in equipment damage.

 DANGER
UNINTENDED EQUIPMENT OPERATION • Before switching on and configuring the MT Series, check that the PWR (POWER REMOVAL) input is deactivated (programmed to 0) in order to prevent unexpected starts. • Before switching on or on exiting the configuration menus, check that the inputs assigned to the run command are deactivated (programmed to 0) since they can cause the motor to start immediately. Failure to follow these instructions will result in death or serious injury.



If the safety of personnel requires the prohibition of unwanted or unexpected starts, electronic locking is performed by the MT Series Power Removal function.

This function requires the use of connection diagrams conforming to category 3 of standard EN 954-1 and safety integrity level 2 according to IEC/EN 61508.

The Power Removal function takes priority over any run command.

Drive ratings

Single phase supply voltage: 200...240 V 50/60 Hz

3-phase motor 200...240 V

Motor		Line supply (input)					Drive (output)			MT Series
Power indicated on name plate (1)		Max. line current (2)		Max. prospective line Isc	Apparent power	Max. inrush current (3)	Nominal current In (1)	Max. transient current for (1)		Reference
		at 200 V	at 240 V					60 s	2 s	
kW	HP	A	A	kA	kVA	A	A	A	A	
0.37	0.5	6.9	5.8	5	1.4	9.6	3	4.5	4.9	MT201
0.75	1	12	9.9	5	2.4	9.6	4.8	7.2	7.9	MT202
1.5	2	18.2	15.7	5	3.7	9.6	8	12	13.2	MT203
3	-	25.9	22	5	5.3	9.6	13.7	20.6	22.6	MT205 (5)
4	5	34.9	29.9	22	7	9.6	17.5	26.3	28.8	MT207 (5)
5.5	7.5	47.3	40.1	22	9.5	23.4	27.5	41.3	45.3	MT210 (5)

3-phase supply voltage: 200...240 V 50/60 Hz

3-phase motor 200...240 V

Motor		Line supply (input)					Drive (output)			MT Series
Power indicated on plate (1)		Max. line current (2)		Max. prospective line Isc	Apparent power	Max. inrush current (3)	Nominal current In (1)	Max. transient current for (1)		Reference
		at 200 V	at 240 V					60 s	2 s	
kW	HP	A	A	kA	kVA	A	A	A	A	
0.37	0.5	3.5	3.1	5	1.3	9.6	3	4.5	4.9	MT2P5
0.75	1	6.1	5.3	5	2.2	9.6	4.8	7.2	7.9	MT201
1.5	2	11.3	9.6	5	4	9.6	8	12	13.2	MT202
2.2	3	15	12.8	5	5.3	9.6	11	16.5	18.1	MT203
4	5	25.8	22.9	5	9.2	9.6	17.5	26.3	28.8	MT205
5.5	7.5	35	30.8	22	12.4	23.4	27.5	41.3	45.3	MT207
7.5	10	45	39.4	22	15.9	23.4	33	49.5	54.5	MT210
11	15	53.3	45.8	22	18.8	93.6	54	81	89.1	MT215
15	20	71.7	61.6	22	25.1	93.6	66	99	109	MT220
18.5	25	77	69	22	27.7	100	75	112	124	MT225
22	30	88	80	22	32	100	88	132	145	MT230
30	40	124	110	22	42.4	250	120	180	198	MT240
37	50	141	127	22	51	250	144	216	238	MT250
45	60	167	147	22	65	250	176	264	290	MT260

(1) These power ratings and currents are given for an ambient temperature of 50°C (122°F) at the factory-set switching frequency, used in continuous operation (switching frequency factory setting 4 kHz for MT2P5 to MT220 drives, and 2.5 kHz for MT225 to MT260 drives). Above this factory setting, the drive will reduce the switching frequency automatically in the event of excessive temperature rise.

For continuous operation above the factory setting, derating must be applied to the drive nominal current in accordance with the curves on page 11.

(2) Current on a line supply with the "Max. prospective line Isc" indicated and for a drive without any external options.

(3) Peak current on power-up for the max. voltage (240 V +10%).

(4) All MT Series drives are provided with a graphic keypad/display as standard.

(5) A line reactor must be used (please refer to the catalog).



Inhibit the input phase loss fault (IPL) so that MT201 to MT210 drives can operate on a single phase supply (see programming manual). If this fault is set to its factory configuration, the drive will stay locked in fault mode.

Drive ratings

3-phase supply voltage: 380...480 V 50/60 Hz

3-phase motor 380...480 V

Motor		Line supply (input)					Drive (output)			MT Series
Power indicated on plate (1)		Max. line current (2)		Max. prospective line Isc	Apparent power	Max. inrush current (3)	Max. available nominal current In (1)	Max. transient current for (1)		Reference
		at 380 V	at 480 V					60 s	2 s	
kW	HP	A	A	kA	kVA	A	A	A	A	
0.75	1	3.7	3	5	2.4	19.2	2.3	3.5	3.8	MT401
1.5	2	5.8	5.3	5	4.1	19.2	4.1	6.2	6.8	MT402
2.2	3	8.2	7.1	5	5.6	19.2	5.8	8.7	9.6	MT403
4	5	14.1	11.5	5	9.4	19.2	10.5	15.8	17.3	MT405
5.5	7.5	20.3	17	22	13.7	46.7	14.3	21.5	23.6	MT407
7.5	10	27	22.2	22	18.1	46.7	17.6	26.4	29	MT410
11	15	36.6	30	22	24.5	93.4	27.7	41.6	45.7	MT415
15	20	48	39	22	32	93.4	33	49.5	54.5	MT420
18.5	25	45.5	37.5	22	30.5	93.4	41	61.5	67.7	MT425
22	30	50	42	22	33	75	48	72	79.2	MT430
30	40	66	56	22	44.7	90	66	99	109	MT440
37	50	84	69	22	55.7	90	79	118.5	130	MT450
45	60	104	85	22	62.7	200	94	141	155	MT460
55	75	120	101	22	81.8	200	116	174	191	MT475
75	100	167	137	22	110	200	160	240	264	MT4100

(1) These power ratings and currents are given for an ambient temperature of 50°C (122°F) at the factory-set switching frequency, used in continuous operation (switching frequency factory setting 4 kHz for MT401 to MT440 drives, and 2.5 kHz for MT450 to MT475 drives). Above this factory setting, the drive will reduce the switching frequency automatically in the event of excessive temperature rise. For continuous operation above the factory setting, derating must be applied to the drive nominal current in accordance with the curves on page 11.


(2) Current on a line supply with the "Max. prospective line Isc" indicated and for a drive without any external options.

(3) Peak current on power-up for the max. voltage (480 V +10%).

(4) All MT Series drives are provided with a graphic keypad/display as standard.


Dimensions and weights

With graphic display keypad

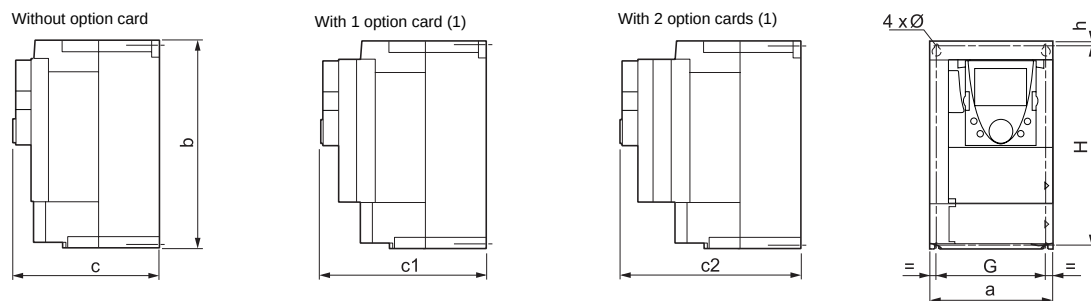

MT	a mm (in.)	b mm (in.)	c mm (in.)	c1 mm (in.)	c2 mm (in.)	G mm (in.)	H mm (in.)	h mm (in.)	Ø mm (in.)	For screw	Weight kg (lb.)
2P5, 201, 202, 401, 402, 403	130 (5.12)	254 (10.00)	175 (6.89)	198 (7.80)	221 (8.70)	113,5 (4.47)	220 (8.66)	5 (0.20)	5 (0.20)	M4	3 (6.61)
203, 205, 405	155 (6.10)	281 (11.06)	187 (7.36)	210 (8.27)	233 (9.17)	138 (5.43)	249 (9.80)	4 (0.16)	5 (0.20)	M4	4 (8.82)
201, 407, 410	175 (6.89)	319 (12.55)	187 (7.36)	210 (8.27)	233 (9.17)	158 (6.22)	283 (11.14)	6 (0.24)	6 (0.24)	M5	5,5 (12.13)
210, 415	210 (8.27)	320 (12.59)	213 (8.39)	236 (9.29)	259 (10.20)	190 (7.48)	283 (11.14)	6 (0.24)	6 (0.24)	M5	7 (15.43)
215, 220, 420, 425	230 (9.05)	425 (16.73)	213 (8.39)	236 (9.29)	259 (10.20)	210 (8.26)	386 (15.20)	8 (0.31)	6 (0.24)	M6	9 (19.84)
225, 230, 430	240 (9.45)	420 (16.54)	236 (9.29)	259 (10.20)	282 (11.10)	206 (8.11)	403 (15.87)	11 (0.45)	5,5 (0.22)	M5	30 (66.14)
440, 450	240 (9.45)	550 (21.65)	266 (10.47)	289 (11.38)	312 (12.28)	206 (8.11)	531,5 (20.93)	11 (0.45)	5,5 (0.22)	M5	37 (81.57)
240, 250, 260	320 (12.60)	550 (21.65)	266 (10.47)	289 (11.38)	312 (12.28)	280 (11.02)	524 (20.93)	20 (0.79)	8,6 (0.34)	M8	37 (81.57)
460, 475, 4100	320 (12.60)	630 (24.80)	290 (11.42)	313 (12.32)	334 (13.15)	280 (11.02)	604,5 (23.80)	15 (0.59)	9 (0.35)	M8	45 (99.21)


With graphic keypad removed

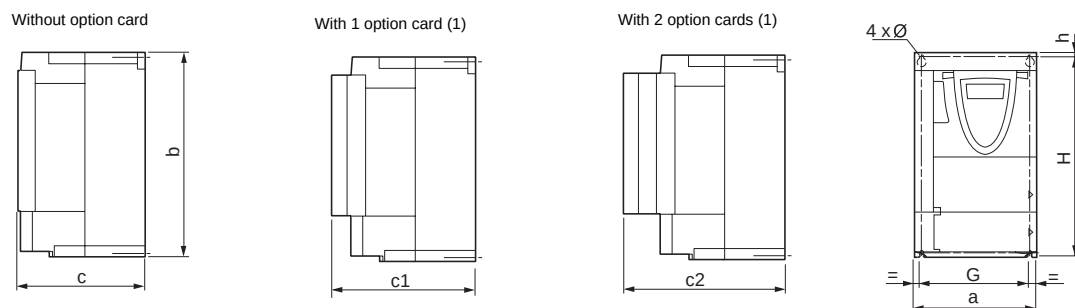

MT	a mm (in.)	b mm (in.)	c mm (in.)	c1 mm (in.)	c2 mm (in.)	G mm (in.)	H mm (in.)	h mm (in.)	Ø mm (in.)	For screw	Weight kg (lb.)
2P5, 201, 202, 401, 402, 403	130 (5.12)	254 (10.00)	152 (5.98)	172 (6.77)	195 (7.68)	113.5 (4.47)	220 (8.66)	5 (0.20)	5 (0.20)	M4	3 (6.61)
203, 205, 405	155 (6.10)	281 (11.06)	164 (6.45)	184 (7.25)	207 (8.15)	138 (5.43)	249 (9.80)	4 (0.16)	5 (0.20)	M4	4 (8.82)
207, 407, 410	175 (6.89)	319 (12.55)	164 (6.45)	184 (7.25)	207 (8.15)	158 (6.22)	283 (11.14)	6 (0.24)	6 (0.24)	M5	5.5 (12.13)
210, 415	210 (8.27)	320 (12.59)	191 (7.51)	210 (8.27)	233 (9.17)	190 (7.48)	283 (11.14)	6 (0.24)	6 (0.24)	M5	7 (15.43)
215, 220, 420, 425	230 (9.05)	425 (16.73)	191 (7.51)	210 (8.27)	233 (9.17)	210 (8.26)	386 (15.20)	8 (0.31)	6 (0.24)	M6	9 (19.84)

(1) For the addition of I/O extension cards or communication cards.

Mounting and temperature conditions

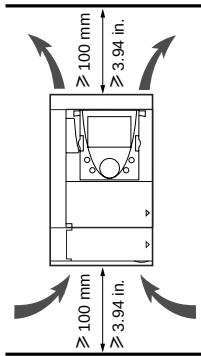


Install the drive vertically at $\pm 10^\circ$.
Do not place it close to heating elements.
Leave sufficient free space to ensure that the air required for cooling purposes can circulate from the bottom to the top of the unit.

Free space in front of the drive: 10 mm (0.39 in.) minimum


When IP20 (protected chassis) is adequate, it is recommended that the protective cover on the top of the drive is removed as shown below.

Removing the protective cover

MT2P5 to MT220 and MT401 to MT425

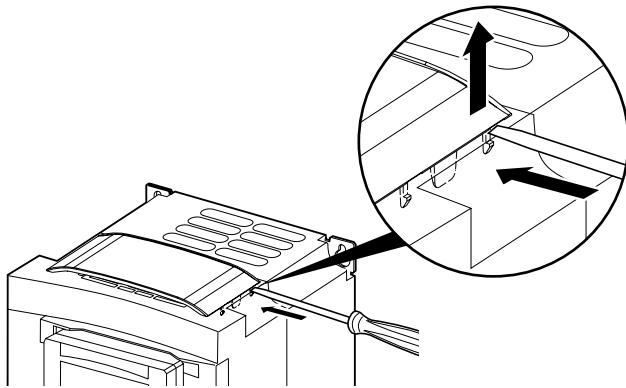


MT225 to MT260 and MT403 to MT4100

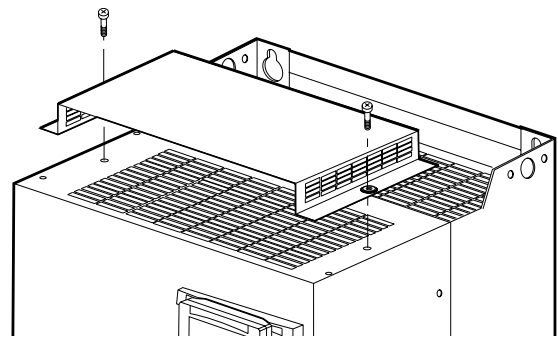


2 types of mounting are possible:

Type A mounting Free space ≥ 50 mm (≥ 1.97 in.) on each side, with protective cover fitted

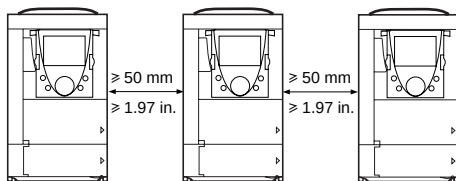

Type B mounting Drives mounted side by side, with the protective cover removed (the degree of protection becomes IP20)

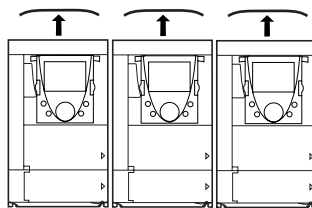


Mounting and temperature conditions


Derating curves

Derating curves for the drive current I_n as a function of the temperature, switching frequency and type of mounting.


MT2P5 to MT220 and MT401 to MT425

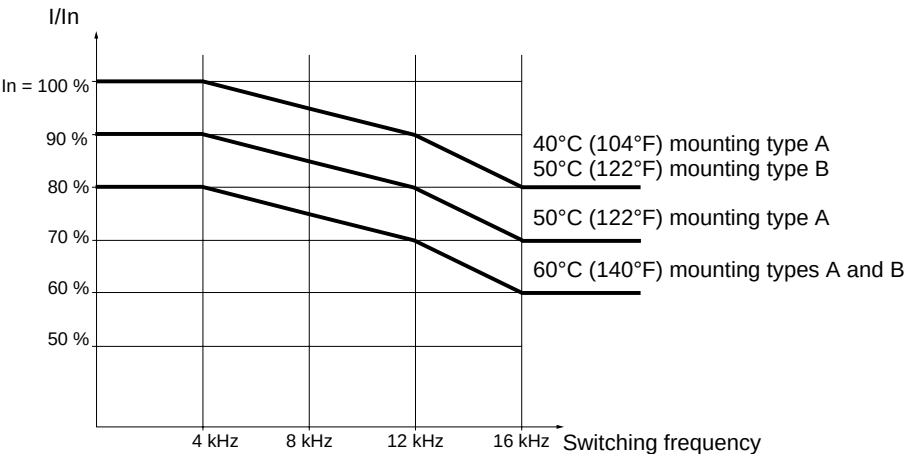

MT430 and MT440

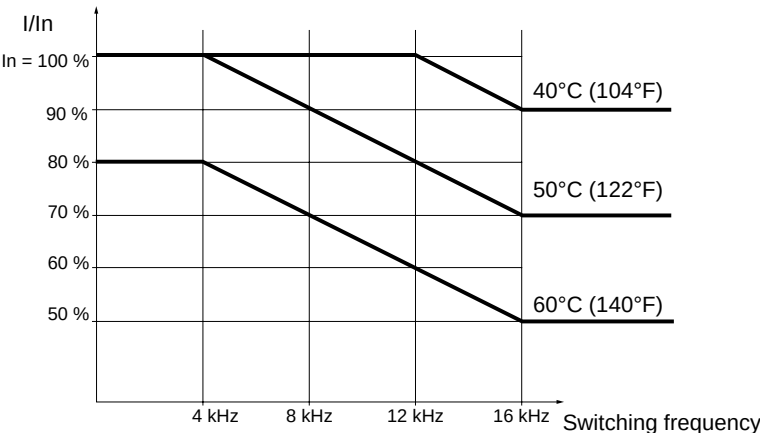

MT225 to MT260 and MT450 to MT4100

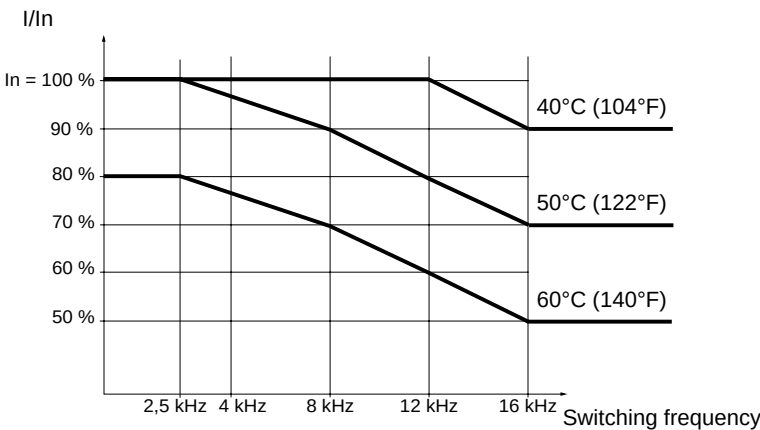


For intermediate temperatures (e.g. 55°C [131°F]), interpolate between 2 curves.

Mounting in a wall-mounted or floor-standing enclosure

Observe the mounting recommendations on the previous pages.
To ensure proper air circulation in the drive:

- Fit ventilation grilles
- Ensure that the ventilation is adequate: if not, install forced ventilation with a filter
- Use special IP54/Nema 12 filters

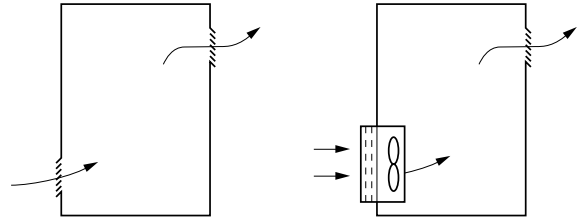

Dust and damp proof metal wall-mounted or floor-standing enclosure (IP 54/Nema 12 degree of protection)

The drive must be mounted in a dust and damp proof enclosure in certain environmental conditions: dust, corrosive gases, high humidity with risk of condensation and dripping water, splashing liquid, etc.

To avoid hot spots in the drive, add a fan to circulate the air inside the enclosure, catalog number MT-VW3A94●● (please refer to the catalog).

Mounting the drive in the enclosure

Power dissipated

These power ratings are given for operation at nominal load and for the factory-set switching frequency.

MT	Power dissipated (1) W
2P5	46
201	66
202	101
203	122
205	191
207	293
210	363
215	566
220	620
225	799
230	865
240	1134
250	1337
260	1567

MT	Power dissipated (1) W
401	44
402	64
403	87
405	144
407	178
410	217
415	320
420	392
425	486
430	717
440	976
450	1174
460	1360
475	1559
4100	2326

(1) Add 7W to this value for each option card added.

Ensure that the flow of air in the enclosure is at least equal to the value given in the table below for each drive.


MT	Flow rate	
	m ³ /hour	ft ³ /min
2P5, 201, 202, 401, 402, 403	17	10
203, 205, 405	56	33
207, 407, 410	112	66
210, 415	163	96
215, 220, 420, 425	252	148
225, 230, 430	203	119
440, 450	203	119
240, 250, 260	406	239
460, 475, 4100	406	239

Mounting in a wall-mounted or floor-standing enclosure

Dust and damp proof flange mounting

This mounting is used to reduce the power dissipated in the enclosure by locating the power section outside the enclosure. This requires the use of the dust and damp proof flange mounting kit MT-VW3 A9 501...509 (please refer to the catalog). The degree of protection for the drive mounted in this way becomes IP54/Nema 12.

To fit the kit to the drive, please refer to the manual supplied with the kit.

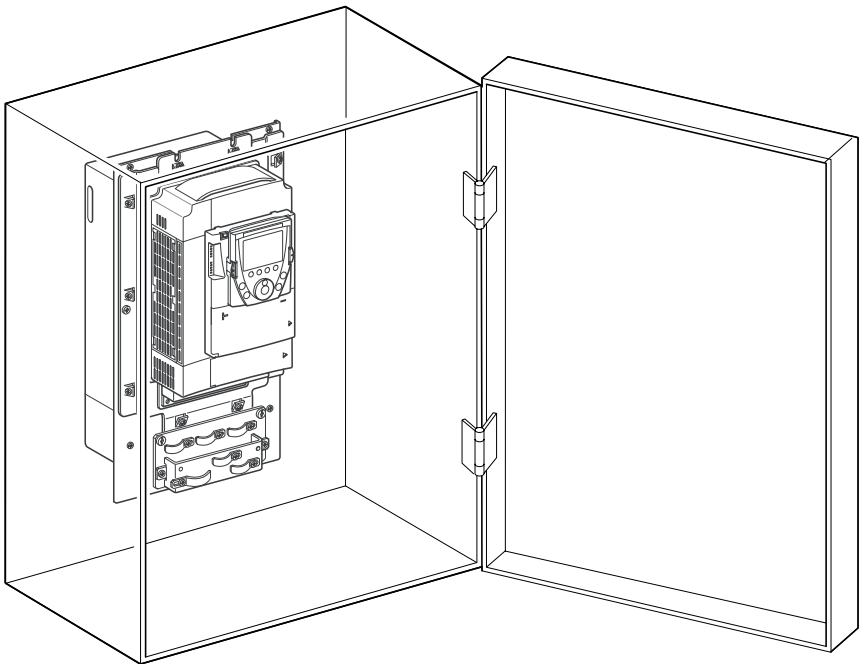

Example: MT407

Power dissipated inside the enclosure for dust and damp proof flange mounting

These power ratings are given for operation at nominal load and for the factory-set switching frequency.


MT	Power dissipated (1) W
2P5	25
201	28
202	35
203	39
205	48
207	71
210	81
215	120
220	137
225	291
230	294
240	368
250	447
260	452

MT	Power dissipated (1) W
401	28
402	31
403	35
405	48
407	54
410	64
415	76
420	100
425	134
430	298
440	354
450	441
460	538
475	592
4100	958

(1)Add 7W to this value for each option card added

Installing the graphic keypad

Installing the graphic display terminal on the drive

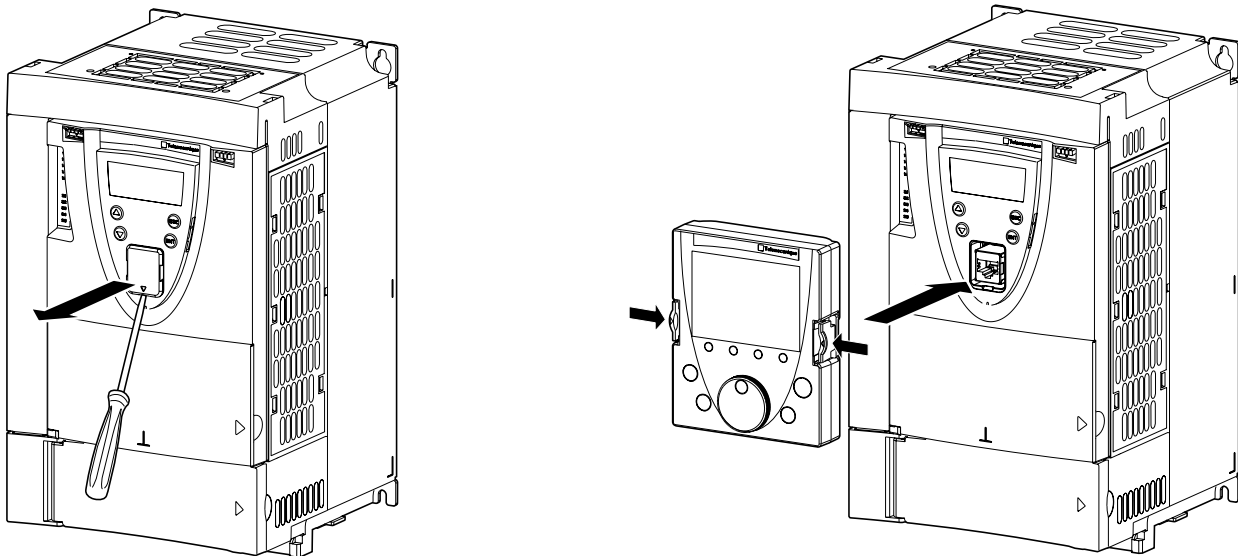

The graphic keypad can be connected or disconnected with the power on. Before disconnecting it, drive control via the display terminal must be disabled (refer to the programming manual).


Location of the charging LED

Before working on the drive, switch it off, wait until the red capacitor charging LED has gone out, then measure the DC bus voltage.

Location of the capacitor charging LED

MT2P5 to MT225
and MT401 to MT425

MT225 to MT260
and MT430 to MT4100

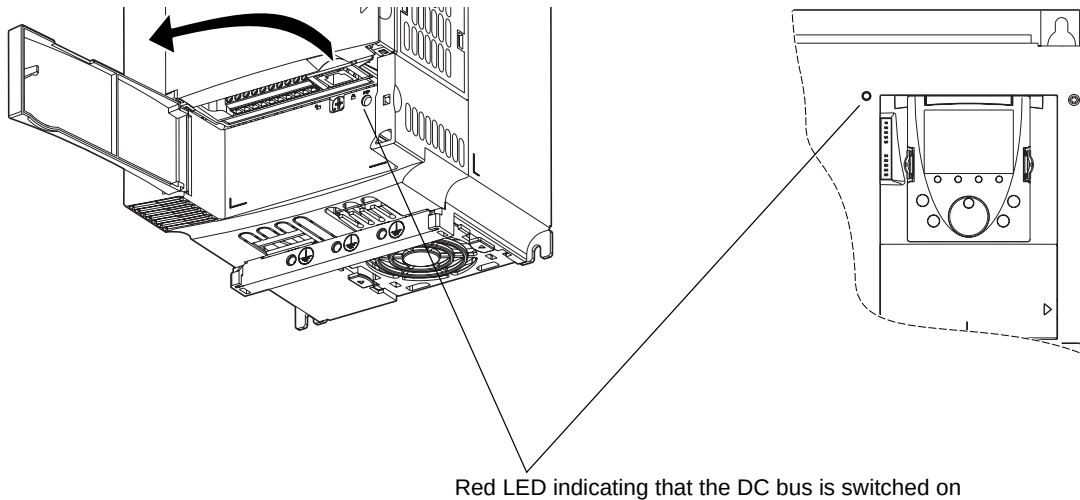

Procedure for measuring the DC voltage

DANGER

DANGEROUS VOLTAGE

Read and understand the precautions on page 4 before performing this procedure.
Failure to follow this instruction will result in death or serious injury.

The DC bus voltage can exceed 1000 VDC. Use a properly rated voltage sensing device when performing this procedure. To measure the DC bus voltage:

- 1 Disconnect the drive power supply.
- 2 Wait 15 minutes to allow the DC bus capacitors to discharge.
- 3 Measure the voltage of the DC bus between the PA/+ and PC/- terminals to check whether the voltage is less than 45 VDC. Refer to page 22 for the layout of the power terminals.
- 4 If the DC bus capacitors have not discharged completely, contact your local Motortronics agent (do not repair or operate the drive).


Installing option cards

These should ideally be installed once the drive is mounted and before wiring it.


Check that the red capacitor charging LED has gone out. Measure the DC bus voltage in accordance with the procedure indicated on page 15.

The option cards are installed under the drive control front panel. If the drive has a graphic display terminal, remove it, then remove the control front panel as indicated below.


Removing the control front panel

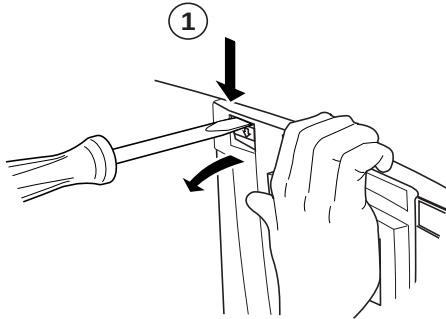

- Using a screwdriver, press down on the catch and pull to release the left-hand part of the control front panel

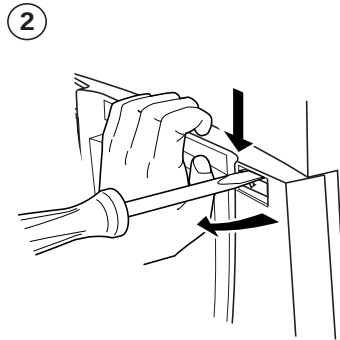


- Do the same on the right-hand side

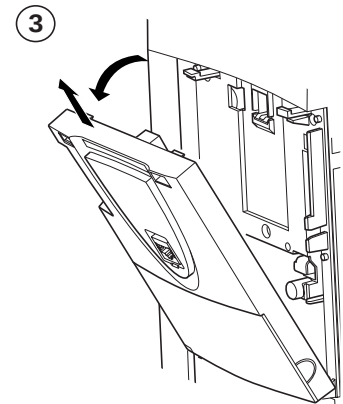

- Pivot the control front panel and remove it

Installing an encoder interface card


There is a special slot on the drive for adding an encoder interface card.

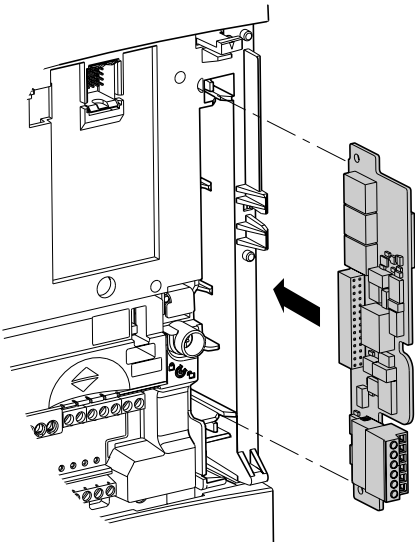

If an I/O or communication option card has already been installed, remove it so you can access the slot for the encoder interface card.

Installing option cards

Installing an I/O extension card or communication card

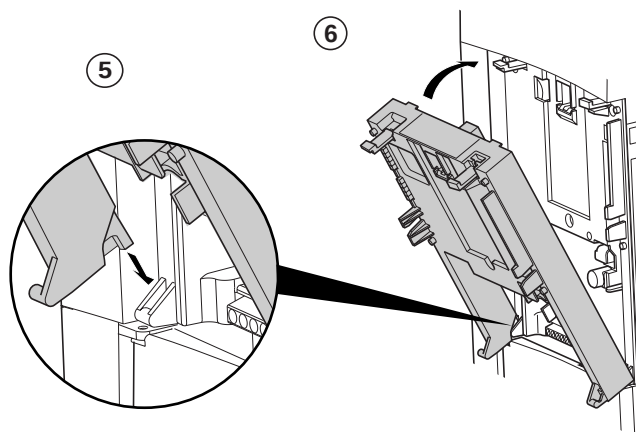


①, ② and ③ Remove the control front panel
(see previous page)

④ Install an encoder interface card (if used)
(see previous page)

⑤ Position the option card on the clasps


⑥ Then pivot it until it clicks into place

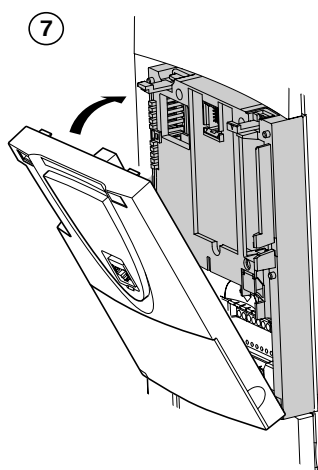


⑦ Replace the control front panel over the option card
(same procedure as for installing the option card, see ⑤ and ⑥)

Installing the EMC plates (if required for export)


MT2P5 to MT220 and MT401 to MT425

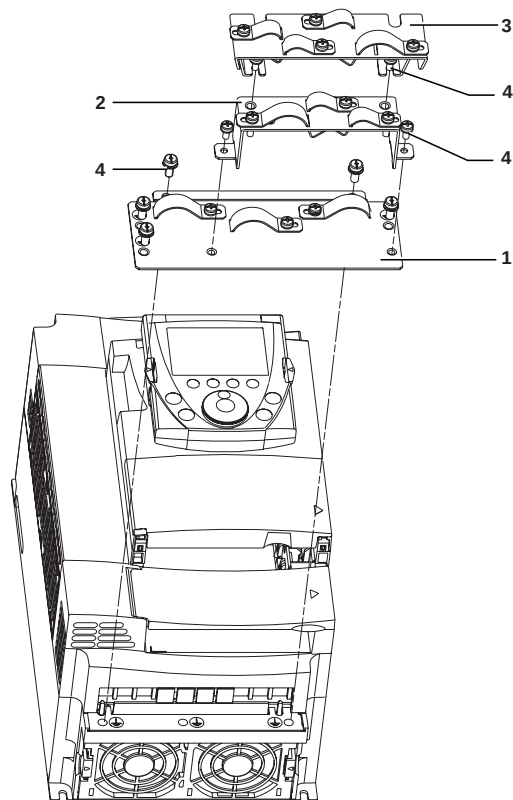


MT225 to MT260 and MT430 to MT4100

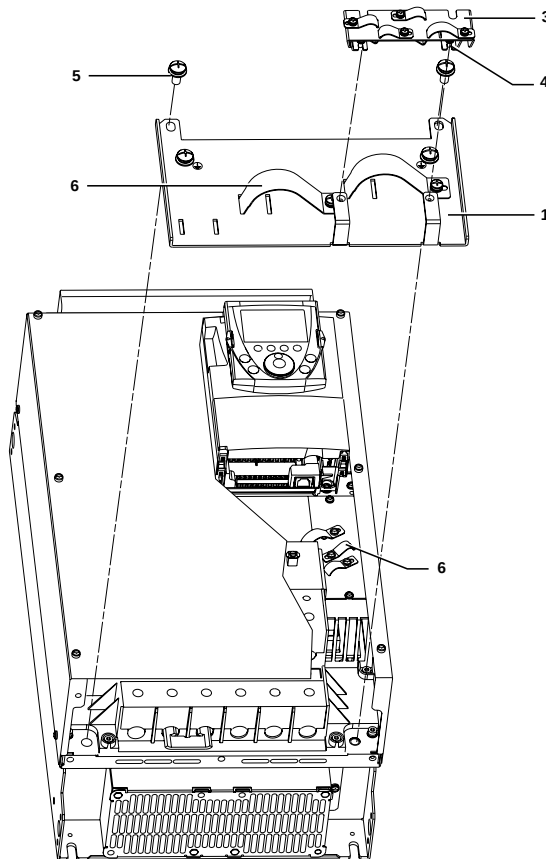

Installing the EMC clamps

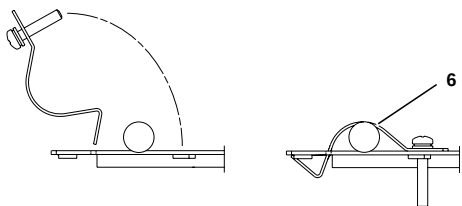

- 1 - EMC plate for connecting the power cables
- 2 - EMC plate for connecting the control cables (only for MT2P5 to MT220 and MT401 to MT425)
- 3 - EMC plate for connecting the I/O option card cables (supplied with the option cards)
- 4 - M4 screws (supplied)
- 5 - M8 screws (supplied)
- 6 - EMC clamps with captive screws (supplied)

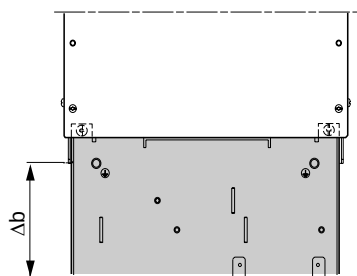

MT	Δb	
	mm	in.
2P5, 201, 202, 203, 205 401, 402, 403, 405	55	2.17
207, 210, 215, 220, 407, 410, 415, 420, 425	65	2.56
225, 230, 240, 250, 260, 430, 440, 450, 460, 475, 4100	120	4.72

Wiring recommendations

Power


The drive must be connected to the protective ground. To comply with local regulations concerning high leakage currents (over 3.5 mA), use at least a 10 mm² (AWG 6) protective conductor or 2 protective conductors with the same cross-section as the power supply conductors.

DANGER

HAZARDOUS VOLTAGE

Ground equipment using the provided ground connecting point as shown in the figure below. The drive panel must be properly grounded before power is applied.

Failure to follow these instructions will result in death or serious injury.

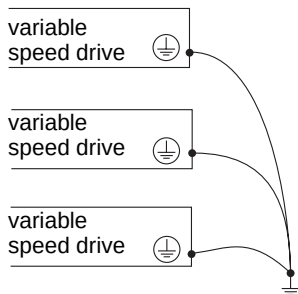

- Check whether the resistance to the protective ground is one ohm or less. Connect a number of variable speed drives to the protective ground, as shown in the diagram (see left). Do not lay protective grounding cables in a loop or in series.



WARNING

IMPROPER WIRING PRACTICES

- The MT drive will be damaged if input line voltage is applied to the output terminals (U/T1,V/T2,W/T3).
- Check the power connections before energizing the MT drive.
- If replacing another drive, verify that all wiring connections to the MT drive comply with all wiring instructions in this manual.

Failure to follow these instructions can result in death or serious injury.

When upstream protection by means of a "residual current device" is required by the installation standards, a type A device should be used for single phase drives and type B for 3-phase drives. Choose a suitable model incorporating:

- HF current filtering
- A time delay which prevents tripping caused by the load from stray capacitance on power-up. The time delay is not possible for 30 mA devices. In this case, choose devices with immunity against accidental tripping, for example "residual current devices" with reinforced immunity from the s.i range.

If the installation includes several drives, provide one "residual current device" per drive.



WARNING

INADEQUATE OVERCURRENT PROTECTION

- Overcurrent protective devices must be properly coordinated.
- The Canadian Electricity Code and the National Electrical Code require branch circuit protection. Use the fuses recommended on the drive name plate to achieve published short-circuit current ratings.
- Do not connect the drive to a power feeder whose short-circuit capacity exceeds the drive short-circuit current rating listed on the drive nameplate.

Failure to follow these instructions can result in death or serious injury.

Wiring recommendations

Keep the power cables separate from circuits in the installation with low-level signals (detectors, PLCs, measuring apparatus, video, telephone).

The motor cables must be at least 0.5 m (20 in.) long.

Do not immerse the motor cables in water.

Do not use lightning arresters or power factor correction capacitors on the variable speed drive output.

CAUTION

IMPROPER USE OF A BRAKING RESISTOR

- Only use the braking resistors recommended in our catalogs.
- Wire the thermal protection contact on the resistor so that the drive power supply is disconnected immediately in the event of a fault (refer to the manual supplied with the resistor).

Failure to follow these instructions can result in equipment damage.

Control

Keep the control circuits away from the power circuits. For control and speed reference circuits, we recommend using shielded twisted cables with a pitch of between 25 and 50 mm (0.98 and 1.97 in.) and connecting the shielding to ground at each end.

If using conduit, do not lay the motor, power supply and control cables in the same conduit. Keep the metal conduit containing the power supply cables at least 8 cm (3 in.) away from the metal conduit containing the control cables. Keep the non-metal conduits or cable ducts containing the power supply cables at least 31 cm (12 in.) away from the metal conduits containing the control cables. If it is necessary for control and power cables to cross each other, be sure they cross at right angles.

Length of motor cables

MT		0 m (0 ft)	50 m (164 ft)	100 m (328 ft)	150 m (492 ft)	300 m (984 ft)	1000 m (3280 ft)
2P5 to 210 401 to 420	Shielded cable						
	Unshielded cable						
215 to 260 425 to 4100	Shielded cable						
	Unshielded cable						

 with dv/dt filters

 with output filters

Choice of associated components:


Please refer to the catalog.

Power terminals

Access to the power terminals

MT2P5 to MT220 and MT401 to MT425


Unlock the power part access flap and remove it as shown below.

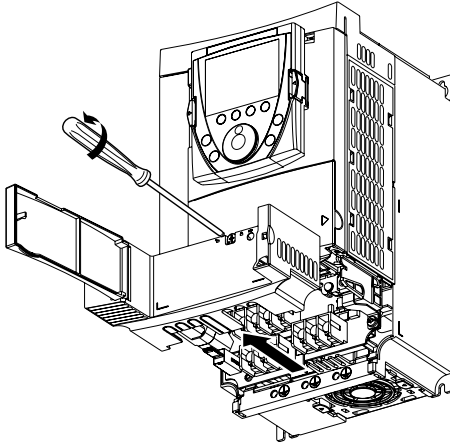

Example of MT203

MT225 to MT260 and MT430 to MT4100

To access the power terminals, remove the front panel as shown below.

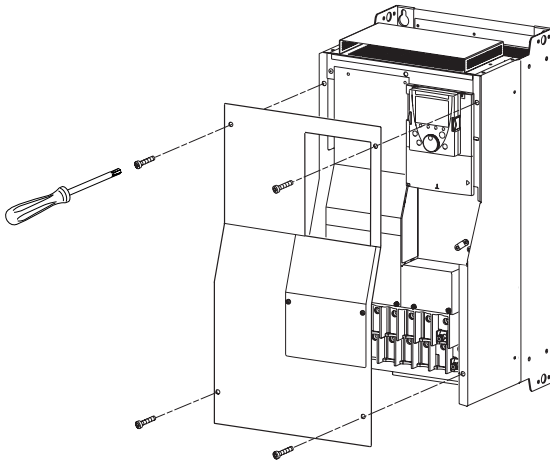

Example of MT4100

Characteristics and functions of the power terminals

Terminal	Function
	Protective ground connection terminal
R/L1 S/L2 T/L3	Power supply
PO	DC bus + polarity
PA/+	Output to braking resistor (+ polarity)
PB	Output to braking resistor
PC/-	DC bus - polarity
U/T1 V/T2 W/T3	Outputs to the motor




Only remove the link between PO and PA/+ if a DC choke has been added. The screws on the PO and PA/+ terminals must always be fully tightened as there is a high current flowing in the link.

Power terminals


Layout of the power terminals

MT 2P5, 201, 202, 203, 205,
 401, 402, 403, 405

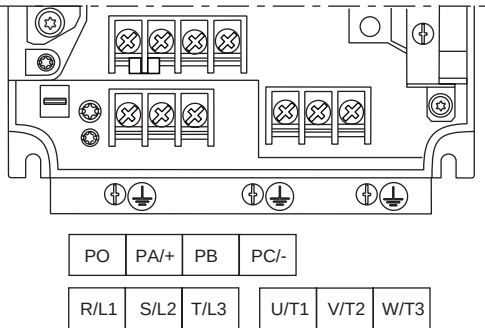


MT	Maximum wire size		Tightening torque
	mm²	AWG	Nm (lb.in)
2P5,201, 202 401, 402, 403	2,5	14	1,2 (10.6)
203, 205 405	6	8	1,2 (10.6)

MT 207, 201, 215, 220
 407, 410, 415, 420, 425

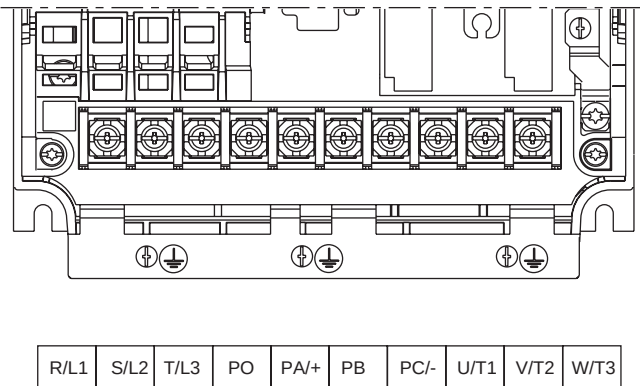

MT	Maximum wire size		Tightening torque
	mm²	AWG	Nm (lb.in)
207, 407, 410	10	6	2 (17.7)
210, 415	16	4	2,4 (21)
215, 220, 420, 425	35	1	2,4 (21)

MT 225, 230, 240, 250, 260
 430, 440, 450, 460, 475, 4100

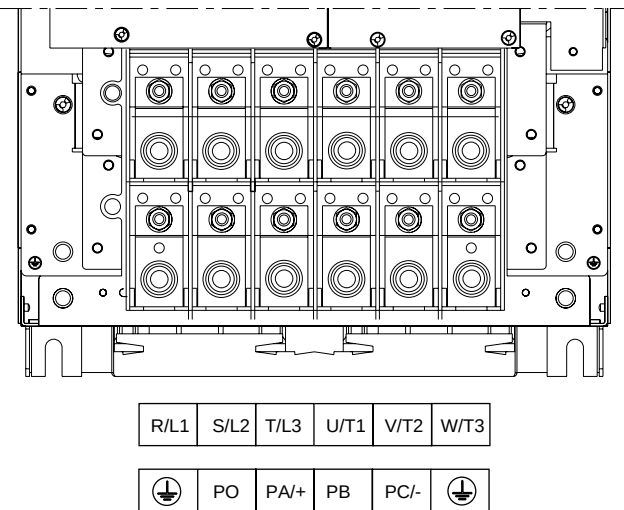


MT	Maximum wire size		Tightening torque
	mm²	AWG	Nm (lb.in)
225, 230, 430,440,450	50	1/0	6 (53)

MT	Maximum wire size		Tightening torque
	mm²	kcmils	Nm (lb.in)
460, 475, 4100, 240, 250, 260	120	350	19 (168)


Control terminals

Access to the control terminals

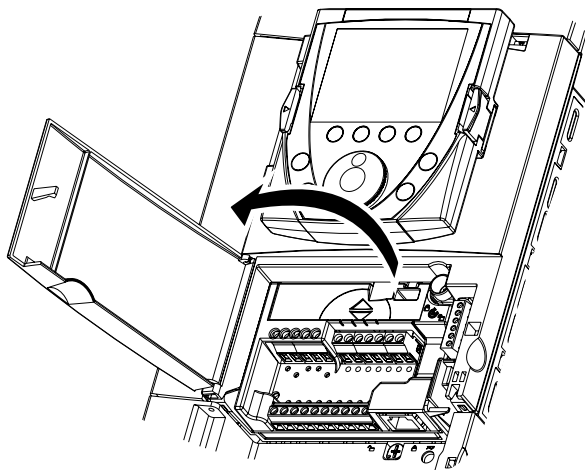

To access the control terminals,
open the cover on the control front panel

Removing the terminal card

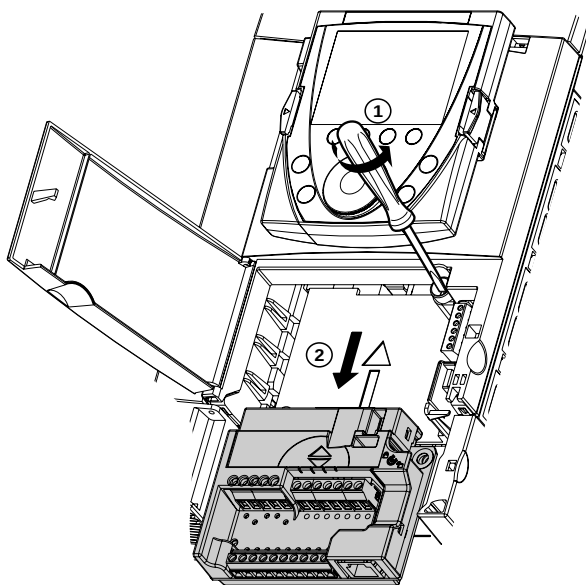

To make it easier to wire the drive control section,
the control terminal card can be removed.

- Undo the screw until the spring is fully extended
- Remove the card by sliding it downwards


CAUTION

IMPROPERLY SECURED BOARD

When replacing the control terminal card, it is essential to
fully tighten the captive screw.

**Failure to follow this instruction can result in material
damage.**

Layout of the control terminals

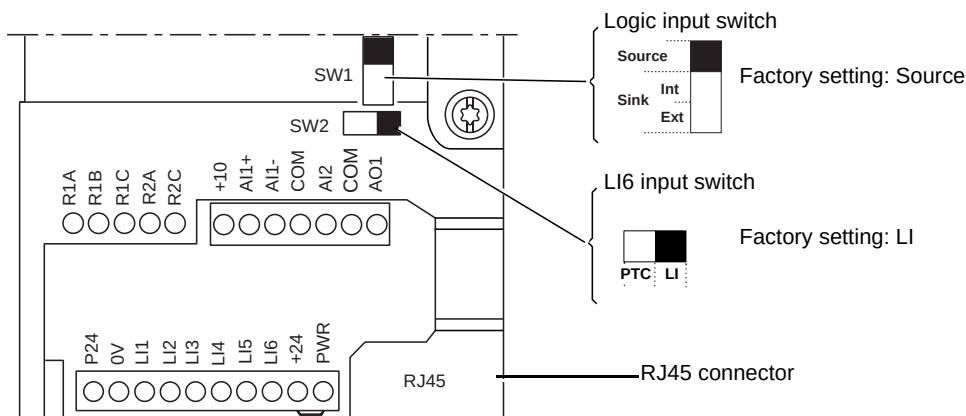

Maximum wire size:
2.5 mm² - AWG 14

Max. tightening torque:
0.6 Nm - 5.3 lb.in

Note: The MT Series is supplied with a link between the PWR and +24 terminals.


Control terminals

Characteristics and functions of the control terminals

Terminal	Function	Electrical characteristics			
R1A R1B R1C	Common point C/O contact (R1C) of programmable relay R1	- Minimum switching capacity: 3 mA for 24 VDC - Maximum switching capacity on resistive load: 5 A for 250 VAC or 30 VDC			
R2A R2C	N/O contact of programmable relay R2	- Maximum switching current on inductive load ($\cos \varphi = 0.4$ L/R = 7 ms): 2 A for 250 VAC or 30 VDC - Reaction time: 7 ms $\pm$ 0.5 ms - Service life: 100,000 operations at max. switching power			
+10	+10 VDC power supply for reference potentiometer 1 to 10 k Ω	+10 VDC (10.5 V $\pm$ 0.5V) 10 mA max.			
AI1+ AI1 -	Differential analog input AI1	-10 to +10 VDC (max. safe voltage 24 V) - Reaction time: 2 ms $\pm$ 0.5 ms, 11-bit resolution + 1 sign bit - Accuracy $\pm$ 0.6% for $\Delta\theta = 60^\circ\text{C}$ (140°F), linearity $\pm$ 0.15% of max. value			
COM	Analog I/O common	0V			
AI2	Depending on software configuration: Analog voltage input or Analog current input	- Analog input 0 to +10 VDC (max. safe voltage 24 V), impedance 30 kΩ - or - analog input X - Y mA, X and Y can be programmed from 0 to 20 mA, - Impedance 250 Ω - Reaction time: 2 ms $\pm$ 0.5 ms - Resolution 11 bits, accuracy $\pm$ 0.6% pour $\Delta\theta = 60^\circ\text{C}$ (140°F), linearity $\pm$ 0.15% of max. value			
COM	Analog I/O common	0V			
AO1	Depending on software configuration: Analog voltage output or Analog current output	- analog output 0 to +10 VDC, min. load impedance 50 kΩ - or - analog output X - Y mA, X and Y can be programmed from 0 to 20 mA - max. load impedance 500 Ω 10-bit resolution, reaction time: 2 ms $\pm$ 0.5 ms - Accuracy $\pm$ 1% for $\Delta\theta = 60^\circ\text{C}$ (140°F), linearity $\pm$ 0.2% of max. value			
P24	Input for external +24 VDC control power supply	+24 VDC(min. 19 V, max. 30 V) - Power 30 Watts			
0V	Logic input common and 0V of P24 external power supply	0V			
LI1 LI2 LI3 LI4 LI5	Programmable logic inputs	+24 VDC (max. 30 V) - impedance 3.5 kΩ - Reaction time: 2 ms $\pm$ 0.5 ms	SW1 switch	State 0	State 1
			Source (factory setting)	< 5 VDC	> 11 VDC
			Int Sink or Ext Sink	> 16 VDC	< 10 VDC
LI6	Depending on the position of the SW2 switch. - Programmable logic input or - Input for PTC probes	SW2 switch on LI (factory setting) - Same characteristics as logic inputs LI1 to LI5 or SW2 switch on PTC - Trip threshold 3 kΩ, reset threshold 1.8 kΩ - Short-circuit detection threshold < 50 Ω			
+24	Logic input power supply	SW1 switch in Source or Int Sink position +24 VDC power supply (min. 21 V, max. 27 V), protected against short-circuits and overloads - Max. current available for customers 200 mA SW1 switch in Ext Sink position - Input for external +24 VDC power supply for the logic inputs			
PWR	Power Removal safety function input When PWR is not connected to the 24V, the motor cannot be started (compliance with functional safety standard EN 954-1 and IEC/EN 61508)	24 VDC power supply (max. 30 V) - Impedance 1.5 kΩ - State 0 if < 2V, state 1 if > 17V - Reaction time: 10ms			

Option terminals

Logic I/O option card terminals (MT-VW3A3201)

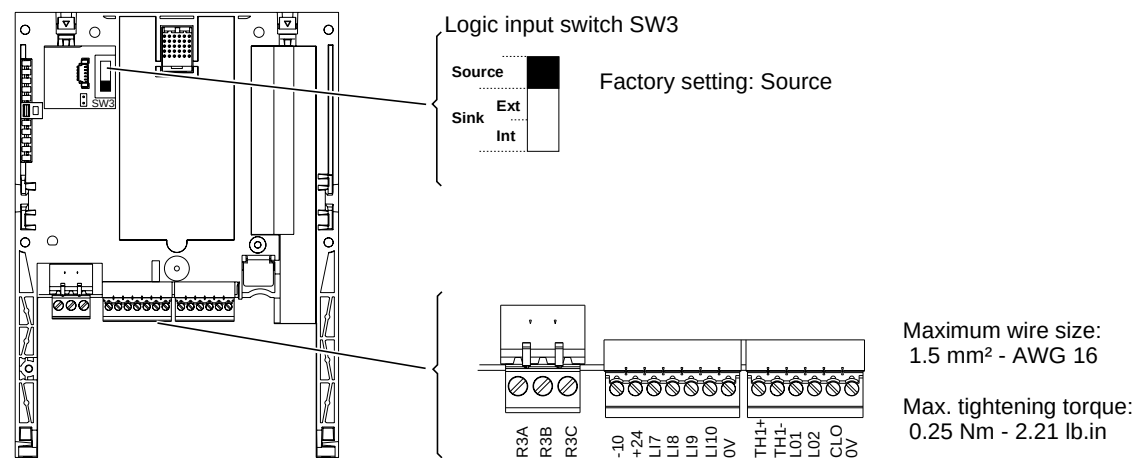


Characteristics and functions of the terminals

Terminal	Function	Electrical characteristics									
R3A R3B R3C	Common point C/O contact R3C of programmable relay R3	- Minimum switching capacity: 3mA for 24 VDC - Maximum switching capacity on resistive load: 5 A for 250 VAC or 30 VDC - Maximum switching capacity on inductive load ($\cos \varphi = 0.4$ L/R = 7 ms): 2 A for 250 VAC or 30 VDC - Reaction time: 7 ms $\pm$ 0.5 ms - Service life: 100,000 operations									
-10	-10 VDC power supply for reference potentiometer 1 to 10 k Ω	-10 VDC (-10.5 V $\pm$ 0.5V) 10 mA max.									
+24	Logic input power supply	SW3 switch in Source or Int Sink position +24 VDC power supply (min. 21 V, max. 27 V), protected against short-circuits and overloads - Max. current available for customers 200 mA (This current corresponds to the total consumption on the control card +24 and the option cards +24) SW3 switch in Ext Sink position - Input for external +24 VDC power supply for the logic inputs									
LI7 LI8 LI9 LI10	Programmable logic inputs	+24 VDC power supply (max. 30 V) - Impedance 3.5 kΩ - Reaction time 2 ms $\pm$ 0.5 ms <table><tr><th>Switch SW3</th><th>State 0</th><th>State 1</th></tr><tr><td>Source (factory setting)</td><td>< 5 VDC</td><td>> 11 VDC</td></tr><tr><td>Int Sink or Ext Sink</td><td>> 16 VDC</td><td>< 10 VDC</td></tr></table>	Switch SW3	State 0	State 1	Source (factory setting)	< 5 VDC	> 11 VDC	Int Sink or Ext Sink	> 16 VDC	< 10 VDC
Switch SW3	State 0	State 1									
Source (factory setting)	< 5 VDC	> 11 VDC									
Int Sink or Ext Sink	> 16 VDC	< 10 VDC									
0 V	0 V	0 V									
TH1+ TH1-	PTC probe input	- Trip threshold 3 kΩ, reset threshold 1.8 kΩ - Short-circuit detection threshold < 50 Ω									
LO1 LO2	Open collector programmable logic outputs	+24 VDC (max. 30 V) - Max. current 200 mA for internal power supply and 200 mA for external power supply - Reaction time: 2 ms $\pm$ 0.5 ms									
CLO	Logic output common										
0V	0 V	0 V									

Option terminals

Extended I/O option card terminals (MT-VW3A3202)

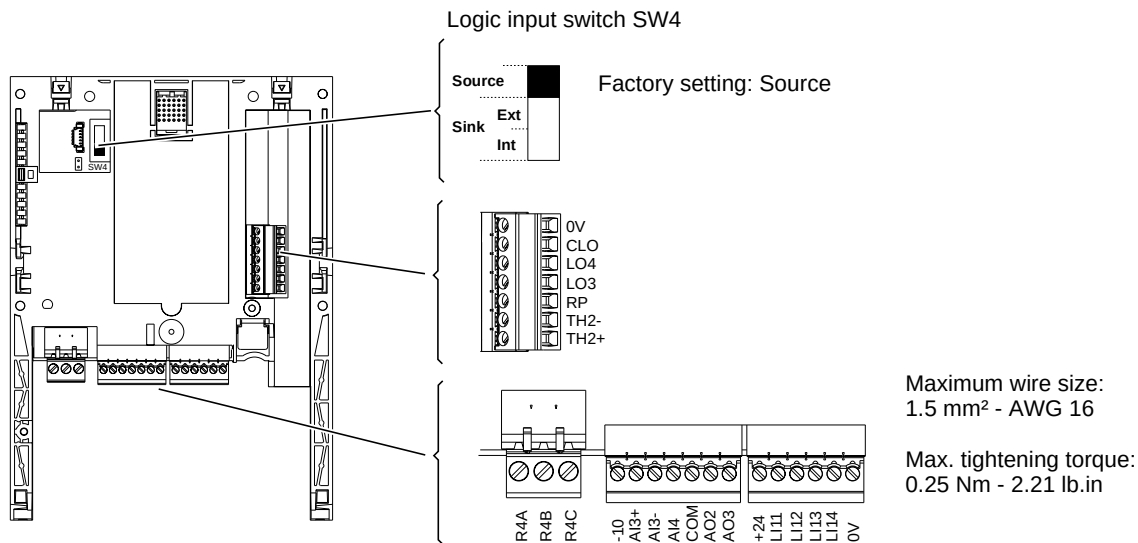

Characteristics and functions of the terminals

Terminal	Function	Electrical characteristics
R4A R4B R4C	Common point C/O contact R4C of programmable relay R4	- Minimum switching capacity: 3mA for 24 VDC - Maximum switching capacity on resistive load: 5 A for 250 VAC or 30 VDC - Maximum switching capacity on inductive load ($\cos \varphi = 0.4$ L/R = 7 ms): 1.5 A for 250 VAC or 30 VDC - Reaction time 10 ms $\pm$ 1ms - Service life: 100,000 operations
-10	-10 VDC power supply for reference potentiometer 1 to 10 k Ω	-10 VDC (-10.5 V $\pm$ 0.5V) 10 mA max.
AI3 +	+ polarity of the current differential analog input AI3	- Analog input X - Y mA, X and Y can be programmed from 0 to 20 mA, impedance 250 Ω - Reaction time: 5 ms $\pm$ 1 ms 11-bit resolution + 1 sign bit, accuracy $\pm$ 0.6% for $\Delta\theta = 60^\circ\text{C}$ (140°F) - Linearity $\pm$ 0.15% of max. value
AI3 -	- polarity of the current differential analog input AI3	
AI4	Depending on software configuration: Analog current input or Analog voltage input	- Analog input 0 to +10 VDC (max. safe voltage 24 V), impedance 30 kΩ - or - Analog input X - Y mA, X and Y can be programmed from 0 to 20 mA, impedance 250 Ω - Reaction time: 5 ms $\pm$ 1 ms - Resolution 11 bits, accuracy $\pm$ 0.6% pour $\Delta\theta = 60^\circ\text{C}$ (140°F), linearity $\pm$ 0.15% of max. value
COM	Analog I/O common	0 V
AO2 AO3	Depending on software configuration: Analog voltage outputs or Analog current outputs	0 - 10 VDC or -10/+10 VDC bipolar analog output depending on software configuration, min. load impedance 50 kΩ - or - Analog current output X-Y mA, X and Y can be programmed from 0 to 20 mA, max. load impedance 500 Ω 10-bit resolution - Reaction time 5 ms $\pm$ 1ms, accuracy $\pm$ 1% for $\Delta\theta = 60^\circ\text{C}$ (140°F), linearity $\pm$ 0.2%


Option terminals

Terminal	Function	Electrical characteristics			
+24	Logic input power supply	SW4 switch in Source or Int Sink position +24 VDC output (min. 21 V, max. 27 V), protected against short-circuits and overloads - Max. current available for customers 200 mA (This current corresponds to the total consumption on the control card +24 and the option cards +24) SW4 switch in Ext Sink position - Input for external +24 VDC power supply for the logic inputs			
LI11 LI12 LI13 LI14	Programmable logic inputs	+24 VDC (max. 30 V) - Impedance 3.5 kΩ - Reaction time: 5 ms $\pm$ 1 ms	SW4 switch	State 0	State 1
			Source (factory setting)	< 5 VDC	> 11 VDC
			Int Sink or Ext Sink	> 16 VDC	< 10 VDC
0V	Logic input common	0 V			
TH2 + TH2 -	PTC probe input	- Trip threshold 3 kΩ, reset threshold 1.8 kΩ - Short-circuit detection threshold < 50 Ω			
RP	Frequency input	- Frequency range 0 to 30 kHz - Reaction time 5 ms $\pm$ 1ms			
LO3 LO4	Open collector programmable logic outputs	+24 VDC (max. 30 V) - Max. current 20 mA for internal power supply and 200 mA for external power supply - Reaction time 5 ms $\pm$ 1ms			
CLO	Logic output common				
0V	0 V	0 V			

Option terminals

Encoder interface card terminals

MT-VW A3 401...407

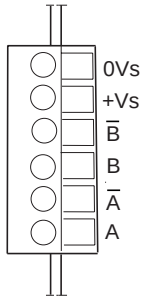

Maximum wire size:
1.5 mm² - AWG 16

Max. tightening torque:
0.25 Nm - 2.21 lb.in

Characteristics and functions of the terminals

Encoder interface cards with RS422-compatible differential outputs

Terminal	Function	Electrical characteristics	
		MT-VW3 A3 401	MT-VW3 A3 402
+Vs 0Vs	Encoder power supply	5VDC (max. 5.5V) protected against short-circuits and overloads - Max. current 200 mA	15VDC (max. 16V) protected against short-circuits and overloads - Max. current 175 mA
A, /A B, /B	Incremental logic inputs	- Max. resolution: 10000 points/rev - Max. frequency: 300kHz	

Encoder interface cards with open collector outputs

Terminal	Function	Electrical characteristics	
		MT-VW3 A3 403	MT-VW3 A3 404
+Vs 0Vs	Encoder power supply	12VDC (max. 13V) protected against short-circuits and overloads - Max. current 175 mA	15VDC (max. 16V) protected against short-circuits and overloads - Max. current 175 mA
A, /A B, /B	Incremental logic inputs	- Max. resolution: 10000 points/rev - Max. frequency: 300 kHz	

Encoder interface cards with push-pull outputs

Terminal	Function	Electrical characteristics		
		MT-VW3 A3 405	MT-VW3 A3 406	MT-VW3 A3 407
+Vs 0Vs	Encoder power supply	12VDC (max. 13V) protected against short-circuits and overloads - Max. current 175 mA	15VDC (max. 16V) protected against short-circuits and overloads - Max. current 175 mA	24VDC (min. 20V, max. 30V) protected against short-circuits and overloads - Max. current 100 mA
A, /A B, /B	Incremental logic inputs	- Max. resolution: 10000 points/rev - Max. frequency: 300 kHz		

Option terminals

Selecting the encoder

The 7 encoder interface cards available as an option with the MT Series enable three different encoder technologies to be used.

- Optical incremental encoder with differential outputs compatible with the RS422 standard
- Optical incremental encoder with open collector outputs
- Optical incremental encoder with push-pull outputs

The encoder must comply with the following two limits:

- Maximum encoder frequency 300 kHz
- Maximum resolution 10000 points/revolution

Choose the max. standard resolution within these two limits to obtain optimum accuracy.

Wiring the encoder

Use a shielded cable containing 3 twisted pairs with a pitch of between 25 and 50 mm (0.98 in. and 1.97 in.). Connect the shielding to ground at both ends.

The minimum cross-section of the conductors must comply with the table below, in order to limit line voltage drop:

Max. length of encoder cable	MT-VW3 A3 401...402				MT-VW3 A3 403...407		
	Max. consumption current of encoder	Minimum cross-section of conductors			Max. consumption current of encoder	Minimum cross-section of conductors	
10 m 32.8 ft	100 mA	0.2 mm ²	AWG 24		100 mA	0.2 mm ²	AWG 24
	200 mA	0.2 mm ²	AWG 24		200 mA	0.2 mm ²	AWG 24
50 m 164 ft	100 mA	0.5 mm ²	AWG 20		100 mA	0.5 mm ²	AWG 20
	200 mA	0.75 mm ²	AWG 18		200 mA	0.75 mm ²	AWG 18
100 m 328 ft	100 mA	0.75 mm ²	AWG 18		100 mA	0.75 mm ²	AWG 18
	200 mA	1.5 mm ²	AWG 15		200 mA	1.5 mm ²	AWG 16
200 m 656 ft	-	-	-		100 mA	0.5 mm ²	AWG 20
	-	-	-		200 mA	1.5 mm ²	AWG 15
300 m 984 ft	-	-	-		100 mA	0.75 mm ²	AWG 18
	-	-	-		200 mA	1.5 mm ²	AWG 15

Connection diagrams

Connection diagrams conforming to standards EN 954-1 category 1 and IEC/EN 61508 capacity SIL1, stopping category 0 in accordance with standard IEC/EN 60204 1 (If required)

Single phase power supply (MT201 to MT210)

Diagram with line contactor


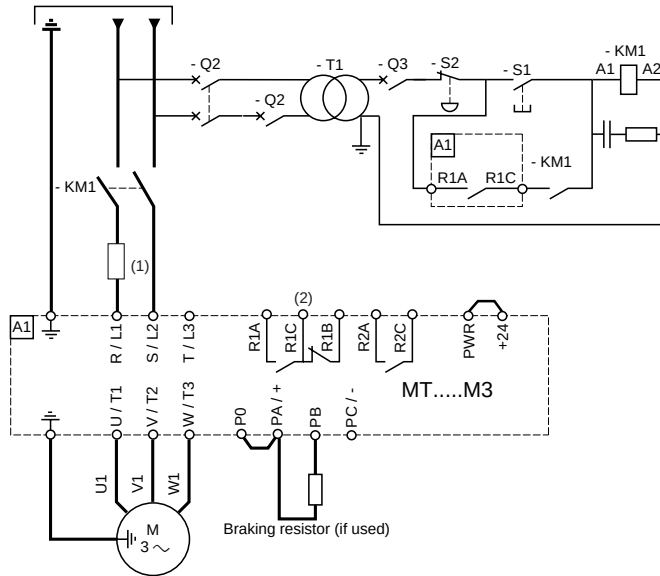


Diagram with switch disconnect



- (1) Line reactor, if used (required for MT205 to MT210 drives)
 (2) Fault relay contacts, for remote signaling of drive status

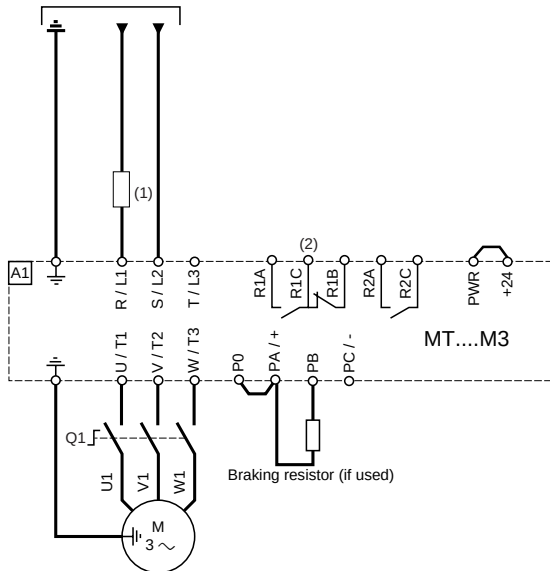

Inhibit the input phase loss fault (IPL) so that MT201 to MT210 drives can operate on a single phase supply (see programming manual). If this fault is set to its factory configuration, the drive will stay locked in fault mode.

Note: Fit interference suppressors to all inductive circuits near the drive or coupled to the same circuit (relays, contactors, solenoid valves, etc).

Choice of associated components:

Please refer to the catalog.

Connection diagrams

Connection diagrams conforming to standards EN 954-1 category 1 and IEC/EN 61508 capacity SIL1, stopping category 0 in accordance with standard IEC/EN 60204-1 (If required)

3-phase power supply

Diagram with line contactor


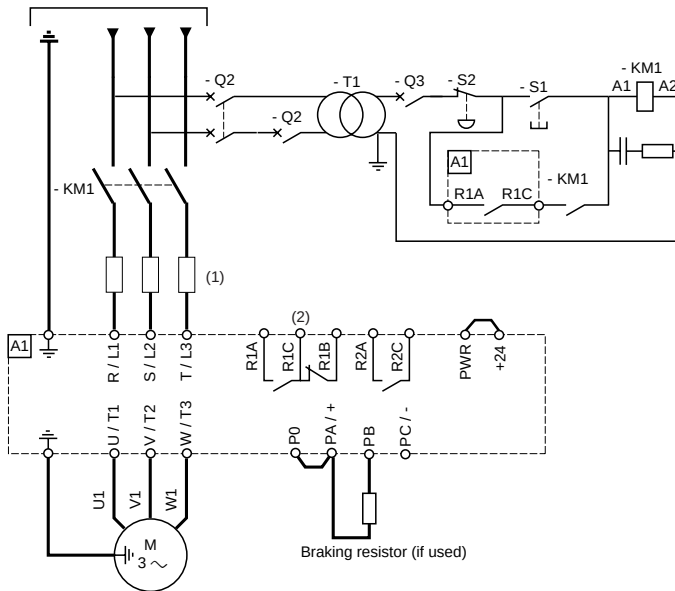


Diagram with switch disconnect

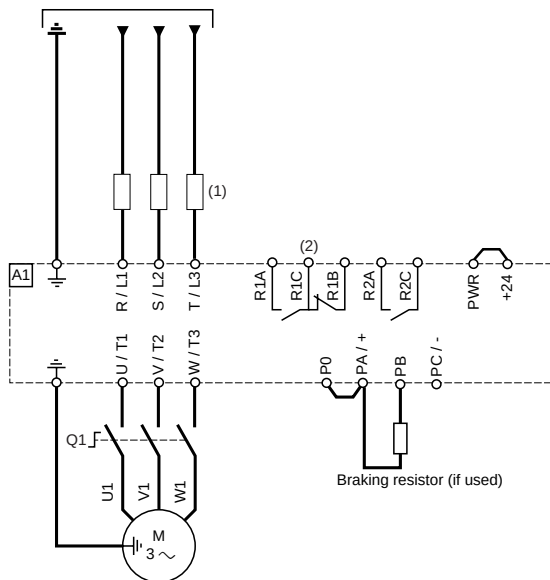

(1) Line reactor (if used)

(2) Fault relay contacts, for remote signaling of drive status

Note: Fit interference suppressors to all inductive circuits near the drive or coupled to the same circuit (relays, contactors, solenoid valves, etc).

Choice of associated components:

Please refer to the catalog.

Connection diagrams conforming to standards EN 954-1 category 3 and IEC/EN 61508 capacity SIL2, stopping category 0 in accordance with standard IEC/EN 60204-1 (If required)

 This diagram must be used for hoisting applications if a mechanical brake is controlled by the MT.

(2) It is essential to connect the shielding on the cable connected to the Power Removal input to ground.

- Buy: www.ValinOnline.com | Phone 844-385-3099 | Email: CustomerService@valin.com

Connection diagrams

Connection diagram conforming to standards EN 954-1 category 3 and IEC/EN 61508 capacity SIL2, stopping category 1 in accordance with standard IEC/EN 60204-1 (If required)


This connection diagram is suitable for use with machines with a long freewheel stop time (machines with high inertia or low resistive torque).

 **This diagram must not be used for lifting applications.**

When the stop request is activated, deceleration of the motor, controlled by the drive, is requested first. Then, after a time delay corresponding to the deceleration time, the Power Removal safety function is activated.

Example:

- 2-wire control
- LI1 assigned to forward
- LI2 assigned to reverse

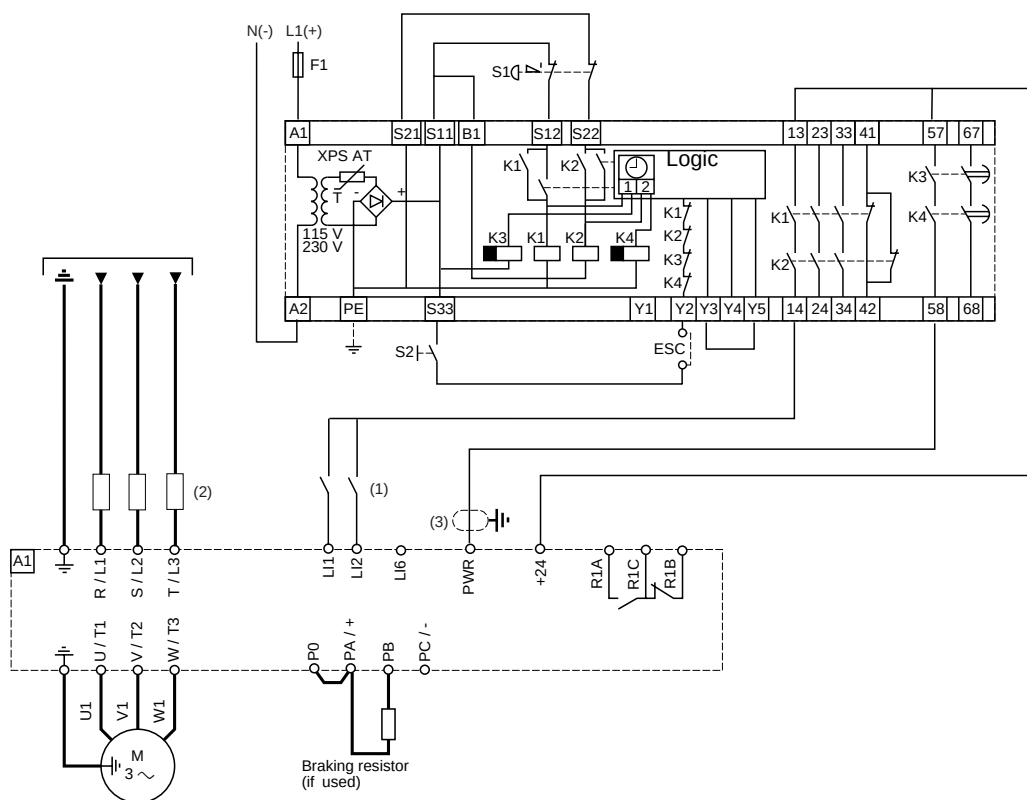

(1) In this example, the logic inputs LI● are wired as "Source" but can be wired as "Int Sink" or "Ext Sink".

(2) Line reactor (if used)

(3) It is essential to connect the shielding on the cable connected to the Power Removal input to ground.

- Standard EN 954-1 category 3 requires the use of a stop button with double contact (S1).
- S1 is used to activate the Power Removal safety function.
- S2 is used to initialize the safety relay when switching on or after an emergency stop. ESC enables the use of other initialization conditions for the module.
- One Preventa module can be used for the Power Removal safety function on several MT Series drives. In this case the time delay must be set to the longest stopping time.
- A logic input on the safety relay can be used to indicate safely that the drive is operating in safe conditions.

Note:

For preventive maintenance, the Power Removal function must be activated at least once a year.

The drive power supply must be switched off and then on again before carrying out this preventive maintenance.

The drive logic output signals cannot be considered as safety-type signals.

Fit interference suppressors to all inductive circuits near the drive or coupled to the same circuit (relays, contactors, solenoid valves, etc).


Choice of associated components:

Please refer to the catalog.

Connection diagrams

Control connection diagrams

Control card connection diagram

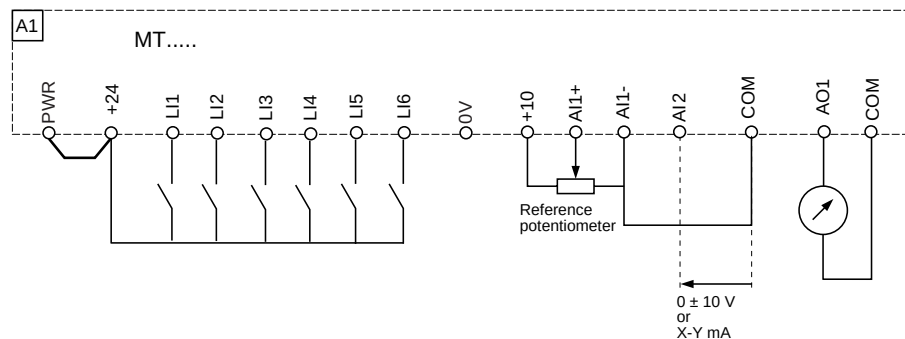


Logic input switch (SW1)


The logic input switch (SW1) is used to adapt the operation of the logic inputs to the technology of the programmable controller outputs.

- Set the switch to Source (factory setting) if using PLC outputs with PNP transistors.
- Set the switch to Int Sink or Ext Sink if using PLC outputs with NPN transistors.


- SW1 switch set to "Source" position

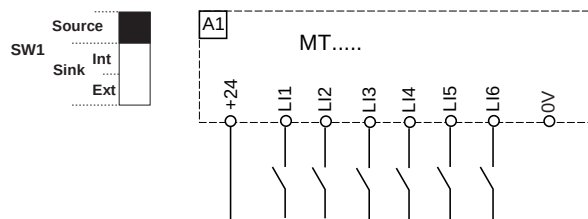


- SW1 switch set to "Source" position and use of an external power supply for the LIs

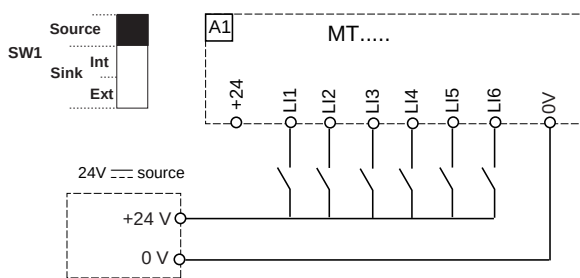

- SW1 switch set to "Int Sink" position

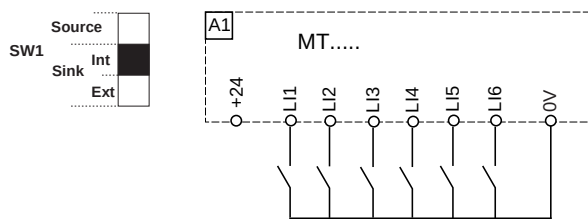

- SW1 switch set to "Ext Sink" position

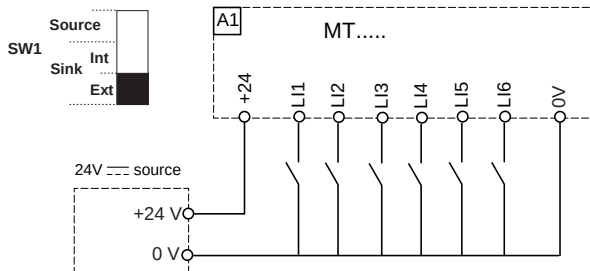

WARNING


Unintended equipment operation

- When the SW1 switch is set to "Int Sink" or "Ext Sink", the common must never be connected to ground or the protective ground, as there is then a risk of accidental starting on the first insulation fault.


Failure to follow this instruction can result in death or serious injury.

Connection diagrams

Bipolar speed reference

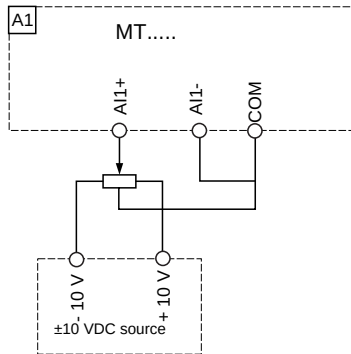


Speed reference using axis control

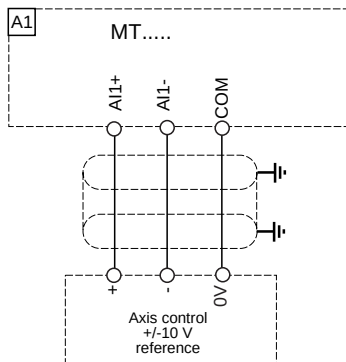

SW2 switch


The LI6 logic input switch (SW2) makes it possible to use the LI6 input:

- either as a logic input by setting the switch to LI (factory setting)
- or for motor protection via PTC probes by setting the switch to PTC

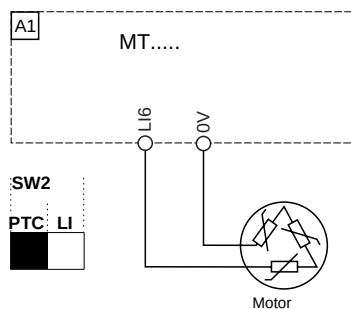

Control power supply via an external source


The control card can be supplied via an external +24VDC source

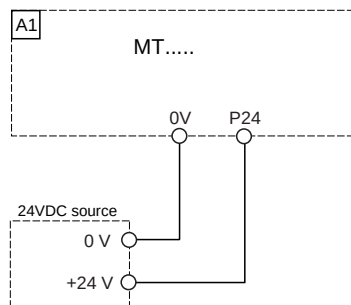


Connection diagrams

I/O extension card connection diagrams

Connection diagram for extended I/O option card (MT-VW3A3202)

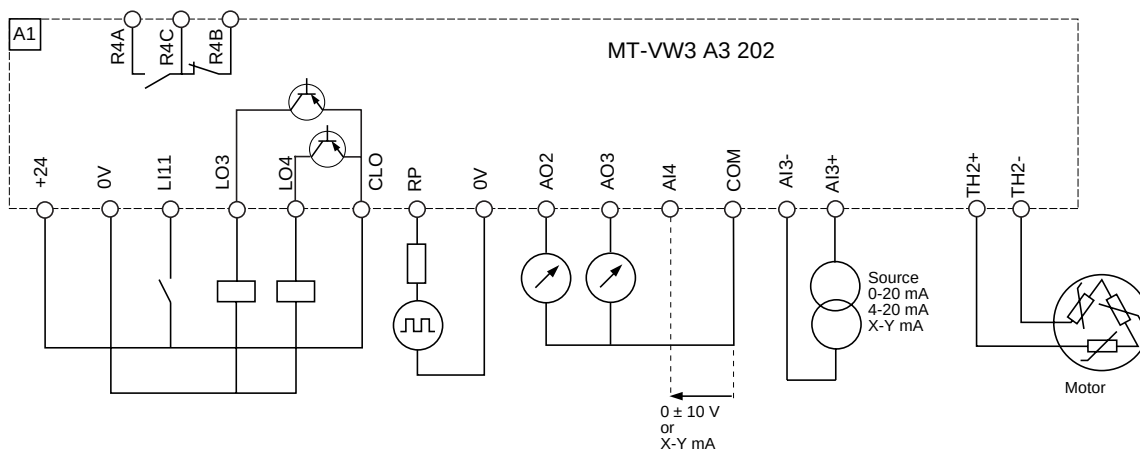

Connection diagram for logic I/O option card (VW3A3201)

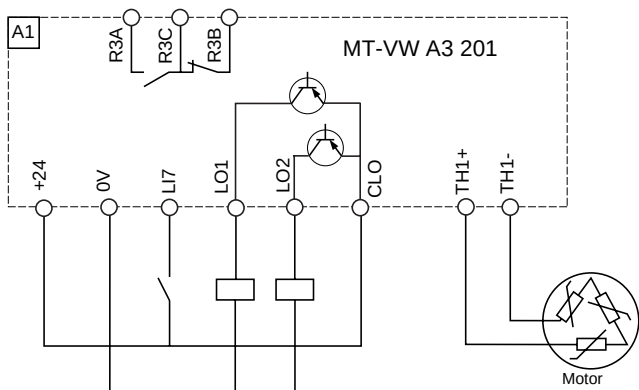


Connection diagrams

SW3/SW4 logic I/O switch


- Switch in "Source" position

SW3 or SW4

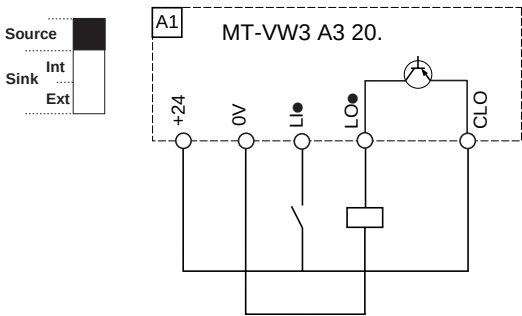


- Switch in "Source" position and use of an external +24 VDC source

SW3 or SW4

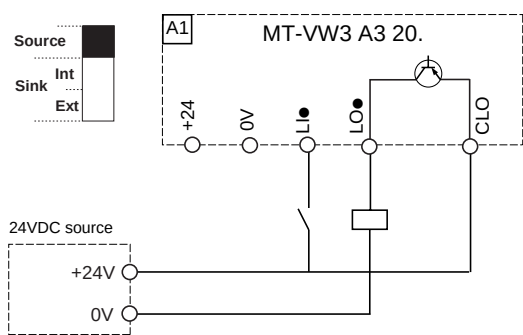


- Switch in "Int Sink" position

SW3 or SW4

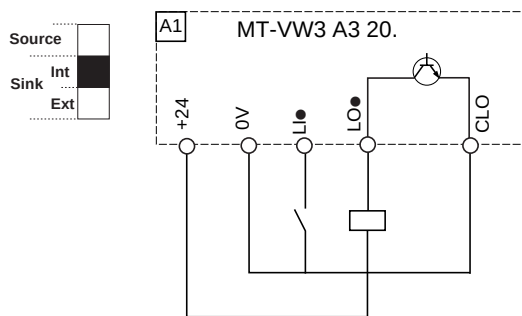

- Switch in "Ext Sink" position

SW3 or SW4

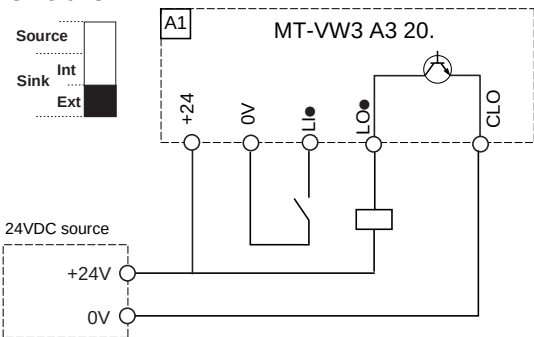

WARNING

Unintended equipment operation

- When the SW3 or SW4 switches are set to "Int Sink" or "Ext Sink", the common must never be connected to ground or the protective ground, as there is then a risk of accidental starting on the first insulation fault.


Failure to follow this instruction can result in death or serious injury.

Connection diagrams

Connection of several drives in parallel on the DC bus

Connection in parallel on the DC bus is recommended in applications for which full motor power must be guaranteed.

Each drive uses its own charging circuit

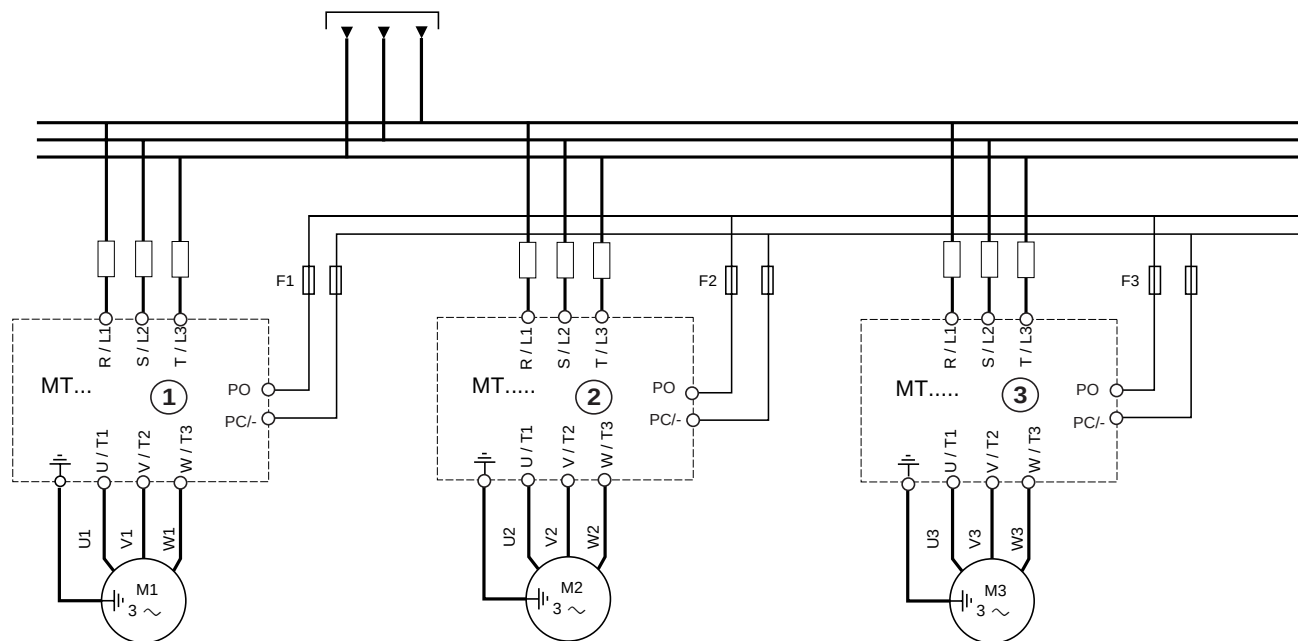

Drives ①, ② and ③ must not be more than one size apart when they are connected in this way.

F1, F2, F3: fast-acting semi-conductor fuses for protection on the DC bus side.


Operation on an IT (Isolated or impedance grounded neutral) system

IT system: Isolated or impedance grounded neutral.

Use a permanent insulation monitor compatible with non-linear loads: a Merlin Gerin type XM200 or equivalent.

MT Series drives feature built-in RFI filters. These filters can be isolated from ground for operation on an IT system as follows:

Remove the jumper located to the left of the power terminals

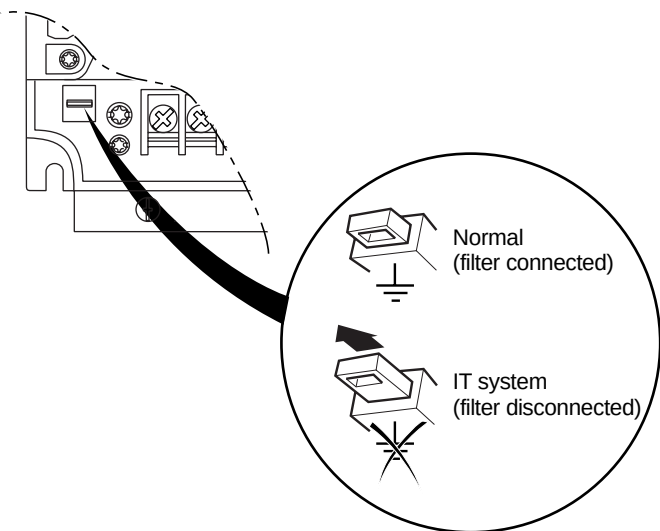

CAUTION

When the filters are disconnected, the drive switching frequency must not exceed 4 kHz. Refer to the programming manual for the corresponding parameter setting.

Failure to follow this instruction can result in material damage.

Electromagnetic compatibility, wiring

Electromagnetic compatibility (If required)


Principle

- Grounds between drive, motor and cable shielding must have "high frequency" equipotentiality.
- Use of shielded cables with shielding connected to ground at both ends for the motor cables, braking resistor (if used) and control-signaling wiring. Conduits or metal ducting can be used for part of the shielding length provided that there is no break in continuity.
- Ensure maximum separation between the power supply cable (line supply) and the motor cable.

Installation diagram

MT2P5 to MT220 and MT401 to MT425

- Attach and ground the shielding of cables **4** and **5** as close as possible to the drive:
 - Strip the shielding.
 - Use stainless metal cable clamps on the parts from which the shielding has been stripped, to attach them to the plate **2**. The shielding must be clamped tightly enough to the metal plate to ensure correct contact.
- Install the control EMC plate **11** on the sheet steel grounded plate **2**, as shown in the drawing.
- Attach and ground the shielding of cables **7**, **12** and **13** as close as possible to the drive:
 - Strip the shielding.
 - Use stainless metal cable clamps on the parts from which the shielding has been stripped, to attach them to the control EMC flange **9**. The shielding must be clamped tightly enough to the metal plate to ensure correct contact.

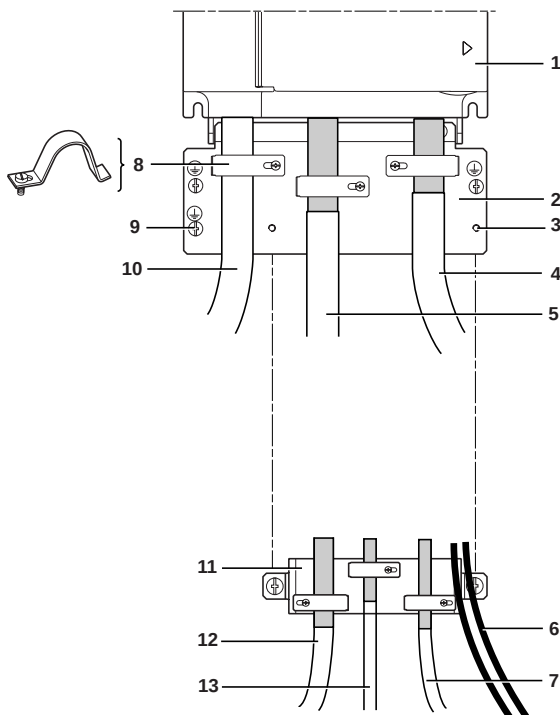

1 MT Series>

2 Sheet steel grounded plate supplied with the drive.

3 Tapped holes for installing the control EMC plate.

4 Shielded cable for motor connection, with shielding connected to ground at both ends. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

5 Shielded cable for connecting the braking resistor (if used). The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

6 Non-shielded wires for relay contact output.

7 Shielded cables for connecting the Power Removal safety function input. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

8 Metal clamps.

9 Connection to the protective ground.

10 Non-shielded power supply wires or cable.

11 Control EMC plate.

12 Shielded cables for connecting the control-signal wiring. For applications requiring several conductors, use cables with a small cross-section (0.5 mm²(AWG 20)).

13 Shielded cables for connecting the encoder. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

Note:

- If using an additional input filter, it should be fitted under the drive and connected directly to the line supply via an unshielded cable. Link **10** on the drive is then via the filter output cable.
- The HF equipotential ground connection between the drive, motor and cable shielding does not remove the need to connect the PG protective conductors (green-yellow) to the appropriate terminals on each unit.

Electromagnetic compatibility, wiring


Installation diagram

MT225 to MT260 and MT430 to MT4100

Fix and ground the shielding of cables **4** and **5** as close as possible to the drive:

- Strip the shielding.
- Use stainless metal cable clamps on the parts from which the shielding has been stripped, to attach them to the plate **2**. The shielding must be clamped tightly enough to the metal plate to ensure correct contact.

- Fix and ground the shielding of cables **6**, **7** and **8** as close as possible to the drive:
 - Strip the shielding.
 - Use stainless metal cable clamps on the parts from which the shielding has been stripped, to attach them to the drive. The shielding must be clamped tightly enough to the metal plate to ensure correct contact.

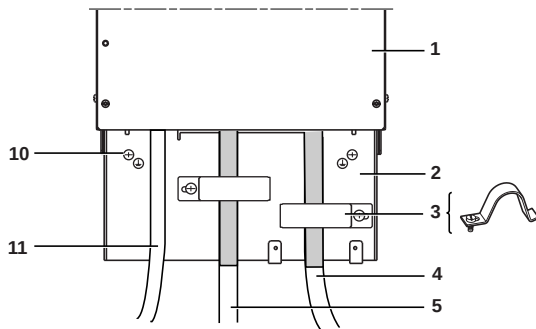

1 MT Series

2 Sheet steel grounded plate supplied with the drive.

3 Metal clamps.

4 Shielded cable for motor connection, with shielding connected to ground at both ends. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

5 Shielded cable for connecting the braking resistor (if used). The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

6 Shielded cables for connecting the control-signaling cables. For applications requiring several conductors, use cables with a small cross-section (0.5 mm²(AWG 20)).


7 Shielded cables for connecting the Power Removal safety function input. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

8 Shielded cables for connecting the encoder. The shielding must be continuous and intermediate terminals must be in EMC shielded metal boxes.

9 Non-shielded wires for relay contact output.

10 Connection to the protective ground.

11 Non-shielded power supply wires or cable.

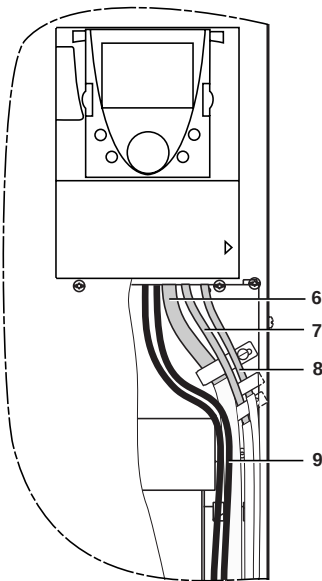

Note:

- If using an additional input filter, it should be fitted under the drive and connected directly to the line supply via an unshielded cable. Link **4** on the drive is then via the filter output cable.
- The HF equipotential ground connection between the drive, motor and cable shielding does not remove the need to connect the PE protective conductors (green-yellow) to the appropriate terminals on each unit.