

Kinetix 5700 Servo Drives

Catalog Numbers 2198-P031, 2198-P070, 2198-P141, 2198-P208, 2198-S086-ERS3, 2198-S130-ERS3, 2198-S160-ERS3, 2198-D006-ERS3, 2198-D012-ERS3, 2198-D020-ERS3, 2198-D032-ERS3, 2198-D057-ERS3, 2198T-W25K-ER 2198-CAPMOD-2240, 2198-CAPMOD-DCBUS-IO



Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

	Summary of Changes	11
	Preface	
	Conventions Used in This Manual	13
	Additional Resources	13
	Chapter 1	
Start	About the Kinetix 5700 Servo Drive System	16
	Drive Hardware and Input Power Configurations	18
	DC-bus Power Supply Configuration	18
	Multiple DC-Bus Power Supply Configuration	19
	8720MC-RPS Power Supply Configuration	20
	Extended DC-bus Configuration	21
	iTRAK Power Supply Configuration.....	22
	Motor and Auxiliary Feedback Configurations	23
	Typical Communication Configurations.....	24
	Linear Topology.....	24
	Ring Topology	25
	Star Topology	26
	Safe Torque-off Configurations	27
	Hardwired Configuration.....	27
	Integrated Safety Configurations.....	28
	Catalog Number Explanation	30
	Agency Compliance	31
	Chapter 2	
Plan the Kinetix 5700 Drive System Installation	System Design Guidelines.....	34
	System Mounting Requirements	34
	Transformer Selection	35
	Circuit Breaker/Fuse Selection	35
	Contactor Specifications	36
	Enclosure Selection	37
	Minimum Clearance Requirements	38
	Electrical Noise Reduction	40
	Bonding Modules.....	40
	Bonding Multiple Subpanels.....	42
	Establishing Noise Zones.....	43
	Cable Categories for Kinetix 5700 Systems	44
	Noise Reduction Guidelines for Drive System Accessories.....	45
	Chapter 3	
Mount the Kinetix 5700 Drive System	Determine Mounting Order	50
	Mounting Capacitor Modules	52
	Zero-stack Tab and Cutout.....	54

Shared-bus Connection System.....	54
DC-bus Connection System.....	54
24V Input Power Connection System.....	55
Drill-hole Patterns	56
Drill-hole Pattern Calculations	57
Drill-hole Patterns by Using the System Mounting Toolkit ...	58
Mount Your Kinetix 5700 Drive Modules.....	61

Chapter 4

Connector Data and Feature Descriptions

Kinetix 5700 Connector Data.....	64
Safe Torque-off Connector Pinout.....	68
Input Power Connector Pinouts.....	68
DC Bus and Shunt Resistor Connector Pinouts.....	69
Digital Inputs Connector Pinouts.....	69
Ethernet Communication Connector Pinout	71
Motor Power, Brake, and Feedback Connector Pinouts.....	71
Motor Feedback Connector Pinouts	72
Universal Feedback Connector Pinouts	73
Understand Control Signal Specifications.....	74
Digital Inputs	74
Ethernet Communication Specifications	75
Contactor Enable Relay	76
Motor Brake Circuit.....	76
Control Power	78
Feedback Specifications.....	79
Encoder Feedback Supported on the DSL Feedback Connector	79
Encoder Feedback Supported on the UFB Feedback Connector	79
Auxiliary Feedback Specifications.....	86
Encoder Phasing Definitions	88
Absolute Position Feature	89
Safe Torque-off Safety Features.....	90
Hardwired STO Mode.....	90
Integrated STO Mode	90

Chapter 5

Connect the Kinetix 5700 Drive System

Basic Wiring Requirements	92
Routing the Power and Signal Cables.....	92
Determine the Input Power Configuration.....	93
Grounded Power Configurations	93
Ungrounded Power Configurations.....	95
Remove the Grounding Screws/Jumper in Select Power Configurations.....	96
Grounding the Drive System	97
Ground the System Subpanel	98
Ground Multiple Subpanels.....	99
Wiring Requirements.....	100

Wiring Guidelines.....	103
Wiring the Power Connectors.....	103
Wire the 24V Control Power Input Connector	103
Wire the Input Power Connector.....	105
Wire the Contactor Enable Connector.....	106
Wiring the Digital Input Connectors	107
Wire the Safe Torque-off Connector.....	107
Wire the Digital Inputs Connector	108
Wiring Single Cables	109
Maximum Cable Lengths	109
Motor Power and Brake Connections	109
Motor Feedback Connections	112
Apply the Single Motor Cable Shield Clamp.....	113
Wiring Power/Brake and Feedback Cables	115
Motor Power and Brake Cables	115
Motor Power and Brake Connections	116
Motor Power/Brake Cable Series Change.....	116
Maximum Cable Lengths	117
Dual-axis Inverter Power/Brake Cable Installation	117
Single-axis Inverter Power/Brake Cable Installation	121
Motor Feedback Connections	123
Capacitor Module Connections	129
External Passive-shunt Connections	131
External Active-shunt Connections.....	132
Bulletin VPC Motors and the Extended Speed Feature	132
Considerations for Powerohm Shunt Installation	133
Ethernet Cable Connections	134

Chapter 6

Configure and Start the Kinetix 5700 Drive System

Understand the Kinetix 5700 Display.....	136
Menu Screens	137
Setup Screens	139
Startup Sequence	143
Configure the Drive	144
Set the Network Parameters.....	144
Studio 5000 Logix Designer	144
Kinetix 5700 Add-On Profile.....	144
Install the Kinetix 5700 Add-On Profile.....	145
Configure the Logix5000 Controller.....	146
Configure the Kinetix 5700 Drive Modules	151
Configure the DC-bus Power Supply.....	151
Configure the Inverter Drives	155
Continue Inverter Configuration	160
Configure the Motion Group	162
Configure Feedback-only Axis Properties	163
Configure Induction-motor Frequency-control Axis Properties ..	165
General and Motor Categories.....	165

Basic Volts/Hertz Method	167
Sensorless Vector Method	169
Fan/Pump Volts/Hertz Method	172
Configure IPM Motor Closed-loop Control Axis Properties	174
Configure SPM Motor Closed-loop Control Axis Properties	178
Configure Induction-motor Closed-loop Control Axis Properties	182
Configure Feedback Properties	189
Configure Module Properties	189
Configure Axis Properties	190
Download the Program	194
Apply Power to the Kinetix 5700 Drive System	195
Understand Bus-sharing Group Configuration	196
Bus-sharing Group Example	196
Configure Bus-sharing Groups	198
Test and Tune the Axes	199
Test the Axes	199
Tune the Axes	202

Chapter 7

Troubleshoot the Kinetix 5700 Drive System

Safety Precautions	207
Interpret Status Indicators	208
Display Interface	208
Fault Codes	208
SAFE FLT Fault Codes	216
Kinetix 5700 Status Indicators	217
Kinetix 5700 Capacitor Module Status Indicators	218
General Troubleshooting	218
Logix5000 Controller and Drive Module Behavior	220
DC-bus Power Supply Behavior	221
iTRAK Power Supply Behavior	223
Inverter Behavior	224
NODE FLT Fault Codes	226

Chapter 8

Remove and Replace Drive Modules

Before You Begin	227
Remove and Replace Kinetix 5700 Drive Modules	228
Remove Power and All Connections	228
Remove the Drive Module	231
Replace the Drive Module	231
Start and Configure the Drive Module	232

Chapter 9

Kinetix 5700 Safe Torque-off Function

Overview	233
Certification	233
Probability of Dangerous Failure Per Hour	234
Safe Torque-off Feature	235

Out of Box State.....	236
Safe Torque-off Status	239
Explicit Messages	240
Hardwired Safe Torque-off	242
Compatible Controllers.....	242
Description of Operation	242
Troubleshoot the Safe Torque-off Function	243
Safe Torque-off Connector Data.....	245
Wire the Safe Torque-off Circuit	246
Safe Torque-off Wiring Requirements.....	247
Safe Torque-off Feature Bypass	248
Cascade the Safe Torque-off Signal.....	249
Hardwired Safe Torque-off Electrical Specifications	250
Integrated Safe Torque-off.....	251
Compatible Safety Controllers.....	251
Safety Application Requirements	251
Description of Operation	252
Safe Torque-off Assembly Tags	253
STO Fault Reset.....	255
Troubleshoot the Safe Torque-off Function	256
Understand Integrated Safety Drive Replacement	256
Replace an Integrated Safety Drive in a GuardLogix System ..	257
Motion Direct Commands in Motion Control Systems.....	258
Integrated Safe Torque-off Specifications.....	265

Appendix A

Interconnect Diagrams

Interconnect Diagram Notes	267
Power Wiring Examples	269
Capacitor Module Status Wiring Example.....	280
Passive Shunt Resistor Wiring Examples	281
Kinetix 5700 Servo Drive and Rotary Motor Wiring Examples...	282
Kinetix 5700 Servo Drive and Linear Actuator Wiring Examples.	287
System Block Diagrams	292

Appendix B

Upgrade the Drive Firmware

Before You Begin.....	298
Configure Logix5000 Controller Communication	299
Inhibit Feedback Only Axis	300
Upgrade Firmware	301
Verify the Firmware Upgrade	305

Appendix C

Size Multi-axis Shared-bus Configurations

Shared-bus Configurations.....	307
Shared-bus Definitions.....	307
General Sizing Guidelines	309
System Sizing Guidelines.....	309

Select Drive/Motor Combinations.....	310
Select the Power Supply and Define the DC-bus Groups.....	310
Calculate Total System Capacitance.....	310
Calculate the Total Motor Power Cable Length.....	311
Calculate 24V DC Control Power Current Demand	312
System Sizing Example.....	313
System Sizing Application Example.....	314

Appendix D

Motor Control Feature Support

Frequency Control Methods	316
Basic Volts/Hertz	317
Basic Volts/Hertz for Fan/Pump Applications	318
Sensorless Vector	319
Current Limiting for Frequency Control.....	320
The Effects of Current Limiting	320
Enable the Current Limiting Feature.....	322
Set the CurrentVectorLimit Attribute Value.....	322
Stability Control for Frequency Control	323
Enable the Stability Control Feature	324
Skip Speeds	325
Multiple Skip Speeds.....	326
Flux Up	327
Flux Up Attributes	328
Configure the Flux Up Attributes.....	329
Current Regulator Loop Settings	330
Motor Category.....	330
Motor Tests and Autotune Procedure.....	332
Motor Analyzer Category Troubleshooting.....	333
Selection of Motor Thermal Models	335
Generic Motors	335
Thermally Characterized Motors	336
Speed Limited Adjustable Torque (SLAT)	337
Motion Polarity Setting	337
SLAT Min Speed/Torque.....	338
SLAT Max Speed/Torque.....	339
SLAT Attributes	339
Configure the Axis for SLAT	340
Motor Overload Retention.....	343
Torque Proving	344
Torque Proving Attributes	344
Torque Proving Configuration	345
Torque Proving Current Example.....	346
Velocity Droop	347
Closed Loop Control	347
Frequency Control	347
Velocity Droop Attribute	347
Velocity Droop Configuration.....	348

Commutation Test.....	349
Adaptive Tuning.....	349
Extended Speed.....	350
Extended Speed Feature.....	350
Configure Extended Speed Operation.....	351

Appendix E

EC Certifications

EC Type - Examination Certificate	353
EU Declaration of Conformity.....	354
European Union Directives	354
CE Conformity	354
EMC Directive.....	354
Low Voltage Directive	354

Index.....	355
-------------------	------------

Notes:

This manual contains new and updated information as indicated in the following table.

Table 1 - New and Updated Information

Topic	Page
Added Bulletin 2198T iTRAK® power supply, connector kits, and power cable; Bulletin 2198 encoder output emulator; Kinetix® VP (Bulletin VPC) continuous-duty motors; and external active shunt modules.	16
Added a typical iTRAK power supply configuration.	22
Added Kinetix VP (Bulletin VPC) motors to motor and auxiliary feedback configurations.	23
Added the 2198-ABQE Encoder Output Emulator module to typical communication configurations.	24...26
Added the CompactLogix™ 5380 controller to safe torque-off configurations.	27 and 29
Added iTRAK power supply and connector kit catalog numbers to tables.	30
Updated drive system pollution degree 2 and IP20 specifications.	34
Updated input power IEC (non UL/CSA) circuit protection specifications with Bulletin 140MG catalog numbers replacing obsolete Bulletin 140-CMN catalog numbers.	36
Added iTRAK power supply to mounting order specifications.	50
Added iTRAK power supply drill-hole specifications.	56
Added iTRAK power supply features and indicators.	67
Added Registration Accuracy value to digital input specifications table.	75
Corrected auxiliary feedback (UFB connector) pinout table.	87
Updated Absolute Position table and figure with Bulletin VPC multi-turn encoder motors and made corrections to other motor/actuator specifications where needed.	89
Added iTRAK power supply wiring requirements.	100
Updated Wiring Single Cables with Bulletin VPC-Bxxxxx-Q motors.	109
Updated Wiring Power/Brake and Feedback Cables with Bulletin VPC-Bxxxxx-S and VPC-Bxxxxx-Y motors.	115
Updated Feedback Cable Length table with 9V EnDat encoders.	117
Added Bulletin VPC-Bxxxxx-S and VPC-Bxxxxx-Y motors to Compatible Motors table.	123
Added Bulletin VPC-Bxxxxx-S and VPC-Bxxxxx-Y motors to Feedback Cables pinout tables.	127
Added Powerohm catalog numbers and support for Bulletin VPC motors.	132 and 133
Added iTRAK power supply LCD display navigation menu settings.	138 and 142
Added Protected Mode menu settings to LCD display navigation tables.	140 and 141
Updated Kinetix 5700 Add-on Profile information for drive firmware 7.001	144
Updated dialog boxes with active attributes for drive firmware 7.001, removed work-around procedures, and added CurrentVectorLimit parameter to steps.	167...173
Added Configure IPM Motor Closed-loop Control Axis Properties.	174...177
Changed heading to Configure SPM Motor Closed-loop Control Axis Properties.	178
Added Bulletin VPC-Bxxxxx-S and VPC-Bxxxxx-Y motors to Motor Feedback Compatibility table.	190
Added iTRAK power supply to Apply Power procedure.	195
Updated Marker description to clarify meaning.	200
Updated fault codes with troubleshooting information for the iTRAK power supply. Also, added information about software overtravel detection.	208
Updated FLT S47 FDBK DEVICE FAILURE with Hipurface Feedback sub-codes.	212

Table 1 - New and Updated Information (continued)

Topic	Page
Updated General Troubleshooting with Adaptive Tuning attributes.	218
Added iTRAK Power Supply Behavior tables.	223
Updated Configurable Stopping Actions table with footnote for Current Limiting feature.	224
Updated Drive Behavior fault codes with new applicable codes for induction motors.	224
Added iTRAK power supply to Remove and Replace Kinetix 5700 Drive Modules.	228
Removed duplicate content and replaced with reference to source, publication 1756-UM022 and publication 1769-UM022 .	257
Updated Motor Overload Retention to help clarify the MotorCapacity attribute.	343
Added iTRAK power supply interconnect diagrams.	271 and 272
Added VPC-Bxxxx-Q, VPL-Bxxxx-Q, VPL-Bxxxx-W, VPF-Bxxxx-Q, and VPF-Bxxxx-W to the Kinetix VP motors interconnect diagram.	282
Added VPC-Bxxxx-S motors to the MP-Series motors interconnect diagram.	284
Added VPC-Bxxxx-Y motors interconnect diagram.	283
Added the iTRAK power supply block diagram.	295
Updated system requirements with important axis-state information for DC-bus power supplies, Protected Mode, and the iTRAK power supply.	298
Updated System Sizing Guidelines with iTRAK power supply information.	309
Updated Current Limiting for Frequency Control with changes in drive firmware 7.001.	320...322
Updated Current Regulator Loop Settings with rotary interior permanent-magnet motor type bandwidth value.	330
Corrected Zero-speed Skip Frequency figure by swapping legend descriptions.	326
Corrected Motor Category introductory text to read 'rotary induction motors'.	330
Updated Motor>Model Category text with changes in drive firmware 7.001.	330
Updated Motor Tests and Autotune Matrix table with changes in drive firmware 7.001.	332
Updated Motor Analyzer Category Troubleshooting with changes in drive firmware 7.001.	333
Added Motion Polarity Setting with changes in drive firmware 7.001.	337
Corrected error in SLAT min/max Speed/Torque figures.	338 and 339
Updated Motor Overload Retention with changes in drive firmware 7.001.	343
Added the Extended Speed feature with drive firmware 7.001.	350

This manual provides detailed installation instructions for mounting and wiring your Kinetix® 5700 power supplies, single-axis inverters, dual-axis inverters, and capacitor modules. Also included is system configuration with the Studio 5000 Logix Designer® application, integration of your drive modules with a Logix5000™ controller, system startup, and troubleshooting.

Also provided in this manual are installation instructions for mounting and wiring input power for your iTRAK® power supply. For wiring iTRAK digital inputs, outputs to the motor modules, and startup, troubleshooting, and commissioning with the AOI, see the iTRAK System User Manual, publication [2198T-UM001](#).

This manual is intended for engineers or technicians directly involved in the installation and wiring of the Kinetix 5700 drive modules, and programmers directly involved in the operation, field maintenance, and integration of these modules with the EtherNet/IP™ communication module or controller.

If you do not have a basic understanding of Kinetix 5700 drive modules, contact your local Rockwell Automation sales representative for information on available training courses.

Conventions Used in This Manual

These conventions are used throughout this manual:

- Bulleted lists such as this one provide information, not procedural steps
- Numbered lists provide sequential steps or hierarchical information

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Table 2 - Additional Resources

Resource	Description
Kinetix Rotary Motion Specifications Technical Data, publication KNX-TD001	Product specifications for Kinetix VP (Bulletin VPL, VPC, VPF, and VPS), MP-Series™ (Bulletin MPL, MPM, MPF, and MPS), and HPK-Series™ rotary motors.
Kinetix Linear Motion Specifications Technical Data, publication GMC-TD002	Product specifications for Bulletin MPAS and MPMA linear stages, Bulletin MPAR and MPAL electric cylinders, LDAT-Series linear thrusters, and LDC-Series™ linear motors.
Kinetix Servo Drives Specifications Technical Data, publication KNX-TD003	Product specifications for Kinetix Integrated Motion over the EtherNet/IP network, Integrated Motion over sercos interface, EtherNet/IP networking, and component servo drive families.
Kinetix Motion Accessories Specifications Technical Data, publication KNX-TD004	Product specifications for Bulletin 2090 motor and interface cables, low-profile connector kits, drive power components, and other servo drive accessory items.
Kinetix 5000 AC Line Filter Installation Instructions, publication 2198-IN003	Information on installing and wiring the Kinetix 5500 and Kinetix 5700 AC line filters.
Kinetix 5700 Capacitor Modules Installation Instructions, publication 2198-IN008	Information on installing and wiring the Kinetix 5700 capacitor modules.
Kinetix 5700 Shunt Passive Modules Installation Instructions, publication 2198-IN011	Information on installing and wiring Kinetix 5700 passive shunts.
iTRAK System User Manual, publication 2198T-UM001	Information on installing the Kinetix 5700 iTRAK power supply with an iTRAK system and programming the iTRAK system.

Table 2 - Additional Resources (continued)

Resource	Description
1321 Power Conditioning Products Technical Data, publication 1321-TD001	Information on typical use cases, specifications, terminations, and dimensions of Bulletin 1321 line reactors.
8720MC Regenerative Power Supply Installation Manual, publication 8720MC-RM001	Information on installing, wiring, and startup for the 8720MC regenerative power supply with 380...460V AC operation.
System Design for Control of Electrical Noise Reference Manual, publication GMC-RM001	Information, examples, and techniques designed to minimize system failures caused by electrical noise.
Kinetix Motion Control Selection Guide, publication KNX-SG001	Overview of Kinetix servo drives, motors, actuators, and motion accessories designed to help make initial decisions for the motion control products best suited for your system requirements.
Kinetix 5700 Drive Systems Design Guide, publication KNX-RM010	System design guide to select the required (drive specific) drive module, power accessory, feedback connector kit, and motor cable catalog numbers for your Kinetix 5700 drive system.
Rockwell Automation® Product Selection website http://www.rockwellautomation.com/global/support/selection.page	Online product selection and system configuration tools, including AutoCAD (DXF) drawings.
Motion Analyzer System Sizing and Selection Tool website https://motionanalyzer.rockwellautomation.com/	Comprehensive motion application sizing tool used for analysis, optimization, selection, and validation of your Kinetix Motion Control system.
Product Certifications website, http://www.rockwellautomation.com/global/certification/overview.page	Provides declarations of conformity, certificates, and other certification details.
Integrated Motion on the EtherNet/IP Network Configuration and Startup User Manual, publication MOTION-UM003	Information on configuring and troubleshooting your ControlLogix® and CompactLogix™ EtherNet/IP network modules.
Integrated Motion on the EtherNet/IP Network Reference Manual, publication MOTION-RM003	Information on the AXIS_CIP_DRIVE attributes and the Studio 5000 Logix Designer application Control Modes and Methods.
Motion System Tuning Application Techniques, publication MOTION-AT005	Information on tuning a Kinetix drive system.
GuardLogix® 5570 Controllers User Manual, publication 1756-UM022	Information on designing, installing, programming, or troubleshooting control systems that use GuardLogix 5570 controllers.
GuardLogix 5570 Controller Systems Safety Reference Manual, publication 1756-RM099	Information for development, operation, or maintenance of a GuardLogix 5570 controller-based safety system that uses the Studio 5000 Logix Designer application.
ControlFLASH Firmware Upgrade Software User Manual, publication 1756-UM105	For ControlFLASH™ information not specific to any drive family.
Rockwell Automation Industrial Automation Glossary, publication AG-7.1	A glossary of industrial automation terms and abbreviations.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Start

Use this chapter to become familiar with the design and installation requirements for Kinetix® 5700 drive systems.

Topic	Page
About the Kinetix 5700 Servo Drive System	16
Drive Hardware and Input Power Configurations	18
Motor and Auxiliary Feedback Configurations	23
Typical Communication Configurations	24
Safe Torque-off Configurations	27
Catalog Number Explanation	30
Agency Compliance	31

About the Kinetix 5700 Servo Drive System

The Kinetix 5700 drive modules are zero-stacked and use the shared-bus connection system to extend power from one drive module to another. Systems are designed to support Integrated Motion over the EtherNet/IP™ network.

Table 3 - Kinetix 5700 Drive System Overview

Drive System Component	Cat. No.	Description
Kinetix 5700 DC-bus Power Supply	2198-Pxxx	Converter power supply with 400V-class (three-phase) AC input. Typical systems consist of 1...3 modules. Additional modules increase power output to Bulletin 2198 single-axis and dual-axis inverters.
Kinetix 5700 Single-axis Servo Drives	2198-Sxxx-ERS3	Single-axis inverters with current ratings up to 85 A rms. Drives feature TÜV certified safe torque-off function with hardwired and integrated safety connection options, PLe and SIL CL3 safety ratings, and support DSL and Hiperface encoder feedback.
Kinetix 5700 Dual-axis Servo Drives	2198-Dxxx-ERS3	Dual-axis inverters with current ratings up to 23 A rms. Drives feature TÜV certified safe torque-off function with hardwired and integrated safety connection options, PLe and SIL CL3 safety ratings, and support DSL and Hiperface encoder feedback.
Kinetix 5700 iTRAK Power Supply	2198T-W25K-ER	DC-DC converter that generates DC-bus power for iTRAK systems.
Kinetix 5700 Capacitor Module	2198-CAPMOD-2240	Use for energy storage and to extend the DC-bus voltage to another inverter cluster. Modules are zero-stacked with servo drives and use the shared-bus connection system to extend the external DC-bus in applications up to 100A.
Kinetix 5700 Extension Module	2198-CAPMOD-DCBUS-IO	The extension module, paired with a capacitor module, is used to extend the DC-bus voltage to another inverter cluster in the Kinetix 5700 drive system.
Regenerative Power Supply	8720MC-RPSxxx	Sinusoidal PWM converter that can control the increase of DC-bus voltage and perform continuous power generation for one or more servo drives in multi-axis DC common-bus configurations.
Line Reactors	1321-3R80-B 1321-3RA80-B	Bulletin 1321 line reactors help keep equipment running longer by absorbing many of the power line disturbances that can shut down your power supply.
Shared-bus Connector Kits	2198-TCON-24VDCIN36 2198-xxxx-P-T 2198-BARCON-xxDCAC100	24V input wiring connectors, T-connectors, and bus-bars for the Kinetix 5700 drive system 24V shared-bus connection system (optional).
	2198T-W25K-P-IN 2198T-W25K-P-T	24V input wiring connector, T-connector, and bus-bar for the iTRAK motor module 24V shared-bus connection system (optional).
	2198-BARCON-xxDC200 2198-KITCON-ENDCAP200	DC-bus links (55, 85, and 100 mm) and end caps for the DC-bus shared-bus connection system (required and included with each respective drive module).
DSL Feedback Connector Kit	2198-KITCON-DSL	Replacement DSL motor feedback connector kit with 2-pin connector plug and grounding plate inside the connector housing. Supports 400V-class Kinetix VP rotary motors. Included with 2090-CSxM1DE motor cables. Must be purchased separately when used with 2090-CSxM1DG motor cables.
Universal Feedback Connector Kit	2198-K57CK-D15M	Universal feedback connector kit for motor and auxiliary feedback connections with the 15-pin connector plug and grounding plate inside the connector housing. Supports 400V-class MP-Series™ and HPK-Series™ rotary motors, MP-Series linear actuators, LDAT-Series linear thrusters, and LDC-Series™ linear motors.
Hiperface to DSL Converter Kit	2198-H2DCK (series B or later)	Provides Hiperface-to-DSL feedback conversion for use with compatible 400V-class motors and actuators.
Connector Sets	2198-KITCON-P070	Replacement connector set for DC-bus power supplies (55 mm).
	2198-KITCON-P208	Replacement connector set for DC-bus power supplies (85 mm).
	2198-KITCON-S160	Replacement connector set for single-axis inverters (85 and 100 mm).
	2198-KITCON-D032	Replacement connector set for dual-axis inverters (55 mm).
	2198-KITCON-D057	Replacement connector set for dual-axis inverter (85 mm).
	2198-KITCON-CAPMOD2240	Replacement connector set for capacitor module.
	2198T-W25K-KITCON	Replacement connector set for iTRAK power supply.
Kinetix 5700 System Mounting Toolkit	2198-K5700-MOUNTKIT	Use to position the drive modules and identify drill-holes for mounting your Kinetix 5700 servo drive system.
Kinetix 5700 Cable Clamp Spacer Kit	2198-K5700-CLAMPSPACER	Replacement cable clamp spacers for 2198-Dxxx-ERS3 dual-axis inverters.

Table 3 - Kinetix 5700 Drive System Overview (continued)

Drive System Component	Cat. No.	Description
Logix5000™ Controller Platform	Bulletin 1769 Bulletin 5069	Integrated Motion on the EtherNet/IP network in CompactLogix™ 5370 and CompactLogix 5380 controllers and Integrated Safety in Compact GuardLogix® 5370 controllers. Linear, device-level ring (DLR), and star topology is supported.
	1756-EN2T module 1756-EN2TR module 1756-EN3TR module	EtherNet/IP network communication modules for use with ControlLogix® 5570, ControlLogix 5580, and GuardLogix 5570 controllers. Linear, device-level ring (DLR), and star topology is supported.
Encoder Output Emulator	2198-ABQE	The Allen-Bradley encoder output emulator is a DIN-rail mounted EtherNet/IP network-based standalone module capable of outputting encoder pulses to a customer-supplied peripheral device (cameras, for example, used in line-scan vision systems).
Studio 5000® Environment	N/A	Studio 5000 Logix Designer® application, version 26.00 or later, provides support for programming, commissioning, and maintaining the CompactLogix, ControlLogix, and GuardLogix controller families.
Rotary Servo Motors	Kinetix VP	Compatible motors include 400V-class Bulletin VPL, VPC, VPF, and VPS servo motors.
	MP-Series	Compatible motors include 400V-class Bulletin MPL, MPM, MPF, and MPS servo motors.
	HPK-Series	Compatible motors include 460V and 400V-class HPK-Series asynchronous servo motors.
Linear Actuators	MP-Series, LDAT-Series	Compatible actuators include 400V-class Bulletin MPAS, MPAR, MPAL linear actuators and LDAT-Series linear thrusters.
Linear Motors	LDC-Series	Compatible motors include LDC-Series iron-core (400V-class) linear motors.
Induction Motors	N/A	Induction motors with open-loop frequency control and closed-loop control are supported.
Cables	2090-CSxM1DE-xxAxxx	Bulletin 2090 single cable for motor power, feedback, and 24V DC brake power with Kinetix VP motors. Feedback conductors are wired to the 2198-KITCON-DSL feedback connector kit.
	2090-CSxM1DG-xxAxxx	Bulletin 2090 single cable for motor power, feedback, and 24V DC brake power with Kinetix VP motors. 2090-CSxM1DG cables have flying-lead feedback conductors for connection to a customer-supplied 2198-KITCON-DSL feedback connector kit.
	2090-CFBM7DF-CEAxxx	Bulletin 2090 motor feedback cables for MP-Series motors and actuators with Stegmann Hiperface encoders.
	2090-CPxM7DF-xxAxxx	Bulletin 2090 motor power/brake cables for MP-Series motors and actuators.
	2090-XXNFMF-Sxx 2090-CFBM7DF-CDAFxx	Bulletin 2090 standard and continuous-flex feedback cables that include additional conductors for use with incremental and EnDat encoders.
	2198T-CHBFLS8-12AAxx	Bulletin 2198T power cables for iTRAK power supply to iTRAK motor modules.
	1585J-M8CBJM-x	Ethernet cables are available in standard lengths. Shielded cable is required to meet EMC specifications.
AC Line Filters	2198-DB20-F, 2198-DB42-F, 2198-DB80-F, 2198-DB290-F	Bulletin 2198 three-phase AC line filters are required to meet CE and available for use in all Kinetix 5700 drive systems.
24V DC Power Supply	1606-XLxxx	Bulletin 1606 24V DC power supply for control circuitry, digital inputs, safety, and motor brake.
External Passive Shunt Resistors	2198-R014, 2198-R031, 2198-R127, 2198-R004	Bulletin 2198 external passive shunt resistors for use when the DC-bus power supply internal shunt capability is exceeded.
External Active Shunt Resistors	N/A	External active shunts from Rockwell Automation® Encompass™ Partner Powerohm Resistors, Inc. are available for connecting to Bulletin 2198 DC-bus power supplies. See External Active-shunt Connections on page 132 for catalog numbers.

Drive Hardware and Input Power Configurations


Kinetix 5700 servo drive systems have three-phase input power supplied by a single DC-bus (converter) power supply. However, for additional output power (kW) you can install two or three 2198-P208 power supplies or an 8720MC-RPS regenerative power supply. In addition, you can extend the DC-bus to another inverter cluster with capacitor modules.

DC-bus Power Supply Configuration

In this multi-axis example, AC input power is fed to the DC-bus (converter) power supply. One single-axis (inverter) module and two dual-axis (inverter) modules support five axes of motion.

Digital inputs are wired to sensors and the control circuitry at the IOD connectors. The contactor-enable relay protects the DC-bus power supply in the event of shutdown fault conditions.

Figure 1 - Typical Shared DC-bus Installation

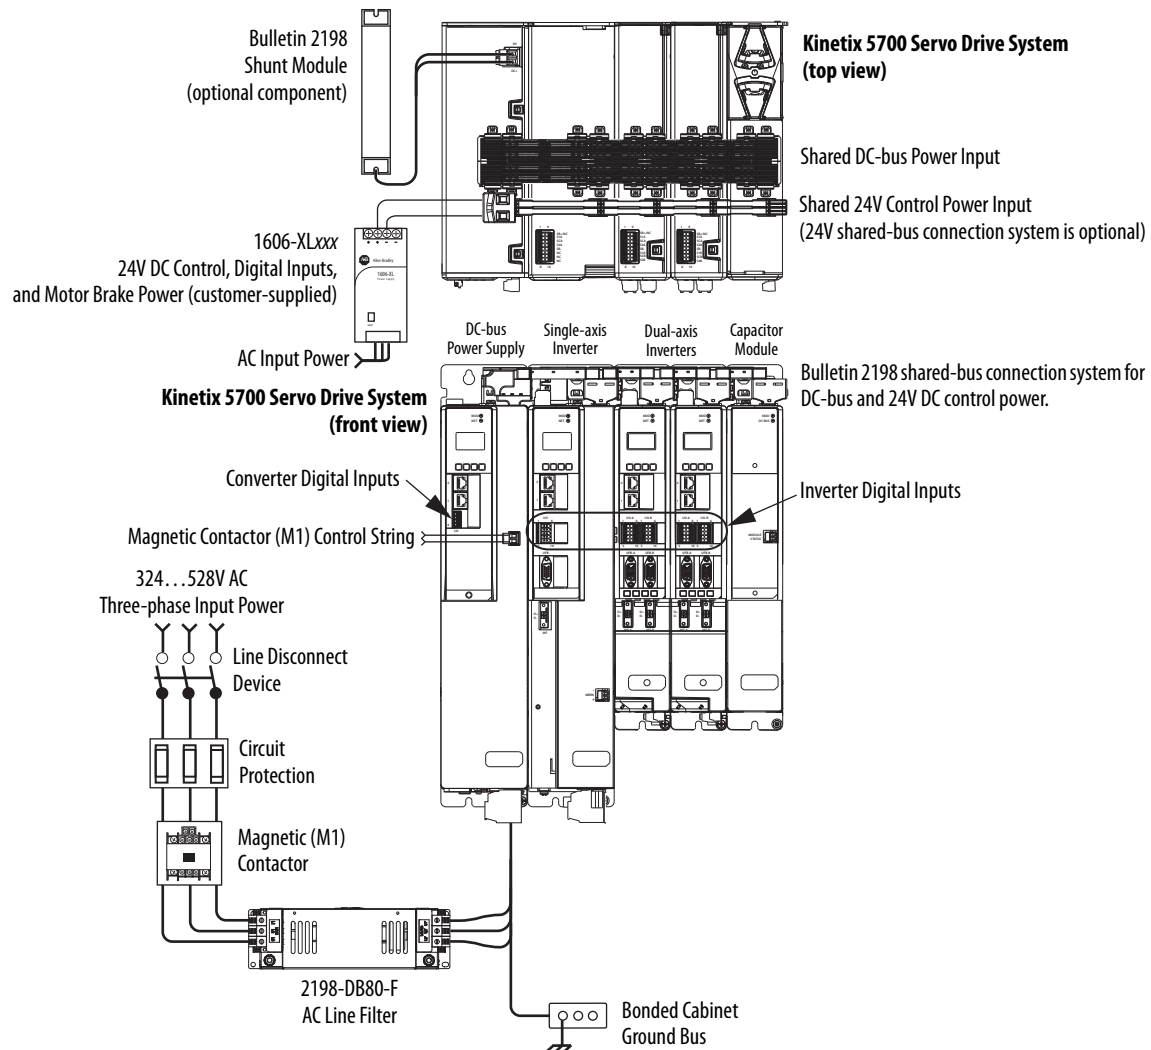


Multiple DC-Bus Power Supply Configuration

In this example, three DC-bus (converter) power supplies all receive AC input power and feed the inverter modules for increased output power.

Contactor-enable relays from each of the DC-bus power supplies are wired in series to protect the DC-bus power supply in the event of shutdown fault conditions.

Figure 2 - Multiple DC-bus Power Supply Installation

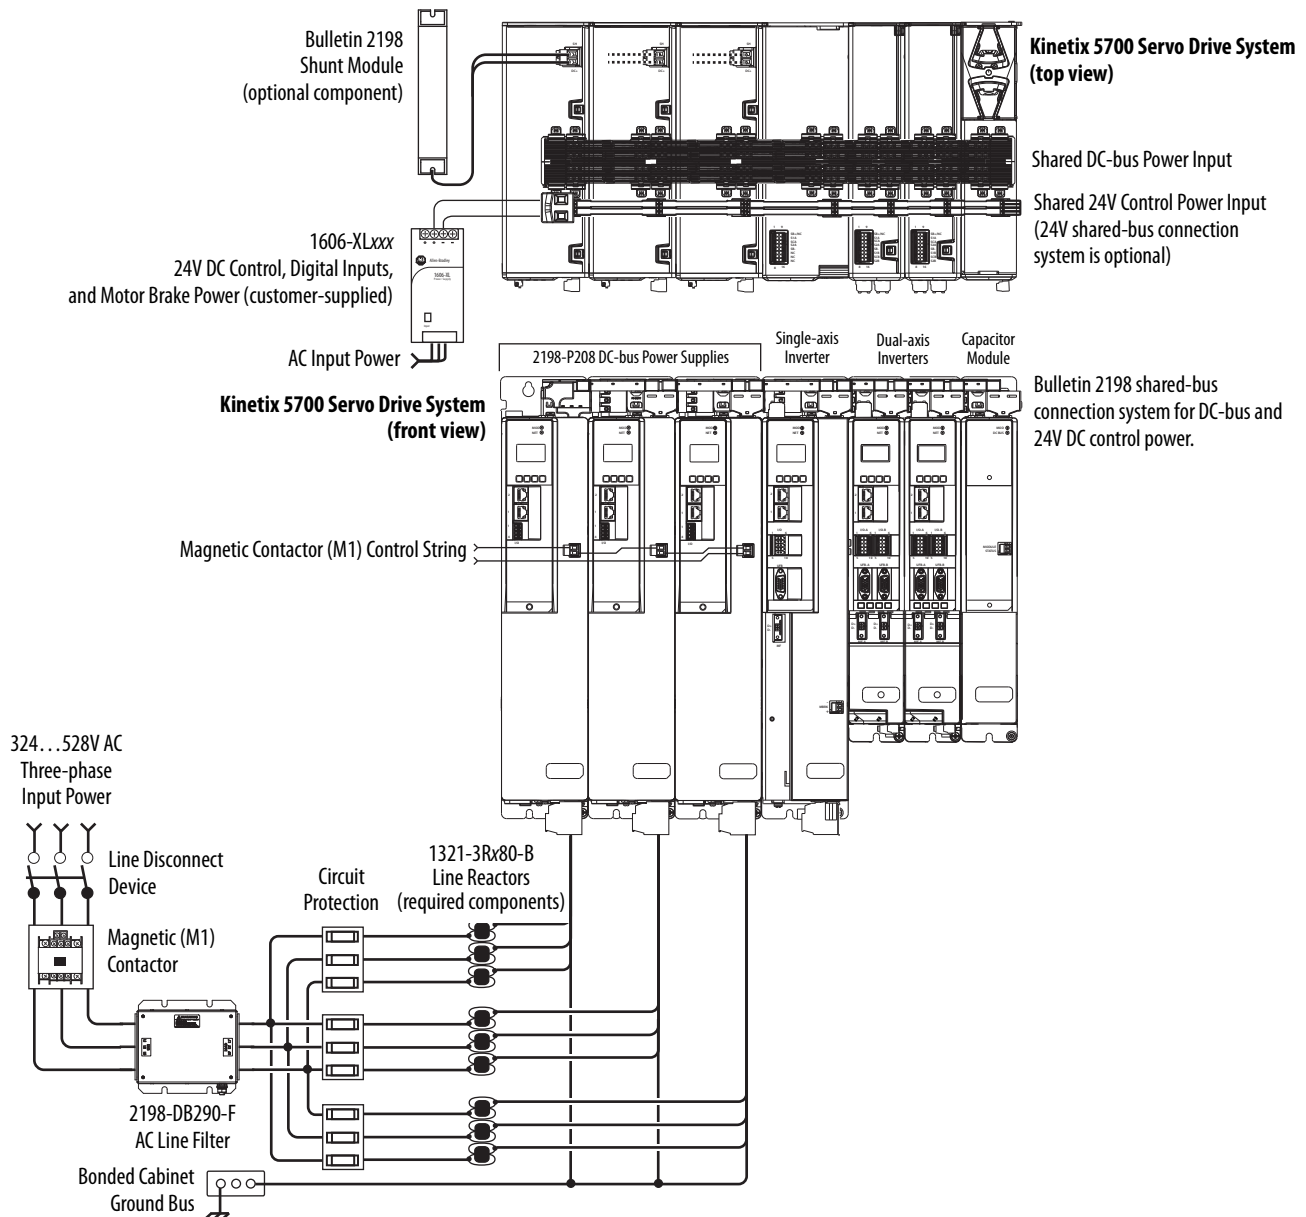


IMPORTANT When two or three DC-bus power supplies are wired together in the same drive cluster, they must all be catalog number 2198-P208.

8720MC-RPS Power Supply Configuration

In this example, three-phase AC input power is fed to the Bulletin 8720MC regenerative power supply. The 8720MC-RPS DC-bus voltage supplies the Kinetix 5700 DC-bus via the capacitor module. If the 8720MC-RPS190 is used, the 2198-CAPMOD-DCBUS-IO extension module is required. DC-bus full-regeneration is possible with this configuration.

IMPORTANT The 8720MC-RPS power supply is not compatible with the iTRAK power supply.

Figure 3 - 8720MC-RPS Power Supply Installations

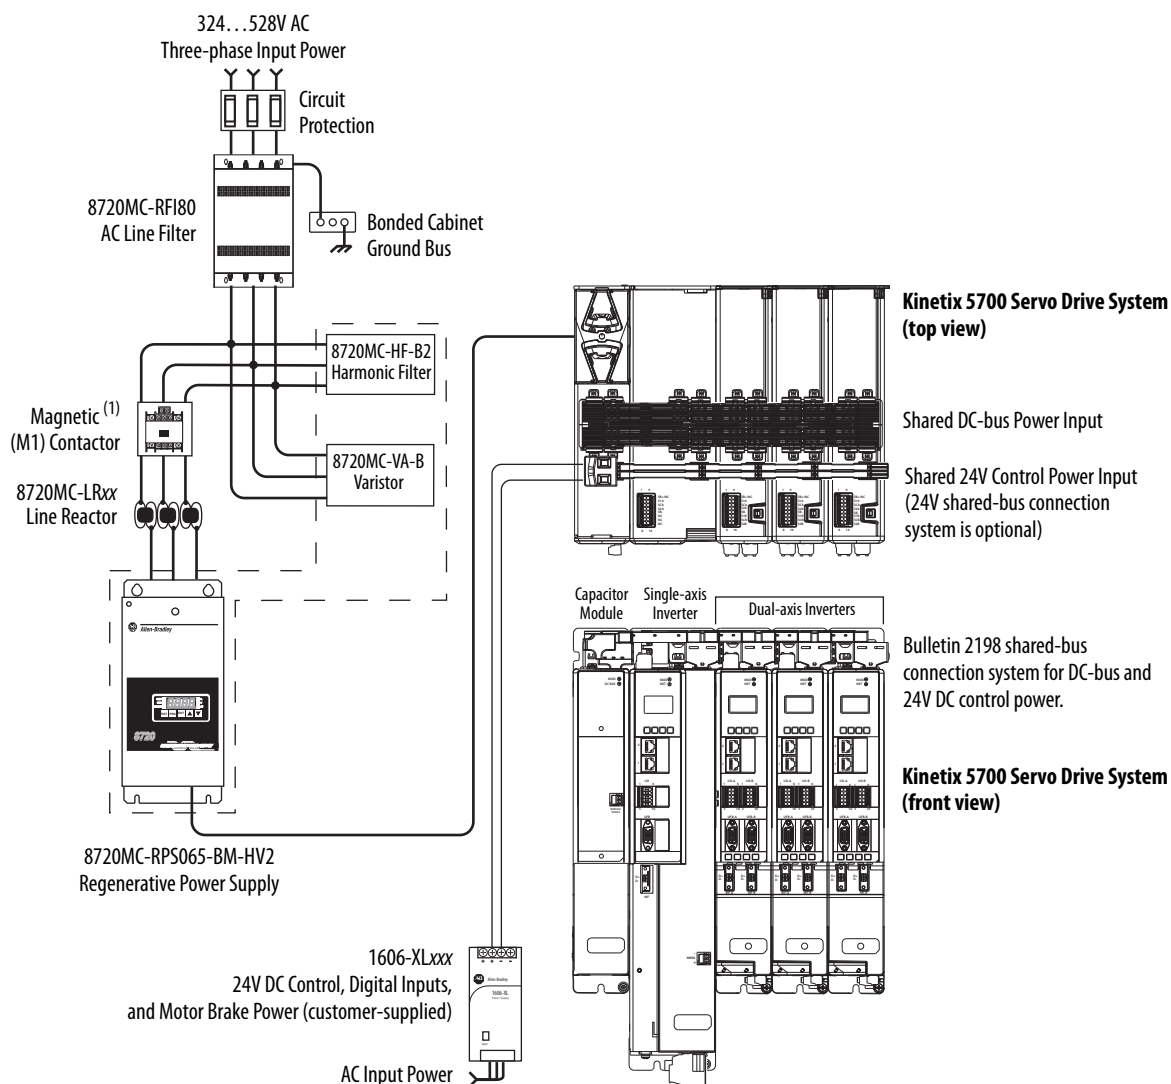


(1) This M1 contactor is controlled by the 8720MC regenerative power supply.

Extended DC-bus Configuration

In this example, two drive clusters in the same cabinet are connected by the same 450...750V DC bus voltage. Kinetix 5700 capacitor modules provide connection points for the DC bus at the end of cluster 1 and the beginning of cluster 2. The extension module is needed only when the DC-bus system current exceeds 100 A and can support up to 200 A maximum external DC-bus current.

Figure 4 - Extended DC-bus Installation

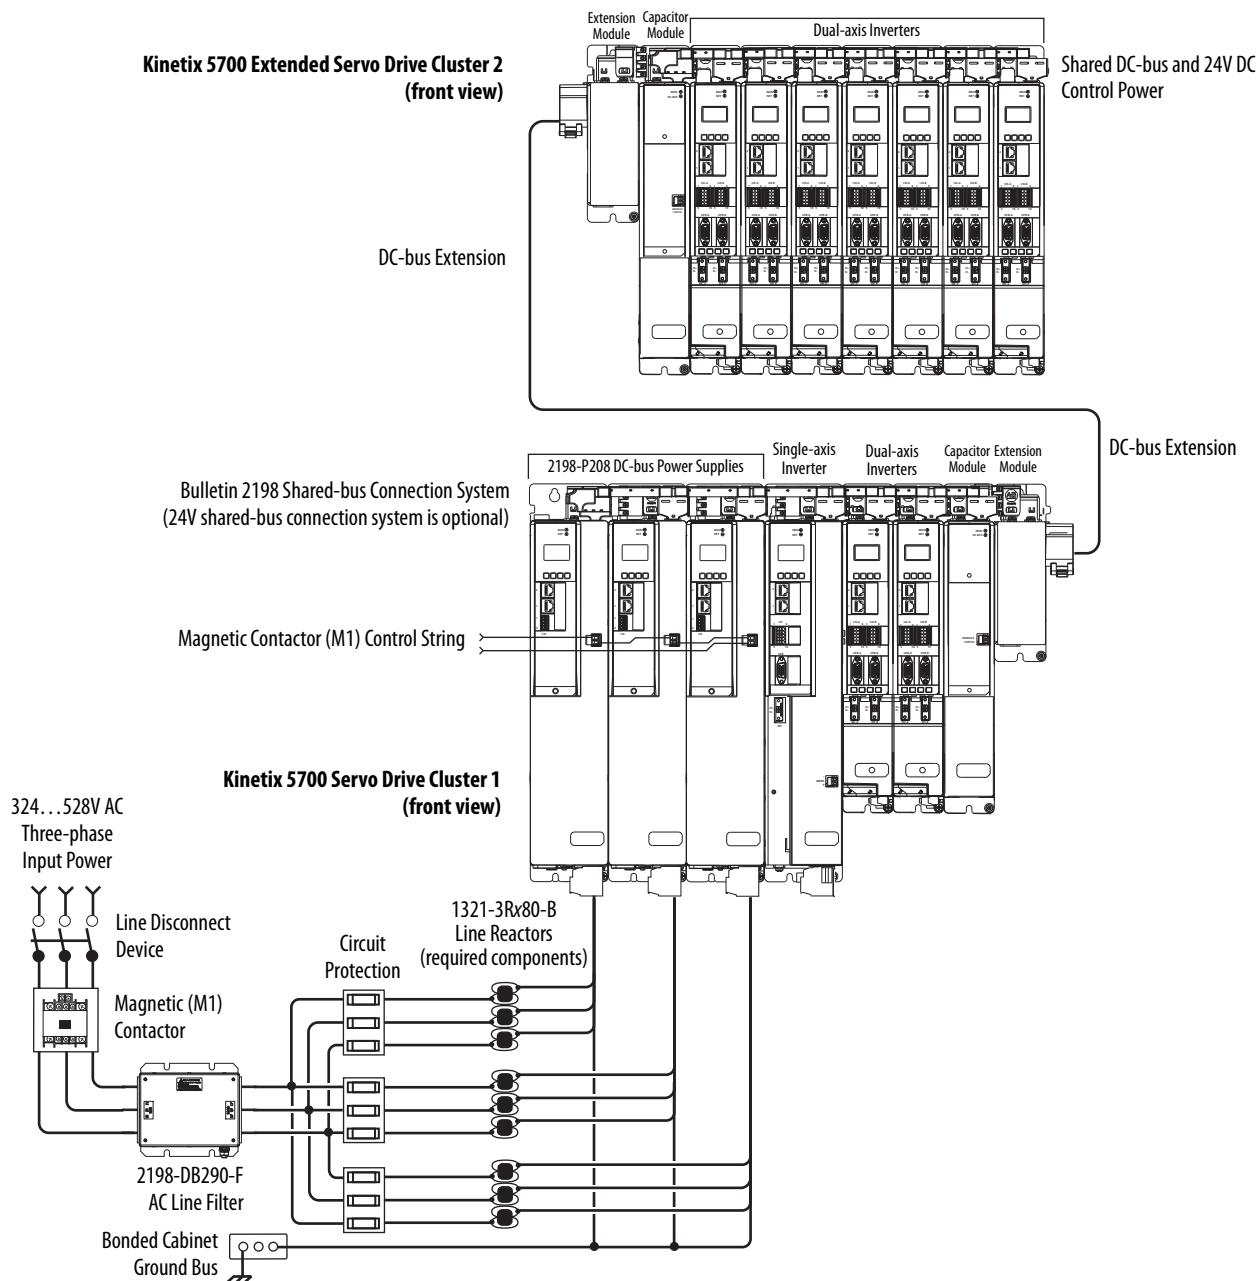


IMPORTANT When two or three DC-bus power supplies are wired together in the same drive cluster, they must all be catalog number 2198-P208.

iTRAK Power Supply Configuration

In this example, AC input power is fed to the DC-bus (converter) power supply. Two iTRAK power supplies support up to 40 iTRAK motor modules, depending on cable lengths and iTRAK motor-module power consumption.

Digital inputs are wired to sensors and the control circuitry at the IOD connectors. The contactor-enable relay protects the DC-bus power supply in the event of shutdown fault conditions.


Figure 5 - Typical iTRAK Power Supply Installation

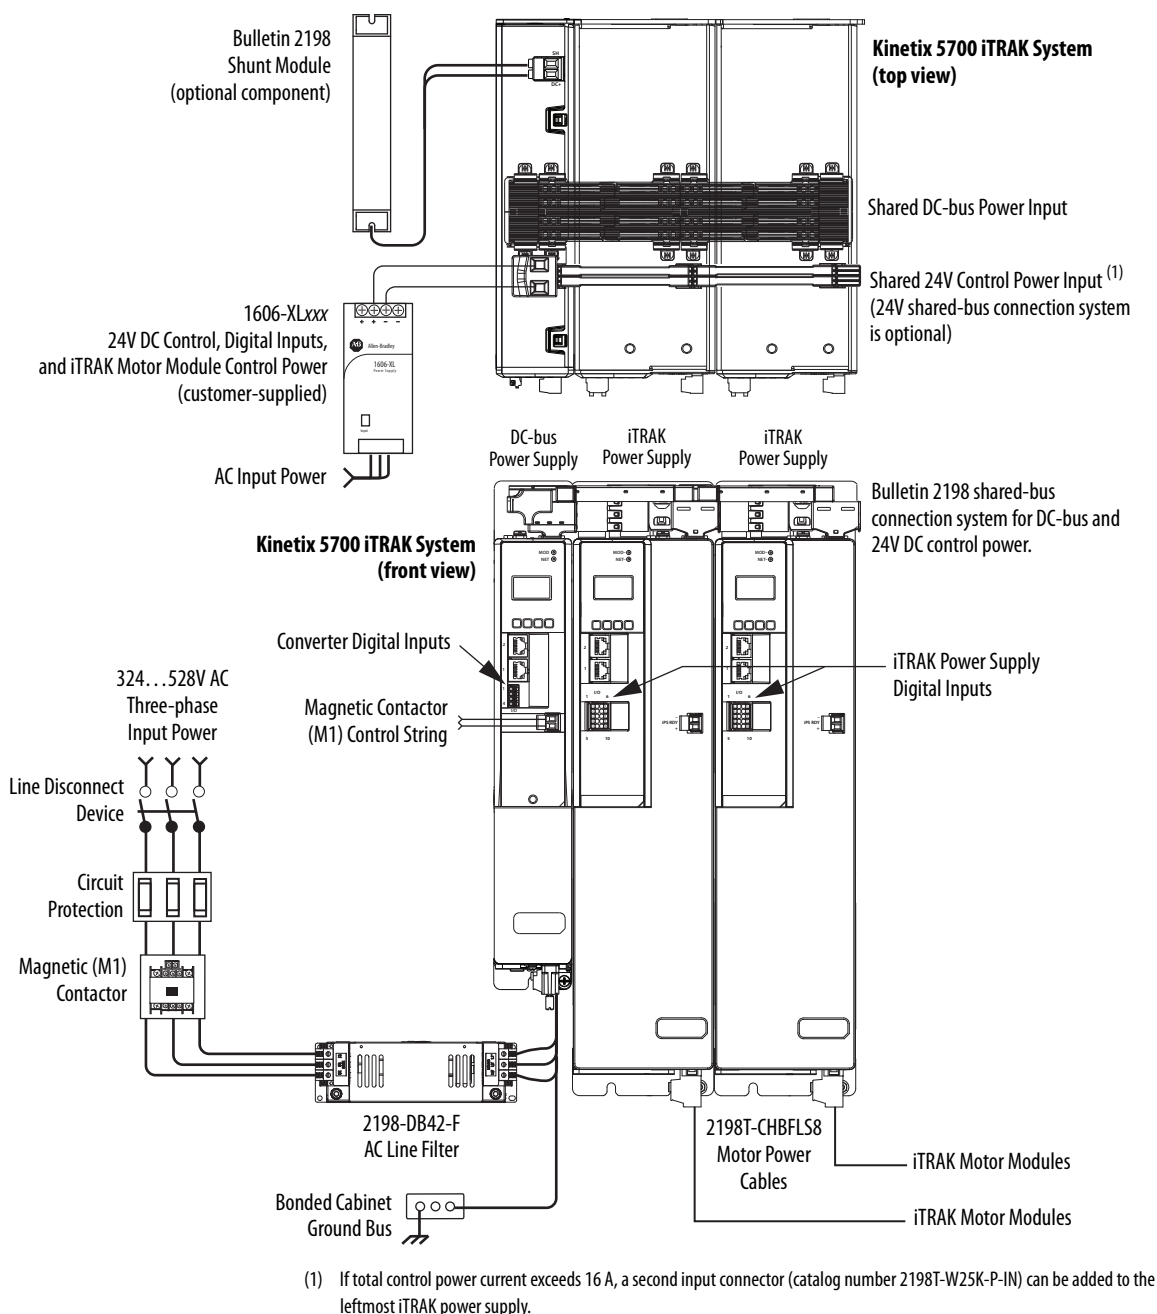

Motor and Auxiliary Feedback Configurations

Feedback connections are made at the 2-pin motor feedback (MF) connector and the 15-pin universal feedback (UFB) connector. These examples illustrate how you can use the Bulletin 2198 connector kits for making these connections. To see motor power and brake connections, refer to [Chapter 5](#) on [page 91](#).

Figure 6 - Feedback Configuration Example

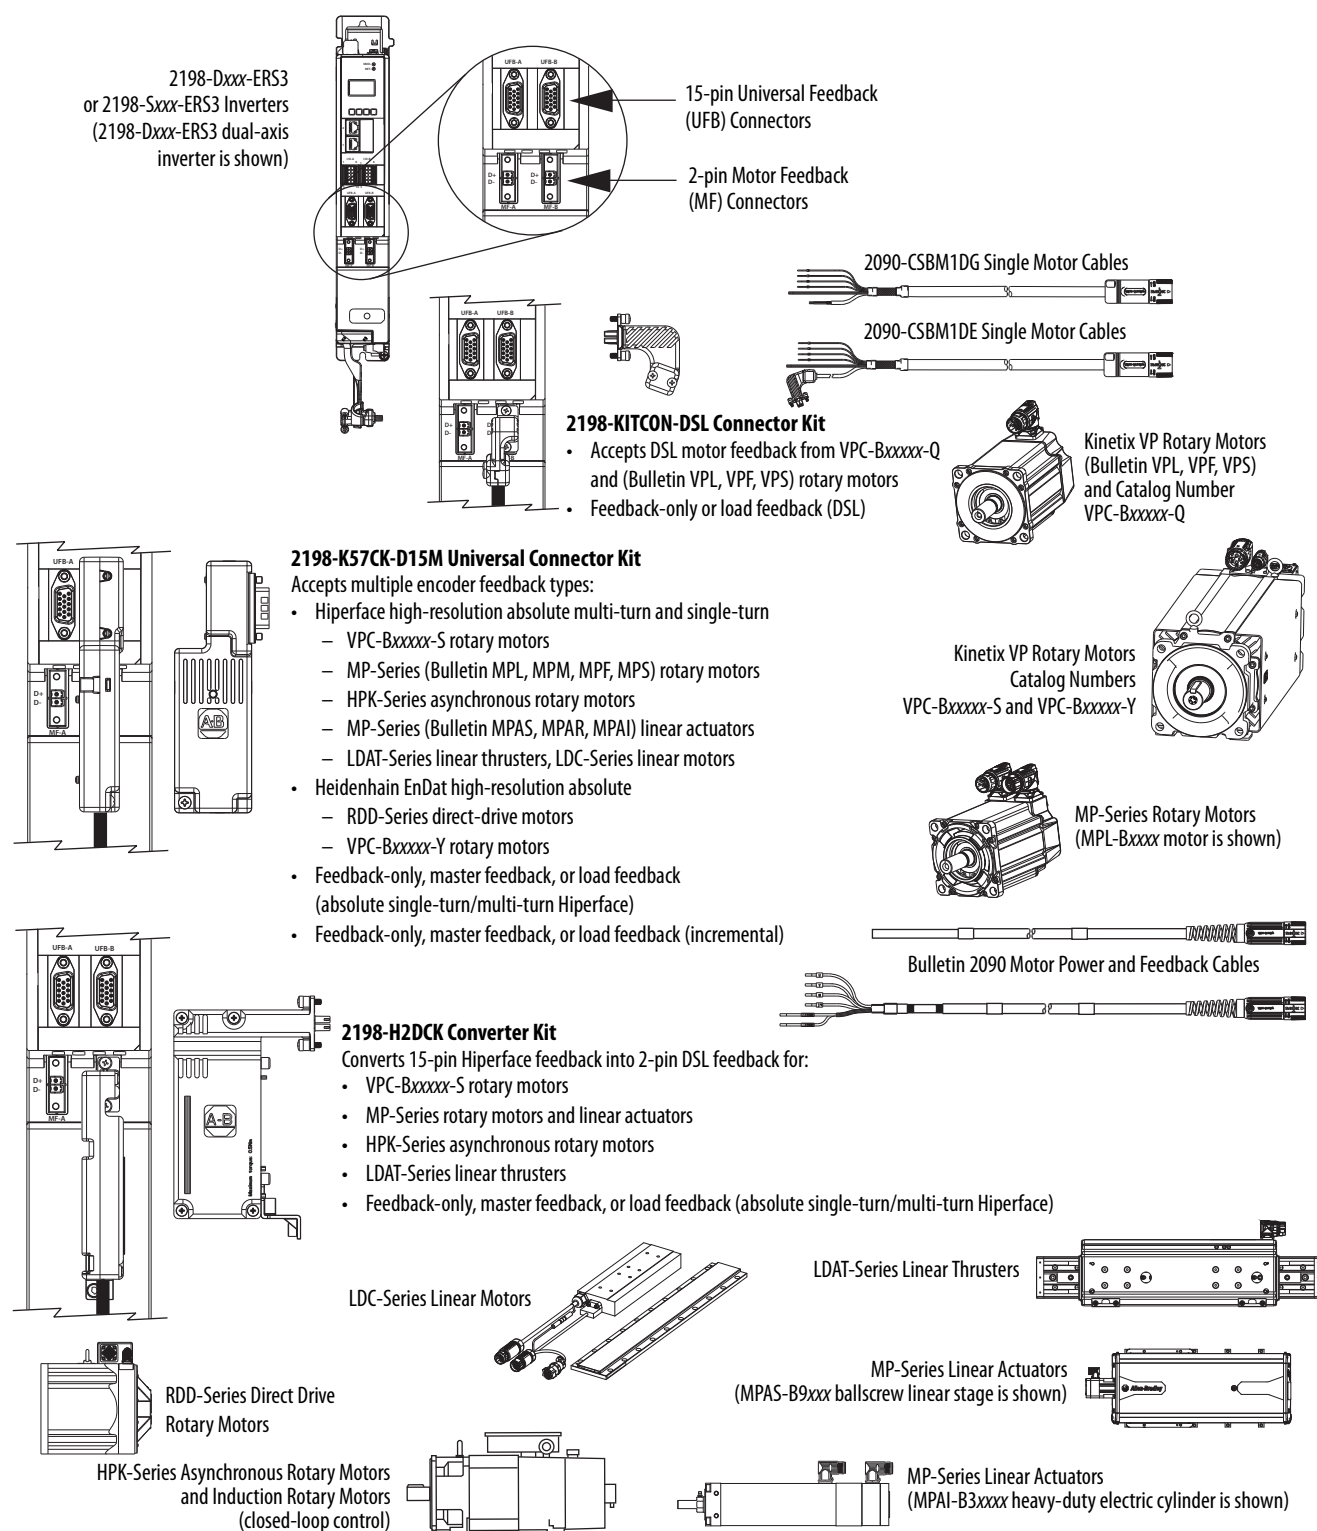

Typical Communication Configurations

The Kinetix 5700 drives support any Ethernet topology including linear, ring, and star by using ControlLogix, GuardLogix, or CompactLogix controllers.


These examples feature the ControlLogix 5570 and GuardLogix 5570 programmable automation controllers with support for integrated motion and integrated safety over the EtherNet/IP network. Other Allen-Bradley controllers are also compatible with the Kinetix 5700 servo drives.

Refer to ControlLogix Communication Module Specifications Technical Data, publication [1756-TD003](#), for more information on ControlLogix 1756-EN2T, 1756-EN2TR, and 1756-EN3TR communication modules.

Linear Topology

In this example, all devices are connected by using linear topology. The Kinetix 5700 drive modules include dual-port connectivity, however, if any device becomes disconnected, all devices downstream of that device lose communication. Devices without dual ports must include the 1783-ETAP module or be connected at the end of the line.

Figure 7 - Kinetix 5700 Linear Communication Installation

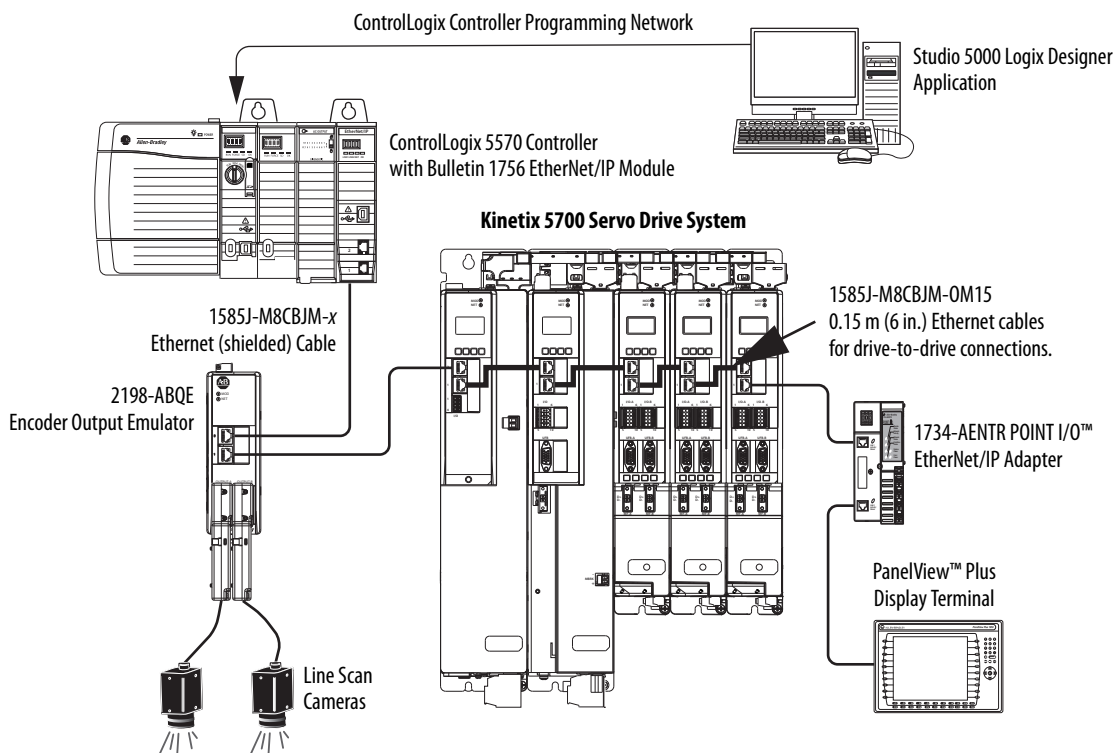


Ring Topology

In this example, the devices are connected by using ring topology. If only one device in the ring is disconnected, the rest of the devices continue to communicate. For ring topology to work correctly, a device level ring (DLR) supervisor is required (for example, the Bulletin 1783 ETAP device). DLR is an ODVA standard. For more information, refer to the EtherNet/IP Embedded Switch Technology Application Guide, publication [ENET-AP005](#).

Devices without dual ports, for example the display terminal, require a 1783-ETAP module to complete the network ring.

Figure 8 - Kinetix 5700 Ring Communication Installation

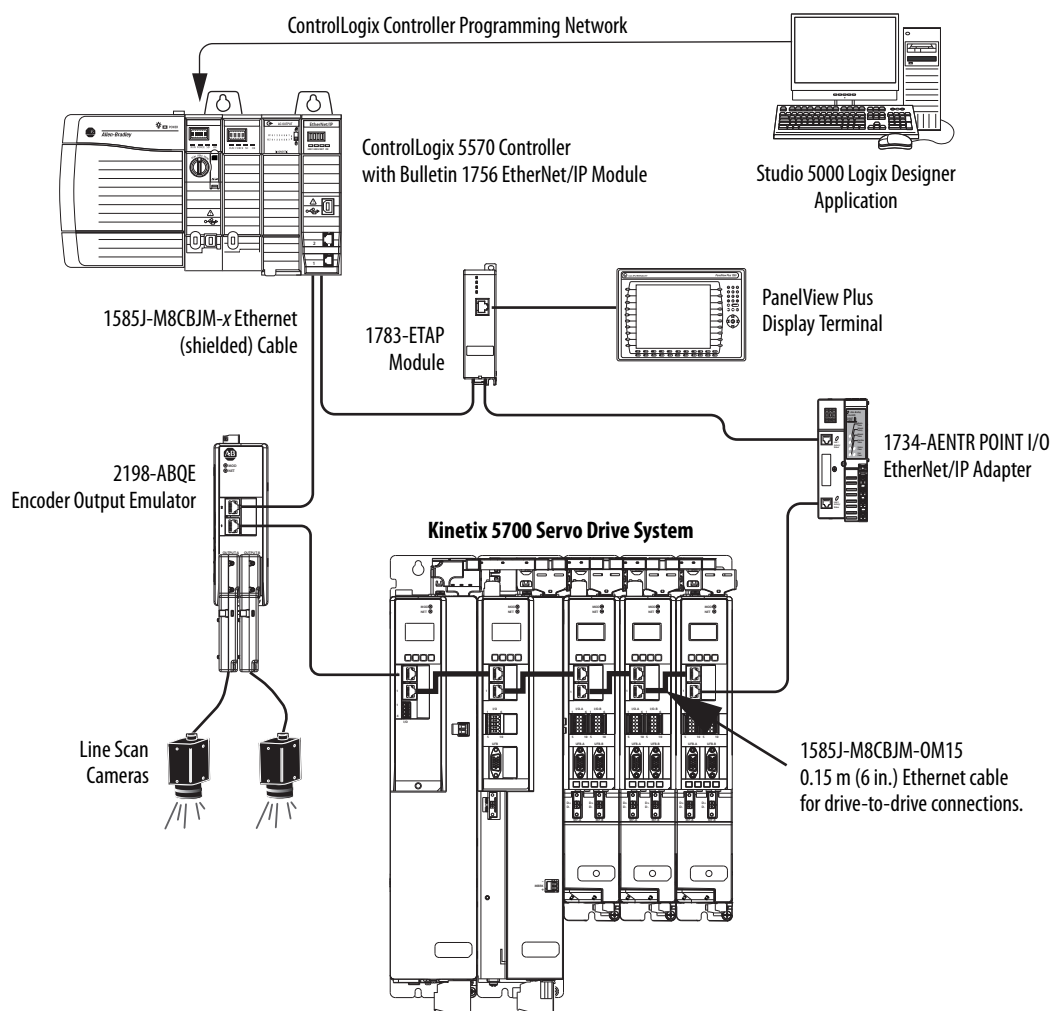


Star Topology

In this example, the devices are connected by using star topology. Each device is connected directly to the switch.

Kinetix 5700 drive modules have dual ports, so linear topology is maintained from one module to another, but the Kinetix 5700 system and other devices operate independently. The loss of one device does not impact the operation of other devices.

Figure 9 - Kinetix 5700 Star Communication Installation

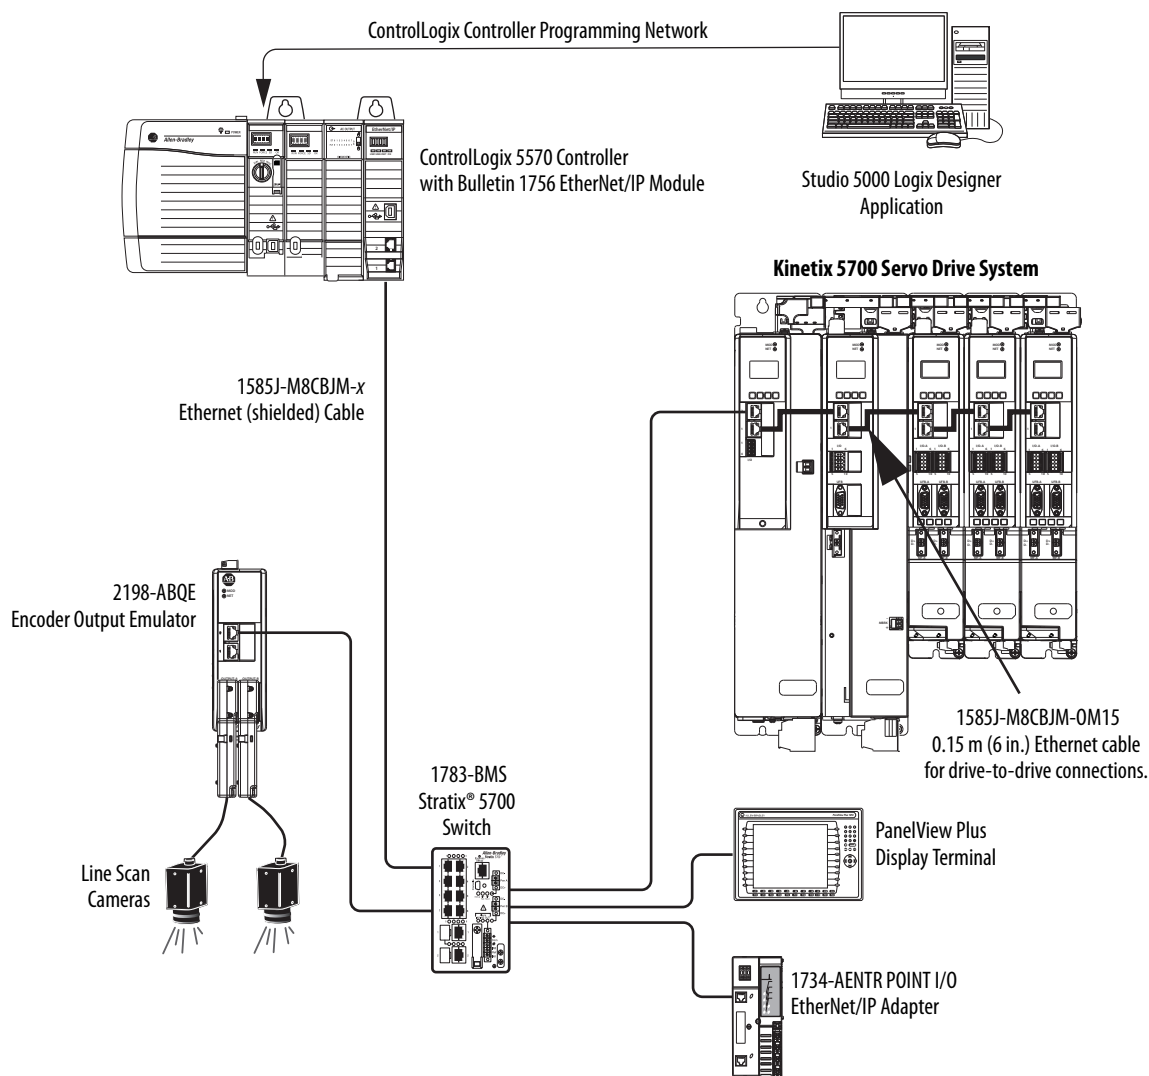

Hardwired Configuration

Figure 10 - Safe Torque-off (hardwired) Configuration




Integrated Safety Configurations

The GuardLogix 5570 or Compact GuardLogix 5370 safety controller issues the safe torque-off (STO) command over the EtherNet/IP network and the Kinetix 5700 servo drive executes the command.

In this example, a single GuardLogix safety controller makes the Motion and Safety connections.

IMPORTANT If only one controller is used in an application with Motion and Safety connections, it must be a GuardLogix 5570 or Compact GuardLogix 5370 safety controller.


Figure 11 - Motion and Safety Configuration (single controller)

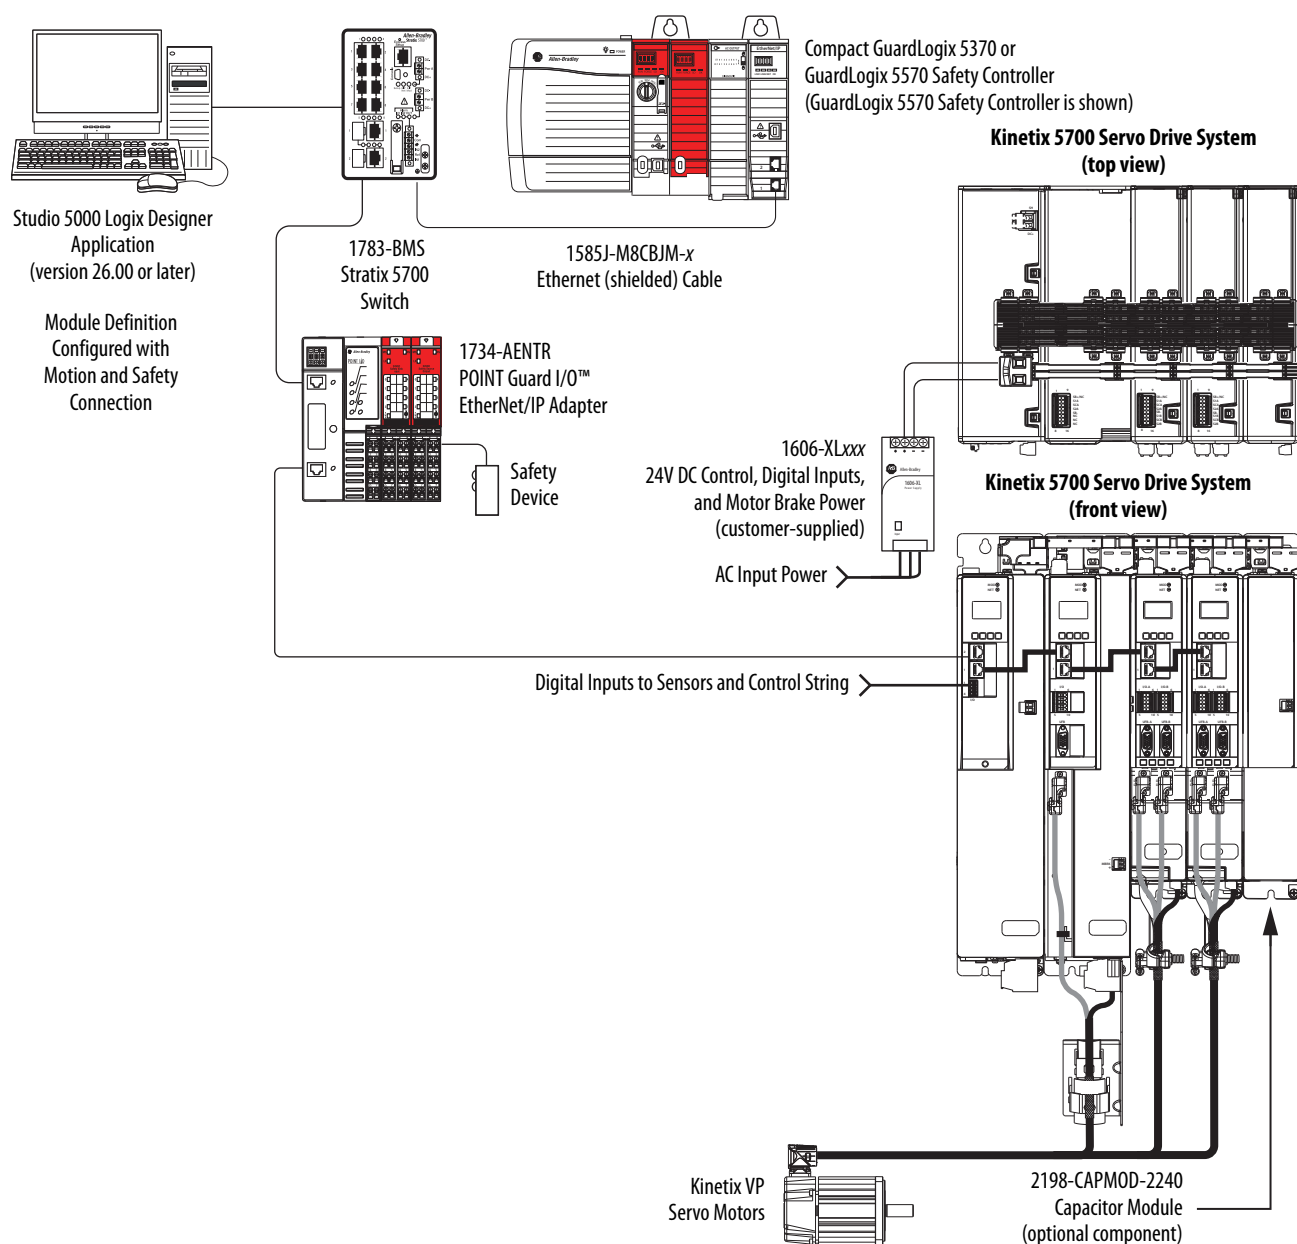

In this example, a non-safety controller makes the Motion-only connection and a separate GuardLogix 5570 safety controller makes the Safety-only connection.

IMPORTANT If two controllers are used in an application with Motion-only and Safety-only connections, the Safety-only connection must be a GuardLogix 5570 or Compact GuardLogix 5370 safety controller and the Motion-only connection must be a ControlLogix 5570 or CompactLogix 5370 controller.

Figure 12 - Motion and Safety Configuration (multi-controller)

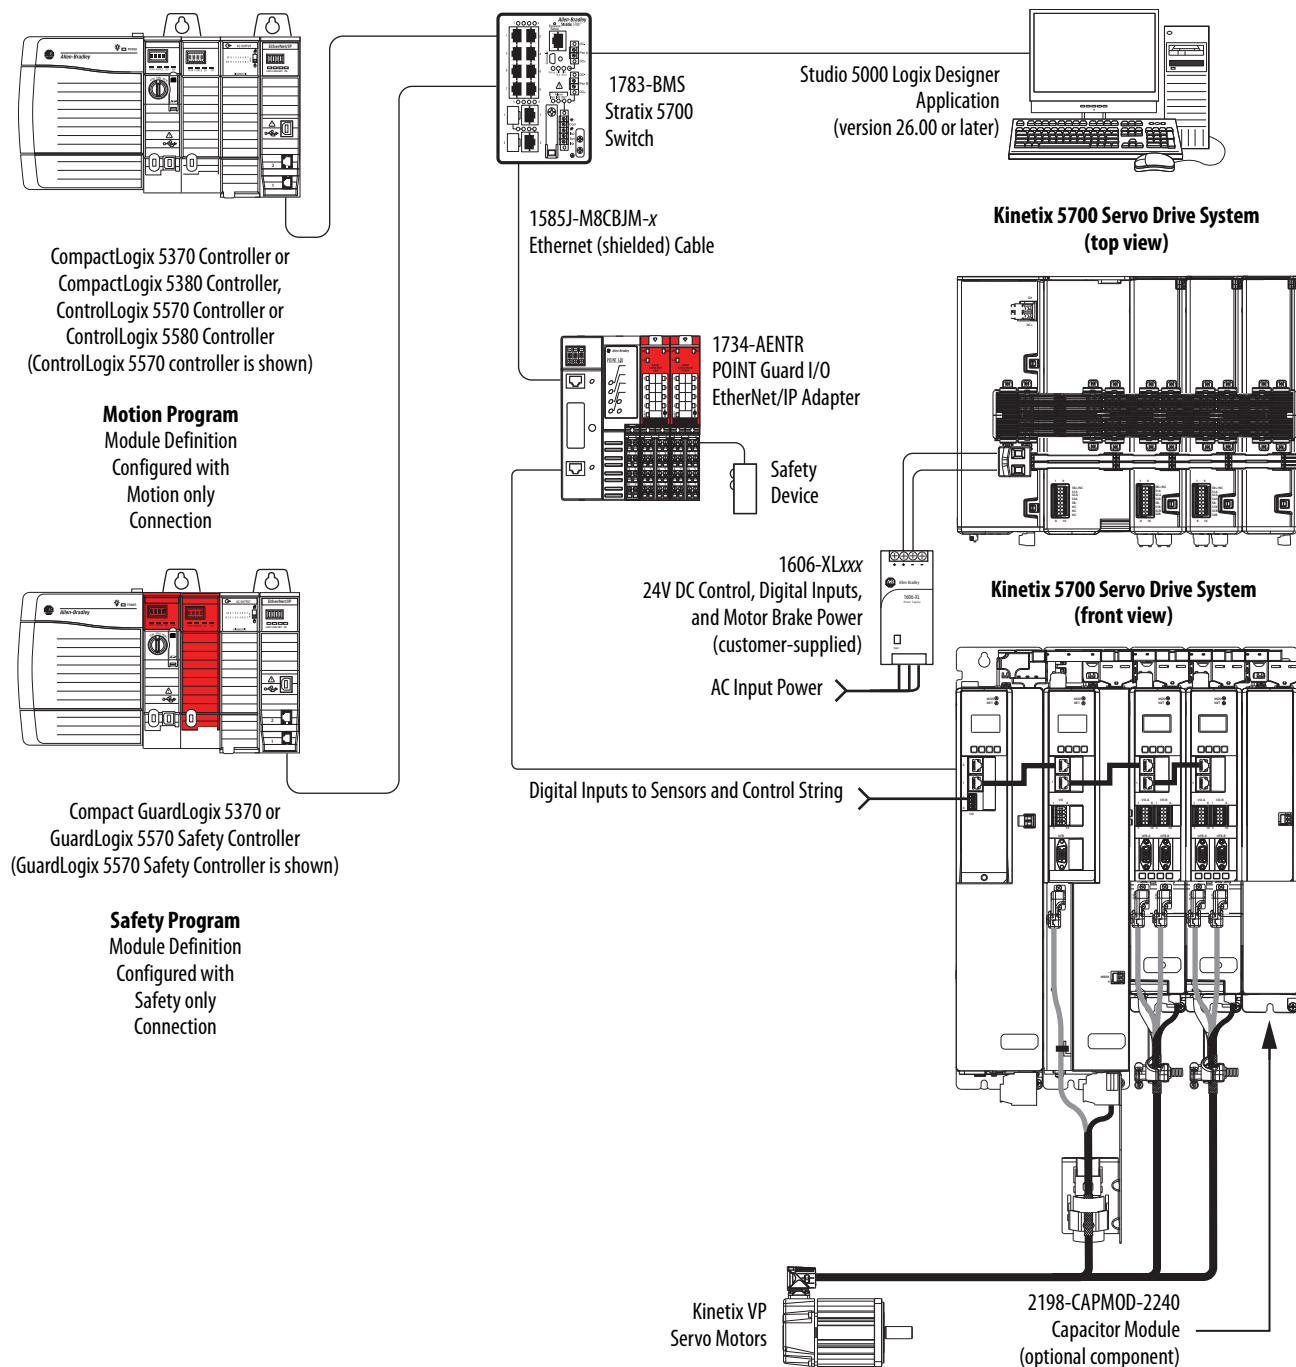

Catalog Number Explanation

Kinetix 5700 drive module catalog numbers and performance descriptions.

Table 4 - Kinetix 5700 Drive Module Catalog Numbers

Kinetix 5700 Drive Modules	Cat. No.	Module Width mm	Input Voltage	Continuous Output Power kW	Continuous Output Current to Bus A _{DC} rms	Continuous Output Current A 0-pk
DC-bus Power Supply	2198-P031 2198-P070	55	324...528V AC rms, three-phase	7 17	10.5 25.5	N/A
	2198-P141 2198-P208	85		31 46	46.9 69.2	
Single-axis Inverters	2198-S086-ERS3 2198-S130-ERS3	85	N/A	29.7 44.9	N/A	60.8 91.9
	2198-S160-ERS3	100		60.1		120.2
Dual-axis Inverters	2198-D006-ERS3 2198-D012-ERS3 2198-D020-ERS3 2198-D032-ERS3	55	N/A	1.7 3.4 5.5 8.9	N/A	3.5 7.0 11.3 18.3
	2198-D057-ERS3	85		15.9		32.5
iTRAK Power Supply	2198T-W25K-ER	100	N/A	N/A	N/A	2x12.5

Table 5 - Capacitor Module Catalog Numbers

Capacitor Modules Cat. No.	System Current, max	Rated Voltage	Capacitance
2198-CAPMOD-2240	100 A	458...747V DC, nom	2240 µF
2198-CAPMOD-DCBUS-IO (extension module)	200 A		N/A

Table 6 - Shared-bus Connector Kit Catalog Numbers

Shared-bus Connector Kits Cat. No.	Drive Module Cat. No.	Application	Description
2198-TCON-24VDCIN36 ⁽¹⁾	2198-P070, 2198-P141, 2198-P208 2198-CAPMOD-2240	24V DC input power to control bus	24V DC input wiring connector
2198-H040-P-T	2198-D006-ERS3, 2198-D012-ERS3 2198-D020-ERS3, 2198-D032-ERS3 2198-CAPMOD-2240	Control power sharing	Control power T-connector with bus bars, 55 mm
2198-H070-P-T	2198-D057-ERS3 2198-S086-ERS3 2198-S130-ERS3	Control power sharing	Control power T-connector with bus bars, 85 mm
2198-S160-P-T	2198-S160-ERS3	Control power sharing	Control power T-connector with bus bars, 100 mm
2198T-W25K-P-IN ⁽²⁾	2198T-W25K-ER	24V DC input power to control bus	24V DC input wiring connector
2198T-W25K-P-T		Control power sharing	Control power T-connector with bus bars, 100 mm

(1) The DC-bus power supply or capacitor module is the typical use. However, the input wiring connector can be inserted into any drive module (mid-stream in the drive system) to begin a new 24V control bus when the maximum current value is reached.

(2) Use this connector with only iTRAK power supplies when the current capacity of the 2198-TCON-24VDCIN36 input wiring connector is exceeded.

Agency Compliance

If this product is installed within the European Union and has the CE mark, the following regulations apply.



ATTENTION: Meeting CE requires a grounded system, and the method of grounding the AC line filter and drive module must match. Failure to do this renders the filter ineffective and can cause damage to the filter. For grounding examples, refer to [Grounded Power Configurations](#) on [page 93](#).

For more information on electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

To meet CE requirements, these requirements apply:

- Install an AC line filter (catalog number 2198-DBxx-F) for input power as close to the 2198-Pxxx DC-bus power supply as possible.
- Bond DC-bus power supplies, inverter modules, capacitor modules, and line filter grounding screws by using a braided ground strap as shown in [Figure 61 on page 98](#).
- Use Bulletin 2090 single motor cables with Kinetix VP servo motors. Use Bulletin 2090 motor power/brake and feedback cables for other compatible Allen-Bradley® motors and actuators.
- Use Bulletin 2198T power cables with iTRAK systems.
- Combined motor cable length for all axes on the same DC bus must not exceed 400 m (1312 ft). Drive-to-motor cables must not exceed 90 m (295 ft), depending on the feedback type.
- Motor cable length for iTRAK power supply to iTRAK motor modules must at least 3 m (9.8 ft), not to exceed 30 m (98.4 ft).
- Install the Kinetix 5700 system inside an approved enclosure. Run input power wiring in conduit (grounded to the enclosure) outside of the enclosure. Separate signal and power cables.
- Segregate input power wiring from control wiring and motor cables.

Refer to Appendix A on [page 267](#) for input power wiring and drive/motor interconnect diagrams.

Notes:

Plan the Kinetix 5700 Drive System Installation

This chapter describes system installation guidelines used in preparation for mounting your Kinetix® 5700 drive system components.

Topic	Page
System Design Guidelines	34
Electrical Noise Reduction	40



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to the components.

System Design Guidelines

Use the information in this section when designing your enclosure and planning to mount your system components on the panel.

For on-line product selection and system configuration tools, including AutoCAD (DXF) drawings of the product, refer to <http://www.rockwellautomation.com/en/e-tools>.

System Mounting Requirements

- To comply with UL and CE requirements, the Kinetix 5700 drive systems must be enclosed in a grounded conductive enclosure offering protection as defined in standard EN 60529 (IEC 529) to IP54 such that they are not accessible to an operator or unskilled person. A NEMA 4X enclosure exceeds these requirements providing protection to IP66.
- The panel you install inside the enclosure for mounting your system components must be on a flat, rigid, vertical surface that won't be subjected to shock, vibration, moisture, oil mist, dust, or corrosive vapors in accordance with pollution degree 2 (EN 61800-5-1) because the product is rated to protection class IP20 (EN 60529).
- Size the system enclosure so as not to exceed the maximum ambient temperature rating. Consider heat dissipation specifications for all system components.
- Combined motor power cable length for all axes on the same DC bus must not exceed 400 m (1312 ft). Drive-to-motor cables must not exceed 90 m (295 ft), depending on the feedback type.

IMPORTANT System performance was tested at these cable length specifications. These limitations also apply when meeting CE requirements.

- Ethernet cable must be shielded and cables connecting drive-to-drive, drive-to-controller, or drive-to-switch must not exceed 100 m (328 ft).
- Registration and digital input cables greater than 30 m (98.4 ft) must be shielded.
- Segregate input power wiring from control wiring and motor cables.
- Use high-frequency (HF) bonding techniques to connect the modules, enclosure, machine frame, and motor housing, and to provide a low-impedance return path for high-frequency (HF) energy and reduce electrical noise.

Bond DC-bus power supply, inverter module, iTRAK power supply, capacitor module, and line filter grounding screws by using a braided ground strap as shown in [Figure 61 on page 98](#).

Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), to better understand the concept of electrical noise reduction.

Transformer Selection

The power supplies do not require an isolation transformer for three-phase input power. However, a transformer can be required to match the voltage requirements of the power supply to the available service.

To size a transformer for the main AC power inputs, refer to the Kinetix 5700 power specifications in the Kinetix Servo Drives Technical Data, publication [KNX-TD003](#).

IMPORTANT When using an autotransformer, make sure that the phase to neutral/ground voltage does not exceed the input voltage ratings of the power supply.

IMPORTANT Use a form factor of 1.5 for three-phase power (where form factor is used to compensate for transformer, drive modules, motor losses, and to account for utilization in the intermittent operating area of the torque speed curve).

IMPORTANT A line reactor must be used if the source transformer is greater than 150 KVA, max and 3% impedance, min.

EXAMPLE Sizing a transformer to the voltage requirements of this power supply:
2198-P141: $31\text{kW} \times 1.5 = 46.5\text{ KVA}$ transformer.

IMPORTANT When using an iTRAK power supply, connect the DC-bus power supply to only grounded-wye power distribution.

Circuit Breaker/Fuse Selection

The Kinetix 5700 power supplies use internal solid-state motor short-circuit protection and, when protected by suitable branch circuit protection, are rated for use on a circuit capable of delivering up to 200,000 A (fuses) and 65,000 A (circuit breakers).

Refer to [Power Wiring Examples](#), on [page 269](#), for the wiring diagram.



ATTENTION: Do not use circuit protection devices on the output of an AC drive as an isolating disconnect switch or motor overload device. These devices are designed to operate on sine wave voltage and the drive's PWM waveform does not allow it to operate properly. As a result, damage to the device occurs.

Input Power UL/CSA Circuit-protection Specifications

Kinetix 5700 Drives		UL/CSA Applications ⁽¹⁾			
DC-bus Power Supply Cat. No.	Drive Voltage (three-phase) nom	Bussmann Fuses Cat. No.	Miniature CB Cat. No.	Motor Protection CB, Self Protected CMC Cat. No.	Molded Case CB Cat. No.
2198-P031	324...528V AC	LPJ-15SP (15A)	1489-M3D250	140M-D8E-C25	140G-G6C3-C25
2198-P070		LPJ-40SP (40A)	1489-M3D400	140M-F8E-C45	140G-G6C3-C50
2198-P141		LPJ-70SP (70A)	1489-M3D630	N/A	140G-G6C3-C90
2198-P208		LPJ-100SP (100A)	N/A	N/A	140G-G6C3-D12

(1) For applications requiring CSA certification, fuses (Bussmann catalog number 170M1760) must be added to the DC link between the two drive clusters when circuit breakers are used for branch circuit protection. The DC bus fuses are not required when AC line fuses are used for branch circuit protection.

Input Power IEC (non-UL/CSA) Circuit-protection Specifications

Kinetix 5700 Drives		IEC (non-UL/CSA) Applications				
DC-bus Power Supply Cat. No.	Drive Voltage (three-phase) nom	DIN gG Fuses Amps, max	Miniature CB Cat. No.		Motor Protection CB Cat. No.	Molded Case CB Cat. No.
2198-P031	324...528V AC	16	1489-M3D250	N/A	140M-D8E-C25	140G-G6C3-C25
2198-P070		40	N/A	1492-SPM3D400	140M-F8E-C45	140G-G6C3-C50
2198-P141		75	N/A	1492-SPM3D630	140MG-H8E-C60	140G-G6C3-C90
2198-P208		110	N/A	N/A	140MG-H8E-D10	140G-G6C3-D12

Contactor Specifications

The DC-bus power supply contactor enable relay (CED connector) is rated at 24V DC or 110/220V AC at 1.0 A, max.

Table 7 - Input Power Contactor Specifications

DC-bus Power Supply Cat. No.	Contactor ^{(1) (2)} Cat. No.	Intermediate Relay ⁽³⁾ Cat. No.
2198-P031	100-C16EJ10	N/A
2198-P070	100-C37EJ10	
2198-P141	100-C72DJ10	700-HB32Z24 (relay) 700-HN153 (socket)
2198-P208	100-C97DJ10	
2198-P208 (2 in parallel)	100-D180EZJ10	
2198-P208 (3 in parallel)	100-D300EZJ10	

(1) Auxiliary contact configuration (10) is for 1 N.O. 0 N.C. Other configurations are available.

(2) Requires integrated diode with the contactor coil.

(3) These DC-bus power supplies require an additional intermediate relay used with the contactor.

Refer to the Kinetix Servo Drives Technical Data, publication [KNX-TD003](#), for additional power specifications for your DC-bus power supply.

Enclosure Selection

This example is provided to assist you in sizing an enclosure for your Kinetix 5700 drive system. You need heat dissipation data from all components planned for your enclosure to calculate the enclosure size (refer to [Table 8](#)).

With no active method of heat dissipation (such as fans or air conditioning) either of the following approximate equations can be used.

Metric	Standard English
$A = \frac{0.38Q}{1.8T - 1.1}$	$A = \frac{4.08Q}{T - 1.1}$
Where T is temperature difference between inside air and outside ambient (°C), Q is heat generated in enclosure (Watts), and A is enclosure surface area (m ²). The exterior surface of all six sides of an enclosure is calculated as:	Where T is temperature difference between inside air and outside ambient (°F), Q is heat generated in enclosure (Watts), and A is enclosure surface area (ft ²). The exterior surface of all six sides of an enclosure is calculated as:
$A = 2dw + 2dh + 2wh$	$A = (2dw + 2dh + 2wh) / 144$
Where d (depth), w (width), and h (height) are in meters.	Where d (depth), w (width), and h (height) are in inches.

If the maximum ambient rating of the Kinetix 5700 drive system is 50 °C (122 °F) and if the maximum environmental temperature is 20 °C (68 °F), then T=30. In this example, the total heat dissipation is 416 W (sum of all components in enclosure). So, in the equation below, T=30 and Q=416.

$$A = \frac{0.38(416)}{1.8(30) - 1.1} = 2.99 \text{ m}^2$$

In this example, the enclosure must have an exterior surface of at least 2.99 m². If any portion of the enclosure is not able to transfer heat, do not include that value in the calculation.

Because the minimum cabinet depth to house the Kinetix 5700 system (selected for this example) is 300 mm (11.8 in.), the cabinet needs to be approximately 1500 x 700 x 300 mm (59.0 x 27.6 x 11.8 in.) HxWxD.

$$1.5 \times (0.300 \times 0.70) + 1.5 \times (0.300 \times 2.0) + 1.5 \times (0.70 \times 2.0) = 3.31 \text{ m}^2$$

Because this cabinet size is considerably larger than what is necessary to house the system components, it can be more efficient to provide a means of cooling in a smaller cabinet. Contact your cabinet manufacturer for options available to cool your cabinet.


Table 8 - Power Dissipation Specifications

DC-bus Power Supply Cat. No.	Usage as % of Rated Power Output (watts)				
	20%	40%	60%	80%	100%
2198-P031	97	101	105	109	113
2198-P070	108	119	130	140	151
2198-P141	249	267	286	304	323
2198-P208	265	294	323	352	380
Dual-axis Inverter Cat. No.					
2198-D006-ERS3	17	29	41	53	65
2198-D012-ERS3	34	58	82	106	130
2198-D020-ERS3	52	84	116	148	180
2198-D032-ERS3	100	155	210	265	320
2198-D057-ERS3	252	354	456	558	660
Single-axis Inverter Cat. No.					
2198-S086-ERS3	190	255	325	400	475
2198-S130-ERS3	225	340	460	590	725
2198-S160-ERS3	270	420	570	760	950
iTRAK Power Supply Cat. No.					
2198T-W25K-ER	206	272	338	404	470
Capacitor Module Cat. No.					
2198-CAPMOD-2240	28	34	42	51	62
2198-CAPMOD-DCBUS-IO	1.1	1.4	1.6	2.1	2.5

Minimum Clearance Requirements

This section provides information to assist you in sizing your cabinet and positioning your Kinetix 5700 drive system:

- Additional clearance is required for cables and wires or the shared-bus connection system connected to the top of the drive modules.
 - Capacitor modules require extra clearance above for wiring DC-bus stud connections and installing the cover.
- Additional clearance is required if other devices are installed above and/or below the drive module and have clearance requirements of their own.
 - Capacitor modules require extra clearance to route DC-bus wiring into or away from the drive system.
- Additional clearance left and right of the drive module is required when mounted adjacent to noise sensitive equipment or clean wire ways.
- The recommended minimum cabinet depth is 300 mm (11.81 in.).

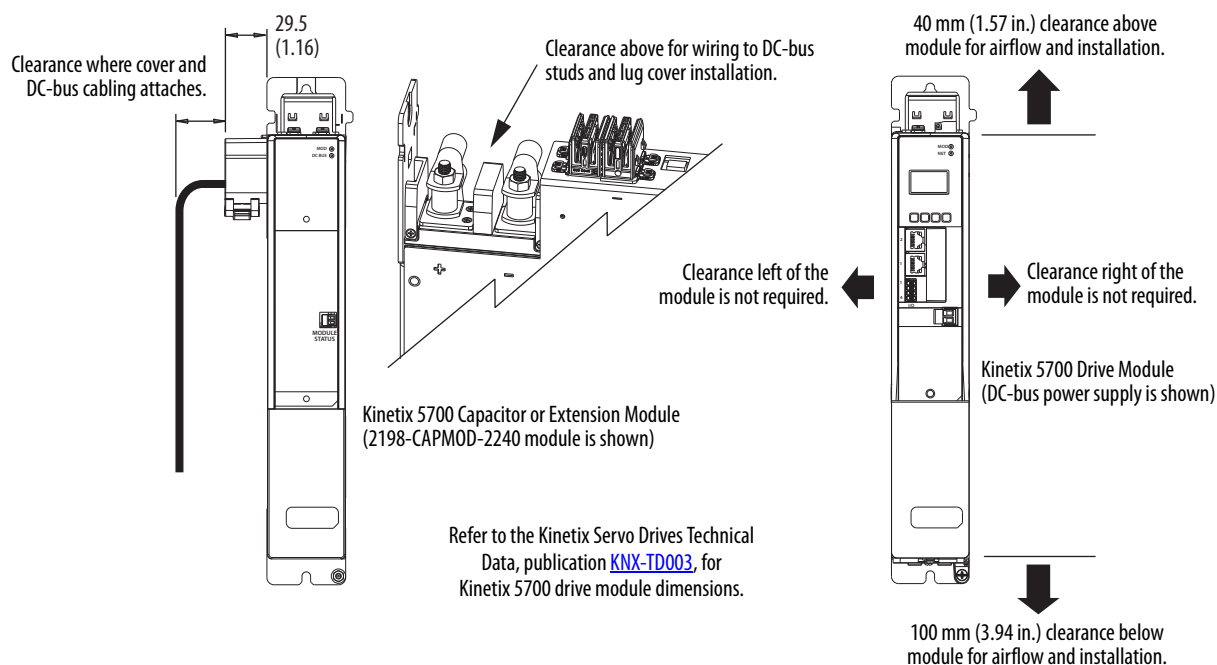Figure 13 - Minimum Clearance Requirements


IMPORTANT Mount the drive module in an upright position as shown. Do not mount the module on its side.

Kinetix 5700 Drive Modules	Drive Module Cat. No.	Clearance Above, min mm (in.)	Clearance Below, ⁽¹⁾ min mm (in.)
DC-bus power supply	2198-P031 2198-P070 2198-P141 2198-P208	40 (1.57)	100 (3.94)
Single-axis inverters	2198-S086-ERS3 2198-S130-ERS3 2198-S160-ERS3	40 (1.57)	100 (3.94)
Dual-axis inverters	2198-D006-ERS3 2198-D012-ERS3 2198-D020-ERS3 2198-D032-ERS3 2198-D057-ERS3	40 (1.57)	100 (3.94)
iTRAK power supply	2198T-W25K-ER	40 (1.57)	100 (3.94)
Capacitor module	2198-CAPMOD-2240	115 (4.53)	100 (3.94)
Extension module	2198-CAPMOD-DCBUS-IO		

(1) Additional clearance can be required depending on the actual wiring harness being installed.

In multi-axis shared-bus configurations, drive modules must be spaced by aligning the zero-stack tab and cutout.

Figure 14 - Multi-axis Shared-bus Clearance Requirements

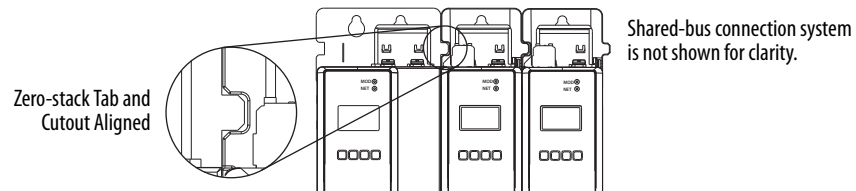

Electrical Noise Reduction

This section outlines best practices that minimize the possibility of noise-related failures as they apply specifically to Kinetix 5700 system installations. For more information on the concept of high-frequency (HF) bonding, the ground plane principle, and electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

Bonding Modules

Bonding is the practice of connecting metal chassis, assemblies, frames, shields, and enclosures to reduce the effects of electromagnetic interference (EMI).


Unless specified, most paints are not conductive and act as insulators. To achieve a good bond between the drive module and subpanel, surfaces need to be paint-free or plated. Bonding metal surfaces creates a low-impedance return path for high-frequency energy.

IMPORTANT To improve the bond between the drive module and subpanel, construct your subpanel out of zinc plated (paint-free) steel.

Improper bonding of metal surfaces blocks the direct return path and allows high-frequency energy to travel elsewhere in the cabinet. Excessive high-frequency energy can effect the operation of other microprocessor controlled equipment.

These illustrations show details of recommended bonding practices for painted panels, enclosures, and mounting brackets.

Figure 15 - Recommended Bonding Practices for Painted Panels

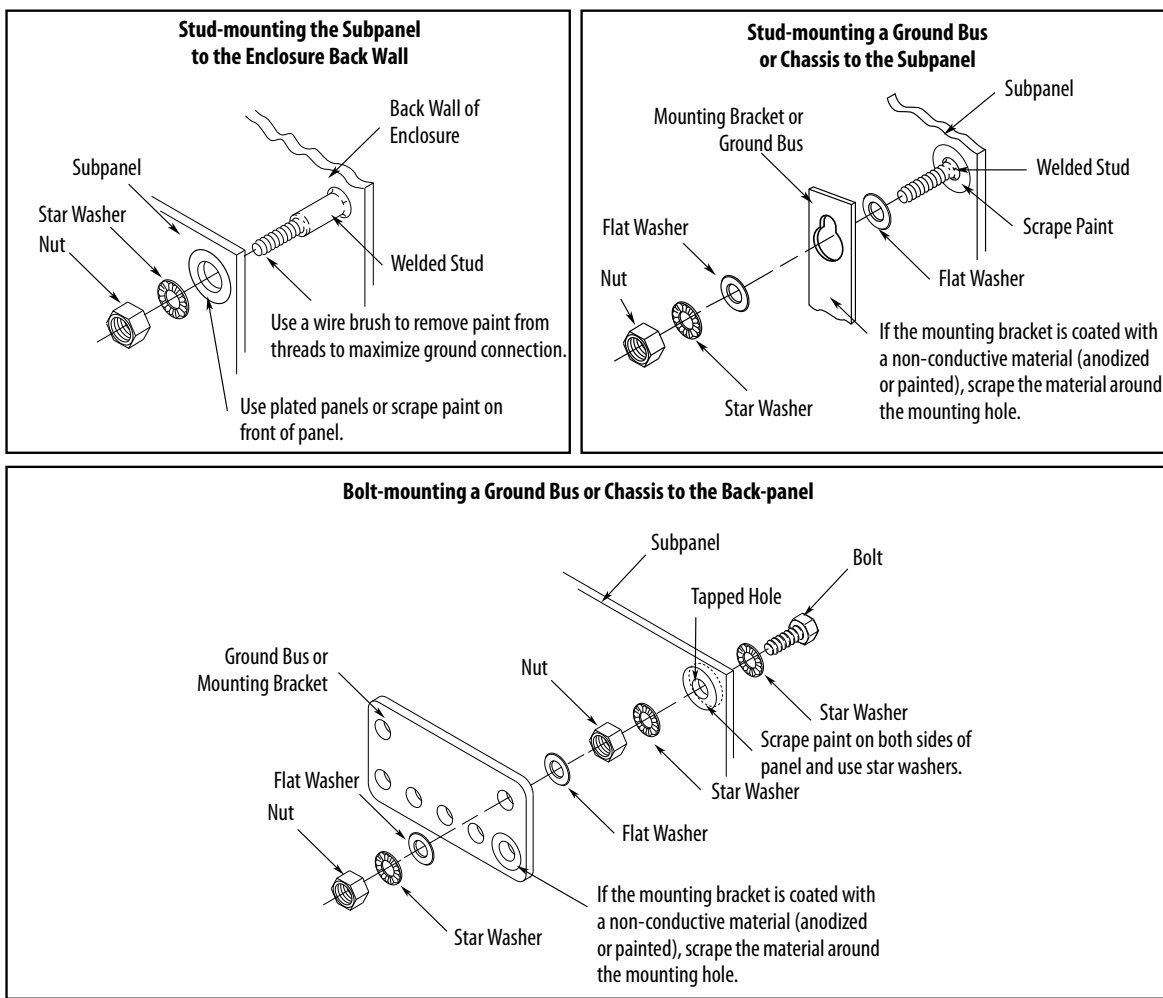


Bonding Multiple Subpanels

Bonding multiple subpanels creates a common low impedance exit path for the high frequency energy inside the cabinet. Subpanels that are not bonded together do not necessarily share a common low impedance path. This difference in impedance can affect networks and other devices that span multiple panels:

- Bond the top and bottom of each subpanel to the cabinet by using 25.4 mm (1.0 in.) by 6.35 mm (0.25 in.) wire braid. As a rule, the wider and shorter the braid is, the better the bond.
- Scrape the paint from around each fastener to maximize metal-to-metal contact.

Figure 16 - Multiple Subpanels and Cabinet Recommendations

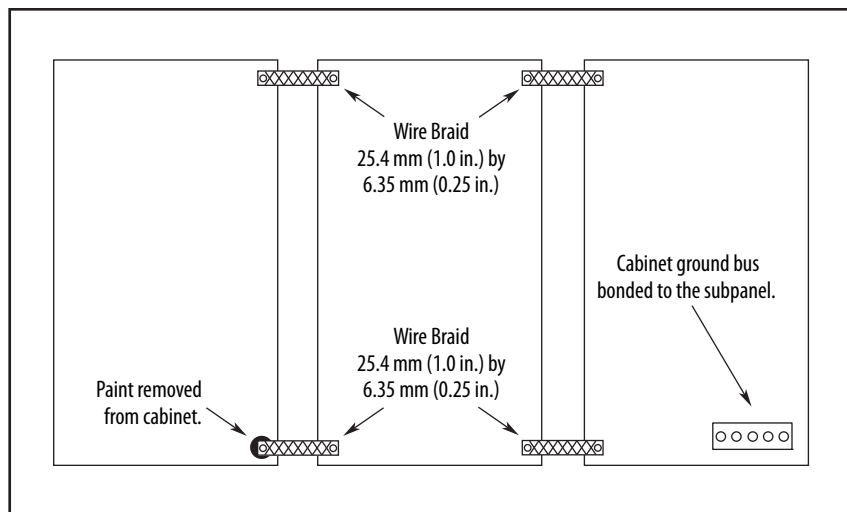


Establishing Noise Zones

Observe these guidelines when routing cables used in the Kinetix 5700 system:

- The clean zone (C) is right of the drive system and includes the digital inputs wiring and Ethernet cable (gray wireway).
- The dirty zone (D) is left and below the drive system (black wireways) and includes the circuit breakers, 24V DC power supply, safety, and motor cables.
- The very dirty zone (VD) is limited to where the AC line (EMC) filter VAC output jumpers over to the DC-bus power supply. Shielded cable is required only if the very dirty cables enter a wireway.

Figure 17 - Noise Zones

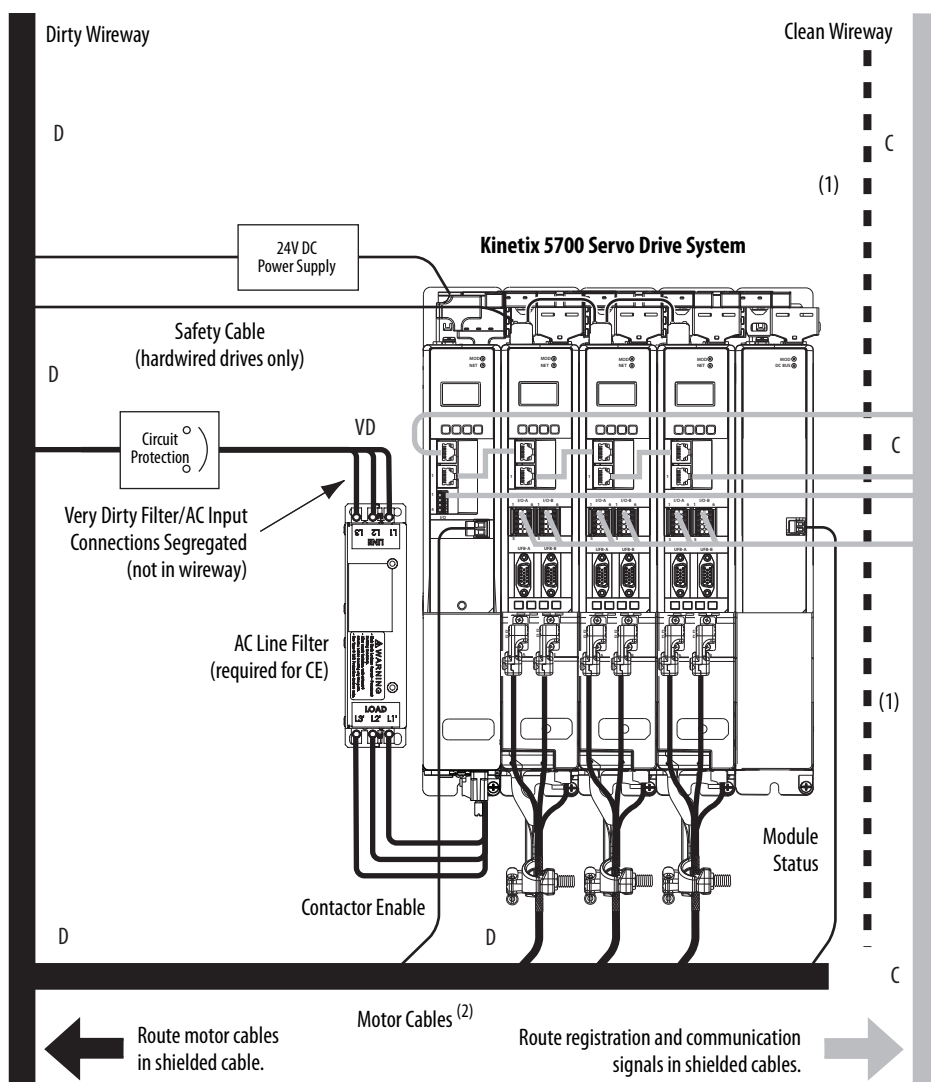

- (1) When space to the right of the module does not permit 150 mm (6.0 in.) segregation, use a grounded steel shield instead. For examples, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).
- (2) When the 2198-H2DCK feedback converter kit or 2198-K57CK-D15M universal feedback kit is used, feedback cable routes in the clean wireway.

Cable Categories for Kinetix 5700 Systems

These tables indicate the zoning requirements of cables connecting to the Kinetix 5700 drive system components.

Table 9 - DC-bus Power Supplies

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
L1, L2, L3 (shielded cable)	IPD		X			X
L1, L2, L3 (unshielded cable)		X				
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
DC+/SH (shunt)	RC		X			
CONT EN- and CONT EN+ (M1 contactor)	CED		X			
24V DC	CP		X			
Registration input, greater than 30 m (98.4 ft)	IOD			X		X
Registration input, less than 30 m (98.4 ft)				X		
Ethernet (shielded cable)	PORT1 PORT2			X		X

Table 10 - Dual-axis and Single-axis Inverters

Wire/Cable		Connector	Zone			Method	
			Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
DC-/DC+ (DC bus)		DC	Bus-bar only, no wiring connector.				
U, V, W (motor power)	Kinetix VP motors	MP		X			X
Motor feedback		MF		X			X
Motor brake		BC		X			X
U, V, W (motor power)	MP-Series™ motors	MP		X			X
Motor feedback		MF or UFB			X		X
Motor brake		BC		X			X
24V DC		CP		X			
Safety enable for safe torque-off (hardwired)		STO		X			
Registration input, greater than 30 m (98.4 ft)		IOD			X		X
Registration input, less than 30 m (98.4 ft)					X		
Ethernet		PORT1 PORT2			X		X

Table 11 - iTRAK Power Supply

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
iTRAK DC-bus output A and B	IDC		X			X
24V DC control input power	CP		X			X
iTRAK 24V DC control output power A and B	ICP					
iTRAK digital inputs	IOD			X		
iTRAK ready output	IR			X		
Ethernet	PORT1 PORT2			X		X

Table 12 - Capacitor Module

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
DC-/DC+ (shielded extension)	M8 Stud		X			
24V DC	CP		X			
Module status	MS		X			

Table 13 - Extension Module

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
DC-/DC+ (shielded extension)	M8 Stud		X			

Noise Reduction Guidelines for Drive System Accessories

Refer to this section when mounting an AC (EMC) line filter or external shunt resistor for guidelines designed to reduce system failures caused by excessive electrical noise.

AC Line Filters

Observe these guidelines when mounting your AC (EMC) line filter (refer to the figure on [page 43](#) for an example):


- Mount the AC line filter on the same panel as the Kinetix 5700 power supply and as close to the power supply as possible.
- Good HF bonding to the panel is critical. For painted panels, refer to the examples on [page 41](#).
- Segregate input and output wiring as far apart as possible.

External Passive Shunt Modules

Observe these guidelines when mounting your 2198-R014, 2198-R031, or 2198-R127 external passive shunt modules:

- Mount the shunt module outside of the drive system enclosure.
- Mount the shunt module so that wiring routes in the very dirty zone inside the drive system enclosure.
- Keep unshielded wiring as short as possible, not to exceed 3 m (9.8 ft). Keep shunt wiring as flat to the cabinet as possible.


Figure 18 - External Shunt Module Mounted On Top of the Drive System Enclosure

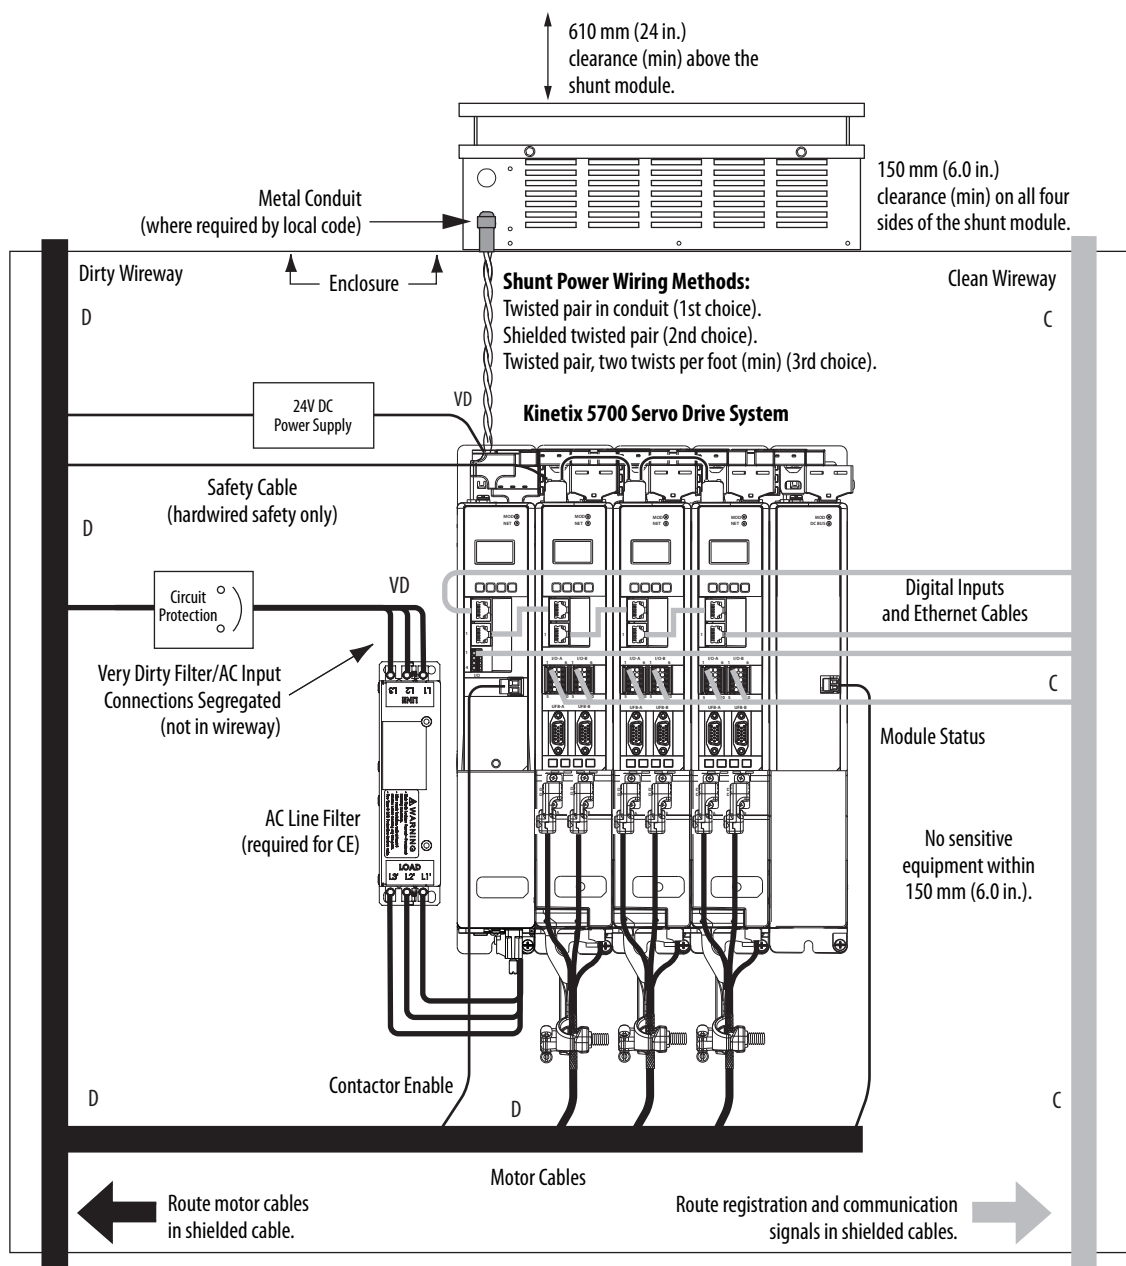

Observe these guidelines when mounting your 2198-R004 external passive shunt resistor:

- Mount the shunt resistors anywhere in the dirty zone, but as close to the Kinetix 5700 power supply as possible.
- Route the shunt power wires with other very dirty wires.
- Keep unshielded wiring as short as possible, not to exceed 3 m (9.8 ft). Keep shunt wiring as flat to the cabinet as possible.
- Separate shunt power cables from other sensitive low-voltage signal cables.

Figure 19 - External Shunt Resistor Mounted Inside the Drive System Enclosure

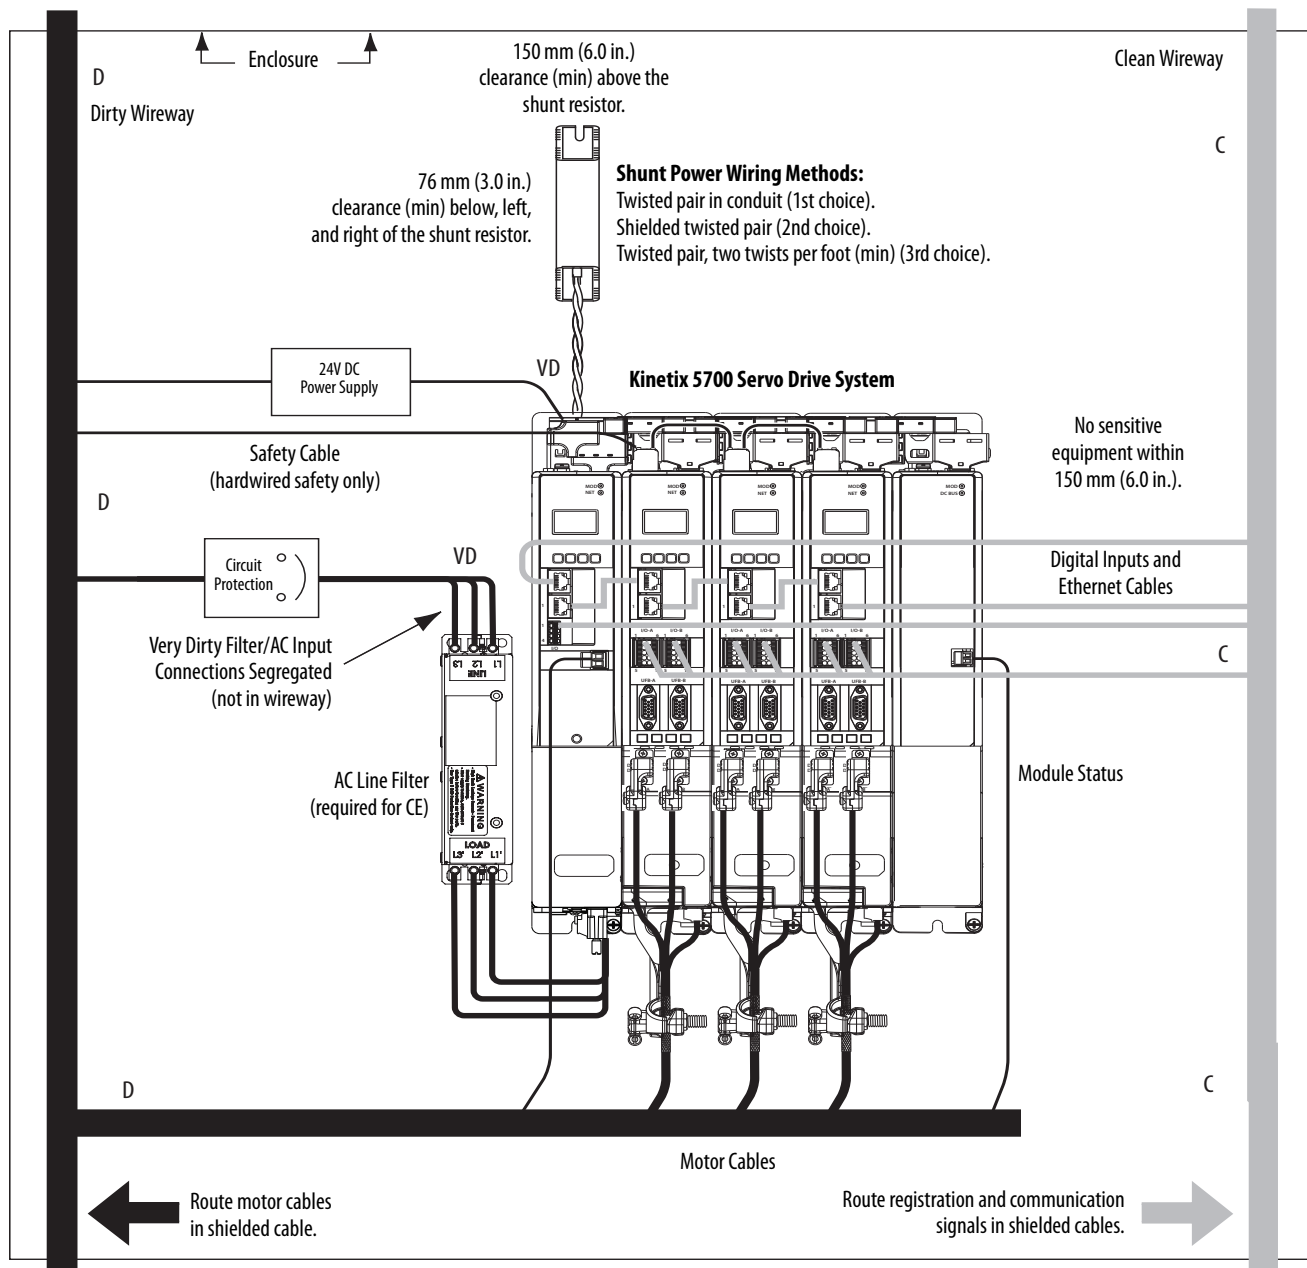

Notes:

Mount the Kinetix 5700 Drive System

This chapter provides the system installation procedures for mounting your Kinetix® 5700 drive system to the system panel.

Topic	Page
Determine Mounting Order	50
Drill-hole Patterns	56
Mount Your Kinetix 5700 Drive Modules	61

This procedure assumes that you have prepared your panel and understand how to bond your system. For installation instructions regarding equipment and accessories not included here, refer to the instructions that came with those products.



SHOCK HAZARD: To avoid the hazard of electrical shock, perform all mounting and wiring of the Kinetix 5700 drive system before applying power. Once power is applied, connector terminals can have voltage present even when not in use.



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to the components.

Determine Mounting Order

Mount the DC-bus power supply, single-axis inverters, and dual-axis inverters in the order (left to right) as shown in [Figure 20](#). Mount inverter modules and iTRAK power supplies according to power rating (highest to lowest) from left to right starting with the highest power rating.

IMPORTANT The DC-bus power supplies (1...3 modules) must be positioned on the far left. Position your single-axis inverter modules to the right of the DC-bus power supplies and the dual-axis inverter modules on the far right.

Table 14 - Kinetix 5700 Single-axis Inverter Modules

Attribute	2198-S086-ERS3	2198-S130-ERS3	2198-S160-ERS3
Continuous Power Output, nom	29.7 kW	44.9 kW	60.1 kW


Table 15 - Kinetix 5700 Dual-axis Inverter Modules

Attribute	2198-D006-ERS3	2198-D012-ERS3	2198-D020-ERS3	2198-D032-ERS3	2198-D057-ERS3
Continuous Power Output, nom	1.7 kW	3.4 kW	5.5 kW	8.9 kW	15.9 kW

Table 16 - iTRAK Power Supply

Attribute	2198T-W25K-ER
Continuous Power Output, nom	4.1 kW


Figure 20 - System Mounting Order Example (single DC-bus power supply)

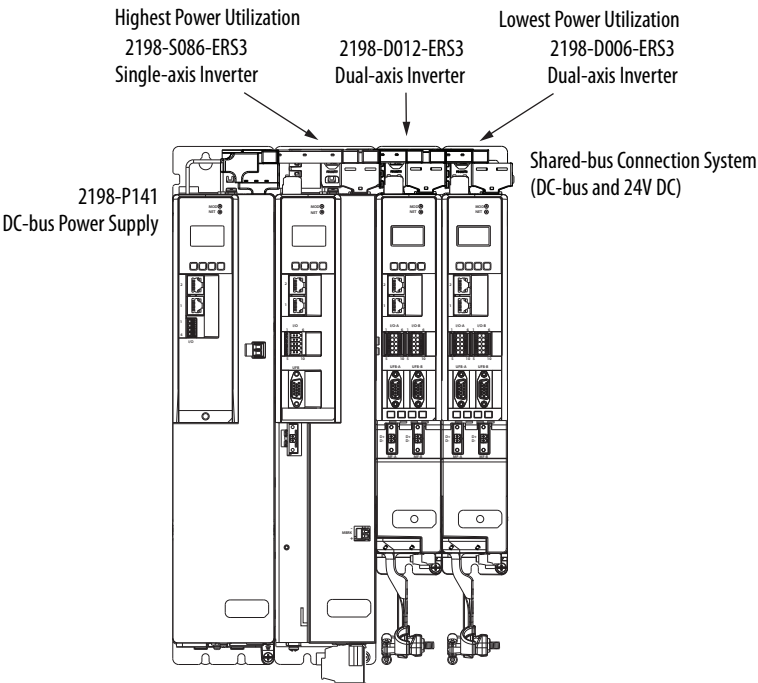

IMPORTANT The maximum number of inverter modules depends on the maximum system capacitance of the power supply and the total system capacitance of all Kinetix 5700 system capacitance values. When there are two or three DC-bus power supplies, they must be catalog number 2198-P208.

Refer to Appendix C on [page 307](#) for more system sizing information.

Figure 21 - System Mounting Order Example (multiple DC-bus power supplies)

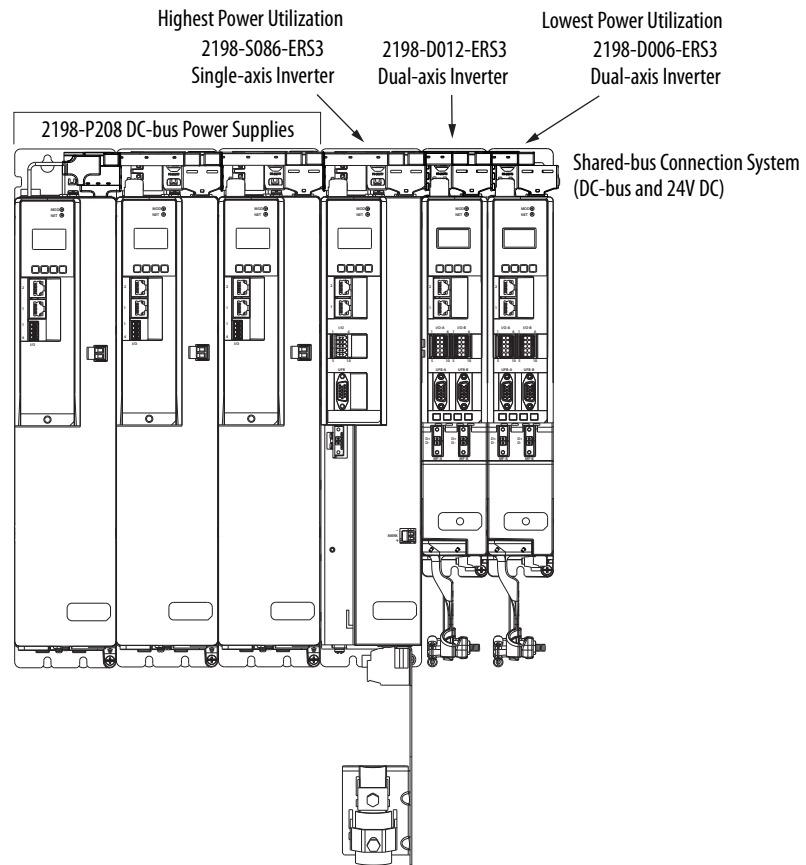

Mounting Capacitor Modules

Mount the 2198-CAPMOD-2240 capacitor module on the far right or far left of any system cluster, depending on the input power configuration. More than one capacitor module can be used in a cluster, if needed. Each additional module adds to the total system capacitance and increased energy storage.

The 2198-CAPMOD-DCBUS-IO extension module is always mounted next to a capacitor module and always on the outside of the system cluster (either first or last). An extension module is needed if the external DC-bus current is greater than 100 A, up to a maximum of 200 A.

IMPORTANT

Capacitor modules always mount on the far right or far left of the system cluster.
Extension modules always mount next to a capacitor module, in systems up to 200 A.

Table 17 - Capacitor Module Positioning

Cat. No.	Position	Description
2198-CAPMOD-2240	Far right	When the DC-bus power supply is used for input power.
	Far left	When a regenerative bus supply (RPS unit) is used for input power.
		When the capacitor module is used to extend the DC-bus voltage to a second set of inverters, downstream from the first.

Figure 22 - Regenerative Power Supply Example (100 A, max)

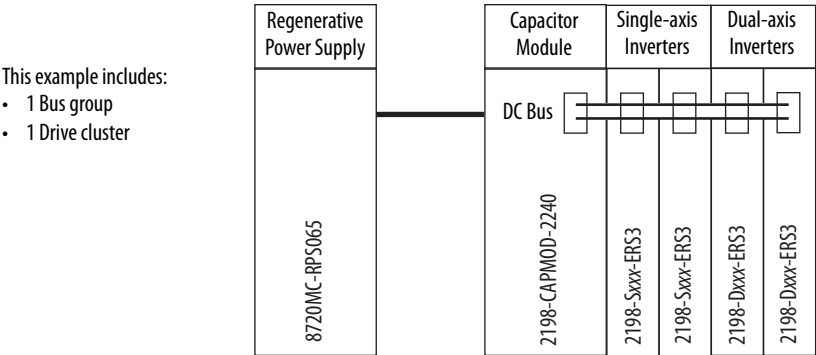


Figure 23 - DC-bus Power Supply Example/Second System (100 A, max)

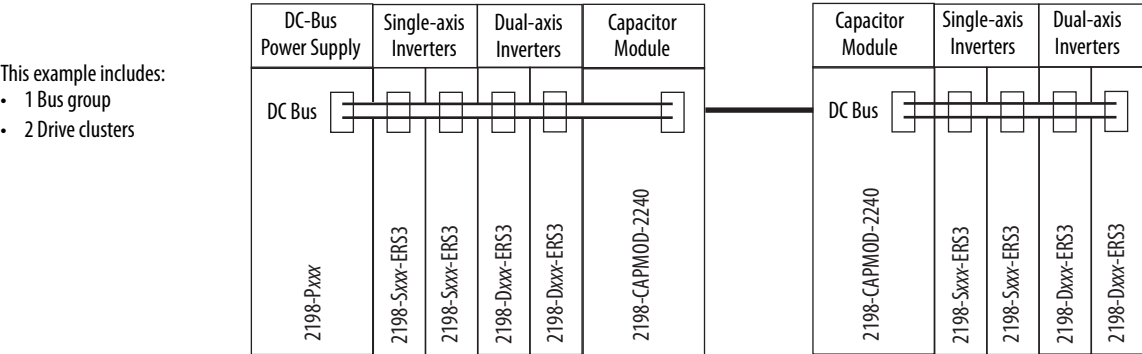
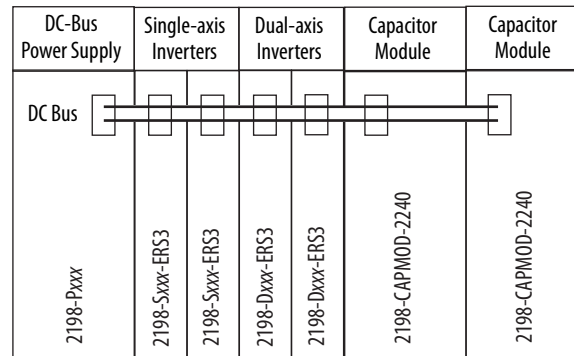


Figure 24 - DC-bus Power Supply Example/Multiple Capacitor Modules (200 A, max)



This example includes:

- 1 Bus group
- 1 Drive cluster

**Figure 25 - Regenerative Power Supply Example Power (200 A, max)**

This example includes:

- 1 Bus group
- 1 Drive cluster

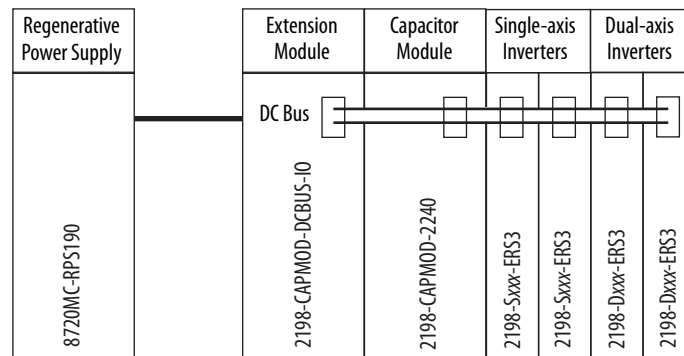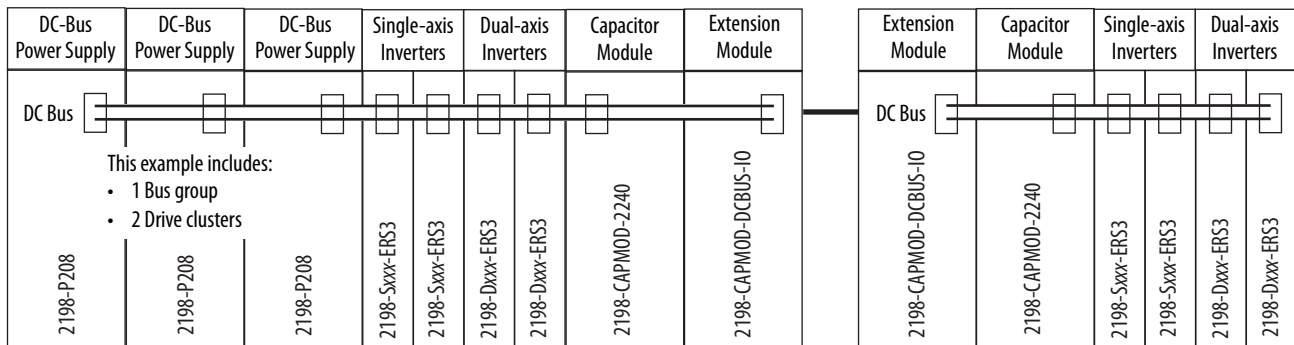**Figure 26 - Multiple DC-bus Power Supply Example/Second System (200 A, max)**

IMPORTANT The systems that are shown are typical. The maximum number of inverter modules depends on the maximum system capacitance of the power supply. When there are two or three DC-bus power supplies, they must be catalog number 2198-P208.

Refer to Appendix C on [page 307](#) for more system sizing information.


IMPORTANT The 8720MC-RPS power supply is not compatible with the iTRAK power supply.

Zero-stack Tab and Cutout

Engaging the zero-stack tab and cutout from one drive module to another makes efficient use of panel space, especially for high axis-count installations.

IMPORTANT Engaging the zero-stack tab and cutout from module-to-module is required for any input power configuration. This is done to make sure that the DC-bus connectors are spaced properly to accept the shared-bus connection system.

Figure 27 - Zero-stack Tab and Cutout Example

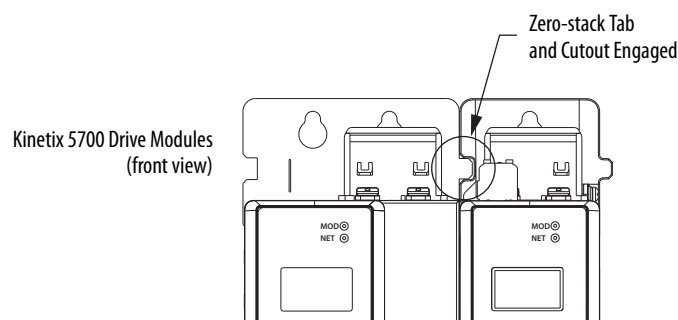

For Kinetix 5700 system sizing examples, refer to Appendix C on [page 307](#).

Shared-bus Connection System


The shared-bus connection system is used to extend the DC-bus power and 24V control power from one drive module to another.

IMPORTANT The zero-stack tab and cutout must be engaged between adjacent drive modules for the shared-bus connection system to fit properly.

DC-bus Connection System

The DC-bus connection system is required and comprised of these two components:

- DC-bus links that are inserted between drive modules to extend the DC-bus from one drive module to another.
- DC-bus end-caps that are inserted into the first and last drive modules to cover the exposed DC-bus connector on both ends of the bus.

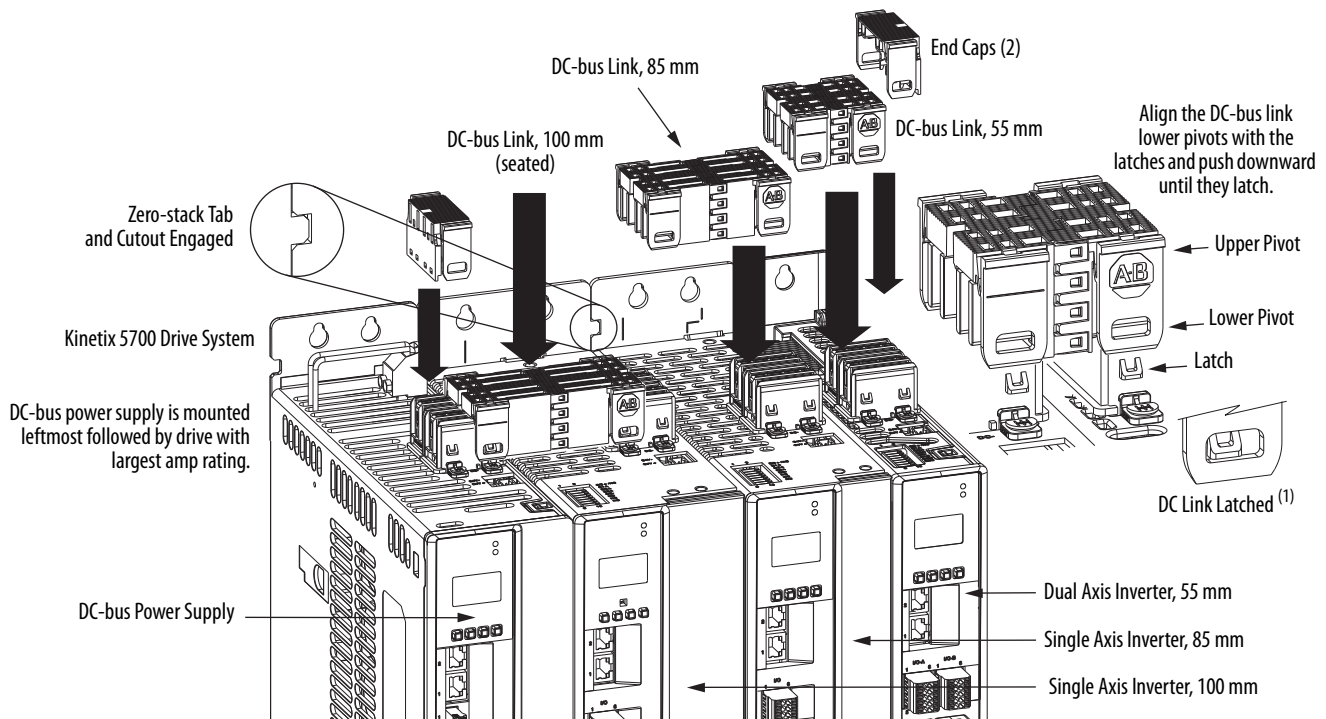Figure 28 - DC-bus Connector Example

(1) DC-bus links latch on both sides when inserted into the DC-bus connectors. To remove the DC-bus link, depress both sets of upper pivots to unlatch the lower pivots and hold the DC-bus link firmly while pulling upward.


24V Input Power Connection System

The 24V input power connection system is optional and comprised of three components:

- The 24V input wiring connector that plugs into the DC-bus power supply or first module supplied by the 24V external power receives 24V DC input wiring.
- 24V DC T-connectors that plug into the drive modules downstream from the power supply or first module supplied by the 24V external power where the 24V control power is shared.
- Bus bars that connect between drive modules to extend the 24V control power from one drive module to another.

IMPORTANT The maximum current rating for the 24V input power connection system is 52 A. If needed, you can insert another 2198-TCON-24VDCIN36 control power input wiring connector at any point in the drive cluster.

Figure 29 - 24V Connector Example

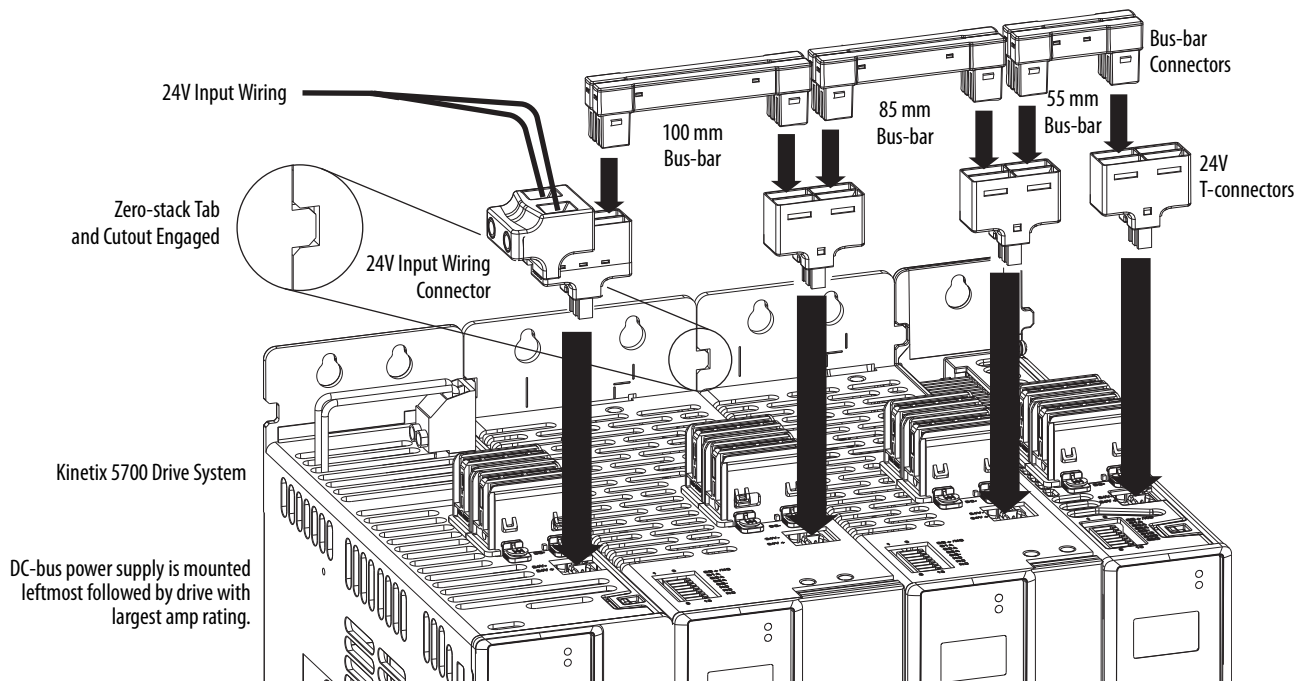

The three components assemble from left to right across the drive system.

1. Attach wiring to 24V input wiring connector.
2. Insert input wiring connector and T-connectors into the appropriate drive module connectors.
3. Insert bus-bars to connect between wiring connector and T-connectors.

Drill-hole Patterns

This section provides drill-hole patterns for Kinetix 5700 drive modules that are mounted in zero-stack (shared-bus) configurations. Properly spaced drill-holes are essential for engaging the zero-stack tab and cutout from module-to-module so that the DC-bus connectors are spaced properly to accept the DC-bus links.

Also available to assist you in mounting drive modules is the 2198-K5700-MOUNTKIT system mounting toolkit.

Follow these guidelines when mounting your drive modules.


- The DC-bus power supply (or supplies) is/are always mounted in the far left position.
- Inverter modules with the highest power rating are always mounted to the left of any inverter module with a lower power rating.

Drill-hole Pattern Calculations

Follow these steps to calculate the left-to-right hole pattern for any Kinetix 5700 drive module configuration by using [Figure 30](#).

1. The first hole location is zero.
2. The second hole location is module width minus 55 mm.
3. The next hole location is 55 mm.
4. Repeat [step 2](#) and [step 3](#) for the remaining holes.


Figure 30 - Kinetix 5700 Mounting Hole Patterns

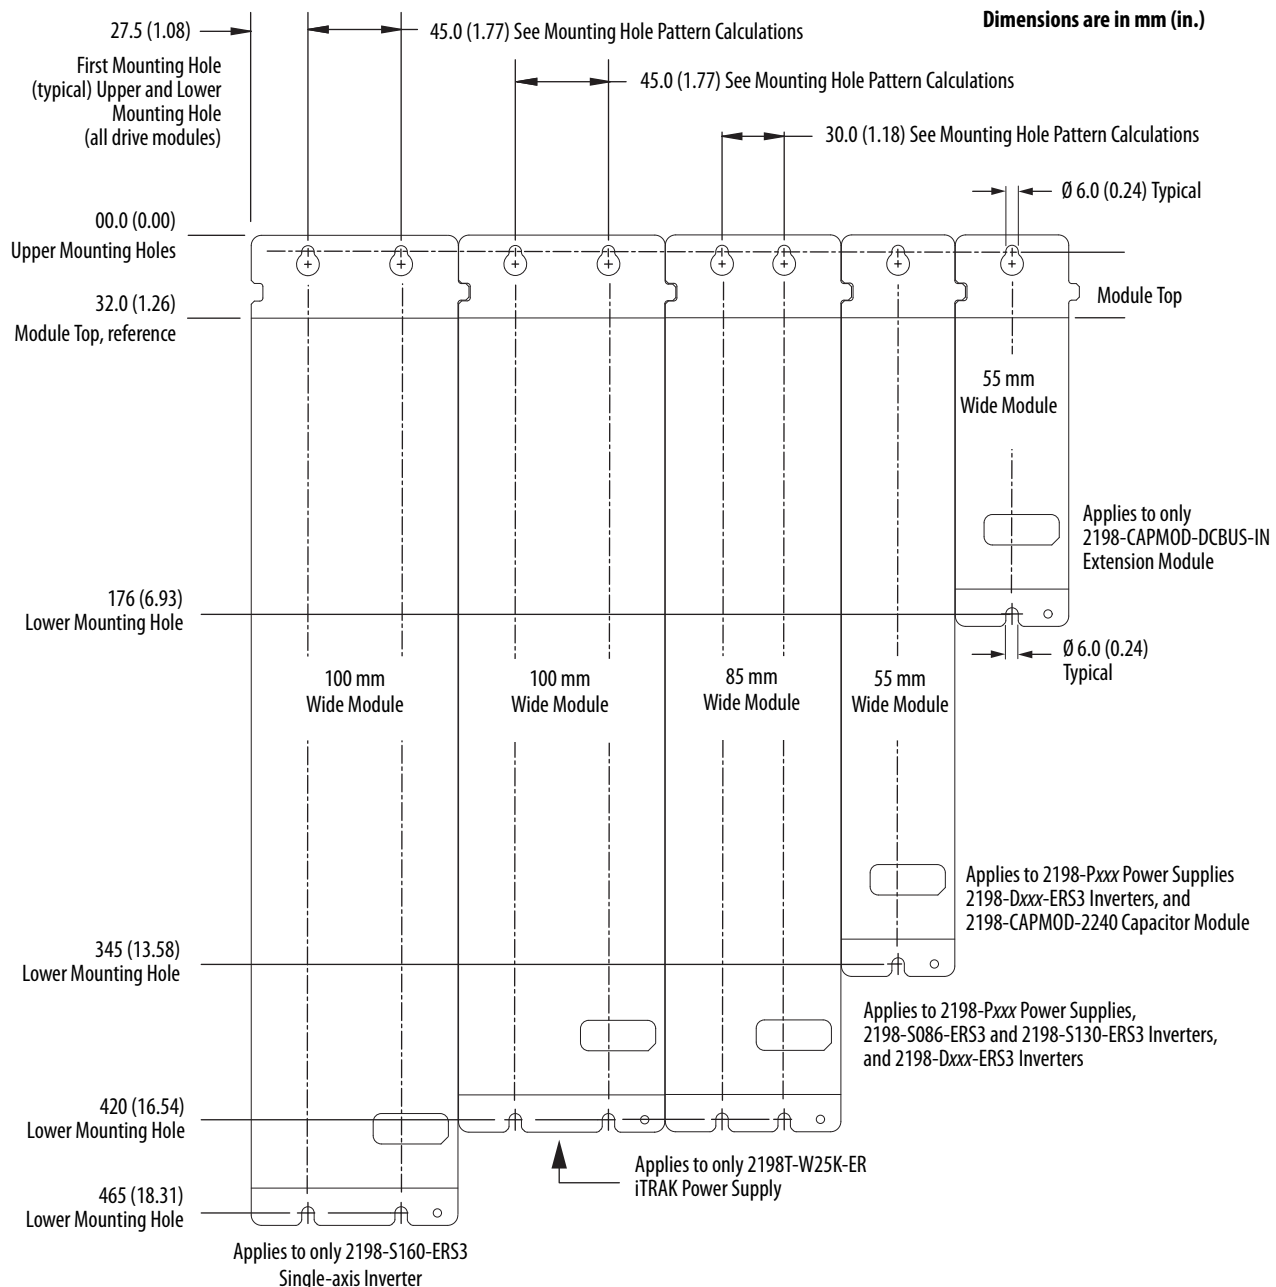

Drill-hole Patterns by Using the System Mounting Toolkit


The mounting bar must be mounted horizontally on the system panel. The drill-hole guide inserts behind the mounting bar and slides left and right. Holes and slots in the drill-hole guide let you establish the location of each Kinetix 5700 drive module.

Figure 31 - Mounting Bar

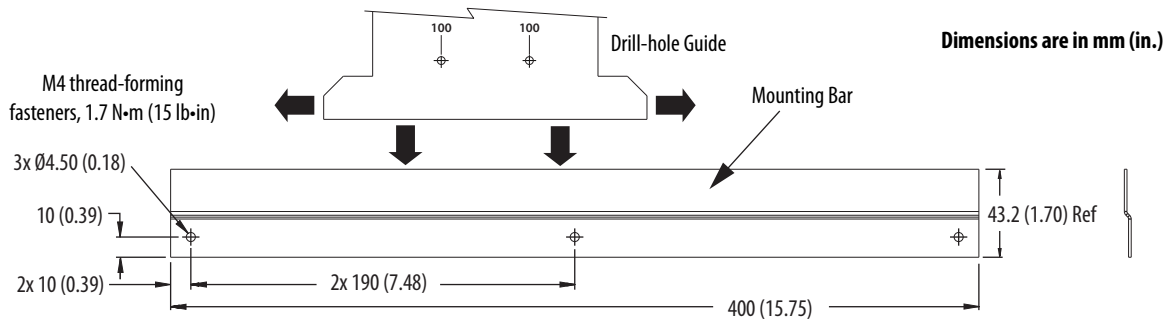


Follow these steps to locate the drill-holes by using the system mounting toolkit.

1. Draw a horizontal line on the panel where you would like to position the upper module-width holes (refer to [Figure 32](#)).
2. Drill three 3.6 mm (0.14 in.) holes 506 mm (19.9 in.) below the line you drew in [step 1](#) for attaching the mounting bar to the panel.
3. Attach the mounting bar to the panel by using the two M4 fasteners.
4. Determine (left to right) the leftmost module position and draw a vertical line where you would like the center of that leftmost module.

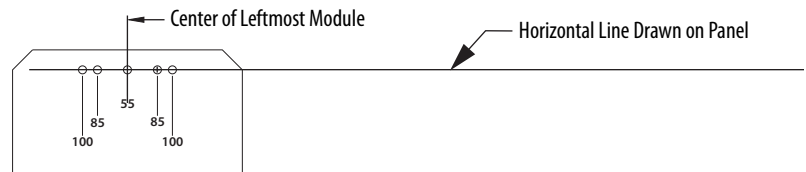


5. Slide the drill-hole guide into the mounting bar and adjust left-to-right until the 55 mm upper module-width hole is aligned with the vertical line you drew in [step 4](#).
6. Mark the upper and lower module-width holes appropriate for the drive-width of the module being mounted.

In this example, the leftmost module is 85 mm wide.

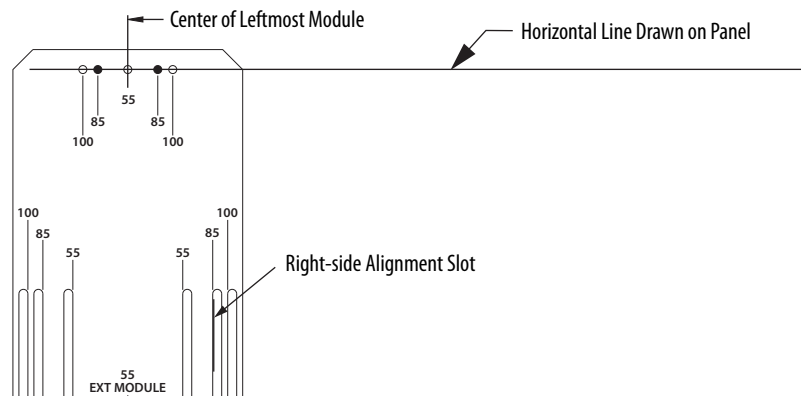

7. Draw a line along the left edge of the right-side alignment slot appropriate for the drive-width of module being mounted.
8. Slide the drill-hole guide to the right until the line you drew in [step 7](#) is just visible in the left-side alignment slot appropriate for the drive-width of next module being mounted.

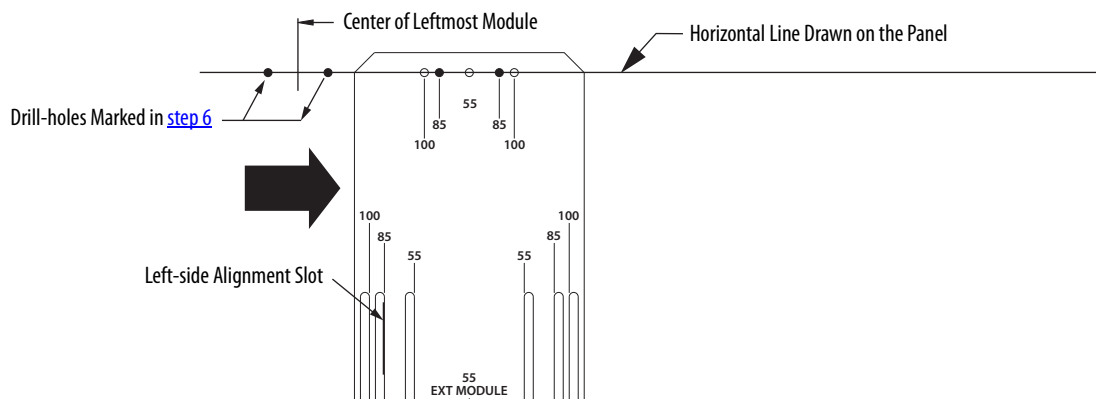


In this example, the next module is also 85 mm wide.

9. Repeat [step 6](#) through [step 8](#) for each module in your drive system.

TIP When drive systems are wider than the mounting bar, you can remove the screws and shift the mounting bar left or right, reusing two of the original holes and drilling another (repeat as needed).

10. Remove the mounting bar from the panel when you are finished.

Figure 32 - Kinetix 5700 System Mounting Toolkit

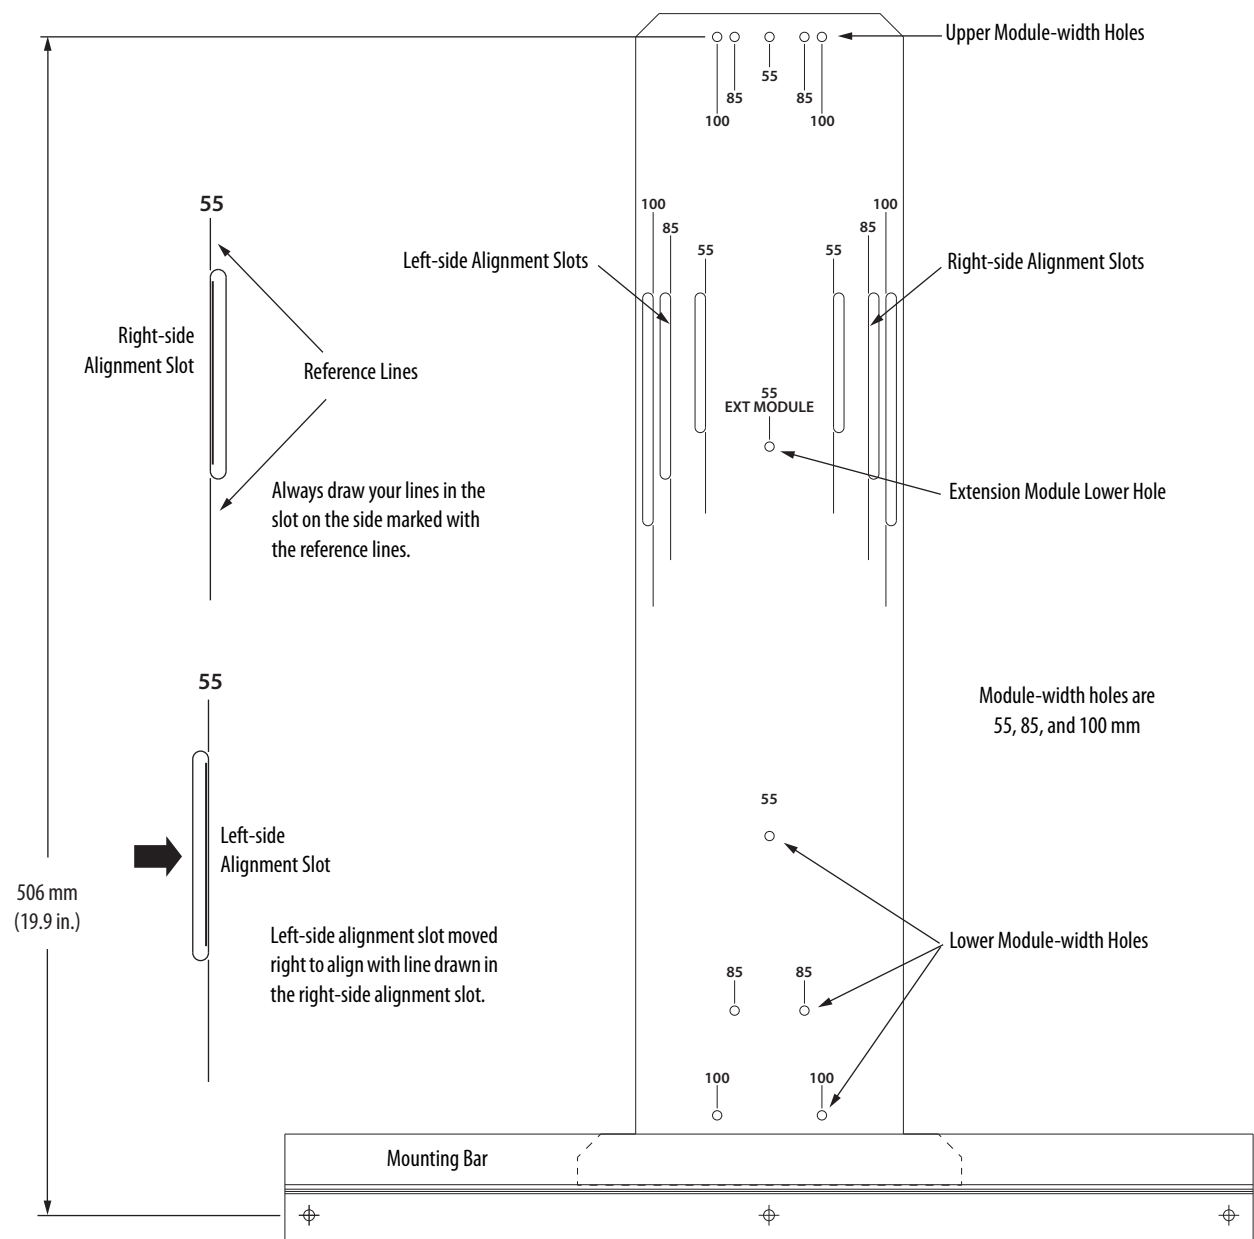

Mount Your Kinetix 5700 Drive Modules

This procedure assumes that you have prepared your panel and understand how to bond your system. For installation instructions regarding other equipment and accessories, refer to the instructions that came with those products.

Follow these steps to mount your Kinetix 5700 drive modules to the panel.

1. Lay out the hole pattern for each drive module in the enclosure.

See [Establishing Noise Zones](#) on [page 43](#) for panel layout recommendations.

IMPORTANT To improve the bond between the drive modules and subpanel, construct your subpanel out of zinc plated (paint-free) steel.


2. Drill holes in the panel for mounting your drive system.

Refer to [Drill-hole Patterns](#) beginning on [page 56](#).

3. Loosely attach the mounting hardware to the panel.

The recommended mounting hardware is M5 (#10-32) steel bolts. Observe bonding techniques as described in [Bonding Modules](#) on [page 40](#).

4. Attach the DC-bus supply (or supplies) to the cabinet panel in the leftmost position.

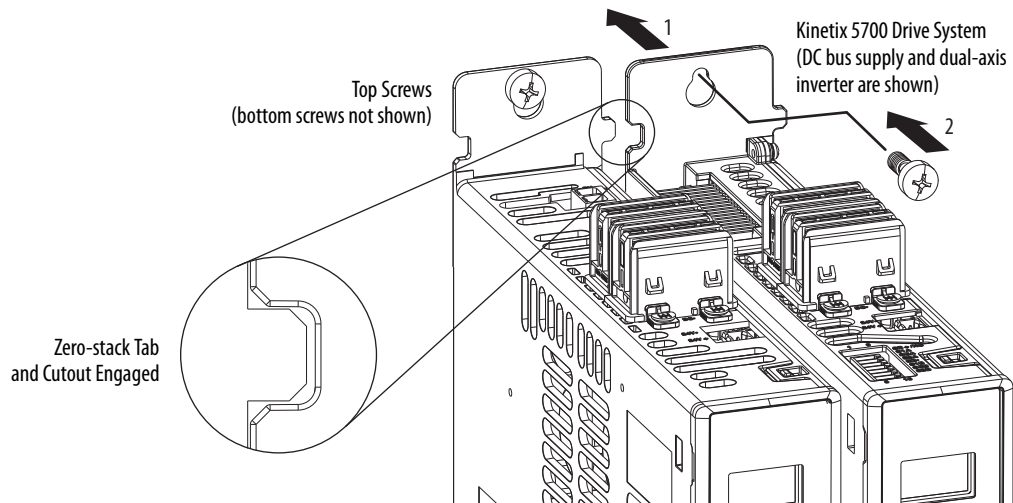

5. Attach additional drive modules to the right of the previous module by using the same method, but also making sure that the zero-stack tabs and cutouts are engaged.

Zero-stack mounting is required for all configurations. See the [Zero-stack Tab and Cutout Example](#) on [page 54](#).

6. Tighten all mounting fasteners.

Apply 4.0 N•m (35.4 lb•in) maximum torque to each fastener.

Notes:

Connector Data and Feature Descriptions


This chapter illustrates connectors and indicators for the Kinetix® 5700 drive system components, including the DC-bus power supply, single-axis inverter, and dual-axis inverter modules. Also included in this chapter are connector pinouts and descriptions for Kinetix 5700 system components.

Topic	Page
Kinetix 5700 Connector Data	64
Understand Control Signal Specifications	74
Feedback Specifications	79
Safe Torque-off Safety Features	90

Kinetix 5700 Connector Data

Use these illustrations to identify the connectors and indicators for the Kinetix 5700 drive modules.


Figure 33 - DC-bus Power Supply Features and Indicators

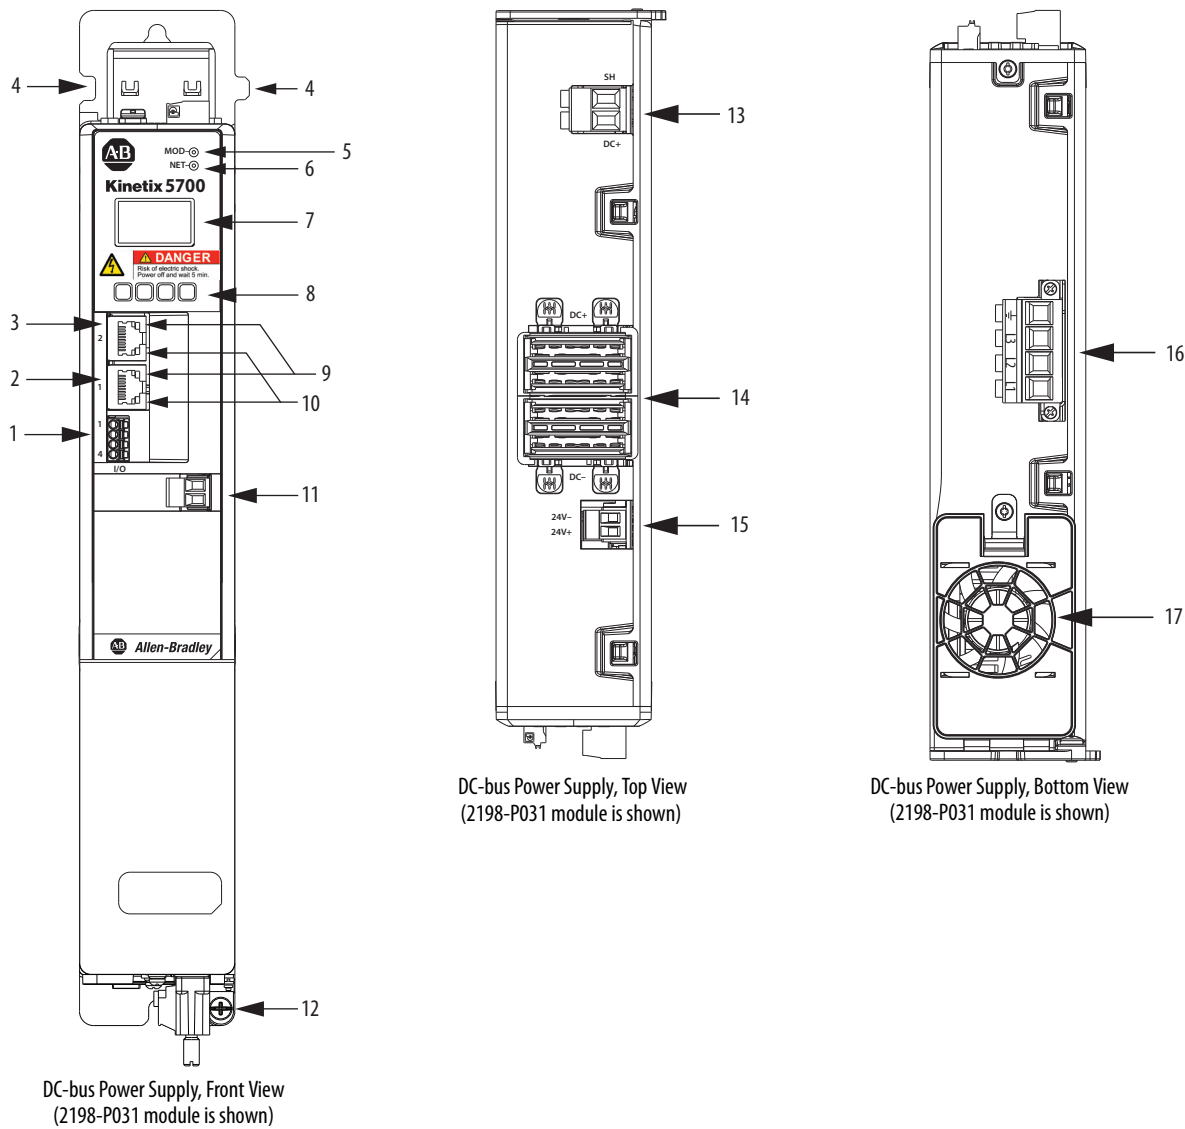

Item	Description
1	Digital inputs (IOD) connector
2	Ethernet (PORT1) RJ45 connector
3	Ethernet (PORT2) RJ45 connector
4	Zero-stack mounting tab/cutout
5	Module status indicator
6	Network status indicator

Item	Description
7	LCD display
8	Navigation pushbuttons
9	Link speed status indicators
10	Link/Activity status indicators
11	Contactor-enable (CED) connector
12	Ground terminal

Item	Description
13	Shunt resistor (RC) connector
14	DC bus (DC) connector
15	24V control input power (CP) connector
16	AC Input power (IPD) connector
17	Cooling fan

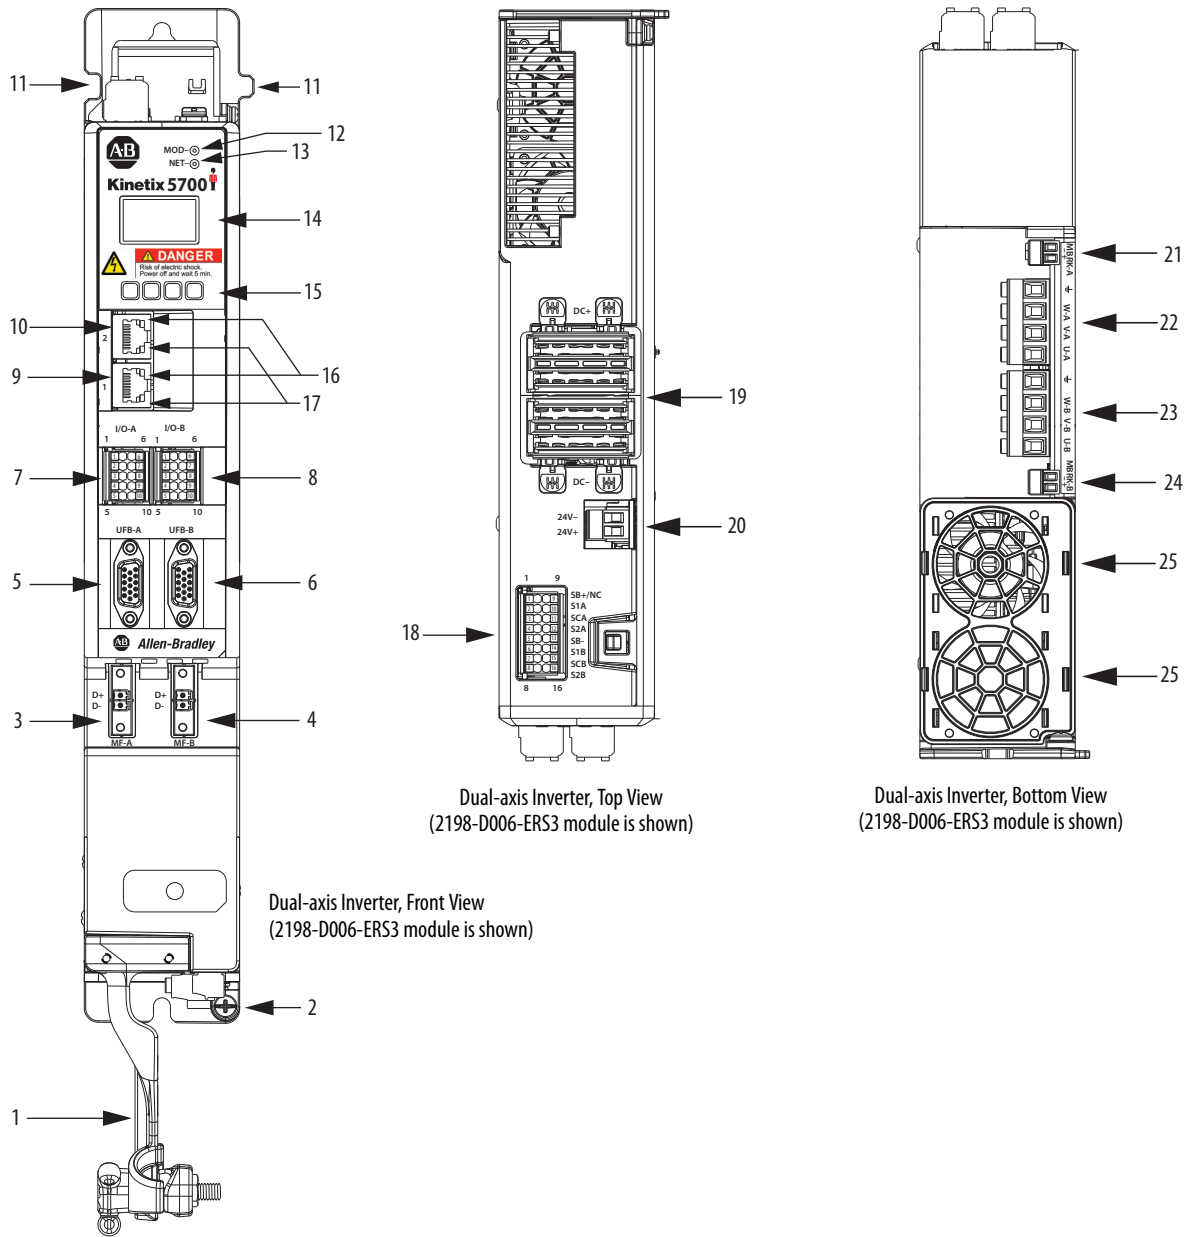Figure 34 - Dual-axis Inverter Features and Indicators

Item	Description
1	Motor cable clamp with spacers
2	Ground terminal
3	Motor feedback (MF) connector - A
4	Motor feedback (MF) connector - B
5	Universal feedback (UFB) connector - A
6	Universal feedback (UFB) connector - B
7	Digital inputs (IOD) connector - A
8	Digital inputs (IOD) connector - B
9	Ethernet (PORT1) RJ45 connector

Item	Description
10	Ethernet (PORT2) RJ45 connector
11	Zero-stack mounting tab/cutout
12	Module status indicator
13	Network status indicator
14	LCD display
15	Navigation pushbuttons
16	Link speed status indicators
17	Link/Activity status indicators
18	Safe torque-off (STO) connector

Item	Description
19	DC bus (DC) connector
20	24V control input power (CP) connector
21	Motor brake (BC) connector - A
22	Motor power (MP) connector - A
23	Motor power (MP) connector - B
24	Motor brake (BC) connector - B
25	Cooling fan

Figure 35 - Single-axis Inverter Features and Indicators

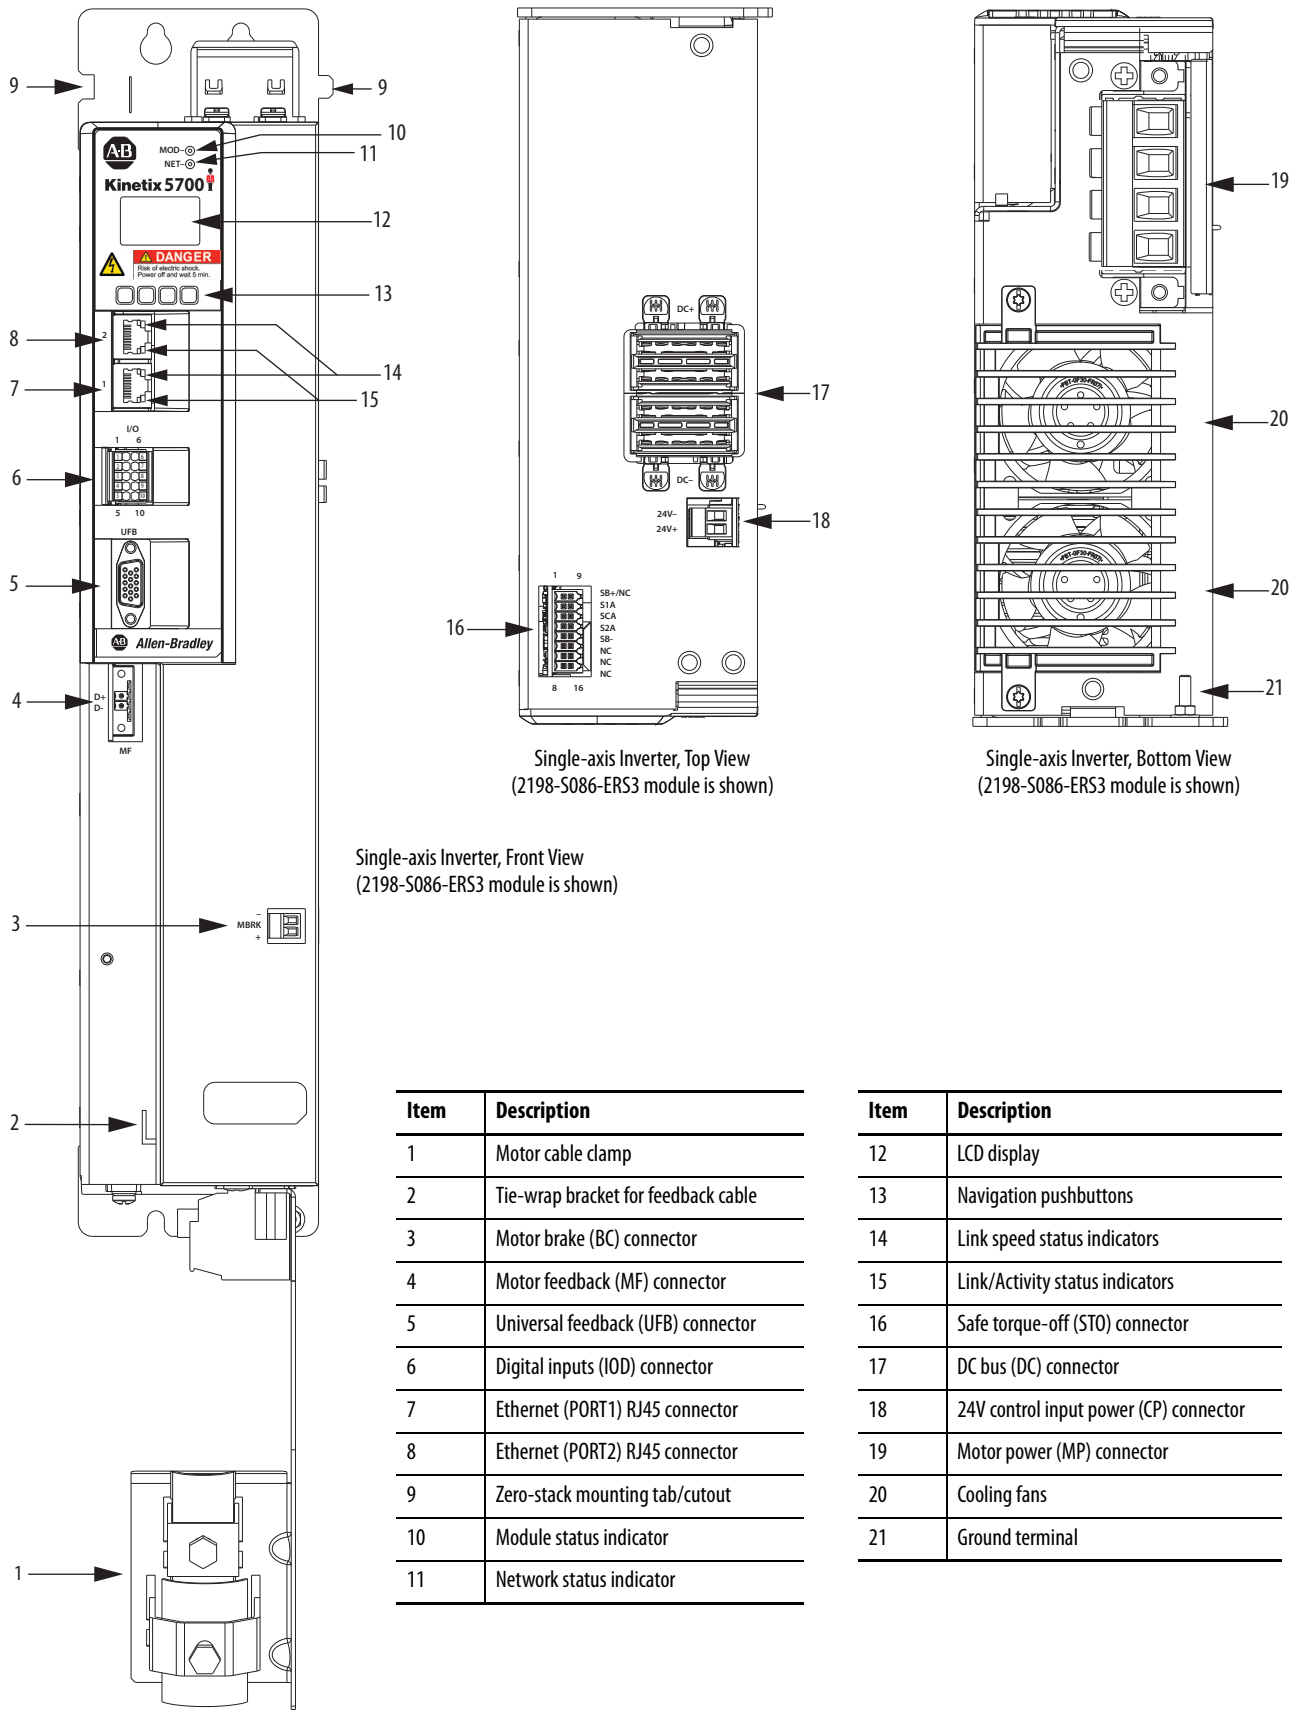
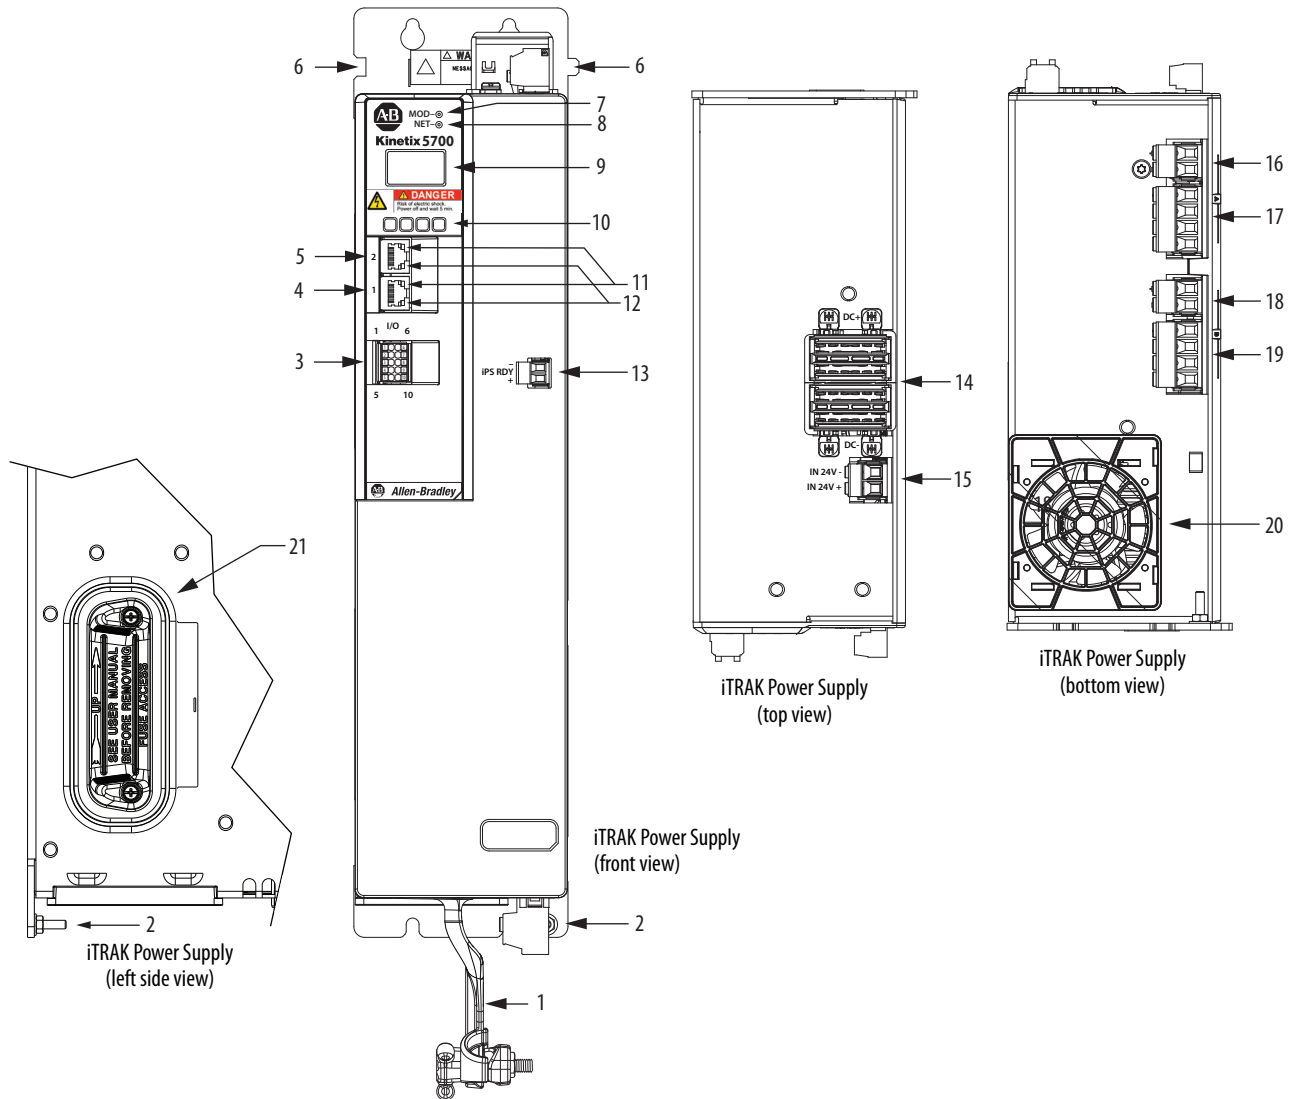


Figure 36 - iTRAK® Power Supply Features and Indicators

Item	Description
1	Power bus cable clamp
2	Ground lug
3	Digital inputs (IOD) connector
4	Ethernet (PORT1) RJ45 connector
5	Ethernet (PORT2) RJ45 connector
6	Zero-stack mounting tab/cutout
7	Module status indicator

Item	Description
8	Network status indicator
9	LCD display
10	Navigation push buttons
11	Link speed status indicators
12	Link/Activity status indicators
13	iTRAK power-supply ready (IR) connector
14	DC bus input (DC) connector

Item	Description
15	24V control input power (CP) connector
16	24V control output power (ICP) connector -A
17	DC bus output (IDC) connector - A
18	24V control output power (ICP) connector - B
19	DC bus output (IDC) connector - B
20	Cooling fan
21	Power supply internal fuse

IMPORTANT See the iTRAK System User Manual, publication [2198T-UM001](#), for IOD, IR, IDC, and ICP connector pinouts, and internal fuse information.

Safe Torque-off Connector Pinout

The hardwired safe torque-off (STO) connector pinouts apply to single-axis and dual-axis inverters. For feature descriptions and wiring information, refer to [Chapter 9](#) beginning on [page 245](#).

Input Power Connector Pinouts

The AC input power (IPD) and contactor-enable (CED) connector pinouts apply to DC-bus power supply. The 24V input power (CP) connector pinout applies to DC-bus power supply, single-axis inverter, dual-axis inverter, and iTRAK power supply.

Table 18 - AC Input Power Connector

IPD Pin	Description	Signal
	Chassis ground	
L3	Three-phase input power	L3
L2		L2
L1		L1

Table 19 - 24V Input Power Connector

CP Pin	Description	Signal
1	24V power supply, customer supplied	24V+
2	24V common	24V–

Table 20 - Contactor Enable Connector

CED Pin	Description	Signal
EN+	Relay-driven contact used in the control string for a three-phase power contactor.	CONT EN+
EN–		CONT EN–

DC Bus and Shunt Resistor Connector Pinouts

The DC-bus (DC) connector pinout applies to DC-bus power supply, single-axis inverter, dual-axis inverter, and iTRAK power supply. The shunt resistor (RC) pinout applies to the DC-bus power supply.

Table 21 - DC Bus Power Connector

DC Pin	Description	Signal
Bus bar	DC bus connections	DC-
		DC+

Table 22 - Shunt Resistor Connector

RC Pin	Description	Signal
1	Shunt connections	SH
2		DC+

Digital Inputs Connector Pinouts

The DC-bus power supply has two configurable digital inputs and four configurable functions to choose from in the Logix Designer application.


Table 23 - DC-bus Supply Digital Input Pinouts

I/O Pin	Description	Signal
1	24V current sinking fast input #1	IN1
2	I/O common for customer-supplied 24V supply	COM
3	24V current sinking fast input #2	IN2
4	I/O common for customer-supplied 24V supply	COM

Table 24 - DC-bus Supply Configurable Functions

Default Configuration	Description
Digital input1= Enable Digital input2 = Unassigned	Unassigned
	Enable
	Bus capacitor OK
	Shunt thermal switch OK

Figure 37 - Pin Orientation for 4-pin Digital Inputs (I/O) Connector

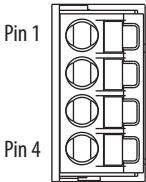

Single-axis and dual-axis inverters have four configurable digital inputs with fast response times and ten configurable functions to choose from in the Logix Designer application.


Table 25 - Inverter Digital Input Pinouts

IOD Pin	Description	Signal
1	24V current sinking fast input #1	IN1
2	I/O common for customer-supplied 24V supply	COM
3	24V current sinking fast input #2	IN2
4	I/O common for customer-supplied 24V supply	COM
5	Chassis ground	SHLD
6	24V current sinking fast input #3	IN3
7	I/O common for customer-supplied 24V supply	COM
8	24V current sinking fast input #4	IN4
9	I/O common for customer-supplied 24V supply	COM
10	Chassis ground	SHLD

Table 26 - Inverter Configurable Functions

Default Configuration	Description
Digital input1= Enable Digital input2 = Home Digital input3 = Registration 1 Digital input4 = Registration 2	Unassigned
	Enable
	Home
	Registration 1
	Registration 2
	Positive overtravel
	Negative overtravel
	Regeneration OK
	Bus capacitor OK
	Shunt thermal switch OK

Figure 38 - Pin Orientation for 10-pin Digital Inputs (IOD) Connector

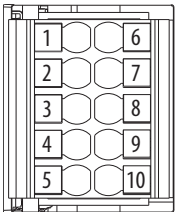


Ethernet Communication Connector Pinout

The Ethernet connector pinout applies to the DC-bus power supply, single-axis inverter, dual-axis inverter, and iTRAK power supply.

Table 27 - Ethernet Connector Pinout

Pin	Description	Signal
1	Transmit+	TD+
2	Transmit–	TD–
3	Receive+	RD+
4	Reserved	–
5	Reserved	–
6	Receive–	RD–
7	Reserved	–
8	Reserved	–

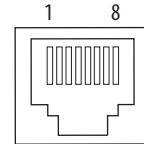

Motor Power, Brake, and Feedback Connector Pinouts

These connector pinouts apply to the single-axis and dual-axis inverter.

Table 28 - Motor Power Connector

MP Pin	Description	Signal	Color
U	Three-phase motor power	U	Brown
V		V	Black
W		W	Blue
	Chassis ground		Green



ATTENTION: To avoid damage to the Kinetix 5700 DC-bus power supply and inverter, make sure the motor power signals are wired correctly. Refer to [Figure 69](#) and [Figure 70](#) beginning on [page 110](#) for connector wiring examples.

IMPORTANT Drive-to-motor power cables must not exceed 90 m (295 ft), depending on feedback type.

System performance was tested at this cable length. These limitations also apply when meeting CE requirements.

Table 29 - Motor Brake Connector

BC Pin	Description	Signal
1	Motor brake connections	MBRK+
2		MBRK–

Motor Feedback Connector Pinouts

These connector pinouts apply to the single-axis and dual-axis inverter.


Table 30 - DSL Feedback Connector

MF Pin	Description	Signal
1	Bidirectional data and power for digital encoder interface	D+
2		D-
SHIELD	Cable shield and grounding plate (internal to 2198-KITCON-DSL connector kit) termination point.	SHIELD
	Cable shield and shield clamp (internal to 2198-H2DCK converter kit) termination point	

IMPORTANT

Drive-to-motor power cables must not exceed 90 m (295 ft), depending on feedback type.
System performance was tested at these cable length specifications. These limitations also apply when meeting CE requirements.

Figure 39 - Pin Orientation for 2-pin DSL Feedback (MF) Connector

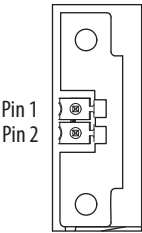

Universal Feedback Connector Pinouts

These connector pinouts apply to the single-axis and dual-axis inverter.

Table 31 - Stegmann Hiperface and TTL Sine/Cosine Universal Feedback Connector


UFB Pin	Description	Signal
1	Sine differential input + A differential input +	MTR_SIN+ MTR_AM+
2	Sine differential input – A differential input –	MTR_SIN– MTR_AM–
3	Cosine differential input + B differential input +	MTR_COS+ MTR_BM+
4	Cosine differential input – B differential input –	MTR_COS– MTR_BM–
5	Data differential input/output + Index differential input +	MTR_DATA+ MTR_IM+
6	Encoder common	MTR_ECOM
7	Encoder 9V power output	MTR_EPWR9V ⁽¹⁾
8	Hall commutation S3 input	MTR_S3

UFB Pin	Description	Signal
9	Clock output +	MTR_CLK+
10	Data differential input/output – Index differential input –	MTR_DATA– MTR_IM–
11	Motor thermostat (normally closed) ⁽²⁾	MTR_TS
12	Hall commutation S1 input	MTR_S1
13	Hall commutation S2 input	MTR_S2
14	Encoder 5V power output	MTR_EPWR5V ⁽¹⁾
15	Clock output –	MTR_CLK–

(1) Determine which power supply your encoder requires and connect to only the specified supply. Do not make connections to both supplies.

(2) Not applicable unless motor has integrated thermal protection.

Figure 40 - Pin Orientation for 15-pin Universal Feedback (UFB) Connector

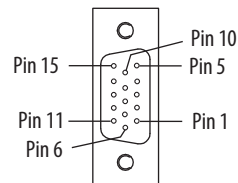

Understand Control Signal Specifications

This section provides a description of the Kinetix 5700 digital inputs, Ethernet communication, power and relay specifications, encoder feedback specifications, and safe torque-off features.

Digital Inputs

Digital inputs are available for the machine interface on the IOD connector. Two for the DC-bus power supply, four for the single-axis inverter, and four per axis for the dual-axis inverters. Digital inputs require a 24V DC @ 15 mA supply. These are sinking inputs that require a sourcing device. A common connection is provided on the IOD connector for each of the digital inputs.

IMPORTANT To improve registration input EMC performance, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

Table 32 - Understand Digital Input Functions

Functions	Description ⁽²⁾
Enable	A 24V DC input is applied to this terminal as a condition to enable each module.
Home	An active state indicates to a homing sequence that the referencing sensor has been seen. Typically, a transition of this signal is used to establish a reference position for the machine axis.
Registration 1	An inactive-to-active transition (also known as a positive transition) or active-to-inactive transition (also known as a negative transition) is used to latch position values for use in registration moves.
Registration 2	
Positive overtravel Negative overtravel	The positive/negative limit switch (normally closed contact) inputs for each axis require 24V DC (nominal).
Regeneration OK ⁽¹⁾	In the active state the inverters can be enabled. An inactive state indicates that the Bulletin 8720MC-RPS unit is not ready to supply DC-bus power. The inverters cannot be enabled. When a bus group is supplied by an 8720MC-RPS unit, one inverter in the bus group must be configured in the Logix Designer application as Shared-DC Non-CIP Motion™ Converter and assigned to Regenerative OK. This signal is wired from RDY on the 8720MC-RPS unit and indicates to the Kinetix 5700 drive system that the 8720MC-RPS unit is ready to supply power. Enabled inverters enumerate a Bus Power Sharing fault if the Regeneration OK input goes inactive.
Shunt thermal switch OK	When the 2198-R014, 2198-R031, or 2198-R127 external shunt resistor is wired to the DC-bus power supply, this input must be configured in the Logix Designer application to monitor the status of the external shunt module thermal switch and assigned to Shunt thermal switch OK. This function does not apply to the 2198-R004 shunt resistor. You can also use this input to monitor the status of an active shunt module in the system that is connected via the capacitor module or an extension module.
Bus capacitor OK	You can configure this input in the Logix Designer application and wire the module status (MS) relay output from the 2198-CAPMOD-2240 capacitor module to indicate to the inverter that a major fault is present on the capacitor module.

(1) For more information on configuring a Shared-bus Non-CIP Motion Converter, refer to [step 6](#) on [page 157](#).


For more information on wiring the 8720MC-RPS unit, refer to [Figure 127](#) on [page 275](#).

(2) The function is always inactive unless assigned to a digital input in the Logix Designer application.

For more information on configuring a Regeneration OK, Shunt thermal switch OK, or Bus capacitor OK, refer to [step 11](#) on [page 153](#).

Table 33 - Digital Input Specifications

Attribute	Value
Type	Optically isolated, active high, single-ended, current sinking (EN 61131-2 Type 1)
Input current (with 24V applied)	12 mA, typical
On-state input voltage	15...30V @ 15 mA, max
Off-state input voltage	-1.0...5.0V
Pulse reject filtering (registration functions)	12.0 μ s
Pulse reject filtering (home input function) debounce filter	20 ms, nom
Propagation delay (registration functions)	0 (delay compensated)
Registration accuracy	± 3 μ s
Registration repeatability	700 ns
Windowed registration invalid-to-valid event delay	125 μ s, min

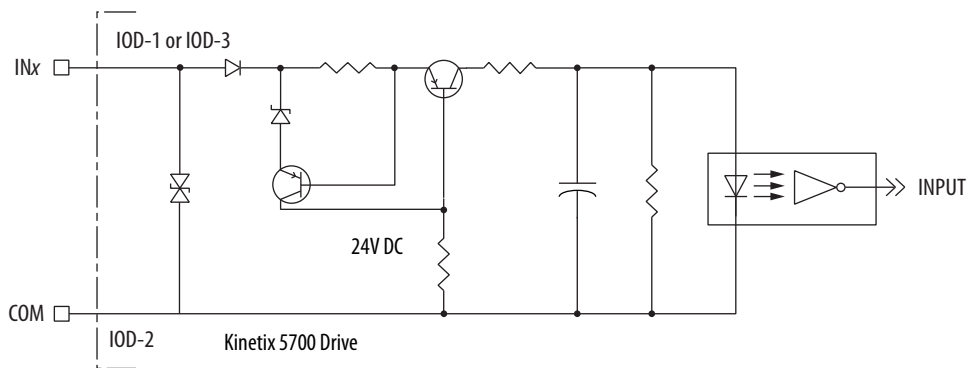Figure 41 - Digital Input Circuitry

Ethernet Communication Specifications

The PORT1 and PORT2 (RJ45) Ethernet connectors are provided for communication with the Logix5000™ controller.

Attribute	Value
Communication	The drive auto-negotiates speed and duplex modes. These modes can be forced through the Logix Designer application. 100BASE-TX, full duplex is recommended for maximum performance.
Cyclic update period	1.0 ms, min
Embedded switch features	Three-port, cut-through, time correction on IEEE-1588 packets, limited filtering, quality of service with four priority levels
Auto MDI/MDIX crossover detection/correction	Yes
Port-to-port time synchronization variation	100 ns, max
Cabling	CAT5e shielded, 100 m (328 ft) max

Contactor Enable Relay

The contactor-enable circuitry includes a relay-driven contact within the 2198-Pxxx DC-bus power supply. The relay protects the Kinetix 5700 drive system in the event of overloads or other fault conditions.


An AC three-phase mains contactor must be wired in series between the branch circuit protection and the DC-bus power supply. In addition, the AC three-phase contactor control string must be wired in series with the contactor-enable relay at the contactor-enable (CED) connector. Refer to [Power Wiring Examples](#) on [page 269](#) for wiring examples.



ATTENTION: Wiring the contactor-enable relay is required. To avoid personal injury or damage to the drive, wire the contactor-enable relay into your control string so that:

- three-phase power is removed and the DC-bus power supply is protected under various fault conditions.
- three-phase power is never applied to the Kinetix 5700 drive system before control power is applied.

Figure 42 - Contactor-enable Relay Circuit

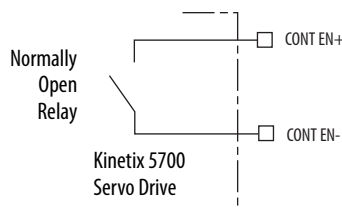

Surge suppression (diode, varistor module, RC module, or DC electronic interface) is required across the auxiliary and main contactor coils.

Table 34 - Contactor-enable Relay Output Specifications

Attribute	Value	Min	Max
On-state current	Current flow when the relay is closed	—	1 A
On-state resistance	Contact resistance when the relay is closed	—	1 Ω
Off-state voltage	Voltage across the contacts when the relay is open	—	240V DC


Motor Brake Circuit

The brake option is a spring-set holding brake that releases when voltage is applied to the brake coil in the motor. The customer-supplied 24V power supply drives the brake output through a solid-state relay. The dual-axis inverters have separate brake circuits for each axis. The solid-state brake driver circuit provides the following:

- Brake current-overload protection
- Brake over-voltage protection

Two connections (BC-1 and BC-2) are required for the motor brake output (refer to [Figure 43](#)). Connections are rated for 2.0 A @ +24V (dual-axis inverters) and 5.0 A @ +24V (single-axis inverters).

Figure 43 - Motor Brake Circuit

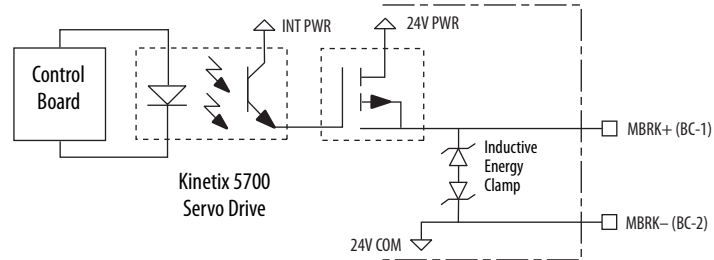

IMPORTANT Motor holding-brake switching frequency must not exceed 10 cycles/min.

Control of the solid-state relay to release the motor brake is configurable in the Logix Designer application (refer to [Configure SPM Motor Closed-loop Control Axis Properties](#) on [page 178](#)). An active signal releases the motor brake. Turn-on and turn-off delays are specified by the MechanicalBrakeEngageDelay and MechanicalBrakeReleaseDelay settings.

IMPORTANT Holding brakes that are available on Allen-Bradley® rotary motors are designed to hold a motor shaft at 0 rpm for up to the rated brake-holding torque, not to stop the rotation of the motor shaft, or be used as a safety device.

You must command the servo drive to 0 rpm and engage the brake only after verifying that the motor shaft is at 0 rpm.

These steps provide one method you can use to control a brake.

1. Wire the mechanical brake according to the appropriate interconnect diagram in Appendix A beginning on [page 282](#).
2. Enter the MechanicalBrakeEngageDelay and MechanicalBrakeReleaseDelay times in the Logix Designer application.
Refer to Axis Properties>Parameter List. The delay times must be from the appropriate motor family brake specifications table in the Kinetix Rotary Motion Specifications Technical Data, publication [KNX-TD001](#).
3. Use the drive stop-action default setting (Current Decel & Disable).
Refer to Axis Properties>Actions>Stop Action in the Logix Designer application.
4. Use the motion instruction Motion Axis Stop (MAS) to decelerate the servo motor to 0 rpm.
5. Use the motion instruction Motion Servo Off (MSF) to engage the brake and disable drive.

Control Power

The Kinetix 5700 drive modules require 24V DC (21.6...26.4V) input power for control circuitry.

IMPORTANT SELV or PELV rated power supplies must be used to energize external safety devices connected to the Kinetix 5700 safety inputs.

The National Electrical Code and local electrical codes take precedence over the values and methods provided. Implementation of these codes is the responsibility of the machine builder.

Table 35 - Control Power Current Specifications

Drive Module	Drive Module Cat. No.	24V Current Per Module (non-brake motor) A _{DC}	24V Current, max (with maximum brake current) A _{DC}	24V Inrush Current ⁽⁵⁾ A
DC-bus Power Supplies	2198-P030	0.8	N/A	4.0
	2198-P070			
	2198-P141	1.9		
	2198-P208			
Dual-axis Inverters	2198-D006-ERS3	1.4 ⁽²⁾	5.5 ⁽³⁾	4.0
	2198-D012-ERS3			
	2198-D020-ERS3			
	2198-D032-ERS3	1.7 ⁽²⁾	7.7 ⁽³⁾	
	2198-D057-ERS3	2.3 ⁽²⁾	8.3 ⁽³⁾	
Single-axis Inverters	2198-S086-ERS3	4.6	9.6 ⁽⁴⁾	4.0
	2198-S130-ERS3			
	2198-S160-ERS3			
iTRAK Power Supply ⁽¹⁾	2198T-W25K-ER	1.3	N/A	2.2
Capacitor Modules	2198-CAPMOD-2240	0.5	N/A	N/A
	2198-CAPMOD-DCBUS-IO	N/A		

(1) These values represent only the iTRAK power supply. They do not include the iTRAK motor modules that are connected to the iTRAK power supply and also draw current from this 24V control power input. For more information regarding 24V control power requirements, see the iTRAK System User Manual, publication [2198T-UM001](#).

(2) Values are base current per module.

(3) Values assume two brake motors, each drawing the maximum rating of 3 A, are attached to each module.

(4) Values assume the maximum rated brake current of 5 A.

(5) Inrush current duration is less than 30 ms.

Feedback Specifications

The Kinetix 5700 drives accept motor feedback signals from Stegmann Hiperface digital-servo-link (DSL) encoders on the motor feedback (MF) connector and Hiperface, incremental, and EnDat encoders on the universal feedback (UFB) connector.

TIP Auto-configuration in the Logix Designer application of intelligent absolute, high-resolution encoders, incremental, and EnDat encoders is possible with only Allen-Bradley motors.

The MF and UFB connectors can be used in the following applications:

- Motor feedback
- Auxiliary feedback-only axis
- Dual-loop control applications

Encoder Feedback Supported on the DSL Feedback Connector

The Kinetix 5700 drives support Kinetix VP motors with Stegmann Hiperface digital-servo-link (DSL) encoders by using the 2-pin (MF) feedback connector.

Other Allen-Bradley motors and actuators with Stegmann Hiperface single-turn or multi-turn high-resolution absolute encoders are also accepted. However, to connect these devices to the MF connector, you must also use the 2198-H2DCK Hiperface-to-DSL (series B or later) converter kit for Hiperface-to-DSL feedback conversion. Alternatively, you can use the universal (UFB) feedback connector for those motors and actuators.

Encoder Feedback Supported on the UFB Feedback Connector

The Kinetix 5700 drives also support multiple types of feedback devices by using the 15-pin (UFB) universal feedback connector and sharing connector pins in many cases. Use the 2198-K57CK-D15M universal feedback connector kit for terminating the feedback conductors.

Table 36 - Universal Feedback General Specifications

Attribute	Motor Feedback	Auxiliary Feedback
Feedback device support	• Stegmann Hiperface • Generic TTL Incremental • Generic Sine/Cosine Incremental • Heidenhain EnDat Sin/Cos ⁽¹⁾ • Heidenhain EnDat Digital ⁽²⁾	• Stegmann Hiperface • Generic TTL Incremental • Generic Sine/Cosine Incremental • Heidenhain EnDat Sin/Cos • Heidenhain EnDat Digital
Power supply voltage (MTR_EPWR5V) Power supply current (MTR_EPWR5V)	5.27...5.50V 300 mA, max	
Power supply voltage (MTR_EPWR9V) Power supply current (MTR_EPWR9V)	8.30...9.90V 150 mA, max	
Thermostat	Single-ended, under 500 Ω = no fault, over 10 k Ω = fault	Single-ended, under 500 Ω = no fault, over 10 k Ω = fault

(1) EnDat sine/cosine encoders support only RDD-Series direct-drive motors (Bulletin RDB).

(2) EnDat digital encoders support only third-party motors.

Table 37 - Universal Feedback Signals by Device Type

UFB Pin	Stegmann Hiperface	Generic TTL Incremental	Generic Sine/Cosine Incremental	Heidenhain EnDat Sine/Cosine	Heidenhain EnDat Digital
1	MTR_SIN+	MTR_AM+	MTR_SIN+	ENDAT_B+	—
2	MTR_SIN—	MTR_AM—	MTR_SIN—	ENDAT_B—	—
3	MTR_COS+	MTR_BM+	MTR_COS+	ENDAT_A+	—
4	MTR_COS—	MTR_BM—	MTR_COS—	ENDAT_A—	—
5	MTR_DATA+	MTR_IM+	MTR_IM+	MTR_DATA+	MTR_DATA+
6	MTR_ECOM	MTR_ECOM	MTR_ECOM	MTR_ECOM	MTR_ECOM
7	MTR_EPWR9V ⁽¹⁾	—	—	MTR_EPWR9V ⁽¹⁾	MTR_EPWR9V ⁽¹⁾
8	—	MTR_S3	MTR_S3	—	—
9	—	—	—	MTR_CLK+	MTR_CLK+
10	MTR_DATA—	MTR_IM—	MTR_IM—	MTR_DATA—	MTR_DATA—
11	MTR_TS	MTR_TS	MTR_TS	MTR_TS	MTR_TS
12	—	MTR_S1	MTR_S1	—	—
13	—	MTR_S2	MTR_S2	—	—
14	MTR_EPWR5V ⁽¹⁾	MTR_EPWR5V	MTR_EPWR5V	MTR_EPWR5V ⁽¹⁾	MTR_EPWR5V ⁽¹⁾
15	—	—	—	MTR_CLK—	MTR_CLK—


(1) Determine which power supply your encoder requires and connect to only the specified supply. Do not make connections to both supplies.



ATTENTION: To avoid damage to components, determine which power supply your encoder requires and connect to either the 5V or 9V supply, but not both.

This is the motor thermostat interface schematic. Although the thermostat signal is shown for all feedback types, some motors may not support this feature because it is not part of the feedback device.

Figure 44 - Motor Thermostat Interface

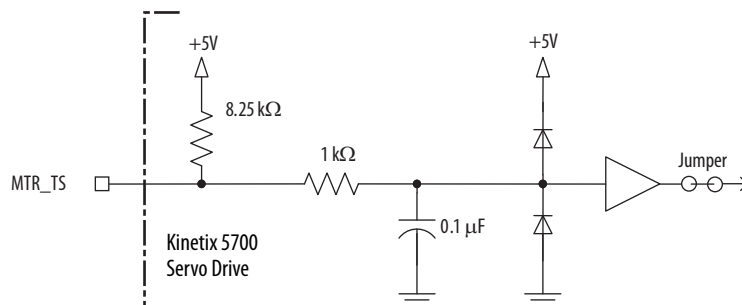

Stegmann Hiperface Feedback

Figure 45 - Stegmann Hiperface Interface, MTR_SIN and MTR_COS Signals


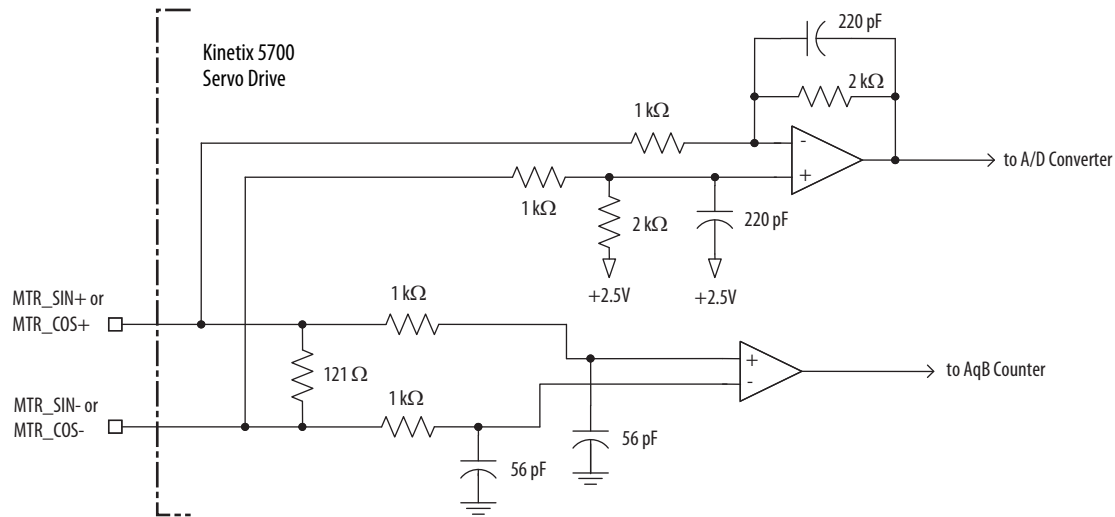


Figure 46 - Stegmann Hiperface Interface, MTR_DATA Signals

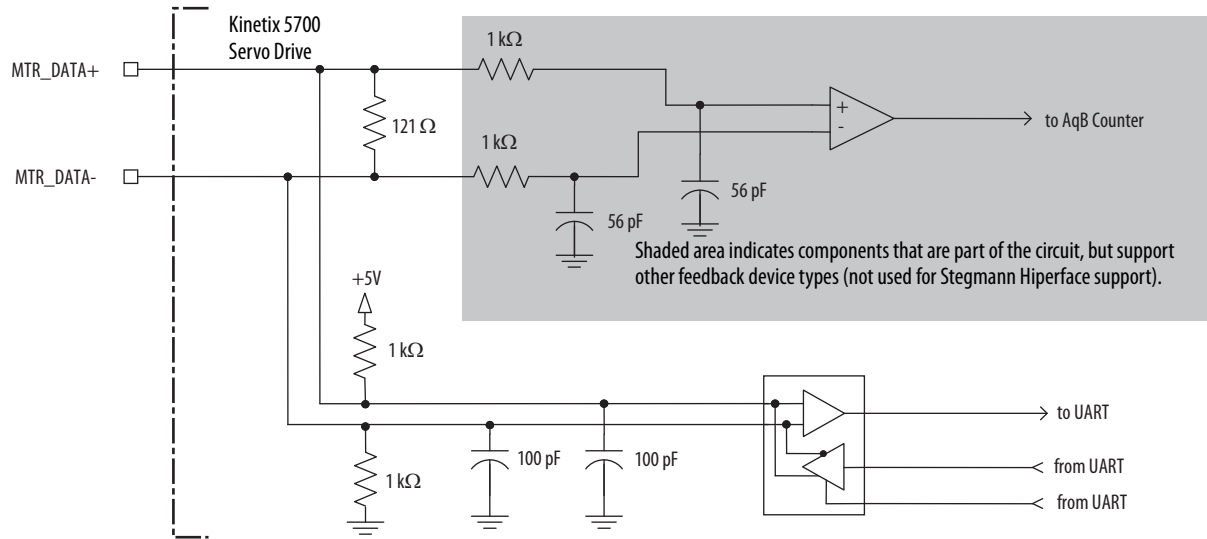


Generic TTL Feedback

Table 38 - Generic TTL Incremental Specifications

Attribute	Value
TTL incremental encoder support	5V, differential A quad B
Quadrature interpolation	4 counts / square wave period
Differential input voltage (MTR_AM, MTR_BM, and MTR_IM)	5V DC, differential line driver (DLD) output compatible
DC current draw (MTR_AM, MTR_BM, and MTR_IM)	30 mA, max
Input signal frequency (MTR_AM, MTR_BM, and MTR_IM)	5.0 MHz, max
Edge separation (MTR_AM and MTR_BM)	42 ns min, between any two edges
Commutation verification	Commutation angle verification performed at the first Hall signal transition and periodically verifies thereafter
Hall inputs (MTR_S1, MTR_S2, and MTR_S3)	Single-ended, TTL, open collector, or none

Figure 47 - Generic TTL Incremental, MTR_AM and MTR_BM Signals

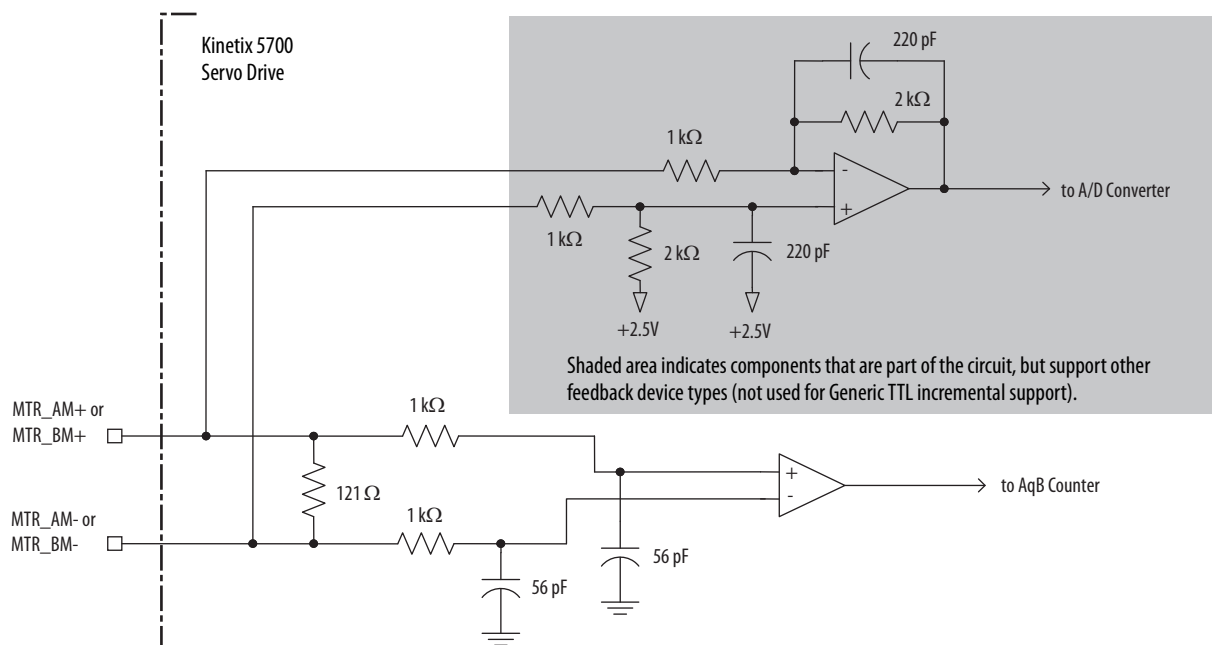

*Generic Sine/Cosine Feedback***Table 39 - Generic Sine/Cosine Incremental Specifications**

Attribute	Value
Sine/Cosine interpolation	2048 counts/sine wave period
Input frequency (MTR_SIN and MTR_COS)	250 kHz, max
Differential input voltage (MTR_SIN and MTR_COS)	0.6...1.2V, p-p
Commutation verification	Commutation angle verification performed at the first Hall signal transition and periodically verifies thereafter
Hall inputs (MTR_S1, MTR_S2, and MTR_S3)	Single-ended, TTL, open collector, or none

Refer to [page 82](#) for the generic sine/cosine interface schematic. It is identical to the Stegmann Hiperface (MTR_AM and MTR_BM) signal schematic.

Refer to [page 83](#) for the Hall (MTR_S1, MTR_S2, and MTR_S3) signal schematic.

Refer to [Encoder Phasing Definitions](#) on [page 88](#) for encoder phasing alignment diagrams.


EnDat Sine/Cosine Feedback

Table 40 - EnDat Sine/Cosine Interface Specifications

Attribute	Value
Protocol	EnDat Sine/Cosine
EnDat Sine/Cosine data communication	2 Mbps, synchronous
Sine/Cosine interpolation	2048 counts/sine wave period
Input frequency (MTR_SIN and MTR_COS)	250 kHz, max
Differential input voltage (MTR_SIN and MTR_COS)	0.6...1.2V, p-p
Incremental position verification	Position compare between incremental accumulator and serial data performed every 50 ms or less.

Refer to [page 81](#) for the EnDat sine/cosine interface schematic. It is identical to the Stegmann Hipurface (MTR_SIN and MTR_COS) schematic.

Figure 50 - EnDat Sin/Cos and EnDat Digital Interface Schematic for Serial Communication

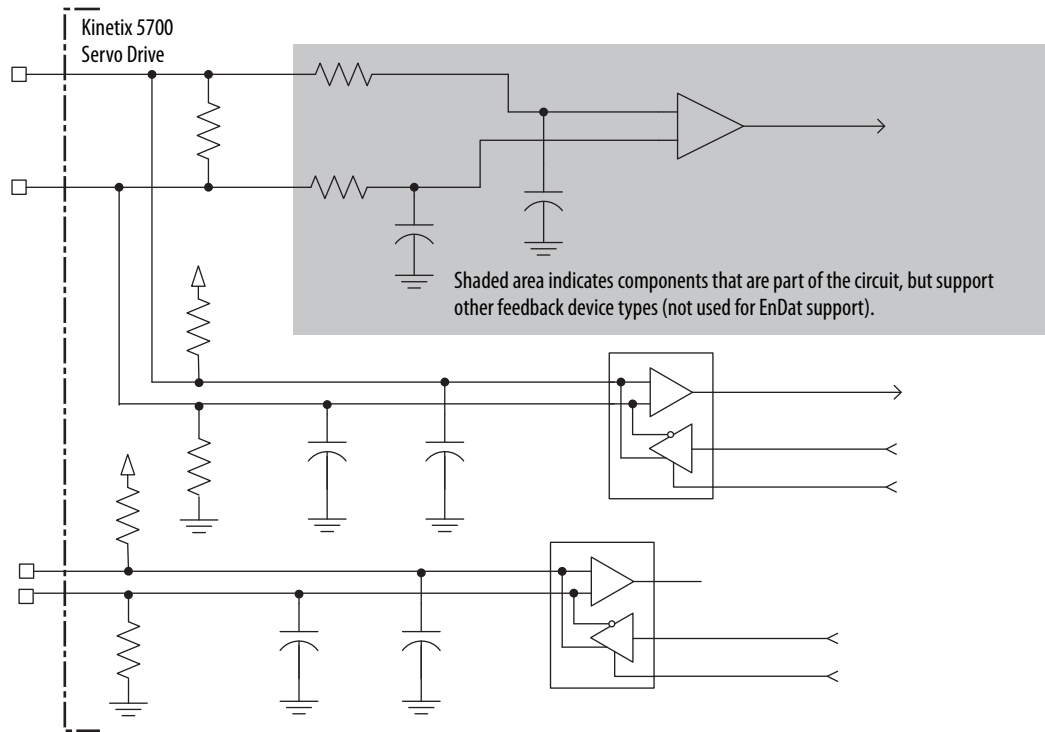

*EnDat Digital Feedback***Table 41 - EnDat Digital Interface Specifications**

Attribute	Value
EnDat Digital data communication	4 Mbps, synchronous

Table 42 - Support Requirements for EnDat Encoders

Requirement	EnDat Sine/Cosine	EnDat Digital
Supported models	ECI1319 / EQI1331 ECI1118 / EQI1130 ECI119 ECN113 ECN1313 / EQN1325 ECN413 / EQN425 ROQ425	LC483 LIC4000 ECN125 ROQ437 ECN1123 / EQN1135 ECN1325 / EQN1337
Position initialization	Digital	
Position tracking	Uses sine/cosine signals	Digital
Data frequency	100 kHz	4.125 MHz
Sine/cosine frequency	0...250 kHz	—

IMPORTANT To properly support system EnDat feedback, the keying configuration on the drive Module Properties tab of the Logix Designer application must be selected to use Kinetix 5700 drive firmware revision 5.0 or later.

IMPORTANT Unprogrammed Smart feedback devices (Hiperface Sin/Cos, Hiperface DSL, EnDat Sin/Cos, and EnDat Digital) are not supported. Unprogrammed as load or feedback-only feedback types are supported. Contact your local distributor or Rockwell Automation representative for support options.

Auxiliary Feedback Specifications

The Kinetix 5700 inverters support multiple types of feedback devices by using the 15-pin (UFB) connector and sharing connector pins in many cases. Refer to [Configure Feedback-only Axis Properties](#) on [page 163](#) to use these in your application.

Table 43 - Auxiliary Feedback Signals by Device Type

UFB Pin	Stegmann Hiperface	Generic TTL Incremental	Generic Sine/Cosine Incremental	Heidenhain EnDat Sin/Cos	Heidenhain EnDat Digital
1	AUX_SIN+	AUX_AM+	AUX_SIN+	ENDAT_B+	—
2	AUX_SIN-	AUX_AM-	AUX_SIN-	ENDAT_B-	—
3	AUX_COS+	AUX_BM+	AUX_COS+	ENDAT_A+	—
4	AUX_COS-	AUX_BM-	AUX_COS-	ENDAT_A-	—
5	AUX_DATA+	AUX_IM+	AUX_IM+	AUX_DATA+	AUX_DATA+
6	AUX_ECOM	AUX_ECOM	AUX_ECOM	AUX_ECOM	AUX_ECOM
7	AUX_EPWR9V ⁽¹⁾	—	—	AUX_EPWR9V ⁽¹⁾	AUX_EPWR9V ⁽¹⁾
9	—	—	—	AUX_CLK+	AUX_CLK+
10	AUX_DATA-	AUX_IM-	AUX_IM-	AUX_DATA-	AUX_DATA-
14	AUX_EPWR5V ⁽¹⁾	AUX_EPWR5V	AUX_EPWR5V	AUX_EPWR5V ⁽¹⁾	AUX_EPWR5V ⁽¹⁾
15	—	—	—	AUX_CLK-	AUX_CLK-

(1) Determine which power supply your encoder requires and connect to only the specified supply. Do not make connections to both supplies.



ATTENTION: To avoid damage to components, determine which power supply your encoder requires and connect to either the 5V or 9V supply, but not both.

Specifications for the auxiliary feedback channel are identical to the motor feedback channel, except for specifications related to commutation and blob programming.

The 9.0V and 5.0V power supplies for auxiliary feedback devices are shared with the motor feedback channel, and the total current capability is outlined in the table on [page 79](#).

Allen-Bradley Bulletin 842HR, 844D, 847H, and 847T encoders are the preferred encoders for auxiliary feedback connections.

Table 44 - Allen-Bradley Auxiliary Feedback Encoders


Cat. No.	Description
842HR-MJDZ115FWYD (multi-turn) 842HR-SJDZ115FWYD (single-turn)	Size 25, sine/cosine (serial), square flange, 3/8 in. solid shaft with flat, 5...12V DC, digital RS-485 interface, M23, 17-pin connector
844D-B5CC1FW	HS35, hollow-shaft incremental encoders, rear (through-shaft), 5/8 inch, tether, 3/8 in. bolt on a 2.5...4.0 in. diameter, 10-pin connector, 5V DC in, 5V DC DLD out
844D-B5CC1CS	
844D-B5CC1DR	
847H-DN1A-RH01024	Size 25, incremental encoder, standard square flange, 3/8 inch diameter shaft with flat, 4.5...5.5V line driver, TTL (B-Leads-A, CW, Z gated with BN), MS connector, 10-pin
847H-DN1A-RH02048	
847H-DN1A-RH05000	
847T-DN1A-RH01024	Size 20, incremental encoder, standard square flange, 3/8 inch diameter shaft with flat, 4.5...5.5V line driver, TTL (B-Leads-A, CW, Z gated with BN), MS connector, 10-pin
847T-DN1A-RH02048	

Refer to the Kinetix Motion Accessories Technical Data, publication [KNX-TD004](#), for more information on these Allen-Bradley encoders.

Encoder Phasing Definitions


For TTL encoders, the drive position increases when A leads B. Clockwise motor rotation is assumed, when looking at the shaft.

Figure 51 - TTL Encoder Phasing

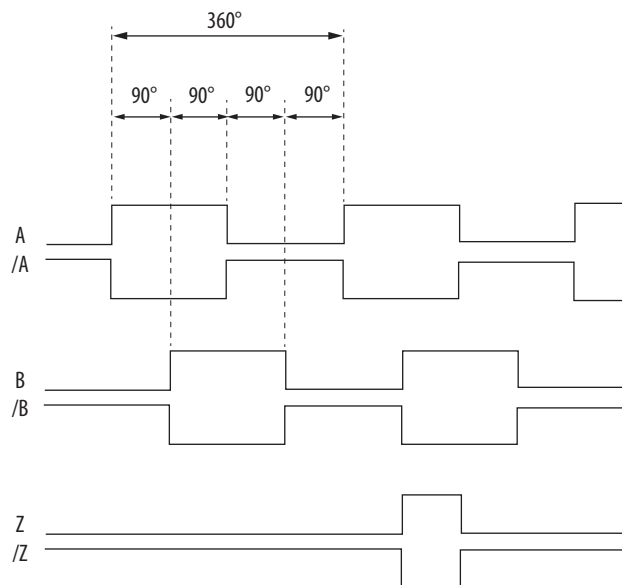

For Sin/Cos encoders (Stegmann Hiperface and Heidenhain EnDat), the drive position increases when Cosine (B) leads Sine (A). Clockwise motor rotation is assumed, when looking at the shaft.

Figure 52 - Sine/Cosine Encoder Phasing

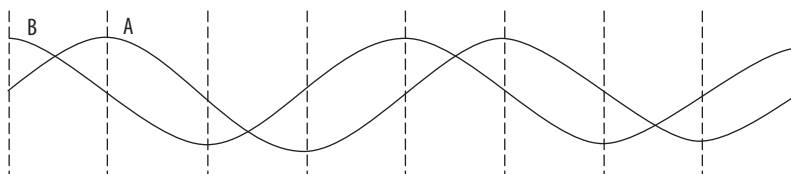


IMPORTANT The Sine/Cosine encoder signal phasing is different than the TTL encoder signal phasing.

IMPORTANT When using a Sine/Cosine feedback device, the drive cannot synthesize a marker signal, so a physical marker signal is required for the home-to-marker sequence (and the marker hookup test) to complete.

When using absolute feedback devices (for example, Stegmann Hiperface) the drive synthesizes a marker signal because these devices don't have a marker signal required for the home-to-marker sequence (and the marker hookup test) to complete.

The drive UFB feedback connector uses Hall signals to initialize the commutation angle for permanent magnet motor commutation.

Figure 53 - Hall Encoder Phasing

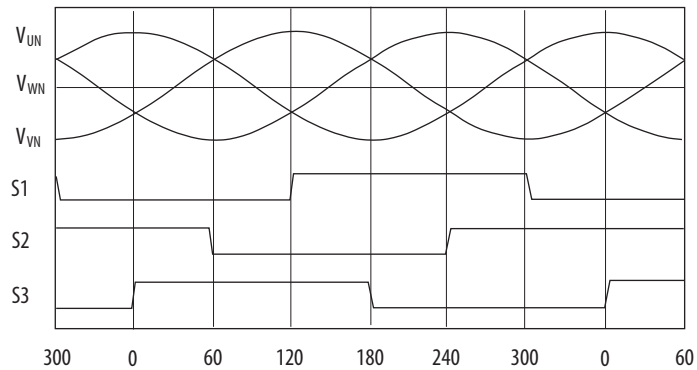


Absolute Position Feature

The absolute position feature tracks the position of the motor, within the multi-turn retention limits, while the drive is powered off. The absolute position feature is available with only multi-turn encoders.

Table 45 - Absolute Position Retention Limits

Encoder Type	Cat. No. Designator	Motor/Actuator Cat. No.	Retention Limits	
			Turns (rotary)	mm (in.) linear
Stegmann Hiperface (DSL)	-P	VPL-Bxxxxx-P, VPF-Bxxxxx-P, VPS-Bxxxxx-P	4096 (± 2048)	N/A
	-W	VPL-Bxxxxx-W, VPF-Bxxxxx-W	4096 (± 2048)	N/A
	-Q	VPL-Bxxxxx-Q, VPF-Bxxxxx-Q, VPC-Bxxxxx-Q	512 (± 256)	N/A
Stegmann Hiperface	-M	MPL-Bxxxxx-M, MPM-Bxxxxx-M, MPF-Bxxxxx-M, MPS-Bxxxxx-M, MPAR-B3xxxx-M, MPAL-BxxxxxM	2048 (± 1024)	N/A
	-V	MPL-Bxxxxx-V, MPAS-Bxxxx1-V05, MPAS-Bxxxx2-V20, MPAR-B1xxxx-V, MPAR-B2xxxx-V, MPAL-BxxxxxV	4096 (± 2048)	N/A
Stegmann Hiperface (magnetic scale)	-xDx	LDAT-Sxxxxxx-xDx	N/A	960 (37.8)
Heidenhain EnDat	-7	RDB-Bxxxxxx-7	1024 (± 512)	N/A
	-Y	VPC-Bxxxxxx-Y	128 (± 64)	N/A

Figure 54 - Absolute Position Limits (measured in turns)

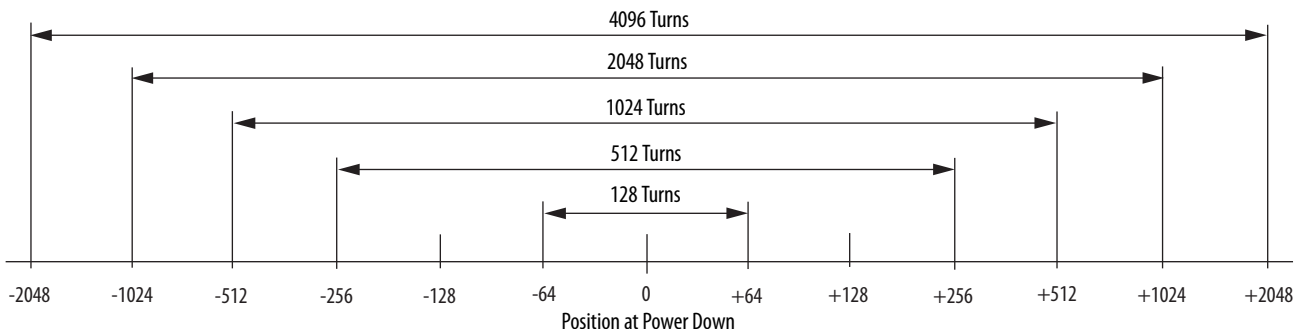

Safe Torque-off Safety Features

Kinetix 5700 drives have the capability to safely turn off the inverter power transistors in response to a monitored digital input, in accordance with Category 0 Stop behavior. Hardwired and integrated safety options are available on all Kinetix 5700 servo drives.

Hardwired STO Mode

Hardwired safe torque-off (STO) mode supports parallel input terminals for cascading to adjacent drives over duplex wiring. For applications that do not require the safety function you must install jumper wires to bypass the safe torque-off feature.

Refer to [Hardwired Safe Torque-off](#) on [page 242](#) for the STO connector pinout, installation, and wiring information.

Integrated STO Mode

In integrated STO mode, the GuardLogix® 5570 or Compact GuardLogix 5370 safety controller issues the safe torque-off (STO) command over the EtherNet/IP™ network and the Kinetix 5700 drives execute the STO commands.

Refer to [Integrated Safe Torque-off](#) on [page 251](#) for integrated safety drive specifications, configuring motion and safety connections, direct motion commands, and the STO bypass feature.

Connect the Kinetix 5700 Drive System

This chapter provides procedures for wiring your Kinetix® 5700 system components and making cable connections.

Topic	Page
Basic Wiring Requirements	92
Determine the Input Power Configuration	93
Remove the Grounding Screws/Jumper in Select Power Configurations	96
Grounding the Drive System	97
Wiring Requirements	100
Wiring Guidelines	103
Wiring the Power Connectors	103
Wiring the Digital Input Connectors	107
Wiring Single Cables	109
Wiring Power/Brake and Feedback Cables	115
Capacitor Module Connections	129
External Passive-shunt Connections	131
External Active-shunt Connections	132
Ethernet Cable Connections	134

Basic Wiring Requirements

This section contains basic wiring information for the Kinetix 5700 DC-bus power supplies, servo drives, the iTRAK power supply, and accessories.



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to components.



SHOCK HAZARD: To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2198 drive modules prior to applying power. Once power is applied, connector terminals can have voltage present even when not in use.

IMPORTANT This section contains common PWM servo system wiring configurations, size, and practices that can be used in a majority of applications. National Electrical Code, local electrical codes, special operating temperatures, duty cycles, or system configurations take precedence over the values and methods provided.

Routing the Power and Signal Cables

Be aware that when you route power and signal wiring on a machine or system, radiated noise from nearby relays, transformers, and other electronic devices can be induced into I/O communication, or other sensitive low voltage signals. This can cause system faults and communication anomalies.

The Bulletin 2090 single motor cable contains the power, brake, and feedback wires, but is properly shielded to protect the noise-sensitive feedback signals.

Refer to [Electrical Noise Reduction](#) on [page 40](#) for examples of routing high and low voltage cables in wireways. Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for more information.

Determine the Input Power Configuration

Before wiring input power to your DC-bus power supply, you must determine the type of input power within your facility. The drive modules are designed to operate in both grounded and ungrounded environments.



ATTENTION: Ungrounded, corner-grounded, and impedance-grounded input power configurations are permitted for the drive modules, but you must remove the ground screws/jumper. In addition, remove the ground screws/jumper when an active converter supplies the DC-bus voltage. Refer to [Remove the Grounding Screws/Jumper in Select Power Configurations](#) on [page 96](#) for more information.




ATTENTION: The DC-bus power supply that supplies DC-bus voltage to the iTRAK power supply must have a grounded-wye power configuration.

Grounded Power Configurations

The grounded (WYE) power configuration lets you ground your three-phase power at a neutral point. This type of grounded power configuration is preferred.

Figure 55 - Grounded Power Configuration (WYE Secondary)

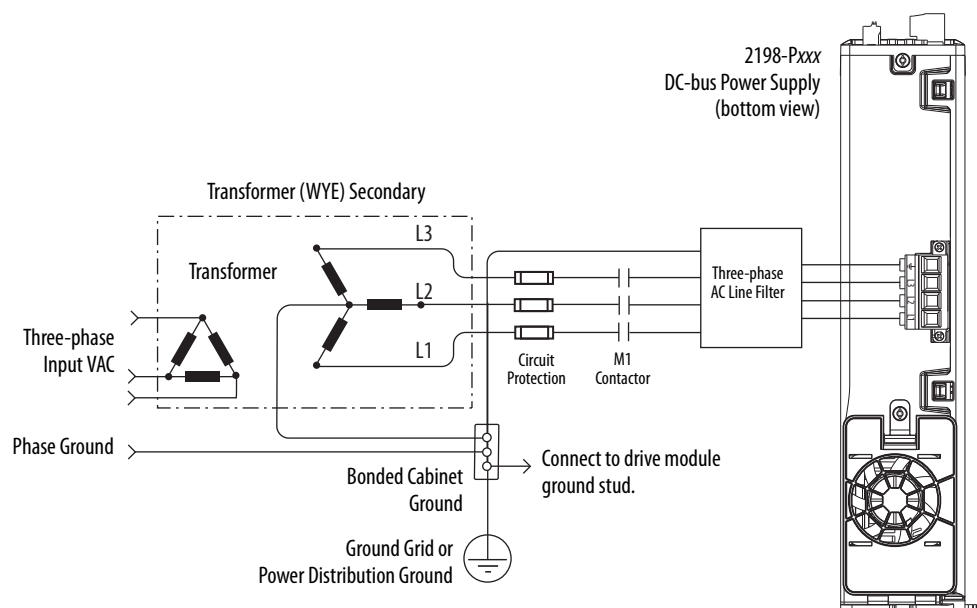

The DC-bus power supply, Bulletin 2198 inverters, and iTRAK power supply have a factory-installed grounding screw or jumper for grounded power distribution.

IMPORTANT If you determine that you have grounded power distribution in your facility, you do not need to remove the grounding screw/jumper.

Figure 56 - Impedance-grounded Power Configuration (WYE Secondary)


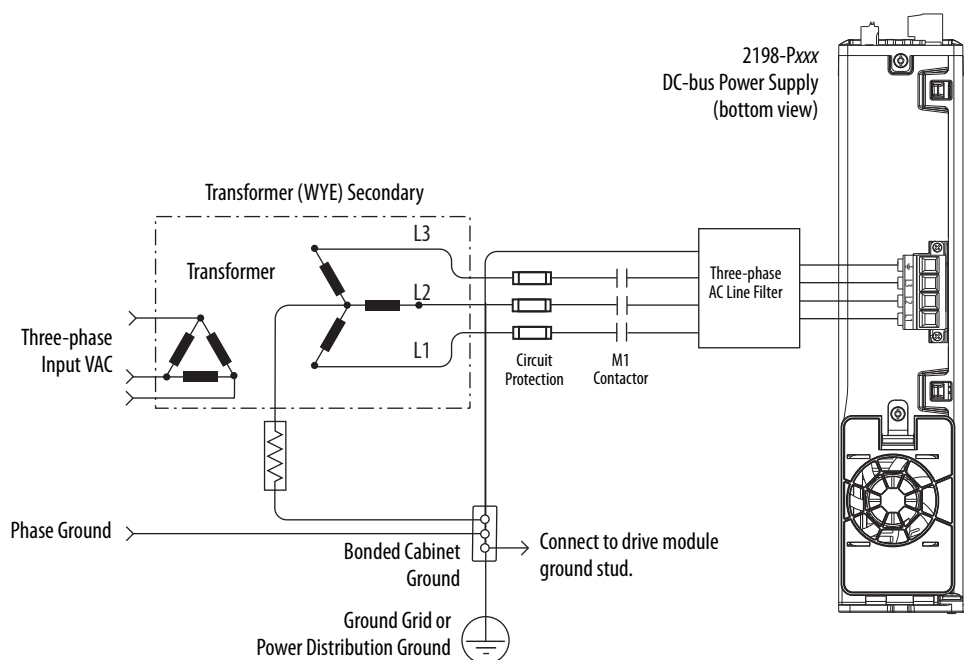


Figure 57 - Corner-grounded Power Configuration (Delta Secondary)

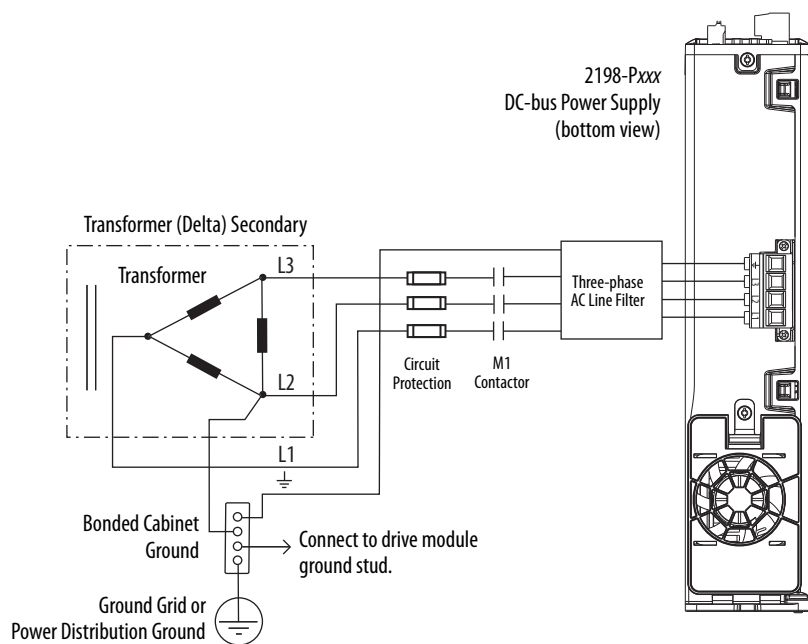

IMPORTANT Even though impedance-grounded and corner-grounded power configurations have a ground connection, treat them as ungrounded when installing Kinetix 5700 drive systems.

Refer to [Power Wiring Examples](#) beginning on [page 269](#) for input power interconnect diagrams.


Ungrounded Power Configurations

The ungrounded power configuration ([Figure 58](#)), corner-grounded ([Figure 57](#)), and impedance-grounded ([Figure 56](#)) power configurations do not provide a neutral ground point.

IMPORTANT If you determine that you have ungrounded, corner-grounded, or impedance-grounded power distribution in your facility, you must remove the grounding screws or jumper in each of your DC-bus power supplies and Bulletin 2198 inverters.

Refer to [Remove the Grounding Screws/Jumper in Select Power Configurations](#) on [page 96](#) for more information.

Figure 58 - Ungrounded Power Configuration

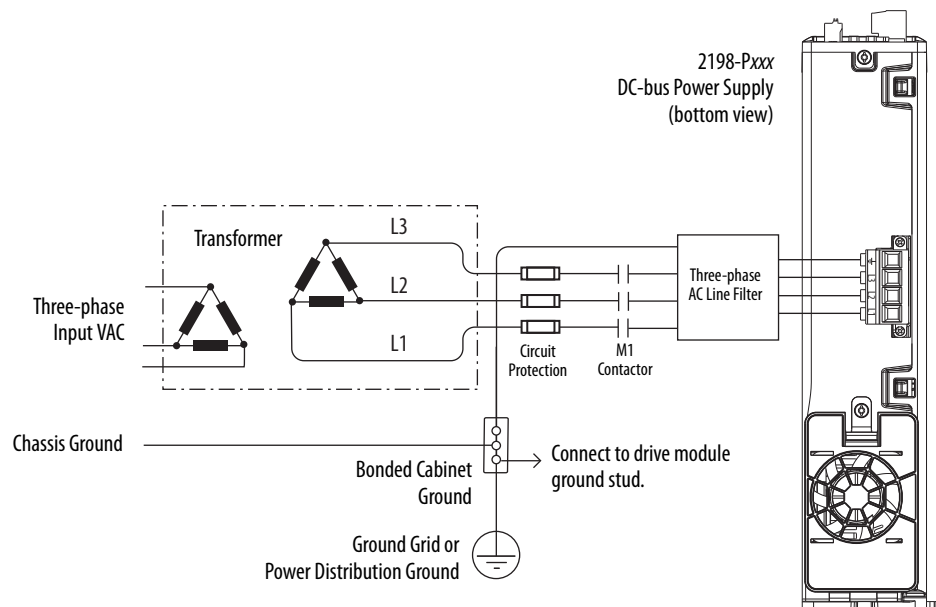

ATTENTION: Ungrounded systems do not reference each phase potential to a power distribution ground. This can result in an unknown potential to earth ground.

Refer to [Power Wiring Examples](#) beginning on [page 269](#) for input power interconnect diagrams.

Remove the Grounding Screws/Jumper in Select Power Configurations

Remove the grounding screws/jumper when using the following power configurations:

- Ungrounded
- Corner grounded
- Impedance grounded
- Bulletin 8720MC regenerative power supply or any active converter, regardless of power configuration.

We recommend that you remove the grounding screws/jumper when the drive module is removed from the panel and placed on its side on a solid work surface.


IMPORTANT If you have grounded-wye power distribution, you do not need to remove the grounding screws. Go to [Grounding the Drive System](#) on [page 97](#).



ATTENTION: Because the unit no longer maintains line-to-neutral voltage protection, the risk of equipment damage exists when you remove the grounding screws/jumper.

To access the grounding screw on DC-bus power supplies, dual-axis inverters, and the iTRAK power supply, open the small plastic door on the right side of the module.


Figure 59 - Remove the Grounding Screw

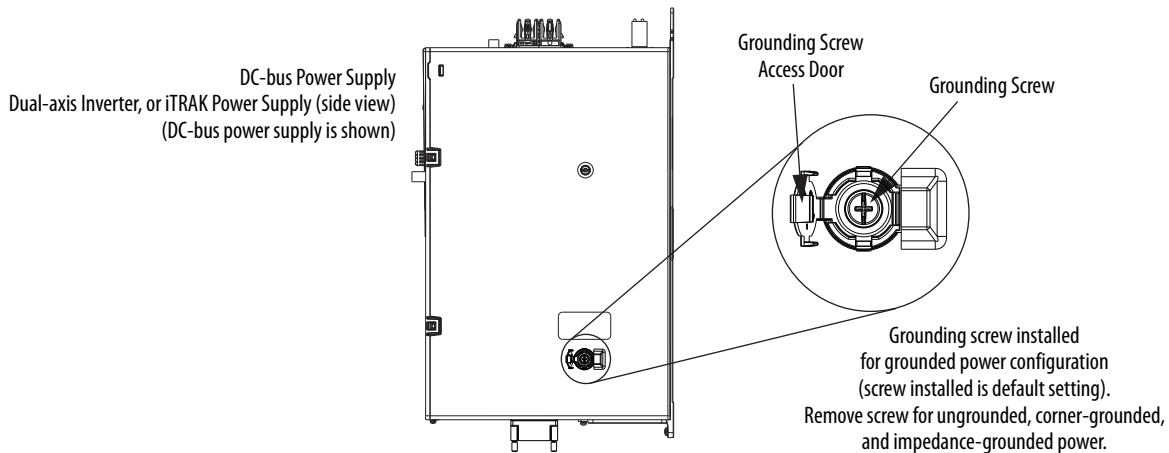

ATTENTION: To avoid personal injury, the grounding screw/jumper access door must be kept closed when power is applied. If power was present and then removed, wait at least 5 minutes for the DC-bus voltage to dissipate and verify that no DC-bus voltage exists before accessing the grounding screw/jumper. This applies to the DC-bus power supply, dual-axis inverters, and single-axis inverters.

Single-axis inverters have a grounding jumper access door on the back of the unit. Inside are two screws and a jumper to remove.

Figure 60 - Remove the Single-axis Inverter Grounding Jumper

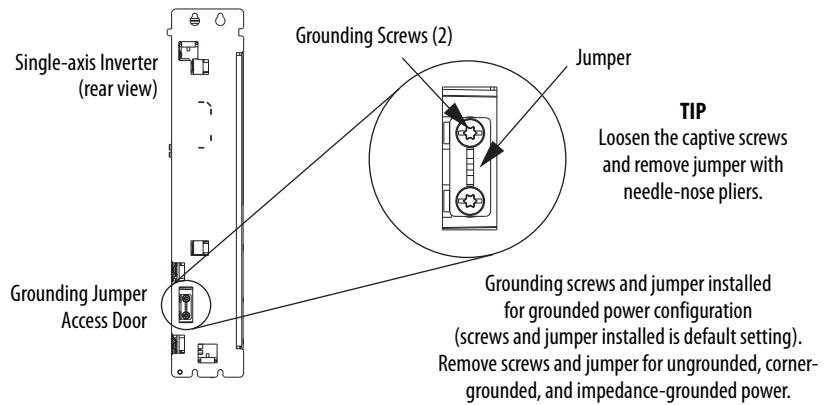

ATTENTION: Risk of equipment damage exists. The module ground configuration must be accurately determined. Leave the grounding screw/jumper installed for grounded power configurations (default). Remove the screw/jumper for ungrounded, corner-grounded, and impedance-grounded power, or when an active converter supplies the DC-bus voltage.

Table 46 - Grounding Screw/Jumper Configurations

Ground Configuration	Example Diagram	Grounding Screw/Jumper Configuration	Benefits of Correct Configuration
Grounded (wye)	Figure 55 on page 93	Installed (default setting)	- UL and EMC compliance - Reduced electrical noise - Most stable operation - Reduced voltage stress on components and motor bearings
- AC-fed ungrounded - Corner grounded - Impedance grounded	Figure 58 on page 95 Figure 57 on page 94 Figure 56 on page 94	Removed	- Helps avoid severe equipment damage when ground faults occurs - Reduced leakage current
DC-bus from active converter	Figure 127 on page 275		

Grounding the Drive System

All equipment and components of a machine or process system must have a common earth-ground point that is connected to chassis. A grounded system provides a ground path for protection against electrical shock. Grounding your drive modules and panels minimize the shock hazard to personnel and damage to equipment caused by short circuits, transient overvoltages, and accidental connection of energized conductors to the equipment chassis.




ATTENTION: The National Electrical Code contains grounding requirements, conventions, and definitions. Follow all applicable local codes and regulations to safely ground your system. For CE grounding requirements, refer to [Agency Compliance](#) on [page 31](#).

Ground the System Subpanel

Ground Kinetix 5700 power supplies, inverters, and capacitor modules to a bonded cabinet ground bus with a braided ground strap. Keep the braided ground strap as short as possible for optimum bonding.

Figure 61 - Connect the Ground Terminal

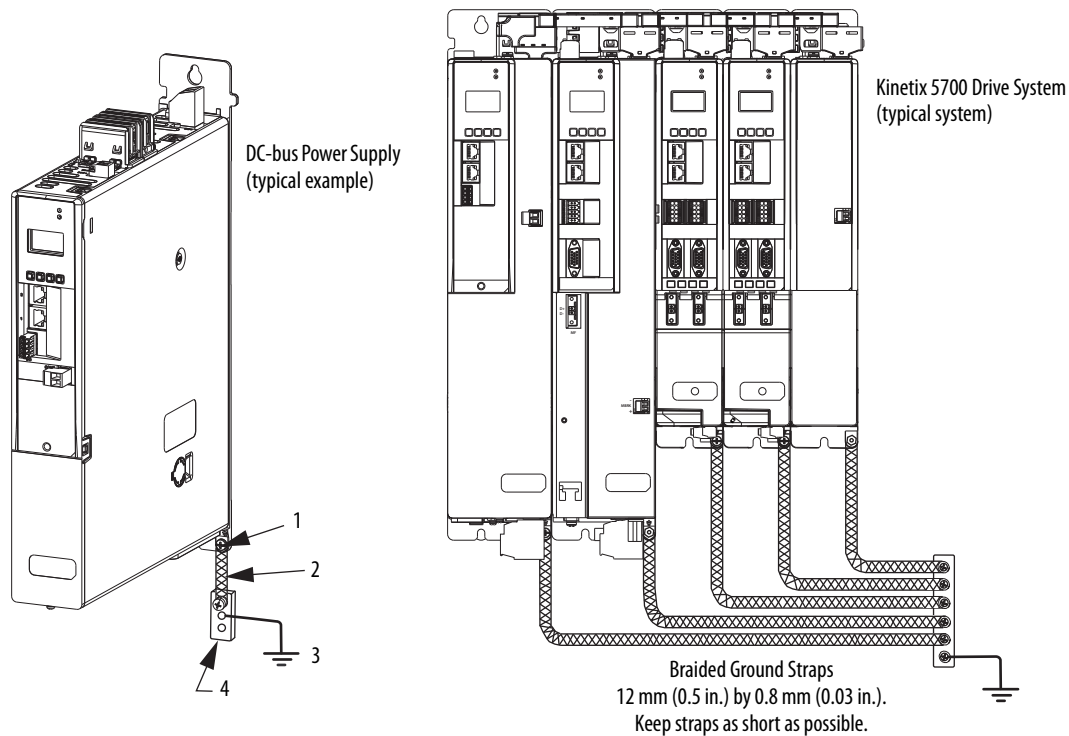


Item	Description
1	Ground screw (green) 2.0 N•m (17.7 lb•in), max
2	Braided ground strap (customer supplied)
3	Ground grid or power distribution ground
4	Bonded cabinet ground bus (customer supplied)

Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for more information.

Ground Multiple Subpanels

In this figure, the chassis ground is extended to multiple subpanels.

Figure 62 - Subpanels Connected to a Single Ground Point

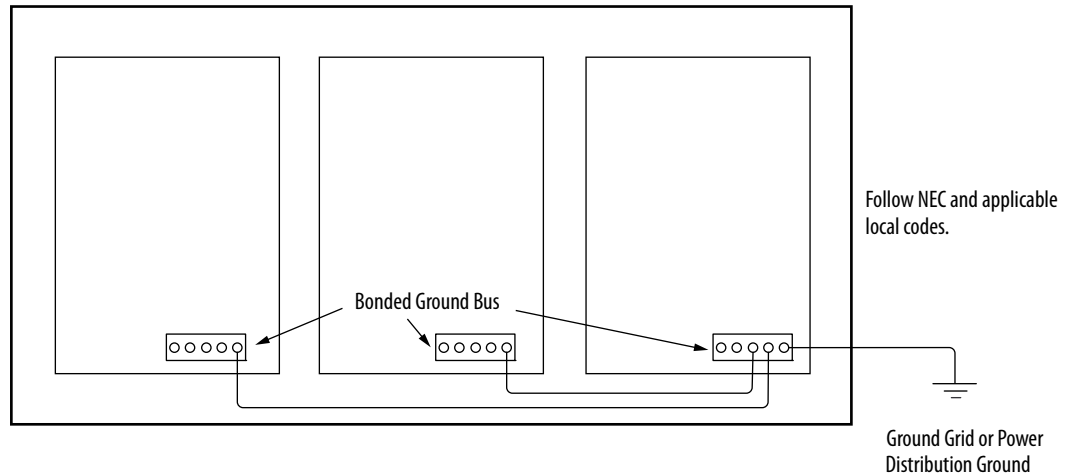

High-frequency (HF) bonding is not illustrated. For HF bonding information, refer to [Bonding Multiple Subpanels](#) on [page 42](#).

Wiring Requirements

Wires must be copper with 75 °C (167 °F) minimum rating. Phasing of main AC power is arbitrary and earth ground connection is required for safe and proper operation.

Refer to [Power Wiring Examples](#) on [page 269](#) for interconnect diagrams.

IMPORTANT The National Electrical Code and local electrical codes take precedence over the values and methods provided.

Table 47 - DC-bus Power Supply Wiring Requirements

DC-bus Power Supply Cat. No.	Description	Connects to Terminals		Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
		Pin	Signal			
2198-P031 2198-P070	Mains input power			6...10 (10...8)	10.0 (0.39)	0.5...0.8 (4.4...7.1)
2198-P141 2198-P208		L3 L2 L1	L3 L2 L1	10...35 (8...2)	20.0 (0.79)	2.5...4.5 (22...40)
2198-Pxxx	PELV/SELV 24V power (connector plug)	CP-1 CP-2	24V+ 24V–	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	DC Bus power	Bus bar	DC– DC+	N/A ⁽¹⁾	N/A ⁽¹⁾	N/A ⁽¹⁾
	Contactor enable	EN– EN+	CONT EN– CONT EN+	0.14...2.5 (26...12)	7.0 (0.28)	0.4...0.5 (3.5...4.4)
	Shunt resistor	RC-1 RC-2	SH DC+	1.5...6 (16...10)	12.0 (0.47)	0.5...0.6 (4.5...5.3)
	Digital inputs	IOD-1 IOD-2 IOD-3 IOD-4	IN1 COM IN2 COM	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽²⁾

(1) Shared DC-bus power connections are always made from one drive module to another over the bus-bar connection system. These terminals do not receive discrete wires.

(2) This connector uses spring tension to hold wires in place.

Table 48 - iTRAK Power Supply Wiring Requirements

iTRAK Power Supply Cat. No.	Description	Connects to Terminals		Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
		Pin	Signal			
2198T-W25K-ER	DC-bus input power	Bus bar	DC– DC+	N/A ⁽¹⁾	N/A ⁽¹⁾	N/A ⁽¹⁾
	SELV/PELV rated 24V power (connector plug)	CP-1 CP-2	24V+ 24V–	1.5...4 ⁽²⁾ (16...12)	10.0 (0.39)	0.5...0.6 (4.4...5.3)
				6 ⁽²⁾ (10)	10.0 (0.39)	0.7...0.8 ⁽³⁾ (6.1...7.0)

(1) Shared DC-bus power connections are always made from power supply to power supply over the bus-bar connection system. These terminals do not receive discrete wires.

(2) Use sufficient wire size to support the complete control power load, including the Kinetix 5700 drive modules and pass-through current for the attached motor modules.

(3) Depending on 24V current demand, 6 mm² (10 AWG) wire can be required. When 6 mm² (10 AWG) wire is used, these torque specifications apply.

TIP For iTRAK power supply wiring requirements not shown here, see the iTRAK System User Manual, publication [2198T-UM001](#).

Table 49 - Single-axis Inverter Wiring Requirements

Single-axis Inverter Cat. No.	Description	Connects to Terminals		Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
		Pin	Signal			
2198-S086-ERS3 2198-S130-ERS3	Motor power	U V W 	U V W 	Motor power cable depends on motor/drive combination. 6...25 ⁽¹⁾ (10...4)	20.0 (0.79)	2.5...4.5 (22...40)
2198-S160-ERS3				10...35 ⁽¹⁾ (8...2)		
2198-Sxxx-ERS3	PELV/SELV 24V power (connector plug)	CP-1 CP-2	24V+ 24V-	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	Brake power	BC-1 BC-2	MBRK+ MBRK-	N/A ⁽²⁾		
	DC Bus power	Bus bar	DC- DC+	N/A ⁽³⁾	N/A ⁽³⁾	N/A ⁽³⁾
	Safety	STO-1 STO-2 STO-3 STO-4 STO-5 STO-6 STO-7 STO-8	STO-9 STO-10 STO-11 STO-12 STO-13 STO-14 STO-15 STO-16 SB+/NC S1A SCA S2A SB- NC NC NC	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽⁴⁾
	Digital inputs	IOD-1 IOD-2 IOD-3 IOD-4 IOD-5 IOD-6 IOD-7 IOD-8 IOD-9 IOD-10	IN1 COM IN2 COM SHLD IN3 COM IN4 COM SHLD	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽⁴⁾

(1) Building your own cables or using third-party cables for Kinetix VP (Bulletin VPL, VPF, VPS, and VPC-Bxxxxx-Q) motors is not an option. Use 2090-CSxM1DE single motor cables. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

(2) Motor brake wires are included in the Bulletin 2090 motor cable.

(3) Shared DC-bus power connections are always made from one drive module to another over the bus-bar connection system. These terminals do not receive discrete wires.

(4) This connector uses spring tension to hold wires in place.

Table 50 - Dual-axis Inverter Wiring Requirements

Dual-axis Inverter Cat. No.	Description	Connects to Terminals		Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)	
		Pin	Signal				
2198-D006-ERS3 2198-D012-ERS3 2198-D020-ERS3 2198-D032-ERS3	Motor power (axis A and B)	U V W 	U V W 	Motor power cable depends on motor/ drive combination. 0.75...2.5 ⁽¹⁾ (18...14)	10.0 (0.39)	0.5...0.6 (4.4...5.3)	
2198-D057-ERS3					2.5...6 ⁽¹⁾ (14...10)	10.0 (0.39)	0.5...0.8 (4.4...7.1)
2198-Dxxx-ERS3	PELV/SELV 24V power (connector plug)	CP-1 CP-2	24V+ 24V–	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)	
	Brake power (axis A and B)	BC-1 BC-2	MBRK+ MBRK–	N/A ⁽²⁾			
	DC Bus power	Bus bar	DC– DC+	N/A ⁽³⁾	N/A ⁽³⁾	N/A ⁽³⁾	
	Safety	ST0-1 ST0-2 ST0-3 ST0-4 ST0-5 ST0-6 ST0-7 ST0-8	ST0-9 ST0-10 ST0-11 ST0-12 ST0-13 ST0-14 ST0-15 ST0-16	SB+ /NC S1A SCA S2A SB– S1B SCB S2B	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽⁴⁾
	Digital inputs	IOD-1 IOD-2 IOD-3 IOD-4 IOD-5 IOD-6 IOD-7 IOD-8 IOD-9 IOD-10	IN1 COM IN2 COM SHLD IN3 COM IN4 COM SHLD		0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽⁴⁾

(1) Building your own cables or using third-party cables for Kinetix VP (Bulletin VPL, VPF, VPS, and VPC-Bxxxx-Q) motors is not an option. Use 2090-CSxM1DE single motor cables. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

(2) Motor brake wires are included in the Bulletin 2090 motor cable.

(3) Shared DC-bus power connections are always made from one drive module to another over the bus-bar connection system. These terminals do not receive discrete wires.

(4) This connector uses spring tension to hold wires in place.



ATTENTION: To avoid personal injury and/or equipment damage, observe the following:

- Make sure installation complies with specifications regarding wire types, conductor sizes, branch circuit protection, and disconnect devices. The National Electrical Code (NEC) and local codes outline provisions for safely installing electrical equipment.
- Use motor power connectors for connection purposes only. Do not use them to turn the motor on and off.
- Ground shielded power cables to prevent potentially high voltages on the shield.

Wiring Guidelines

Use these guidelines as a reference when wiring the power connectors on your Kinetix 5700 drive modules.

IMPORTANT For connector locations of the Kinetix 5700 drive modules, refer to [Kinetix 5700 Connector Data](#) on [page 64](#).
When removing insulation from wires and tightening screws to secure the wires, refer to the table on [page 100](#) for strip lengths and torque values.

IMPORTANT To improve system performance, run wires and cables in the wireways as established in [Establishing Noise Zones](#) on [page 43](#).

Follow these steps when wiring the connectors for your Kinetix 5700 drive modules.

1. Prepare the wires for attachment to each connector plug by removing insulation equal to the recommended strip length.

Some cables come prepared with wires appropriately stripped.

IMPORTANT Use caution not to nick, cut, or otherwise damage strands as you remove the insulation.

2. Route the cable/wires to your Kinetix 5700 drive module connector.
3. Insert wires into connector plugs.

Refer to the connector pinout tables in [Chapter 4](#) or the interconnect diagrams in [Appendix A](#).

4. Tighten the connector screws.
5. Gently pull on each wire to make sure it does not come out of its terminal; reinsert and tighten any loose wires.
6. Insert the connector plug into the drive module connector.

Wiring the Power Connectors

This section provides examples and guidelines to assist you in making connections to the input power connectors.

Refer to [Power Wiring Examples](#) on [page 269](#) for an interconnect diagram.

Wire the 24V Control Power Input Connector

The 24V power (CP) connector requires 24V DC input for the control circuitry. The connector plug ships with the drive module and shared-bus connector kits are purchased separately.

Figure 63 - CP Connector Wiring - Connector Plug

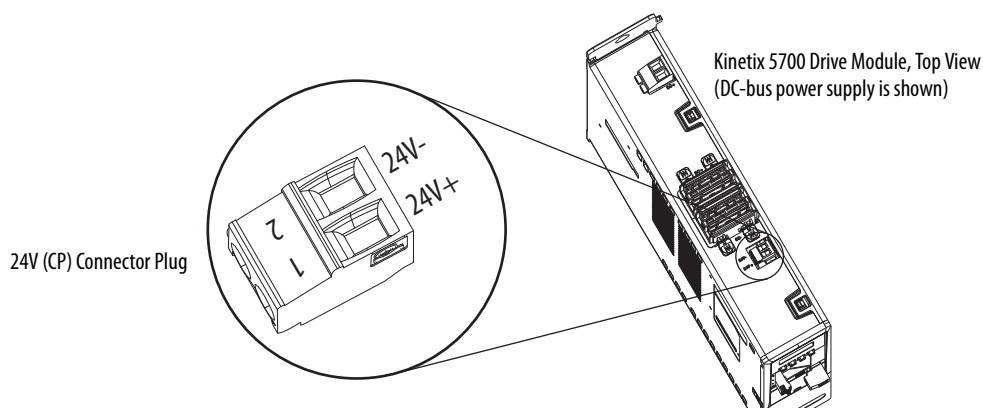


Table 51 - CP Connector Plug Wiring Specifications

Drive Module Cat. No.	CP Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Pxxx-ERS3 2198-Dxxx-ERS3 2198-Sxxx-ERS3 2198-CAPMOD-2240	CP-1	24V+	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	CP-2	24V-			
2198T-W25K-ER	CP-1	24V+	1.5...4 ⁽¹⁾ (16...12)	10.0 (0.39)	0.5...0.6 (4.4...5.3)
	CP-2	24V-	6 ⁽¹⁾ (10)	10.0 (0.39)	0.7...0.8 ⁽²⁾ (6.1...7.0)

- (1) Use sufficient wire size to support the complete control power load, including the Kinetix 5700 drive modules and pass-through current for the attached motor modules.
(2) Depending on 24V current demand, 6 mm² (10 AWG) wire can be required. When 6 mm² (10 AWG) wire is used, these torque specifications apply.

Figure 64 - CP Connector Wiring - Shared Bus

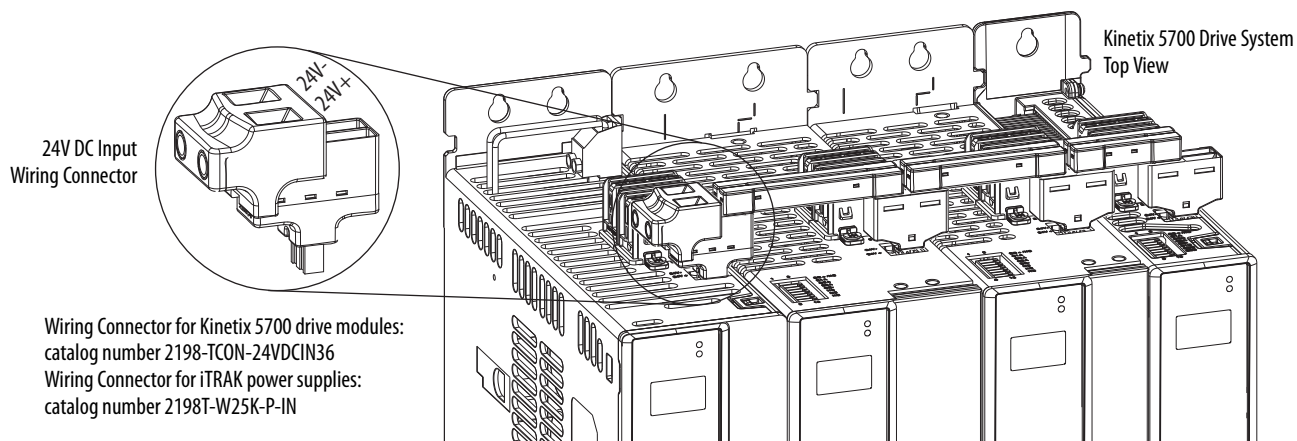


Table 52 - CP Shared-bus Wiring Specifications

Drive Module Cat. No.	CP Pin	Signal	Input Current, max A rms	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Pxxx-ERS3 2198-Dxxx-ERS3 2198-Sxxx-ERS3 2198-CAPMOD-2240 2198T-W25K-ER ⁽¹⁾	CP-1	24V+	52	10 (6)	11.0 (0.43)	1.7...1.8 (15.0...15.9)
	CP-2	24V-				

- (1) The iTRAK Power Supply, catalog number 2198T-W25K-ER, uses a different input wiring connector, with the same wiring specifications.

Wire the Input Power Connector

The input power (IPD) connector applies to only the DC-bus power supply and requires 324...528V AC (three-phase) for mains input power.



ATTENTION: Make sure the input power connections are correct when wiring the IPD connector plug. Insert the plug into the module connector and tighten screws to 0.8 N•m (7.1 lb•in). Incorrect wiring/polarity or loose wiring can cause explosion or damage to equipment.

Figure 65 - IPD Connector Wiring - Connector Plug

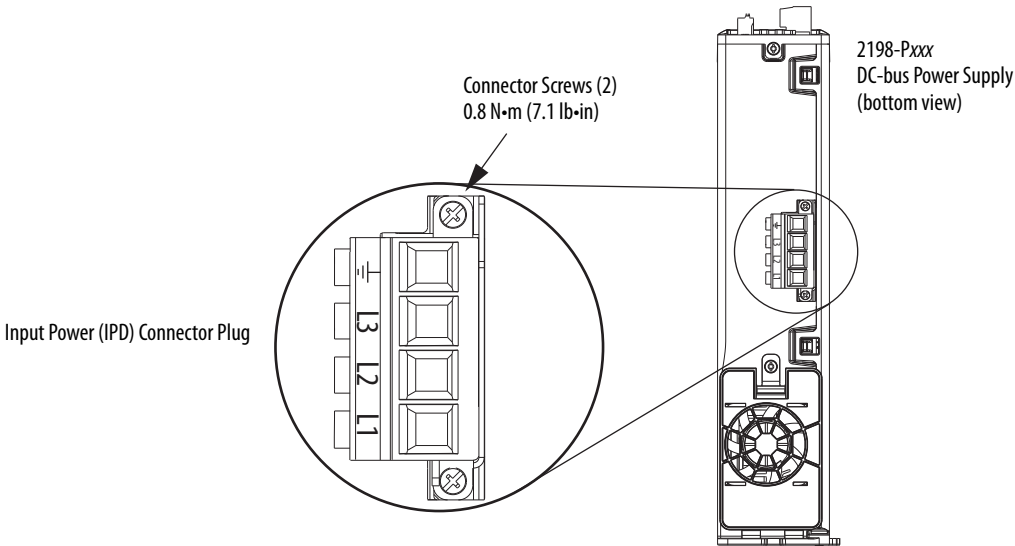


Table 53 - Input Power (IPD) Connector Plug Specifications

DC-bus Power Supply Cat. No.	Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
2198-P031 2198-P070	 L3	 L3	6...10 (10...8)	10.0 (0.39)	0.8 (7.1)
2198-P141 2198-P208	L2	L2	10...35 (8...2)	20.0 (0.79)	
	L1	L1			

Wire the Contactor Enable Connector

The contactor-enable (CED) connector applies to only the DC-bus power supply.



ATTENTION: Wiring the contactor-enable relay is required. To avoid personal injury or damage to the Kinetix 5700 drive system, wire the contactor-enable relay into your control string so that:

- three-phase power is removed and the DC-bus power supply is protected under various fault conditions.
- three-phase power is never applied to the Kinetix 5700 drive system before control power is applied.

Figure 66 - CED Connector Wiring - Connector Plug

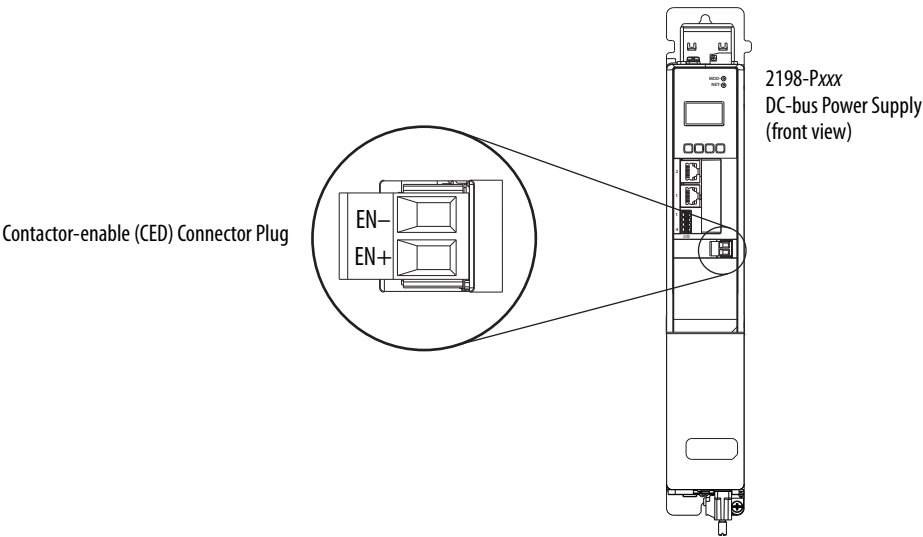


Table 54 - Contactor-enable (CED) Connector Plug Specifications

DC-bus Power Supply Cat. No.	Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-P031 2198-P070 2198-P141 2198-P208	EN- EN+	CONT EN- CONT EN+	0.14...2.5 (26...12)	7.0 (0.28)	0.4...0.5 (3.5...4.4)


Wiring the Digital Input Connectors

This section provides guidelines to assist you in making digital input connections.

The right side of the safety and digital-input connector plugs require an off-center push when inserting them into their respective connectors. This applies to 2198-Sxxx-ERS3 single-axis and 2198-Dxxx-ERS3 dual-axis inverters.

IMPORTANT An off-center push is required to engage the locking features on the bottom of the safety and digital-input connector plugs and seat properly with the drive (STO and IOD) connectors. Failure to do this can result in the connector plugs pulling out of the drive connector during normal operation.

Figure 67 - Safety and Digital Input Connector Plugs

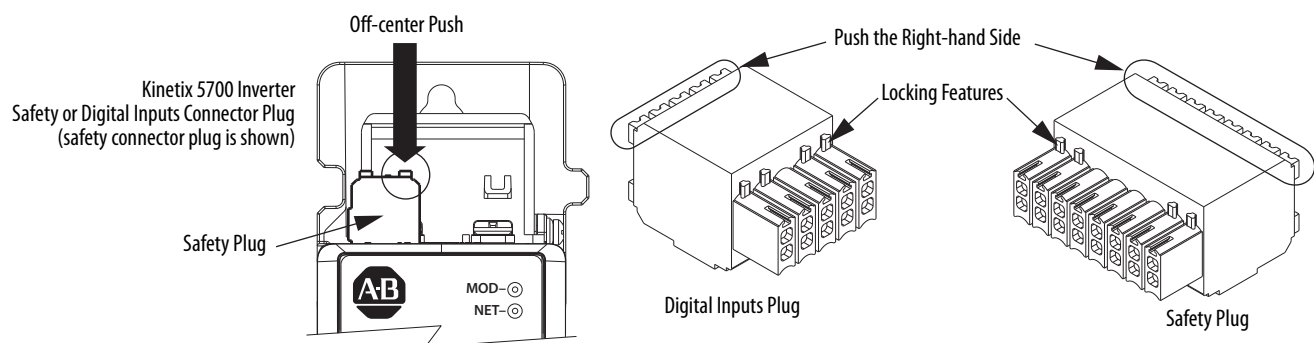

Wire the Safe Torque-off Connector

For the hardwired safe torque-off (STO) connector pinouts, feature descriptions, and wiring information, refer to Chapter 9 beginning on [page 233](#).

Wire the Digital Inputs Connector

The digital inputs (IOD) connector applies to the DC-bus power supply, single-axis inverter, and dual-axis inverters and use spring tension to hold wires in place.

Figure 68 - IOD Connector Wiring

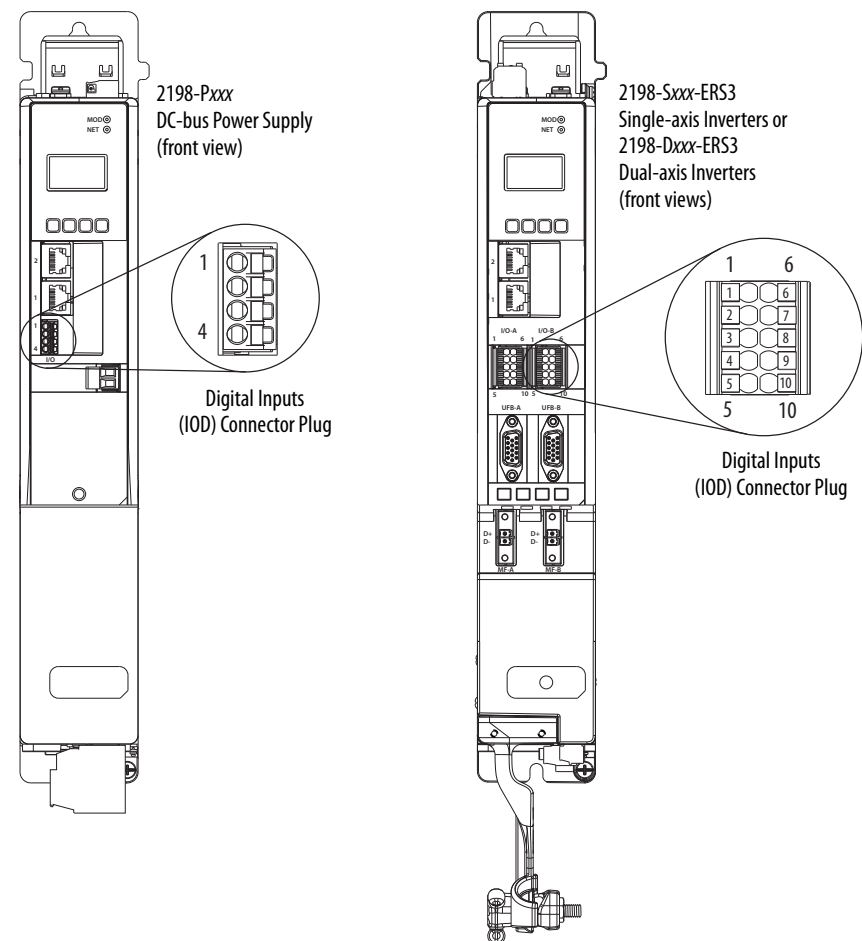


Table 55 - Digital Inputs (IOD) Connector Specifications

Drive Module Cat. No.	IOD Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Pxxx	IOD-1 IOD-2 IOD-3 IOD-4	IN1 COM IN2 SHLD	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽¹⁾
2198-Dxxx-ERS3 and 2198-Sxxx-ERS3	IOD-1 IOD-2 IOD-3 IOD-4 IOD-5 IOD-6 IOD-7 IOD-8 IOD-9 IOD-10	IN1 COM IN2 COM SHLD IN3 COM IN4 COM SHLD	0.14...1.5 (26...16)	10.0 (0.39)	N/A ⁽¹⁾

(1) This connector uses spring tension to hold wires in place.

Wiring Single Cables

Kinetix 5700 inverters and most Kinetix VP motor combinations use single motor-cable technology with motor power, feedback, and brake wires (when specified) housed in a single cable. Feedback wires are shielded separately and provide a shield braid for grounding in the connector kit.

IMPORTANT Due to the unique characteristics of single cable technology, designed for and tested with Kinetix 5700 inverters and Kinetix VP (Bulletin VPL, VPF, VPS, and VPC-Bxxxxx-Q) motors, you cannot build your own cables or use third-party cables.

Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

Table 56 - Single Cable Catalog Numbers

Motor Cat. No.	Feedback Kit Cat. No.	Motor Cable Cat. No. (with brake wires)	Motor Cable Cat. No. (without brake wires)	Feedback Connections
VPL-Bxxxx VPF-Bxxxx VPS-Bxxxx VPC-Bxxxxx-Q	2198-KITCON-DSL	2090-CSBM1DE-xxAAxx (standard) cables 2090-CSBM1DE-xxAFxx (continuous-flex) cables	2090-CSWM1DE-xxAAxx (standard) cables	2198-KITCON-DSL kit is pre-wired to feedback conductors
		2090-CSBM1DG-xxAAxx (standard) cables 2090-CSBM1DG-xxAFxx (continuous-flex) cables	2090-CSWM1DG-xxAAxx (standard) cables	Flying-lead feedback conductors. 2198-KITCON-DSL connector kit is purchased separately

Table 57 - Kinetix VP Rotary Motor Compatibility

Drive Module Cat. No. ⁽¹⁾	Bulletin VPL	Bulletin VPF	Bulletin VPS	VPC-Bxxxxx-Q Motors ⁽²⁾
2198-Dxxx-ERS3	X	X	X	X
2198-S086-ERS3	—	—	—	
2198-S130-ERS3	—	—	—	

(1) For motor compatibility with 2198-S160-ERS3 drives, see [Wiring Power/Brake and Feedback Cables](#) on [page 115](#).

(2) Due to the motor power conductor size, VPC-B3004A-Q and VPC-B3004D-Q motors do not support single cable technology. See [Wiring Power/Brake and Feedback Cables](#) on [page 115](#).

Maximum Cable Lengths


Combined motor power cable length for all axes on the same DC bus must not exceed 400 m (1312 ft). The maximum drive-to-motor cable length for Kinetix 5700 drives and motor/actuator combinations with 2090-CSxM1Dx cables is 90 m (295 ft).

Motor Power and Brake Connections

Motor power connections are made at the MP connector on the bottom of the dual-axis and single-axis inverters. Motor brake connections are made at the BC connector. On dual-axis inverters, the BC connectors are on either side of the MP connectors on the bottom of the drive. On single-axis inverters, the BC connector is on the front of the drive.

On 2198-Sxxx-ERS3 single-axis inverters, the motor power connector and shield clamp are mounted to a separate bracket that plugs into the bottom of the drive and has mounting screws to hold it secure.

Figure 69 - MP and BC Connector Wiring (dual-axis inverters)

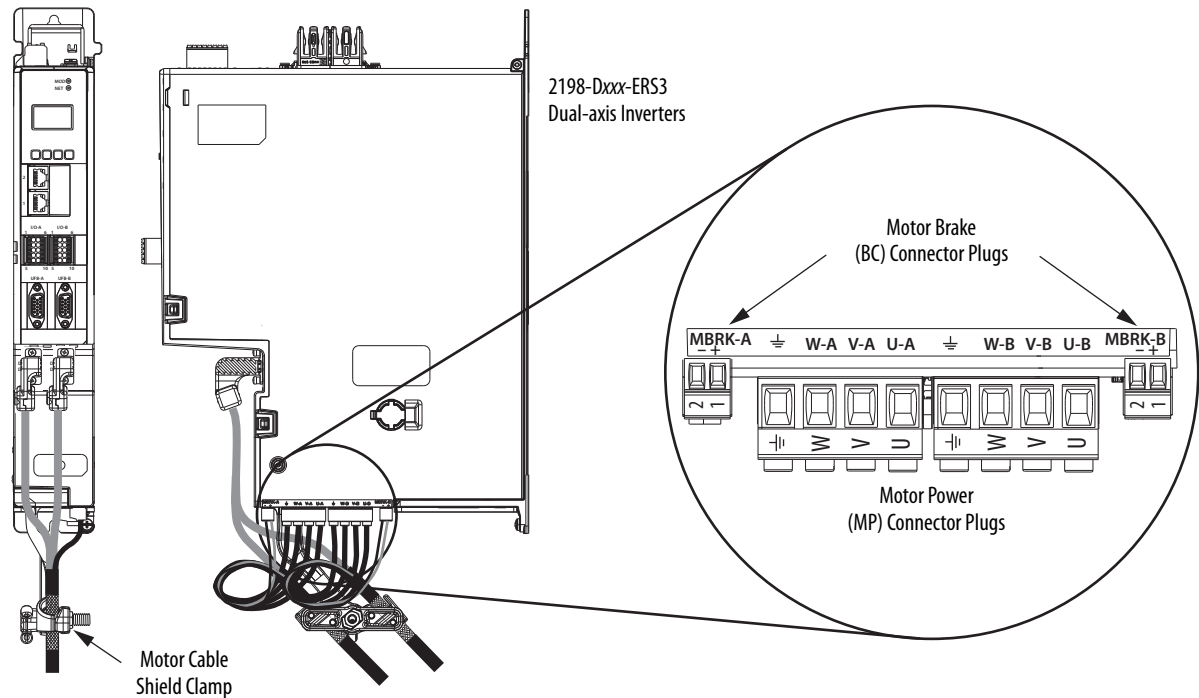

WARNING: Make sure the motor power connections are correct when wiring the MP connector plug and that the plug is fully engaged in the module connector. Incorrect wiring/polarity or loose wiring can cause an explosion or damage to equipment.

Table 58 - Motor Power (MP) Connector Specifications (dual-axis inverters)

Dual-axis Inverter Cat. No.	Pin	Signal/Wire Color	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
2198-D006-ERS3 2198-D012-ERS3 2198-D020-ERS3 2198-D032-ERS3	U V W ⏏	U Brown V Black W Blue ⏏ Green/Yellow	Motor power cable depends on motor/ drive combination. 0.75...2.5 ⁽¹⁾ (18...14)	10.0 (0.39)	0.5...0.6 (4.4...5.3)
2198-D057-ERS3			2.5...6 ⁽¹⁾ (14...10)	10.0 (0.39)	0.5...0.8 (4.4...7.1)


(1) Building your own cables or using third-party cables is not an option. Use 2090-CSxM1DE/DG single motor cables. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

Table 59 - Motor Brake (BC) Connector Specifications

Drive Module Cat. No.	Pin	Signal/ Wire Color	Recommended Wire Size (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
2198-Dxxx-ERS3 2198-S086-ERS3 2198-S130-ERS3	BC-1	MBRK+/Black	N/A ⁽¹⁾	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	BC-2	MBRK-/White			

(1) Motor brake wires are part of the 2090-CSBM1DE/DG motor cable.

Figure 70 - MP and BC Connector Wiring (single-axis inverters)

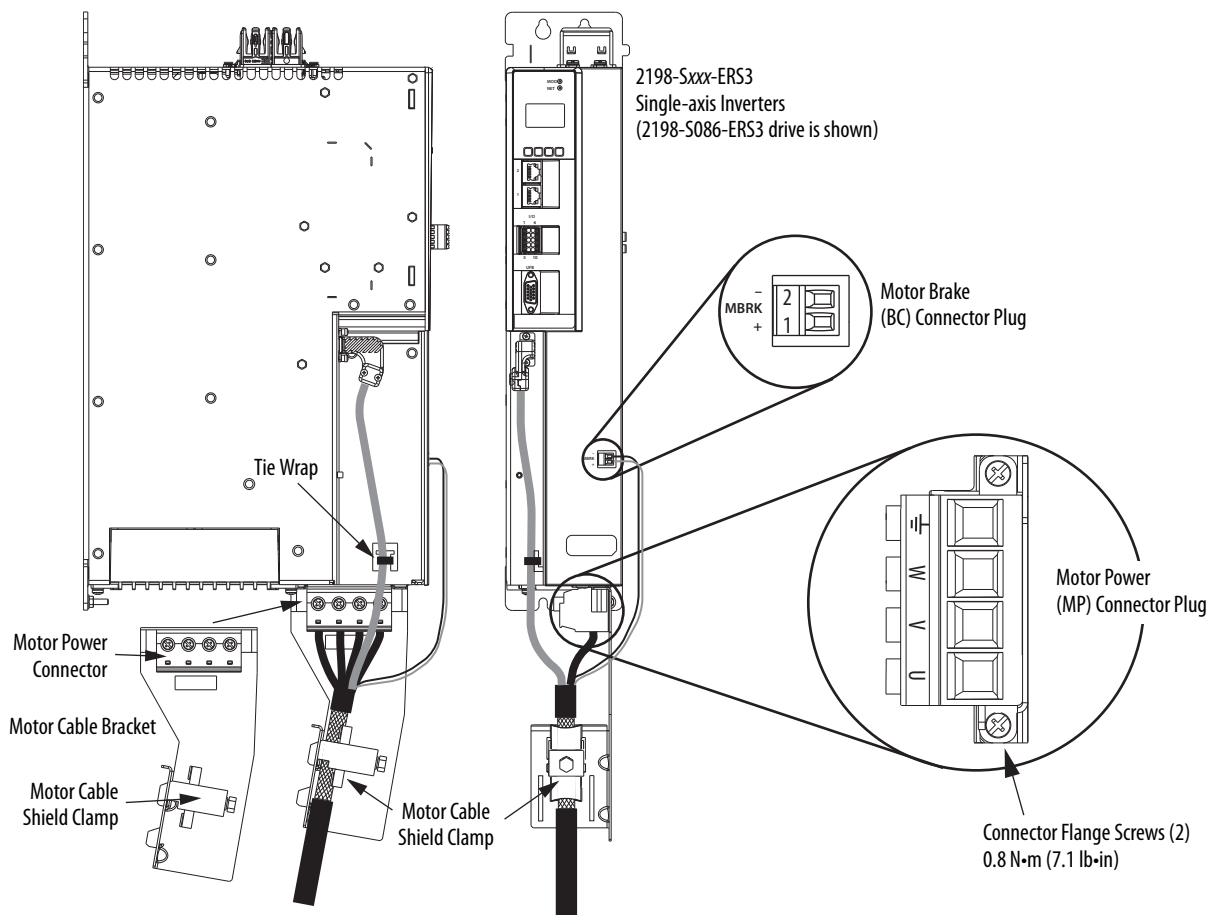

You can attach the motor power wires to the motor power connector, plug in the motor feedback and brake connectors, and then connect the bracket to the drive.



WARNING: Make sure the motor power connections are correct when wiring the MP connector plug. Insert the plug into the module connector and tighten flange screws to 0.8 N·m (7.1 lb·in). Incorrect wiring/polarity or loose wiring can cause an explosion or damage to equipment.

Table 60 - Motor Power (MP) Connector Specifications (single-axis inverters)

Drive Module Cat. No.	Pin	Signal/Wire Color	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Terminal Torque Value N·m (lb·in)	Flange Torque Value, max N·m (lb·in)
2198-S086-ERS3 2198-S130-ERS3	U V W ⏏	U Brown V Black W Blue ⏏ Green/Yellow	Motor power cable depends on motor/drive combination. 6...16 ⁽¹⁾ (10...6)	20.0 (0.79)	2.5...4.5 (22...40)	0.8 (7.1)


(1) Building your own cables or using third-party cables for Kinetix VP motors is not an option. Use 2090-CSxM1DE/DG single motor cables. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

Motor Feedback Connections

Single motor-cable feedback connections are made by using the 2198-KITCON-DSL feedback connector kit.

- 2090-CSxM1DE cables include the connector kit pre-wired to the feedback conductors.
- 2090-CSxM1DG cables have flying-lead feedback conductors. The 2198-KITCON-DSL feedback connector kit must be purchased separately and installed.

Figure 71 - MF Connector Wiring

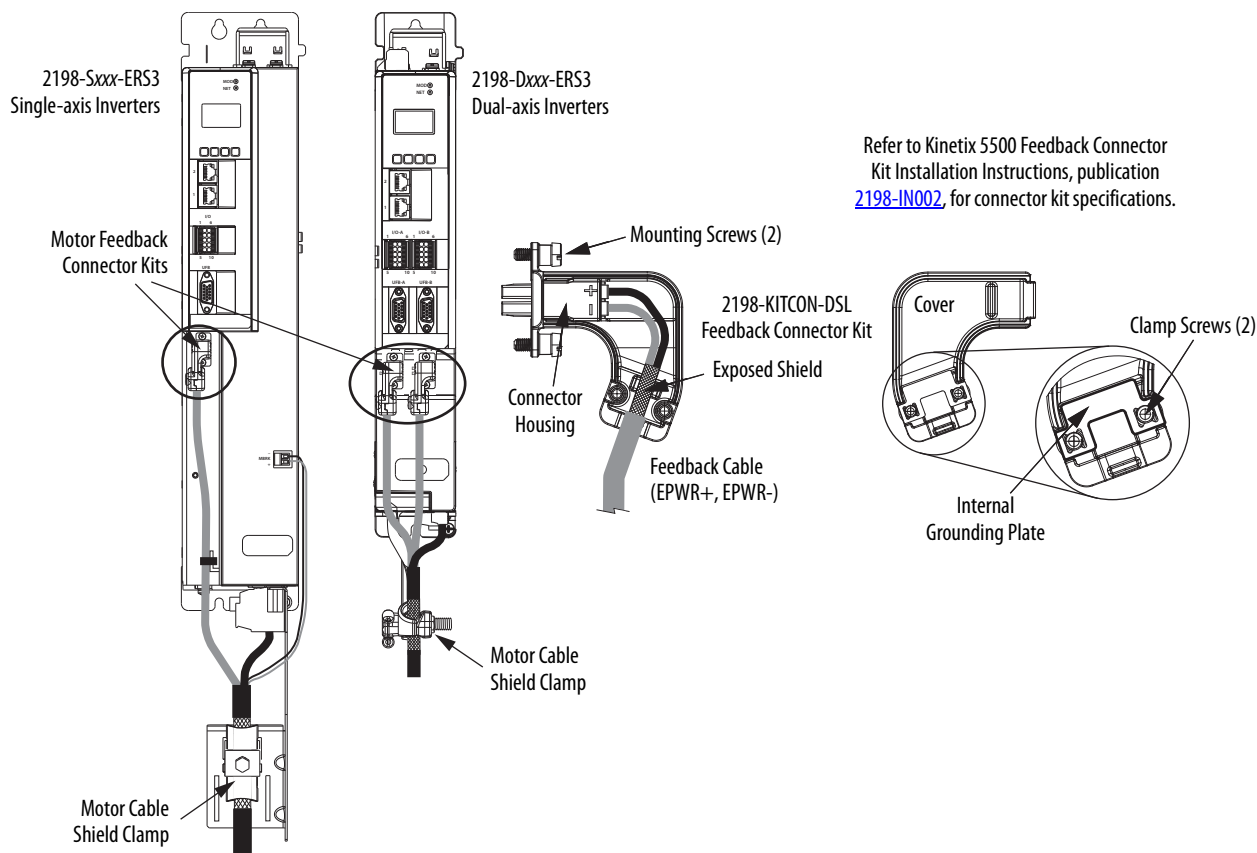

Refer to Kinetix 5500 Feedback Connector Kit Installation Instructions, publication [2198-IN002](#), for connector kit specifications.

Table 61 - Motor Feedback (MF) Connector Specifications

Drive Module Cat. No.	Pin	Signal/ Wire Color	Wire Size AWG	Strip Length mm (in.)	Torque Value N·m (lb·in)			
2198-Dxxx-ERS3	MF-1	D+/Blue	22	10.0 (0.39)	0.4 (3.5)			
2198-S086-ERS3	MF-2	D-/White/Blue						
2198-S130-ERS3								

Apply the Single Motor Cable Shield Clamp

Factory-supplied 2090-Series single motor cables are shielded, and the braided cable shield must terminate at the drive during installation. A small portion of the cable jacket has been removed to expose the shield braid. The exposed area must be clamped (with the clamp provided) at the bottom front of the drive.



SHOCK HAZARD: To avoid hazard of electrical shock, make sure shielded power cables are grounded according to recommendations.

These procedures assume you have completed wiring your motor power, brake, and feedback connectors and are ready to apply the cable shield clamp.

Dual-axis Inverter Shield Clamp Installation

Follow these steps to apply the dual-axis inverter cable shield clamp.


1. Loosen the clamp knob and determine if you need the clamp spacers.

Clamp spacers are included with the dual-axis inverters for cable diameters that are too small for a tight fit within the drive clamp alone.

The spacers are held captive by nylon rivets. Remove the rivets and spacers when your cable shield is of sufficient diameter for the clamp to hold the cable secure.

IMPORTANT Clamp spacers are needed with 2090-CSBM1DG (18 and 14 AWG) cables. Spacers are not needed for 2090-CSBM1DG (10 AWG) cables, all 2090-CSBM1DE cables, and can be removed.

Figure 72 - Dual-axis Inverter Shield Clamp Installation

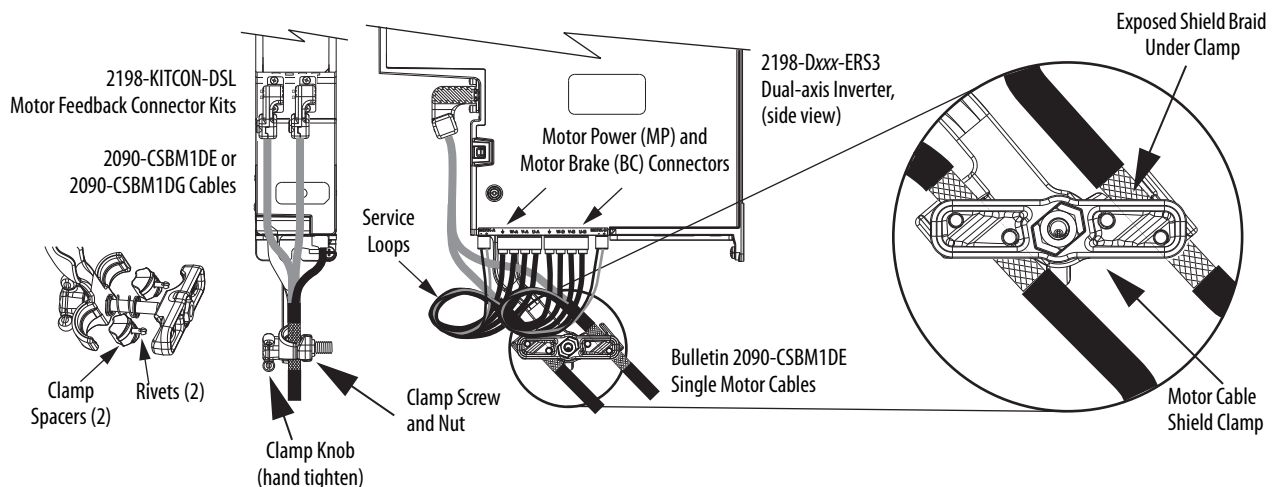

2. Position the exposed portion of each cable braid directly in line with the clamp.
3. Hand tighten the clamp knob.

Make sure the cable clamp tightens around the cable shield and provides a good bond between the cable shield and the drive chassis.

Only finger-tight torque on the clamp knob is required. The cable should not move within the clamp under its own weight or when slight pressure is applied by hand.

IMPORTANT If the power/brake cable shield on the dual-axis inverter has a loose fit inside the shield clamp, use a clamp spacer to reduce the clamp diameter. When the clamp knob is tightened, the result must be a high-frequency bond between the cable shield and the drive chassis.

Make sure the clamp is aligned with the shield braid and not heat shrink.

4. Repeat [step 1](#) through [step 3](#) for each dual-axis inverter.


Single-axis Inverter Shield Clamp Installation

Single-axis inverters include a two-position cable-shield clamp. With 10 AWG 2090-CSxM1DE and 2090-CSxM1DG cables, only the small (upper) clamp is used. Replacement clamps are also available.

Follow these steps to apply the single-axis inverter motor-cable shield clamp.

1. Remove the larger (lower position) clamp.
2. Loosen the clamp screw.

Figure 73 - Cable Installation

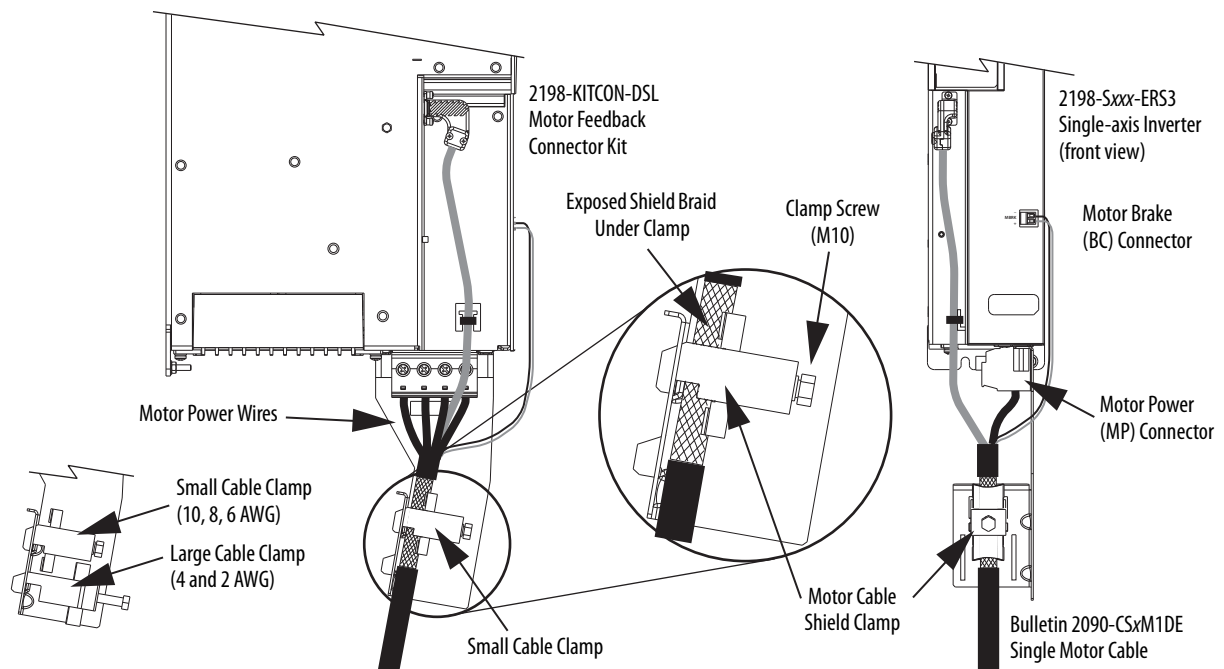

- Position the exposed portion of the cable braid directly in line with the clamp.

IMPORTANT Make sure the clamp is aligned with the shield braid and not the heat shrink.

- Tighten the clamp screw.

Make sure the cable clamp tightens around the overall cable shield and provides a good bond between the cable shield and the drive chassis.

Torque value 5.6 N•m (50 lb•in), max.

- Repeat [step 1](#) through [step 4](#) for each drive in multi-axis configurations.

Wiring Power/Brake and Feedback Cables

Kinetix 5700 drives are also compatible with many other Allen-Bradley® motors and actuators that have separate power/brake and feedback cables. Follow these guidelines when 2090-CPxM7DF (power/brake) cables and 2090-CFBM7DF (feedback) cables are used in a new installation or reused in an existing installation with Kinetix 5700 servo drives.

Motor Power and Brake Cables

The motors and actuators in [Table 62](#) have separate power/brake and feedback cables. The motor power/brake cable attaches to the cable clamp on the drive and the power/brake conductors attach to the MP and BC connectors, respectively.

Table 62 - Motor Power Cable Compatibility

Motor/Actuator Cat. No.	Motor Power Cables ⁽¹⁾ (with brake wires)	Motor Power Cables ⁽¹⁾ (without brake wires)
MPL-B15xxx-xx7xAA, MPL-B2xxx-xx7xA MPL-B3xxx-xx7xAA...MPL-B9xxx-xx7xAA	2090-CPBM7DF-xxAAxx (standard) or 2090-CPBM7DF-xxAFxx (continuous-flex)	2090-CPWM7DF-xxAAxx (standard) or 2090-CPWM7DF-xxAFxx (continuous-flex)
MPM-Bxxxx, MPF-Bxxxx, MPS-Bxxxx		
MPAS-Bxxxx1-V05SxA, MPAS-Bxxxx2-V20SxA MPAI-Bxxxx, MPAR-B3xxx MPAR-B1xxx and MPAR-B2xxx (series B)		
VPC-Bxxxx-S VPC-Bxxxx-Y		
RDB-Bxxxx-7/3		
MPAS-Bxxxx-ALMx2C LDAT-Sxxxxxx-xDx LDAT-Sxxxxxx-xBx LDC-xxxxxx-xHTxx	N/A	
HPK-Bxxxx, HPK-Exxxx	Customer-supplied	

(1) Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for cable specifications.

Table 63 - Legacy Motor Power Cables

Motor Cable	Description	Cat. No.
Standard	Power/brake, threaded	2090-XXNPMF-xxSxx
	Power-only, bayonet	2090-XXNPMP-xxSxx
Continuous-flex	Power/brake, threaded	2090-CPBM4DF-xxAFxx
	Power-only, threaded	2090-CPWM4DF-xxAFxx
	Power-only, bayonet	2090-XXTPMP-xxSxx

Table 64 - Induction Motor Power Cable Specifications

Cable Manufacturer	Cable Series	Voltage Rating	Temperature Rating
Belden	29500-29507	600V	90 °C (194 °F)
Lapp Group	ÖLFEX VFD XL		
SAB	VFD XLPE TR		

Motor Power and Brake Connections


Motor power connections are made at the MP connector on the bottom of the dual-axis and single-axis inverters. Motor brake connections are made at the BC connector. On dual-axis inverters, the BC connectors are on either side of the MP connectors on the bottom of the drive. On single-axis inverters, the BC connector is on the front of the drive.

On 2198-Sxxx-ERS3 single-axis inverters, the motor power connector and shield clamp are mounted to a separate bracket that plugs into the bottom of the drive and has mounting screws to hold it secure.

Refer to [Table 58](#), [Table 59](#), and [Table 60](#) beginning on [page 110](#) for the MP and BC connector specifications.


Motor Power/Brake Cable Series Change

Motor power and brake conductors on 2090-CPBM7DF (series A) cables have the following dimensions from the factory. If your cable is reused from an existing application, the actual conductor lengths could be slightly different.

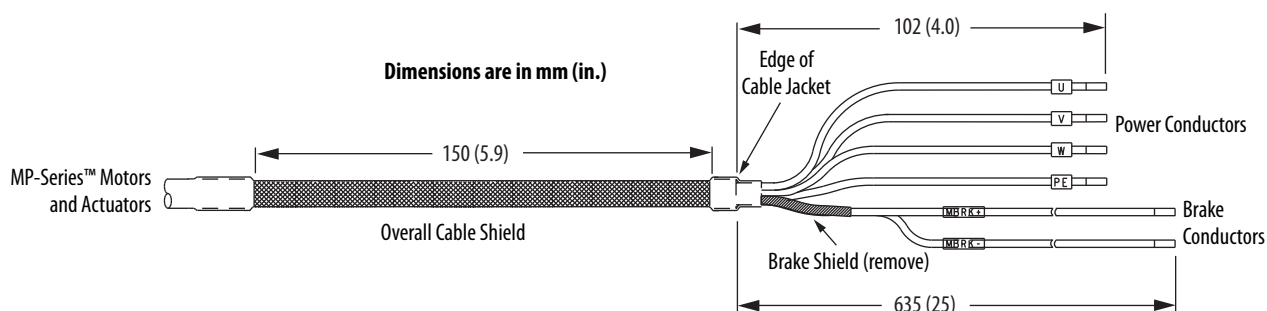Figure 74 - 2090-CPBM7DF (series A) Power/brake Cable Dimensions

Motor power and brake conductors on 2090-CPBM7DF (series B) 12 and 10 AWG standard, non-flex cables provide (drive end) shield braid and conductor preparation designed for compatibility with multiple Kinetix servo-drive families, including Kinetix 5700 drives.

Figure 75 - 2090-CPBM7DF (series B, 10 or 12 AWG) Power/brake Cable Dimensions

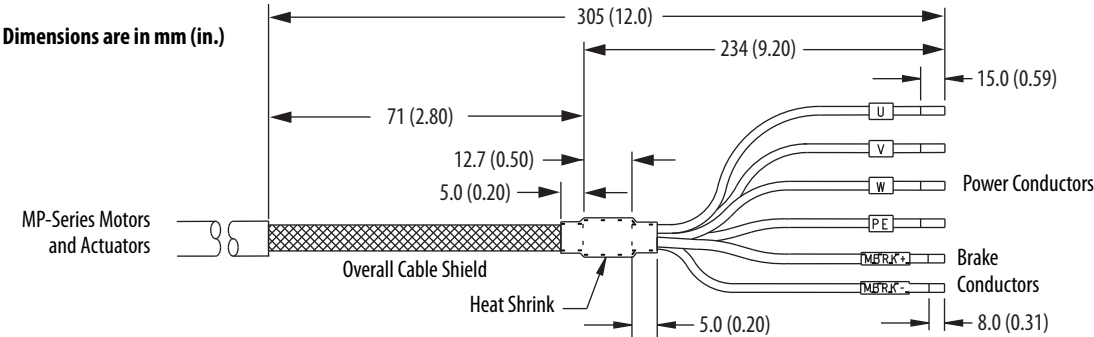

Maximum Cable Lengths

Combined motor power cable length for all axes on the same DC bus must not exceed 400 m (1312 ft). The maximum drive-to-motor cable length for Kinetix 5700 drives and motor/actuator combinations with 2090-CxxM7DF cables is 90 m (295 ft), depending on the feedback type.

Table 65 - Drive-to-Motor Feedback Cable Length

Feedback Type	Cable Length, max m (ft)
Single-turn or multi-turn absolute	90 (295)
Incremental	30 (98)
Heidenhain EnDat	90 m (295)

Dual-axis Inverter Power/Brake Cable Installation

Dual-axis inverters are compatible with several Allen-Bradley motor families that require 16, 14, 12, and 10 AWG power/brake cables. Refer to [Table 66](#) for the proper procedure designed for your 2090-CPxM7DF cable.



SHOCK HAZARD: To avoid hazard of electrical shock, make sure shielded power cables are grounded according to recommendations.

Table 66 - Cable Preparation for 2090-CPxM7DF Cables

Cable Power Conductor Size AWG	Go to:
16 and 14	Cable Preparation for 16 and 14 AWG Cables
12 and 10	Cable Preparation for 12 and 10 AWG Cables

Cable Preparation for 16 and 14 AWG Cables

For dual-axis inverters, the 2090-CPBM7DF power conductor length, 102 mm (4.0 in.), is sufficiently long to reach the MP connector plug and provides adequate stress relief. However, you must remove additional insulation from the power conductors to achieve a strip length of 10 mm (0.39 in.).

The brake conductor length, 635 mm (25 in.), is much longer than necessary. We recommend that you measure 188 mm (7.4 in.) from the edge of the cable jacket (that is covered by heat shrink) and trim off the rest.

Refer to [Figure 76](#) and on [page 120](#) for a typical installation example. For strip lengths and torque values, refer to [Table 58](#) and [Table 59](#) on [page 110](#).

Cable Preparation for 12 and 10 AWG Cables


2090-CPBM7DF (series B) 12 and 10 AWG cables are designed for use with Kinetix 5700 dual-axis inverters and do not require any modifications.

For dual-axis inverters, 2090-CPBM7DF (series A) 12 and 10 AWG conductors are too short and stiff to reach the MP connector plug and provide adequate stress relief.

Follow these steps to prepare your existing (series A) 12 and 10 AWG cables.

1. Remove any heat shrink or small sections of cable jacket from your existing cable.
2. Remove additional cable jacket and shield braid from your cable following the diagram below.

Include a new 12 mm (0.5 in.) section of cable jacket and slide it down to the end of the shield braid.

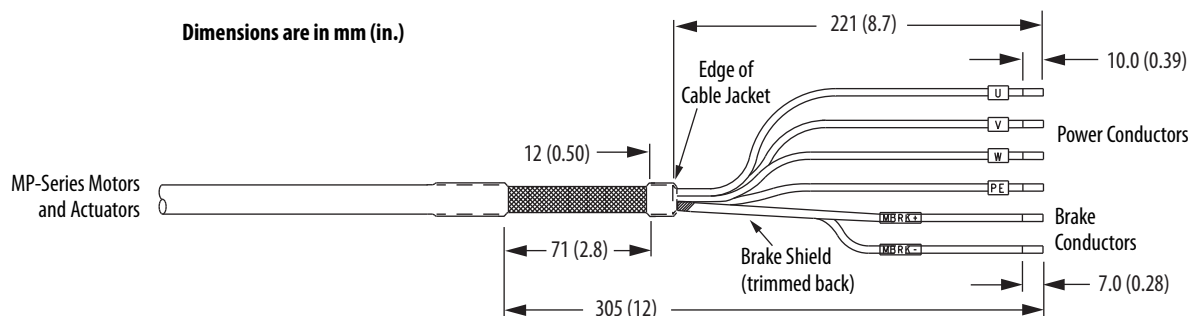

3. Apply heat shrink to the small section of cable jacket.

Refer to [Figure 77](#) for typical installation examples for series A and series B cables. For strip lengths and torque values, refer to [Table 58](#) and [Table 59](#) on [page 110](#).

Dual-axis Inverter Shield Clamp Installation

Follow these steps to apply the dual-axis inverter cable shield clamp.

1. Loosen the clamp knob and determine if you need the clamp spacers.

The power/brake cable shield attaches to the dual-axis inverter cable clamp. Clamp spacers are included with the dual-axis inverters for cable diameters that are too small for a tight fit within the drive clamp alone.

The spacers are held captive by nylon rivets. Remove the rivets and spacers when your cable shield is of sufficient diameter for the clamp to hold the cable secure.

IMPORTANT	Most all 2090-CPxM7DF power/brake cables require the spacers. Only 10 AWG cables with brake conductors have a diameter large enough to fit in the clamp without the spacers.
------------------	--

2. Position the exposed portion of each cable braid directly in line with the clamp.
3. Hand tighten the clamp knob.


Make sure the cable clamp tightens around the cable shield and provides a good bond between the cable shield and the drive chassis.

Only finger-tight torque on the clamp knob is required. The cable should not move within the clamp under its own weight or when slight pressure is applied by hand.

IMPORTANT	If the power/brake cable shield on the dual-axis inverter has a loose fit inside the shield clamp, use a clamp spacer to reduce the clamp diameter. When the clamp knob is tightened, the result must be a high-frequency bond between the cable shield and the drive chassis. Make sure the clamp is aligned with the shield braid and not heat shrink.
------------------	---


See [Figure 76](#) and [Figure 77](#) on [page 120](#) for examples.

Figure 76 - Dual-axis Inverter Cable Installation (16 and 14 AWG cable)

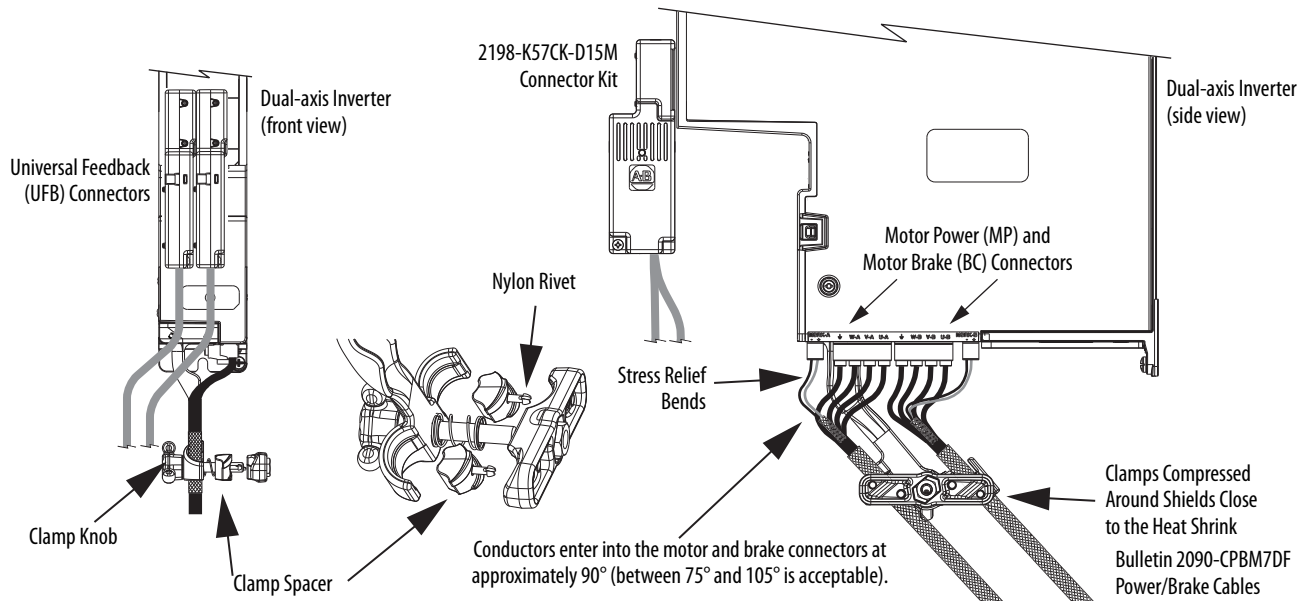

12 and 10 AWG (series A) cables, prepared as shown on [page 118](#), and series B cables have longer conductors that support service loops.

Figure 77 - Dual-axis Inverter Cable Installation (series A and B, 12 and 10 AWG cable)

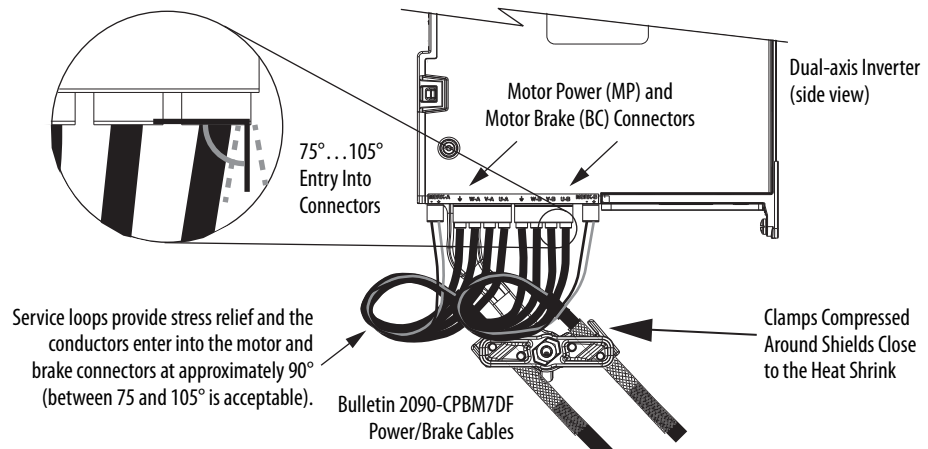

IMPORTANT Avoid sharp bends in the power and brake conductors. You must route the power and brake conductors from where they exit the clamp and enter the motor and brake connectors so that stress-relief bends or service loops are formed.

4. Repeat [step 1](#) through [step 3](#) for each dual-axis inverter.

Single-axis Inverter Power/Brake Cable Installation

Single-axis inverters include a two-position cable-shield clamp for 2090-CPBM7DF cables with 10, 8, 6, 4, and 2 AWG power conductors.

2090-CPBM7DF (series B) 10 AWG cables are designed for use with Kinetix 5700 single-axis inverters and do not require any modifications.



SHOCK HAZARD: To avoid hazard of electrical shock, make sure shielded power cables are grounded according to recommendations.

For single-axis inverters, the 2090-CPBM7DF (series A) cable power conductors, 102 mm (4.0 in.), require adjustment only when the smaller (upper position) clamp is used. The upper position is for smaller cables (10, 8, and 6 AWG). The lower position is for larger cables (4 and 2 AWG). We recommend that you measure from the edge of the cable jacket (that is covered with heat shrink) and trim the power conductors as shown in [Table 67](#).

Table 67 - Power Conductor Trimmed Length

Power Conductor Size AWG	Power Conductor Length mm (in.)
6 and 8	75 (2.9)
10	No trimming required
2 and 4	85 (3.3)

The (series A) 2090-CPBM7DF brake conductor length, 635 mm (25 in.) is longer than necessary. Measure from the edge of the heat shrink and trim the brake conductors as shown in [Table 68](#).

Table 68 - Brake Conductor Trimmed Length

Power Conductor Size AWG	Brake Conductor Length mm (in.)
6, 8, 10	315 (12.4)
2 and 4	375 (14.7)

See [Figure 78](#) on [page 122](#) for a typical series-A installation example. For strip lengths and torque values, see [Table 59](#) and [Table 60](#) on [page 110](#).

Single-axis Inverter Shield Clamp Installation

Follow these steps to apply the single-axis inverter motor-cable shield clamp.

1. Remove the larger (lower position) clamp or small (upper position) clamp, depending on the power conductor size used in your application.

IMPORTANT Make sure to use the proper size clamp depending on cable diameter.

2. Loosen the clamp screw.
3. Position the exposed portion of the cable braid directly in line with the clamp.

IMPORTANT Make sure the clamp is aligned with the shield braid and not heat shrink.


4. Tighten the clamp screw.

Make sure the cable clamp tightens around the overall cable shield and provides a good bond between the cable shield and the drive chassis.

Torque value 5.6 N•m (50 lb•in), max.

In [Figure 78](#), 10 AWG (series A) cables are prepared per [Table 67](#) and [Table 68](#) on [page 121](#), and series B cables do not require preparation.

Figure 78 - Single-axis Inverter Cable Installation (series A and B, 10 AWG cables)

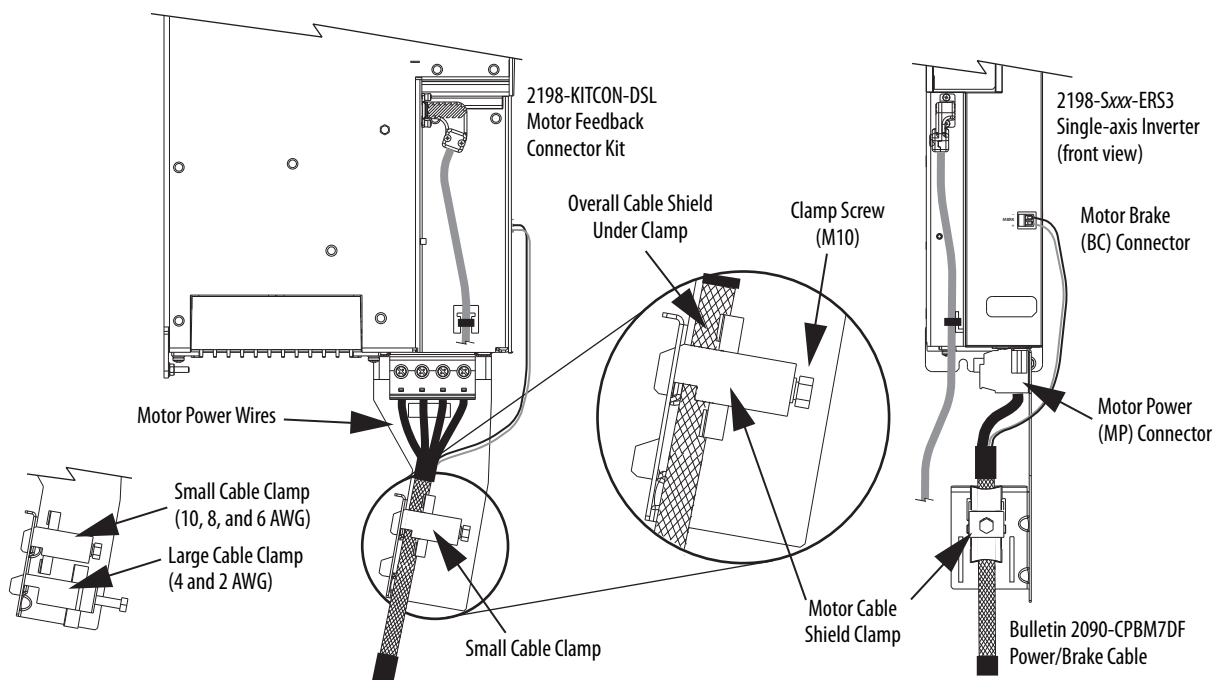

5. Repeat [step 1](#) through [step 4](#) for each drive in multi-axis configurations.

Motor Feedback Connections

You can connect motor feedback to the 2-pin motor feedback (MF) connector or the 15-pin universal feedback (UFB) connector with the associated feedback connector kit.

Table 69 - Feedback Connector Kit Options

Connector Kit Cat. No.	Kinetix 5700 Drive Feedback Connectors	Encoder Feedback Type	Description
2198-H2DCK (series B or later)	Motor feedback (MF)	Single-turn or multi-turn absolute	Converts the 15-pin Hiperface feedback signals from the encoder to 2-pin DSL feedback signals at the drive.
2198-K57CK-D15M	Universal feedback (UFB)	Single-turn/ multi-turn absolute, incremental, or EnDat	Feedback signals pass straight through encoder to drive for motor feedback or auxiliary feedback.

Feedback cables attach to the connector kit and are wired to the connector inside the connector kit. Bulletin 2090 feedback cables require preparation to make sure the shield clamp attaches properly and conductors route smoothly to the connector terminals.

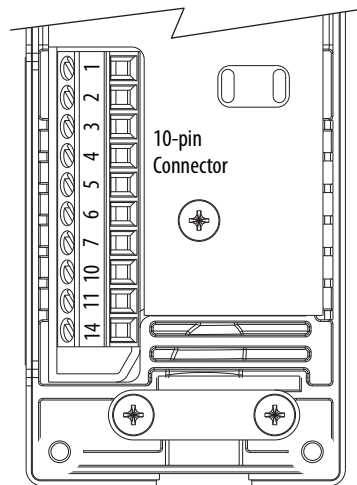
All of the current and legacy feedback cables listed below are compatible with the 2198-H2DCK converter kit and 2198-K57CK-D15M connector kit.

Table 70 - Compatible Motors and Actuators

Motor/Actuator Families	Single-turn or Multi-turn Absolute Encoders		Incremental Encoders	
	Motor/Actuator Cat. No.	Feedback Cable Cat. No.	Motor/Actuator Cat. No.	Feedback Cable Cat. No.
MP-Series low-inertia motors (Bulletin MPL)	MPL-B15xxx...MPL-B2xxx-V/E MPL-B3xxx...MPL-B9xxx-M/S	2090-CFBM7DF-CEAAxx 2090-CFBM7DD-CEAAxx 2090-CFBM7DF-CERAx (standard) or 2090-CFBM7DF-CEAFxx 2090-CFBM7DD-CEAFxx 2090-CFBM7DF-CDAFxx (continuous-flex)	MPL-B15xxx...MPL-B2xxx-H MPL-B3xxx...MPL-B45xxx-H	2090-XXNFMF-Sxx (standard) 2090-CFBM7DF-CDAFxx (continuous-flex)
MP-Series medium-inertia motors (Bulletin MPM)	MPM-Bxxxxx-M/S		N/A	
MP-Series food-grade motors (Bulletin MPF)	MPF-Bxxxx-M/S		N/A	
MP-Series stainless-steel motors (Bulletin MPS)	MPS-Bxxxx-M/S		N/A	
Kinetix VP continuous-duty motors (Bulletin VPC)	VPC-Bxxxxx-S		N/A	
HPK-Series™ asynchronous servo motors	HPK-Bxxxxxx-M/S		N/A	
MP-Series integrated linear stages (Bulletin MPAS/MPMA)	MPAS-Bxxxxx-VxxSxA (ballscrew)		MPAS-Bxxxxx-ALMx2C (direct drive)	
MP-Series electric cylinders (Bulletin MPAR)	MPAR-Bxxxxx		N/A	
MP-Series heavy-duty electric cylinders (Bulletin MPAL)	MPAL-Bxxxxx		N/A	
LDAT-Series integrated linear thrusters	LDAT-Sxxxxxx-xDx		LDAT-Sxxxxxx-xBx	
LDC-Series™ iron-core linear motors	N/A		LDC-xxxxxx-xHTxx	
Kinetix VP continuous-duty motors (Bulletin VPC)	VPC-Bxxxxx-Y	2090-XXNFMF-Sxx 2090-CFBM7DF-CDAFxx	N/A	
RDD-Series direct-drive motors (Bulletin RDB)	RDB-Bxxxx-7/3			

Table 71 - Legacy Motor Feedback Cables

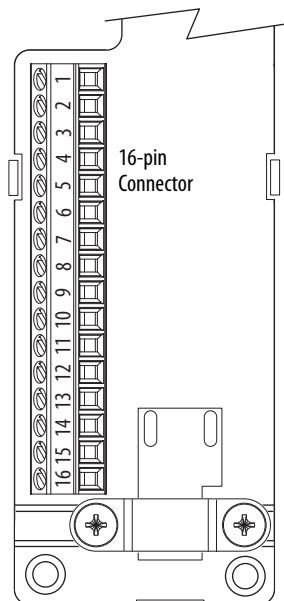
Motor Cable	Description	Cable Cat. No.
Standard	Encoder feedback, threaded	2090-XXNFMF-Sxx 2090-UXNFBMF-Sxx
	Encoder feedback, bayonet	2090-UXNFBMP-Sxx 2090-XXNFMP-Sxx
Continuous-flex	Encoder feedback, bayonet	2090-XXTFMP-Sxx
	Encoder feedback, threaded	2090-CFBM4DF-CDAFxx

Figure 79 - 2198-H2DCK Converter Kit Pinout


Terminal	Signal	Wire Color	Strip Length mm (in.)	Torque Value N·m (lb·in)
1	SIN+	Black	5.0 (0.2)	0.22...0.25 (1.9...2.2)
2	SIN-	White/Black		
3	COS+	Red		
4	COS-	White/Red		
5	DATA+	Green		
6	ECOM ⁽¹⁾	White/Gray		
7	EPWR_9V ⁽²⁾	Orange		
10	DATA-	White/Green		
11	TS	White/Orange	5.0 (0.2)	0.22...0.25 (1.9...2.2)
14	EPWR_5V ⁽²⁾	Gray		

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

(2) The converter kit generates 9V and 5V from a 12V supply coming from the drive. The 9V supply is used by 9V encoders in 460V motors and actuators.

Figure 80 - 2198-K57CK-D15M Connector Kit Pinout


Terminal	Signal	Wire Color	Strip Length mm (in.)	Torque Value N·m (lb·in)
1	SIN+	Black	5.0 (0.2)	0.22...0.25 (1.9...2.2)
2	SIN-	White/Black		
3	COS+	Red		
4	COS-	White/Red		
5	DATA+	Green		
6	ECOM ⁽¹⁾	White/Gray		
7	EPWR_9V	Orange		
8	S3	White/Yellow		
9	CLK+	Brown		
10	DATA-	White/Green		
11	TS	White/Orange		
12	S1	White/Blue		
13	S2	Yellow		
14	EPWR_5V	Gray		
15	CLK-	White/Brown		
16	Drain	N/A		

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

Motor Feedback Cable Preparation

Observe the lead preparation guidelines for each of the connector kits.

IMPORTANT This length of wire is needed to provide a service loop for the longest wires terminated at the terminal block. However, most wires need to be trimmed shorter, depending on the terminal they are assigned to.

Figure 81 - Lead Preparation for 2198- H2DCK Converter Kit


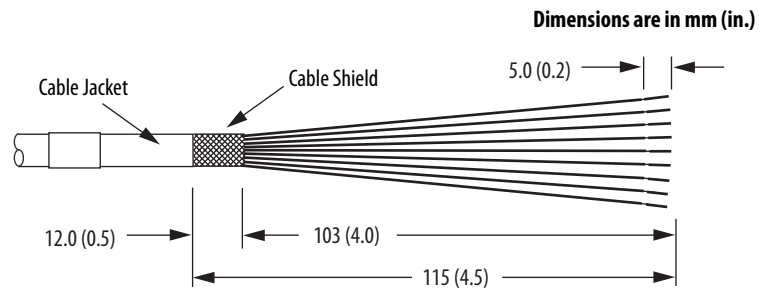


Figure 82 - Lead Preparation for 2198- K57CK-D15M Connector Kit

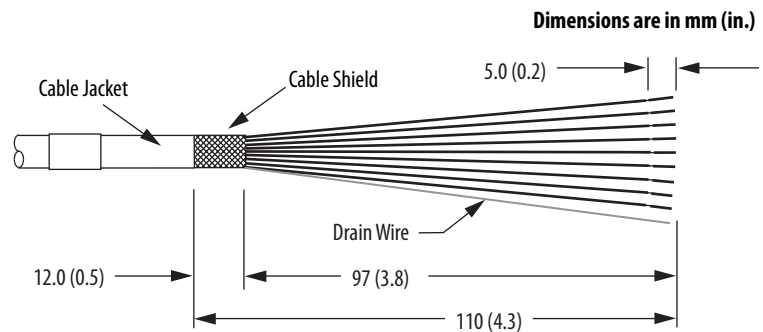

IMPORTANT For the 2198- K57CK-D15M universal connector kit, if your 2090-Series motor cable does not include a drain wire, you must create one from the overall shield during wire preparation and connect it to pin 16.

Apply the Converter Kit/Connector Kit Shield Clamp


Follow these steps to apply the shield clamp.

1. Apply the shield clamp to the 12 mm (0.5 in.) of exposed cable shield.

IMPORTANT Cable preparation and positioning/wiring that provides a high-frequency bond between the shield braid/drain wire and ground is required to optimize system performance.

Also, make sure that the cable is positioned where the cover clamps onto the jacket for added stress relief.


- a. For the 2198- H2DCK converter kit, the shield clamp achieves a high-frequency bond between the shield braid and ground. Apply 0.30 N•m (2.6 lb•in) torque to the clamp screws.

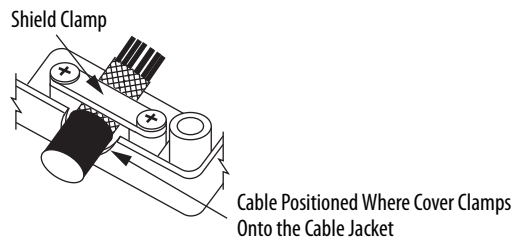

- b. For the 2198- K57CK-D15M connector kit, you must attach the drain wire to pin 16 to achieve a high-frequency bond.

IMPORTANT If your 2090-Series motor cable does not include a drain wire, you must create one from the overall shield braid.

Apply 0.34 N•m (3.0 lb•in) torque to the clamp screws.

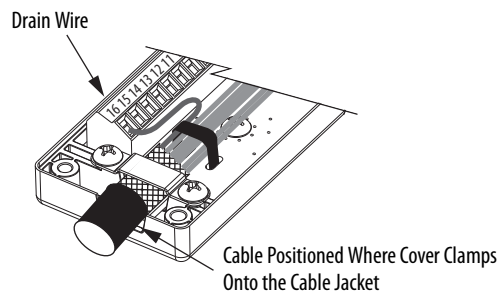

2. Route and insert each wire to its assigned terminal.

Include a service loop, as shown on [page 128](#), and refer to the connector pinout on [page 124](#).

3. Tighten each terminal screw.

Apply 0.22...0.25 N•m (1.9...2.2 lb•in) torque to each screw.

4. Gently pull on each wire to make sure it does not come out of its terminal; reinsert and tighten any loose wires.

5. Attach the tie wrap for added stress relief.

Table 72 - 2090-CFBMxDF-CEAxxx Feedback Cables

Rotary Motors	MPL-B15xxx...MPL-B2xxx-V/Ex4/7xAA MPL-B3xxx...MPL-B9xxx-M/Sx7xAA MPF-Bxxx-M/S, MPS-Bxxx-M/S MPM-Bxxxx-M/S, VPC-Bxxxx-S HPK-Bxxxx-M/S, HPK-Exxxxx-M/S	2198-H2DCK Converter Kit Pin	2198-K57CK-D15M Connector Kit Pin
Linear Actuators	MPAS-Bxxxx-VxxSxA MPAR-Bxxxx MPAI-Bxxxx LDAT-Sxxxx-xDx		
1	SIN+	1	1
2	SIN-	2	2
3	COS+	3	3
4	COS-	4	4
5	DATA+	5	5
6	DATA-	10	10
9	EPWR_5V	-	14
10	ECOM	6 ⁽¹⁾	6 ⁽¹⁾
11	EPWR_9V	7	7
12	ECOM	6	6
13	TS	11	11

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

Table 73 - 2090-XXNFMF-Sxx or 2090-CFBMxDF-CDAxxx Feedback Cables

Rotary Motors	MPL-B15xxx...MPL-B2xxx-Hx4/7xAA MPL-B3xxx...MPL-B45xxx-Hx4/7xAA	VPC-Bxxxx-Y	RDB-Bxxxx-7/3	2198-K57CK-D15M Connector Kit Pin
Linear Actuators	MPAS-Bxxxx-ALMx2C LDAT-Sxxxx-xBx LDC-xxxx-xHTxx			
1	AM+	-	SIN+	1
2	AM-	-	SIN-	2
3	BM+	-	COS+	3
4	BM-	-	COS-	4
5	IM+	DATA+	DATA+	5
6	IM-	DATA-	DATA-	10
7	-	CLK+	CLK+	9
8	-	CLK-	CLK-	15
9	EPWR_5V	-	EPWR_5V	14
10	ECOM	ECOM	ECOM	6 ⁽¹⁾
11	-	EPWR_9V	-	7
12	ECOM	ECOM	ECOM	6
13	TS	TS	TS	11

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

A mounting bracket is included with the 2198-H2DCK converter kit to secure the kit to the drive. Install the mounting bracket in the bottom mounting position on the kit, and the kit mounting holes on the drive.

Figure 83 - Wiring the 2198-H2DCK Feedback Converter Kit


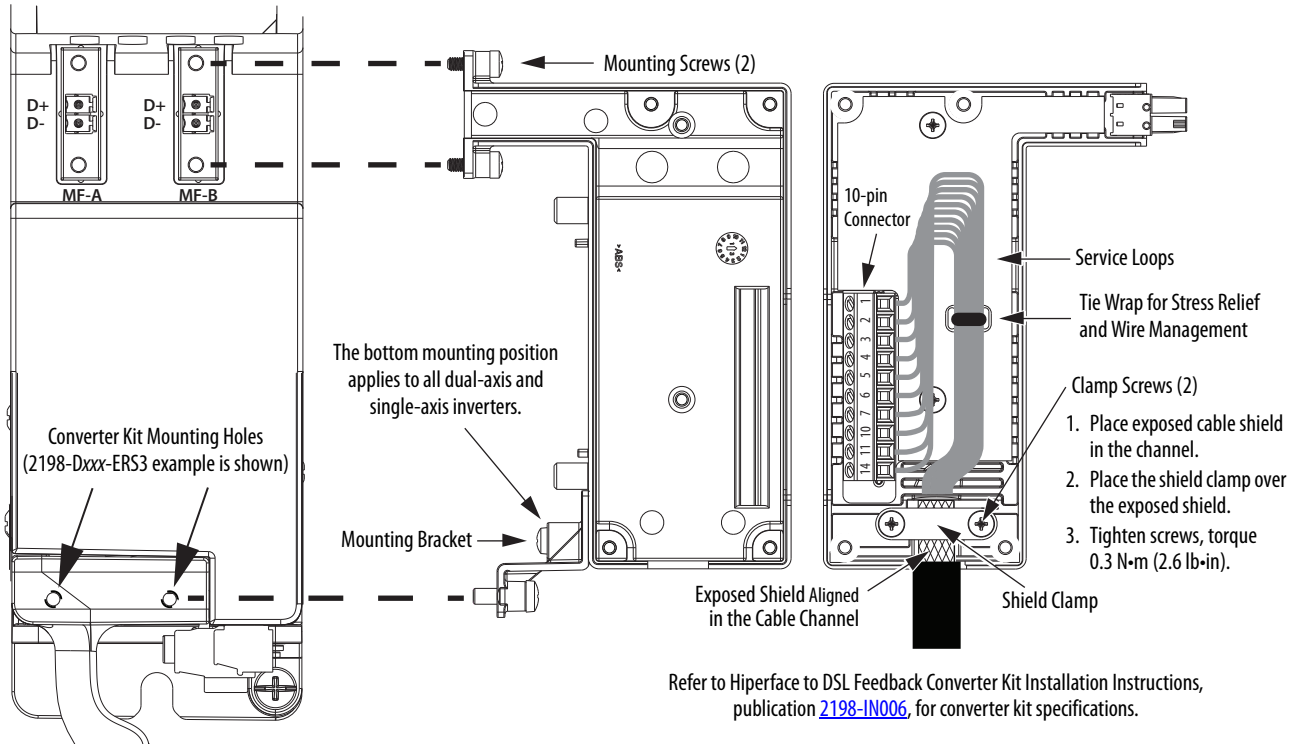


Figure 84 - Wiring the 2198-K57CK-D15M Feedback Connector Kit

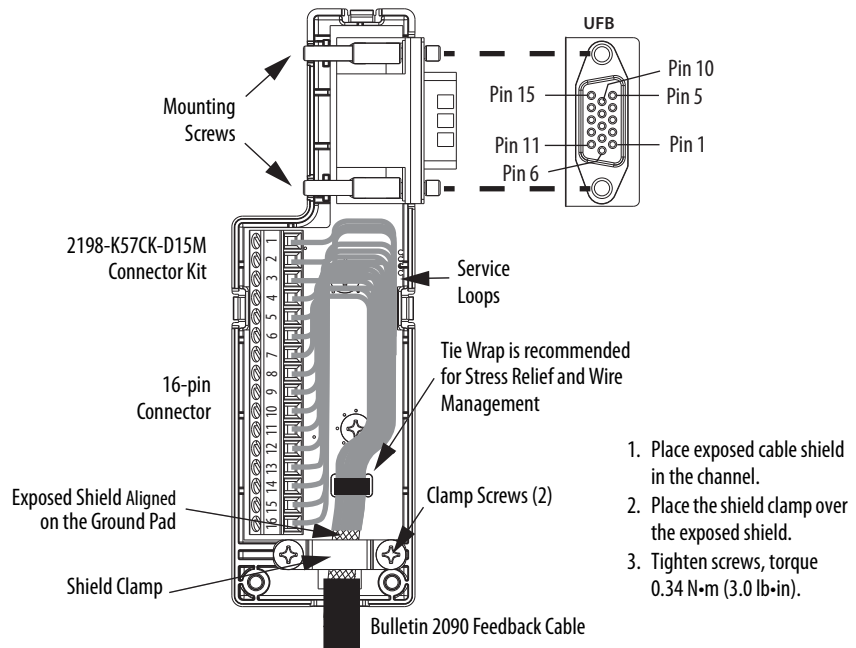

Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.


Capacitor Module Connections

Follow these guidelines when wiring the 2198-CAPMOD-2240 capacitor module and 2198-CAPMOD-DCBUS-IO extension module:

- Wire module status (MS) relay output connections to digital input Bus Capacitor OK or the Logix5000™ controller (optional).
- Refer to [Kinetix 5700 Capacitor Module](#) wiring example on [page 273](#).
- Refer to [Kinetix 5700 Capacitor Module Status Indicators](#) on [page 218](#) for troubleshooting the module status indicators and relay output.
- Refer to the installation instructions provided with your Kinetix 5700 capacitor module, publication [2198-IN008](#).

IMPORTANT To improve system performance, run wires and cables in the wireways as established in [Chapter 2](#). Connections to the DC bus must be made with the shared-bus connection system.

Figure 85 - Capacitor Module Features and Indicators

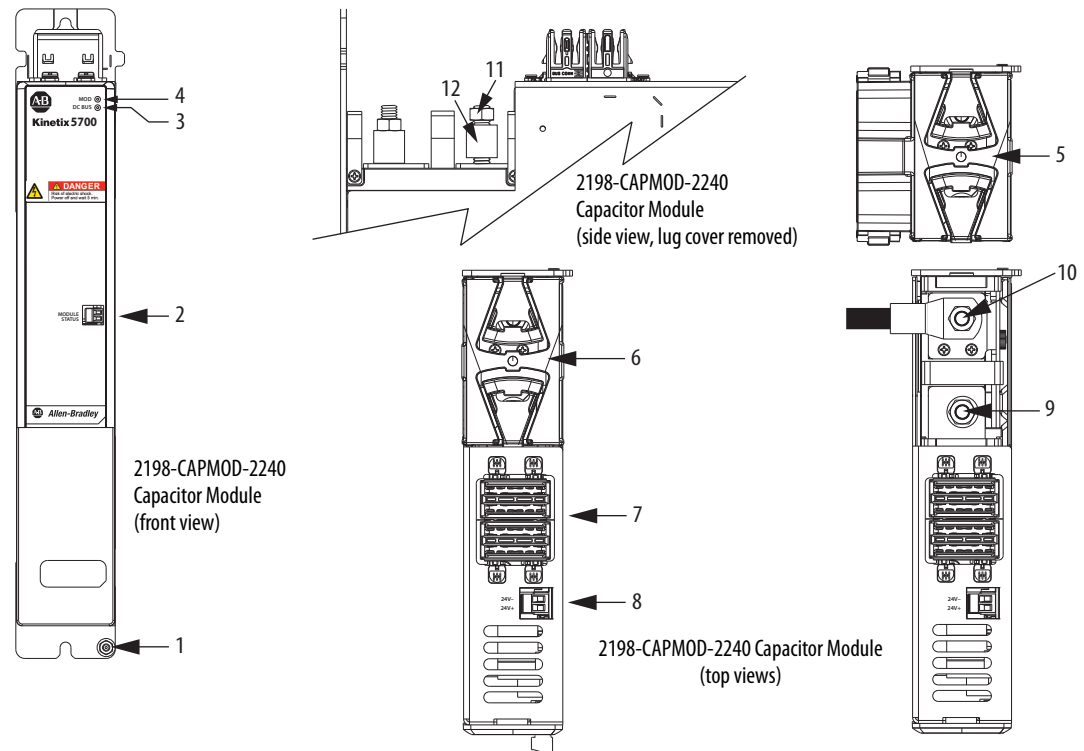


Item	Description
1	Ground stud
2	Module status (MS) connector
3	DC-bus status indicator
4	Module status indicator
5	Stud/lug cover with wires ⁽¹⁾
6	Stud cover without wires

Item	Description
7	DC-bus (DC) connector
8	24V control input power (CP) connector
9	DC- M8 stud (external DC-bus)
10	DC+ M8 stud (external DC-bus), shown with wire lug
11	M8 hex nut
12	Lug spacer

(1) This example shows the lug cover oriented for wires exiting to the left (capacitor module is on the far left of the drive configuration). Rotate lug cover 180° when wires exit to the right (capacitor module is on the far right of the drive configuration).

Figure 86 - Extension Module Features and Indicators

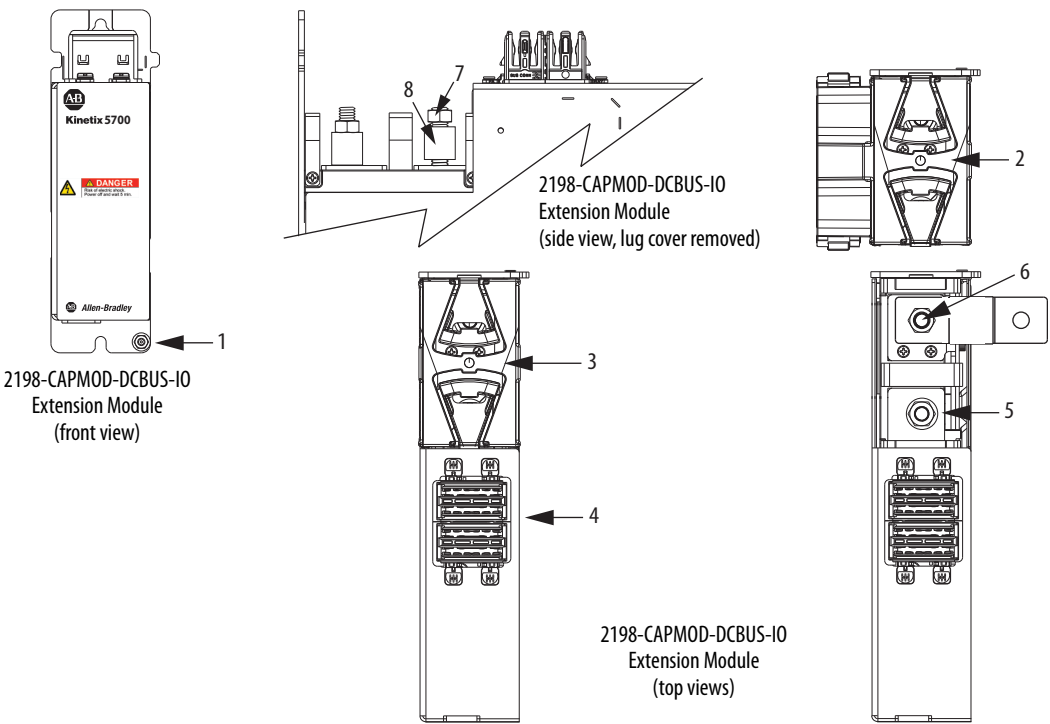

Item	Description
1	Ground lug
2	Stud/lug cover with wires ⁽¹⁾
3	Stud cover without wires
4	DC-bus (DC) connector

Item	Description
5	DC– M8 stud (external DC-bus)
6	DC+ M8 stud (external DC-bus), shown with flexible bus-bar (2x)
7	M8 hex nut
8	Lug spacer

(1) This example shows the lug cover oriented for wires exiting to the left (extension module is on the far left of drive configuration). Rotate lug cover 180° when wires exit to the right (extension module is on the far right of drive configuration).

Table 74 - Capacitor Module Connector Specifications

Connector Description	Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
Module Status	MS-1 MS-2	RELAY+ RELAY-	0.14...1.5 (28...16)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
PELV/SELV 24V power (plug)	CP-1 CP-2	24V+ 24V-	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
DC-bus power	Bus-bar	DC- DC+	N/A ⁽¹⁾	N/A ⁽¹⁾	N/A ⁽¹⁾
DC-bus studs	Bus-bar		N/A	N/A	18 (156)
	Lugs		53.5 (1/0) 100 A 85.0 (3/0) 200 A	N/A ⁽²⁾	

(1) DC bus connections are always made from one drive module to another over the shared-bus connection system. These terminals do not receive discrete wires.
(2) Strip length for the DC-bus studs depend on the customer-supplied lugs.

External Passive-shunt Connections

Follow these guidelines when wiring your 2198-Rxxx passive shunt:

- Refer to [External Passive Shunt Modules](#) on [page 46](#) for noise zone considerations.
- Refer to [Passive Shunt Resistor Wiring Examples](#) on [page 281](#).
- Refer to the installation instructions provided with your Bulletin 2198 shunt module, publication [2198-IN011](#).

IMPORTANT To improve system performance, run wires and cables in the wireways as established in [Chapter 2](#).

Figure 87 - RC Connector Wiring

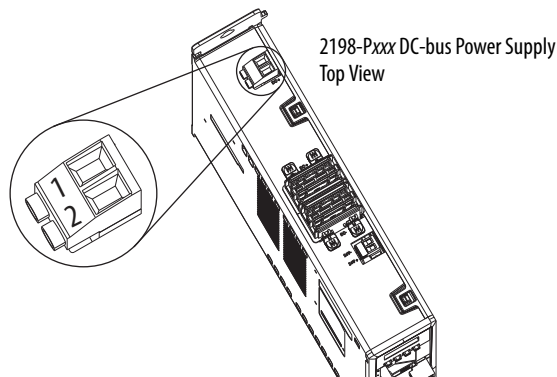


Table 75 - Shunt Resistor (RC) Connector Specifications

DC-bus Power Supply Cat. No.	Pin	Signal	Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Pxxx	RC-1 RC-2	SH DC+	1.5...6 (16...10)	12.0 (0.47)	0.5...0.6 (4.4...5.3)

IMPORTANT You must disconnect the internal shunt wires at the RC connector before connecting the Bulletin 2198 shunt resistor wires.

Table 76 - Shunt Resistor Compatibility

DC-bus Power Supply Cat. No.	Kinetix 5700 Shunt Module ⁽¹⁾ Cat. No.			
	2198-R127	2198-R031	2198-R014	2198-R004
2198-P031	N/A	N/A	X	X
2198-P070	N/A	N/A	X	X
2198-P141	X	X	X	X
2198-P208	X	X	X	X

(1) Shunt resistor selection is based on the needs of your actual hardware configuration.

External Active-shunt Connections

Active shunts are available from the Rockwell Automation® Encompass™ Partner Powerohm Resistors, Inc.

Rockwell Automation Encompass Partners	Contact Information
Powerohm Resistors, Inc.	5713 13th Street Katy, Texas 77493 Tel: (800) 838-4694 http://www.powerohm.com

Active shunts wire to the DC-bus studs. The capacitor modules are equipped with spacers that slide onto the M8 studs. When the system configuration includes external DC-bus and active shunt connections, external DC-bus connections are made below the spacer and active shunt connections are made above the spacer.

Figure 88 - Active Shunt Connections

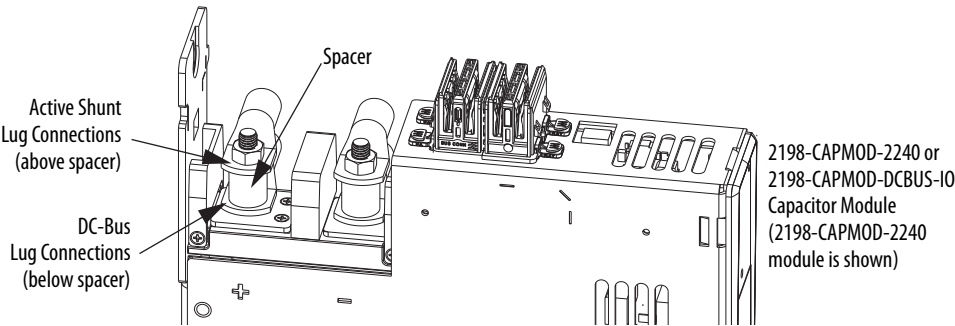


Table 77 - Active Shunts Compatible with Kinetix 5700 Drive Systems

Rockwell Automation Encompass Partners	Powerohm Cat. No. ⁽¹⁾	Power Rating kW	Current Rating Amps
Powerohm Resistors, Inc.	PWB035	22.7	35
	PWB110	71.5	110
	PKB010	2.0	N/A
	PKB050	7.0	N/A

(1) PKBxxx active shunt modules use built-in internal brake resistors. PWBxxx active shunt modules require appropriately sized external brake resistors.



ATTENTION: Do not use Powerohm active-shunt modules at input line voltages that exceed 500V AC. Active-shunt thermal-overload shutdown can occur if input line voltage exceeds 500V AC.

Bulletin VPC Motors and the Extended Speed Feature

The extended speed feature is implemented in the Logix Designer application to prevent accidental motor operation at unsafe speeds. See [Extended Speed](#) on [page 350](#) for a description of this feature.



WARNING: Bulletin VPC motor operation at speeds exceeding the bus-overvoltage speed limit can result in personal injury and/or damage to the drive. To avoid equipment damage and personal injury, an active shunt must be configured in the Logix Designer application to protect the DC-bus system from an overvoltage condition.

IMPORTANT Refer to Motion Analyzer software to verify drive/shunt system sizing. Access the tool at <https://motionanalyzer.rockwellautomation.com>.

Powerohm Bulletin PKB and PWB active-shunt modules are required for DC-bus system protection when Bulletin VPC motors are expected to operate in the extended speed region at speeds exceeding the bus-overvoltage speed limit.

Considerations for Powerohm Shunt Installation

Refer to the Powerohm documentation included with your Bulletin PKB or PWB shunt module to install, wire, and configure the module.

- To avoid nuisance thermal overload trips, configure Bulletin PKB and PWB active-shunt modules to the highest shunt turn-on voltage setting. The recommended setting for Line Voltage Level Jumper is JP5.
- Configure Bulletin PKB and PWB active-shunt modules in Internal (automatic) mode. Unless an external enable signal is provided, configure the Brake Enable Jumper in Internal (automatic) mode (JP6 is in the downward position).


Ethernet Cable Connections

This procedure assumes you have your Logix5000 controller and Kinetix 5700 drive modules mounted and are ready to connect the network cables.

The EtherNet/IP™ network is connected by using the PORT 1 and PORT 2 connectors. Refer to [page 64](#) to locate the Ethernet connectors on your drive module. Refer to [Figure 89](#) to locate the connectors on your Logix5000 controller.

Shielded Ethernet cable is required and available in several standard lengths. Ethernet cable lengths connecting drive-to-drive, drive-to-controller, or drive-to-switch must not exceed 100 m (328 ft). Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [KNX-TD004](#), for more information.

Figure 89 - ControlLogix and CompactLogix Ethernet Port Locations

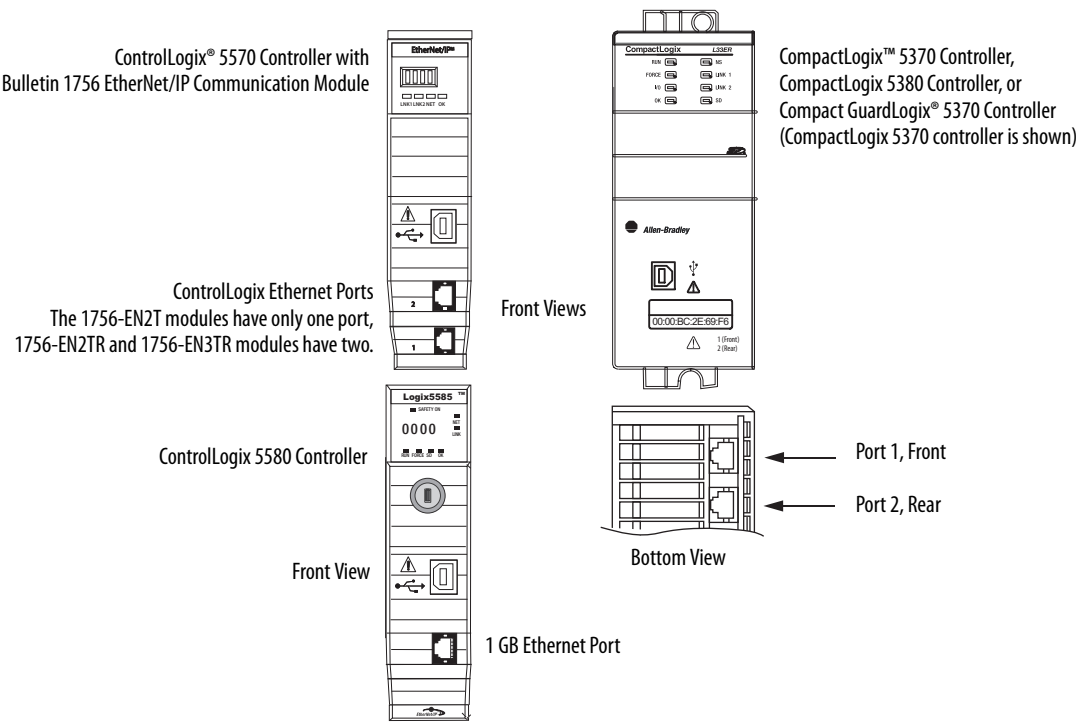

The Logix5000 controllers accept linear, ring (DLR), and star network configurations. Refer to [Typical Communication Configurations](#) on [page 24](#) for linear, ring, and star configuration examples.

IMPORTANT When using an external Ethernet switch for routing traffic between the controller and the drive, switches with IEEE-1588 time synchronization capabilities (boundary or transparent clock) must be used to make sure switch delays are compensated.

IMPORTANT The iTRAK power supply requires an Ethernet connection for firmware upgrades by using ControlFLASH™ software. Although Ethernet is not required during normal operation, it can also be used to access real-time data, for example, event logging.

Configure and Start the Kinetix 5700 Drive System

This chapter provides procedures for configuring your Kinetix® 5700 drive system with a Logix5000™ controller by using the Logix Designer application.


Topic	Page
Understand the Kinetix 5700 Display	136
Configure the Drive	144
Studio 5000 Logix Designer	144
Configure the Kinetix 5700 Drive Modules	151
Configure the Motion Group	162
Configure Feedback-only Axis Properties	163
Configure Induction-motor Frequency-control Axis Properties	165
Configure IPM Motor Closed-loop Control Axis Properties	174
Configure SPM Motor Closed-loop Control Axis Properties	178
Configure Induction-motor Closed-loop Control Axis Properties	182
Configure Feedback Properties	189
Download the Program	194
Apply Power to the Kinetix 5700 Drive System	195
Understand Bus-sharing Group Configuration	196
Test and Tune the Axes	199

TIP Before you begin, make sure that you know the catalog number for each drive module, the Logix module and /or controller, and the motor used in your motion control application.

Understand the Kinetix 5700 Display


The Kinetix 5700 drives have two status indicators and an LCD status display. The indicators and display are used to monitor the system status, set network parameters, and troubleshoot faults. Four navigation buttons, directly below the display, are used to select items from a soft menu.

Figure 90 - Kinetix 5700 Drive LCD Display and Status Indicators

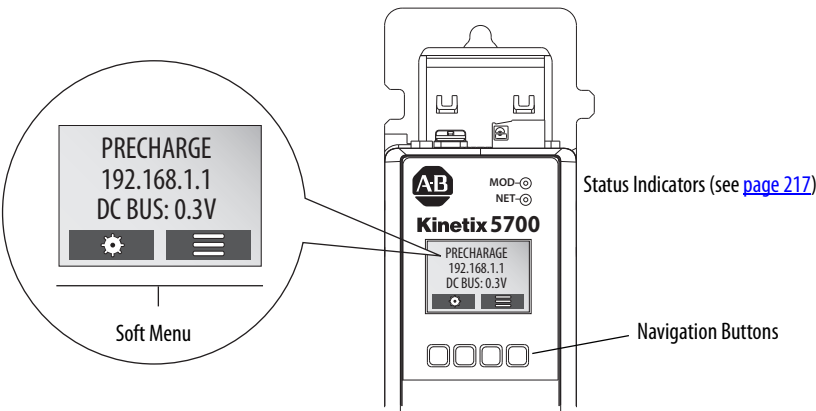


This is the Home  screen.

- The setup selections  are tied to the Setup (left-side) buttons and the menu selections  are tied to the Menu (right-side) buttons.
- For dual-axis inverters, the Drive (center) buttons toggle the display between drive A and B (A is the default drive).

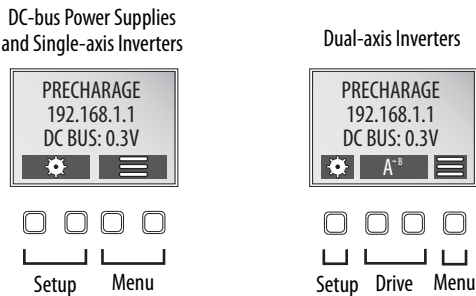

The soft menu provides a changing selection that corresponds to the current screen. Use the navigation buttons to perform the following.

Each soft menu item is executed by pressing the navigation button directly below the item, as shown in this example.

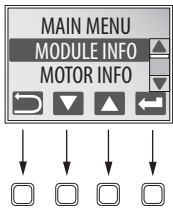

	Press to go back. Pressing enough times results in the Home  screen.
 	Pressing either arrow moves the selection to the next (or previous) item. When changing values, pressing the up arrow increments the highlighted value. Values rollover after reaching the end of the list.
	Press to select values to change, moving from right to left. Values rollover when reaching the end of the list.
	Press to select a menu item.
	Press to return to the Home screen.
	Press to display the fault help (possible solutions in troubleshooting tables). ⁽¹⁾

(1) Refer to [Fault Codes](#) beginning on [page 208](#) to review the troubleshooting tables.

Menu Screens

The menu screens provide information about the drives, motors, diagnostics, and the fault log. Parameters cannot be updated in the menu screens. Press one of the menu buttons to access the menu.

You can use the soft menu items and navigation buttons to view the information.

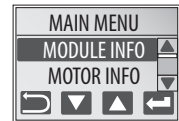


Table 78 - Navigating the Inverter Menu

Menu/Sub Menu Selections	Attributes	Description	Example Values	
Drive Info	Catalog number		2198-xxxx-ERS3	
	Firmware revision		FW REV: 1.1.450167	
	Hardware revision		HW REV: 1.1	
	Serial number		SERIAL#: xxxxxxxxxxxx	
Motor Info	Model number		MODEL: VPL-B1306F	
	Serial number		SERIAL#: xxxxxxxxxxxx	
Diagnostics> Drive Diagnostics	Bus diagnostics		BUS VOLT: 0.0V	
			BUS CUR: 0.0A	
	Inverter diagnostics		INV UTIL: 0.0%	
			INV TEMP: 31.7C	
Diagnostics> Motor Diagnostics	Motor speed		SPEED:0.0 RPM	
	Motor current		MTR CUR:0.0A RMS	
	Motor utilization		MTR UTIL:0.0%	
	Motor temperature		MTR TEMP:0.00C	
Diagnostics> Encoder Diagnostics	Serial number		SERIAL#xxxxxxxxxx	
	Resolution		RESOLUTION: 262144	
	Number of turns		NO OF TURNS: 1	
	Encoder temperature		ENC TEMP:33.7C	
	Supply voltage		SUPP VOLT:11.3V	
	Link quality	The link quality attribute indicates how noisy a communication link is and also indicates if there is a communication link already established at the drive end. The LINK QUAL value must always be 100%. Persistent values below 100% indicates a poor feedback ground connection.	LINK QUAL: 100.0%	
	Remote signal strength indicator	Similar to Link Quality, RSSI reports the quality of link as seen at the motor end by the encoder. Maintain the RSSI value between 80 and 100%. Persistent values below 80% indicates a poor feedback ground connection.	RSSI: 100.0%	
	Accumulated position errors	This is an aggregated number of errors in the primary position feedback channel of DSL feedback.	POS ERRORS: 1	
	Channel position errors	This is an aggregated number of errors on a secondary communication channel of the DSL feedback.	CHNL ERRORS: 5	
	Hardwired input status		1 OFF 2 OFF	1 ON 2 ON
Diagnostics> Safety Diagnostics	Safety state	This attribute indicates the state of the safety supervisor object (refer to Safety Supervisor State on page 240).	SAFETY STATE:CONFIGURING INPUT CONNECTIONS:1 OUTPUT CONNECTIONS:1	SAFETY STATE:RUNNING INPUT CONNECTIONS:1 OUTPUT CONNECTIONS:1
	Input connections	This attribute indicates the number of safety controllers that have an input connection established. The input connection provides the controller with the drive's safety status. The drive supports up to three input connections.		
	Output connections	This attribute indicates the number of safety controllers that have an output connection established. The output connection provides a controller with the ability to control the drive's STO function. The drive allows only one output connection.		

Table 78 - Navigating the Inverter Menu (continued)

Menu/Sub Menu Selections	Attributes	Description	Example Values
Fault Log	Fault text	Fault code as listed in Fault Codes beginning on page 208 .	FLT S20 - CONV OVERLOAD FL
	Fault details	The problem as reported in Fault Codes on page 208 .	The converter thermal model indicates that the temperature has exceeded the factory set capacity rating of 110%.
	Fault help	The Possible Solution as reported in Fault Codes on page 208 .	- Reduce the number of drives in the same bus group - Reduce duty-cycle of commanded motion

Table 79 - Navigating the DC-bus Power Supply Menu

Menu/Sub Menu Selections	Attributes	Description	Example Values
Module Info	Catalog number		2198-Pxxx
	Firmware revision		FW REV: 1.1.450167
	Hardware revision		HW REV: 1.1
	Serial number		SERIAL#: xxxxxxxxxxxx
Diagnostics> Converter Diagnostics	Bus diagnostics		BUS VOLT: 0.0V
			BUS CUR: 0.0A
	Converter diagnostics		CONV UTIL: 0.7%
			CONV TEMP: 31.7C
	Shunt utilization		SHUNT UTIL: 0.0%
Fault Log	Fault text	Fault code as listed in Fault Codes beginning on page 208 .	FLT S45 - FDBK COMM FL
	Fault details	The problem as reported in Fault Codes on page 208 .	The number of consecutive missed or corrupted serial data packets from the intelligent feedback device has exceeded a factory set limit
	Fault help	The Possible Solution as reported in Fault Codes on page 208 .	Check motor feedback cable and connector

Table 80 - Navigating the iTRAK Power Supply Menu

Menu/Sub Menu Selections	Attributes	Description	Example Values
Module Info	Catalog number		2198T-W25K-ER
	Firmware revision		FW: 6.1.7100254
	Hardware revision		HW REV: 1.1
	Serial number		SERIAL#: xxxxxxxxxxxx
Diagnostics> Converter Diagnostics	Bus diagnostics		BUS VOLT: 0.0V
			OUT1 VOLT: 0.0V
			OUT1 AMPS: 0.0A
			OUT1 PWR: 0.0kW
	Output 1 diagnostics		OUT1 UTIL: 0.0%
			OUT2 VOLT: 0.0V
			OUT2 AMPS: 0.0A
			OUT2 PWR: 0.0kW
Fault Log	Output 2 diagnostics		OUT2 UTIL: 0.0%
			TOTAL PWR: 0.0kW
Fault Log	Fault text	Fault code as listed in Fault Codes beginning on page 208 .	FLT S38 - FUSE BLOWN
	Fault details	The problem as reported in Fault Codes on page 208 .	The internal DC-bus power fuse is blown
	Fault help	The Possible Solution as reported in Fault Codes on page 208 .	Return drive for repair if fault continues


Setup Screens

The setup screens provide the means of changing drive settings, for example, the IP address. Press one of the setup buttons to access the setup screens.

You can use the soft menu items and navigation buttons to view the information and make changes.

Press  to validate your changes:

- If the change is invalid, the value doesn't change.
- If the change is valid, an asterisk appears next to the changed attribute.



IMPORTANT You must cycle control power to make network configuration changes persistent. In this example, the IP address was changed. The change takes affect and the asterisk disappears after control power is cycled. Display configuration changes take effect immediately.

Table 81 - Navigating the Inverter Settings Menu

Settings Menu Selections	Sub Menu Selections	Attributes	Default	Description
Protected Mode	Reset	ENABLED DISABLED	ENABLED	When Enabled (default), identity object or safety resets are not possible when a controller connection is open.
	Network Config	ENABLED DISABLED	ENABLED	When Enabled (default), network configuration changes are not possible when a controller connection is open.
	Flash Update	ENABLED DISABLED	ENABLED	When Enabled (default), firmware updates are not possible when a controller connection is open.
	Device Config	ENABLED DISABLED	ENABLED	When Enabled (default), only attribute writes are possible when a controller connection is open.
Network	->Static IP ⁽¹⁾	IP address	192.168.1.1	Indicates current IP address
		Subnet mask	255.255.255.000	Indicates current subnet mask
		Gateway	192.168.001.001	Indicates current gateway
	DHCP	On		Turns DHCP on
		Off		Turns DHCP off
Display	Backlight Timeout	30 sec... NEVER (NEVER=no timeout period, the backlight is always on)	-> 3 min ⁽¹⁾	Sets backlight timeout period of the display
	Cyclic Data Select ⁽²⁾	->DC BUS ⁽¹⁾		DC bus voltage
		INV UTIL		Inverter utilization in percent
		INV TEMP		Inverter temperature in °C
		MOTOR UTIL		Motor utilization in percent
		SPEED		RPM
		OUT PWR		Output power in watts
		OUT FREQ		Output frequency in hertz
		OUT CUR		Output current in amps
	Set Contrast	-10...+10	0	Contrast setting of the display
Safety	Reset Ownership	Are you sure?		Resets safety ownership (reset fails after 30 seconds)
Web	Enabled			Enables the web server
	->Disabled			Disables the web server

(1) An arrow (->) appears in front of the chosen attribute indicating that this attribute is currently configured. This is also the factory default setting.

(2) The DC bus voltage is one of several cyclic data attributes. You can select any of the Cyclic Data Select attributes to be displayed on the Home screen.

Table 82 - Navigating the DC-bus Power Supply Settings Menu

Settings Menu Selections	Sub Menu Selections	Attributes	Default	Description
Protected Mode	Reset	ENABLED DISABLED	ENABLED	When Enabled (default), identity object or safety resets are not possible when a controller connection is open.
	Network Config	ENABLED DISABLED	ENABLED	When Enabled (default), network configuration changes are not possible when a controller connection is open.
	Flash Update	ENABLED DISABLED	ENABLED	When Enabled (default), firmware updates are not possible when a controller connection is open.
	Device Config	ENABLED DISABLED	ENABLED	When Enabled (default), only attribute writes are possible when a controller connection is open.
Network	->Static IP ⁽¹⁾	IP address	192.168.1.1	Indicates current IP address
		Subnet mask	255.255.255.000	Indicates current subnet mask
		Gateway	192.168.001.001	Indicates current gateway
	DHCP	On		Turns DHCP on
		Off		Turns DHCP off
Display	Backlight Timeout	30 sec... NEVER (NEVER=no timeout period, the backlight is always on)	-> 3 min ⁽¹⁾	Sets backlight timeout period of the display
	Cyclic Data Select ⁽²⁾	->DC BUS ⁽¹⁾		DC bus voltage
		CONV UTIL		Converter utilization in percent
		CONV TEMP		Converter temperature in °C
		SHUNT UTIL		Shunt utilization in percent
		OUT PWR		Output power in watts
		DC BUS CUR		Output current in amps
	Set Contrast	-10...+10	0	Contrast setting of the display

(1) An arrow (->) appears in front of the chosen attribute indicating that this attribute is currently configured. This is also the factory default setting.

(2) The DC bus voltage is one of several cyclic data attributes. You can select any of the Cyclic Data Select attributes to be displayed on the Home screen.

Table 83 - Navigating the iTRAK Power Supply Settings Menu


Settings Menu Selections	Sub Menu Selections	Attributes	Default	Description
Network	->Static IP ⁽¹⁾	IP address	192.168.1.1	Indicates current IP address
		Subnet mask	255.255.255.000	Indicates current subnet mask
		Gateway	192.168.001.254	Indicates current gateway
	DHCP	On		Turns DHCP on
		Off		Turns DHCP off
Display	Backlight Timeout	30 sec . . . NEVER (NEVER=no timeout period, the backlight is always on)	-> 3 min ⁽¹⁾	Sets backlight timeout period of the display
	Cyclic Data Select ⁽²⁾	-> BUS VOLT ⁽¹⁾		DC bus voltage in volts
		OUT1 VOLT		Output 1 voltage in volts
		OUT1 AMPS		Output 1 current in amps
		OUT1 PWR		Output 1 power in kilowatts
		OUT1 UTIL		Output 1 utilization in percent
		OUT2 VOLT		Output 2 voltage in volts
		OUT2 AMP		Output 2 current in amps
		OUT2 PWR		Output 2 power in kilowatts
		OUT2 UTIL		Output 2 utilization in percent
		TOTAL PWR		Total power in kilowatts
	Set Contrast	-10 . . . +10	0	Contrast setting of the display
Web	Enabled			Enables the web server
	->Disabled			Disables the web server

(1) An arrow (->) appears in front of the chosen attribute indicating that this attribute is currently configured. This is also the factory default setting.


(2) The DC bus voltage is one of several cyclic data attributes. You can select any of the Cyclic Data Select attributes to be displayed on the Home screen.

Startup Sequence

On initial powerup, the drive performs a self test. Upon successful completion, the drive firmware revision is displayed.

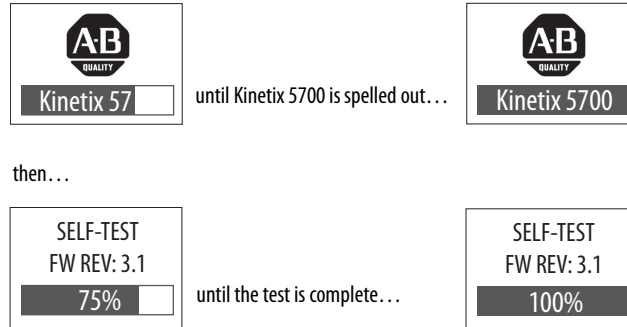

Next, the axis state, the IP address, and the default cyclic data attribute (in this example DC bus voltage) appears. In addition, the setup and menu soft keys are displayed. This is the Home screen.



In this example PRECHARGE is the axis state attribute. [Table 84](#) lists the other axis states and their descriptions.

Table 84 - Axis States on the Home Screen

Axis State	Description
STANDBY	The drive is waiting to receive configuration information from the controller.
CONNECTING	The drive is trying to establish communication with the EtherNet/IP™ controller.
CONFIGURING	The drive is receiving configuration information from the controller.
SYNCING	The drive is waiting for a successful Group Sync service.
STOPPED	The drive has DC bus ready, but the control loops are not enabled.
PRECHARGE	The drive is ready for mains input power.
STARTING	The drive is enabled and checking various conditions before entering the RUNNING or TESTING state. For example, the drive checks the Brake Release delay time during the STARTING state.
RUNNING	- The drive is enabled, configured with an active control mode, and actively tracking a command. - The drive is configured for No Control and is fully operational.
TESTING	The drive is actively executing a test procedure, for example, a hookup test.
STOPPING	The drive is decelerating to a stop as the result of a disable.
ABORTING	The drive is decelerating to a stop as the result of a fault or an abort request.
MAJOR FAULTED	The drive is faulted due to an existing or past fault condition.
START INHIBITED	The drive has an active condition that inhibits it from being enabled.
SHUTDOWN	The drive has been shut down.

Configure the Drive

You can include the drive in your Studio 5000 Logix Designer® application by adding it to a configured EtherNet/IP module or controller under the I/O configuration tree. After setting network parameters, you can view the drive status information in Studio 5000® environment and use it in your Logix Designer application.

Set the Network Parameters

You must program network parameters by using the LCD display.

1. From the LCD display, select SETUP>NETWORK and choose between STATIC IP and DHCP.

The default setting is STATIC IP.

2. If STATIC IP, then press  to configure the following parameters:
 - IP address
 - Gateway
 - Subnet mask

Settings are stored in nonvolatile memory. IP addressing can also be changed through the Module Configuration dialog box in RSLinx® software. Changes to the IP addressing take effect after power is cycled. The drive is factory programmed to static IP address of 192.168.1.1.

Refer to [Setup Screens](#) on [page 139](#) for help setting the network parameters.

Studio 5000 Logix Designer

For help using the Studio 5000 Logix Designer application as it applies to configuring the ControlLogix® or CompactLogix™ controllers, refer to [Additional Resources](#) on [page 13](#).

Kinetix 5700 Add-On Profile

The Logix Designer application, version 29.00 or later, makes possible the configuration of additional Allen-Bradley motors, actuators, and drive features not available in previous versions.

IMPORTANT	To configure additional motors, actuators, and drive features with your Kinetix 5700 servo drive, you must have drive firmware 4.001 or later. Refer to Table 85 to determine if you need to install the Kinetix 5700 Add-on Profile.
------------------	---

Table 85 - AOP Installation Requirement

Drive Firmware Revision	Logix Designer Application Version	Kinetix 5700 AOP Needed?
4.001	26.00 or 27.00	Yes
	28.00 or later	No
5.001	26.00, 27.00, 28.00	Yes
	29.00 or later	No
7.001 or later ⁽¹⁾	29.00 or later	No

(1) Drive firmware 7.001 enhancements are available only with the Studio 5000 Logix Designer, version 29.00 or later, firmware update. The AOP for firmware 7.001 is not available for download.


Install the Kinetix 5700 Add-On Profile

Add-On profiles (AOP) are available for download at the Custom Downloads Add-On Profiles website: <https://download.rockwellautomation.com/esd/download.aspx?downloadid=addonprofiles>

Follow these steps to download the Kinetix 5700 Add-On profile.

1. Login to the Custom Download Add-On Profiles website.

The Custom Download Files dialog box opens.

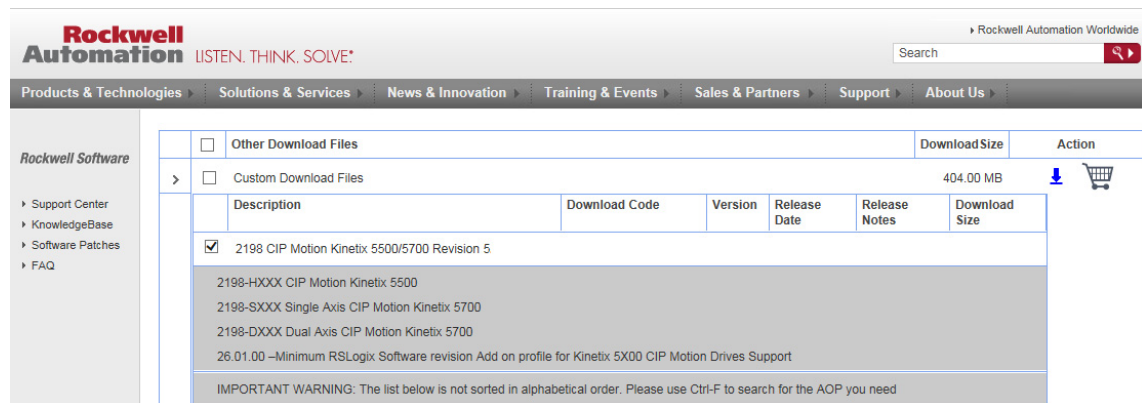

2. Check 2198 CIP Motion Kinetix 5500/5700 AOP revision 5.
3. Click  and accept the user license agreement.
If prompted to install the Download Manager, allow the installation.
4. Click the Add-On Profile icon and follow the download instructions.
5. Extract the AOP zip file and run Setup.

Configure the Logix5000 Controller

These procedures assume that you have wired your Kinetix 5700 drive system. In this example, the GuardLogix® 5570 safety controller, ControlLogix 1756-EN2TR communication module, and CompactLogix 5370 controller dialog boxes are shown.



Follow these steps to configure the controller.

1. Apply power to your controller and open your Logix Designer application.



2. From the Create menu, choose New Project.

The New Project dialog box appears.

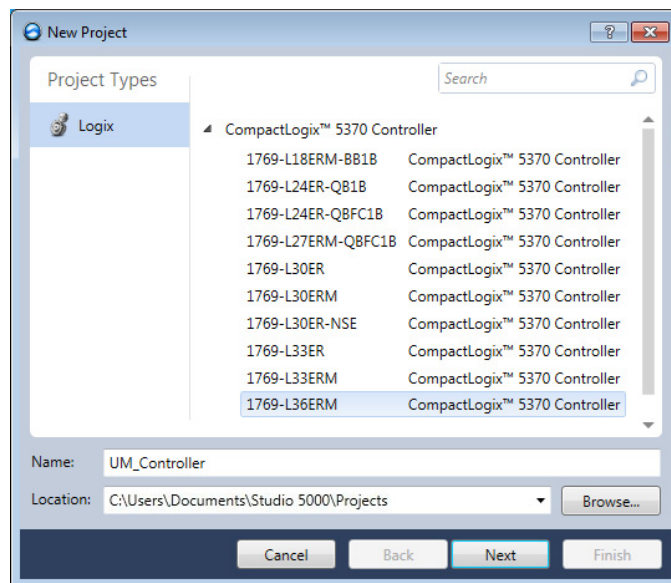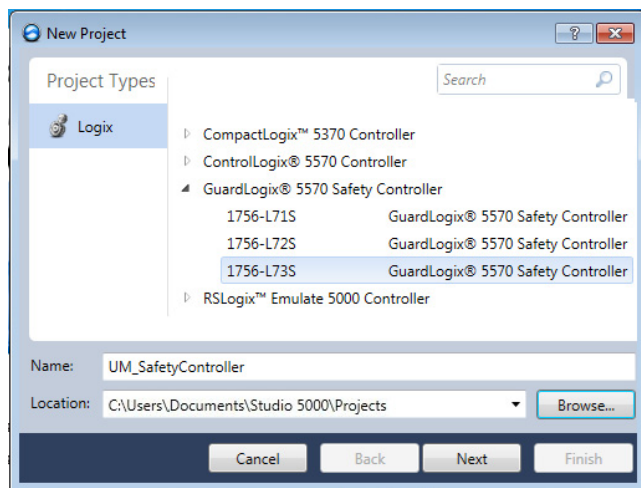


IMPORTANT If you are configuring a safety application, you must use a GuardLogix safety controller.

In this example, the typical dialog boxes for 1756-ENxT EtherNet/IP modules and CompactLogix 5370 controllers with embedded Ethernet are shown.

Follow these steps to configure your Logix5000 controller.

1. Expand the Logix5000 controller family and select your controller.
2. Type the file Name.
3. Click Next.

The New Project dialog box appears.

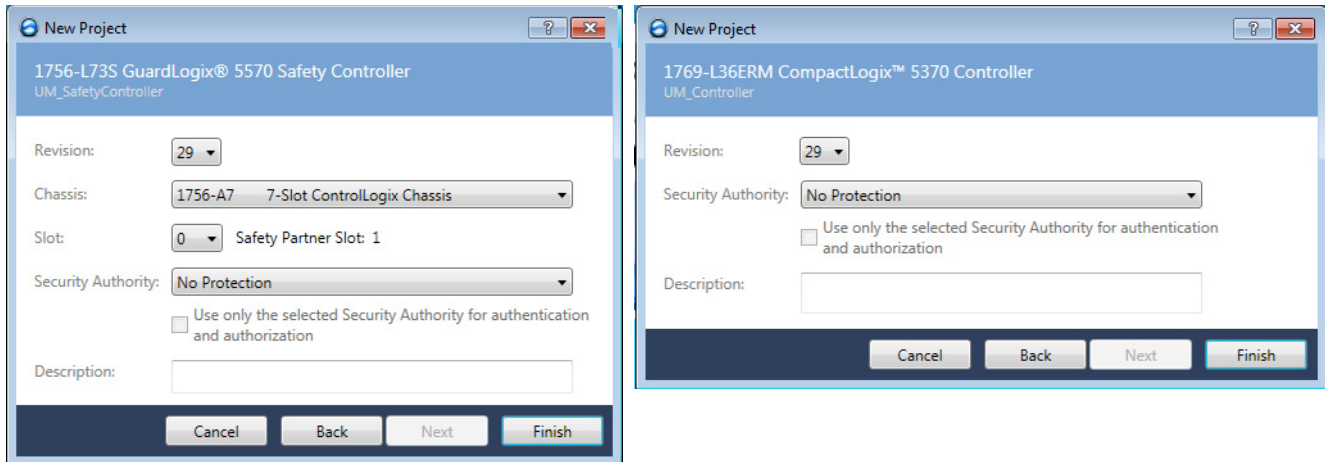


4. From the Revision pull-down menu, choose your software revision.

IMPORTANT To configure Kinetix 5700 drive systems, you must be using the Logix Designer application, version 26.00 or later.


5. Click Finish.

The new controller appears in the Controller Organizer under the I/O Configuration folder.

Controller Organizer with CompactLogix 5370 controller.

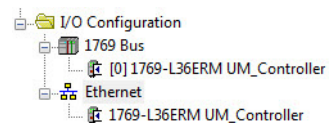

Controller Organizer with GuardLogix 5570 controller.




IMPORTANT If your project includes a ControlLogix or GuardLogix controller, you need to add an EtherNet/IP communication module to your Bulletin 1756 chassis and configure it for use in your application.

- For ControlLogix 5570, GuardLogix 5570, and ControlLogix 5580 controllers, go to [step 6](#)
- For CompactLogix 5370, Compact GuardLogix 5370, and CompactLogix 5380 controllers, go to [step 13](#)

Refer to the EtherNet/IP Network Configuration User Manual, publication, [ENET-UM001](#) for more information.

6. Right-click I/O Configuration in the Controller Organizer and choose New Module.

The Select Module Type dialog box appears.

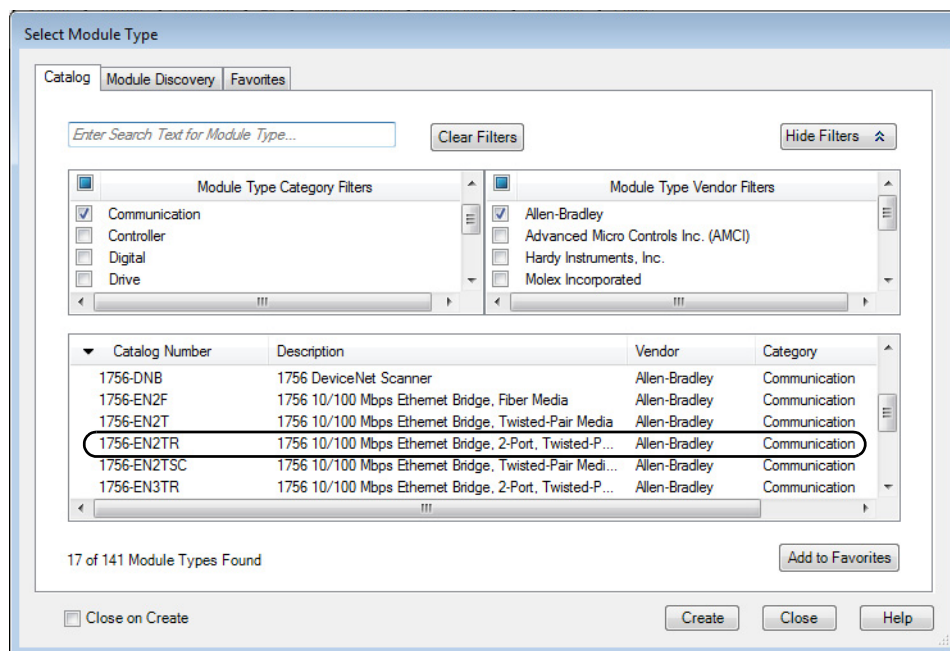


7. By using the filters, check Communication and Allen-Bradley, and select 1756-EN2T, 1756-EN2TR, or 1756-EN3TR as appropriate for your hardware configuration.

In this example, the 1756-EN2TR module is selected.

8. Click Create.

The New Module dialog box appears.

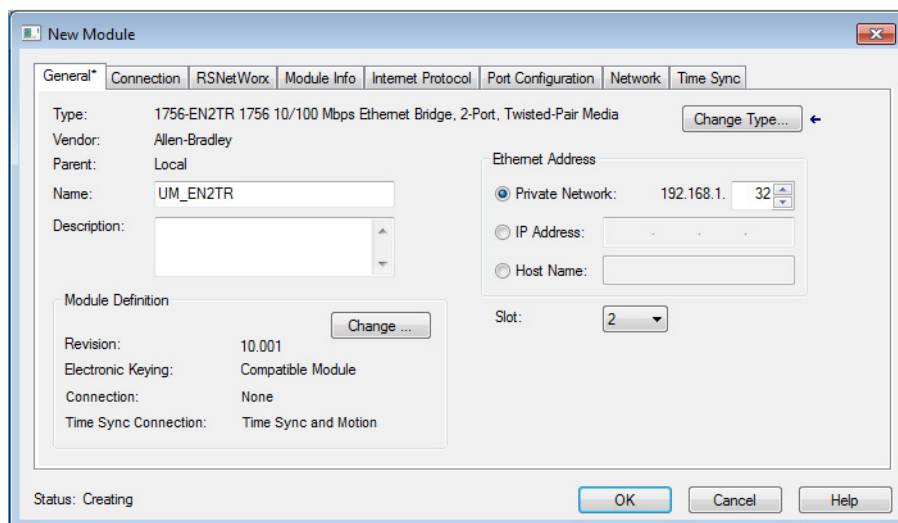

- a. Configure the new module.
- b. Type the module Name.
- c. Enter the Logix EtherNet/IP module slot (leftmost slot = 0).

- d. Select an Ethernet Address option.


In this example, the Private Network address is selected.

- e. Enter the address of your EtherNet/IP module.

In this example, the last octet of the address is 32.

- f. Click Change in the Module Definition area.

The Module Definition dialog box opens.

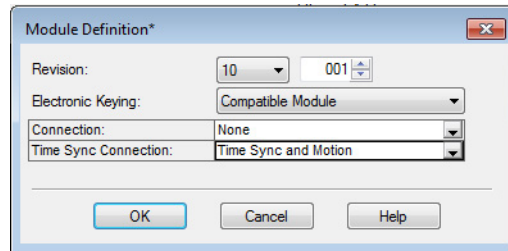


9. From the Time Sync Connection pull-down menu, choose Time Sync and Motion.

IMPORTANT Time Sync functionality enables motion control on an Ethernet network. Without this setting, you won't be able to run your motion application.


10. Click OK to close the Module Definition dialog box.

11. Click Yes when prompted to confirm your module definition changes.

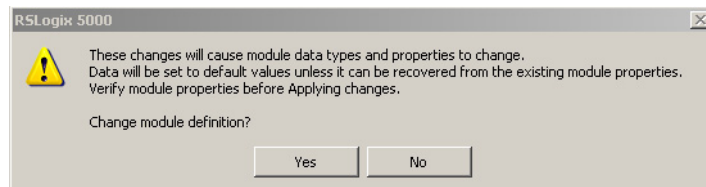

12. Click OK to close the New Module dialog box.


Your new 1756-ENxT Ethernet module appears under the I/O Configuration folder in the Controller Organizer.

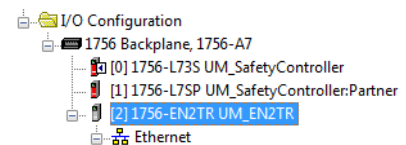

13. From the Edit menu, choose Controller Properties.

The Controller Properties dialog box appears.

14. Click the Date/Time tab.

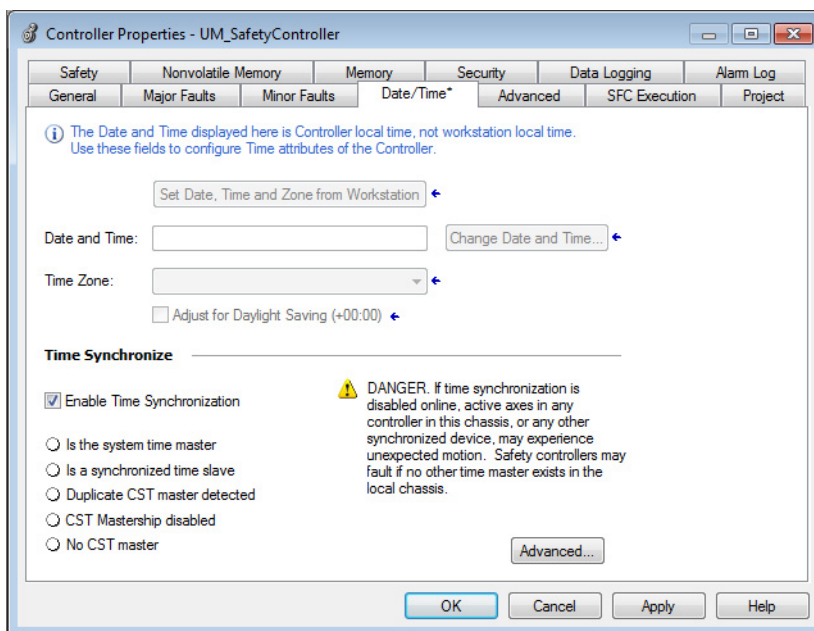

15. Check Enable Time Synchronization.

The motion modules set their clocks to the module you assign as the Grandmaster.

IMPORTANT Check Enable Time Synchronization for all controllers that participate in CIP Sync™. The overall CIP Sync network automatically promotes a Grandmaster clock, unless the priority is set in the Advanced tab.

16. Click OK.

Configure the Kinetix 5700 Drive Modules

IMPORTANT To configure Kinetix 5700 drive systems, you must be using the Logix Designer application, version 26.00 or later.


IMPORTANT The iTRAK power supply is not configured in the Logix Designer application. For more information, see the iTRAK System User Manual, publication [2198T-UM001](#).

Configure the DC-bus Power Supply

Follow these steps to configure the DC-bus power supply.


1. Below the controller you just created, right-click Ethernet and choose New Module.

The Select Module Type dialog box appears.

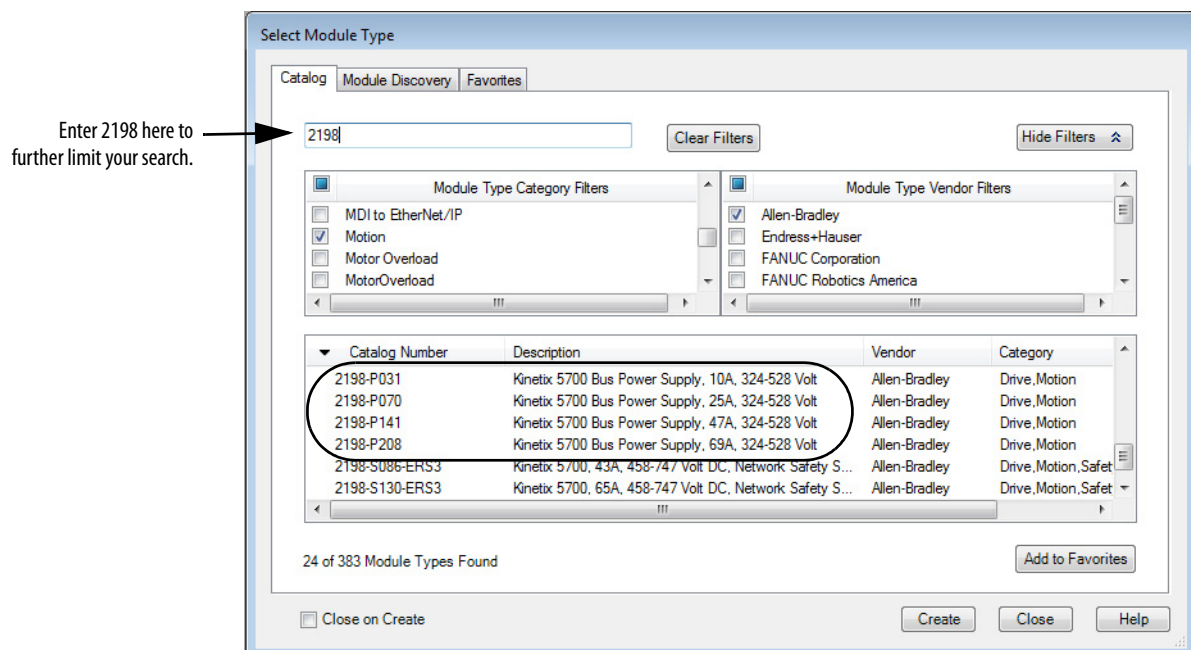

2. By using the filters, check Motion and Allen-Bradley, and select your 2198-Pxxx DC-bus power supply as appropriate for your hardware configuration.
3. Click Create.

The New Module dialog box appears.

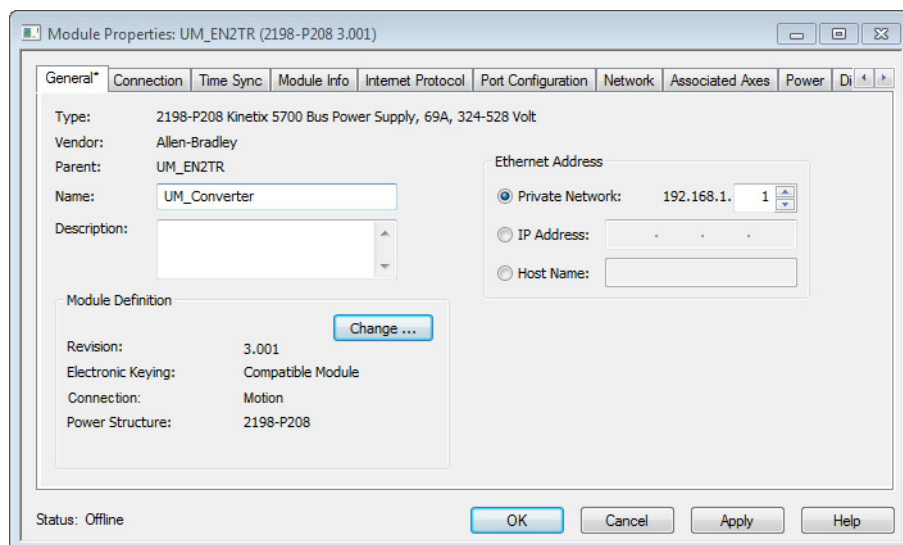

4. Configure the new drive.

a. Type the drive Name.


b. Select an Ethernet Address option.

In this example, the Private Network address is selected.

c. Enter the address of your 2198-Pxxx DC-bus power supply.

In this example, the last octet of the address is 1.

5. Click the Power tab.

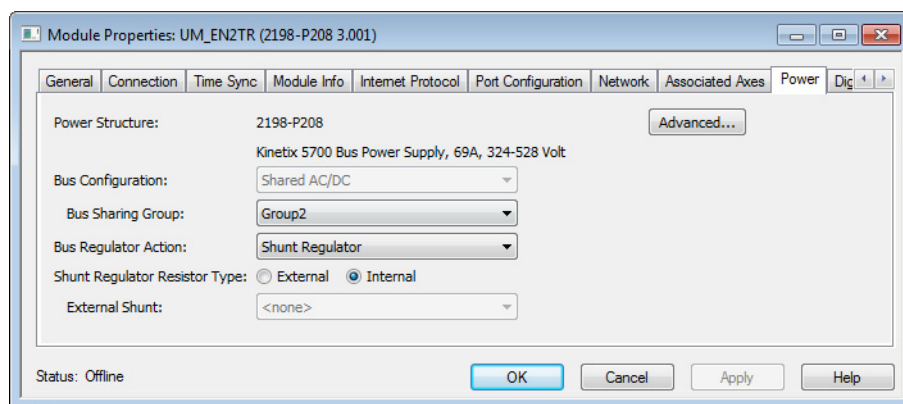

IMPORTANT The Logix Designer application enforces shared-bus configuration rules for Kinetix 5700 drives.

6. From the pull-down menus, choose the power options appropriate for your hardware configuration.

Attribute	Menu	Description
Bus Configuration	Shared AC/DC ⁽¹⁾	Applies to 2198-Pxxx DC-bus power supply (converter) modules.
Bus Sharing Group ⁽²⁾	- Group1 - Group2 - Group3...	Applies to any bus-sharing configuration.
Bus Regulator Action	Disabled	Disables the internal shunt resistor and external shunt option.
	Shunt Regulator	Enables the internal and external shunt options.
Shunt Regulator Resistor Type	Internal	Enables the internal shunt (external shunt option is disabled).
	External	Enables the external shunt (internal shunt option is disabled).
External Shunt ⁽³⁾	- None 2198-R004, 2198-R014 2198-R031, 2198-R127	Selects external shunt option. Only the shunt catalog number intended for the specific DC-bus power supply is shown.

(1) Shared AC/DC bus configuration is the default selection for DC-bus power supplies.

(2) For more information on bus-sharing groups, refer to [Understand Bus-sharing Group Configuration](#) on [page 196](#).


(3) Refer to the Kinetix Servo Drives Specifications Technical Data, publication [KNX-TD003](#), for more information on the Bulletin 2198 external passive shunt resistors.



ATTENTION: To avoid damage to equipment all modules physically connected to the same shared-bus connection system must be part of the same Bus Sharing Group in the Logix Designer application.

7. Click OK to close the New Module dialog box.

8. Your 2198-Pxxx DC-bus power supply appears in the Controller Organizer under the Ethernet network in the I/O Configuration folder.

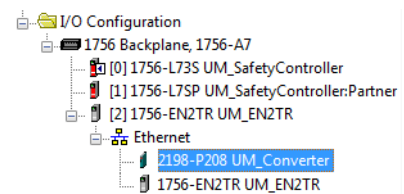


9. Click Close to close the Select Module Type dialog box.
10. Right-click the DC-bus power supply you just created in the Controller Organizer and choose Properties.

The Module Properties dialog box appears.

TIP To configure the remaining DC-bus power supply properties, you must close the New Module dialog box and reopen it as the Module Properties dialog box.


11. Click the Digital Input tab.

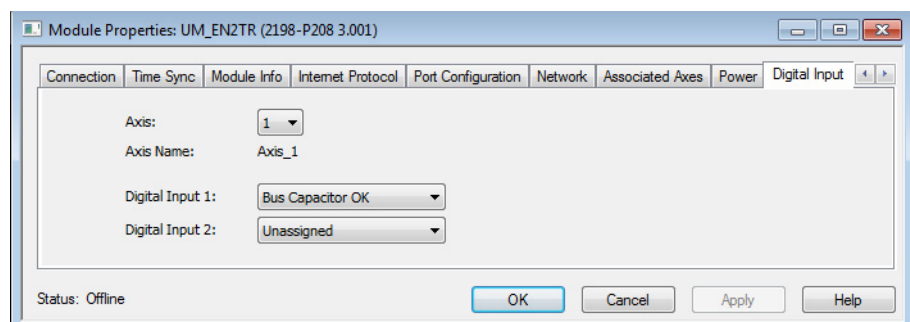

12. From the Digital Input pull-down menu choose Bus Capacitor OK or Shunt Thermal Switch OK to monitor your capacitor module status or the shunt thermal switch, respectively, depending on your application needs.


In this example, Bus Capacitor OK is chosen.

13. Click the Associated Axes tab.

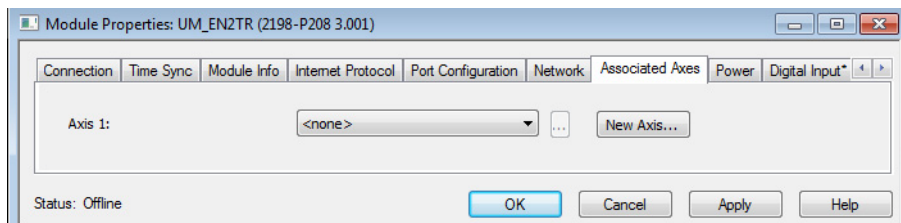

14. Click New Axis.

The New Tag dialog box appears.


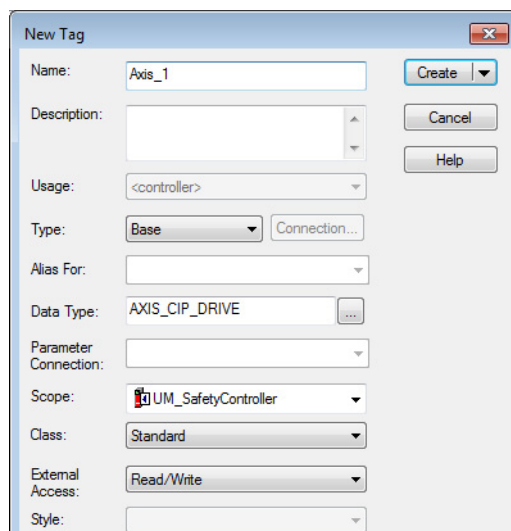


15. Type the axis Name.

AXIS_CIP_DRIVE is the default Data Type.

16. Click Create.

The axis (Axis_1 in this example) appears in the Controller Organizer under Motion Groups> Ungrouped Axes and is assigned as Axis 1.

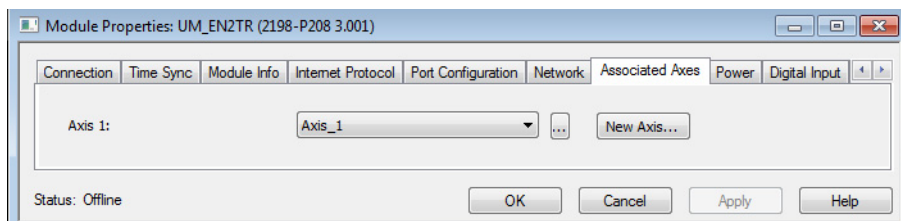

17. Click Apply.

18. Repeat [step 1](#) through [step 17](#) if you have more than one 2198-P208 DC-bus power supply.

Configure the Inverter Drives


This procedure applies to single-axis and dual-axis inverters with hardwired or integrated safety connections. In this example, a 2198-D006-ERS3 dual-axis inverter is configured.

Follow these steps to configure Kinetix 5700 inverter drives.


1. Above the DC-bus power supply (converter) you just created, right-click Ethernet and choose New Module.

The Select Module Type dialog box appears.

This example shows the 2198-Sxxx-ERS3 single-axis inverters you can choose from.

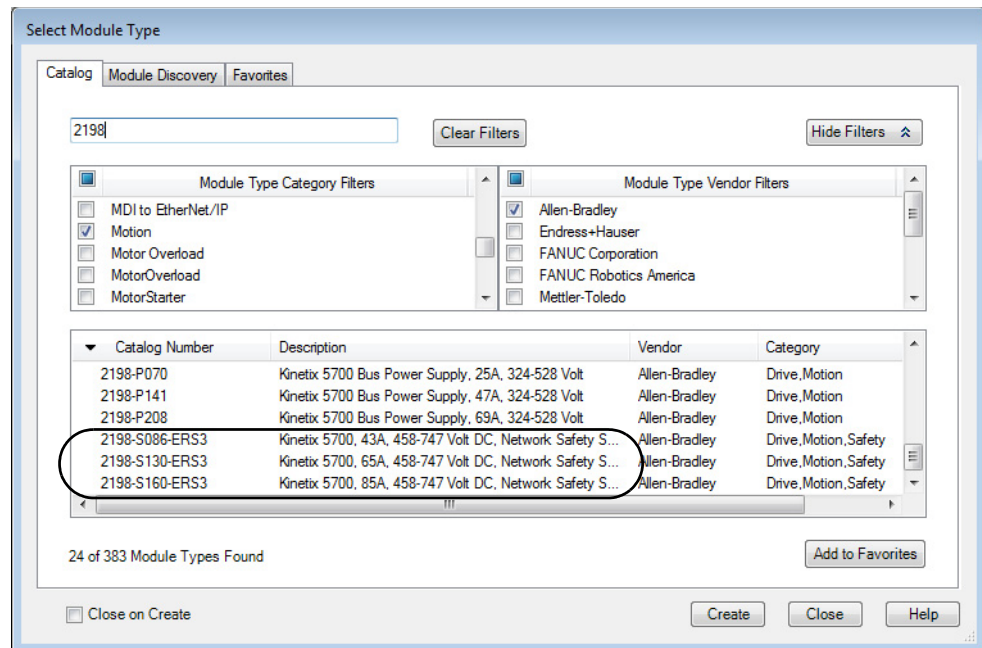


This example shows the 2198-Dxxx-ERS3 dual-axis inverters you can choose from.

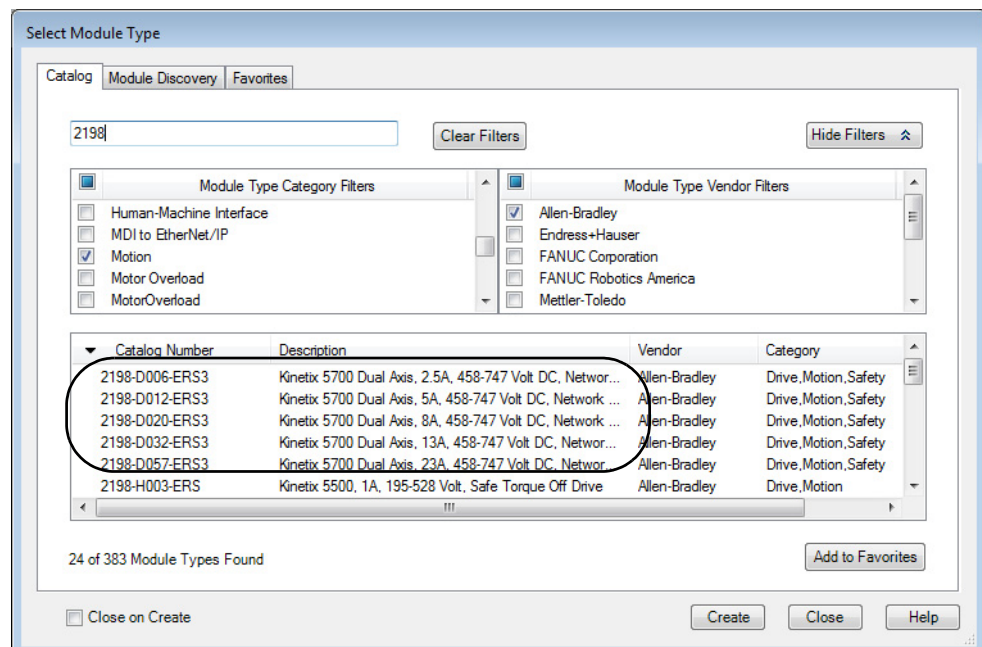


2. By using the filters, check Motion and Allen-Bradley, and select your 2198-Sxxx-ERS3 or 2198-Dxxx-ERS3 inverter as appropriate for your hardware configuration.
3. Click Create.

The New Module dialog box appears.

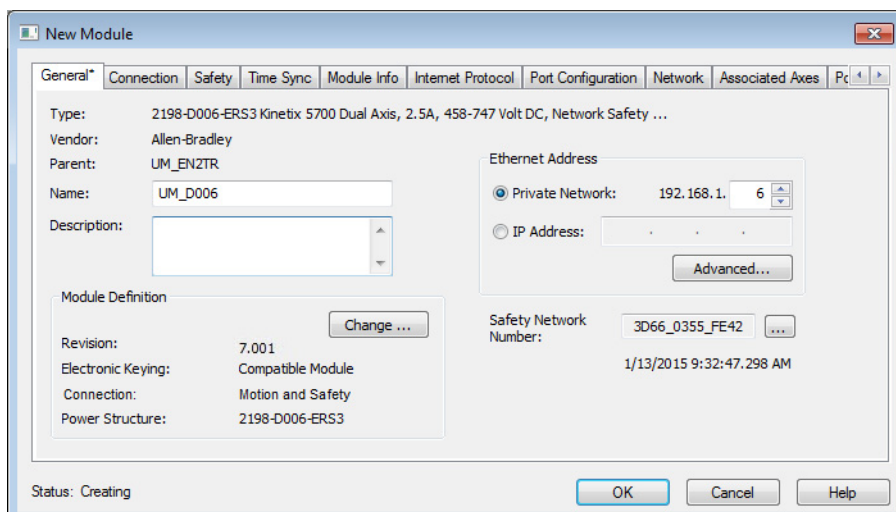

4. Configure the new drive.
 - a. Type the drive Name.
 - b. Select an Ethernet Address option.
In this example, the Private Network address is selected.
 - c. Enter the address of your 2198-xxxx-ERS3 inverter.
In this example, the last octet of the address is 6.
 - d. Click Advanced if using network address translation with safety connection to add drive module configured IP address.
 - e. Under Module Definition click Change.
The Module Definition dialog box appears.

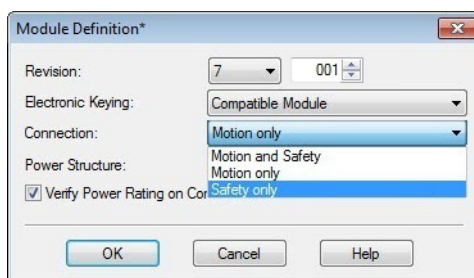

Depending on the Module Definition revision selection, alternate product features and feedback types can be selected.

- f. From the Connection pull-down menu, choose the Connection mode for your motion application.

TIP When 'Safety' appears in the Connection mode, integrated safety is implied.

IMPORTANT If the STO bypass jumper wires were applied during machine commissioning or maintenance, they must be removed before the drive will operate in Integrated STO mode.


Table 86 - Module Connection Definitions

Connection Mode	Controller Needed	Safety Options	Description
Motion only	ControlLogix 5570 and 5580 GuardLogix 5570, or CompactLogix 5370	- Hardwired STO mode - Integrated STO mode if there is a secondary safety controller	- Motion connections are managed by this controller. - Hardwired STO is controlled by the hardwired safety inputs or Integrated STO is managed by another controller that has a Safety-only connection to the drive.
Motion and Safety	GuardLogix 5570 or Compact GuardLogix 5370	Integrated STO mode	Motion connections and integrated STO are managed by this controller.
Safety only	GuardLogix 5570 or Compact GuardLogix 5370	Integrated STO mode	- Integrated STO is managed by this controller. - Motion connections are managed by another controller that has a Motion-only connection to the drive.

The Safety Network Number (SNN) field populates automatically when the Connection mode includes an integrated Motion and Safety or Safety-only connection. For a detailed explanation of the safety network number, refer to the GuardLogix Controller Systems Safety Reference Manual, publication [1756-RM099](#).

5. Click OK to close the Module Definition dialog box.

6. Click the Power tab.

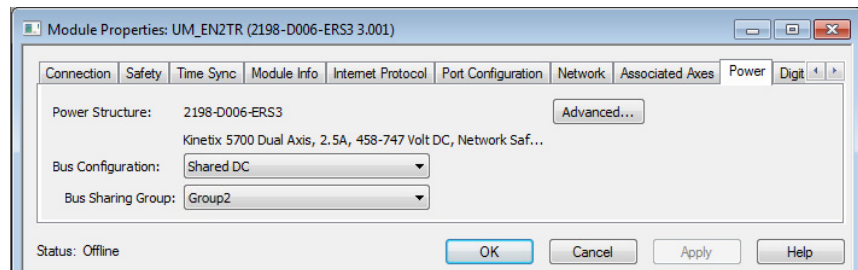

IMPORTANT The Logix Designer application enforces shared-bus configuration rules for Kinetix 5700 drives.

7. From the pull-down menus, choose the power options appropriate for your hardware configuration.

Attribute	Menu	Description
Bus Configuration	Shared DC ⁽²⁾	Applies to 2198-Sxxx-ERS3 and 2198-Dxxx-ERS3 inverter drives.
	Shared DC - Non-CIP Motion Converter ⁽³⁾	Applies to the designated inverter in drive systems powered by the 8720MC-RPS regenerative power supply.
Bus Sharing Group ^{(1) (3)}	- Group1 - Group2 - Group3...	Applies to any bus-sharing configuration.

(1) For more information on bus-sharing groups, refer to [Understand Bus-sharing Group Configuration](#) on [page 196](#).

(2) Shared DC bus configuration is the default selection for single-axis and dual-axis inverters.


(3) Because the 8720MC-RPS unit is not an EtherNet/IP network device the Logix5000 controller does not communicate with it. The designated inverter, configured as the Shared DC - Non-CIP Motion Converter, monitors the 8720MC-RPS unit status through a digital input (Regen OK) and communicates with the other inverters to signal when the DC-bus voltage is present.



ATTENTION: To avoid damage to equipment all modules physically connected to the same shared-bus connection system must be part of the same Bus Sharing Group in the Logix Designer application.

- 8. Click OK to close the Module Properties dialog box.
- 9. Click Close to close the Select Module Type dialog box.

Your 2198-xxxx-ERS3 inverter appears in the Controller Organizer under the Ethernet network in the I/O Configuration folder.

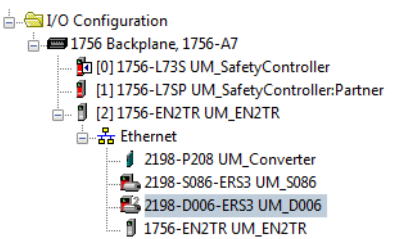


- 10. Right-click the drive you just created in the Controller Organizer and choose Properties.

The Module Properties dialog box appears.

If	Then
Your application includes integrated safety	Go to step 11 on page 158 .
Your application includes hardwired safety or has no safety connections	Go to Continue Inverter Configuration on page 160 .

- 11. Click the Safety tab.

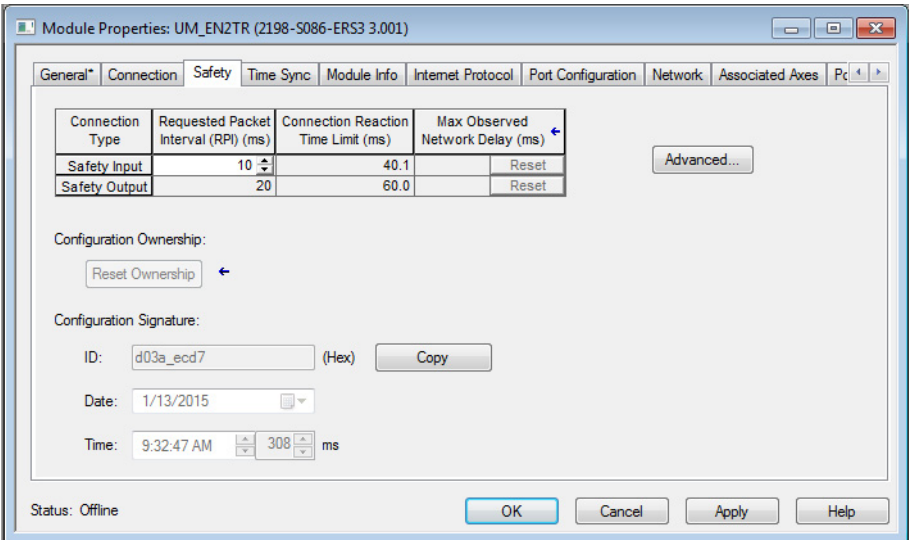


- 12. The connection between the owner and the 2198-xxxx-ERS3 inverter is based on the following:

- Servo drive safety network number
- GuardLogix slot number
- GuardLogix safety network number
- Path from the GuardLogix controller to the 2198-xxxx-ERS3 drive
- Configuration signature

If any differences are detected, the connection between the GuardLogix controller and the 2198-xxxx-ERS3 inverter is lost, and the yellow yield icon appears in the controller project tree after you download the program.

13. Click Advanced.

The Advanced Connection Reaction Time Limit Configuration dialog box appears.

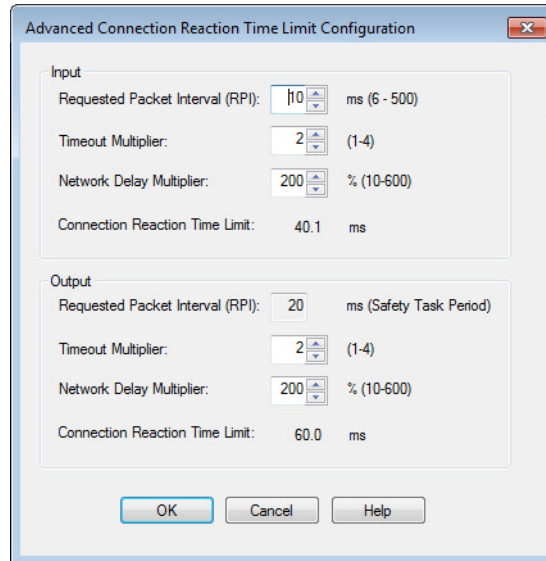

Analyze each safety channel to determine the appropriate settings. The smallest Input RPI allowed is 6 ms. Selecting small RPI values consumes network bandwidth and can cause nuisance trips because other devices cannot get access to the network.

For more information about the Advanced Connection Reaction Time Limit Configuration, refer to the GuardLogix 5570 Controllers User Manual, publication [1756-UM022](#).

14. Click OK to close the Advanced dialog box.

15. Click Apply to save the Safety tab parameters.

Continue Inverter Configuration


After you’ve established your Kinetix 5700 inverters in the Logix Designer application, the feedback options need to be defined for each axis. Each physical axis supports motor and auxiliary feedback.

Table 87 - Kinetix 5700 Feedback Axis Summary

Kinetix 5700 Inverter	Inverter Cat. No.	Motor Feedback	Auxiliary Feedback
Single-axis Inverters	2198-Sxxx-ERS3	1 (axis 1)	1 (axis 2)
Dual-axis Inverters	2198-Dxxx-ERS3	2 (axis 1 and 3)	2 (axis 2 and 4)

Follow these steps to configure the axes for your Kinetix 5700 drive system.

1. Right-click the 2198-xxxx-ERS3 inverter you just created and choose Properties.
The Module Properties dialog box appears.
2. Click the Associated Axes tab.

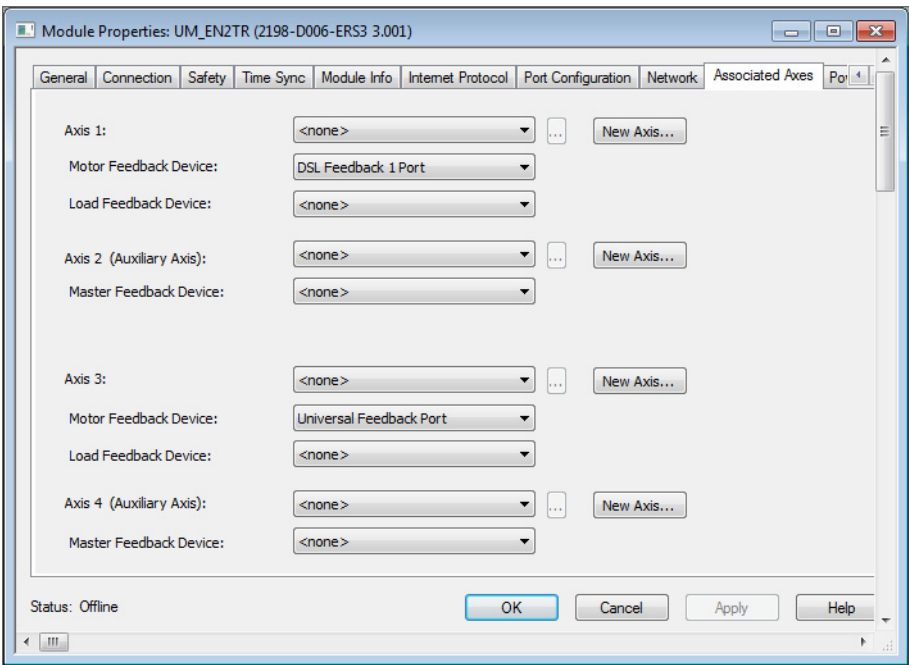


This example applies to dual-axis inverters (4 axes are possible). Single-axis inverters support 2 axes.

Motor Feedback Options	Description
DSL Feedback Port	Applies to motors and actuators compatible with the 2198-KITCON-DSL connector kit and 2198-H2DCK converter kit (series B or later). These kits plug into the 2-pin motor feedback (MF) connector.
Universal Feedback Port	Applies to motors and actuators compatible with the 2198-K57CK-D15M universal connector kit. These kits plug into the 15-pin universal feedback (UFB) connector.

3. Click New Axis.

The New Tag dialog box appears.

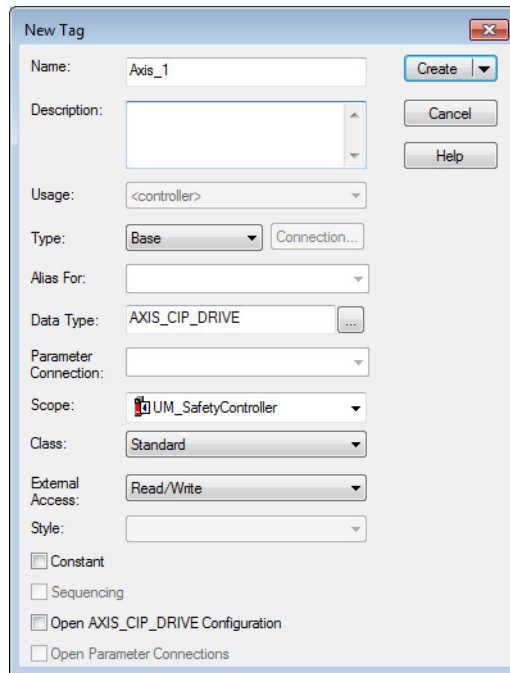

The 'New Tag' dialog box is shown with the following fields and options:

- Name:** Axis_1
- Description:** (empty text box)
- Usage:** <controller>
- Type:** Base
- Alias For:** (empty dropdown)
- Data Type:** AXIS_CIP_DRIVE
- Parameter Connection:** (empty dropdown)
- Scope:** UM_SafetyController
- Class:** Standard
- External Access:** Read/Write
- Style:** (empty dropdown)
- ☐ Constant
- ☐ Sequencing
- ☐ Open AXIS_CIP_DRIVE Configuration
- ☐ Open Parameter Connections



Buttons: Create, Cancel, Help.

4. Type the axis Name.

AXIS_CIP_DRIVE is the default Data Type.

5. Click Create.

The axis (Axis_1 in this example) appears in the Controller Organizer under Motion Groups> Ungrouped Axes and is assigned as Axis 1.

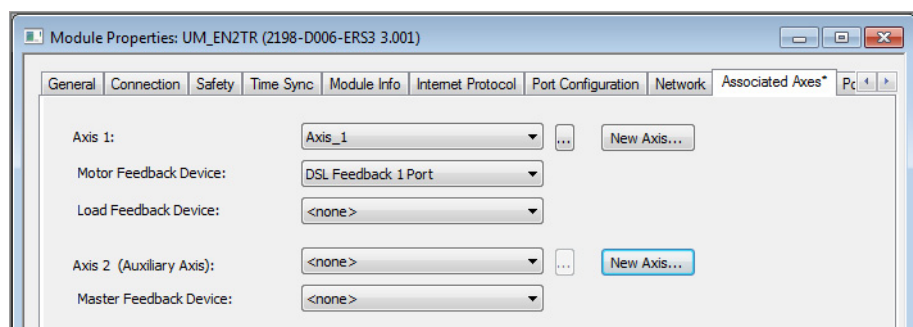The 'Module Properties' dialog box for 'UM_EN2TR (2198-D006-ERS3 3.001)' is shown with the 'Associated Axes' tab selected. The 'Axis 1' dropdown is set to 'Axis_1'. Other fields include 'Motor Feedback Device' (DSL Feedback 1 Port), 'Load Feedback Device' (<none>), 'Axis 2 (Auxiliary Axis)' (<none>), and 'Master Feedback Device' (<none>). Buttons for 'New Axis...' are present.

TIP You can configure an axis as Feedback Only. Refer to [Configure Feedback-only Axis Properties](#) on [page 163](#) for more information.

Refer to [Configure Module Properties](#) on [page 189](#) for configuring motor feedback, load feedback, and master feedback devices.


6. Click Apply.
7. Repeat [step 1](#) through [step 13](#) for each 2198-xxxx-ERS3 servo drive.

Configure the Motion Group

Follow these steps to configure the motion group.

1. In the Controller Organizer, right-click Motion Groups and choose New Motion Group.

The New Tag dialog box appears.

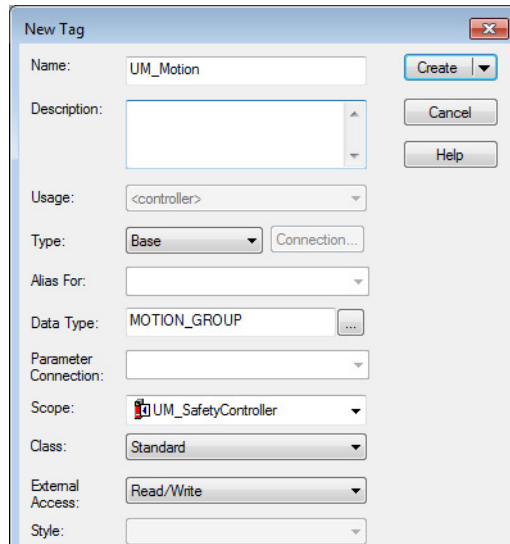


2. Type the new motion group Name.
3. Click Create.

Your new motion group appears in the Controller Organizer under the Motion Groups folder.




4. Right-click the new motion group and choose Properties.

The Motion Group Properties dialog box appears.

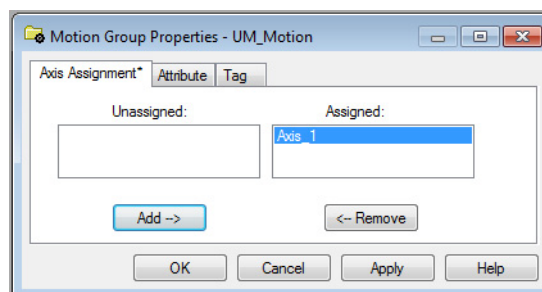

5. Click the Axis Assignment tab and move your axes (created earlier) from Unassigned to Assigned.
6. Click the Attribute tab and edit the default values as appropriate for your application.
7. Click OK.

Your axis moves to the new motion group.




Configure Feedback-only Axis Properties

Follow these steps to configure feedback-only axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

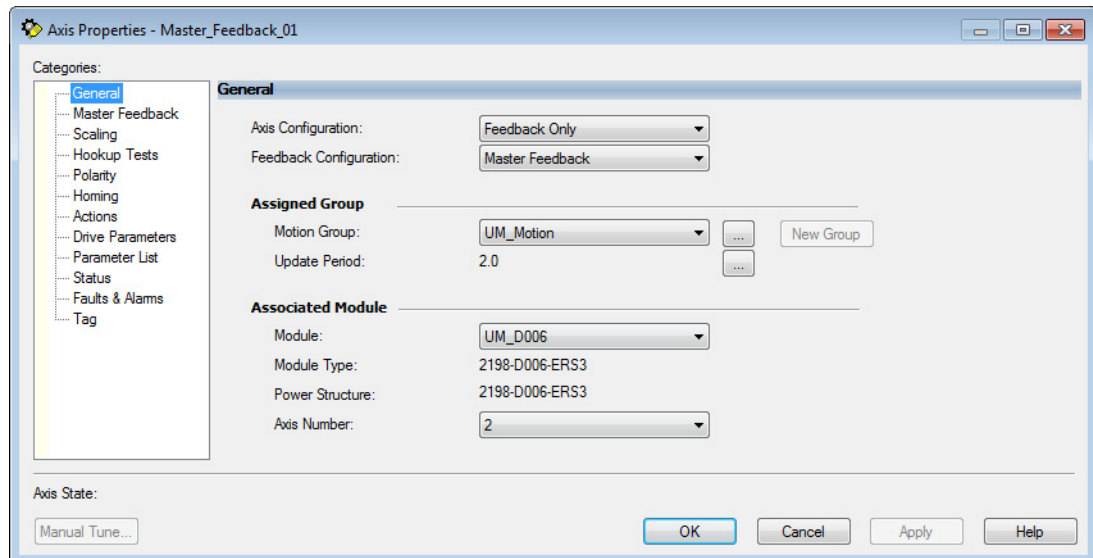

3. From the Axis Configuration pull-down menu, choose Feedback Only.
4. From the Feedback Configuration pull-down menu, choose Master Feedback.
5. From the Module pull-down menu, choose the drive to associate with your Feedback Only axis.


The Module Type and Power Structure fields populate with the chosen drive catalog number.

6. Click Apply.
7. Configure module properties for your Kinetix 5700 servo drive for Master Feedback.

See Configure Module Properties on [page 189](#) for configuration examples.

8. Select the Master Feedback Category.

The Master Feedback Device Specification appears.

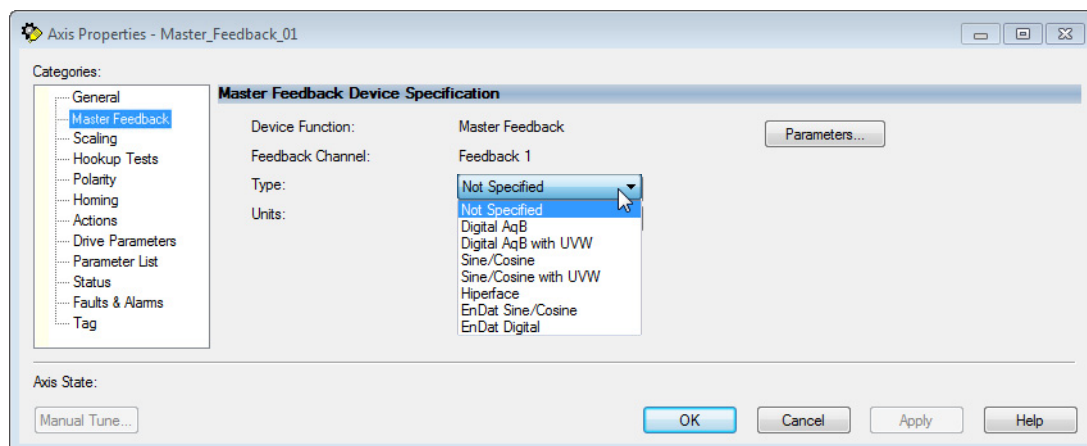

9. From the Type pull-down menu, choose a feedback device type.

See Configure Axis Properties beginning on [page 190](#) for configuration examples.

10. Review other categories in the Controller Organizer and make changes as needed for your application.
11. Click OK.

See [Auxiliary Feedback Specifications](#) on [page 86](#) for more information on auxiliary feedback signals and Allen-Bradley auxiliary feedback encoders available for use.


Configure Induction-motor Frequency-control Axis Properties

Follow these steps to configure induction-motor axis properties for various frequency control methods.

General and Motor Categories

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

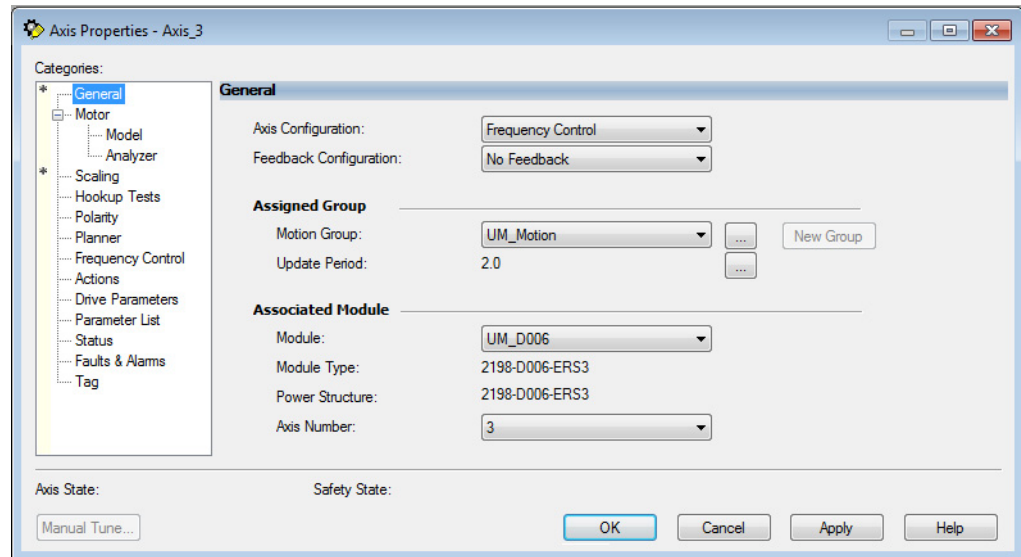

3. From the Axis Configuration pull-down menu, choose Frequency Control.
4. From the Feedback Configuration pull-down menu, choose No Feedback.
5. From the Module pull-down menu, choose the drive to associate with your Frequency Control (induction motor) axis.

The Module Type and Power Structure fields populate with the chosen drive catalog number.

6. Click Apply.

7. Select the Motor category.

The screenshot shows the 'Axis Properties - Axis_3' dialog box with the 'Motor Device Specification' tab selected. On the left, a tree view under 'Categories' shows 'Motor' selected. The main area contains the following fields:

- Data Source:** Nameplate Datasheet (dropdown menu)
- Catalog Number:** <none> (text field)
- Motor Type:** Rotary Induction (dropdown menu)
- Units:** Rev (dropdown menu)
- Nameplate / Datasheet - Phase to Phase parameters:**
 - Rated Power: 1.0 kW
 - Rated Voltage: 460.0 Volts (RMS)
 - Rated Speed: 1780.0 RPM
 - Rated Current: 3.2 Amps (RMS)
 - Pole Count: 4
 - Rated Frequency: 60.0 Hertz
 - Max Speed: 3000.0 RPM
 - Peak Current: 6.0 Amps (RMS)
 - Motor Overload Limit: 100.0 % Rated

At the bottom, there are buttons for 'Manual Tune...', 'OK', 'Cancel', 'Apply', and 'Help'.

8. From the Data Source pull-down menu, choose Nameplate Datasheet.

This is the default setting.

9. From the Motor Type pull-down menu, choose Rotary Induction.


10. From the motor nameplate or datasheet, enter the phase-to-phase values for your motor.

See [Motor Category](#) on [page 330](#) for a motor performance datasheet example.

11. Click Apply.


Basic Volts/Hertz Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 165](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Basic Volts/Hertz.

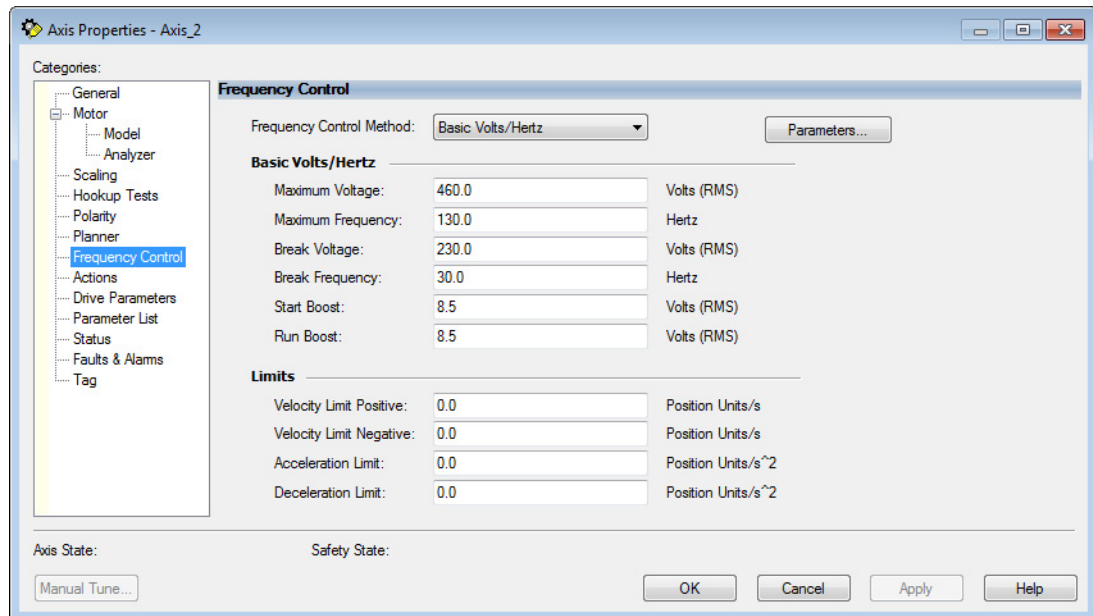

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.
Default values are shown.
5. Click Apply.
6. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

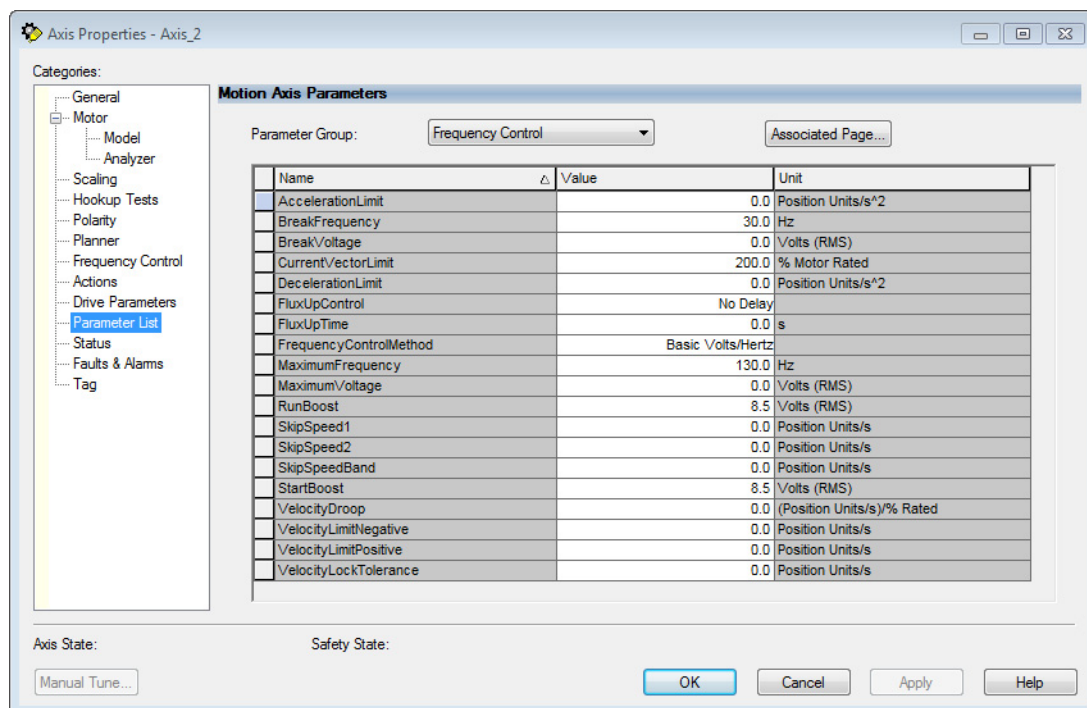


- From the Parameter Group pull-down menu, choose Frequency Control.
- Set the FluxUp, SkipSpeed, VelocityDroop, and CurrentVectorLimit attributes appropriate for your application.

See the corresponding section in Appendix D, beginning on [page 315](#), for information and configuration examples regarding all of these topics.

- Click OK.


Sensorless Vector Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 165](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Sensorless Vector.

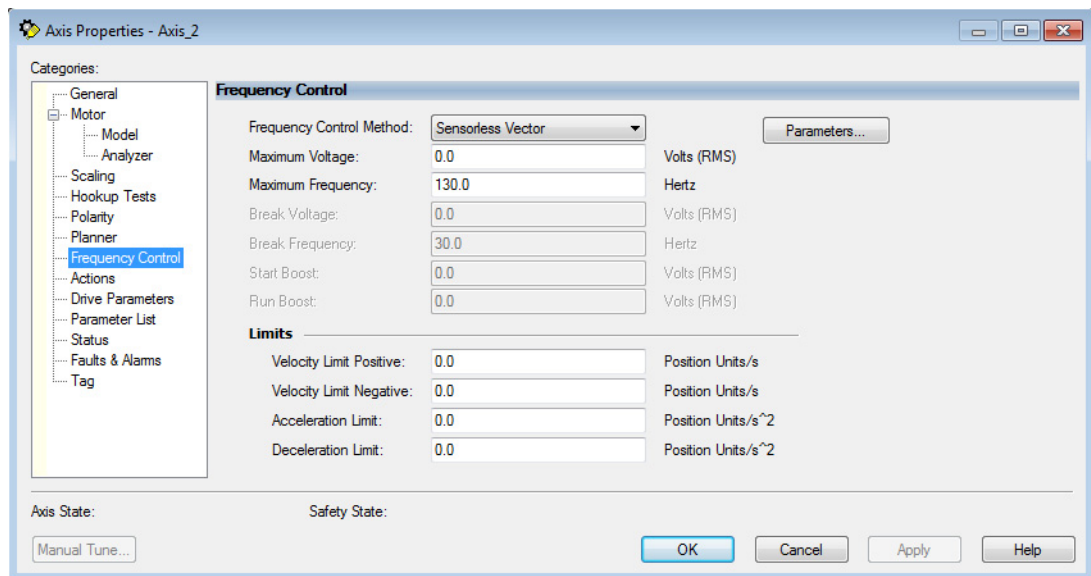

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.
Default values are shown.
5. Click Apply.
6. Select the Parameter List category.

7. The Motion Axis Parameters dialog box appears.

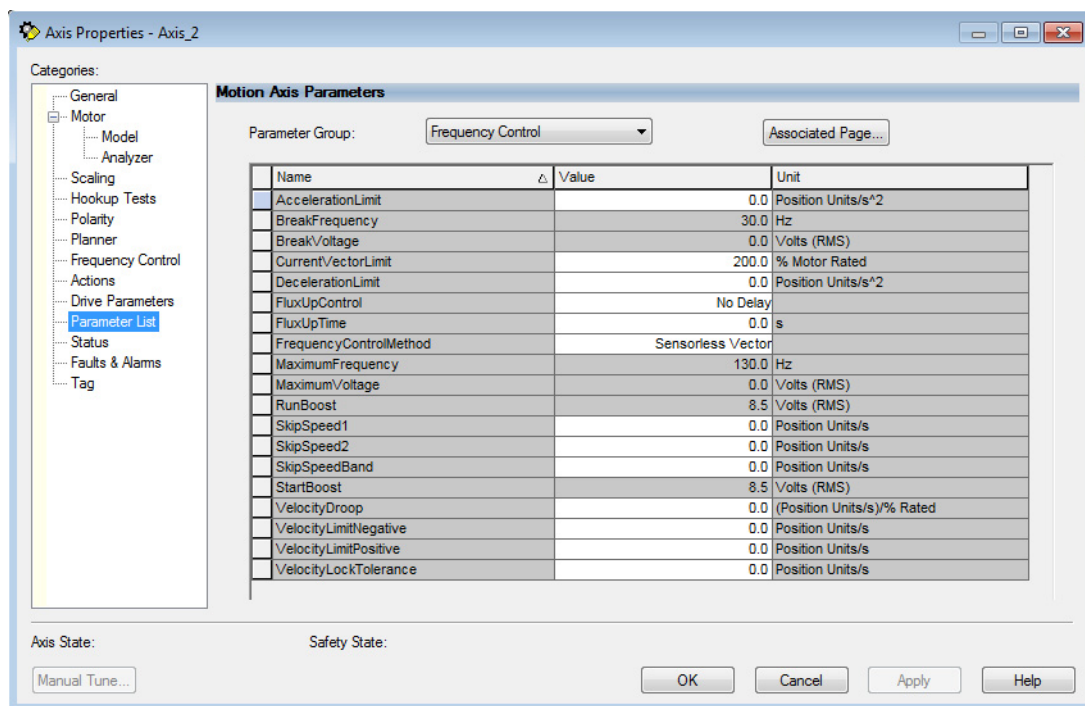

8. From the Parameter Group pull-down menu, choose Frequency Control.

9. Set the FluxUp, SkipSpeed, VelocityDroop, MaximumFrequency, MaximumVoltage, and CurrentVectorLimit attributes appropriate for your application.

See the corresponding section in Appendix D, beginning on [page 315](#), for information and configuration examples regarding all of these topics.


10. Click Apply.

11. Select the Motor>Model category.

Motor model attributes are automatically estimated from the Nameplate/Datasheet parameters. For improved performance, motor tests can be run.

12. Select the Motor>Analyzer category.

13. The Analyze Motor to Determine Motor Model dialog box opens.

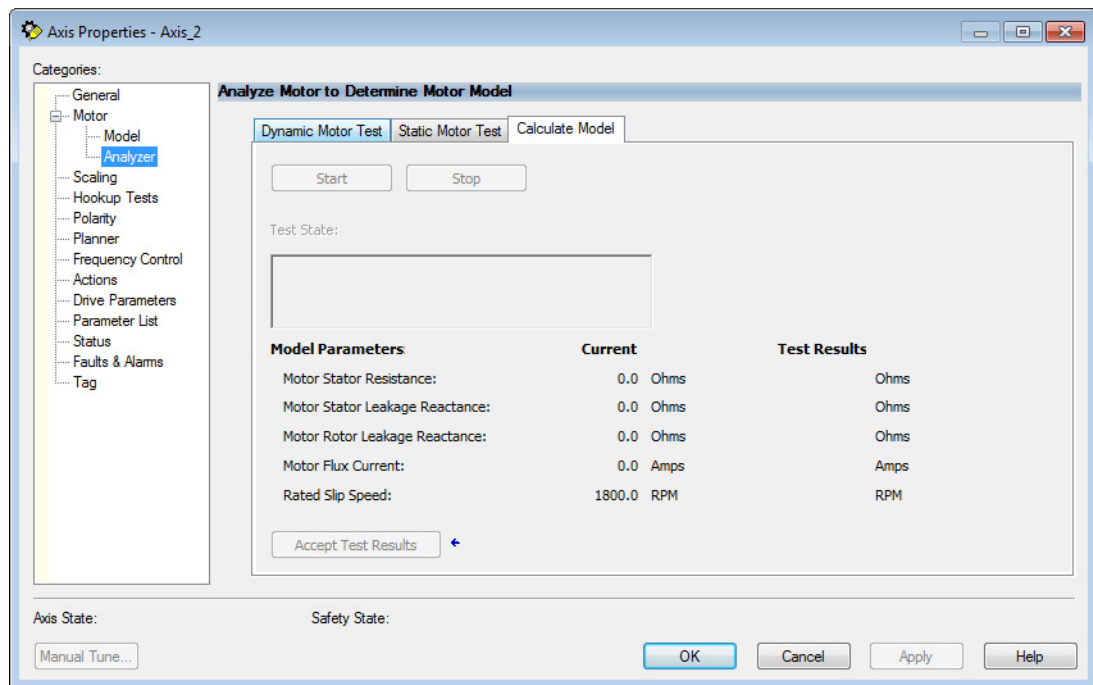

14. Click one of the motor test tabs.

In this example, Calculate Model is chosen. See [Motor Tests and Autotune Procedure](#) on [page 332](#) for information about each of the tests.


15. Click Start.

16. Click Accept Test Results.

17. Click OK.


Fan/Pump Volts/Hertz Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 165](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Fan/Pump Volts/Hertz.

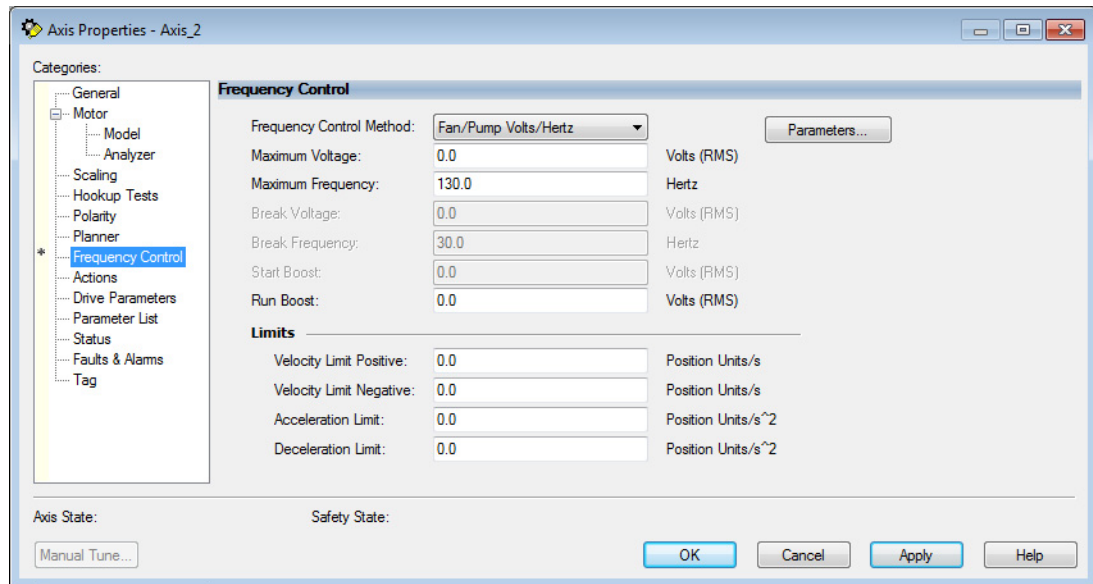

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.
Default values are shown.
5. Click Apply.
6. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

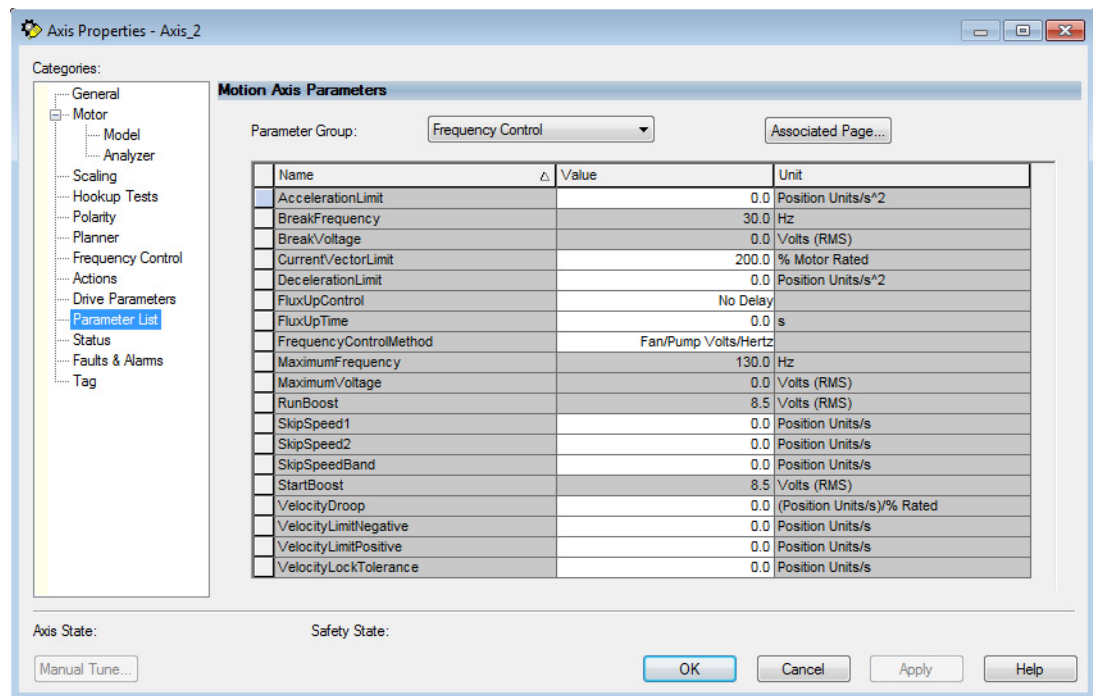

7. From the Parameter Group pull-down menu, choose Frequency Control.
8. Set the FluxUp, SkipSpeed, VelocityDroop, RunBoost, MaximumFrequency, MaximumVoltage and CurrentVectorLimit attributes appropriate for your application.

See the corresponding section in Appendix D, beginning on [page 315](#), for information and configuration examples regarding all of these topics.


9. Click OK.

Configure IPM Motor Closed-loop Control Axis Properties

Follow these steps to configure interior permanent-magnet (IPM) motor closed-loop axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General and Associated Module dialog box appears.

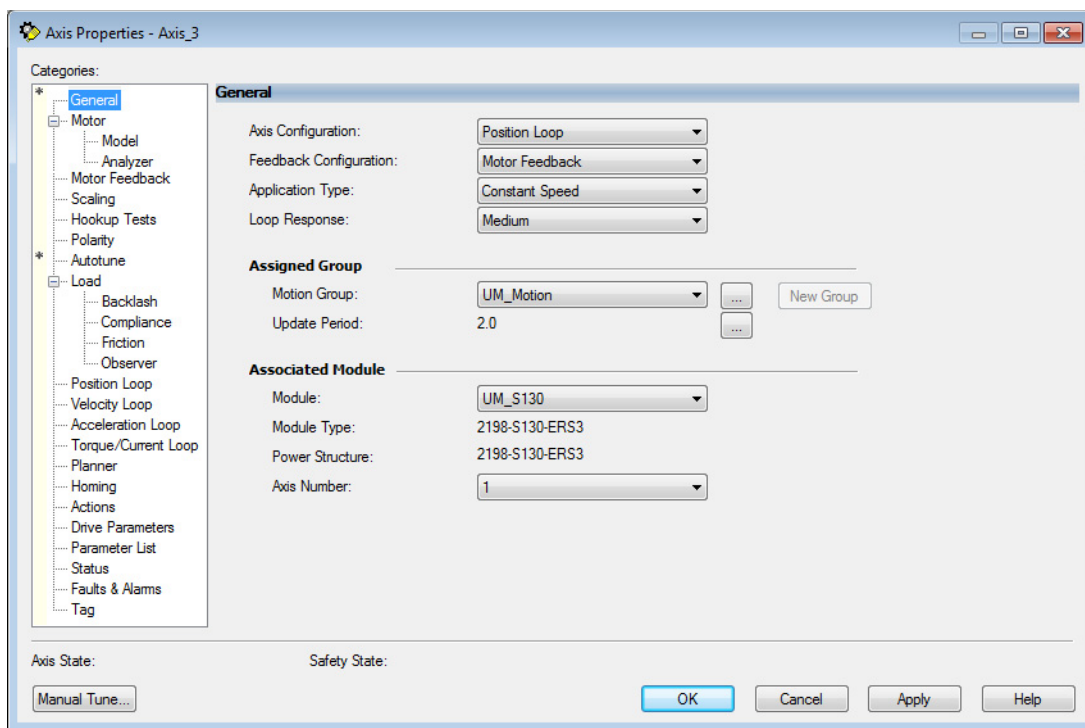

3. From the General pull-down menus, change configuration settings as needed for your application.


IMPORTANT Frequency Control is not supported for interior permanent magnet (IPM) motors.

4. From the Associated Module>Module pull-down menu, choose your Kinetix 5700 drive.

The drive catalog number populates the Module Type and Power Structure fields.

5. Click Apply.
6. Select the Motor category.

The Motor Device Specification dialog box appears.

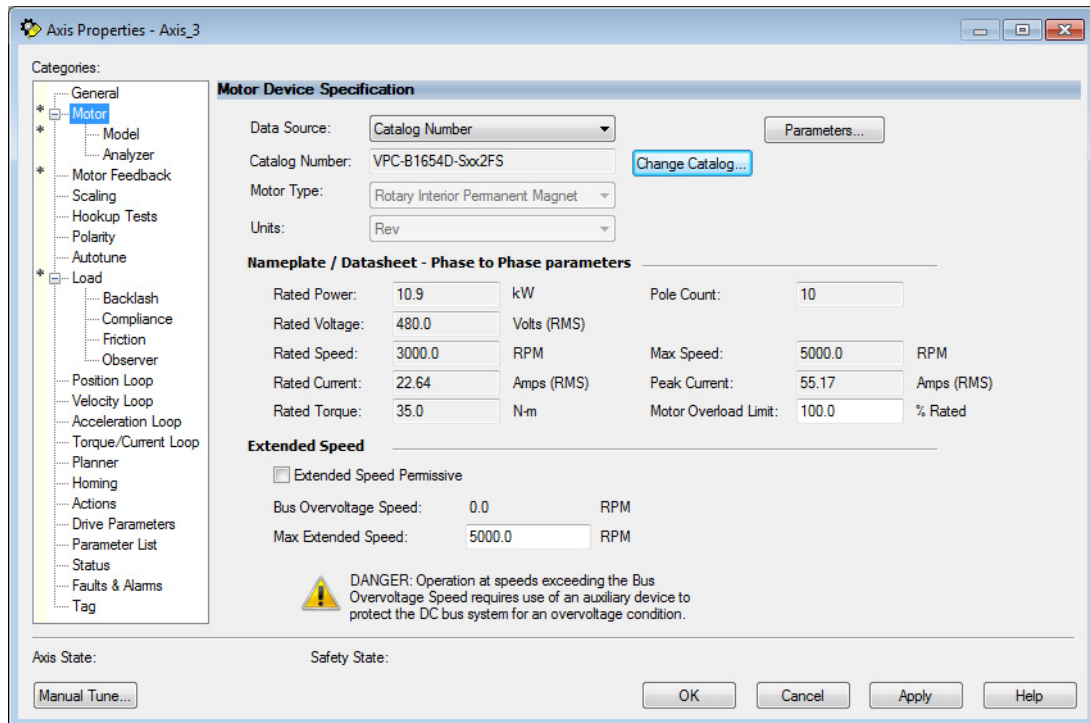


7. From the Data Source pull-down menu, choose Catalog Number.

IMPORTANT Motor NV is not a supported data source in the Logix Designer application for axes configured as interior permanent-magnet (IPM) motor closed-loop. In addition, third-party IPM motors are not supported.

8. Click Change Catalog.

The Change Catalog Number dialog box appears.

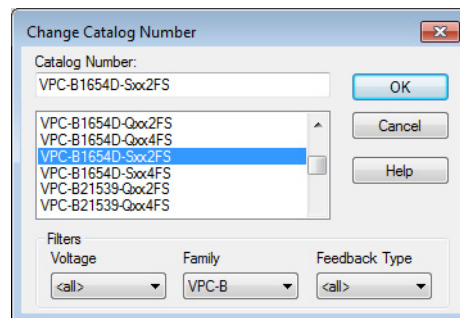


9. Select the motor catalog number appropriate for your application.

To verify the motor catalog number, refer to the motor name plate.


10. Click OK to close the Change Catalog Number dialog box.
11. Click Apply.

Motor data specific to your motor appears in the Nameplate / Datasheet - Phase to Phase parameters field.


12. For Extended Speed operation, check Extended Speed permissive in the Extended Speed field. See [Extended Speed](#) on [page 350](#), for more information.
13. Select the Scaling category and edit the default values as appropriate for your application.

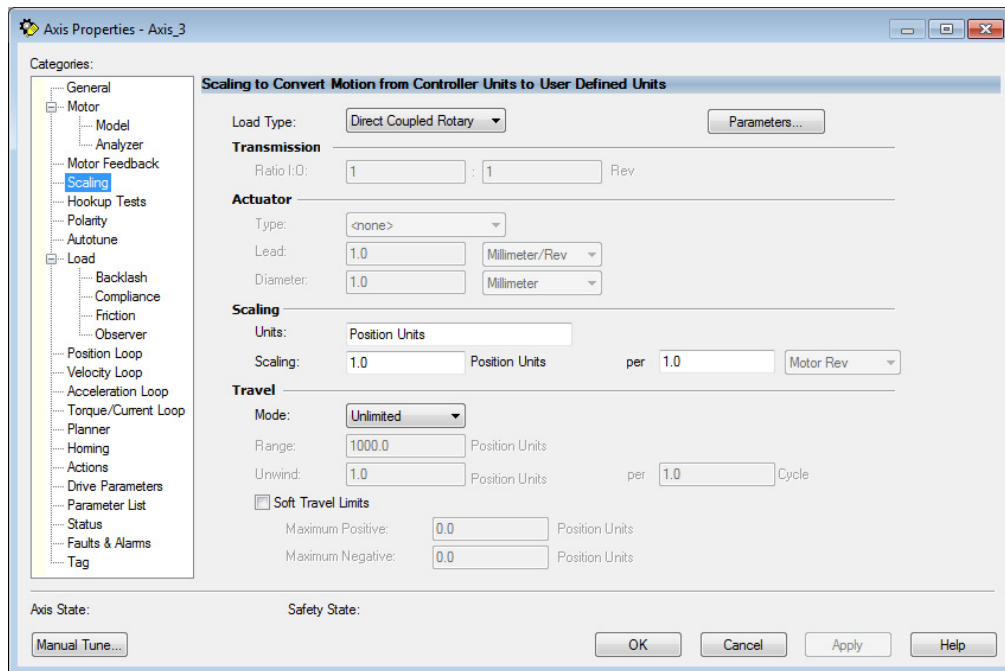


14. Click Apply, if you make changes.
15. Select the Load category and edit the default values as appropriate for your application.

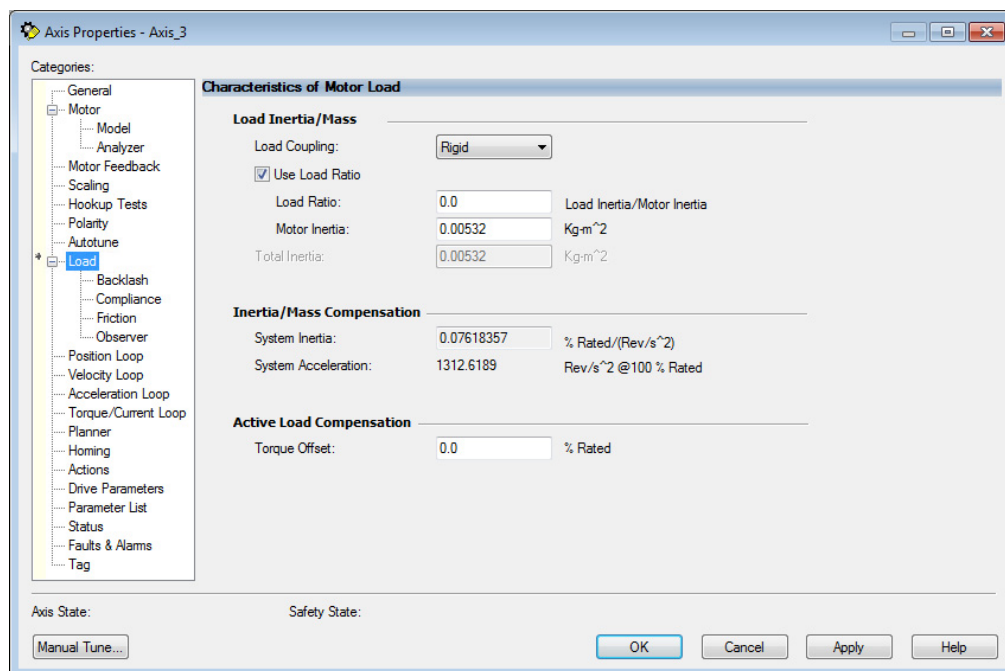

16. Click Apply, if you make changes.

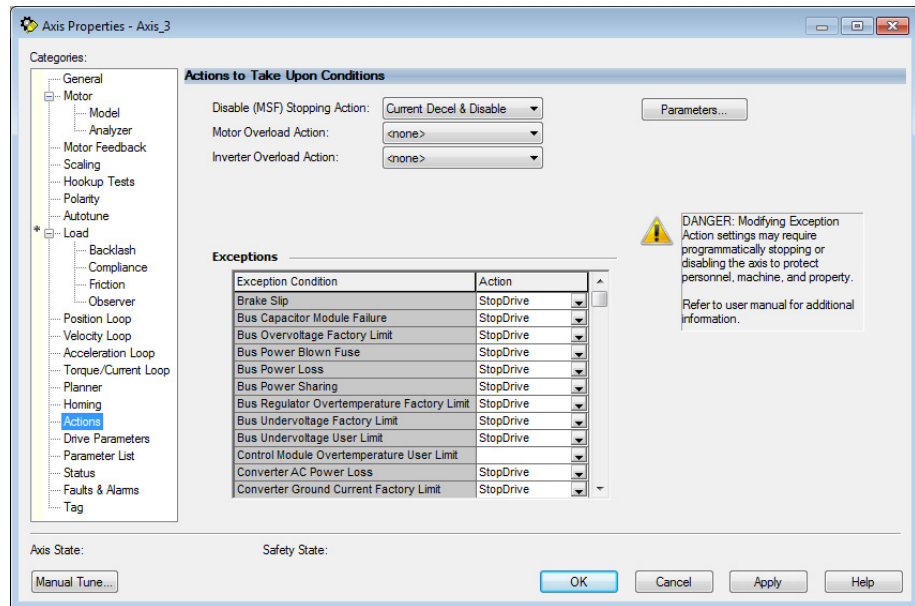17. Select the Actions category.

From this dialog box, you can program actions and change the action for exceptions (faults). Refer to [Logix5000 Controller and Drive Module Behavior](#) on [page 220](#) for more information.

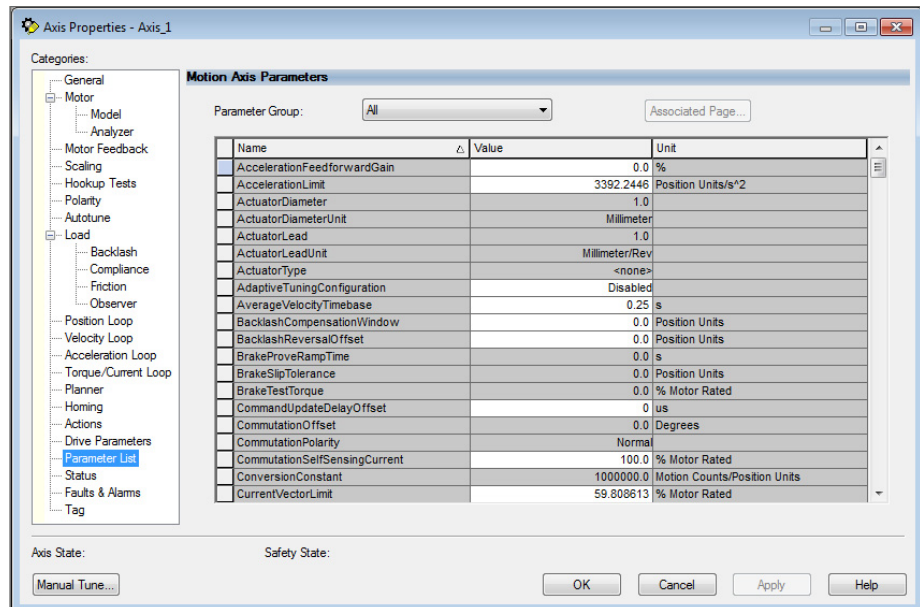18. Select the Parameter List category.

From this dialog box you can set brake engage and release delay times for servo motors. For recommended motor brake delay times, refer to the Kinetix Rotary Motion Specifications Technical Data, publication [KNX-TD001](#).


19. Click OK.**20. Repeat [step 1](#) through [step 19](#) for each servo motor axis.**

Configure SPM Motor Closed-loop Control Axis Properties

Follow these steps to configure surface permanent-magnet (SPM) motor closed-loop axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General and Associated Module dialog box appears.

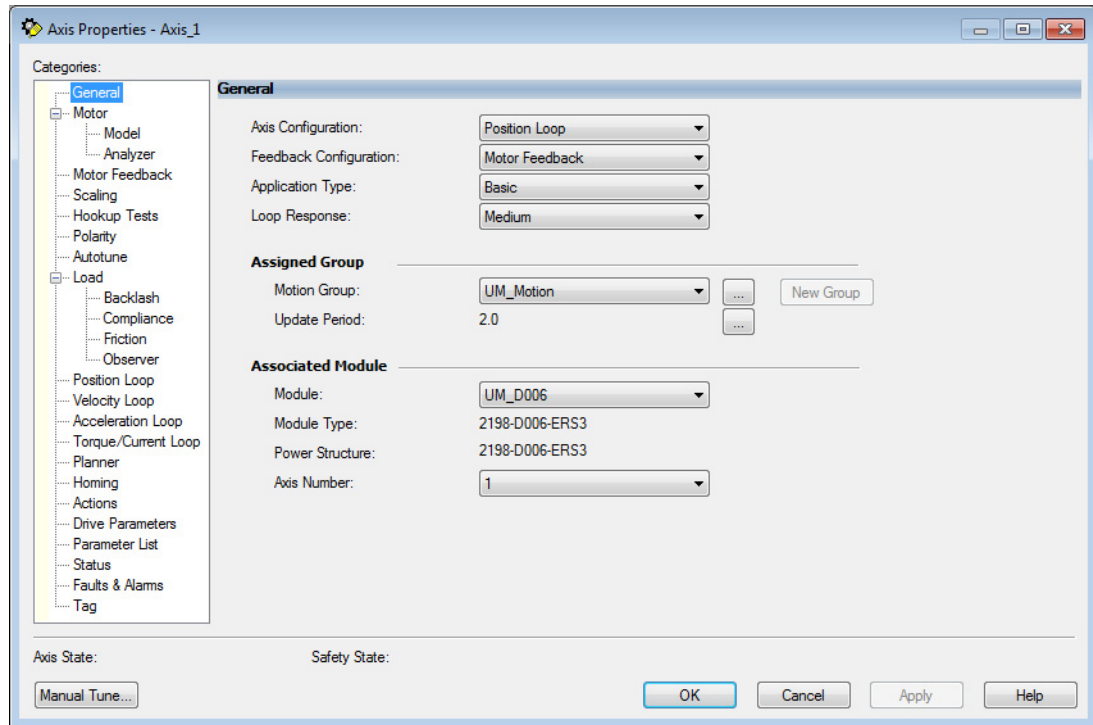

3. From the General pull-down menus, change configuration settings as needed for your application.


IMPORTANT Frequency Control is not supported for permanent magnet motors.

4. From the Associated Module>Module pull-down menu, choose your Kinetix 5700 drive.

The drive catalog number populates the Module Type and Power Structure fields.

5. Click Apply.
6. Select the Motor category.


The Motor Device Specification dialog box appears.

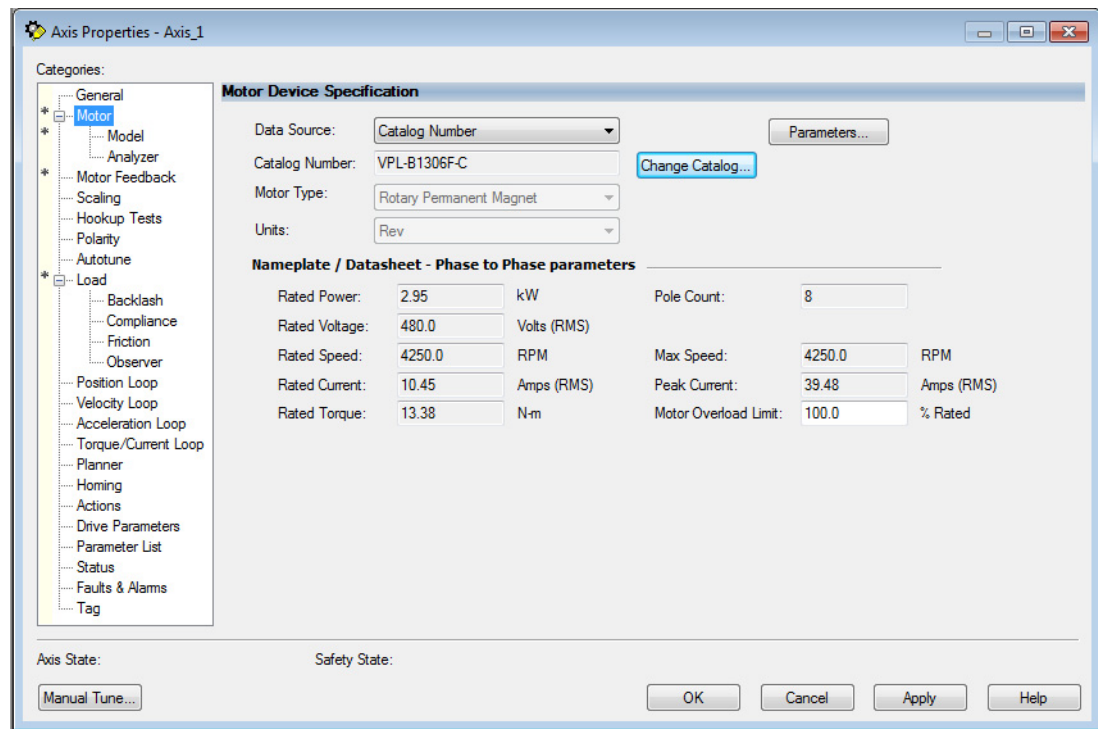

7. From the Data Source pull-down menu, choose Catalog Number.

8. Click Change Catalog.

The Change Catalog Number dialog box appears.

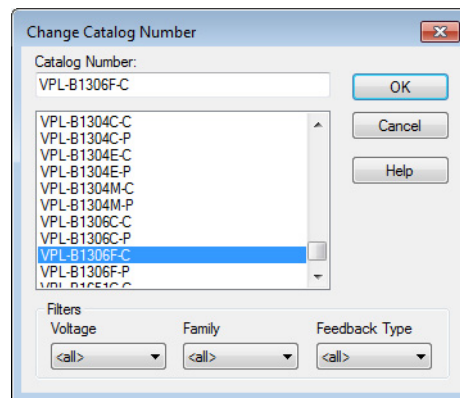

9. Select the motor catalog number appropriate for your application.

To verify the motor catalog number, refer to the motor name plate.

10. Click OK to close the Change Catalog Number dialog box.

11. Click Apply.

Motor data specific to your motor appears in the Nameplate / Datasheet - Phase to Phase parameters field.

12. Select the Scaling category and edit the default values as appropriate for your application.


The screenshot shows the 'Axis Properties - Axis_1' dialog box with the 'Scaling' category selected in the left-hand tree. The main panel is titled 'Scaling to Convert Motion from Controller Units to User Defined Units'. It contains several sections: 'Load Type' (Direct Coupled Rotary), 'Transmission' (Ratio I/O: 1 : 1 Rev), 'Actuator' (Type: <none>, Lead: 1.0 Millimeter/Rev, Diameter: 1.0 Millimeter), 'Scaling' (Units: Position Units, Scaling: 1.0 Position Units per 1.0 Motor Rev), and 'Travel' (Mode: Unlimited, Range: 1000.0 Position Units, Unwind: 1.0 Position Units per 1.0 Cycle). There are also checkboxes for 'Soft Travel Limits' and fields for 'Maximum Positive' and 'Maximum Negative' values. At the bottom, there are buttons for 'Manual Tune...', 'OK', 'Cancel', 'Apply', and 'Help'.

13. Click Apply, if you make changes.
14. Select the Load category and edit the default values as appropriate for your application.

The screenshot shows the 'Axis Properties - Axis_1' dialog box with the 'Load' category selected in the left-hand tree. The main panel is titled 'Characteristics of Motor Load'. It contains several sections: 'Load Inertia/Mass' (Load Coupling: Rigid, Use Load Ratio: checked, Load Ratio: 0.0, Motor Inertia: 0.00012 Kg-m^2, Total Inertia: 0.00012 Kg-m^2), 'Inertia/Mass Compensation' (System Inertia: 0.015100271 % Rated/(Rev/s^2), System Acceleration: 6622.3975 Rev/s^2 @ 100 % Rated), and 'Active Load Compensation' (Torque Offset: 0.0 % Rated). At the bottom, there are buttons for 'Manual Tune...', 'OK', 'Cancel', 'Apply', and 'Help'.

15. Click Apply, if you make changes.
16. Select the Actions category.


The Actions to Take Upon Conditions dialog box appears.

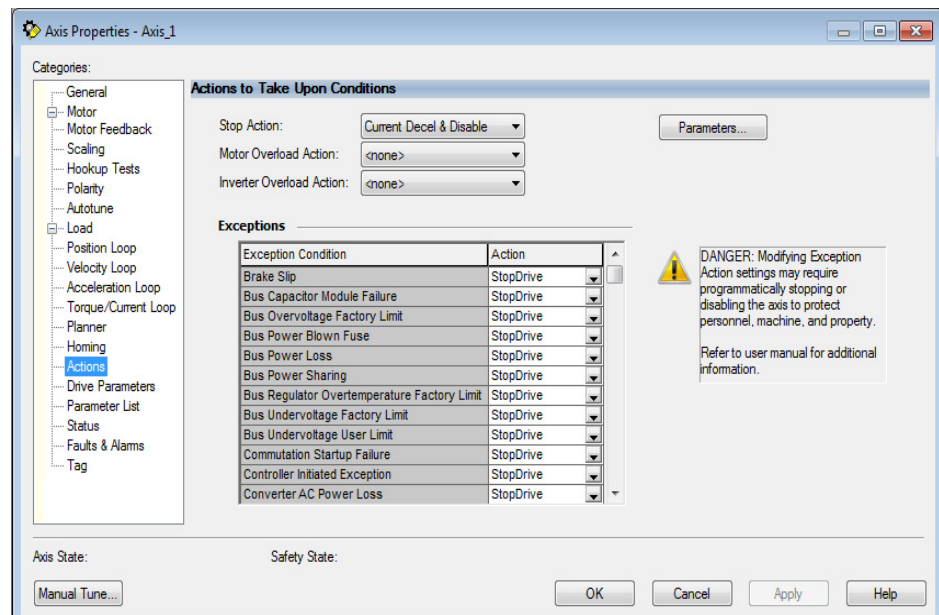

From this dialog box, you can program actions and change the action for exceptions (faults). Refer to [Logix5000 Controller and Drive Module Behavior](#) on page 220 for more information.

17. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

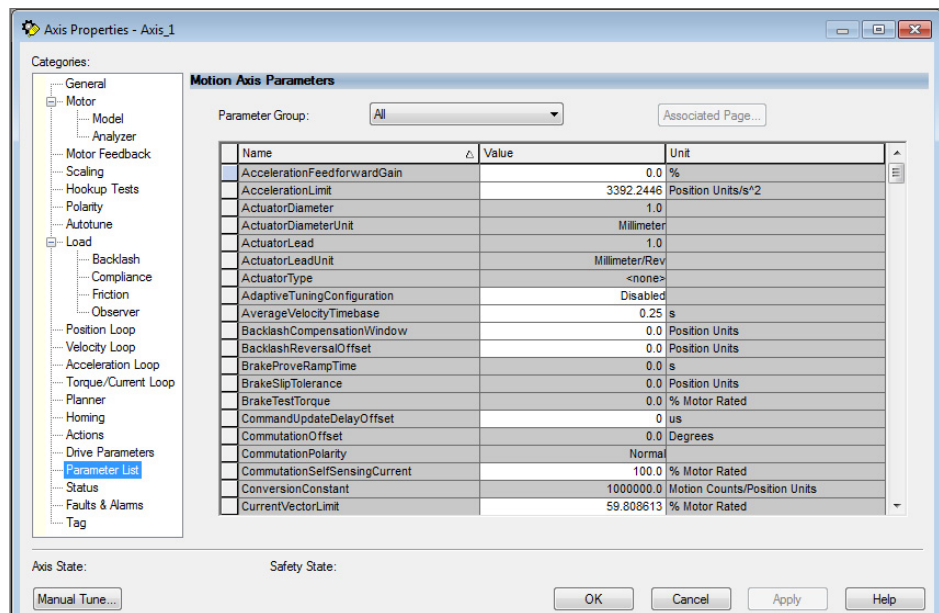

From this dialog box you can set brake engage and release delay times for servo motors. For recommended motor brake delay times, refer to the Kinetix Rotary Motion Specifications Technical Data, publication [KNX-TD001](#).

18. Click OK.


19. Repeat [step 1](#) through [step 18](#) for each servo motor axis.

Configure Induction-motor Closed-loop Control Axis Properties

Follow these steps to configure induction-motor closed-loop control axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General and Associated Module dialog box appears.

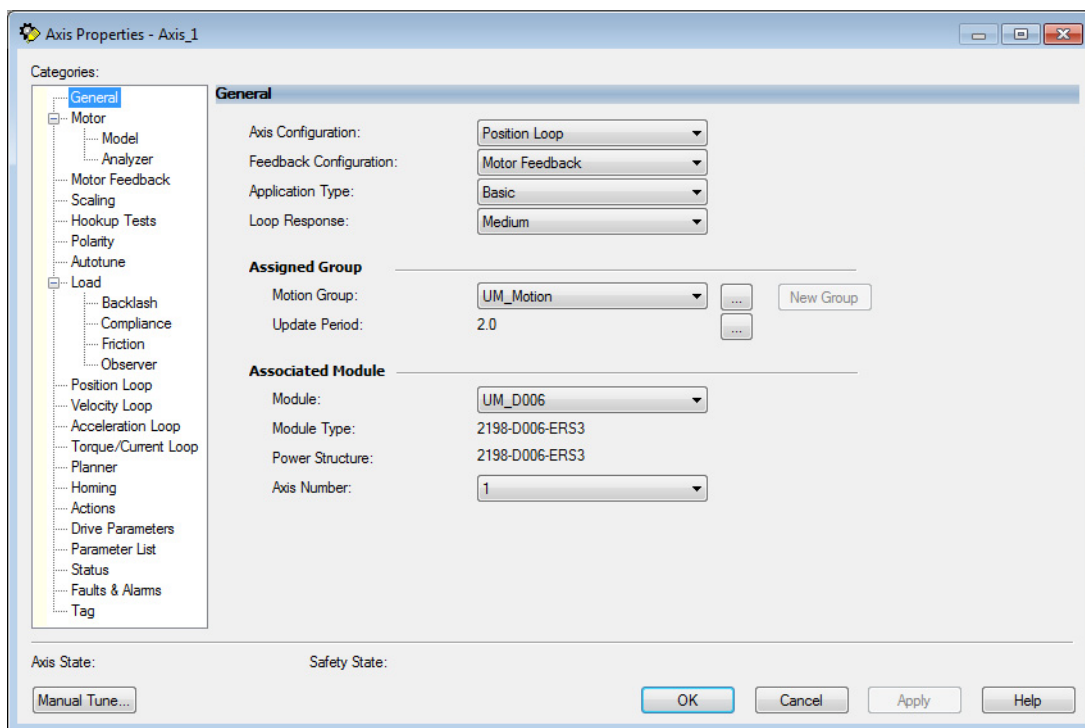


3. From the General pull-down menus, change configuration settings as needed for your application.
4. From the Associated Module>Module pull-down menu, choose your Kinetix 5700 drive.

The drive catalog number populates the Module Type and Power Structure fields.

5. Click Apply.
6. Select the Motor category.

The Motor Device Specification dialog box appears.

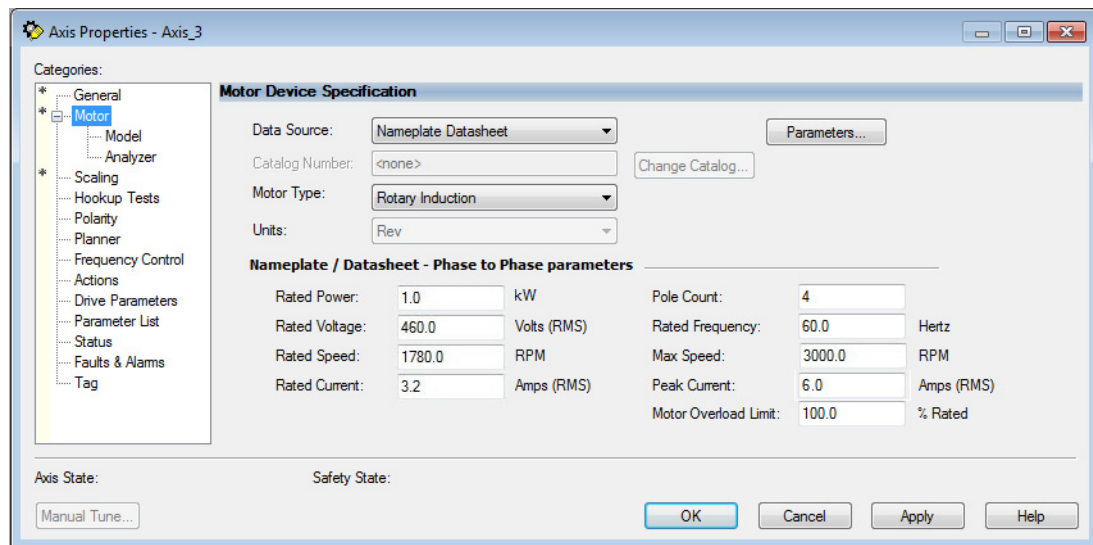

7. From the Data Source pull-down menu, choose Nameplate Datasheet.


This is the default setting. If you have an Allen-Bradley HPK-Series™ asynchronous rotary motor, refer to [page 179](#) to see how to populate the Nameplate / Datasheet parameters by selecting the motor catalog number.

IMPORTANT When you configure HPK-Series motor parameters by selecting the motor catalog number, you must also configure the Polarity category. This requirement applies to only HPK-Series asynchronous motors. See Knowledgebase document [732760](#) for more information.

IMPORTANT Motor NV is not a supported data source in the Logix Designer application for axes configured as Induction-motor closed-loop.

- a. Select the Polarity category.


b. For Motor Polarity, click Inverted (default is Normal).

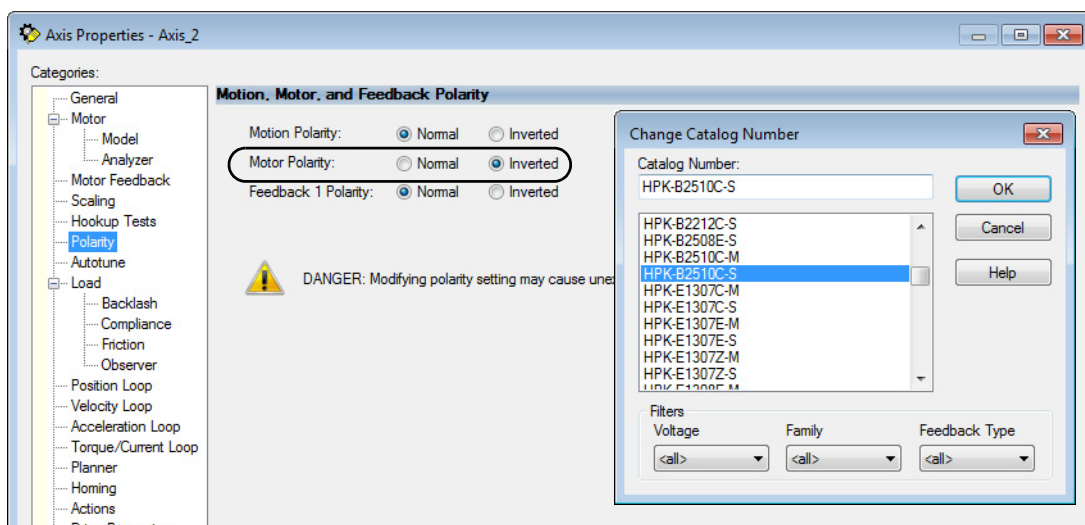

c. Click Apply and return to the Motor category.

8. From the Motor Type pull-down menu, choose Rotary Induction.
 9. From the motor nameplate or datasheet, enter the phase-to-phase values for your motor.
- See [Motor Category](#) on [page 330](#) for a motor performance datasheet example.
10. Click Apply.
 11. Select the Motor Feedback category.

The Motor Feedback Device Specification dialog box appears.

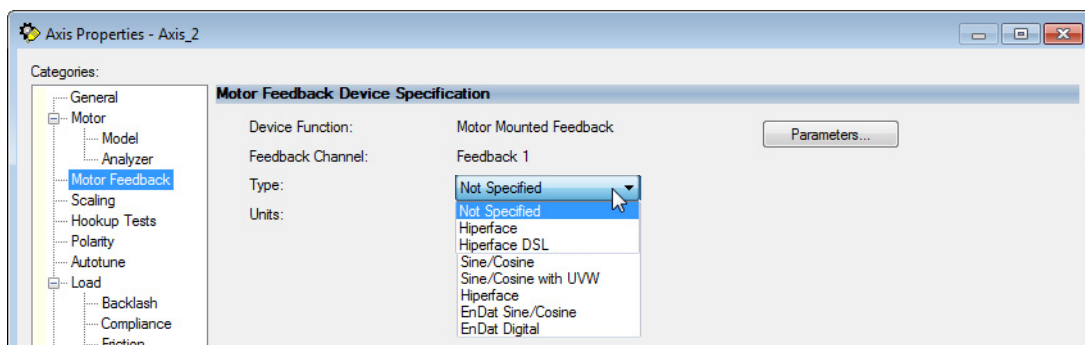

12. From the Type pull-down menu, choose the feedback type appropriate for your application.
- See [Configure Feedback Properties](#) on [page 189](#) for feedback configuration examples.
13. Click Apply.

14. Select the Scaling category and edit the default values as appropriate for your application.

The screenshot shows the 'Axis Properties - Axis_1' dialog box with the 'Scaling' category selected in the left-hand tree. The main area is titled 'Scaling to Convert Motion from Controller Units to User Defined Units'. It contains several sections: 'Load Type' (Direct Coupled Rotary), 'Transmission' (Ratio I/O: 1 : 1 Rev), 'Actuator' (Type: <none>, Lead: 1.0 Millimeter/Rev, Diameter: 1.0 Millimeter), 'Scaling' (Units: Position Units, Scaling: 1.0 Position Units per 1.0 Motor Rev), and 'Travel' (Mode: Unlimited, Range: 1000.0 Position Units, Unwind: 1.0 Position Units per 1.0 Cycle). There are also 'Soft Travel Limits' for Maximum Positive and Maximum Negative (both 0.0 Position Units). Buttons for 'Manual Tune...', 'OK', 'Cancel', 'Apply', and 'Help' are at the bottom.

15. Click Apply, if you make changes.

16. Select the Actions category.

The Actions to Take Upon Conditions dialog box appears.


The screenshot shows the 'Axis Properties - Axis_1' dialog box with the 'Actions' category selected. The main area is titled 'Actions to Take Upon Conditions'. It includes 'Stop Action' (Current Decel & Disable), 'Motor Overload Action' (<none>), and 'Inverter Overload Action' (<none>). Below is a table for 'Exceptions' with columns 'Exception Condition' and 'Action'. A warning icon and text are on the right, and 'Axis State' and 'Safety State' are at the bottom left. Buttons for 'Manual Tune...', 'OK', 'Cancel', 'Apply', and 'Help' are at the bottom.

Exception Condition	Action
Brake Slip	StopDrive
Bus Capacitor Module Failure	StopDrive
Bus Overvoltage Factory Limit	StopDrive
Bus Power Blown Fuse	StopDrive
Bus Power Loss	StopDrive
Bus Power Sharing	StopDrive
Bus Regulator Overtemperature Factory Limit	StopDrive
Bus Undervoltage Factory Limit	StopDrive
Bus Undervoltage User Limit	StopDrive
Commutation Startup Failure	StopDrive
Controller Initiated Exception	StopDrive
Converter AC Power Loss	StopDrive

From this dialog box, you can program actions and change the action for exceptions (faults). Refer to [Logix5000 Controller and Drive Module Behavior](#) on [page 220](#) for more information.

17. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

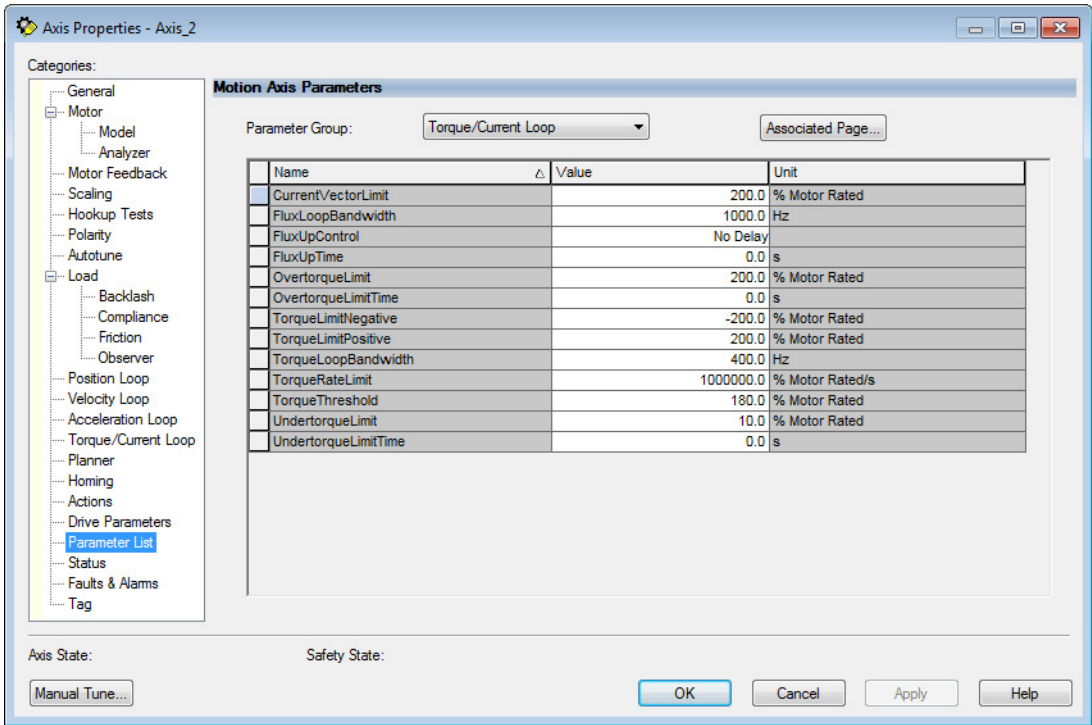


- 18. From the Parameter Group pull-down menu, choose Torque/Current Loop.
- 19. Set the FluxUp attributes appropriate for your application.
See the corresponding section in Appendix D, beginning on [page 315](#), for information and configuration examples regarding this topic.

IMPORTANT The Automatic FluxUpControl setting is recommended for best autotune results.

- 20. Click Apply.


21. Select the Load category and edit the default values as appropriate for your application.

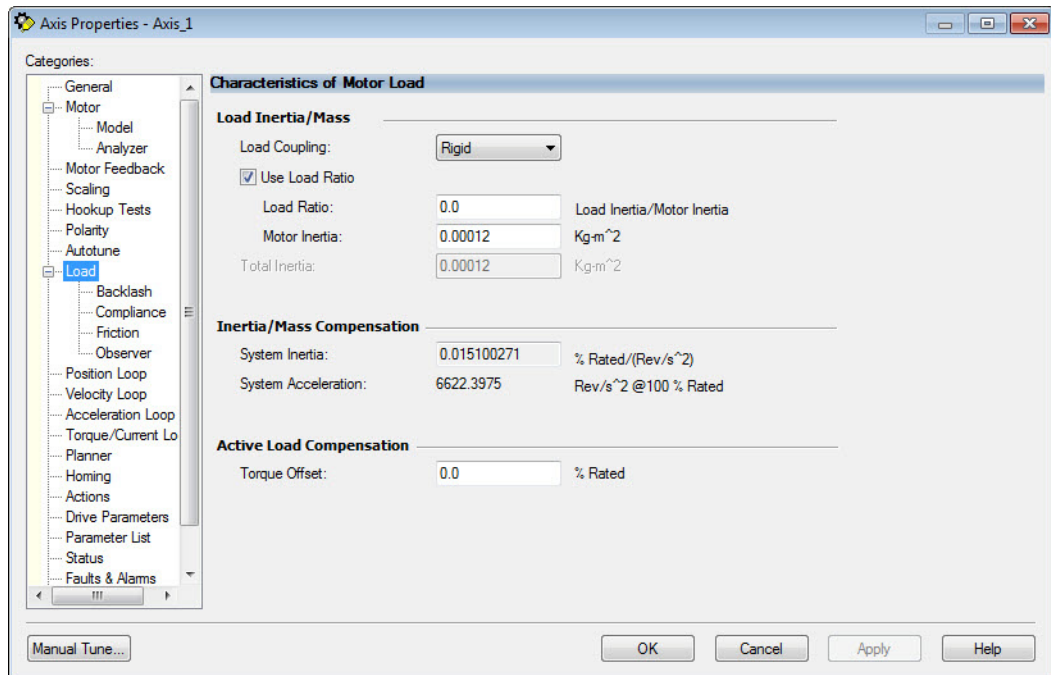

22. Click Apply, if you make changes.
23. Click OK.
24. Select the Motor>Model category.

Motor model attributes are automatically estimated from the Nameplate/Datasheet parameters. For improved performance, motor tests can be run.

25. The Analyze Motor to Determine Motor Model dialog box opens.

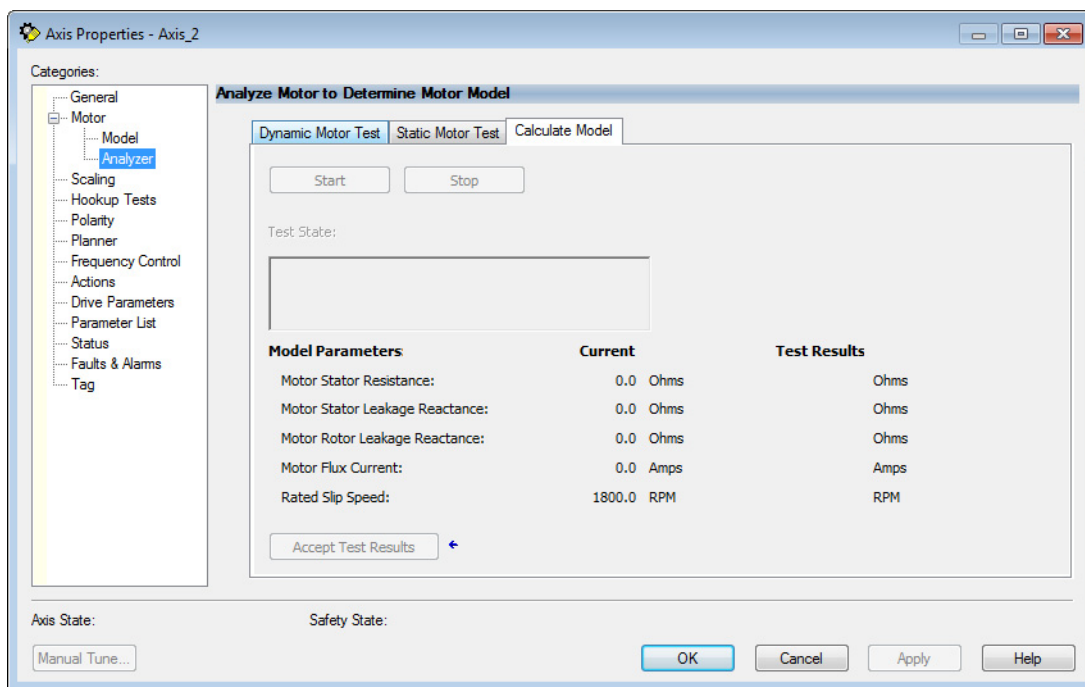

IMPORTANT The Dynamic motor test cannot be run without a non-zero motor inertia.

26. Click the tab corresponding to the Motor Test you want to run.

See [Motor Tests and Autotune Procedure](#) on [page 332](#) for information about each of the tests.

27. Click Start.

28. Click Accept Test Results.

29. Click Apply.

30. Select the Autotune category.

See [Tune Induction Motors](#) on [page 204](#) for more information.

31. Repeat [step 1](#) through [step 31](#) for each induction motor axis.

Configure Feedback Properties


This section provides more configuration detail for module properties and axis properties when incremental feedback types are used in your application.

Configure Module Properties

Configure the module properties of your Kinetix 5700 servo drive depending on how you intend to use the feedback connectors.

1. Right-click an axis in the Controller Organizer to configure and choose Properties.

The Module Properties dialog box appears.

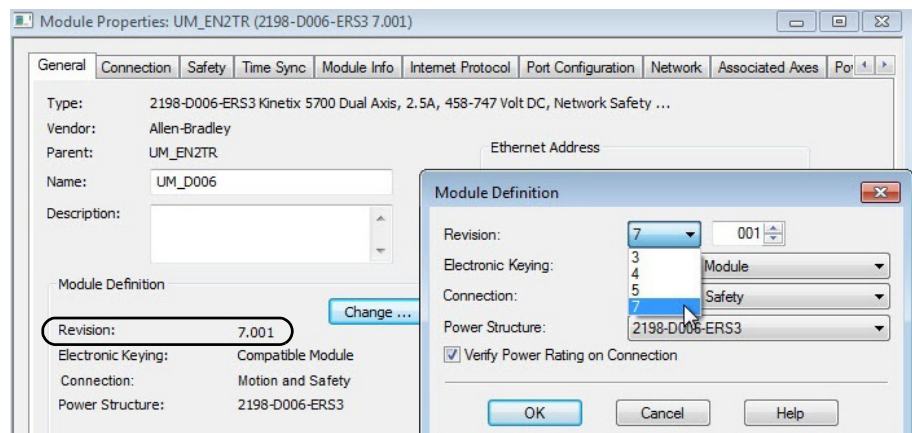


2. Under Module Definition click Change.

The Module Definition dialog box appears.

Depending on the Module Definition revision selection, alternate feedback types can be selected.

3. Click the Associated Axes tab.

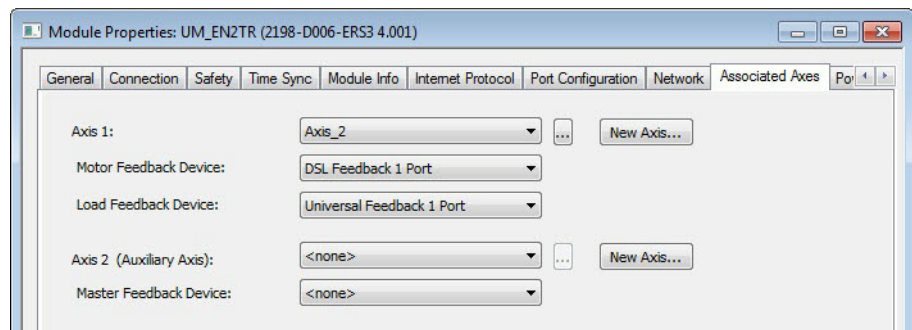

4. Configure each axis for Motor feedback, Load feedback, and Master feedback devices appropriate for your application.

See Continue Inverter Configuration on [page 160](#) for more information on configuring module properties for dual-axis and single-axis inverters.


IMPORTANT The Logix Designer application prevents making feedback port assignments with incompatible feedback types. For example, you cannot assign the same port for multiple devices. The same port cannot be used for Motor Feedback Device, Load Feedback Device, and Master Feedback Device.

Table 88 - Motor Feedback Compatibility

Motor Feedback Device Option	Feedback Type		Description	Feedback Connector
Universal Feedback 1 Port	- Digital AqB - Digital AqB with UVW - Sine/Cosine - Sine/Cosine with UVW	Incremental	Applies to Allen-Bradley Bulletin MPL (-H) rotary motors, Bulletin MPAS (direct-drive) linear actuators, LDAT-Series (-xBx) linear thrusters, and LDC-Series™ linear motors wired to the 2198-K57CK-D15M universal connector kit.	15-pin universal feedback (UFB)
	- EnDat Sine/Cosine - EnDat Digital	High-resolution single-turn and multi-turn, absolute	Applies to Allen-Bradley Bulletin RDB and Bulletin VPC-Bxxxxx-Y motors wired to the 2198-K57CK-D15M universal connector kit.	
	Hiperface		Applies to Allen-Bradley Bulletin MPL, MPM, MPF, MPS (-M/S or -V/E), and VPC-Bxxxxx-S rotary motors; Bulletin MPAS (ballscrew), MPAR, MPAL, linear actuators; HPK-Series rotary motors; and LDAT-Series (-xDx) linear thrusters wired to the 2198-K57CK-D15M universal connector kit.	
DSL Feedback 1 Port	Hiperface	High-resolution single-turn and multi-turn, absolute	Applies to Allen-Bradley Bulletin MPL, MPM, MPF, MPS (-M/S or -V/E) and VPC-Bxxxxx-Q rotary motors; Bulletin MPAS (ballscrew), MPAR, MPAL linear actuators; HPK-Series rotary motors; and LDAT-Series (-xDx) linear thrusters wired to the 2198-H2DCK converter kit.	2-pin motor feedback (MF)
	Hiperface DSL		Applies to Allen-Bradley Bulletin VPL, VPF, VPS and VPC-Bxxxxx-Q rotary motors wired to the 2198-KITCON-DSL connector kit.	

IMPORTANT Unprogrammed Smart feedback devices (Hiperface Sin/Cos, Hiperface DSL, EnDat Digital, and EnDat Sin/Cos) are not supported. Unprogrammed as load or feedback-only feedback types are supported. Contact your local distributor or Rockwell Automation representative for support options.

This example shows acceptable feedback port assignments.

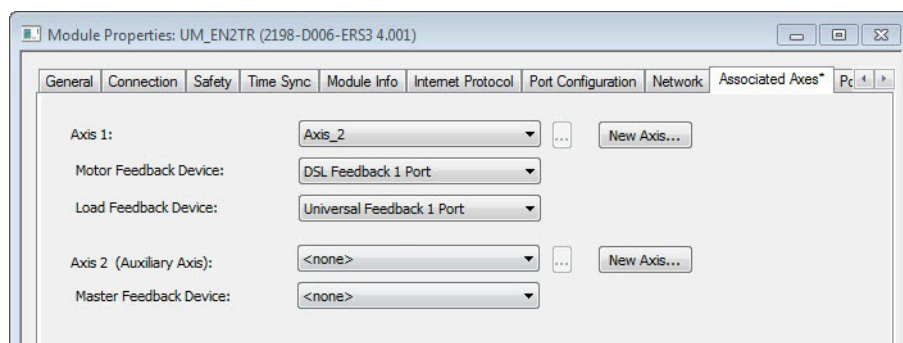

5. Click OK.

Configure Axis Properties

In this section you configure the axis properties of your Kinetix 5700 servo drive for the type of feedback you intend use in your application.

[Table 89](#) defines valid feedback assignments for each feedback type.

Table 89 - Valid Feedback Assignments

Feedback Type		Permanent Magnet Motors		Induction Motors		
Hiperface DSL	High-resolution single-turn and multi-turn, absolute	Motor feedback	Load feedback	Motor feedback	Load feedback	Master feedback
Hiperface						
Digital AqB	Incremental	N/A				
Digital AqB with UVW		Motor feedback	N/A	N/A	N/A	N/A
Sine/Cosine		N/A	Load feedback	Motor feedback	Load feedback	Master feedback
Sine/Cosine with UVW		Motor feedback	N/A	N/A	N/A	N/A
EnDat Sine/Cosine	High-resolution single-turn and multi-turn, absolute	Motor feedback	Load feedback	Motor feedback	Load feedback	Master feedback
EnDat Digital						


Digital AqB (TTL) Feedback

In this example, a motor feedback device is configured for Digital AqB feedback.

IMPORTANT When Motor Mounted Feedback is the Device Function, Digital AqB (without UVW) is not a valid feedback type for permanent magnet motors.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor Feedback category.

The Motor Feedback Device Specification dialog box appears.

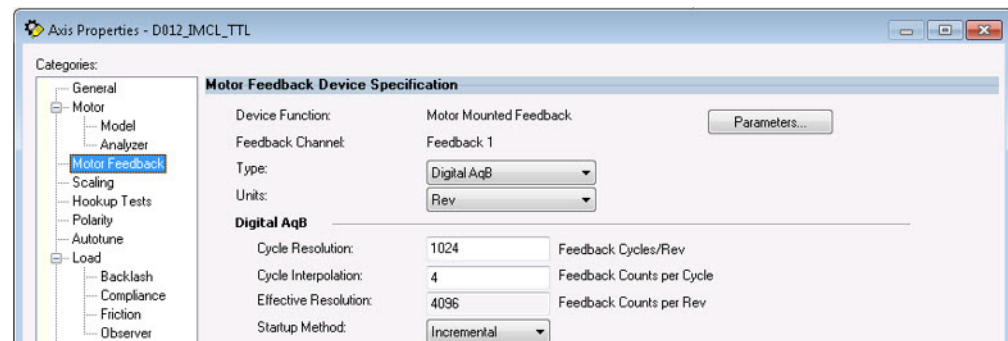

3. Configure the device function and type.

In this example, Motor Feedback is the device function and Digital AqB is the feedback type.

4. Enter values for the Digital AqB specification fields.

The only valid value for Cycle Interpolation is 4.

5. From the Startup Method pull-down menu, choose Incremental.
6. Click Apply.

TIP When the Device Function is Load-Side Feedback or Master Feedback, configuration is identical to Motor Mounted Feedback.


Digital AqB with UVW (TTL w/Hall) Feedback

In this example, a motor feedback device is configured for Digital AqB with UVW feedback.

IMPORTANT When Motor Mounted Feedback is the Device Function, Digital AqB with UVW is the only valid feedback type for permanent magnet motors.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor Feedback category.

The Motor Feedback Device Specification dialog box appears.

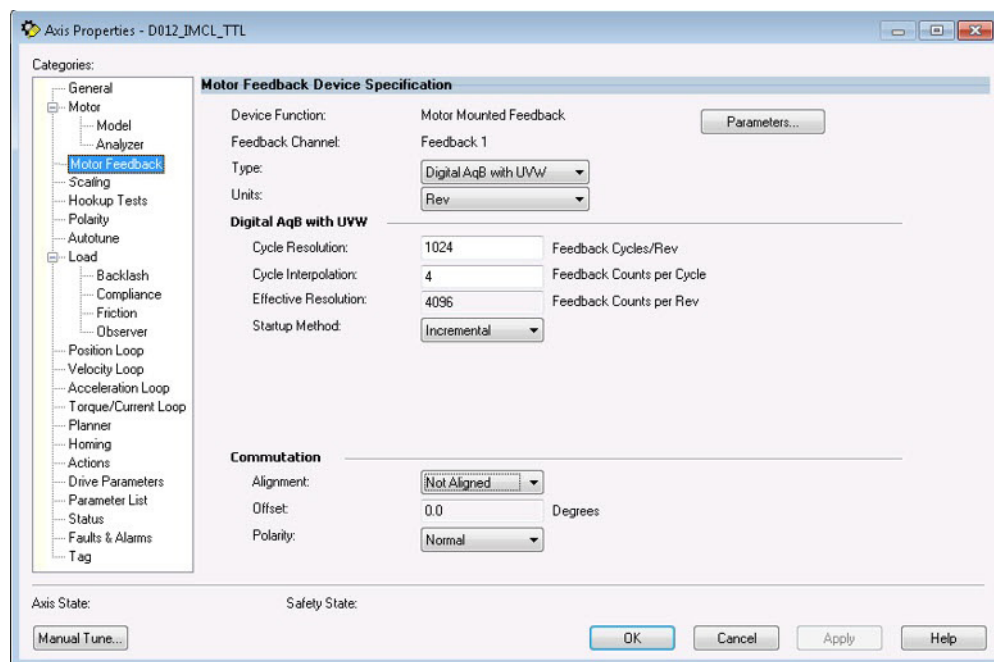

3. Configure the device function and type.
In this example, Motor Feedback is the device function and Digital AqB with UVW is the feedback type.
4. Enter values for the Digital AqB with UVW specification fields.
The only valid value for Cycle Interpolation is 4.
5. From the Startup Method pull-down menu, choose Incremental.
6. From the Alignment pull-down menu, choose Not Aligned.
7. Click Apply.


Sine/Cosine Feedback

In this example, a motor feedback device is configured for Sine/Cosine feedback.

IMPORTANT When Motor Mounted Feedback is the Device Function, Sine/Cosine is not a valid feedback type for permanent magnet motors.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor Feedback category.

The Motor Feedback Device Specification dialog box appears.

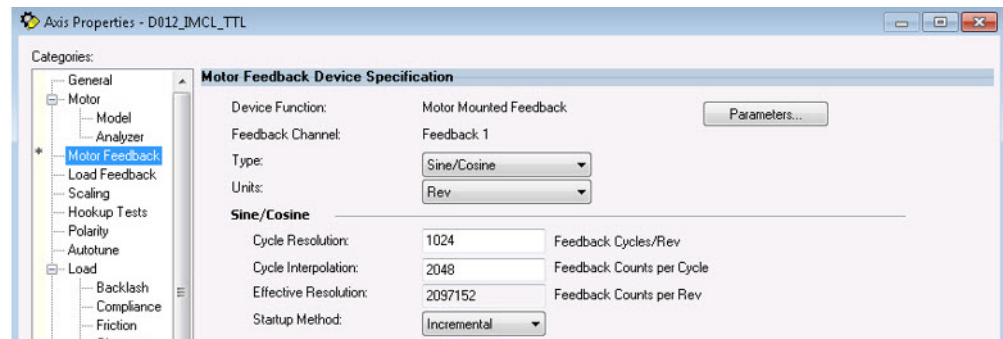

3. Configure the device function and type.

In this example, Motor Feedback is the device function and Sine/Cosine is the feedback type.

4. Enter values for the Sine/Cosine specification fields.

The only valid values for Cycle Interpolation are powers of 2 from 4 through 65536.

5. From the Startup Method pull-down menu, choose Incremental.
6. Click Apply.

TIP When the Device Function is Load-Side Feedback or Master Feedback, configuration is identical to Motor Mounted Feedback.


Sine/Cosine with Hall Feedback

In this example, a motor feedback device is configured for Sine/Cosine with UVW feedback.

IMPORTANT When Motor Mounted Feedback is the Device Function, Sine/Cosine with UVW is the only valid feedback type for permanent magnet motors.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor Feedback category.

The Motor Feedback Device Specification dialog box appears.

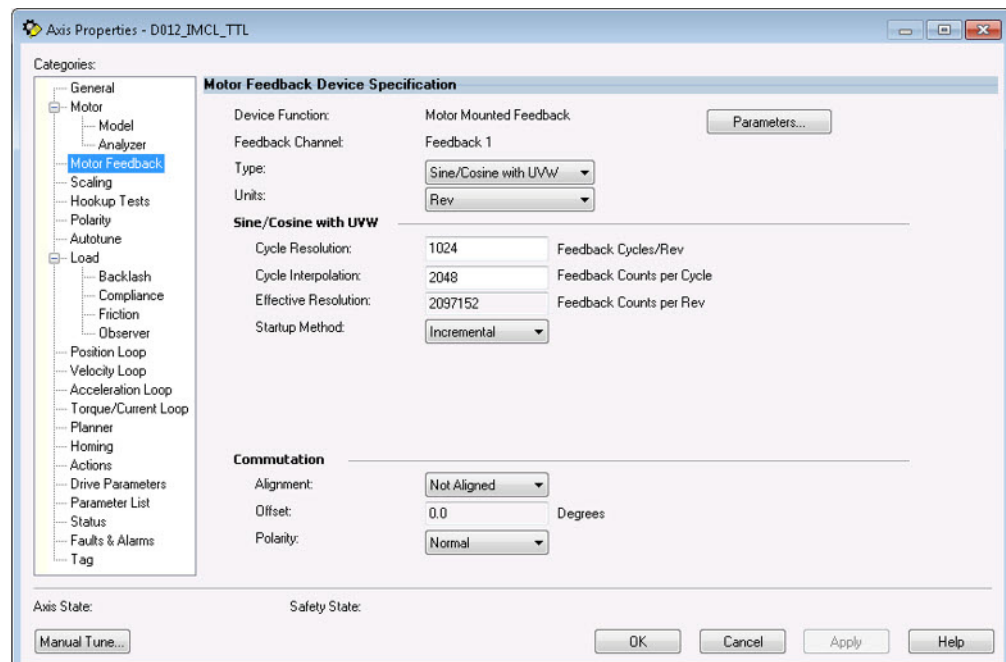

3. Configure the device function and type.

In this example, Motor Feedback is the device function and Sine/Cosine with UVW is the feedback type.

4. Enter values for the Sine/Cosine with UVW specification fields.

The only valid values for Cycle Interpolation are powers of 2 from 4 through 65536.

5. From the Startup Method pull-down menu, choose Incremental.
6. From the Alignment pull-down menu, choose Not Aligned.
7. Click OK.

Download the Program

After completing the Logix Designer application and saving the file you must download your program to the Logix5000 processor.

Apply Power to the Kinetix 5700 Drive System

This procedure assumes that you have wired and configured your Kinetix 5700 system, your Logix5000 controller, and iTRAK power supply if present.



SHOCK HAZARD: To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2198 servo drives prior to applying power. Once power is applied, connector terminals can have voltage present even when not in use.

Follow these steps to apply power to the Kinetix 5700 systems.

1. Disconnect the load to the motor (does not apply to iTRAK PS).



ATTENTION: To avoid personal injury or damage to equipment, disconnect the load to the motor. Make sure each motor is free of all linkages when initially applying power to the system.

2. Apply 24V DC control power.

The LCD display begins the startup sequence. Refer to [Startup Sequence](#) on [page 143](#). If the startup sequence does not begin, check the 24V control power connections.

3. When the startup sequence completes, verify that the two status indicators are steady green.
 - a. Verify the DC-bus power supply axis state is PRECHARGE.
 - b. Verify the iTRAK power supply axis state is START INHIBITED.

If the DC-bus/iTRAK power supply does not reach the specified axis state and the two status indicators are not solid green, refer to [Kinetix 5700 Status Indicators](#) on [page 217](#).

IMPORTANT Apply control power before applying three-phase AC power. This makes sure the shunt is enabled, which can prevent nuisance faults or Bus Overvoltage faults.

4. Apply mains input power and monitor the DC BUS voltage on the LCD display.

If the DC BUS does not reach the expected voltage level, check the three-phase input power connections.

TIP It can take as long as 1.8 seconds after input power is applied before the drive can accept motion commands (does not apply to iTRAK power supply).

- a. Verify the DC-bus power supply axis state is RUNNING.
- b. Verify the iTRAK power supply axis state is RUNNING.


If the DC-bus/iTRAK power supply does not reach the specified axis state, refer to [Fault Codes](#) on [page 208](#).

Understand Bus-sharing Group Configuration

When configuring Module Properties>Power tab for each Kinetix 5700 drive, you can breakout drives from one or more servo systems into multiple bus-sharing (power) groups.

A drive that faults in Group 1 does not affect the operation of Group 2, even though all of the drives in Groups 1 and 2 are in the same Motion group in the Logix Designer application. As many as 25 bus-sharing groups are possible.

Figure 91 - Bus-sharing Group Configuration

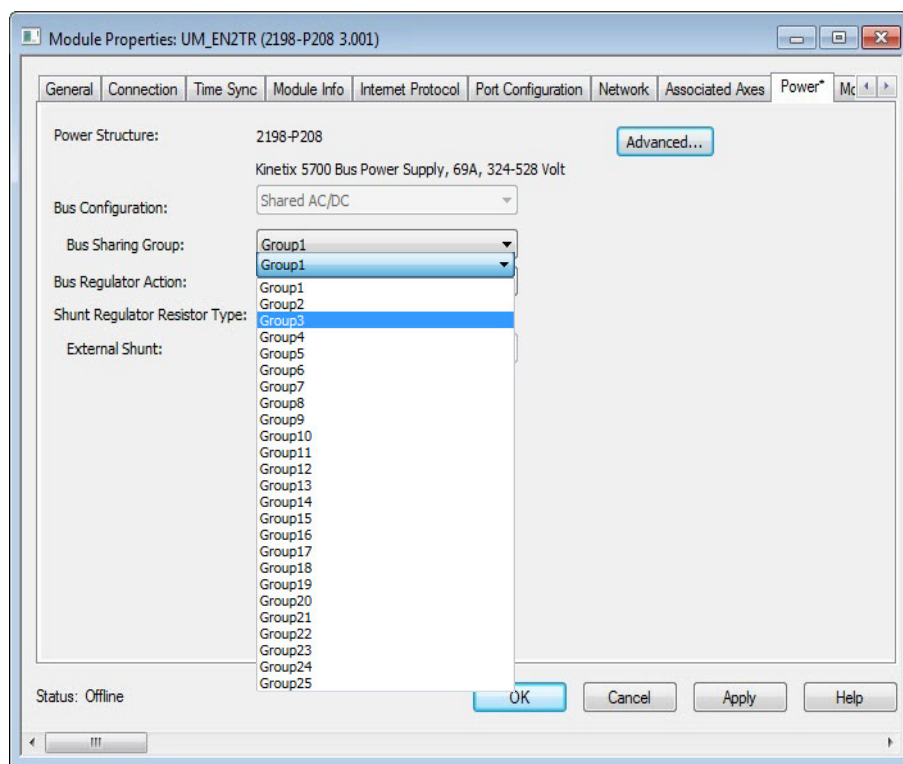

IMPORTANT The iTRAK power supply is not configured as part of a bus-sharing group in the Logix Designer application. The gateway computer monitors bus status and controls enabling and disabling the iTRAK power supply. See the iTRAK System User Manual, publication [2198T-UM001](#) for more information.

Bus-sharing Group Example


In [Figure 92](#), twelve axes are needed to support the motion application. All twelve axes are configured in the same Motion group in the Logix Designer application.

However, the twelve axes of motion are also configured as two bus-sharing groups in Module Properties>Power tab. By creating two bus-sharing groups, a converter drive that faults in Group 1 only disables Group 1 drives, and has no effect on the drive operation of Group 2 drive.



ATTENTION: To avoid damage to equipment all modules physically connected to the same shared-bus connection system must be part of the same Bus Sharing Group in the Logix Designer application.

Figure 92 - Bus-sharing Group Example

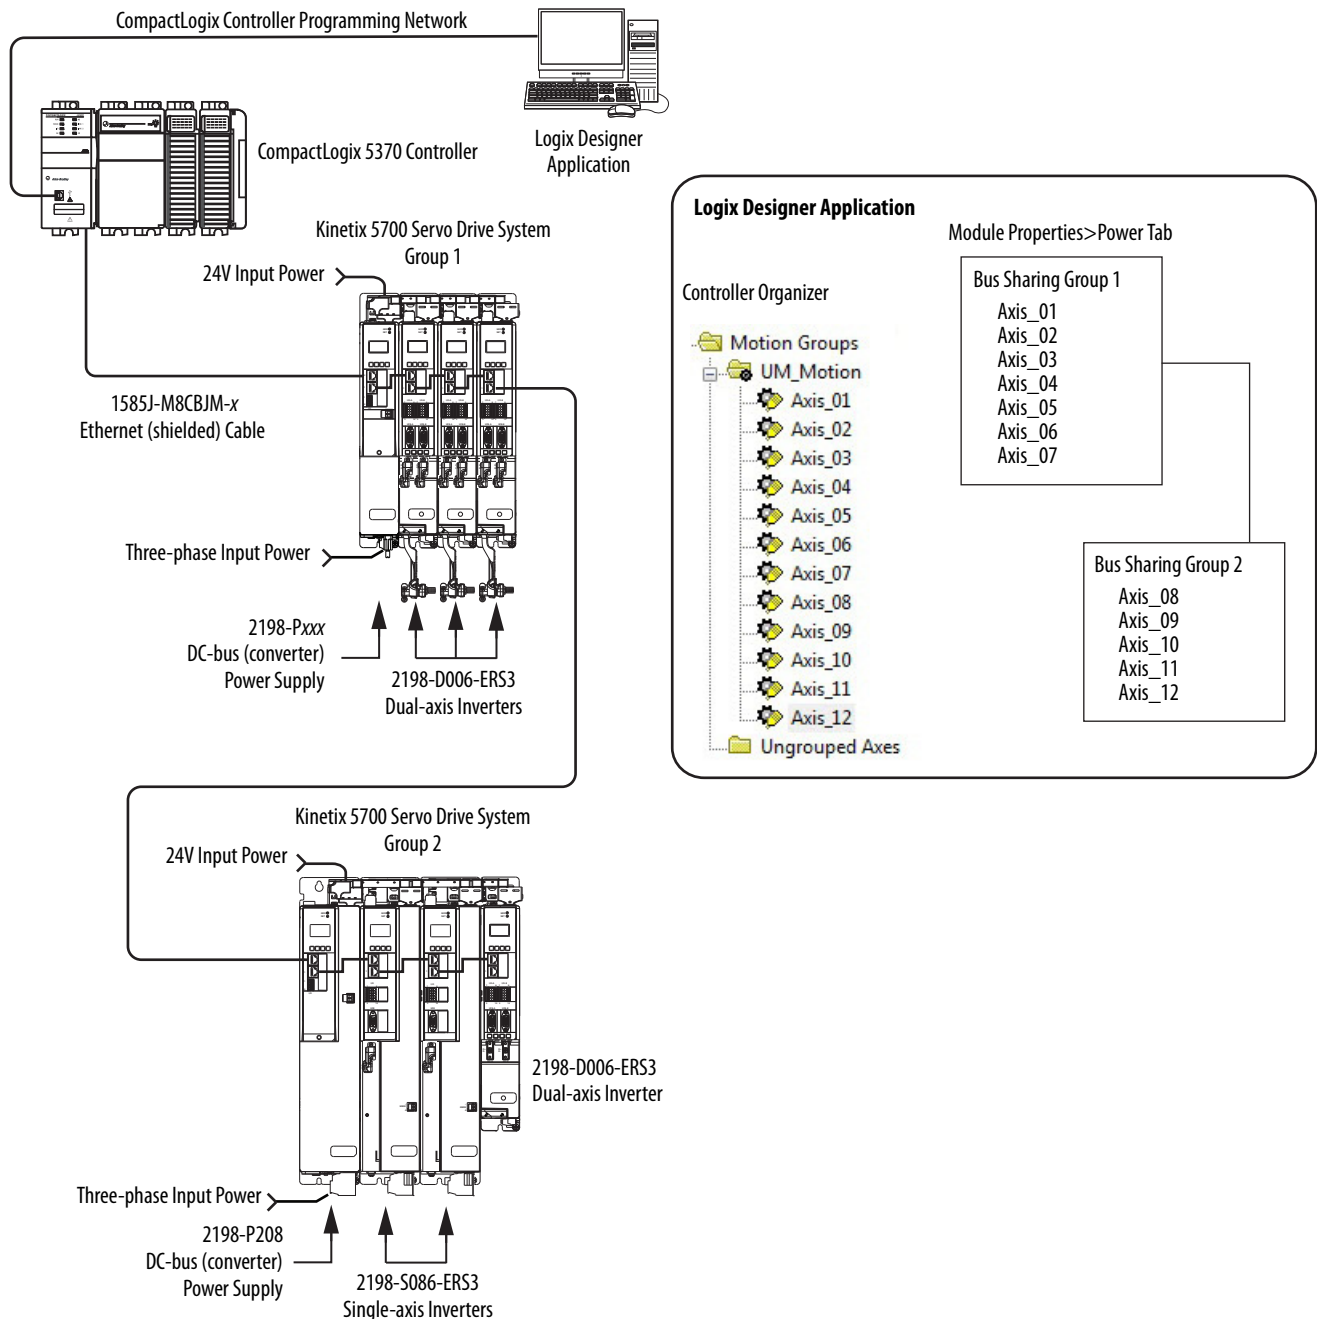

Configure Bus-sharing Groups

In both groups, the Bus Configuration for the converter drive is Shared AC/DC and the Bus Configuration for the inverter drives is Shared DC.

Figure 93 - Group 1 DC-bus Power Supply (converter) Configuration

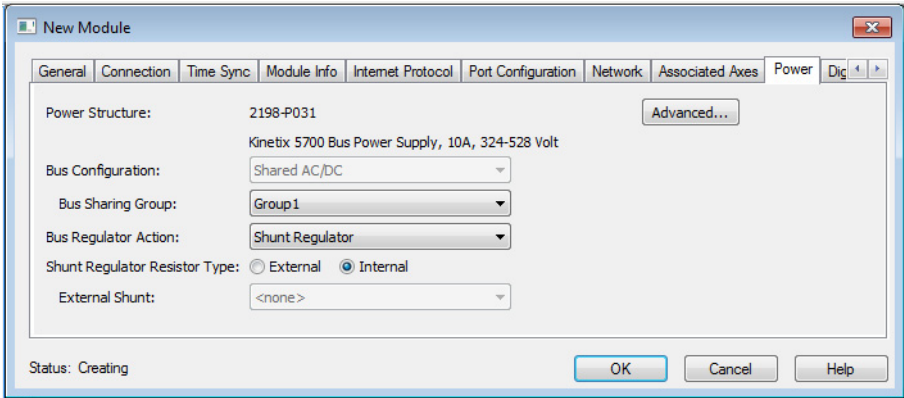


Figure 94 - Group 1 Dual-axis Inverter Configuration

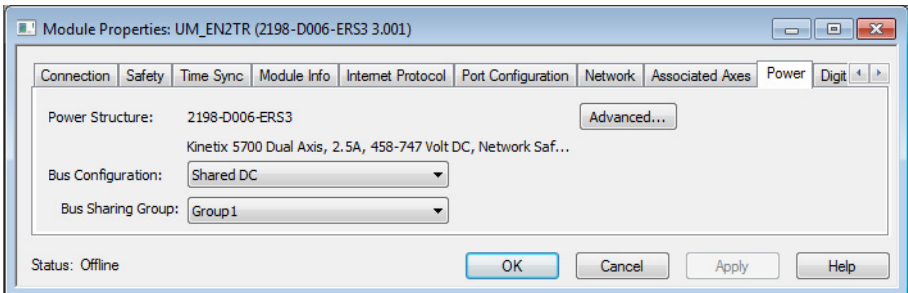


Figure 95 - Group 2 DC-bus Power Supply (converter) Configuration

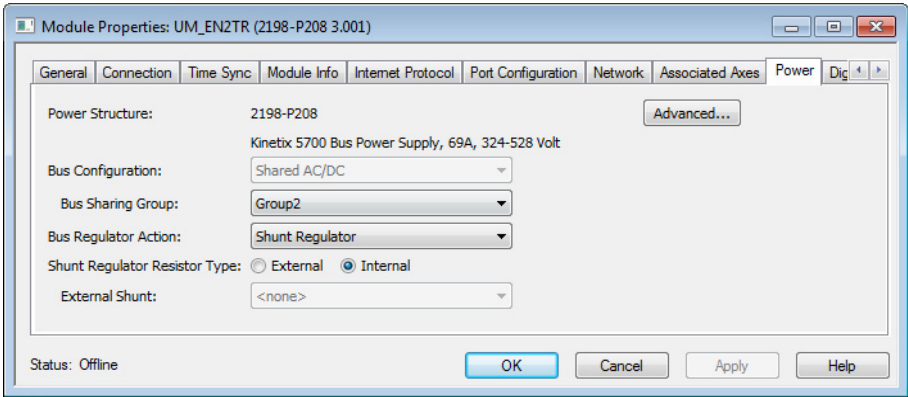
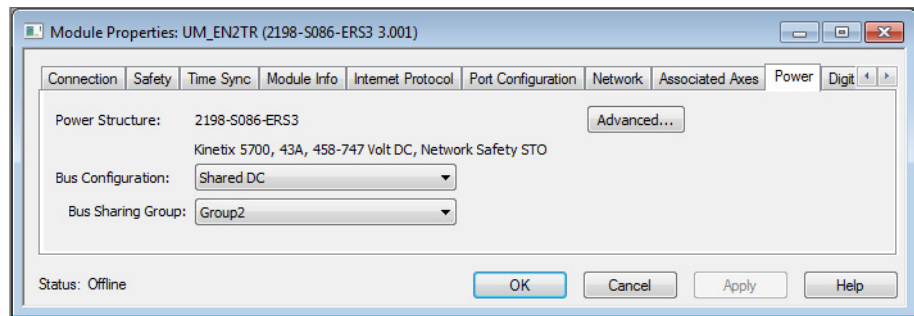
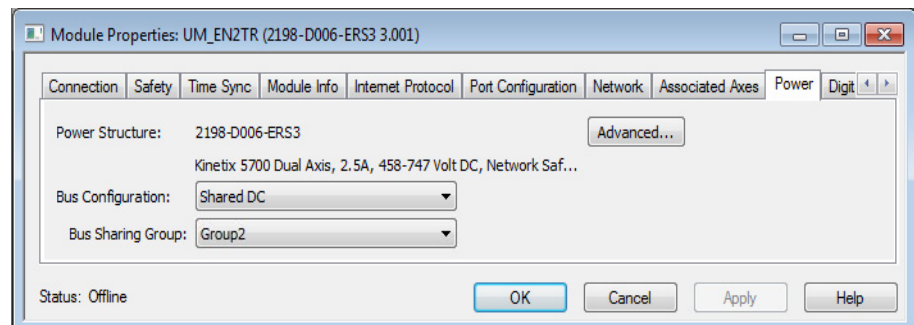


Figure 96 - Group 2 Single-axis Inverter Configuration**Figure 97 - Group 2 Dual-axis Inverter Configuration**

Test and Tune the Axes

This procedure assumes that you have configured your Kinetix 5700 drive, your Logix5000 controller, and applied power to the system.

IMPORTANT Before proceeding with testing and tuning your axes, verify that the MOD and NET status indicators are operating as described in [Kinetix 5700 Status Indicators](#) on [page 217](#).

For help using the Logix Designer application as it applies to testing and tuning your axes with ControlLogix EtherNet/IP modules or CompactLogix 5370 controllers, refer to [Additional Resources](#) on [page 13](#).

For testing and tuning iTRAK movers, see the iTRAK System User Manual, publication [2198T-UM001](#).

Test the Axes


Follow these steps to test the axes.

1. Verify the load was removed from each axis.



ATTENTION: To avoid personal injury or damage to equipment, you must remove the load from each axis as uncontrolled motion can occur when an axis with an integral motor brake is released during the test.

- 2. In your Motion Group folder, right-click an axis and choose Properties. The Axis Properties dialog box appears.

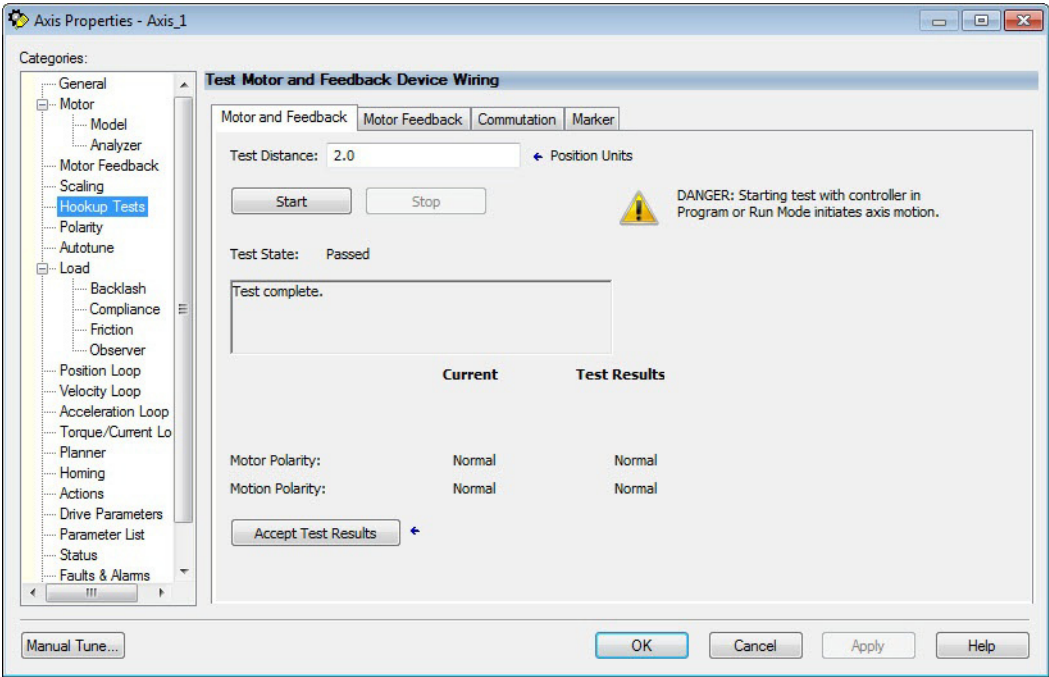


- 3. Select the Hookup Tests category.
 - 4. In the Test Distance field, enter the desired test distance.
- The Position Units are defined in Axis Properties>Scaling tab.


Hookup Test	Definitions
Marker	Verifies marker detection capability as you manually rotate the motor shaft. The test completes when the drive either detects the marker or when the motor moves the distance specified in the Test Distance field. If the marker remains undetected and the test completes successfully, it means the motor moved the full test distance. If the marker remains undetected and the test fails, the motor did not move the full test distance. Run this test after running the Motor Feedback and Motor and Feedback tests.
Commutation	Verifies the commutation offset and commutation polarity of the motor. This test applies to third-party or custom permanent-magnet motors equipped with (TTL with Hall and Sine/Cosine with Hall) incremental encoders that are not available as a catalog number in the Motion Database. See Commutation Test on page 349 .
Motor Feedback	Verifies feedback connections are wired correctly as you manually rotate the motor shaft. The test completes when the drive determines that the motor moved the full distance specified in the Test Distance field. Run this test before the Motor and Feedback Test to verify that the feedback can be read properly.
Motor and Feedback	Verifies motor power and feedback connections are wired correctly as the drive commands the motor to rotate. Because the drive is rotating the motor, this test requires full bus power to run. Run the Motor Feedback test before running this test to verify that the feedback is being read correctly.

- 5. Click the desired test to verify connections.
- 6. Click Start.

The Logix Designer - Motor and Feedback Test dialog box appears. The Test State is Executing. TESTING appears on the drive LCD display.

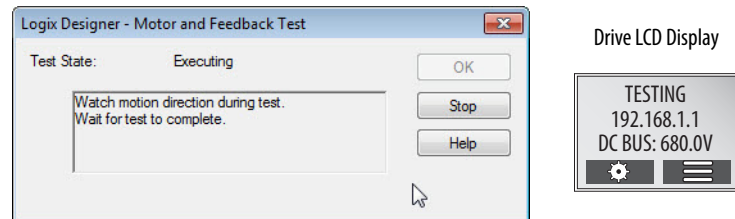


When the test completes successfully, the Test State changes from Executing to Passed.

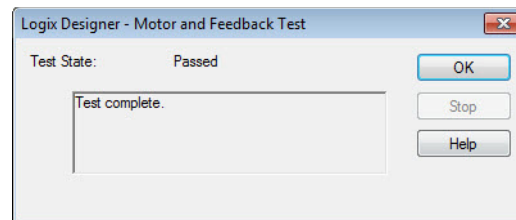

7. Click OK.

This dialog box appears asking if the axis moved in the forward direction.

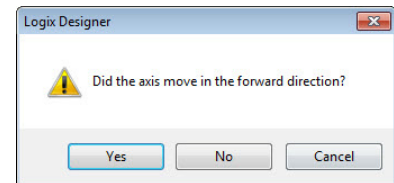


8. Click Yes if you agree.

9. Click Accept Test Results.

10. If the test fails, this dialog box appears.

- a. Click OK.
- b. Verify the DC bus voltage.
- c. Verify unit values entered in the Scaling category.
- d. Verify the motor power and feedback wiring.
- e. Return to [step 5](#) and run the test again.

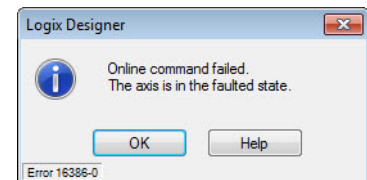

Tune the Axes

Choose the tuning procedure best suited for your motor type.

Motor Type	Go directly to
Permanent magnet (PM)	Tune Permanent Magnet Motors
Induction	Tune Induction Motors on page 204

Tune Permanent Magnet Motors

The load observer feature provides high-performance motion control without having to manually tune your axis. Using load observer with a default set of gains can yield high-performance right out of the box. Most of the time, there is no need to perform an auto-tune procedure or further optimize gain settings.

Follow these steps to configure the drive for high-performance by using the load observer feature.


1. Verify that the load is connected.

Re-attach the load if it was disconnected for the Hookup Test.




ATTENTION: If the drive has not been enabled before (new installation), verify that you have safeguards in place to safely remove power from the drive in the event of an unstable situation where the drive can produce undesired motion.

2. Click the Autotune tab in the Axis Properties dialog box.
 - a. From the pull-down menus for Application Type, Loop Response, and Load Coupling, choose Custom, Medium, and Rigid settings, respectively.
 - b. Verify that only the Velocity Feedforward box is checked.

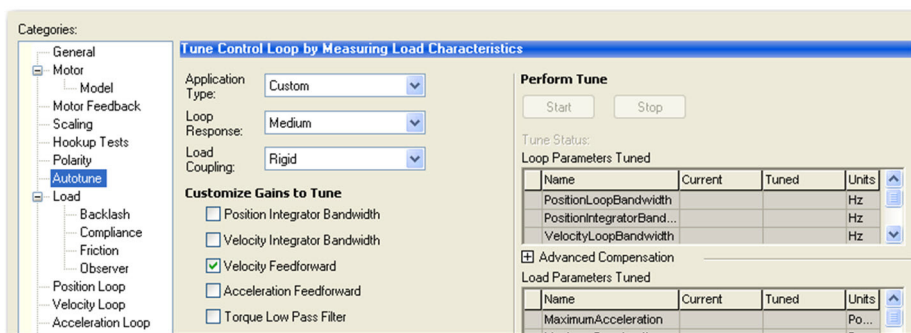


3. Click the Load tab in the Axis Properties dialog box.
 - a. Check Use Load Ratio.

- b. Set the Load Ratio = 0.

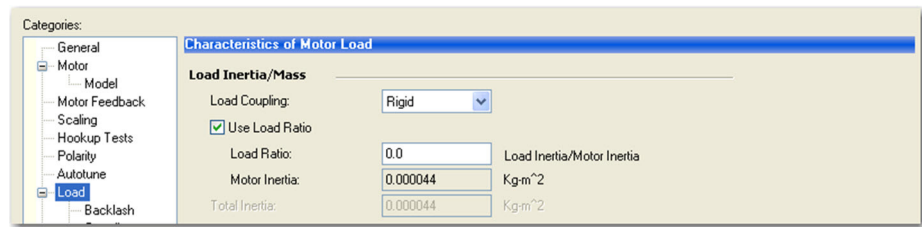


4. Click the Observer tab in the Axis Properties dialog box.
- a. From the Configuration pull-down menu, choose Load Observer with Velocity Estimate.

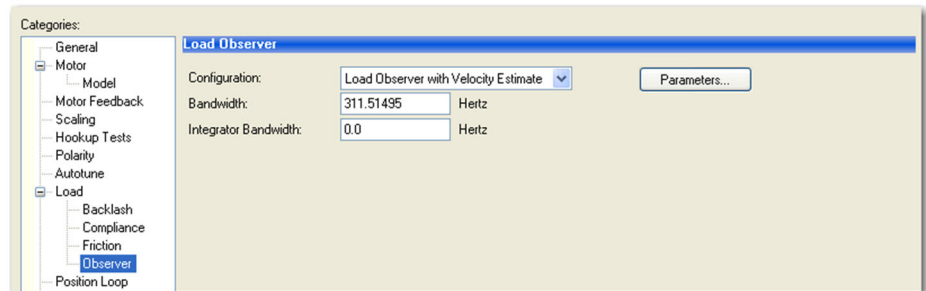

- b. Click Apply and click Yes to update all dependent attributes.

The Load Observer Bandwidth and other gains are set automatically.

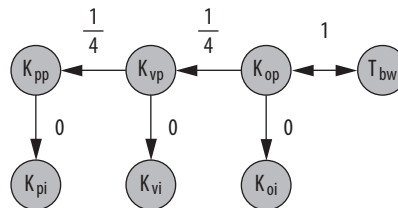

5. Enable the drive for a few seconds with an MSO instruction or motion direct command, followed by an MSF instruction or motion direct command, to make sure that no audible squealing noise is present.

IMPORTANT If an audible squealing noise is heard, go to Axis Properties>Load>Compliance category and set the Torque Notch Filter Frequency field (Hz) to remove the noise. Refer to Motion System Tuning Application Techniques, publication [MOTION-AT005](#) (Compensating for High Frequency Resonances), for information on how to set the Torque Notch Filter Frequency field.

6. Repeat [Test and Tune the Axes](#) for each axis.

Tune Induction Motors

IMPORTANT The Automatic FluxUpControl setting is recommended for best Autotune results.


Follow these steps to tune the induction motor axes.

1. Verify the load is removed from the axis being tuned.



ATTENTION: To reduce the possibility of unpredictable motor response, tune your motor with the load removed first, then re-attach the load and perform the tuning procedure again to provide an accurate operational response.

2. Select the Autotune category.

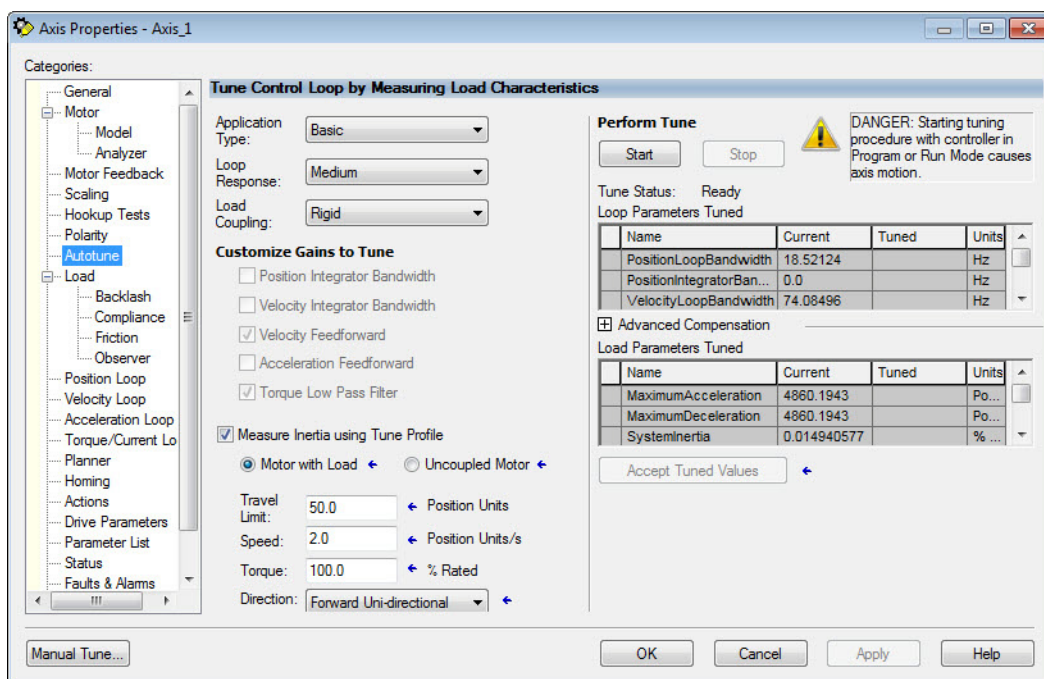

3. Type values for Travel Limit and Speed.


In this example, Travel Limit = 50.0 and Speed = 2.0. The actual value of programmed units depend on your application.

4. From the Direction pull-down menu, choose a setting appropriate for your application.

Forward Uni-directional is default.


5. Edit other fields as appropriate for your application.
6. Click Start.

The Logix Designer - Autotune dialog box appears. When the test completes, the Test State changes from Executing to Success.

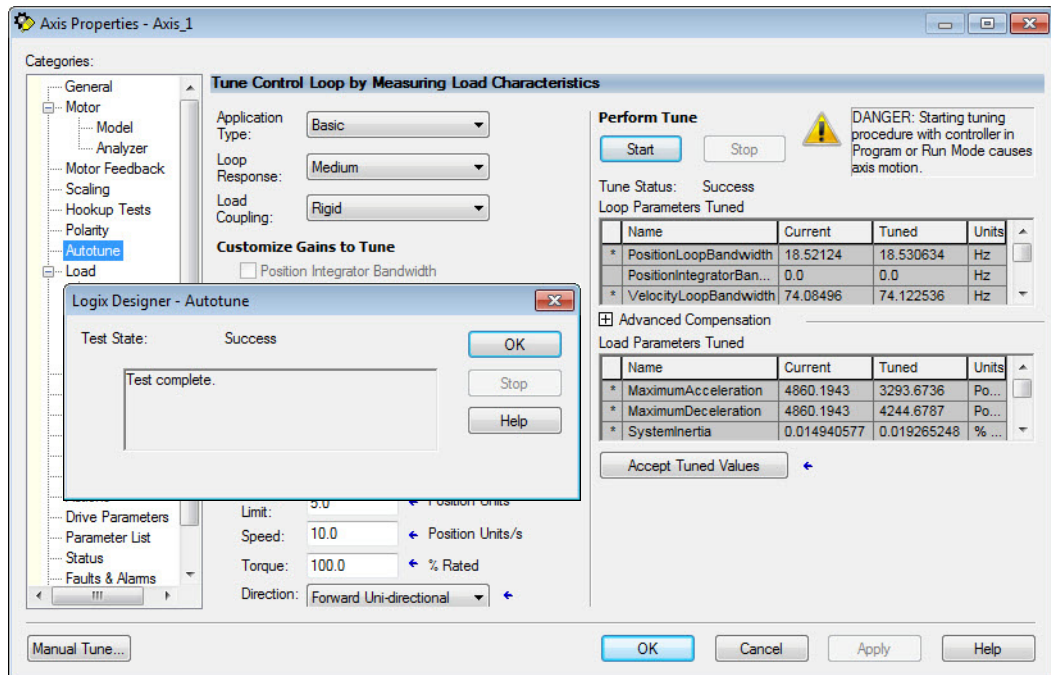

Tuned values populate the Loop and Load parameter tables. Actual bandwidth values (Hz) depend on your application and can require adjustment once motor and load are connected.

7. Click Accept Tuned Values.
8. Click OK to close the Logix Designer - Autotune dialog box.
9. Click OK to close the Axis Properties dialog box.
10. If the test fails, this dialog box appears.

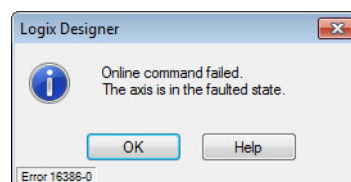

- a. Click OK.
- b. Make an adjustment to motor velocity.
- c. Refer to the controller user manual for more information.
- d. Return to [step 6](#) and run the test again.
11. Repeat [Test and Tune the Axes](#) for each axis.

Notes:

Troubleshoot the Kinetix 5700 Drive System

This chapter provides troubleshooting tables and related information for your Kinetix® 5700 drive system.

Topic	Page
Safety Precautions	207
Interpret Status Indicators	208
General Troubleshooting	218
Logix5000 Controller and Drive Module Behavior	220

Safety Precautions

Observe the following safety precautions when troubleshooting your Kinetix 5700 drive system.



ATTENTION: Capacitors on the DC bus can retain hazardous voltages after input power has been removed. Before working on the drive module, measure the DC bus voltage to verify it has reached a safe level or wait the full time interval as indicated in the warning on the front of the module. Failure to observe this precaution could result in severe bodily injury or loss of life.



ATTENTION: Do not attempt to defeat or override the module fault circuits. You must determine the cause of a fault and correct it before you attempt to operate the system. Failure to correct the fault could result in personal injury and/or damage to equipment as a result of uncontrolled machine operation.



ATTENTION: Provide an earth ground for test equipment (oscilloscope) used in troubleshooting. Failure to ground the test equipment could result in personal injury.

Interpret Status Indicators

Refer to these troubleshooting tables to identify faults, potential causes, and the appropriate actions to resolve the fault. If the fault persists after attempting to troubleshoot the system, please contact your Rockwell Automation sales representative for further assistance.

Display Interface

The LCD display provides fault messages and troubleshooting information by using the soft menu items and navigation buttons.



Under the Main Menu, select FAULT LOG by using the up/down arrows.

	Press to display the list of active fault codes.
	Press again to display the fault details (the problem in troubleshooting tables).
	Press to display the fault help (possible solutions in troubleshooting tables).

Refer to [Understand the Kinetix 5700 Display](#) on [page 136](#) for more information on navigating the LCD display menu.

Fault Codes

The fault code tables are designed to help you determine the source of the fault or exception. When a fault condition is detected, the drive module performs the appropriate fault action, the fault is displayed, and the fault is added to a persistent fault log (along with diagnostics data). The earlier faults have priority to be displayed.

The drive module removes the fault text from the display when a Fault Reset service is sent from the controller and the fault is no longer active. If a fault condition is still active following a Fault Reset service, the fault is again posted to the display and written to the fault log.

However, there can be a delay before the fault is posted again. In a Studio 5000 Logix Designer application, this delay results as the AxisFault tag on the drive axis being cleared until the fault is posted again. During this delay, the AxisState tag continues to indicate that the axis is faulted. Use the AxisState tag on the axis object and only to determine if an axis is faulted.

Although software overtravel fault codes do not exist, software overtravel detection for the AXIS_CIP_DRIVE axis type is determined in the Logix5000™ controller. For more information, see Integrated Motion on the EtherNet/IP™ Network Reference Manual, publication [MOTION-RM003](#).

The DC-bus power supply maintains a log of the last 25 faults. The single-axis and dual-axis inverters maintain a log of the last 128 faults. The fault log includes time stamps and is stored in persistent memory. However, the fault log cannot be cleared on the module.

Table 90 - Fault Code Summary

Fault Code Type ^{(1) (2)}	Description
FLT Sxx	Standard runtime axis exceptions. The exception can apply to an individual axis or to all axes.
FLT Mxx	Manufacturer-specific runtime axis exception. The exception can apply to an individual axis or to all axes.
INIT FLT Sxx	Exceptions that prevent normal operation and occur during the initialization process.
INIT FLT Mxx	
NODE FLTxx	Exceptions that can prevent normal operation of the drive module and apply to the entire module and affect all axes.
NODE ALARM xx	Exceptions that can prevent normal operation of the drive module, but do not result in any action other than reporting the alarm to the controller.
INHIBIT Sxx	Conditions that prevent normal operation and indicate the drive module is prevented from being enabled.
INHIBIT Mxx	
ALARM Sxx	An underlying exception condition that does not result in any action other than reporting the alarm to the controller.
ALARM Mxx	
SAFE FLTxx ⁽³⁾	Exception generated by a fault condition detected in the safety function.

(1) Sxx refers to Standard exceptions.

(2) Mxx refers to Manufacturer-specific exceptions.

(3) For troubleshooting SAFE FLT fault codes, refer to [Chapter 9](#) on [page 242](#) (hardwired safety) or [page 256](#) (integrated safety).

TIP Fault codes triggered by conditions that fall outside factory set limits are identified by FL at the end of the display message. For example, FLT S07 – MTR OVERLOAD FL.

Fault codes triggered by conditions that fall outside user set limits are identified by UL at the end of the display message. For example, FLT S08 – MTR OVERLOAD UL.

Table 91 - FLT Sxx Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT S02 – MTR COMMUTATION	Motor Commutation Fault	An illegal state transition of the motor hall-commutation feedback signals has been detected.	- Verify the motor hall feedback wiring is not open/shorted/missing - Use shielded cables, route feedback away from potential noise sources - Check system grounds, replace the motor	Inverters
FLT S03 – MTR OVERSPEED FL - 0	Motor Overspeed Factory Limit Fault	Motor speed has exceeded 125% of its maximum speed.	Check control loop tuning.	Inverters
FLT S03 – MTR OVERSPEED FL - 1		The output frequency has exceeded 590 Hz.	- Check control loop tuning - Reduce the velocity command	
FLT S04 – MTR OVERSPEED UL	Motor Overspeed User Limit Fault	Motor speed has exceeded motor overspeed user limit.	- Check control loop tuning - Increase the Motor Overspeed UL attribute value	Inverters
FLT S05 – MTR OVERTEMP FL nn	Motor Overtemperature Factory Limit Fault	Calculations based on the motor thermistor indicate that the motor factory temperature limit has been exceeded. The nn sub-code is defined as follows: 01: Motor Thermostat or Thermistor 02: Encoder Temperature Sensor	- Operate motor within continuous torque rating - Reduce motor ambient temperature - Add motor cooling Available only on Kinetix VP and MP-Series™ motors. Not supported on induction motors.	Inverters
FLT S07 – MTR OVERLOAD FL	Motor Thermal Overload Factory Limit Fault	The motor thermal model has exceeded its factory set thermal capacity limit.	Modify the command profile to reduce speed or increase time.	Inverters
FLT S08 – MTR OVERLOAD UL	Motor Thermal Overload User Limit Fault	The motor thermal model has exceeded the thermal capacity limit given by Motor Thermal Overload User Limit.	- Modify the command profile - Increase the Motor Thermal Overload UL attribute value	Inverters
FLT S09 – MTR PHASE LOSS	Motor Phase Loss	Torque Prove function detected motor current below a limit set by Torque Prove Current Limit.	Check motor connections.	Inverters

Table 91 - FLT Sxx Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT S10 – INV OVERCURRENT	Inverter Overcurrent Fault	Inverter current has exceeded the instantaneous current limit (determined by hardware).	- Check motor power cable for shorts - Verify motor windings are not shorted - Verify motor power wire gauge - Operate within the continuous power rating - Reduce acceleration times - Verify iTRAK power supply cable wiring	Inverters iTRAK PS
FLT S11 – INV OVERTEMP FL	Inverter Overtemperature Factory Limit Fault	The measured inverter temperature has exceeded the factory set temperature limit.	- Modify the command profile to reduce speed or increase time - Reduce drive ambient temperature - Verify airflow through drive is not obstructed	Inverters
FLT S13 – INV OVERLOAD FL	Inverter Thermal Overload Factory Limit Fault	The thermal capacity of the inverter has exceeded the factory set limit.	Modify the command profile to reduce speed or increase time.	Inverters
FLT S14 – INV OVERLOAD UL	Inverter Thermal Overload User Limit Fault	The thermal capacity of the inverter has exceeded the user set limit given by the inverter Thermal Overload User Limit.	- Modify the command profile to reduce speed or increase time - Increase the Inverter Thermal Overload UL attribute value	Inverters
FLT S15 – CONV OVERCURRENT ⁽¹⁾	Converter Overcurrent Fault	The measured converter current has exceeded the factory set current limit.	- Reduce the number of drives in the same bus group - Reduce number of capacitor modules - Verify iTRAK power supply requirements	DC-bus PS iTRAK PS
FLT S16 – GROUND CURRENT ⁽¹⁾	Ground Current Factory Limit Fault	The sensing circuitry in the power stage has detected excessive ground current.	- Check motor power wiring; check power cable for shorts - Replace motor if the fault persists - Check DC bus wiring if using a capacitor module	Single-axis inverter DC-bus PS
FLT S18 – CONV OVERTEMP FL	Converter OverTemp Factory Limit Fault	The measured converter temperature has exceeded the factory set temperature limit.	- Reduce the number of drives in the same bus group - Modify the command profile of inverters in the same bus group to reduce speed or increase time - Reduce drive ambient temperature - Verify airflow through drive is not obstructed - Verify iTRAK power supply requirements	DC-bus PS iTRAK PS
FLT S20 – CONV OVERLOAD FL ⁽¹⁾	Converter Thermal Overload Factory Limit Fault	The converter thermal model indicates that the temperature has exceeded the factory set capacity rating of 110%.	- Reduce the number of drives in the same bus group - Reduce duty-cycle of commanded motion - Verify iTRAK power supply requirements	DC-bus PS iTRAK PS
FLT S21 – CONV OVERLOAD UL	Converter Thermal Overload User Limit Fault	The converter thermal model indicates that the temperature has exceeded the limit given by the Converter Thermal Overload User Limit.	- Reduce the number of drives in the same bus group - Reduce duty-cycle of commanded motion - Increase the Converter Thermal Overload UL attribute value - Verify iTRAK power supply requirements	DC-bus PS iTRAK PS
FLT S22 – AC POWER LOSS	AC Power Loss Fault	All three AC input phases are detected as absent when any one of the inverters connected to a converter is in the enabled state.	Check AC input voltage on all phases	Inverters
FLT S23 – AC PHASE LOSS ⁽¹⁾	AC Single Phase Loss Fault	A single AC input phase was lost.	Check AC input voltage on all phases.	DC-bus PS
FLT S25 – CONV PRECHARGE FAILURE ⁽¹⁾	Precharge Failure Fault	The pre-charge circuit monitoring algorithm detected that the DC bus did not reach a factory set voltage level after charging for a period of time.	- Check AC input voltage on all phases - Check input power wiring - Replace power supply or drive module if fault persists - Verify iTRAK power supply cable wiring	DC-bus PS iTRAK PS
FLT S27 – BUS REG OVERTEMP FL ⁽¹⁾	Bus Regulator Overtemperature Factory Limit Fault	The digital input assigned to the shunt thermal switch OK is asserted LOW.	- Check the digital input wiring - Check the digital input assignments - Check the shunt power configuration in Logix Designer - Reduce regenerative energy dissipation of the application - Add a larger external shunt resistor or active brake module	Inverters DC-bus PS
FLT S29 – BUS REG OVERLOAD FL ⁽¹⁾	Bus Regulator Thermal Overload Factory Limit Fault	The shunt thermal model has exceeded its factory set thermal capacity limit.	- Modify the duty cycle of the application - Add external shunt for additional capacity - Add capacitor module	DC-bus PS
FLT S30 – BUS REG OVERLOAD UL	Bus Regulator Thermal Overload User Limit Fault	The shunt thermal model has exceeded the thermal capacity limit given by Bus Regulator Thermal Overload User Limit.	- Modify the duty cycle of the application - Add external shunt for additional capacity - Increase the Bus Regulator Thermal Overload UL attribute value - Add capacitor module	DC-bus PS
FLT S31 – BUS REG FAILURE	Bus Regulator Failure	The shunt circuit has detected that the shunt resistor is shorted.	- Check for shorts in the shunt connector - Unplug the shunt connector and measure the resistance of the shunt - Replace power supply if shunt resistor is shorted	DC-bus PS
FLT S32 – BUS CAPACITOR MODULE FAILURE	Bus Capacitor Module Failure	The digital input assigned to capacitor module OK is asserted LOW.	- Check the digital input wiring - Check the digital input assignments - Replace the capacitor module, if necessary	Inverters DC-bus PS

Table 91 - FLT Sxx Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT S33 – BUS UNDERVOLT FL	Bus Undervoltage Factory Limit Fault	DC Bus voltage level is below the factory set limit.	- Verify voltage level of the incoming AC - Monitor AC power source for glitches or line droop - Install UPS on AC input	Inverters iTRAK PS
FLT S34 – BUS UNDERVOLT UL	Bus Undervoltage User Limit Fault	DC Bus voltage level is below the user set limit as given by Bus Undervoltage User Limit. For iTRAK power supply, this refers to the output (IDC) power busses.	- Verify voltage level of the incoming AC - Monitor AC power source for glitches or line droop - Install UPS on AC input - Increase Bus Undervoltage UL attribute value - Verify iTRAK power supply cable wiring	Inverters iTRAK PS
FLT S35 – BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	DC Bus voltage level is above the factory set limit. For iTRAK power supply, this refers to the input or output iTRAK power busses.	- Change the deceleration or motion profile of some or all of the drives connected to the DC bus - Unplug the shunt connector and measure the resistance of the shunt - Add an external shunt resistor or an active brake module - Replace DC-bus power supply if shunt resistor is open - Verify iTRAK power supply cable wiring	Inverters DC-bus PS iTRAK PS
FLT S37 – BUS POWER LOSS ⁽²⁾	Bus Power Loss Fault	The DC-bus voltage level is below the bus power loss threshold for more than 50 ms.	- Verify voltage level of the incoming AC - Increase the Power Loss Threshold Attribute - Monitor AC power source for glitches or line droop - Install UPS on AC input	Inverters
FLT S38 – FUSE BLOWN nn	Bus Power Fuse Blown Fault	The internal DC-bus power fuse is blown. The nn sub-code is defined as follows: 00: Non user-replaceable fuse	- Return drive for repair if fault continues - Verify output power wiring (iTRAK power supply)	Inverters iTRAK PS
		The internal DC-bus power fuse is blown. The nn sub-code is defined as follows: 01: User replaceable fuse (iTRAK power supply only)	- Verify output power wiring - Replace fuse	
FLT S40 – BUS POWER SHARING FAULT	Bus Power Sharing Fault	A power supply or RPS sharing DC-bus power with this module (power supply or drive) has requested that this module stop consuming power from the DC-bus	- Check the fault condition on the DC-bus power supply - Install UPS on AC input	Inverters DC-bus PS
FLT S41 – MTR AQB STATE FL	Feedback Signal Noise FL	The number of illegal state transitions of the motor AQB encoder feedback signals has exceeded a factory limit.	- Verify the motor feedback wiring is not open/shorted/missing - Use shielded cables, route feedback away from potential noise sources - Check system grounds, replace motor/encoder	Inverters
FLT S43 – FDBK LOSS FL ⁽³⁾	Feedback Signal Loss FL	The detected voltage levels of the A/B channel signals from the feedback device are below the Feedback Signal Loss factory limit.	- Verify the motor feedback wiring is not open/shorted/missing - Use shielded cables, route feedback away from potential noise sources - Check system grounds, replace motor/encoder.	Inverters
FLT S44 – FDBK LOSS UL ⁽³⁾	Feedback Signal Loss UL	The associated fault/alarm sub-code indicates which of the supported feedback channels is reporting this fault/alarm.		Inverters
FLT S45 – FDBK COMM FL ⁽⁴⁾	Motor Feedback Data Loss Factory Limit Fault	The number of consecutive missed or corrupted serial data packets, or invalid position feedback values from the intelligent feedback device has exceeded a factory set limit.	- Check motor feedback cable and connector - Check motor power cable and feedback wire shields are secured correctly - Check motor frame is grounded correctly - Consult Possible Solutions for FLT S47	Inverters
FLT S46 – FDBK COMM UL ⁽⁴⁾	Motor Feedback Data Loss User Limit Fault	The number of consecutive missed or corrupted serial data packets from the intelligent feedback device has exceeded a user set limit.		Inverters

Table 91 - FLT Sxx Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT S47 – FDBK DEVICE FAILURE nn	Motor Feedback Device Failure Fault (DSL feedback)	The DSL feedback device has detected an internal error. The nn sub-code is defined as follows: 01: ACCELERATION OVERFLOW 04: TRACKING FILTER ERROR 05: VECTOR LENGTH ERROR 06: COUNTER ERROR 07: SYNCHRONIZATION ERROR 16: SINGLE TURN ERROR 17: MULTI TURN AMPLITUDE ERROR 18: MULTI TURN SYNC ERROR 19: MULTI TURN VECTOR LENGTH ERROR 35: STANDARD PARAMETER ERROR 36: INTERNAL COMMUNICATION ERROR1 37: INTERNAL COMMUNICATION ERROR2 38: INTERNAL SYSTEM ERROR 48: CRITICAL TEMPERATURE 49: CRITICAL LED CURRENT 50: CRITICAL SUPPLY VOLTAGE 51: CRITICAL SPEED 52: CRITICAL ACCELERATION 53: COUNTER OVERFLOW 54: INTERNAL MONITORING ERROR 66: INTERNAL RESOURCE ACCESS ERROR 88: POSITION OUT OF RANGE	• Check motor feedback cable for proper connectivity and continuity • Check motor phasing (U, V, W) and DSL feedback 2-pin wire connections at the drive • Review Electrical Noise Reduction on page 40 – See bonding painted panels on page 41 – See wire-braid bonding on page 42 • Cycle control power • Check feedback shield connection • Reduce shock and vibration to motor • Replace motor if fault continues	Inverters
	Motor Feedback Device Failure Fault (Hiperface feedback)	The Hiperface feedback device has detected an internal error. The nn sub-code is defined as follows: 01: INCORRECT ALIGNMENT DATA 02: INCORRECT INTERNAL ANGULAR OFFSET 03: DATA FIELD PARTITIONING TABLE DESTROYED 04: ANALOG LIMIT VALUES NOT AVAILABLE 05: INTERNAL I2C BUS INOPERATIVE 06: INTERNAL CHECKSUM ERROR 07: ENCODER RESET OCCURRED AS A RESULT OF PROGRAM MONITORING 08: COUNTER OVERFLOW 09: PARITY ERROR 10: CHECKSUM OF TRANSMITTED DATA IS INCORRECT 11: UNKNOWN COMMAND CODE 12: NUMBER OF TRANSMITTED DATA IS INCORRECT 13: TRANSMITTED COMMAND ARGUMENT IS NOT ALLOWED 14: THE SELECTED DATA FIELD MAY NOT BE WRITTEN TO 15: INCORRECT ACCESS CODE 16: SIZE OF SPECIFIED DATA FIELD CANNOT BE CHANGED 17: SPECIFIED WORD ADDRESS LIES OUTSIDE THE DATA FIELD 18: ACCESS TO NON-EXISTENT DATA FIELD 28: VALUE MONITORING OF THE ANALOG SIGNALS (process data) 29: TRANSMITTER CURRENT CRITICAL (contamination, transmitter breakage) 30: ENCODER TEMPERATURE CRITICAL 31: SPEED TOO HIGH, NO POSITION FORMATION POSSIBLE 32: SINGLETURN POSITION UNRELIABLE 33: MULTITURN POSITION ERROR 34: MULTITURN POSITION ERROR 35: MULTITURN POSITION ERROR	• Check motor feedback cable for proper connectivity and continuity • Check motor phasing (U, V, W) and Hiperface feedback 15-pin wire connections at the drive • Review Electrical Noise Reduction on page 40 – See bonding painted panels on page 41 – See wire-braid bonding on page 42 • Cycle control power • Check feedback shield connection • Reduce shock and vibration to motor • Replace motor if fault continues	Inverters
FLT S49 – BRAKE SLIP FLT	Brake Slip Exception	Motor displacement exceeded the brake slip tolerance while the mechanical brake was engaged.	Check motor brake.	Inverters
FLT S50 – POS HW OTRAVEL	Hardware Overtravel - Positive	The axis has moved beyond the digital input travel limit in the positive direction.	Check digital input and axis position.	Inverters
FLT S51 – NEG HW OTRAVEL	Hardware Overtravel - Negative	The axis has moved beyond the digital input travel limit in the negative direction.	Check digital input and axis position.	Inverters
FLT S54 – POSN ERROR ⁽⁵⁾	Excessive Position Error Fault	The position error of the position control loop has exceeded the value given by Position Error Tolerance for a time period given by Position Error Tolerance Time.	• Check position loop tuning • Increase the feedforward gain • Verify sizing of the drive and motor • Check motor power wiring • Increase Position Error Tolerance and/or Position Error Tolerance Time attribute values	Inverters

Table 91 - FLT Sxx Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT S55 – VEL ERROR ⁽⁵⁾	Excessive Velocity Error Fault	The velocity error of the velocity control loop has exceeded the value given by Velocity Error Tolerance for a time period given by Velocity Error Tolerance Time.	- Check velocity loop tuning - Reduce acceleration - Verify sizing of the drive and motor - Check motor power wiring - Increase Velocity Error Tolerance and/or Velocity Error Tolerance Time attribute values	Inverters
FLT S56 – OVERTORQUE LIMIT ⁽⁵⁾	Overtorque Limit Fault	Motor torque has risen above user defined maximum torque level given by Overtorque Limit for a time period given by Overtorque Limit Time.	- Verify Torque Trim value - Verify motion profile - Verify sizing of the drive and motor - Increase Overtorque Limit and/or Overtorque Limit Time attribute values	Inverters
FLT S57 – UNDERTORQUE LIMIT ⁽⁵⁾	Undertorque Limit Fault	Motor torque has dropped below user defined minimum torque level given by Undertorque Limit for a time period given by Undertorque Limit Time.	- Verify motion profile - Verify sizing of the drive and motor - Decrease Undertorque Limit and/or Undertorque Limit Time attribute values	Inverters
FLT S61 – ENABLE INPUT	Enable Input Deactivated	The hardware enable input was deactivated while the drive was enabled.	- Check drive enable input wiring - Un-assign Enable as a digital input source	Inverters DC-bus PS iTRAK PS

- (1) All modules in the same bus group assert a Bus Power Sharing Exception if they are enabled.
- (2) When the Power Loss Threshold Attribute (ID#628) is set to zero, the default value of 23.1% is used, which is equivalent to 150V DC allowable DC-bus voltage droop from nominal (650V DC). To calculate the percentage, use the following formula: $\text{Power Loss Threshold Attribute\%} = (650V\text{ DC} - \text{Allowable Voltage Drop}) / (650V\text{ DC}) * 100\%$.
- (3) Applies to all compatible feedback devices, except DSL encoder feedback.
- (4) Applies to DSL and Hiperface feedback devices.
- (5) Does not apply to induction motors in frequency control mode.

Table 92 - FLT Mxx Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
FLT M02 – MOTOR VOLTAGE	Motor Voltage Mismatch Fault	The configured voltage of the drive is greater than the motor rated voltage. For example, a 400V-class drive with a 200V-class motor.	Set the drive voltage to a lower value or replace motor with voltage rating that matches the drive.	Inverters
FLT M07 – FEEDBACK INCREMENTAL COUNT ERROR FAULT	Feedback Incremental Count Error	The periodic check of the incremental encoder position against the absolute encoder position or Hall edges (when available) indicates they are out of tolerance.	Verify the motor feedback wiring is correct and not open/shorted/missing, use shielded cables, route feedback away from potential noise sources, check system grounds, replace motor/encoder.	Inverters
FLT M12 – POWER CYCLE FL ⁽¹⁾	Converter Precharge Overload Factory Limit Fault	The thermal model for the precharge resistor detected that precharge capacity exceeded the factory limit.	- Reduce the amount of modules in the same bus group - Reduce the frequency of AC power cycling - Remove capacitor modules	DC-bus PS
FLT M26 – RUNTIME ERROR	Runtime Error	The drive firmware encountered an unrecoverable runtime error.	- Cycle control power - Reset the drive - Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS
FLT M28 – SAFETY COMM ⁽²⁾	Safety Module Communication Error	Communication with the safety hardware within the drive has failed.	- Cycle control power - Reset the drive - Return drive for repair if fault continues	Inverters

- (1) All modules in the same bus group assert a Bus Power Sharing Exception if they are enabled.
- (2) Applies to drives using integrated safety.

Table 93 - INIT FLT Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
INIT FLT M01 – ENCODER DATA	Smart Encoder Data Corruption	The data stored in the encoder has a checksum error.	- Cycle control power - Return motor for repair if fault continues	Inverters
INIT FLT M02 – MTR DATA RANGE nn	Motor Data Range Error	A motor data attribute stored in the encoder is out of range. The nn sub-code is defined as follows: 01: DATA_RANGE_REV 02: DATA_RANGE_CONT_CURRENT 03: DATA_RANGE_PEAK_CURRENT 04: DATA_RANGE_RATED_POWER 05: DATA_RANGE_OVERLOAD_LIMIT 06: DATA_RANGE_THERMAL_CAPACITANCE 07: DATA_RANGE_THERMAL_RESISTANCE 08: DATA_RANGE_MOTOR_RESISTANCE 09: DATA_RANGE_MOTOR_INDUCTANCE 10: DATA_RANGE_INERTIA 11: DATA_RANGE_RATED_SPEED 12: DATA_RANGE_MAX_SPEED 13: DATA_RANGE_RATED_TORQUE 14: DATA_RANGE_TORQUE_CONST 15: DATA_RANGE_BACK_EMF_CONST 16: DATA_RANGE_POLE_PITCH	- Cycle control power - Return motor for repair if fault continues	Inverters
INIT FLT M03 – MTR ENC STARTUP	Motor Feedback Communication Startup	Communication with the encoder could not be established.	- Cycle control power - Check motor feedback connector - Check motor power and feedback shield terminations on the drive - Return motor for repair if fault continues	Inverters
INIT FLT M06 – MOTOR ABSOLUTE STARTUP SPEED	Feedback Absolute Startup Speed	The absolute encoder was not able to accurately determine the position after powerup due to speed greater than 100 rpm.	Make sure the motor shaft is not moving during power-up	Inverters
INIT FLT M14 – SAFETY FIRMWARE	Invalid Safety Firmware	The loaded Safety firmware is not compatible with the drive firmware.	- Cycle control power - Update the drive firmware - Return drive for repair if fault continues	Inverters
INIT FLT M20 – UNKNOWN MODULE	Unknown Module Fault	The product code of the power board is invalid.	- Cycle control power - Reset the drive - Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS
INIT FLT M21 – FACTORY CONFIG	Factory Configuration Error	Factory configuration data is missing or invalid.	- Cycle control power - Reset the drive - Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS

Table 94 - INHIBIT Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
INHIBIT S01 – ENABLE INPUT	Axis Enable Input Fault - Start Inhibit	When Enable Input Checking is enabled, the drive displays Axis Enable Input start inhibit when it detects the enable input is inactive and while the axis is in Starting/Running/Testing/Hold sub-state of Stopped state.	- Confirm that the digital input assigned to the Enable is active - Check module enable input wiring - Check digital input assignments - Verify Gateway computer and Logix Designer application operation (applies to iTRAK power supply)	Inverters DC-bus PS iTRAK PS
INHIBIT S02 – MOTOR NOT CONFIG	Motor Not Configured	The associated motor has not been properly configured for use.	Verify motor configuration in the Logix Designer application.	Inverters
INHIBIT S03 – FEEDBACK NOT CONFIGURED	Feedback Not Configured	The feedback has not been properly configured for use.	Verify feedback configuration in the Logix Designer application.	Inverters
INHIBIT S04 – COMMUTATION NOT CONFIGURED	Commutation Not Configured - Standard Start Inhibit	Associated permanent magnet motor commutation has not been configured for use.	Verify that the proper motor feedback commutation alignment has been selected.	Inverters

Table 94 - INHIBIT Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
INHIBIT M02 – MOTOR FEEDBACK REQUIRED	Motor Feedback Required	Selected Motor Control mode cannot run without a valid feedback selection.	Verify that the proper motor feedback type has been selected.	Inverters
INHIBIT M04 – PROVING CONFIG	Torque Prove Configuration - Mfg Specific Start Inhibit	When Torque Proving configuration is enabled, control mode, feedback mode, motor feedback type, and motor option configuration must be set properly.	- Verify that the proper axis configuration has been selected. - Verify that sufficient torque prove current has been configured.	Inverters
INHIBIT M05 – SAFE TORQUE OFF	Start Inhibit – Safe Torque Off	The safety function has disabled the power structure.	- Check safety input wiring - Check state of safety devices	Inverters

Table 95 - NODE FLT Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
NODE FLT 01 – LATE CTRL UPDATE	Control Connection Update Fault	Several consecutive updates from the controller have been lost.	- Remove unnecessary network devices from the motion network - Change network topology so that fewer devices share common paths - Use high performance network equipment - Use shielded cables - Separate signal wiring from power wiring	Inverters DC-bus PS
NODE FLT 02 – PROC WATCHDOG nn	Processor Watchdog Fault	The processor on the power board or control board failed to update in a certain amount of time. The nn sub-codes 00...06 are internal and result in the same possible solution.	- Cycle control power - Update the drive firmware - Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS
NODE FLT 03 – HARDWARE 00	Hardware Fault - PwrIF	Communication with the power board could not be established.	- Cycle control power - Update the drive firmware - Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS
NODE FLT 03 – HARDWARE 02	Hardware Fault - DSL	Communication with the encoder could not be established.	- DSL feedback wiring is incorrect (check against wiring diagram) - DSL feedback wiring is shorted or open - DSL feedback cable is defective - Kinetix VP motor feedback device is defective - Cycle power - Return drive for repair if fault continues	Inverters
NODE FLT 03 – HARDWARE 03	DSL Internal Hardware Fault	A DSL hardware error internal to the drive was detected.	- Check DSL feedback device, wiring, and cable - Cycle power - Return drive for repair if fault continues	Inverters
NODE FLT 03 – HARDWARE 04	Hardware Fault - Board Compatibility	The control and power boards are incompatible.	Return drive for repair if fault continues	Inverters DC-bus PS iTRAK PS
NODE FLT 05 – CLOCK SKEW FLT	Clock Skew Fault	The controller time and the drive's system time are not the same.	- Cycle control power - Check controller and Ethernet switch operation	Inverters DC-bus PS
NODE FLT 06 – LOST CTRL CONN	Lost Controller Connection Fault	Communication with the controller has been lost.	- Check Ethernet connection - Check controller and Ethernet switch operation	Inverters DC-bus PS
NODE FLT 07 – CLOCK SYNC	Clock Sync Fault	Drive's local clock has lost synchronization with controller's clock and was not able to resynchronize within allotted time.	- Check Ethernet connection - Check controller and Ethernet switch operation	Inverters DC-bus PS
NODE FLT 09 – DUPLICATE IP ADDRESS	Duplicate IP Address Fault	Several consecutive updates from the controller have been lost.	Select an IP address not already in use on the network	Inverters DC-bus PS iTRAK PS

Table 96 - NODE ALARM Fault Codes

Exception Code on Display	Exception Text	Problem	Possible Solutions	Module
NODE ALARM 01 – LATE CTRL UPDATE	Control Connection Update Alarm	Updates from the controller have been late.	- Remove unnecessary network devices from the motion network - Change network topology so that fewer devices share common paths - Use high performance network equipment - Use shielded cables - Separate signal wiring from power wiring	Inverters DC-bus PS
NODE ALARM 03 – CLOCK JITTER	Clock Jitter Alarm	The sync variance has exceeded the sync threshold while the device is running in sync mode.	- Route the network cable away from potential noise sources - Reduce the number of devices on the EtherNet/IP network	Inverters DC-bus PS
NODE ALARM 04 – CLOCK SKEW ALARM	Clock Skew Alarm	The controller time and the drive's time are not the same.	- Check the Ethernet connection - Check controller and Ethernet switch operation	Inverters DC-bus PS
NODE ALARM 05 – CLOCK SYNC ALARM	Clock Sync Alarm	Drive's local clock has lost synchronization with controller's clock for a short time during synchronous operation.	- Check the Ethernet connection - Check controller and Ethernet switch operation	Inverters DC-bus PS

SAFE FLT Fault Codes

For troubleshooting SAFE FLT fault codes, refer to [Chapter 9](#) on [page 242](#) (hardwired safety) or [page 256](#) (integrated safety).

Kinetix 5700 Status Indicators

These status indicators apply to the Kinetix 5700 DC-bus power supply, the inverters, and the iTRAK power supply. The module status and network status indicators are just above the LCD status display.

IMPORTANT Status indicators are not reliable for safety functions. Use them only for general diagnostics during commissioning or troubleshooting. Do not attempt to use status indicators to determine operational status.

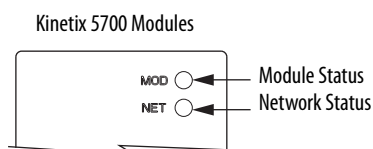


Table 97 - Module Status Indicator

Condition	Status
Steady Off	No power applied to the drive.
Steady Green	Drive is operational. No faults or failures.
Flashing Green	Standby (drive not configured).
Flashing Red	Major recoverable fault. The drive detected a recoverable fault, for example, an incorrect or inconsistent configuration.
Steady Red	Major fault. The drive detected a non-recoverable fault.
Flashing Green/Red	Self-test. The drive performs self-test during powerup. Once self-test is complete, Flashing Green/Red condition continues if drive is waiting for: - Safety configuration when in Integrated STO mode - Safety inputs when in Hardwired STO mode

Table 98 - Network Status Indicator


Condition	Status
Steady Off	No power applied to the drive or IP address is not configured.
Flashing Green	No Motion or Safety connection is established, but drive has obtained an IP address.
Steady Green	Motion or Safety connection is established and no timeout has occurred. Normal operation.
Flashing Red	Connection timeout. One or more of the connections, for which this drive is the target, has timed out.
Steady Red	Duplicate IP address. IP address specified is already in use.
Flashing Green/Red	Self-test. The drive performs self-test during powerup. Once self-test is complete, Flashing Green/Red condition continues if drive is processing a safety device ID proposal.

Table 99 - Ethernet Link Speed Status Indicator

Condition	Status
Steady Off	10 Mbit
Steady On	100 Mbit

Table 100 - Ethernet Link/Activity Status Indicator


Condition	Status
Steady Off	No link
Steady On	Link established
Blinking	Network activity

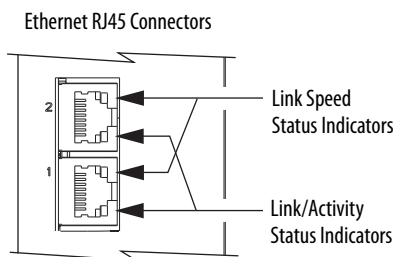

Kinetix 5700 Capacitor Module Status Indicators

The 2198-CAPMOD-2240 capacitor module status indicators and module status (MS) connector are on the front of the module. The module status connector is a relay output suitable for wiring to a DC-bus power supply digital input, assigned as Bus Capacitor OK, or the Logix5000 controller.

Table 101 - Status Indicators and Relay Output

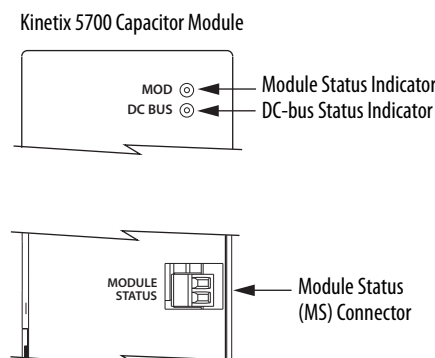

Status Indicators	Status	Relay ⁽¹⁾ Output	Description	Resolution
Module status	Steady off	Open	24V DC is not present	N/A
	Steady green	Closed	24V DC is present and internal fuse is closed	N/A
	Steady red	Open	24V DC is present and internal fuse is open	• Cycle control and bus power • Verify that AC input meets specifications • Replace the module if fault persists
DC-bus status	Steady off	Open	24V DC is not present or DC-bus measures < 50V DC	N/A
	Steady green	Closed	24V DC is present and DC-bus measures > 50V DC	N/A

(1) Wiring the module status relay output is optional.

General Troubleshooting

These conditions do not always result in a fault code, but can require troubleshooting to improve servo drive performance. See the iTRAK System User Manual, publication [2198T-UM001](#) for general iTRAK troubleshooting.

Table 102 - General Troubleshooting

Condition	Potential Cause	Possible Resolution
Axis or system is unstable.	The position feedback device is incorrect or open.	Check wiring.
	Unintentionally in Torque mode.	Check to see what primary operation mode was programmed.
	Motor tuning limits are set too high.	Run Tune in the Logix Designer application.
	Position loop gain or position controller accel/decel rate is improperly set.	Run Tune in the Logix Designer application.
	Improper grounding or shielding techniques are causing noise to be transmitted into the position feedback or velocity command lines, causing erratic axis movement.	Check wiring and ground.
	Motor Select limit is incorrectly set (servo motor is not matched to axis module).	• Check setups. • Run Tune in the Logix Designer application.
	Mechanical resonance.	• Notch filter or output filter can be required (refer to Axis Properties dialog box, Output tab in the Logix Designer application). • Enable adaptive tuning. See Adaptive Tuning on page 349 for more notch filter information.

Table 102 - General Troubleshooting (continued)

Condition	Potential Cause	Possible Resolution
You cannot obtain the motor acceleration/deceleration that you want.	Torque Limit limits are set too low.	Verify that torque limits are set properly.
	Incorrect motor selected in configuration.	Select the correct motor and run Tune in the Logix Designer application again.
	The system inertia is excessive.	- Check motor size versus application need. - Review servo system sizing.
	The system friction torque is excessive.	Check motor size versus application need.
	Available current is insufficient to supply the correct accel/decel rate.	- Check motor size versus application need. - Review servo system sizing.
	Acceleration limit is incorrect.	Verify limit settings and correct them, as necessary.
	Velocity Limit limits are incorrect.	Verify limit settings and correct them, as necessary.
	The motor is operating in the field-weakening range of operation.	Reduce the commanded acceleration or deceleration.
Motor does not respond to a command.	The axis cannot be enabled until stopping time has expired.	Disable the axis, wait the configured stopping time, and enable the axis.
	The motor wiring is open.	Check the wiring.
	The motor cable shield connection is improper.	- Check feedback connections. - Check cable shield connections.
	The motor has malfunctioned.	Repair or replace the motor.
	The coupling between motor and machine has broken (for example, the motor moves, but the load/machine does not).	Check and correct the mechanics.
	Primary operation mode is set incorrectly.	Check and properly set the limit.
	Velocity or torque limits are set incorrectly.	Check and properly set the limits.
	Brake connector not wired	Check brake wiring
Presence of noise on command or motor feedback signal wires.	Recommended grounding per installation instructions have not been followed.	- Verify grounding. - Route wire away from noise sources. - Refer to System Design for Control of Electrical Noise, publication GMC-RM001.
	Line frequency can be present.	- Verify grounding. - Route wire away from noise sources.
	Variable frequency can be velocity feedback ripple or a disturbance caused by gear teeth or ballscrew, and so forth. The frequency can be a multiple of the motor power transmission components or ballscrew speeds resulting in velocity disturbance.	- Decouple the motor for verification. - Check and improve mechanical performance, for example, the gearbox or ballscrew mechanism.
No rotation	The motor connections are loose or open.	Check motor wiring and connections.
	Foreign matter is lodged in the motor.	Remove foreign matter.
	The motor load is excessive.	Verify the servo system sizing.
	The bearings are worn.	Return the motor for repair.
	The motor brake is engaged (if supplied).	- Check brake wiring and function. - Return the motor for repair.
	The motor is not connect to the load.	Check coupling.
Motor overheating	The duty cycle is excessive.	Change the command profile to reduce accel/decel or increase time.
	The rotor is partially demagnetized causing excessive motor current.	Return the motor for repair.
Abnormal noise	Motor tuning limits are set too high.	Run Tune in the Logix Designer application.
	Loose parts are present in the motor.	- Remove the loose parts. - Return motor for repair. - Replace motor.
	Through bolts or coupling is loose.	Tighten bolts.
	The bearings are worn.	Return motor for repair.
	Mechanical resonance.	Notch filter can be required (refer to Axis Properties dialog box, Output tab in the Logix Designer application).
Erratic operation - Motor locks into position, runs without control or with reduced torque.	Motor power phases U and V, U and W, or V and W reversed.	Check and correct motor power wiring.

Logix5000 Controller and Drive Module Behavior

By using the Logix Designer application, you can configure how the Kinetix 5700 system responds when a module fault/exception occurs.

TIP The INIT FLT xxx faults are always generated after powerup, but before the drive is enabled, so the stopping behavior does not apply.

NODE ALARM xxx faults do not apply because they do not trigger stopping behavior.

For troubleshooting SAFE FLT fault codes, refer to [Chapter 9](#) on [page 242](#) (hardwired safety) or [page 256](#) (integrated safety).

The iTRAK power supply cannot be configured by using the Studio 5000 Logix Designer® application, but the pre-configured faults are shown on [page 223](#).

The DC-bus power supplies and servo drives support fault actions for Ignore, Alarm, Minor Fault, and Major Fault as defined in [Table 103](#). The drives also support three configurable stopping actions as defined in [Table 111](#).

Table 103 - Kinetix 5700 Module Exception Action Definitions

Exception Action	Definition
Ignore	The drive module completely ignores the exception condition. For some exceptions that are fundamental to the operation of the planner, Ignore is not an available option.
Alarm	The drive module sets the associated bit in the Motion Alarm Status word, but does not otherwise affect axis behavior. Like Ignore, if the exception is so fundamental to the drive, Alarm is not an available option. When an exception action is set to Alarm, the Alarm goes away by itself when the exceptional condition has cleared.
Minor Fault	The drive module latches the exception condition, but the drive does not execute any exception action.
Major Fault	The drive module latches the exception condition and executes the configured exception action.

You can configure exception behavior in the Logix Designer application from the Axis Properties dialog box, Actions category. These controller exception actions are mapped to the drive exception actions.

Table 104 - Logix Designer Exception Action Definitions

Exception Action	Definition
Ignore	The controller completely ignores the exception condition. For some exceptions that are fundamental to the operation of the planner, Ignore is not an available option.
Alarm	The controller sets the associated bit in the Motion Alarm Status word, but does not otherwise affect axis behavior. Like Ignore, if the exception is so fundamental to the drive, Alarm is not an available option. When an exception action is set to Alarm, the Alarm goes away by itself when the exceptional condition has cleared.
Fault Status Only	Like Alarm, Fault Status Only instructs the controller to set the associated bit in the Motion Fault Status word, but does not otherwise affect axis behavior. However, unlike Alarm an explicit Fault Reset is required to clear the fault once the exceptional condition has cleared. Like Ignore and Alarm, if the exception is so fundamental to the drive, Fault Status Only is not an available option.
Stop Planner	The controller sets the associated bit in the Motion Fault Status word and instructs the Motion Planner to perform a controlled stop of all planned motion at the configured maximum deceleration rate. An explicit Fault Reset is required to clear the fault once the exceptional condition has cleared. If the exception is so fundamental to the drive, Stop Planner is not an available option.
Stop Drive	When the exception occurs, the associated bit in the Fault Status word is set and the axis comes to a stop by using the stopping action defined by the drive for the particular exception that occurred. There is no controller based configuration to specify what the stopping action is, the stopping action is device dependent.
Shutdown	When the exception occurs, the drive brings the motor to a stop by using the stopping action defined by the drive (as in Stop Drive) and the power module is disabled. An explicit Shutdown Reset is required to restore the drive to operation.

DC-bus Power Supply Behavior

Stopping action for exception fault codes does not apply to the DC-bus power supply. The Stop Drive exception action for a DC-bus power supply means the power supply enters into a Major Fault state that opens the contactor-enable output, removing three-phase power from the Kinetix 5700 drive system. The Shutdown exception action exhibits the same behavior as Stop Drive, except the power supply enters into Shutdown as the final state and requires a Shutdown Reset to recover.

Fault actions are shown in [Table 105](#) and [Table 106](#).

Figure 98 - Logix Designer Axis Properties - Actions Category

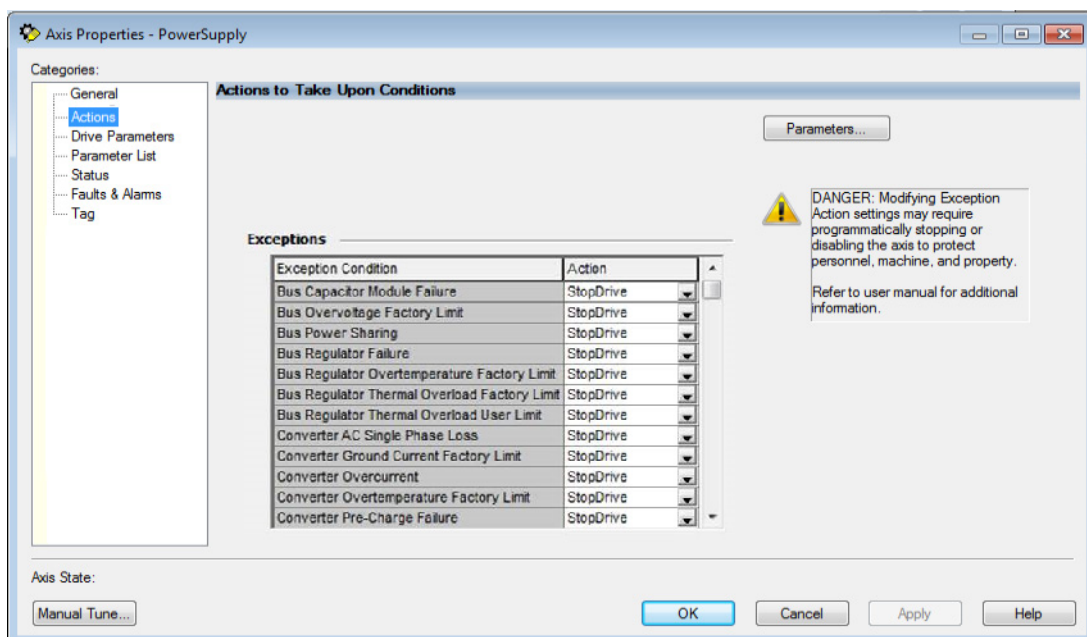


Table 105 - DC-bus Power Supply Behavior, FLT Sxx Fault Codes

Exception Fault Code	Exception Text	Module	Fault Action			
			Ignore	Alarm	Minor Fault	Major Fault
FLT S15 – CONV OVERCURRENT	Converter Overcurrent Fault	DC-bus PS				X
FLT S16 – GROUND CURRENT	Ground Current Factory Limit Fault	DC-bus PS				X
FLT S18 – CONV OVERTEMP FL	Converter OverTemp Factory Limit Fault	DC-bus PS				X
FLT S20 – CONV OVERLOAD FL	Converter Thermal OverLoad Factory Limit Fault	DC-bus PS				X
FLT S21 – CONV OVERLOAD UL	Converter Thermal Overload User Limit Fault	DC-bus PS	X	X	X	X
FLT S23 – AC PHASE LOSS	AC Single Phase Loss Fault	DC-bus PS				X
FLT S25 – PRECHARGE FAILURE	Precharge Failure Fault	DC-bus PS				X
FLT S27 – BUS REG OVERTEMP FL ⁽¹⁾	Bus Regulator Overtemperature Factory Limit Fault	DC-bus PS				X
FLT S29 – BUS REG OVERLOAD FL	Bus Regulator Thermal OverLoad Factory Limit Fault	DC-bus PS				X
FLT S30 – BUS REG OVERLOAD UL	Bus Regulator Thermal Overload User Limit Fault	DC-bus PS	X	X	X	X

Table 105 - DC-bus Power Supply Behavior, FLT Sxx Fault Codes (continued)

Exception Fault Code	Exception Text	Module	Fault Action			
			Ignore	Alarm	Minor Fault	Major Fault
FLT S31 – BUS REG FAILURE	Bus Regulator Failure	DC-bus PS				X
FLT S32 – BUS CAPACITOR MODULE FAILURE	Bus Capacitor Module Failure	DC-bus PS	X	X	X	X
FLT S35 – BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	DC-bus PS				X
FLT S40 – BUS POWER SHARING FAULT	Bus Power Sharing Fault	DC-bus PS				X
FLT S61 – ENABLE INPUT	Enable Input Deactivated	DC-bus PS				X

(1) Supported when shunt thermal switch is connected to the power supply digital input and configured in the Logix Designer application.

Table 106 - DC-bus Power Supply Behavior, FLT Mxx Fault Codes

Exception Fault Code	Exception Text	Module	Fault Action			
			Ignore	Alarm	Minor Fault	Major Fault
FLT M12 – POWER CYCLE FL ⁽¹⁾	Converter Precharge Overload Factory Limit Fault	DC-bus PS				X
FLT M26 – RUNTIME ERROR	Runtime Error	DC-bus PS				X

(1) Single-axis and dual-axis drives assert Bus Power Sharing Exception.

iTRAK Power Supply Behavior

The iTRAK power supply exceptions behavior, as defined in [Table 107](#), is shown in the following tables.

Table 107 - iTRAK Power Supply Exception Action Definitions

Exception Action	Definition
Hold	Continue regulating the iTRAK DC busses.
Disable	Actively discharge the iTRAK DC busses then disable the regulators.
Shutdown	Disable the regulators, iTRAK DC busses passively discharge.

Table 108 - iTRAK Power Supply Behavior, FLT Sxx Fault Codes

Exception Fault Code	Exception Text	Module	Fault Action				Stopping Action
			Ignore	Alarm	Minor Fault	Major Fault	
FLT S18 - CONV OVERTEMP FL	Converter OverTemp Factory Limit Fault	iTRAK PS				X	Shutdown
FLT S20 - CONV OVERLOAD FL	Converter Thermal Overload Factory Limit Fault	iTRAK PS				X	Shutdown
FLT S25 - PRECHARGE FAILURE	Precharge Failure Fault	iTRAK PS				X	Shutdown
FLT S33 - BUS UNDERVOLT FL	Bus Undervoltage Factory Limit Fault	iTRAK PS				X	Shutdown
FLT S35 - BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	iTRAK PS				X	Shutdown
FLT S38 - FUSE BLOWN	Bus Power Fuse Blown Fault	iTRAK PS				X	Shutdown
FLT S61 - ENABLE INPUT	Enable Input Deactivated	iTRAK PS				X	Disable

Table 109 - iTRAK Power Supply Behavior, FLT Mxx Fault Codes

Exception Fault Code	Exception Text	Module	Fault Action				Stopping Action
			Ignore	Alarm	Minor Fault	Major Fault	
FLT M26 - RUNTIME ERROR	Runtime Error	iTRAK PS				X	Shutdown

Table 110 - iTRAK Power Supply Behavior, NODE FLT Fault Codes

Exception Fault Code	Exception Text	Module	Fault Action				Stopping Action
			Ignore	Alarm	Minor Fault	Major Fault	
NODE FLT 02 - PROC	Processor Watchdog Fault	iTRAK PS				X	Shutdown
NODE FLT 03 - HARDWARE	Hardware Fault	iTRAK PS				X	Shutdown
NODE FLT 09 - DUPLICATE IP ADDRESS	Duplicate IP address Fault	iTRAK PS				X	Shutdown

Inverter Behavior

For the single-axis inverters and dual-axis inverters, only selected exceptions are configurable. In the drive behavior tables, the controlling attribute is given for programmable fault actions.

Table 111 - Configurable Stopping Actions

Stopping Action	Description	
Decel and hold	Most control	The best available stopping action is the one that maintains the most control over the motor. However, not all faults support every stopping action.
Decel and disable ⁽¹⁾	Less control	
Disable and coast	Least control	

(1) When configured for Frequency Control (induction motors only), select Decel and disable only when the Current Limiting feature is enabled. For more information on this feature, see [Current Limiting for Frequency Control](#) on page 320.

Figure 99 - Logix Designer Axis Properties - Actions Category

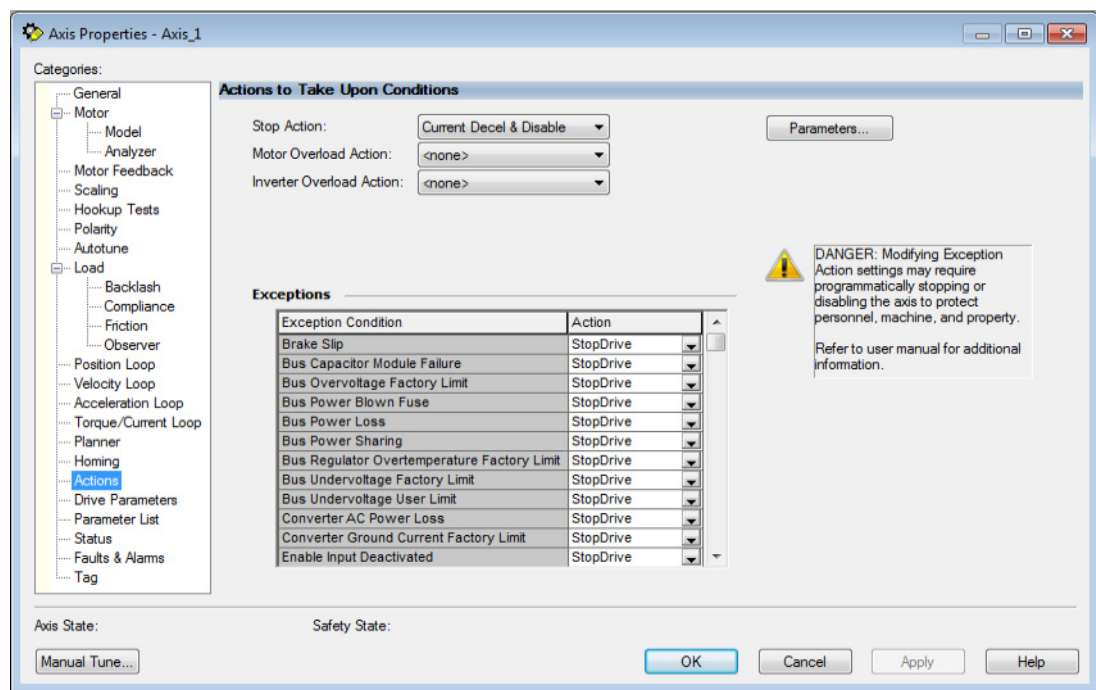


Table 112 - Drive Behavior, FLT Sxx Fault Codes

Exception Fault Code	Exception Text	Module	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
					Ignore	Alarm	Minor Fault	Major Fault	
FLT S02 – MTR COMMUTATION	Motor Commutation Fault	Inverters	X					X	Disable/Coast
FLT S03 – MTR OVERSPEED FL	Motor Overspeed Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S04 – MTR OVERSPEED UL	Motor Overspeed User Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S05 – MTR OVERTEMP FL	Motor Overtemperature Factory Limit Fault	Inverters	X					X	Disable/Coast
FLT S07 – MTR OVERLOAD FL	Motor Thermal Overload Factory Limit Fault	Inverters	X	X				X	Decel/Disable
FLT S08 – MTR OVERLOAD UL	Motor Thermal OverLoad User Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold

Table 112 - Drive Behavior, FLT Sxx Fault Codes (continued)

Exception Fault Code	Exception Text	Module	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
					Ignore	Alarm	Minor Fault	Major Fault	
FLT S09 – MTR PHASE LOSS	Motor Phase Loss	Inverters	X		X	X	X	X	Disable/Coast
FLT S10 – INV OVERCURRENT	Inverter Overcurrent Fault	Inverters	X	X				X	Disable/Coast
FLT S11 – INV OVERTEMP FL	Inverter Overtemperature Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S13 – INV OVERLOAD FL	Inverter Thermal Overload Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S14 – INV OVERLOAD UL	Inverter Thermal Overload User Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S16 – GROUND CURRENT	Ground Current Factory Limit Fault	Single-axis inverter	X	X				X	Disable/Coast
FLT S22 – AC POWER LOSS	AC Power Loss Fault	Inverters	X	X	X	X	X	X	Decel/Disable
FLT S27 – BUS REG OVERTEMP FL ⁽¹⁾	Bus Regulator Overtemperature Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S32 – BUS CAPACITOR MODULE FAILURE	Bus Capacitor Module Failure	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S33 – BUS UNDERVOLT FL	Bus Undervoltage Factory Limit Fault	Inverters	X	X				X	Decel/Disable
FLT S34 – BUS UNDERVOLT UL	Bus Undervoltage User Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S35 – BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S37 – BUS POWER LOSS	Bus Power Loss	Inverters	X	X	X	X	X	X	Decel/Disable
FLT S38 – FUSE BLOWN	Bus Power Fuse Blown Fault	Inverters	X	X				X	Disable/Coast
FLT S40 – BUS POWER SHARING FAULT	Bus Power Sharing Fault	Inverters	X	X	X	X	X	X	Decel/Disable
FLT S41 – MTR AQB STATE FL	Feedback Signal Noise FL	Inverters	X	X				X	Disable/Coast
FLT S43 – FDBK LOSS FL ^{(2) (4)}	Feedback Signal Loss FL	Inverters	X	X				X	Disable/Coast
FLT S44 – FDBK LOSS UL ^{(2) (4)}	Feedback Signal Loss UL	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S45 – FDBK COMM FL ^{(3) (4)}	Motor Feedback Data Loss Factory Limit Fault	Inverters	X	X				X	Disable/Coast
FLT S46 – FDBK COMM UL ^{(3) (4)}	Motor Feedback Data Loss User Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S47 – FDBK DEVICE FAILURE	Feedback Device Failure	Inverters	X	X				X	Disable/Coast
FLT S49 – BRAKE SLIP FLT	Brake Slip Exception	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S50 – POS HW OTRAVEL	Hardware Overtravel - Positive	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S51 – NEG HW OTRAVEL	Hardware Overtravel - Negative	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S54 – POSN ERROR ⁽⁴⁾	Excessive Position Error Fault	Inverters	X	X	X	X	X	X	Disable/Coast
FLT S55 – VEL ERROR ⁽⁴⁾	Excessive Velocity Error Fault	Inverters	X	X	X	X	X	X	Disable/Coast
FLT S56 – OVERTORQUE LIMIT ⁽⁴⁾	Overtorque Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S57 – UNDERTORQUE LIMIT ⁽⁴⁾	Undertorque Limit Fault	Inverters	X	X	X	X	X	X	Decel/Hold
FLT S61 – ENABLE INPUT	Enable Input Deactivated	Inverters	X	X	X	X	X	X	Disable/Coast

(1) Supported when shunt thermal switch is connected to the inverter digital input and configured in the Logix Designer application.

(2) Applies to all compatible feedback devices, except DSL encoder feedback.

(3) Applies to DSL and Hiperface feedback devices.

(4) Does not apply to induction motors in frequency control mode.

Table 113 - Drive Behavior, FLT Mxx Fault Codes

Exception Fault Code	Exception Text	Module	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
					Ignore	Alarm	Minor Fault	Major Fault	
FLT M02 – MOTOR VOLTAGE ⁽¹⁾	Motor Voltage Mismatch Fault	Inverters	X	X	X	X	X	X	Disable/Coast
FLT M07 – FEEDBACK INCREMENTAL COUNT ERROR FAULT	Feedback Incremental Count Error Fault	Inverters	X	X	X	X	X	X	Disable/Coast
FLT M26 – RUNTIME ERROR	Runtime Error	Inverters	X	X				X	Disable/Coast
FLT M28 – SAFETY COMM ⁽²⁾	Safety Module Communication Error	Inverters	X	X				X	Disable/Coast

(1) Does not apply to induction motors in frequency control mode.

(2) Applies to drives in Integrated STO mode.

NODE FLT Fault Codes

These NODE FLT fault codes apply to Kinetix 5700 DC-bus power supplies and inverter modules.

Table 114 - System Behavior, NODE FLT Fault Codes

Exception Fault Code	Exception Text	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
				Ignore	Alarm	Minor Fault	Major Fault	
NODE FLT 01 – LATE CTRL UPDATE	Control Connection Update Fault	X	X				X	Decel/Disable
NODE FLT 02 – PROC WATCHDOG	Processor Watchdog Fault	X	X				X	Disable/Coast
NODE FLT 03 – HARDWARE	Hardware Fault	X	X				X	Disable/Coast
NODE FLT 05 – CLOCK SKEW FLT	Clock Skew Fault	X	X				X	Decel/Disable
NODE FLT 06 – LOST CTRL CONN	Lost Controller Connection Fault	X	X				X	Decel/Disable
NODE FLT 07 – CLOCK SYNC	Clock Sync Fault	X	X				X	Decel/Disable
NODE FLT 09 – DUPLICATE IP ADDRESS	Duplicate IP Address Fault	X	X				X	Disable/Coast

Remove and Replace Drive Modules

This chapter provides remove and replace procedures for Kinetix® 5700 drive modules.

Topic	Page
Before You Begin	227
Remove and Replace Kinetix 5700 Drive Modules	228
Start and Configure the Drive Module	232



ATTENTION: This drive contains electrostatic discharge (ESD) sensitive parts and assemblies. You are required to follow static-control precautions when you install, test, service, or repair this assembly. If you do not follow ESD control procedures, components can be damaged. If you are not familiar with static control procedures, refer to Guarding Against Electrostatic Damage, publication [8000-4.5.2](#), or any other applicable ESD awareness handbook.

Before You Begin

When each drive module is installed, network settings are configured from the setup screens. Before removing the module, revisit the Network menu and make note of the static IP or DHCP settings. Refer to [Configure the Drive](#) on [page 144](#) to access those settings.

IMPORTANT If you intend to use the same Logix Designer application after replacing your drive module, the new module must be the same catalog number as the old module.

You also need these tools available before you begin removal and replacement procedures:

- Screwdrivers (to loosen/remove screws)
- Voltmeter (to make sure that no voltage exists on drive connectors)

Remove and Replace Kinetix 5700 Drive Modules

Follow these steps to remove and replace DC-bus power supplies, dual-axis inverters, single-axis inverters, iTRAK power supplies, or capacitor modules from the system panel.

Remove Power and All Connections

1. Verify that all control and input power has been removed from the system.



ATTENTION: To avoid shock hazard or personal injury, make sure that all power has been removed before proceeding. This system can have multiple sources of power. More than one disconnect switch can be required to de-energize the system.

2. Wait 5 minutes for the DC bus to discharge completely before proceeding.



SHOCK HAZARD: This product contains stored energy devices. To avoid the hazard of electrical shock, verify that voltage on capacitors has been discharged before attempting to service, repair, or remove this unit. Do not attempt the procedures in this document unless you are qualified to do so and are familiar with solid-state control equipment and the safety procedures in publication NFPA 70E.


3. Using a voltmeter, verify that the DC-bus voltage has discharged, and for iTRAK power supply, verify that the output bus (ICP and IDC connectors) has discharged.
4. Label and remove all wiring connectors from the module you are removing.

To identify each connector, refer to [Kinetix 5700 Connector Data](#) on [page 64](#).


TIP For 2198-Pxxx DC-bus power supplies, you do not need to remove the shunt (RC) connector, unless there is an external shunt wired to it.

5. Unplug the DC-bus links and end caps from on top of the DC-bus power supply or other drive module you are removing.
6. Unplug the shared-bus 24V input wiring connector, T-connectors, and bus-bars from on top of the drive module you are removing.


7. For 2198-Dxxx-ERS3 dual-axis inverters, unplug the motor feedback, motor power, and motor brake connectors and loosen the shield clamp until you can remove the cable from the clamp.

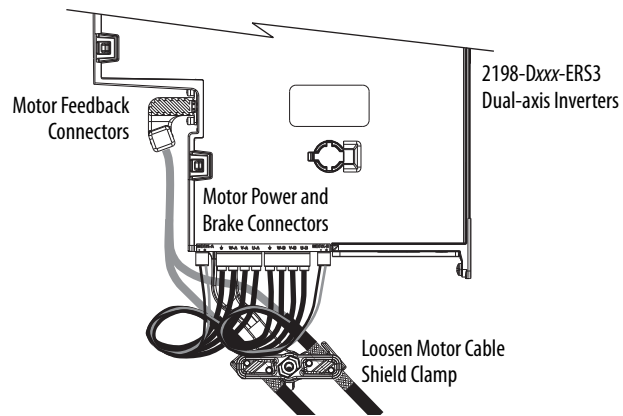


8. For 2198-Sxxx-ERS3 single-axis inverters, unplug the motor feedback and brake connectors, remove the tie wrap, and remove the motor power bracket.

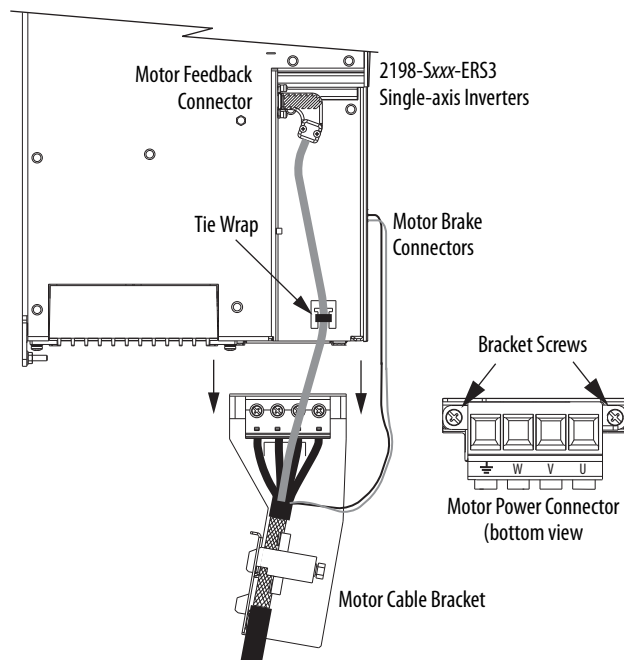

9. For 2198T-W25K-ER iTRAK power supplies, unplug the iPS ready connector, 24V control power output connectors and DC-bus output connectors and loosen the shield clamp until you can remove the cable from the clamp.

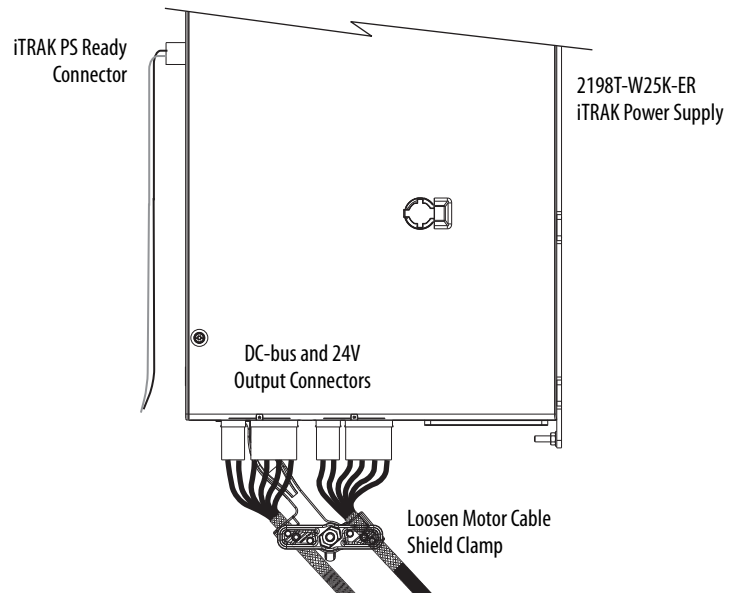

10. Remove the ground screw or lug nut and braided ground strap.

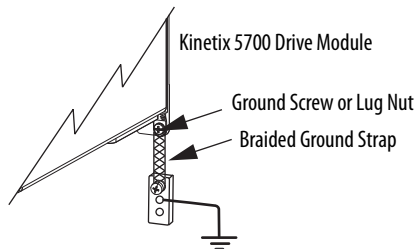

Remove the Drive Module

You can remove DC-bus power supplies, dual-axis inverters, single-axis inverters, iTRAK power supplies, or capacitor modules from the panel in any configuration by using the same procedure.


IMPORTANT This procedure applies to any Kinetix 5700 drive module in any configuration.

Follow these steps to remove Kinetix 5700 drive modules from the panel.

1. Loosen the top and bottom screws of the module you are removing.

Modules with 55 mm width have one top and bottom screw. Modules with 85 mm and 100 mm width have two top and bottom screws.

2. Grasp the top and bottom of the module with both hands and pull the module straight out and away from the panel, clearing the zero-stack mounting tabs and cutouts.

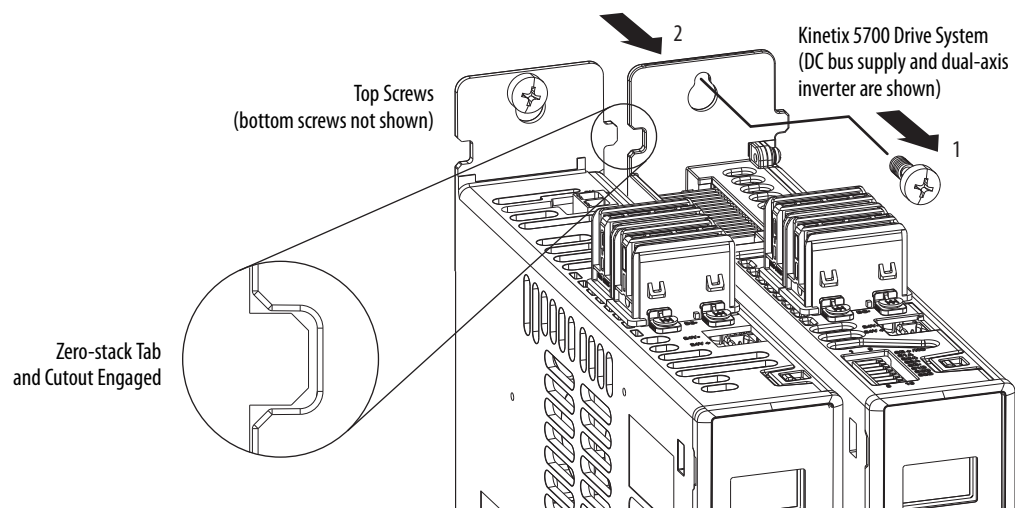

Replace the Drive Module

To replace the drive module, reverse the steps that are shown above or refer to [Mount Your Kinetix 5700 Drive Modules](#) on [page 61](#):

- Torque mounting, shield clamp, and ground screws to 2.0 N•m (17.7 lb•in) max.
- Reconnect the feedback connector kit and torque the mounting screws to 0.4 N•m (3.5 lb•in) max.

If replacing a drive module that was configured for Integrated STO mode, refer to [Understand Integrated Safety Drive Replacement](#) on [page 256](#).

Start and Configure the Drive Module

Follow these steps to configure the replacement module.

IMPORTANT If you intend to use the same Logix Designer application after replacing your drive module, the new module must be the same catalog number as the old module.

IMPORTANT If a servo drive was previously configured by a safety controller, reset the drive to the Out of Box state. Refer to [Out of Box State](#) on [page 236](#).

1. Reapply power to the drive system.

Refer to [Apply Power to the Kinetix 5700 Drive System](#) on [page 195](#) for the procedure.

2. Configure the network settings for the drive module.

For example, if your old module was configured as Static IP, you must set the IP address, gateway, and subnet mask in the new module identical to the old module.

Refer to [Configure the Drive](#) on [page 144](#) to access those settings.

3. Download the Logix Designer application to the controller.
4. Verify that the drive system is working properly.

Kinetix 5700 Safe Torque-off Function

Use this chapter to become familiar with the safe torque-off functionality built into Kinetix® 5700 dual-axis and single-axis inverters.

Topic	Page
Overview	233
Hardwired Safe Torque-off	242
Integrated Safe Torque-off	251

Overview

The 2198-Dxxx-ERS3 dual-axis inverters and 2198-Sxxx-ERS3 single-axis inverters are equipped for hardwired safe torque-off (STO) and integrated STO over the EtherNet/IP™ network. The hardwired and integrated STO function meet the requirements of Performance Level e (PLe) and safety category 3 (CAT 3) per EN ISO 13849-1 and SIL 3 per IEC EN 61508, EN 61800-5-2 and EN 62061.

Certification

The TÜV Rheinland group has approved the 2198-Dxxx-ERS3 and 2198-Sxxx-ERS3 inverters with hardwired and integrated safe torque-off for use in safety-related applications up to EN ISO 13849-1 Performance Level e (PLe) and Category 3, SIL 3 per IEC EN 61508, EN 61800-5-2, and EN 62061, in which removing the motion producing power is considered to be the safe state.

Refer to Appendix E on [page 261](#) for certification documents.

Important Safety Considerations

The system user is responsible for the following:

- Validation of any sensors or actuators connected to the system
- Completing a machine-level risk assessment
- Certification of the machine to the desired EN ISO 13849 performance level or EN 62061 SIL level
- Project management and proof testing in accordance with EN ISO 13849

Category 3 Requirements According to EN ISO 13849-1

Safety-related parts are designed with these attributes:

- A single fault in any of these parts does not lead to the loss of the safety function.
- A single fault is detected whenever reasonably practicable.
- Accumulation of undetected faults can lead to the loss of the safety function and a failure to remove motion producing power from the motor.

Stop Category Definition

Stop Category 0 as defined in EN 60204 or safe torque-off as defined by EN 61800-5-2 is achieved with immediate removal of motion producing power to the actuator.

IMPORTANT	In the event of a malfunction, the most likely stop category is Stop Category 0. When designing the machine application, timing and distance must be considered for a coast to stop. For more information regarding stop categories, refer to EN 60204-1.
------------------	---

Performance Level (PL) and Safety Integrity Level (SIL)

For safety-related control systems, Performance Level (PL), according to EN ISO 13849-1, and SIL levels, according to EN 61508 and EN 62061, include a rating of the systems ability to perform its safety functions. All of the safety-related components of the control system must be included in both a risk assessment and the determination of the achieved levels.

Refer to the EN ISO 13849-1, EN 61508, and EN 62061 standards for complete information on requirements for PL and SIL determination.

Probability of Dangerous Failure Per Hour

Safety-related systems are classified as operating in a High-demand/continuous mode. The SIL value for a High-demand/continuous mode safety-related system is directly related to the probability of a dangerous failure occurring per hour (PFH).

PFH calculation is based on the equations from EN 61508 and show worst-case values. [Table 115](#) provides data for a 20-year proof test interval and demonstrates the worst-case effect of various configuration changes on the data.

IMPORTANT	Determination of safety parameters is based on the assumptions that the system operates in High-demand mode and that the safety function is requested at least once every three months.
------------------	---

Table 115 - PFH for 20-year Proof Test Interval

Attribute	2198- <i>Sxxx</i> -ERS3 Single-axis Inverters	2198- <i>Dxxx</i> -ERS3 Dual-axis Inverters
PFH (1e-9)	1.57	1.64
Proof test (years)	20	20

Safe Torque-off Feature

The safe torque-off (STO) circuit, when used with suitable safety components, provides protection according to EN ISO 13849 (PL_e), Category 3 or according to IEC EN 61508, EN 61800-5-2, and EN 62061 (SIL CL3). All components in the system must be chosen and applied correctly to achieve the desired level of operator safeguarding.

The 2198-*xxxx*-ERS3 STO circuit is designed to turn off all of the output-power transistors when the STO function is requested. You can use the 2198-*xxxx*-ERS3 STO circuit in combination with other safety devices to achieve the Category 0 Stop as described in [Stop Category Definition](#) on [page 234](#), and protection-against-restart as specified in IEC 60204-1.



ATTENTION: The safe torque-off (STO) feature is suitable only for performing mechanical work on the drive system or affected area of a machine. It does not provide electrical safety.



SHOCK HAZARD: In Safe Torque-off mode, hazardous voltages can still be present at the drive. To avoid an electric shock hazard, disconnect power to the system and verify that the voltage is zero before performing any work on the drive.



ATTENTION: Personnel responsible for the application of safety-related programmable electronic systems (PES) shall be aware of the safety requirements in the application of the system and shall be trained in using the system.

Out of Box State

Kinetix 5700 servo drives are capable of safe torque-off (STO) functionality in Hardwired STO mode or Integrated STO mode. Out of the box, the Kinetix 5700 servo drives are in Hardwired STO mode, which means they are ready for hardwired connections to the safety (STO) connector. To bypass the hardwired safety function, jumper wires must be installed in the STO connector.

IMPORTANT Out of the box, Kinetix 5700 servo drives are in Hardwired STO mode.

IMPORTANT To bypass the STO feature while commissioning or testing the drive, the drive must be configured for Hardwired STO mode. Refer to [Safe Torque-off Feature Bypass](#) on [page 248](#) for a wiring example.

Out of the box, you can use Kinetix 5700 servo drives in Integrated STO mode only after a Motion and Safety or Safety-only connection has been established at least once in the Logix Designer application.

How to Recognize Hardwired STO Mode

You can read the safety control state from the axis tag AxisSafetyState, or by using an MSG command in the Logix Designer application to read the Safety Supervisor status.

In Hardwired STO mode, if STO inputs are OFF then Safety Supervisor state is Not Configured (8) and if STO inputs are ON then Safety Supervisor state is Not Configured, torque permitted (51).

Table 116 - Safety Supervisor States

Value	Safety Supervisor State	Definition	Safety Mode
2	Configured (no safety connection)	No active connections	Integrated
4	Running	Normal running state	Integrated
7	Configuring	Transition state	Integrated
8	Not Configured	Hardwired STO mode with torque disabled	Hardwired (out of the box)
51	Not Configured (torque permitted)	Hardwired STO mode with torque permitted	Hardwired (out of the box)
52	Running (torque permitted)	STO bypass state	Integrated


Restore the Hardwired STO Mode by Using the Logix Designer Application

After the integrated safety connection configuration is applied to the Kinetix 5700 servo drive at least once, you can restore the drive to the Hardwired STO mode by using the Logix Designer application.

IMPORTANT Only authorized personnel should attempt Reset Ownership. The safety connection must be inhibited before the reset is attempted. If any active connection is detected, the safety reset is rejected and Reset Failed appears on the display.


Follow these steps to restore your Kinetix 5700 servo drive to the Hardwired STO mode.

1. Right-click the Kinetix 5700 servo drive you just created and choose Properties.

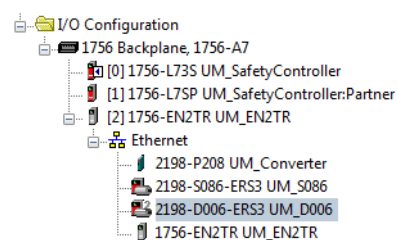


2. Click the Connection tab.

The Connection tab appears.

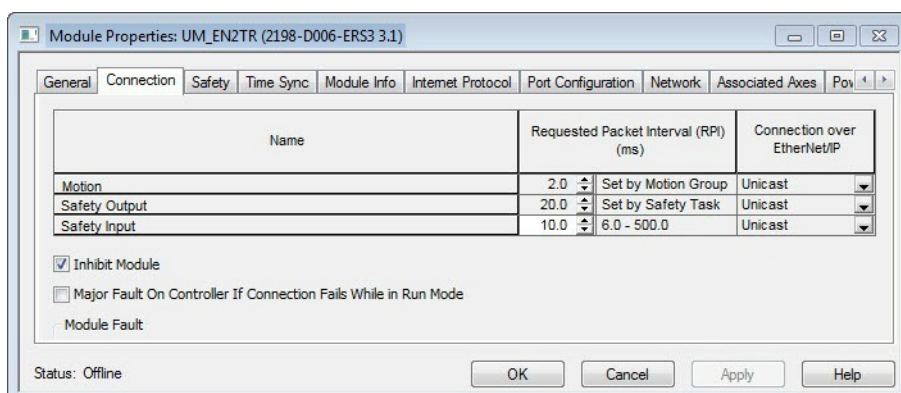

3. Check Inhibit Module and click Apply.
4. Click the Safety tab.

The Safety tab appears.

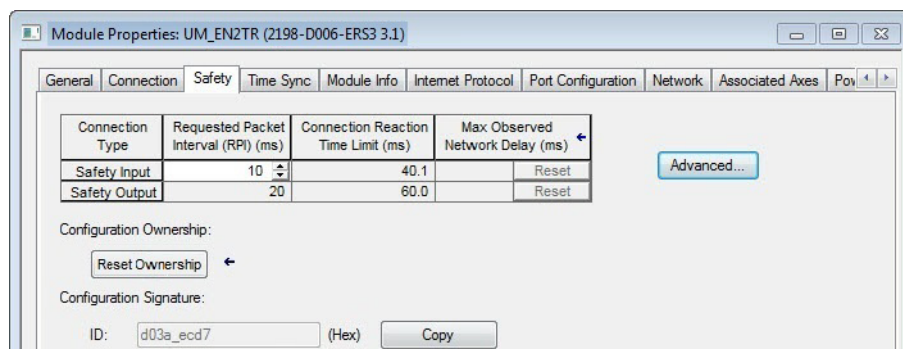

5. In the Configuration Ownership field, click Reset Ownership.

The drive reverts back to Hardwired STO mode.

Restore Hardwired STO mode by Using the Drive Display

After the integrated safety connection configuration is applied to the Kinetix 5700 servo drive at least once, you can restore the drive to Hardwired STO mode by using the drive display and navigation buttons.

IMPORTANT Only authorized personnel should attempt Reset Ownership.

The safety connection must be inhibited before the reset is attempted. If any active connection is detected, the safety reset is rejected and Reset Failed appears on the display.

Follow these steps to restore your Kinetix 5700 drive to the Hardwired STO mode.

1. Disable any Motion and Safety connections configured in the Logix Designer application.
You can do this in Module Properties or by unplugging the Ethernet cable.
2. From the Home screen on the drive display, press the settings button.
3. From the SETTINGS menu, scroll down by using the arrows and select SAFETY.
4. Press to request a Reset Ownership.
Are You Sure? appears on the display.
5. Press to acknowledge and begin the reset ownership.

If a reset ownership is requested, but not acknowledged within 30 seconds, the display automatically reverts back to the Home screen and the drive does not complete the reset ownership.

If a reset ownership is requested and acknowledged within 30 seconds, the drive reverts back to Hardwired STO mode.

Safe Torque-off Status

This section describes the safety related status data that is available to the motion controller.

IMPORTANT The status data described in this section is STANDARD data (not SAFETY data) and cannot be used as part of a safety function.

When a Kinetix 5700 add on profile (AOP) is added to a Logix Designer application I/O tree, axis tags are added to the controller tags.

This table lists the safety related STANDARD tags that are added when a new AXIS_CIP_DRIVE axis is defined.

Table 117 - Safety Related Axis Tags

Logix Designer Tag Name	Attribute [bit]	Type	Description
AxisFaults	34	DINT	
GuardFaultStatus	[5]	BOOL	STO fault - Hardwired
SafetyFaultStatus	[8]	BOOL	STO fault - Integrated
ModuleFaults	163	DINT	
GuardStatus	980	DINT	
GuardOKStatus	[0]	BOOL	Not STO fault - Hardwired
GuardGateDriveOutputStatus	[2]	BOOL	Torque allowed - Hardwired
GuardStopInputStatus	[3]	BOOL	Safety inputs active - Hardwired
GuardStopRequestStatus	[4]	BOOL	Safety input requesting STO - Hardwired
GuardFault	981	DINT	
GuardStopInputFault	[9]	BOOL	STO fault - Hardwired
GuardGateDriveFault	[2]	BOOL	Internal STO circuit fault - Hardwired
CIPAxisFaultsRA	903	DINT	
SafetyModuleCommunicationErrorFault	[28]	BOOL	Loss of communication to safety control
CIPAxisAlarmsRA	904	DINT	
SafetyModuleCommunicationErrorAlarm	[28]	BOOL	Loss of communication to safety control
CIPInitializationFaultsRA	910	DINT	
InvalidSafetyFirmwareFault	[14]	BOOL	Invalid safety control firmware
CIPStartInhibits	676	DINT	
SafeTorqueOffActiveInhibit	[5]	BOOL	Torque disabled - Integrated
CIPStartInhibitsRA	912	DINT	
SafeTorqueOffInhibit	[5]	BOOL	Torque disabled - Hardwired
AxisSafetyState	760	DINT	Safety supervisor state
AxisSafetyStatus ⁽¹⁾	761	DINT	
SafetyFaultStatus	[0]	BOOL	Status of SI.SafetyFault
SafetyResetRequestStatus	[1]	BOOL	Status of SO.ResetRequest
SafetyResetRequiredStatus	[2]	BOOL	Status of SI.ResetRequired
SafeTorqueOffActiveStatus	[3]	BOOL	Status of SO.SafeTorqueOff

Table 117 - Safety Related Axis Tags (continued)

Logix Designer Tag Name	Attribute [bit]	Type	Description
SafeTorqueOffDisableStatus	[4]	BOOL	Status of SI.TorqueDisabled
SafetyOutputConnectionClosed	[30]	BOOL	1 if all output connections are closed
SafetyOutputConnectionIdleStatus	[31]	BOOL	1 if safety controller is in program mode
AxisSafetyFaults	763	DINT	
SafetyCoreFault	[1]	BOOL	Loss of communications to safety control
SafetyTorqueOffFault	[3]	BOOL	Status of SI.SafetyFault

(1) Bits not shown are always zero.

Explicit Messages

You can use explicit messages to obtain additional diagnostic information from the safety controller by using an MSG instruction.

Safety Supervisor State

The safety supervisor state provides information on the state of the integrated safety connection and the mode of operation. There is only one safety supervisor object per drive module. Therefore, for dual-axis inverters, the safety supervisor is the same on both axes.

Table 118 - Safety Supervisor State: MSG

Parameter	Value	Description
Service Code	0x0E	Get attribute single
Class	0x39	Safety supervisor
Instance	1	
Attribute	0x0B	Device status
Data Type	SINT	Short integer

Table 119 - Safety Supervisor States

Value	Safety Supervisor State	Definition	Safety Mode
2	Configured (no safety connection)	No active connections	Integrated
4	Running	Normal running state	Integrated
7	Configuring	Transition state	Integrated
8	Not Configured	Hardwired STO mode with torque disabled	Hardwired (out of the box)
51	Not Configured (torque permitted)	Hardwired STO mode with torque permitted	Hardwired (out of the box)
52	Running (torque permitted)	STO bypass state	Integrated

Safe Torque-off Mode

You can use the attribute STO Mode to check if the Kinetix 5700 inverter is in STO Bypass mode.

Table 120 - Safe Torque-off Mode: MSG

Parameter	Value	Description
Service Code	0x0E	Get attribute single
Class	0x5A	Safety stop functions
Instance	1 or 2	Inverter axis number
Attribute	0x104	STO mode
Data Type	SINT	Short integer

Table 121 - Safe Torque-off Mode: Values

Value	Definition
1	Normal operation
2	STO bypass mode

Safe Torque-off Faults

When a safety fault is indicated in any of the following tags:

- SI.SafetyFault
- Axis.SafetyFaultStatus
- Axis.SafetyTorqueOffFault

The cause of the fault can be read using an explicit message.

Table 122 - Safe Torque-off Fault Type: MSG

Parameter	Value	Description
Service Code	0x0E	Get attribute single
Class	0x5A	Safety stop functions
Instance	1 or 2	Inverter axis number
Attribute	0x108	STO fault type
Data Type	SINT	Short integer

Table 123 - Safe Torque-off Fault Type: Values

Value	Definition
1	No Fault
3	Circuit Error
104	Hardwired input in Network mode

Hardwired Safe Torque-off

This section introduces you to the Kinetix 5700 hardwired safe torque-off (STO) feature that meets the requirements of Performance Level e (PLe) and safety category 3 (CAT 3) per EN ISO 13849-1 and SIL 3 per IEC EN 61508, EN 61800-5-2 and EN 62061.

The 2198-Dxxx-ERS3 and 2198-Sxxx-ERS3 inverters use the STO connector for wiring external safety devices and cascading hardwired safety connections from drive-to-drive.

Compatible Controllers

A ControlLogix® 5570, ControlLogix 5580, CompactLogix™ 5370 or CompactLogix 5380 controller is required for hardwired safety control of the Kinetix 5700 safe torque-off function.

The Studio 5000 Logix Designer® application, version 26.00 or later, provides support for programming, commissioning, and maintaining these CompactLogix and ControlLogix controllers with Kinetix 5700 drive systems.

Description of Operation

The safe torque-off feature provides a method, with sufficiently low probability of failure, to force the power-transistor control signals to a disabled state. When disabled, or any time power is removed from the safety enable inputs, all of the drive output-power transistors are released from the ON-state. This results in a condition where the drive performs a Category 0 Stop (refer to [Stop Category Definition](#) on [page 234](#)). Disabling the power transistor output does not provide physical isolation of the electrical output that is required for some applications.

For hardwired control of the safe torque-off (STO) function:

- The STO function needs to be in Hardwired STO mode
- The appropriate wiring must be connected to the Safety (STO) connector plug

Refer to [Hardwired Safe Torque-off Electrical Specifications](#) on [page 250](#) for more information on the safety inputs.


Under normal operation, the safe torque-off inputs are energized. If either of the safety enable inputs are de-energized, then all of the output power transistors turn off. The safe torque-off response time is less than 12 ms.



ATTENTION: Permanent magnet motors can, in the event of two simultaneous faults in the IGBT circuit, result in a rotation of up to 180 electrical degrees.



ATTENTION: If any of the safety enable inputs de-energize, the Start Inhibit field indicates the SafeTorqueOffInhibit and GuardStopRequestStatus bits of the AxisGuardStatus tag are set to 1. Both inputs must be de-energized within 1 second and re-energized within 1 second to avoid GuardStopInputFault conditions.

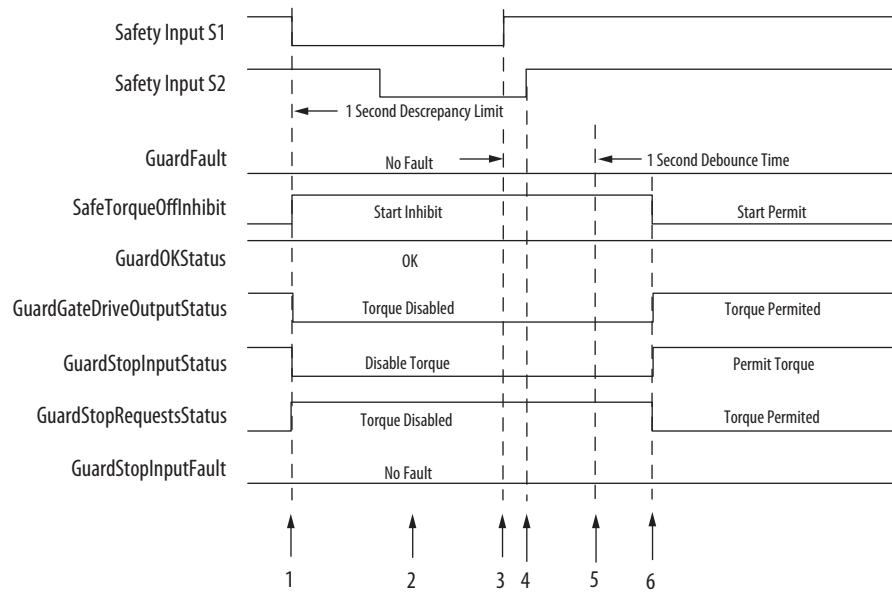Figure 100 - System Operation when Inputs are Meeting Timing Requirements

Event	Description
1	At least one input is switched-off. The GuardStopRequestStatus bit is set to 1.
2	Second input is switched- off within 1 second. This event must always occur within 1 second to prevent a GuardStopInputFault condition.
3	First input is switched-on.
4	Second input is switched-on within 1 second of event 3.
5	Both inputs are in the ON state simultaneously within 1 second. As a result, GuardStopInputFault is not posted.
6	The GuardStopRequestStatus bit sets back to 0 if event 4 occurs within a 100 ms interval after event 3. If event 4 is outside of the 100 ms interval, but within the a 1 second interval after event 3, then the GuardStop RequestStatus bit sets back to 0 after the 1 second interval following event 3 (not immediately following event 4).

Troubleshoot the Safe Torque-off Function


Table 124 - Kinetix 5700 Hardwired STO Troubleshooting

Exception Code on Drive Display	Fault Message Logix Designer	Problem	Possible Solutions
SAFE FLT 09 - SS IN	GuardStopInputFault	Safe torque-off function mismatch. System does not allow motion. Safe torque-off mismatch is detected when safety inputs are in a different state for more than 1.0 second.	- Verify safety wiring and connections: - Wire terminations at safe torque-off (STO) connector - Cable/header not seated correctly +24V power - Check state of safety inputs. - Reset error and run proof test. - If error persists, return the drive to Rockwell Automation.
SAFE FLT S01- Safety Core Internal	SafetyCoreFault	Drive safety diagnostic detected internal STO design failure.	- Cycle control power - Return drive for repair if fault continues
SAFE FLT S03- Gate Drive	GuardGateDriveFault ⁽¹⁾	Drive safety diagnostic detected internal STO design failure.	- Cycle control power - Execute STO function - Return drive for repair if fault continues

(1) Displayed in the Quick View Pane as Safety Fault.


Figure 101 illustrates when the safe torque-off mismatch is detected and GuardStopInputFault is posted.

Figure 101 - System Operation when Safety Enable Inputs Mismatch Occurs

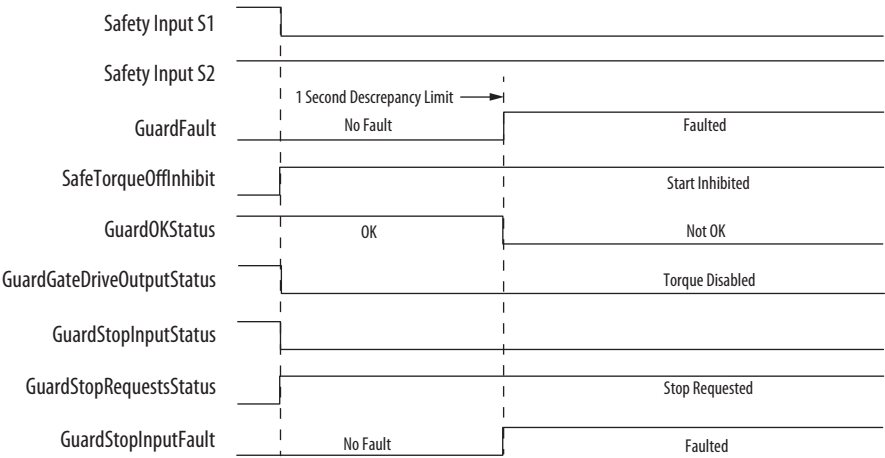

When one safety input is turned off, the second input must also be turned off, otherwise a fault is asserted (see Figure 102). The fault is asserted even if the first safety input is turned on again, without the second input transitioning to the ON state.

Figure 102 - System Operation when Safety Enable Inputs Mismatch Momentarily

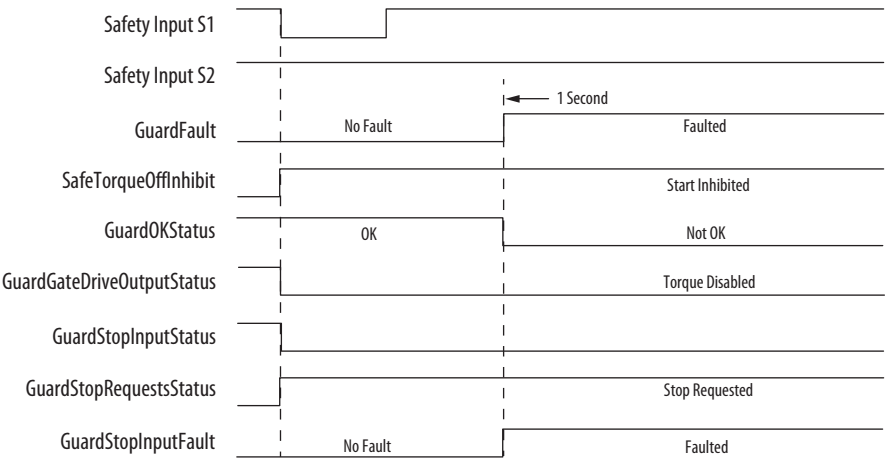

ATTENTION: The safe torque-off fault is detected upon demand of the safe torque-off function. After troubleshooting the STO function or performing maintenance that might affect the STO function, the STO function must be executed to verify correct operation.

IMPORTANT The GuardStopInputFault can be reset only if both inputs are in the OFF-state for more than 1 second. After the fault reset requirement is satisfied, an MAFR command in the Logix Designer application must be issued to reset the GuardStopInputFault.

Safe Torque-off Connector Data

Two rows of eight pins are provided for making drive-to-drive connections. The dual-axis inverters have pins designated for axis A and axis B. The single-axis inverters do not use STO-6, -7, -8 and STO-14, -15, -16.

Figure 103 - Pin Orientation for 16-pin Safe Torque-off (STO) Connector

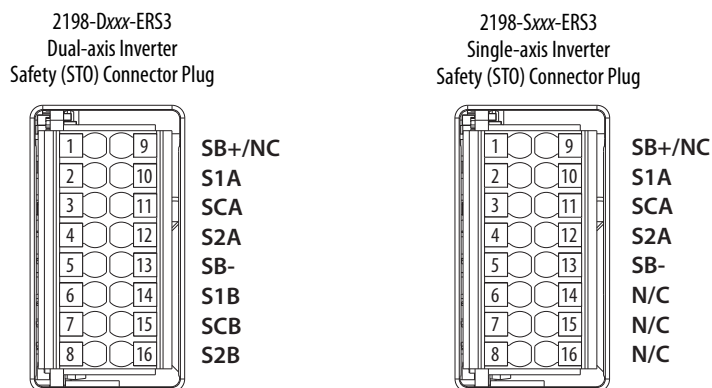


Table 125 - Safe Torque-off Connector Pinouts

STO Pin		Description 2198-Dxxx-ERS3	Description 2198-Sxxx-ERS3	Signal
1	9	Safety bypass plus signal. Connect to both safety inputs to disable safe torque-off function.		SB+
2	10	Safe stop input channel 1, axis A.		S1A
3	11	Safe stop input common, axis A.		SCA
4	12	Safe stop input channel 2, axis A.		S2A
5	13	Safety bypass minus signal. Connect to safety common to disable safe torque-off function.		SB-
6	14	Safe stop input channel 1, axis B.	N/C	S1B
7	15	Safe stop input common, axis B.	N/C	SCB
8	16	Safe stop input channel 2, axis B.	N/C	S2B

IMPORTANT STO-3 and STO-7 is common for the digital inputs, the safety inputs, and the encoder power supply (optional).


Wire the Safe Torque-off Circuit

This section provides guidelines for wiring safe torque-off connections to your Kinetix 5700 drive.

The right side of the safety connector plug requires an off-center push when inserting it into the STO connector. This applies to 2198-Sxxx-ERS3 single-axis and 2198-Dxxx-ERS3 dual-axis inverters.

IMPORTANT An off-center push is required to engage the locking features on the bottom of the safety connector plugs and seat properly with the drive (STO) connectors. Failure to do this can result in the connector plug pulling out of the drive connector during normal operation.

Figure 104 - Insert the Safety Connector Plug

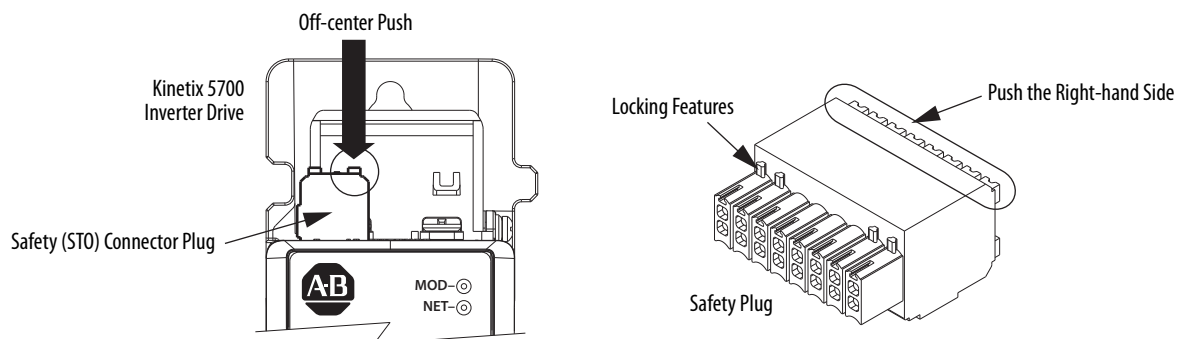

IMPORTANT The National Electrical Code and local electrical codes take precedence over the values and methods provided.

IMPORTANT To improve system performance, run wires and cables in the wireways as established in [Establishing Noise Zones](#) beginning on [page 43](#)

IMPORTANT Pins STO-1 and STO-5 (SB+ and SB-) are used to disable the safe torque-off function. When wiring to the STO connector, use an external 24V supply for the external safety device that triggers the safe torque-off request. To avoid jeopardizing system performance, do not use pin STO-1 as a power supply for the external safety device.

Safe Torque-off Wiring Requirements

The safe torque-off (STO) connector uses spring tension to secure the wire. Depress the numbered tab along side each pin to insert or release each wire. Two rows of pins are provided for drive-to-drive connections. Wire must be copper with 75 °C (167 °F) minimum rating.

IMPORTANT The National Electrical Code and local electrical codes take precedence over the values and methods provided.

IMPORTANT Stranded wires must terminate with ferrules to prevent short circuits, per table D7 of EN ISO 13849.

Figure 105 - Safe Torque-off (STO) Terminal Plug

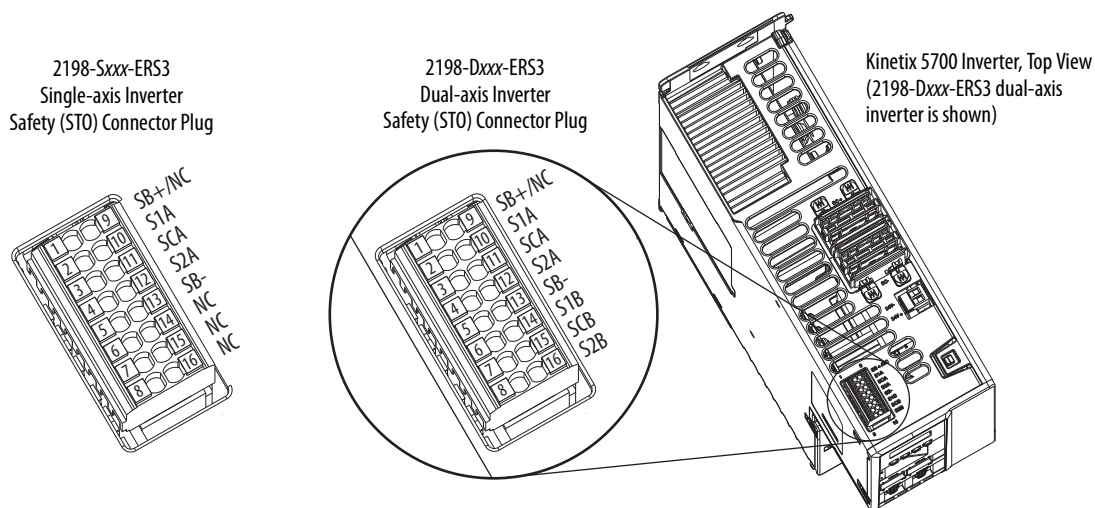


Table 126 - Safe Torque-off (STO) Connector Plug Wiring

Safe Torque-off (STO) Connector		Signal		Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
STO Pin		2198-Dxxx-ERS3	2198-Sxxx-ERS3			
1	9	SB+/NC	SB+/NC	0.14...1.5 (26...16)	10 (0.39)	N/A ⁽¹⁾
2	10	S1A	S1			
3	11	SCA	SC			
4	12	S2A	S2			
5	13	SB-	SB-			
6	14	S1B	NC			
7	15	SCB	NC			
8	16	S2B	NC			


(1) This connector uses spring tension to hold wires in place.

Safe Torque-off Feature Bypass

The Kinetix 5700 inverters do not operate without a safety circuit or safety bypass wiring. For applications that do not require the safe torque-off feature you must install jumper wires to bypass the safe torque-off circuitry.

Kinetix 5700 inverters ship with a 16-pin wiring plug for wiring to safety devices. To bypass the safety function, wire these signals as shown in [Figure 106](#). With the jumper wires installed, the safe-off feature is not used.

Figure 106 - Safe Torque-off Bypass Wiring

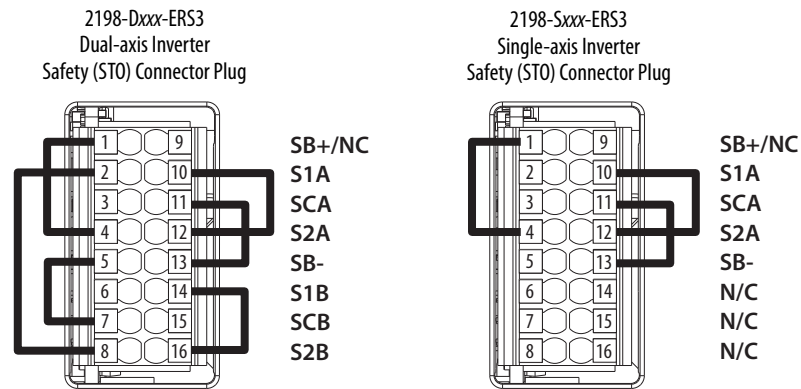


IMPORTANT If the safe torque-off function is not required, the drive safety configuration must be returned to Hardwired STO mode and the bypass jumper wires applied to the safety (STO) connector plugs.

Cascade the Safe Torque-off Signal

The total number of drives in a single cascaded safety circuit is limited by the current carrying capacity of the cascaded safety wiring. Refer to [Table 127](#) for current rating per channel, per drive.


In this example, the cascaded safe torque-off (STO) wiring is for one single-axis inverter application.

Figure 107 - Cascaded STO Wiring - Single-axis Inverter

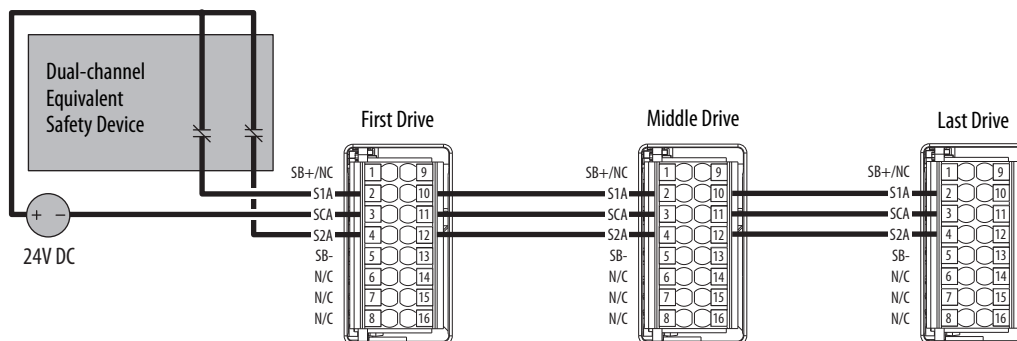


In this example, the cascaded safe torque-off (STO) wiring is for one dual-axis inverter application with a separate safety device for each axis.

Figure 108 - Cascaded STO Wiring - Dual-axis Inverter with Two Safety Devices

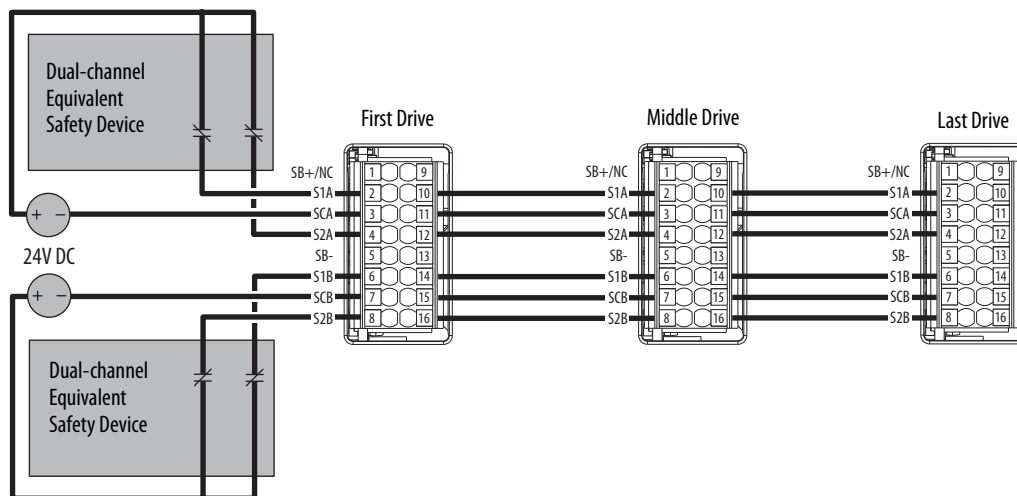

In this example, the cascaded STO wiring is for one dual-axis inverter application with a single safety device for both axes.

Figure 109 - Cascaded STO Wiring - Dual-axis Inverter with Single Safety Device

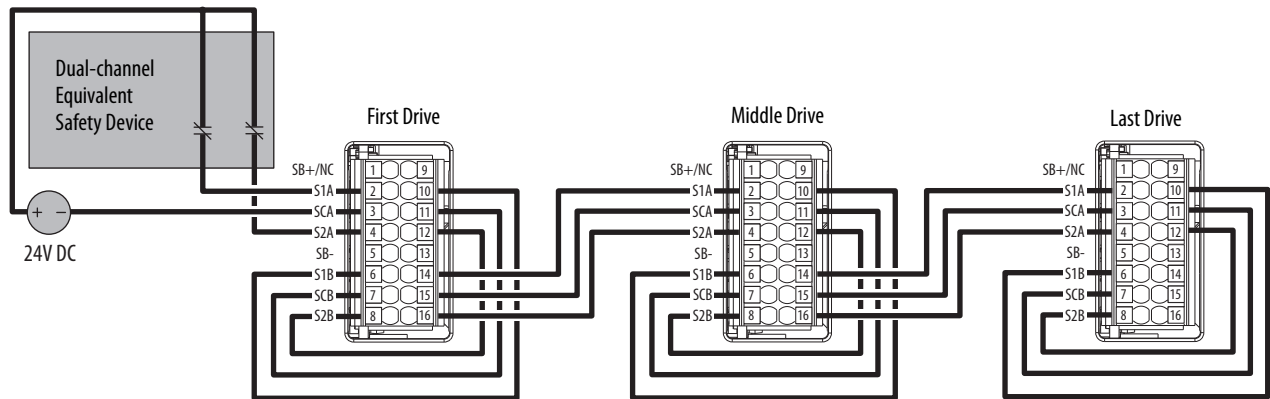

Hardwired Safe Torque-off Electrical Specifications

To maintain their safety rating, Kinetix 5700 inverters must be installed inside protected control panels or cabinets appropriate for the environmental conditions of the industrial location. The protection class of the panel or cabinet must be IP54 or higher.

Table 127 - Hardwired STO Electrical Specifications

Attribute		Value
Safety inputs (per channel)	Input current	< 10 mA
	Input ON voltage range	18...26.4V DC
	Input OFF voltage, max	5V DC
	Input ON current, per input, max	10 mA, each drive ⁽¹⁾
	Input OFF current, max (@ V in < 5V DC)	2 mA
	Pulse rejection width	700 μs
	External power supply	SELV/PELV
	Input type	Optically isolated and reverse voltage protected

(1) The maximum number of drives cascaded with safe torque-off wiring is 50.

For additional information regarding Allen-Bradley safety products, including safety relays, light curtain, and gate interlock applications, refer to the Safety Products Catalog, website <http://www.ab.com/catalogs>.

Integrated Safe Torque-off

This section introduces you to the Kinetix 5700 safe torque-off (STO) feature over the EtherNet/IP network that meets the requirements of Performance Level e (PLe) per EN ISO 13849-1 and SIL 3 per IEC EN 61508, EN 61800-5-2, and EN 62061.

In Integrated STO mode, the GuardLogix® 5570 or Compact GuardLogix 5370 safety controller issues the STO command over the EtherNet/IP network and the 2198-Dxxx-ERS3 and 2198-Sxxx-ERS3 inverters execute the STO command.

Compatible Safety Controllers

A GuardLogix 5570 or Compact GuardLogix 5370 safety controller is required for integrated safety control of the Kinetix 5700 safe torque-off function.

The Studio 5000 Logix Designer application, version 26.00 or later, provides support for programming, commissioning, and maintaining Logix5000™ safety controllers with Kinetix 5700 drive systems.

The safety connection can originate from either of these controllers:

- Safety controller that provides both safety and motion control
- Safety controller that controls only the safety, while a separate ControlLogix 5570, ControlLogix 5580, CompactLogix 5370, or CompactLogix 5380 controller that controls motion

Safety Application Requirements

Safety application requirements include evaluating probability of failure rates (PFH), system reaction time settings, and functional verification tests that fulfill SIL 3 criteria. Refer to [Probability of Dangerous Failure Per Hour](#) on [page 234](#) for more PFH information.

Creating, recording, and verifying the safety signature is also a required part of the safety application development process. Safety signatures are created by the safety controller. The safety signature consists of an identification number, date, and time that uniquely identifies the safety portion of a project. This includes all safety logic, data, and safety I/O configuration.

For safety system requirements, including information on the safety network number (SNN), verifying the safety signature, and functional verification tests refer to the GuardLogix 5570 Controller Systems Safety Reference Manual, publication [1756-RM099](#).

IMPORTANT You must read, understand, and fulfill the requirements detailed in publication [1756-RM099](#) prior to operating a safety system that uses a GuardLogix controller and Kinetix 5700 drive.

Description of Operation

The safe torque-off (STO) feature provides a method, with sufficiently low probability of failure, to force the power-transistor control signals to a disabled state. When the command to execute the STO function is received from the GuardLogix controller, all of the drive output-power transistors are released from the ON-state. This results in a condition where the drive is coasting. Disabling the power transistor output does not provide mechanical isolation of the electrical output that is required for some applications.

These conditions must be met for integrated control of the STO function:

- The Kinetix 5700 add-on-profile (AOP) must be added to the Bulletin 1756 EtherNet/IP communication module, configured as part of the GuardLogix 5570 or Compact GuardLogix 5370 controller I/O tree.
- The AOP must be configured for Safety-only or Motion and Safety connections
- The safety bypass jumper wires must be removed.

IMPORTANT If the STO bypass jumper wires were applied during machine commissioning or maintenance, they must be removed before the drive will operate in Integrated STO mode.

The Kinetix 5700 drive STO function response time is less than 10 ms. Response time for the drive is the delay between the time the drive STO command receives the CIP Safety™ packet with an STO request and the time when motion producing power is removed from the motor.

Table 128 - Safe Torque-off Network Specifications

Attribute	Value
Safety connection RPI, min	6 ms
Input assembly connections ⁽¹⁾	3
Output assembly connections ⁽¹⁾	1
Integrated safety open request support	Type 1 and Type 2 requests

(1) Motion and Safety and Safety-only connections with the inverter uses 1 input assembly connection and 1 output assembly connection.

Safe Torque-off Assembly Tags

In Integrated safe torque-off (STO) mode, a GuardLogix 5570 or Compact GuardLogix 5370 safety controller controls the Kinetix 5700 safe torque-off function through the SO.SafeTorqueOff tag in the safety output assembly.

The SO.Command tags are sent from the GuardLogix safety output assembly to the Kinetix 5700 safety output assembly to control the safe torque-off function.

The SI.Status tags are sent from the Kinetix 5700 inverter to the GuardLogix safety input assembly and indicate the Kinetix 5700 safety control status.

The SI.ConnectionStatus tags indicate the safety input connection status.

[Table 129](#) and [Table 130](#) list the safety tags added to the controller tags when a Kinetix 5700 servo drive is added to a GuardLogix I/O configuration and the connection is configured for Motion and Safety or Safety-only.

The attribute values listed are the Assembly Object attribute values.

Table 129 - Single-axis Inverter Integrated STO Specifications

Logix Designer Tag Name	Attribute [bit]	Type	Description
SI.ConnectionStatus ⁽¹⁾ ⁽²⁾		DINT	
SI.RunMode	[0]	BOOL	Combinations of the RunMode and ConnectionFaulted states
SI.ConnectionFault	[1]	BOOL	
SI.Status ⁽¹⁾ ⁽³⁾	0x1A0	SINT	
SI.TorqueDisabled	[0]	BOOL	0 = Torque Permitted 1 = Torque Disabled
SI.SafetyFault	[6]	BOOL	1 = STO fault present
SI.ResetRequired	[7]	BOOL	1 = Reset is required
SO.Command ⁽¹⁾ ⁽⁴⁾	0x180	SINT	
SO.SafeTorqueOff	[0]	BOOL	0 = Disable Permit 1 = Permit Torque
SO.Reset	[7]	BOOL	0 --> 1 = Reset STO fault

(1) Bits not listed are always zero.

(2) ConnectionStatus is determined by the Safety Validator in the GuardLogix controller.

(3) Status is sent from the drive to the controller using integrated safety protocol.

(4) Commands are sent from the controller to the drive using integrated safety protocol.

IMPORTANT Only the data listed in [Table 129](#) is safety data with SIL 3 integrity.

Table 130 - Dual-axis Inverter Integrated STO Specifications

Logix Designer Tag Name	Attribute [bit]	Type	Description
SI.ConnectionStatus ^{(1) (2)}		DINT	
SI.RunMode	[0]	BOOL	Combinations of the RunMode and
SI.ConnectionFaulted	[1]	BOOL	ConnectionFaulted states
SI.Status1 ⁽¹⁾⁽³⁾	0x1A8	SINT	Inverter Axis 1
SI.TorqueDisabled1	[0]	BOOL	0 = Torque Permitted; 1 = Torque Disabled
SI.SafetyFault1	[6]	BOOL	1 = STO Fault present
SI.ResetRequired1	[7]	BOOL	1 = A reset is required
SI.Status2 ^{(1) (3)}		SINT	Inverter Axis 2
SI.TorqueDisabled2	[0]	BOOL	0 = Torque Permitted; 1 = Torque Disabled
SI.SafetyFault2	[6]	BOOL	1 = STO Fault present
SI.ResetRequired2	[7]	BOOL	1 = A reset is required
SO.Command1 ^{(1) (4)}	0x188	SINT	Inverter Axis 1
SO.SafeTorqueOff1	[0]	BOOL	0 = Disable Permit; 1 = Permit Torque
SO.Reset1	[7]	BOOL	0 → 1 = Reset STO Fault
SO.Command2 ^{(1) (4)}		SINT	Inverter Axis 2
SO.SafeTorqueOff2	[0]	BOOL	0 = Disable Permit; 1 = Permit Torque
SO.Reset2	[7]	BOOL	0 → 1 = Reset STO Fault

(1) Bits not listed are always zero.


(2) ConnectionStatus is determined by the Safety Validator in the GuardLogix controller.

(3) The Status is sent from the drive to the controller using integrated safety protocol.

(4) The Command is sent from the controller to the drive using integrated safety protocol.

IMPORTANT Only the data listed in [Table 130](#) is safety data with SIL 3 integrity.

In this example, the SO.SafeTorqueOff bit permits torque when the bit is high.

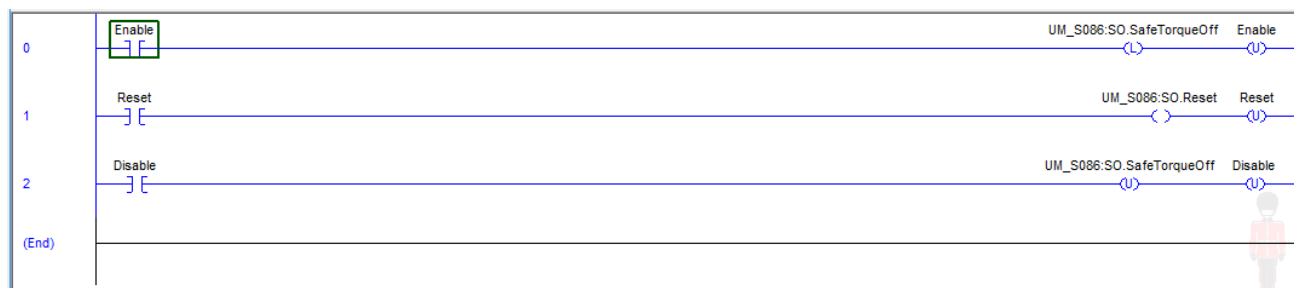Figure 110 - Safe Torque-off Function Safety Logic Example

STO Fault Reset

To clear the STO Fault condition, a transition from logic 0 to 1 of the SO.Reset tag is required after the SO.SafeTorqueOff tag has transitioned from logic 0 to 1.

If the Kinetix 5700 servo drive safety controller detects a fault, the input assembly tag SI.SafetyFault is set to 1.


To reset Axis.SafetyFault, an MAFR command must be issued.

IMPORTANT Transition of the SO.SafeTorqueOff tag to logic 1 must always be executed prior to transition of the SO.Reset tag to logic 1.

IMPORTANT All Kinetix 5700 inverter axes enter the faulted state if any STO function fault is detected. Refer to [Table 131](#) for integrated safety troubleshooting.

Refer to [Figure 111](#) for an understanding of the Kinetix 5700 STO state restart functionality.

Figure 111 - Reset Safe Torque-off Fault Diagram

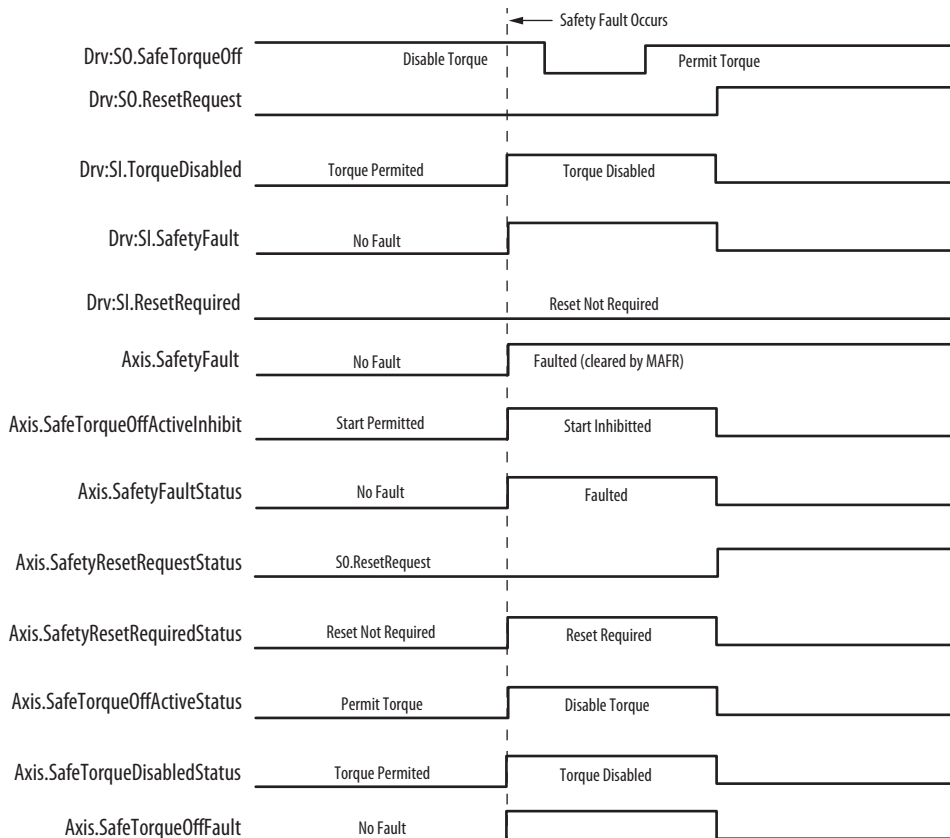

Troubleshoot the Safe Torque-off Function

Table 131 - Kinetix 5700 Integrated STO

Exception Code on Drive Display	Fault Message Logix Designer	Problem	Possible Solutions
SAFE FLT S01- Safety Core Internal	SafetyFault	Drive safety diagnostic detected internal STO design failure.	• Cycle control power • Return drive for repair if fault continues
SAFE FLT S03- Safe Torque Off	SafeTorqueOffFault ⁽¹⁾	Drive safety diagnostic detected internal STO design failure or hardwired input received while in integrated safety mode.	• Check the cause of the fault using a Safe Torque-off faults explicit message. Refer to Explicit Messages on page 240. • Remove any connection to the hardwired safety inputs and reset using the STO Fault Reset procedure. Refer to STO Fault Reset on page 255. • Execute STO function. • Return drive for repair if fault continues.
INIT FLT M14 - Safety Firmware	InvalidSafetyFirmwareFault ⁽²⁾	Invalid safety firmware.	• Cycle control power. • Upgrade the drive firmware. • Call Technical Support. • Return drive for repair if fault continues.

(1) Displayed in the Quick View Pane as Safety Fault.

(2) Displayed in the Quick View Pane as Initialization Fault.

Understand Integrated Safety Drive Replacement

GuardLogix controllers retain I/O device configuration on-board and are able to download the configuration to the replacement device.

IMPORTANT If the Kinetix 5700 replacement drive was used previously, clear the existing configuration before installing it on a safety network by resetting the drive to Hardwired STO mode. To see how this is done, refer to [Restore the Hardwired STO Mode by Using the Logix Designer Application](#) on [page 237](#).

Replacing a Kinetix 5700 servo drive that sits on an integrated safety network is more complicated than replacing standard devices because of the safety network number (SNN). The device number and SNN make up the safety device's DeviceID. Safety devices require this more complex identifier to make sure that duplicate device numbers do not compromise communication between the correct safety devices. The SNN is also used to provide integrity on the initial download to the Kinetix 5700 servo drive.

When the Logix Designer application is online, the Safety tab of the Module Properties dialog box displays the current configuration ownership. When the opened project owns the configuration, Local is displayed.

Configuration Ownership: Local

A communication error is displayed if the module read fails. Refer to [Replace an Integrated Safety Drive in a GuardLogix System](#) on [page 257](#) for integrated safety drive replacement information.

Replace an Integrated Safety Drive in a GuardLogix System

When you replace an integrated safety drive, the replacement device must be configured properly and the replacement drives operation be user-verified.




ATTENTION: During drive replacement or functional test, the safety of the system must not rely on any portion of the affected drive.

Two options for safety drive replacement are available on the Safety tab of the Controller Properties dialog box in the Logix Designer application:

- Configure Only When No Safety Signature Exists
- Configure Always

Figure 112 - Safety Drive Replacement Options

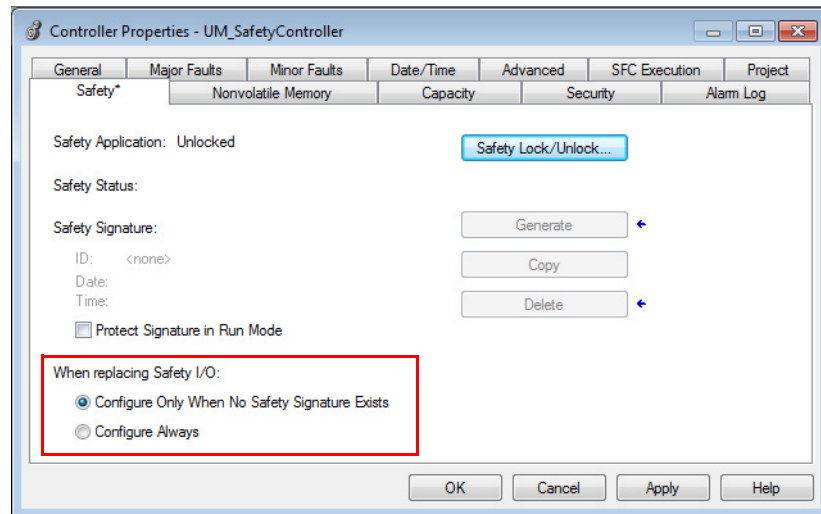

Configure Only When No Safety Signature Exists

This setting instructs the GuardLogix controller to automatically configure a safety drive only when the safety task does not have a safety task signature, and the replacement drive is in an out-of-box condition, meaning that a safety network number does not exist in the safety drive.

If the safety task has a safety task signature, the GuardLogix controller automatically configures the replacement CIP Safety I/O device only if the following is true:

- The device already has the correct safety network number.
- The device electronic keying is correct.
- The node or IP address is correct.

For detailed information, see the GuardLogix 5570 Controllers User Manual, publication [1756-UM022](#) or Compact GuardLogix 5370 Controllers User Manual, publication [1769-UM022](#).

Configure Always

When the Configure Always feature is enabled, the controller automatically checks for and connects to a replacement drive that meets all of the following requirements:

- The controller has configuration data for a compatible drive at that network address
- The drive is in Hardwired STO mode or has an SNN that matches the configuration



ATTENTION: Enable the Configure Always feature only if the entire integrated safety control system is not being relied on to maintain SIL 3 behavior during the replacement and functional testing of a Kinetix 5700 drive. Do not place drives that are in Hardwired STO mode on an integrated safety network when the Configure Always feature is enabled.

If other parts of the integrated safety control system are being relied upon to maintain SIL 3, make sure that the controller's Configure Always feature is disabled.

It is your responsibility to implement a process to make sure proper safety functionality is maintained during device replacement.



ATTENTION: Do not place any devices in the out-of-box condition on any integrated safety network when the Configure Always feature is enabled, except while following the device replacement procedure in the GuardLogix user manual appropriate for your Logix5000 controller:

- GuardLogix 5570 Controllers User Manual, publication [1756-UM022](#)
 - Compact GuardLogix 5370 Controllers User Manual, publication [1769-UM022](#).
-

Motion Direct Commands in Motion Control Systems

You can use the Motion Direct Command (MDC) feature to initiate motion while the controller is in Program mode, independent of application code that is executed in Run mode. These commands let you perform a variety of functions, for example, move an axis, jog an axis, or home an axis.

A typical use might involve a machine integrator testing different parts of the motion system while the machine is being commissioned or a maintenance engineer, under certain restricted scenarios in accordance with safe machine operating procedures, wanting to move an axis (like a conveyor) to clear a jam before resuming normal operation.



ATTENTION: To avoid personal injury or damage to equipment, follow these rules regarding Run mode and Program mode.

- Only authorized, trained personnel with knowledge of safe machine operation should be allowed to use Motion Direct Commands
 - Additional supervisory methods, like removing the controller key switch, should be used to maintain the safety integrity of the system after returning the safety controller to RUN mode
-

Understand STO Bypass When Using Motion Direct Commands

If a Safety-only connection between the GuardLogix safety controller and the Kinetix 5700 servo drive was established at least once after the drive was received from the factory, the drive does not allow motion while the safety controller is in Program mode by default.

This is because the safety task is not executed while the GuardLogix safety controller is in Program mode. This applies to applications running in a single-safety controller (with Motion and Safety connections). When an integrated safety drive has a Motion connection to a standard controller and a separate Safety connection to a dual-safety controller, the standard controller can transition to Program mode while the safety controller stays in Run mode and continues to execute the safety task.

However, Kinetix 5700 drive systems are designed with a bypass feature for the STO function in single-safety controller configurations. You can use the MDC feature to allow motion while following all the necessary and prescribed steps per your machine's safety operating procedures.




ATTENTION: Consider the consequences of allowing motion through the use of MDC when the controller is in Program mode. You must acknowledge warning messages in the Logix Designer application that warn of the drive bypassing the STO function and unintended motion can occur. The integrated safety drive does not respond to requests of the STO function if MDC mode is entered.

It is your responsibility to maintain machine safety integrity while executing motion direct commands. One alternative is to provide ladder logic for Machine Maintenance mode that leaves the controller in Run mode with safety functions executing.

Logix Designer Application Warning Messages


When the controller is in Run mode, executing safety functions, the Kinetix 5700 servo drive follows the commands that it receives from the safety controller. The controller reports Safety state = Running and Axis state = Stopped/Running, as shown in [Figure 113](#).

Figure 113 - Safety State Indications When Controller is in Run Mode (safety task executing)

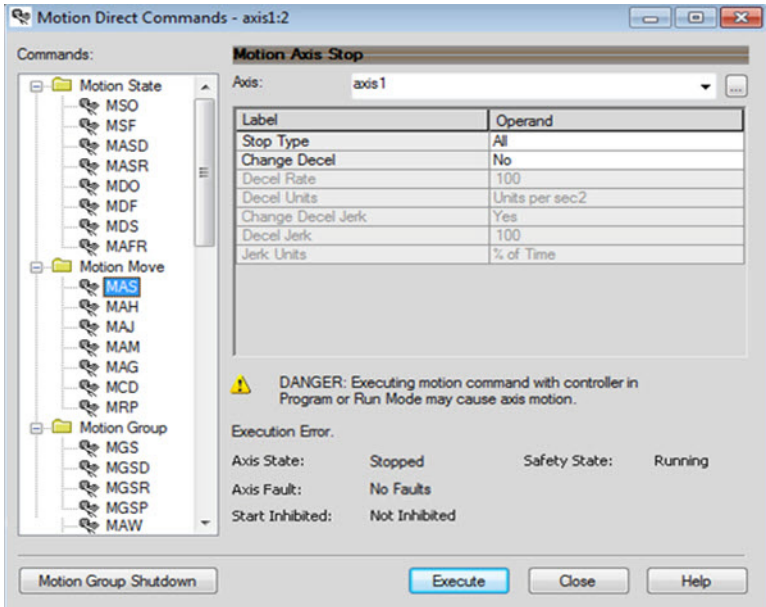


When the controller transitions to Program mode, the integrated safety drive is in the safe state (torque is not permitted). The controller reports Safety state = Not Running and Axis state = Start Inhibited, as shown in [Figure 114](#).

Figure 114 - Safety State Indications After Controller Transitions to Program Mode

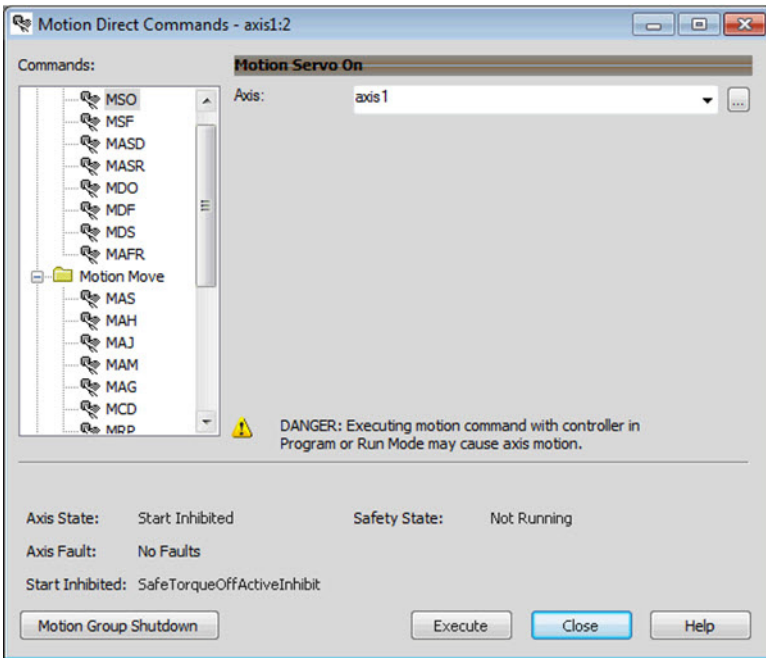

When you issue a motion direct command to an axis to produce torque in Program mode, for example MSO or MDS, with the safety connection present to the drive, a warning message is presented before the motion direct command is executed, as shown in [Figure 115](#).

Figure 115 - STO Bypass Prompt When the Safety Controller is in Program Mode

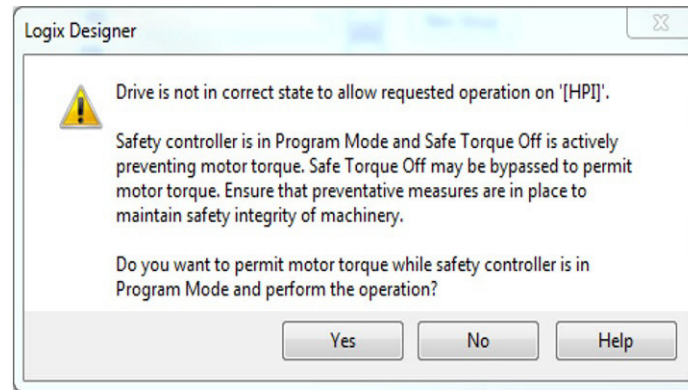


ATTENTION: Unexpected motion and the possibility of personal injury or equipment damage exists if a motion direct command is issued for one axis of any 2198-Dxxx-ERS3 dual-axis inverter. Both (A and B) inverters associated with the physical drive permit torque after you acknowledge this warning message by clicking Yes. Make sure that preventive measures are in place for both axes to maintain the safety integrity of the machine.

IMPORTANT The warning in [Figure 115](#) is displayed only the first time a motion direct command is issued.

After you acknowledge the warning message by clicking Yes, torque is permitted by the drive and a warning message is indicated in the software as shown in [Figure 116](#). The controller reports Safety state = Not Running (torque permitted), Axis state = Stopped/Running and Persistent Warning = Safe Torque Off Bypassed.

IMPORTANT Switch the controller to Run mode to exit Motion Direct Command mode and end the STO function bypass.

Figure 116 - Safety State Indications After Controller Transitions to Program Mode (MDC executing)

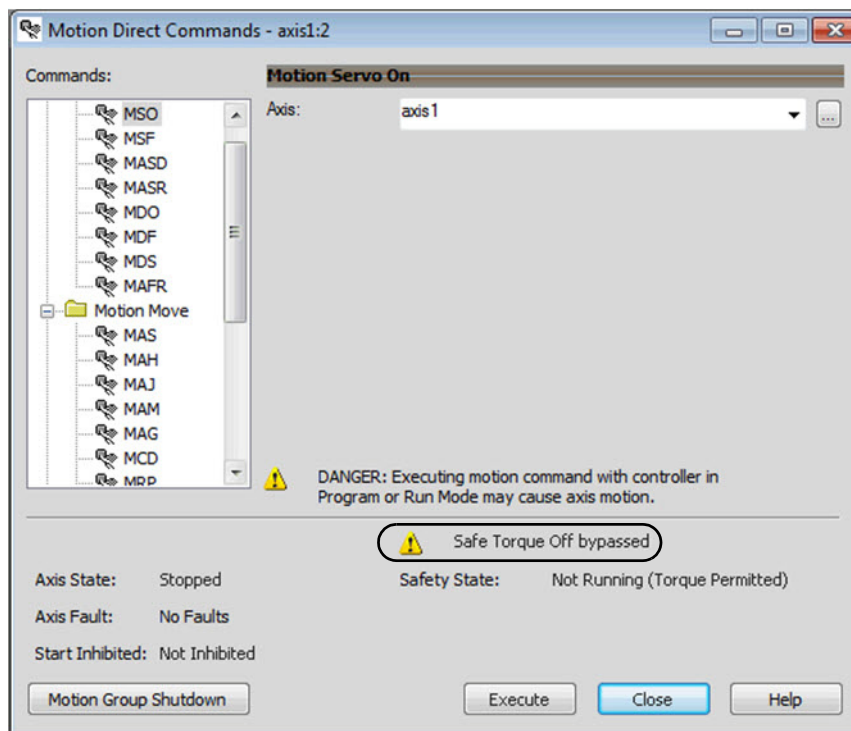

IMPORTANT The persistent warning message text Safe Torque Off bypassed appears when a motion direct command is executed.


The warning message persists even after the dialog is closed and reopened as long as the integrated safety drive is in STO Bypass mode.

The persistent warning message is removed only after the integrated safety drive's Safety State is restored to the Running state.

Torque Permitted in a Multi-workstation Environment

The warning in [Figure 117](#) is displayed to notify a second user working in a multi-workstation environment that the first user has placed the integrated safety drive in the STO state and that the current action is about to bypass the STO state and permit torque.

Figure 117 - STO Bypass Prompt When MDC is Issued in Multi-workstation Environment

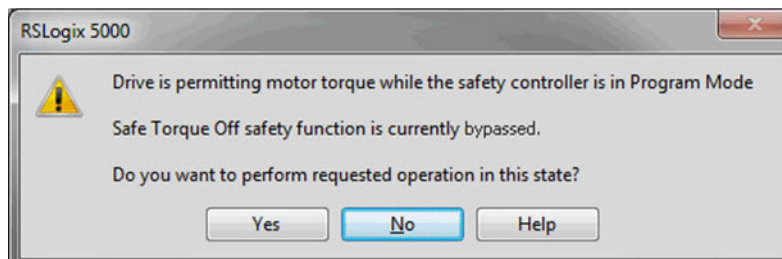

Warning Icon and Text in Axis Properties

In addition to the other warnings that require your acknowledgement, the Logix Designer application also provides warning icons and persistent warning messages in other Axis Properties dialog boxes when the integrated safety drive is in STO Bypass mode.

Figure 118 - Axis and Safe State Indications on the Hookup Services Dialog Box




Figure 119 - Axis and Safe State Indications on Motion Direct Commands Dialog Box


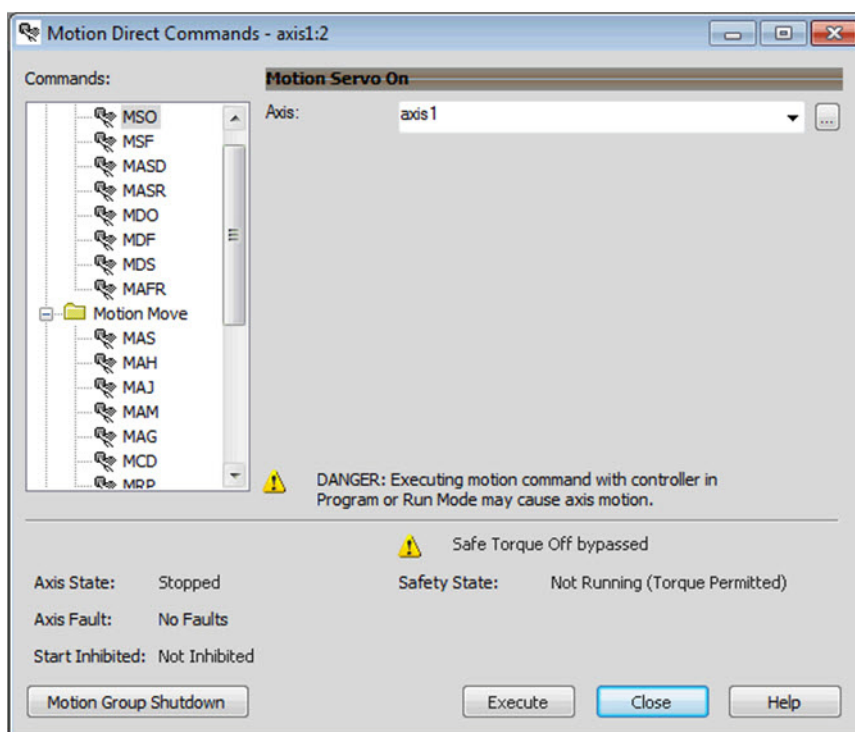


Figure 120 - Axis and Safe State Indications on the Motion Console Dialog Box



Functional Safety Considerations

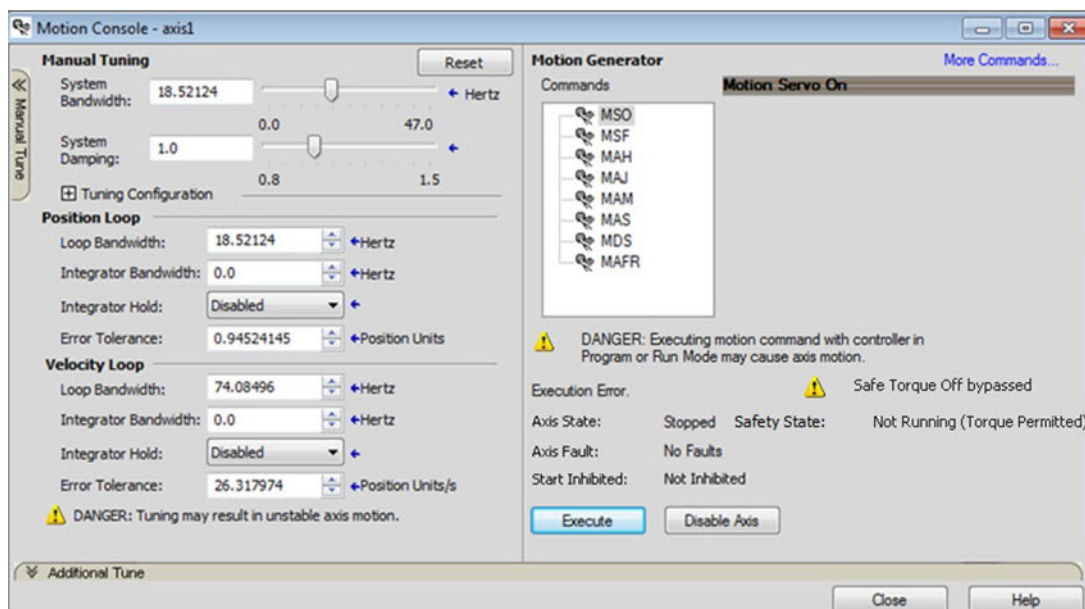

ATTENTION: Before maintenance work can be performed in Program mode, the developer of the application must consider the implications of allowing motion through motion direct commands and should consider developing logic for run-time maintenance operations to meet the requirements of machine safety operating procedures.



ATTENTION: Motion is allowed and the STO function is not available when motion direct commands are used in Program mode. Motion direct commands issued when the controller is in Program mode cause the drive to bypass the STO Active condition. It is your responsibility to implement additional preventive measures to maintain safety integrity of the machinery during execution of motion direct commands in Program mode.



ATTENTION: To avoid personal injury and damage to equipment in the event of unauthorized access or unexpected motion during authorized access, return the controller to Run mode and remove the key before leaving the machine unattended.

Integrated Safe Torque-off Specifications

To maintain safety rating, Kinetix 5700 drives must be installed inside protected control panels or cabinets appropriate for the environmental conditions of the industrial location. The protection class of the panel or cabinet must be IP54 or higher.

Table 132 - Integrated STO Specifications

Attribute	Value	Logix Designer Tag Name
Safety connection RPI, min	6 ms	N/A
Input assembly connections	3	N/A
Output assembly connections	1	N/A
Integrated safety open request support	Type 1 and Type 2 requests	N/A
Axis safety status	Bit 0: Safety fault	Axis.SafetyFaultStatus
	Bit 1: Safety reset request	Axis.SafetyResetRequestStatus
	Bit 2: Safety Reset Required	Axis.SafetyResetRequiredStatus
	Bit 3: Safe torque-off active	Axis.SafeTorqueOffActiveStatus
	Bit 4: Safe torque disabled	Axis.SafeTorqueDisabledStatus
	Bit 5 . . . 31: Undefined (0)	N/A
Axis safety faults	Bit 1: Safety core fault	Axis.SafetyCoreFault
	Bit 3: Safe torque-off fault	Axis.SafeTorqueOffFault
	All others: Undefined (0)	N/A

Table 133 - Single-axis Inverter STO Assembly Specifications

Attribute	Instance Attribute	Value	Logix Designer Tag Name
Safety input assembly	0x1A0	Bit 0: Torque disabled	Drv:SI.TorqueDisabled
		Bit 6: Safety fault	Drv:SI.SafetyFault
		Bit 7: Reset required	Drv:SI.ResetRequired
Safety output assembly	0x180	Bit 0: Safe torque-off output	Drv:SO.SafeTorqueOff
		Bit 7: Reset request	Drv:SO.Reset

Table 134 - Dual-axis Inverter STO Assembly Specifications

Attribute	Instance Attribute	Value	Logix Designer Tag Name
Safety input assembly	0x1A8	Byte 0 Bit 0: Torque disabled 1	Drv:SI.TorqueDisabled1
		Byte 0 Bit 6: Safety fault 1	Drv:SI.SafetyFault1
		Byte 0 Bit 7: Reset required 1	Drv:SO.SafeTorqueOff1
		Byte 1 Bit 0: Torque disabled 2	Drv:SI.TorqueDisabled2
		Byte 1 Bit 6: Safety fault 2	Drv:SI.SafetyFault2
		Byte 1 Bit 7: Reset required 2	Drv:SO.SafeTorqueOff2
Safety output assembly	0x188	Byte 0 Bit 0: Safe torque-off output 1	Drv:SO.SafeTorqueOff1
		Byte 0 Bit 7: Reset request 1	Drv:SO.Reset1
		Byte 1 Bit 0: Safe torque-off output 2	Drv:SO.SafeTorqueOff2
		Byte 1 Bit 7: Reset request 2	Drv:SO.Reset2

Notes:

Interconnect Diagrams

This appendix provides wiring examples and system block diagrams for your Kinetix® 5700 system components.

Topic	Page
Interconnect Diagram Notes	267
Power Wiring Examples	269
Capacitor Module Status Wiring Example	280
Passive Shunt Resistor Wiring Examples	281
Kinetix 5700 Servo Drive and Rotary Motor Wiring Examples	282
Kinetix 5700 Servo Drive and Linear Actuator Wiring Examples	287
System Block Diagrams	292

Interconnect Diagram Notes

This appendix provides wiring examples to assist you in wiring the Kinetix 5700 drive system. These notes apply to the wiring examples on the following pages.

Table 135 - Interconnect Diagram Notes

Note	Information
1	For power wiring specifications, refer to Wiring Requirements on page 100 .
2	For input fuse and circuit breaker sizes, refer to Circuit Breaker/Fuse Selection on page 35 .
3	The iTRAK power supply must have three-phase power sourced from grounded-wye power distribution.
4	AC (EMC) line filter is required for EMC compliance. Place line filter as close to the drive as possible and do not route very dirty wires in wireway. If routing in wireway is unavoidable, use shielded cable with shields grounded to the drive chassis and filter case. For AC line filter specifications, refer to Kinetix Servo Drives Specifications Technical Data, publication KNX-TD003 .
5	Terminal block is required to make connections.
6	Cable shield clamp must be used to meet CE requirements.
7	2198-Dxxx-ERS3 dual-axis inverters include separate digital inputs, DSL feedback, universal feedback, motor power, and motor brake wiring plugs for each axis.
8	When a 2198-Dxxx-ERS3 dual-axis inverter is the first drive module (adjacent to the 2198-CAPMOD-2240 capacitor module) you must configure the Digital Input tab in the Logix Designer application as Regeneration OK and wire the IOD connector for each axis.
9	PE ground connection bonded to the panel must be used to meet CE requirements.
10	Contactor coil (MC) needs integrated surge suppressors for AC coil operation and must have a normally-open auxiliary contact that is terminated at TB3 (24V DC to MC input as shown). See the 8720MC Regenerative Power Supply Installation Manual, publication 8720MC-RM001 for contactor types and wiring examples.
11	Internal shunt wired to the RC connector is default configuration. Remove internal shunt wires to attach external shunt wires.
12	Default configuration for ground screws or jumper is for grounded power at customer site. For 8720MC-RPS DC-bus power, or ungrounded, corner-grounded, and impedance-grounded power configurations, remove the screws/jumper. Refer to Determine the Input Power Configuration on page 93 for more information.
13	Leave jumper between PR2 and PR3 as shown to use the internal precharge resistor. Remove jumper when external precharge/circuit is required. For more information, refer to the 8720MC Regenerative Power Supply Installation Manual, publication 8720MC-RM001 .

Table 135 - Interconnect Diagram Notes (continued)


Note	Information
14	 ATTENTION: Implementation of control circuits and risk assessment is the responsibility of the machine builder. Reference international standards EN 1050 and EN ISO 13849-1 estimation and safety performance categories. For more information, refer to Understanding the Machinery Directive, publication SHB-900 .
15	 ATTENTION: An AC three-phase mains contactor must be wired in series between the branch circuit protection and the DC-bus power supply. In addition, the AC three-phase contactor control string must be wired in series with the contactor-enable relay at the CED connector. Refer to Contactor Enable Relay on page 76 , for more information. The recommended minimum wire size for wiring the circuitry to the contactor-enable connector is 1.5 mm ² (16 AWG).
16	For motor cable specifications, refer to Kinetix Motion Accessories Specifications Technical Data, publication KNX-TD004 .
17	Brake connector pins are labeled plus (+) and minus (-) or F and G respectively. Power connector pins are labeled U, V, W, and $\frac{1}{\text{---}}$ (GND) or A, B, C, and $\frac{1}{\text{---}}$ (D) respectively.
18	LDAT-Series linear thrusters do not have a brake option, so only the 2090-CPWM7DF-xxAAxx or 2090-CPWM7DF-xxAFxx motor power cables apply.
19	MPAS-Bxxxx-VxxSxA (ballscrew) linear stages use the 9V supply. MPAS-Bxxxx-ALMx2C (direct-drive) linear stages use the 5V supply.
20	Mount the 8720MC-RPS unit on the same panel and as close to the Kinetix 5700 drive system as possible. DC-bus cables not to exceed 2.0 m (6.5 ft), maximum length. See the 8720MC Regenerative Power Supply Installation Manual, publication 8720MC-RM001, for installation and wiring instructions.
21	The 2198-CAPMOD-2240 capacitor module is used in applications with up to 100 A maximum external DC-bus current. You can add the 2198-CAPMOD-DCBUS-IO extension module to the left or right of the capacitor module when the external DC-bus current exceeds 100 A, up to a maximum of 200 A.

Power Wiring Examples

You must supply input power components. The three-phase line filter is wired downstream of the circuit protection devices. Each drive module includes the appropriate DC-bus link and connector set. The 24V supply can be jumpered from drive-to-drive by using discrete wires or the shared-bus connection system.

In this example, the inverter drives and optional capacitor modules are downstream of a single DC-bus power supply.

Figure 121 - Kinetix 5700 Drives (single converter) Configuration

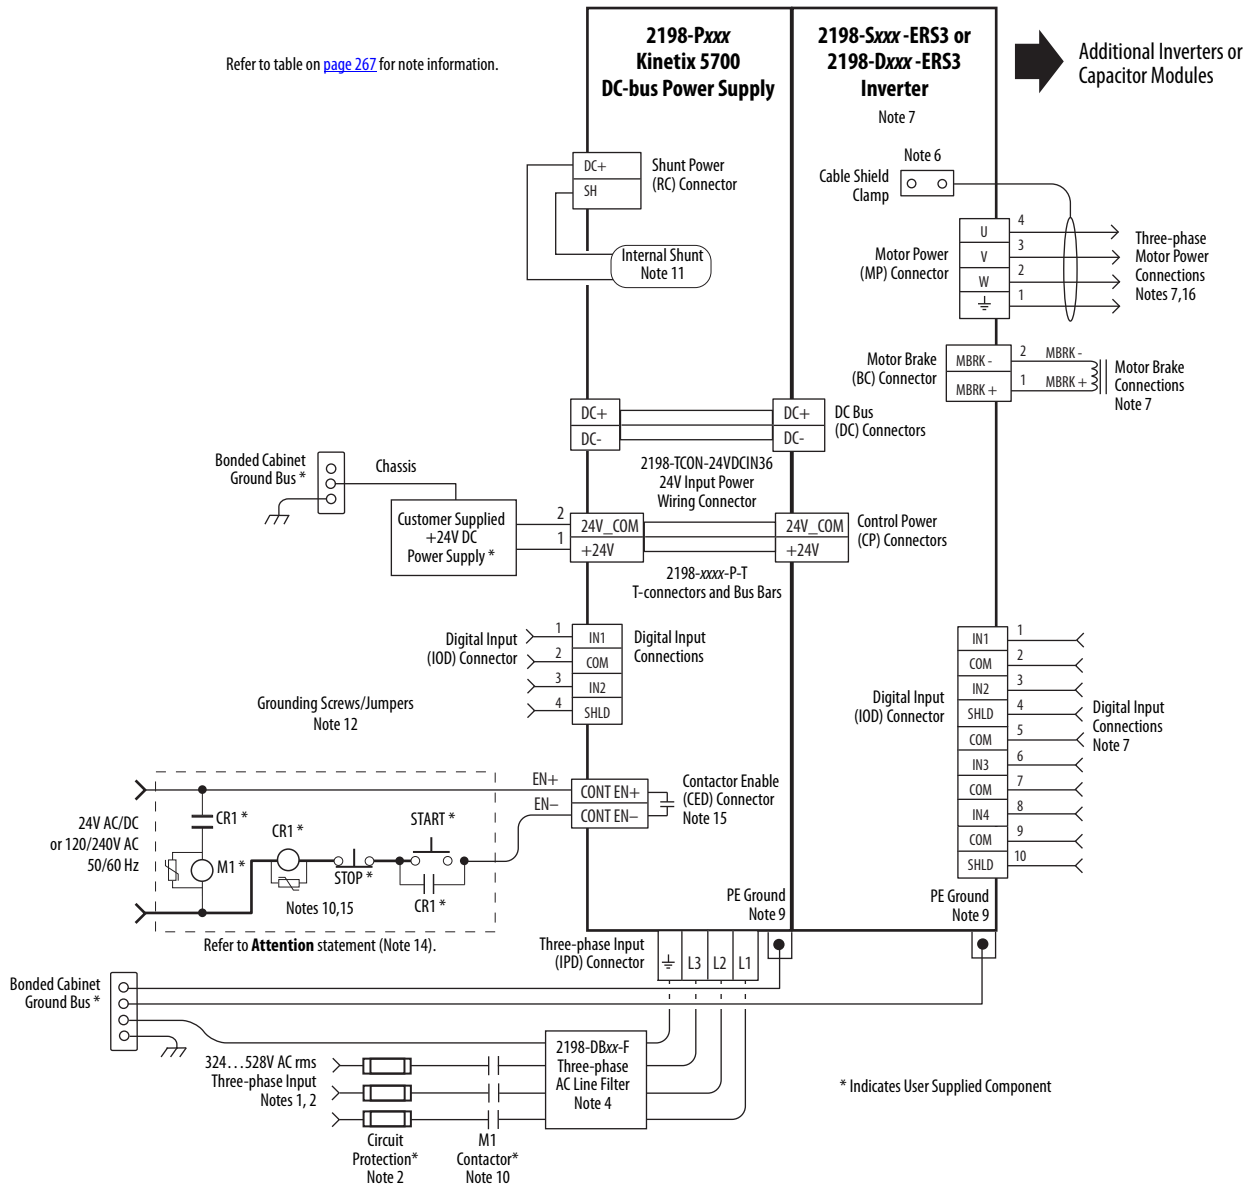

In this example, the inverter drives and optional capacitor modules are downstream of three DC-bus (converter) power supplies. When two or three DC-bus power supplies are used, they must be catalog number 2198-P208. This configuration provides more power (kW) to the drive system.

Figure 122 - Kinetix 5700 Drives (multiple converters) Configuration



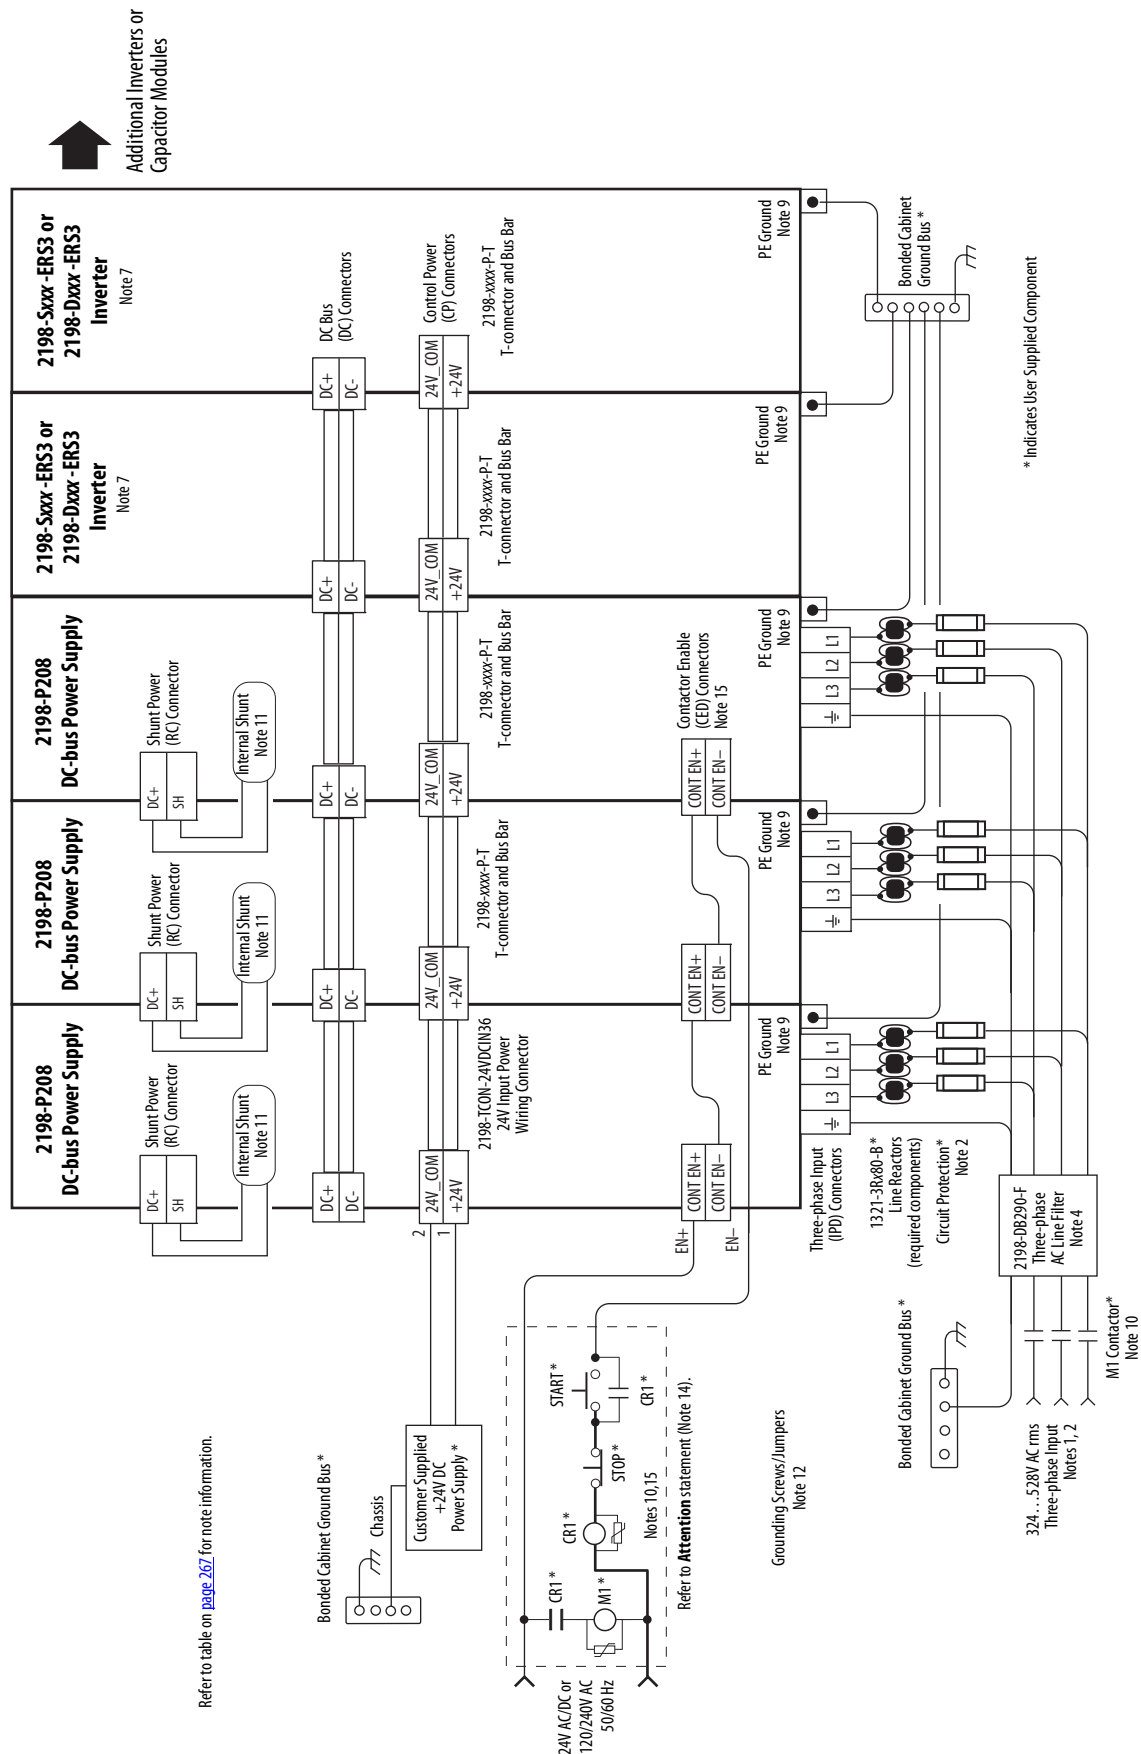


Figure 123 - Kinetix 5700 Drives (single iTRAK power supply) Configuration

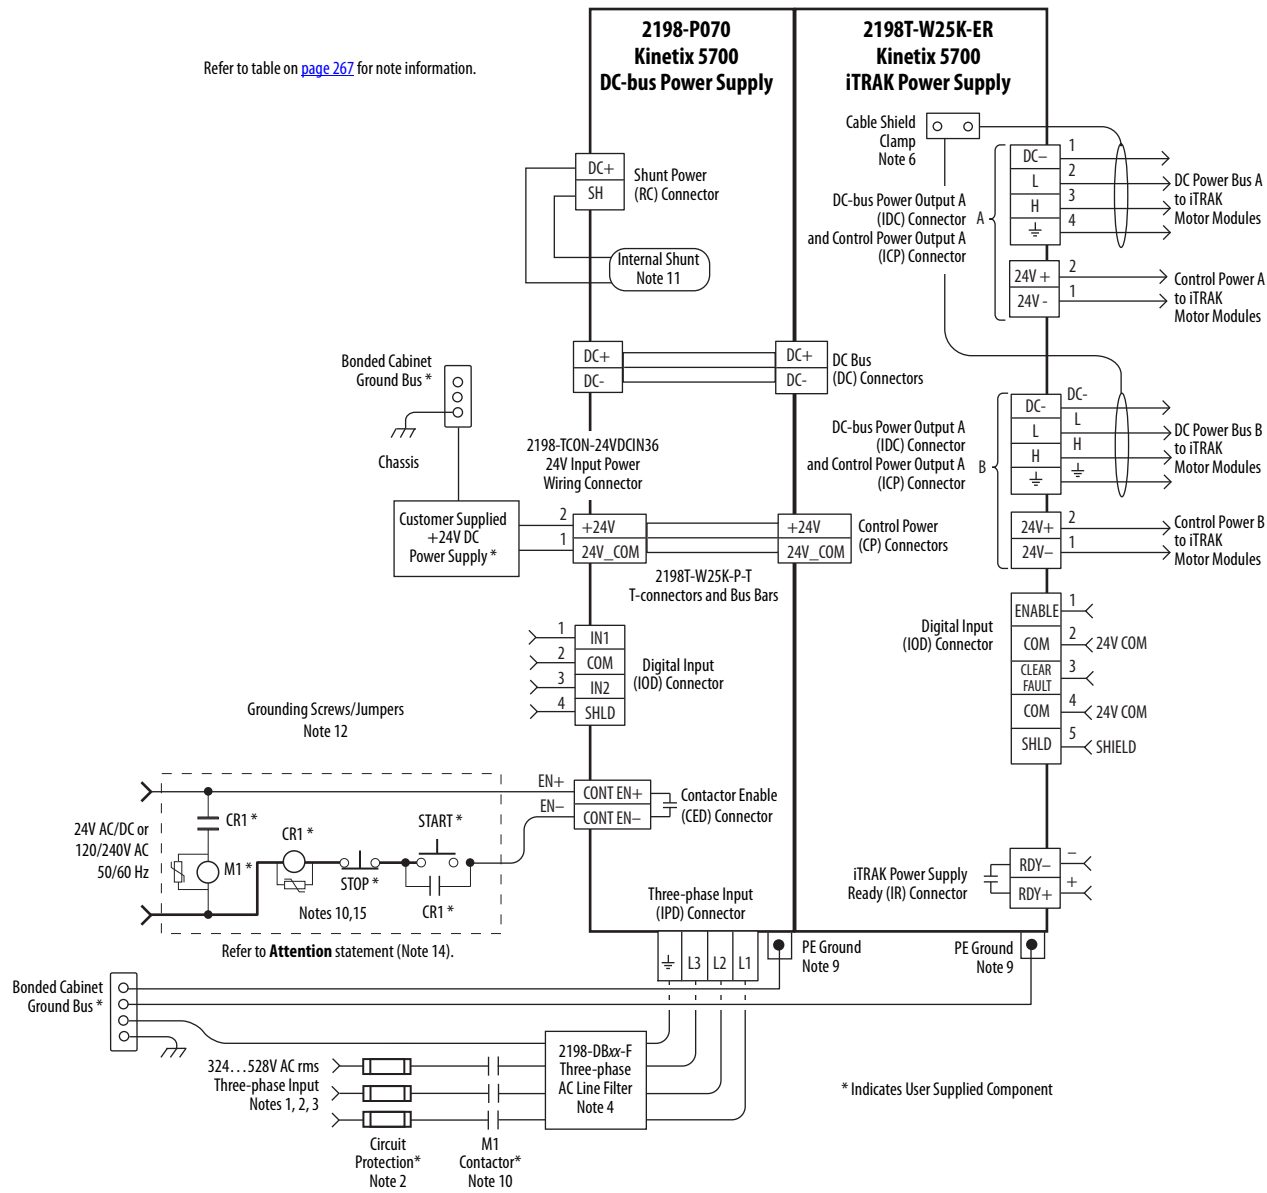


In this example, the 2198-TCON-24VDCIN36 24V input wiring connector current capacity (16 A) is exceeded by the current demands of the iTRAK system. As a result, the DC-bus power supply input wiring connector and the 2198T-W25K-P-IN input wiring connector are wired separately. The 2198T-W25K-P-IN input wiring connector is rated for 41 A. See Appendix C on [page 307](#) to determine 24V input power requirements needed to design proper distribution for 24V control power.

Figure 124 - Kinetix 5700 Drives (multiple iTRAK power supply) Configuration

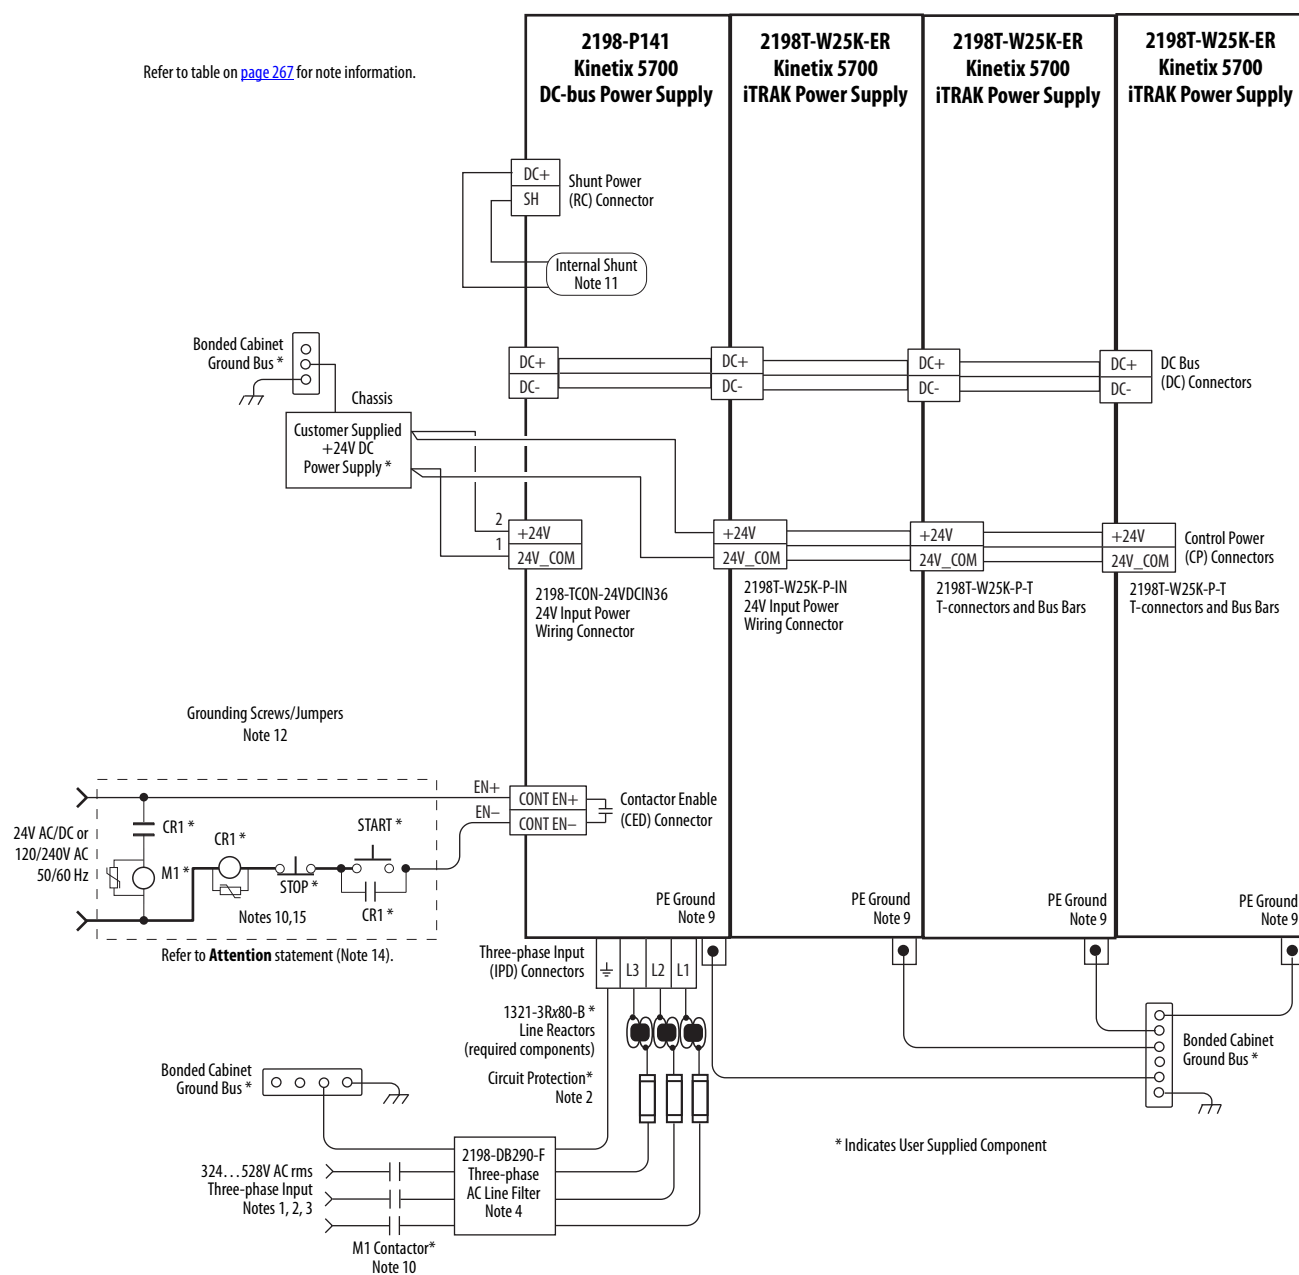


In this example, the 2198-CAPMOD-2240 capacitor module is used for energy storage and to improve dynamic performance.

Figure 125 - Kinetix 5700 Capacitor Module

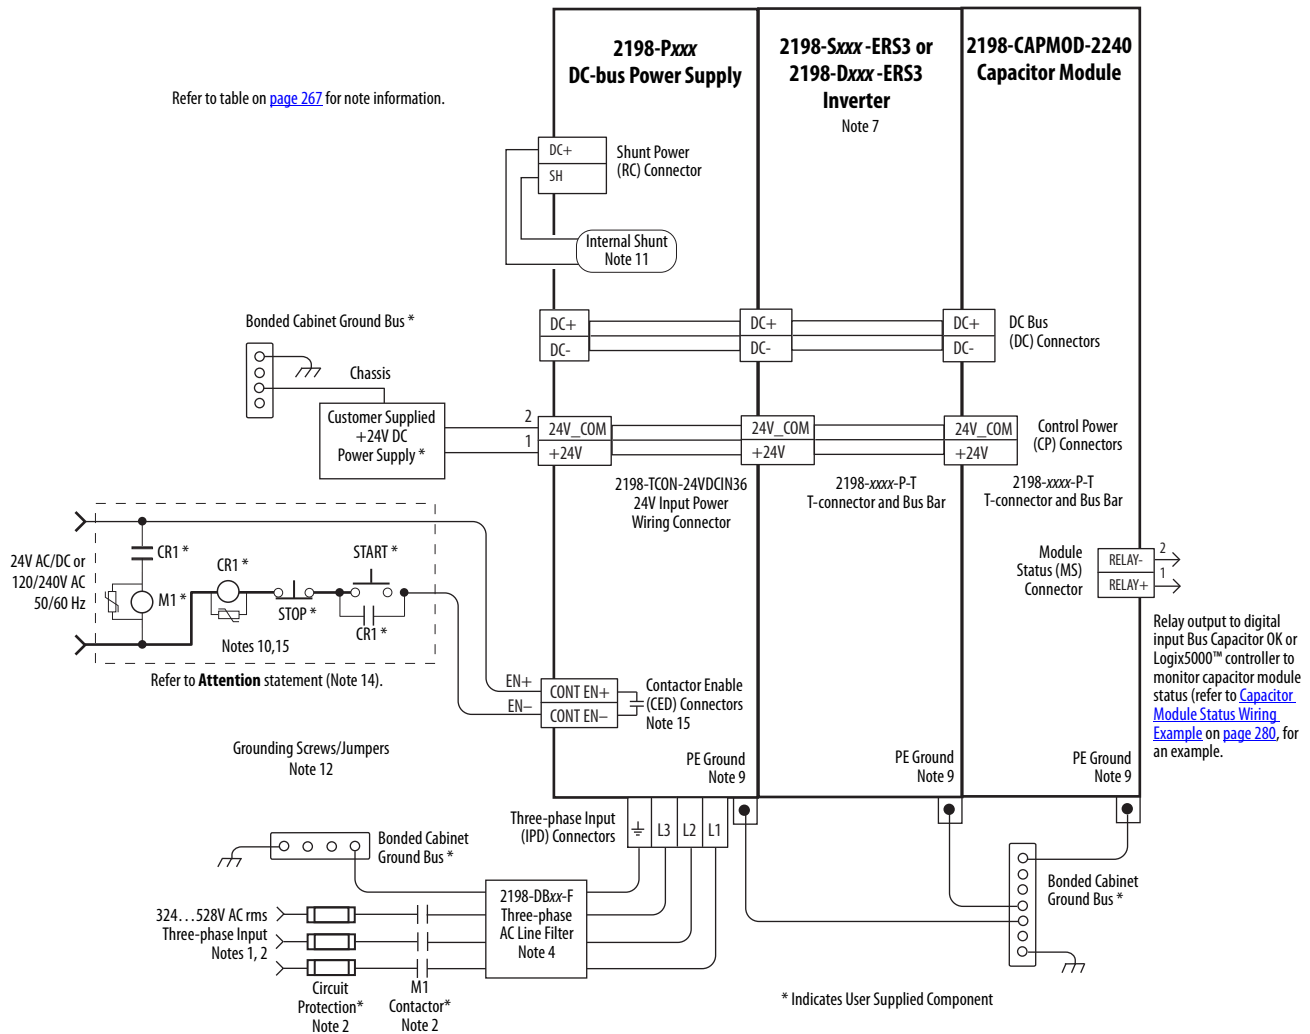

In this example, the 2198-CAPMOD-2240 capacitor module and 2198-CAPMOD-DCBUS-IO extension module are used for energy storage and to extend the DC-bus voltage to another inverter cluster. The capacitor modules are used alone when the external DC-bus current is less than 100 A. The extension module is needed when the external DC-bus current is greater than 100 A, up to a maximum 200 A.


Figure 126 - Kinetix 5700 Extended Drive System

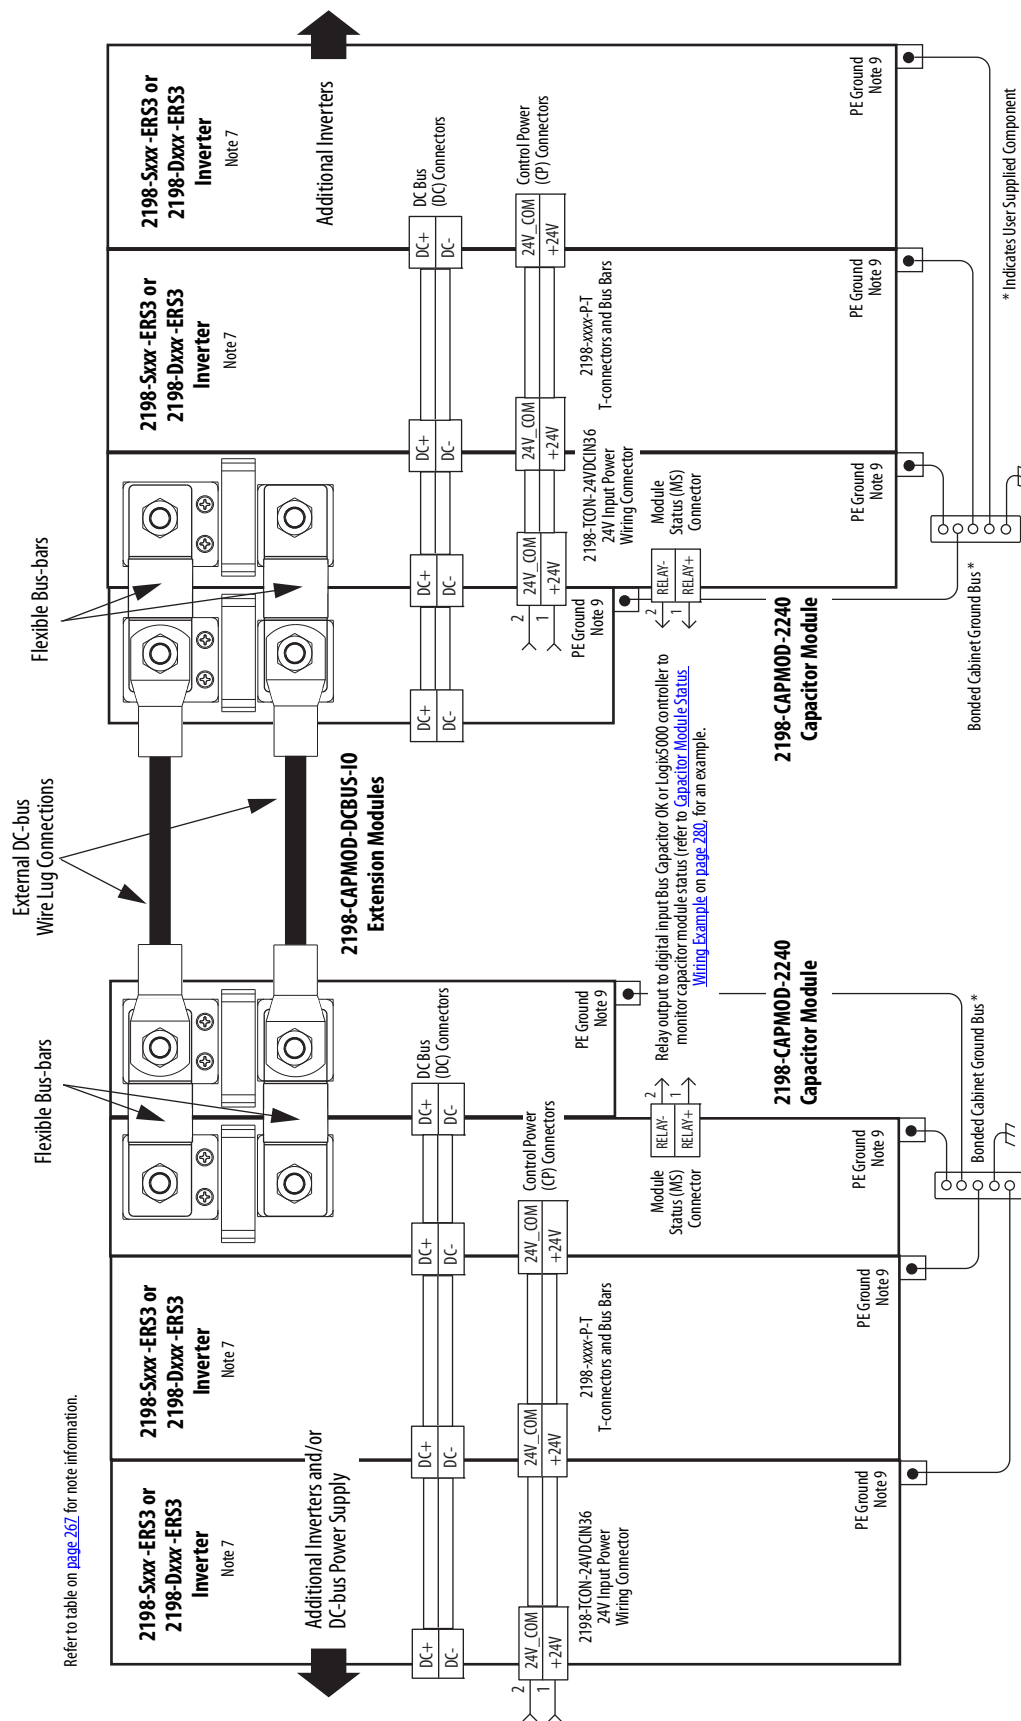

In this example, three-phase AC input power is fed to the Bulletin 8720MC-RPS065 regenerative power supply. The DC-bus voltage supplies the Kinetix 5700 DC-bus via the 2198-CAPMOD-2240 capacitor module. In configurations that exceed 100 A, up to a maximum of 200 A, the 2198-CAPMOD-DCBUS-IO extension module is also required.


IMPORTANT The 8720MC-RPS regenerative power supply is not compatible with the iTRAK power supply.

Figure 127 - 8720MC-RPS with Kinetix 5700 Drive System

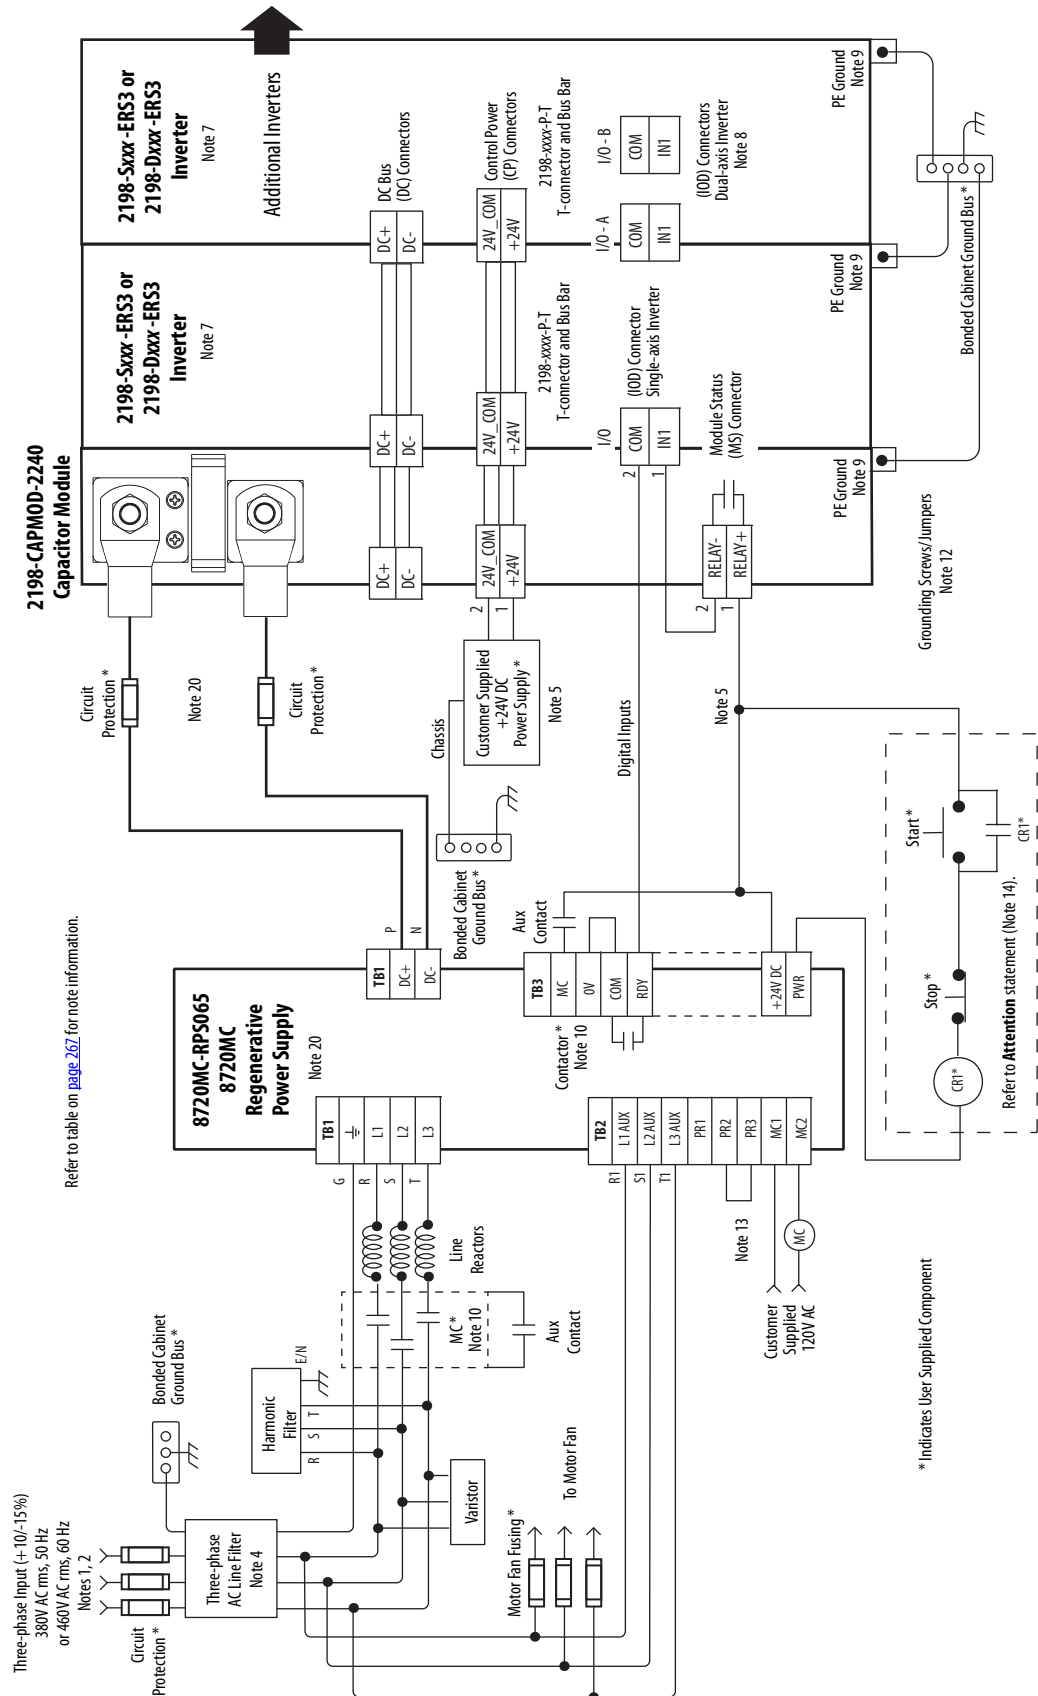


In this example, three-phase AC input power is fed to two 8720MC-RPS065 units in a master/slave configuration. The DC-bus (TB1) terminals connect to the Kinetix 5700 DC-bus via the 2198-CAPMOD-DCBUS-IO extension module because the system current exceeds 100 A.

Figure 128 - 8720MC-RPS065 Master/Slave Units with Kinetix 5700 Drive System

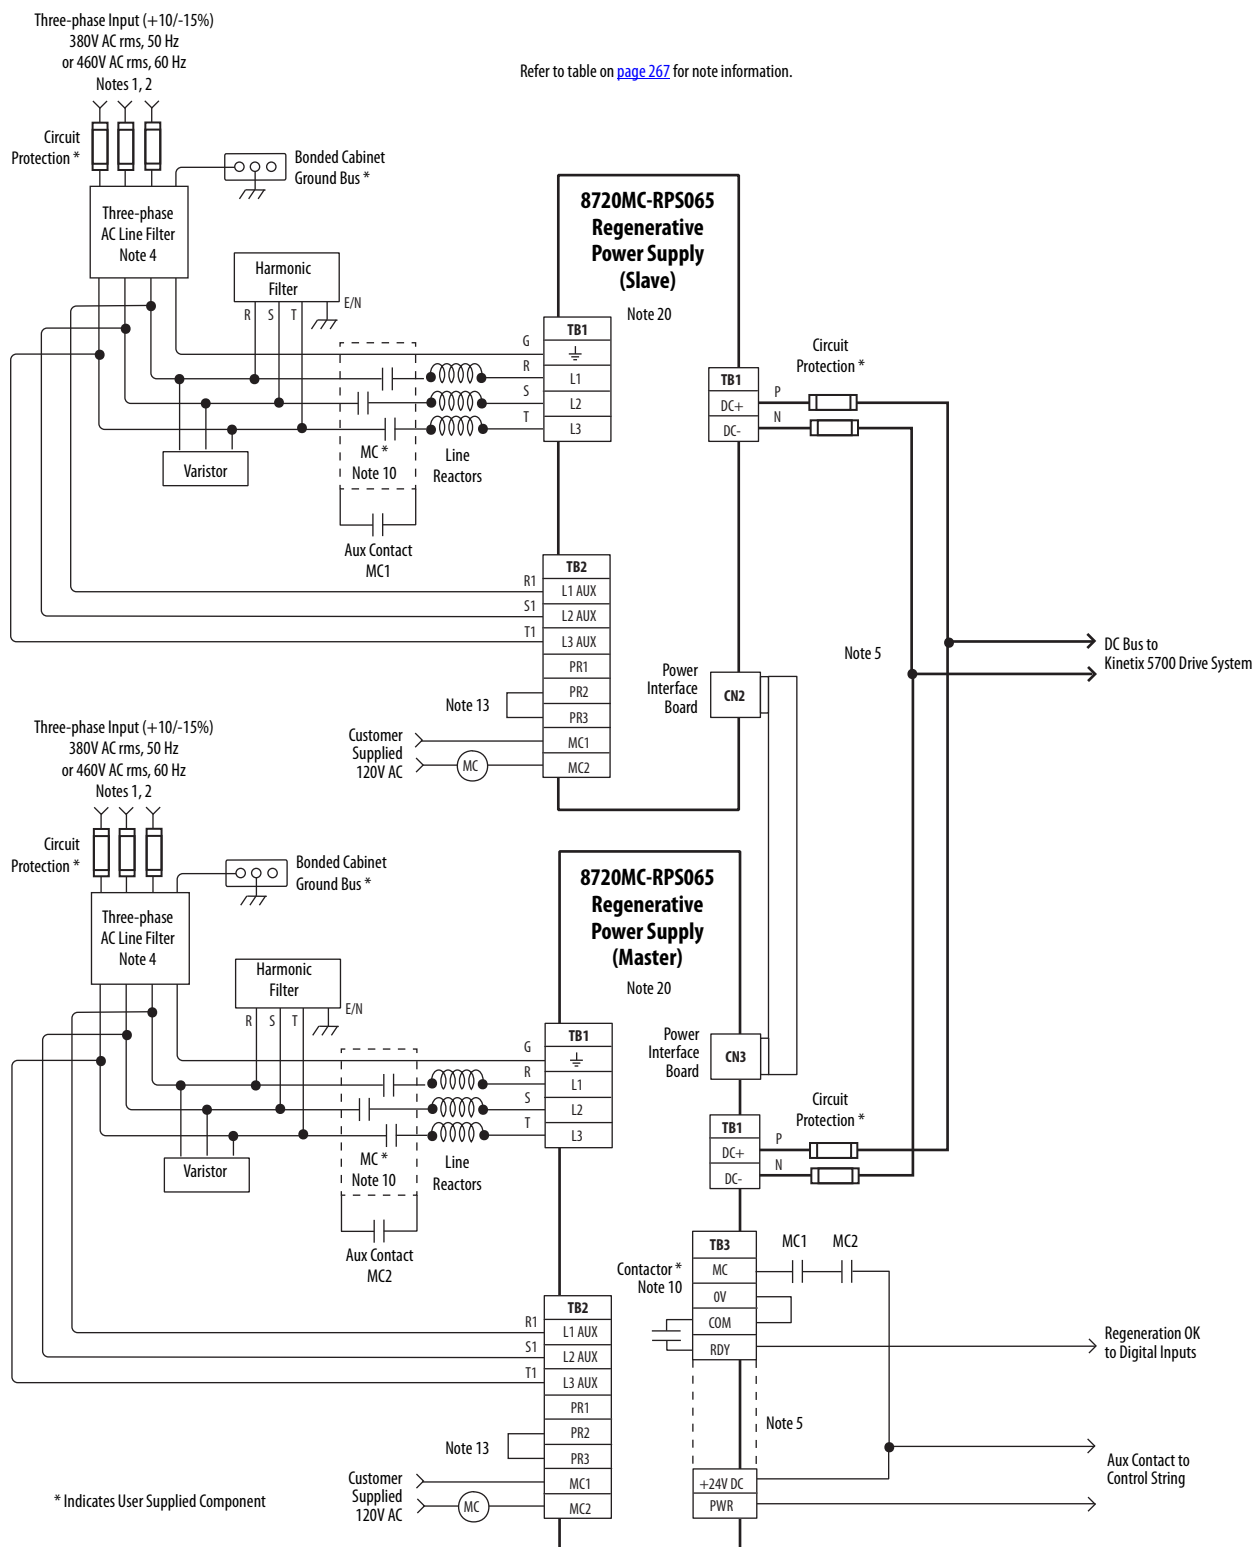

IMPORTANT The 8720MC-RPS regenerative power supply is not compatible with the iTRAK power supply.


8720MC-RPS065 Master/Slave Units with Kinetix 5700 Drive System (continued)

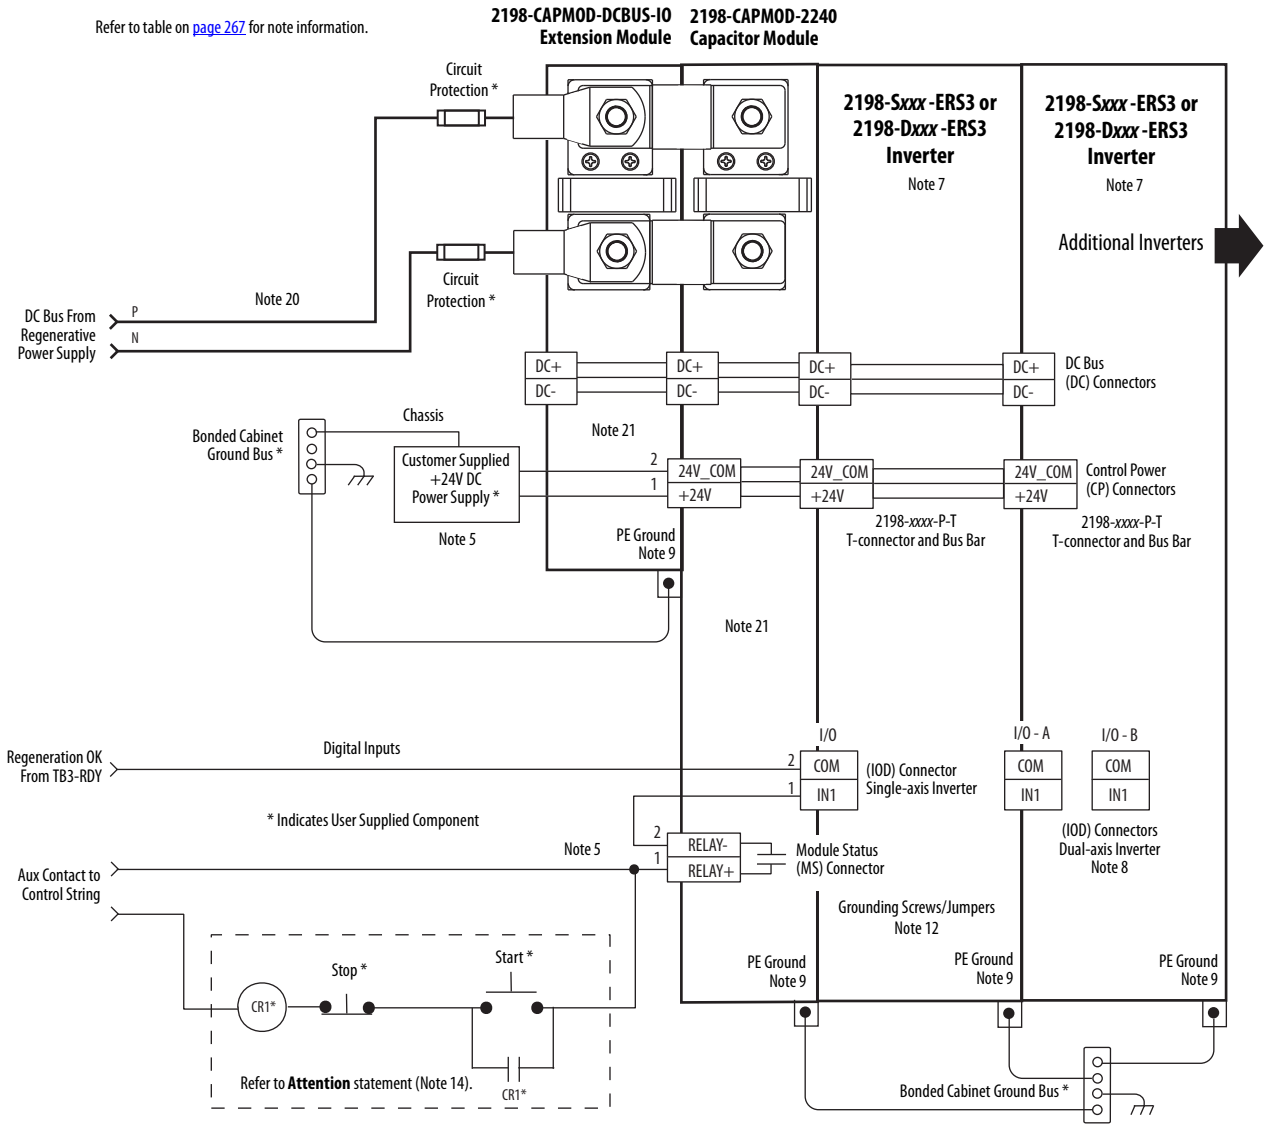

In this example, three-phase AC input power is fed to the 8720MC-RPS190 unit. The DC-bus (TB1) terminals connect to the Kinetix 5700 DC-bus via the 2198-CAPMOD-DCBUS-IO extension module because the system current exceeds 100 A.


IMPORTANT The 8720MC-RPS regenerative power supply is not compatible with the iTRAK power supply.

Figure 129 - 8720MC-RPS190 Unit with Kinetix 5700 Drive System

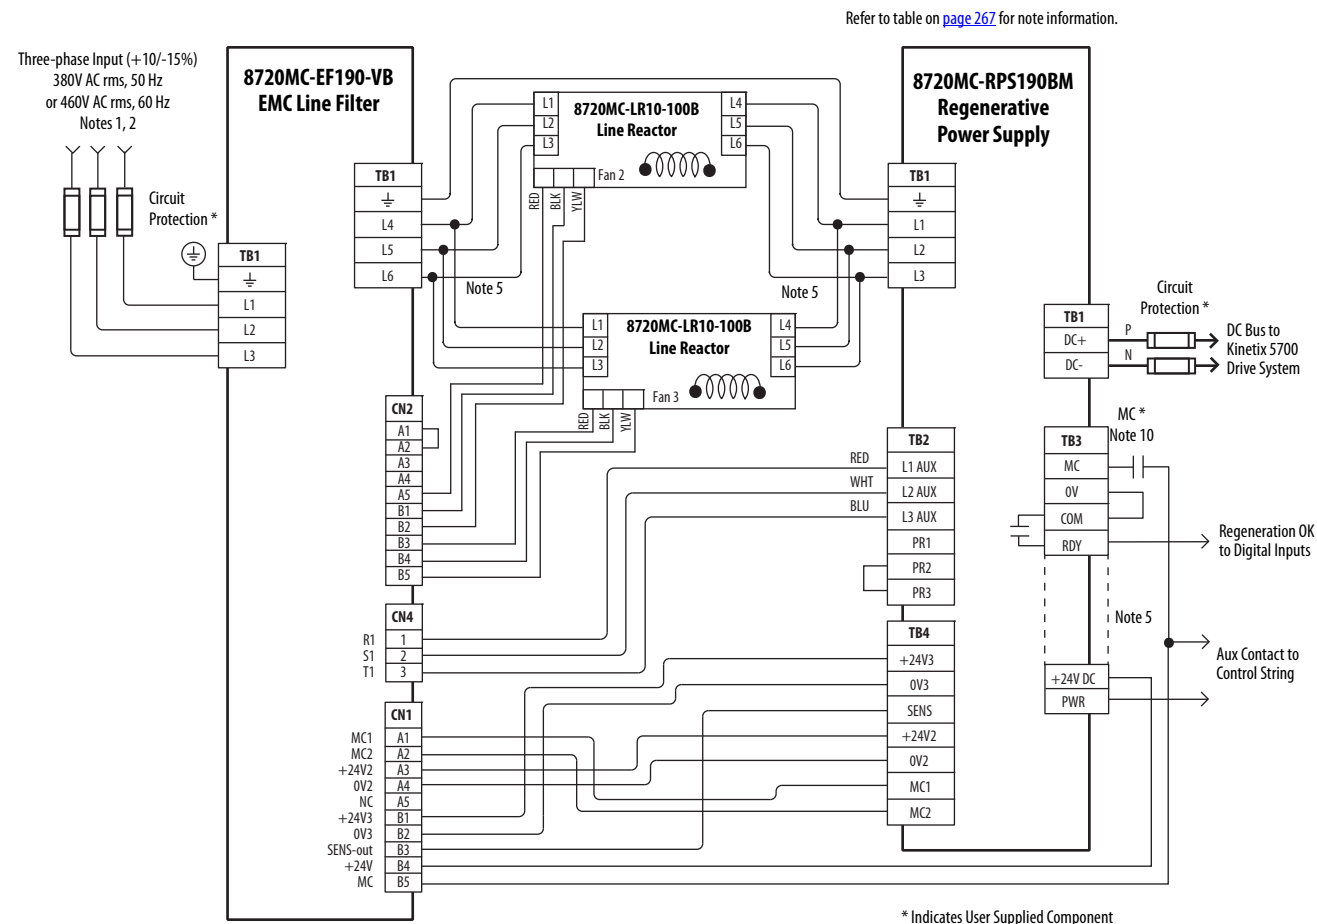

8720MC-RPS190 Unit with Kinetix 5700 Drive System (continued)


Refer to table on [page 267](#) for note information.

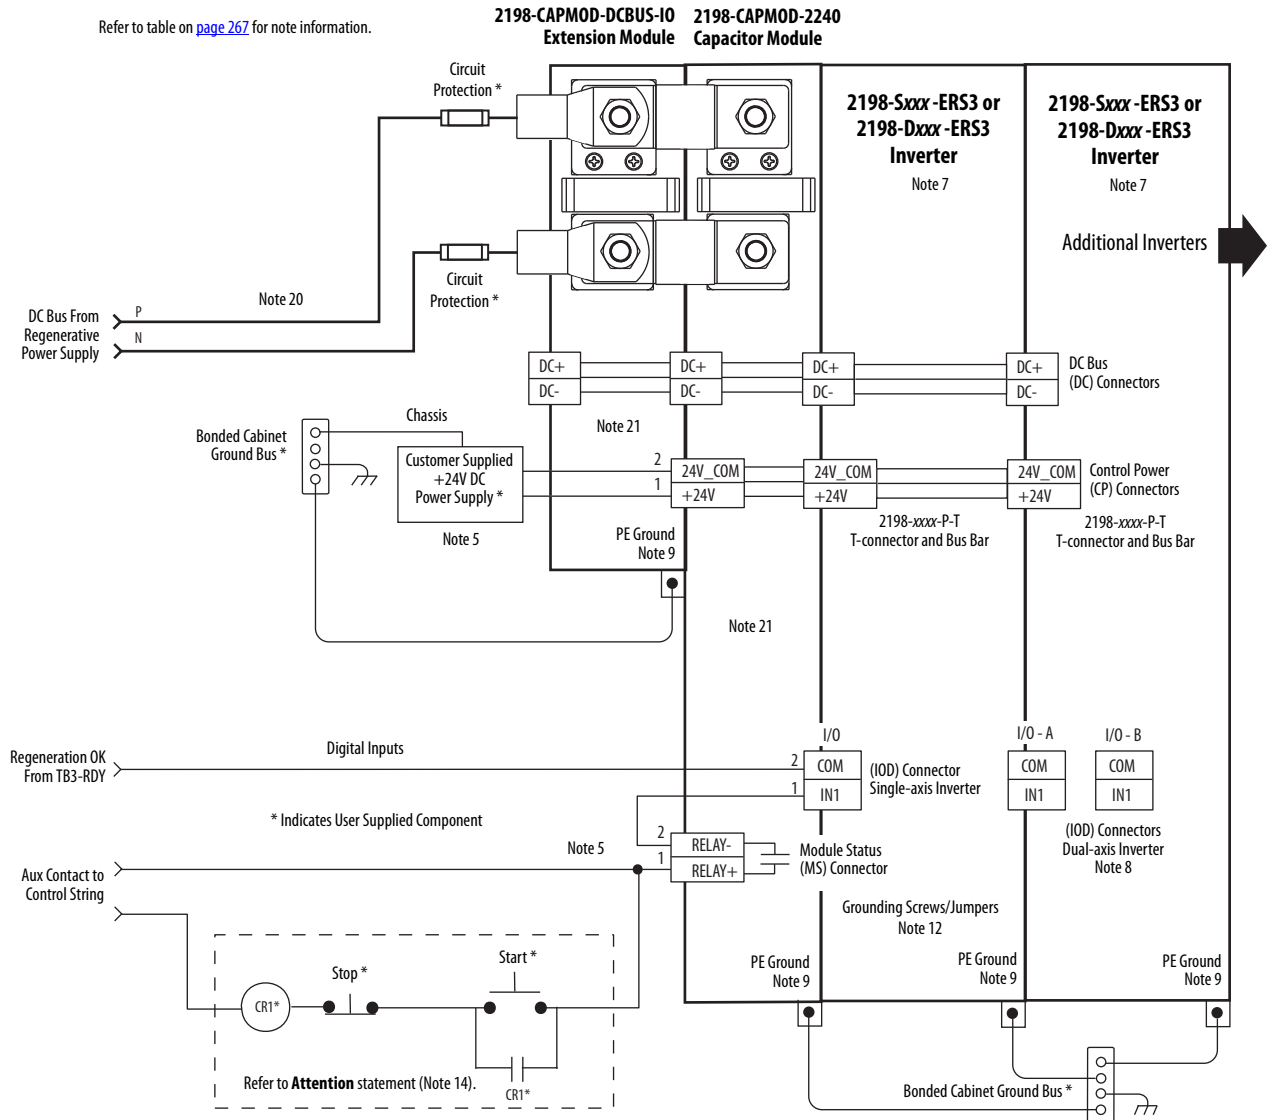

Capacitor Module Status Wiring Example

You can configure either of the DC-bus power supply digital inputs as Bus Capacitor OK in the Logix Designer application. Refer to [page 153](#) to see how the DC-bus power supply Digital Inputs tab is configured.

Figure 130 - DC-bus Power Supply with Capacitor Module

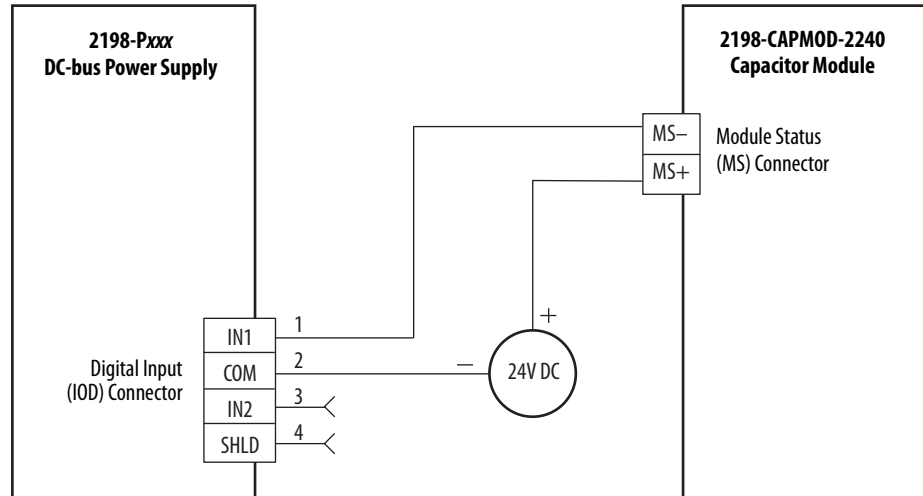

Refer to the Kinetix 5700 Capacitor Modules Installation Instructions, publication [2198-IN008](#), for additional installation information.

Passive Shunt Resistor Wiring Examples

Wiring from the Bulletin 2198 shunt modules and resistor are made directly to the shunt (RC) connector. You can configure either of the DC-bus power supply digital inputs as Shunt Thermal Switch OK in the Logix Designer application. Refer to [page 153](#) to see how the DC-bus power supply Digital Input tab is configured.

IMPORTANT Before wiring the Bulletin 2198 external shunt to the RC connector, remove the wires from the internal servo-drive shunt. Do not connect both internal and external shunt resistors to the DC-bus power supply.



ATTENTION: To avoid damage to the Kinetix 5700 drive system, wire the 2198-R014, 2198-R031, or 2198-R127 shunt thermal switch to a digital input on the DC-bus power supply and configure the Shunt Thermal Switch OK function in the Logix Designer application.

Figure 131 - DC-bus Power Supply with External Passive Shunt Module


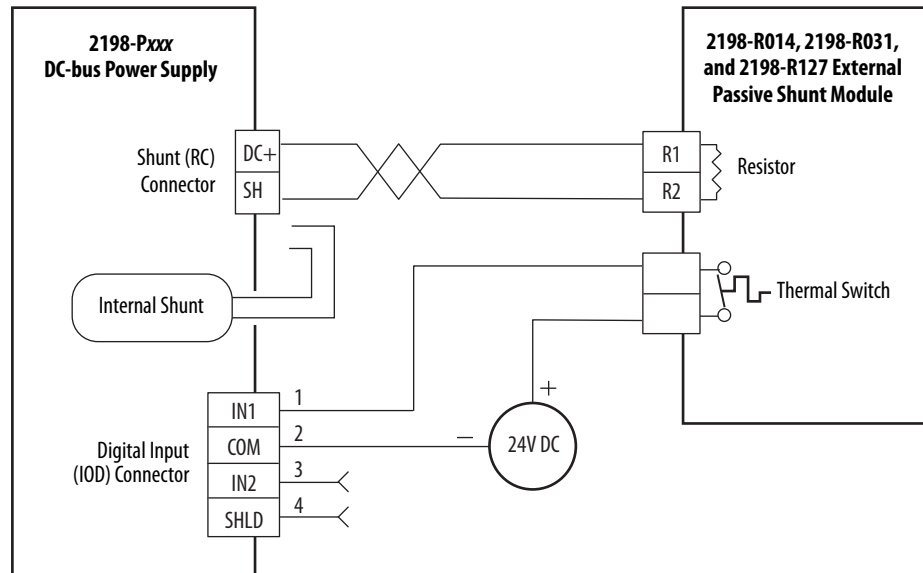


Figure 132 - DC-bus Power Supply with External Passive Shunt Resistor

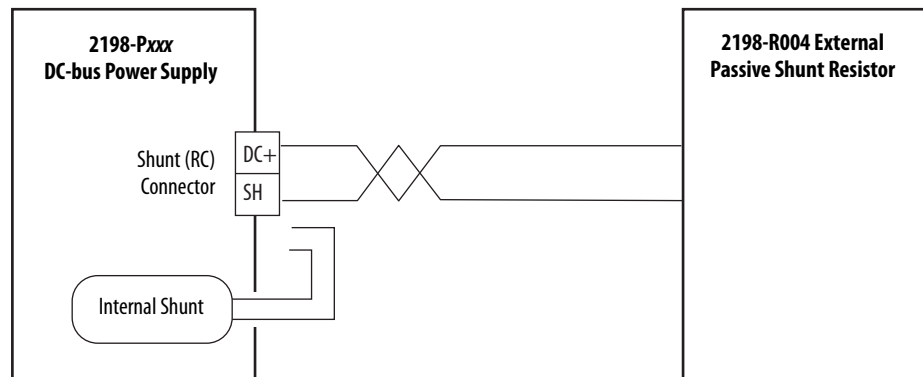


Refer to the Kinetix 5700 Passive Shunt Module Installation Instructions, publication [2198-IN011](#), for additional installation information.

Kinetix 5700 Servo Drive and Rotary Motor Wiring Examples

These Kinetix VP motors use single cable technology. The motor power, brake, and feedback wires are all packaged in a single cable.

Figure 133 - Kinetix 5700 Drives with Kinetix VP (Bulletin VPL, VPC-Bxxxx-Q, VPF, VPS) Motors

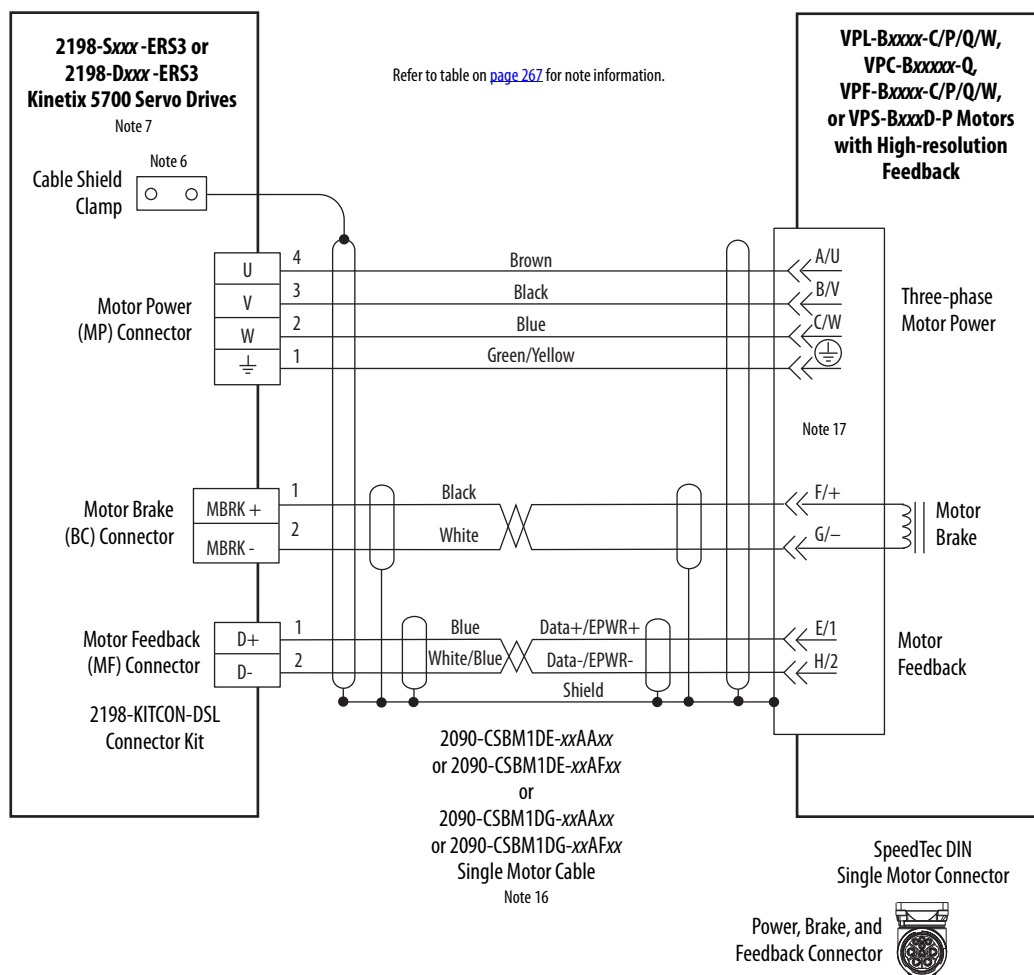

2090-CSxM1DE cables include the 2198-KITCON-DSL connector kit pre-assembled with the feedback conductors. 2090-CSxM1DG cables have flying leads and the 2198-KITCON-DSL kit is ordered separately.

Figure 134 - Single Motor Cables for Kinetix 5700 Servo Drives



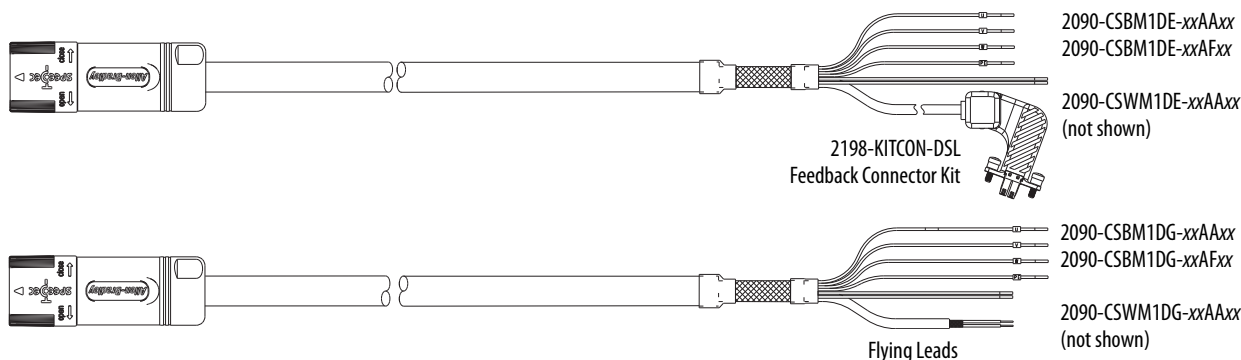


Figure 135 - Kinetix 5700 Drives with Kinetix VP Continuous Duty Motors

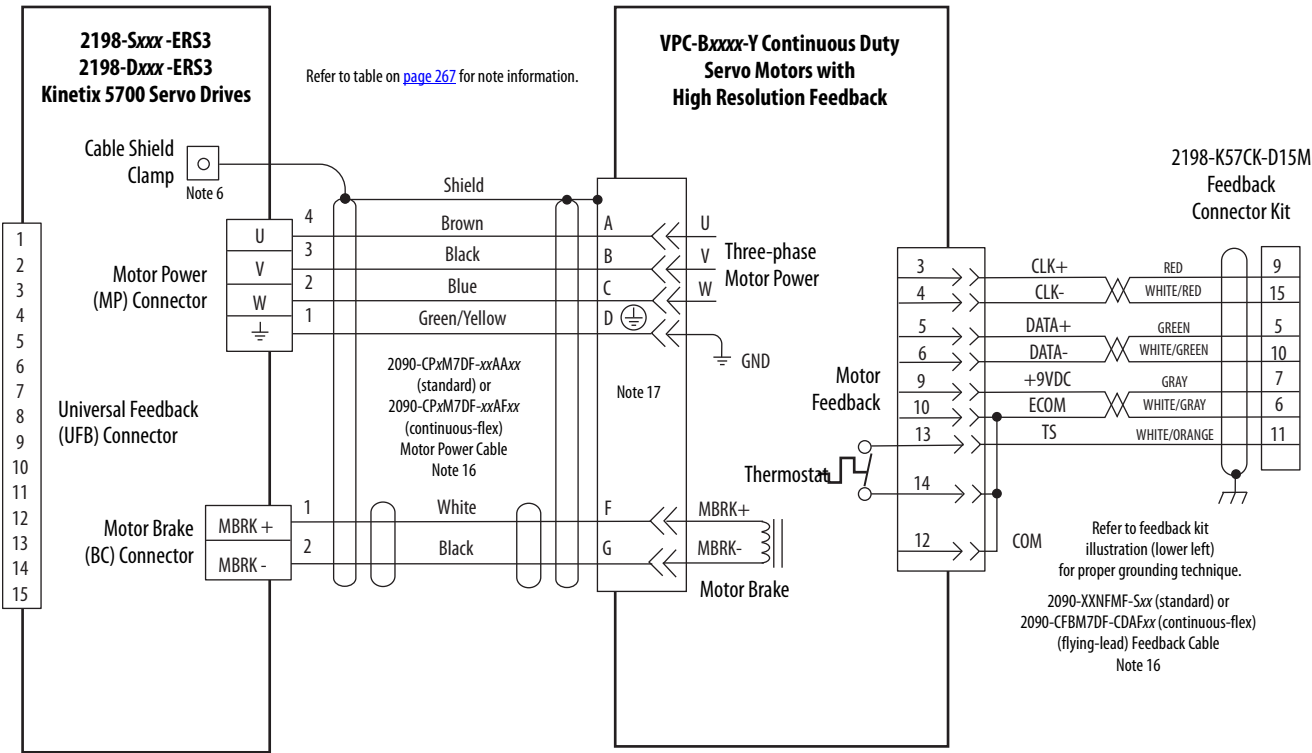


These compatible Allen-Bradley rotary motors have separate cables for motor power/brake and feedback connections.


Figure 136 - Kinetix 5700 Drives with MP-Series and Kinetix VP (Bulletin VPC-Bxxxxx-S Motors)

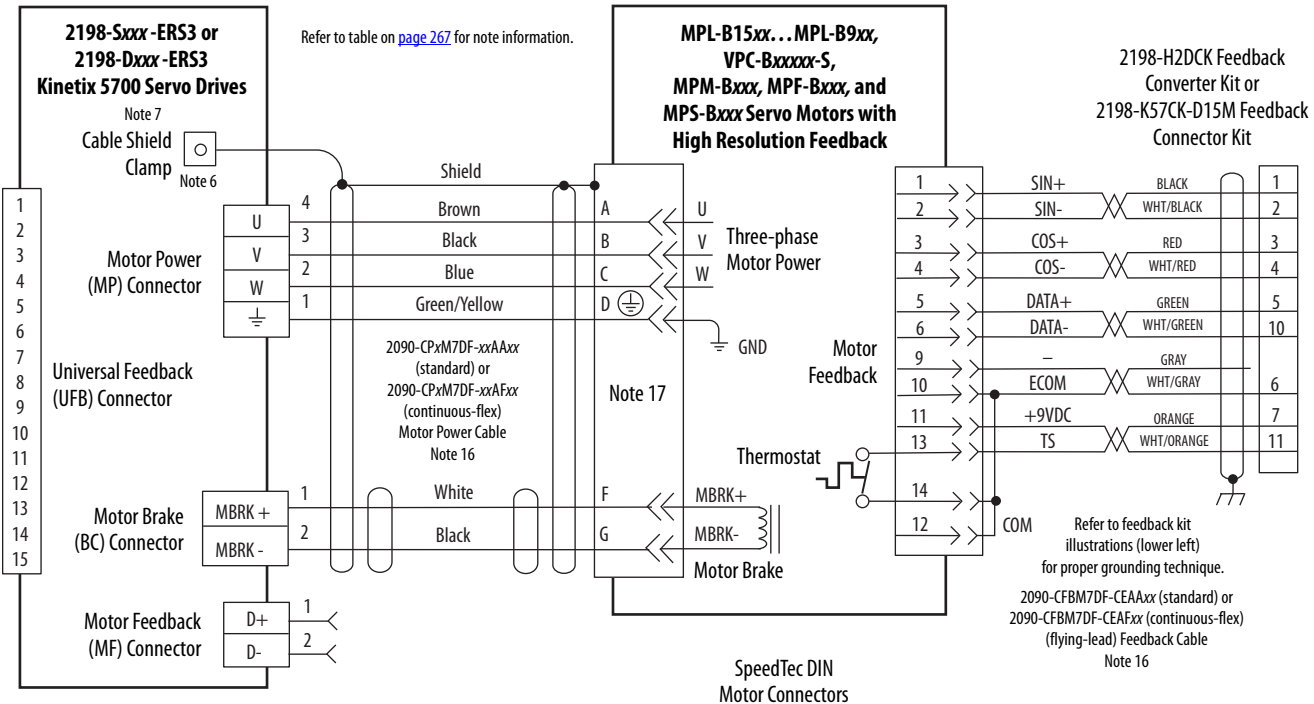

Grounding Techniques for Feedback Cable Shield

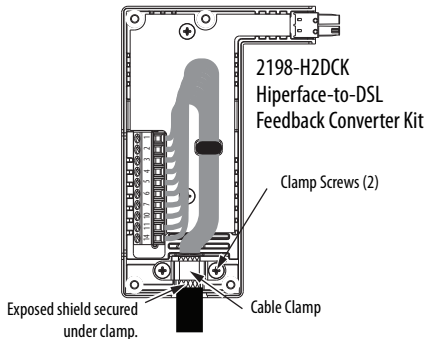

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

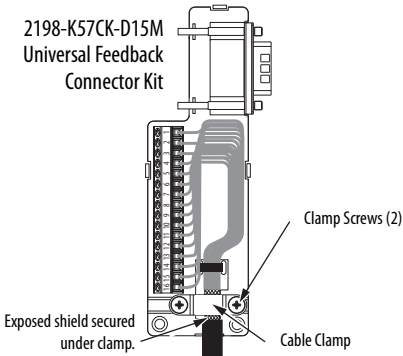

Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.



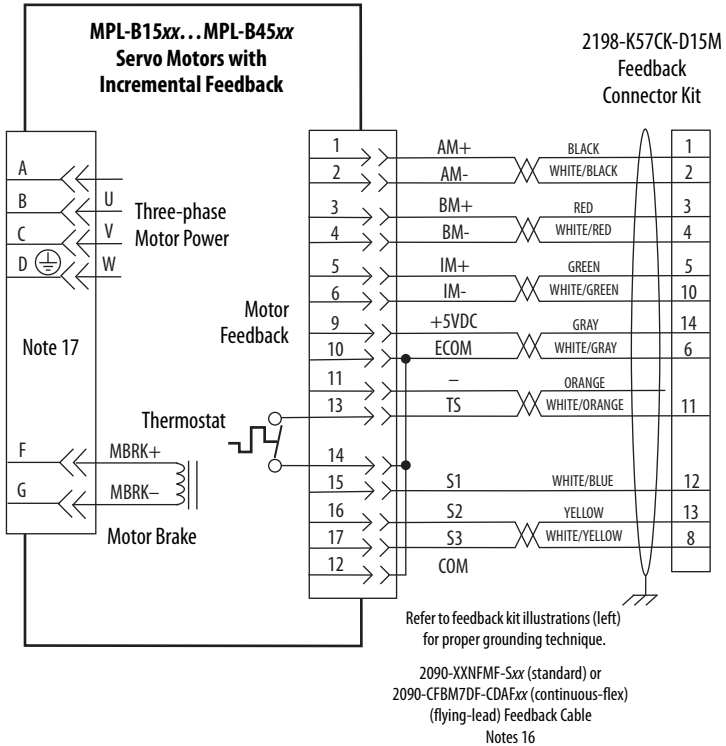



Figure 137 - Kinetix 5700 Drives with HPK-Series Rotary Motors

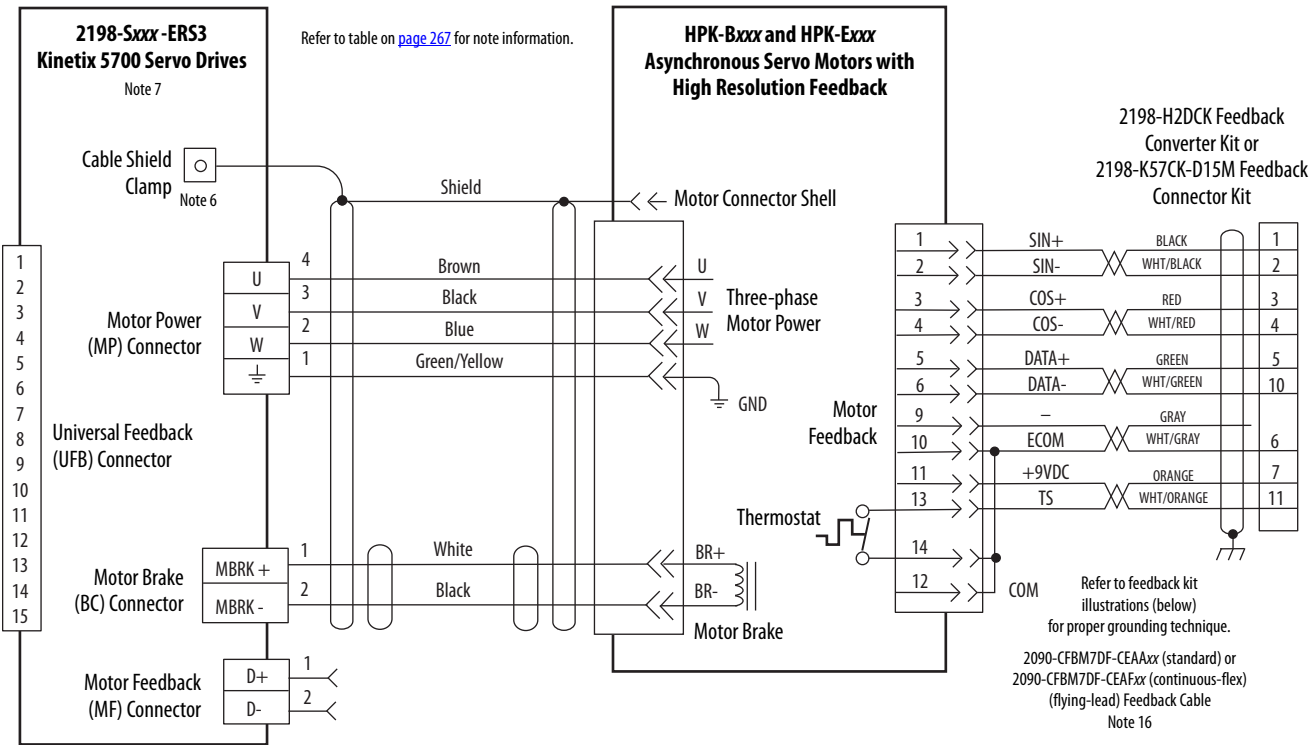

Grounding Techniques for Feedback Cable Shield

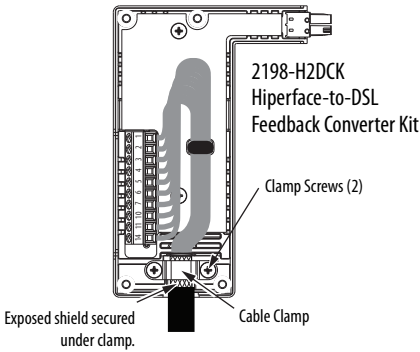

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

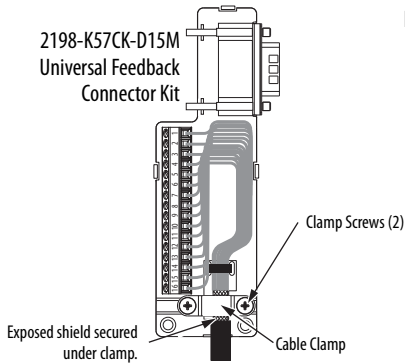


Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.




SpeedTec DIN Feedback Connector

Figure 138 - Kinetix 5700 Drives with RDD-Series Direct Drive Motors

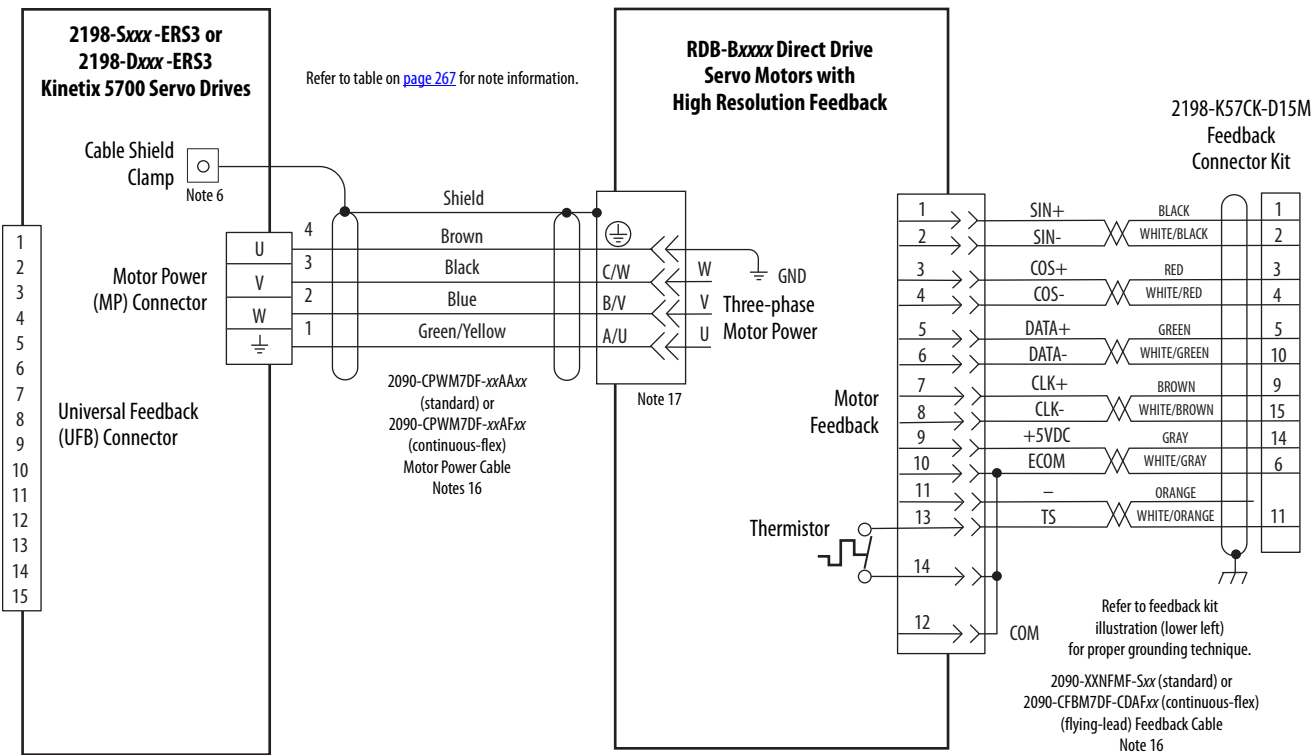


Grounding Techniques for Feedback Cable Shield

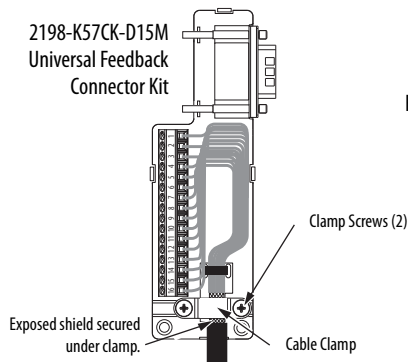

Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.


SpeedTec DIN Motor Connectors




Kinetix 5700 Servo Drive and Linear Actuator Wiring Examples

Compatible linear actuators have separate cables for power/brake and feedback connections.


Figure 139 - Kinetix 5700 Drives with LDAT-Series Linear Thrusters

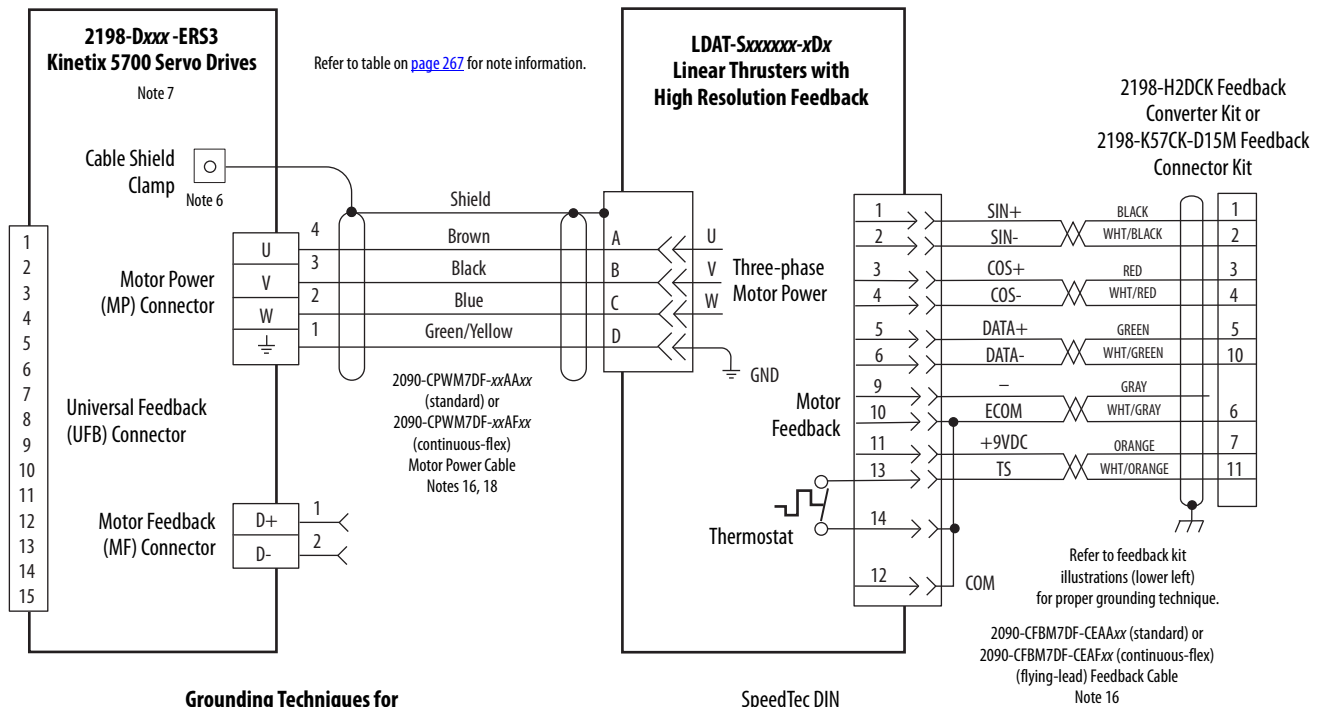

Grounding Techniques for Feedback Cable Shield

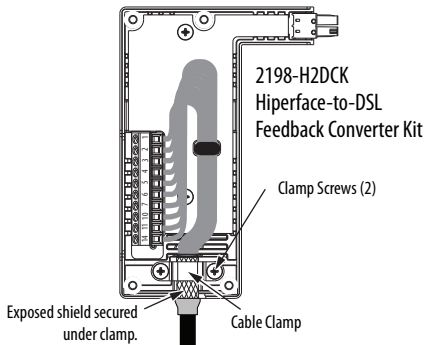

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

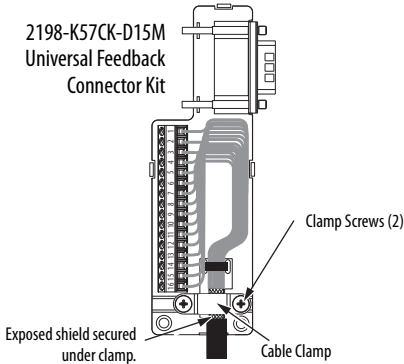

Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.

SpeedTec DIN Motor Connectors




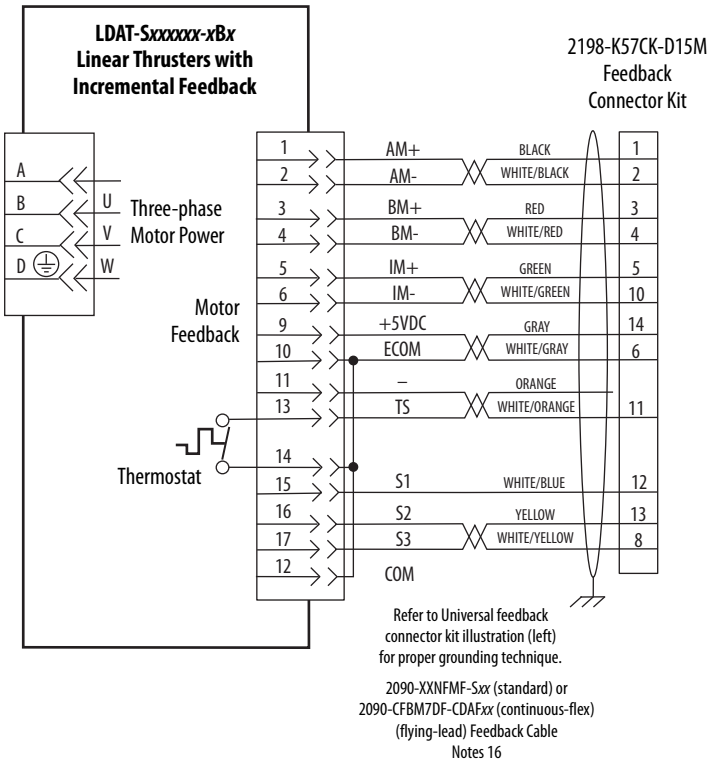



Figure 140 - Kinetix 5700 Drives with MP-Series Linear Stages

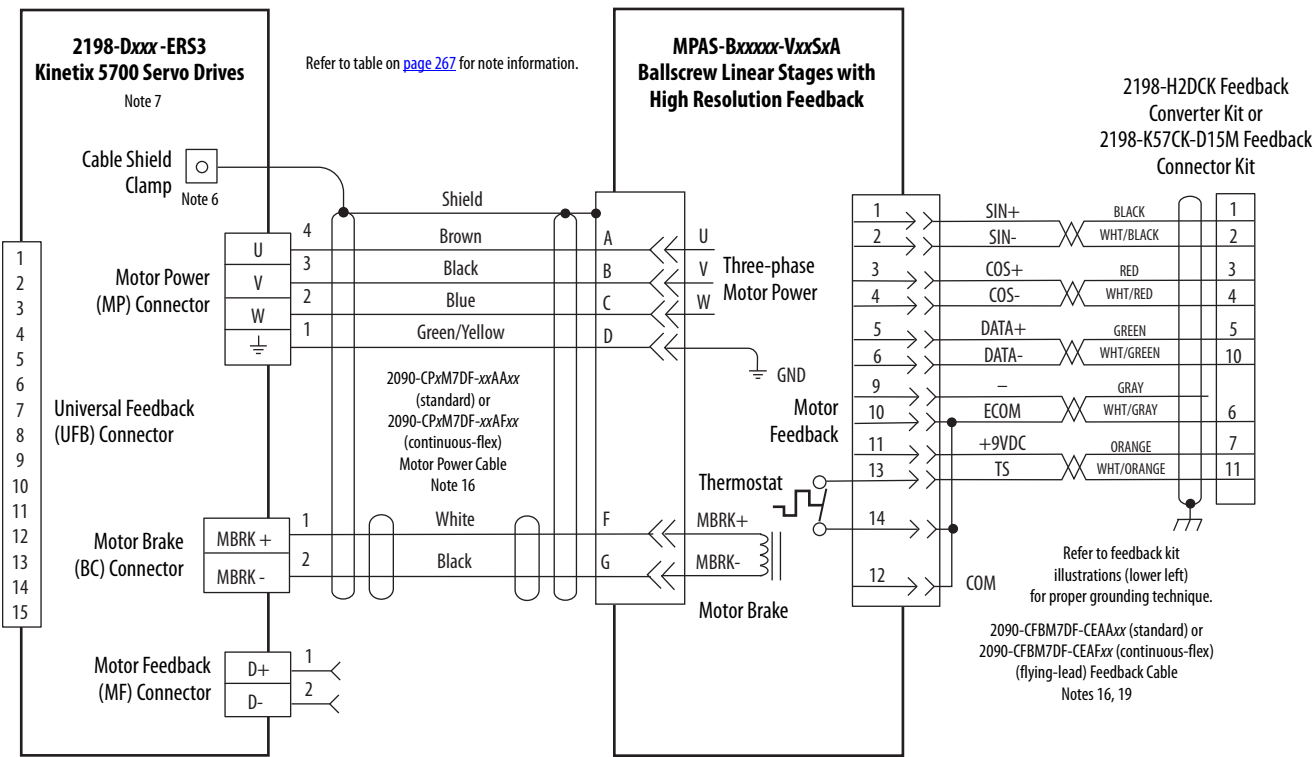

Grounding Techniques for Feedback Cable Shield

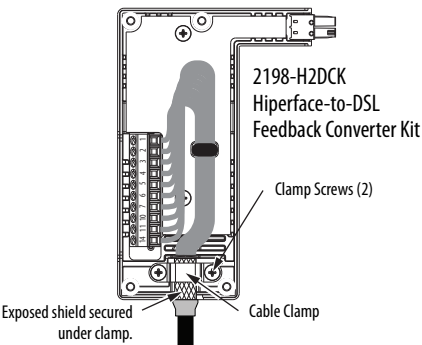

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

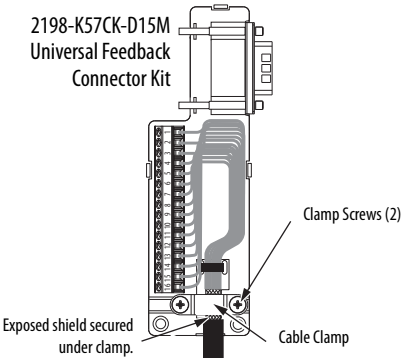

Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.

SpeedTec DIN Motor Connectors




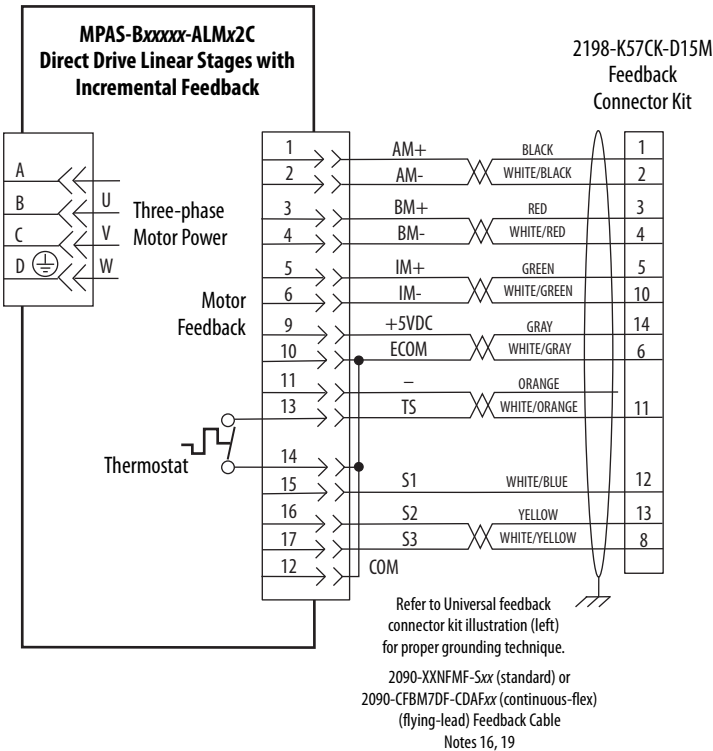



Figure 141 - Kinetix 5700 Drives with MP-Series Electric Cylinders**Grounding Techniques for Feedback Cable Shield****Table 136 - MP-Series Electric Cylinder Power and Feedback Cables**

MP-Series Electric Cylinder Cat. No.	Frame	Power Cable Cat. No.	Feedback Cable Cat. No.
MPAR-B1xxx (series A)	32	2090-XXNPMF-16Sxx (standard) or 2090-CPxM4DF-16AFxx (continuous-flex)	2090-XXNFMF-Sxx (standard) or 2090-CFBM4DF-CEAFxx (continuous-flex)
MPAR-B2xxx (series A)	40		
MPAR-B1xxx (series B)	32		
MPAR-B2xxx (series B)	40		
MPAR-B3xxx	63		
MPAI-B2xxxx	64	2090-CPxM7DF-16AAxx (standard) or 2090-CPxM7DF-16AFxx (continuous-flex)	2090-CFBM7DF-CEAAxx (standard) or 2090-CFBM7DF-CEAFxx (continuous-flex)
MPAI-B3xxxx	83		
MPAI-B4xxxx	110		
MPAI-B5xxxx	144		

Figure 142 - Kinetix 5700 Drives with LDC-Series Linear Motors (cable connectors)

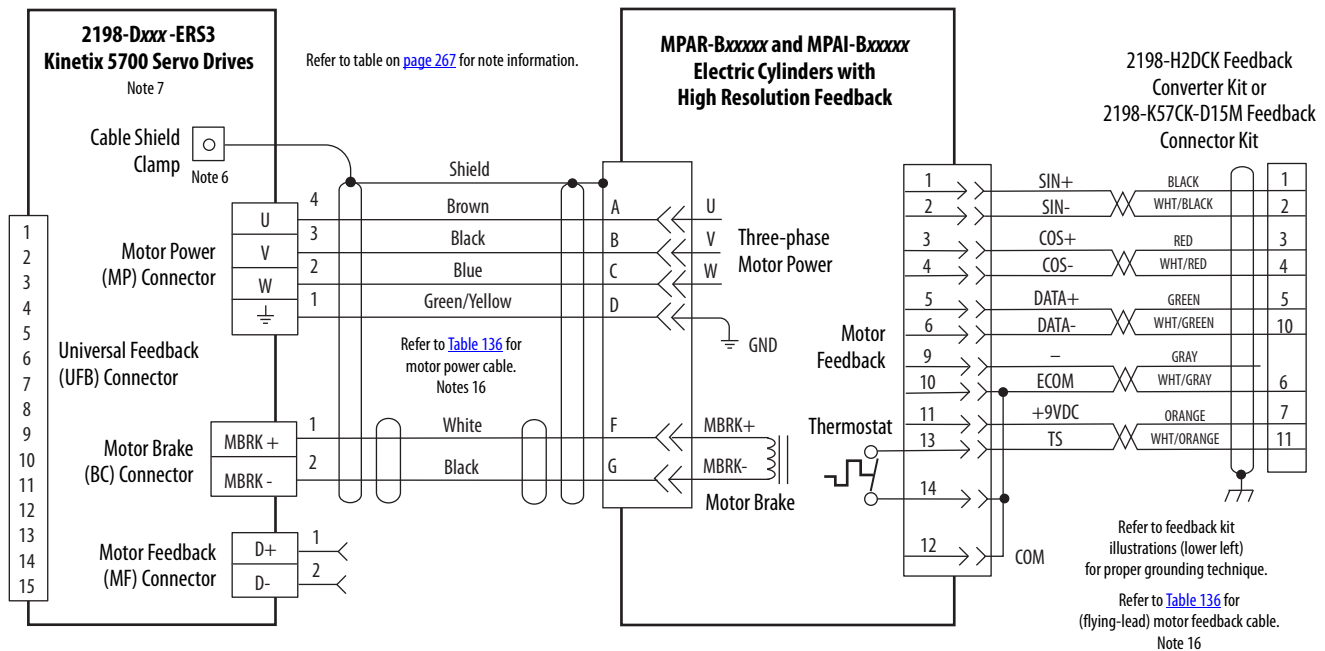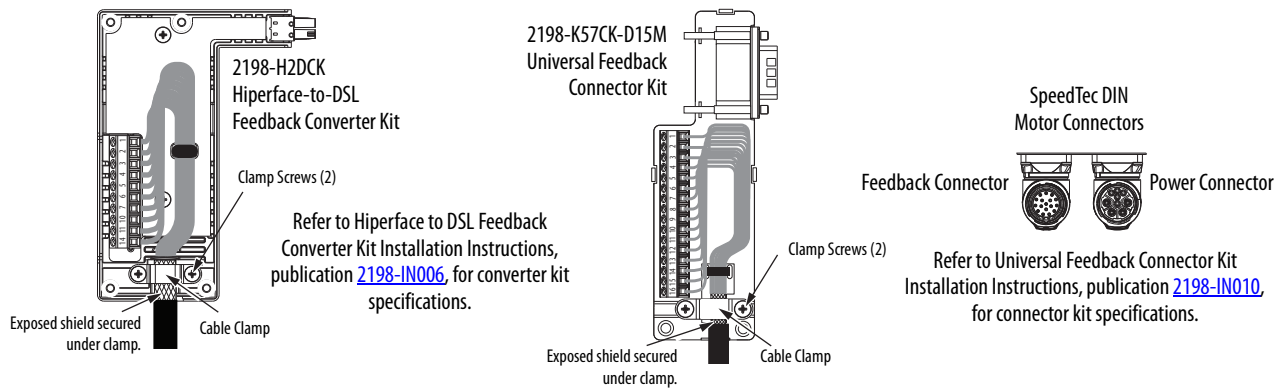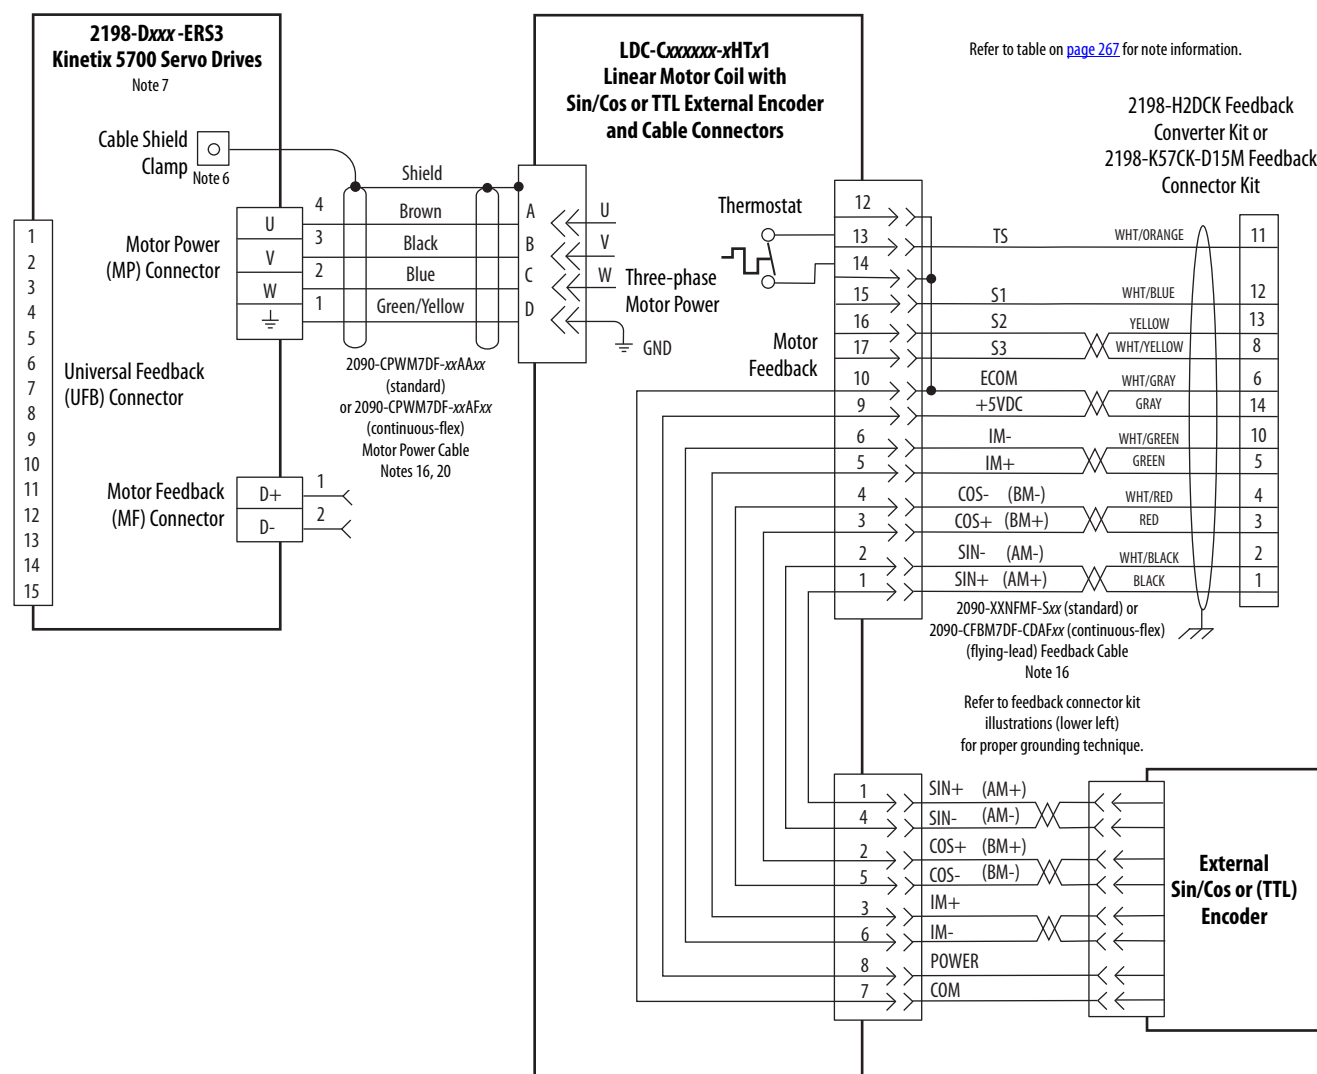


Grounding Techniques for Feedback Cable Shield

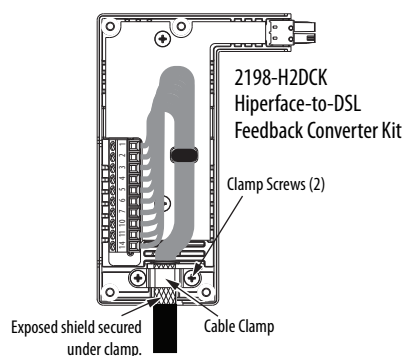

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

2198-K57CK-D15M
Universal Feedback
Connector Kit

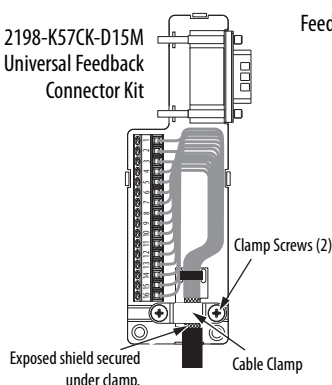



Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.

SpeedTec DIN
Motor Connectors


Feedback Connector



Power Connector

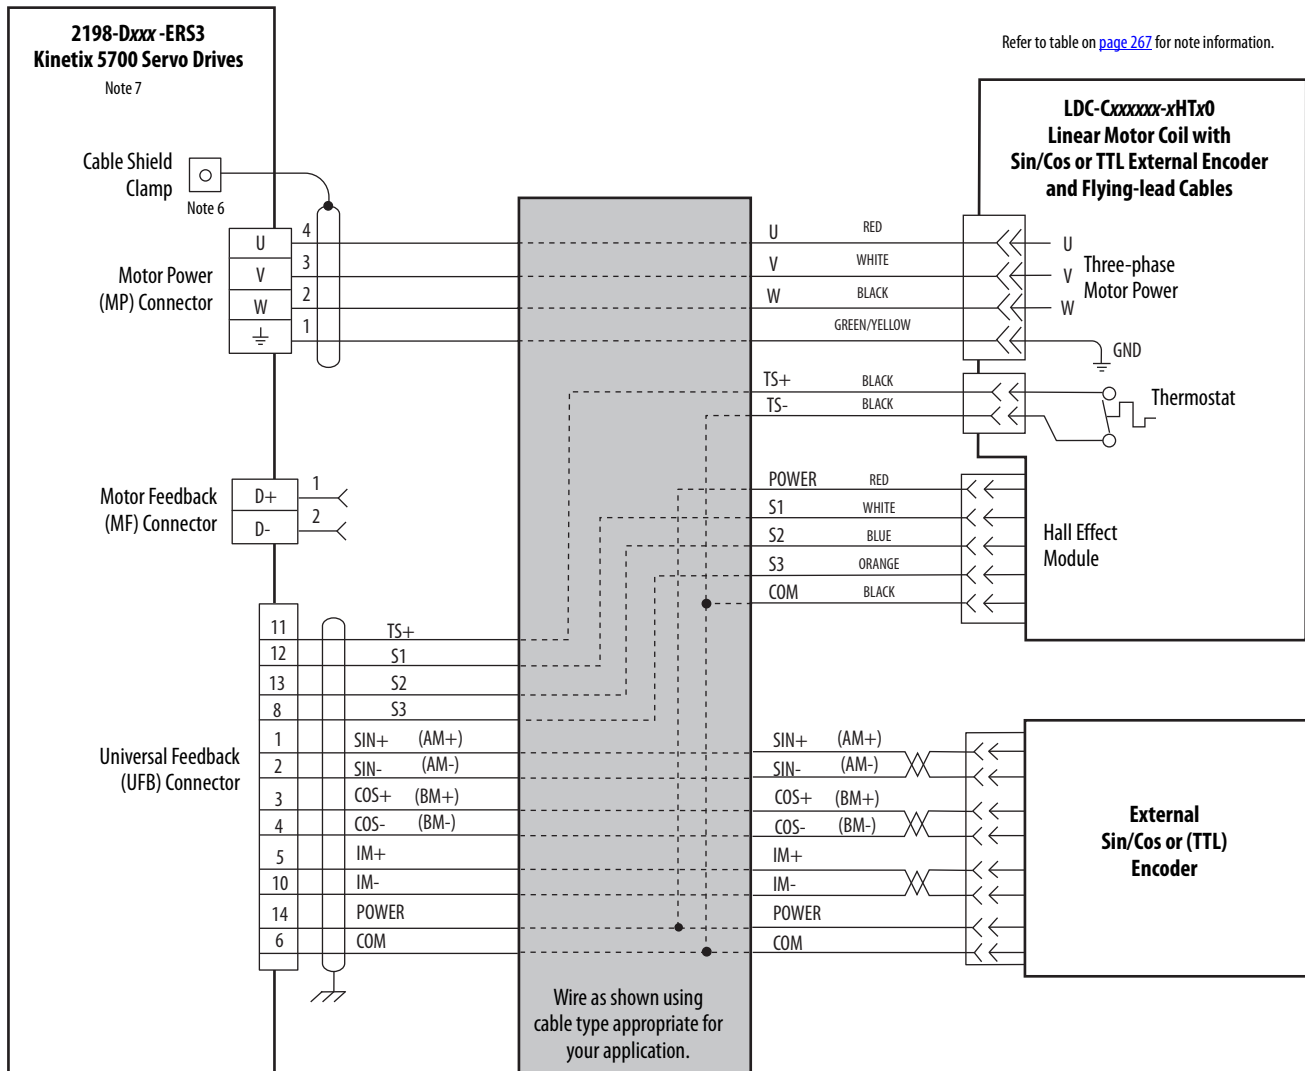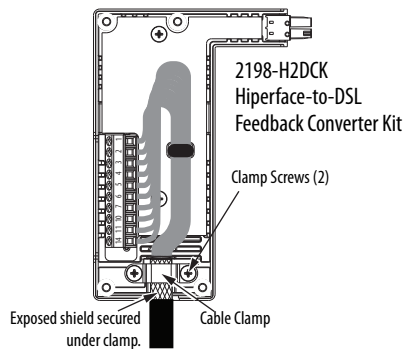**Figure 143 - Kinetix 5700 Drives with LDC-Series Linear Motors
(flying-lead cables)****Grounding Techniques for Feedback Cable Shield**

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

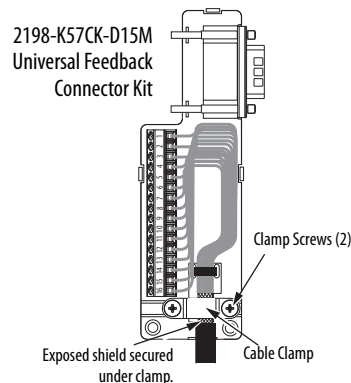


Refer to Universal Feedback Connector Kit Installation Instructions, publication [2198-IN010](#), for connector kit specifications.

System Block Diagrams


This section provides block diagrams of the Kinetix 5700 drive modules.

Figure 144 - DC-bus Power Supply Block Diagram

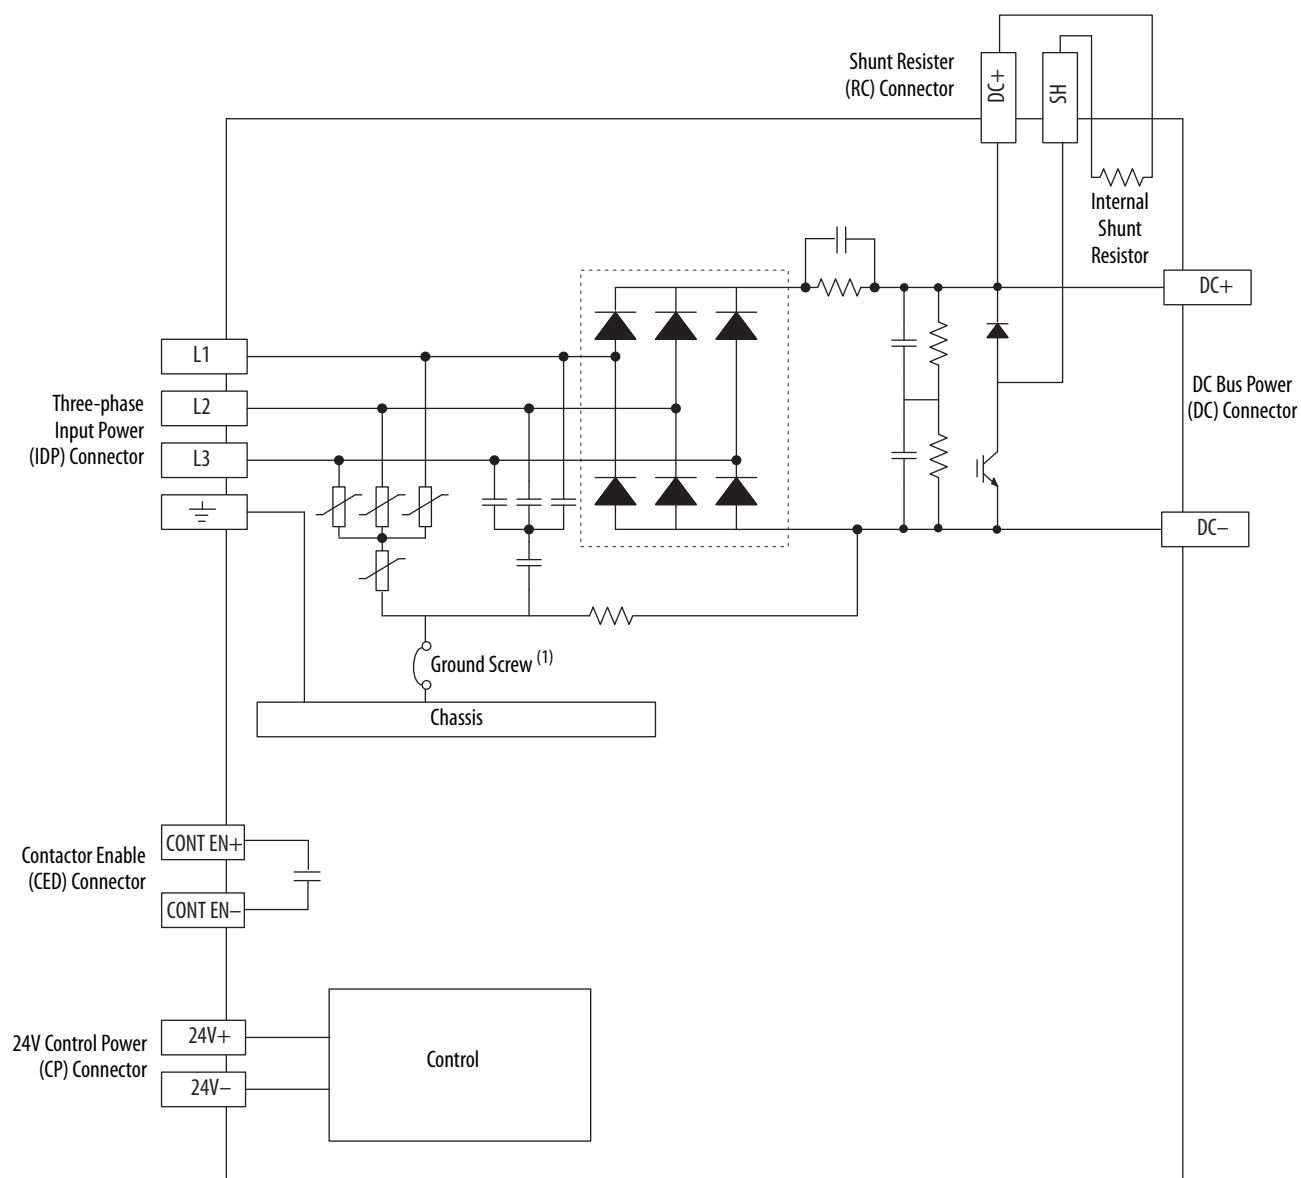


(1) Ground screw in the installed (default) configuration.

Figure 145 - Single-axis Inverter Block Diagram

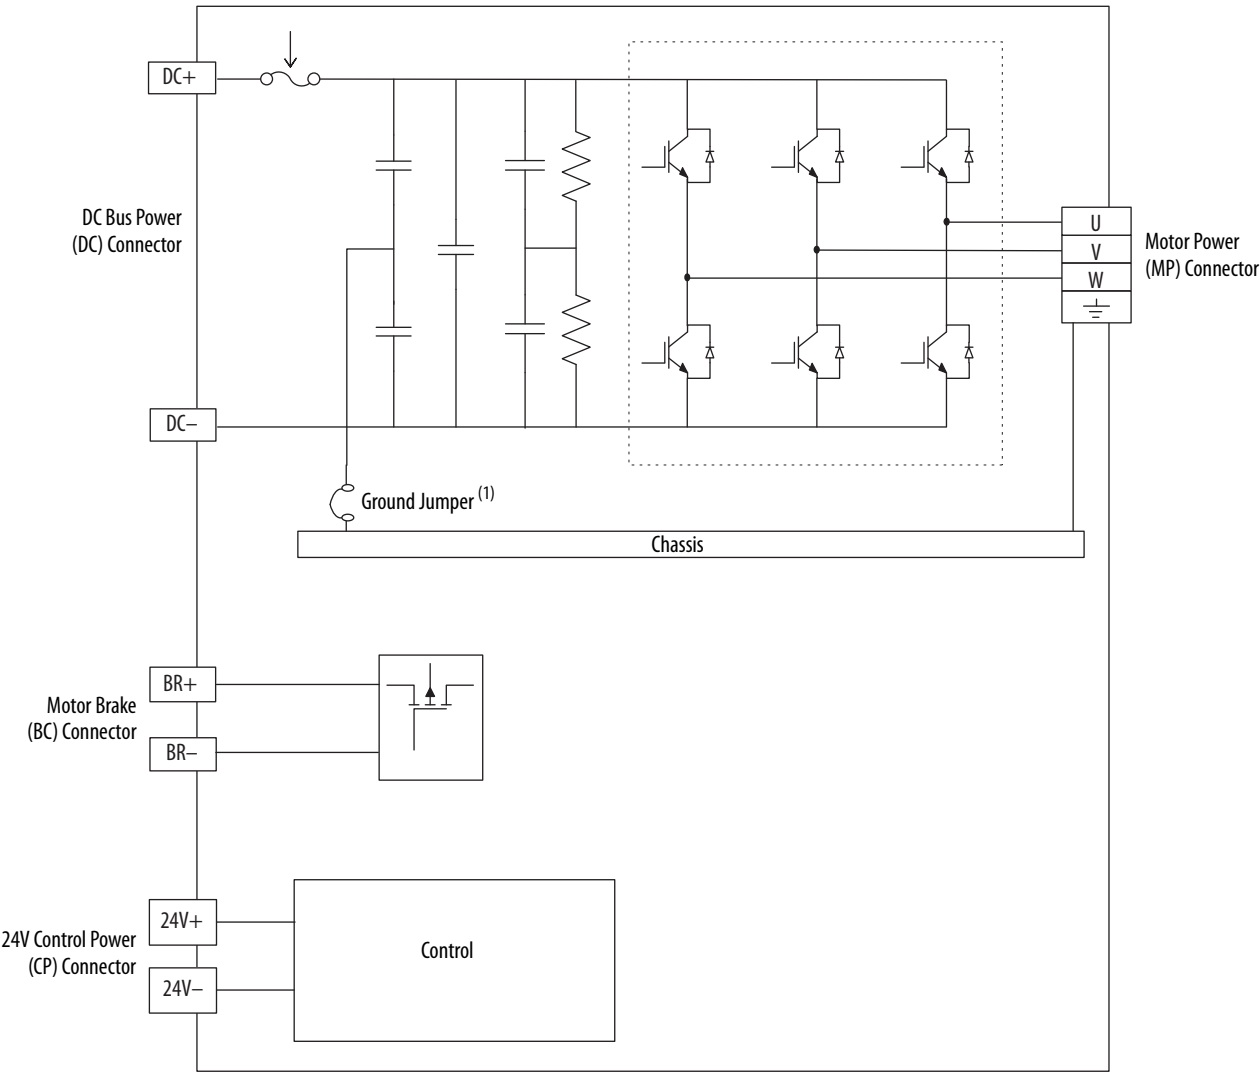


(1) Ground jumper in the installed (default) configuration.

Figure 146 - Dual-axis Inverter Block Diagram

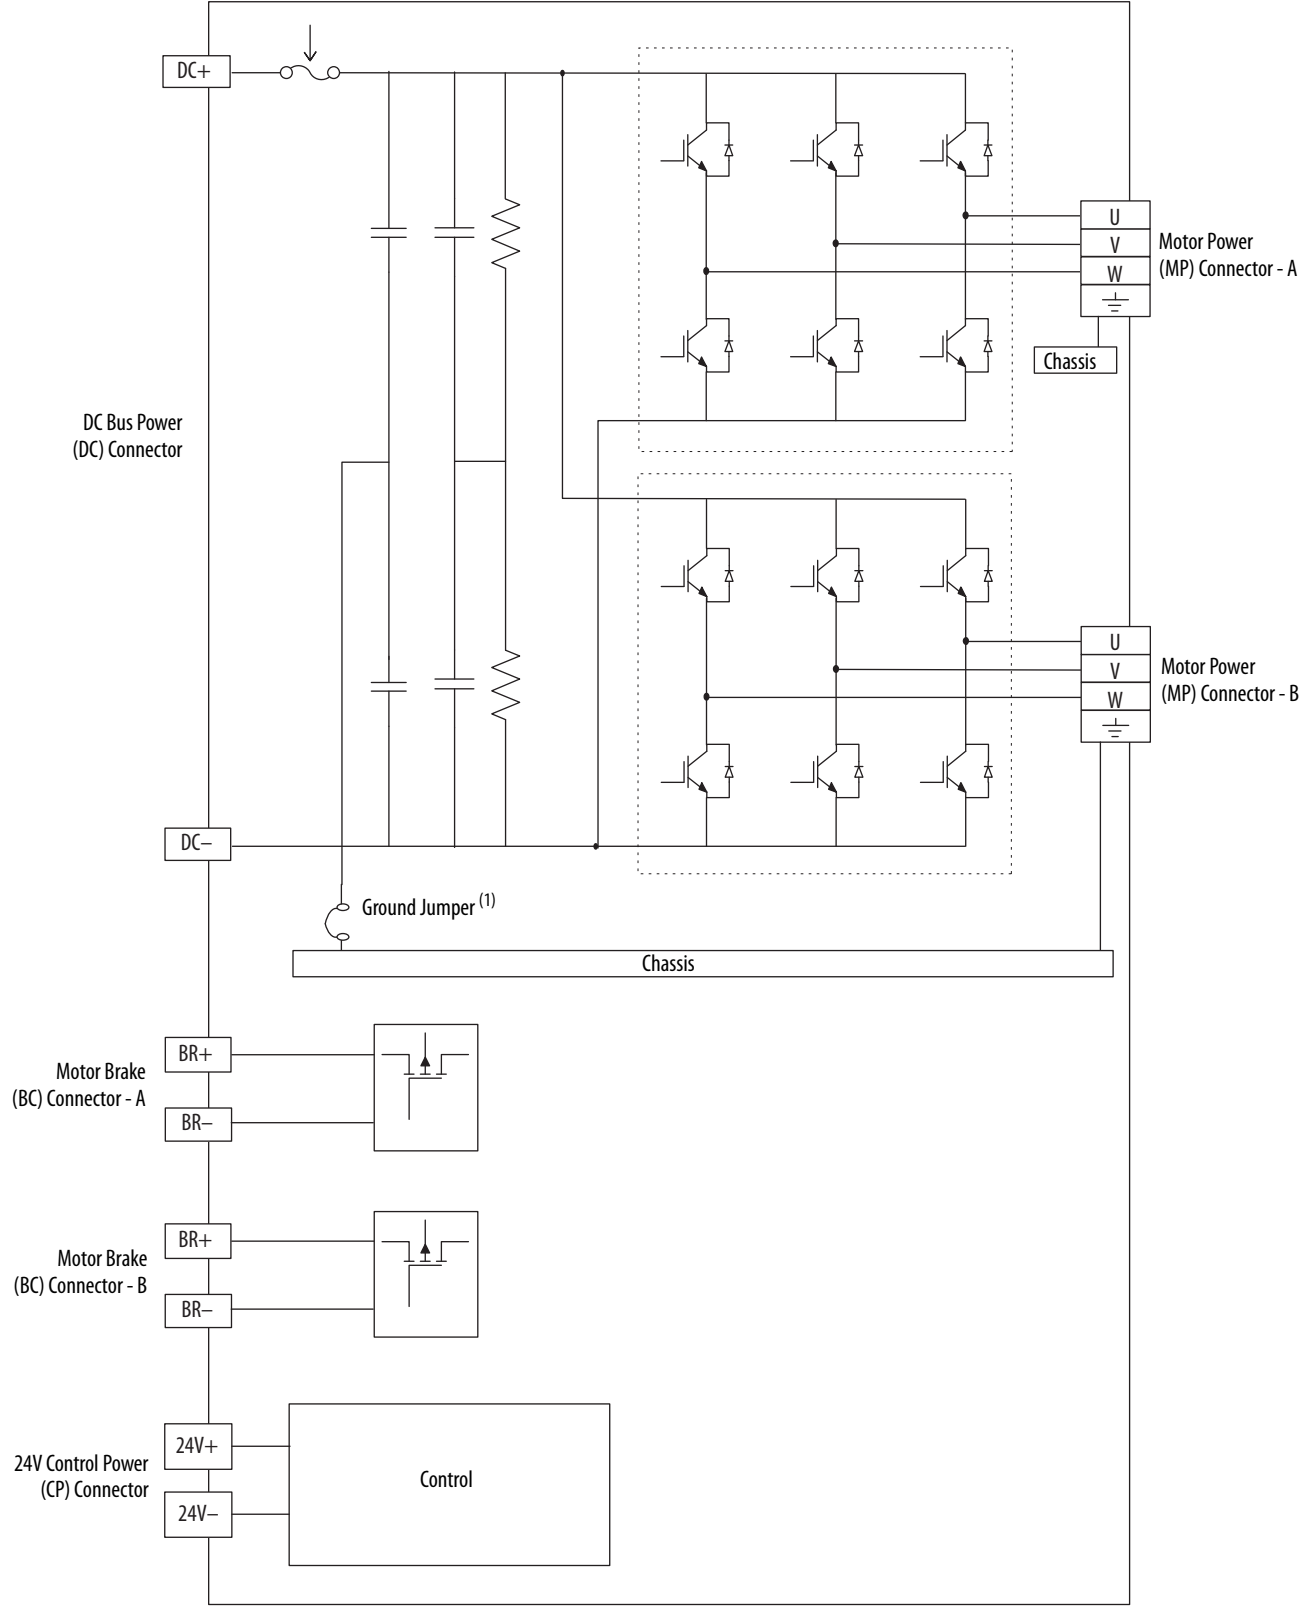


(1) Ground screw in the installed (default) configuration.

Figure 147 - iTRAK Power Supply Block Diagram

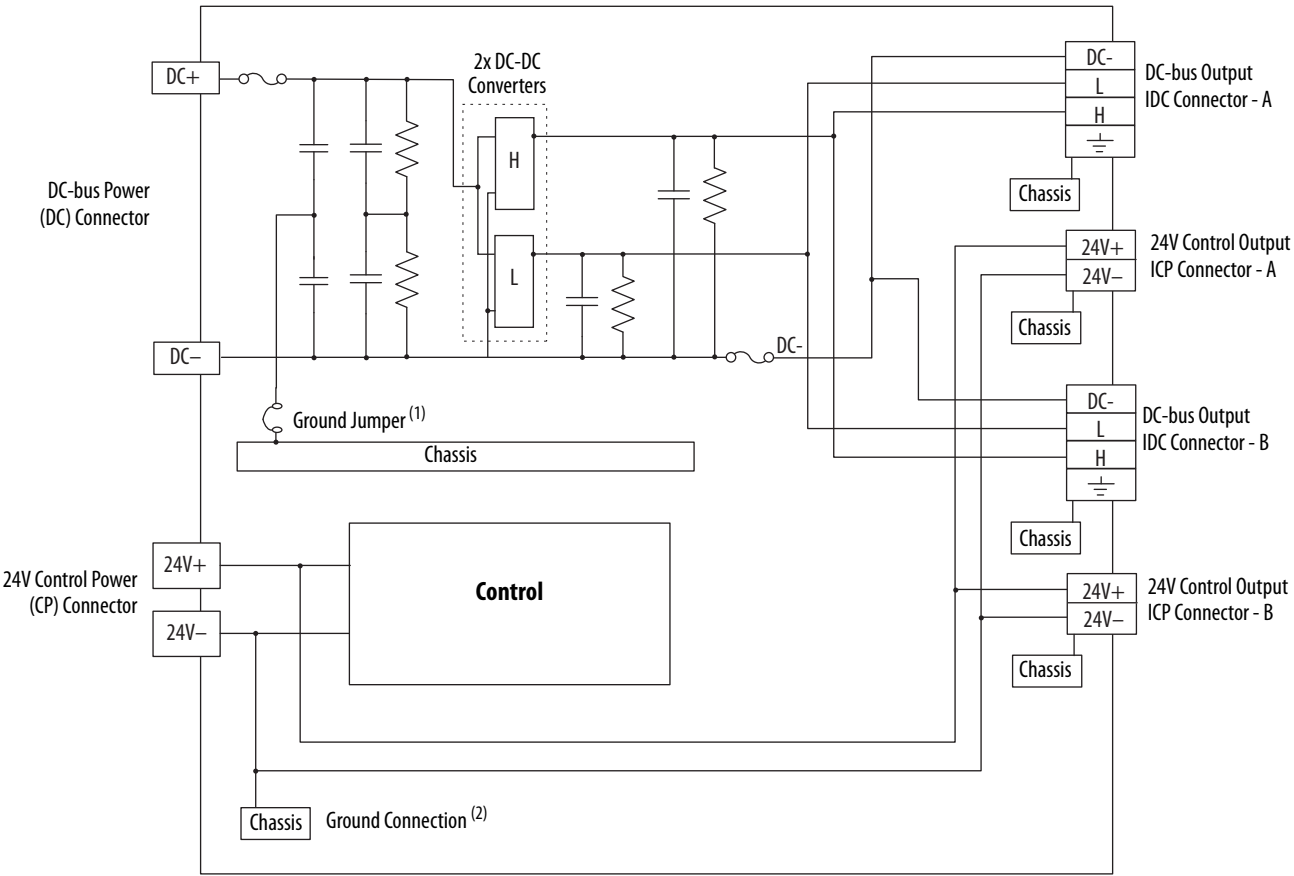

- (1) Ground screw in the installed (default) configuration.
- (2) Connection from 24V- to Chassis is made inside of the iTRAK power supply.

Figure 148 - Capacitor Module Block Diagram

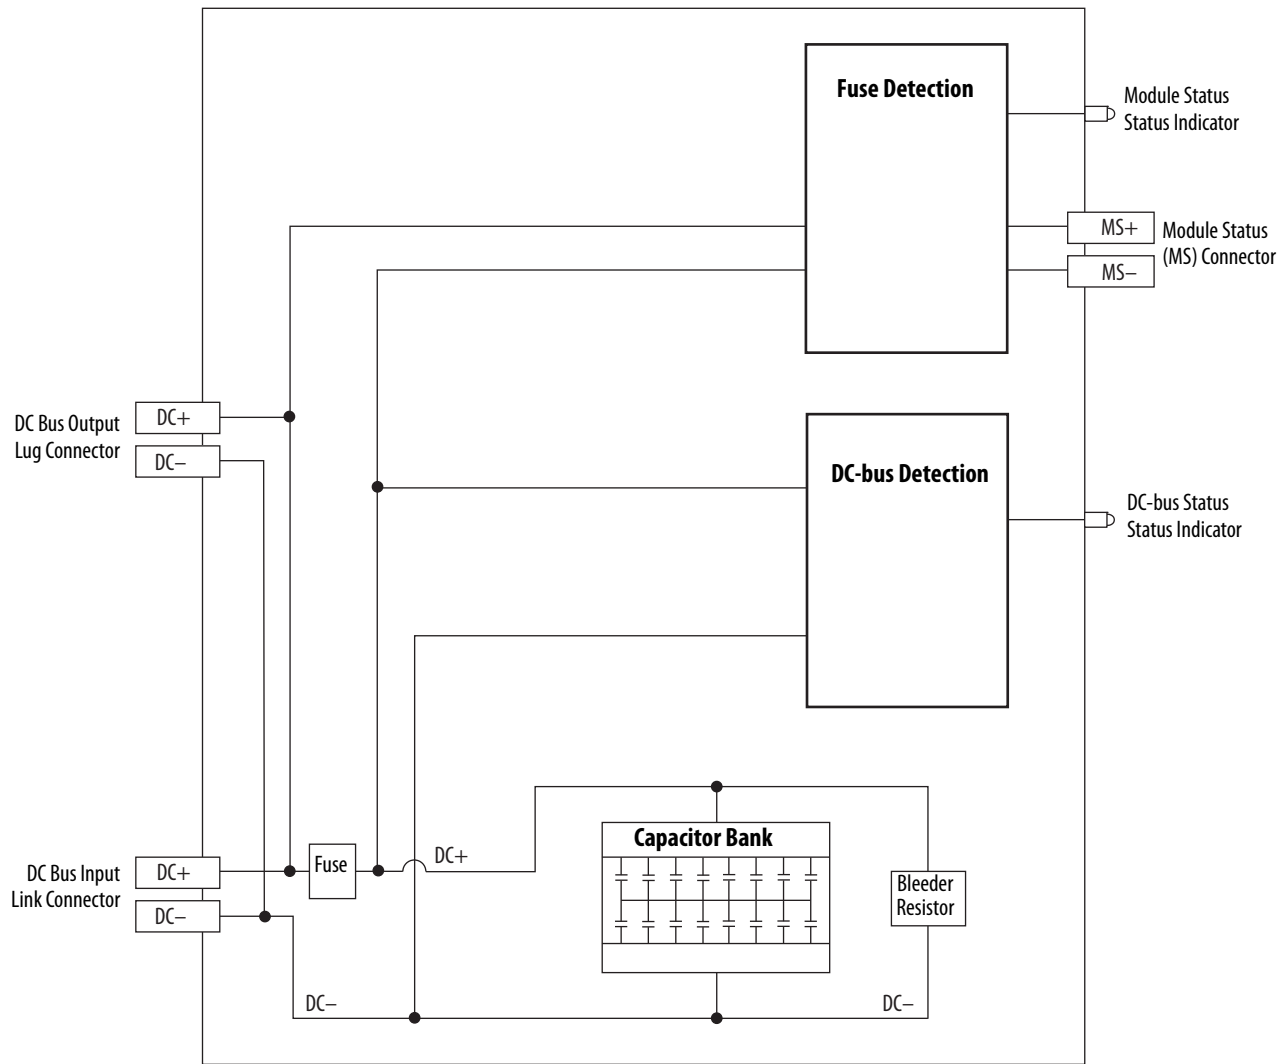

Upgrade the Drive Firmware

This appendix provides procedures for upgrading your Kinetix® 5700 firmware by using ControlFLASH™ software.

Topic	Page
Before You Begin	298
Upgrade Firmware	301
Verify the Firmware Upgrade	305

Upgrading drive firmware by using ControlFLASH software involves configuring your Logix5000™ controller communication, selecting the drive to upgrade, and upgrading the firmware.

IMPORTANT	If the drive firmware contains updated safety firmware, you must de-energize the safety inputs first or the upgrade fails. To update the drive firmware in Feedback Only mode, you must inhibit the axis first. Refer to Inhibit Feedback Only Axis on page 300 for more information.
------------------	--

Before You Begin

The firmware revision for software must be as shown for EtherNet/IP™ networks.

Table 137 - Kinetix 5700 System Requirements

Description	Firmware Revision
Logix Designer application	26.00.00 or later
RSLinx® software	3.60.00 or later
ControlFLASH software kit ⁽¹⁾	12.01.00 or later
Catalog numbers of the targeted Kinetix 5700 drive module you want to upgrade.	
Network path to the targeted Kinetix 5700 drive module you want to upgrade.	

(1) Download the ControlFLASH kit from <http://support.rockwellautomation.com/controlflash>. Contact Rockwell Automation® Technical Support at (440) 646-5800 for assistance.

For more ControlFLASH information (not drive specific), refer to the ControlFLASH Firmware Upgrade Software User Manual, publication [1756-UM105](#).

IMPORTANT Control power must be present at CP-1 (24V+) and CP-2 (24V-) prior to upgrading your target module.

IMPORTANT For the DC-bus power supply and inverter modules, the axis state on the LCD display must be STANDBY, CONFIGURING, or PRECHARGE before beginning this procedure.

IMPORTANT The axis state on the LCD display must be STANDBY, when Protected mode is enabled. See [Table 81](#) on [page 140](#) for more information.

IMPORTANT For the iTRAK power supply, the axis state on the LCD display must be in the START INHIBITED state. See the iTRAK System User Manual, publication [2198T-UM001](#) for information on upgrading firmware on other iTRAK system components.



ATTENTION: To avoid personal injury or damage to equipment during the firmware upgrade due to unpredictable motor activity, do not apply three-phase AC or common-bus DC input power to the drive.

Configure Logix5000 Controller Communication


This procedure assumes that your communication method to the Logix5000 controller is the Ethernet network. It also assumes that your Logix5000 Ethernet module or controller has already been configured.

For more controller information, refer to [Additional Resources](#) on [page 13](#).

Follow these steps to configure Logix5000 controller communication.

1. Open your RSLinx Classic software.
2. From the Communications menu, choose Configure Drivers.

The Configure Drivers dialog box appears.

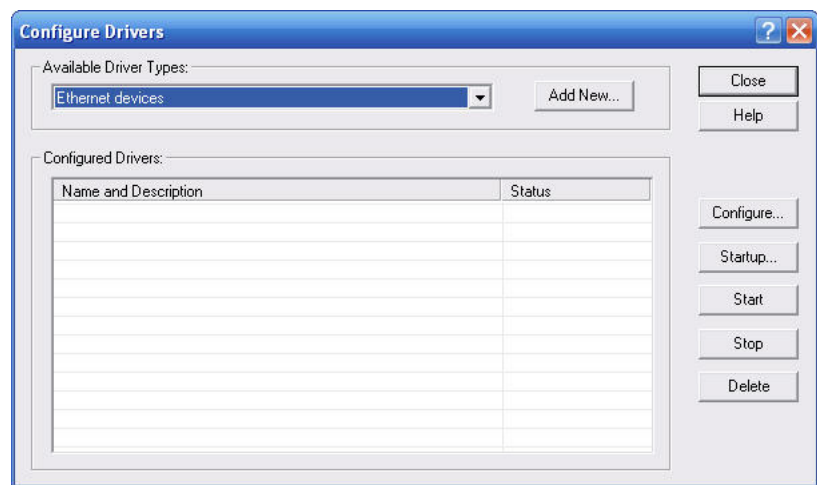

3. From the Available Driver Types pull-down menu, choose Ethernet devices.
4. Click Add New.

The Add New RSLinx Classic Driver dialog box appears.

5. Type the new driver name.




6. Click OK.

The Configure driver dialog box appears.



7. Type the IP address of your Kinetix 5700 servo drive.
8. Click OK.

The new Ethernet driver appears under Configured Drivers.

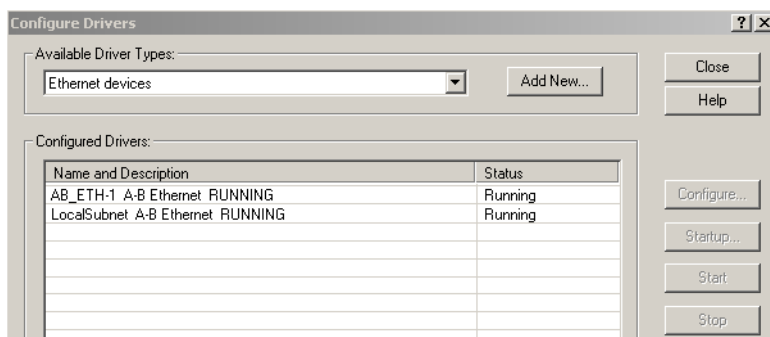

9. Click Close.
10. Minimize the RSLinx application dialog box.



Inhibit Feedback Only Axis

If an axis is configured as Feedback Only, you must inhibit the axis prior to performing the firmware upgrade. Follow these steps to inhibit an axis.

1. Open your Logix Designer application.
2. Right-click the 2198-xxxx-ERS3 servo drive you configured as Feedback Only and choose Properties.

The Module Properties dialog box appears.

3. Click the Connection tab.

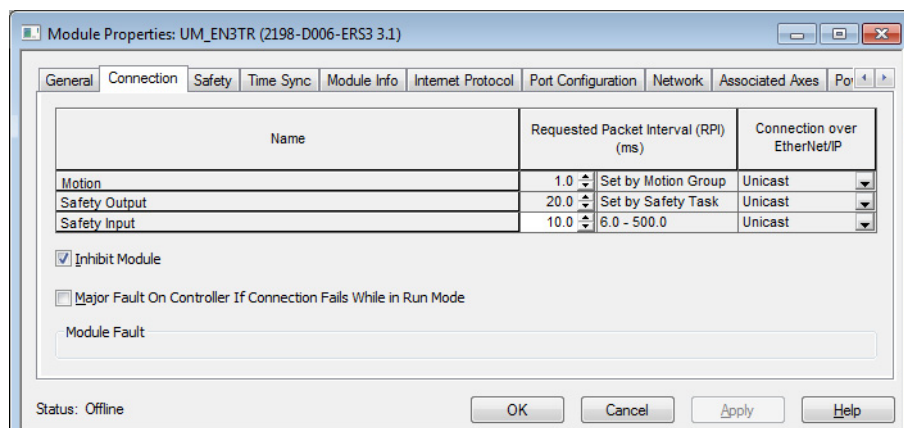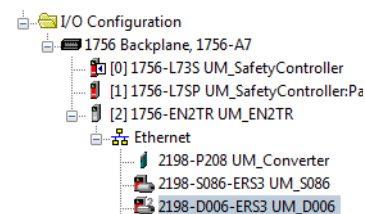

4. Check Inhibit Module.
5. Click OK.
6. Save your file and download the program to the controller.


Upgrade Firmware

Follow these steps to select the drive module to upgrade.

1. In the Logix Designer application, from the Tools menu, choose ControlFLASH.


TIP You can also open ControlFLASH software by choosing Start>Programs>FLASH Programming Tools>ControlFLASH.

The Welcome to ControlFLASH dialog box appears.

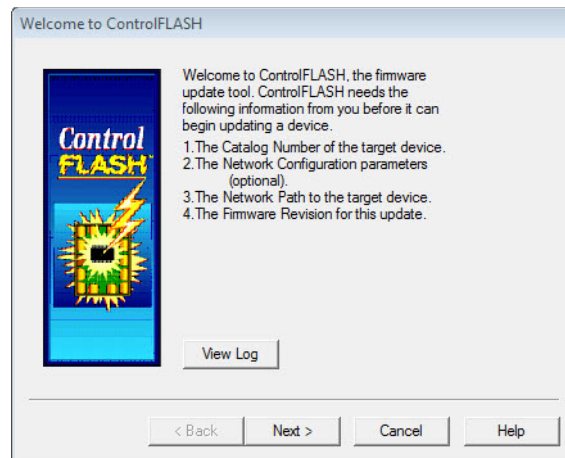

2. Click Next.

The Catalog Number dialog box appears.

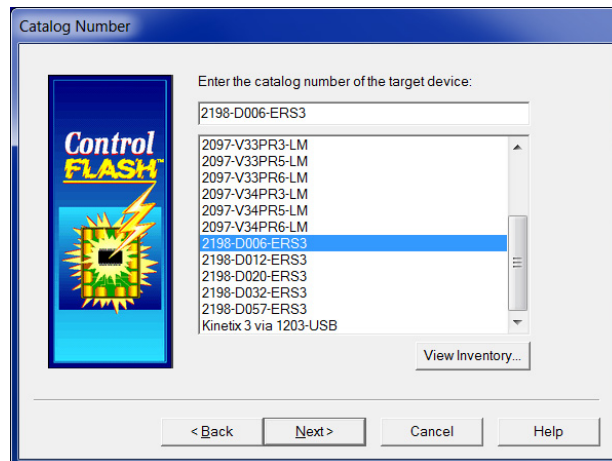


3. Select your drive module.

In this example, the 2198-D006-ERS3 servo drive is selected.


4. Click Next.

The Select Device to Update dialog box appears.

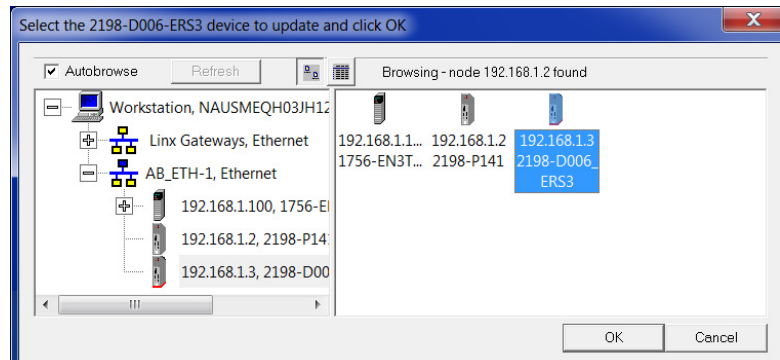

5. Expand your Ethernet node, Logix backplane, and EtherNet/IP network module.
6. Select the servo drive to upgrade.
7. Click OK.

The Firmware Revision dialog box appears.

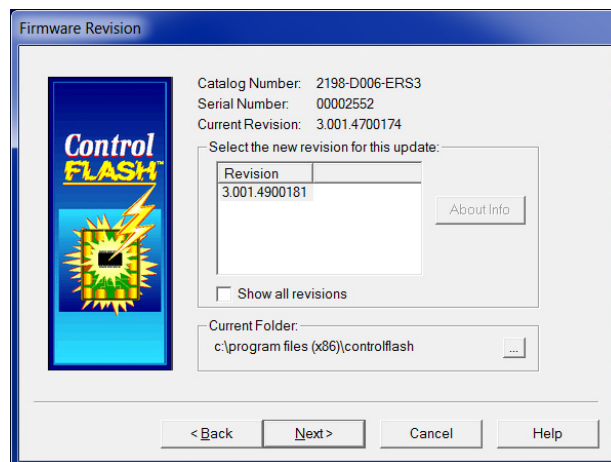

8. Select the firmware revision to upgrade.
9. Click Next.


The Summary dialog box appears.



10. Confirm the drive catalog number and firmware revision.


11. Click Finish.

This ControlFLASH warning dialog box appears.

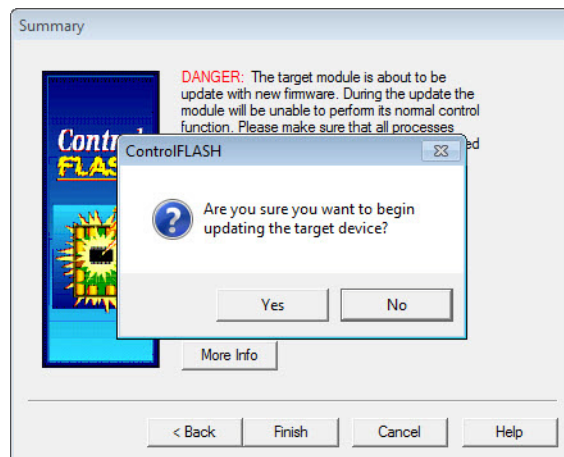


12. Click Yes (only if you are ready).

This ControlFLASH warning dialog box appears.

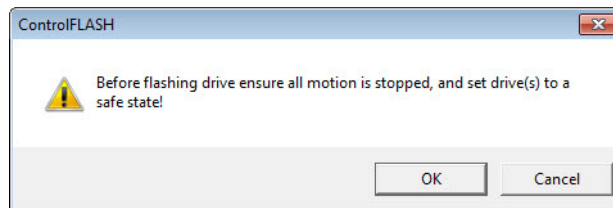

13. Acknowledge the warning and click OK.

The Progress dialog box appears and updating begins.

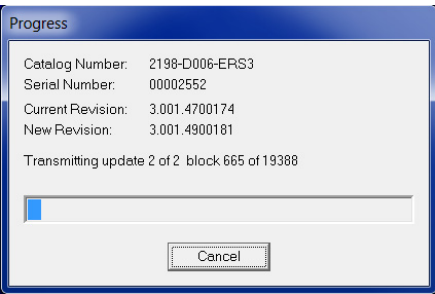


The axis state on the LCD display changes from CONFIGURING, STOPPED, or PRECHARGE to FIRMWARE UPDATE IN PROGRESS, which indicates that the upgrade is in progress.

After the upgrade information is sent to the drive, the drive resets and performs diagnostic checking.

14. Wait for the Progress dialog box to time out.


It is normal for this process to take several minutes.

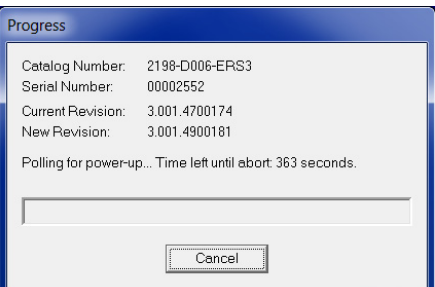

IMPORTANT Do not cycle power to the drive during this process or the firmware upgrade does not complete successfully.

15. Verify that the Update Status dialog box appears and indicates success or failure as described below.

Upgrading Status	If
Success	Update complete appears in a GREEN Status dialog box, then go to step 16 .
Failure	Update failure appears in a RED Status dialog box, then refer to the ControlFLASH Firmware Upgrade Software User Manual, publication 1756-UM105 for troubleshooting information.

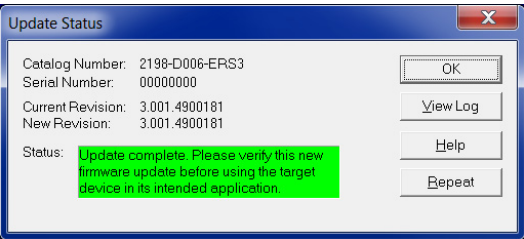

16. Click OK.


IMPORTANT If you are upgrading a feedback-only axis and you checked Inhibit Module on the Connection tab in Module Properties, you must clear the Inhibit Module checkbox before resuming normal operation.

Verify the Firmware Upgrade

Follow these steps to verify your firmware upgrade was successful.


TIP Verifying the firmware upgrade is optional.

1. Open your RSLinx software.
2. From the Communications menu, choose RSWho.

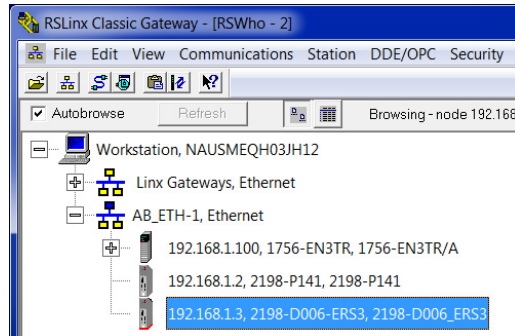

3. Expand your Ethernet node, Logix backplane, and EtherNet/IP network module.
4. Right-click the drive module and choose Device Properties.

The Device Properties dialog box appears.

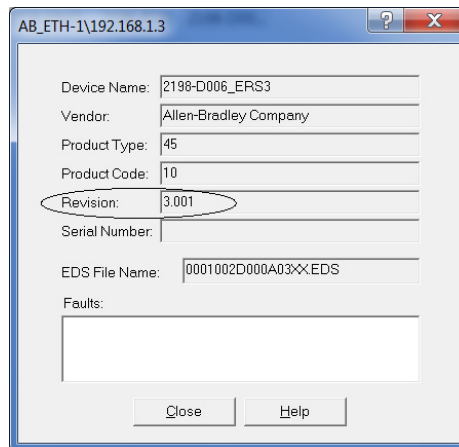

5. Verify the new firmware revision level.
6. Click Close.

Notes:

Size Multi-axis Shared-bus Configurations

This appendix provides information and examples for sizing your Kinetix® 5700 DC-bus power supplies and inverters in multi-axis shared-bus configurations.

Topic	Page
Shared-bus Configurations	307
System Sizing Guidelines	309
System Sizing Example	313
System Sizing Application Example	314

Shared-bus Configurations

You can supply input power to your Kinetix 5700 drive system from different sources. Shared-bus configurations for Kinetix 5700 drives include the following:

- Single 2198-Pxxx DC-bus power supply
- Multiple 2198-P208 DC-bus power supplies (up to three are possible)
- 8720MC-RPS regenerative power supply (RPS unit)

Shared-bus Definitions


Throughout this manual, these terms are used to describe how drive modules are grouped together.

Table 138 - Shared-bus Terminology

Term	Definition
DC-bus group	Drive modules that are all connected to the same DC bus.
Clusters	Groups of drive modules that are connected to the same DC bus joined by the DC bus-bars. The maximum number of clusters in the same DC-bus group is 2.
Extended DC-bus	When 2 drive clusters are part of the same DC-bus group joined by the DC bus-bars.

In this example, 2 drive clusters in the same cabinet are connected by the same 450...750V DC-bus voltage. Kinetix 5700 capacitor modules provide connection points for the DC bus at the end of cluster 1 and the beginning of cluster 2. The extension module is needed only when the DC-bus system current exceeds 100 A, and can support up to 200 A maximum external DC-bus current.

Figure 149 - Extended DC-bus Installation

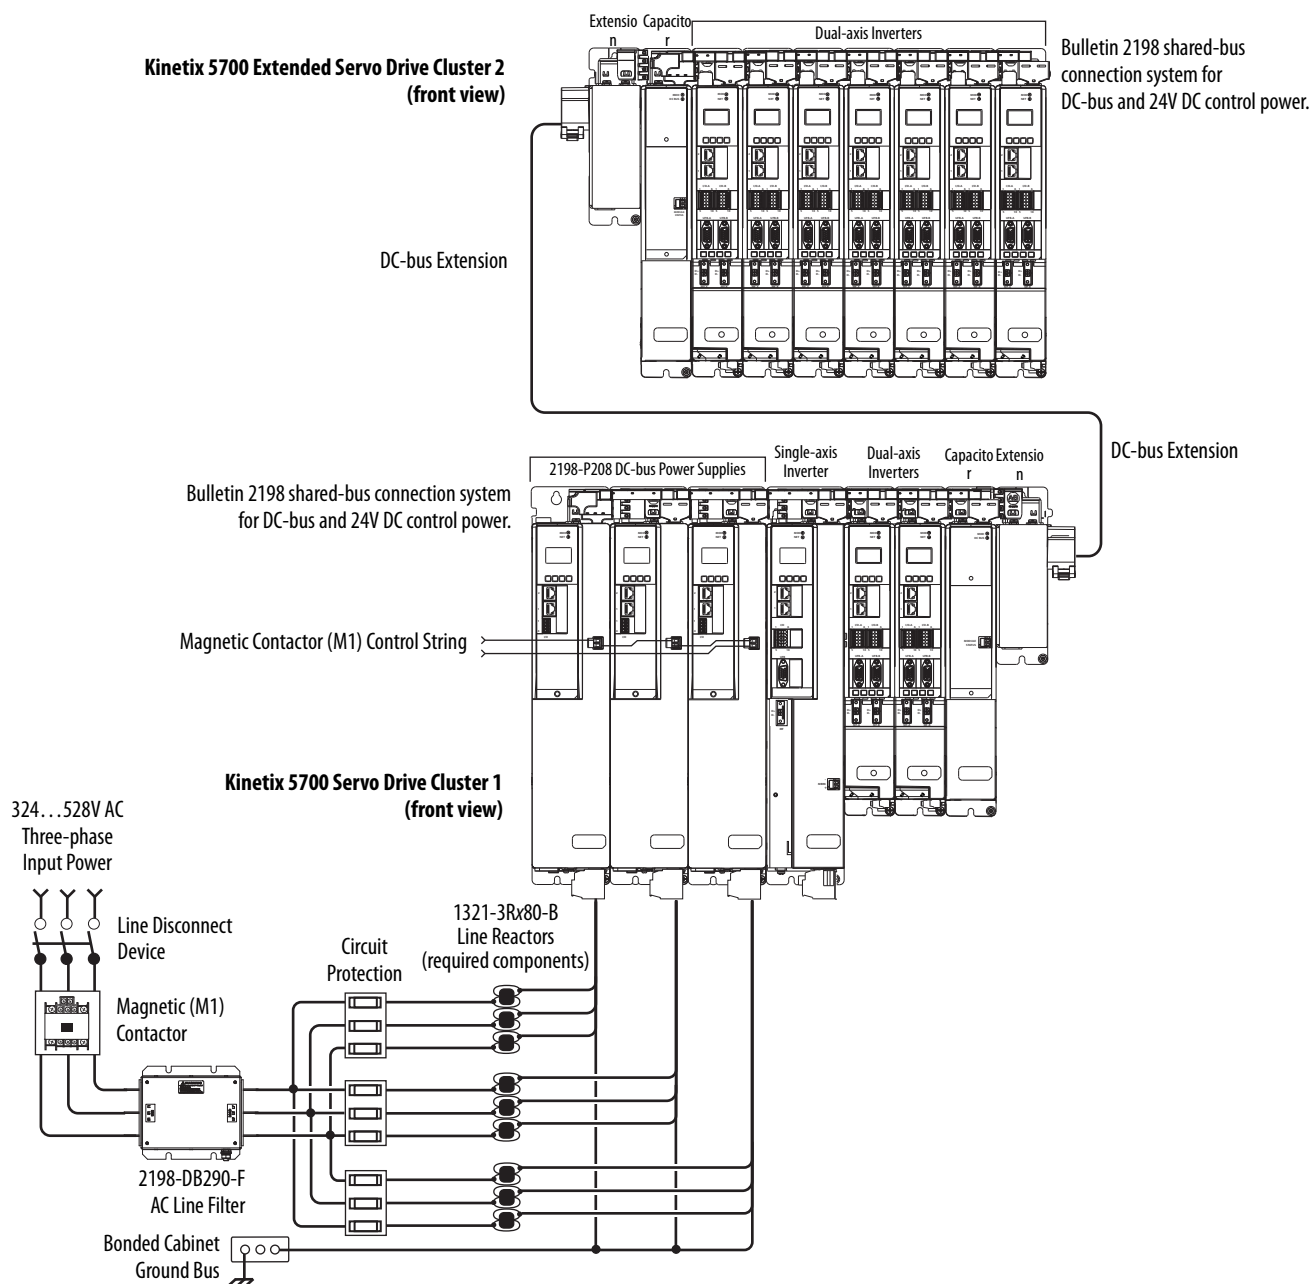

IMPORTANT When two or three DC-bus power supplies are wired together in the same drive cluster, they must all be catalog number 2198-P208.

General Sizing Guidelines

These limitations apply to Kinetix 5700 servo drive systems supplied by a single 2198-Pxxx or multiple 2198-P208 DC-bus power supplies:

- The sum of the inverter motor-power cable lengths for all inverters on the same DC bus-sharing group must not exceed 400 m (1312 ft) to comply with CE requirements.
- The total system capacitance limit is based on the power supply catalog number. DC-bus groups must not exceed the limits defined in [Table 139](#).
- No more than three 2198-P208 DC-bus power supplies can be used to increase the converter power or to increase the total system capacitance.
- If using the 24V DC shared-bus connection system to distribute control input power to a cluster of drive modules, current from the 24V power supply must not exceed 40 A.
- The Kinetix 5700 system cannot have more than two drive clusters in a single DC-bus group.

Refer the 8720MC Regenerative Power Supply Installation Manual, publication [8720MC-RM001](#), for additional system sizing limitations.

System Sizing Guidelines

You begin the process by selecting the motor for your application and sizing the drive and power supply combinations. Next, calculate whether the motor power cable length, total system capacitance, and 24V current demand are within specifications.

For systems with an iTRAK power supply, the iTRAK system requirements must be calculated to determine the following:

- Kinetix 5700 DC-bus loading (DC-bus motoring and bus-regulation power requirements)
- 2198-Pxxx power supply for supporting the iTRAK power supplies
- 24V current demand
- Number of iTRAK power supplies required
- Resulting net converter power and bus-regulator capacity

See the iTRAK System User Manual, publication [2198T-UM001](#) for more information.

For iTRAK hardware and iTRAK power supplies, skip ahead to the [Calculate Total System Capacitance](#) on [page 310](#).

Select Drive/Motor Combinations

The motor required for a particular application determines the servo drive required for full motor performance.

For best results, use the Motion Analyzer system sizing and selection tool, available at <https://motionanalyzer.rockwellautomation.com>. Drive/motor performance specifications and torque/speed curves are also available in the Kinetix 5700 Drive Systems Design Guide, publication [KNX-RM010](#).

Select the Power Supply and Define the DC-bus Groups

- Determine the converter DC-bus motoring and bus-regulation power requirements based on the load profile.
- Estimate the net converter and inverter power and bus-regulator capacity, based on the load profiles.
- Determine if 2198-CAPMOD-2240 capacitor modules are required.

For best results, use the Motion Analyzer system sizing and selection tool, available at <https://motionanalyzer.rockwellautomation.com>.

Calculate Total System Capacitance

Total system capacitance is the sum of all internal capacitance values from each of the drive modules (single-axis inverters, dual-axis inverters, power supplies, and capacitor modules) in the same DC-bus group.

The total system capacitance must be less than the maximum supported DC-bus capacitance value of the power supply.

IMPORTANT	If your total system capacitance value exceeds the maximum supported capacitance value of the DC-bus power supply, perform one of the following: • Increase the size of the DC-bus power supply • Use multiple DC-bus power supplies (1...3 power supplies are possible) Decrease the total system capacitance by removing inverters or capacitor modules from the DC-bus group.
------------------	--

Table 139 - Maximum Supported DC-bus Capacitance

Power Supply	DC-bus Power Supply Cat. No.	Supported Capacitance, max μ F
Single Power Supply	2198-P031	8,000
	2198-P070	
	2198-P141	13,000
	2198-P208	
Multiple Power Supplies	2 x 2198-P208	26,000
	3 x 2198-P208	39,000

Table 140 - Internal Capacitance

Drive Module	Drive Module Cat. No.	Internal Capacitance μ F
DC-bus Power Supplies	2198-P031	585
	2198-P070	780
	2198-P141	1640
	2198-P208	2050
Dual-axis Inverters	2198-D006-ERS3	165
	2198-D012-ERS3	
	2198-D020-ERS3	330
	2198-D032-ERS3	390
	2198-D057-ERS3	705
Single-axis Inverters	2198-S086-ERS3	560
	2198-S130-ERS3	840
	2198-S160-ERS3	1120
iTRAK Power Supply	2198T-W25K-ER	390
Capacitor Module ⁽¹⁾	2198-CAPMOD-2240	2240

(1) The 2198-CAPMOD-DCBUS-IO extension module does not have any internal bus capacitance.

Calculate the Total Motor Power Cable Length

To meet CE requirements, the sum of all motor power cable lengths from the same DC-bus group must not exceed 400 m (1312 ft).

Calculate 24V DC Control Power Current Demand

If using the 24V DC shared-bus connection system to distribute control input power to a drive cluster, output current from the 24V power supply must not exceed 40 A.

Table 141 - Control Power Current Specifications

Drive Module	Drive Module Cat. No.	24V Current Per Module (non-brake motor) A_{DC}	24V Current, max (with maximum brake current) A_{DC}	24V Inrush Current ⁽⁵⁾ A
DC-bus Power Supplies	2198-P030	0.8	N/A	4.0
	2198-P070			
	2198-P141	1.9		
	2198-P208			
Dual-axis Inverters	2198-D006-ERS3	1.4 ⁽²⁾	5.5 ⁽³⁾	4.0
	2198-D012-ERS3			
	2198-D020-ERS3			
	2198-D032-ERS3	1.7 ⁽²⁾	7.7 ⁽³⁾	
	2198-D057-ERS3	2.3 ⁽²⁾	8.3 ⁽³⁾	
Single-axis Inverters	2198-S086-ERS3	4.6	9.6 ⁽⁴⁾	4.0
	2198-S130-ERS3			
	2198-S160-ERS3			
iTRAK Power Supply ⁽¹⁾	2198T-W25K-ER	1.3	N/A	2.2
Capacitor Modules	2198-CAPMOD-2240	0.5	N/A	N/A
	2198-CAPMOD-DCBUS-IO	N/A		

(1) These values represent only the iTRAK power supply. They do not include the iTRAK motor modules that are connected to the iTRAK power supply and also draw current from this 24V control power input. For more information regarding 24V control power requirements, see the iTRAK System User Manual, publication [2198T-UM001](#).

(2) Values are base current per module.

(3) Values assume two brake motors, each drawing the maximum rating of 3 A, are attached to each module.

(4) Values assume the maximum rated brake current of 5 A.

(5) Inrush current duration is less than 30 ms.


IMPORTANT

If the 24V control-power output current (based on your system calculation) exceeds 40 A, you must add another 24V power supply. To do this, you can insert another 2198-TCON-24VDCIN36 control power input wiring connector at any point in your drive cluster.

System Sizing Example

This example shows how a single Kinetix 5700 drive cluster meets the total bus capacitance, power cable length, and 24V DC current limitations.

Figure 150 - Example DC-bus Group (single drive cluster)

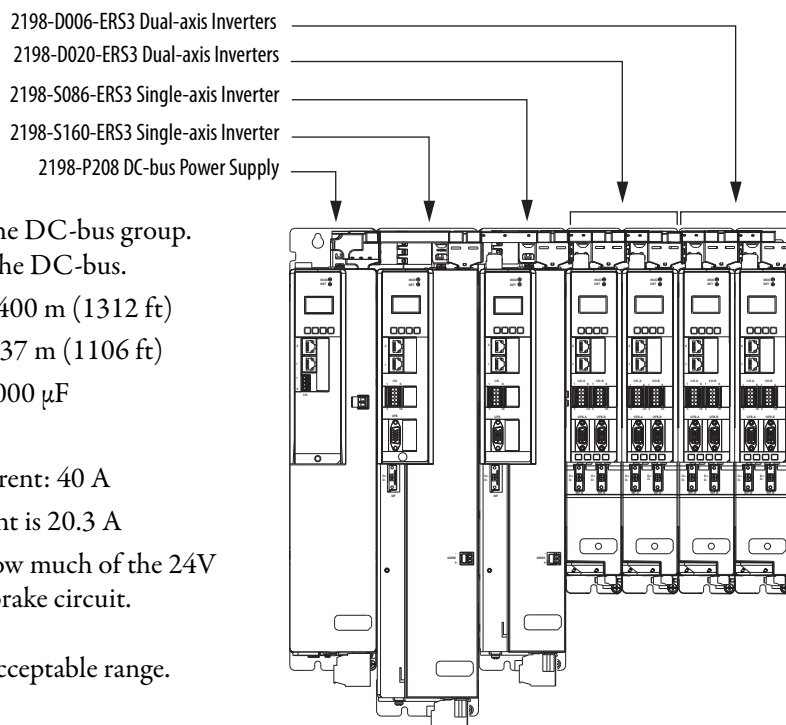

In this example, only 1 drive cluster defines the DC-bus group. Two drive clusters are possible by extending the DC-bus.

- Maximum motor power cable length: 400 m (1312 ft)
 - Total motor power cable length is 337 m (1106 ft)
- Maximum supported capacitance: 13,000 μ F
 - Total system capacitance is 4840 μ F
- Maximum 24V DC control power current: 40 A
 - Total 24V DC control power current is 20.3 A
 - The Coil Current column shows how much of the 24V current is consumed by the motor brake circuit.

All of the total system values are within the acceptable range.

Table 142 - System Sizing Example Data

DC-bus Group Cat. No.	Axis	Internal Capacitance μ F	Cable Length m (ft)	Servo Motor		24V DC Control Power Current Calculations		
				Servo Motor Cat. No.	Brake Option Yes/No	Brake Current @ 24V DC A	24V Current (non-brake motor) A _{DC}	Total Current A
2198-P208		2050	N/A	N/A	N/A	N/A	1.9	1.9
2198-S160-ERS3		1120	50 (164)	MPL-B980E	No	–	4.6	4.6
2198-S086-ERS3		560	90 (295)	MPL-B660F	Yes	2.1	4.6	6.7
2198-D020-ERS3	A	390	20 (66)	VPL-B1152F	No	–	1.4	1.4
	B		15 (49)	VPL-B1152F	No	–		
2198-D020-ERS3	A	390	9 (30)	VPL-B1003C	Yes	0.50	1.4	2.4
	B		90 (295)	VPL-B1003C	Yes	0.50		
2198-D006-ERS3	A	165	9 (30)	MPL-B310P	Yes	0.50	1.4	1.9
	B		9 (30)	MPL-B310P	No	–		
2198-D006-ERS3	A	165	15 (49)	MPL-B310P	No	–	1.4	1.4
	B		30 (98)	MPL-B310P	No	–		
Totals		4840	337 (1106)			3.6	16.7	20.3

For more information on motor and motor-brake specifications, refer to the Kinetix Rotary Motion Specifications Technical Data, publication [KNX-TD001](#).

System Sizing Application Example

This example shows how to size the DC-bus power supply for your multi-axis system by using the motor output power (kW). Sizing is based on the largest motor kW value in your drive system.

The Kinetix 5700 drive modules are zero-stacked and use the shared-bus connection system to extend power from the 2198-Pxxx DC-bus power supply to multiple drive modules. For best results, use the Motion Analyzer system sizing and selection tool, available at <https://motionanalyzer.rockwellautomation.com>.

Table 143 - DC-Bus Power Supply Continuous Output Power

DC-Bus Power Supply Cat. No.	Continuous Output Power kW
2198-P031	7
2198-P070	17
2198-P141	31
2198-P208	46

In this typical system, all axes are running in an asynchronous rapid acceleration/deceleration motion profile. Use this formula to calculate the minimum continuous output-power (kW) for your Kinetix 5700 drive system:

$$2198\text{-Pxxx} = \text{Largest motor-rated kW} \times (\text{axis-count} \times 0.6) + (\text{axis-count} \times 0.2)$$

Table 144 - Motor/Drive System Example

Motor Quantity	Motor Cat. No.	Motor Rated Output ⁽¹⁾ kW	Drive Cat. No.
1	MPM-B2153F	7.2	2198-S086-ERS3
1			2198-S086-ERS3
1	MPL-B660F	6.1	2198-S086-ERS3
1			2198-S086-ERS3
2	VPL-B0753	0.82	2198-D020-ERS3
2			2198-D020-ERS3

8 = axis count

(1) For more motor specifications, see the Kinetix Rotary Motion Specifications Technical Data, publication [KNX-TD001](#).

$$\text{Continuous Output Power, min (kW)} = 7.2 \times (8 \times 0.6) + (8 \times 0.2)$$

$$\text{kW} = 7.2 \times 4.8 + 1.6$$

$$\text{kW} = 36.16$$

In this example, the MPM-B2153F motor has the largest motor-rated output. As a result, the minimum continuous output-power = 36.16 kW, and the 2198-P208 DC-bus power supply is required for the 8-axis system example.

Motor Control Feature Support

This appendix provides feature descriptions for the 400V-class induction motors and permanent-magnet motors that are supported by Kinetix® 5700 servo drives.

Topic	Page
Frequency Control Methods	316
Current Limiting for Frequency Control	320
Stability Control for Frequency Control	323
Skip Speeds	325
Flux Up	327
Current Regulator Loop Settings	330
Motor Category	330
Selection of Motor Thermal Models	335
Speed Limited Adjustable Torque (SLAT)	337
Motor Overload Retention	343
Torque Proving	344
Velocity Droop	347
Commutation Test	349
Adaptive Tuning	349
Extended Speed	350

Frequency Control Methods

The Kinetix 5700 servo drives support three open-loop frequency control methods. These are the choices:

- **Basic Volts/Hertz** - This method is used in single asynchronous-motor applications
- **Basic Volts/Hertz - Fan Pump** - This method is similar to Basic Volts/Hertz, but is specifically tailored for fan/pump applications
- **Sensorless Vector with Slip Compensation** - This method is used for most constant torque applications. Provides excellent starting, acceleration, and running torque

To configure your induction motor in the Logix Designer application, refer to [Configure Induction-motor Frequency-control Axis Properties](#) on [page 165](#).

Open-loop frequency control is suitable in applications such as conveyors, pumps, and fans. Features include the following:

- Start Boost and Run Boost
- Electronic motor thermal-overload protection per Class 10 requirements
- Two skip frequencies, in which the drive does not operate
- All three-phase induction motors, suitable for variable speed drive (VFD) operation, are supported

Table 145 - Motor Specifications

Attribute	Value
Output frequency, max	590 Hz
Pole pairs, max	50
Motor cable length, max	90 m (295 ft) ⁽¹⁾

(1) Applies to all Kinetix 5700 drives and compatible motors/actuators with Hiperface and Hiperface DSL high-resolution absolute feedback. For compatible motors/actuators with incremental feedback, 30 m (98 ft) is the maximum cable length.

Basic Volts/Hertz

Volts/hertz operation creates a fixed relationship between output voltage and output frequency. Voltage is applied to the motor, which is based on the operating frequency command at a fixed volts/hertz ratio. The ratio is calculated from the motor nameplate data and entered into the Logix Designer application>


Axis Properties>Frequency Control category.

The Basic Volts/Hertz method provides various patterns. The default configuration is a straight line from zero to rated voltage and frequency. As seen in [Figure 151](#), you can change the volts/hertz ratio to provide increased torque performance when required by programming five distinct points on the curve.

Table 146 - Basic Volts/Hertz Definitions

Curve Feature	Definition
Start boost	Used to create additional torque for breakaway from zero speed and acceleration of heavy loads at lower speeds.
Run boost	Used to create additional running torque at low speeds. The value is typically less than the required acceleration torque. The drive lowers the boost voltage to this level when running at low speeds (not accelerating). This reduces excess motor heating that could result if the higher start/accel boost level were used.
Break voltage/frequency	Used to increase the slope of the lower portion of the Volts/Hertz curve, providing additional torque.
Motor nameplate voltage/frequency	Sets the upper portion of the curve to match the motor design. Marks the beginning of the constant power region.
Maximum voltage/frequency	Slopes the portion of the curve that is used above base speed.

Figure 151 - Basic Volts/Hertz Method

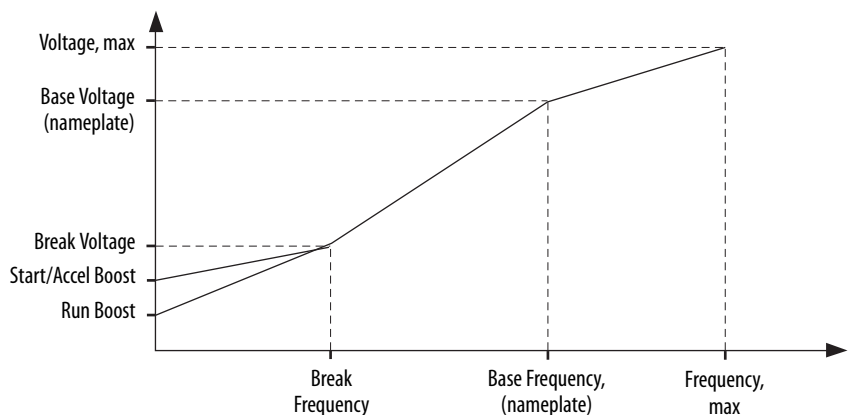

Basic Volts/Hertz for Fan/Pump Applications

The Basic Volts/Hertz Fan/Pump (fan/pump) method is based on the Basic Volts/Hertz (V/Hz) method, but is specifically tailored for fan/pump applications.


Figure 152 - Output Voltage Equation

$$V_x = \left(\frac{f_x}{f_n} \right)^2 (V_n - V_{boost}) + V_{boost}$$

Where:
 V_x = Output voltage
 f_x = Output frequency
 V_n = Rated voltage
 f_n = Rated frequency
 V_{boost} = Run boost voltage

For maximum system efficiency, fan/pump loads use variable frequency drives that are equipped with a specific V/Hz curve where voltage is proportional to square of the frequency.

Figure 153 - Basic Volts/Hertz Fan/Pump Method

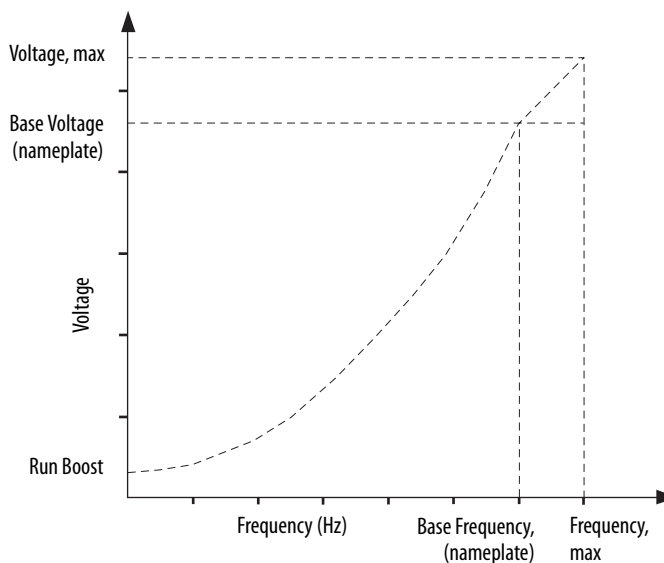


TIP The Fan/Pump control method supports the run-boost attribute, but does not support break-voltage, break-frequency, or start-boost.

Sensorless Vector

The Sensorless Vector method uses a volts/hertz core enhanced by a current resolver, slip estimator, and a voltage-boost compensator based on the operating conditions of the motor.

Figure 154 - Sensorless Vector Method

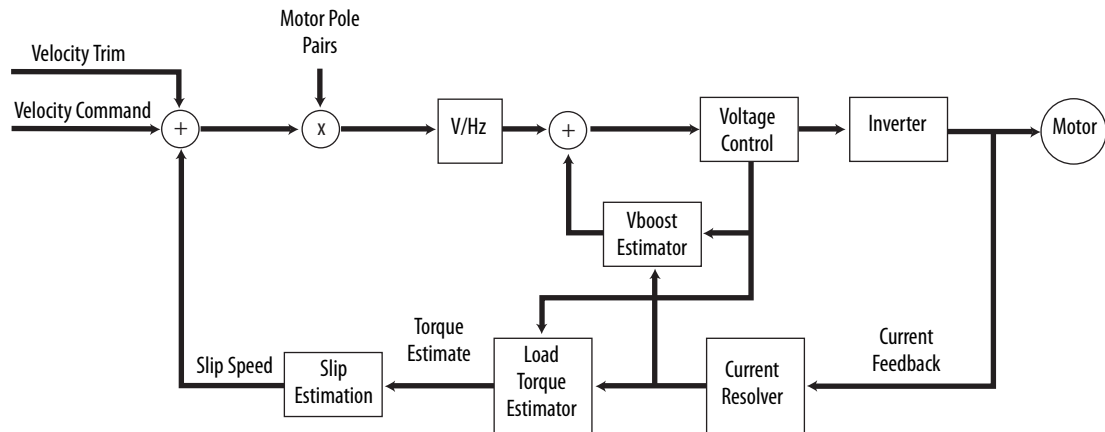


The algorithms operate on the knowledge of the relationship between the rated slip and torque of the motor. The drive uses applied voltages and measured currents to estimate operating slip-frequency. You can enter values to identify the motor resistance value or you can run a motor test to identify the motor resistance value (see [Motor Tests and Autotune Procedure](#) on [page 332](#)). Motor nameplate data and test results are ways to accurately estimate the required boost voltage.

The sensorless vector method offers better torque production and speed regulation over a wider speed range than basic volts/hertz.

Dynamic boost is applied internally to compensate voltage drop and improve starting torque.


Figure 155 - Approximate Load Curve

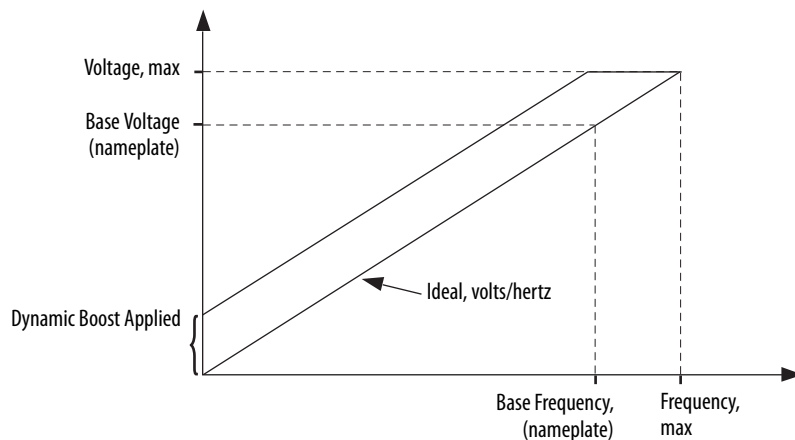

Current Limiting for Frequency Control

The current limiting module prevents the OutputCurrent value from exceeding the OperativeCurrentLimit value when the drive is configured in Frequency Control mode.

Figure 156 - Current Limiting Module

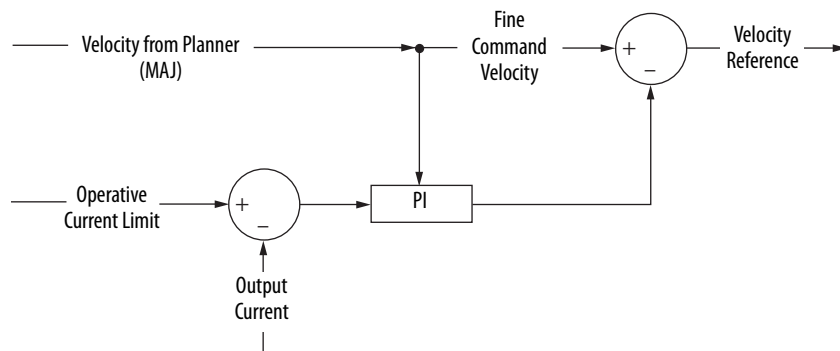

In Frequency Control mode, OperativeCurrentLimit is the minimum value of the motor-thermal current limit, inverter-thermal current limit, motor-peak current limit, drive-peak current limit, and the CurrentVectorLimit value.

The Effects of Current Limiting

Indirect current limiting is available for induction motors configured for frequency control. You can use this feature to help prevent overcurrent faults due to aggressive acceleration/deceleration profiles or impact loads. The Current Limiting attribute uses a PI regulator to control the OutputCurrent by adjusting the velocity reference.

IMPORTANT When configured for Frequency Control (induction motors only), select the Decel and disable stopping action only when the Current Limiting feature is enabled.

Figure 157 - Effects of Current Limiting on an Aggressive Acceleration

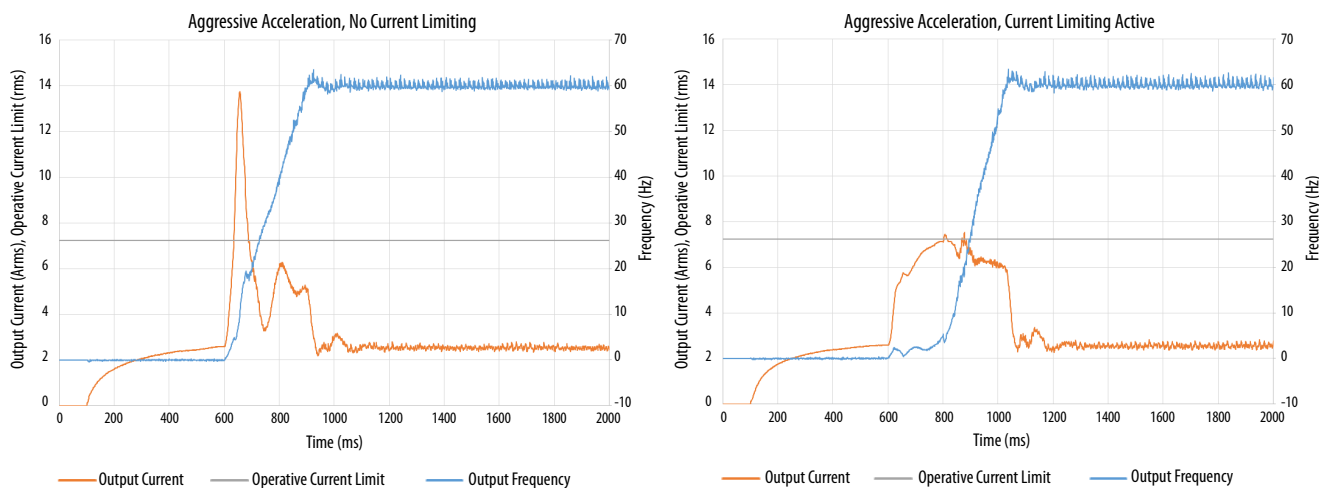
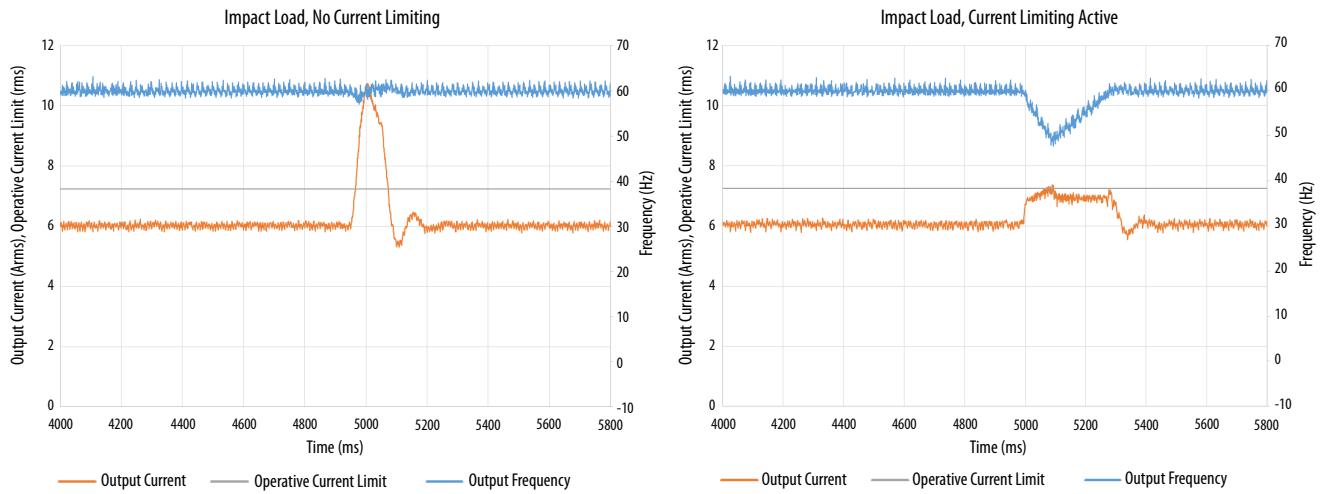


Figure 158 - Effects of Current Limiting on an Impact Load

Current limiting for frequency control is not enabled by default. You can enable via messaging by using the following device-specific attributes.

TIP We recommend you leave the Kp, Ki, Kd gains at the default values.

Table 147 - Enable Current Limiting via Messaging

Attribute Offset	Type	Attribute Name	Conditional Implementation	Description
3022	SINT	Current Limiting Enable	Frequency Control Induction Motor only	When enabled, limits the rate of change to the velocity reference during high-current situations for improved current limiting. This feature is only active when executing an MDS command and when configured for Frequency Control. 0 = Current Limiting is disabled 1 = Current Limiting is enabled
3023	REAL	Current Limiting Kd		Derivative gain for the current limiting function. Only functional when configured for Frequency Control and when executing an MDS command. Units of seconds.
3024	REAL	Current Limiting Ki		Integral gain for the current limiting function. Only functional when configured for Frequency Control and when executing an MDS command. Units of feedback counts / (Amp, inst* Seconds).
3025	REAL	Current Limiting Kp		Proportional gain for the current limiting function. Only functional when configured for Frequency Control and when executing an MDS command. Units of feedback counts / Amp, inst.

IMPORTANT For induction motors greater than 5 Hp, it is recommended that the Stability Control feature also be enabled when Current Limiting is enabled.

Enable the Current Limiting Feature

attribute In this example, a Message Configuration (MSG) instruction is configured to set the CurrentLimitingEnable attribute for axis 3 of a dual-axis inverter. The Instance field is used to direct the message to the proper axis. For single-axis inverters the value of 1 is used for Instance.

Message Configuration - DAI_Ilim_Write_MSG

Configuration Communication Tag

Message Type: CIP Generic

Service Type: Set Attribute Single

Source Element: CurrentLimitEnable

Source Length: 1 (Bytes)

Service Code: 10 (Hex) Class: 42 (Hex) Instance: 3 Attribute: bce (Hex)

Destination Element:

New Tag...

☐ Enable ☐ Enable Waiting ☐ Start ☒ Done Done Length: 0

☐ Error Code: Extended Error Code: ☐ Timed Out

Error Path: D006

Error Text:

OK Cancel Apply Help

Set the CurrentVectorLimit Attribute Value

For current limiting, the CurrentVectorLimit attribute is used to help determine the OperativeCurrentLimit of the drive. Set the CurrentVectorLimit value to artificially lower OperativeCurrentLimit below the drive or motor peak current limits.

1. Select the Parameter List category and scroll to CurrentVectorLimit.

CoastingTimeLimit	0.0 s	
ConversionConstant	1000000.0	Motion Counts/Position Units
CurrentVectorLimit	100.0	% Motor Rated
FluxUpControl	No Delay	
FluxUpTime	0.0 s	


2. Set the CurrentVectorLimit value appropriate for your application.

IMPORTANT The CurrentVectorLimit attribute appears in the Parameter List of the Logix Designer application, version 29.00 and later. If you are using a previous version, the CurrentVectorLimit attribute must be set via a Message Configuration (MSG) instruction.

Stability Control for Frequency Control

Stability control is available for induction motors configured for frequency control. This feature can be used to help remove resonances that are sometimes seen on larger motors. The stability control feature adjusts the OutputFrequency and OutputVoltage commands to stabilize the OutputCurrent.

Figure 159 - Effects of Stability Control

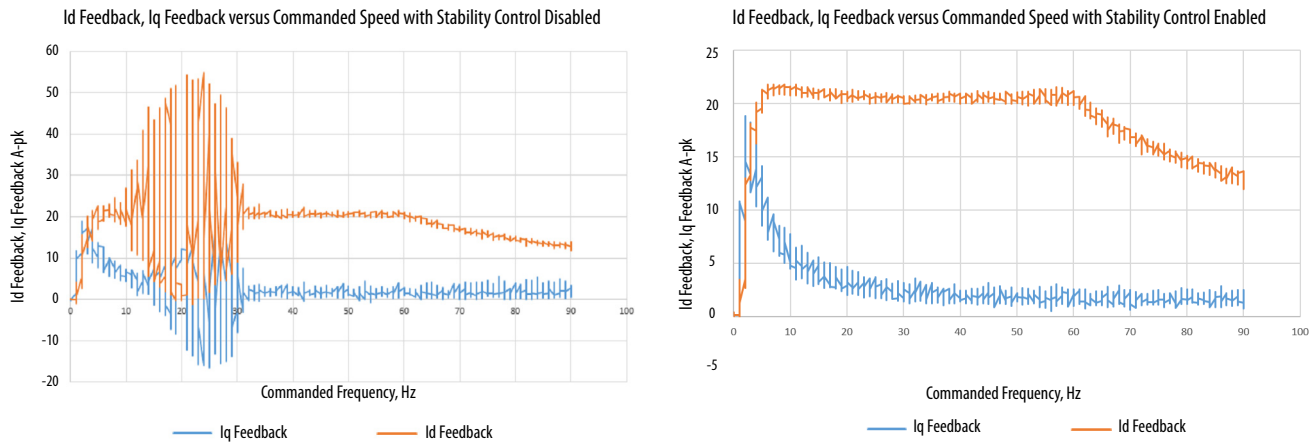

Stability control for frequency control is not enabled by default. You can enable via messaging by using the following device-specific attributes.

TIP We recommend you leave the angle, voltage gains, and filter bandwidth at the default values.

Table 148 - Enable Current Limiting via Messaging

Attribute Offset	Type	Attribute Name	Conditional Implementation	Description
3026	SINT	Stability Control Enable	Frequency Control Induction Motor only	Enables stability control when configured for frequency control. 0 = Stability Control is disabled 1 = Stability Control is enabled
3027	REAL	Stability Filter Bandwidth		Sets the bandwidth of the low-pass filter applied to the current feedback signal. This bandwidth is common to both the angle and voltage stability control algorithms. Units of radians/second.
3028	REAL	Stability Voltage Gain		The gain of the voltage stability control function. Only active when configured for frequency control. Units of Volt (inst,p-n)/Amp (inst).
3029	REAL	Stability Angle Gain		The gain of the electrical angle stability control function. Only active when configured for frequency control. Units of radians/Amp (inst).

IMPORTANT Because the stability control feature works by manipulating the OutputVoltage and OutputFrequency signals, these signals may appear 'noisy' when the feature is enabled.

Enable the Stability Control Feature

In this example, a Message Configuration (MSG) instruction is configured to enable the StabilityControl attribute for axis 3 of a dual-axis inverter. The Instance field is used to direct the message to the proper axis. For single-axis inverters the value of 1 is used for Instance.

The screenshot shows the 'Message Configuration - DAI_Stab_Write_MSG' dialog box. It has three tabs: 'Configuration', 'Communication', and 'Tag'. The 'Configuration' tab is active. The 'Message Type' is set to 'CIP Generic'. The 'Service Type' is 'Set Attribute Single'. The 'Source Element' is 'StabilityControlEnab'. The 'Source Length' is '1 (Bytes)'. The 'Service Code' is '10 (Hex)', 'Class' is '42 (Hex)', 'Instance' is '3', and 'Attribute' is 'bd2 (Hex)'. The 'Destination Element' is empty, with a 'New Tag...' button below it. At the bottom, there are radio buttons for 'Enable', 'Enable Waiting', 'Start', and 'Done' (which is selected). There are also fields for 'Done Length: 0', 'Error Code', 'Extended Error Code', 'Error Path: D006', and 'Error Text'. A 'Timed Out' checkbox is also present. The bottom right has 'OK', 'Cancel', 'Apply', and 'Help' buttons.


Field	Value
Message Type	CIP Generic
Service Type	Set Attribute Single
Source Element	StabilityControlEnab
Source Length	1 (Bytes)
Service Code	10 (Hex)
Class	42 (Hex)
Instance	3
Attribute	bd2 (Hex)
Destination Element	
Done Length	0
Error Path	D006

Skip Speeds

Some machines have a resonant operating frequency (vibration speed) that is undesirable or could cause equipment damage. To guard against continuous operation at one or more resonant points, you can configure the skip-speed attributes in the Logix Designer application>Axis Properties>Parameter List category.

The value that is programmed into the SkipSpeed1 or SkipSpeed2 attribute sets the central speed of a skip-speed band within which the drive does not operate. The width of the band is determined by the SkipSpeedBand attribute. The range is split, half above and half below the SkipSpeed x attribute. Any command set-point within this band is adjusted by the skip-speed feature to fall at either the upper or lower skip-speed band boundary value. The skip-speed feature contains hysteresis (25% of the SkipSpeedBand value) to prevent frequent switching of VelocityReference.

Figure 160 - Single Skip Speed Example

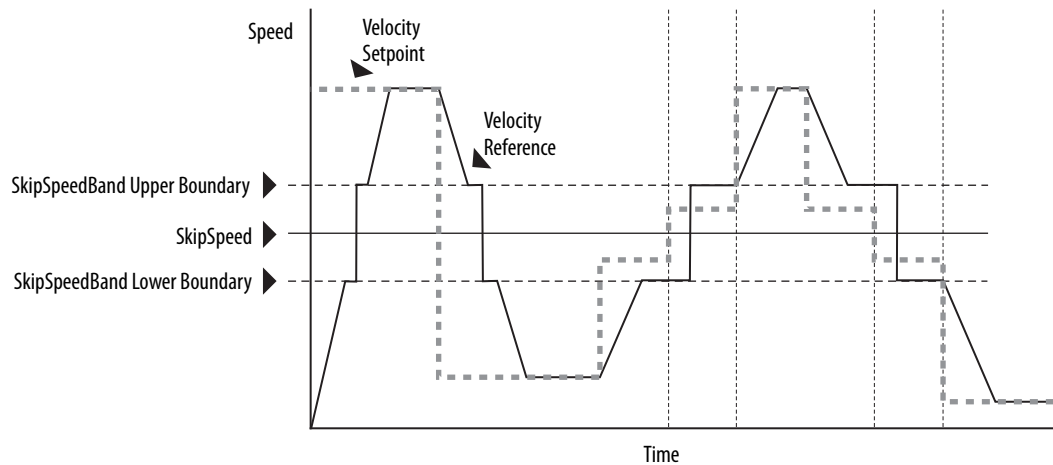

A SkipSpeedBand value of 0 disables the skip-speed feature.

IMPORTANT When a single SkipSpeed value is desired, the SkipSpeed1 and SkipSpeed2 settings must be the same.


IMPORTANT Acceleration and deceleration are affected by the skip-speed feature. Too large of a SkipSpeedBand value can result in an overcurrent drive fault.

IMPORTANT The MaximumFrequency attribute is always enforced. Skip-speed band boundary values beyond the MaximumFrequency value do not apply.

Multiple Skip Speeds

The Kinetix 5700 drives feature two independent skip-speed attributes (SkipSpeed1 and SkipSpeed2) that use the same SkipSpeedBand.

Figure 161 - Multiple Skip Speed Example

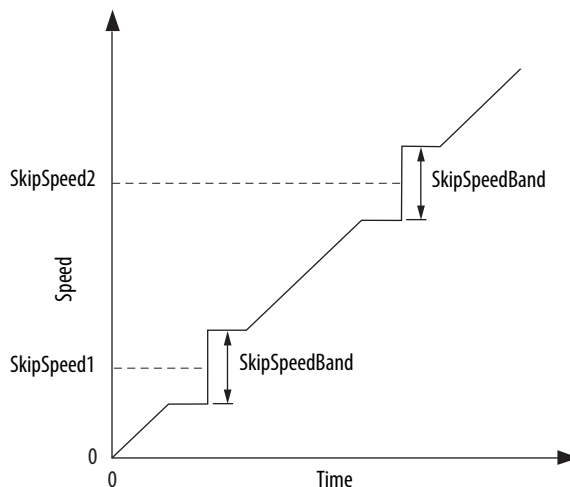


When skip-speed band boundaries of SkipSpeed1 and SkipSpeed2 overlap, the skip-speed hysteresis is calculated using the effective skip band.

In [Figure 162](#), SkipSpeed1 is set to 0 and SkipSpeed2 is set to 15 Hz. The skip band is 10 Hz wide.

At point A the axis is enabled, and the motor begins to rotate at -5 Hz even though the command is 0 Hz. As the command reaches hysteresis point the output frequency begins to follow the command. During deceleration, when the command decreases to 0 Hz, the output frequency continues at 5 Hz until the axis is disabled (point B), or the command is changed outside of the skip band.

Figure 162 - Zero-speed Skip Frequency

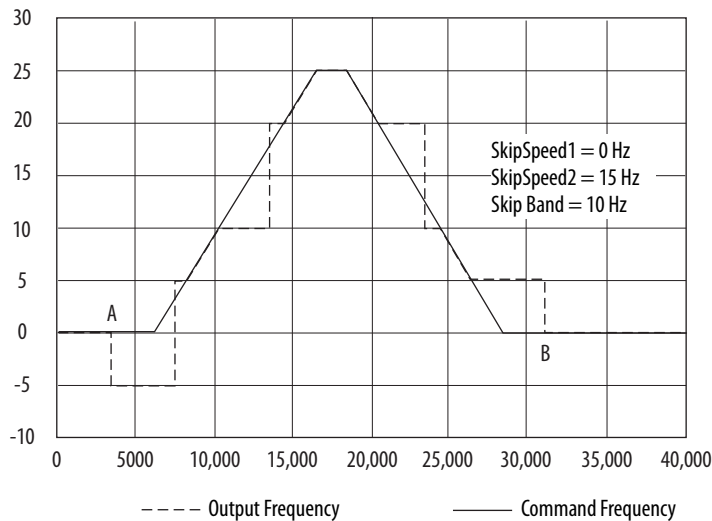


Flux Up

AC induction motors require that flux builds in the motor stator before controlled torque can develop. To build flux, voltage is applied. There are two methods to flux the motor and three configurable FluxUpControl settings.

With the No Delay setting (normal start), flux is established when the output voltage and frequency are applied to the motor. While flux is building, the unpredictable nature of the developed torque can cause the rotor to oscillate even though acceleration of the load can occur. In the motor, the acceleration profile does not follow the commanded acceleration profile due to the lack of developed torque.


Figure 163 - Acceleration Profile during Normal Start - No Flux Up

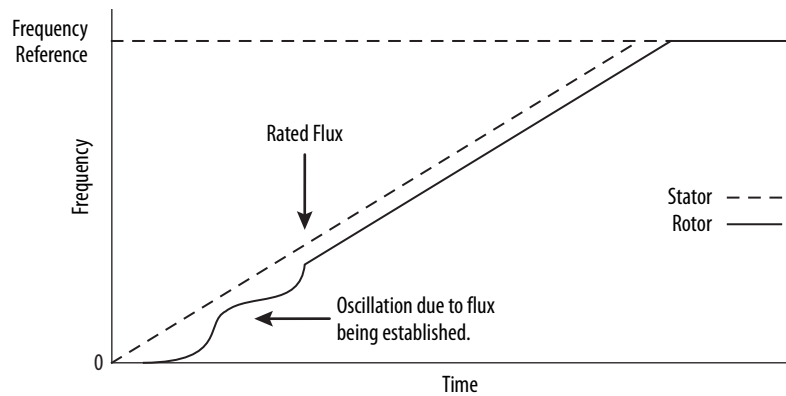

With the Automatic setting (default) DC current is applied to the motor so that flux builds before rotation. The flux-up time period is based on the level of flux-up current and the rotor time constant of the motor. The flux-up current is not adjustable.


In the Manual setting, DC current is applied to the motor so that flux builds before rotation. The flux-up time period is determined by the FluxUpTime attribute. The flux-up current is not adjustable.

Figure 164 - Flux Up Current versus Flux Up Time

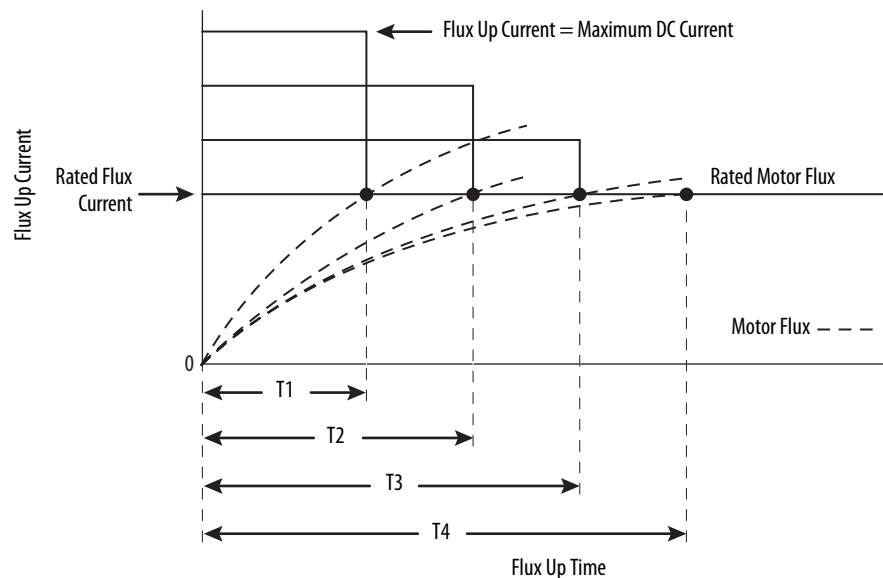

Once rated flux is reached in the motor, normal operation can begin and the desired acceleration profile achieved.

Figure 165 - Rated Flux Reached

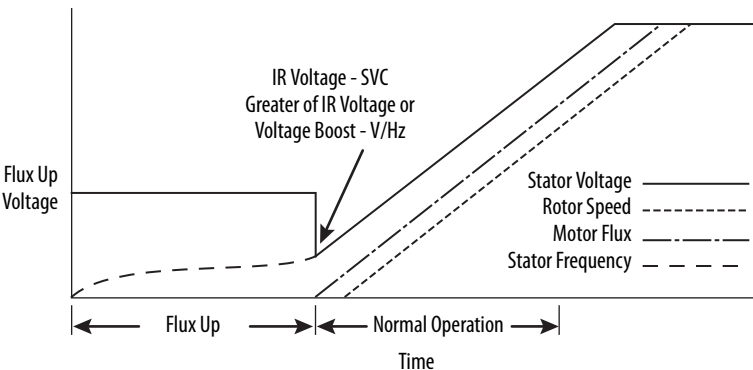

Flux Up Attributes

ID	Access	Attribute	Conditional Implementation
558	Set	Flux Up Control	Ind Motor only 0 = No Delay 1 = Manual Delay 2 = Automatic Delay
559	Set	Flux Up Time ⁽¹⁾	Ind Motor only Units: Seconds Default: 0.0000 Min/Max: 0.0000 / 1000.00

(1) This is the time designated for the Manual Delay setting. This attribute is not supported by the Automatic delay method. The flux-up feature is disabled if FluxUpControl is set to Manual Delay and FluxUpTime is set to 0.

FluxUpControl Attribute

When the motion axis is enabled, DC current is applied to an induction motor to build stator flux before transitioning to the Running state. This attribute controls how an induction motor is to be fluxed in the Starting state prior to transitioning to the Running state.

Table 149 - FluxUp Control Delay Methods

Delay Method	Description
No delay	The axis transitions immediately to the Running state while the motor flux is building.
Manual delay	The axis remains in the Starting state while the motor stator flux is building according to the Flux Up Time attribute.
Automatic delay	The drive determines the amount of delay time to fully flux the motor based on the motor configuration attribute data or measurements.


FluxUpTime Attribute

When FluxUpControl is configured for Manual Delay, this attribute sets the length of delay time to fully flux the motor before transitioning to the Running state.

Configure the Flux Up Attributes

Follow these steps to configure the flux-up attributes.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Parameter List category and scroll to FluxUpControl.

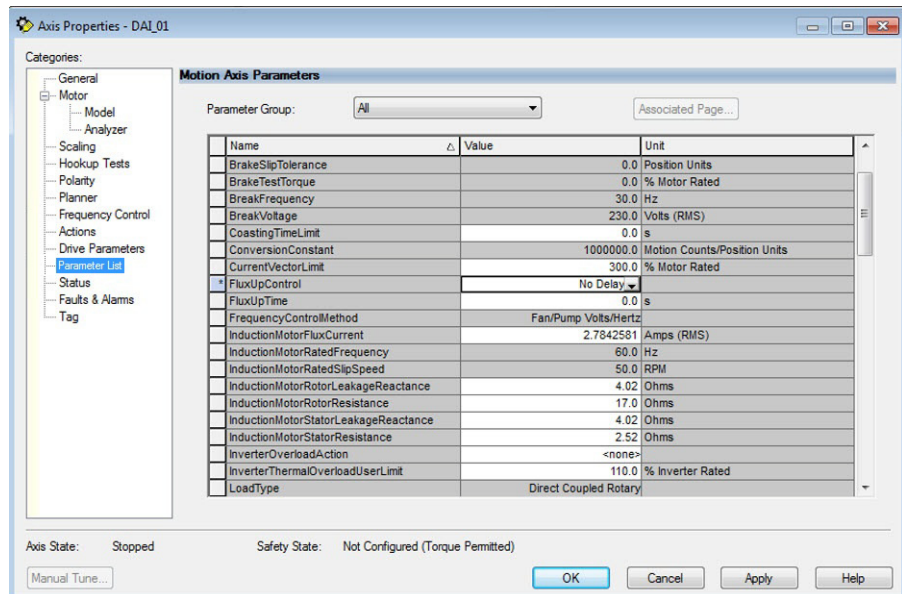

3. From the FluxUpControl pull-down menu, choose the proper delay value appropriate for your application.

CurrentVectorLimit	300.0
FluxUpControl	No Delay
FluxUpTime	No Delay
FrequencyControlMethod	Manual Delay
InductionMotorFluxCurrent	Automatic Delay

4. If you chose Manual Delay in [step 3](#), enter a value in the FluxUpTime attribute appropriate for your application.

If you chose No Delay or Automatic Delay in [step 3](#), the FluxUpTime attribute does not apply.

Current Regulator Loop Settings

Current loop bandwidth is set differently based on the selected motor type.

Table 150 - Current Regulator Loop Settings

Motor Type	Default Torque/Current Loop Bandwidth Hz
Rotary permanent magnet	1000
Rotary interior permanent magnet	
Linear permanent magnet	
Rotary induction	400


IMPORTANT The Logix Designer application does not perform calculations when the Torque/Current Loop Bandwidth attribute is updated. This bandwidth affects many other gains and limits. Changing, (lowering) the torque loop bandwidth without updating all the dependent attributes can result in drive/motor instability.

Motor Category

From the Motor category you can enter motor nameplate or datasheet values (phase-to-phase parameters) for rotary induction motors.

In this example, the Motor category>Nameplate / Datasheet parameters, were taken from a typical motor performance datasheet. Max Speed and Peak Current values are typically application dependent.

Figure 166 - Motor Nameplate / Datasheet Example

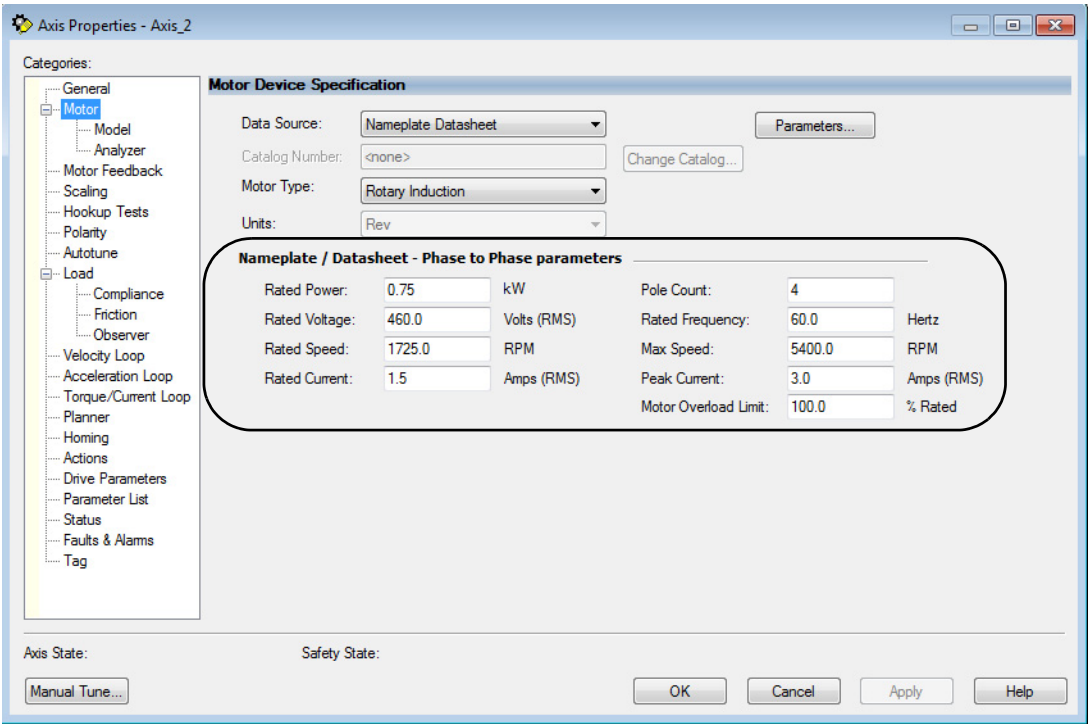

See [Figure 167](#) for motor manufacturer performance data sheet example.

Figure 167 - Motor Manufacturer Performance Data Sheet

CERTIFICATION DATA SHEET

TYPICAL MOTOR PERFORMANCE DATA

HP	kW	SYNC. RPM	F.L. RPM	FRAME	ENCLOSURE	KVA CODE		DESIGN	
1	.75	1800	1725	56C	TENV	P		A	
PH	Hz	VOLTS	FL AMPS	START TYPE	DUTY	INSL	S.F.	AMB°C	ELEVATION
3	60	460	1.5	INVERTER ONLY	CONTINUOUS	F3	1.0	40	3300
FULL LOAD EFF: 84		3/4 LOAD EFF: 82.5		1/2 LOAD EFF: 78.5		GTD. EFF	ELEC. TYPE		NO LOAD AMPS
FULL LOAD PF: 75		3/4 LOAD PF: 65.5		1/2 LOAD PF: 51		81.5	SQ CAGE INV DUTY		1
F.L. TORQUE		LOCKED ROTOR AMPS		L.R. TORQUE		B.D. TORQUE		F.L. RISE°C	
3 LB-FT		30 / 15		10.8 LB-FT 360%		15 LB-FT 500%		65	
SOUND PRESSURE @ 3 FT.		SOUND POWER		ROTOR WK ^2		MAX. WK ^2		SAFE STALL TIME	
62 dBA		72 dBA		0.11 LB-FT^2		0 LB-FT^2		0 SEC.	
								STARTS / HOUR	
								0	
								APPROX. MOTOR WGT	
								42 LBS.	

EQUIVALENT WYE CKT. PARAMETERS (OHMS PER PHASE)


R1	R2	X1	X2	XM
8.378	5.6232	10.7068	9.9116	278.036
RM	ZREF	XR	TD	TD0
11132.8	284	1.7	0.0071	0.136

Motor>Model Category

From the Motor>Model category you can enter additional motor nameplate or datasheet values (phase-to-neutral parameters) for induction motors.

The Motor>Model parameters are used in closed-loop induction-motor control mode, sensorless vector control mode, and when FluxUp is enabled, and are estimated automatically by the Logix Designer application based on the motor nameplate data. You can also enter these parameter values directly from the motor nameplate/datasheet or indirectly by running a Motor>Analyzer test.

Figure 168 - Phase-to-Neutral Parameters

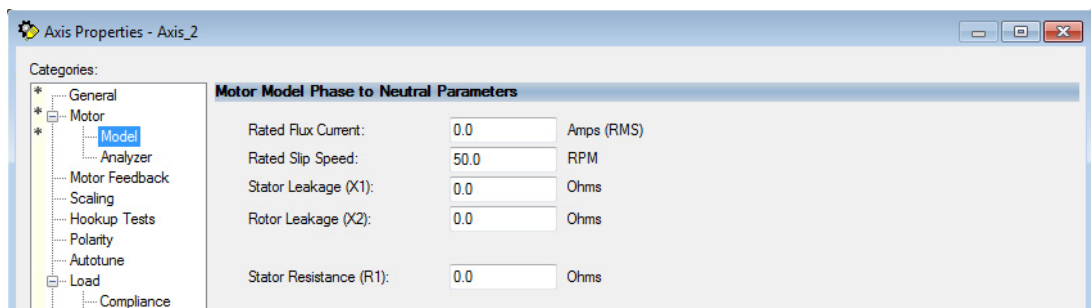


IMPORTANT If you do not know the Stator Leakage, Rotor Leakage, Stator Resistance, Rated Flux Current, and system inertia, you can run the static motor test and Autotune procedure to determine the parameter values.

Motor>Analyzer Category

From the Motor>Analyzer category you can perform three types of tests to identify motor parameters.

In this example, the Calculate Model test was run. If the Motor>Analyzer test executes successfully and you accept the test values, they populate the Model Parameter attributes.

Figure 169 - Motor Analyzer Category

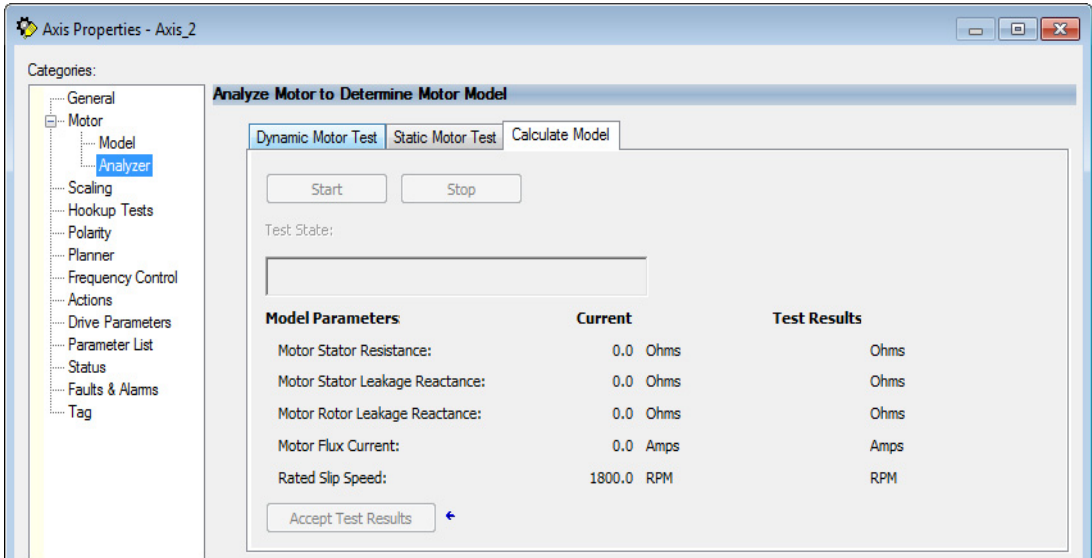

Motor Tests and Autotune Procedure

You can perform three types of tests to identify motor parameters and one test for motor/system inertia. These parameters are used by sensorless-vector frequency-control and induction motor closed-loop modes. [Table 151](#) recommends which test to use based on the control mode and application.

Table 151 - Motor Tests and Autotune Matrix

Control Mode	Description	Calculate	Static	Dynamic	Autotune (inertia test)
Induction motor - Frequency control	Basic volts/hertz	Not required	Not required	Not required	Not required
	Basic volts/hertz for Fan/Pump	Not required	Not required	Not required	Not required
	Sensorless vector	Required ⁽¹⁾	Preferred	Not required	Not required
Induction motor - Closed-loop control		Required ⁽¹⁾	Preferred ⁽²⁾	Preferred	Required ⁽¹⁾ ⁽³⁾


- (1) Not required for the Logix Designer application, version 29.00 and later.
- (2) If it is not desired to rotate the motor (due to coupled load) you can perform this test for induction motor closed-loop mode and skip the Dynamic test. The dynamic test provides the best results for induction motor closed-loop mode.
- (3) The motor inertia value must be non-zero prior to running a dynamic test. The motor inertia value is estimated automatically based upon the Motor Nameplate data in the Logix Designer application, version 29.00 and later. For previous versions, an Autotune test must be run or the motor inertia value entered directly.

For motor/system autotune procedure, see [Tune Induction Motors](#) on [page 204](#) for more information.

The Motor>Analyzer category offers three choices for calculating or measuring electrical motor data.

Follow these steps to run motor tests and identify motor parameters.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor>Analyzer category and select the motor test appropriate for your application.

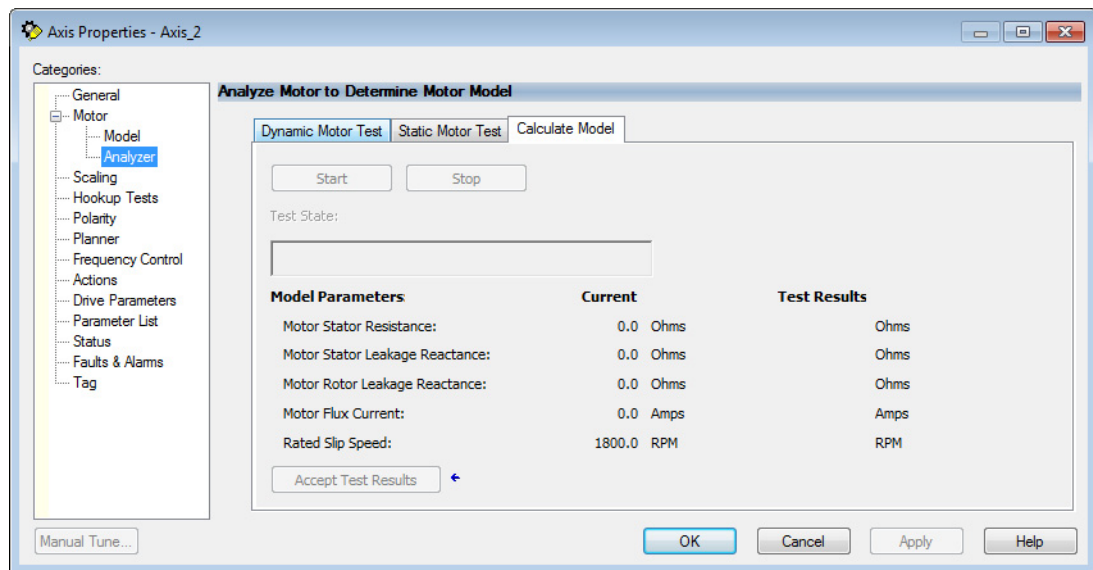

3. Click Start to run the test.
4. Click Accept Test Results to save the values.
5. Click OK.

Motor Analyzer Category Troubleshooting

Calculate Model

When a Calculate test is run, the drive uses motor nameplate data to estimate the motor's Rated Flux Current, Stator Resistance (R_s), Stator Leakage Reactance (X_1) and Rotor Leakage Reactance (X_2). No measurements are taken when using the Calculate test.

Static Motor Test

Use the Static test if the motor shaft cannot rotate or if it is already coupled to the load. Only tests that do not create motor movement are run. During this test, the Stator Resistance (R_s), Stator Leakage Reactance (X_1), and Rotor Leakage Reactance (X_2) values are measured during a series of static tests. The Rated Flux Current is estimated, since measurement of this value requires motor movement.

The Static test requires that you enter initial estimates for Rated Flux Current, Stator Resistance (R_s), Stator Leakage Reactance (X_1), and Rotor Leakage Reactance (X_2) into the Motor Model fields.

- For the Logix Designer application, version 29.00 or later, initial estimates are populated by the controller.
- For the Logix Designer application, version 28.00 or earlier, this can be done by running and accepting the results of a Calculate test, or by entering the values directly into the Logix Designer application.

Dynamic Motor Test

Dynamic tests are run with the motor disconnected from the load, because the motor shaft turns and there are no travel limits. This is often the most accurate test method. During this test, the Stator Resistance (R_s), Stator Leakage Reactance (X_1) and Rotor Leakage Reactance (X_2) values are measured in a series of static tests. The Rated Flux Current is measured during a rotational test, in which the drive commands 75% of the motor rated speed.

IMPORTANT The Dynamic test does not support travel limits.

The Dynamic test also requires that you enter initial estimates for Rated Flux Current, Stator Resistance (R_s), Stator Leakage Reactance (X_1), and Rotor Leakage Reactance (X_2) into the Motor Model fields.

- For the Logix Designer application, version 29.00 or later, initial estimates are automatically populated by the controller.
- For the Logix Designer application, version 28.00 or earlier, this can be done by running and accepting the results of a Calculate test, or by entering the values directly into the Logix Designer application.

The Dynamic test uses the Ramp Acceleration and Ramp Deceleration attributes to set the rotational test ramp-up and ramp-down times. If the resulting acceleration/deceleration times are less than 10 seconds, 10 seconds is used. If these attributes are not supported, 10 seconds is also used.

When configured for closed-loop control, the Dynamic test requires that an accurate system inertia is set in the Logix Designer application.

- For the Logix Designer application, version 29.00 or later, a default value is automatically populated by the controller.
- For the Logix Designer application, version 28.00 or earlier, this can be done by running and accepting the results of an Autotune test, or by entering the motor inertia value directly into the Logix Designer application.

When configured for closed-loop control, the Dynamic test uses the velocity regulator tuning as entered into the Logix Designer application. If the motor is coupled to a load, the velocity regulator tuning may need to be adjusted to make sure the velocity response is well controlled. The Dynamic test fails if the steady-state velocity feedback is not within a $\pm 30\%$ tolerance of the commanded velocity.

IMPORTANT The Dynamic test is not supported in closed-loop Torque Control.

If using the Dynamic test in Frequency Control mode, uncouple the motor from any load or results may not be valid. In closed-loop control, either a coupled or uncoupled load produces valid results.


Selection of Motor Thermal Models

The Kinetix 5700 drives contain two motor thermal-overload protection algorithms that you can use to prevent the motor from overheating.

Generic Motors

The default thermal model is a generic I^2T Class 10 overload protection algorithm. This model is active if the MotorWindingToAmbientResistance or the MotorWindingToAmbientCapacitance values are 0.0. The purpose of this algorithm is to limit the time a motor is operating with excessive levels of current. The relationship between Motor Overload Factory Limit trip-time and motor output current is shown in [Figure 170](#).

Figure 170 - Motor Overload Curve

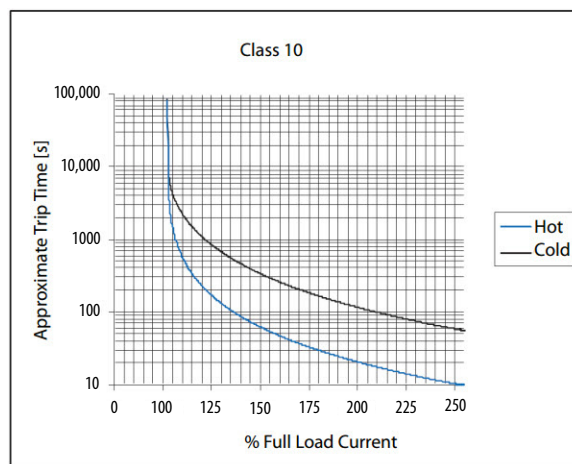

You can use the MotorOverloadLimit attribute (default of 100%, max of 200%) to increase the motor overload trip-time by artificially increasing the motor rated current (for thermal protection only). MotorOverloadLimit should only be increased above 100% if cooling options are applied. Increasing MotorOverloadLimit causes MotorCapacity to increase more slowly.

The generic motor thermal model also derates the motor rated current (for thermal protection only) when operating at low speeds. The derating factor is 30% at 0 Hz and 0% at 20 Hz, with linear interpolation between. Operating at output frequencies less than 20 Hz causes MotorCapacity to increase more quickly.

When the generic motor thermal-model is active, the MotorCapacity attribute increases only if the motor output current is greater than the effective motor rated current (taking into account the MotorOverloadLimit and low speed derating factor). The default MotorThermalOverloadFactoryLimit and MotorThermalOverloadUserLimit values for this thermal model are both 100%.

IMPORTANT The generic motor-thermal model does not support Current Foldback as a Motor Overload Action.

Thermally Characterized Motors

If the MotorWindingToAmbientResistance and MotorWindingToAmbientCapacitance attribute values are both non-zero, the motor is considered thermally characterized and an alternate motor thermal model is run. The purpose of this algorithm is to limit the time a motor is operating with excessive levels of current. This thermal model uses the first-order time constant determined from the MotorWindingToAmbientResistance and MotorWindingToAmbientCapacitance values to estimate the motor thermal capacity based on the motor output current.

The MotorOverloadLimit attribute (default of 100%, max of 200%) can be used to increase the motor overload trip-time by increasing the MotorThermalOverloadFactoryLimit value. The MotorOverloadLimit should be increased above 100% only if cooling options are applied. Increasing MotorOverloadLimit does not change the behavior of MotorCapacity.

This thermal model supports setting the MotorOverloadAction attribute as Current Foldback. Selecting the Current Foldback action results in a reduction in the current reference via the MotorThermalCurrentLimit attribute value that is reduced in proportion the percentage difference between the MotorCapacity and the MotorOverloadLimit values.

When this thermal model is active, the MotorCapacity attribute is non-zero if the motor output current is non-zero. The default MotorThermalOverloadFactoryLimit and MotorThermalOverloadUserLimit values for this thermal model are both 110%.

IMPORTANT This thermal model does not derate the motor-rated current when operating at low speeds. Operating at low output frequencies does not cause the MotorCapacity behavior to change.

Speed Limited Adjustable Torque (SLAT)

Speed limited adjustable torque (SLAT) is a special mode of operation used primarily in web handling applications. While configured for SLAT, the drive typically operates as a torque regulator. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output, relative to the applied TorqueTrim attribute.

A torque regulated application can be described as any process requiring tension control. For example, a winder or unwinder with material being drawn or pulled with a specific tension required. The process also requires that another element set the speed.

When operating as a torque regulator, the motor current is adjusted to achieve the desired torque. If the material being wound or unwound breaks, the load decreases dramatically and the motor can potentially go into a runaway condition.

The SLAT feature is used to support applications that require a robust transition from torque regulation to velocity regulation (and vice versa). The SLAT feature can be configured via the SLATConfiguration attribute as:

Table 152 - SLAT Configuration Descriptions

Name	Description
SLAT Disable	SLAT function is disabled. Normal Velocity Loop operation.
SLAT Min Speed/Torque	Drive automatically switches from Torque regulation to Velocity regulation if VelocityError < 0 and switch back to Torque regulation if VelocityError > SLATSetPoint for SLATTimeDelay.
SLAT Max Speed/Torque	Drive automatically switches from Torque regulation to Velocity regulation if VelocityError > 0 and switches back to Torque regulation if VelocityError < SLATSetPoint for SLATTimeDelay.

Direction of the applied torque and direction of the material movement determine whether SLAT minimum or SLAT maximum mode should be used.

Motion Polarity Setting

The Motion Polarity setting in the Logix Designer application > Axis Properties > Polarity does not affect SLAT behavior, however, you may require clarification on whether to use the SLAT Min Speed/Torque or SLAT Max Speed/Torque configuration when Motion Polarity is set to Inverted. In this case, the velocity error displayed in the Logix Designer application is inverted compared to what is actually used by the axis to control the SLAT function. So, if the SLAT configuration is set to Min and then Motion Polarity is switched to Inverted, change the SLAT configuration to Max.

Table 153 - SLAT Operation When Motion Polarity Is Inverted

Velocity Command	Motion Polarity	SLAT Configuration
Positive (clockwise)	Normal	Min
	Inverted	Max
Negative (CCW)	Normal	Min
	Inverted	Max


SLAT Min Speed/Torque

SLAT Min Speed/Torque is a special mode of operation primarily used in web handling applications. The drive typically operates as a torque regulator, provided that the TorqueTrim attribute is less than the torque output due to the velocity regulator's control effort. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output relative to the torque reference.

When used for SLAT control, an application dependent VelocityCommand value is applied to the drive via an MAJ instruction. An application dependent TorqueTrim value is also applied via cyclic write. Under normal operation, VelocityCommand is set to a level that results in the velocity regulator's control effort becoming saturated when the motor's speed is mechanically limited. The TorqueReference value equals the TorqueTrim value, resulting in a positive VelocityError value.

Should the mechanical speed limitation be removed (example: web break), the motor accelerates and VelocityError becomes negative. At this time, a forced transition to velocity regulation occurs, and the motor's speed is regulated to the VelocityCommand attribute.

The axis remains in velocity regulation until VelocityError exceeds SLATSetPoint for a time specified by SLATTimeDelay. At this point, the axis returns to operating as a torque regulator.

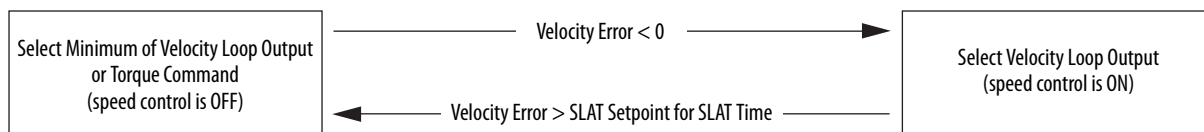Figure 171 - SLAT Min Speed/Torque

See the Integrated Motion on the EtherNet/IP™ Network Reference Manual, publication [MOTION-RM003](#), for more information on SLAT attributes.

SLAT Max Speed/Torque


SLAT Max Speed/Torque is a special mode of operation primarily used in web handling applications. The drive typically operates as a torque regulator, provided that the TorqueTrim attribute is greater than the torque output due to the velocity regulator's control effort. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output relative to the torque reference.

When used for SLAT control, an application dependent VelocityCommand value is applied to the drive via an MAJ instruction. An application dependent TorqueTrim value is also applied via cyclic write. Under normal operation, VelocityCommand is set to a level that results in the velocity regulator's control effort becoming saturated when the motor's speed is mechanically limited. The TorqueReference value equals the TorqueTrim value, resulting in a positive VelocityError value.

Should the mechanical speed limitation be removed (example: web break), the motor accelerates and VelocityError becomes negative. At this time, a forced transition to velocity regulation occurs, and the motor's speed is regulated to the VelocityCommand attribute.

The axis remains in velocity regulation until VelocityError is less than SLATSetPoint for a time specified by SLATTimeDelay. At this point, the axis returns to operating as a torque regulator.

Figure 172 - SLAT Max Speed/Torque

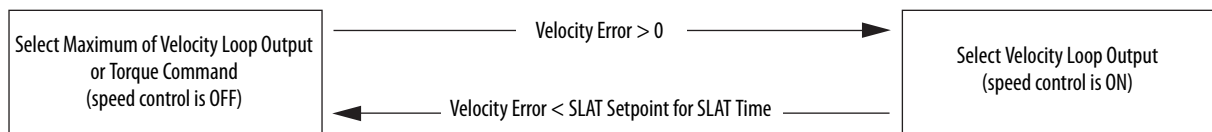

See the Integrated Motion on the EtherNet/IP Network Reference Manual, publication [MOTION-RM003](#), for more information on SLAT attributes.

SLAT Attributes

ID	Access	Attribute	Conditional Implementation
833	Set	SLAT Configuration	Ind Motor only 0 = SLAT Disable ⁽¹⁾ 1 = SLAT Min Speed/Torque 2 = SLAT Max Speed/Torque
834	Set	SLAT Set Point	Ind Motor only Velocity Units
835	Set	SLAT Time Delay	Ind Motor only Seconds


(1) SLAT Disable, when viewed in version 28.00 (and earlier) of the Logix Designer application, reads Torque Only. This is expected to change to SLAT Disable in a future version.

Configure the Axis for SLAT

Follow these steps to configure the SLAT attributes.


1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

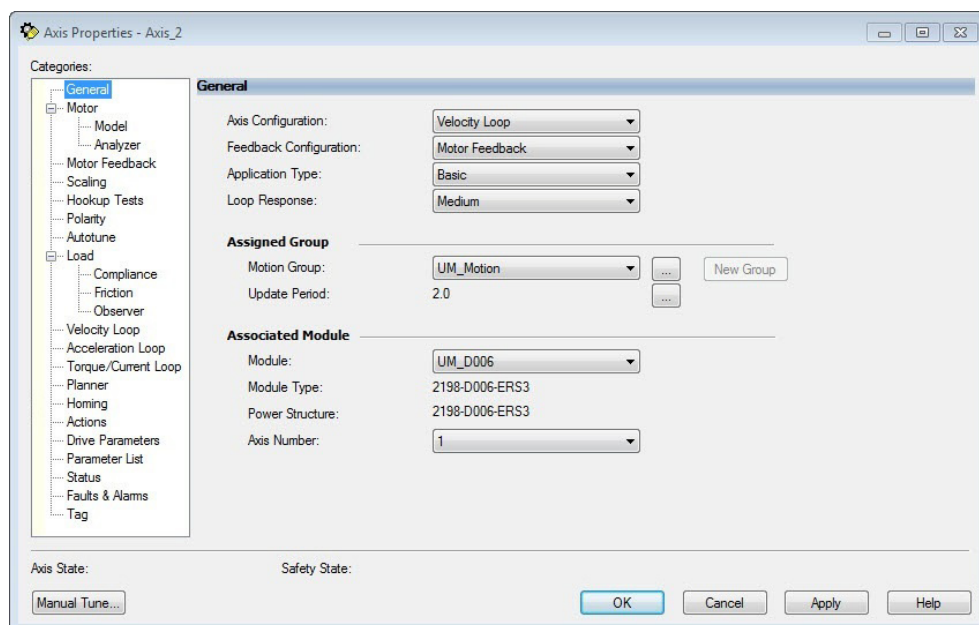

3. From the Axis Configuration pull-down menu, choose Velocity Loop.


The Velocity Loop dialog box appears.

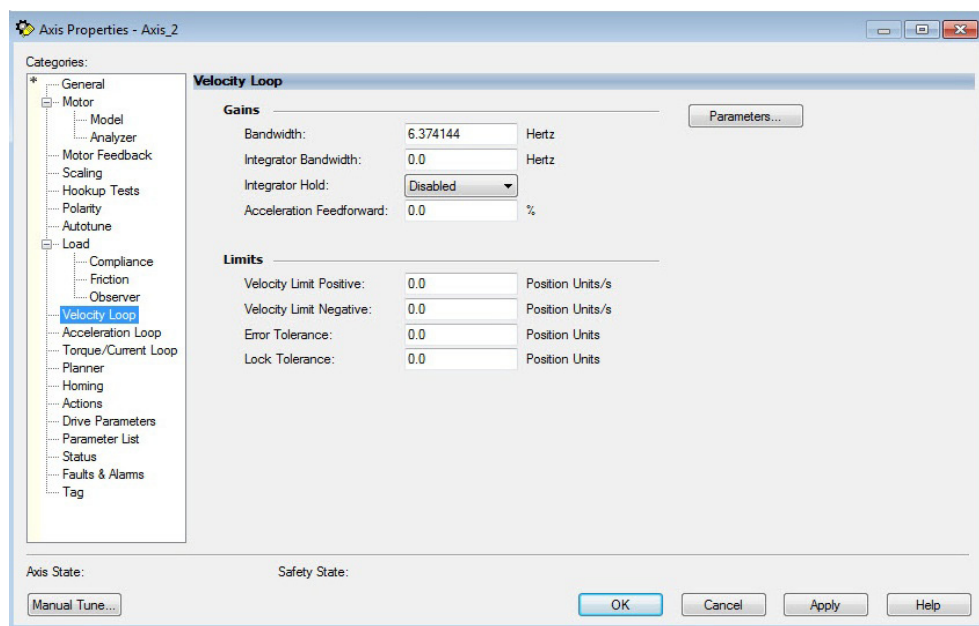

4. Enter values for the Velocity Loop attributes appropriate for your application.

5. Click Apply.
6. Select the Parameters List category.

The Motion Axis Parameters dialog box appears.

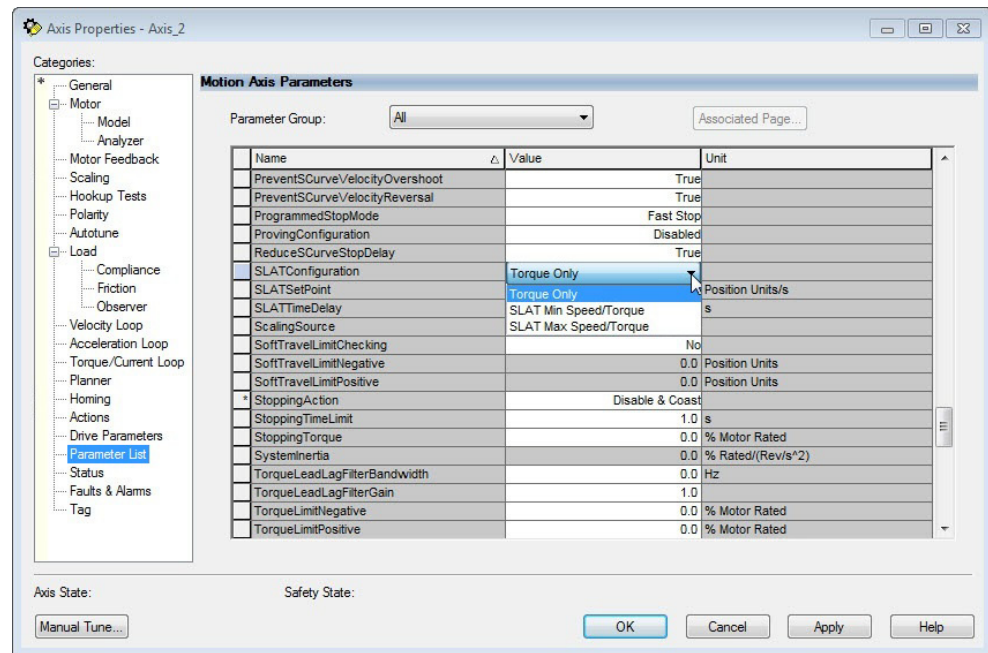

7. From the SLATConfiguration pull-down menu, choose the SLAT configuration appropriate for your application.


IMPORTANT SLAT parameters are configurable only when Velocity Loop is chosen from the General category, Axis Configuration pull-down menu.

8. Click Apply.
9. Enter values for SLATSetPoint and SLATTimeDelay attributes appropriate for your application.

ReduceSCurveStopDelay	True	
SLATConfiguration	Torque Only	
SLATSetPoint	0.0	Position Units/s
SLATTimeDelay	0.0	s
ScalingSource	From Calculator	

10. Click OK.
11. Select the Drive Parameters category.

The Drive Parameters to Controller Mapping dialog box appears.

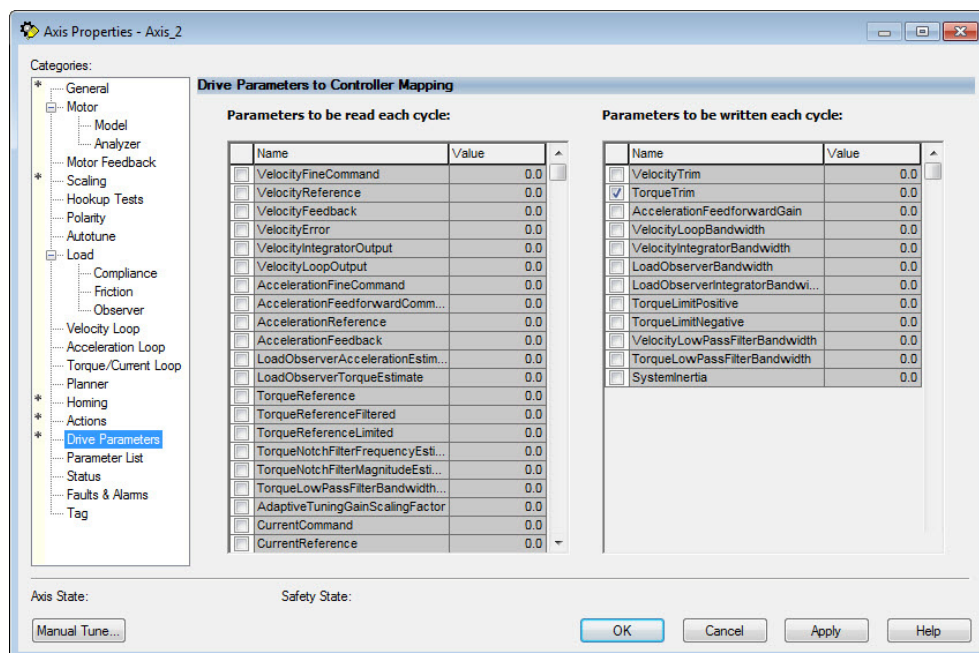

When using SLAT with the Kinetix 5700, the velocity command is sent to the drive via an MAJ instruction. The torque command is sent via the cyclic write TorqueTrim attribute. See the Integrated Motion on the EtherNet/IP Network Reference Manual, publication [MOTION-RM003](#), for more information on cyclic read and cyclic write.

- When using SLAT, start the axis with the MSO instruction.
- The VelocityCommand is sent via the MAJ instruction.
- The TorqueCommand is sent to AxisTag.TorqueTrim.
- To make changes to the VelocityCommand, you must re-trigger the MAJ with the Speed value or use a MCD (motion change dynamics) instruction.
- To stop the axis use a MAS instruction.
- The axis accelerates and decelerates at the MAJ instruction programmed Acceleration and Deceleration rates.
- You can also change the rates using the MCD instruction.

Motor Overload Retention

The motor overload retention feature protects the motor in the event of a drive power-cycle, in which the motor thermal state is lost.

With motor overload retention, upon drive power-up the MotorCapacity attribute initially reads:


- 20% if the motor is configured to use an integral thermal switch or an integral motor winding temperature is available
- 50% if the motor is not configured to use an integral thermal switch or an integral motor winding temperature is not available

If you have a separate monitoring algorithm within your Logix5000™ controller, you can use the InitialMotorCapacity attribute (3075)₁₀ or (C03)₁₆ to change the initial MotorCapacity value that the motor overload retention feature populates.

- You can write to the InitialMotorCapacity attribute only in the Stopped state after power-up
- You cannot write to the InitialMotorCapacity attribute after the first time the axis is enabled following a power cycle.

Use a message instruction to write to the InitialMotorCapacity value.

In this example, the source element tag motorcapacity is a REAL Data type.

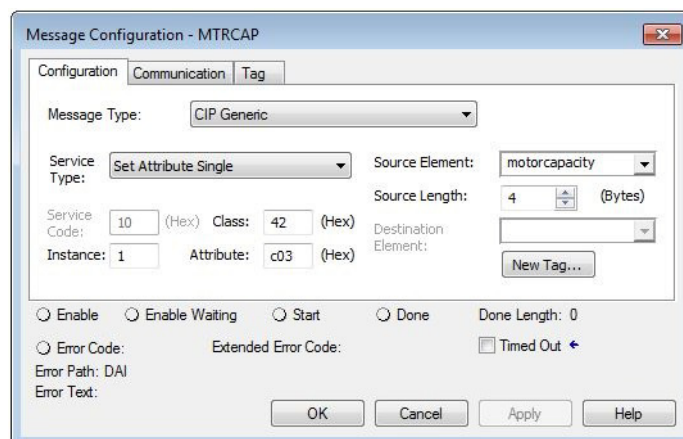

Torque Proving

The torque proving feature is designed to determine if motor power wiring is electrically connected to a motor and that reasonable current control exists. This attribute enables the operation of the drive's torque proving functions that work in conjunction with mechanical brake control.

When the ProvingConfiguration attribute is enabled, the drive performs a torque prove test of the motor current while in the Starting state to prove that current is properly flowing through each of the motor phases before releasing the brake. If the torque prove test fails, the motor brake stays engaged and a FLT-S09 Motor Phase Loss exception (fault) is generated.

IMPORTANT The mechanical brake must be set as soon as the drive is disabled. When the brake is under the control of the axis state machine, this is automatic. But, when controlled externally, failure to set the brake when the drive is disabled can cause a free-fall condition on a vertical application.

Table 154 - Torque Proving Startup Sequence

Startup Phase	Description
Phase 1	When the drive receives an enable request, the Starting state begins execution and torque proving starts.
Phase 2	The torque proving feature ramps current to the motor-phase output connector and verifies that the current feedback circuitry detects current on each of the phases.
Phase 3	Once motor-current feedback has been verified in each motor phase, the drive attempts to enable the current control loop at a user-specified current level, and verifies that the current-loop error tolerance is within range.

Torque proving is available for all motoring configurations including closed-loop servo control and induction motors.

For permanent magnet (PM) motors, the drive attempts to apply current to the motor phases such that all current through the motor is flux current. However, due to the electrical angle of the motor at the time of the MSO instruction, it may not be possible to verify the motor phase wiring with only flux current. Therefore, with a PM motor it is possible that the motor shaft can move slightly during torque proving if no motor brake exists to hold the load.


Torque Proving Attributes

ID	Access	Attribute	Conditional Implementation
590	SSV	Proving Configuration	0 = Disabled 1 = Enabled
591	SSV	Torque Prove Current	% Motor Rated Units: Amps Default: 0.000 Min/Max: 0/10,000

Torque Proving Configuration

Follow these steps to configure the torque proving attributes.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Parameter List category and scroll to ProvingConfiguration.

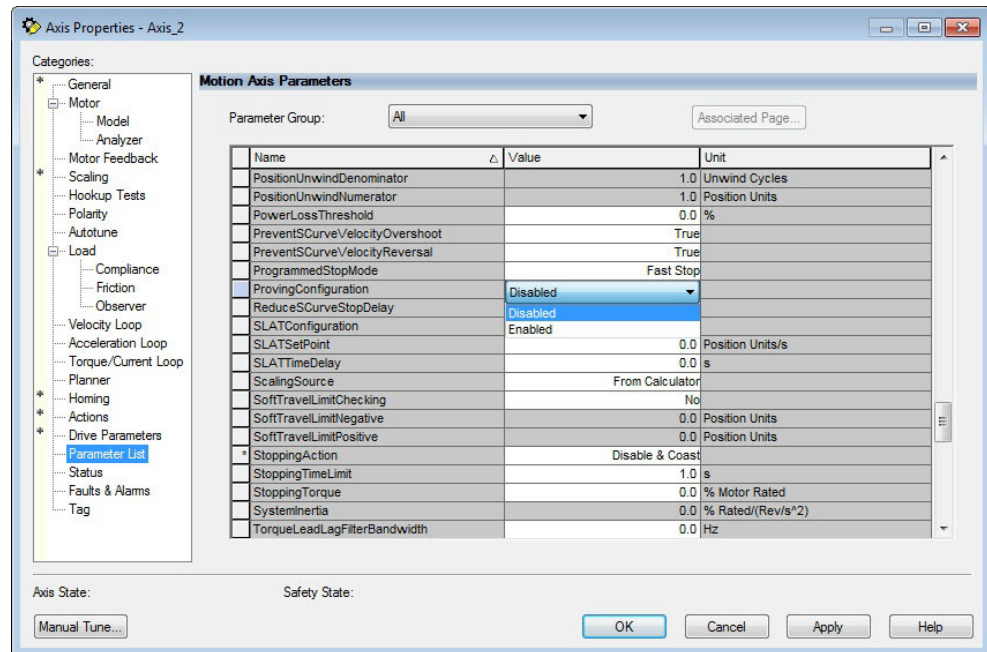

3. From the ProvingConfiguration pull-down menu, choose Enabled to enable the torque proving feature.

TorqueOffset	0.0	% Motor Rated
TorqueProveCurrent	0.0	% Motor Rated
TorqueRateLimit	1000000.0	% Motor Rated/s

4. Enter a value in the TorqueProveCurrent attribute appropriate for your application.
5. Click OK.

The TorqueProveCurrent attribute is active only if ProvingConfiguration is set to Enabled. TorqueProveCurrent lets you specify the amount of current that is used during the torque proving test and calculated as a percentage of motor rating. The higher the TorqueProveCurrent value the more current the drive delivers to the motor to verify that the motor phase wiring is available and capable of that current level. High current levels conversely causes more thermal stress and (potentially) can cause more torque to be driven against the motor brake during the test. If the TorqueProveCurrent level selected is too small, the drive cannot distinguish the proving current from noise, and in this case the drive posts an INHIBIT M04 torque-proving configuration fault code. The minimum amount of torque proving current depends on catalog number of the drive.

Torque Proving Current Example

In this example, a 2198-D020-ERS3 dual-axis inverter is paired with a VPL-B1003T-C motor with 6.77 A rms rated current. Use the torque-proving equation and table to calculate the initial minimum torque-proving current as a percentage of motor rated current. Depending on the unique characteristics of your application, the required torque-proving current value can be larger than the initial recommended value.

Figure 173 - Torque Proving Equation

$$\left(\frac{\text{Rating From Table}}{\text{Motor Rated Current}} \right) \times 100\% = \frac{0.5746 \text{ A}}{6.77 \text{ A}} \times 100\% = 8.49\%$$

Table 155 - Recommended Torque Proving Current

Drive Cat. No.	Torque Proving Current, min A, rms
2198-S086-ERS3	7.183
2198-S130-ERS3	9.337
2198-S160-ERS3	12.21
2198-D006-ERS3	0.1796
2198-D012-ERS3	0.3591
2198-D020-ERS3	0.5746
2198-D032-ERS3	0.9337
2198-D057-ERS3	1.6520

Velocity Droop

The velocity droop function can be useful when some level of compliance is required due to rigid mechanical coupling between two motors. The feature is supported when the axis is configured for Frequency Control, Velocity Control, or Position Control.

Closed Loop Control

The closed-loop velocity droop function is supported when configured for either Velocity or Position control. The velocity error input to the integral term is reduced by a fraction of the velocity regulator's output, as controlled by the VelocityDroop attribute. Therefore, as torque loading on the motor increases, actual motor speed is reduced in proportion to the droop gain. This is helpful when some level of compliance is required due to rigid mechanical coupling between two motors.

IMPORTANT The closed-loop velocity droop function acts to reduce the velocity error input to the integral term, but never changes the polarity of the velocity error.

IMPORTANT When configured for closed-loop control, the units of the VelocityDroop attribute are Velocity Control Units / Sec / % Rated Torque.

Frequency Control

The velocity droop function is also supported when configured for Frequency Control. As the estimated Iq current within the motor increases, the velocity reference is reduced in proportion to the VelocityDroop attribute. Therefore, as torque loading on the motor increases, actual motor speed is reduced in proportion to the droop gain. This is helpful when some level of compliance is required due to rigid mechanical coupling between two motors.

IMPORTANT The frequency-control velocity droop function acts to reduce the velocity reference, but never changes the direction of the velocity reference.

IMPORTANT When configured for frequency control, the units of the VelocityDroop attribute are Velocity Control Units / Sec / % Rated Iq Current.


Velocity Droop Attribute

ID	Access	Attribute	Conditional Implementation
464/321	SSV	Velocity Droop	Velocity Units / Sec / % Rated

Velocity Droop Configuration

Follow these steps to configure the velocity droop attribute.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Parameter List category and scroll to VelocityDroop.

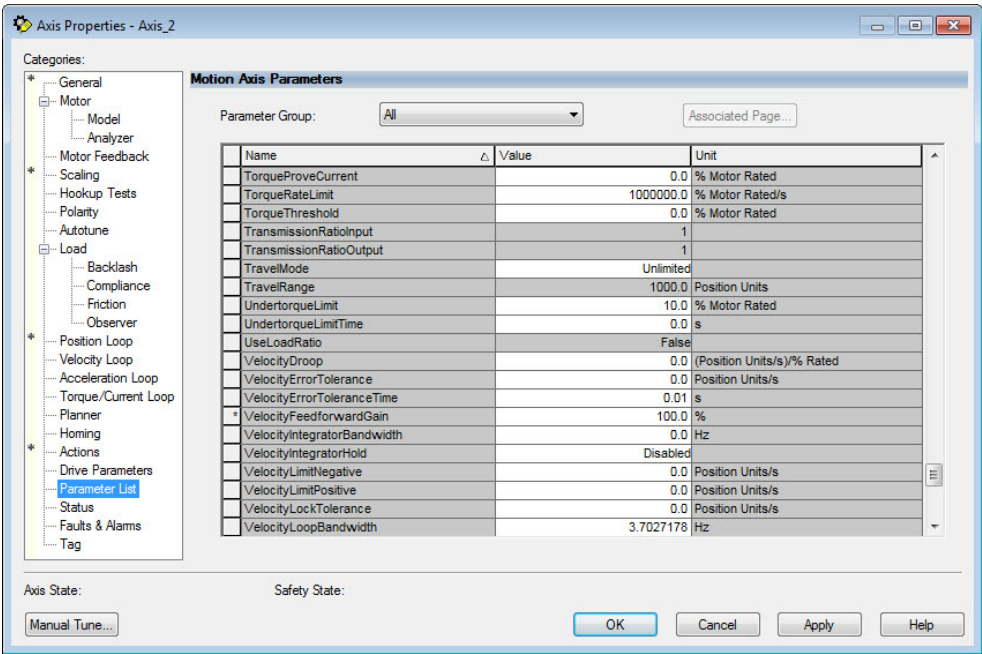

3. Enter a value in the Velocity Droop attribute appropriate for your application.
4. Click OK.


Commutation Test

The commutation test determines an unknown commutation offset and can also be used to determine the unknown polarity of the start-up commutation wiring. You can also use the commutation test to verify a known commutation offset and the polarity start-up commutation wiring.

IMPORTANT This test applies to third-party or custom permanent-magnet motors equipped with (TTL with Hall and Sine/Cosine with Hall) incremental encoders that are not available as a catalog number in the Motion Database.

IMPORTANT When motors have an unknown commutation offset and are not listed in the Motion Database by catalog number, you cannot enable the axis.

Figure 174 - Hookup Tests - Commutation Tab

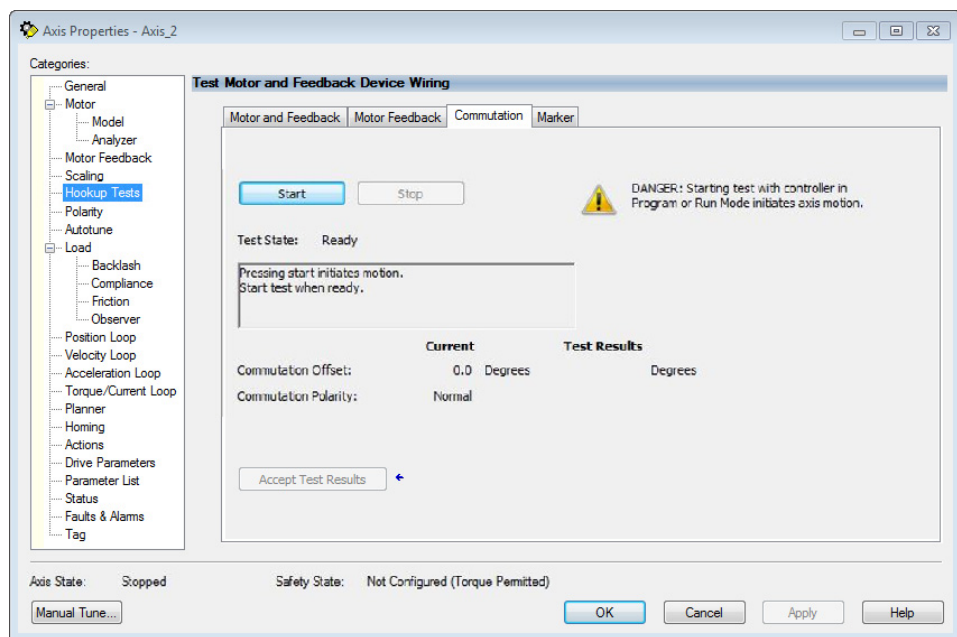

To run the commutation test, see [Test the Axes](#) on [page 199](#).

Adaptive Tuning

The adaptive tuning feature is an algorithm inside the Kinetix 5700 servo drives. The algorithm continuously monitors and, if necessary, adjusts or adapts various filter parameters and control-loop gains to compensate for unknown and changing load conditions while the drive is running. Its primary function is to:


- Automatically adjust torque-loop notch and low-pass filter parameters to suppress resonances
- Automatically adjust control-loop gains to avoid instability when detected

See Motion System Tuning Application Techniques, publication [MOTION-AT005](#), for more information on the AdaptiveTuningConfiguration attribute.

Extended Speed

Kinetix VP (Bulletin VPC) motors are designed to operate in Field Weakening mode to widen the speed range. Operation in Field Weakening mode can result in Back EMF voltage increasing to a level that exceeds the DC-bus voltage if a loss of control occurs. When this loss of control occurs, the Back EMF voltage can charge the DC-bus to a level that will overvoltage the DC-bus caps and result in a failure of the common DC-bus.

Figure 175 - Field Weakening Region

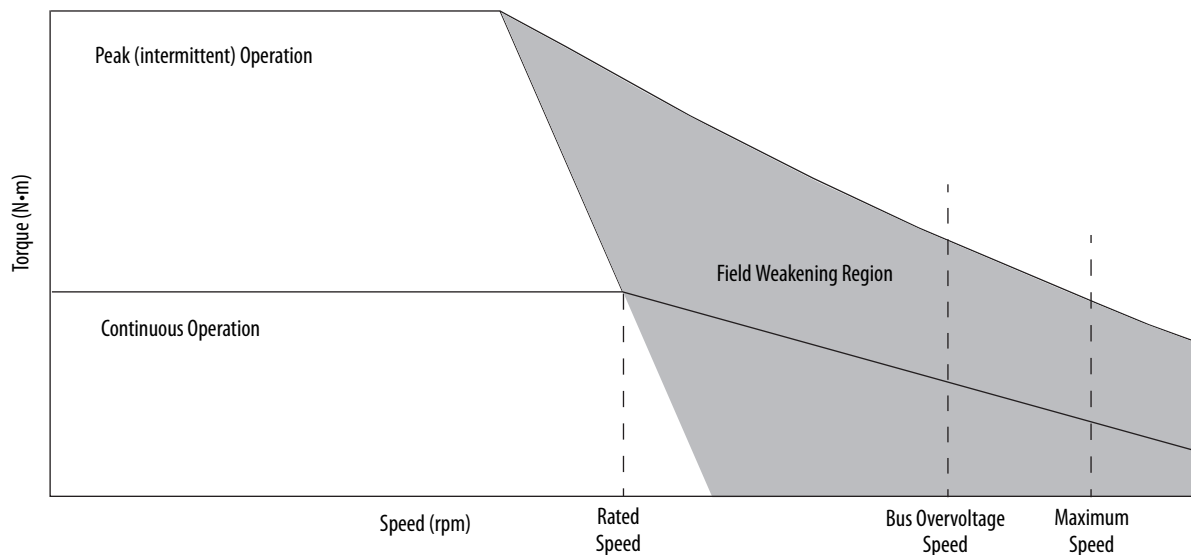


ATTENTION: DC-bus failure can cause damage to all drive modules in the bus group, not just the inverter connected to the motor.

Extended Speed Feature

The Extended Speed feature is implemented in the Logix Designer application to help prevent accidental operation at unsafe speeds. With this feature, the controller calculates a Bus Overvoltage Speed based upon the drive's maximum allowable bus-voltage and the Back EMF of the motor. This is the maximum speed that does not risk damaging the drive modules in the bus group. By default, the Extended Speed feature limits motor velocity to the Bus Overvoltage Speed.

Configure Extended Speed Operation

The extended speed feature is only configurable with Kinetix 5700 drives and Kinetix VP continuous-duty (IPM) motors. You can configure the Extended Speed feature in Axis Properties>Motor category of the Logix Designer application (version 29.00 or later).

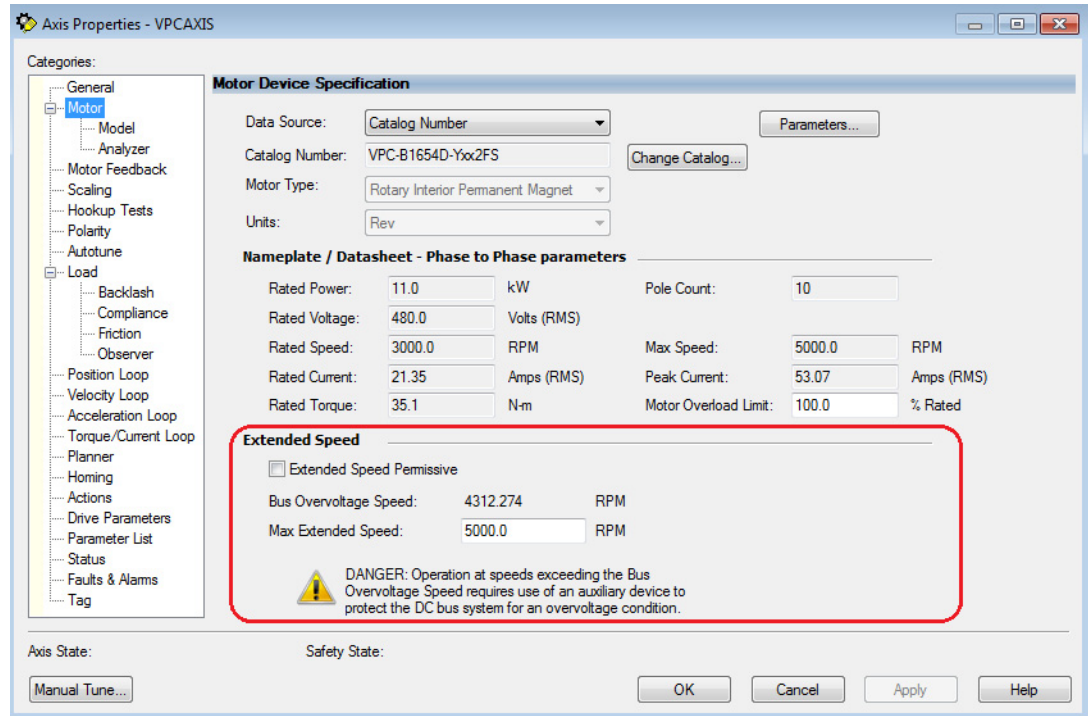

Follow these steps to enable operating at speeds greater than the Bus Overvoltage Speed.

1. In the Extended Speed field, check Extended Speed Permissive.
2. Set the Max Extended Speed attribute as required by your application.



WARNING: Operation at speeds exceeding the Bus Overvoltage Speed requires use of an auxiliary device to protect the DC bus system from an overvoltage condition.

Notes:

EC Certifications

This appendix provides Kinetix® 5700 servo system certification information.

Topic	Page
EC Type - Examination Certificate	353
EU Declaration of Conformity	354
European Union Directives	354

EC Type - Examination Certificate

For product certifications currently available from Rockwell Automation, go to <http://www.rockwellautomation.com/global/certification/overview.page>.

EC Type-Examination Certificate





Functional Safety Type Approved

www.tuv.com
ID 0600000000

Reg.-No.: 01/205/5255.02/15

Product tested	Safety Function "Safe Torque Off" (STO) within the AC Servo Drives Kinetix 5500 and 5700	Certificate holder	Rockwell Automation 6400 West Enterprise Drive Mequon, WI 53092 USA
Type designation	Safe Torque Off-Hardwired (Kinetix 5500): 2198-H003-ERS, 2198-H008-ERS, 2198-H015-ERS, 2198-H025-ERS, 2198-H040-ERS, 2198-H070-ERS Safe Torque Off-Integrated (Kinetix 5500): 2198-H003-ERS2, 2198-H008-ERS2, 2198-H015-ERS2, 2198-H025-ERS2, 2198-H040-ERS2, 2198-H070-ERS2 Safe Torque Off Hardwired / Integrated (Kinetix 5700): 2198-S089-ERS3, 2198-S130-ERS3, 2198-S160-ERS3, 2198-D006-ERS3, 2198-D012-ERS3, 2198-D020-ERS3, 2198-D032-ERS3, 2198-D057-ERS3		
Codes and standards	EN 61800-5-2:2007 EN 61800-5-1:2007 (in extracts) EN 61800-3:2004 + A1:2012 EN ISO 13849-1:2008 + AC:2009 EN 62061:2005 + AC:2010 + A1:2013 EN 60204-1:2006 + A1:2009 + AC:2010 (in extracts) IEC 61508 Parts 1-7:2010		
Intended application	The integrated safety function "Safe Torque Off-Hardwired" complies with the requirements of the relevant standards (Cat. 3 / PL d acc. to EN ISO 13849-1, SILCL 2 acc. to EN 62061 / EN 61800-5-2 / IEC 61508) and can be used in applications up to PL d acc. to EN ISO 13849-1, SIL 2 acc. to EN 62061 / IEC 61508. The integrated safety functions "Safe Torque Off-Integrated" and "Safe Torque Off Hardwired / Integrated" comply with the requirements of the relevant standards (Cat. 3 / PL e acc. to EN ISO 13849-1, SILCL 3 acc. to EN 62061 / EN 61800-5-2 / IEC 61508) and can be used in applications up to PL e acc. to EN ISO 13849-1, SIL 3 acc. to EN 62061 / IEC 61508.		
Specific requirements	The instructions of the associated Installation and Operating Manual shall be considered. It is confirmed that the product under test complies with the requirements for machines defined in Annex I of the EC Directive 2006/42/EC. Valid until 2020-04-07 The issue of this certificate is based upon an examination, whose results are documented in Report No. 968/M 367.03/15 dated 2015-04-07. This certificate is valid only for products which are identical with the product tested. It becomes invalid at any change of the codes and standards forming the basis of testing for the intended application.		

Berlin, 2015-04-07



Certification Body for Machinery, NB 0035

Dipl.-Ing. Eberhard Frejno

10222-12, 12-E A4 © TÜV, TÜV and TÜV are registered trademarks. Utilisation and application requires prior approval.

TÜV Rheinland Industrie Service GmbH, Albrecht 56, 12103 Berlin | Germany
Tel.: +49 30 7562-1007, Fax: +49 30 7562-1071, E-Mail: industrie-service@tuev.com

www.fs-products.com
www.tuv.com

 **TÜVRheinland®**
Precisely Right.

EU Declaration of Conformity

For all declarations of conformity (DoC) currently available from Rockwell Automation, go to <http://www.rockwellautomation.com/global/certification/ce.page>.

European Union Directives

If this product is installed within the European Union or EEC regions and has the CE mark, the following regulations apply.

CE Conformity

Conformity with the Low Voltage Directive and Electromagnetic Compatibility (EMC) Directive is demonstrated by using harmonized European Norm (EN) standards published in the Official Journal of the European Communities. The safe torque-off circuit complies with the EN standards when installed according instructions found in this manual.

EMC Directive

This unit is tested to meet Council Directive 2004/108/EC Electromagnetic Compatibility (EMC) by using these standards, in whole or in part:

- EN 61800-3 - Adjustable Speed Electrical Power Drive Systems, Part 3 - EMC Product Standard including specific test methods
- EN 61326-3-1 EMC - Immunity requirements for safety-related systems

The product described in this manual is intended for use in an industrial environment.

CE Declarations of Conformity are available online at <http://www.rockwellautomation.com/rockwellautomation/certification/overview.page>.

Low Voltage Directive

These units are tested to meet Council Directive 2006/95/EC Low Voltage Directive. The EN 60204-1 Safety of Machinery-Electrical Equipment of Machines, Part 1-Specification for General Requirements standard applies in whole or in part. Additionally, the standard EN 61800-5-1 Electronic Equipment for use in Power Installations apply in whole or in part.

Refer to the Kinetix Servo Drives Specifications Technical Data, publication [KNX-TD003](#), for environmental and mechanical specifications.

Numerics

2090-CFBM7DF-CD 17
2090-CFBM7DF-CE 17
2090-CPBM7DF 17, 115
2090-CPWM7DF 115
2090-CSBM1DE 17, 23, 109
2090-CSBM1DG 17, 23, 109
2090-XXNFMF 17
2198-BARCON-55DC200 16
2198-CAPMOD-2240 30
2198-CAPMOD-DCBUS-IO 30
2198-H2DCK 16, 23, 79, 123, 128
 pinout 124
2198-K57CK-D15M 16, 23, 79, 123, 128
 pinout 124
2198-KITCON-DSL 16, 23, 112
2198-KITCON-ENDCAP200 16
2198T-CHBFLS8 17, 22
24V input power connector
 pinouts 68
 wiring 103
8720MC-RPS
 interconnect diagram 275
8720MC-RPS065
 interconnect diagram 276
8720MC-RPS190
 interconnect diagram 278

A

about this publication 13
absolute position feature 89
AC line filters
 noise reduction 45
actions category 177, 181, 185
active shunt connector
 wiring 132
actuators
 compatible actuators 123
adaptive tuning 349
additional resources 13
Add-on Profile 144
alarm 220
application requirements 251
applying power 195
associated axes
 tab 154, 160, 189
audience for this manual 13
auxiliary feedback encoders 87
axis properties 163, 165, 174, 178, 182, 190
axis unstable 218

B

back EMF 350
basic volts/hertz 167, 317

BC connector

pinouts 71
 wiring 115

behavior

DC-bus power supply 221
 drive module 224
 iTRAK power supply 223

Beldon 116

block diagrams

capacitor module 296
 DC-bus power supply 292
 dual-axis inverter 294
 iTRAK power supply 295
 single-axis inverter 293

bonding

EMI (electromagnetic interference) 40
 examples 41
 high frequency energy 42
 subpanels 42

brake relay 76

Bulletin

1321 line reactors 14, 16
 8720MC-RPS 14, 16
 MPAL electric cylinders 23
 MPAS linear stages 23

bus overvoltage speed 350

bus-sharing

configuration 153, 157
 group 153, 157
 group example 196
 groups 196
 regulator 153

C

cables

Bulletin 2090 17
 catalog numbers 109, 115
 categories 44
 Ethernet cable length 134
 induction motors 116
 maximum length 109, 117
 routing 34
 shield clamp 113, 126

capacitor module 52, 296

catalog number 30
 interconnect diagram 273
 status indicator 218
 wiring 129
 wiring requirements 130

catalog numbers

capacitor module 30
 DC-bus power supply 30
 inverters 30
 iTRAK power supply 30
 motor cables 109, 115
 shared-bus connection system 30

category 3

requirements 234
 stop category definitions 234

CE

- compliance 31
- comply with CE 354
- conformity 354
- meet requirements 242, 354

CED connector

- pinouts 68
- wiring 106

certification

- application requirements 251
- EC Type - Examination Certificate 353
- EU Declaration of Conformity 354
- European union directives 354
- PL and SIL 234
- TÜV Rheinland 233
- user responsibilities 233
- website 14

circuit breaker selection 35**clamp 113, 126**

- spacers 119

commutation offset 200, 349**CompactLogix**

- Ethernet connections 134

compatibility

- motor feedback 190
- motors and actuators 123

configuration

- 8720MC-RPS 20
- DC-bus power supply 18
- extended DC-bus 21
- feedback examples 23
- iTRAK power supply 22
- multiple DC-bus power supply 19

configuring

- actions category 177, 181, 185
- axis properties 190
- basic volts/hertz 167
- controller 146
- DC-bus power supply 151
- download program 194
- EtherNet/IP module 148
- fan/pump volts/hertz 172
- feedback-only axis 161, 163
- flux up 329
- frequency control category 167, 169, 172
- general category 163, 165, 174, 178, 182
- home screen 136
- hookup test 200
- induction motor tuning 204
- induction-motor closed-loop axis properties 182
- induction-motor frequency-control axis 165
- inverters 155
- IP address 144
- IPM motor closed-loop axis properties 174
- load category 176, 180, 187
- Logix5000 communication 299
- master feedback 164
- menu screens 137, 138
- modular properties 189
- module properties 152, 153, 154, 156, 157, 158, 160, 161

- inhibit module 300

- motion group 162

- motor

- test 199

- motor category 166, 175, 179, 183, 330
- extended speed 351

- motor feedback 190

- motor feedback category 184, 191, 192, 193, 194

- motor>analyzer category 171, 188

- network parameters 144

- parameter list category 168, 170, 173, 177, 181, 186

- PM motor tuning 202

- polarity category 183

- power tab

- bus-sharing group example 196

- bus-sharing groups 196

- scaling category 176, 180, 185

- sensorless vector 169

- setup menu 140, 141, 142

- setup screens 139

- SLAT 340

- SPM motor closed-loop axis properties 178

- startup sequence 143

- torque proving 345

- valid feedback types 191

- velocity droop 348

connecting

- CompactLogix 134

- connector kit shield clamp 126

- ControlLogix 134

- Ethernet cables 134

- motor shield clamp 113

connector kit

- 2198-BARCON-55DC200 16

- 2198-H2DCK 123

- 2198-K57CK-D15M 16, 123

- 2198-KITCON-DSL 16, 112

- 2198-KITCON-ENDCAP200 16
- 24V

- drive system 16

- iTRAK PS system 16

- cable preparation

- motor feedback 125

connector locations

- DC-Bus power supply 64

- dual-axis inverters 65

- iTRAK power supply 67

- single-axis inverters 66

contactor enable

- connector pinouts 68

- relay 76

contactor selection 36**control power**

- input specifications 78

- pinouts 68

- wiring 103

ControlFLASH

- firmware upgrade 297

- troubleshooting 304

controller

- and drive behavior 220
- CompactLogix 146
- configure 146
- ControlLogix 146
- properties
 - date/time tab 150
 - enable time synchronization 150

ControlLogix

- Ethernet connections 134

conventions used in this manual 13**converter kit**

- 2198-H2DCK 16, 123
- cable lengths, max 109

CP connector

- pinouts 68
- wiring 103

current limiting 320**current regulator loop 330****D****date/time tab 150****DC bus connector**

- pinouts 69

DC-bus power supply 64, 100

- behavior 221
- catalog numbers 30
- configuring 151
- menu screen 138
- setup menu 141

digital

- AqB TTL 191
- AqB with UVW 192

digital inputs 74

- pinouts 69
- tab 153
- wiring 108

disable 223**display 136****download program 194****drilling hole patterns 56**

- system mounting toolkit 58

drive module

- behavior 224

drive replacement

- integrated safety 256

dual-axis inverter 65, 102

- shield clamp 119

E**earth ground 98****EC Type - Examination Certificate 353****EMC**

- directive 354
- motor ground termination 113

EMI (electromagnetic interference)

- bonding 40

EN 61508 234**EN 62061 234****EN ISO 13849-1 CAT 3**

- requirements 234
- stop category definitions 234

enable time synchronization 150**enclosure**

- power dissipation 38
- requirements 34
- sizing 37

encoder phasing 88**encoder support**

- DSL 79
- universal 79

encoders 87**erratic operation 219****Ethernet connector**

- pinouts 71

EtherNet/IP

- connecting cables 134
- connections 75
- module properties 148
- PORT1 and PORT2 connectors 134

EU Declaration of Conformity 354**European union directives 354****extended DC-bus 308**

- interconnect diagram 274

extended speed 132, 350

- configure 351

external active shunt resistor

- wiring 132

external passive shunt resistor 46, 47

- pinouts 69
- wiring 131

F**fan/pump 318****fan/pump volts/hertz 172****fault**

- code summary 209
- codes 208
- soft overtravel 208
- status only 220

feedback

- configurations 23
- feedback-only axis 161
- specifications 79

feedback-only axis 163**field weakening 350****firmware upgrade 297**

- system requirements 298
- verify upgrade 305

flux up 327

- attributes 328

frequency control category 167, 169, 172**fuse selection 35**

G

general

category 163, 165, 174, 178, 182
tab 152, 156

grounded power configuration 93

grounding

multiple subpanels 99
screws 96

H

hardwired STO mode 27, 90, 236, 242

operation 242
pinouts 245

HF bonding 40

high frequency energy 42

Hiperface-to-DSL feedback converter kit 123

hold 223

hole patterns 56, 58

home screen

soft menu 136

hookup test 200, 349

HPK-Series rotary motors 23

I

I/O

digital inputs specifications 74

ignore 220

induction motor control 116

closed-loop axis properties 182
configure flux up 329
control methods
 basic volts/hertz 317
 fan/pump 318
 sensorless vector 319
flux up 327
flux up attributes 328
frequency-control axis 165
motor and inertia tests 332
motor data sheet 331
motor>analyzer category 332
motor>model category 331
multiple skip speed 326
open-loop frequency control 316, 320, 323
skip speed 325
SLAT 339

inhibit module 300

input power wiring

24V control 103
contactor enable 106
corner grounded delta 94
determine input power 93
grounded power configuration 93
grounding screws 96
impedance-grounded 94
mains 105
remove grounding screws 97
ungrounded power configuration 95

installing drive accessories

AC line filters 45
external passive shunt resistor 46, 47

installing your drive 33

bonding examples 41
bonding subpanels 42
cable categories 44
circuit breakers 35
clearance requirements 38
contactor selection 36
fuse selection 35
HF bonding 40
noise zones 43
system mounting requirements 34
transformer 35

integrated STO mode 28, 29, 90, 251

drive replacement 256
operation 252
STO bypass 259
STO state reset 255

interconnect diagrams

2198 drive with 8720MC-RPS 275
2198 drive with 8720MC-RPS065 master/
 slave 276
2198 drive with 8720MC-RPS190 278
2198 drive with HPK-Series 285
2198 drive with LDAT 287
2198 drive with LDC 290, 291
2198 drive with MPAR/MPAI 289
2198 drive with MPAS 288
2198 drive with MPL/VPC-S/MPM/MPF/MPS
 284
2198 drive with RDD-Series 286
2198 drive with VPC-Y 283
2198 drive with VPL/VPC-Q/VPF/VPS 282
capacitor module 273
extended system 274
module status 280
multiple converter 270
multiple iTRAK power supplies 272
notes 267
passive shunt resistor 281
single converter 269
single iTRAK power supply 271
single motor cable 282

inverters 65, 66

catalog numbers 30
configuring 155
menu screen 137
setup menu 140

IOD connector

pinouts 69
wiring 108

IP address 144

IPD connector

pinouts 68
wiring 105

IPM motor closed-loop axis properties 174

iTRAK power supply 67, 100, 295

behavior 223
catalog numbers 30
menu screen 138
setup menu 142

K

Kinetix VP rotary motors 23

L

Lapp 116

LCD display 136

messages 208

LDAT-Series linear thrusters 23

LDC-Series linear motors 23

link

link/activity status indicator 217

speed status indicator 217

load category 176, 180, 187

Logix Designer 144

Logix Designer application 146

Logix5000 communication 299

low voltage directive 242, 354

M

mains input power connector

pinouts 68

wiring 105

major fault 220

master feedback 164

menu screens 137, 138

MF connector

pinouts 72

wiring 112, 123

minor fault 220

module definition 149, 156, 189

module properties 189

associated axes 189

associated axes tab 154, 160

digital input tab 153

EtherNet/IP module 148

general tab 152, 156

module definition 149, 156, 189

new tag 154, 161

power tab 152, 157

safety tab 158

module status

indicator 217

interconnect diagram 280

Motion Analyzer website 14

motion direct commands

STO bypass 259

warning messages 260

motion group 162

motor

analyzer category 171, 188, 332

category 166, 175, 179, 183

data sheet 331

feedback category 184, 191, 192, 193, 194

feedback compatibility 190

model category 331

motor and inertia tests 332

overload retention 343

power/brake cable preparation 117

thermal models 335

motors

accel/decel problems 219

brake connector

pinouts 71

wiring 115

cable catalog numbers 109, 115

cable length 31, 34

cable length, max 109, 117

compatible motors 123

feedback connector

pinouts 72

wiring 112, 123

ground termination 113

induction 116

interconnect diagram 282

overheating 219

power connector

pinouts 71

wiring 110, 115

shield clamp wiring 113, 126

testing 199

thermal specifications 80

tuning 199

universal feedback connector

pinouts 73

velocity 219

mounting your drive

attaching to the panel 61

drilling hole patterns 56

mounting order

capacitor modules 52

drive modules 50, 51

shared-bus connection system 54

system mounting toolkit 58

zero-stack tab and cutout 54

MP connector

pinouts 71

wiring 110, 115

MPAI electric cylinders 23

MPAS linear stages 23

MP-Series rotary motors 23

multiple converter

interconnect diagram 270

multiple iTRAK power supplies

interconnect diagram 272

multiple skip speed 326

N

navigation buttons 136

network

- parameters 144
- status indicator 217

new tag

- data type 154, 161

noise

- abnormal 219
- feedback 219
- reduction 45
- zones 43

O**open-loop frequency control** 316**out of box state** 236**overtravel** 208**P****panel requirements** 34**parameter list category** 168, 170, 173, 177, 181, 186**passive shunt connector**

- wiring 131

passive shunt resistor

- interconnect diagram 281

PFH definition 234**pinouts**

- 2198-H2DCK 124
- 2198-K57CK-D15M 124
- 24V input power connector 68
- contactor enable connector 68
- DC bus connector 69
- digital inputs connector 69
- Ethernet connector 71
- mains input power connector 68
- motor brake connector 71
- motor feedback connector 72
- motor power connector 71
- safe torque-off 245
- shunt connector 69
- universal feedback connector 73

planning your installation 33**polarity category** 183**power dissipation** 38**power tab**

- bus configuration 153, 157
- bus regulator 153
- bus-sharing
 - group 153, 157, 196
 - group example 196
- power structure 152, 157

power up 195**power/brake cable preparation** 117**product selection website** 14**publications, related** 13**R****related publications** 13**remove grounding screws** 97**remove/replace drive**

- remove drive 231
- remove power 228
- replace drive 231
- startup and configure 232

restoring hardwired STO mode 237**routing power and signal wiring** 92**S****SAB** 116**safe torque-off** 247

- bypass wiring 248
- cascaded wiring 249
- configurations
 - hardwired 27
 - integrated 28, 29
- explicit messages 239
- feature 235
- hardwired STO mode 90, 236, 242
 - specifications 250
 - timing diagram 243
 - troubleshooting 243
- integrated STO mode 90, 251
 - specifications 265
 - STO bypass 259
 - STO state reset 255
 - troubleshooting 256
- out of box state 236
- PFH 234
- restoring hardwired STO mode 237
- status bits 239

safety

- products catalog 250
- tab 158

scaling category 176, 180, 185**sensorless vector** 169, 319**setup screens** 139, 140, 141, 142**shared-bus**

- connection system 54
- catalog numbers 30

shield clamp 113, 126

- dual-axis inverter 119
- single-axis inverter 121

shunt connector

- pinouts 69

shutdown 220, 223**sine/cosine** 193

- with Hall 194

single converter

- interconnect diagram 269

single iTRAK power supply

- interconnect diagram 271

single motor cable 282**single-axis inverter** 66, 101

- shield clamp 121

sizing

- 24V current 312
- extended DC-bus 308
- general guidelines 309
- shared-bus configurations 307
- system sizing 309
- system sizing application example 314
- system sizing example 313
- total system capacitance 310

skip speed 325**SLAT 337**

- attributes 339
- configuring 340

soft menu

- home screen 136

software

- Logix Designer application 146

software overtravel 208**specifications**

- auxiliary feedback 79
- auxiliary feedback encoders 87
- brake relay 76
- contactor enable relay 76
- control power input 78
- digital inputs 74
- encoder phasing 88
- EtherNet/IP connections 75
- hardwired STO mode 250
- integrated STO mode 265
- motor feedback 79
 - absolute position 89
 - EnDat digital 86
 - EnDat sine/cosine 85
 - generic TTL incremental 82
 - sin/cos incremental 84
 - Stegmann 81
- motor thermal 80

speed limited adjustable torque 337**SPM motor closed-loop axis properties 178****stability control 323****startup sequence 143****status indicators**

- capacitor module 218
- link speed status 217
- link/activity status 217
- module status 217
- network status 217
- troubleshooting 217

STO connector

- pinouts 245
- wiring 247

stop

- drive 220
- planner 220

Studio 5000 Logix Designer 144**system**

- block diagrams
 - capacitor module 296
 - DC-bus power supply 292
 - dual-axis inverter 294
 - iTRAK power supply 295

- single-axis inverter 293
- components 16
- ground 98
- mounting requirements 34
- mounting toolkit 58
- overview
 - 8720MC-RPS 20
 - EtherNet/IP 24, 25, 26
 - extended DC-bus 21
 - iTRAK power supply 22
 - multiple DC-bus power supplies 19
 - shared DC-bus 18
- sizing application example 314
- sizing example 313

T**testing axes**

- hookup test 200

time synchronization 150**torque proving 343**

- attributes 343
- configuring 345

total system capacitance 310**training 13****transformer sizing 35****troubleshooting**

- alarm 220
- capacitor module status 218
- ControlFLASH 304
- controller/drive fault behavior 220
- disable 223
- fault
 - code summary 209
 - codes 208
 - status only 220
- general system problems 218
 - abnormal noise 219
 - axis unstable 218
 - erratic operation 219
 - feedback noise 219
 - motor accel/decel 219
 - motor overheating 219
 - motor velocity 219
 - no rotation 219
- hold 223
- ignore 220
- LCD display messages 208
- link speed status indicator 217
- link/activity status indicator 217
- major fault 220
- minor fault 220
- module status indicator 217
- network status indicator 217
- safe torque-off
 - hardwired STO mode 243
 - integrated STO mode 256
- safety precautions 207
- shutdown 220, 223
- status indicators 217
- stop
 - drive 220
 - planner 220

tuning

- induction motor 204
- PM motor 202

typical installation

- 8720MC-RPS 20
- EtherNet/IP 24, 25, 26
- extended DC-bus 21
- iTRAK power supply 22
- multiple DC-bus power supplies 19
- shared DC-bus 18

U**UFB connector**

- pinouts 73
- wiring 123

ungrounded power configuration 95**universal feedback connector kit** 123**V****valid feedback types** 191

- digital AqB TTL 191
- digital AqB with UVW 192
- sine/cosine 193
- sine/cosine with Hall 194

velocity droop 347

- attribute 347
- configure 348

verify upgrade 305**W****website**

- certifications 14
- Motion Analyzer 14
- product selection 14

wiring

- active shunt 132
- BC connector 115
- capacitor module 129
- CED contactor enable 106
- connector kit shield clamp 126
- CP connector 103
- earth ground 98
- Ethernet cables 134
- external active shunt resistor 132
- external passive shunt resistor 131
- grounded power configuration 93
- grounding screws 96
- guidelines 103
- input power type 93
- IOD connector 108
- IPD connector 105
- MF connector 112, 123
- motor cable shield clamp 113
- MP connector 110, 115
- passive shunt 131
- remove grounding screws 97
- requirements 92
 - capacitor module 130
 - DC-bus power supply 100
 - dual-axis inverter 102

- iTRAK power supply 100
- single-axis inverter 101
- routing power and signal wiring 92
- safe torque-off bypass 248
- safe torque-off cascaded 249
- STO connector 247
- UFB connector 123
- ungrounded power configuration 95

Z**zero-stack tab and cutout** 54

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	https://rockwellautomation.custhelp.com/
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-c.pdf.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, CompactLogix, ControlFLASH, ControlLogix, Encompass, GuardLogix, HPK-Series, Kinetix, LDC-Series, Logix5000, MP-Series, PanelView, POINT Guard I/O, POINT I/O, Rockwell Automation, Rockwell Software, RSLinx, Stratix, Studio 5000, and Studio 5000 Logix Designer, are trademarks of Rockwell Automation, Inc.

EtherNet/IP, CIP Safety, and CIP Sync are trademarks of ODVA, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2198-UM002D-EN-P - November 2016

Supersedes Publication 2198-UM002C-EN-P - March 2016

Copyright © 2016 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.