

BUS BODY ELECTRONICS

SC600 REVO E BYD

Operating instructions
- Busdriver

Contents

Contents	1
List of Figures	2
List of Tables	2
1 Introduction	3
1.1 Intended purpose	3
1.2 Symbols used	3
1.3 Description of the control panel	4
1.4 Description of the display	4
1.5 Mode overview	5
2 Use	6
2.1 Activation/deactivation	6
2.1.1 Activation	6
2.1.2 Deactivation	6
2.2 Auto mode	6
2.2.1 Activation	6
2.2.2 Deactivation	7
2.3 Configuring the blowers manually	7
2.4 Fresh air/recirculating air function	7
2.5 Dehumidify	8
2.6 Setting the temperature	8
2.7 Errors	8
2.7.1 Error detection mode	8
2.7.2 Error overview	9

BUS BODY ELECTRONICS

List of Figures

Figure 1 - SC600 control panel	4
Figure 2 - SC600 display	4
Figure 3 - SC600 mode overview	5
Figure 4 - SC600 start display	6
Figure 5 - SC600 deactivation	6
Figure 6 - SC600 Auto mode activated	6
Figure 7 - SC600 Auto mode activated, Cooling mode	6
Figure 8 - SC600 Auto mode activated, Heating mode	6
Figure 9 - SC600 Auto mode deactivated	7
Figure 10 - SC600 recirculating air function activated	7
Figure 11 - SC600 dehumidify activated	8
Figure 12 - SC600 setting the temperature	8
Figure 13 - SC600 errors	8
Figure 14 - SC600 Error detection mode	8
Figure 15 - SC600 normal operating display	9

List of Tables

Table 1 - SC600 error code overview	9
---	---

1 Introduction


1.1 Intended purpose

The SC600 is a system intended to control the HVAC components (heating, ventilation, air-conditioning) in buses, for example roof-top air-condition systems, heating devices, etc. It consists of a control panel (control device as an interface between human and machine) that is integrated into the dashboard.

This control panel allows the driver to control the roof-top air-conditioning system that has ventilation, cooling and heating functions for the roof. Additionally, this control panel can also be used to control the heating system on the floor.

The controller for the air-conditioning systems components can operate automatically. To do so, the bus driver simply has to set the desired temperature.

1.2 Symbols used

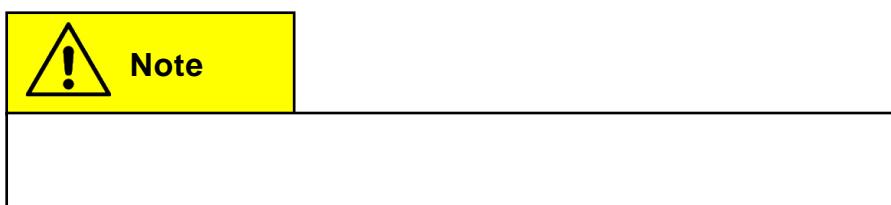

BUS BODY ELECTRONICS

1.3 Description of the control panel

The control panel components are depicted and described in the following image.

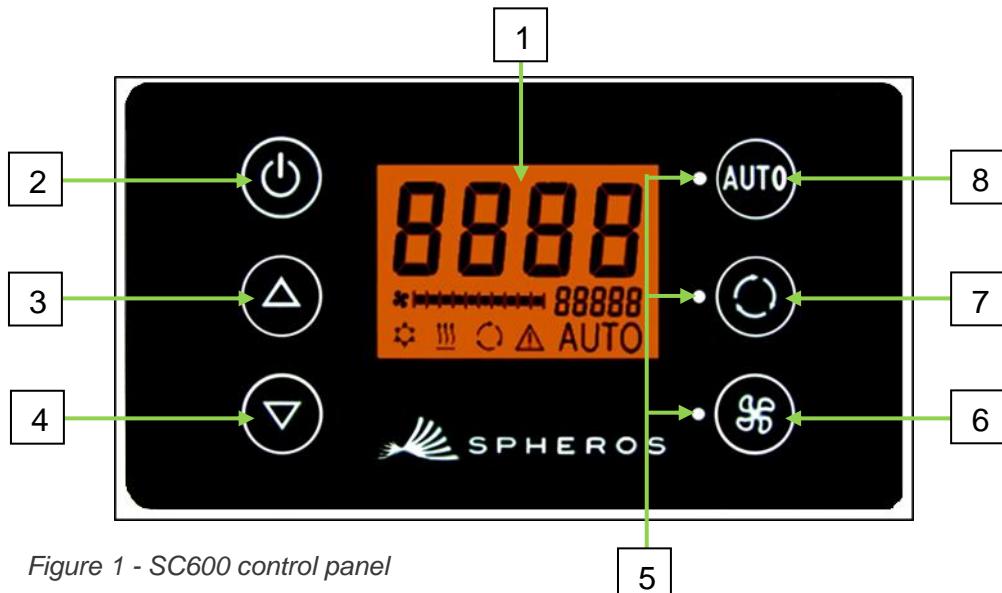


Figure 1 - SC600 control panel

- 1. Display
- 2. On/off button
- 3. UP
- 4. DOWN
- 5. Function status light
- 6. Blower button
- 7. Fresh air/recirculating air button
- 8. Auto button

1.4 Description of the display

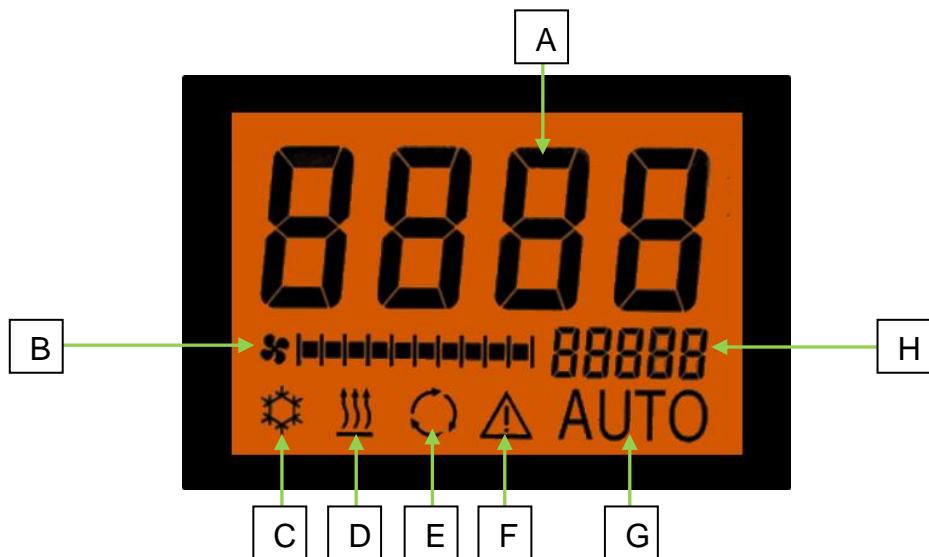


Figure 2 - SC600 display

- A. Desired value display, room temperature
- B. Blower level manual
- C. Cooling mode
- D. Heating mode
- E. Recirculating air on
- F. Error display
- G. Auto mode active
- H. External temp. display

BUS BODY ELECTRONICS

1.5 Mode overview

The SC600 system includes 2 different modes – Operating mode and Error mode.

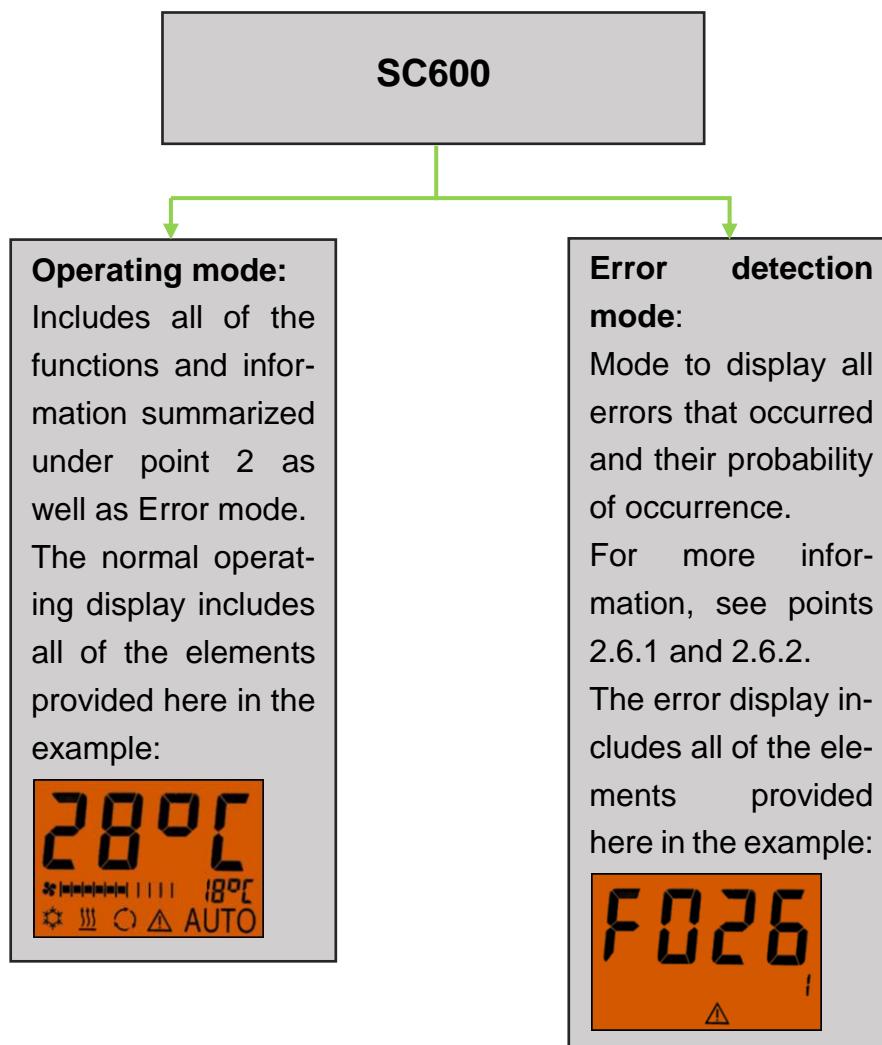


Figure 3 - SC600 mode overview

2 Use

2.1 Activation/deactivation

2.1.1 Activation

Press  button

- Sets the last configured temperature; Auto mode off (Figure 4).

2.1.2 Deactivation

Press  button

- Display deactivated.

Press  button for 2 seconds until OFF appears

- System deactivated.



Figure 4 - SC600 start display



Figure 5 - SC600 deactivation

2.2 Auto mode



Note

Auto mode can be turned on only if the motor has been started.



Figure 6 - SC600 Auto mode activated

2.2.1 Activation

Press  button if Auto mode is off

- Mode is on - corresponding status light and function symbol light up on the display (Figure 6).



Figure 7 - SC600 Auto mode activated, Cooling mode

If Auto mode is on, the system automatically turns on Cooling Mode  and Heating mode  (if available) as needed (Figures 7 and 8). Activate Auto mode in order to use all functions.



Figure 8 - SC600 Auto mode activated, Heating mode

2.2.2 Deactivation

Press **AUTO** button if Auto mode is on

- Mode is off - corresponding status light and function symbol are off (Figure 9).



Note

When Auto mode is deactivated, the air conditioning compressor (after a run time of 90 seconds max.) and the heater are turned off.

The blower will continue to be controlled automatically.



Figure 9 - SC600 Auto mode deactivated

2.3 Configuring the blowers manually



Note

It is not possible to control the blower manually.

2.4 Fresh air/recirculating air function

Press **Q** button when fresh air valves are open

- System activates recirculating air function for 10 minutes (corresponding function status light and display symbol light up).
- After running for 10 minutes, the system turns off the manual recirculating air function. The system then controls the fresh air valves automatically.
- Pressing the button again within 10 minutes will deactivate the manual recirculating air function. The system then controls the fresh air valves automatically.



Figure 10 - SC600 recirculating air function activated



Note

If the manual recirculating air function is on, the corresponding status light and the display symbol will light up (Figure 10).

BUS BODY ELECTRONICS

2.5 Dehumidify

Press  button for 2 seconds

→ Dehumidify air function is on (Figure 11).



Figure 11 - SC600 dehumidify activated

2.6 Setting the temperature

Press  button

→ Desired temperature +1 °C.

Press  button

→ Desired temperature -1 °C.



Figure 12 - SC600 setting the temperature

2.7 Errors



Figure 13 - SC600 errors

2.7.1 Error detection mode

2.7.1.1 Activation

Press  and  buttons at the same time for 2 seconds

→ Mode is on.

→ Error code (F001) and occurrence count (1 here) will be displayed (Figure 14).

2.7.1.2 Reading out errors

→ Scroll through the error codes with  or .



Figure 14 - SC600 Error detection mode

BUS BODY ELECTRONICS

- Reset the counter with **AUTO** (after resetting, the counter shows the value 1 if the error persists).

2.7.1.3 Ending

Press **AUTO** and **⌘** buttons for 2 seconds

- Normal operating display appears (Figure 15).



Figure 15 - SC600 normal operating display

2.7.2 Error overview

Error code	Component	Cause	Remedy
F001-015	Not used		
F016	EDS		➤ Restart system
F017	Pressure sensor	➤ Defective sensor ➤ Wiring harness defective	
F018	Duct/convector temperature sensor	➤ Defective sensor Wiring harness defective	
F019	Ice sensor	➤ Defective sensor Wiring harness defective	➤ Inspect wiring harness ➤ Replace sensor
F020	Room temperature sensor	➤ Defective sensor Wiring harness defective	
F021	Environmental temperature sensor	➤ Defective sensor Wiring harness defective	
F022	Ice sensor	➤ Icing ➤ Temperature too low	Wait until sensor has defrosted
F023 F024	High pressure Low pressure	Brief system overload because of high motor speed at high environmental temperature	The system turns off for 5 minutes and tries to restart. If the error code persists, consult our service center
F025-32	Not used		

Table 1 - SC600 error code overview



Valeo Thermal Commercial Vehicles Germany GmbH
Postfach 1371 – 82198 Gilching - Germany - Tel. +49 (0)8105 7721-0 - Fax 49 (0)8105 7721-889
www.valeo-thermalbus.com - service-valeobus@valeo.com