



---

## PERSONAL COMPACT DISC PLAYER



### MODEL: CD-60 USER MANUAL

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING  
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

## WARNING

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED  
AVOID EXPOSURE TO BEAM.



This product contains a low power laser device.

**Note:** This product complies with DHHS rule 21 CFR, subchapter J, Part 1040 at the date of manufacture.

## SAFETY PRECAUTIONS

1. As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
2. Stop operation immediately if any liquid or solid object should fall into the cabinet. Unplug the unit and have it checked by qualified personnel.
3. Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
4. Do not put anything in the safety slot. If you do, the laser diode will be ON when the lid is still opened.
5. If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC adaptor from the wall outlet. Make it a practice to remove the AC adaptor by grasping the main body and not by pulling the cord.
6. This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified herein may result in exposure to hazardous radiation.

## COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

## PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

## IMPORTANT NOTES

1. This product does not contain a separate Power On/Off switch.
  - Slide the CD/FM Mode selector to the CD position for CD mode, after inserting a disc and installing batteries/AC adaptor, simply press the Play button to switch on and play a disc.
  - Slide the CD/FM Mode selector to the FM position for FM radio mode.
2. In order to maximize battery life and provide optimum playing time this product incorporates an Auto Power Off function when in CD mode only. The power to the player will automatically switch off approximately 30 seconds after a disc has finished playing or when the CD lid is opened.
3. You must manually slide the CD/FM Mode selector to the CD position (power off) after listening to FM radio, and to turn the power off. The Auto Power Off feature does not work when in FM radio mode.

## DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



### Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

**Model Number: CD-60**

**Serial Number:** \_\_\_\_\_


## PREPARATION FOR USE

Unpack the unit carefully to remove all the accessories from the packing. Verify that the following accessories are present before setting up the unit.

Accessories:

- |               |     |
|---------------|-----|
| ● Main Unit   | X 1 |
| ● Earbuds     | X 1 |
| ● User Manual | X 1 |

## LOCATION OF CONTROLS

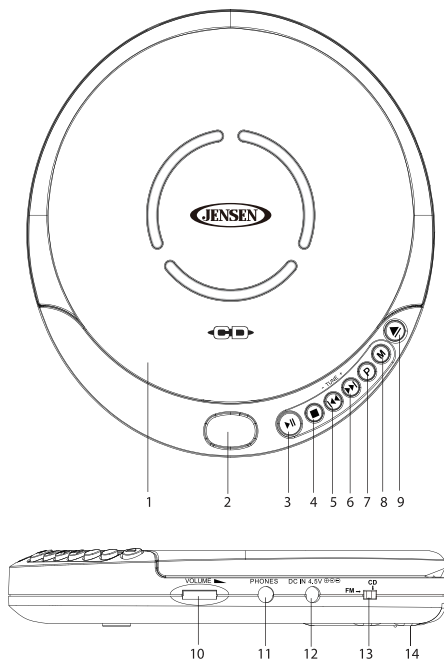

1. CD Door
2. LCD Display (CD mode only)
3. CD Power On/Off; Play/Pause ►|| Button
4. CD Stop ■ Button
5. CD Skip/Search Backward ◀◀ ; FM TUNE- Button
6. CD Skip/Search Forward ▶▶ ; FM TUNE+ Button



### **BATTERY NOTE AND CARE**

1. Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).
6. Do not dispose of batteries in fire, batteries may leak or explode.

### **Using an adaptor (not included) to power the unit**

1. Before connecting the adaptor to the player, make sure that the AC voltage of the adaptor corresponds to your local AC outlet voltage. The polarity of the adaptor must match to the polarity markings next to the DC jack on the player.
2. Plug the 4.5V DC 700mA AC-DC adaptor into an AC outlet.
3. Insert the DC plug into the DC IN jack on the player.

**NOTE:** When the AC-DC adaptor is connected, the batteries will be automatically disconnected and the player will now operate on the adaptor's power. Once the adaptor is unplugged the player will automatically switch back to battery power.

## **EARBUDS CONNECTION**

Connect the plug of the stereo earbuds (included) into the PHONES socket.

### **CAUTION**

- **AVOID EXCESSIVE VOLUME LEVELS FOR LONG PERIODS OF TIME WHEN USING THE HEADPHONES. PROLONGED USE AT HIGH LEVELS MAY IMPAIR YOUR HEARING.**
- **Do not use earbuds while operating a motorized vehicle, as it may create a traffic hazard and is illegal in many areas.**

## **CD OPERATION**

### **PLEASE READ THIS IMPORTANT INFORMATION:**

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. Manufacturer is not responsible for the playback quality of CD-R/RW discs. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

### **Turning Unit Power On and Off in CD Mode**

1. Slide the CD/FM Mode selector to the CD position.
2. To Turn ON the unit, press the PLAY/PAUSE ►|| button, LCD display will be on and then read the inserted disc after display "60 SEC" anti-skip message. If no disc is inserted or the inserted disc has an error, the display will show "disc".
3. To Turn OFF, in CD stop mode, press STOP button once, display will go off. In CD playing mode, press STOP button twice will also turn off the power.

**NOTE:** When the unit is stopped for approximately 30 seconds, the power will be automatically turned off.

### **Play Mode**

1. In power off mode, press the CD door OPEN switch to open the CD door.
2. Insert a CD with the label side facing upward and then close the CD door.
3. Press the PLAY/PAUSE ►|| button to turn on the unit. The display will show "60 SEC", total number of tracks and playing time in sequence and then start to play first track automatically.
4. While playing, press the PLAY/PAUSE ►|| BUTTON to pause, the elapsed time will flash. Press PLAY/PAUSE ►|| BUTTON again to resume playing
5. Rotate the VOLUME CONTROL KNOB to adjust volume level.
6. Press the STOP ■ BUTTON to stop playing.
7. Press the STOP ■ BUTTON again to turn the unit off.

**NOTE:** Do not open the CD DOOR when a CD is playing.

### **BASS Boost**

- The BASS boost feature is always on and cannot be turned off.

## **LCD DISPLAY INFORMATION (CD MODE ONLY)**

### **At initial start up**

- The display will show "60 SEC" then "- -" and then the total number of tracks and total playing time. The disc will start playing and the display will show the first track number & instant playing time.
- To review the total number of tracks and total playing time of the disc, press the STOP ■ button once.

### **During PLAY mode**


- The track number and the elapsed time are displayed.

### **During PAUSE mode**

- When the track playback is paused, the elapsed time flashes.



### **Battery Low Indicator (CD Mode only)**

- The Battery Low Indicator  will appear in the display when the batteries need to be changed.

## **CD PLAY MODE**

### **NORMAL PLAYBACK**

The whole disc is played and the player will stop after the last track is finished.

### **SKIP AND SEARCH MODE**

1. During Play or Pause mode, tap the SKIP Forward "»" or SKIP BACKWARD "«" BUTTON to go to the next track or go back to the beginning of the current track.
2. During play mode or Pause mode, press and hold the SEARCH Forward "»" or SEARCH BACKWARD "«" BUTTON to search within the current track with audible high speed playback.

Every time the CD PLAY MODE button is pressed, the corresponding mode appears in the display window, in the following sequence:

#### **REPEAT 1:**

When shown on the LCD display, the current track on the disc will be repeated.



#### **REPEAT ALL:**

When shown on the LCD display, all tracks on the disc will be repeated.



To cancel the Repeat function, press the CD PLAY MODE button repeatedly until the icon disappears.

#### **INTRO:**

To play the first 10 seconds of each track on the disc.



#### **RANDOM:**

Enables all the tracks on the disc to be played in a random sequence.



To cancel INTRO & RANDOM function, press the CD PLAY MODE button repeatedly until the icon disappears.

## CD PROGRAMMED PLAY

1. In CD stop mode, press the PROG button once, PROG number appears. PROG icon and Track number "00" start flashing in the display.
2. Press SEARCH/SKIP ◀ / ▶ button to select the desired track.
3. When the desired track is displayed, press the PROG button to register. The PROG number changes to 02. Track number returns to 00 and flashes together with PROG.
4. Repeat above steps 2 and 3 to program more tracks. Up to 20 tracks can be programmed into the memory.
5. Press PLAY/PAUSE ▶|| button to start the programmed play.
6. To erase the program, in STOP mode simply press the STOP button.



## ANTI-SKIP PROTECTION

This player incorporates an electronic anti-skip circuit to prevent interruption of the sound output when the unit is subjected to shock, vibration or rolling during disc playback. The anti-shock system will automatically activate when a disc is playing, the ESP indicator will appear in the display and flashing.

Once anti-skip buffer is full, it will give you approximately 60 seconds of protection against interruption of sound output. If the player is subjected to shock or rolling for longer than the buffer memory, some interruption of sound output will occur. This is normal and to be expected and the sound will resume once the player has stabilized from the shock or rolling disturbance.

**Note:** The anti-skip function provides for continuous sound output when the unit is subjected to shock or vibration. It will not compensate for errors arising from the use of defective, scratched or dirty discs.

## LISTENING TO THE FM SCANNING RADIO

### TUNING THE FM RADIO

1. Slide the CD/FM Mode selector to the FM position. The FM radio defaults to the high end of the FM band, so you may hear static from the earbuds.
2. Press the TUNE+ or TUNE- Button to begin scanning the FM band for a desired radio station to listen to.
3. Pressing TUNE+ will scan up the FM band and pressing TUNE- will scan down the FM band. Once a strong FM station is received, the scanning will stop and play that station.
4. If the station the radio stops on is not one you want to listen to, Press the TUNE+ or TUNE- Button again until the station you want to listen to is received. You may need to press the TUNE+ or TUNE- Button multiple times to get to the station you want to listen to if it's located in the middle of the FM band.
5. Rotate the VOLUME knob to adjust the volume control to the desired level.
6. Turn off the FM radio by slide the CD/FM Mode selector to the CD (power off) position after listening.

**NOTE:** When you turn off the power, the FM radio will reset back to the highest station

on the band. You need to manually tune in the station you were listening to again the next time you turn the FM radio on.

### HINTS FOR BEST RECEPTION:

The cord for the earbuds also acts as the antenna for the FM radio. For best FM reception, unwrap and fully extend the earbud wires to improve the FM reception.

The FM radio scan depends on the signal strength of the broadcasting station, so weak stations may be skipped. If FM reception is weak, try repositioning the unit near an open window until you get the best reception.

### CARE AND MAINTENANCE

1. Never wrap the earbuds cord around any animal or person. Special care should be taken with long wires.
2. Clean the unit with a soft, damp (never wet) cloth. Solvent or detergent should never be used.
3. Avoid operating your unit under direct sunlight or in hot, humid or dusty places to reduce the risk of fire or electric shock.
4. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
5. For better Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
6. Unplug the unit from the electrical power outlet immediately in case of malfunction.
7. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a lint-free soft cleaning cloth.



**CAUTION:** Never allow any water or other liquids to get inside the unit while cleaning.


### TROUBLESHOOTING GUIDE

If you experience problems in the use of this player, please check the following or call 1-800-777-5331 for Customer Service.

| PROBLEM                  | POINTS TO CHECK  |
|--------------------------|--|
| Player fails to function | Disc may be inserted upside down<br>Disc not mounted correctly on chuck<br>Dirty or defective disc<br>Dirty pick up lens<br>Player lid not closed<br>Moisture/Condensation, allow player to warm up to room temperature for 60 minutes<br>AC power to adaptor switched off<br>Weak batteries<br>Auto switch off has occurred |

|   |  |
|---|--|
| No sound from earbuds                           | Earbuds plug is not firmly inserted into the Phones socket.  |
| Intermittent sound                              | Dirty or defective disc<br>Dirty pick up lens<br>Player is subject to excessive vibration or shock<br>Low battery power<br>Poor headphone connection |
| Noise or the sound is distorted on FM broadcast | Full extend the earbud wires for best reception.<br>Retune the FM broadcast station.   |

## SPECIFICATIONS

**Power Requirement:** 2 x "AA" (UM-3) batteries (not included) or  
AC-DC Adaptor: 4.5V  700mA (not included)

**Frequency Range:** FM 87.5 - 108MHz



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectrainfl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

## 90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.

- b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$10.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectraintl.com](mailto:custserv@spectraintl.com) for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue,  
Chicago, IL 60634, USA.  
1-800-777-5331

To register your product, visit the link on the website below to enter your information.  
<http://www.spectraintl.com/wform.htm>