

Initial Configuration

1. Prepare the camera:

Remove the camera from the package.

2. Attach an Ethernet cable:

- Connect one end of a Cat 5 Ethernet cable to the camera's Ethernet port, and the other end (RJ45) to a Power Sourcing Equipment (PSE) device, such as a PoE switch.
- Verify that the LED on the port is green, indicating a good network connection. A yellow LED flashes when there is network activity.


NOTE: The camera IP Address and the subnet mask IP Address are automatically supplied by the DHCP server.

TIP: A camera setup adapter, such as Veracity Pinpoint, can be used to connect a laptop directly to the camera using PoE.

3. Set the camera's IP address:

- Open the DNA application (version 2.0.4.8 or later). Select the unit requiring IP assignment. See figures below.
- To open the DNA **Assign IP** screen, do one of the following:
 - Select the unit, right-click the mouse, and select the *Assign IP* option

- Select the **Assign IP** button from the toolbar

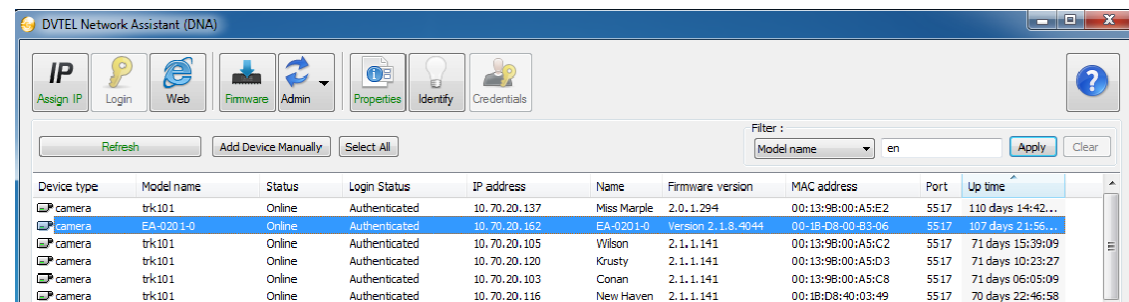

- If your network does not have a DHCP server, enter the IP Address, Mask (Netmask) and Gateway values in the dialog box displayed below.
- Click **Update** and wait for OK status to be displayed. The IP address has been assigned.



4. Disconnect the cable:

- Disconnect the Ethernet cable. The camera is ready for mounting.

Site Installation

1. Operating temperature range:

Install the camera where the operating temperature range is between -40°C ~ 50°C (-40° ~ 122°F), 0-95% relative humidity (non-condensing).

2. Mount the camera:


Install the Quasar Gen II bullet camera according to the camera's User and Installation Guide.

3. Attach cables:

Using the attached cables:

- Plug the Cat 5 cable into the camera Ethernet port and plug the other end of the cable into a network switch or an IEEE 802.3af PoE device.
- If applicable, connect the Alarm In, Alarm Out, Audio In and Audio Out terminals to external devices. See the figures and table below.
- If applicable connect an external power source to the terminals. See the figure and table below.

Camera Connectors

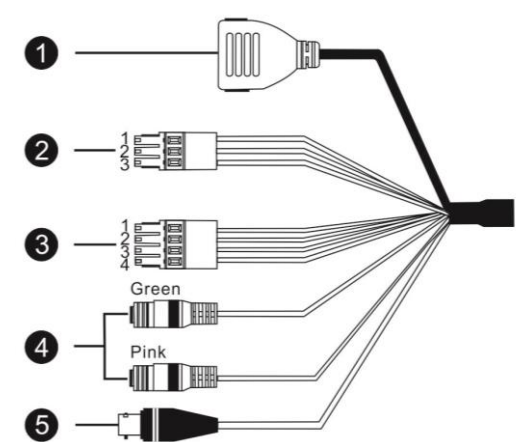

No	Cable	Pin	Definition		Remarks
1	RJ45	-	For network and PoE connections		
2	Power (12VDC/24VAC) (3-pin Terminal Block)	1	DC 12V –	AC 24V 1	Power connection
		2	Reserved	GND	
		3	DC 12V +	AC 24V 2	
3	Alarm I/O (4-pin Terminal Block)	1	Alarm In –		Alarm connection
		2	Alarm In +		
		3	Alarm Out –		
		4	Alarm Out +		
4	Audio I/O	Green	Audio Out		Two-way audio transmission
		Pink	Audio In / Mic In		
5	BNC	-	For analog video output		

Adjusting and Framing-Up the Camera View

1. Camera Access and Login:

Access the camera in one of the following ways:

- If using the DNA application, click the DNA icon . In the Discovery List, click to select the camera, right-click to open the shortcut menu, and select **Browse**.
- If using a web browser, enter the camera’s IP address in the address bar.

2. Before logging into the camera:

The client application is automatically installed when you connect to the camera through your PC/workstation web-browser for the first time. Before accessing the camera, ensure that ActiveX controls can be downloaded by (a) changing the ActiveX controls and plug-in settings or (b) setting the Internet security level to default. For further details, refer to the camera’s User and Installation Guide.

ActiveX Controls and Plug-in Settings	Internet Security Level
Step 1: Start Internet Explorer (IE 9, 10, or 11).	Step 1: Start Internet Explorer (IE 9, 10, or 11).
Step 2: Select Tools from the main menu of the browser. Then click Internet Options .	Step 2: Select Tools from the main menu of the browser. Then click Internet Options .
Step 3: Select the Security tab and click Internet . Then click Custom level to change ActiveX settings.	Step 3: Select the Security tab and click Internet .
Step 4: Set all ActiveX controls and plug-ins settings to <i>Prompt</i> or <i>Enable</i> .	Step 4: Click Default level . Click OK to confirm the setting. Close the browser window. Open a new window later to access the IP camera.

3. Camera Login:

See the section titled Initial configuration for instructions on setting the cameras IP address.

4. Login ID and Password:

- Enter the camera’s IP address in the browser’s address bar and press the **Enter** key.
- Enter the default user name (*Admin*) and password (*1234*).

NOTE: The user name is case-sensitive.


5. Install the ActiveX control:

- After accessing the camera through the web browser for the first time, a request to install the ActiveX control appears below the address bar.
- Right-click on the information bar, and select *Install ActiveX Control...* to permit ActiveX control installation.
- In the pop-up security warning, click **Install** to start downloading the DVPlayer software onto the PC.
- Click **Finish** when the DVPlayer installation is completed.


NOTE: Before accessing the camera, if you have previously installed an older version of the DVTEL Web Player (DVPlayer) on the PC, use the Windows Add/Remove program to uninstall the existing DVPlayer from the PC. For more information, refer to the camera’s User and Installation Guide.

Attach in Latitude

- In the Latitude application, on the sidebar click **Physical View**.
- On the Navigation Tree click the  *System name*.
- Select the **Discovery** tab and do the following:
 - Under *Cameras and Encoders*, verify that **DVTEL Quasar Gen II** is selected.
 - Click **Start**. The camera details are displayed in the Discovery table.
 - If the camera wasn’t found after running *Start*, click **Discover Unit Manually**.
 - In the dialog box that opens, enter the camera’s IP address, select **DVTEL Quasar Gen II** and click **OK**.
- In the Discovery table, right-click the camera, choose **Attach**, and then click the Archiver name to attach.

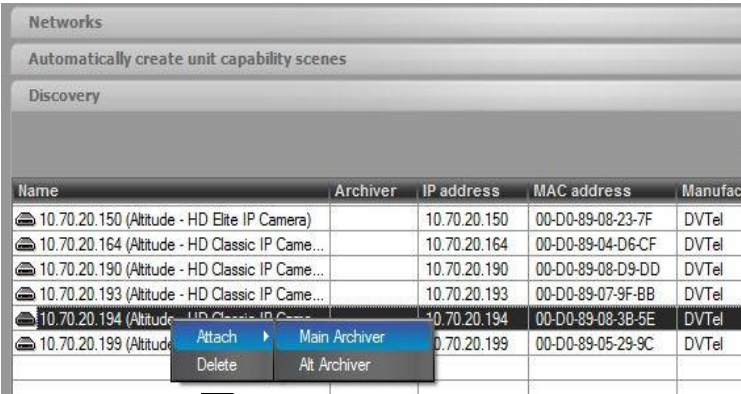

- When finished, click  to save.

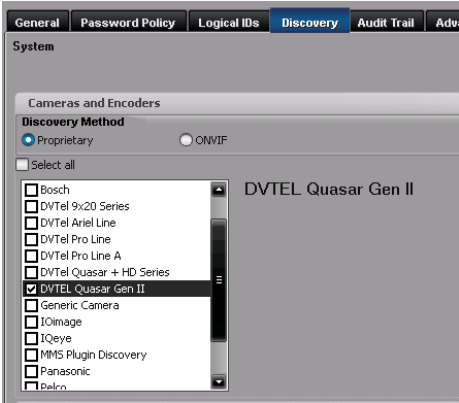

Models in the CB Series:

Model Number	Description
CB-6204-11-I	QHD 1440p indoor/outdoor bullet IP camera, 3-8mm, F1.4 lens with 96-38° horizontal viewing angle
CB-6204-21-I	QHD 1440p indoor/outdoor bullet IP camera, 7-22mm, F1.4 lens with 42-14° horizontal viewing angle
CB-6208-11-I	UHD 4K indoor/outdoor bullet IP camera, 3.5-8mm F1.4 lens with 116-50° horizontal viewing angle
CB-6208-21-I	UHD 4K indoor/outdoor bullet IP camera, 9-22mm F1.4 lens with 45-18° horizontal viewing angle

How to Contact DVTEL:

North America: 1-888-DVTEL77
Latin America: +52 555580 5618
EMEA: +44 (0) 1494 430240
APAC: +65 6389 1815
China: +86 10 8586 8836
India: +91 (129) 431 5031
ANZ/Pacific: +61 8 8235 9211

For assistance, email us at support@dvtel.com or visit <http://www.dvtel.com/support>.



Point of Sale & Barcode Solutions

POSMarket specialises in providing point of sale (POS), barcode and mobile data solutions for smart businesses. We service all industries including retail and hospitality, transport and logistics, government, healthcare, manufacturing and warehousing. Our expert team can provide solutions that can save your business money today.

Shop By Department

Barcode Scanners



- Barcode Readers
- Barcode Software
- Data Collectors

Mobile Computers



- Mobile Computers
- Data Collectors
- Vehicle Computers

Label Printers



- Desktop Printers
- Industrial Printers
- Mobile Printers

Point of Sale



- POS Systems
- Receipt Printers
- Scales

ID Card Printing



- ID Card Printers
- ID Software
- Card Printer Supplies

Media & Accessories



- Labels
- Ribbons
- Paper Rolls

Software



- Inventory Software
- Asset Tracking
- Barcode Software

Wireless



- Wifi Systems
- Pager Systems
- Site Surveys

RFID



- RFID Printers
- RFID Readers
- RFID Tags

Shop By Industry



Education/Libraries

Timesaving printing solutions to meet all your staff, student & asset identification needs. Need **Labels and Printers**? From **scanners** to **receipt printers**, whatever your needs, we are here to help.



Retail Stores

Keep customers coming back and keep stock from running out. Check out our range of **scanners**, **cash drawers**, **receipt printers** and **cash registers**.



Cafes/Restaurants

We can help you to decrease lines for your customers, complete tableside transactions, or reward patrons with **loyalty cards**. From cash registers to touch screen systems we can assist.



Warehouse Management

Our superior **warehousing solutions** will allow your business to provide comprehensive, up-to-date information and streamline your processes to improve efficiency.



Construction

Keep track of your inventory and stop inventory shrinkage. Our inventory tracking software allows you to easily keep control of your stock.



Hospitals/Healthcare

Improve patient care with the accurate identification of patients, medications, samples, treatments, lab results & records. We have a huge range of **label printers**, **consumables** & **scanners**.



Transport & Logistics

Track materials through your facility or through your supply chain using **labels**, **barcode scanners** and **portable data terminals**. Optimize your production and information flows.



Government

We can supply you with all your needs, from **receipt printers** and **cash drawers**, to **barcode scanners** and **label printers**. Less paperwork, data entry and time spent looking up records.



Mining

Rugged identification solutions help manage assets from the ground up. From **portable data terminals** and **scanners** to **software** and **printers**, we can find a solution to meet your needs.

Shop By Brand

