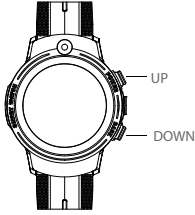
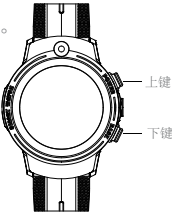


User Manual	
Please check the list of following when you open the box: 1. Smart watch*1 2. Charging USB cable*1 3. Screw driver*1 4. User manual*1 First Boot Long press the up button for 3s to turn on the watch. For the first boot, it takes long time to test all the applications. Please wait patiently. When the watch turns on, enter the interfaces of language, height/weight and activity target setting. 01	Language Setting You can select language when watch is power on. If wrong language selected, please enter into the Setting page, choose the Language and Input, click Languages and add the Language you want, then move to the first place. Smart Watch Charging Please charge the watch when battery is running out. The watch supports magnetic charging, with magnetic USB cable connecting to computer or USB charging adapter. Make sure that the pogo pin cable is in good connected when charging. The watch will display the charging status and power ratio after 5 minutes of normal charging. 02
Tips: The watch battery is not removable. After a long period of inactivity, the watch may not be turned on due to low battery. Please charge it weekly to ensure that the watch can work normally. SIM Card Installation Please make sure smart watch is powered off before inserting a SIM card. Please do as below picture shows, open the back cover with the screw driver, insert SIM card in slot and lock the back cover by screws. 03	 Press to open the cover Please note that the smart watch only supports Nano SIM cards. Button Functions 1. Long press the UP button to turn on/off. 2. Short press the UP button to turn off/wake up the screen. 3. Long press the UP button for 2s to enter into the interface of round screen / square screen switch, power off, reset, super power save, recent tasks. 04
4. Long press for 10s to reset when smart watch crashed. 5. Long press the DOWN button to take photo quickly. 6. Short press the DOWN button to turn back.  05	Sliding and Quick Access Slide up for activity data. Slide down for basic information (battery capacity, Date, SIM card information, BT connection status). Keep sliding left to the second menu (Screen on/Vibrator, silent sync, activate on wrist, light mode, data, GPS, BT and Wi-Fi), You can choose to turn on/off the functions according to your demands. Keep sliding left enter the Mp3 player and weather interface. Slide left to enter the main menu. Slide right to sync notification. 06
Watch Face 1. There are watch faces of various styles for your option. 2. You can press the screen for 2s and enter into the watch face mode, choose what you like by sliding left and right. 3. Except the existing watch faces, sliding left to the end and press "+" to download more watch faces when connecting with the network. DIY Watch Faces In addition to the optional watch faces in the watch, you can swipe left to “”, click the icon to enter into the gallery or camera and select your own photo as the watch face in the selection mode. 07	Functions list The basic applications in the list include: Contacts, Phone, Messaging, Settings, Browser, Downloads, Calendar, Clock, Camera, Gallery, Music, Sound Recorder, File Manager, Heart Rate Monitor, Fitness, Weather, Voice Search, Play Store, Maps, Assistant and App Store. Enter into the application interface you need, operate for more functions. Full or Small Watch 1. Long press the UP button for 2s to enter into the interface of Round & Square Display Switch. 2. Click the Full or Smart Watch icon at the top, when the icon change to square, press the UP button again to exit this interface. 08
How to clean up the application running in the background? Long press the UP button for 2s, enter into the selection interface, select the recent task, delete the application. Uninstall Application Uninstall application software can release more memory space. Download and install APP & APK (Wiiwatch2) Enter into the main menu- assistant-connect phone, click "?" icon at the top, operate by steps. 09	Tips: Smart Snyc /Smart Notification/Camera Remote/Music Control/Find my device, Need to scan the QR code to connect to the watch. The watch and phone will show the Bluetooth pairing interface. After successful pairing, then those functions can use it. Firmware update Enter into the settings menu-about watch, click the wireless upgrade, and update the firmware. 10
Tips: 1. Make sure the watch has more than 50% of the electricity before updating the firmware; 2. Before upgrading ensure that connected with Wi-Fi; 3. During upgrade process, avoid any watch operation; 4. Once upgrade completed, please reset the watch to re-detect the system and applications. It takes about 10 minutes to restart the watch. Please wait with patience. The detection finishes with automatic off screen, press the UP button to enter into the language selection interface, with the first boot to complete all operating procedures. 11	当您打开智能手表的包装盒时，请核对包装盒内包括： 1. 智能手表* 1 2. 手表专用充电线* 1 3. 手表专用螺丝刀* 1 4. 手表说明书* 1 首次开机 长按上键3s后手表出现开机画面，手表第一次开机需要全面检测应用程序，时间会偏长，请您耐心等待，开机完成后设置语言（按您的需求选择语言），进入设置身高/体重及运动目标。 12
设置语言 开机时，手动选择语言。若选错语言，进入设置菜单可更改系统语言。 手表充电 请将手表的电量用完后对手表进行充电；将适配的USB磁吸数据线连接电脑或者USB接口进行充电，充电时先确保磁吸线接触好，正常充电5分钟后，手表会显示充电状态或电量比例。 13	温馨提示： 手表电池不可拆卸，在长时间闲置后可能会因电量低而导致手表无法开机，请您每周进行充电，确保手表能够正常工作。 SIM卡安装 请先确认手表在关机状态，按以下示意图操作，用专用螺丝刀打开SIM卡盖，把SIM卡放入SIM卡槽内,再将SIM卡盖锁上螺丝（包装内有专用螺丝刀）。此手表目前只支持使用Nano SIM卡。  手指按压此处打开SIM卡盖 14
按键功能 1. 长按上键开机/关机。 2. 短按上键灭屏/唤醒屏幕。 3. 开机状态下长按上键2秒进入（圆屏/方屏切换、关机、重启、超级省电、最近任务）界面。 4. 死机状态下长按上键10秒可重启设备。 5. 长按下键快速拍照。 6. 短按下键返回上一级菜单。  15	滑动操作 时钟界面向上滑动显示运动数据，继续从右向左滑动进入二级状态栏（周运动统计、步数、公里、卡路里）。 时钟界面向下滑动显示基本信息（电量、日期、SIM卡信息、手机连接状态）；继续从右向左滑动进入二级状态栏（抬手亮屏、飞行模式、勿扰模式、GPS、蓝牙、WIFI），用户可以根据自己需求选择开启或关闭。继续滑动进入清理内存、音乐控制、天气查看界面。时钟界面从左向右滑动显示推送的信息。 时钟界面从右向左滑动进入主菜单。 16
更换表盘 1. 在手表时钟界面，长按屏幕2秒，进入选择表盘模式，左右滑动可自行切换； 2. 除了手表内可选表盘外，可在表盘选择模式下，向左滑动至“+”号，添加图库内表盘； 自定义表盘 除了手表内可选表盘外，可在表盘选择模式下，向左滑动至“”点击该图标进入图库或相机，选择自己的照片设定为表盘。 17	功能菜单列表 功能列表所包含的基本应用：通讯录、电话、信息、设置、浏览器、下载、日历、时钟、相机、图库、音乐、录音机、文件管理、心率监测、运动、天气、语音搜索、Play商店、地图、手机助手、APP市场。进入功能菜单，使用更多功能。 圆屏-方屏显示切换 1. 通过长按上键2秒进入圆屏-方屏显示切换的界面 2. 点击屏幕上方（圆屏-方屏显示切换）图标，当图标的圆形变为方形时，再按下键退出该界面。 18
如何清理后台运行的应用程序 长按上键2秒，进入选择界面，选择最近任务，删除最近任务。 卸载应用 卸载应用软件，释放更多的内存空间。 APP、APK下载和安装 进入设置菜单，点击手机助手，选择连接手机，点击界面上方“？”按照步骤操作即可。 19	温馨提示： 来电同步/消息推送/遥控拍摄/遥控音乐/找手机,需要扫描二维码下载APP、APK(Wiiwatch2)/安装/,APP连接成功后才能正常使用。 更新固件 进入设置菜单，点击关于手表，选择无线升级，更新固件。 温馨提示： 1. 更新固件前，确保手表有50%以上的电量； 2. 在连接网络状态下进行无线升级，升级过程中请勿使用手表； 3. 升级完成后重新开机，因需要重新全面检测应用程序，重启 20
过程需要十分钟左右时间，请您耐心等待。检测完成后自动灭屏，按下键进入语言选择界面，完成操作程序。 21	22