

# **Nokia C2-02 User Guide**

9229882  
Issue 1.0

**Contents****Safety 5****Get started 7**

Keys and parts 7

Insert a SIM card and battery 8

Insert a memory card 11

Charge the battery 13

Attach a strap 14

Switch the phone on or off 15

GSM antenna 16

**Basic use 17**

Access codes 17

Lock or unlock the keys and screen 19

Touch screen actions 19

Swipe to open an application or activate a feature 22

Indicators 22

Copy contacts or messages from your old phone 23

Change the volume of a call, song, or video 24

**Calls 25**

Make a call 25

Call the last dialed number 25

View your missed calls 26

**Contacts 26**

Save a name and phone number 26

**Text input 27**

Switch between text input modes 27

Write using traditional text input 28

Use predictive text input 29

<b>Messaging</b>	<b>30</b>	<b>Music and audio</b>	<b>43</b>
Send a message	30	FM radio	43
Retrieve a multimedia message	32	Media Player	45
Listen to voice messages	33	<b>Pictures and videos</b>	<b>46</b>
<b>Personalize your phone</b>	<b>34</b>	Take a picture	46
About the home screen	34	Record a video	46
Customize the home screen	35	Send a picture or video	47
Customize your phone tones	36	<b>Web</b>	<b>48</b>
<b>Time management</b>	<b>38</b>	About the web browser	48
Change the time and date	38	Browse the web	49
Set an alarm	38	Clear browsing history	49
Add an appointment	39	<b>Mail and chat</b>	<b>49</b>
<b>Connectivity</b>	<b>39</b>	About Mail	49
Bluetooth	39	Send a mail	50
USB data cable	42	Read and reply to mail	51
		About Chat	51
		Chat with your friends	51

<b>Maps</b>	<b>52</b>
About Maps	52
View your current location on the map	54
Find a place	54
Share your location or a place	55

<b>Nokia's Ovi services</b>	<b>56</b>
Availability and costs of Nokia's Ovi services	56
Access Nokia's Ovi services	56

<b>Find help</b>	<b>56</b>
Support	56
Subscribe to the Tips and Offers service	57
Keep your phone up to date	58

<b>Protect the environment</b>	<b>63</b>
Save energy	63
Recycle	63

<b>Product and safety information</b>	<b>64</b>
---------------------------------------	-----------

<b>Index</b>	<b>77</b>
--------------	-----------

## Safety

Read these simple guidelines. Not following them may be dangerous or illegal. For further information, read the complete user guide.

### SWITCH OFF IN RESTRICTED AREAS



Switch the device off when cell phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

### ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

### INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

### **QUALIFIED SERVICE**



Only qualified personnel may install or repair this product.

### **KEEP YOUR DEVICE DRY**



Your device is not water-resistant. Keep it dry.


### **PROTECT YOUR HEARING**



Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

## Get started

### Keys and parts

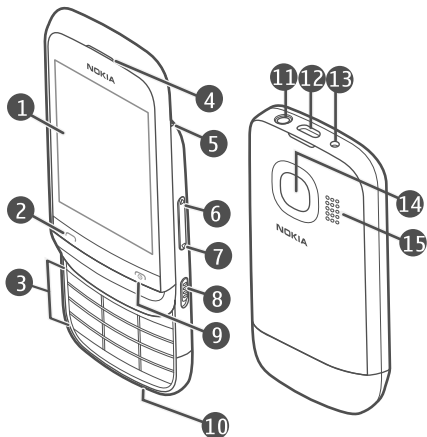


- 1 Display
- 2 Call key
- 3 Keypad
- 4 Earpiece

- 5 Wrist strap hole
- 6 Volume up/Zoom in key
- 7 Volume down/Zoom out key
- 8 Key lock switch
- 9 End/Power key
- 10 Microphone
- 11 Nokia AV Connector (3.5 mm)
- 12 Micro-USB connector
- 13 Charger connector
- 14 Camera lens. Before using the camera, remove the protective tape from the lens.
- 15 Loudspeaker

### Insert a SIM card and battery

 **Note:** Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

 **Important:** Do not use a mini-UICC SIM card, also known as a micro-SIM card, a micro-SIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro-SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of



incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.




**! Important:** To prevent damage to the SIM card, always remove the battery before you insert or remove the card.


This phone is intended for use with a BL-5C battery. Always use original Nokia batteries.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


- 1 Place your finger in the recess at the top of the phone, and carefully lift and remove the back cover (1). If the battery is inserted, lift it out (2).

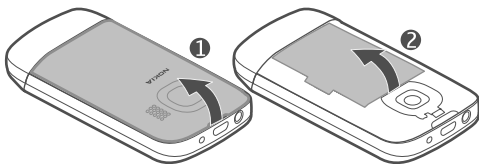

- 2 Open the SIM card holder (3), and insert or remove the SIM card (4 or 5). Make sure the contact area of the card is facing down.

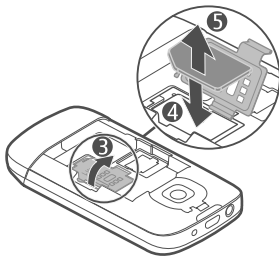


- 3 Line up the contacts of the battery and the battery compartment, and insert the battery (6). To replace the back cover, direct the bottom locking catches toward their slots (7), and press down until the cover locks into place (8).

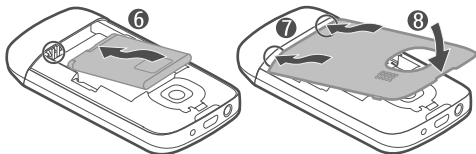

### **Insert a memory card**

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your phone supports memory cards with a capacity of up to 32 GB.

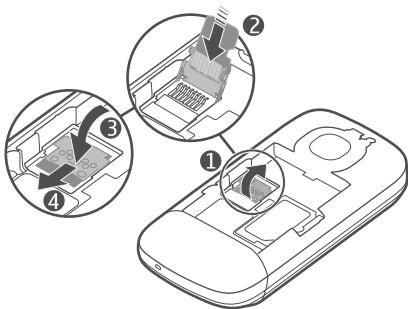


- 1 Switch the phone off, and remove the back cover and battery.
- 2 To release the memory card holder, slide the holder in the direction indicated by the arrow on the holder. Lift the memory card holder (1).
- 3 Insert a compatible memory card. Make sure the contact area of the card is facing down (2).
- 4 Lower the memory card holder (3).
- 5 To lock the memory card holder, slide the holder to its original position (4).

### Remove the memory card

- 1 Switch the phone off.
- 2 Remove the back cover and battery.
- 3 To release the memory card holder, slide the holder in the direction indicated by the arrow on the holder. Lift the memory card holder, and remove the memory card.

### Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your phone for the first time. If the phone indicates a low charge, do the following:

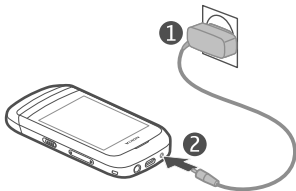

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the phone.


- 3 When the phone indicates a full charge, disconnect the charger from the phone, then from the wall outlet.

You do not need to charge the battery for a specific length of time, and you can use the phone while it is charging.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.


If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.


### Attach a strap

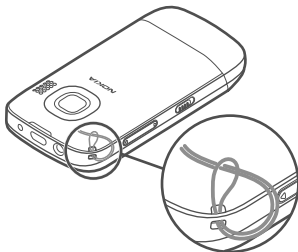

Straps may be available separately.


**Switch the phone on or off**

Press and hold the power key .

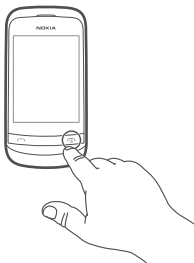

You may be prompted to get the configuration settings from your network service provider. For more information on this network service, contact your network service provider.

### GSM antenna

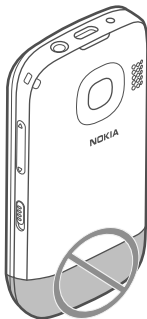

The antenna area is highlighted.

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.



## Basic use

### Access codes

<p>PIN or PIN2 code (4-8 digits)</p>	<p>These protect your SIM card against unauthorized use or are required to access some features.</p> <p>You can set your device to ask for the PIN code when you switch it on.</p> <p>If not supplied with your SIM card or you forget the codes, contact your service provider.</p> <p>If you enter the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.</p>
<p>PUK or PUK2 code (8 digits)</p>	<p>These are required to unblock a PIN or PIN2 code.</p> <p>If not supplied with your SIM card, contact your service provider.</p>
<p>IMEI number (15 digits)</p>	<p>This is used to identify valid devices in the network. The number can also be used to block, for example, stolen devices.</p>

	To view your IMEI number, dial <b>*#06#</b> .
Lock code (security code)  (min. 4 digits or characters)	<p>This helps you protect your device against unauthorized use.</p> <p>You can set your device to ask for the lock code that you define. The default lock code is 12345.</p> <p>Keep the code secret and in a safe place, separate from your device.</p> <p>If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted.</p> <p>For more information, contact a Nokia Care Point or your device dealer.</p>

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) are required to change a blocked PIN code and UPIN code, respectively. The PUK2 code (8 digits) is required to change a blocked PIN2 code. These

codes are not supplied with the SIM card. Contact your local service provider for the codes.

### **Lock or unlock the keys and screen**

To avoid accidentally making a call when your phone is in your pocket or bag, lock the keys and screen of your phone.

Slide the key lock switch.

**Tip:** If the key lock switch is out of reach, to unlock the keys and screen, press the end key, and select **Unlock**.

### **Touch screen actions**


To interact with the touch screen user interface, tap or tap and hold the touch screen.

### **Open an application or other screen element**

Tap the application or element.

### **Access item-specific options**

Tap and hold the item. A pop-up menu with available options opens.

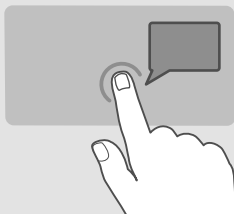


### **Scroll in a list or menu**

Place your finger on the screen, slide it quickly up or down the screen, and then lift your finger. The content of the screen scrolls with the speed and direction it had at the moment of release. To select an item from a scrolling list and to stop the movement, tap the item.

**Swipe**

Place a finger on the screen, and steadily slide your finger in the desired direction.

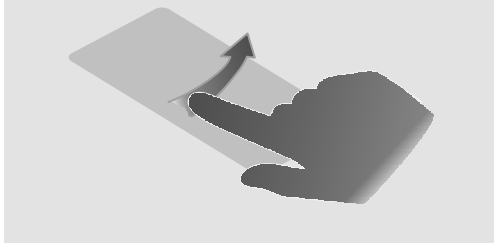

### Swipe to open an application or activate a feature

You can open applications or activate features when you swipe left or right on the home screen.

### Assign a function or feature to a swipe action

Select **Menu > Settings > My shortcuts > Swipe gesture**, and select the swipe direction and desired function or feature.

### Indicators



You have unread messages.



You have unsent, cancelled, or failed messages.



The keypad is locked.



The phone does not ring for incoming calls or text messages.



An alarm is set.



The phone is registered to the GPRS or EGPRS network.



A GPRS or EGPRS connection is open.



The GPRS or EGPRS connection is suspended (on hold).



Bluetooth is activated.



All incoming calls are diverted to another number.



The currently active profile is timed.




A headset is connected to the phone.



The phone is connected to another device, using a USB data cable.

### **Copy contacts or messages from your old phone**

Want to copy your content from your previous compatible Nokia phone and start using your new phone quickly? You can copy, for example, contacts, calendar entries, and messages to your new phone, free of charge.

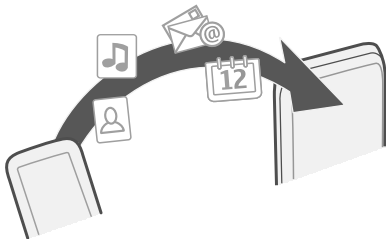

- 1 Activate Bluetooth in both phones.

Select **Menu > Settings > Connectivity > Bluetooth.**

- 2 Select **Menu > Settings > Sync & backup.**
- 3 Select **Phone switch > Copy to this.**
- 4 Select the content to copy and **Done.**
- 5 Select your previous phone from the list.
- 6 If the other phone requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both phones. The passcode in some phones is fixed. For details, see the user guide of the other phone.  
The passcode is valid only for the current connection.
- 7 If prompted, allow connection and copying requests.

### **Change the volume of a call, song, or video**

Use the volume keys.

The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the phone to your ear.

### **Activate the loudspeaker during a call**



Select **Loudsp..**



## Calls

### Make a call

- 1 Open the slide.
- 2 On the home screen, enter the phone number.  
To delete a number, select **Clear**.  
For international calls, select \* twice for the + character (which replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number. The + character as a replacement for the international access code may not work in all regions. In this case, enter the international access code directly.
- 3 Press the call key.
- 4 To end the call, press the end key.

**Tip:** If the slide is closed and  is displayed on the home screen, to use the virtual keypad to enter the phone number, select .

### Call the last dialed number

Trying to call someone, but they are not answering? It is easy to call them again.

- 1 On the home screen, press the call key.

2 Go to the number, and press the call key.

### **View your missed calls**

Want to see who made the call you missed?

On the home screen, select **View**. The caller's name is displayed, if stored in the contacts list.

Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area.

### **Call back the contact or number**

Go to the contact or number, and press the call key.

### **View the missed calls later**

Select **Menu > Contacts > Log and Missed calls**.

## **Contacts**

### **Save a name and phone number**

Select **Menu > Contacts**.

Select **Add new**, and enter the number and name.

If prompted, select where to save the contact.



## Add or edit the details of a contact

- 1 Select **Names** and a contact.
- 2 Select **Options** > **Add detail**.

**Tip:** To add a ringtone or picture for a contact, select the contact and **Options** > **Add detail** > **Multimedia**.

## Text input

### Switch between text input modes

When writing text, you can use traditional  or predictive  text input.

Abc, abc, and ABC indicate the character cases. 123 indicates that number mode is activated.

### Activate or deactivate predictive text input mode

Select **Options** > **Prediction** > **Prediction on** or **Prediction off**. Not all languages are supported by predictive text input.

### Switch between character cases

Press #.

### Activate number mode

Press and hold #, and select **Number mode**. To return to letter mode, press and hold #.

**Tip:** To quickly enter an individual number, press and hold the number key.

### Set the writing language

Select **Options > Writing language**.

**Tip:** To activate number mode, activate or deactivate predictive text input mode, or set the writing language, you can also press and hold #, and select the appropriate option.

### Write using traditional text input

- 1 Press a number key (2-9) repeatedly, until the desired character is displayed.
- 2 Insert special characters If it is located on the same key, wait until the cursor is displayed, or move the cursor forward.

The available characters depend on the selected writing language.

**Move the cursor**

Select ◀ or ▶, or tap where you want to place the cursor.

**Insert a common punctuation mark**

Press **1** repeatedly.

**Insert a special character**

Select ?!£ and the desired character.

**Insert a space**

Press **0**.

**Use predictive text input****Write using predictive text input**

The built-in dictionary suggests words as you select the number keys.

- 1 Select each number key (2–9) once for each character.
- 2 To find the desired word, select \* repeatedly.
- 3 To confirm the word, select ▶.

### **Add a missing word to the dictionary**

If ? is displayed when you enter a word using predictive text input, the word is not in the dictionary. You can add it to the built-in dictionary.

- 1 Select **Spell**.
- 2 Write the word using traditional text input.
- 3 Select **Save**.

### **Write a compound word**

- 1 Write the first part of the word. To confirm the word, move the cursor forward.
- 2 Write the next part of the word, and confirm again.

## **Messaging**

### **Send a message**

Keep in touch with your family and friends with text and multimedia messages. You can attach your pictures, videos, and business cards to your message.

Select **Menu > Messaging**.

- 1 Select **Create message**.

- 2 To add an attachment, select **Options > Insert object**.
- 3 Write your message, and select **Continue**.
- 4 To enter a phone number or e-mail address manually, select **Number or mail**. Enter a phone number, or select **Mail**, and enter a mail address.
- 5 Select **Send**.

**Tip:** To insert a special character or smiley, select **Options > Insert symbol**.

Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message.

If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

Only compatible devices can receive and display multimedia messages. Messages may look different in different devices.

### Retrieve a multimedia message

By default, your phone retrieves multimedia messages automatically when you are in your home network.

**Tip:** Outside your home network, sending and receiving multimedia messages may cost you more. To save costs, you can stop your phone from retrieving multimedia messages automatically. For more information on the costs, contact your network service provider.

### Edit settings for multimedia message retrieval

- 1 Select **Menu > Messaging > Msg. settings > MMS**.
- 2 Select **MMS reception** and from the following  
**Automatic** — Multimedia messages are always retrieved automatically.



**Autom. in home** — Multimedia messages are retrieved automatically when you are in your home network. This option is activated by default.

**Manual** — You receive notifications about multimedia messages that you have received in your messaging center, and you can retrieve the multimedia messages manually.

**Off** — Multimedia message retrieval is deactivated. You do not get notifications about multimedia messages.

If you select **MMS reception** > **Manual**, you can retrieve multimedia messages manually.

### **Retrieve a multimedia message manually**

- 1 Select **Menu** > **Messaging** > **Inbox**.
- 2 Open the multimedia message notification, and select **Retrieve**. The multimedia message is downloaded to your phone.

### **Listen to voice messages**

When you can't answer, you can divert calls to your voice mailbox and listen to your messages later.

You may need a voice mailbox subscription. For more information on this network service, contact your service provider.

- 1 Select **Menu > Messaging > Voice messages and Voice mailbox no..**
- 2 Enter your voice mailbox number, and select **OK.**
- 3 To call your voice mailbox, on the home screen, press and hold **1.**

## Personalize your phone

### About the home screen

On the home screen, you can:

- See notifications of missed calls and received messages
- Open your favorite applications
- Control applications, such as the radio
- Add shortcuts for different features, such as writing a message
- View your favorite contacts, and quickly call or send messages to them

## Customize the home screen

Want to see your favorite landscape or pictures of your family in the background of the home screen? You can change this wallpaper, and rearrange items on the home screen, to customize it to your liking.

### Change the wallpaper

- 1 Select **Menu > Settings and Display > Wallpaper**.
- 2 Select a folder and a picture.  
You can also take a picture with your phone camera, and use that picture.

**Tip:** Download more wallpapers from Ovi Store.

### Add an application or shortcut

- 1 Tap and hold the home screen, and from the pop-up menu, select **Personalise view**.
- 2 Select the bar, an item from the list, and **Back**.

### Change a shortcut

- 1 Tap and hold the shortcut you want to change, and from the pop-up menu, select **Change shortcut**.
- 2 Select an item from the list and **Back**.

**Tip:** To remove an application or shortcut bar from the home screen, replace it with another one, or select **(empty)**.

**Tip:** To increase the font size in the Messaging and Contacts applications, when browsing the web, or in the main menu, select **Menu > Settings and Display > Font size**.

### Customize your phone tones

You can customize the ringtones and key and warning tones for each profile.

Select **Menu > Settings and Tones**.



### Change the ringtone


Select **Ringtone:** and a ringtone.





**Tip:** Download more ringtones from Nokia's Ovi Store. To learn more about Ovi Store, go to [www.ovi.com](http://www.ovi.com).

After selecting a ringtone, you can mark a section of the ringtone, and set the section as your ringtone. The original ringtone or sound clip is not copied or modified. Preset ringtones cannot be modified, and not all formats of ringtones are supported.

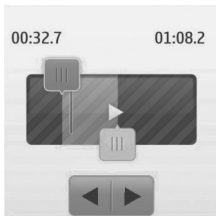**Mark the section to use**

- 1 Select a ringtone. When prompted, select **Yes**.
- 2 Drag the start marker  to the start point.
- 3 Drag the end marker  to the end point.  
When a marker is moved to a new point, the selection plays.
- 4 To manually play the selection, select **Play**.
- 5 Select **Done**.



**Tip:** To fine-tune the start and end points of the selection, select  or , and select and hold  or .

**Change the volume of the keypad tones**

Select **Keypad tones**;, and drag the volume bar.

## Time management

### Change the time and date

Select **Menu** > **Settings** and **Date and time**.

#### Change the time zone when traveling

- 1 Select **Date & time settings** > **Time zone**.
- 2 Select the time zone of your location.
- 3 Select **Save**.


The time and date are set according to the time zone. This makes sure that your phone displays the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

### Set an alarm

You can use your phone as an alarm clock.

Select **Menu** > **Applications** > **Alarm clock**.

- 1 Set the alarm time.
- 2 Select  to set the alarm.

- 3 To set the alarm to sound, for example, at the same time every day, select **Settings > Alarm repeat > On** and the days.

### Add an appointment

Save your important appointments to your calendar as meeting entries.

Select **Menu > Calendar**.

- 1 Go to the desired date, and select **Options > Add new entry**.
- 2 Select the entry type field **Meeting**, and fill in the fields.

## Connectivity

### Bluetooth


#### About Bluetooth connectivity

Select **Menu > Settings > Connectivity > Bluetooth**.

You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits.

You can use the connection to send items from your phone, copy files from your compatible PC, and print files with a compatible printer.

Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. However, they must be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

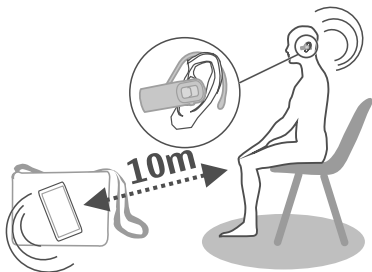

When your phone is locked, only connections to authorized devices are possible.



**Tip:** To access Bluetooth settings from the home screen, add a shortcut to the shortcut widget.

### **Send a picture or other content to another device using Bluetooth**

Use Bluetooth to send pictures, videos, business cards, and other content created by you to your computer or a friend's compatible phone or device.

- 1 Select and hold the item to send, and from the pop-up menu, select **Send > Via Bluetooth**.
- 2 Select the device to connect to. If the desired device is not displayed, to search for it, select **Options > New search**. Bluetooth devices within range are displayed.
- 3 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.  
The passcode is valid only for the current connection.

The available options may vary.

### USB data cable

#### Copy content between your phone and a computer

You can use a USB data cable to copy your pictures and other content between your phone and a compatible computer.

- 1 Use a compatible USB cable to connect your phone to a computer.
- 2 Select from the following modes:

**Nokia Ovi Suite** — Nokia Ovi Suite is installed on your computer.

**Media transfer** — Nokia Ovi Suite is not installed on your computer. If you want to connect your phone to a home entertainment system or printer, use this mode.

**Mass storage** — Nokia Ovi Suite is not installed on your computer. The phone is displayed as a portable device on your computer. If you want to connect your phone to other devices, such as a home or car stereo, use this mode.

- 3 To copy the content, use the file manager of the computer.

To copy your contacts, music files, videos, or pictures, use Nokia Ovi Suite.

## Music and audio

### FM radio

#### About the FM radio

Select **Menu > Music > Radio**.

You can listen to FM radio stations using your phone - just connect a headset, and select a station.

To listen to the radio, you need to attach a compatible headset to the device. The headset acts as an antenna.



#### Listen to the radio

Select **Menu > Music > Radio**.

### **Change the volume**

Use the volume keys.

### **Close the radio**

Press and hold the end key.

### **Set the radio to play in the background**

Select **Options** > **Play in backgr..**

### **Close the radio when it is playing in the background**



Press and hold the end key.

### **Find and save radio stations**

Search for your favorite radio stations, and save them, so you can easily listen to them later.

Select **Menu** > **Music** > **Radio**.

### **Search for the next available station**

Select and hold  or .

### **Save a station**

Select **Options** > **Save station**.

**Automatically search for radio stations**

Select **Options** > **Search all stat..** For best results, search when outdoors or near a window.

**Switch to a saved station**

Select  or .

**Rename a station**

- 1 Select **Options** > **Stations**.
- 2 Select and hold the station, and from the pop-up menu, select **Rename**.

**Tip:** To access a station directly from the saved station list, press the number key that corresponds to the number of the station.

**Media Player****Play a song**

Play music stored in the phone memory or on the memory card.

Select **Menu** > **Music** > **My music** and **All songs**.

- 1 Select a song.
- 2 To pause playing, select ; to resume, select .

### Play a video


Play videos stored in the phone memory or on the memory card.

Select **Menu > Music > My music and Videos**.

- 1 Select a video.
- 2 To pause playback, select **||**; to resume, select **▶**.

### Pictures and videos

#### Take a picture

- 1 Select **Menu > Photos > Camera**.
- 2 To zoom in or out, use the volume keys.
- 3 Select .

The pictures are saved in **Menu > Photos > My photos**.




#### Close the camera

Press the end key.

#### Record a video

Besides taking pictures with your phone, you can also capture your special moments as videos.

Select **Menu > Photos > Video camera.**

- 1 To switch from image mode to video mode, if necessary, select  > **Video c..**
- 2 To start recording, select .  
To zoom in or out, use the volume keys.
- 3 To stop the recording, select .

Videos are saved in **Menu > Photos > My videos.**

### **Close the camera**

Press the end key.

### **Send a picture or video**

Want to share your pictures and videos with friends and family? Send a multimedia message or send a picture using Bluetooth.

Select **Menu > Applications > Gallery.**

### **Send a picture**

- 1 Select the folder containing the picture.
- 2 Select and hold the picture to send.  
To send more than one picture, select **Options > Mark**, and mark the desired pictures.

- 3 Select **Send** or **Options** > **Send marked** and the desired sending method.

### **Send a video**

- 1 Select the folder containing the video.
- 2 Select **Options** > **Mark**, and mark the video. You can mark several videos to send.
- 3 Select **Options** > **Send marked** and the desired sending method.

## **Web**

### **About the web browser**

Select **Menu** > **Internet**.

You can view web pages on the internet with the web browser on your phone.

To browse the web, you must be connected to the internet.

For the availability of these services, pricing, and instructions, contact your network service provider.

You may receive the configuration settings required for browsing as a configuration message from your network service provider.



## **Browse the web**

Select **Menu** > **Internet**.

## **Go to a website**

Select **Go to address**, and enter the address.

## **Clear browsing history**

Select **Menu** > **Internet**.

A cache is a memory location that is used to store data temporarily. If you have, or have tried to, access confidential information or a secure service, requiring passwords, clear the cache after each use.

## **Clear the cache or cookies**

While browsing a website, select **Options** > **Tools** > **Clear the cache** or **Clear cookies**.

## **Prevent cookies from being stored**

Select **Options** > **Settings** > **Security** > **Cookies**.

## **Mail and chat**

### **About Mail**

Select **Menu** > **Messaging** > **Mail**.

You can use your phone to read and send mail from your mail accounts from different mail service providers.

Your phone supports push mail.

Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

If you do not already have a mail account, you can create a Nokia account, which includes Nokia's Ovi Mail service. For more information, go to [www.ovi.com](http://www.ovi.com). With your Nokia account, you can access all of Nokia's Ovi services.

### Send a mail

Select **Menu > Messaging > Mail** and a mail account.

- 1 Select **Options > Compose new**.
- 2 Enter the recipient's mail address and the subject, and write your message.
- 3 To attach a file, for example, a picture, select **Options > Attach > From Gallery**.
- 4 To take a picture to attach to the mail, select **Options > Attach > From Camera**.

## 5 Select Send.

### **Read and reply to mail**

Select **Menu** > **Messaging** > **Mail** and a mail account.

- 1 Select a mail.
- 2 To reply to or forward a mail, select **Options**.

### **About Chat**

Select **Menu** > **Messaging** > **Chat**.

You can exchange instant messages with your friends. Chat is a network service.

You can leave the Chat application running in the background while you use other features of your phone, and still be notified of new instant messages.

Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

### **Chat with your friends**

Select **Menu** > **Messaging** > **Chat**.

You can sign in to and chat in several services at the same time. You must separately sign in to each service.

You can have ongoing conversations with several contacts at the same time.

- 1 If several chat services are available, select the desired service.
- 2 Sign in to the service.
- 3 In your contacts list, select the contact you want to chat with.
- 4 Write your message in the text box at the bottom of the display.
- 5 Select **Send**.

## Maps

### About Maps

Your phone comes with the Maps application, and may have a memory card with preloaded maps for your country. Insert the memory card into the phone before using Maps.

Select **Menu > Maps**.

You can browse maps of different cities in your country. You can also:

- View your current location
- Plan a route to a nearby place
- Search for a place or specific address, and save it
- Send your location or a place to a friend in a text message

When you browse to an area which is not covered by the maps already downloaded on the memory card, a map for the area is automatically downloaded through the internet. Downloading maps may involve transmission of large amounts of data through your service provider's network. For information about data transmission charges, contact your service provider.

You can also use the Nokia Ovi Suite application to download maps. To download and install Nokia Ovi Suite on your compatible computer, go to [www.ovi.com](http://www.ovi.com).

Network access may be required to find your current location. You may be prompted to select an internet access point.

Some services may not be available in all countries, and may be provided only in selected languages.

Contents of digital maps may sometimes be inaccurate and incomplete. Never rely solely on the content or the service for essential communications, such as in emergencies.

### **View your current location on the map**

Select **Menu** > **Maps and My position**.

### **Update your current location**

Select **Options** > **Update position**.

### **Save your current location**

Select **Options** > **Save as favorite**.

### **Find a place**

Select **Menu** > **Maps**.

- 1 Select **Search**.
- 2 Enter the name of the place or address.
- 3 Select **Go**. A list of matching places or addresses is displayed.

**Refine your search**

- 1 Select **Advanced** > **Find place** or **Find address**.
- 2 Define more details for your search, and follow the instructions.

**Tip:** To search from the entire category of places, leave all name fields blank.

**Tip:** If you can't find the place you are looking for, try to search from an online database. Select **Search online for**. Additional charges may apply. For details, contact your service provider.

**Share your location or a place**

You can send your current location or a place on the map to a friend in a text message.

Select **Menu** > **Maps**.

- 1 Select **My position** or a place on the map and **Options** > **Send this place**.
- 2 Write your message. The address and a link to the location are automatically added.
- 3 Enter the recipient's phone number, or select **Search** and a contact.
- 4 Select **Send**.

When your friend receives the message containing the address details and link, to view the place on the map in the phone web browser, they can select the link.

### **Nokia's Ovi services**

#### **Availability and costs of Nokia's Ovi services**

The availability of Nokia's Ovi services may vary by region. Using the services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. For information about data transmission charges, contact your network service provider.

To learn more about Ovi, go to [www.ovi.com](http://www.ovi.com).

#### **Access Nokia's Ovi services**

Select **Menu > Applications > Apps and games** and the desired Ovi service.

### **Find help**

#### **Support**

When you want to learn more about how to use your product or you are unsure how your phone should



function, go to [www.nokia.com/support](http://www.nokia.com/support), or using your cell phone, [nokia.mobi/support](http://nokia.mobi/support).

If this does not resolve your issue, do one of the following:

- Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone.
- Update your phone software
- Restore the original factory settings

If your issue remains unsolved, contact Nokia for repair options. Go to [www.nokia.com/repair](http://www.nokia.com/repair), or in Latin America, [www.nokia-latinoamerica.com/centrosdeservicio](http://www.nokia-latinoamerica.com/centrosdeservicio). Before sending your phone for repair, always back up your data.

For additional product support information, see the warranty and reference leaflet included with your Nokia device.

### **Subscribe to the Tips and Offers service**

Tips and Offers is a convenient service to help you get the most out of your phone, providing you with tips and support messages, as well as updates for your games and applications.

**Select Menu > Applications > Apps and games > Tips and offers.**

Text message charges may apply when you subscribe or unsubscribe. For terms and conditions, see your phone user guide, or go to [www.nokia.com/mynokia](http://www.nokia.com/mynokia).

### **Keep your phone up to date**

#### **Update phone software using your phone**

Want to improve the performance of your phone and get application updates and great new features? Update the software regularly to get the most out of your phone. You can also set your phone to automatically check for updates.

#### **Warning:**

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

Make sure that the device battery has enough power, or connect the charger before starting the update.

Select **Menu > Settings**.



- 1 Select **Device > Device updates**.
- 2 To display the current software version and check whether an update is available, select **Current sw details**.

- 3 To download and install a software update, select **Downl. device sw**. Follow the displayed instructions.
- 4 If the installation was cancelled after the download, select **Install sw update**.

The software update may take several minutes. If there are problems with the installation, contact your network service provider.

### **Check for software updates automatically**

Select **Automatic SW update**, and define how often to check for new software updates.

Your network service provider may send phone software updates over the air directly to your phone. For more information on this network service, contact your network service provider.

### **Update phone software using your PC**

You can use the Nokia Ovi Suite PC application to update your phone software. You need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your phone to the PC.

To get more information and to download the Nokia Ovi Suite application, go to [www.ovi.com/suite](http://www.ovi.com/suite).

### Restore original settings

If your phone is not working properly, you can reset some settings to their original values.

- 1 End all calls and connections.
- 2 Select **Menu > Settings and Rest. fact. sett. > Settings only**.
- 3 Enter the security code.

This does not affect documents or files stored on your phone.

After restoring the original settings, your phone switches off and then on again. This may take longer than usual.

### Organize files

You can move, copy, and delete files and folders, or create new folders in your phone memory or on the memory card. If you organize your files into their own folders, it might help you find the files in future.

Select **Menu > Applications > Gallery**.

### **Create a new folder**

In the folder where you want to create a sub-folder, select **Options > Add folder**.

### **Copy or move a file to a folder**

Select and hold the file, and from the pop-up menu, select the appropriate option.

**Tip:** You can also play music or videos, or view pictures in Gallery.

### **Back up your pictures and other content to a memory card**

Want to make sure you will not lose any important files? You can back up your phone memory to a compatible memory card.

Select **Menu > Settings > Sync & backup**.

Select **Create backup**.

### **Restore a backup**

Select **Restore backup**.

## Protect the environment

### Save energy

You do not need to charge your battery so often if you do the following:

- Close applications and data connections, such as your Bluetooth connection, when not in use.
- Deactivate unnecessary sounds, such as touch screen and key tones.

### Recycle



When this phone has reached the end of its working life, all of its materials can be recovered as materials and energy. To guarantee the correct disposal and reuse, Nokia co-operates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or call the Nokia Contact Center.

Recycle packaging and user guides at your local recycling scheme.

For more information on the environmental attributes of your phone, go to [www.nokia.com/ecoprofile](http://www.nokia.com/ecoprofile).

## Product and safety information

### Network services and costs

Your device is approved for use on the (E)GSM 850 and 1900 MHz networks.

To use the device, you need a subscription with a service provider.

Using network services and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them.

### Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.



- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.
- Keep your device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

**Recycle**

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled garbage disposal and promote the recycling of materials. Check how to recycle your Nokia products at [www.nokia.com/recycling](http://www.nokia.com/recycling).

**About Digital Rights Management**

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring images, music, and other content.

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10 and OMA DRM 1.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated license that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the licenses and the content, use the backup feature of Nokia Ovi Suite.

Other transfer methods may not transfer the licenses which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licenses in case the files on your device get corrupted.

If your device has WMDRM-protected content, both the licenses and the content will be lost if the device memory is formatted. You may also lose the licenses and the content if the files on your device get corrupted. Losing the licenses or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licenses may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

**Batteries and chargers****Battery and charger information**

Your device is intended for use with a BL-5Crechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

This device is intended for use when supplied with power from the following chargers: AC-3. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

**Battery safety**

Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household garbage.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service center for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

### **Additional safety information**

#### **Make an emergency call**

- 1 Make sure the device is switched on.
- 2 Check for adequate signal strength. You may also need to do the following:
  - Insert a SIM card.
  - Deactivate call restrictions you have activated for your device, such as call restricting, fixed dialing, or closed user group.
  - Make sure the flight profile is not activated.
  - If the device screen and keys are locked, unlock them.
- 3 Press the end key repeatedly, until the home screen is displayed.
- 4 Open the slide.
- 5 Enter the official emergency number for your present location. Emergency call numbers vary by location.
- 6 Press the call key.

- 7 Give the necessary information as accurately as possible. Do not end the call until given permission to do so.



**Important:** Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

### **Small children**

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

### **Medical devices**

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so, for example, in hospitals.

### **Implanted medical devices**

Manufacturers of medical devices recommend a minimum separation of 15.3 centimeters (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.

- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia website at [www.nokiaaccessibility.com](http://www.nokiaaccessibility.com).

### Hearing



#### **Warning:**

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

### Nickel



**Note:** The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

### Protect your device from harmful content

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.

- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites.

### **Operating environment**

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

### **Vehicles**

Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is

mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

### **Potentially explosive environments**

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

### **Certification information (SAR)**

#### **This cellular device meets guidelines for exposure to radio waves.**

Your cellular device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.



The exposure guidelines for cellular devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.46 W/kg .

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

Your cellular device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 0.68 W/kg and when properly worn on the body is 0.55 W/kg .

## **Copyright and other notices**

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Ovi, and WE: logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

Portions of the Nokia Maps software are ©1996-2011 The FreeType Project. All rights reserved.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and

commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The availability of Ovi services may vary by region.

#### **FCC/INDUSTRY CANADA NOTICE**

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge.

9229882/Issue 1.0 EN-US

# Index

## A

access codes	17
alarm clock	38
alarms	38
antennas	16
audio	35

## B

backing up data	62
battery	8, 67
— charging	13
Bluetooth	39, 41
browser	48, 49
<i>See web browser</i>	
business cards	41

## C

cable connection	42
cache	49
Calendar	39
calls	
— emergency	68
— log	25, 26

— making	25
camera	
— recording videos	46
— sending pictures and videos	47
— taking pictures	46
charging the battery	67
chat services (IM)	51
clock	38
contacts	
— adding	26
— copying	23
— saving	26
copying content	23, 42
customizing your phone	35, 36

## D

data connections	
— Bluetooth	39
date and time	38
dictionary	30

## E

e-mail	49
emergency calls	68

environmental tips	63
--------------------	----

**F**

factory settings, restoring	61
--------------------------------	----

file management	61
-----------------	----

FM radio	43, 44
----------	--------

**H**

home screen	22, 34, 35
-------------	------------

**I**

IM (instant messaging)	51
---------------------------	----

IMEI number	17
-------------	----

indicators	22
------------	----

internet	48, 49
----------	--------

**K**

keyguard	19
----------	----

keys and parts	7
----------------	---

**L**

lock code	17
-----------	----

locking	
---------	--

— keys	19
--------	----

— screen	19
----------	----

loudspeaker	24
-------------	----

**M**

mail	49
------	----

— creating	50
------------	----

— reading and replying to	51
------------------------------	----

— sending	50
-----------	----

mailbox	
---------	--

— speech	33
----------	----

Maps	52
------	----

— current location	54
--------------------	----

— searching	54
-------------	----

— sharing	55
-----------	----

meeting entries	39
-----------------	----

Memory cards	11
--------------	----

messages	
----------	--

— copying	23
-----------	----

— sending	30
-----------	----

MMS (multimedia message service)	30, 32
-------------------------------------	--------

Multimedia	
------------	--

messages	30, 32
----------	--------

music	45
-------	----

**N**

Nokia support information	56
Nokia's Ovi services	56

**O**

Ovi by Nokia	56
--------------	----

**P**

phone	
— switching on/off	15
Phone switch	23
pictures	
— copying	42
— sending	41, 47
— taking	46
PIN codes	17
powering on/off	15
predictive text input	27, 29, 30
profiles	
— customizing	36
PUK codes	17

**R**

radio	43, 44
-------	--------

## recording

— videos	46
recycling	63
restoring data	62
restoring settings	61
ringtones	36

**S**

## searching

— radio stations	44
security code	17
settings	
— restoring	61
SIM card	8
SMS (short message service)	30
software update	58
software updates	60
support	56
switching on/off	15

**T**

## taking pictures

See <i>camera</i>	
text input	27, 28, 29, 30
text messages	30

time and date 38

Tips and offers service 57

tones

— customizing 36

touch screen 19

transferring content 23,  
42

turning on/off 15

web browser 48

— browsing pages 49

— cache 49

— cookies 49

wrist strap 14

## **U**

updates

— phone software 58,  
60

USB connections 42

## **V**

videos

— copying 42

— playing 46

— recording 46

— sending 41, 47

voice messages 33

volume 24

## **W**

web 48, 49