

SIEMENS



Gigaset SX763 WLAN dsl



First steps



Gigaset



# Contents

<b>The Gigaset SX763 WLAN dsl</b>	<b>7</b>
Do your part for the environment (ECO)	8
Local area networks with Gigaset products	9
Wired local area network (Ethernet)	10
Wireless local area network (WLAN)	11
Linking a wireless network to an Ethernet	13
Extending the wireless network coverage with a repeater	14
Internet telephony and connecting analogue phones	15
WPS	16
Features and applications	18
<b>First steps</b>	<b>20</b>
System requirements	20
Overview of the installation steps	22
Setting up the Gigaset SX763 WLAN dsl	23
Front panel	23
Connecting and activating the Gigaset SX763 WLAN dsl	26
Ports on the rear panel	26
Connecting to the splitter data port	28
Connecting to the phone port	30
Connecting to the phone	31
Connecting wired to the PC	32
Connecting to the mains power supply	33
Connecting wireless to the PC	34
Checking the operating state	35
Network configuration of the PCs	36
Making the basic settings	36
Connecting and configuring additional PCs (optional)	37
<b>The user interface</b>	<b>38</b>
Starting the user interface	38
The start screen	39
Selecting a language	41
Connecting to the Internet manually	41
Elements in the user interface	42
<b>Basic Setup Wizard</b>	<b>43</b>
Regional Options	44
Configuring Internet connections	45
Telephony	48
WPS Registration	49
Summary	50

<b>Security Setup Wizard</b>	<b>51</b>
Assigning a password	52
SSID	53
Setting up security functions for the wireless network	54
WPA2/WPA with pre-shared key (PSK)	55
WEP encryption	57
Access control within the wireless network	59
Saving settings	61
<b>Configuring Advanced Settings</b>	<b>62</b>
Internet	63
Internet selection	64
Internet Connection	66
DNS server	70
MAC Address	71
Firewall	72
Attack Detection	73
Setting up access control to the Internet	74
Setting up the NAT function	76
Port Triggering	78
Port Forwarding	79
Opening the firewall for a selected PC (Exposed Host)	80
Dynamic DNS	81
Routing	83
LAN configuration	84
Assigning static IP addresses to individual PCs	86
Configuring wireless connections	87
Starting WPS registration and configuring WPS	90
Setting encryption	92
WPA2-PSK and WPA2-PSK / WPA-PSK	93
WEP encryption	95
Permitted clients	98
Repeater function (WDS)	99
Setting up Internet telephony (VoIP)	101
VoIP settings	102
Setting up or modifying a VoIP account	104
Extensions	105
Dialing Plans	109
Quick dial	111
USB	112
File Server	113
Web Server	116
Print Server	119

<b>Call guide</b>	<b>120</b>
Advanced options	121
Toggling telephone calls	121
Conference call between three participants	122
Call answering and forwarding	123
Call waiting and call reject if busy	124
Special functions	124
Confirmation tones	124
<b>Administration</b>	<b>125</b>
Regional Options	126
Internet Time	127
System Password	127
System management	128
Backing up and restoring a configuration	131
Backing up configuration data	131
Restoring the saved data	132
Restoring factory settings	132
Reboot	132
Updating firmware	133
Configuring an automatic update	134
Local firmware update	135
System Log	136
<b>Status information</b>	<b>137</b>
Overview	137
Security	138
Internet	139
Local Network	141
Wireless Network	141
Telephony	142
Device	143
<b>Using the USB port</b>	<b>144</b>
Installing the printer port for network printers	144
Introduction	144
Installing a standard TCP/IP printer port under Windows Vista	145
Installing a standard TCP/IP printer port under Windows XP/2000	151
Installing a printer on the TCP/IP port retrospectively	157
Instructions for setting up a printer on the PC	158
Using the data on a USB mass storage device	159
Checking network services	159
Share Inter Process Communication for the network	161
Starting the computer browser	162
Enabling file and printer sharing in the Windows firewall	163

**Appendix ..... 164**

Troubleshooting ..... 164

Deactivating HTTP proxy and configuring a pop-up blocker ..... 170

    Deactivating the HTTP proxy ..... 170

    Configuring the pop-up blocker ..... 170

Specifications ..... 171

Authorisation ..... 172

Open Source Software used in the product ..... 173

**Glossary ..... 175**

**Index ..... 189**

## The Gigaset SX763 WLAN dsl

The Gigaset SX763 WLAN dsl is a powerful but simple communications device for connecting your PC or local area network ([LAN](#)) to the [Internet](#) (via [DSL](#)). It contains an integrated ADSL modem ([ADSL /ADSL2+](#)) enabling you to access the Internet easily.



You can connect your PC wirelessly to the Gigaset SX763 WLAN dsl and create a wireless local area network ([WLAN](#)). The device supports Super G technology. The transmission rate in the wireless local area network can be increased to 108 Mbps thanks to channel bundling. For network security, wireless transmission can be encrypted using the WPA/WPA2 standard or 64/128-bit WEP.

The Gigaset SX763 WLAN dsl also offers the functions of a PABX for [Internet telephony \(VoIP\)](#) and fixed network telephony. You can connect up to two traditional analogue terminals and then use these analogue phones both to make calls via the Internet or also via an existing analogue telephone line. In addition, you can operate [SIP clients](#) (wireless [SIP](#) telephones and PCs with appropriate software) as PABX extensions and therefore also make calls via the Internet or fixed network.

The Gigaset SX763 WLAN dsl allows several users to access the Internet simultaneously. A single user account can be shared if your [Internet service provider](#) permits this. If you want to surf the Internet and make calls using the Internet at the lowest possible cost, the Gigaset SX763 WLAN dsl is a convenient and simple solution.

The Gigaset SX763 WLAN dsl provides the new WPS function for wireless connection of PCs or notebooks. You can activate this function via the user interface. If the other clients in your wireless network such as the Gigaset PC Card 300 also support WPS, you can connect with a simple click.

## The Gigaset SX763 WLAN dsl

The Gigaset SX763 WLAN dsl has an extensive range of functions but remains simple to use. It can be configured and operational within a few minutes.

**Note:**

This user guide is based on the software release 2.3.

### Do your part for the environment (ECO)

---


Thanks to a switch-mode power supply unit, all of our broadband products offer significantly reduced power consumption - for more energy-efficient use. Each device also lets you variably reduce WLAN transmission power based on the size of your home or office network via the user interface, which helps make a cleaner environment for everyone. You can even turn the WLAN off completely when you're not using it. Some of our broadband products also offer you the convenience of switching the WLAN on or off with a handy button directly on the device itself - or have a timer do it for you. It's our goal to ensure a sustainable economic process by using an environmentally friendly production and management system - which makes it easy for us to meet the strict ISO 14001 standards for international environmental management.





## Local area networks with Gigaset products

You can use the Gigaset SX763 WLAN dsl to set up a local area network, for example a home network. All PCs in this network can communicate with each other and have access to the Internet.

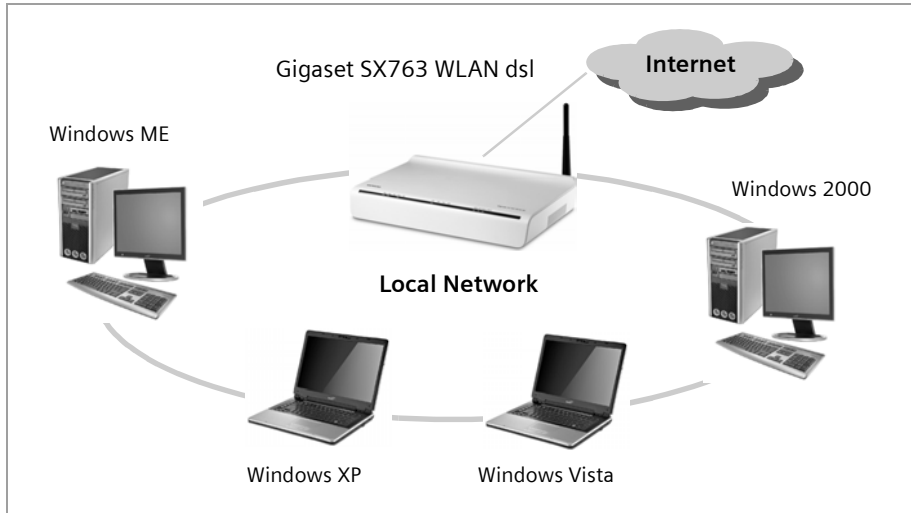

There are various ways in which you can set up the network using a Gigaset SX763 WLAN dsl.


- ◆ Set up a wired local area network ([Ethernet](#)) and allow the connected PCs access to the Internet (page 10).
- ◆ Set up a wireless local area network ([WLAN](#)) and allow the connected PCs access to the Internet (page 11).
- ◆ Set up a local area network comprising wireless and wired network components (page 13).

### Wired local area network (Ethernet)

---

In a wired local area network, PCs communicate with one another via an Ethernet cable. When the Gigaset SX763 WLAN dsl is used, it establishes the connection between the PCs. For this it has four Ethernet LAN ports for connecting four PCs. The PCs have to be equipped with a network port (Ethernet). New PCs frequently already have this port. For older PCs you need to install an Ethernet network card. The PC and the Ethernet LAN port on the Gigaset SX763 WLAN dsl are connected using an Ethernet cable (CAT5). There is one supplied. You can obtain additional Ethernet cables from your retailer.

The Gigaset SX763 WLAN dsl allows all PCs to access the Internet simultaneously.

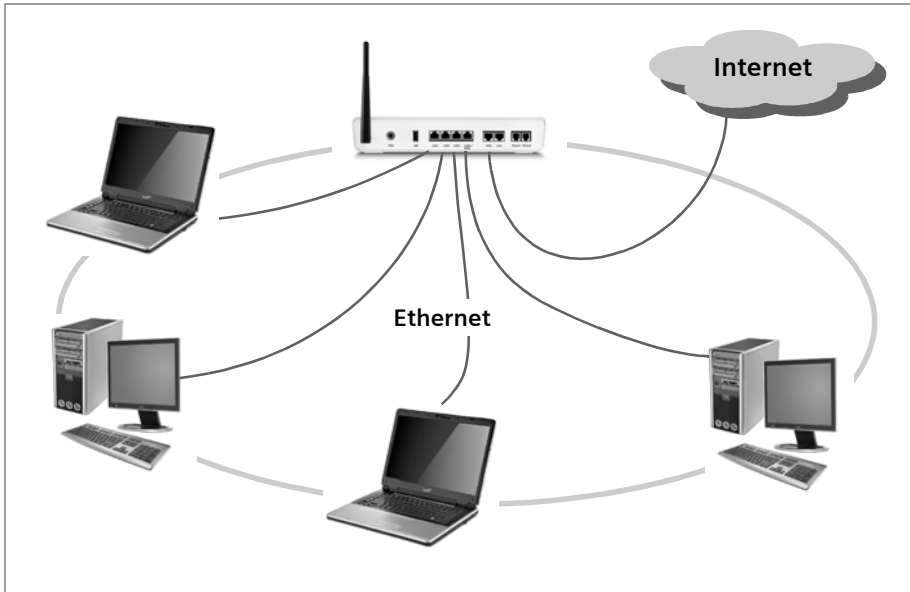

## Wireless local area network (WLAN)

---

In a wireless local area network (WLAN), PCs are linked without wires or cables. The PCs have to be equipped with a wireless local area network adapter (WLAN adapter), for example a Gigaset USB Adapter 108.

We generally differentiate between two types of wireless network:

- ◆ Infrastructure mode
- ◆ Ad-hoc mode

### Infrastructure mode

Infrastructure mode connects wireless and wired networks with one another. In addition to the mobile stations, infrastructure mode needs an access point such as the Gigaset SX763 WLAN dsl. In infrastructure mode, the stations in the network always communicate via this access point. The access point sets up the wireless network on a permanent basis. Each station that wants to be part of the wireless network must first register with the access point before it can exchange data.

The access point establishes the connection between the mobile stations of a wireless network and a wired LAN (Ethernet) or the Internet. In this case this is described as the device's router functionality. The router sends data packets that are not addressed to stations within the network "outside" and forwards data packets originating from "outside" to the appropriate station within the network.

You can use the Gigaset SX763 WLAN dsl to connect

- ◆ wirelessly networked PCs to the Internet and
- ◆ wirelessly networked PCs to an Ethernet network.

Infrastructure mode is the default configuration for the Gigaset SX763 WLAN dsl.


### Ad-hoc mode

An ad-hoc network is a wireless network that has been configured without an access point or a router. The mobile network components that communicate with each other directly and wirelessly form the network on an "ad-hoc" basis, i.e. as and when required. All the stations in the network have the same rights. Ad-hoc networks are used wherever communications networks have to be set up quickly and there is no existing network infrastructure, and where the participants are on the move.

## The Gigaset SX763 WLAN dsl


### Linking wireless networks with the Internet

The Gigaset SX763 WLAN dsl has an ADSL interface that permits all stations within its local area network to access the Internet simultaneously. To be able to use this functionality, you need a DSL connection obtainable from an Internet service provider. Find out whether your service provider supports parallel access by several PCs.

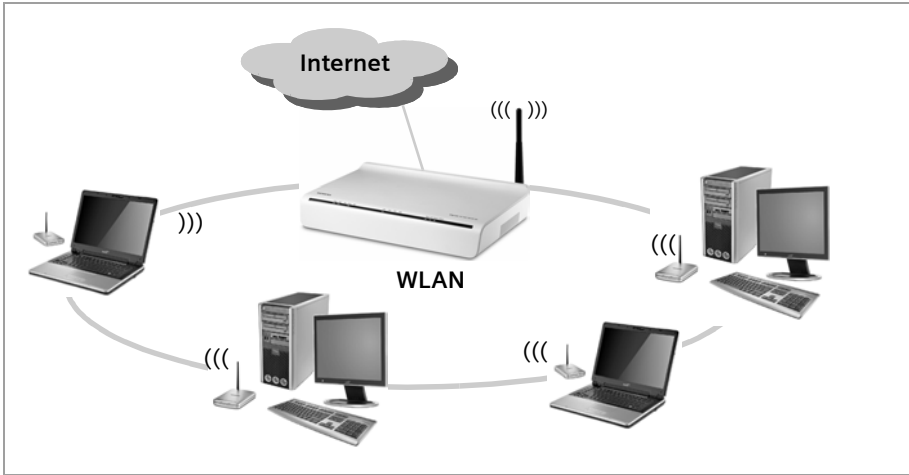

## Linking a wireless network to an Ethernet

Wireless local area networks can work easily together with existing Ethernet networks. If you wish to connect mobile stations to an existing wired network, you must group together all mobile stations into a wireless local area network in infrastructure mode.

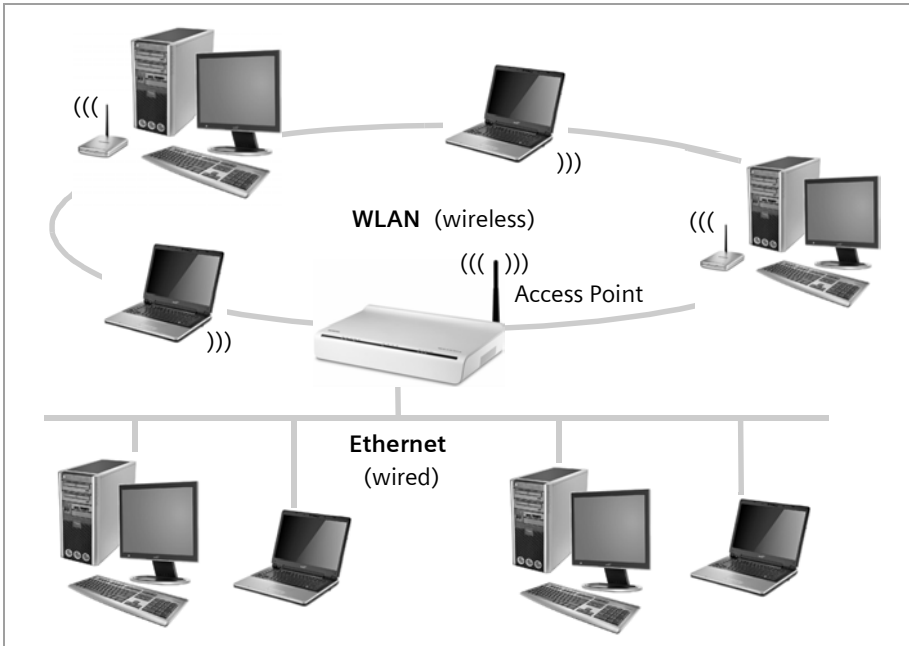

The Gigaset SX763 WLAN dsl has four Ethernet interfaces (LAN ports). Up to four PCs can be connected directly to these LAN ports.

All PCs can access the Internet via the Gigaset SX763 WLAN dsl.


### **Please remember:**

You can also connect an Ethernet router or switch to a LAN port to access a larger Ethernet. If you want to link the Gigaset WLAN network to an existing network, a large number of settings have to be applied. Therefore we cannot provide a general example for this use; the configuration depends greatly on the networks in question. We advise having the configuration of such a network carried out by a specialist.

### Extending the wireless network coverage with a repeater

---

Using the Gigaset WLAN Repeater, you can extend your wireless network's coverage. Set it up within the range of your network. The repeater will now transmit data traffic into its own wireless area. This technology allows you to set up wireless networks that cover a much larger area than is possible with a single Gigaset SX763 WLAN dsl.

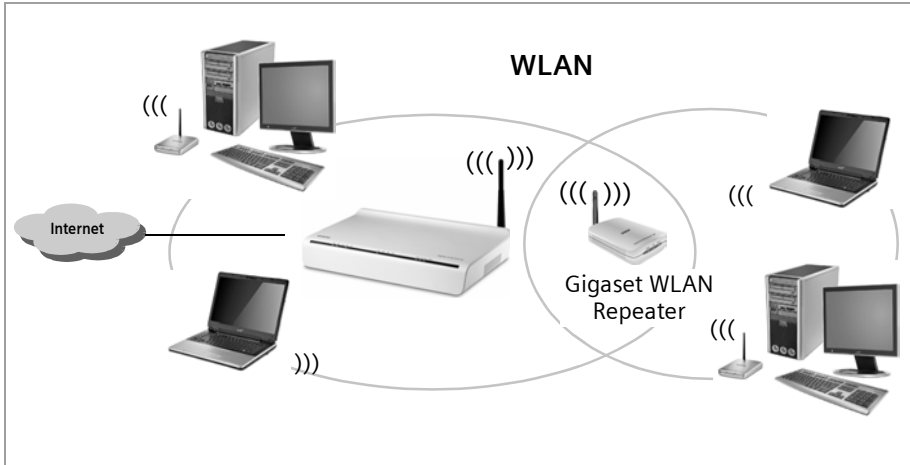


PCs to be connected in a wireless local area network via a repeater must be equipped with an integrated wireless network adapter or you have to connect an external wireless network adapter (e.g. a USB adapter).

## Internet telephony and connecting analogue phones

The Gigaset SX763 WLAN dsl allows a combination of analogue fixed network telephony and [Internet telephony \(VoIP\)](#) over DSL for two analogue telephones and four other wired or wireless VoIP telephones or SIP clients.

This provides you with the full benefits of both technologies. You can make use of the low-cost call rates of Internet telephony without any additional equipment. In addition, you have the option of using your analogue fixed network connection. The type of calls that are cheaper for you will depend on what calls you make and when you make them, and the rates offered by your service provider. The Gigaset SX763 WLAN dsl gives you complete freedom of choice at any time.

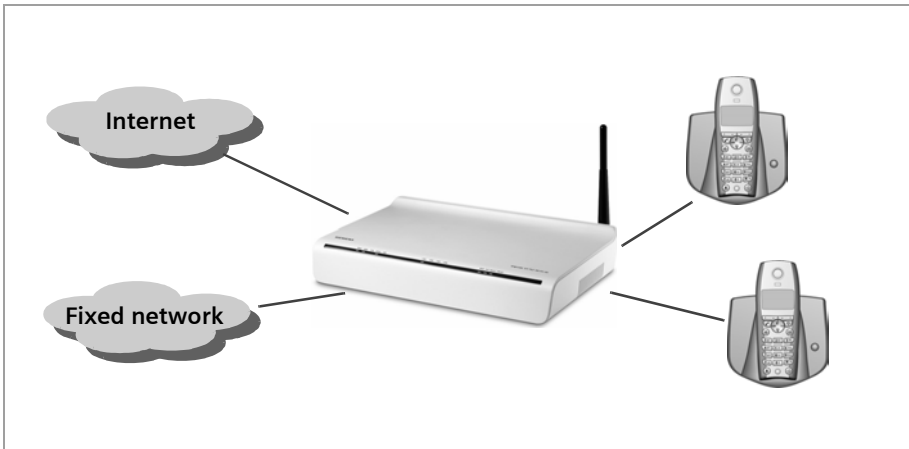

You can choose whether to connect any two analogue phones, a fax machine or an answering machine to the phone ports. You can configure these ports using the Gigaset SX763 WLAN dsl.

The PABX of the Gigaset SX763 WLAN dsl allows you to connect wireless SIP phones (WLAN handsets) and PCs with SIP clients (software for Internet telephony) as extensions. You can use all functions of your PABX for Internet telephony also.

You will need the relevant access data for your VoIP provider to configure Internet telephony.

**Please remember:**

You can only be reached via the Internet (VoIP) when an **active Internet connection** is established. You can still be called any time via the fixed network, however.

### WPS

**Wi-Fi Protected Setup (WPS)** makes it easier to establish and encrypt a wireless network (1 click only). You no longer need to configure and synchronise the individual components of your wireless network manually.

A wireless network is assigned a name (SSID) and requires the encryption of data traffic to protect against the risk of unauthorised access. The access point requires authentication with an SSID and - if encryption is activated - a key to allow a WLAN adapter to access services.

WPS uses the encryption methods WPA-PSK or WPA2-PSK. Devices with WPS automatically create - if no key has been set before - during first successful registration an SSID and a WPA encryption key (pre-shared key) and synchronise each other.

WPS is not possible in networks that use WEP encryption or WPA2/WPA authentication. WPS may be used without encryption.


Clients without WPS can be connected manually.

WPS provides two possibilities for registration:

- ◆ Via registration function

The access point (e. g. the Gigaset SX763 WLAN dsl) provides a **registration function**. It can be started via the user interface **WPS Registration** page.

Once the registration function has been activated, the device allows the registration of a WLAN client (repeater or wireless network adapter) during a two-minute interval.

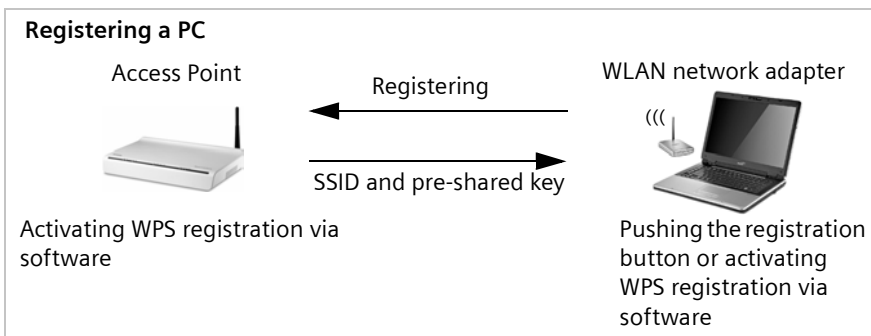

The first time this button is pressed, the device automatically creates a SSID and a pre-shared key, if these had not been already set on delivery or has been configured before manually. If a client activates WPS registration within the two-minute interval, the security data is exchanged and a connection is established. Only **one** client may synchronise during the two-minute interval. After the successful synchronization the registration is closed.

The automatically or manually created security data is valid for all further WPS registration processes. If you change this security data again manually or after a factory reset the clients have to be registered again.




### ◆ Via Personal Identification Number (PIN)

The PIN offers improved security for registration. No other device (e.g. in an adjacent room) can log in unnoticed. A PIN is used for registration which must be identical on both devices. If a client logs in with this PIN, the security data is synchronised. Usually the PIN of the access point is used. For security reasons a new PIN can be created.

It is also possible to create the PIN on one of the clients.

Further information you will find in chapter "Starting WPS registration and configuring WPS" on page 90.

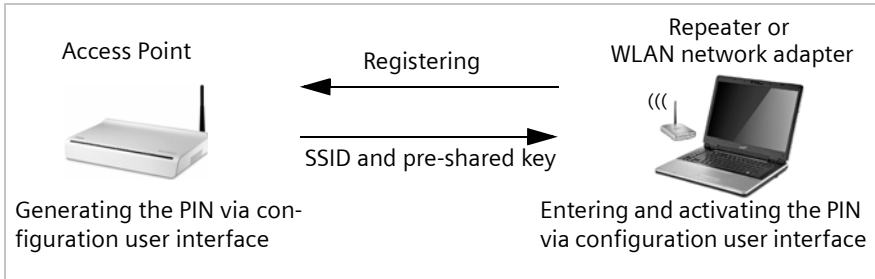

WLAN adapters without WPS can also be set up manually, i.e. the SSID and key must be entered manually. How you can find out which SSID and which pre-shared key is set, you can read in chapter "Configuring wireless connections" on page 87.

WPS cannot be used together with WEP encryption or WPA/WPA2 authentication.

### Features and applications

---

The Gigaset SX763 WLAN dsl's wide range of features makes it ideal for a large number of applications.

Depending on your device, some of the features may differ from the description in this instruction manual.

#### ◆ Internet access

The Gigaset SX763 WLAN dsl allows several users to have Internet access via the integrated [ADSL /ADSL+](#) modem.

- Since many DSL providers permit communication with end users via the [PPPoE](#) protocol, the Gigaset SX763 WLAN dsl has an integrated [Client](#) for this protocol, so you no longer have to install this service on your PC.
- The Gigaset SX763 WLAN dsl supports shared Internet access for up to 252 users. This means several users in your network can surf the Internet at the same time, all using the same Internet account.

#### ◆ Setting up a local area network

The Gigaset SX763 WLAN dsl offers the following possibilities:

- Four devices connected via [Ethernet](#) ports with a transmission speed of 10 or 100 [Mbps](#) (with automatic recognition).
- Up to 252 mobile terminals connected via a radio interface with a transmission speed of up to 108 Mbps. It complies with [IEEE 802.11g](#) standard and can work with all products that satisfy Standard IEEE 802.11b or 802.11g. Use of Super G technology allows for high transmission speed.
- Using the Gigaset SX763 WLAN dsl makes it easy to set up a network at home or in small offices. For example, users can exchange data or share resources in the network, such as a file server or printer. You can connect a USB hard disk or a printer to the USB interface of the Gigaset SX763 WLAN dsl and make them available to all users in your network.

The Gigaset SX763 WLAN dsl supports [DHCP](#) for dynamic IP configuration of the local area network, and [DNS](#) for domain name mapping.

#### ◆ Connecting phones and Internet telephony

The Gigaset SX763 WLAN dsl permits

- Internet telephony via the DSL port.
- Fixed network telephony via the analogue port.
- Connection of two analogue phones for Internet telephony and for fixed network calls as well as connection of wireless SIP phones and PCs with SIP clients for Internet telephony.
- Connection of an answering machine or fax.

Data transfer for [VoIP](#) is handled by the [SIP](#) protocol with high connection and voice quality. If the Internet connection has been interrupted or you do not want to make a call via VoIP, you can simply make a call via the fixed network (if a fixed network phone is connected).

### ◆ Security functions

The Gigaset SX763 WLAN dsl offers comprehensive security measures:

- **Firewall** protection against unauthorised access from the Internet  
All PCs in the local area network use the **Public IP address** of the Gigaset SX763 WLAN dsl for their Internet connections, which makes them 'invisible' on the Internet. The Gigaset SX763 WLAN dsl only allows access from the Internet if this has been requested from within the local area network.  
With the firewall, the Gigaset SX763 WLAN dsl also offers comprehensive protection against hacker attacks.
- Service filtering  
The Gigaset SX763 WLAN dsl can filter Internet access. Here you determine which PCs may access which Internet services.
- Access control and encryption for the local area network  
You can use various encryption methods and authentication methods (WEP, WPA/ WPA2, 802.1x MAC access control) to prevent unauthorised access to your wireless LAN or to make data illegible to unauthorised parties. The security settings available to you depend on the components used in your local network.  
With MAC access control you can allow wireless access to selected PCs.

### ◆ Offering your own services on the Internet

- If you want to offer your own services on the Internet, you can set up the Gigaset SX763 WLAN dsl as a virtual server without permitting further access to the local area network.
- **DMZ** (Exposed Host)  
This allows you to release a PC in your local area network for unlimited access from the Internet. Note that in this case your local area network will no longer be adequately protected against Internet attacks.

### ◆ Providing an HTTP or FTP server via USB interface

- You can easily establish an FTP or an HTTP server for Internet access with the Gigaset SX763 WLAN dsl.
- You can connect a USB hub to the USB port on your Gigaset SX763 WLAN dsl and thereby at the same time provide a printer and a storage medium for all clients in your local area network.

## First steps

### System requirements

---



You require the following components to operate your Gigaset SX763 WLAN dsl:

- ◆ A PC with
  - an 802.11g or 802.11b compatible wireless [Network adapter](#)  
Owing to the superior range and the high data throughput using Super G technology, we recommend you use the Gigaset PC Card 108 or the Gigaset USB Adapter 108.

**Note:**

An 802.11b-compatible network adapter has a maximum transmission speed of 11 Mbps. An 802.11g-compatible network adapter has a maximum transmission speed of 54 Mbps.

A network adapter that supports Super G has a maximum transmission speed of 108 Mbps.

or

- an [Ethernet](#) port (10Base-T or 100Base-TX)

A Web browser such as Microsoft Internet Explorer V 6.0 or higher or Mozilla Firefox V 1.0 or higher for configuring your Gigaset SX763 WLAN dsl.

**Note:**

We recommend you use the Gigaset SX763 WLAN dsl with the Windows Vista or Windows XP operating system because only then are all system requirements for using the device fulfilled.

- ◆ To access the Internet you require
  - a DSL port (splitter),
  - the access data for your [Internet service provider](#).
- ◆ For Internet telephony you also require
  - the access data for your VoIP service provider and
  - a phone for connecting to the Gigaset SX763 WLAN dsl or a PC with a SIP client or a VoIP telephone.

**Note:**

For the sake of clarity, the devices are depicted in lighter shades.  
Colors and details of your device may differ from those in the illustrations.

**For experienced users**

The default settings for the Gigaset SX763 WLAN dsl are:

- IP address: 192.168.2.1
- Subnet mask: 255.255.255.0
- SSID: ConnectionPoint
- Radio channel: 6

**Caution:** By default there is no encryption active. Please be sure to make your network secure. You will find information about this in the section entitled "Configuring wireless connections" on page 87.

**Trademarks**

Gigaset Communications GmbH is a trademark licensee of Siemens AG.

Microsoft, Windows 98/SE, Windows ME, Windows 2000, Windows XP, Windows Vista and Internet Explorer are registered trademarks of the Microsoft Corporation.

Mozilla Firefox is a registered trademark of the Mozilla Organisation.

Super G is a registered trademark of Atheros Communications, Inc.

### Overview of the installation steps

---

1. First install an Ethernet network card or a wireless [Network adapter](#) such as the Gigaset PC Card 108 in the PCs you want to connect to the Gigaset SX763 WLAN dsl. The installation is described in the user guides for these products.

**Please remember:**

When installing wireless network adapters, use the default [SSID](#) for the Gigaset SX763 WLAN dsl: **ConnectionPoint**.

2. Then make the necessary connections (PCs, phones, splitter) on the Gigaset SX763 WLAN dsl and activate the device (page 26).
3. Before the PCs can communicate with the Gigaset SX763 WLAN dsl and with each other in a local network, you may have to change your network settings (page 36). Configure these network settings on **one** PC first so that it can establish a connection to the Gigaset SX763 WLAN dsl. You can then use this PC to configure the device. To find out how to do this, refer to the section entitled "Configuring the local area network" on the CD-ROM.
4. With a wireless connection, you establish the link from the PC's wireless network adapter to the Gigaset SX763 WLAN dsl. This is described in the user guide for the network adapter. If the wireless network adapter provides WPS, you can establish the connection with a simple click (see page 34).
5. Then configure the Gigaset SX763 WLAN dsl to activate the device's Internet access (refer to the section entitled "Basic Setup Wizard" on page 43). To do this you will need the access data for your Internet service provider.
6. If you want to connect more PCs to the Gigaset SX763 WLAN dsl, configure their network settings and set up the local area network accordingly (refer to the section entitled "Configuring the local area network" on the CD-ROM).
7. If you want to use the Gigaset SX763 WLAN dsl for Internet telephony, you must configure your VoIP provider's registration data (refer to the section entitled "Setting up Internet telephony (VoIP)" on page 101).
8. If you wish to use other functions of the Gigaset SX763 WLAN dsl, for example the comprehensive security features, use the Security Setup (page 51) or the Advanced Setup (page 62).

## Setting up the Gigaset SX763 WLAN dsl

### Front panel



The LEDs (from left to right) have the following functions:

LED	State	Status
Power	On (green)	The Gigaset SX763 WLAN dsl is connected to the mains.
	Off	The Gigaset SX763 WLAN dsl is disconnected from the mains.
ADSL	On	A DSL connection is established.
	Flashing	The DSL line is being synchronised. The synchronisation phases are shown as slow flashing (registering) and fast flashing (training). If no DSL cable is connected, the LED will flash at uniform intervals.
	Off	DSL is deactivated.
Line	On	One of the connected phones' receivers has been lifted for a call (fixed network telephony).
	Flashing	The phone is ringing and a fixed network call is being received or someone is waiting on the line.
	Off	There is currently no fixed network connection.
Online	On	Connection to the Internet has been established.
	Off	There is no Internet connection.

LED	State	Status
USB	On (green)	A device is connected to the Gigaset SX763 WLAN dsl via the USB port.
	Flashing	The device connected on the USB port is using too much power (see (page 169)).
	Off	There is no device connected.
LAN1 – LAN4	On	A device is connected to the relevant LAN port.
	Flashing	The relevant LAN port is sending or receiving data (traffic).
	Off	There is no device connected.
WLAN	<b>In normal operation</b>	
	On	The radio interface is activated, no data transmission at present.
	Flashing	The Gigaset SX763 WLAN dsl is sending or receiving data on the radio interface.
	Off	The radio interface is deactivated.
	<b>During WPS registration</b>	
	On (300 sec)	WPS registration was successful.
	Flashing slowly	WPS registration is in progress.
	Flashing quickly	WPS registration was not successful.
	Flashing quickly with interruption	More than one client tried to register.
VoIP	On	At least one port is configured for VoIP and VoIP access is registered with the provider.
	Flashing	A call is currently being made via the Internet.
	Off	There is currently no connection for Internet telephony or no VoIP port has been configured.
Phone 1/ Phone 2	On	The receiver of the phone connected to the port has been lifted.
	Flashing	The phone is ringing and a call is being received or a call is being conducted.
	Off	No phone is connected or the connection is idle.



The Gigaset SX763 WLAN dsl can be set up in any suitable location in the home or office. You do not need any special wiring. However, you should comply with the following guidelines:


- ◆ Operate the Gigaset SX763 WLAN dsl only indoors within a temperature range of 0 to +40 °C. Do not position the Gigaset SX763 WLAN dsl near sources of heat. Do not cover the ventilation slots. High temperatures can damage the device.
- ◆ A mains socket for 220/230 V~ and a connection socket for the splitter or LAN must be available in the place where you set up the Gigaset SX763 WLAN dsl.
- ◆ Do not position the device in the immediate vicinity of stereo equipment, TV sets, microwave ovens or the like. This may cause interference.
- ◆ Position the Gigaset SX763 WLAN dsl so that it is as near to the centre of your wireless network as possible. The general rule is: The higher you place the antennae, the better the performance. Make sure that the place where you position the Gigaset SX763 WLAN dsl offers optimum reception throughout the house, apartment or office.
- ◆ Position the Gigaset SX763 WLAN dsl so that it cannot fall down and damage the antennae. Position the Gigaset SX763 WLAN dsl on a non-slip surface.
- ◆ Do not place the Gigaset SX763 WLAN dsl on any furniture surface that could be affected by the heat from the device.
- ◆ Lay the cables so that nobody can trip over them. You should not cover the cables with anything.

**Please remember:**

Network connections (LAN) via cables and telephone lines may only be set up with the Gigaset SX763 WLAN dsl within enclosed rooms.

## Connecting and activating the Gigaset SX763 WLAN dsl

### Ports on the rear panel

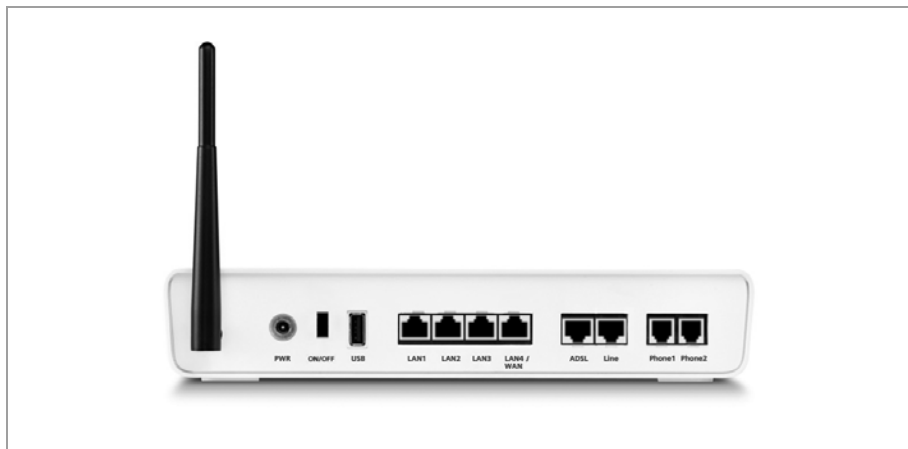


The rear panel of the Gigaset SX763 WLAN dsl houses the ports.

Element	Description
PWR	<p>Socket for the mains adapter supplied</p> <p><b>Warning:</b> Using the wrong power supply unit may damage the Gigaset SX763 WLAN dsl.</p> <p>Depending on the device variant, there may be an on/off button beside the PWR port.</p>
USB	USB port for printer or USB memory.
LAN1 – LAN4/WAN (yellow)	<p>Four 10/100 <a href="#">Mbps</a> switch ports with automatic recognition (RJ-45). You can connect up to four devices with Ethernet ports (such as PCs, a <a href="#">Hub</a> or <a href="#">Switch</a>).</p> <p>You can connect an external modem (e.g. a VDSL or cable modem) to the LAN4 port. The integrated ADSL modem is then deactivated. You will find additional information on the configuration settings on page 64.</p>
ADSL (black)	DSL socket for connecting the integrated modem to the DSL port of the splitter
Line (green)	Socket for connecting the phone line to the telephone port on the splitter
Phone1/2	Sockets for connecting two phones, fax or answering machine

**Reset button**

The underside of the Gigaset SX763 WLAN dsl houses the reset button.

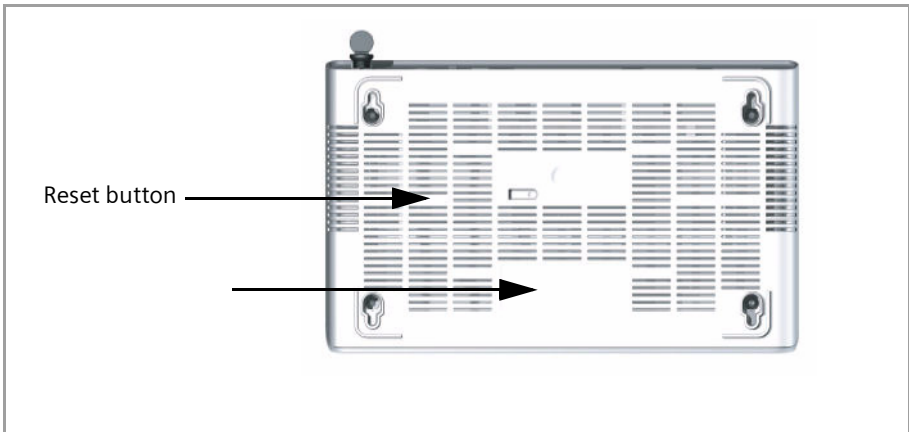

**Reboot function:** Press and hold the right end of the button for more than 1 second but less than 5 seconds to reboot the device. This does not affect the configuration settings.

**Reset function:** Press and hold the right end of the button for at least 5 seconds to return all settings to factory settings.

**Warning:** This will clear all the configuration settings you have made since the initial startup.

Updated firmware will not be affected.

### Connecting to the splitter data port


---

You can operate the Gigaset SX763 WLAN dsl in two different operating modes in order to set up an Internet connection:

- with an integrated ADSL modem
- with an external modem, such as a VDSL or cable modem


#### Using the integrated ADSL modem

➔ Connect the **ADSL** port (**black**) on the Gigaset SX763 WLAN dsl to the ADSL socket on the splitter. To do this, use the DSL cable supplied (**black**).

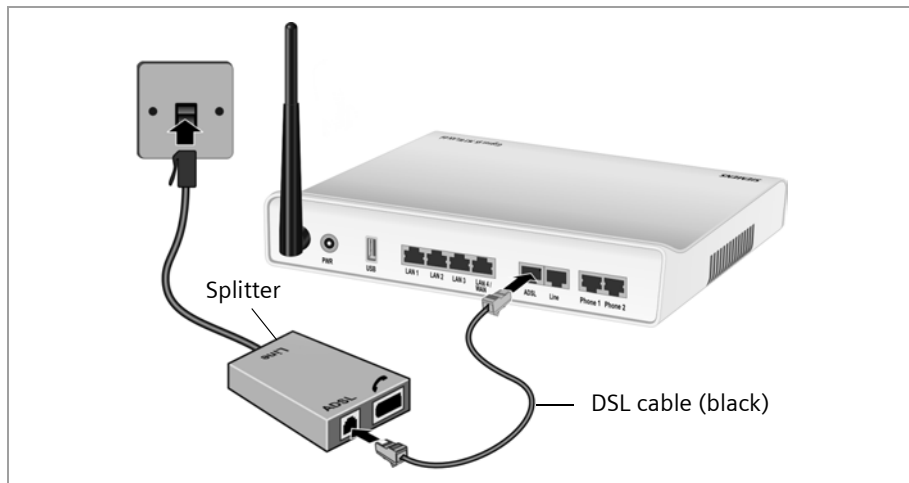

### Using an external modem

- ➔ Connect the **LAN4/WAN** port on the Gigaset SX763 WLAN dsl with an external modem. To do this, use the cable supplied (**black**).
- ➔ Then connect this modem to the relevant communications port (e.g. splitter).

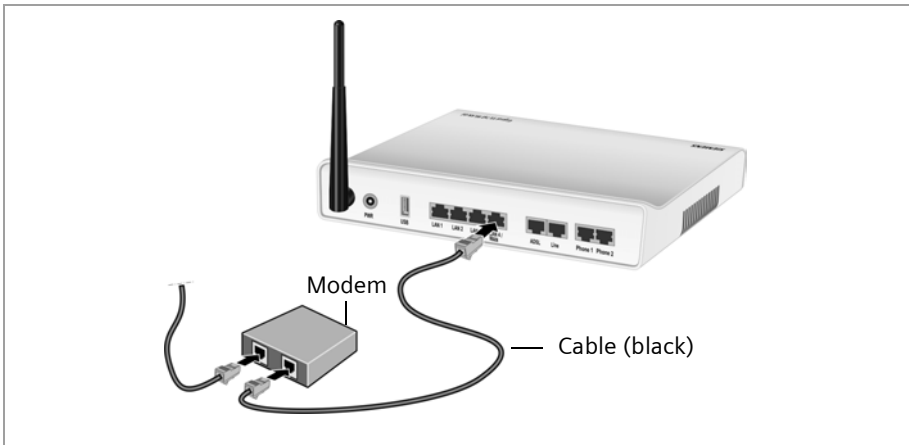


### Connecting to the phone port

---

To make conventional calls via the fixed network, you must connect your Gigaset SX763 WLAN dsl with the phone port of the splitter.

#### Analogue phone port

- ➔ Connect the Gigaset SX763 WLAN dsl with the splitter as follows:
- Insert one plug of the telephone cable supplied (**green**) into the **Line** port (**green**) on the Gigaset SX763 WLAN dsl.
  - Plug the other connector on the telephone cable into the phone socket on the splitter.

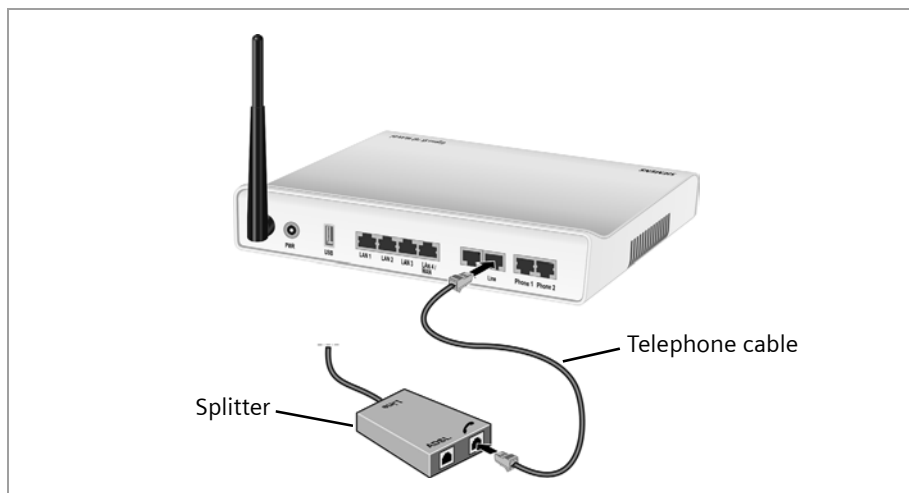

## Connecting to the phone

---

- ➔ Connect the Gigaset SX763 WLAN dsl with the analogue phone as follows:
- Insert the plug of the telephone into the **Phone 1** or **Phone 2** port on the Gigaset SX763 WLAN dsl.

**Note:**

You cannot make calls in the event of a power failure. Emergency numbers are also not accessible in this case.


### Connecting wired to the PC

---

You can connect wired or wireless PCs to your Gigaset SX763 WLAN dsl to create a local area network (LAN). Wireless connection is possible after connecting the Gigaset SX763 WLAN dsl to the power supply (see page 33).

First connect just **one** PC to the Gigaset SX763 WLAN dsl, wired connection is recommended. You can then carry out the general configuration. (If you wish to connect more PCs, please turn to page 37.)

- ➔ Connect one of the LAN ports (**LAN1 – LAN4, yellow**) on the Gigaset SX763 WLAN dsl to the Ethernet network card in your PC. To do this, use the LAN cable supplied (CAT5, **yellow**).

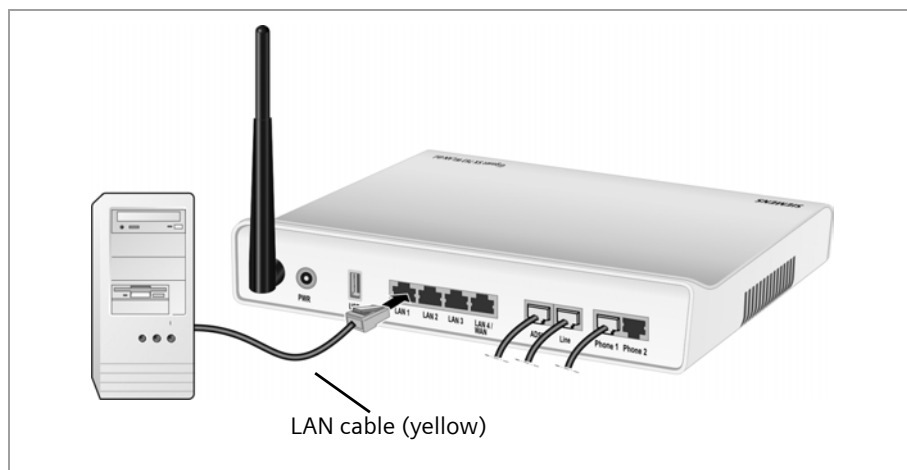



## Connecting to the mains power supply

---

**Please remember:**

Only use the mains adapter supplied with the device (12V 1.5A DC).

- ➔ Connect the mains adapter cable to the **PWR** socket on the Gigaset SX763 WLAN dsl.
- ➔ Plug the mains adapter into a mains socket.
- ➔ If your device has an on/off button, switch on the device.

The Gigaset SX763 WLAN dsl is now switched on and ready for operation.



### Connecting wireless to the PC

---

#### Wireless via WPS

If you are using WPS (see page 16), you can easily make a wireless connection to other WLAN devices via the registration function.

- ➔ Activate the registration function in the user interface to start WPS registration (see page 49).
- ➔ During the two-minute interval, activate WPS registration of the wireless network adapter on the PC. The client receives the security data for the Gigaset SX763 WLAN dsl (SSID and pre-shared key) and is thereby registered.

#### WLAN LED display during WPS registration:

On (300 sec)	WPS registration was successful.
Flashing slowly	WPS registration is in progress.
Flashing quickly	WPS registration was not successful.
Flashing quickly with interruption	More than one client tried to register.

Only one client may register during an individual registration phase. If the device indicates by means of the WLAN LED that more than one client has tried to register, there is no client registered. You can start WPS registration again after a short time.

If the LED indicates a successful WPS registration, the desired client, however, has no connection the Gigaset SX763 WLAN dsl and has not been registered successfully, an external device may have connected to your WLAN. In this case, you should modify the WPA-PSK key as quickly as possible (see page 55) or perform a factory reset (see page 27) and perform WPS registration for the clients using a PIN (see page 49).

For additional WPS registration options see chapter "WPS Registration" on page 49.

For the wireless connection of additional PCs without WPS function see page 37.

#### Wireless without WPS


A wireless connection is made using a wireless network adapter that must be installed in your PC. This can be an 802.11g or 802.11b-compatible wireless network adapter. Owing to the superior range and the high data throughput, we recommend that you use the Gigaset PC Card 108 or the Gigaset USB Adapter 108.

A wireless network is defined by assigning an identical SSID to all the devices.

- ➔ You should therefore enter the SSID for the Gigaset SX763 WLAN dsl in your network adapter configuration. The default SSID for the Gigaset SX763 WLAN dsl is **ConnectionPoint**.

If you use a wireless network adapter from the Gigaset range, enter the SSID using the Gigaset WLAN Adapter Monitor.

If the correct SSID has been entered in your PC's wireless network adapter, the wireless link will be established automatically.

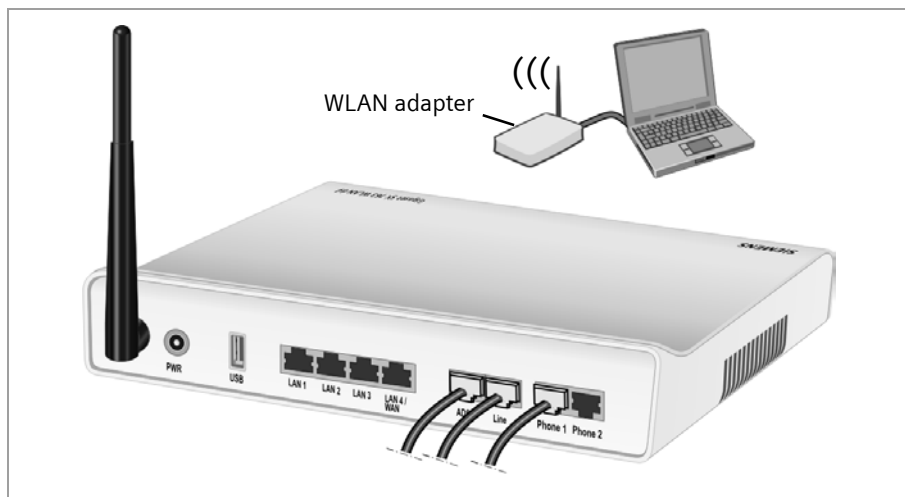

## Checking the operating state

Your Gigaset SX763 WLAN dsl is now ready for use. The LED displays on the front panel of the Gigaset SX763 WLAN dsl provide information about the operating state (see page 23).

When the device is ready for use, the LEDs light up as follows:

- ◆ The **Power** LED on the front lights up.
- ◆ The **ADSL** LED flashes to indicate that the DSL connection is being synchronised. Once this process is complete, the ADSL LED lights up permanently.
- ◆ The **WLAN** LED lights up to indicate that the Gigaset SX763 WLAN dsl is ready to establish wireless connections.

The radio link to a PC that is connected by means of a wireless network adapter is opened automatically provided the network adapter has been configured with the same SSID as the Gigaset SX763 WLAN dsl. It can take a few seconds for the wireless connection to be established. The **WLAN** LED flashes when data is sent or received via this connection.

- ◆ The **LAN** LEDs light up if a device is connected to the corresponding LAN port. If this is not the case, refer to the section entitled Troubleshooting on (page 164).

### Network configuration of the PCs

---

In order to communicate via the Gigaset SX763 WLAN dsl, the **network configuration** may have to be set up on the connected PCs.

With

- ◆ **Windows Vista** or
- ◆ **Windows XP** or
- ◆ **Windows 2000**

operating systems, this usually takes place automatically provided you have not made any changes to the standard settings for the network configuration.

With **Windows 98/SE**, you have to carry out the network configuration.

The description of the network configuration can be found on the CD-ROM.

### Making the basic settings

---

You can now make the basic settings for Internet access using the user interface of the Gigaset SX763 WLAN dsl (page 38).

If you want to connect additional PCs to the Gigaset SX763 WLAN dsl, please read the next section.

## Connecting and configuring additional PCs (optional)

---

Once you have configured one PC as described above you can connect additional PCs to the Gigaset SX763 WLAN dsl. You will need an additional cable for each PC you want to connect via cable. For the wireless connection of additional PCs, you will need a wireless network adapter.

### Wireless

- ➔ Install wireless network adapters in each other PC as described in the corresponding user guide, making sure that the SSID of all wireless network components (Gigaset SX763 WLAN dsl and network adapters) is **identical**.

If you have not changed the SSID in the Basic Setup Wizard wizard or via WPS, the default setting will be **ConnectionPoint**.

If you have connected a PC via WPS, you will find the created SSID and pre-shared key in the **Advanced Settings** of the user interface (see page 87) and you can configure PCs without WPS manually.

PCs with WPS can be connected wirelessly via WPS (see page 34 and page 90).

- ➔ If necessary, set up the network for each newly connected PC (page 36).

### Wired

- ➔ Connect the network cards of each additional PC to a free LAN port (**LAN1 – LAN4**) on the Gigaset SX763 WLAN dsl using an Ethernet cable.
- ➔ Make sure that the corresponding LAN LED on the front of your Gigaset SX763 WLAN dsl flashes.
- ➔ If necessary, set up the network for each newly connected PC (page 36).
- ➔ Reboot the additional PCs.

# The user interface

You have connected a PC to the Gigaset SX763 WLAN dsl and possibly made the settings in the local area network. You can now configure the Gigaset SX763 WLAN dsl using this PC from the user interface of the Gigaset SX763 WLAN dsl. We recommend for initial configuration that you connect the PC in wired mode. As Internet browser we recommend Microsoft Internet Explorer V 6.0 or higher, or Mozilla Firefox V 1.0 or higher.

### Note:

To start the configuration environment, you may need to deactivate the HTTP proxy for your browser.

If you use Window Vista or Windows XP Service Pack 2, you will need to configure the popup blocker.

You will find additional information on these two points on "Deactivating HTTP proxy and configuring a pop-up blocker" on page 170.

If you use a firewall, it must allow connection to the Gigaset SX763 WLAN dsl. For details, refer to the user guide for your firewall. If necessary, deactivate the firewall while you configure your Gigaset SX763 WLAN dsl.


## Starting the user interface

To access the user interface of the Gigaset SX763 WLAN dsl:

- ➔ Start your Internet browser.
- ➔ Enter the IP address of the Gigaset SX763 WLAN dsl in the browser's address field:

**http://sx763** or **http://192.168.2.1**

The login screen appears:

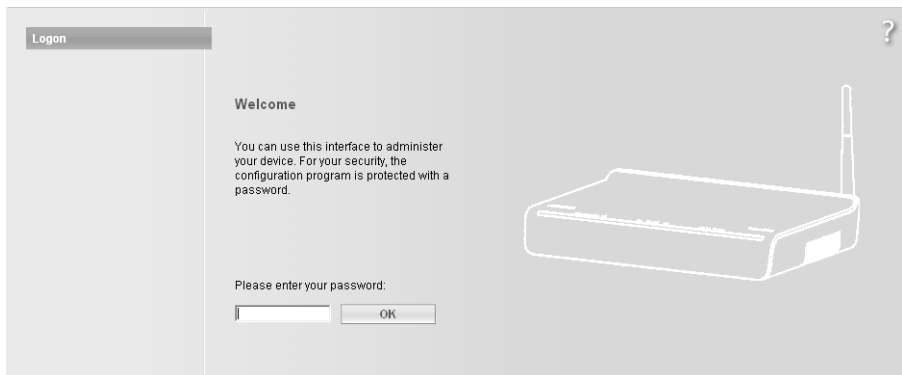

For your security, the configuration program is protected with a password. The default password generally required is **admin**.

- ➔ Enter the password.
- ➔ Click **OK**.

**Note:**


For security reasons you should change this password at a later stage (page 52).

A page with security information will appear. You can skip this when configuring the device for the first time. If you carry out all the general and security settings using the wizard as described below, your device and network will be fully protected. If not, the next time you log on you will be informed of security gaps in the configuration program.

- ➔ Click **OK**.

## The start screen

The start screen is the starting point for all configuration and administration procedures.

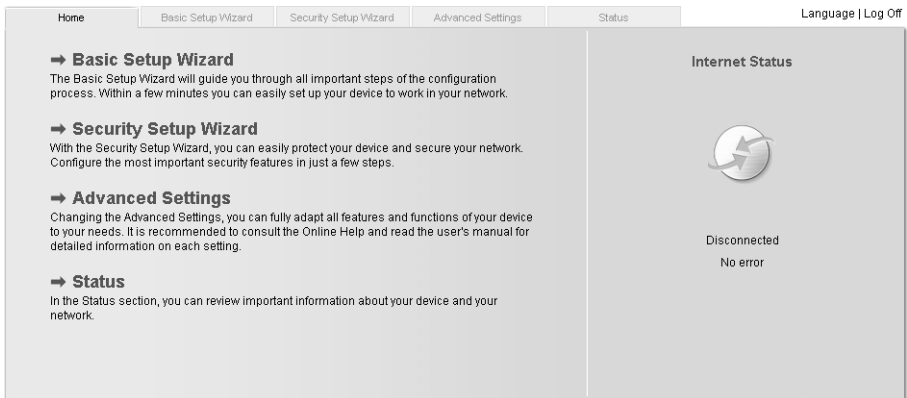

### Start screen functions

You can start the following actions on the start screen:

- ◆ Select the language for the user interface (page 41).
- ◆ When you have configured an Internet connection for the first time, you can view the selected connection service and the status of the Internet connection, choose a different connection service and set up or close an Internet connection (page 41). The start screen shows the status and also the button **Connect** or **Disconnect**.

## The user interface

- ◆ Open the **Status** menu to obtain status information about the Gigaset SX763 WLAN dsl (page 137).
  - ◆ Call up the wizard for the basic configuration (**Basic Setup Wizard** see page 43),
  - ◆ Call up the **Security Setup Wizard** (page 51).
  - ◆ Open the **Advanced Settings** menu for additional configuration options (page 62).
- You can call up the wizards, the Advanced Settings menu and status information at any time and on any user interface screen using the tabs at the upper margin of the user interface.

### The configuration program comprises the following functions:

<b>Basic Setup Wizard</b>	Use this wizard to make the settings required for connecting to the Internet. You can set up data for your region, make settings for your wireless and wired local network (including WPS registration) and configure Internet telephony. This is described from page 43.
<b>Security Setup Wizard</b>	This wizard allows you to take security precautions against unauthorised access to the Gigaset SX763 WLAN dsl and the local network. You can assign a password and set up encryption for wireless traffic. This is described from page 51. To protect your network, we strongly recommend that you carry out this setup.
<b>Advanced Settings</b>	Additional functions are offered in the <b>Advanced Settings</b> menu. You can configure your PABX for fixed network/Internet telephony, back up and restore the configuration data, set up the Gigaset SX763 WLAN dsl as a virtual server for the network, configure a Web server, a file server or a print server and perform other functions as required. These configuration steps are optional and can be carried out at a later stage. This is described from page 62.
<b>Status</b>	You can view information about the configuration and status of the Gigaset SX763 WLAN dsl in the <b>Status</b> menu. This is described from page 137.
<b>Language</b>	You also have the opportunity to specify the language for the user interface (page 41).




## Selecting a language

---

The user interface can be presented in various languages.

- ➔ Click **Language** at the top right of the start screen.

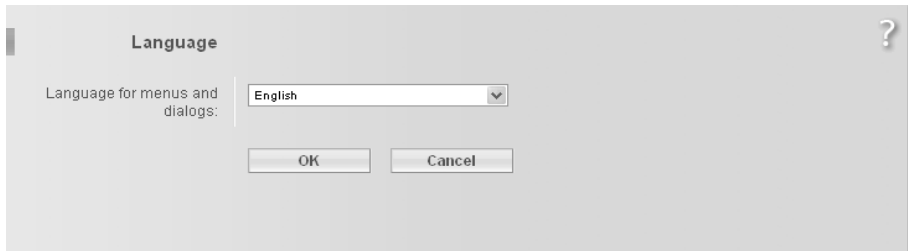

- ➔ If you wish to change the preset language, select the new language you require from the list.
- ➔ Click **OK** to apply the setting.

Once the procedure has been concluded, the start screen will be displayed again.

## Connecting to the Internet manually

---

Once you have configured your Internet access (see page 45 and page 66), you can establish a manual connection to the Internet on the start screen if you have selected **Connect on demand** or **Connect manually** as the Connection mode.

To establish or end an Internet connection manually:

- ➔ Open the start screen of the Gigaset SX763 WLAN dsl as described on page 38.  
If you have already started the user interface, click the **Home** tab at the top left of the window.  
If you have not yet started the user interface, do so now and log on.
- ➔ Click **Connect** to establish a connection to the Internet.
- ➔ Click **Disconnect** if you no longer require the connection.

### Elements in the user interface

---

The user interface screens contain the following elements:

#### Button **Log Off**

The **Log Off** button is always displayed on the right of the user interface. If you click **Log Off**, the session is ended and the login screen appears again.

#### Help



Click the question mark to display explanations about the current user interface screen.

#### Buttons and icons used by the wizards



The wizards use graphic icons to show which steps you have already carried out.

- ◆ As soon as you have changed the configuration on a screen you can activate the new setting by clicking **Next >**.
- ◆ The **< Back** button returns you to the previous configuration step.
- ◆ **Cancel** returns you to the start screen. This button is not available for the initial configuration of the device.

#### Buttons in the Advanced Settings menu

**OK** Transfers the settings you have made to the Gigaset SX763 WLAN dsl configuration.

**Cancel** Deletes all the entries on a screen since the last time you clicked **OK**.

Other buttons may be displayed depending on the function in question. These are explained in the relevant sections.

# Basic Setup Wizard

The Basic Setup Wizard wizard guides you step by step through the general configuration of the Gigaset SX763 WLAN dsl. This includes settings for your region and your Internet access.


Connection to the [Internet](#) is established via the Gigaset SX763 WLAN dsl for all PCs connected to it. You need your [Internet service provider's](#) access data for the configuration. Please have this data to hand.

## Note:

The Basic Setup Wizard will reconfigure your Internet settings if you have already set these. This does not affect the WLAN and LAN settings.

The access data is saved in the Gigaset SX763 WLAN dsl during configuration. Before passing the device on to somebody else or having your dealer replace it, you should always first restore the factory settings (page 132). Otherwise, unauthorised persons may use your Internet access at your expense.

➔ Select the **Basic Setup Wizard** option on the start screen to start the configuration.

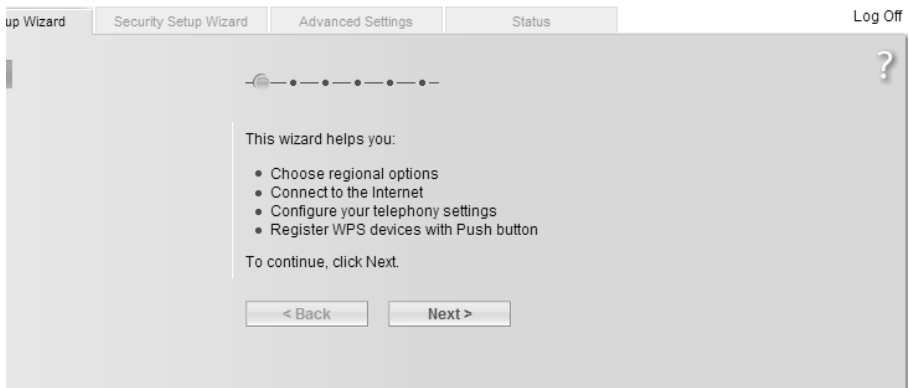


➔ Click **Next >**.

### Regional Options

---

You can select your present location for the regional settings on this screen.

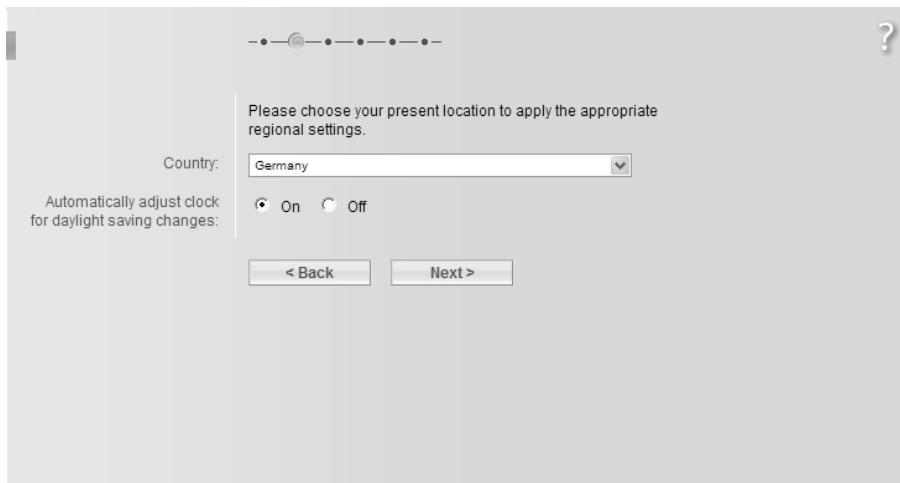

- ➔ Select the country in which you are currently located from the list. You can set the time so that it automatically switches to summer time and/or another time zone of your choice.
- ➔ Select the required option and/or the time zone for your location.
- ➔ Click **Next >**.

**Note:**

The ADSL parameters and the selection of Internet service providers will be set automatically on the following screens according to the country you choose.

## Configuring Internet connections

You will find the access data you require for configuring the Internet connection in the documentation you received from your [Internet service provider \(ISP\)](#).

You can perform the initial configuration of your Internet connection on this screen. If you want to change the data later on, you can do this in the **Advanced Settings** (page 63) menu.

If you have connected an external modem, you also have to perform the initial configuration of your Internet connection in the **Advanced Settings** (page 63) menu.

- ➔ Select your **Service provider**. The selection menu will contain various possible providers depending on which country you have chosen. If your provider is not listed, please use the **Other** option.
- ➔ Enter the data you have been given by your service provider: **Protocol**, **User name** and **Password**.
- ➔ Leave the default settings for the parameters **MTU**, **Line mode**, **Encapsulation**, **QoS class** and **VPI / VCI**, unless your service provider has provided you with other data.

**Note:**

Connection to the Internet is only possible if you have entered all the data for your Internet service provider correctly.

- ➔ Your Internet service provider may disconnect and reconnect your Internet connection daily. In this case enable **24h reconnection** and choose the period of time in which the reconnection should be performed from the **Reconnection time** option menu.
- ➔ Specify how Internet sessions are to be established via **Connection mode**:
  - Select **Always on** if the connection is to exist at all times when the Gigaset SX763 WLAN dsl is turned on.

**Notes:**

- ◆ This option can result in high connection charges if you are on a time-based tariff.
- ◆ You must set up the **Always on** option if you wish to use Internet telephony.

- Select **Connect on demand** if applications such as an Internet browser or an e-mail program are to connect to the Internet automatically.
- In the **Idle time before disconnect** field, enter a period after which the Internet connection is to end automatically if no data is transmitted (the default setting is 3 minutes).

You can deactivate this function by entering "0". This means that the connection will continue to exist even if no data is transmitted. If you are on a time-based tariff, this can result in high charges. In this case you should enter a value other than "0".

This time setting only applies to the **Connect on demand** and **Connect manually** options.

- Select **Connect manually** if you always want to establish and end the Internet connection manually. If you are on a time-based tariff this will save you high connection charges.
- ➔ You can show additional settings, depending on the selected service provider, by means of the **Show Additional Settings** button. You can also change the settings, if required. These settings are pre-set with appropriate default values. This button is not available for the **Other** selection since all available settings are displayed in this case.
- ➔ Click **Test Settings** to check the Internet connection.

An attempt is made to set up an Internet connection. The result is shown in a window. If the connection could be set up successfully, the **Close** button appears.

- ➔ Click the **Close** button to return to the **Basic Setup Wizard**.

**PPPoE pass-through**

This option is only available if you have chosen another **Protocol** than PPPoE. PPPoE pass-through allows you to use an additional Internet connection (through another service provider) on one PC. Further information about this can be found on page 68.

- ➔ Deactivate **PPPoE pass-through** if you do not wish to use this function.
- ➔ After entering the data click **Next >**.

**Using UPnP (Universal Plug and Play)**

PCs with **UPnP** (Universal Plug & Play) can offer their own network services and automatically use services offered in the network. Further information about this can be found on page 68.

- ➔ To go to the next step, click **Next >**.





- ➔ Select **Other** from the **Service provider** selection menu (default setting) or, if required, use one of the suggested providers from the list. Enter the data you have received from your service provider:  
**User name, Displayed name, Authorization user name, Password, SIP domain, SIP realm, Proxy server address** and **Registrar server address**.
- ➔ Leave the default settings for the parameters **SIP listen port, Proxy server port, Registrar server port, Voice codecs** and **Out-of-band DTMF**, unless your service provider has provided you with other data.
- ➔ If you wish to delete the entered data, click the **Clear** button.
- ➔ Confirm your selection with **Next >**.

## WPS Registration

Wi-Fi Protected Setup (WPS) makes it easier to establish a wireless network. Devices equipped with WPS can create and synchronise an SSID and a WPA key (pre-shared key) automatically. These security data can be created in different ways:

- They are generated automatically on initial WPS registration.
- They have been previously configured manually.
- The device has been delivered with preset security data.

All you need to do to establish a secure wireless connection is

- ◆ for devices with hardware button – to press the registration (or Scan) button on the access point and on the client or
- ◆ for devices without hardware button – to activate the WPS registration in the user interface of the access point and the client.

For further information, see "WPS" on page 16.

Registration:

You can register WPS compliant devices which offer a WPS PUSH button.

Press the Register button below in order to set your Gigaset device ready for registration.

Press the registration button on your WLAN device that you want to connect.

Repeat these steps for each WLAN client that you want to register.

Register

< Back      Next >

- ➔ Click **Register** to start WPS registration.

## Basic Setup Wizard

Once WPS registration is activated, the device searches for a WPS client within range. Any WPS client within range that activates the WPS function during the two-minute interval receives the Gigaset SX763 WLAN dsl security data (SSID and pre-shared key) and is thereby registered.

The registration progress is shown in the window.


You can repeat these steps for each WLAN client to be registered.

Only one client may register during the two-minute interval. If two clients try to register at the same time, the registration will be broken down and an error message appears.

➔ To go to the next step, click **Next >**

## Summary

The basic settings you have made through the wizard are shown in the next step for you to check.

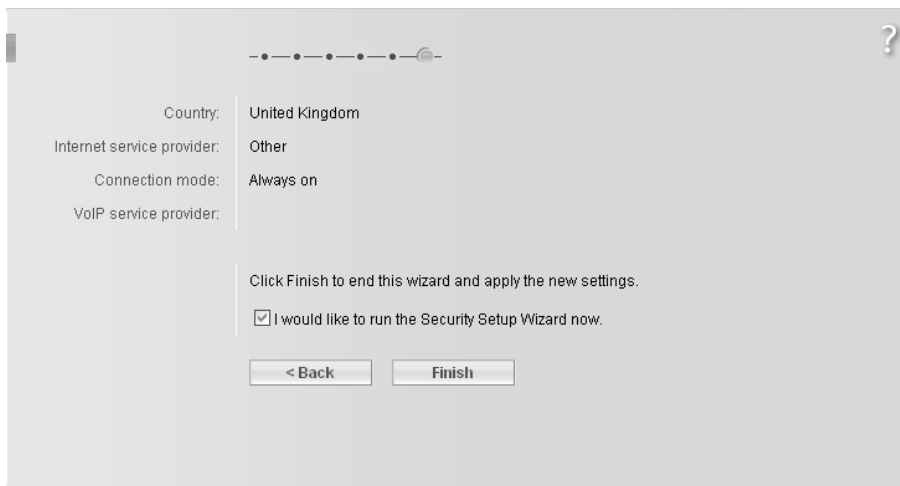The screenshot shows the 'Summary' screen of the Basic Setup Wizard. At the top, there is a progress bar with five dots, the last of which is filled, indicating the current step. A question mark icon is in the top right corner. The settings are listed on the left: 'Country: United Kingdom', 'Internet service provider: Other', 'Connection mode: Always on', and 'VoIP service provider:'. On the right, there is a text box with the instruction 'Click Finish to end this wizard and apply the new settings.' Below this is a checked checkbox with the text 'I would like to run the Security Setup Wizard now.' At the bottom, there are two buttons: '< Back' and 'Finish'.

➔ If you want to change the settings, click **< Back**.

➔ If you want to confirm the settings, click **Finish** to close the Basic Setup Wizard.

The Gigaset SX763 WLAN dsl is now configured and ready to connect to the Internet. The **Security Setup Wizard** then opens automatically. We strongly recommend using the Security Setup Wizard to protect your Gigaset SX763 WLAN dsl against attacks. If you want to carry this out at a later stage, deactivate **I would like to run the Security Setup Wizard now**.

# Security Setup Wizard

The **Security Setup Wizard** offers you additional settings for improving your network security. You can:

- ◆ Assign a password for configuring the Gigaset SX763 WLAN dsl (page 52),
- ◆ Change the SSID for your wireless network (page 53),
- ◆ Set up the [Encryption](#) for the wireless network (page 54),
- ◆ Limit access to the wireless network to certain PCs (page 59).

The user interface of the Gigaset SX763 WLAN dsl guides you step by step through the security configuration. Once you have completed a screen, click **Next >**. If you want to make any changes or check your entries again, click **< Back**.

## When using WPS please note the following:

Your Gigaset SX763 WLAN dsl is equipped with [WPS](#) (Wi-Fi Protected Setup). You can use it to set the security of your wireless network easily with one click only (see page 16).

If no manual configuration of security data has been performed before, with first successful WPS registration a SSID and a preset pre-shared key (WPA2-PSK/WPA-PSK) is created automatically.

You can inspect the SSID used in the **Security Setup Wizard** (see page 53) or in the **Advanced Settings** (see page 87), the pre-shared key you will find only it in the **Advanced Settings** menu (see page 93).

- ➔ Select the **Security Setup Wizard** option on the start screen or on the tab to start the security configuration if you did not make the security settings immediately after setting up the basic settings.



- ➔ Click **Next >**.

### Assigning a password

In the first step of the configuration you can change the password for the user interface. When the device is supplied, the configuration of your Gigaset SX763 WLAN dsl is protected with the **admin** password. To prevent unauthorised changes to the configuration, you should change the password at regular intervals.

Setup Wizard   Security Setup Wizard   Advanced Settings   Status   Log Off

— ● — ● — ● — ● — ● —

Please set a new password for your device in order to prevent unauthorized access to the configuration program.

Current password:

New password:

Confirm new password:

< Back   Next >   Cancel

- ➔ Enter the old password in the **Current password** field.
- ➔ Enter the new password in the **New password** field and repeat the entry in the **Confirm new password** field.

The password may contain up to 20 characters. Note case sensitivity. Avoid proper names and all too obvious words. Use a combination of letters, digits and special characters.

**Note:**

If you ever forget your password you will have to return the Gigaset SX763 WLAN dsl to its factory settings (page 132). Please bear in mind that this will restore **all** settings to the factory configuration. The password will again be **admin**.

- ➔ To go to the next step, click **Next >**

## SSID

For the wireless network components to be able to communicate with one another, you must use the same **SSID** (Service Set Identifier).

The default SSID for the Gigaset SX763 WLAN dsl is **ConnectionPoint**. For security reasons you should change this SSID and deactivate SSID broadcast. If this option is enabled, the Gigaset SX763 WLAN dsl will send the SSID in all data transfers and the SSID of the Gigaset SX763 WLAN dsl will be displayed on PCs that have a wireless network adapter. In this case, unauthorised persons could use the SSID to gain access to your network.

If you have performed a successful WPS registration before a manual configuration of security data, this page shows the generated SSID. Make a note of this SSID. You will need it to manually configure the wireless network adapters that do not support WPS.

➔ If you are using WPS registration, click on **Next >**.

➔ Enter a character string of your choice in the **SSID** field. The SSID is case-sensitive. It can contain up to 32 characters. Use a combination of letters, digits and special characters.

**Note:**

The connection to the wireless network adapters will be interrupted until the new SSID has also been entered.

➔ Deactivate **SSID broadcast** and make a note of the SSID. You will need for further wireless connections to the Gigaset SX763 WLAN dsl.


➔ Click **Next >**.

### Setting up security functions for the wireless network

In the next step you can set up the encryption and authentication methods for your wireless network.

Wireless networks are even more susceptible to eavesdropping than wired networks. With conventional network adapters, an intruder only needs a device with a WLAN adapter (e.g. a notebook or a PDA [Personal Digital Assistant]) with an appropriately configured network card in order to eavesdrop on every communication made via a nearby wireless LAN.

The Gigaset SX763 WLAN dsl makes use of effective encryption methods to prevent unauthorised eavesdropping as far as possible.

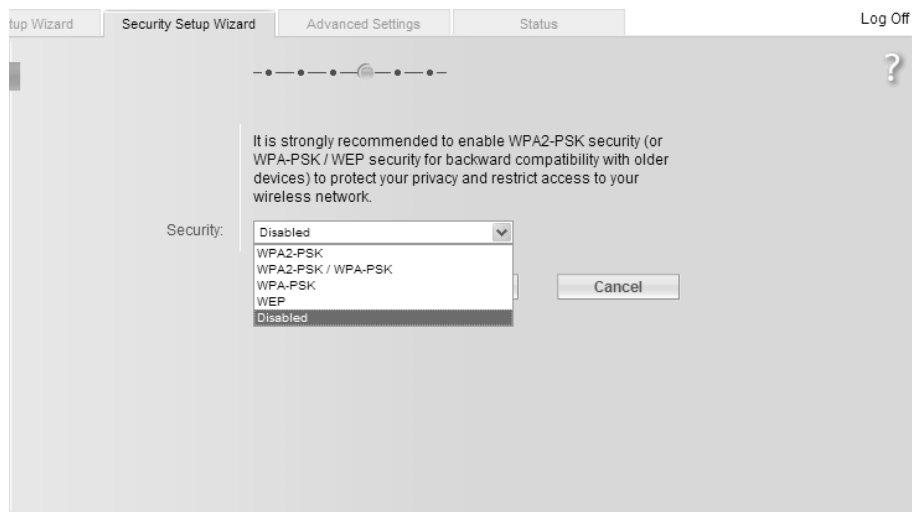

You can use the following security mechanisms:

- ◆ WPA2-PSK, WPA-PSK or WPA2-PSK/WPA-PSK (page 55)
- ◆ WEP encryption (Wired Equivalent Privacy, see page 57)

We recommend that you use WPA2-PSK if it is supported by all components in your wireless network.

You will find further options for setting up data encryption and authentication in the **Advanced Settings** menu (page 90).

## WPA2/WPA with pre-shared key (PSK)

---

**WPA** is a more advanced procedure than WEP for protecting wireless networks. Dynamic keys, based on TKIP (Temporal Key Integrity Protocol), offer increased security. The new standard WPA2 uses **AES** (Advanced Encryption Standard) for encryption.

**WPA-PSK** is a special WPA mode for private users and users in small companies without their own authentication server. After a certain period of time (**Rekey interval**), encryption keys are automatically generated with the pre-shared key, automatically changed ("rekeying") and authenticated between the devices.

**Note:**

Every PC (network adapter) that requires access to a WPA-protected wireless network must also support WPA. Information about this can be found in the operating manual for your network adapter.

If you have performed a successful WPS registration before a manual configuration of security data, this page shows the encryption settings. You can see this key unmasked in the Advanced Settings (see page 93) for manual configuration of network adapters without WPS function.

➔ If you use WPS-Registration click on **Next >**.

If you do not use WPS:

➔ Select **WPA2-PSK** if WPA2 is supported by all components in the wireless network.

If you have performed a successful WPS registration before a manual configuration of security data, this page shows the encryption settings. You can see this key unmasked in the Advanced Settings (see page 93) for manual configuration of network adapters without WPS function.

➔ If you use WPS Registration click on **Next >**.

## Security Setup Wizard

If you do not use WPS:

- ➔ Select **WPA-PSK** only if WPA is supported by all components in the wireless network.
- ➔ Select **WPA2-PSK / WPA-PSK** if only some components in the wireless network support WPA.

The screenshot shows the 'Security Setup Wizard' window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard' (selected), 'Advanced Settings', and 'Status'. A 'Log Off' link is in the top right corner. Below the tabs is a progress bar with five steps, the second of which is highlighted. A help icon (?) is in the top right of the main area. The main text reads: 'It is strongly recommended to enable WPA2-PSK security (or WPA-PSK / WEP security for backward compatibility with older devices) to protect your privacy and restrict access to your wireless network.' Below this, there are three fields: 'Security:' with a dropdown menu showing 'WPA-PSK', 'Pre-shared key:' with a masked input field (dots) and an 'Unmask' button, and 'Confirm pre-shared key:' with another masked input field. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

- ➔ Enter a key of your choice in the **Pre-shared key** field (min. 8 to max. 63 characters) and confirm it by repeating the entry. You must set up the same pre-shared key for all wirelessly connected PCs. Use a combination of letters, digits and special characters.
- ➔ By clicking the **Unmask** button, a message showing the pre-shared key is output in readable characters.
- ➔ To go to the next step, click **Next >**



## WEP encryption

WEP (Wired Equivalent Privacy) is an encryption for radio signals in wireless networks and meets the IEEE 802.11 standard.

If you transmit data wirelessly and not all components in your wireless network support the higher security standard WPA (page 55), we recommend that you activate [WEP Encryption](#).

WEP encryption and WPS registration cannot be used together in a wireless network.

You can choose either the standard 64-bit key or the more robust 128-bit key. The keys are generated in hexadecimal or in ASCII format. You must use the same keys for encryption and decryption for the Gigaset SX763 WLAN dsl and all your wireless network adapters.

up Wizard    **Security Setup Wizard**    Advanced Settings    Status    Log On

It is strongly recommended to enable WPA2-PSK security (or WPA-PSK / WEP security for backward compatibility with older devices) to protect your privacy and restrict access to your wireless network.

Security:

Key length:

Input type:

Key type:

Key:

Confirm key:

< Back    Next >    Cancel

- ➔ Select the **Key length**: 64 bits or 128 bits.
- ➔ Select the **Input type**, i.e. whether the key is to be entered manually or generated automatically by means of a **Passphrase**.

### Manual key entry

➔ Select the **Key type**, **Hex** or **ASCII**.

If you select **Hex** as the key type you can use the characters **0** to **9** and **A** to **F**.

- With a 64-bit encryption depth, the key is 10 characters long.
- With a 128-bit encryption depth, the key is 26 characters long.

If you select **ASCII** as the key type, you can use the characters **0** to **9**, **A** to **Z**, **a** to **z** plus the special characters in the ASCII character set.

- With a 64-bit encryption depth, the key is 5 characters long.
- With a 128-bit encryption depth, the key is 13 characters long.

➔ Confirm the key by entering it again in the **Confirm key** field.

### Generating a key by means of a Passphrase

➔ Enter a **Passphrase** (up to 32 characters) and confirm it by entering it again. The key is generated automatically.

#### Note:

- ◆ It is very **important** that you make a note of the key or passphrase. You will need this information to configure the wireless network adapters properly.
- ◆ You have to change the WEP encryption in the wireless network adapters for the connected PCs in the same way, otherwise they will not be given access to the Gigaset SX763 WLAN dsl wireless network.

➔ To go to the next step, click **Next >**

## Access control within the wireless network

In this step you can specify which PCs will have wireless access to the Gigaset SX763 WLAN dsl and hence to the LAN. Access control is based on the [MAC address](#) of the PC network adapters. You can enter the MAC addresses for the PCs manually or select these from the list of PCs that are currently logged in.

Log On

Setup Wizard   Security Setup Wizard   Advanced Settings   Status

— ● — ● — ● — ● — ● — ● — ● — ● — ● —

You can further restrict access to your wireless network by switching on the MAC address filter, allowing only registered clients to connect.

MAC address filter:   ☒ On   ☐ Off

Allowed clients:

MAC address	Device name
<input type="text"/> : <input type="text"/> : <input type="text"/> : <input type="text"/> : <input type="text"/> : <input type="text"/>	<input type="text"/>

Known wireless clients:

< Back   Next >   Cancel

Access control is disabled by default. This means that all PCs that use the correct SSID can be logged in.

- ➔ Next to the **MAC address filter**, select **On** to activate the MAC filter.

## Entering MAC addresses manually

- ➔ Enter the MAC address of the network adapter. You will find this address on the underside of the device.
- ➔ Enter the name of the PC.
- ➔ Click the **Add** button to add the entry to the list.

### Selecting from the list of logged-in PCs

- ➔ Select the required PC from the **Known wireless clients** list. All PCs that were already entered manually on the router with the MAC address are displayed.
- ➔ Click the **Add** button to add the selected PC to the list.

**Note:**

If you activate MAC access control, you must at least add the PC on which you are configuring the Gigaset SX763 WLAN dsl to the list. Otherwise, you will have no access to the user interface and will receive an appropriate error message.

WPS registration is only possible for PCs in the list if you have activated MAC access control.


If you have inadvertently denied all PCs access to the Gigaset SX763 WLAN dsl, you have two options:

- ◆ You can completely reset the Gigaset SX763 WLAN dsl (page 27).
- ◆ You can connect a PC to the Gigaset SX763 WLAN dsl using one of the LAN connections (by cable). As MAC access control only affects PCs that are connected wirelessly, you can use this PC to change the configuration.

➔ To go to the next step, click **Next >**

## Saving settings

On the next screen you end the wizard and save the settings. You will be informed of any security risks that still exist.

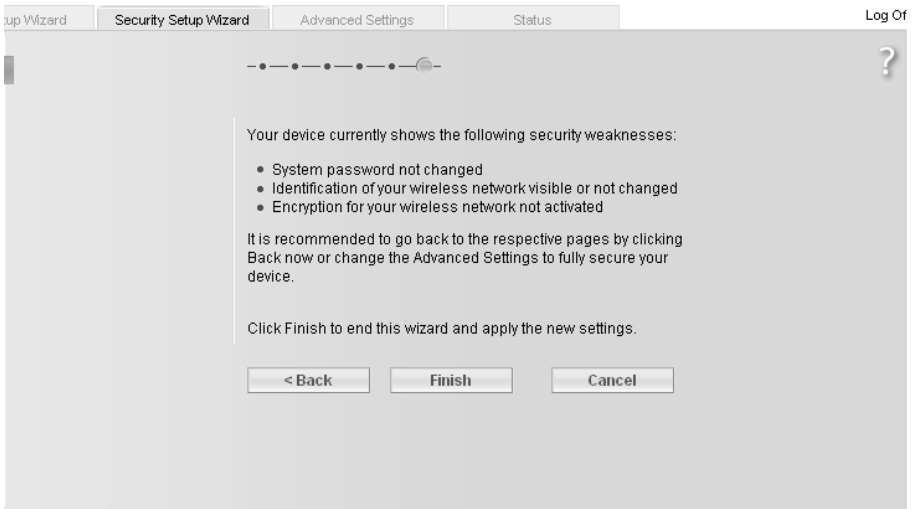

➔ Click **Finish** to end the wizard.

The settings will now be activated on the Gigaset SX763 WLAN dsl.

**Note:**

You must now configure the WEP or WPA key for the wireless network adapter of the PC that has been configured with other values. After this you can again wirelessly log on to the Gigaset SX763 WLAN dsl.

## Configuring Advanced Settings

In the **Advanced Settings** menu, you can configure all the options for the Gigaset SX763 WLAN dsl. If required, you can also change the settings you made using the wizard. The following table contains the options available in this menu.

Menu	Description
<b>Internet</b>	<p>This menu comprises all the setting options relating to the Internet. In particular, you can do the following:</p> <ul style="list-style-type: none"> <li>◆ Check and change the configuration for Internet access (page 66) or specify a preferred DNS server (page 70),</li> <li>◆ Configure the firewall, i.e. a number of security and special functions, for example access control from local PCs to the Internet (page 72),</li> <li>◆ Make the NAT settings required to provide your own services on the Internet (page 76),</li> <li>◆ Set up dynamic DNS for a fixed Internet address on the device (page 81),</li> <li>◆ Set up routing for your Internet connection services (page 83).</li> </ul>
<b>Local Network</b>	You can change the <a href="#">Private IP address</a> of the Gigaset SX763 WLAN dsl here and make settings on the DHCP server (page 85).
<b>Wireless Network</b>	You can configure the options for wireless communication (SSID and encryption) here and restrict access to the Gigaset SX763 WLAN dsl (page 87).
<b>Telephony</b>	You can make the settings for Internet telephony (VoIP) here and configure your extensions (page 101).
<b>USB</b>	You can make the settings here for operating an external data carrier, a Web server, a file server or a print server on the USB port (page 112).
<b>Administration</b>	<p>You can make or change various system settings here, for example change the password (page 127), set the time (page 126) or activate remote management (page 128).</p> <p>In addition, you can also back up the data on the Gigaset SX763 WLAN dsl or configure firmware update (page 131).</p>

## Internet

---

If you have configured the Gigaset SX763 WLAN dsl using the two wizards, you have also configured the [WAN](#) connection (Internet access). You can check or change these settings in the **Internet** menu.

This menu also offers you a wide range of possibilities for setting up security settings and limiting access to the Internet as well as for providing your own services on the Internet.

You can carry out the following via the **Internet** menu:

<b>Internet</b>	Activate/deactivate the Internet connection and edit the virtual connection parameters (for further information see below),
<b>Internet Connection</b>	Check and edit the Internet connection of the Gigaset SX763 WLAN dsl (for further information see below),
<b>DNS Servers</b>	Make DNS server settings (page 70),
<b>MAC Address</b>	Enter the PC's registered MAC address for Internet access (WAN interface, see page 71),
<b>Firewall</b>	Protect the network against unauthorised external access (see page 72),
<b>Address Translation (NAT)</b>	Provide your own services on the Internet (NAT, see page 76),
<b>Dynamic DNS</b>	Set up dynamic DNS (page 81),
<b>Routing</b>	Set up routing for your Internet connection services (page 83).

### Internet selection

You can activate or deactivate the Internet connection for the Gigaset SX763 WLAN dsl on this screen. You can choose the connection type and set up and edit a number of connection services.

➔ In the **Advanced Settings** menu, select: **Internet**

The screenshot shows the 'Internet' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. A 'Log Off' link is in the top right corner. The window title is 'Internet'. It contains the following elements:

- 'Internet:' section with radio buttons for 'On' (selected) and 'Off'.
- 'Connection type' section with a dropdown menu showing 'ADSL'.
- 'Configure multiple connection services:' section with radio buttons for 'On' (selected) and 'Off'.
- 'Connection services:' section with a table:

VPI / VCI	Comment	
1 / 32	My Connection Service 1	Delete
		Add
- 'OK' and 'Cancel' buttons at the bottom.

➔ Select the appropriate option to activate or deactivate the Internet function of the Gigaset SX763 WLAN dsl.

➔ Choose the desired **Connection type** for your Internet connection:

- Choose the **ADSL** if you are using the integrated ADSL modem of the Gigaset SX763 WLAN dsl.
- Choose **Ethernet** if you are setting up the connection to the Internet via an Ethernet network connection (e.g. if you are using an external modem with an Ethernet connection).

If you change the connection type, you must also modify your Internet access settings accordingly (page 66).

### Configure multiple connection services

Your Internet service provider can permit you to set up a number of **Connection services**. You can set up these services here. You can configure rules for using these services under the **Routing** option (page 83).

➔ Select the appropriate option to activate or deactivate **Configure multiple connection services**.

If you have already configured an Internet connection (e.g. in the Basic Setup Wizard), this is shown as **Connection service selected to edit**. This is then also displayed on other pages of the **Internet** menu.



### ➔ For an ADSL connection, make the following settings:

- Enter the values for **VPI / VCI** for each connection service that you have received from your Internet service provider.
- Enter a description to identify the respective connection service.
- Click **Add** to create a new entry.
- Click **Delete** to delete an entry.
- Click **OK** to save and apply the changes.

### ➔ For an Ethernet connection, make the following settings:

- Enter the values for **VLAN tag** for each connection service that you have received from your Internet service provider.
- Choose the desired **Priority** for each connection service in comparison with the other connection services.
- You can choose between 0 and 7 for the **Priority**, whereby 0 is the highest priority.
- Click **Add** to create a new entry.
- Click **Delete** to delete an entry.
- Click **OK** to save and apply the changes.

## Internet Connection

You can set up or change the configuration of your Internet connection on this screen. All the settings you make here must coincide with the features your Internet service provider makes available to you. False information can lead to problems with your Internet connection.

➔ If you want to configure or modify settings for the Internet connection, select from the **Advanced Settings** menu: **Internet – Internet Connection**

Setup Wizard

Security Setup Wizard

Advanced Settings

Status

Log Off

### Internet Connection

1/32 (My Connection Service 1)

Connection service selected to edit:

Service provider: Other

Protocol: PPPoE

User name:

Password:

Confirm password:

Access concentrator name:

MTU: 1492

Line mode: Automatic

Encapsulation: VC MUX

QoS class: UBR

VPI / VCI: 1 / 32

24h reconnection: ☐ On ☒ Off

Connection mode: Always on

PPPoE pass-through: ☐ On ☒ Off

UPnP: ☐ On ☒ Off

Test Settings

OK

Cancel

All settings apply for the displayed connection service that you selected for editing on the **Advanced Settings – Internet** (page 64) screen. If you only set up one connection service, no selection is displayed.

- ➔ Select your **Service provider**. Depending on the country you selected when making the basic settings (page 44), the selection menu contains various possible providers. If your provider is not listed, please use the **Other** option.
- ➔ Enter the data you have been given by your service provider: **Protocol, User name, Password**.

Only if you have selected **PPPoE** as the protocol and if you want to set up a number of connection services with this protocol:

- ➔ Enter the name of the connection given to you by your service provider in the **Access concentrator name** field.
- ➔ Apply the default settings for the parameters **IP address type, IP address, MTU, Line mode, Encapsulation, QoS class** and **VPI / VCI** unless your service provider has provided you with other data. The default settings also depend on your choice of country.

**Note:**

To configure the Internet connection successfully, you must enter the details given by your provider in all fields.

- ➔ If you have connected an external modem and chosen the connection type **Ethernet**, enter the values for **VLAN tag** for each connection type that you have received from your Internet service provider.  
The **Line mode, Encapsulation, QoS class** and **VPI / VCI** boxes are then deactivated.
- ➔ Your Internet service provider may disconnect and reconnect your Internet connection daily. In this case enable **24h reconnection** and choose the period of time in which the reconnection should be performed from the **Reconnection time** option menu.
- ➔ Specify how Internet sessions are to be established via **Connection mode**:
  - Select **Always on** if the connection is to exist at all times when the Gigaset SX763 WLAN dsl is turned on.

**Notes:**

- ◆ You must set up the **Always on** option if you wish to use Internet telephony. Otherwise you can only use fixed network telephony via the Gigaset SX763 WLAN dsl.
  - ◆ If you are on a time-based tariff, this option can result in high connection charges.
- Select **Connect on demand** if applications such as an Internet browser or an e-mail program are to connect to the Internet automatically.

## Configuring Advanced Settings

- In the **Idle time before disconnect** field, enter a period after which the Internet connection is to end automatically if no data is transmitted (the default setting is 3 minutes).

This time setting only applies to the **Connect on demand** and **Connect manually** options.

- Select **Connect manually** if you always want to establish and end the Internet connection manually. If you are on a time-based tariff this will save you high connection charges.

➔ You can show additional settings, depending on the selected service provider, by means of the **Show Additional Settings** button. You can also change the settings, if required. These settings are pre-set with appropriate default values. This button is not available for the **Other** selection since all available settings are displayed in this case.

➔ Click **Test Settings** to check the settings.

An attempt is made to set up an Internet connection. The result is shown in a separate window.

➔ Click the **Close** button, which is shown if the test was successful.

➔ Click **OK** to apply the settings.

If the following two functions are not displayed in the window, click the **Show Additional Settings** button.

### PPPoE pass-through

This option is only available if you have chosen another **Protocol** than PPPoE. If you activate the **PPPoE pass-through** function, a PC in the network can connect to the Internet via its own connection ID. The router puts this connection through.

➔ In the **Advanced Settings** menu, select: **Internet – Internet Connection**

➔ Select **On** to activate **PPPoE pass-through** and click **OK** to apply the settings.

### Using UPnP (Universal Plug and Play)

PCs with **UPnP** (Universal Plug & Play) can offer their own network services and automatically use services offered in the network.

#### Note:

The operating system Windows ME, Windows XP or Windows Vista must run on the PC. Check, if the UPnP function has been installed on the PCs operating system. Maybe you have to install the UPnP components retroactively. Please consult the operating instructions of your PC.

As soon as you have installed UPnP on a PC operating system and activated it on the router, applications on this PC (e.g. Microsoft Messenger) can communicate via the Internet without you needing to expressly authorise it. In this case, the router automatically implements port forwarding (**Port forwarding**, see page 79), thereby facilitating communication via the Internet.

The task bar on the PC on which UPnP is installed contains an icon for the Gigaset SX763 WLAN dsl. Click this icon to open the user interface. On Windows XP system, this icon is also shown under network connections.

- ➔ In the **Advanced Settings** menu, select: **Internet – Internet Connection**
- ➔ Click **UPnP**.

**Note:**

When the UPnP function is active, system applications can assign and use [Ports](#) on a PC. This poses a security risk.

- ➔ Click **OK** to apply the settings.

### DNS server

DNS is a decentralised service that assigns PC names or Internet addresses ([Domain names](#)) and IP addresses to one another. A DNS server has to administer this information for each server or each LAN with an Internet connection.

Your Internet service provider will usually provide you with a [DNS server](#) that makes this assignment when an Internet connection is set up. If necessary, you can define the DNS server such that it is used manually for the Internet connections.

➔ In the **Advanced Settings** menu, select: **Internet – Internet Connection – DNS Servers**

The screenshot shows a window titled "DNS Servers" with a question mark icon in the top right corner. At the top, there are four tabs: "Setup Wizard", "Security Setup Wizard", "Advanced Settings" (which is selected), and "Status". In the top right corner of the window, there is a "Log Off" link. The main content area is divided into two sections. The left section, titled "Connection service selected to edit:", shows "1/32 (My Connection Service 1)". Below this, the "Use custom DNS servers:" option is selected with a radio button, with "On" and "Off" radio buttons. The right section contains two rows of IP address input fields: "Preferred DNS server:" and "Alternate DNS server:". Each row has four input boxes separated by dots. At the bottom of the window, there are two buttons: "OK" and "Cancel".

All settings apply for the displayed connection service that you selected for editing on the **Advanced Settings – Internet** (page 64) screen. If you only set up one connection service, this information is not displayed.


- ➔ Activate the **Use custom DNS servers** function by selecting **On**.
- ➔ Enter the IP addresses for your preferred DNS servers (**Preferred DNS server** and **Alternate DNS server**).
- ➔ Click **OK** to apply the settings.

## MAC Address

If you already had Internet access through the same Internet service provider before connecting the Gigaset SX763 WLAN dsl, it is possible that the MAC address of one of your PCs was used for registration when the connection was being set up. In this case, you must either replace the current MAC address with the MAC address registered with the Internet service provider or ask your Internet service provider to register a MAC address for you.

Carry out the following steps:

- ➔ Connect a PC to the Gigaset SX763 WLAN dsl and open the configuration environment.
- ➔ In the **Advanced Settings** menu, select: **Internet – Internet Connection – MAC Address**

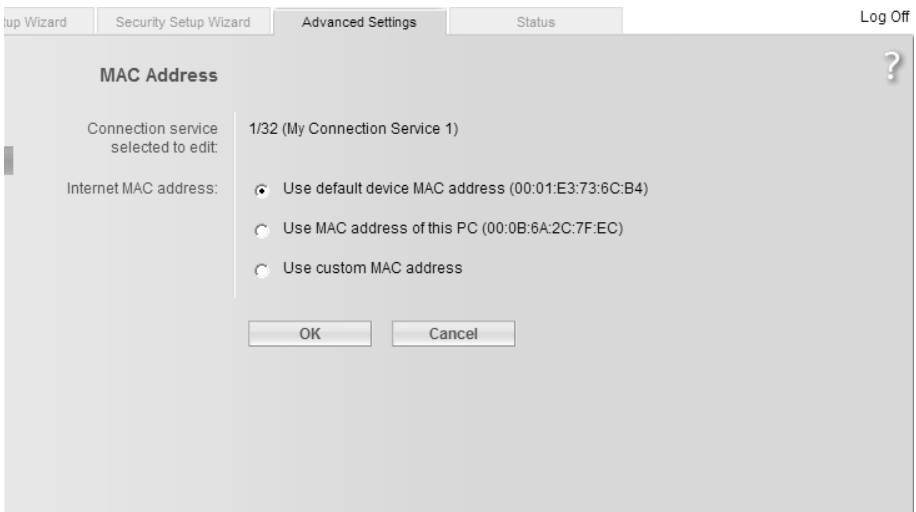

All settings apply for the displayed connection service that you selected for editing on the **Advanced Settings – Internet** (page 64) screen. If you only set up one connection service, this information is not displayed.

- ➔ Specify which MAC address is to be used for the Internet connection:
  - **Use default device MAC address:** You can leave this default setting if the MAC address of the Gigaset SX763 WLAN dsl is used for connecting to the Internet.
  - **Use MAC address of this PC:** Select this option if the MAC address of the currently connected PC has previously been registered for connecting to the Internet or if you have re-registered the MAC address of the PC on which you are currently working.
  - **Use custom MAC address:** Select this option if you have asked your Internet service provider to register a new MAC address and this is not the MAC address of the PC on which you are currently carrying out the configuration.
- ➔ Click **OK** to apply the settings.

### Firewall

---


The firewall functions of the Gigaset SX763 WLAN dsl include various security functions for the local network.

You can carry out the following:

- ◆ Protect the network against hacker attacks (for information see below),
- ◆ Block access by individual PCs to selected services (page 74).

The firewall functions for the Gigaset SX763 WLAN dsl are activated and configured in the factory. If you want to deactivate the firewall, carry out the following steps:

➔ In the **Advanced Settings** menu, select: **Internet – Firewall**

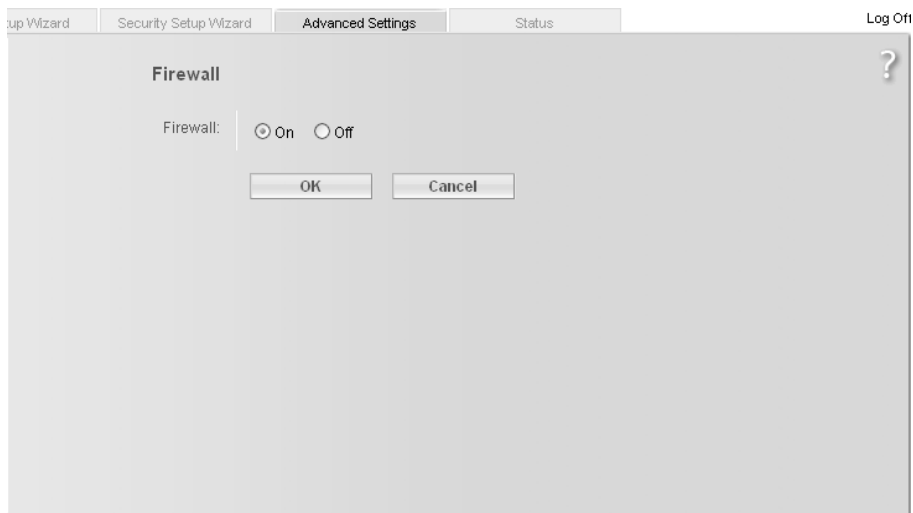

➔ Click the required option.

➔ Click **OK** to apply the settings.




## Attack Detection

If the firewall functions of the Gigaset SX763 WLAN dsl are activated, the device monitors and limits access to incoming data traffic via the DSL connection with a function called "Stateful Packet Inspection" (SPI). This allows the Gigaset SX763 WLAN dsl to detect and prevent certain types of attack from the Internet, such as Denial-of-Service (DoS). DoS attacks are aimed at devices and networks with Internet connections. The aim is not so much to steal data as to paralyse the computer or network to such an extent that the network resources are no longer available. A typical hacker attack involves, for example, a remote computer acting in place of the paralysed device and receiving the data intended for the device.

You can use the **Attack Detection** function to change the standard firewall settings.

➔ In the **Advanced Settings** menu, select: **Internet – Firewall – Attack Detection**

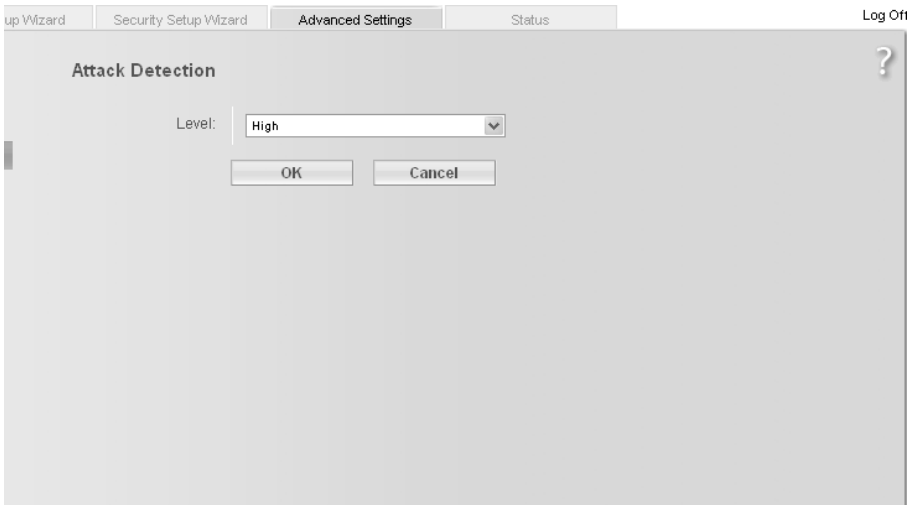

➔ Select the security level for the firewall:


- The **Medium** default level offers high security and hardly limits functionality of certain applications.
- The **High** level offers maximum security and may limit functionality for certain applications.
- The **Low** level offers maximum functionality but may provide low security.

➔ Click **OK** to apply the settings.

### Setting up access control to the Internet

The **Access Control** function allows you to block access to various services for one or more PCs. You can permit or block access to services at certain times.

➔ In the **Advanced Settings** menu, select: **Internet – Firewall – Access Control**

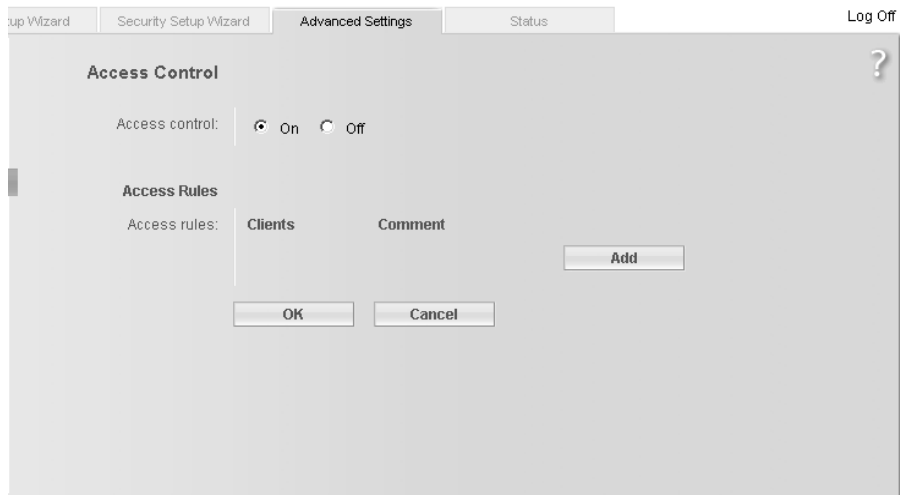

➔ Activate the **Access Control** function by selecting **On**.

You have the following setting options for **Access Control**:

#### Access Rules

You can limit access to the Internet for all clients, or only for certain clients in the network, thereby allowing or blocking access to services.

➔ Click **Add** to create an access rule.

The screenshot shows the 'Advanced Settings' window with the following configuration:

- Access rule type:** Apply to all clients
- Comment:** (empty)
- Access level:** Custom
- Filtering mode:** Allow services in list (block all others)
- Services:**

Protocol	Port	Comment
TCP		
- Predefined applications:** AIM (AOL instant messenger)

- ➔ Select the **Access rule type** from the list:
  - **Apply to all clients:** The rule applies to all PCs in the network.
  - **Specify IP address** or **Specify MAC address:** The rule applies to a PC you have selected via the IP address or MAC address.
- ➔ Enter a name for the **Comment** for the access rule.
- ➔ Define the **Access level**.  
You can choose **Deny access to the Internet** or **Allow web browsing**. If you select **Custom**, you can make the following settings:
- ➔ If you wish to create a **Service filter**, choose one of the following options.
  - In **Filtering mode**, specify whether the selected services are to be allowed or blocked.
  - Select the **Services** that are to be allowed or blocked.  
Select the **Protocol** and enter the appropriate **Port** (a single port number, several port numbers separated by commas, port blocks consisting of two port numbers separated by a dash, or any combination of these, for example **80, 90–140, 180**. The **Description** that is displayed helps you to identify different services.
  - You can also select services from the **Predefined applications** list.
  - Click **Add** to create a new entry with the entered data or for the selected, predefined application.
  - Click **Delete** to delete an entry.
- ➔ Click **OK** to apply the settings.

### Setting up the NAT function

---

The Gigaset SX763 WLAN dsl comes equipped with the NAT (Network Address Translation) function. With address mapping, several users in the local network can access the Internet via one or more public IP addresses. All the local IP addresses are assigned to the router's public IP address by default.

One of the characteristics of NAT is that data from the Internet is not allowed into the local network unless it has been explicitly requested by one of the PCs in the network. Most Internet applications can run behind the NAT firewall without any problems. For example, if you request Internet pages or send and receive e-mails, the request for data from the Internet comes from a PC in the local network, and so the router allows the data through. The router opens precisely **one** port for the application. A port in this context is an internal PC address, via which the data is exchanged between the Internet and a client on a PC in the local network. Communicating via a port is subject to the rules of a particular protocol (TCP or UDP).

If an external application tries to send a call to a PC in the local network, the router will block it. There is no open port via which the data could enter the local network.

Some applications, such as games on the Internet, require several links, i.e. several ports so that the players can communicate with each other. In addition, these applications must also be permitted to send requests from other users on the Internet to users in the local network. These applications cannot be run if Network Address Translation (NAT) has been activated.

Using port forwarding (the forwarding of requests to particular ports) the router is forced to send requests from the Internet for a certain service, for example a game, to the appropriate port(s) on the PC on which the game is running.

Port triggering is a special variant of port forwarding. Unlike port forwarding, the Gigaset SX763 WLAN dsl forwards the data from the port block to the PC which has previously sent data to the Internet via a certain port (trigger port). This means that approval for the data transfer is not tied to one specific PC in the network, rather to the port numbers of the required Internet service.

Where configuration is concerned, this means:

- ◆ You have to define a so-called trigger port for the application and also the protocol (TCP or UDP) that this port uses. You then assign the public ports that are to be opened for the application to this trigger port.
- ◆ The router checks all outgoing data for the port number and protocol. If it identifies a match of port and protocol for a defined trigger port, then it will open the assigned public ports and notes the IP address of the PC that sent the data. If data comes back from the Internet via one of these public ports, the router allows it through and directs it to the appropriate PC. A trigger event always comes from a PC within the local network. If a trigger port is addressed from outside, the router simply ignores it.

**Note:**

- ◆ An application that is configured for port triggering can only be run by one user in the local network at a time.
- ◆ As long as the public ports are open, they can be used by unauthorised persons to gain access to a PC in the local network.

When the Gigaset SX763 WLAN dsl is supplied, the **NAT** function (Network Address Translation) is activated, i.e. all IP addresses of PCs in the local network are converted to the router's public IP address when accessing the Internet.

You can use the NAT settings to configure the Gigaset SX763 WLAN dsl to carry out the following tasks:


- ◆ Set up port triggering for special applications (page 78),
- ◆ Set up the Gigaset SX763 WLAN dsl as a virtual server by configuring Port Forwarding (page 79),
- ◆ Open the firewall for a selected PC (page 80).

**Note:**

For the functions described below, the IP addresses of the PCs must remain unchanged. If the IP addresses of the PCs are assigned via the DHCP server of the Gigaset SX763 WLAN dsl, you must select **Never expires** (page 85) as the setting in the **Local Network** menu entry for the **Lease time** or assign static IP addresses for the PCs.

By default the NAT function is activated. You should only deactivate the NAT function if you want to configure you own firewall in you local network.

➔ In the **Advanced Settings** menu, select: **Internet – Address Translation (NAT)**

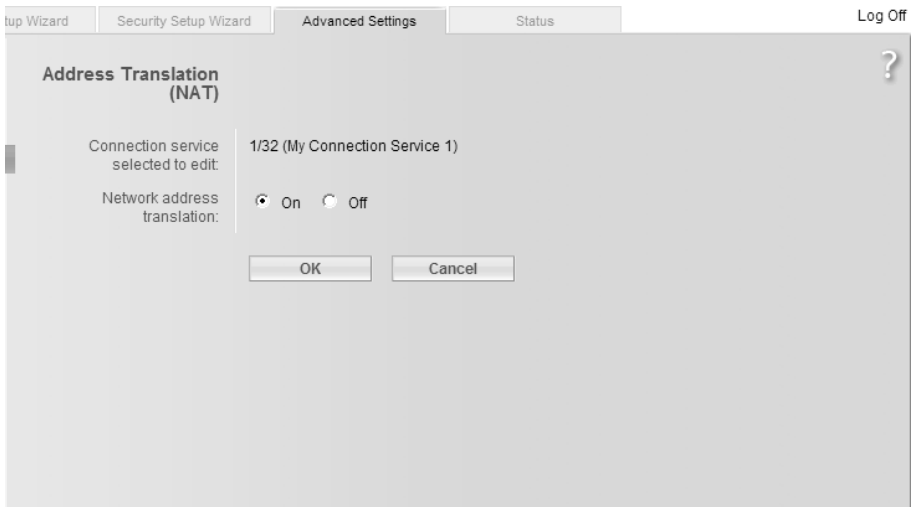

➔ Select the required option.

### Port Triggering

If you configure port triggering for a certain application, you must identify a trigger port and the protocol (TCP or UDP) this port uses. You can then assign the public ports that must be opened for the application and this trigger port.

You can select known Internet services for this purpose or assign ports or blocks of ports manually.

- ➔ In the **Advanced Settings** menu, select: **Internet – Address Translation (NAT) – Port Triggering**

The screenshot shows the 'Port Triggering' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. A 'Log Off' button is in the top right corner. The window title is 'Port Triggering'. Below the title, it says 'Connection service selected to edit: 1/32 (My\_Connection\_Service\_1)'. The main area contains a table with columns: 'Local protocol', 'Local port', 'Public protocol', 'Public port', 'Comment', and 'Enabled'. There are two rows of input fields. The first row has 'TCP' in the 'Local protocol' dropdown, an empty 'Local port' field, 'TCP' in the 'Public protocol' dropdown, an empty 'Public port' field, an empty 'Comment' field, and a checked 'Enabled' checkbox. To the right of this row is an 'Add' button. The second row is for 'Predefined applications', with a dropdown menu showing 'Battle.net', a checked 'Enabled' checkbox, and another 'Add' button. At the bottom are 'OK' and 'Cancel' buttons.

- ➔ Select the required application from the **Predefined applications** list.
- ➔ Click the **Add** button. The data for the required service is entered on the screen.
- ➔ Select the checkbox in the **Enabled** column.

If the application you require is not in the list, you must enter the relevant data on the screen manually:

- ➔ **Local protocol:** Select the protocol that is to be monitored for outgoing traffic.
- ➔ **Local port:** Enter the port that is to be monitored for outgoing traffic.
- ➔ **Public protocol:** Select the protocol that is to be allowed for incoming data traffic.
- ➔ **Public port:** Enter the port that is to be opened for incoming traffic.

You can enter a single port number, several individual port numbers separated by commas, port blocks consisting of two port numbers separated by a dash, or any combination of these, for example **80,90–140,180**.

- ➔ **Comment:** Enter a description to help you identify different entries.
- ➔ Select the checkbox in the **Enabled** column.

- ➔ Click the **Delete** button to delete an entry. Click the **Add** button to add a new entry.
- ➔ Apply the settings by clicking **OK**.

## Port Forwarding

If you configure Port Forwarding, the Gigaset SX763 WLAN dsl outwardly assumes the role of the server. It receives requests from remote users under its public IP address and automatically redirects them to local PCs. The private IP addresses of the servers on the local network remain protected.

Internet services are addressed via defined port numbers. The Gigaset SX763 WLAN dsl needs a mapping table of the port numbers to redirect the service requests to the servers that actually provide the service.

Port Forwarding has been configured for this purpose.

- ➔ In the **Advanced Settings** menu, select: **Internet – Address Translation (NAT) – Port Forwarding**

The screenshot shows the 'Port Forwarding' configuration window. At the top, there are tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. A 'Log Off' link is in the top right. The window title is 'Port Forwarding' with a help icon. Below the title, it says 'Connection service selected to edit: 1/32 (My Connection Service 1)'. The main area contains a table with the following columns: Protocol, Public port, Local port, Local IP address, Comment, and Enabled. There are two rows of input fields. The first row has 'TCP' selected in the Protocol dropdown, and the second row has 'FTP' selected in the 'Predefined applications:' dropdown. Each row has an 'Add' button to its right. At the bottom, there are 'OK' and 'Cancel' buttons.

Protocol	Public port	Local port	Local IP address	Comment	Enabled
TCP					<input checked="" type="checkbox"/>
Predefined applications: FTP				FTP	<input checked="" type="checkbox"/>

- ➔ Select the required application from the **Predefined applications** list.
- ➔ Activate **Enabled** by ticking the check box.
- ➔ Click the **Add** button. The data for the required service is entered on the screen.
- ➔ Click the **Delete** button to delete an entry.

If the application you require is not in the list, you must manually enter the relevant data on the screen:

- ➔ Select the protocol for the service you are providing from the **Protocol** list.
- ➔ Under **Public port**, enter the port number(s) of the service you are providing.

## Configuring Advanced Settings

You can use

- a single port number,
- several port numbers separated by commas,
- port blocks consisting of two port numbers separated by a dash, or
- any combination of these (for example **80, 90–140, 180**).

➔ In the **Local port** field, enter the internal port number to which service requests are to be forwarded.

You can only specify one port number here.

➔ Enter the IP address of the PC that provides the service in the **Local IP address** field.

Example: The Web server has been configured to react to requests on port 8080. However, the requests from web sites enter the Web server via port 80 (standard value). If you add the PC to the forwarding table and define port 80 as the public port and port 8080 as an internal port, all requests from the Internet are diverted to the service with the port number 80 on the Web server of the PC you have defined with port 8080.

➔ **Comment:** Enter a description that makes it easy to identify different entries.

➔ Activate **Enabled** by ticking the check box.

➔ Click the **Add** button to add a new entry.

➔ Click the **Delete** button to delete an entry.

➔ Click **OK** to apply the settings.

### Opening the firewall for a selected PC (Exposed Host)

---

You can set up a client in your local network to be a so-called "exposed host" (DMZ). Your device will then forward all incoming data traffic from the Internet to this client. You can then, for example, operate your own Web server on one of the clients in your local network and make it accessible to Internet users.

As the exposed host, the local client is directly visible to the Internet and therefore particularly vulnerable to attacks (e.g. hacker attacks). Only activate this function if it is absolutely necessary (e.g. to operate a Web server) and other functions (e.g. port forwarding) are not adequate. In this case you should take appropriate measures for the clients concerned.

#### **Note:**

Only one PC per public IP address can be set up as an Exposed Host (see also Port Forwarding on page 79).



- ➔ In the **Advanced Settings** menu, select: **Internet – Address Translation (NAT) – Exposed Host**

Setup Wizard | Security Setup Wizard | **Advanced Settings** | Status | Log Off

### Exposed Host ?

Connection service selected to edit: 1 / 32 (My Connection Service 1)

Local IP address:  .  .  .  .

Comment:

Enabled: ☐

- ➔ Enter the **Local IP address** of the PC that is to be enabled as an Exposed Host.
  - ➔ Enter a name for the PC in the **Comment** field.
  - ➔ Activate **Enabled** by ticking the check box.
  - ➔ Click the **Add** button to add the entry to the list.
- You can add more than one PC to the list, but you can only activate one of them.
- ➔ Click the **Delete** button to delete the entry from the list.
  - ➔ Apply the settings by clicking **OK**.

## Dynamic DNS

Any service you provide on the Internet can be accessed via a [Domain name](#). Your router's [Public IP address](#) is assigned to this domain name. If your Internet service provider assigns the IP address for your local network's WAN connection dynamically, the IP address of the router can change. The assignment to the domain name will no longer be valid and your service will no longer be available.

In this case you must ensure that the assignment of the IP address to the domain name is updated regularly. This task is performed by the dynamic DNS service ([DynDNS](#)). You can use the DynDNS service to assign the Gigaset SX763 WLAN dsl an individual fixed domain name on the Internet even if it does not have a static IP address.

Various Internet service providers offer a free DynDNS service.

If you use the service of a DynDNS provider, your service can be reached on the Internet as a subdomain of one of the DynDNS service domains.

## Configuring Advanced Settings

One possible service is **DynDNS.org** (<http://www.DynDNS.org>). If you have activated the device's DynDNS function, it will monitor its public IP address. When this changes, the device will open a connection to DynDNS.org and update its IP address there.

**Note:**

You must have an account with the service you have chosen (e.g. DynDNS.org) before you can use the DynDNS function. Follow the instructions on the provider's web site. Then enter the user data when configuring the router.

➔ In the **Advanced Settings** menu, select: **Internet – Dynamic DNS**

The screenshot shows a web interface with a top navigation bar containing tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is active), and 'Status'. A 'Log Off' link is located in the top right corner. The main content area is titled 'Dynamic DNS' and includes a help icon (question mark) in the top right. Below the title, it says 'Virtual connection selected to edit: 1 / 32 (My Connection Service 1)'. The configuration options are as follows:

- Dynamic DNS:** Two radio buttons, 'On' (selected) and 'Off'.
- Service provider:** A dropdown menu with 'DynDNS.org' selected.
- Domain name:** An empty text input field.
- User name:** An empty text input field.
- Password:** An empty text input field.

At the bottom of the form are two buttons: 'OK' and 'Cancel'.

- ➔ Activate the **Dynamic DNS** function.
- ➔ Select a service from the **Service provider** list.
- ➔ Enter **Domain name**, **User name** and **Password**. You will have received all the necessary information when you registered with your **Service provider**.
- ➔ Click **OK** to apply the settings.

## Routing

Your Internet service provider can permit you to set up a number of connection services. The entire data traffic between your local network and the Internet uses the first connection service (route) by default. After setting up various connection services (page 64), you can change this default route and set up additional routes by assigning data traffic to other connection services. Rules are provided to assist you, these define criteria for determining which data traffic is assigned to which connection service.

➔ In the **Advanced Settings** menu, select: **Internet – Routing**

The screenshot shows the 'Routing' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is active), and 'Status'. In the top right corner, there is a 'Log Off' link. The main area is titled 'Routing' and contains a help icon (?). Under 'Policy-based routing', there are two radio buttons: 'On' (selected) and 'Off'. Below this, 'Policy type' is set to 'Specify interface' in a dropdown menu. The 'Routes' section contains a table with two columns: 'Interface' and 'Connection service'. The first row has '(all other interfaces)' under Interface and '1 / 32 (My Connection Service)' under Connection service. The second row has 'Lan' under Interface and '1 / 32 (My Connection Service)' under Connection service. To the right of the table is an 'Add' button. At the bottom of the window are 'OK' and 'Cancel' buttons.

- ➔ Activate or deactivate **Policy-based routing** for your Internet connection.
- ➔ Choose the **Policy type**, i.e. how you would like to define the various routes for data traffic between your local network and the Internet:
  - Choose **Specify interface** to specify routes for clients in your local network depending on the port used for connecting to your device (e.g. LAN port or wireless network connection).
  - Choose **Specify IP address**, **Specify IP address range** or **Specify MAC address** to specify routes for clients depending on your IP address or MAC address. If you choose **Specify MAC address**, you can select PCs from the list of known clients.
- ➔ Click **Delete** to delete an entry.
- ➔ Click **Add** to create a new entry with the entered data or for the selected client.
- ➔ Click **OK** to save and apply the changes.
- ➔ Click **Cancel** to reject the changes.

## LAN configuration

You can use the LAN configuration to define an [IP address](#) for the Gigaset SX763 WLAN dsl and configure the DHCP server.

➔ In the **Advanced Settings** menu, select: **Local Network**

up Wizard

Security Setup Wizard

Advanced Settings

Status

Log Off

Local Network

?

IP address:

192 . 168 . 2 . 1

Subnet mask:

255 . 255 . 255 . 0

DHCP Server

DHCP server:

☒ On ☐ Off

Lease time:

30 minutes

First issued IP address:

192 . 168 . 2 . 17

Last issued IP address:

192 . 168 . 2 . 253

Default gateway:

192 . 168 . 2 . 1

Preferred DNS server:

. . . .

Alternate DNS server:

. . . .

Domain name:

dummy.porta.siemens.net

Clients:

MAC address

IP address

: : : : : 192 . 168 . 2 .

Add

OK

Cancel

### Defining the private IP address for the Gigaset SX763 WLAN dsl

On this screen you can change the device's **IP address**. The preset IP address is 192.168.2.1. This is the **Private IP address** of the Gigaset SX763 WLAN dsl. This is the address under which the device can be reached in the local network. It can be freely assigned from the block of available addresses. The IP address under which the Gigaset SX763 WLAN dsl can be reached from outside is assigned by the Internet service provider. The default **Subnet mask** for the local network administered by the Gigaset SX763 WLAN dsl is 255.255.255.0.

➔ If you want to assign a different IP address to the Gigaset SX763 WLAN dsl, enter your chosen IP address in the boxes next to **IP address**.

Please make sure to note which subnet mask is set when assigning the IP address. The preset subnet mask defines that the first three parts of the IP address must be identical for all network components (including routers).

We recommend that you use an address from a block that is reserved for private use. This address block is 192.168.1.1 to 192.168.255.254.

➔ Adjust the **Subnet mask** if necessary.

The **Subnet mask** specifies how many address parts of the IP address must be identical for all network components (including routers).

#### Notes:

New settings can only be made after the Gigaset SX763 WLAN dsl has been rebooted. If necessary, reconfigure the IP address on your PC (including one that is statically assigned) so that it matches the new configuration.

### Configuring the DHCP server

The Gigaset SX763 WLAN dsl has a **DHCP server** for which the factory setting is active. Consequently, the IP addresses of the PCs are automatically assigned by the Gigaset SX763 WLAN dsl.

#### Note:

- ◆ If the DHCP server for the Gigaset SX763 WLAN dsl is activated, you can configure the network setting on the PC so that the option **Obtain an IP address automatically** is set up. For further information, refer to the section entitled "Configuring the local area network" on the CD-ROM.
- ◆ If you deactivate the DHCP server, you will have to assign a static IP address for the PCs that use the network settings.

➔ To activate the DHCP server, select **On**.

➔ If the DHCP server is active, you can define a **Lease time**. The least time indicates how long the client may use the allocated IP configuration.

#### Note:

If you select **Never expires**, the IP addresses are never changed. Activate this option if you want to make NAT or firewall settings using the IP addresses of the PCs; otherwise you have to assign static IP addresses to these PCs.

## Configuring Advanced Settings

- ➔ Define the range of IP addresses the Gigaset SX763 WLAN dsl should use to automatically assign IP addresses to the PCs. Define the **First issued IP address** and the **Last issued IP address**.
- ➔ If you want to define a different **Default gateway** in your local area network instead of the Gigaset SX763 WLAN dsl, enter the IP address of this default gateways in the relevant boxes.

### Entering the DNS server

DNS is a decentralised service that assigns PC names or Internet addresses ([Domain names](#)) and IP addresses to one another. A DNS server must administer this information for each server or for each LAN with an Internet connection.

Your Internet service provider will usually provide you with a [DNS server](#) that makes this assignment when an Internet connection is set up. If necessary, you can manually define the DNS server to be used for the Internet connections.

- ➔ Enter the IP addresses for your preferred DNS servers (**Preferred DNS server** and **Alternate DNS server**).
- ➔ You can define the name of a domain (Windows workgroup) in the **Domain name** field.

### Assigning static IP addresses to individual PCs

---

Even if you have activated the DHCP server, you can still assign a static IP address to individual PCs (e.g. when setting up these PCs for NAT functions).

- ➔ Enter the **MAC address** of the PC to which you want to assign a static IP address.
- ➔ Enter the **IP address** you wish to assign to the PC.
- ➔ Click the **Add** button to add the entry to the list.
- ➔ Click the **Delete** button to delete the entry from the list.
- ➔ Apply the settings by clicking **OK**.

## Configuring wireless connections

If you have implemented wireless PC communication via the Gigaset SX763 WLAN dsl, you should improve the security of your wireless network via the **Advanced Settings – Wireless Network** menu. You can carry out the following functions:

<b>Wireless Network</b>	Activate the wireless module of the Gigaset SX763 WLAN dsl and specify basic settings for your wireless network, for example <b>SSID</b> , <b>Transmission mode</b> or <b>Sending power</b> .
<b>WPS Registration</b>	Start WPS registration and configure WPS (see page 90).
<b>Encryption &amp; Authentication</b>	Set up <a href="#">Encryption</a> for wireless transmissions (page 90).
<b>Allowed Clients</b>	Restrict access to the LAN of the Gigaset SX763 WLAN dsl (page 98).
<b>Repeater (WDS)</b>	Activate the repeater function (Wireless Distribution System, <a href="#">WDS</a> ) and define repeaters to increase the range of your WLAN (see page 99).

➔ In the **Advanced Settings** menu, select: **Wireless Network**

➔ Select **On** for the **Wireless Network** (default setting).

Devices can only log in wirelessly if the WLAN module of the Gigaset SX763 WLAN dsl is activated.

You can now make the settings for the wireless network.

## Configuring Advanced Settings

### Channel

This function is only shown in the window if the Super G transmission mode is deactivated (page 89).

All clients in the network use the set radio channel for wireless data transfer. You can choose between various channels, depending on your current location.

➔ Select **Automatic** so that the best channel for transmitting the data is used automatically.

### SSID

For the wireless network components to be able to communicate with one another, you must use the same **SSID** (Service Set Identifier).

The default SSID for the Gigaset SX763 WLAN dsl is **ConnectionPoint**. For security reasons you should change this SSID and deactivate SSID broadcast (for information see below).

#### Note:

If a WPS registration (see page 49) was performed before manual configuration, the generated SSID is displayed in this screen. You should not change this SSID here manually. Otherwise, the registered clients will no longer have access to your wireless network.

Enter a character string of your choice. The SSID is case-sensitive. It can contain up to 32 characters. Use a combination of letters, digits and special characters.

#### Note:

The connection to the wireless network adapters will be interrupted until you have entered the new SSID in them as well.

### SSID broadcast

If this option is enabled (default setting), the Gigaset SX763 WLAN dsl will send the SSID in all data transfers and the SSID of the Gigaset SX763 WLAN dsl will be displayed on PCs that have a wireless network adapter. In this case, hackers could use the SSID to detect your network.

If you deactivate **SSID broadcast**, the SSID of the Gigaset SX763 WLAN dsl will not be displayed. This increases protection against unauthorised access to your wireless network. Make a note of the SSID. You will need it to log on to the PC.

To protect your wireless network, you should also enable encryption of data transmissions (page 90).

➔ Select **Off** to deactivate **SSID broadcast**.



### Transmission mode

This function is only shown in the window if the Super G transmission mode is deactivated (page 89).

The IEEE 802.11g standard permits data transfer up to 54 Mbit/s, and the IEEE 802.11b standard up to 11 Mbit/s. Choose **IEEE 802.11g only** to ensure the best possible data transfer rates in your network. To operate clients with older wireless network adapters in your network, select **IEEE 802.11b/g (mixed)**.

➔ Select the required transmission mode for your wireless network.

### Sending power

➔ Select the required sending power for your device.

It is recommended that you select a sending power with a range to suit the spatial environment of your local network. A much greater range makes it easier to eavesdrop on your wireless data transfer.

### Super G (108 Mbit/s)

With the help of channel bundling, the [Super G](#) transmission mode enables wireless data transfer up to 108 Mbps. The channel for wireless data transfer cannot be changed. You can only use Super G if this function is supported by at least one client in your wireless network. For the best possible data transfer rates, all clients in your LAN should support Super G.

#### Please remember:

If you activate Super G as the transmission mode, but it is not supported by all components in your wireless network, then for technical reasons the transfer rate in the network may be significantly lower than the possible maximum of 108 Mbit/s.

➔ Select **Dynamic** to use **Super G (108 Mbit/s)** for your wireless network to increase the data transfer rate. **Dynamic** means that the router will accept participants which communicate via different transmission rates, and will adapt to the slowest client in the network.

In the default setting, **Super G (108 Mbit/s)** is activated.

➔ Click **OK** to apply the settings.

### Starting WPS registration and configuring WPS

---

Wi-Fi Protected Setup (WPS) makes it easier to establish a wireless network. Devices equipped with WPS can synchronise the SSID and the WPA key (pre-shared key).

The most simple method to establish a secure wireless connection is press the registration (Scan) button or click once in the user interface of the Gigaset SX763 WLAN dsl and do the same with the client. For further information, see "WPS" on page 16.

The configuration program of the Gigaset SX763 WLAN dsl provides beside the **Push Button** method for WPS registration for more security the registrations mode via PIN.

➔ In the **Advanced Settings** menu select: **Wireless Network – WPS Registration**

The screenshot shows a web-based configuration interface for a Gigaset SX763 WLAN dsl. At the top, there are four tabs: "Setup Wizard", "Security Setup Wizard", "Advanced Settings" (which is selected), and "Status". In the top right corner, there is a "Log Off" link. The main content area is titled "WPS Registration" and contains a help icon (a question mark) in the top right corner. Below the title, there is a "Registration Mode:" label followed by a dropdown menu currently showing "Enter partner device PIN". Below this, there is a "PIN:" label followed by an empty text input field. A paragraph of instructions reads: "Enter the PIN of the WLAN partner device and click OK to start the WPS registration." At the bottom of the form, there are two buttons: "OK" and "Cancel".

➔ Choose the desired **Registration Mode**:

– **Push Button**

Click **OK** to start the WPS registration.

Once WPS registration is activated, the device searches for a WPS client within range. Any WPS client within range that activates the WPS function during the two-minute interval receives the Gigaset SX763 WLAN dsl security data (SSID and pre-shared key) and is thereby registered.

The registration progress is shown in the window.

You can also follow the registration process via the LED display (see page 34).

If more than one client tries to register within the two minutes, an error message is displayed. You may retry the WPS registration after a short time.

If an external client succeeds in registering, the LED (see page 34) displays a successful WPS registration. The desired client in your network, however, has no connection to the Gigaset SX763 WLAN dsl and displays a registration failure. In this case you should change the pre-shared key (WPA2-PSK/WPA-PSK) as soon as possible and then perform WPS registration via PIN (see below).

– **Send own PIN**

An automatically generated PIN is shown.

If you want to create a new PIN, click **Generate PIN**.

Click **OK** to activate your settings.

Enter the generated PIN on all WLAN partner devices that are to establish a connection.

– **Enter partner device PIN**

You would use this option if you have created a PIN at the desired client. Enter the PIN of the WLAN partner device and click **OK** to activate your settings.

**Note:**

If you have activated access control via the MAC address filter, you have to include the clients in the MAC address list before registering via WPS (see page 98).

### Setting encryption

**Note:**


If you have already performed WPS registration, WPA2-PSK/WPA-PSK encryption is activated. The following description is only valid if you are not using WPS.

If you are sending data over radio channels, we recommend that you activate encryption ([WEP](#) or [WPA](#)) on the components in the wireless network. WPA offers greater security than WEP. You should therefore select WPA encryption if it is supported by all components in your wireless network.

[WPA](#) -PSK is a more efficient method than WEP for protecting wireless networks. Dynamic keys, based on TKIP (Temporal Key Integration Protocol) offer increased security. The new WPA2-PSK standard is based on AES.

WPA also supports the use of an authentication server.

➔ In the **Advanced Settings** menu select: **Wireless Network – Encryption & Authentication**

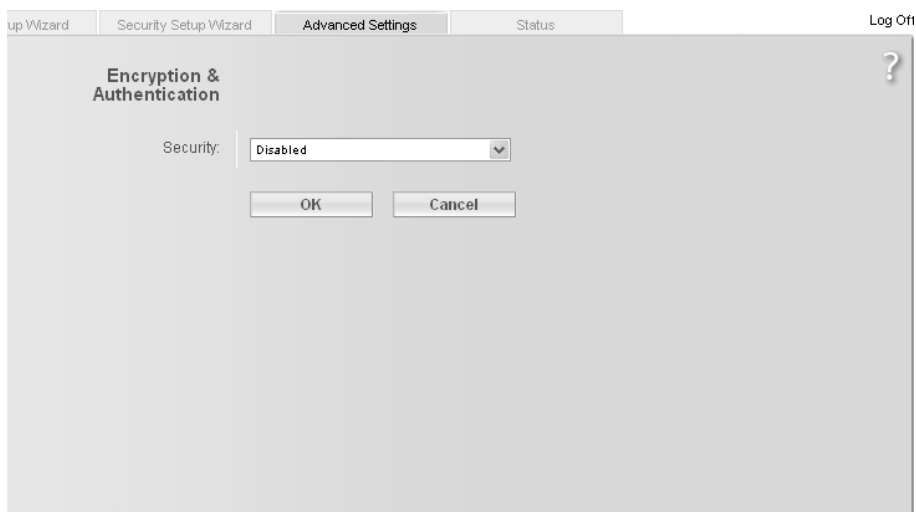

The following security mechanisms are currently available:

- ◆ WPA2-PSK, WPA-PSK and WPA2-PSK/WPA-PSK (page 93)
- ◆ WPA2 and WPA2/WPA with authentication server (page 94)
- ◆ WEP encryption (Wired Equivalent Privacy, see page 95)

**Note:**

If you want to use the repeater function of your Gigaset SX763 WLAN dsl (page 99) you can only use WEP encryption.

## WPA2-PSK and WPA2-PSK / WPA-PSK

### Note:

If you have already performed WPS registration (see page 16, page 49 or page 90), or if you performed manual encryption in the Security Setup Wizard you may display the generated pre-shared key on this screen. You can change the encryption here. In this case, you also have to configure all wireless network adapters manually or perform WPS registration once again.

### WPA with a pre-shared key (WPA-PSK)

**WPA-PSK** is a special WPA mode for private users and users in small companies without their own authentication server. After a certain period of time (**Rekey interval**), encryption keys are automatically generated with the pre-shared key, automatically changed ("rekeying") and authenticated between the devices.

The standard of encryption available to you depends on the components in the wireless network. Every PC (network adapter) that requires access to a WPA-protected wireless network must also support WPA. To find out whether and how you can use WPA on your PC, read your network adapter's user guide. If all components support WPA2, select **WPA2-PSK**. If you are using network adapters that only support WPA, select **WPA-PSK**. Select **WPA2-PSK / WPA-PSK** if both methods are used in your network. Your device then automatically defines the best possible way to protect your data for each client. The entries described below are identical for both options.

➔ Select the required option in the **Security** field.

The screenshot shows the 'Security Setup Wizard' with the 'Advanced Settings' tab selected. The 'Encryption & Authentication' section is active. The 'Security' dropdown menu is set to 'WPA2-PSK / WPA-PSK'. Below it, the 'Pre-shared key' and 'Confirm pre-shared key' fields are masked with dots. An 'Unmask' button is located to the right of the 'Pre-shared key' field. At the bottom, there are 'OK' and 'Cancel' buttons. The top navigation bar includes 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings', and 'Status'. A 'Log Off' link is in the top right corner. A question mark icon is also visible in the top right of the main content area.

## Configuring Advanced Settings

- ➔ Enter a key in the **Pre-shared key** field (up to 32 characters) and confirm it by entering it again. Use a combination of letters, digits and special characters.
- ➔ By clicking the **Unmask** button, a message showing the pre-shared key is output in readable characters.
- ➔ Apply the settings by clicking **OK**.

### WPA and WPA2 with authentication server

In large networks (e.g. in companies) WPA enables the use of an additional authentication service. In this case, user access is controlled by user accounts and passwords, in addition to WPA encryption. A RADIUS server acts as an authentication server. You can select the new **WPA2** standard if it is supported by all components in your wireless network. Select **WPA2 / WPA** if you are using devices that only support WPA.

- ➔ Select the required option in the **Security** field.

The screenshot shows the 'Security Setup Wizard' with the 'Advanced Settings' tab selected. The window title is 'Encryption & Authentication'. It contains the following fields and controls:

- Security:** A dropdown menu currently showing 'WPA2'.
- RADIUS server IP address:** Four input boxes for IP address segments, separated by dots.
- RADIUS server port:** An input box containing the value '1812'.
- RADIUS server secret key:** A long text input field.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.
- Log Out:** A link in the top right corner.
- Help:** A question mark icon in the top right corner.

- ➔ Enter the IP address of the RADIUS server in the **RADIUS server IP address** field.
- ➔ Enter the port of the RADIUS server in the **RADIUS server port** field.
- ➔ In the **RADIUS server secret key** field, enter a keyword that conforms to the conventions of the RADIUS servers that the server is to use for authentication.
- ➔ Click **OK** to apply the settings.

## WEP encryption


If WPA is not supported by all components in your wireless network, we recommend that you activate [WEP Encryption](#) on the components.

**Note:**

You cannot use WEP together with WPS.

➔ Choose the **WEP** option in the **Security** field.

up Wizard
Security Setup Wizard
**Advanced Settings**
Status
Log Of

**Encryption & Authentication**


Security: 
Authentication type: 
Key length: 
Input type: 
Key type: 
Key 1: 
Confirm key 1: 
Key 2: 
Confirm key 2: 
Key 3: 
Confirm key 3: 
Key 4: 
Confirm key 4: 
Default key: 

OK
Cancel

## Configuring Advanced Settings

### ➔ Select the **Authentication type**:

- Select **Shared** to require that each client log in to the network with a specified key.
- Select **Open** to permit data transfer within the wireless network without the need to enter a key.

You can choose either the standard 64-bit key or the more robust 128-bit key. The keys are generated in hexadecimal or in ASCII format. You must use the same keys for encryption and decryption for the Gigaset SX763 WLAN dsl and all your wireless network adapters.

### ➔ Select the **Key length**: 64 bits or 128 bits.

### ➔ Select the **Input type**, i.e. whether the key is to be entered manually or generated automatically by means of a **Passphrase**.

### Manual key entry

#### ➔ Select the **Key type**, **Hex** or **ASCII**.

If you select **Hex** as the key type you can use the characters **0** to **9** and **A** to **F**.

- With a 64-bit encryption depth, the key is 10 characters long.  
An example of a valid key: 1234567ABC
- With a 128-bit encryption depth, the key is 26 characters long.  
An example of a valid key: 234567ABC8912345DEF1234567

If you select **ASCII** as the key type, you can use the characters **0** to **9**, **A** to **Z**, **a** to **z** plus the special characters in the ASCII character set.

- With a 64-bit encryption depth, the key is 5 characters long.  
An example of a valid key: GIGA1
- With a 128-bit encryption depth, the key is 13 characters long.  
An example of a valid key: GIGASET\_SX76x

#### ➔ Enter up to four keys in fields **Key 1** to **Key 4** and confirm them by entering them again in fields **Confirm key 1** to **Confirm key 4**.

#### ➔ Select one of the four keys as the **Default key**.

#### Note:

- ◆ It is very **important** that you make a note of the key(s) that have been entered. You will need this information to configure the wireless network adapters properly.
- ◆ When you have concluded the configuration, you must change the WEP encryption in the wireless network adapters for the connected PCs in the same way as they will not otherwise be given access to the wireless network of the Gigaset SX763 WLAN dsl.

#### ➔ Click **OK** to apply the settings.



## Generating a key by means of a Passphrase

up Wizard   Security Setup Wizard   **Advanced Settings**   Status   Log Off

**Encryption & Authentication** ?

Security: WEP ▼

Authentication type: Open ▼

Key length: 64 bits ▼

Input type: Passphrase ▼

Passphrase:

Confirm passphrase:

OK   Cancel

- ➔ Enter a **Passphrase** (up to 32 characters) and confirm it by entering it again. The key is generated automatically.
- ➔ Click **OK** to apply the settings.

## Configuring Advanced Settings

### Permitted clients

On this screen you can specify the PCs that are to have wireless access to the Gigaset SX763 WLAN dsl and hence to your LAN and WLAN.

The default setting for access control is deactivated. This means that all PCs that use the correct **SSID** can be logged in.

Access control is based on the **MAC address** of the PC network adapters.

➔ In the **Advanced Settings** menu, select: **Wireless Network – Allowed Clients**

The screenshot shows the 'Allowed Clients' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is selected), and 'Status'. In the top right corner, there is a 'Log Off' link. The window title is 'Allowed Clients' with a help icon (?) on the right. Below the title, there is a 'MAC address filter:' section with two radio buttons: 'On' (selected) and 'Off'. Below this is the 'Allowed clients:' section. It contains a table with two columns: 'MAC address' and 'Device name'. The 'MAC address' column has a text input field with a placeholder showing six pairs of boxes separated by colons. The 'Device name' column has a text input field. To the right of the 'Device name' input is an 'Add' button. Below the table, there is a 'Known wireless clients:' section with a dropdown menu and an 'Add' button. At the bottom of the window are 'OK' and 'Cancel' buttons.

➔ Activate access control by selecting **On** in the **MAC address filter** field.

#### Entering PCs manually:

➔ Enter the **MAC address** and **Device name** of the required PCs in the appropriate fields.

➔ Click the **Add** button to add the entry to the list.

➔ Click the **Delete** button to delete the entry from the list.

**Note:** Only following deletion is the entry transferred to the list of known MAC addresses.

➔ Apply the settings by clicking **OK**.

#### Selecting from the list of logged-in PCs

➔ Select the required PC from the **Known wireless clients** list. All PCs that were already entered manually on the router with the MAC address are displayed.

➔ Click the **Add** button to add the selected PC to the list.

➔ Apply the settings by clicking **OK**.

**Note:**

If you activate MAC access control, you must at least add the PC on which you are configuring the Gigaset SX763 WLAN dsl to the list. Otherwise, you will have no access to the user interface and will receive an appropriate error message.

If you have inadvertently denied all PCs access to the Gigaset SX763 WLAN dsl, you have two options:

- ◆ You can completely reset the Gigaset SX763 WLAN dsl (page 27).
- ◆ You can connect a PC to the Gigaset SX763 WLAN dsl using one of the LAN connections. As MAC access control only affects PCs that are connected wirelessly, you can use this PC to change the configuration.

### Repeater function (WDS)

---

WDS (Wireless Distribution System) allows you to extend the range of your wireless network using a repeater. A repeater located at the outer range of a wireless network ensures that data is forwarded between WLAN clients in this wireless network and clients within its own wireless range. Repeaters and access points thereby form a common wireless network within which all clients can be moved about freely. Clients automatically set up a connection to the next access point / repeater (roaming). For security purposes you must determine which access points / repeaters are to form a common wireless network.

If you want to use a repeater in your wireless network you must activate the Wireless Distribution System (WDS) function.

**Note:**

WDS can only be used with WEP encryption or without encryption. If you use WPA-PSK encryption (default) you have to change the encryption of your wireless network. For information refer to the section "Setting encryption" on page 92.

➔ In the **Advanced Settings** menu, select: **Wireless Network – Repeater (WDS)**

➔ To activate WDS select the **On** option next to **Wireless distribution system**.

The environment is scanned for wireless networks in range. If the search has been completed successfully the networks are displayed.

# Configuring Advanced Settings

up Wizard

Security Setup Wizard

Advanced Settings

Status

Log Off

Repeater (WDS)

?

Wireless distribution system:

☒ On ☐ Off

Accessible WLAN stations

Nr	SSID	MAC Address	Channel	Type	Active
1		00:1A:4F:02:D9:5C	6	11g	<input checked="" type="checkbox"/>
2		00:13:49:9A:C0:0C	6	11g	<input type="checkbox"/>

Refresh

OKCancel

All repeaters/access points in range are displayed with the following information:

- **SSID**
- **MAC address**
- **Channel**
- **Type** (11b or 11g)

The **Signal strength** of the connection to the repeater, if one exists, is shown as a percentage. You can use this data to determine the best possible location for your repeater.

You can register a maximum of three repeaters to extend your WLAN.

➔ Select the **Active** check box to register a repeater to your wireless network.

## Note:

The registered but currently unavailable repeaters are presented only by their MAC addresses.

➔ Click **Refresh** to update the display.

➔ Click **OK** to apply the settings.

## Note:

- ◆ WDS can only be used with WEP encryption or without encryption. You may have to change the encryption of your wireless network, if applicable.
- ◆ The encryption settings on the repeater have to correspond to the settings on your Gigaset SX763 WLAN dsl.
- ◆ The Gigaset SX763 WLAN dsl and the repeaters must use the same channel.

Further information can be found in the user manual for the repeater.

## Setting up Internet telephony (VoIP)

---

The Gigaset SX763 WLAN dsl allows you to make telephone calls via the Internet using an analogue telephone and also via the fixed network as usual. For Internet telephony (VoIP), you require access authorisation from your service provider and the relevant access data. To make calls, you have to enter this data along with other configuration settings under Advanced Settings in the **Telephony - VoIP** menu.

You can connect a base station for handsets or fax machines to the two telephone ports of the Gigaset SX763 WLAN dsl analogue phone. In addition, you can set up additional extensions for Internet and fixed network calls using [SIP clients](#) (as WLAN handsets or in wired or wireless mode on PCs).

**The menu comprises the following functions:**

<b>VoIP</b>	Enter the basic data from your service provider here (page 102).
<b>Extensions</b>	Set up the functions for internal extensions here (page 105).
<b>Dialing Plans</b>	Specify numbers here that are to be dialled only via the fixed network or only via the Internet. You can also enter a call-by-call provider for the fixed network (page 109).  Define an area code (page 109).
<b>Quick Dial</b>	Specify speed dial numbers or names here for phone numbers you use frequently (see page 111)

**Note:**

If you do not specify any of your own dialling plans, then the default settings will be used as entered in the **Telephony** menu under **Dialing Plans**. Emergency numbers are directed via the fixed network, while all other calls are made via the Internet.

**Important information:**

- ◆ You cannot make calls if there is a power failure, **even the emergency numbers are not accessible then.**
- ◆ If VoIP is not set up, you will always make calls via the fixed network. The dialling plans will not apply in this case (page 109).
- ◆ Check these dialling plans (page 109) and change them if you have agreed special phone tariffs with another provider.
- ◆ Do not change the default setting for the Internet connection mode (= "permanent connection") if you are using VoIP (page 45). You can only be called via VoIP if this setting is used. Remember, though, that this setting can result in high connection costs if you have agreed a time-based tariff with your Internet service provider.

### VoIP settings

You will receive the access and configuration data for Internet telephony from your service provider.

➔ In the **Advanced Settings** menu, select: **Telephony – VoIP**

The screenshot shows the 'VoIP' settings window. At the top, there are tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is selected), and 'Status'. A 'Log Off' button is in the top right corner. The window is titled 'VoIP' and has a help icon (?) in the top right. The settings are organized into sections: 'VoIP' with a radio button for 'On' (selected) and 'Off'; 'Connection service' with a dropdown menu set to 'None'; 'VoIP accounts' with a table of accounts and buttons for 'Edit', 'Delete', and 'Add'; and 'Voice Quality' with settings for 'Maximum upstream bandwidth' (Automatic), 'Voice activity detection' (On), 'Echo canceller delay' (16 msec), and 'Fixed gain control (input/output)' (0 / 0). At the bottom are 'OK' and 'Cancel' buttons.

Access Code	User name	SIP domain	
*01	1234567890	sip-gmx.net	<button>Edit</button> <button>Delete</button>
			<button>Add</button>

- ➔ Select **On** if you wish to use Internet telephony (default setting).
- ➔ If you have defined more than one **Connection service** (see page 64), choose from the list the **Connection service**, for which you want configure a VoIP account.
- ➔ If you have already configured Internet telephony in the **Basic Setup Wizard**, your VoIP account will be shown with **User name** and **SIP domain** in addition to **VoIP accounts**. If you want to change a previously configured VoIP account, click **Edit** (page 104).

- ➔ If you want to configure additional **VoIP accounts**, click **Add** (page 104).

If you have configured VoIP settings in the Basic Setup Wizard the data for your VoIP account is shown in this line. You can edit this data or add new data for additional accounts.

- ➔ You can generally accept the default settings for **Voice Quality**:

- **Maximum upstream bandwidth**: The upstream transmission rate (upstream bandwidth) varies depending on the provider and DSL tariff and is normally much lower than the transmission rate for downstream data traffic. If there is upstream data traffic at the same time over the DSL line, the voice quality may not be optimum. To ensure optimum voice quality, you can use this option to define the bandwidth, which is to be used as a maximum for your VoIP connection. The upstream bandwidth is set automatically by default.

To define a fixed upstream bandwidth choose **Fixed** from the **Maximum upstream bandwidth** option menu and enter the desired value.

The default value is 1000 kbit/s and should suffice under normal circumstances.

You can change these values if necessary, but you have to find out first how high your upstream transmission rate is. Most providers supply tools for administering your DSL connection, which should tell you this information. Otherwise, you will find plenty of Web sites on the Internet that provide such tools.

Enter a value for **Maximum upstream bandwidth**, which is 90 percent of your available bandwidth.

- **Voice activity detection**: If this function is activated, no data will be transmitted during breaks in speech during a telephone call.
- **Echo canceller delay**: If you hear your own voice as an echo during VoIP telephone calls, you should choose a different value from the list.
- **Fixed gain control (input/output)**: To adjust the volume for call input (hear) or output (speak), simply enter a different value.

The value range is -24 to +24.

The higher the value, the higher the volume.

-24	quiet
0	normal
24	loud

The real value range which can be used depends on your device. If you enter a wrong value, a message with the valid value range will be displayed.

## Setting up or modifying a VoIP account

Setup Wizard

Security Setup Wizard

Advanced Settings

Status

Log Off

VoIP

?

VoIP account:

☒ On ☐ Off

Service provider:

Other

User name:

Displayed name:

Authorization user name:

Password:

Confirm password:

SIP domain:

SIP realm:

SIP listen port:

5060

Proxy server address:

Proxy server port:

5060

Registrar server address:

Registrar server port:

5060

Voice codecs:

Selected codecs

G.729a (\*)

G.729 (\*)

G.723.1-6300 (\*)

G.726-32000 (\*)

G.726-40000 (\*)

G.711ALaw (\*)

G.711MuLaw (\*)

< Add

Remove >

Up

Down

Available codecs

G.726-16000 (\*)

G.726-24000 (\*)

G.729a (\*)

G.728

G.723.1-5300 (\*)

G.722

G.722.1

Out-of-band DTMF:

☒ Off ☐ RFC2833 ☐ SIP-Info

Clear

OK

Cancel

➔ To set up a new account, select **On**.

➔ In the **Service provider** menu, select the **Other** option or otherwise select one of the preconfigured providers.



- ➔ Enter the data you have received from your service provider:
  - If you choose a preconfigured service provider, the only options are generally **User name** and **Password**.
  - If you wish to add or modify data, click the **Show Additional Settings** button.
  - If you have selected the **Other** option, enter the data for **Displayed name**, **Authorization user name**, **SIP domain**, **SIP realm**, **Proxy server address** and **Registrar server address**.
- ➔ Leave the default settings for the parameters **SIP listen port**, **Proxy server port**, **Registrar server port**, **Voice codecs** and **Out-of-band DTMF** unless your service provider has provided you with other data.
- ➔ Click the **OK** button to apply the settings.

### Extensions

---

Your Gigaset SX763 WLAN dsl allows you to configure up to six internal extensions that you can use for making calls via the fixed network or via VoIP. Two of these extensions are connected to your Gigaset SX763 WLAN dsl via the Phone 1 and Phone 2 ports, while the remaining extensions are connections for SIP clients. You can assign each extension the relevant line (fixed network or VoIP account) for incoming and outgoing calls and make other settings for each extension (e.g. call waiting, call forwarding, caller display).

The process for configuring extensions, which use the two telephone ports of the Gigaset SX763 WLAN dsl, is somewhat different to that for the SIP extensions. The latter must be VoIP telephones, which are connected in wired or wireless mode to the Gigaset SX763 WLAN dsl, or PCs with a SIP client, which are connected to the Gigaset SX763 WLAN dsl.

# Configuring Advanced Settings

➔ In the **Advanced Settings** menu, select: **Telephony – Extensions**

Setup Wizard

Security Setup Wizard

Advanced Settings

Status

Log Off

Extensions

Phone connectors:

Connector	Extension number	User name	Phone number	
Phone 1	*1	Phone 1	Fixed line	<div>Edit</div>
Phone 2	*2	Phone 2	Fixed line	<div>Edit</div>

SIP Proxy Server

IP address: 192.168.2.1

Port: 

5060

SIP client accounts:

User name	Extension number	Phone number		
	*3	Fixed line	<div>Edit</div>	<div>Delete</div>
	*4	Fixed line	<div>Edit</div>	<div>Delete</div>
	*5	Fixed line	<div>Edit</div>	<div>Delete</div>
	*6	Fixed line	<div>Edit</div>	<div>Delete</div>

OK

Cancel

## Phone connectors

The two telephone ports Phone 1 and Phone 2 of the Gigaset SX763 WLAN dsl have the internal phone number **\*1** or **\*2**.

➔ Click **Edit** to adapt the settings for an entry (page 107).

## SIP Proxy Server

In addition to the telephones connected to your Gigaset SX763 WLAN dsl, you can configure wireless VoIP phones (WLAN handsets) or PCs with SIP clients in your local network with the assistance of the [SIP proxy servers](#) integrated as internal extensions in your device and then use these to make calls via the fixed network or via VoIP.

Use the IP address displayed in your local network for registering your wireless VoIP phones or your other SIP clients with your SIP proxy server.

Use the IP address displayed in your local network for registering your VoIP phones or your other SIP clients with your SIP proxy server.

## Port

The default port via which wireless VoIP phones or other SIP clients register with the SIP proxy server is entered here.

## SIP client accounts

- ➔ Make the extension settings for each SIP user account, which is used for registering wireless VoIP phones and other SIP clients with the SIP proxy server of your device. The **User name** and **Extension number** are displayed for identifying the individual telephone ports. These extensions have the internal phone numbers **\*3** to **\*6**.
- ➔ Click **Edit** to adjust the settings for an entry (see below).
- ➔ Click **Delete** to delete an entry.

## Configuring extensions

The screenshot shows the 'Extensions' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. In the top right corner, there is a 'Log Off' button and a help icon (?). The main area is titled 'Extensions'. It contains the following fields and options:

- Extension:** Phone 1
- Extension number:** \*1
- User name:** Phone 1
- Phone number:** Fixed line (dropdown menu) (Incoming/outgoing)
- Receive calls for all numbers:** ☒ On ☐ Off
- Divert calls:** Disabled (dropdown menu)
- Call waiting:** ☒ On ☐ Off
- Call pickup:** ☒ On ☐ Off
- Hide own number for outgoing calls (CLIR):** ☐ On ☒ Off

At the bottom, there are 'OK' and 'Cancel' buttons.

The Extension shows either the selected port of the Gigaset SX763 WLAN dsl (Phone 1 or Phone 2) or the SIP client. The **Extension number** for the extension is preset and is displayed as a call number.

- ➔ Enter a name for identifying the port in the **User name** field. You can also leave the default setting for Phone 1 and Phone 2.
- ➔ Select the **Phone number** from the list (your VoIP service provider or one of your VoIP service providers) for this extension or choose the entry **Fixed line**.

The list of numbers for Internet telephony is the one you set up in the **VoIP** menu (page 102). All outgoing calls are directed by default via this phone number. Incoming calls for the selected phone number are signalled.

- ➔ Select **Receive calls for all numbers** if you wish to receive all incoming calls on all extensions.

## Configuring Advanced Settings

- ➔ You can configure **Divert calls** with the following options for the Phone 1 and Phone 2 ports:
  - **Divert always:** Each call for the extension is forwarded to the extension selected in the **Divert calls to** field.
  - **When busy:** A call for the extension is forwarded to the selected extension if the extension is busy.
  - **No reply:** A call for the extension is forwarded to the selected extension if the call is not answered.
- ➔ Select the **Call waiting** option if you want to permit a signal for an incoming call while you are on a call. (Only for Phone 1 and Phone 2 ports).
- ➔ Select the **Call pickup** option to have the option to accept all incoming calls on this extension.
- ➔ Select **Hide own number for outgoing calls (CLIR)** if you want to prevent the number of this extension being displayed for outgoing calls. (Only for Phone 1 and Phone 2 ports).

**Note:**

Many service providers either do not support this function at all or only unreliably. Contact your service provider if you want to be certain that CLIR, for example, is actually supported.

- ➔ Click **OK** to apply the settings.

## Dialing Plans

On this screen you can:

- ◆ Enter your area code,
- ◆ Define for Internet telephony whether the area code should be automatically dialled,
- ◆ Specify whether certain phone numbers or prefixes are to be dialled via the Internet or the fixed network,
- ◆ Enter a call-by-call provider for the fixed network.

➔ In the **Advanced Settings** menu, select: **Telephony – Dialing Plans**

### ➔ Area code

Enter the **Area code** for your current location.

### ➔ Predial area code for local calls through VoIP

If you activate this function, the area code will be dialled automatically when you make a local call via a VoIP provider. This will save you having to enter the area code which was previously always necessary with VoIP.

### ➔ Wait for dial tone on fixed line

Only activate this function if it is necessary for the smooth functioning of your Gigaset SX763 WLAN dsl within the telephone network.

➔ If you wish to make all fixed network calls via a call-by-call provider, activate the **Preselection** function.

➔ Enter the provider's number in the **Preselection number** field.

## Configuring Advanced Settings

- ➔ Choose whether you want to use **Dialing Plans**.
- ➔ In the **Phone number** field, enter an individual number or also the first digits of phone numbers (e. g. 0800 or a specific area code) for which the dialling plan is to apply.
- ➔ In the **Connection type** selection field, you can specify the whether the entered number is always to be called via the fixed network or the selected VoIP account.
- ➔ You can enter a description for the dialling plan in the **Comment** field.
- ➔ Click **Delete** to delete the dialling plan. You can add a new dialling plan by clicking the **Add** button.

You can define up to a maximum of 20 dialling plans.

- ➔ Click **OK** to apply the settings.

### Notes:

- ◆ Dialling plans may already be predefined for certain emergency phone numbers depending on the country. These can be changed as required.
- ◆ If you do not specify any dialling plans, the default settings will be used.
- ◆ If VoIP (Internet telephony) is not set up, you will always make calls via the fixed network. The dialling plans will not apply in this case.

## Quick dial

Quick dial numbers or names enable you to dial frequently used phone numbers quickly and easily.

The quick dial number is a two-digit number (01 to 20). A vanity number is a combination of letters you can enter instead of a phone number. You can specify a quick dial number and/or a vanity number for a phone number.

Activate quick dial numbers with the keys \*7 quick dial number #, and vanity numbers with the key combination \*8 Vanity #.

➔ In the **Advanced Settings** menu, select: **Telephony – Quick Dial**

The screenshot shows the 'Quick Dial' configuration window within the 'Advanced Settings' menu. The window has a title bar with tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings', and 'Status', and a 'Log Off' button on the right. The 'Quick Dial' section contains a 'Quick dial:' label with 'On' (selected) and 'Off' radio buttons. Below this are three input fields: 'Quick dial' (containing '\*7'), 'Vanity' (containing '#'), and 'Phone number / user name' (containing '\*8' followed by a text box). An 'Add' button is to the right of the 'Phone number / user name' field. At the bottom are 'OK' and 'Cancel' buttons. A help icon (?) is in the top right corner.

- ➔ Click **On** to activate the **Quick Dial** option.
- ➔ Enter the quick dial number in the **Quick Dial** field and/or a name or combination of letters in the **Vanity** field.
- ➔ Enter the phone number in the **Phone number / user name** field.
- ➔ Click **Add** to save the entry.  
More empty lines will then be added.
- ➔ Click **OK** to confirm the settings.

### USB

The USB port of your Gigaset SX763 WLAN dsl can be used to set up a

**File Server** to share a USB mass storage device (page 113)

**Print Server** to share a printer (page 119)

**Web Server** to provide a Web server (page 119)

#### Notes:

- ◆ If you connect a USB hub to the USB port of the Gigaset SX763 WLAN dsl, you can connect and use a USB memory and a USB printer at the same time.
- ◆ If connecting a device without its own power supply directly to the USB port, please note that the power consumption must not exceed 500 mA.
- ◆ The Gigaset SX763 WLAN dsl supports USB V 2.0. Devices that support USB V 1.1 may also be connected.
- ◆ The following file system formats are supported: FAT, FAT32, VFAT  
NTFS is not supported.
- ◆ There should be not more than 1000 files stored in any directory of the USB mass storage device.

➔ Go to the **Advanced Settings** menu and select: **USB**

The screenshot shows the 'USB' configuration screen within the 'Advanced Settings' menu. At the top, there are tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is active), and 'Status'. A 'Log Off' link is in the top right corner. The main title 'USB' is centered at the top of the screen. Below it, the 'USB:' label is followed by two radio buttons: 'On' (which is selected) and 'Off'. The 'Status:' label is followed by the text 'No USB device connected'. The 'USB Printer:' label is followed by the text 'No USB printer connected'. Below these labels are three buttons: 'Refresh', 'OK', and 'Cancel'. A question mark icon is located in the top right corner of the main content area.

➔ Select the **On** option for **USB**.

➔ Click **OK** to activate the USB port.

If a USB device is connected, its **Status** is displayed. If a USB mass storage device is connected, the partitions are displayed.

➔ Click **Refresh** to display the current status.



### Safely Remove Hardware

- ➔ Click this button and wait until any connected USB storage device are fully deactivated before disconnecting them from your device.
- ➔ Click **OK** to save the changes.

### File Server

The devices integrated file server allows you to manage folders and files on a connected USB mass storage device (for example a USB flash drive or external USB drive) and make them available to all users in the local network and on the Internet.

Connect a USB data carrier to the Gigaset SX763 WLAN dsl via the USB port.

- ➔ In the **Advanced Settings** menu, select: **USB – File Server**


The screenshot shows the 'File Server' configuration window within the 'Advanced Settings' tab. The window has a title bar with 'File Server' and a help icon (?). Below the title bar, there are four tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. In the top right corner, there is a 'Log Off' button. The main content area is divided into sections: 'File Server' with 'On' (selected) and 'Off' radio buttons; 'Workgroupname:' with a text field containing 'WORKGROUP'; 'Description:' with a text field containing 'CIFS Server'; 'Users:' with the text 'currently no users added' and an 'Add' button; and 'Shared Folders:' with the text 'currently no shared folders added' and an 'Add' button. At the bottom, there are 'OK' and 'Cancel' buttons.

- ➔ Select the **On** option for the **File Server**.
- ➔ Enter the **Workgroup name** (**WORKGROUP** is the standard name for Windows) in which the file server is located. If you now search your network you will find the file server in the specified domain / workgroup in the network environment.
- ➔ You can enter a **Description** of the file server in the next field.

## Configuring Advanced Settings

➔ Click **Add** to define **Users** who should have access to the File Server.

You have to define at least one use to define shares on the **File Server**.

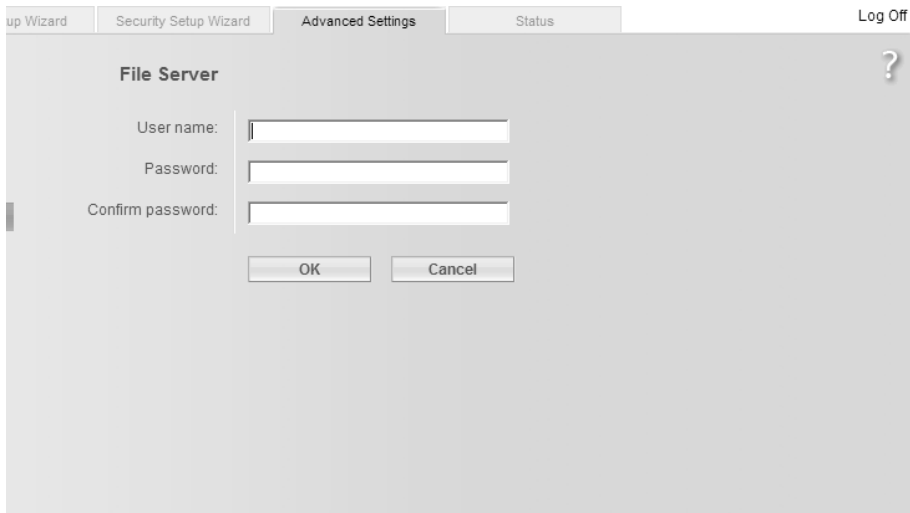


The screenshot shows the 'File Server' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. A 'Log Off' link is in the top right corner. The window title is 'File Server'. Below the title, there are three input fields: 'User name:', 'Password:', and 'Confirm password:'. Each field has a corresponding text box. At the bottom, there are two buttons: 'OK' and 'Cancel'. A question mark icon is in the top right corner of the window.

➔ Enter a **User name**, a **Password**, and confirm it in the next line.

➔ Click **OK**.

The **File Server** start page is shown again.

➔ Click **Add** to define **Shared Folders** for the **Users** defined above.

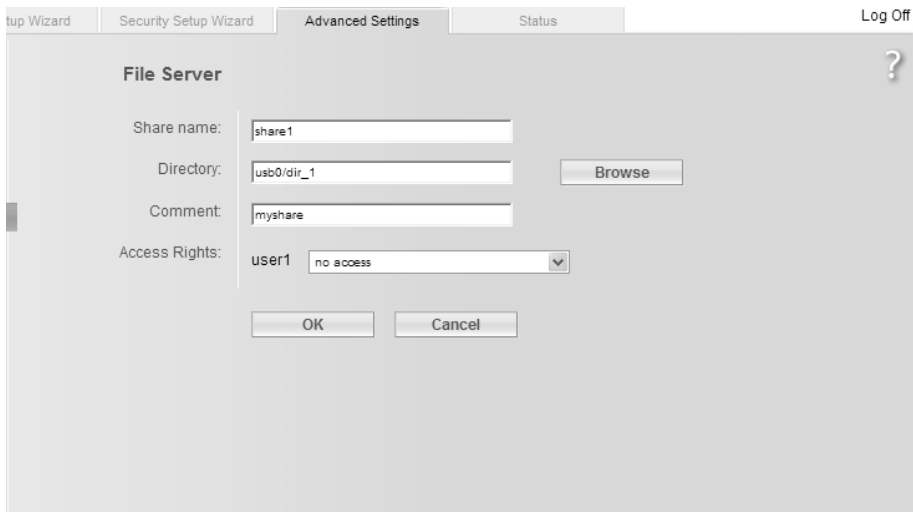

The screenshot shows the 'File Server' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (selected), and 'Status'. A 'Log Off' link is in the top right corner. The window title is 'File Server'. Below the title, there are four input fields: 'Share name:', 'Directory:', 'Comment:', and 'Access Rights:'. The 'Share name' field contains 'share1'. The 'Directory' field contains 'usb0/dir\_1' and has a 'Browse' button next to it. The 'Comment' field contains 'myshare'. The 'Access Rights' field contains 'user1' and a dropdown menu showing 'no access'. At the bottom, there are two buttons: 'OK' and 'Cancel'. A question mark icon is in the top right corner of the window.

➔ Enter a name for the new file share.

➔ Choose the directory for the share via the **Browse** button.

➔ Enter a comment in the next line.

➔ Click **OK**.

Now the users you have defined are displayed.

➔ Choose the **Access Rights** for each user: **no access**, **read-write access**, or **read-only access**.

➔ Click **OK**.

The **File Server** start page is shown again.

The screenshot shows the 'File Server' configuration window within the 'Advanced Settings' tab. The window has a title bar with 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings', and 'Status'. A 'Log Off' link is in the top right corner. The main area is titled 'File Server' and contains a 'File Server' section with 'On' and 'Off' radio buttons. Below this are text boxes for 'Workgroupname:' (containing 'WORKGROUP') and 'Description:' (containing 'CIFS Server'). The 'Users:' section lists 'user1' with 'Edit' and 'Delete' buttons, and an 'Add' button below. The 'Shared Folders:' section lists 'share1' with 'Edit' and 'Delete' buttons, and an 'Add' button below. At the bottom are 'OK' and 'Cancel' buttons.

➔ You can edit or delete a user by clicking the **Edit** or **Delete** button.

➔ You can edit or delete a file share by clicking the **Edit** or **Delete** button.

➔ Click **OK** to save your settings.

# Configuring Advanced Settings

## Web Server

Your devices integrated Web server allows you to publish data stored on a connected USB mass storage device (for example a USB flash drive or external USB drive) on the Internet.

Internet users can access your Web server by entering the public IP address in their Internet browser. As Internet providers often change this each time someone dials in, it is also worth using dynamic DNS (see page 81).

➔ Connect the USB mass storage device containing the data to be published to the USB port.

You can check the status of the connection to the USB device on the **Advanced Settings – USB** screen.

➔ In the **Advanced Settings** menu, select: **USB – Web Server**

The screenshot shows the 'Web Server' configuration window. At the top, there are tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is selected), and 'Status'. A 'Log Off' link is in the top right corner. The window title is 'Web Server' with a help icon (?). The configuration is divided into sections: 'IP address:' and 'Dynamic DNS:' (set to 'disabled'). The 'HTTP' section has 'HTTP service:' with 'On' and 'Off' radio buttons (both unselected), 'Port:' with a text box containing '80', and 'Directory:' with a text box containing '/usb\_0/gigaset\_http' and a 'Browse' button. The 'FTP' section has 'FTP service:' with 'On' and 'Off' radio buttons (both unselected), 'Remote FTP service:' with 'On' and 'Off' radio buttons (both unselected), 'Port:' with a text box containing '21', and 'Directory:' with a text box containing '/' and a 'Browse' button. Below these are three dropdown menus for 'Access (read only):', 'Access (full control):', and 'Directory:' (containing '/usb\_0/gigaset\_http'), all set to 'Disabled'. At the bottom are 'OK' and 'Cancel' buttons.

up Wizard   Security Setup Wizard   **Advanced Settings**   Status   Log Off

### Web Server ?

IP address:

Dynamic DNS: disabled

#### HTTP

HTTP service: ☐ On ☐ Off

Port: 80

Directory: /usb\_0/gigaset\_http

#### FTP

FTP service: ☐ On ☐ Off

Remote FTP service: ☐ On ☐ Off

Port: 21

Directory: /

Access (read only): Disabled

Access (full control): Disabled

Directory: /usb\_0/gigaset\_http

Access (full control): Disabled

The **IP address** (see page 84) of the Gigaset SX763 WLAN dsl is displayed, as well as information as to whether **Dynamic DNS** (see page 81) is activated.

### HTTP

HTTP (Hypertext Transfer Protocol) is the standard protocol for transferring data on the Internet. You can use this to publish your own homepage on the Internet, for example.

- ➔ Activate the HTTP service for your Web server.
- ➔ You can change the **Port** via which Internet users can access your data, to mask your data and protect it from unauthorised users, for example.
- ➔ Choose the **Directory** in which the data is stored on the USB mass storage device using the **Browse** button.

Internet users can access the HTTP server as follows:

- ➔ Open the Internet browser and enter the full address:

**http://public IP address:[port]/directory/start file**

Example: **http://159.134.4.16:8080/gigaset\_http/index.htm**

If you use a dynamic DNS service (see page 70) enter the domain name given by your service provider instead of the IP address.

Example: **http://my.dyndns.com/gigaset\_http/index.htm**

**Port** must only be entered if you are not using the default port 80.

### FTP

FTP (File Transfer Protocol) is a protocol for exchanging files on the Internet. You can use this to offer files for downloading or to receive files from other users, for example.

- ➔ Choose **On** for **FTP service** if you want to make data available in the local network.

PCs in the network access the USB mass storage device via FTP.

To do this, open the Internet browser and enter the following address:

**ftp://192.168.2.1**

If you have changed the IP address of the Gigaset SX763 WLAN dsl (see page 84), enter the new address instead of 192.168.2.1.

- ➔ Choose **On** for **Remote FTP service** if you also want to make data available on the Internet.

Internet users can access your USB mass storage device by entering the public IP address in the Internet browser. As Internet service providers often change this each time someone dials in, it is also worth using dynamic DNS (page 81).

- ➔ The **Port** field contains the port number via which local PCs and Internet users can access your data. You should not change the default port number without very good reason.

If you use a different port number, active FTP mode is no longer possible. FTP clients must then be converted to passive FTP mode.

## Configuring Advanced Settings

- ➔ Choose the **Directory** in which the data is stored on the USB mass storage device using the **Browse** button.

You can allow general access for both FTP services, or only for selected users with a user name and password.

- ➔ For **Access (read only)**, select whether all users should be able to read your data in **Anonymous** mode or whether only one **Specified user** should be supported.
- ➔ Specify whether **Access (full control)** to your data should be **disabled** or whether a **Specified user** may read, edit and delete your data.
- ➔ Enter the name in the **Specified user** field. Define different user names for the different access type and directory.
- ➔ Enter the password for the user and confirm it by entering it again in the field below. The password is case-sensitive. Avoid using proper names and obvious terms. Instead, use upper case and lower case letters, numbers and special characters.
- ➔ Click **OK** to apply the changes.

## Print Server


Your device's integrated print server allows you to provide a USB printer for all users in the local network.

### Notes:

- ◆ The Windows Vista, Windows XP or Windows 2000 operating system is a prerequisite for using the print server.
- ◆ Only printer functionality is supported in the case of multifunction devices (combination of printer, scanner or fax). You can obtain additional information by contacting the hotline or else on the Internet (address see Quick Start Guide).

If you wish to use this function, you must first connect a USB printer to your device's USB port. The device must be shown in the screen. You can check the status of the connection to the USB device on the **Advanced Settings – USB** screen.

➔ In the **Advanced Settings** menu, select: **USB – Print Server**

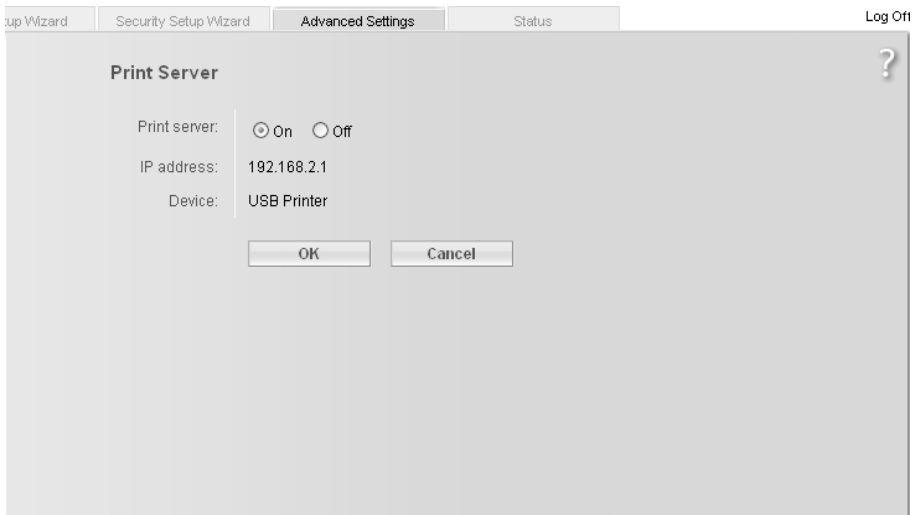

➔ Activate your devices integrated print server.

You can set up the connected printer on your PC by using the **IP address** of the Gigaset SX763 WLAN dsl shown here when configuring the printer.

➔ Click **OK** to accept the changes.

You will find information on setting up the printer connected to the Gigaset SX763 WLAN dsl in the section entitled "Using the USB port" on page 144.

# Call guide

Your Gigaset SX763 WLAN dsl allows you to make calls via the Internet (VoIP) and your fixed line. A description of how to configure your Gigaset SX763 WLAN dsl for using the telephone functions is provided under "Telephony" on page 48 and "Setting up Internet telephony (VoIP)" on page 101.

This chapter describes the function keys on your phone and the Internet telephony settings with which you can use the various telephony options. Please note that the functions described are only fully available if you have configured Internet telephony and have registered with your service provider.

External connections are calls via your fixed line or via the Internet (VoIP).

Internal connections are calls between the phones connected to the router or calls on PCs or cordless phones which are registered as software SIP clients on the device.

## Please note:

With the exception of the first five key combinations, the key combinations specified in this chapter only apply for telephones on the **Phone1** and **Phone2** ports. The key combinations **\*1 ...\*6**, **\*\***, **\*99\***, **\*00** and **\*01 to \*06** phone number can also be entered on a SIP client. Please refer to the operating manual for your SIP client for the other functions.

## Making calls

Key combination	Effect	Description
<b>*1 ...*6</b>	Call for an internal extension	Choose the phone number of the desired extension (analogue phone or SIP extension, *1 ...*6) to make an internal call.
<b>**</b>	Call all internal numbers	Choose <b>**</b> to call all internal extensions.
<b>*99*</b>	Answer a call from a different phone	If a call arrives at a different telephone set or on a port configured as an answering machine, you can accept this call on your phone by pressing the key combination <b>*99*</b> .
<b>*00 Phone number</b>	Switching from VoIP to <b>fixed network</b> for a call	To make a call on a VoIP extension via the fixed network, simply enter <b>*00</b> .
<b>*01 to *06 Phone number</b>	Switching to a <b>VoIP</b> extension for a call	If you want to make a call on a VoIP or fixed network extension via a (different) VoIP extension, you can use this VoIP connection by entering <b>*0</b> and the number of the desired extension (1 ... 6) (e.g. <b>*04</b> for the fourth extension).



Key combination	Effect	Description
<b>*31# number</b>	Calling line identification restriction	Dial *31# before the number if you want to prevent your number being displayed to the other party for the current call.
<b>*51#</b>	Calling line identification restriction as default	Dial *51# to prevent your number being displayed to the other party permanently.
<b>#51#</b>	Cancel calling line identification restriction as default	You have opted to suppress the display of your number by default (see above): Dial #51# to cancel this default.
<b>***51#</b>	Calling line identification restriction as default (at exchange)	Dial ***51# to prevent your number being displayed to the other party permanently. In contrast to the above setting, this setting is forwarded to the exchange and is activated there.
<b>***51#</b>	Cancel calling line identification restriction default (at exchange)	You have opted to suppress the display of your number by default (see above, at exchange): Dial ***51# to cancel this default setting at the exchange.

## Advanced options

The functions described in this section, which are available to you when making calls via your Gigaset SX763 WLAN dsl, apply both for external calls and for internal calls. The functions described below are dependent on the connected terminal in the case of VoIP extensions.

### Please remember:

When using the signal button **R**, always wait until you hear a dialling tone before you enter the phone number for a consultation call or complete the key combination for the respective function.

## Toggle telephone calls

Key combination	Effect	Description
<b>R</b>	Consultation	Press <b>R</b> to initiate a consultation with another phone number during a call.
<b>Phone number</b>		Dial the desired (internal or external) number for the consultation.

## Call guide

Key combination	Effect	Description
<b>R2</b>	Accept call waiting/ toggle between two calls	<p>Press <b>R2</b> to accept an incoming call during a call. The connection to the first call is put on hold.</p> <p>If you terminate the first call beforehand, your phone rings and you can take the second call as usual.</p> <p>By pressing <b>R2</b> again, you can toggle to the waiting caller.</p>
<b>R0</b>	Reject call waiting	<p>Press <b>R0</b> to reject an incoming call during a call.</p> <p>The second call is rejected automatically after 120 seconds have elapsed.</p>
<b>R1</b>	Terminate one call and return to the waiting call	<p>Press <b>R1</b> to end the current call. You then switch to the waiting call. The second call is ended automatically when you replace the receiver.</p>

## Conference call between three participants

---

Key combination	Effect	Description
<b>R3</b>	Conference call	<p>When you are making a call and a second call is waiting (see above), press <b>R3</b> to enable a conference call between you and the two call parties.</p>
<b>R2</b>	End the conference call and continue calls separately	<p>Press <b>R2</b> to end the conference call.</p> <p>You are then connected to the previously active call again and the previous waiting call is now in the wait state again.</p>
<b>R4</b>	End conference call and set up the con- nection between call parties	<p>If you press <b>R4</b> during a conference call, you end your call and set up a connection between the other two external call parties. You can then replace the receiver. In the case of an internal conference call, you simply need to hang up.</p>
	End conference call	<p>Replace the receiver to terminate all calls.</p>

## Call answering and forwarding

Key combination	Effect	Description
<b>*21*[number]#</b>	Forward to <b>internal</b> phone number	Dial <b>*21*</b> , the desired internal phone number to which all calls are to be forwarded that are received on this extension, and then press the <b>#</b> key. <b>Example:</b> You want to set up call forwarding from your phone to a second internal phone number. Dial <b>*21**2#</b> .
<b>#21#</b>	Delete call forwarding	Use the key combination <b>#21#</b> to delete internal call forwarding, which you set up as described above.
<b>*61*[number]#</b>	Call forwarding to <b>internal</b> number if absent	Dial <b>*61*</b> , the desired internal phone number to which all calls are to be forwarded that are received on this extension, and then press the <b>#</b> key. The call is forwarded after 20 seconds with this key combination.
<b>#61#</b>	Delete call forwarding if absent	Use the key combination <b>#61#</b> to delete internal call forwarding (if absent), which you set up as described above.
<b>*67*[number]#</b>	Call forwarding to <b>internal</b> number if line busy	Dial <b>*67*</b> , the desired internal phone number to which all calls are to be forwarded that are received on this extension, and then press the <b>#</b> key. The call is forwarded with this key combination if the line is busy.
<b>#67#</b>	Delete call forwarding if line busy	Use the key combination <b>#67#</b> to delete internal and external call forwarding (if line busy), which you set up as described above.
<b>#77#</b>	Delete all call forwarding settings	Use the key combination <b>#77#</b> to delete all call forwarding settings described above.

### Call waiting and call reject if busy

<b>*43#</b>	Allow call waiting	Use the key combination <b>*43#</b> to allow call waiting when the line is busy.
<b>#43#</b>	Delete call waiting	Dial <b>#43#</b> to disable call waiting if busy again.
<b>*26#</b>	Reject all calls	Use the key combination <b>*26#</b> to specify that all calls are to be rejected. This is only possible if call waiting is disabled.
<b>#26#</b>	Delete the reject calls setting	Use the key combination <b>#26#</b> to delete the reject all calls setting.

#### Notes:

- ◆ If you additionally enter **\*#** in each case before the key combination shown in the table, the settings will be forwarded directly to the exchange and will be activated there.
- ◆ The phone numbers of waiting calls are not displayed even if the caller permits this.

### Special functions

Key combination	Effect	Description
<b>*52#</b>	Enable WLAN function	This shortcut key allows the WLAN function of your Gigaset SX763 WLAN dsl to be enabled without you having to open the configuration program.
<b>#52#</b>	Disable WLAN function	This shortcut key allows the WLAN function of your Gigaset SX763 WLAN dsl to be disabled again.

#### Note:

This function is only available if **Phone-based Management** is enabled. For that purpose open the user interface **Advanced Settings – Administration – System Management** page.

### Confirmation tones

If you activate a service attribute, for example set up call forwarding, you will hear a positive confirmation tone if successful and a negative confirmation tone if unsuccessful.

Positive confirmation tone: Ascending tone sequence at 6-second intervals

Negative confirmation tone: Regular sequence of short low-frequency tones

# Administration

The Gigaset SX763 WLAN dsl user interface includes several helpful functions for administration.

<b><i>Regional Options</i></b>	Enables regional settings (page 126)
<b><i>System Password</i></b>	Changes the system password (page 127)
<b><i>System Management</i></b>	Configures system management (page 128)
<b><i>Save &amp; Restore</i></b>	Backs up and, if necessary, restores configuration data (page 131) or reset the Gigaset SX763 WLAN dsl to the factory settings (page 132)
<b><i>Reboot</i></b>	Reboots the device (page 132)
<b><i>Firmware Update</i></b>	Updates firmware (page 133)
<b><i>System Log</i></b>	Configures settings for the system log (page 136)
<b><i>Status</i></b>	Displays information about the configuration and status of the Gigaset SX763 WLAN dsl (page 137)

## Regional Options

For operating your Gigaset SX763 WLAN dsl, you can select the location, time zone and format for entering the time and date, and you can also configure a time server for the Internet time (system time).

➔ In the **Advanced Settings** menu, select: **Administration – Regional Options**

The screenshot shows the 'Regional Options' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is active), and 'Status'. In the top right corner, there is a 'Log Off' link. The main content area is titled 'Regional Options' and contains several settings:

- Country:** A dropdown menu showing 'Germany'.
- Automatically adjust clock for daylight saving changes:** Two radio buttons, 'On' (selected) and 'Off'.
- Date format:** A dropdown menu showing 'dd.mm.yyyy'.
- Time format:** A dropdown menu showing 'hh:mm:ss'.
- Internet Time** section:
  - System time:** Displays '01.01.0001, 01:27:47'.
  - Last synchronization with time server:** Displays '(unknown)'.
  - Use custom time servers:** Two radio buttons, 'On' (selected) and 'Off'.
  - Preferred time server:** A text field containing '0.pool.ntp.org'.
  - Alternate time server:** A text field containing '1.pool.ntp.org'.

At the bottom of the window, there are 'OK' and 'Cancel' buttons.

- ➔ Select the country you are currently in from the list. You can set the time so that it automatically switches to summer time or the **Time zone**, as required.  
If you have already configured the basic settings, you can change these here.
- ➔ Select the required option or choose the **Time zone** for your location.
- ➔ Select the required format for entering the date and time from the **Date format** and **Time format** lists.

## Internet Time

The **System time** of the device is automatically synchronised with the time server on the Internet. The time of the **Last synchronization with time server** is displayed for your information.

- ➔ If you would like to use your own time server, activate the **On** option next to the **Use custom time servers** field.
- ➔ Enter the Internet address of the time server in the **Preferred time server** or **Alternate time server** fields.
- ➔ Click **OK** to apply the settings.

## System Password

You can assign a System Password to the Gigaset SX763 WLAN dsl user interface and specify the period after which a session is to be automatically ended if no further entry is made.

- ➔ In the **Advanced Settings** menu, select: **Administration – System Password**

After installation, the Gigaset SX763 WLAN dsl user interface is protected by the System Password **admin**. To prevent unauthorised changes being made to the configuration, you should set a new System Password from time to time. You may already have set a System Password when you set up the **Security Setup Wizard**. If so, you can change it here.

- ➔ Enter the old **System Password** in the **Current password** field.
- ➔ Enter a new **System Password** in the **New password** field and repeat it in the **Confirm new password** field.

## Administration

The System Password may contain up to 20 characters. The System Password is case sensitive. Avoid proper names and all too obvious words. Use a combination of letters, digits and special characters.

### Note

If you forget your System Password, you have to reset the Gigaset SX763 WLAN dsl (page 27). This returns **all** your settings to the factory configuration. This means the system password is changed back to **admin**.

### Idle time before log off:

- ➔ Enter the number of minutes after which the configuration program is to be ended if no further entry is made. The default is 10 minutes. If you enter 0, the program will never be ended automatically.
- ➔ Click **OK** to apply the settings.

## System management

Your Gigaset SX763 WLAN dsl offers you the option of using remote management and phone-based management in addition to the configuration program that you access via a PC in your local network.

- ➔ In the **Advanced Settings** menu, select: **Administration – System Management**

The screenshot shows the 'System Management' configuration window. At the top, there are tabs: 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is selected), and 'Status'. A 'Log Off' button is in the top right corner. The window title is 'System Management' with a help icon (?) in the top right. The window is divided into two main sections: 'Remote management' and 'Phone-based Management'. In the 'Remote management' section, there are radio buttons for 'On' (selected) and 'Off'. Below this, there are labels for 'IP address:', 'Dynamic DNS:', 'Port', 'Access:', 'Allowed connections:', and 'Connection service:'. The 'Port' field is a text box containing '8080'. The 'Access:', 'Allowed connections:', and 'Connection service:' fields are dropdown menus with values 'Read only', 'Allow all clients', and 'None' respectively. In the 'Phone-based Management' section, there are radio buttons for 'On' and 'Off' (selected). At the bottom of the window are 'OK' and 'Cancel' buttons.

Remote Management enables a PC that is not in your local network to be used to configure the Gigaset SX763 WLAN dsl via a standard Web browser. You can activate Remote Management for one particular or for any PC.



For security reasons, this function is only available if you have previously changed the system password for your device (see page 127).

You can start remote management by entering the public IP address in your Internet browser. As Internet providers often change this each time you dial in, it is also worth using dynamic DNS (see page 81).

➔ Click the option **On**, to activate **Remote Management**.

The field **IP address** shows the public IP address. The field **Dynamic DNS** displays the **Domain name** of the DNS service, if you have activated this function (see page 81).

➔ You can change the **Port** via which you can access the configuration program from the Internet, for example in order to mask and protect the configuration program against unauthorised access.

➔ **Access:** You can select **Read only** if you only wish to activate remote management for reading or you can select **Full control** if you wish to activate it for reading and writing.

➔ **Allowed connections:** You can specify one particular PC or specify a range of IP addresses of clients for Remote Management or you can activate this function for any PC.

**Please remember:**

If you permit several PCs then anyone who finds out your password can access this user interface and therefore also your network! If it is needed, then you should only activate this option for a short time.

- Select the required option from the list.
- For the option **Only specified client**, enter the IP address of the client, or the first and last IP address in the range you want to permit.

**Please remember:**

- ◆ The Internet provider may assign the IP address to the PC dynamically. This may change the IP address. Make sure that the PC that is to access the router from the Internet always has the same IP address.
- ◆ For access to the configuration environment via Remote Management, you must enter the address of the Gigaset SX763 WLAN dsl to be managed in the browser using the following format: **http://x.x.x.x:8080**  
(x.x.x.x represents the IP address of the Gigaset SX763 WLAN dsl).

➔ If you have defined more than one **Connection service** (see page 64), choose from the list the **Connection service**, for which you want configure **Remote Management**.

➔ Click **OK** to accept the settings.

## Administration

### Phone-based Management

➔ Click **On** to activate ***Phone-based Management***.

You can activate or deactivate the WLAN function (page 124) via phone.


➔ Click **OK** to accept the settings.

## Backing up and restoring a configuration

When the Gigaset SX763 WLAN dsl has been configured, it is recommended that you back up the settings. This means you can restore the settings at any time if they are accidentally deleted or overwritten.

You can also reset the configuration to the factory settings. You should always do this before handing the device to an external person.

➔ In the **Advanced Settings** menu, select: **Administration – Save & Restore**

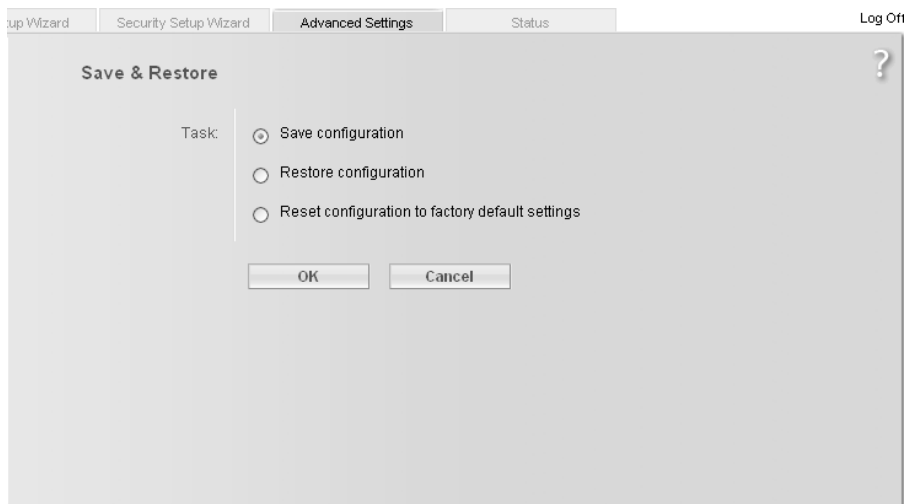

## Backing up configuration data

➔ For **Task**, activate the **Save configuration** option.

➔ Click **OK**.

You can then set the location in which the backup file is to be saved in a file selection window.

➔ Select a local directory on your PC where you want to save the configuration file and enter a file name.

➔ Click **Save**.

The current configuration data is now saved in the specified file.

### Restoring the saved data

---

- ➔ For **Task**, activate the **Restore configuration** option.
- ➔ Enter the path of the backup file that you want to use to restore the configuration or choose the file in the file system via the **Browse** button.  
A window will appear prompting you to confirm the procedure.
- ➔ Click **OK**. The configuration will now be updated.

### Restoring factory settings

---

You can reset the Gigaset SX763 WLAN dsl to the factory settings. You should do this before making the device available to others or exchanging it through the dealer. Otherwise unauthorised persons may use the Internet access data at your expense.

- ➔ Select **Reset configuration to factory default settings** and click **OK**.  
A window will appear prompting you to confirm the procedure.

#### Note:

If the Gigaset SX763 WLAN dsl is not operating properly, you can reboot it. It should then be ready for use again (page 27).

Please remember that when the device is fully reset, **all** the configuration settings are returned to the factory settings. This means that you will have to completely reconfigure the Gigaset SX763 WLAN dsl.

### Reboot

---

If the Gigaset SX763 WLAN dsl is not operating properly, you can reboot it. It should then be ready for use again.

- ➔ In the **Advanced Settings** menu, select: **Administration – Reboot**
- ➔ Click **OK** to reboot the device.

A window will appear prompting you to confirm the procedure.

## Updating firmware

If Gigaset Communications GmbH or your Internet service provider releases a new version of the firmware, you can update the firmware of the Gigaset SX763 WLAN dsl. You can perform the update manually or you can configure an automatic periodical check for firmware update.

➔ In the **Advanced Settings** menu, select: **Administration – Firmware Update**

The screenshot shows the 'Firmware Update' configuration page. At the top, there are tabs for 'Setup Wizard', 'Security Setup Wizard', 'Advanced Settings' (which is active), and 'Status'. A 'Log Off' link is in the top right corner. The page title is 'Firmware Update' with a help icon. The current firmware version is displayed as '2.3.52.1.0'. The 'Firmware update source' is set to 'Update server' (selected with a radio button) and 'Local' (unselected). The 'Firmware update server' is 'update.gigaset.net', with a 'Change' button next to it. Below this, there is a 'check for updates' button and a text description: 'Your devices will connect to the Siemens update server and check for updates for your devices automatically.' Under the 'Check periodically' section, there is a text description: 'Your devices will search automatically for firmware updates and will inform you if a new version is available.' A dropdown menu is set to 'Every month'. At the bottom, there are 'OK' and 'Cancel' buttons.

The firmware version that is currently installed on the device is displayed in the **Current firmware version** line.

### Configuring an automatic update

---

- ➔ Choose **Update server** as **Firmware update source**.

The field **Firmware update server** shows the server address where your device checks whether a new firmware version is available. This is the default address and normally should not be changed.

If required, change the preset update server using the **Change** button. Enter the URL of the desired update server and click **Apply**.

- ➔ **Check periodically:** If **Update server** is selected, your device can periodically check on the update server whether a new firmware version is available. If this is the case, you will be informed when you are surfing the Internet.
- ➔ Choose from the option menu if the device should search for updates:  
**Every day, Every week** or **Every month**.

If you choose **Never**, you can start the firmware update with by clicking **check for updates**.

- ➔ Click **OK** to apply the settings.

#### Automatic firmware update

If you have configured the option **Check periodically** and a new firmware version of your Gigaset SX763 WLAN dsl is detected while you are surfing the Internet an information page is opened. On this page you can choose whether the update should be started.

- ➔ Click **Perform update now!** to start the update.
- ➔ Enter the system password (see page 127) on the next page.
- ➔ Click **OK**. The firmware will now be updated.

#### User requested check

- ➔ Click **check for updates** in order to check whether new updates are available on the selected update server.

If a new firmware is available, an information page is opened. On this page you can choose whether the update should be started.

- ➔ Click on **Perform update now!** to start the update.
- ➔ Click **OK**. The firmware will now be updated.

#### Warning:

**Do not** turn off the Gigaset SX763 WLAN dsl during the updating procedure and do not interrupt the power supply. Turning off the device can make it unusable. The update can take several minutes.

Gigaset Communications GmbH accepts no liability for damage that occurs through improper use.

## Local firmware update

- ➔ End all network activities in the local network.
- ➔ Choose **Local** as **Firmware update source** if you have already loaded the firmware file you want to install on your PC (see page 133).

The firmware version that is currently installed on the device is displayed in the **Current firmware version** line.

- ➔ In the **Local firmware update file** field, enter the file with the new firmware that you have downloaded from the Internet or click **Browse** to search for the file in your PC's file system.
- ➔ Click **Start firmware update**. The firmware will now be updated.

### Warning:

**Do not** turn off the Gigaset SX763 WLAN dsl during the updating procedure and do not interrupt the power supply. Turning off the device can make it unusable. The update can take several minutes.

Gigaset Communications GmbH accepts no liability for damage that occurs through improper use.

After a successful update, the device is automatically rebooted. All LEDs go out. The login screen is displayed again.

To see whether the upgrade procedure was successfully completed, check the current software version displayed in the overview of the **Status** menu (page 137).

## System Log

The System Log is displayed in the **Status – Device** menu. It contains important information about how the device functions and possible problems. This information can also be automatically transferred to a system log server.

→ In the **Advanced Settings** menu, select: **Administration – System Log**

→ **Log level:** Specify how much information is to be contained in the system log. You can choose between four levels:

- **Critical:** Log file of the most important information for possible device functionality problems.
- **Warning** and **Informational** are intermediate levels.
- **Debugging:** Complete and detailed information on all device functions

**Please remember:**

Setting the log level **Debugging** can generate enormous load on the system and thus impair the data throughput of the device.

→ **System log server**

- Activate this function if the device system log is to be automatically transferred to a system log server in the local network.
- **Server address type**  
Choose if you want to enter the server address as IP address or domain name.
- **Server address**  
Enter the IP address or the domain name for the system log server.
- **Server port**  
Enter the port of the system log server that is to be used to transfer the system log.

→ Click **OK** to save and apply the changes.



# Status information

Information about configuration and the status of the Gigaset SX763 WLAN dsl is displayed in the **Status** menu of the Gigaset SX763 WLAN dsl. On the first screen you will find an overview of the status of the Internet connection, the local and wireless network, the telephony, the USB interface and the device.

Detailed information is available on the following status screens:

- ◆ **Security**
- ◆ **Internet**
- ◆ **Local Network**
- ◆ **Wireless Network**
- ◆ **Telephony**
- ◆ **Device**

To display a status screen:

- ➔ Select **Status** in the start screen.
- ➔ Select the entry with the information you require.

## Overview

---

On the first screen you will find an overview of the current operating status and the most important device data.

### Internet

- ◆ **Connection status**  
The status of the Internet connection and, if connected, the duration of the connection.
- ◆ **IP address**  
The public IP address of the device.

### Local network

- ◆ **IP address**  
The local IP address of the device.
- ◆ **DHCP Server**  
The status of the DHCP server of the device and, if activated, the number of clients in the network that have been assigned an IP address.

### Wireless network

- ◆ **Status**  
The status of the wireless network connection of the device and, if activated, the number of clients in the wireless network connected to the device.
- ◆ **SSID**  
The wireless network ID.

## Status information

### Telephony

#### ◆ **VoIP accounts**

Shows the number of VoIP accounts and the connection status.

### USB

#### ◆ **Status**

Status of the USB connection of the device. It can be enabled (**On**) or disabled (**Off**). Additionally, the occurrence of the following problems is displayed:

**USB device not supported or not recognized.**

**USB device not supported (the device exceeds the power consumption limit).**

### Device

#### ◆ **System time**

The system time of the device.

#### ◆ **Firmware version**

The firmware version currently installed on the device.

→ Click **Refresh** to refresh this screen and update the displayed data.

## Security

---

You will find information about possible security risks for the device and the network on the **Security** screen in the **Status** menu.

In the **Status** menu, select **Security**:

#### ◆ **System password not changed**

The configuration program of the device is not sufficiently protected against unauthorised access because you have not changed the system password since setting up the device. Information on how to avoid this security risk is given in the section "System Password" on page 127.

#### ◆ **Identification of your wireless network visible or not changed**

Unauthorised users can also find the wireless network easily as you have not changed the ID of the wireless network (SSID) since setup and have not deactivated SSID broadcasting. Information on how to avoid this security risk is given in the section "Configuring wireless connections" on page 87.

#### ◆ **Encryption for your wireless network not activated**

None of the data in the wireless network is encrypted during transfer and can therefore easily be intercepted. Unauthorised users will also have easy access to your network, your PCs and your Internet connection. Information on how to avoid this security risk is given in the section "Starting WPS registration and configuring WPS" on page 90.

#### ◆ **Access to your wireless network not restricted to allowed clients**

Users can access the wireless network from any PC. Information on how to avoid this security risk is given in the section "Permitted clients" on page 98.

◆ **Firewall for your Internet connection turned off**

The network is not protected against hackers who gain unauthorised access via the Internet. Information on how to avoid this security risk is given in the section "Firewall" on page 72.

◆ **Address translation for your Internet connection turned off**

The clients in the network are not protected against unauthorised access via the Internet. Information on how to avoid this security risk is given in the section "Setting up the NAT function" on page 76.

◆ **One or more of your local clients directly exposed to the Internet**

At least one client in the network is directly visible on the Internet as an exposed host and is therefore particularly exposed to the risk (e.g. through hacker attacks). Only activate this function if it is absolutely necessary (e.g. to operate a Web server) and other functions (e.g. Port forwarding) are not suitable. In this case, you should take the appropriate measures on the clients concerned. Information on how to avoid this security risk is given in the section "Opening the firewall for a selected PC (Exposed Host)" on page 80.

➔ Click **Refresh** to refresh the screen and the displayed data.

## Internet

---

You will find information about the status of the Internet connection of the device on the **Internet** screen in the **Status** menu.

In the **Status** menu, select **Internet**:

◆ **Connection service**

You can select the **Connection service**, for which the following information is to be displayed.

This information is not displayed if you only set up one connection service.

◆ **Connection status**

Shows the status of the Internet connection and, if connected, the duration of the connection. If you have set **Connect on demand** or **Connect manually** as the connection mode (page 66), you can **Connect** or **Disconnect** the connection to the Internet manually here.

◆ **Connection mode**

Shows the connection mode set for connecting to the Internet.

◆ **IP address**

Shows the current public IP address of the device.

◆ **MAC address**

Shows the public MAC address of the device.

◆ **Default gateway**

Shows the IP address of the assigned default gateway.

## Status information

### ◆ **Preferred DNS server**

Shows the IP address of the assigned DNS server.

### ◆ **Alternate DNS server**

Shows the IP address of the alternate DNS server, if available.

### ◆ **Downstream rate**

Shows the current transmission rate for incoming traffic.

### ◆ **Upstream rate**

Shows the current transmission rate for outgoing traffic.

### ◆ **PPPoE pass-through**

Shows the status of PPPoE pass-through for the DSL or cable connection for establishing an Internet connection directly between a PC and the network.

### ◆ **ADSL Line**

#### – **Status**

The status of the cable connection from your device to your DSL port.

#### – **Line mode**

The current line mode used by your DSL port.

#### – **Maximum line rate**

The maximum possible data transfer rate of your DSL port for incoming and outgoing data traffic.

#### – **Noise margin**

The maximum signal-to-noise ratio of your DSL port for incoming and outgoing data traffic.

#### – **Line attenuation**

The line attenuation of your DSL port for incoming and outgoing data traffic.

#### – **Output power**

The output power of your DSL port for incoming and outgoing data traffic.

### ◆ **Address Translation (NAT)**

Shows the status of the NAT (Network Address Translation) for the Internet connection.

### ◆ **Dynamic DNS**

Shows the status of the configuration for dynamic DNS. If dynamic DNS is set up, the name of the provider is shown.

➔ Click **Refresh** to refresh this screen and update the displayed data.

## Local Network

---

You will find information about the local network settings on the **Local Network** screen in the **Status** menu.

In the **Status** menu, select **Local Network**:

- ◆ **IP address**  
Shows the local IP address of the device.
  - ◆ **Subnet mask**  
Shows the subnet mask used in the local network.
  - ◆ **MAC address**  
Shows the local MAC address of the device for wired data transfer.
  - ◆ **DHCP Server**
    - **Status**  
Shows the status of the DHCP server of the device for automatic assignment of IP addresses to clients in the local network.
    - **DHCP clients**  
Shows all the clients in the network that have been assigned an IP address. The **Host name** and the **MAC address** are listed to identify each client. Information is also provided about the **IP address** assigned to each client and about the **Lease time** for the IP address, i.e. the length of time before the current IP address becomes invalid and the client is assigned a new address by the DHCP server.
- ➔ Click **Refresh** to refresh this screen and update the displayed data.

## Wireless Network

---

You will find information about the wireless network settings on the **Wireless Network** screen in the **Status** menu.

In the **Status** menu, select **Wireless Network**:

- ◆ **Status**  
Shows the status of the connection between the device and the wireless network.
- ◆ **SSID**  
Shows the wireless network ID.
- ◆ **Channel**  
Shows the radio channel that is currently being used for data transfer in the wireless network.
- ◆ **MAC address**  
Shows the local MAC address of the device for wireless data transfer.

## Status information

### ◆ **Wireless clients**

Shows all clients in the wireless network that are currently connected to the device. The **Host name**, **MAC address** and **IP address** are specified for identifying each client. You will also see information about the **Uptime** to date of the current connection for each client in the wireless network.

### ◆ **Repeater (WDS)**

#### – **Status**

Shows the status of the WDS (Wireless Distribution System) in the wireless network for increasing the range.

#### – **WDS links**

Shows the current number of connections to other access points or repeaters in the wireless network.

➔ Click **Refresh** to refresh this screen and update the displayed data.

## Telephony

---

You will find information about the VoIP accounts and phone call statistics on the **Telephony** screen in the **Status** menu.

In the **Status** menu select **Telephony**:

### ◆ **VoIP accounts**

Shows the number of VoIP accounts and the connection status.

### ◆ **SIP client accounts**

All WLAN handsets or other SIP clients currently set up as extensions in your local network are displayed. The user name and internal phone number of each SIP user account are displayed for identification purposes. In addition, you are shown information about the status of the respective account.

➔ Click **Refresh** to refresh this screen and update the displayed data.

## Device

---

You will find the most important device data on the **Device** screen in the **Status** menu.

In the **Status** menu, select **Device**:

- ◆ **System uptime**  
Shows your device's operating time since the last time the system was started.
  - ◆ **System time**  
Shows the system time for your device.
  - ◆ **Firmware version**  
Shows the firmware version currently installed on your device.
  - ◆ **Bootcode version**  
Shows the version of the bootcode currently installed on your device.
  - ◆ **Configuration file version**  
Shows which configuration file is loaded.
  - ◆ **ADSL driver version**  
Shows the version of the ADSL driver currently installed on the device.
  - ◆ **Wireless driver version**  
Shows the version of the WLAN driver currently installed on the device.
  - ◆ **User interface version**  
Shows the version of the user interface currently installed on the device.
  - ◆ **Hardware version**  
Shows your device's hardware version.
  - ◆ **Serial number**  
Shows your device's serial number.
  - ◆ **System Log**  
The system log contains important information about how the device functions and possible problems. You can adapt the scope of the system log to suit your requirements (see "System Log" on page 136).
- ➔ Click **Refresh** to refresh this screen and update the displayed data.

## Using the USB port

Your Gigaset SX763 WLAN dsl is equipped with a USB port that can be used, for example, to connect a printer for use as a network printer or a USB mass storage device for use as a file server. This chapter describes which settings you have to define on your computer to use these functions.

### Installing the printer port for network printers

---

The Windows Vista, Windows XP or Windows 2000 operating system is a prerequisite for connecting a printer under Windows.

#### Introduction

---

A network printer is a printer on which you can print your documents without it being connected to your PC, for example to LPT1, the parallel interface. The advantage of this is that you only need this printer once in your network. All PCs for which it is released can access it and work with it.

**Note:**

For multi-function devices (combination of printer, copier or fax) only the printer functionality is supported.

In most cases, a printer of this type is connected to another PC in the network. While this offers the advantage referred to above, it has serious disadvantages:

- ◆ The printer can only be used by others if the PC to which it is connected is switched on.
- ◆ The print job you send to the PC to which the printer is connected reduces the performance (resources) of this PC.

If you use the USB port on the Gigaset SX763 WLAN dsl for your printer, you have all the advantages of a network printer without the disadvantages referred to above:

- ◆ The network, and consequently also the printer, is always ready (the Gigaset SX763 WLAN dsl and the printer itself must be switched on, of course).
- ◆ As it is connected to the USB printer port on your Gigaset SX763 WLAN dsl, it does not detract from the performance of any other PC in the network.

To facilitate this option you must first set up a **printer port** on each PC that is to use the network printer. A printer port is an interface on the PC that forwards the print job to an IP address within the network.

Once you have set up this port you must install the printer driver.

**Note:**


Before starting to set up the printer please make sure that a printer is connected to the USB port of the Gigaset SX763 WLAN dsl and that the printer has been identified. You can check this in the user interface via **Advanced Settings – USB – Print Server**.




## Installing a standard TCP/IP printer port under Windows Vista

You can use the standard TCP/IP port driver available with this operating system. Make sure that the Gigaset SX763 WLAN dsl is connected and is available in the network. A printer does not have to be connected to the USB port on your Gigaset SX763 WLAN dsl at this point.

➔ Click **Start – Control Panel**.

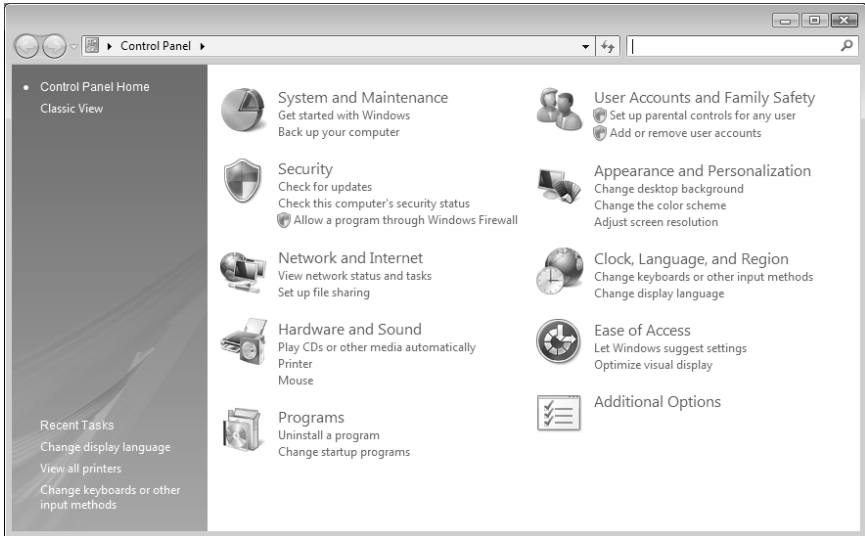


➔ In the window that opens, click **Hardware and Sound** followed by **Printer**.

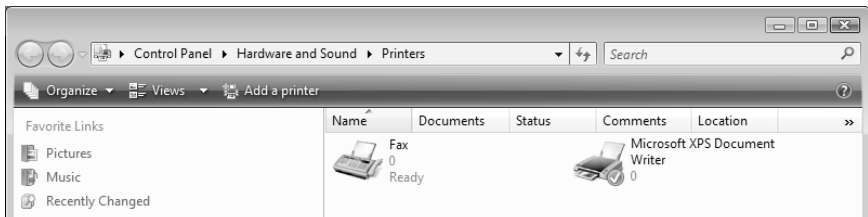


## Using the USB port

➔ Click **Add a printer**.

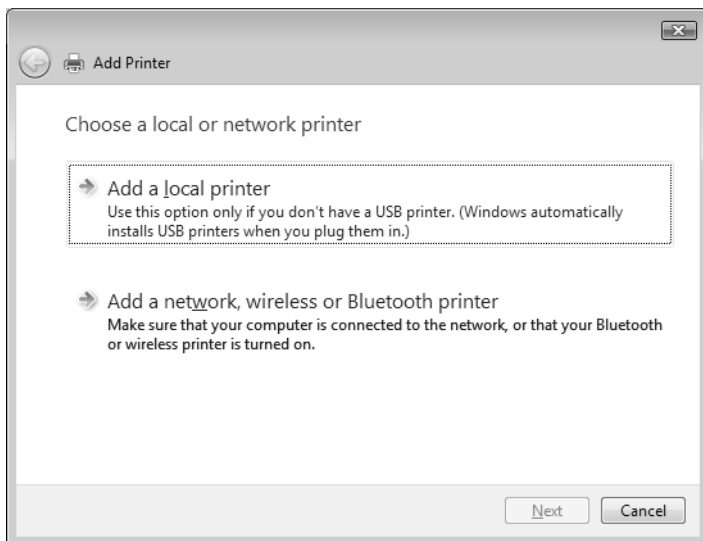


➔ In the Add Printer Wizard, click the option **Add a local printer**.

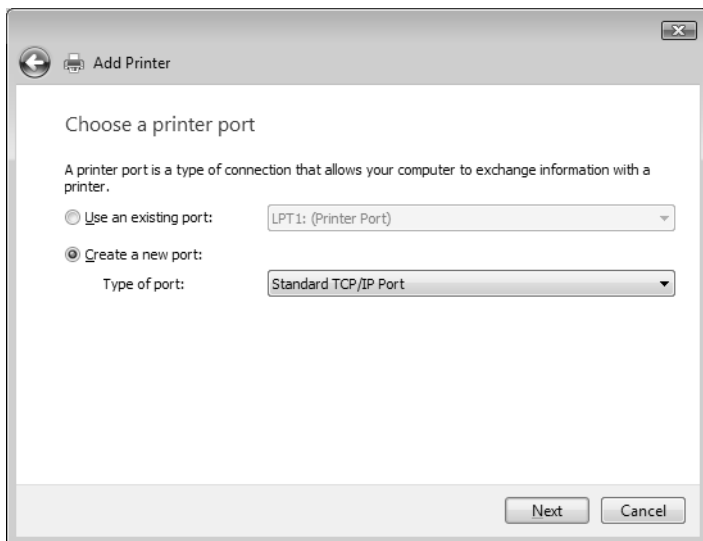

➔ Select the **Create a new port** option button.

➔ Then select **Standard TCP/IP Port** from the selection menu in the field **Type of Port**.

➔ Click **Next**.

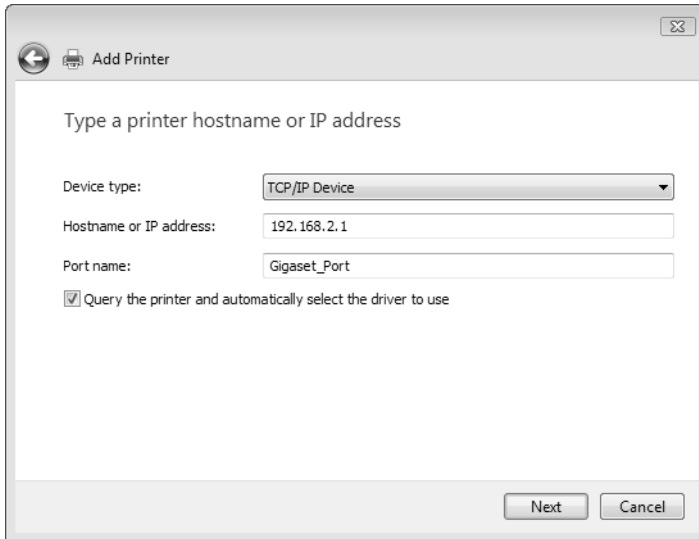

➔ Click **Next**.

➔ Choose **TCP/IP** as **Device type**.

➔ In the **Host Name or IP Address** input field, enter the IP address of the printer server (Gigaset SX763 WLAN dsl): e.g. 192.168.2.1.


This entry is transferred into the **Port Name** field. This name will later appear in the list of printer ports.

➔ To change the name, click in the **Port Name** field and enter a name. Name this port, for example, **Gigaset\_Port**.


➔ Click **Next**.

## Using the USB port

As Windows Vista usually first looks for a network card when a printer port is installed, the **Additional Port Information Required** window is displayed.

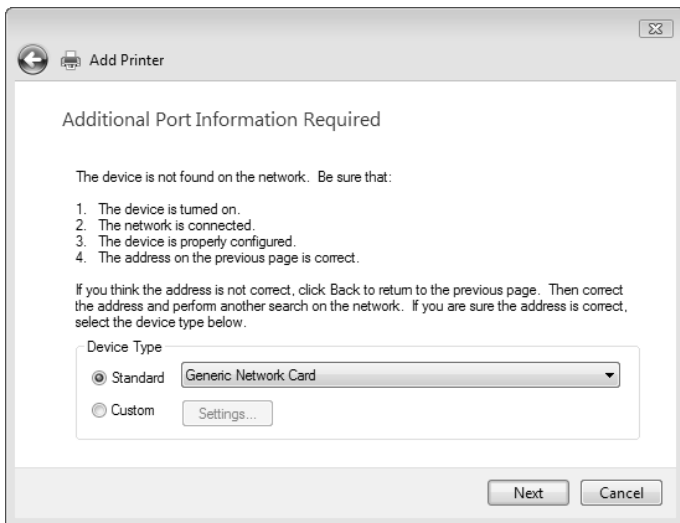

➔ Select the **Custom** option and click on **Settings**.

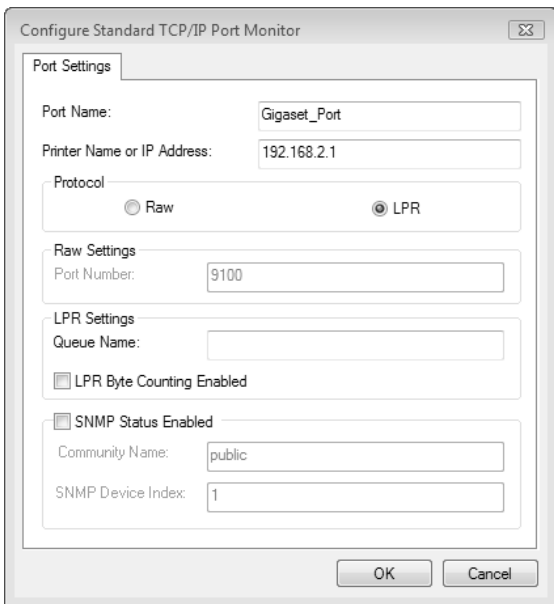


➔ Select the **LPR** option box.

➔ For **Queue name** enter **lp0** (lower case: lima, papa, number 0).


- ➔ **LPR Byte Counting Enabled** should not be selected.
- ➔ Click on **OK** and then on **Next**.

Windows is searching for the appropriate driver model.

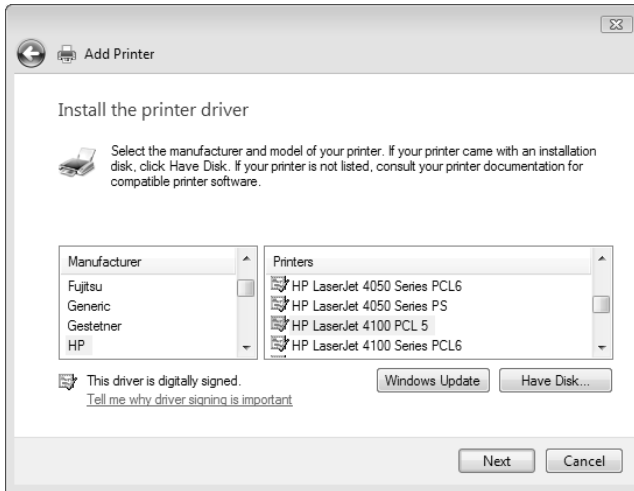

- ➔ Choose the appropriate driver for your printer and click on **Next**.


After successfully installing the driver you can now define a name for your printer. This is the name which is used to display the printer in the printer list.

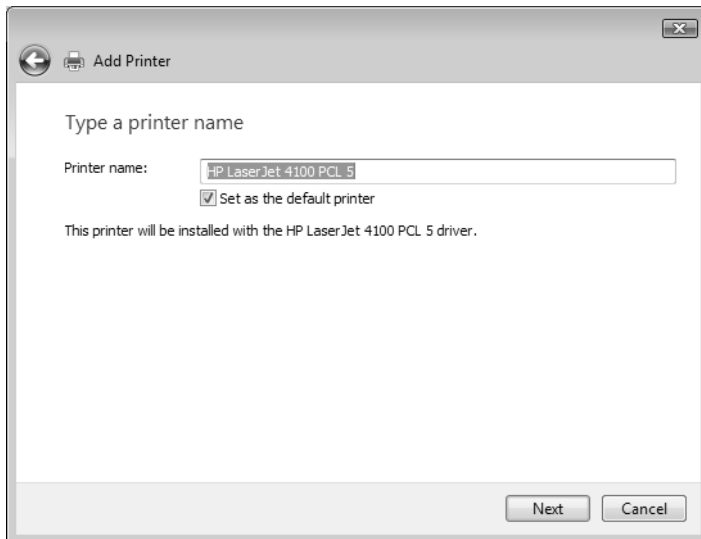

- ➔ Enter a printer name and select the option **Set as the default printer**.

## Using the USB port

➔ Click **Next**.

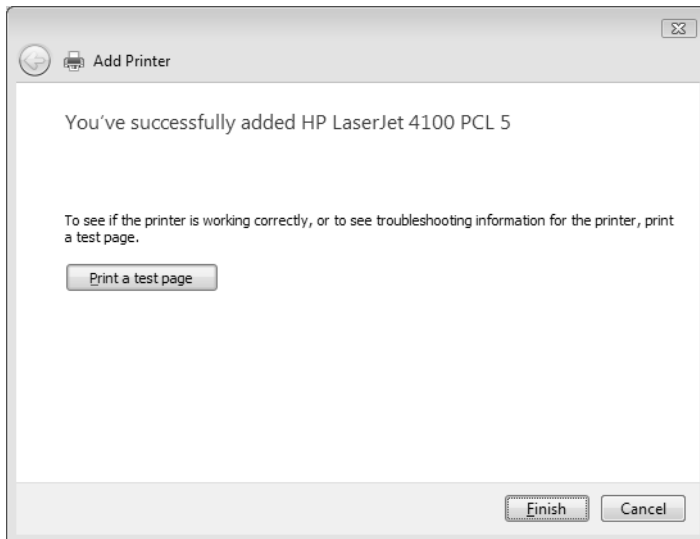

➔ Click the button to print a test page.

➔ Click **Finish**.

### **Note:**

The printer server of the Gigaset SX763 WLAN dsl does not work bi-directionally. It does not evaluate any of the printer's response messages. For this reason please make sure that your printer is also only configured uni-directionally. You can configure the relevant settings for your printer by choosing **Start – Settings – Printers**.

## Installing a standard TCP/IP printer port under Windows XP/2000

You can use the standard TCP/IP port driver available in this operating system. Make sure that the Gigaset SX763 WLAN dsl is connected and can be reached in the network. A printer need not be connected to the USB port on your Gigaset SX763 WLAN dsl at this point. The following illustrations show installation on Windows XP. Installation on Windows 2000 is essentially the same.


➔ Click **Start** and in the window that opens click **Printers and Faxes**.




## Using the USB port

➔ In the window that opens, double-click **Add a printer**.

The wizard for installing a printer is opened.

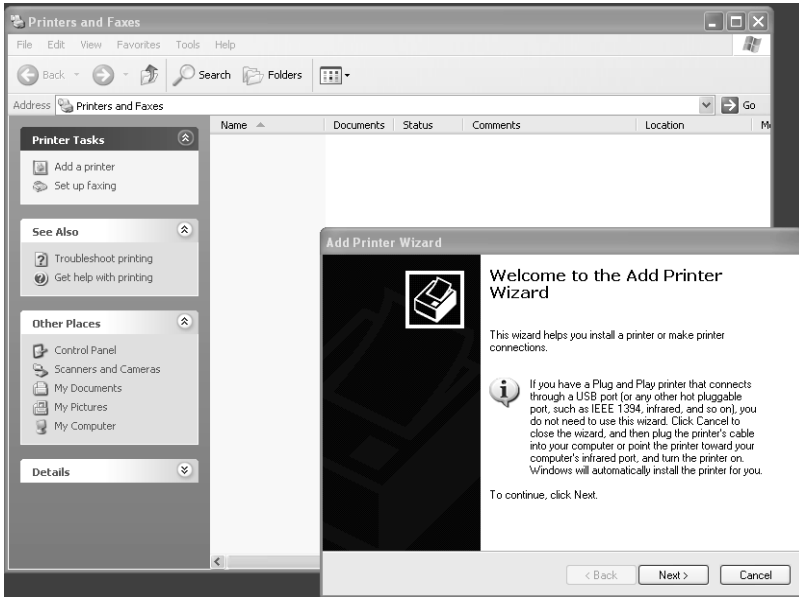

➔ In the Add Printer Wizard, click **Next**.

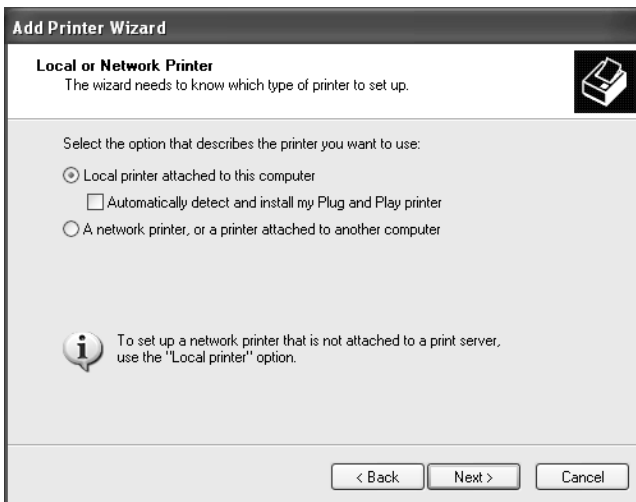


The printer port you are installing will behave like an additional parallel port on the PC. For this reason you must click the option button next to **Local printer** in this window.



The ***Automatically detect and install my Plug and Play printer*** check box must not be selected.

➔ Click **Next**.

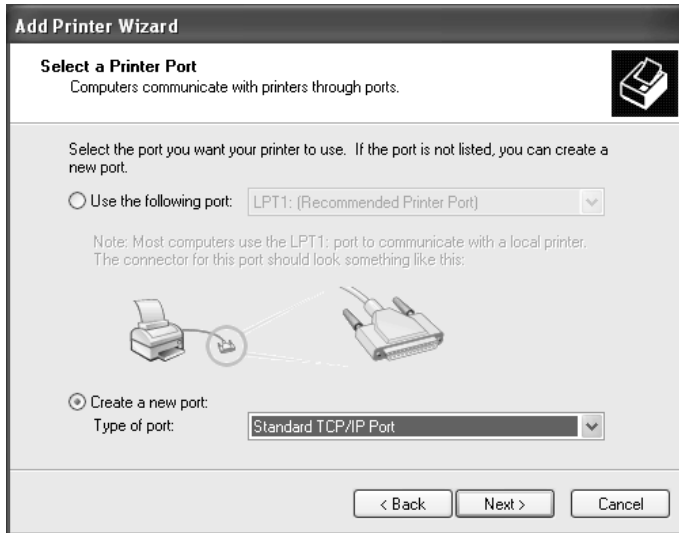

➔ Click the **Create a new port** option button.


➔ Then select **Standard TCP/IP Port** from the selection menu in the field next to this option.

➔ Click **Next**.



## Using the USB port

➔ In the wizard for setting up a standard TCP/IP port, click **Next**.

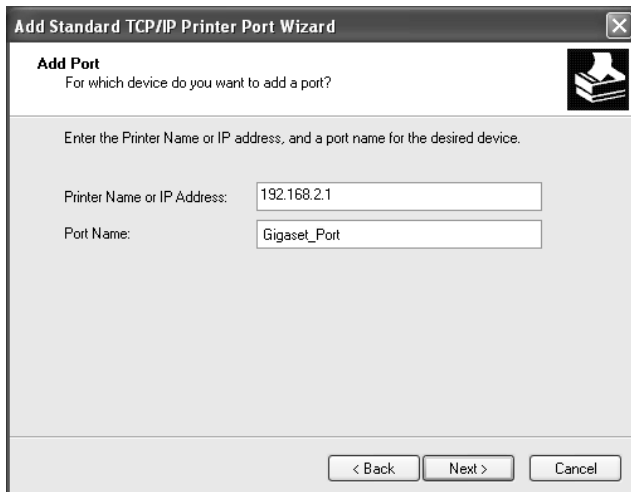

The screenshot shows the 'Add Standard TCP/IP Printer Port Wizard' window, specifically the 'Add Port' step. The title bar reads 'Add Standard TCP/IP Printer Port Wizard'. Below the title bar, the text 'Add Port' is followed by 'For which device do you want to add a port?'. A printer icon is visible in the top right corner. The main area contains the instruction 'Enter the Printer Name or IP address, and a port name for the desired device.' Below this, there are two input fields: 'Printer Name or IP Address:' with the value '192.168.2.1' and 'Port Name:' with the value 'Gigaset\_Port'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.


➔ In the **Printer Name or IP Address** input field, enter the IP address of the print server (Gigaset SX763 WLAN dsl): e.g. 192.168.2.1.

A copy of your entry is displayed in the second field.

➔ Double-click in the **Port Name** field and enter a name. This name will appear in the list of printer ports. Name this port, for example, **Gigaset\_port**.

➔ Click **Next**.

As Windows XP usually first looks for a network card when a printer port is installed, the **Additional Port Information Required** window is displayed.

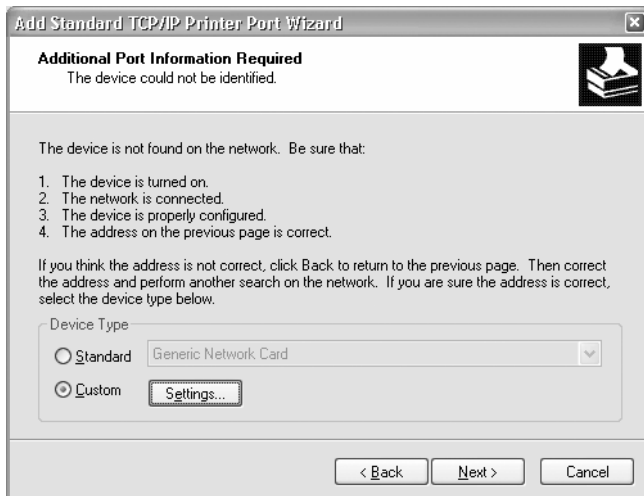

The screenshot shows the 'Add Standard TCP/IP Printer Port Wizard' window, specifically the 'Additional Port Information Required' step. The title bar reads 'Add Standard TCP/IP Printer Port Wizard'. Below the title bar, the text 'Additional Port Information Required' is followed by 'The device could not be identified.' A printer icon is visible in the top right corner. The main area contains the instruction 'The device is not found on the network. Be sure that:' followed by a list of four items: 1. The device is turned on. 2. The network is connected. 3. The device is properly configured. 4. The address on the previous page is correct. Below the list, there is a paragraph: 'If you think the address is not correct, click Back to return to the previous page. Then correct the address and perform another search on the network. If you are sure the address is correct, select the device type below.' Below this paragraph, there is a 'Device Type' section with two radio buttons: 'Standard' (selected) and 'Custom'. The 'Standard' button is followed by a dropdown menu showing 'Generic Network Card'. The 'Custom' button is followed by a 'Settings...' button. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

➔ Choose the option **Custom** and click **Settings**.

**Configure Standard TCP/IP Port Monitor**

**Port Settings**

Port Name: Gigaset\_Port

Printer Name or IP Address: 192.168.2.1

Protocol

☐ Raw ☒ LPR

Raw Settings

Port Number: 9100

LPR Settings

Queue Name: lp0

☐ LPR Byte Counting Enabled

☐ SNMP Status Enabled

Community Name: public

SNMP Device Index: 1

OK Cancel

➔ Enter the following data in the relevant fields:

- **Printer name or IP address:** Enter the IP address of the print server.
- **Protocol** Choose the option **LPR**.
- **Queue name:** lp0 (lower case: lima, papa, number 0)
- **LPR Byte Counting Enabled** should not be selected.

➔ Click **OK**

## Using the USB port


➔ Click **Next**.

The window for finishing the wizard is opened and shows you all the settings you have made.



➔ Click **Finish**.

Once the wizard for installing the printer port is finished, the **Add Printer Wizard** is opened.

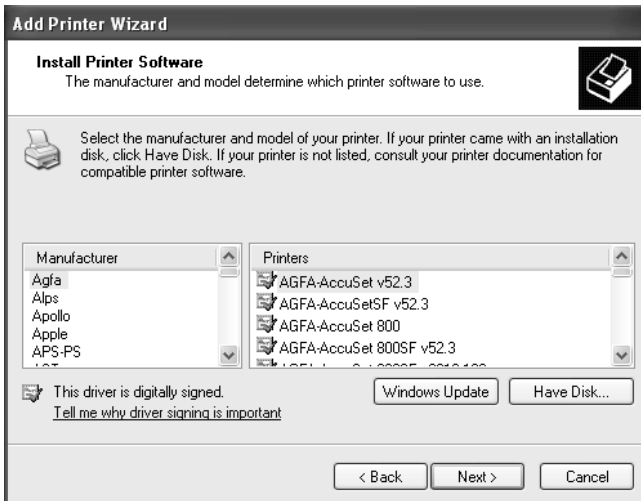

➔ If you wish to install a printer for this port immediately, click **Next** and follow the instructions of the Add Printer Wizard.


➔ If you do not wish to install a printer until later, click **Cancel**.

**Note:**

The printer server of the Gigaset SX763 WLAN dsl does not work bi-directionally. It does not evaluate any of the printer's response messages. For this reason please make sure that your printer is also only configured uni-directionally. You can configure the relevant settings for your printer by choosing **Start – Settings – Printers**.

## Installing a printer on the TCP/IP port retrospectively

If you connect a printer to this port at a later stage, start the installation procedure for the printer port as above.

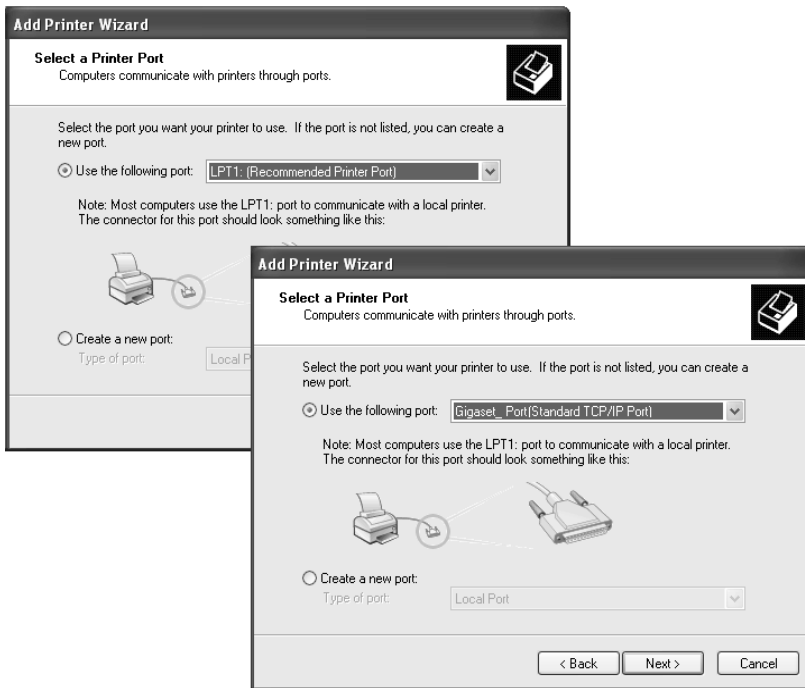

- ➔ In this case, however, you should click the selection menu in the **Select a Printer Port** window.
- ➔ From the list, select the connection you have set up:  
e.g. **Gigaset\_port (Standard TCP/IP port)**.
- ➔ Click **Next** and finish installing the printer driver as instructed in the windows that follow.

### Instructions for setting up a printer on the PC

---

Once you have installed the printer port you still cannot start printing. The printer port is nothing more than an additional interface on your PC, comparable with the USB port. It means that any printer you install on this port is also regarded as a local printer even though it is located in the network and possibly not directly near you.

You still need to connect the printer to this port and configure it.

➔ Connect the printer to the USB port on your Gigaset SX763 WLAN dsl.

The printer is installed in the same way as any other printer:

➔ Go through **Start – Settings – Printers** and click **Add Printer**.

➔ In the window that opens click **Next**.

➔ Proceed as instructed by the Add Printer Wizard. Please note:

In the window in which you are prompted to specify the location of the printer you should select **Local printer** (usually the default setting).

➔ Then click **Next**.

➔ Continue to install the printer. Select your printer and click **Next**.

➔ When the window in which you are prompted to enter the type of connection appears, double-click the port name **Gigaset\_port**.

➔ Then continue to install the printer and finish the installation.

#### Note:

The printer server of the Gigaset SX763 WLAN dsl does not work bi-directionally. It does not evaluate any of the printer's response messages. For this reason please make sure that your printer is also only configured uni-directionally.

## Using the data on a USB mass storage device

---

To view directories and files which are shared via the Gigaset SX763 WLAN dsl file server on the USB port within the Windows network, some parameters on your PC must be set correctly.

For most PCs these settings are already defined correctly on delivery, i.e. you usually do not have to do anything. The following sections give some diagnosis information in case problems do occur.

The following description is based on the Windows Vista operating system. The procedure is similar for the other Windows systems. You will find a detailed description of the network configuration for the different Windows systems on the CD-ROM delivered with the device.


### Checking network services

---


The following services/protocols must be activated for the network connection used:

- ◆ Internet protocol (TCP/IP)
- ◆ File and Printer Sharing for Microsoft networks

You can check it via the **Properties** of the network connection.

- ➔ Click on the network symbol in the taskbar .
- ➔ Open the **Network and Sharing Center**.
- ➔ Click **View status** next to the network connection used to connect your PC to the Gigaset SX763 WLAN dsl.
- ➔ Click **Properties**.

## Using the USB port

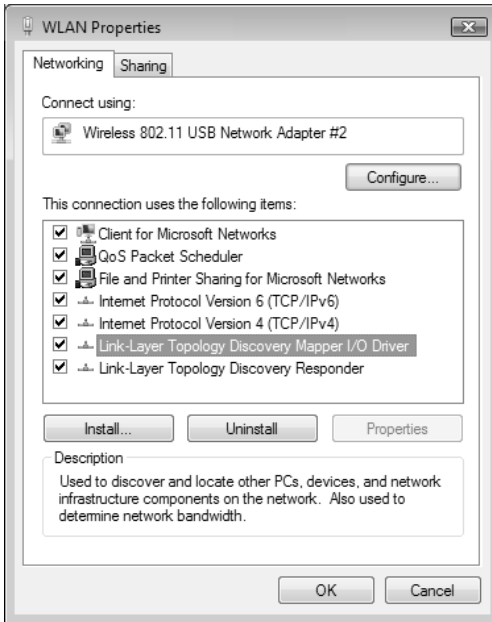

The check boxes next to the entries

- ◆ Internet Protocol Version 4 (TCP/IPv4)

and

- ◆ File and Printer Sharing for Microsoft Networks

must be marked.

➔ If one of these components is not installed it will have to be installed subsequently.  
You may need your Windows installation CD.




## Share Inter Process Communication for the network

The Inter Process Communication (IPC) functions are used to interchange data between processes on a computer or between multiple computers in a network. To be able to share data on the USB mass storage device on the Gigaset SX763 WLAN dsl, the IPC must be set to access resources shared in the network (network share).

You can check it as follows:

- ➔ Open the Windows command prompt. From the start menu of the Windows taskbar, click **Start – All Programs – Accessories – Command Prompt**.
- ➔ In the **Command Prompt** window enter the **net share** command and press the ENTER key.

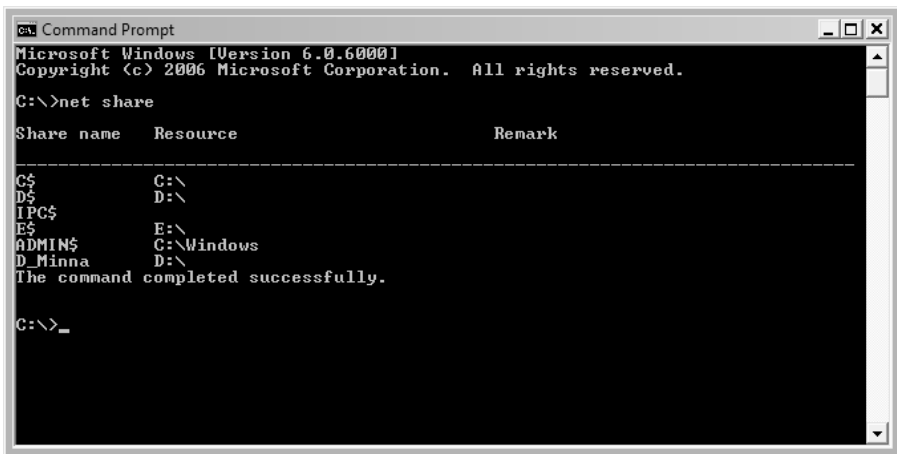

```

C:\>net share

Share name      Resource
-----
C$              C:\
D$              D:\
IPC$
E$              E:\
ADMIN$          C:\Windows
D_Minna         D:\
The command completed successfully.

C:\>_
  
```

- ➔ Check if an **IPC\$** entry exists.
- ➔ If there is no entry, enter the **net share IPC\$** command and press the ENTER key.

### Starting the computer browser

---


To access resources in the network, the Windows service **computerbrowser** must be started.

You can check it as follows:

- ➔ Open the Control Panel by selecting **Control Panel** from the start menu of the Windows taskbar.
- ➔ Open **System and Maintenance**, then **Administrative Tools** and click on **Services**.

**Note:** On Windows XP and 2000 systems right-click on the **Workplace** symbol and choose **Administrative Tools**. Double-click on **Services and Applications** and then on **Services**.

- ➔ Check if the status for the **Computerbrowser** entry is **Started**.
- ➔ If **Computerbrowser** is not started, double-click on the entry.

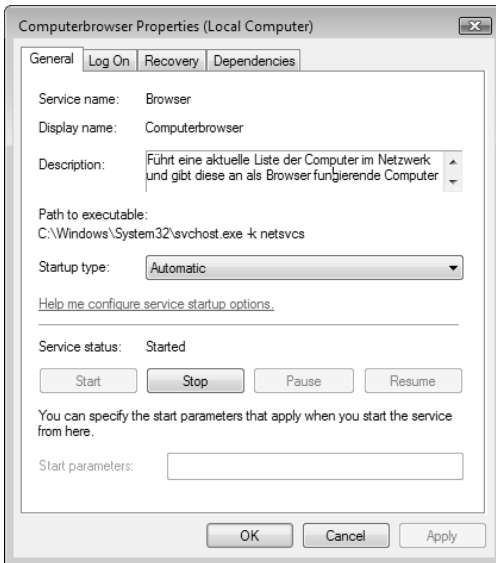

- ➔ Click on **Start**.

If an error message appears with a content like "...has been started and then stopped again..", you still have to allow file and printer sharing in the Windows firewall (see next section).


## Enabling file and printer sharing in the Windows firewall

The Windows firewall must be set to allow file and printer sharing.

You can check it as follows:

- ➔ Open the Control Panel. For that purpose choose **Control Panel** from the start menu of the Windows taskbar.
- ➔ Click on **Security – Windows Firewall** and then **Starting and Stopping the Windows Firewall**.
 

**Note:** On Windows XP systems in the Control Panel choose the **Windows Firewall** entry.
- ➔ Open the **Exceptions** tab.

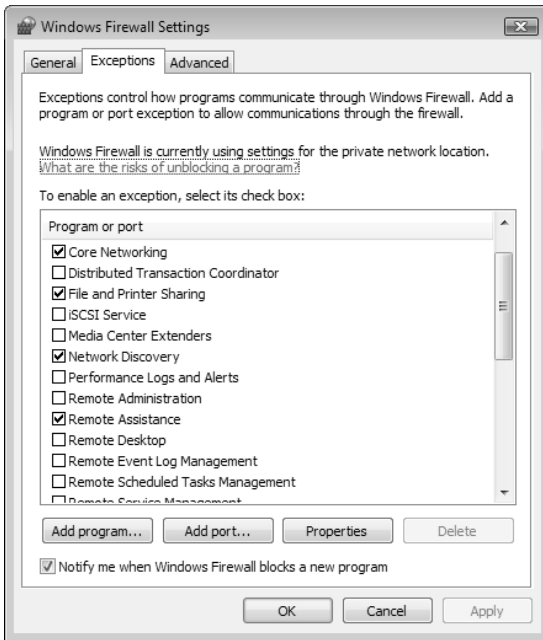

The File and Printer Sharing entry must be marked.

Now your Windows system should be able to access the shared data on the Gigaset SX763 WLAN dsl.

# Appendix

## Troubleshooting

This section describes common problems and their solution. Any problems can be identified from the different LED displays. If you cannot solve the connection problem after checking the LED displays, consult of the following table. Further information is available on the Internet at <http://www.gigaset.com/customer-care>.

This user guide is based on the software release 2.3.

Make sure the firmware on your device is up-to-date. The latest version can be found on the Internet on the product page [www.gigaset.com/gigaset/sx763wlands](http://www.gigaset.com/gigaset/sx763wlands)

Symptom	Possible cause and solutions
Device version unknown (Annex A or B).	You will find this information on the underside of the device.
<b>Power</b> LED does not light up.	<p>No power supply.</p> <ul style="list-style-type: none"> <li>➔ Check whether the mains adapter is connected to the Gigaset SX763 WLAN dsl and a power outlet.</li> <li>➔ Check whether the power outlet and the mains adapter are working properly. If the mains adapter is not working properly, contact our customer service unit (see Quick Start Guide).</li> <li>➔ If your Gigaset SX763 WLAN dsl has an On button at the rear: Check whether the device is plugged in.</li> </ul>
<b>ADSL</b> LED flashes	<ul style="list-style-type: none"> <li>➔ Wait until the integrated DSL modem has completed its synchronisation. This procedure can take up to 10 minutes.</li> <li>➔ The LED will also flash (at regular intervals) if no DSL cable is attached.</li> </ul>
The <b>ADSL</b> LED does not light up after synchronisation.	➔ Check the DSL cable. Check that the DSL cable is properly connected to the DSL port and the splitter.

Symptom	Possible cause and solutions
The <b>LAN</b> LED on a connected device does not light up.	<p>No LAN connection</p> <ul style="list-style-type: none"> <li>➔ Make sure the connected device is turned on.</li> <li>➔ Check whether the Ethernet cable is plugged in.</li> <li>➔ Check that you are using the right cable type (CAT5) and that the cable is not too long (&lt;100m).</li> <li>➔ Check that the network card on the connected device and the cables are not defective. If necessary, replace a defective network card or cable.</li> <li>➔ Use the Windows device manager (<b>My Computer – Properties</b>) to check whether the network card is functioning. If you see a red cross or a question mark, the driver may not have been installed or there is a resource conflict. Follow the Windows instructions to remedy the problem.</li> </ul>
You cannot connect to the Internet.	<ul style="list-style-type: none"> <li>➔ Check whether the <b>Connect manually</b> option is activated. If it is, connections cannot be opened automatically.</li> <li>➔ Select <b>Connect on demand</b> or <b>Always on</b>. Remember that this setting may lead to higher costs if you are billed on the time used.</li> <li>➔ The connection may have been terminated manually with the <b>Connect on demand</b> option selected. <ul style="list-style-type: none"> <li>– Restore the connection again manually using the <b>Connect</b> button or</li> <li>– Restart the Gigaset SX763 WLAN dsl.</li> </ul> <p>In both cases, the <b>Connect on demand</b> setting will be active again.</p> </li> <li>➔ Check whether the data entered for your Internet connection matches what your Internet service provider has specified.</li> </ul>
After a WPS registration attempt, the <b>WLAN</b> LED continues to flash for some time and the required client was not registered.	<ul style="list-style-type: none"> <li>◆ More than one client has tried to register.</li> <li>➔ Repeat registration after a short interval.</li> <li>◆ MAC access control is activated, but the desired client is not in the MAC address list.</li> <li>➔ Add the client to the MAC address list (see page 59).</li> </ul> <p>If the MAC address filter is enabled a WPS registration attempt can not be detected by the device. In this case LED signalling is not possible.</p>

Symptom	Possible cause and solutions
After a WPS registration the <b>WLAN</b> LED shows successful registration but the desired client was not registered.	<p>Maybe an external device has registered with your network.</p> <p>➔ Change the WPA PSK key manually as soon as possible (see page 93) and perform the WPS registration via PIN (see page 90).</p>
You cannot open a connection to the Gigaset SX763 WLAN dsl from a wireless device.	<ul style="list-style-type: none"> <li>◆ You attempted to perform WPS registration on the network adapter but the registration function was not activated on the Gigaset SX763 WLAN dsl.</li> <li>➔ Activate <b>registration</b> function on the Gigaset SX763 WLAN dsl and activate WPS within the two-minutes interval on the network adapter.</li> <li>◆ You defined a PIN for WPS registration but the network adapter does not use a PIN or uses a different one.</li> <li>➔ Check the wireless network encryption settings and determine the PIN used by the Gigaset SX763 WLAN dsl. Enter this PIN on the network adapter.</li> <li>◆ You defined a PIN for WPS registration at the network adapter but you didn't enter this PIN at the Gigaset SX763 WLAN dsl PIN or not the right one.</li> <li>➔ Find out the PIN that is used by the network adapter. Enter this PIN on the Gigaset SX763 WLAN dsl.</li> <li>◆ The wireless network adapter is not using the correct SSID.</li> <li>➔ Change the SSID on the network adapter or use the WPS function.</li> </ul>

Symptom	Possible cause and solutions
<p>You cannot open a connection to the Gigaset SX763 WLAN dsl from a wireless device.</p>	<ul style="list-style-type: none"> <li>◆ Either encryption has been activated on the Gigaset SX763 WLAN dsl but not on the wireless network adapter, or an incorrect key is in use.</li> <li>➔ Activate the required encryption (WPA-PSK or WEP) on the network adapter with the correct key.</li> </ul> <p>If you do not know the key, repeat key entry (page 90) via a PC connected via cable to the Gigaset SX763 WLAN dsl and enter the new key on the network adapter.</p> <p>Otherwise, you can use the WPS function.</p> <p>Alternatively, you can reset the Gigaset SX763 WLAN dsl (page 27) and then reconfigure encryption.</p> <p><b>Warning:</b> Please bear in mind that this will reset the entire configuration to the factory settings.</p> <ul style="list-style-type: none"> <li>◆ MAC access control is activated, but the PC is not included in the MAC address list.</li> <li>➔ Enter the PC in the MAC address list.</li> </ul>
<p>The Gigaset SX763 WLAN dsl or other PCs cannot be reached by a PC in the connected LAN using a <b>ping</b> command.</p>	<ul style="list-style-type: none"> <li>➔ Make sure that TCP/IP has been installed and configured on all the PCs in the local network.</li> <li>➔ Check that the IP addresses have been correctly configured. In most cases you can use the DHCP function of the Gigaset SX763 WLAN dsl to assign dynamic addresses to the PCs in the LAN. In this case, you have to configure the TCP/IP settings of all the PCs so that they obtain the IP address automatically.</li> </ul> <p>If you configure IP addresses in the LAN manually, remember to use the same subnet mask for all PCs in the LAN. This means that the masked part of the IP address on each PC and on the Gigaset SX763 WLAN dsl has to be identical.</p> <p>Check whether Ethernet is specified as the Internet connection type if the PC is connected to the LAN4/WAN port (page 64). If this type of connection is specified, only an external modem can be connected to the LAN4/WAN port. Change the connection type or select a new LAN connection for the PC.</p>

Symptom	Possible cause and solutions
No connection to the configuration environment of the Gigaset SX763 WLAN dsl.	<ul style="list-style-type: none"> <li>➔ Use the <b>ping</b> command to check whether you can establish a network connection to the Gigaset SX763 WLAN dsl.</li> <li>➔ Check the network cable between the PC you want to use to administer the device and the Gigaset SX763 WLAN dsl.</li> <li>➔ If the PC you want to use for administering the device is in the router's local network, make sure that you are using the correct IP address range (see above).</li> <li>➔ If the PC you want to use for administering the device is not in the router's local area network, this PC must be authorised for remote management.</li> </ul>
You cannot conduct VoIP telephone calls.	<ul style="list-style-type: none"> <li>➔ The phone or the Gigaset SX763 WLAN dsl is not connected properly to the DSL port. Check the cabling and the ports.</li> <li>➔ The access data for your VoIP phones is not entered correctly. Check the access data.</li> <li>➔ You have not assigned the VoIP phone numbers to the telephone port. Check the configuration of the telephone ports and the extensions.</li> <li>➔ Your VoIP configuration is not set up with the correct Codecs. Contact your VoIP provider and assign the correct Codecs (see page 104).</li> </ul>
Password forgotten or lost.	<ul style="list-style-type: none"> <li>➔ Reset the Gigaset SX763 WLAN dsl (page 27).</li> </ul> <p><b>Warning:</b> Please bear in mind that this will return <b>all</b> the configuration settings to the factory settings.</p>
You cannot access a resource (drive or printer) on a different PC.	<ul style="list-style-type: none"> <li>➔ Make sure that TCP/IP has been installed and configured on all the PCs in the local network and that the PCs all belong to the same workgroup.</li> <li>➔ Check whether the resource has been released on the PC in question and whether you have the necessary access rights.</li> <li>➔ Printing: Check whether the printer has been set up as a network printer.</li> </ul>



### Gigaset SX763 WLAN dsl functions and their interdependency

The following table shows which functions of your device are possible in which combination. In the case of error, check that the following conditions are fulfilled:

Function	Possible in combination with	Not possible in combination with
WPS	WPA2-PSK/WPA-PSK encryption no encryption	WPA2/WPA authentication WEP encryption
WDS	WEP encryption no encryption	WPA2-PSK/WPA-PSK or WPA2/WPA authentication

#### Operating information:

##### ◆ USB port

If connecting a device without its own power supply directly to the USB port, please note that the power consumption must not exceed 500 mA. If this value is exceeded, you will have to use a separate power supply unit for your USB device or connect a USB hub with a separate power supply. A USB hard drive and a USB printer can be operated simultaneously on a USB hub.

##### ◆ LAN ports

The LAN ports may only be used for in-house networks. The ports are destroyed externally if there is a power surge.

##### ◆ Telephone ports

The phone ports are only suitable for connecting in-house phones/phone systems. The ports are destroyed externally if there is a power surge.

### Deactivating HTTP proxy and configuring a pop-up blocker

---

Before you can start the configuration program of the Gigaset SX763 WLAN dsl, you might need to adjust the settings described below for your Web browser.

#### Deactivating the HTTP proxy

---

Make sure that the [HTTP proxy](#) in your web browser is deactivated. This function must be deactivated so that your web browser can access your Gigaset SX763 WLAN dsl's configuration pages.

The following section describes the procedure for Internet Explorer and Mozilla Firefox. First decide which browser you wish to use, and then follow the appropriate steps.

##### ◆ Internet Explorer

- ➔ Open Internet Explorer and from the **Tools** menu, select **Internet Options**.
- ➔ In the **Internet Options** window, click the **Connections** tab.
- ➔ Click **LAN Settings**.
- ➔ Deactivate all options in the **LAN Settings** window.
- ➔ Click **OK** and then **OK** again to close the **Internet Options** window.

##### ◆ Mozilla Firefox

- ➔ Open Mozilla Firefox. Click **Tools** and then **Settings**.
- ➔ In the **Settings** window, click **Connection Settings...**
- ➔ In the **Connection Settings** window, select the option **Direct connection to the Internet**.
- ➔ Click **OK** to finish.

#### Configuring the pop-up blocker

---

You must allow pop-ups for the configuration program in order to start it.

##### ◆ Internet Explorer

If working with Windows XP Service Pack 2, pop-ups are blocked by default. Carry out the following steps:

- ➔ Right-click on the browser information bar.
- ➔ Select **Allow popups from this screen**.
- ➔ Confirm the dialogue window by clicking **OK**.

The configuration screens for the Gigaset SX763 WLAN dsl are now allowed as pop-ups.

You can make additional settings for pop-ups within Internet Explorer via the **Tools – Pop-up Manager** menu item or via **Tools – Internet Options** on the **Privacy** tab.

##### ◆ Mozilla Firefox

Pop-ups are blocked by default. Carry out the following steps:

- ➔ Open Mozilla Firefox. Click **Tools** and then **Settings**.

- ➔ Click on the **Content** icon.
- ➔ Deactivate the **Block Popup window** option.
- ➔ Click **OK** to finish.

**Please note:**

Should you use a different pop-up blocker, you must configure this accordingly.

## Specifications

---

### Interfaces

1 DSL	RJ11, RJ-45
4 LAN	RJ45, 10Base-T/100Base-TX, Auto-sensing
1 USB	USB 2.0, for printer server or file server (max. 500 mA)
1 FXO	RJ11 or country-specific (Annex A), for connecting to the analogue telephone network
2 FXS	RJ11, for connecting analogue terminals (phone, fax, answering machine)
WLAN	802.11g, for wireless connection of up to 252 PCs, Atheros Super G (108 Mbps)
External network adaptor	Input 230 V AC, output 12 V/1500 mA DC

### Wireless properties

Frequency range	2400 to 2484 GHz ISM band (subject to local regulations)
Spreading	Direct Sequence Spread Spectrum (DSSS)
Modulation	CCK, OFDM
Number of channels	IEEE 802.11b: 13 (Europe, ETSI) IEEE 802.11g: 13 (Europe, ETSI)
Transfer rate	IEEE 802.11b: 1, 2, 5.5, 11 Mbps IEEE 802.11g: 1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54 Mbps Super G: 54, 72, 108 Mbps
Range	Up to 300 m outdoors, up to 30 m indoors

### Operating environment

Temperature	Operating temperature 0 to 40 °C Storage temperature –25 to 70°C
Humidity	5% to 90% (non-condensing)

### LED displays

Power (on/off)  
ADSL (operation, synchronisation)  
Online (activity, Internet)  
WLAN (activity, wireless)  
LAN1... LAN4 (connection to PC, activity, wired)  
USB (device connection)  
VoIP (connection, activity, Internet telephony)  
Phone1/Phone2 (FXS activity)  
Line (FXO activity, fixed network)

### Compliance with security conditions and regulations

CE, EN60950

### Software

Browser-based configuration environment  
NAT, PPPoE, PPPoA  
VPN pass-through, L2TP, IPSec  
DHCP server and client, DynDNS  
NAT, virtual server, DMZ  
Security setup  
Firewall, prevention of hacker attacks  
MAC address filtering  
Log file  
WEP encryption  
WPA-PSK and WPA2-PSK encryption  
WPA and WPA2 authentication  
WPS  
IEEE 802.1x  
Integrated SIP client

## Authorisation

---

This device is intended for analogue phone lines worldwide. Outside the European Economic Area excluding Switzerland, depending on national type approval.

Cet appareil est destinée pour une utilisation domestique en France.

Concerning the Annex A / B operation, more information are available on the label of the device.

Not all of the functions described in these instructions are available in all countries.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs)

CE 0682!

## Open Source Software used in the product

---

The product contains, among other things, embedded Open Source Software, licensed under an Open Source Software License and developed by third parties. These embedded Open Source Software files are protected by copyright. Your rights to use the Open Source Software beyond the mere execution of the program of Gigaset Communications GmbH are governed by the relevant Open Source Software license conditions.

Your compliance with those license conditions will entitle you to use the Open Source Software as foreseen in the relevant license. In the event of conflicts between Gigaset Communications GmbH license conditions and the Open Source Software license conditions, the Open Source Software conditions shall prevail with respect to the Open Source Software portions of the software. A list of the Open Source Software programs contained in this product and the Open Source Software licenses are available on the product CD. Furthermore the license conditions can be found at the following internet website.

<http://www.gigaset.com/opensource>

If programs contained in this product are licensed under GNU General Public License (GPL), GNU Lesser General Public License (LGPL) or any other Open Source Software license that requires that source code be made available, and if this software is not already delivered in source code form together with the product, you can download the source code and the copyright notices of the relevant software from the internet at: <http://www.gigaset.com/opensource>

Additionally you can request the corresponding source code from Gigaset Communications GmbH by paying a 10 Euro fee for the physical act of transferring the copy. Please send your specific request, together with a receipt indicating the date of purchase, within three years of your purchase, together with the ID number (MAC ID) of the product and the software release number to the following address (please consult the user manual on how to find out these numbers):

Kleinteileversand Bocholt

E-Mail: [kleinteileversand.com@gigaset.com](mailto:kleinteileversand.com@gigaset.com)

Fax: +49 (0)2871 / 91 30 29

### Warranty regarding further use of the Open Source Software

Gigaset Communications GmbH provides no warranty for the Open Source Software programs contained in this product, if such programs are used in any manner other than the program execution intended by Gigaset Communications GmbH. The licenses listed below define the warranty, if any, from the authors or licensors of the Open Source Software. Gigaset Communications GmbH specifically disclaims any warranties for defects caused by altering any Open Source Software program or the product's configuration. You have no warranty claims against Gigaset Communications GmbH in the event that the Open Source Software infringes the intellectual property rights of a third party. Technical support, if any, will only be provided for unmodified software.

## Appendix

### **Open Source Software Used**

This product includes software developed by the University of California, Berkeley and its contributors.

# Glossary

## Access point

An access point, such as the Gigaset SX763 WLAN dsl, is the centre of a wireless local network ([WLAN](#)). It handles the connection of the wireless linked network components and regulates the data traffic in the wireless network. The access point also serves as an interface to other networks, for example an existing [Ethernet](#) LAN or via a modem to the [Internet](#). The operating mode of wireless networks with an access point is called [Infrastructure mode](#).

## Ad-hoc mode

Ad-hoc mode describes wireless local networks ([WLANs](#)), in which the network components set up a spontaneous network without an [Access point](#), for example several Notebooks in a conference. All the network components are peers. They must have a wireless [Network adapter](#).

## ADSL /ADSL2+

Asymmetric Digital Subscriber Line (ADSL) and ADSL 2+ are special types of [DSL](#) data transfer technology.

## AES

Advanced Encryption Standard

AES is an encryption system, which was published as a standard in October 2000 by the National Institute of Standards and Technology (NIST). It is used for [WPA](#) encryption. A distinction is made between the three AES variants AES-128, AES-192 and AES-256 on the basis of the key length.

## Auto connect

Auto connect means that applications such as Web browser, Messenger and E-mail automatically open an [Internet](#) connection when they are launched. This can lead to high charges if you are not using [Flat rate](#). To avoid this, you can select the manual connect option on the Gigaset SX763 WLAN dsl.

## Bridge

A bridge connects several network segments to form a joint network, for example to make a [TCP/IP](#) network. The segments can have different physical characteristics, for example different cabling as with [Ethernet](#) and wireless LANs. Linking individual segments via bridges allows local networks of practically unlimited size.

See also: [Switch](#), [Hub](#), [Router](#), [Gateway](#)

## Broadcast

A broadcast is a data packet not directed to a particular recipient but to all the network components in the network. The Gigaset SX763 WLAN dsl does not pass on broadcast packets; they always remain within the local network ([LAN](#)) it administers.

## Glossary

### BSSID

Basic Service Set ID

BSSID permits unique differentiation of one wireless network ([WLAN](#)) from another. In [Infrastructure mode](#), the BSSID is the [MAC address](#) of the [Access point](#). In wireless networks in [Ad-hoc mode](#), the BSSID is the MAC address of any one of the participants.

### Client

A client is an application that requests a service from a [server](#). For example, an HTTP client on a PC in a local network requests data, i.e. Web pages from an HTTP server on the [Internet](#). Frequently the network component (e.g. the PC) on which the client application is running is also called a client.

### DHCP

Dynamic Host Configuration Protocol

DHCP handles the automatic assignment of [IP addresses](#) to network components. It was developed because of the complexity involved in defining IP addresses in large networks – especially the [Internet](#) – as participants frequently move, drop out or new ones join. A DHCP server automatically assigns the connected network components (DHCP [Clients](#)) [Dynamic IP addresses](#) from a defined [IP pool range](#) thus saving a great deal of configuration work. In addition, the address blocks can be used more effectively: Since not all participants are on the network at the same time, the same IP address can be assigned to different network components in succession as and when required.

The Gigaset SX763 WLAN dsl includes a DHCP server and uses it to assign automatic IP addresses to PCs in the local network. You can specify that the IP addresses for certain PCs are never changed.

### DHCP server

See [DHCP](#)

### DMZ

Demilitarised Zone

DMZ describes a part of a network that is outside the [Firewall](#). A DMZ is set up, as it were, between a network you want to protect (e.g. a [LAN](#)) and a non-secure network (e.g. the [Internet](#)). A DMZ is useful if you want to offer [Server](#) services on the Internet that are not to be run from behind the firewall for security reasons or if Internet applications do not work properly behind a firewall. A DMZ permits unrestricted access from the Internet to only one or a few network components, while the other network components remain secure behind the firewall.

### DNS

Domain Name System

DNS permits the assignment of IP addresses to computers or [Domain names](#) that are easier to remember. A DNS server must administer this information for each [LAN](#) with an [Internet](#) connection. As soon as a page on the Internet is called up, the browser



obtains the corresponding IP address from the DNS server so that it can establish the connection.

On the Internet, the assignment of domain names to IP addresses follows a hierarchical system. A local PC only knows the address of the local name server. This in turn knows all the addresses of the PCs in the local network and the superordinate name servers, which again know addresses or the next superordinate name servers.

**DNS server**

See [DNS](#)

**Domain name**

The domain name is the reference to one or more Web servers on the [Internet](#). The domain name is mapped via the [DNS](#) service to the corresponding [IP address](#).

**DoS attack**

Denial of Service

A DoS attack is a particular form of hacker attack directed at computers and networks with a connection to the [Internet](#). The aim is not so much to steal data but to paralyse the computer or network so severely that the network resources are no longer available. A typical hacker attack involves making a remote computer announce that it is acting for the paralysed computer, for example, and receive the data intended for you.

**DSL**

Digital Subscriber Line

DSL is a data transfer technique in which a connection to the [Internet](#) can be run at high speed over normal telephone lines. A DSL connection is provided by an [Internet service provider](#). It requires a DSL modem.

**Dynamic IP address**

A dynamic [IP address](#) is assigned to a network component automatically by [DHCP](#). This means that the IP address of a network component can change with every login or at certain intervals.

See also: [Static IP address](#)

**DynDNS**

Dynamic DNS

The assignment of [Domain names](#) and [IP addresses](#) is handled by the Domain Name Service ([DNS](#)). This service is now enhanced with so-called Dynamic DNS (DynDNS) for [Dynamic IP addresses](#). This enables the use of a network component with a dynamic IP address as a [Server](#) on the Internet. DynDNS ensures that a service can always be addressed on the [Internet](#) under the same domain name regardless of the current IP address.

**Encryption**

Encryption protects confidential information against unauthorised access. With an encryption system, data packets can be sent securely over a network. The Gigaset

## Glossary

SX763 WLAN dsl offers [WEP](#) encryption and [WPA](#) for secure data transfer over wireless networks.

### Ethernet

Ethernet is a network technology for local networks ([LANs](#)) defined by the [IEEE](#) as standard IEEE 802.3. Ethernet uses a base-band cable with a transfer rate of 10 or 100 [Mbps](#) or 1 Gbps.

### File Server

See [Server](#)

### Firewall

Firewalls are used by network operators as protection against unauthorised external access. This involves a whole bundle of hardware and software actions and technologies that monitor and control the data flow between the private network to be protected and an unprotected network such as the [Internet](#).

See also: [NAT](#)

### Flat rate

Flat rate is a particular billing system for [Internet](#) connections. The [Internet service provider](#) charges a monthly fee regardless of the duration and number of logins.

### FTP (File Transfer Protocol)

FTP is a protocol for exchanging files on the Internet. You can use it, for example, to offer files for downloading or to receive files from other users.

### Full duplex

Data transfer mode in which data can be sent and received at the same time.

See also: [Half duplex](#)

### Gateway

A gateway is a device for connecting networks with completely different architectures (addressing, protocols, application interfaces etc.). Although it is not totally correct, the term is also used as a synonym for [Router](#).

### Global IP address

See [Public IP address](#)

### Half duplex

Operating mode for data transmission. Only one side can send and/or receive data at the same time.

See also: [Full duplex](#)

### HTTP proxy

An HTTP proxy is a [Server](#) that network components use for their [Internet](#) traffic. All requests are sent via the proxy.

**Hub**

A hub connects several network components in a star-topology network by sending all the data it receives from one network component to all the other network components.

See also: [Switch](#), [Bridge](#), [Router](#), [Gateway](#)

**IEEE**

Institute of Electrical and Electronic Engineers

The IEEE is an international body for defining network standards, especially for standardising [LAN](#) technologies, transfer protocols, data transfer speeds and wiring.

**IEEE 802.11**

[IEEE 802.11](#) is a standard for wireless LANs operating in the 2.4 GHz or 5 GHz band. In so-called [Infrastructure mode](#), terminals can be connected to a base station ([Access point](#)) or they can connect with each other spontaneously ([Ad-hoc mode](#)).

**IGMP**

Internet Group Management Protocol

IGMP is an Internet [Protocol](#) that enables an Internet computer to inform neighbouring routers that it is a member of a multicast group. With multicasting, a computer can send content on the Internet to several other computers that have registered an interest in the first computer's content. Multicasting can, for example, be used for multimedia programs for media streaming to recipients that have set up multicast group membership.

**Infrastructure mode**

Infrastructure mode is a way of operating wireless local networks ([WLANs](#)) in which an [Access point](#) handles the data traffic. Network components cannot establish a direct connection with each other as is the case in [Ad-hoc mode](#).

**Internet**

The Internet is a wide-area network ([WAN](#)) linking several million users around the world. A number of [Protocols](#) have been created for exchanging data, and these are known collectively as [TCP/IP](#) protocol stack. All participants on the Internet can be identified by an [IP address](#). Servers are addressed by [Domain names](#) (e.g. gigaset.com). Domain names are assigned to IP addresses by the Domain Name Service ([DNS](#)).

These are some of the main Internet services:

- ◆ Electronic mail (e-mail)
- ◆ The World Wide Web (WWW)
- ◆ File transfer (FTP)
- ◆ Discussion forums (Usenet / Newsgroups)

**Internet service provider**

An Internet service provider offers access to the [Internet](#) for a fee.

**Internet telephony**

Transmission of voice via the [Internet](#) (Voice over [IP](#)).

## Glossary

### IP

Internet protocol

The IP [Protocol](#) is one of the [TCP/IP](#) protocols. It is responsible for addressing parties in a network using [IP addresses](#) and routes data from the sender to the recipient. It decides the paths along which the data packets travel from the sender to the recipient in a complex network (routing).

### IP address

The IP address is the unique network-wide address of a network component in a network based on the [TCP/IP](#) protocols (e.g. in a local area network ([LAN](#)) or on the [Internet](#)). The IP address has four parts (each with up to three-position digit sequences) separated by full stops (e.g. 192.168.1.1). The IP address comprises the network number and the computer number. Depending on the [Subnet mask](#), one, two or three parts form the network number; the remainder form the computer number. You can find out the IP address of your PC using the **ipconfig** command.

IP addresses can be assigned manually (see [Static IP address](#)) or automatically (see [Dynamic IP address](#)).

On the Internet [Domain names](#) are normally used instead of the IP addresses. The [DNS](#) is used to assign domain names to IP addresses.

The Gigaset SX763 WLAN dsl has a [Private IP address](#) and a [Public IP address](#).

### IPoA

IP over ATM

### IP pool range

The Gigaset SX763 WLAN dsl's IP address pool defines a range of [IP addresses](#) that the router's [DHCP server](#) can use to assign [Dynamic IP addresses](#).

### ISP

(Internet Service Provider)

[Internet service provider](#)

### LAN

Local network

A local area network (or local network) links network components so that they can exchange data and share resources. The physical range is restricted to a particular area (a site). As a rule the users and operators are identical. A local network can be connected to other local networks or to a wide-area network ([WAN](#)) such as the [Internet](#).

With the Gigaset SX763 WLAN dsl you can set up a wired local [Ethernet](#) network and a wireless [IEEE 802.11g](#) standard network ([WLAN](#)).

### Local IP address

See [Private IP address](#)

**MAC address**

Media Access Control

The MAC address is used for the globally unique identification of a [Network adapters](#). It comprises six parts (hexadecimal numbers), e.g. 00-90-96-34-00-1A. The MAC address is assigned by the network adapter manufacturer and should not be changed.

**Mbps**

Million bits per second

Specification of the transfer speed in a network.

**MER**

MAC Encapsulated Routing

**MRU**

Maximum Receive Unit

The MRU defines the maximum user data volume within a data packet.

**MTU**

Maximum Transmission Unit

The MTU defines the maximum length of a data packet that can be carried over the network at any one time.

**NAT**

Network Address Translation

NAT is a method for converting IP addresses ([Private IP addresses](#)) within a network into one or several [Public IP addresses](#) on the [Internet](#). With NAT, several network components in a [LAN](#) can share the router's public IP address to connect to the Internet. The network components of the local network are hidden behind the router's IP address registered on the Internet. Because of this security function, NAT is frequently used as part of the [Firewall](#) of a network. If you want to make services on a PC in the local network available on the Internet despite NAT, you can configure the Gigaset SX763 WLAN dsl as a [Virtual server](#).

**Network**

A network is a group of devices connected in wired or wireless mode so that they can share resources such as data and peripherals. A general distinction is made between local networks ([LANs](#)) and wide-area networks ([WANs](#)).

**Network adapter**

The network adapter is the hardware device that creates the connection between a network component and a local network. The connection can be wired or wireless. An Ethernet network card is an example of a wired network adapter. The Gigaset PC Card 108 and the Gigaset USB Adapter 108 are examples of wireless network adapters.

A network adapter has a unique address, the [MAC address](#).

## Glossary

### Public IP address

The public [IP address](#) (also known as the global IP address) is a network component's address on the [Internet](#). It is assigned by the [Internet service provider](#). Devices that create a link from a LAN to the Internet, such as the Gigaset SX763 WLAN dsl, have a public and a [Private IP address](#).

### PBX

Private Branch Exchange

PBX is the English acronym for a public branch exchange, which allows connection and configuration of extensions and telephone functions.

### Port

Data is exchanged between two applications in a network across a port. The port number addresses an application within a network component. The combination of [IP address](#)/port number uniquely identifies the recipient or sender of a data packet within a network. Some applications (e.g. Internet services such as HTTP or FTP) work with fixed port numbers; others are allocated a free port number whenever they need one.

### Port forwarding

In port forwarding, the Gigaset SX763 WLAN dsl directs data packets from the [Internet](#) that are addressed to a particular [Port](#) to the corresponding port of the appropriate network component. This enables servers within the local network to offer services on the Internet without them needing a [Public IP address](#).

See also: [Virtual server](#)

### PPPoA

Point-to-Point Protocol over ATM

PPPoA is a [Protocol](#) for connecting network components in a local Ethernet network to the [Internet](#) via an ATM network.

### PPPoE

Point-to-Point Protocol over [Ethernet](#)

PPPoE is a [Protocol](#) for connecting network components in a local Ethernet network to the [Internet](#) via a modem.

### Print server

See [Server](#)

### Private IP address

The private [IP address](#) (also known as the local IP address) is a network component's address within the local network ([LAN](#)). The network operator can assign any address he or she wants. Devices that act as a link from a local network, such as the Gigaset SX763 WLAN dsl, have a private and a [Public IP address](#).

**Protocol**

A protocol describes the agreements for communicating in a network. It contains rules for opening, administering and closing a connection, as well as in relation to data formats, time frames and possibly troubleshooting. Communication between two applications requires different protocols at various levels, for example the [TCP/IP](#) protocols for the [Internet](#).

**PVC**

Permanent Virtual Circuit

A permanent virtual circuit is a logical connection in an ATM network.

**QoS**

Quality of Service

QoS allows network traffic to be sorted according to priorities. When this parameter is activated, Internet telephony is given priority over other data traffic. This is a precondition for problem-free calls.

**Radio network**

See [WLAN](#)

**Rekey interval**

The rekey interval is the period after which new keys are automatically generated for data encryption with [WPA-PSK](#).

**Remote management**

Remote management refers to the ability to manage a network from a network component that is actually outside the local network ([LAN](#)).

**Repeater**

A repeater extends the range of a wireless local network by relaying data from the [Access point](#) to additional PCs or [Network adapters](#).

**Roaming**

Roaming extends the range of a wireless LAN by using several [Access points](#) that use the same [SSID](#) and the same radio channel and are linked via [Ethernet](#). The PCs in the network can switch dynamically between several access points without losing the existing network connection.

**Router**

A router directs data packets from one local network ([LAN](#)) to another via the fastest route. A router makes it possible to connect networks that have different network technologies. For example, it can link a local network with [Ethernet](#) or [WLAN](#) technology to the [Internet](#).

See also: [Bridge](#), [Switch](#), [Hub](#), [Gateway](#)

## Glossary

### Server

A server makes a service available to other network components ([Clients](#)). The term "server" is often used to refer to a computer or PC. However, it can also mean an application that provides a particular service such as [DNS](#), Web server, file server or print server.

### SIP

Session Initiation Protocol

SIP is a standard for data transfer in Internet telephony ([VoIP](#)). It describes how a call is carried over the data network and which components plus which transport and signaling protocols are involved.

### SIP proxy server

The SIP proxy server sets up the connection to the Internet for Internet telephony ([VoIP](#)) for all connected [SIP clients](#).

### SIP client

A SIP client enables Internet telephony ([VoIP](#)). It can be installed as software on a PC and thereby enable Internet telephony via the local network in wireless or wired mode. Wireless SIP phones (WLAN handsets) can likewise be used via the local network for Internet telephony.

### SMTP

Simple Mail Transfer Protocol

The SMTP [Protocol](#) is part of the [TCP/IP](#) protocol family. It governs the exchange of electronic mail on the [Internet](#). Your [Internet service provider](#) provides you with access to an SMTP server.

### SNMP

Simple Network Management Protocol

The SNMP [Protocol](#) is part of the [TCP/IP](#) protocol family. It provides a simple procedure for administering the network based on a system of shared information for management data and network management messages (known as traps) and reports the occurrence of events within the monitored network (e.g. an alarm message or notification of configuration changes).

### SSID

Service Set Identifier

The SSID is used to identify the stations in a wireless network ([WLAN](#)). All wireless network components with the same SSID form a common network. The SSID can be assigned by the network operator.

### Static IP address

A static [IP address](#) is assigned to a network component manually during network configuration. Unlike the [Dynamic IP address](#), a static (fixed) IP address never changes.



**Subnet**

A subnet divides a network into smaller units.

**Subnet mask**

The subnet mask determines how parts of [IP addresses](#) of a network represent the network number and how many the computer number.

If the subnet mask is in a network that is administered by the Gigaset SX763 WLAN dsl, for example 255.255.255.0, that means the first three parts of the IP address form the network number and only the final part can be used for assigning host numbers. The first three parts of the IP address of all network components are therefore always the same in this case.

**Super G**

Super G is an extension of the IEEE 802.11g mode. Channel bundling can be used to double the maximum transfer rate to 108 Mbps.

**Switch**

A switch, like a [Hub](#), is an element used to link different network segments or components. Unlike a hub however, the switch has its own intelligence that enables it to forward packets to only the subnet or network component they are meant for.

See also: [Bridge](#), [Hub](#), [Router](#), [Gateway](#)

**TCP**

Transmission Control Protocol

The TCP [Protocol](#) is part of the [TCP/IP](#) protocol family. TCP handles data transport between communication partners (applications). TCP is a session-based transfer protocol, i.e. it sets up, monitors and terminates a connection for transferring data.

See also: [UDP](#)

**TCP/IP**

[Protocol](#) family on which the [Internet](#) is based. [IP](#) forms the basis for every computer-to-computer connection. [TCP](#) provides applications with a reliable transmission link in the form of a continuous data stream. TCP/IP is the basis on which services such as WWW, Mail and News are built. There are other protocols as well.

**UDP**

User Datagram Protocol

UDP is a [Protocol](#) of the [TCP/IP](#) protocol family that handles data transport between two communication partners (applications). Unlike [TCP](#), UDP is a non-session based protocol. It does not establish a fixed connection. The recipient is responsible for making sure the data is received. The sender is not notified about whether it is received or not.

## Glossary

### UPnP

Universal Plug and Play

UPnP technology is used for the spontaneous linking of home or small office networks. Devices that support UPnP carry out their network configuration automatically once they are connected to a network. They also provide their own services or use services of other devices in the network automatically.

### URL

Universal Resource Locator

Globally unique address of a domain on the [Internet](#).

### Vanity

The term vanity comes from the United States. Alphanumeric keypads on phones and other phone terminals allow you to represent phone numbers as words so that they can be remembered more easily. Instead of a combination of digits, you select a combination of letters.

### VCI

Virtual Channel Identifier

Part of an address in an ATM network.

### Virtual server

A virtual [Server](#) provides a service on the [Internet](#) that runs not on itself, but on another network component. The Gigaset SX763 WLAN dsl can be configured as a virtual server. It will then direct incoming calls for a service via [Port forwarding](#) directly to the appropriate [Port](#) of the network component in question.

### VLAN

#### Virtual Local Area Network

A VLAN is a virtual local network within a physical network. A widely disseminated technical implementation of VLANs is defined partially in the Standard IEEE 802.1Q. VLAN allows preferred forwarding of voice data, for example. This functionality is important for VoIP (IP telephony). This also means that phone calls can be made without interruption with a restricted bandwidth.

### VoIP

Voice over IP

See [Internet telephony](#)

### VPI

Virtual Path Identifier

Part of an address in an ATM network.

**WAN**

Wide Area Network

A WAN is a wide area network that is not restricted physically to a particular area, for example the [Internet](#). A WAN is run by one or more public providers to enable private access. You access the Internet via an [Internet service provider](#).

**WDS**

Wireless Distribution System

WDS describes the wireless connection between a number of access points.

**Web server**

See [Server](#)

**WEP**

Wired Equivalent Privacy

WEP is a security protocol defined in the [IEEE 802.11](#) standard. It is used to protect wireless transmissions in a [WLAN](#) against unauthorised access through [Encryption](#) of the data transmitted.

**WLAN**

Wireless LAN

Wireless LANs enable network components to communicate with a network using radio waves as the transport medium. A wireless LAN can be connected as an extension to a wired LAN or it can form the basis for a new network. The basic element of a wireless network is the cell. This is the area where the wireless communication takes place. A WLAN can be operated in [Ad-hoc mode](#) or [Infrastructure mode](#).

WLAN is currently specified in Standard [IEEE 802.11](#). The Gigaset SX763 WLAN dsl complies with Standard 802.11g.

**WPA**

WPA is a new standard-conformant solution for greater security in wireless networks. WPA is meant to replace the existing WEP standard (Wired Equivalent Privacy) and offers more reliable encryption and authentication methods.

**WPA-PSK**

WPA Pre-shared Key

Variant of [WPA](#) data encryption in which new keys are automatically generated at regular intervals by means of a keyword (pre-shared key). The key is updated after defined periods ([Rekey interval](#)).

## Glossary

### WPS

#### Wi-Fi Protected Setup

WPS simplifies the setup of wireless networks.

WPS automatically sets up secure wireless networks. [Access points](#) (or clients with included registrar or external registrar) can automatically generate a network ID ([SSID](#)) and [WPA-PSK Encryption](#) if this was not performed previously. Clients can be connected either by entering a PIN or using special registration buttons on the access point and client.

### XR

#### eXtended Range

XR technology extends the range in a WLAN and in so doing allows improved coverage of the desired range in home or small office networks. Activating this function at the access point can extend the range to the network adapters considerably, though the data transfer rate is reduced as a result.

# Index

- Numerics
  - 10/100 Mbps switch port. . . . . 26
  - 128-bit encryption. . . . . 96
  - 128-bit key . . . . . 57, 96
  - 64-bit key . . . . . 57, 96
- A
  - Access control . . . . . 59, 74, 98
    - local area network . . . . . 98
  - Access point . . . . . 11, 87, 175
  - Address block for
    - IP addresses . . . . . 85
  - Ad-hoc mode. . . . . 11, 175
  - Ad-hoc network. . . . . 11
  - ADSL interface. . . . . 12
  - ADSL modem
    - integrated . . . . . 7
  - ADSL port . . . . . 26
  - ADSL/ADSL2+ . . . . . 7
  - Advanced Settings
    - features . . . . . 62
  - Advanced setup. . . . . 40
  - AES . . . . . 55, 175
  - Annex A . . . . . 164
  - Annex B. . . . . 164
  - Antenna . . . . . 25
  - Anti-DoS firewall . . . . . 73
  - Area code
    - Internet telephony . . . . . 109
  - ASCII key . . . . . 58, 96
  - Attack detection . . . . . 73
  - Authentication server . . . . . 94
  - Authorisation . . . . . 172
  - Auto connect. . . . . 175
- B
  - Backing up configuration data . . . . 131
  - Backup . . . . . 131
  - Bandwidth for VoIP . . . . . 103
  - Base station see Access point
  - Baseline. . . . . 8, 164
- Basic settings . . . . . 40
  - configuration . . . . . 43
  - summary . . . . . 50
- Bridge . . . . . 175
- Broadcast . . . . . 88, 175
- Browser . . . . . 38
- BSSID . . . . . 176
- Buttons . . . . . 42
- C
  - Call forwarding . . . . . 108
  - Call waiting . . . . . 108
  - Calling line identification restriction . 108
  - Client. . . . . 176
  - CLIR . . . . . 108
  - Command
    - net share . . . . . 161
  - Computerbrowser . . . . . 162
  - Configuration
    - resetting to factory setting . . . . . 132
    - restoring. . . . . 132
    - security. . . . . 51
  - Configuration file . . . . . 131
  - Configuring popup blocker. . . . . 170
  - Confirmation tone
    - negative . . . . . 124
    - positive. . . . . 124
  - Connection duration . . . . . 46
  - Connection mode. . . . . 46, 67
  - Connection on request. . . . . 46, 67
  - Connection type. . . . . 64
    - ADSL. . . . . 64
  - Country settings. . . . . 126
- D
  - Data encryption . . . . . 95
  - Deactivating the HTTP proxy. . . . . 170
  - Device (Annex A or B version) . . . . 164
  - DHCP . . . . . 176
  - DHCP server . . . . . 85, 176
  - Dialling plans . . . . . 109
  - Digital Subscriber Line see DSL
  - Displaying the operating state . . . 23, 35
  - DMZ. . . . . 19, 176

## Index

- DNS . . . . . 176
- DNS server . . . . . 177
  - defining . . . . . 70
- Domain name . . . . . 177
- Domain Name Service see DNS
- DoS attack . . . . . 73, 177
- DSL . . . . . 177
- DSL interface
  - configuring . . . . . 43
- Dynamic DNS see DynDNS
- Dynamic Host Configuration Protocol,  
see DHCP
- Dynamic IP address . . . . . 177
- DynDNS . . . . . 81, 177
- DynDNS service, see DynDNS
- DynDNS.org . . . . . 81, 82
- E
- ECO . . . . . 8
- Encryption . . . . . 54, 92, 96, 177
  - WEP . . . . . 57
  - WPA . . . . . 55
- Ethernet . . . . . 10, 11, 18, 178
  - transmission speed. . . . . 18
- Ethernet network
  - linking with a wireless network . . . 13
- Exposed host . . . . . 80
- Extending wireless coverage . . . . . 14
- Extensions . . . . . 105
- F
- Features . . . . . 18
- File and Printer Sharing . . . . . 159
- File server . . . . . 113
  - partition list . . . . . 114
  - sharing directories . . . . . 114
- Firewall . . . . . 19, 178
  - activating/deactivating . . . . . 72
  - attack detection . . . . . 73
  - configuring . . . . . 72
  - security level . . . . . 73
  - Windows . . . . . 163
- Firmware
  - current version . . . . . 133, 135
  - updating . . . . . 133
- Flat rate . . . . . 178
- Full duplex . . . . . 178
- G
- Games on the Internet . . . . . 77
- Gateway . . . . . 178
- Gigaset SX76x
  - Annex A . . . . . 164
  - Annex B . . . . . 164
  - device version . . . . . 164
  - Ethernet network setup . . . . . 10
  - IP address . . . . . 38
  - password protected. . . . . 52
- Gigaset SX76x WLAN dsl
  - configuring . . . . . 38
  - default settings . . . . . 21
  - installation . . . . . 22
  - possibilities for network setup . . . . . 9
  - rear panel . . . . . 26
  - setting up . . . . . 23
- Global IP address see Public IP address
- GNU General Public License . . . . . 173
- GNU Lesser General Public License . . 173
- GPL . . . . . 173
- H
- Hacker attack . . . . . 19
- Hacker attacks . . . . . 177
- Hacker protection . . . . . 73
- Half duplex . . . . . 178
- Help . . . . . 42
- Hexadecimal key . . . . . 58, 96
- HTTP proxy . . . . . 178
- Hub . . . . . 179
- I
- Idle time . . . . . 128
- IEEE . . . . . 179
- Infrastructure mode . . . . . 11, 179
- Installation . . . . . 22
- Installing printer driver
  - Windows XP/2000 . . . . . 157
- Institute of Electrical and Electronic  
Engineers see IEEE
- Inter Process Communication see IPC
- Internet . . . . . 63, 179, 180
  - connection mode . . . . . 46, 67
  - connection on request . . . . . 67
  - connection type . . . . . 64
  - manual connection . . . . . 68

- menu . . . . . 63
- service provider . . . . . 67
- setting up access control . . . . . 74
- setting up multiple connection
  - services . . . . . 64
- Internet access . . . . . 8
- Internet connection
  - changing configuration . . . . . 66
  - closing manually . . . . . 41
  - disconnecting automatically. . . 46, 68
  - opening manually . . . . . 41
  - setting up. . . . . 66
- Internet Explorer . . . . . 20, 38
- Internet protocol . . . . . 159
- Internet protocol see IP protocol
- Internet service provider . . 67, 179, 180
- Internet telephony. . . . . 7, 15
  - analogue phone. . . . . 101
  - dialling plans . . . . . 109
  - quick dial . . . . . 111
  - setting up. . . . . 101
  - VoIP settings . . . . . 102
- Internet time . . . . . 127
- IP address . . . . . 85, 180
  - address block. . . . . 85
  - assigning automatically . . . . . 84
  - assigning static . . . . . 85, 86
  - dynamic. . . . . 177
  - Gigaset SX76x . . . . . 38
  - private . . . . . 182
  - public. . . . . 182
  - static . . . . . 184
- IP address block for DHCP . . . . . 86
- IP address pool . . . . . 180
- IP protocol. . . . . 180
- IPC. . . . . 161
- IPoA. . . . . 180
- ISP see Internet service provider
- K**
- Key length . . . . . 57
  - 128 bit (ASCII) . . . . . 58, 96
  - 64 bit (ASCII) . . . . . 58, 96
  - 64 bit (hexadecimal) . . . . . 58, 96
- Key type . . . . . 58
- L**
- LAN . . . . . 13, 180
  - configuration . . . . . 84
- LAN port . . . . . 26
- Lease time . . . . . 85
- LED
  - behaviour after initial connection . . 35
  - WPS registration . . . . . 34
- LED displays. . . . . 35
- LGPL. . . . . 173
- Local area network see LAN
- Local IP address see
  - Private IP address
- Login screen. . . . . 38
- M**
- MAC access control list. . . . . 59, 98
- MAC address . . . . . 181
  - changing registration . . . . . 71
  - cloning . . . . . 71
- MAC address filter . . . . . 59
- MAC Encapsulated Routing
  - see MER
- MAC table . . . . . 59
- Mains adapter
  - port . . . . . 26
- Manual connection . . . . . 68
- Maximum Receive Unit see MRU
- Maximum Transmission Unit see MTU
- Mbps . . . . . 181
- MER. . . . . 181
- Mobile network . . . . . 11
- Mozilla Firefox . . . . . 20, 38
- MRU. . . . . 181
- MTU. . . . . 181
- N**
- NAT . . . . . 76, 181
  - port forwarding . . . . . 76
  - port triggering . . . . . 76
- Negative confirmation tone . . . . . 124
- Network. . . . . 181
  - ad-hoc . . . . . 11
  - infrastructure . . . . . 11
  - wired . . . . . 10
  - wireless . . . . . 11

## Index

- Network adapter . . . . . 181
  - Ethernet . . . . . 10
  - wireless . . . . . 11
- Network Address Translation . . . 76, 181
- Network component
  - mobile . . . . . 11
- Network printer . . . . . 144
- network share . . . . . 161
- New encryption . . . . . 93
- O
- Open Source Software . . . . . 173
- P
- Passphrase . . . . . 58
- Password . . . . . 39, 52
  - assigning . . . . . 52
  - changing . . . . . 52
  - forgotten . . . . . 52
- Permanent Virtual Circuit see PVC
- Phone
  - analogue . . . . . 15, 101
- Phone port . . . . . 26
  - splitter . . . . . 26
- Picking up call . . . . . 108
- PIN . . . . . 17
- Point-to-Point Protocol over ATM
  - see PPPoA
- Point-to-Point Protocol over Ethernet
  - see PPPoE
- Popup blocker . . . . . 170
- Port . . . . . 182
  - for DSL modem . . . . . 26
  - for mains adapter . . . . . 26
  - LAN . . . . . 26
  - public port . . . . . 76, 78
  - trigger port . . . . . 76, 78
- Port forwarding . . . . . 76, 182
  - setting up . . . . . 79
- Port number . . . . . 80, 182
  - illustration . . . . . 79
- Port triggering . . . . . 76, 77
  - setting up . . . . . 78
- Positive confirmation tone . . . . . 124
- PPPoE . . . . . 18, 182
- PPPoE pass-through . . . . . 47, 68
- Print server . . . . . 119
- Printer
  - connecting . . . . . 158
- Printer interface
  - configuring . . . . . 144
- Printer on the USB port . . . . . 112
- Printer port (TCP/IP), installing
  - later installation . . . . . 157
- Printer port installing
  - Windows Vista . . . . . 145
  - Windows XP/2000 . . . . . 151
- Printer wizard . . . . . 146, 152
- Private IP address . . . . . 182
- Problem solving . . . . . 164
- Protocol . . . . . 183
- Public IP address . . . . . 182
- PVC . . . . . 183
- Q
- Quality of service (QoS) . . . . . 183
- Quick dial . . . . . 111
- Quick dial numbers . . . . . 111
- R
- Radio network . . . . . 187
  - infrastructure mode . . . . . 11
- Radio settings . . . . . 87
- RADIUS server . . . . . 94
- Rear panel . . . . . 26
- Reboot . . . . . 27, 132
- Reboot function . . . . . 27
- Rekeying . . . . . 55
- Remote management . . . . . 128, 183
- Removing hardware safely . . . . . 113
- Repeater . . . . . 14, 99
- Reset button . . . . . 27
- Reset function . . . . . 27
- Resetting . . . . . 132
- Roaming . . . . . 183
- Router . . . . . 183
  - dynamic IP address . . . . . 81
  - IP address . . . . . 84
  - setting up a local area network . . . . . 9



- S**
- Security architecture, WEP . . . . . 95
  - Security measures . . . . . 19
  - Security settings . . . . . 40, 51
    - saving . . . . . 61
  - Server . . . . . 184
    - virtual . . . . . 186
  - Service Set Identifier *see* SSID
  - Session Initiation Protocol *see* SIP
  - Setting up . . . . . 23
  - Simple Mail Transfer Protocol *see* SMTP
  - Simple Network Management Protocol
    - see* SNMP
  - SIP . . . . . 184
  - SIP client . . . . . 106
  - SIP proxy server . . . . . 106
  - SIP user accounts . . . . . 107
  - SMTP . . . . . 184
  - SNMP . . . . . 184
  - Software release . . . . . 8, 164
  - Specifications . . . . . 171
  - SPI (Stateful Packet Inspection),
    - see* SPI
  - Splitter . . . . . 28, 29
  - SSID . . . . . 16, 22, 35, 53, 184
    - changing . . . . . 53
    - concealed . . . . . 88
    - default setting on router . . . . . 22
    - visible . . . . . 53, 88
  - SSID broadcast . . . . . 53, 88
  - Start screen . . . . . 39
  - Static IP address . . . . . 184
  - Status
    - device . . . . . 143
    - local area network . . . . . 141
    - overview . . . . . 137
    - security . . . . . 138
    - telephony . . . . . 142
    - wireless network . . . . . 141
  - Status information . . . . . 137
  - Subnet . . . . . 185
  - Subnet mask . . . . . 185
  - Super G . . . . . 7, 20, 185
  - Switch . . . . . 185
  - System log . . . . . 136
  - System management . . . . . 128
    - phone-based . . . . . 128
  - System password
    - assigning . . . . . 127
    - changing . . . . . 127
  - System requirements . . . . . 20
  - System time . . . . . 127
- T**
- TCP . . . . . 185
  - TCP/IP . . . . . 185
  - TCP/IP port for printer . . . . . 157
  - Telephone ports . . . . . 106
  - Telephony
    - basic settings . . . . . 48
    - call answering and forwarding . . . 123
    - call forwarding . . . . . 108
    - call waiting . . . . . 122
    - calling line identification
      - restriction . . . . . 108, 121
    - conference call . . . . . 122
    - consultation . . . . . 121
    - exchange settings . . . . . 124
    - extensions . . . . . 105
    - function keys . . . . . 120
    - important information . . . . . 101
    - internal call . . . . . 120
    - internal phone number . . . . . 107
    - toggling . . . . . 121
    - VoIP account . . . . . 48
  - Time server . . . . . 127
  - Trademarks . . . . . 21
  - Transmission Control Protocol *see* TCP
  - Transmission mode . . . . . 89
  - Transmission rate
    - upstream . . . . . 103
  - Transmission speed . . . . . 181
    - in the Ethernet LAN . . . . . 18
    - in wireless LAN . . . . . 18
  - Trigger port . . . . . 76
  - Troubleshooting . . . . . 164
- U**
- UDP . . . . . 185
  - Universal Plug and Play *see* UPnP
  - Universal Resource Locator *see* URL
  - UPnP . . . . . 47, 68, 186
    - enabling . . . . . 68
  - URL . . . . . 186

## Index

- USB . . . . . 112
  - file server . . . . . 113
  - print server . . . . . 119
  - Web server . . . . . 116
- USB data carrier . . . . . 112
- USB port . . . . . 112
- User Datagram Protocol see UDP
- User interface
  - buttons . . . . . 42
  - elements . . . . . 42
  - Help . . . . . 42
  - idle time . . . . . 128
  - logout . . . . . 42
  - starting . . . . . 38
- V
- Vanity . . . . . 111
- VCI . . . . . 186
- Virtual Channel Identifier see VCI
- Virtual Path Identifier see VPI
- Virtual server . . . . . 19, 77, 186
- VLAN tag . . . . . 65
- Voice over IP see Internet telephony
- VoIP account . . . . . 48
- VoIP bandwidth . . . . . 103
- VoIP see Internet telephony
- Volume, change for telephone calls . 103
- VPI . . . . . 186
- W
- WAN . . . . . 187
- WDS . . . . . 99
- Web server . . . . . 116
  - FTP . . . . . 117
  - HTTP service . . . . . 117
- WEP . . . . . 54, 57, 92, 95, 187
  - encryption mode . . . . . 96
  - hexadecimal . . . . . 58
  - key length . . . . . 57, 96
  - passphrase . . . . . 58
- Wide Area Network see WAN
- Wi-Fi Protected Setup see WPS
- Windows firewall . . . . . 163
- Wired Equivalent Privacy see WEP
- Wired network . . . . . 10
- Wireless cell . . . . . 187
- Wireless LAN see WLAN
- Wireless network
  - access control . . . . . 59
  - ad-hoc mode . . . . . 11
  - encryption . . . . . 54
  - name . . . . . 16
- WLAN . . . . . 11, 13, 187
  - operating modes . . . . . 11
  - transmission speed . . . . . 18
- WLAN adapter . . . . . 11
- WPA . . . . . 55, 92, 187
  - AES . . . . . 55
  - pre-installed key
  - pre-shared key . . . . . 187
- WPA2-PSK . . . . . 54, 93
- WPA-PSK . . . . . 55, 93
- WPA-PSK, see WPA, pre-installed key
- WPS . . . . . 16, 49, 51, 90
  - LED display during registration . . . 34
  - registration . . . . . 90
  - registration via button . . . . . 16
  - registration with PIN . . . . . 17
- WPS registration
  - via own PIN . . . . . 91
  - via PIN of the partner device . . . . . 91
  - via push button . . . . . 91



Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG.

© Gigaset Communications GmbH 2008  
All rights reserved. Subject to availability.  
Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)  
A31008-M707-R131-8x-7619