

PLEASE READ

This manual is provided as a free service by Projector.com.

We are in no way responsible for the contents of the manual. We do not guarantee its accuracy and we do not make any claim of copyright. The copyright remains the property of their respective owners.

ABOUT PROJECTOR.COM


Projector.com (<http://www.projector.com>) is your review and buying guide resource for DLP and LCD video projectors.

Visit the site to read the latest projector news and reviews, read and comment on projector specifications, download user manuals and much more.

SHARP®



OPERATION MANUAL

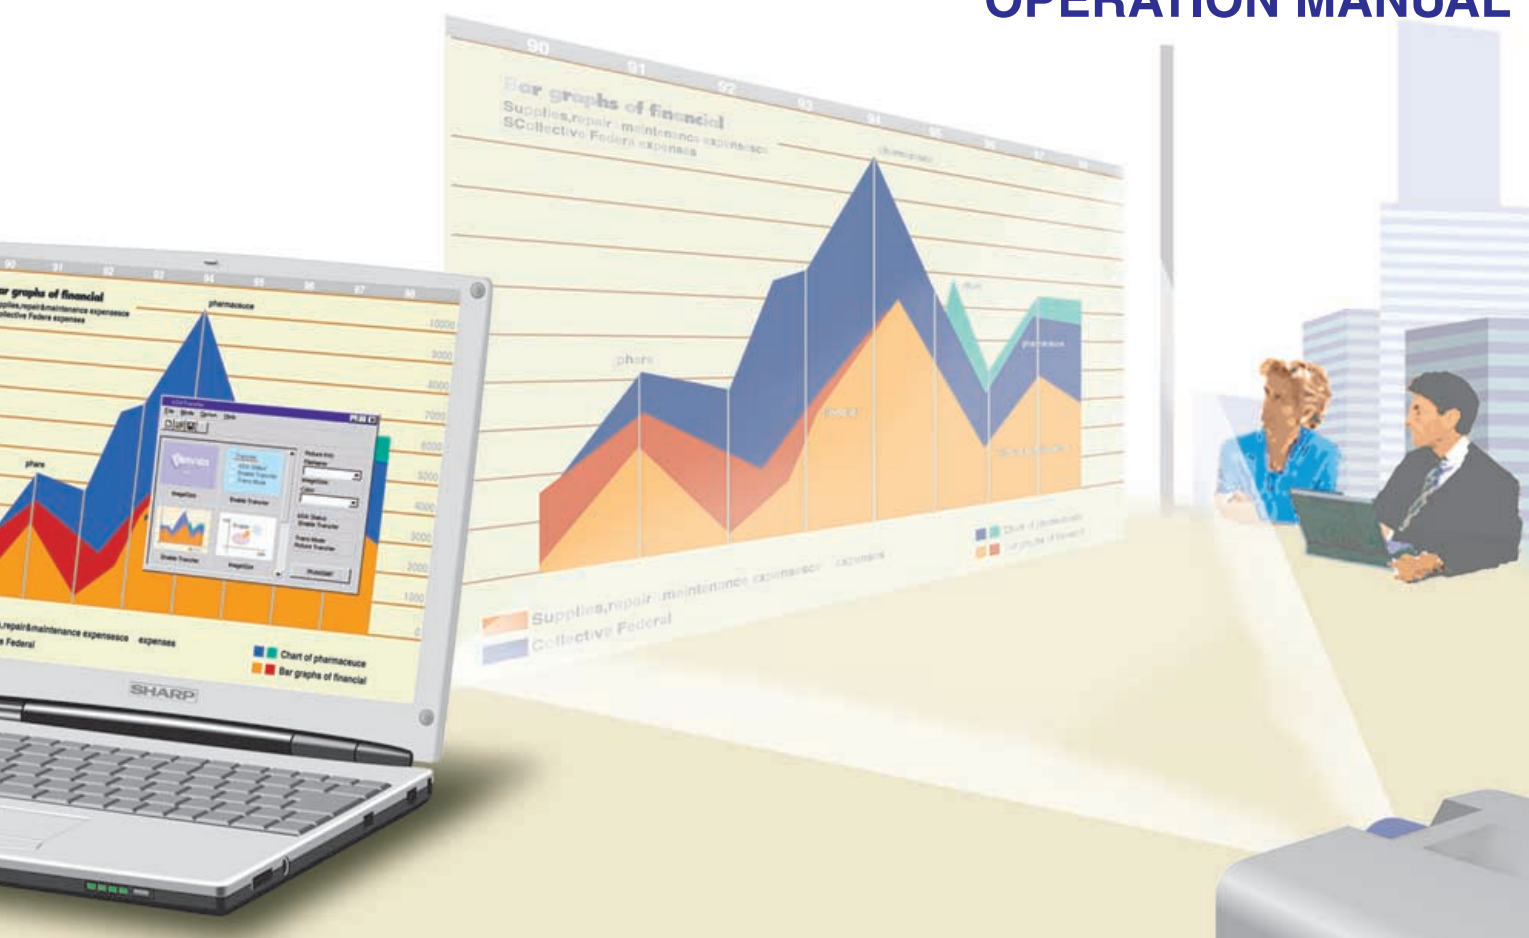

MODEL
PG-C20XU

LCD PROJECTOR



Important
Information



Setup & Connections



Operation



Useful Features



Maintenance &
Troubleshooting



Appendix



OPERATION MANUAL

ENGLISH

IMPORTANT

For your assistance in reporting the loss or theft of your Color LCD Projector, please record the Serial Number located on the bottom of the projector and retain this information. Before recycling the packaging, please be sure that you have checked the contents of the carton thoroughly against the list of "Supplied Accessories" on page 11.

Model No.: PG-C20XU

Serial No.:

There are two important reasons for prompt warranty registration of your new SHARP LCD Projector, using the REGISTRATION CARD packed with the projector.

1. WARRANTY

This is to assure that you immediately receive the full benefit of the parts, service and labor warranty applicable to your purchase.





2. CONSUMER PRODUCT SAFETY ACT

To ensure that you will promptly receive any safety notification of inspection, modification, or recall that SHARP may be required to give under the 1972 Consumer Product Safety Act, PLEASE READ CAREFULLY THE IMPORTANT "LIMITED WARRANTY" CLAUSE.

U.S.A. ONLY

WARNING: High brightness light source. Do not stare into the beam of light, or view directly. Be especially careful that children do not stare directly into the beam of light.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

| | | | | |
|--|--|---|---|---|
|  | CAUTION RISK OF ELECTRIC SHOCK. DO NOT REMOVE SCREWS EXCEPT SPECIFIED USER SERVICE SCREW. |  |  | The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk or electric shock to persons. |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS EXCEPT LAMP UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | |  | The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. |

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

U.S.A. ONLY

INFORMATION

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the operation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

U.S.A. ONLY

The enclosed computer cable must be used with the device. The cable is provided to ensure that the device complies with FCC Class A verification.


U.S.A. ONLY

**WARNING:**

The cooling fan in this projector continues to run for about 90 seconds after the projector is turned off. During normal operation, when turning the power off always use the **ON/OFF** button on the projector or the **POWER** button on the remote control. Ensure the cooling fan has stopped before disconnecting the power cord. **DURING NORMAL OPERATION, NEVER TURN THE PROJECTOR OFF BY DISCONNECTING THE POWER CORD. FAILURE TO OBSERVE THIS WILL RESULT IN PREMATURE LAMP FAILURE.**

PRODUCT DISPOSAL

This product utilizes tin-lead solder, and high intensity discharge lamp (HID lamp) containing a small amount of mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

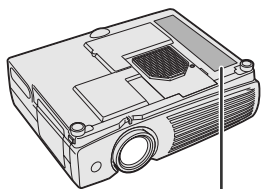**Caution Concerning the Lamp Replacement**

See "Replacing the Projection Lamp" on pages 40 and 41.

**LAMP REPLACEMENT CAUTION**

BEFORE REMOVING THE SCREW, DISCONNECT POWER CORD. HOT SURFACE INSIDE. ALLOW 1 HOUR TO COOL BEFORE REPLACING THE LAMP. REPLACE WITH SAME SHARP LAMP UNIT. TYPE BQC-PGC20X//1 ONLY. UV RADIATION: CAN CAUSE EYE DAMAGE. TURN OFF LAMP BEFORE SERVICING. MEDIUM PRESSURE LAMP: RISK OF EXPLOSION. POTENTIAL HAZARD OF GLASS PARTICLES IF LAMP HAS RUPTURED. HANDLE WITH CARE. SEE OPERATION MANUAL.

**PRECAUTIONS A OBSERVER LORS DU REMPLACEMENT DE LA LAMPE.**

DEBRANCHER LE CORDON D'ALIMENTATION AVANT DE RETIRER LES VIS. L'INTERIEUR DU BOITIER ETANT EXTREMEMENT CHAUD, ATTENDRE 1 HEURE AVANT DE PROCEDER AU REMPLACEMENT DE LA LAMPE. NE REMPLACER QUE PAR UNE LAMPE SHARP DE TYPE BQC- PGC20X//1. RAYONS ULTRAVIOLETS: PEUVENT ENDOMMAGER LES YEUX. ETEINDRE LA LAMPE AVANT DE PROCEDER A L'ENTRETIEN. LAMPE A MOYENNE PRESSION: RISQUE D'EXPLOSION. DANGER POTENTIEL DE PARTICULES DE VERRE EN CAS D'ECLATEMENT DE LA LAMPE. A MANIPULER AVEC PRECAUTION, SE REPORTER AU MODE D'EMPLOI.

USER SERVICE SCREW

VIS POUR ENTRETIEN PAR L'UTILISATEUR





IMPORTANT SAFEGUARDS



Electrical energy can perform many useful functions. This product has been engineered and manufactured to ensure your personal safety. However IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD. In order not to defeat the safeguards incorporated into this LCD Projector, observe the following basic rules for its installation, use and servicing. For your own protection and reliable usage of your LCD Projector, please be sure to read these "IMPORTANT SAFEGUARDS" carefully before use.

1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

4. Follow Instructions

All operating and use instructions should be followed.

5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture

Do not use this product near water—for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. Transportation

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



10. Ventilation

Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. The openings should never be covered or blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization

This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the power cord. This will prevent damage to the product due to lightning and power-line surges.

15. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

16. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

17. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- If the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or damaged in any way.
- If the product exhibits a distinct change in performance, this indicates a need for service.

19. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or with the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

21. Wall or Ceiling Mounting

This product should be mounted to a wall or ceiling only as recommended by the manufacturer.

22. Heat

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.




Outstanding Features



1. **ADVANCED COMPATIBILITY WITH HIGH-END WORKSTATIONS AND PCS**

Compatible with up to 85 Hz vertical refresh rate, Sync on Green and Composite Sync signals for use with a wide variety of high-end PCs and Workstations. (Page 12)

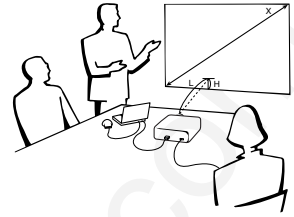

2. **3D Y/C CIRCUITRY**


Provides high quality images with minimal dot crawl and cross color noise.

3. **3D DIGITAL UNIFORMITY**

Equipped with new 3D digital uniformity technology for a clearer, more uniform image.


4. **ACTIVE DIGITAL KEYSTONE CORRECTION**

Corrects keystone distortion caused when the projected image is not perpendicular to the screen. This method provides not only horizontal correction, but vertical as well, thus maintaining the original 4:3 aspect ratio and eliminating jag lines. (Page 20)

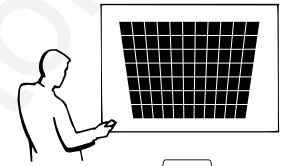

5. **EASY-TO-USE GRAPHICAL USER INTERFACE (GUI)**

A multi-color menu system allows for simple image adjustments. (Page 23)

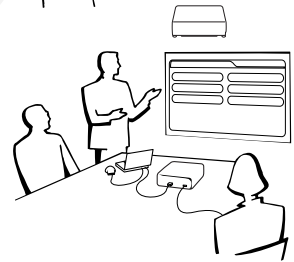

6. **AUTO SYNC TECHNOLOGY FOR AUTOMATIC IMAGE PERFECTION**

Automatically makes any necessary adjustments for perfectly synced computer images. (Page 28)

7. **INTELLIGENT COMPRESSION AND EXPANSION**

By using intelligent resizing technology, this projector can display higher and lower resolution images in detail without compromising quality. (Page 33)

8. **GAMMA CORRECTION FUNCTION**

Offers richer image viewing with dark scene phase and contrast correction according to image and room brightness. Three gamma settings are available. (Page 32)

9. **POWER SAVE MODE FUNCTION**

Function with toggle switch to control the quantity of projected light. Select "ON" or "OFF" to decrease or increase brightness, power consumption and fan noise. (Page 35)

10. **XGA RESOLUTION FOR HIGH RESOLUTION PRESENTATIONS**

With XGA (1,024 × 768) resolution, this projector can display very detailed presentation information.

11. **SXGA COMPATIBLE**

SXGA (1,280 × 1,024) resolution images are intelligently resized to 1,024 × 768 for full-screen.



Contents



Important Information

| | |
|---|---|
| IMPORTANT SAFEGUARDS | 3 |
| Outstanding Features | 4 |
| Contents | 5 |
| Usage Guidelines | 6 |
| How to Access the PDF Operation Manuals (for Windows and Macintosh) | 7 |
| For SHARP Assistance (U.S.A. only) | 7 |
| Part Names | 8 |



Setup & Connections

| | |
|---------------------------------------|----|
| Supplied Accessories | 11 |
| Connecting the Projector | 12 |



Operation

| | |
|--|----|
| Basic Operations | 16 |
| Setting up the Screen | 18 |
| Operating the Wireless Mouse from the Remote Control | 21 |
| Using the GUI (Graphical User Interface) Menu Screens | 23 |
| Selecting the On-screen Display Language ... | 26 |
| Selecting the Video Input System Mode (INPUT 2 or 3 mode only) | 26 |
| Picture Adjustments | 27 |
| Computer Image Adjustments (INPUT 1 mode only) | 28 |
| Auto Sync Adjustment | 28 |
| Adjusting the Computer Image | 29 |



Useful Features

| | |
|--|----|
| Freeze Function | 30 |
| Digital Image Magnification | 31 |
| Gamma Correction | 32 |
| Selecting the Picture Display Mode | 33 |
| Checking the Input Signal and the Lamp Usage Time | 34 |
| Automatic Power Shutoff Function | 34 |
| Selecting a Background Image | 35 |
| Power Save Mode Function | 35 |
| Reverse/Invert Image Function | 36 |
| Special Mode Adjustment | 36 |



Maintenance & Troubleshooting

| | |
|--|----|
| Air Filter Maintenance | 37 |
| Lamp/Maintenance Indicators | 39 |
| Replacing the Projection Lamp | 40 |
| Using the Kensington Lock | 42 |
| Troubleshooting | 42 |




Appendix

| | |
|---|----|
| Attaching the Lens Cap | 43 |
| Connection Pin Assignments | 44 |
| RS-232C Port Specifications | 45 |
| Computer Compatibility Chart | 47 |
| Specifications | 48 |
| Dimensions | 49 |
| Glossary | 50 |
| Index | 51 |






Usage Guidelines

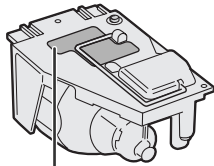

Caution Concerning the Lamp Unit

Potential hazard of glass particles if lamp ruptures. Please have Authorized Sharp Industrial LCD Products Dealer or Service Center replace lamp if rupture occurs. See "Replacing the Projection Lamp" on pages 40 and 41.

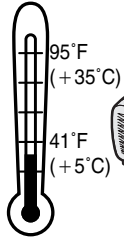



Cautions Concerning the Setup of the Projector

For minimal servicing and to maintain high image quality, SHARP recommends that this projector be installed in an area free from humidity, dust and cigarette smoke. When the projector is subjected to these environments, the lens and filter must be cleaned more often. Periodically the filter should be replaced and the projector should be cleaned internally. As long as the projector is properly maintained in this manner, use in these environments will not reduce the overall operation life. Please note that all internal cleaning must be performed by an Authorized Sharp Industrial LCD Products Dealer or Service Center.

- Do not expose the projector to extreme heat or cold.
Operating temperature: 41°F to 95°F (+5°C to +35°C)
Storage temperature: -4°F to 140°F (-20°C to +60°C)

Notes on Operation

- The mark shown on the left calls the user's attention to a part of the projector that emits intense heat during operation.
- The exhaust vent, the lamp cage cover and adjacent areas may be extremely hot during projector operation. To prevent injury, do not touch these areas until they have sufficiently cooled.
- Allow at least 4 inches (10 cm) of space between the cooling fan (exhaust vent) and the nearest wall or obstruction.
- If the cooling fan becomes obstructed, a protection device will automatically turn off the projector lamp. This does not indicate a malfunction. Remove the projector power cord from the wall outlet and wait at least 10 minutes. Then turn on the power by plugging the power cord back in. This will return the projector to the normal operating condition.

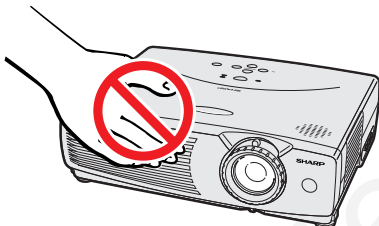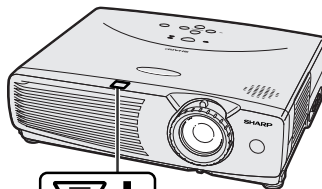

Temperature Monitor Function

If the projector starts to overheat due to setup problems or a dirty air filter, "TEMP." will appear in the lower-left corner of the picture. If the temperature continues to rise, the lamp will turn off, the TEMPERATURE WARNING indicator on the projector will flash, and after a 90-second cooling-off period the power will shut off. Refer to "Lamp/Maintenance Indicators" on page 39, for details.

NOTE

- The cooling fan regulates the internal temperature, and its performance is automatically controlled. The sound of the fan may change during projector operation due to changes in the fan speed.

Lamp Monitor Function

When the projector is turned on after the lamp has been used for 900 hours, "LAMP" will appear in the lower-left corner of the picture to advise you to replace the lamp. See pages 40 and 41 for lamp replacement. If the lamp has been used for 1,000 hours, the projector power will automatically turn off and the projector will enter standby mode. Refer to "Lamp/Maintenance Indicators" on page 39, for details.

TEMP.

LAMP



How to Access the PDF Operation Manuals (for Windows and Macintosh)

PDF operation manuals in several languages are included in the CD-ROM. To utilize these manuals, you need to install Adobe Acrobat Reader on your PC (Windows or Macintosh). If you have not installed Acrobat Reader yet, you can download it from the Internet (<http://www.adobe.com>) or install it from the CD-ROM.

To Install Acrobat Reader from the CD-ROM

For Windows:

- ① Insert the CD-ROM in the CD-ROM drive.
- ② Double click on the “My Computer” icon.
- ③ Double click on the “CD-ROM” drive.
- ④ Double click on the “manuals” folder.
- ⑤ Double click on the “acrobat” folder.
- ⑥ Double click on the “windows” folder.
- ⑦ Double click on the desired installation program and follow the instructions on the screen.

For Macintosh:

- ① Insert the CD-ROM in the CD-ROM drive.
- ② Double click on the “CD-ROM” icon.
- ③ Double click on the “manuals” folder.
- ④ Double click on the “acrobat” folder.
- ⑤ Double click on the “mac” folder.
- ⑥ Double click on the desired installation program and follow the instructions on the screen.

For other operating systems:

Please download Acrobat Reader from the Internet (<http://www.adobe.com>).

For other languages:

If you prefer using Acrobat Reader for languages other than those included in the CD-ROM, please download the appropriate version from the Internet.

Accessing the PDF Manuals

For Windows:

- ① Insert the CD-ROM in the CD-ROM drive.
- ② Double click on the “My Computer” icon.
- ③ Double click on the “CD-ROM” drive.
- ④ Double click on the “manuals” folder.
- ⑤ Double click on the “pg-c20xu” folder.
- ⑥ Double click on the language (name of the folder) that you want to view.
- ⑦ Double click on the “c20” pdf file to access the projector manuals.
- ⑧ Double click on the pdf file.

For Macintosh:

- ① Insert the CD-ROM in the CD-ROM drive.
- ② Double click on the “CD-ROM” icon.
- ③ Double click on the “manuals” folder.
- ④ Double click on the “pg-c20xu” folder.
- ⑤ Double click on the language (name of the folder) that you want to view.
- ⑥ Double click on the “c20” pdf file to access the projector manuals.
- ⑦ Double click on the pdf file.


NOTE

- If the desired pdf file cannot be opened by double clicking the mouse, start Acrobat Reader first, then specify the desired file using the “File”, “Open” menu.
- See the “readme.txt” file on the CD-ROM for important information on the CD-ROM not included in this operation manual.



For SHARP Assistance (U.S.A. only)

If you encounter any problems during setup or operation of this projector, first refer to the “Troubleshooting” section on page 42. If this operation manual does not answer your question, please call toll free 1-888-GO-SHARP (1-888-467-4277) for further assistance. Or, send us an e-mail at lcdsupport@sharpsec.com. Our World Wide Web address is <http://www.sharplcd.com>.

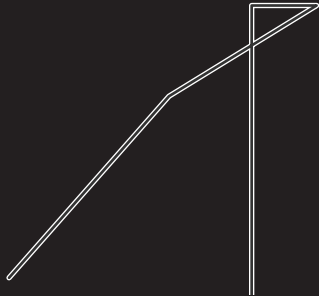





Part Names

Remote Control


Front View

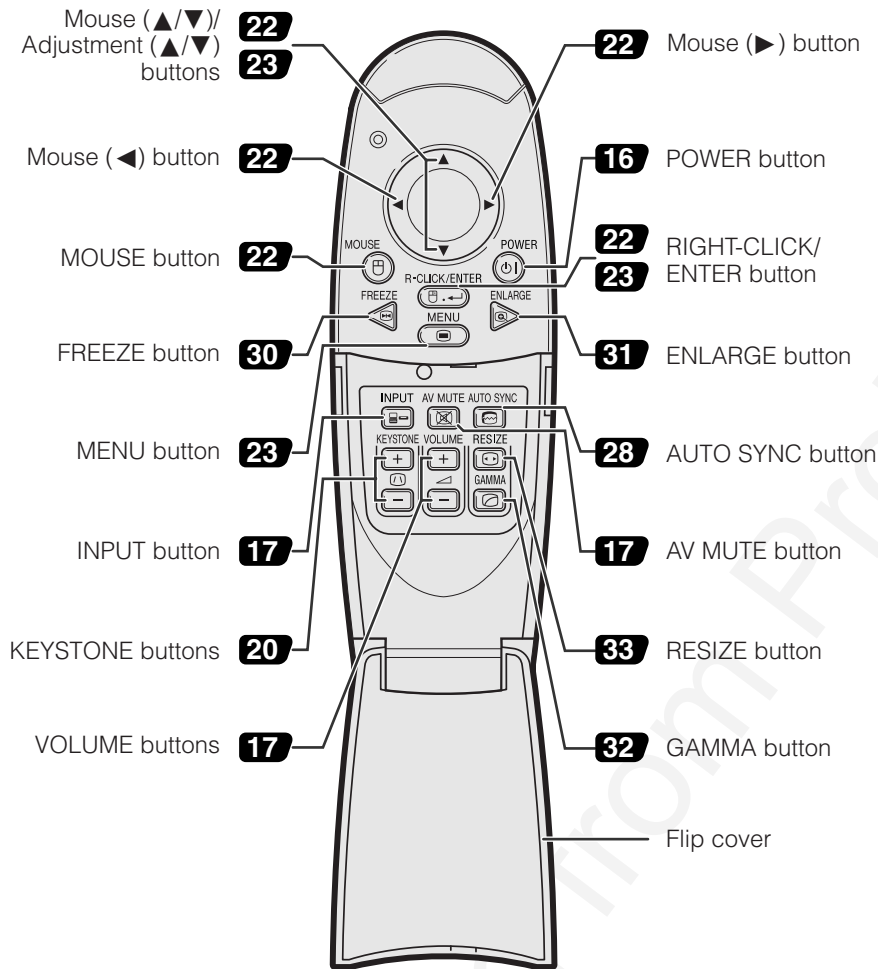

Rear View

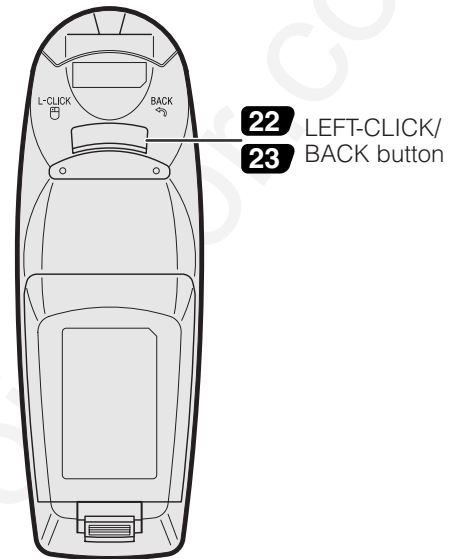

Opening the Flip Cover

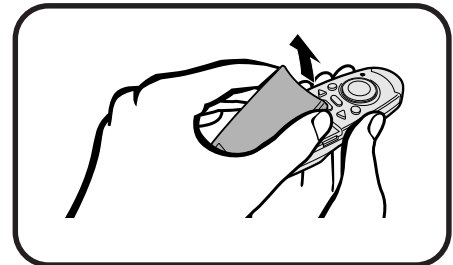

Inserting the Batteries

| | | |
|--|---|---|
| <p>1 Press the tab and lift open the battery cover in the direction of the arrow.</p> | <p>2 Insert two AAA size batteries, making sure their polarities match the + and - marks inside the battery compartment.</p> | <p>3 Insert the tabs on the end of the battery cover into their slots and press the cover into position.</p> |
| | | |


NOTE

- If the remote control gets wet, wipe it dry immediately.
- Avoid excessive heat and humidity.
- If you will not be using the remote control for a long time, remove the batteries.
- Do not mix new and old or different types of batteries.
- There are operations that can only be carried out by remote control. Handle the remote control carefully.






Setup & Connections

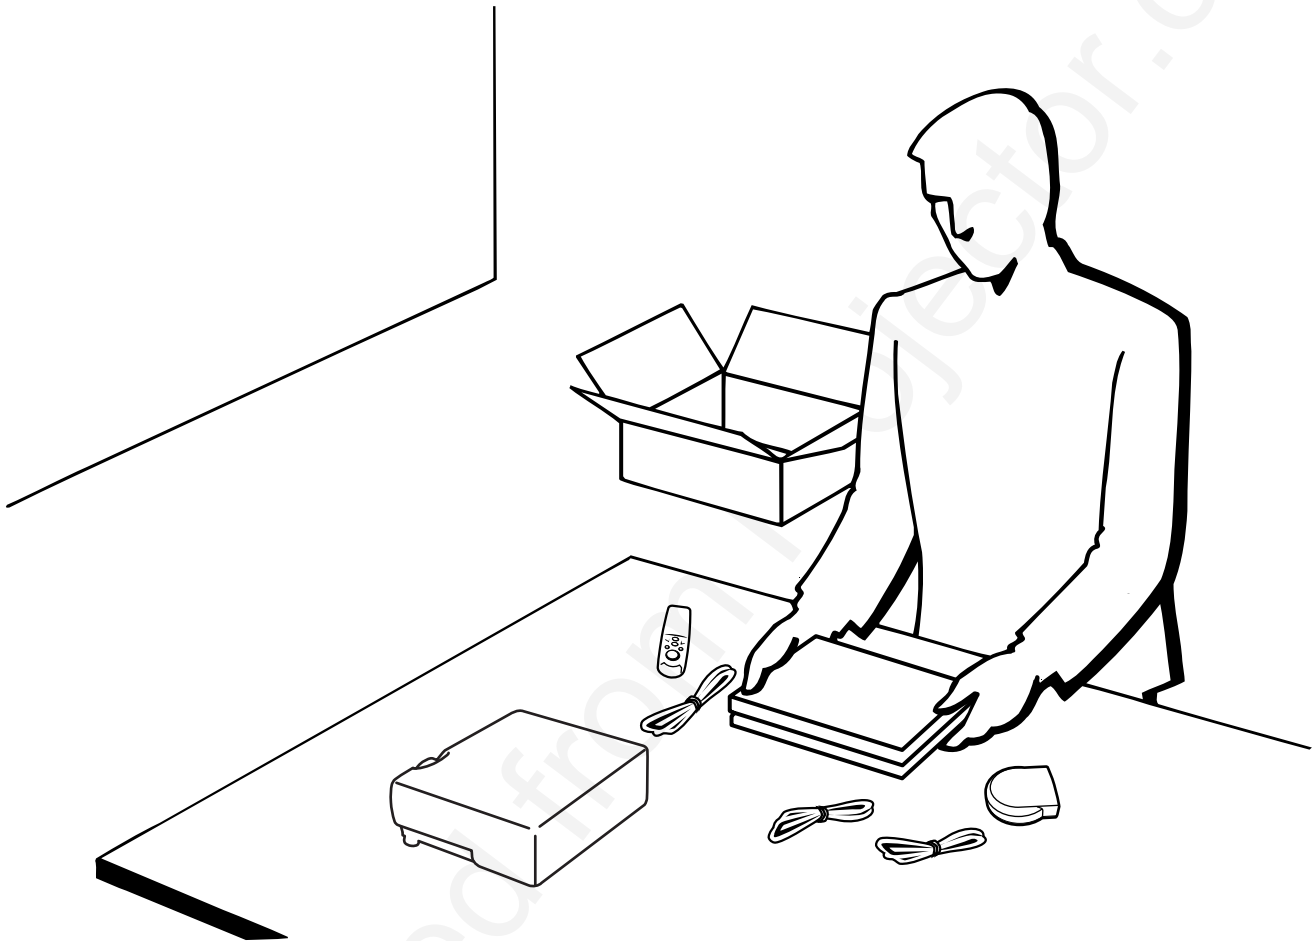




Supplied Accessories




Remote control
RRMCG1613CESA




Two AAA size batteries




Power cord
CACCU5013DE01




Computer RGB cable
QCNWG0002CEZZ




Computer audio cable
QCNW-4870CEZZ

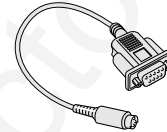


DIN-D-sub RS-232C cable
QCNW-5288CEZZ

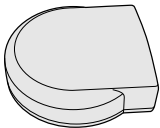

Remote mouse receiver
RUNTK0694CEZZ



PS/2 mouse control cable
QCNW-5113CEZZ



USB mouse control cable
QCNW-5680CEZZ



Extra air filter
PFILD0123CEZZ



Lens cap
PCOVZ1095CEKA



Lens cap strap
UBNDT0013CEZZ

CD-ROM
UDSKA0029CEN1

LCD projector operation manual
TINS-7204CEZZ

LCD projector quick reference
guide
TINS-7205CEZZ








Connecting the Projector

Connecting the Power Cord

Plug the supplied power cord into the AC socket on the back of the projector.

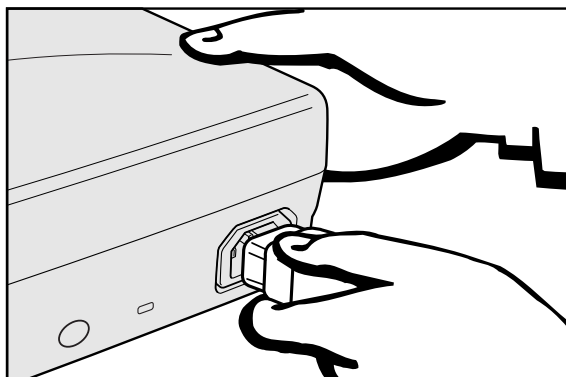

Power cord
CACCU5013DE01

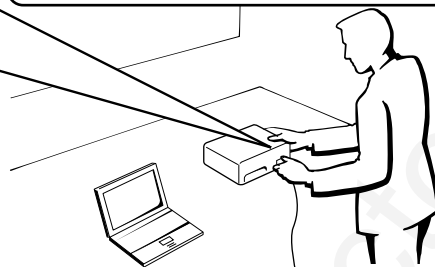



CAUTION

- Make sure you connect the power cord firmly into the AC socket.


Connecting the Projector to a Computer

You can connect your projector to a computer for projection of full color computer images.

Connecting a computer using the standard 15-pin input

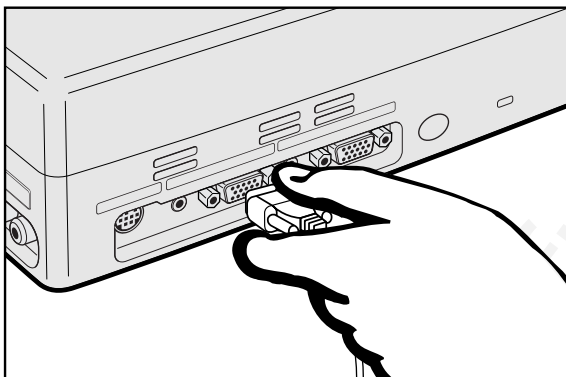

Computer RGB cable
QCNWG0002CEZZ



Computer audio cable
QCNW-4870CEZZ


- ① Connect one end of the supplied computer RGB cable to the COMPUTER INPUT 1 port on the projector.
- ② Connect the other end to the Monitor output port on the computer. Secure the connectors by tightening the thumb screws.
- ③ To use the built-in audio system, connect one end of the supplied computer audio cable to the AUDIO INPUT 1 terminal on the projector.
- ④ Connect the other end to the Audio output terminal on the computer.

CAUTION

- Before connecting, be sure to turn both the projector and the computer off. After making all connections, turn the projector on first. The computer should always be turned on last.

NOTE

- Please read the computer's operation manual carefully.
- Refer to page 47 "Computer Compatibility Chart" for a list of computer signals compatible with the projector. Use with computer signals other than those listed may cause some of the functions not to work.
- A Macintosh adaptor may be required for use with some Macintosh computers. Contact your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center.

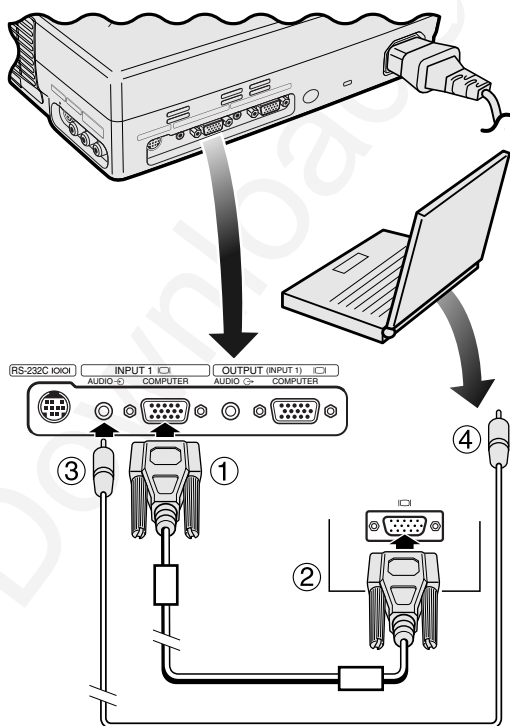



Connecting the Projector

Connecting other compatible computers

When connecting the projector to a compatible computer other than an IBM-PC (VGA/SVGA/XGA/SXGA) or Macintosh (i.e. Workstation), a separate cable may be needed. Please contact your dealer for more information.

NOTE

- Connecting computers other than the recommended types may result in damage to the projector, the computer, or both.

“Plug and Play” function

- This projector is compatible with VESA-standard DDC 1/DDC 2B. The projector and a VESA DDC compatible computer will communicate their setting requirements, allowing for quick and easy setup.
- Before using the “Plug and Play” function, be sure to turn on the projector first and the connected computer last.

NOTE

- The DDC, Plug and Play function of this projector operates only when used in conjunction with a VESA DDC compatible computer.


Connecting the Projector to Video Equipment

You can connect your projector to a VCR, laser disc player, DVD player, DTV decoder and other audiovisual equipment.

CAUTION

- Always turn off the projector while connecting to audiovisual equipment, in order to protect both the projector and the equipment being connected.

Connecting a video source (VCR, laser disc player, DTV decoder or DVD player) using the standard video input

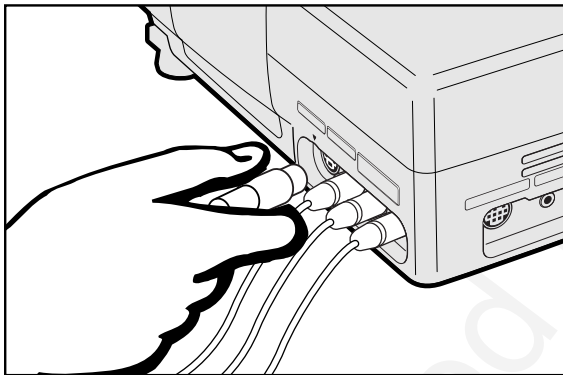


- Connect one end of the S-video cable to the S-VIDEO INPUT 2 terminal, or one end of the video cable to the VIDEO INPUT 3 terminal on the projector and the video output terminal on the video source.
- To use the built-in audio system, connect the red and white RCA connectors to the corresponding red and white AUDIO INPUT terminals on the projector and the audio output terminals on the video source.

The S-VIDEO INPUT 2 terminal uses a video signal system in which the picture is separated into a color and a luminance signal to realize a higher-quality image.

NOTE

- For higher quality video, you may use the S-VIDEO INPUT 2 terminal on the projector. S-video cable is sold separately.
- If your video equipment does not have an S-video output terminal, use the composite video output terminal.

Projector



② Audio cable (sold separately)


To audio output terminals

① Video cable (sold separately)

To video output terminal

S-video cable (sold separately)

To S-video output terminal

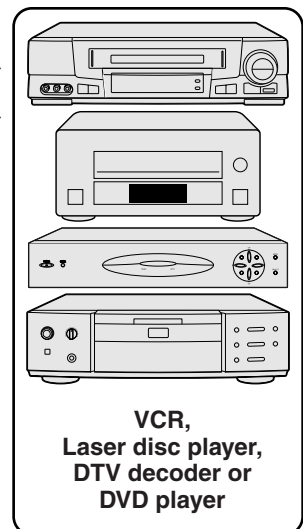


VCR,
Laser disc player,
DTV decoder or
DVD player



Connecting the Projector


Connecting a video source (DTV decoder or DVD player) using the 15-pin input

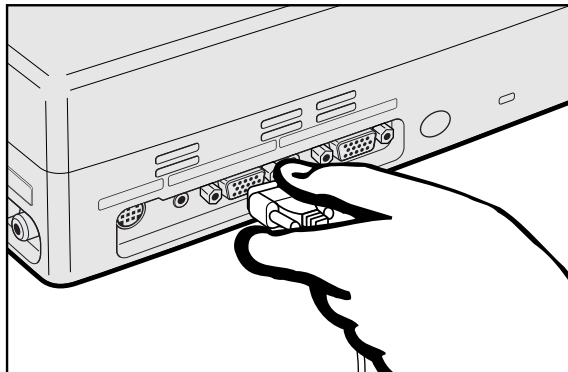


- 1 Connect one end of the HD-15/RCA cable or the HD-15-RGB cable to the COMPUTER INPUT 1 port on the projector.
- 2 Connect the other end to the corresponding terminals on the video source.
- 3 To use the built-in audio system, connect one end of the audio cable to AUDIO INPUT 1 terminal on the projector. Connect the other end to the audio output terminals on the video source.

NOTE

- The projector can only accept 480P DTV signals through COMPUTER INPUT 1 terminal. Therefore, set your DTV to RGB monitor output.
- The image quality may become lower depending on DTV signal compatibility.

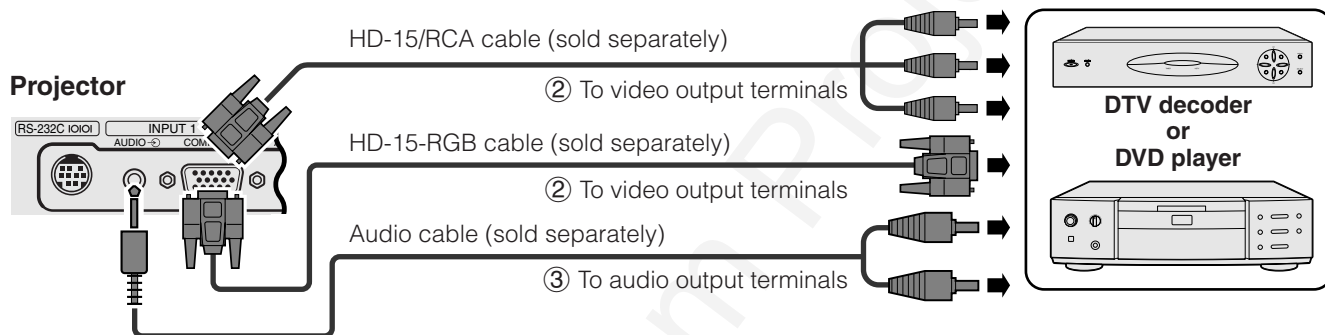

Connecting an amplifier and other audio components

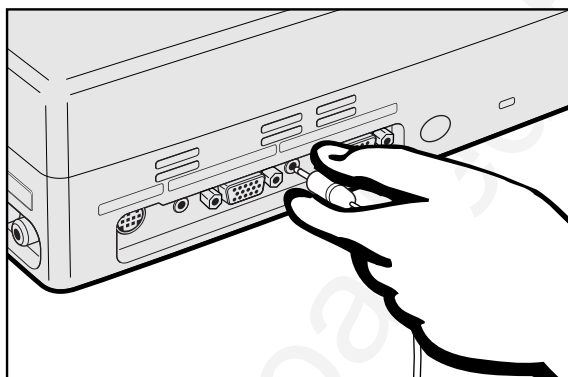


- 1 Connect one end of the audio cable to the AUDIO OUTPUT terminal for INPUT 1 on the projector.
- 2 Connect the other end to the corresponding terminals on the audio components.

CAUTION

- Always turn off the projector while connecting to audio components, in order to protect both the projector and the components being connected.

NOTE

- By using external audio components, the volume can be amplified for better sound.
- The AUDIO OUTPUT terminal for INPUT 1 allows you to output audio to audio components from the AUDIO INPUT 1 terminal connected to audiovisual equipment.

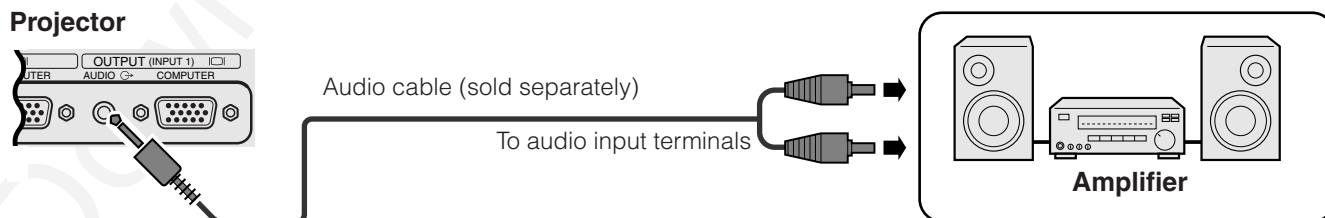




Connecting the Projector


Connecting RS-232C Port

When the RS-232C port on the projector is connected to a computer with an RS-232C cable (null modem, cross type, sold separately), the computer can be used to control the projector and check the status of the projector. See pages 45 and 46 for details.

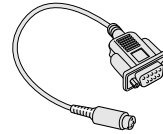

DIN-D-sub RS-232C
cable
QCNW-5288CEZZ

- ① Connect the supplied DIN-D-sub RS-232C cable to the RS-232C port on the projector.
- ② Connect an RS-232C cable (null modem, cross type, sold separately) to the other end of DIN-D-sub RS-232C cable and to the serial port on the computer.

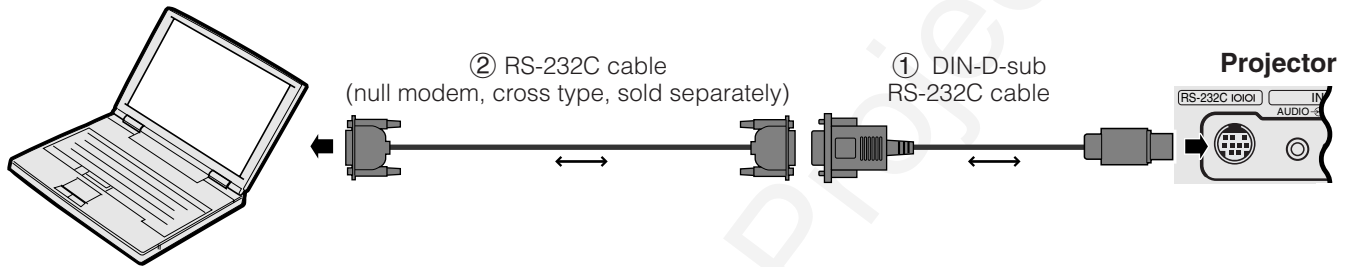

CAUTION


- Do not connect or disconnect an RS-232C cable to or from the computer while it is on. This may damage your computer.

NOTE

- The wireless mouse or RS-232C function may not operate if your computer port is not correctly set up. Please refer to the operation manual of the computer for details on setting up/installing the correct mouse driver.
- A Macintosh adaptor may be required for use with some Macintosh computers. Contact your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center.




Operation

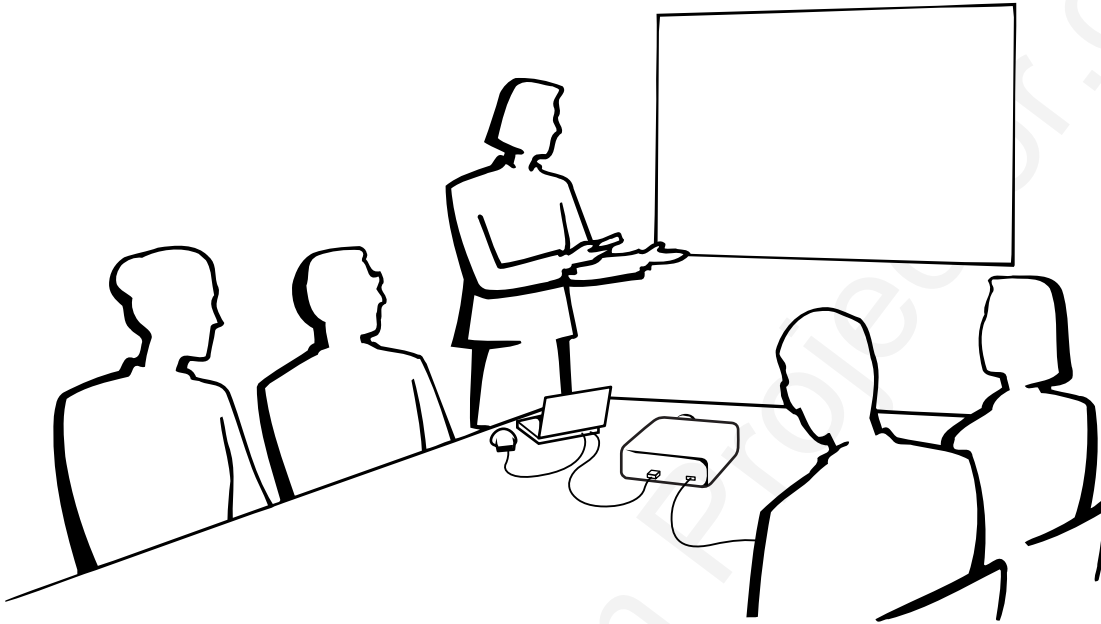


Basic Operations


Maintenance indicators

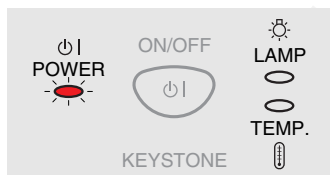


Projector

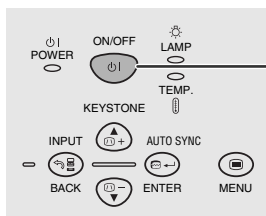

Remote control

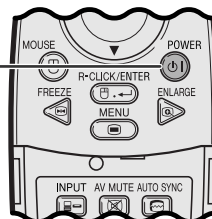

Maintenance indicators

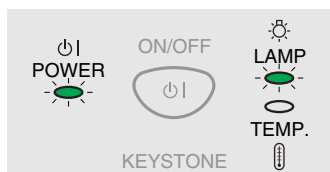

- ① Make the necessary connections before proceeding. Connect the power cord to a wall outlet. The POWER indicator illuminates red and the projector enters standby mode.

NOTE

- If the side filter cover is not securely installed, the POWER indicator flashes.

- ② Press **ON/OFF** on the projector or **POWER** on the remote control for over one second.

NOTE

- The flashing green LAMP REPLACEMENT indicator shows that the lamp is warming up. Wait until the indicator stops flashing before operating the projector.
- The power cannot be turned off for one minute after the power is turned on.
- If the power is turned off and then immediately turned on again, it may take a short while before the lamp turns on.
- After the projector is unpacked and turned on for the first time, a slight odor may be emitted from the exhaust vent. This odor will soon disappear with use.
- Do not press any buttons before the startup image disappears. Before "Adjusting The Image" appears, only **ON/OFF** or **POWER** is available.

When the power is on, the LAMP REPLACEMENT indicator lights indicating the status of the lamp.


Green: Lamp is ready.

Flashing green: Warming up.


Red: Change the lamp.




Basic Operations

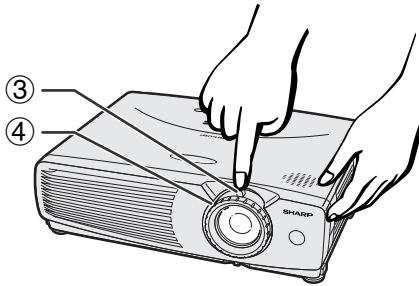

Projector

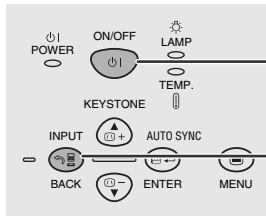


Remote control

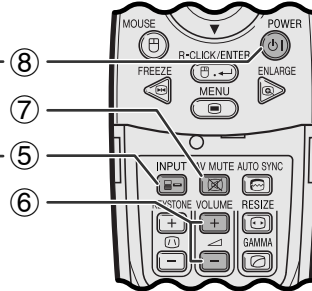


EXAMPLE


⑤ INPUT 1 (RGB) Mode

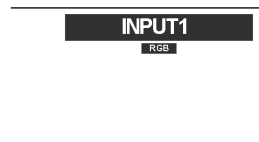




INPUT 1 (COMPONENT) Mode

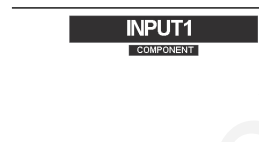

INPUT 3 (VIDEO) Mode

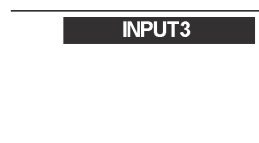

INPUT2 (S-VIDEO) Mode

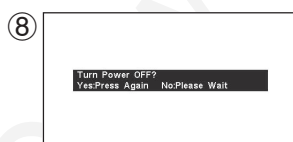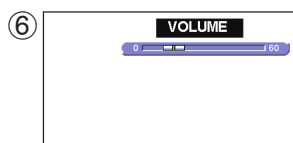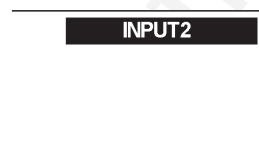

③ Slide the ZOOM knob. The image can be adjusted to the desired size within the zoom range.

④ Rotate the FOCUS ring until the image on the screen becomes clear.

⑤ Press **INPUT** to select the desired input mode. Press **INPUT** again to change the mode.

NOTE

- When the selected input signal is being received, "Adjusting The Image" will be displayed.
- When no signal is being received, "NO SIGNAL" will be displayed. When a signal that the projector is not preset to receive is being received, "NOT REG." will be displayed.

⑥ Press **VOLUME** on the remote control to adjust the volume.

⑦ Press **AV MUTE** on the remote control to temporarily turn off the picture and the sound. Press **AV MUTE** again to turn the picture and the sound back on.

⑧ Press **ON/OFF** on the projector or **POWER** on the remote control for over one second. Press **ON/OFF** or **POWER** again while the message is displayed.

NOTE

- If you accidentally pressed **ON/OFF** or **POWER** and do not want to turn off the power, wait until the power off screen disappears.
- When **ON/OFF** or **POWER** is pressed twice, the POWER indicator will light up red and the cooling fan will run for about 90 seconds. The projector will then enter standby mode.
- Wait until the cooling fan stops before disconnecting the power cord.
- The power can be turned on again by pressing **ON/OFF** or **POWER**. When the power is turned on, the POWER indicator and the LAMP REPLACEMENT indicator light green.
- The POWER indicator flashes if the right side filter cover is not securely installed.





Setting up the Screen

Position the projector perpendicular to the screen with all feet flat and level to achieve an optimal image. Move the projector forward or backward if the edges of the image are distorted.

NOTE

- The projector lens should be centered in the middle of the screen. If the lens center is not perpendicular to the screen, the image will be distorted, making viewing difficult.
- Position the screen so that it is not in direct sunlight or room light. Light falling directly onto the screen washes out colors, making viewing difficult. Close the curtains and dim the lights when setting up the screen in a sunny or bright room.
- A polarizing screen cannot be used with this projector.

Standard Setup (Front Projection)

Place the projector at the required distance from the screen according to the desired picture size. (See the table below.)

NORMAL Mode (4:3)

| Picture size | | | Projection distance (L) | | Distance from the lens center to the bottom of the image (H) |
|--------------|-------|--------|---------------------------|---------------------------|--|
| Diag. (x) | Width | Height | Maximum (L ₁) | Minimum (L ₂) | |
| 250" | 200" | 150" | 32' 10" (10.0 m) | 32' 7" (9.9 m) | 15" (38.1 cm) |
| 200" | 160" | 120" | 31' 5" (9.6 m) | 26' 7" (7.9 m) | 12" (30.5 cm) |
| 150" | 120" | 90" | 23' 6" (7.2 m) | 19' 6" (5.9 m) | 9" (22.9 cm) |
| 100" | 80" | 60" | 15' 7" (4.8 m) | 12' 11" (3.9 m) | 6" (15.2 cm) |
| 84" | 67" | 50" | 13' 1" (4.0 m) | 10' 10" (3.3 m) | 5 1/32" (12.8 cm) |
| 72" | 58" | 43" | 11' 2" (3.4 m) | 9' 3" (2.8 m) | 4 5/16" (11.0 cm) |
| 60" | 48" | 36" | 9' 4" (2.8 m) | 7' 8" (2.3 m) | 3 19/32" (9.1 cm) |
| 40" | 32" | 24" | 6' 2" (1.9 m) | 5' 1" (1.6 m) | 2 13/32" (6.1 cm) |

The formula for picture size and projection distance

$$L_1 \text{ (feet)} = (0.0481x - 0.0447) \times 3.28$$

$$L_2 \text{ (feet)} = (0.0399x - 0.0447) \times 3.28$$

$$H \text{ (inches)} = 0.06x$$

STRETCH Mode (16:9)

| Picture size | | | Projection distance (L) | | Distance from the lens center to the bottom of the image (H) |
|--------------|-------|--------|---------------------------|---------------------------|--|
| Diag. (x) | Width | Height | Maximum (L ₁) | Minimum (L ₂) | |
| 225" | 196" | 110" | 32' 10" (10.0 m) | 32' 0" (9.8 m) | - 3 43/64" (-9.3 cm) |
| 200" | 174" | 98" | 32' 10" (10.0 m) | 28' 5" (8.7 m) | - 3 17/64" (-8.3 cm) |
| 150" | 131" | 74" | 25' 7" (7.8 m) | 21' 3" (6.5 m) | - 2 29/64" (-6.2 cm) |
| 133" | 116" | 65" | 22' 8" (6.9 m) | 18' 10" (5.7 m) | - 2 11/64" (-5.5 cm) |
| 106" | 92" | 52" | 18' 1" (5.5 m) | 14' 12" (4.6 m) | - 1 47/64" (-4.4 cm) |
| 100" | 87" | 49" | 17' (5.2 m) | 14' 1" (4.3 m) | - 1 41/64" (-4.2 cm) |
| 92" | 80" | 45" | 15' 8" (4.8 m) | 12' 12" (4.0 m) | - 1 1/2" (-3.8 cm) |
| 84" | 73" | 41" | 14' 3" (4.4 m) | 11' 10" (3.6 m) | - 1 3/8" (-3.5 cm) |
| 72" | 63" | 35" | 12' 3" (3.7 m) | 10' 1" (3.1 m) | - 1 11/64" (-3.0 cm) |
| 60" | 52" | 29" | 10' 2" (3.1 m) | 8' 5" (2.6 m) | - 63/64" (-2.5 cm) |
| 40" | 35" | 20" | 6' 9" (2.0 m) | 5' 7" (1.7 m) | - 21/32" (-1.7 cm) |

The formula for picture size and projection distance

$$L_1 \text{ (feet)} = (0.0524x - 0.0447) \times 3.28$$

$$L_2 \text{ (feet)} = (0.0436x - 0.0447) \times 3.28$$

$$H \text{ (inches)} = -0.0163x$$

BORDER Mode (4:3)

| Picture size | | | Projection distance (L) | | Distance from the lens center to the bottom of the image (H) |
|--------------|-------|--------|---------------------------|---------------------------|--|
| Diag. (x) | Width | Height | Maximum (L ₁) | Minimum (L ₂) | |
| 180" | 144" | 108" | 32' 10" (10.0 m) | 31' 3" (9.5 m) | - 3 19/32" (-9.1 cm) |
| 150" | 120" | 90" | 31' 4" (9.6 m) | 25' 12" (7.9 m) | - 3" (-7.6 cm) |
| 100" | 80" | 60" | 20' 10" (6.3 m) | 17' 3" (5.3 m) | - 2" (-5.1 cm) |
| 84" | 67" | 50" | 17' 6" (5.3 m) | 14' 6" (4.4 m) | - 1 11/16" (-4.3 cm) |
| 72" | 58" | 43" | 14' 11" (4.6 m) | 12' 4" (3.8 m) | - 1 7/16" (-3.7 cm) |
| 60" | 48" | 36" | 12' 5" (3.8 m) | 10' 3" (3.1 m) | - 1 3/16" (-3.0 cm) |
| 40" | 32" | 24" | 8' 3" (2.5 m) | 6' 9" (2.1 m) | - 13/16" (-2.0 cm) |

The formula for picture size and projection distance

$$L_1 \text{ (feet)} = (0.0641x - 0.0447) \times 3.28$$

$$L_2 \text{ (feet)} = (0.0532x - 0.0447) \times 3.28$$

$$H \text{ (inches)} = -0.02x$$

x : Picture size (diag.) (inches)

L_1 : Maximum projection distance (feet)

L_2 : Minimum projection distance (feet)

H : Distance from the lens center to the bottom of the image (inches)



NOTE

- There are errors of $\pm 3\%$ in the formulas above.
- Values with a minus (-) sign indicate the distance of the lens center below the bottom of the screen.





Setting up the Screen

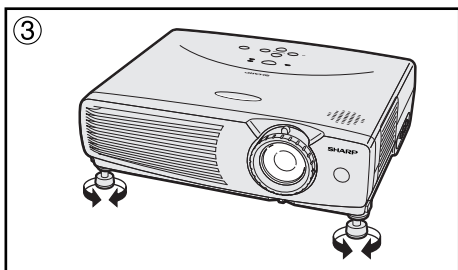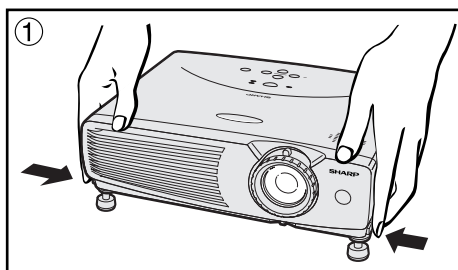

Using the Adjustment Feet

You can adjust the height of the image by raising the projector with the foot releases.

- ① Press the foot releases and lift the projector to the desired angle. (Adjustable up to approximately 7° from the standard position.)
- ② Remove your hands from the foot releases. Once the adjustment feet have locked in position, release the projector.
- ③ If the screen is at an angle, the adjusters can be used to adjust the angle of the image.

Returning the projector to its original position

While holding the projector, press the foot releases and slowly lower the projector to its original position.

NOTE

- When an adjustment is made, the image may become distorted (keystoned), depending on the relative positions of the projector and the screen.


CAUTION

- Do not press the foot releases when the adjustment feet are extended without firmly holding the projector.
- Do not hold the lens when lifting or lowering the projector.
- When lowering the projector, be careful not to get your fingers caught in the area between the adjustment feet and the projector.

Reversed Image Setup


Rear projection

- Place a translucent screen between the projector and the audience.
- Use the projector's menu system to reverse the projected image. (See page 36 for use of this function.)

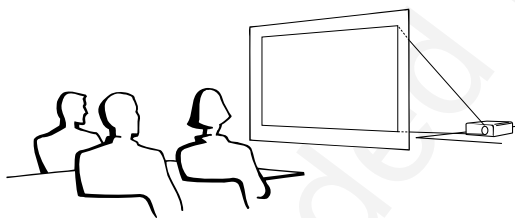

Projection using a mirror

- When the distance between the projector and screen is not sufficient for normal rear projection, you can use a mirror to reflect the image onto the screen.
- Place a mirror (normal flat type) in front of the lens.
- Project the normal image onto the mirror.
- The image reflected from the mirror is projected onto the translucent screen.

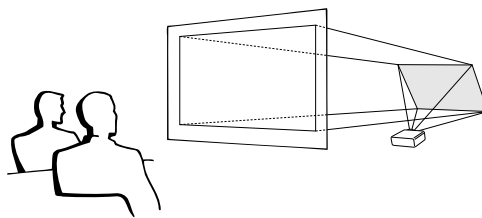

NOTE


- Optimal image quality can be achieved when the projector is positioned perpendicular to the screen with all feet flat and level.

CAUTION

- When using a mirror, be sure to carefully position both the projector and the mirror so the light does not shine into the eyes of the audience.


Ceiling-mount Setup

- It is recommended that you use the optional Sharp ceiling-mount bracket for this installation.
- Before mounting the projector, contact your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center to obtain the recommended ceiling-mount bracket (sold separately). (AN-PGCM80 ceiling-mount bracket, AN-EP101AP extension tube for AN-PGCM80.)
- When the projector is in the inverted position, use the upper edge of the screen as the base line.
- Use the projector's menu system to select the appropriate projection mode. (See page 36 for use of this function.)

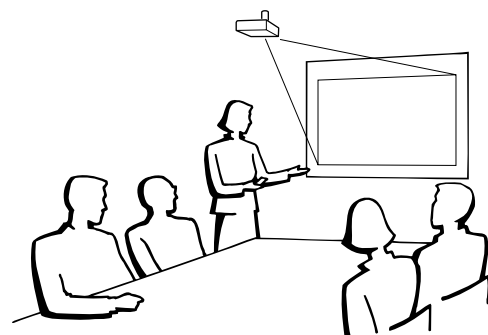





Setting up the Screen

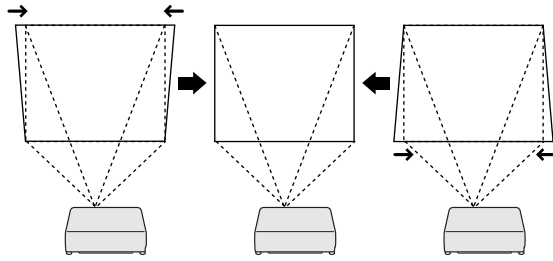

Projector

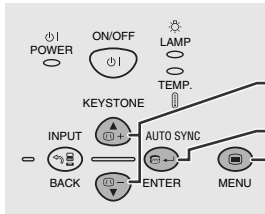


Remote control

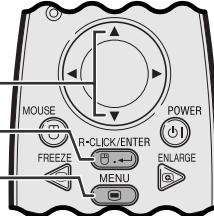


(GUI) On-screen Display



Projector

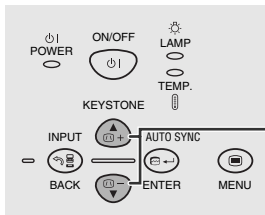


Remote control

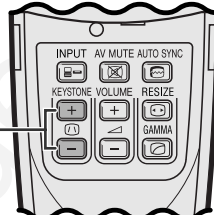

Digital Keystone Correction

- When the image is distorted due to the projection angle, the digital keystone correction function allows you to correct it.
- The digital keystone correction can be made by pressing **KEYSTONE**, or by setting "Keystone" correction in the GUI menu.

Using the GUI menu

- ① Press **MENU**.
- ② Press **▲/▼** to select "Options", and then press **ENTER**.
- ③ Press **▲/▼** to select "Keystone", and then press **ENTER**.
- ④ Press **▲/▼** to move the  mark to the desired setting.
- ⑤ To exit from the GUI, press **MENU**.

NOTE

- To reset the keystone setting, press **BACK**.
- Straight lines and the edges of the displayed image may appear jagged, when adjusting the keystone setting.

Using the KEYSTONE buttons

- ① Press **KEYSTONE** to adjust the setting.






Operating the **Wireless Mouse** from the Remote Control

You can use the remote control as a remote mouse.

Connecting the Remote Mouse Receiver


Connecting to the USB port on a PC or Macintosh

- ① Connect one end of the supplied USB mouse control cable to the corresponding terminal on the computer.
- ② Connect the other end to the USB port on the remote mouse receiver.

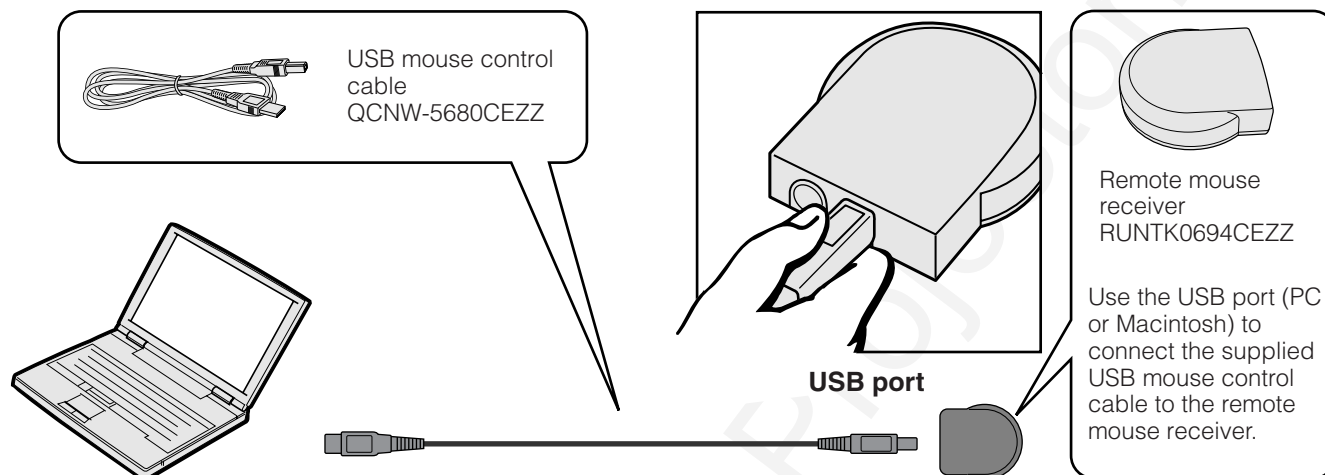

Connecting to the PS/2 port on a PC

- ① Turn off the power of the PC.
- ② Connect one end of the supplied PS/2 mouse control cable to the corresponding terminal on the PC.
- ③ Connect the other end to the PS/2 port on the remote mouse receiver.
- ④ Turn on the power of the PC.

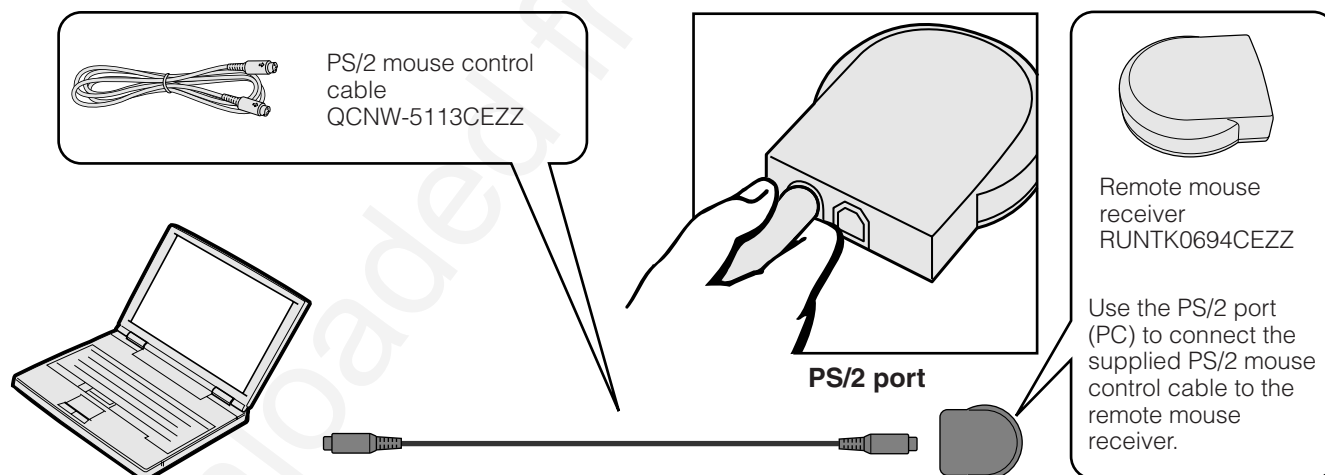

CAUTION

- Do not connect or disconnect the mouse control cables to or from the computer while it is on. This may damage your computer.
- Do not connect both the PS/2 and USB mouse control cables to the remote mouse receiver.

NOTE

- The wireless mouse functions can be used to operate computers compatible with PS/2 or USB type mouse systems.




Remote Control/Mouse Receiver Positioning

- The remote control can be used to control the projector within the ranges shown below.
- The remote mouse receiver can be used with the remote control to control the mouse functions of a connected computer within the ranges shown below.


NOTE

- The signal from the remote control can be reflected off a screen for easy operation. However, the effective distance of the signal may differ due to the screen material.

Controlling the Projector

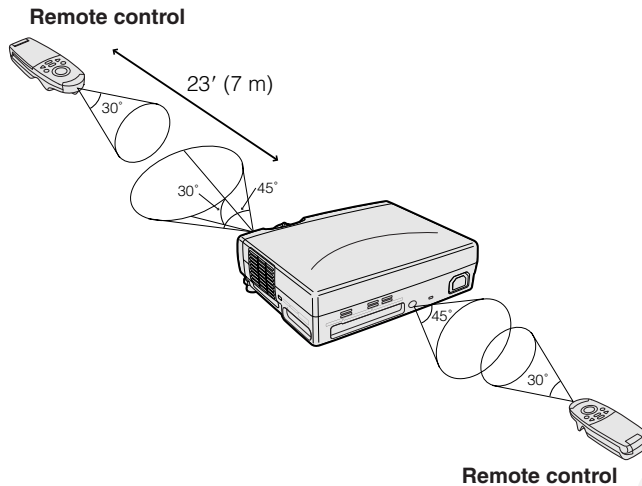


Using the Wireless Mouse

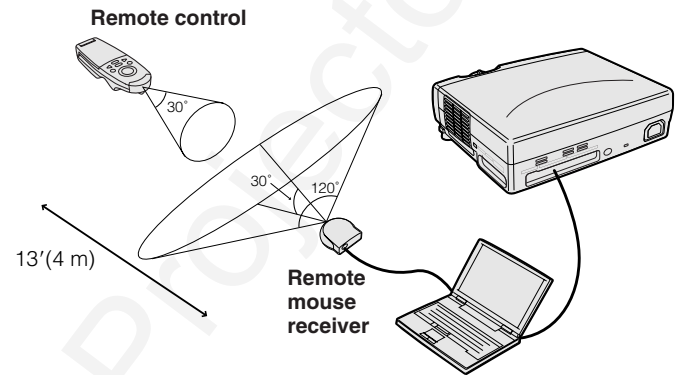


Effective buttons in MOUSE mode

Remote control (Front view)

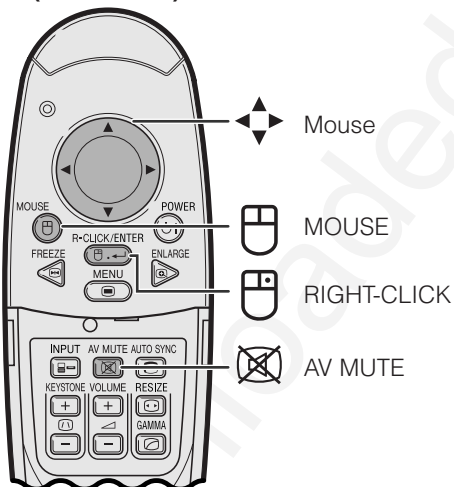

Remote control (Rear view)

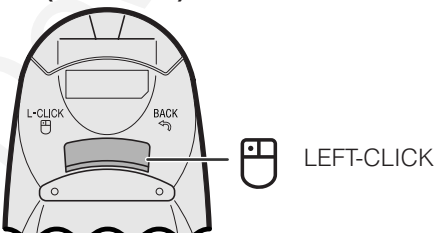

Using as a Wireless Mouse

- When **MOUSE** is pressed, the buttons on the remote control light up and the remote control enters MOUSE mode.
- During MOUSE mode, the cursor can be used as the pointer. MOUSE mode is for about ten seconds while the buttons are lighting.
- When **MENU** or **ENLARGE** is pressed, MOUSE mode is released to the normal mode.
- Be sure the supplied remote mouse receiver is connected to your computer.

NOTE


- The wireless mouse may not operate correctly if your computer serial port is not correctly set up. Refer to the computer's operation manual for details of setting up/installing the mouse driver.
- For one-button mouse systems, use either the **LEFT-CLICK** or **RIGHT-CLICK** button.






Using the GUI (Graphical User Interface) Menu Screens

This projector has three sets of menu screens (INPUT 1 (RGB), INPUT 1 (COMPONENT) and INPUT 2 (S-VIDEO) or 3 (VIDEO)) that allow you to adjust the image and various projector settings. These menu screens can be operated from the projector or the remote control with the following buttons.

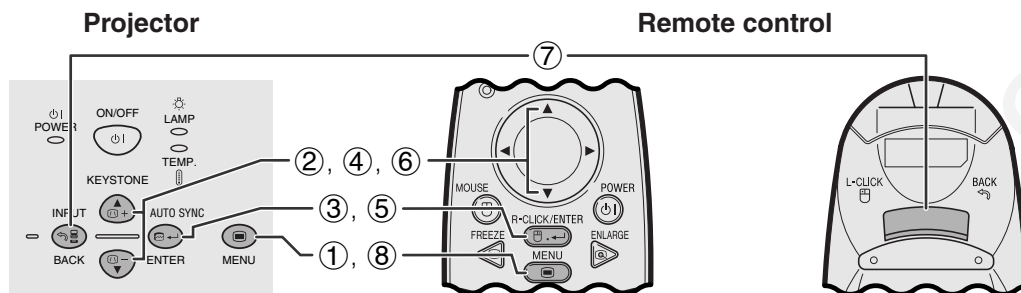


(GUI) On-screen Display


INPUT 1 (RGB) mode

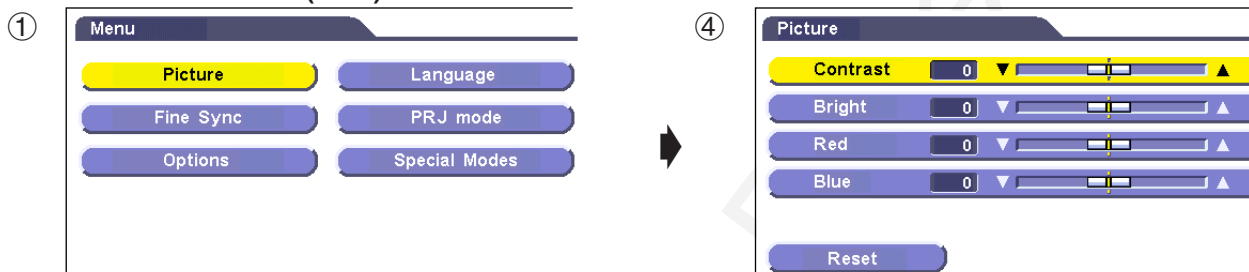

INPUT 1 (COMPONENT) mode

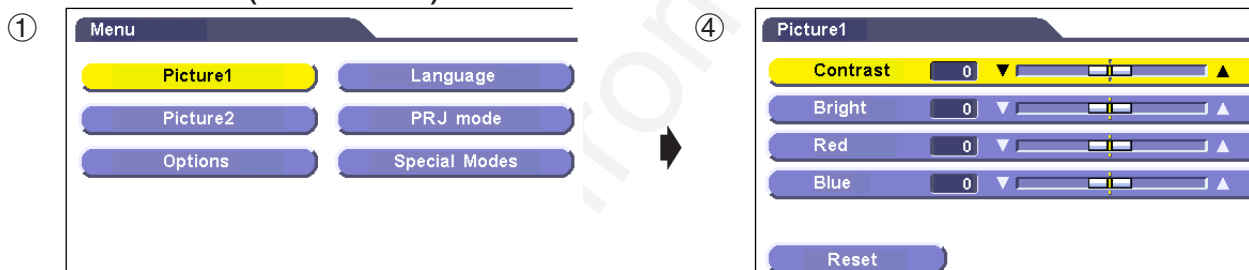

INPUT 2 (S-VIDEO) or 3 (VIDEO) mode

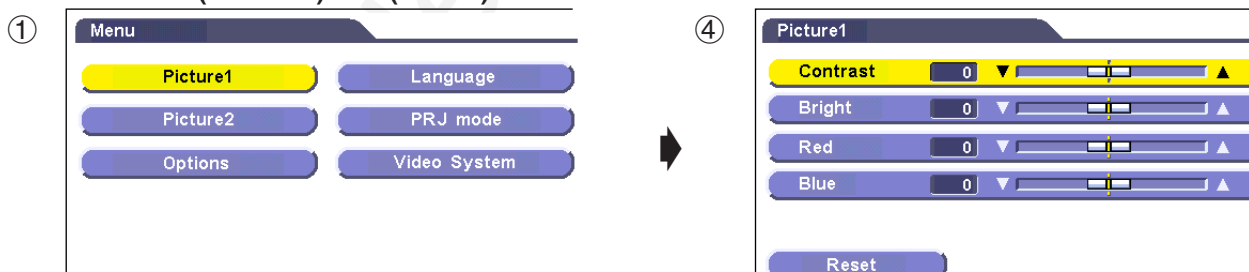


- ① Press **MENU** to display the main menu.
- ② Press **▲/▼** to select an adjustment item in the main menu.
- ③ Press **ENTER** to display the sub menu.
- ④ Press **▲/▼** to select an adjustment item in the sub menu.
- ⑤ Press **ENTER** to activate the selected adjustment item.
- ⑥ Press **▲/▼** to adjust the item.
- ⑦ Press **BACK** to return to the previous screen.
- ⑧ Press **MENU** to exit from the GUI.

NOTE


- For details on items on the menu screen, see the tree charts on pages 24 and 25.



Items on the INPUT 1 (RGB) Mode Menu Bar

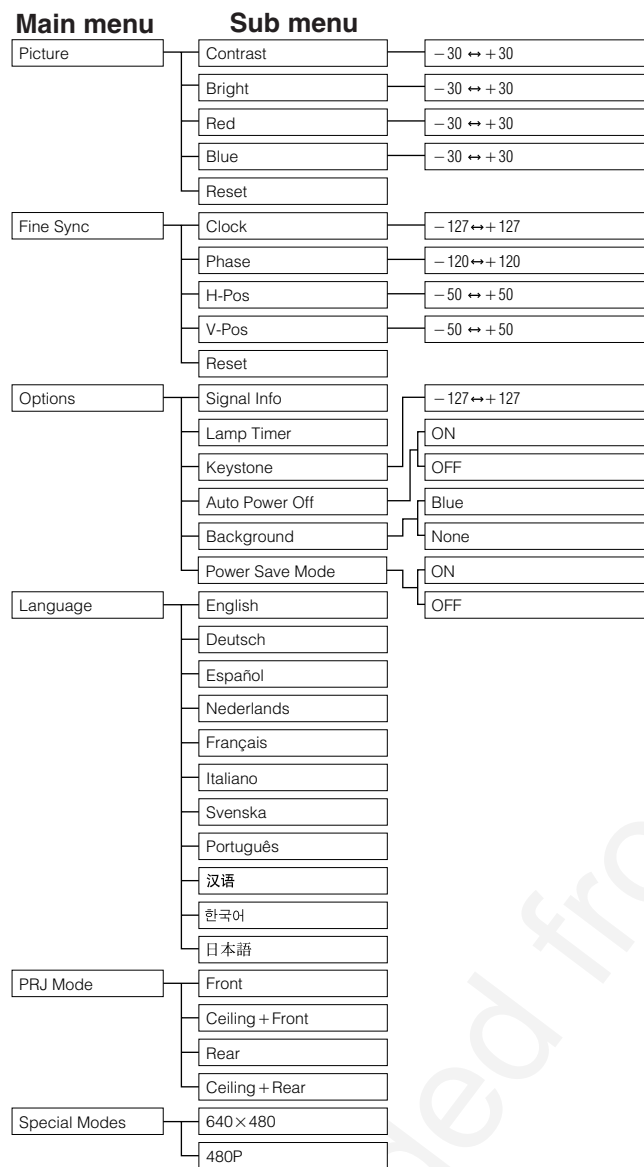


Items on the INPUT 1 (COMPONENT) Mode Menu Bar

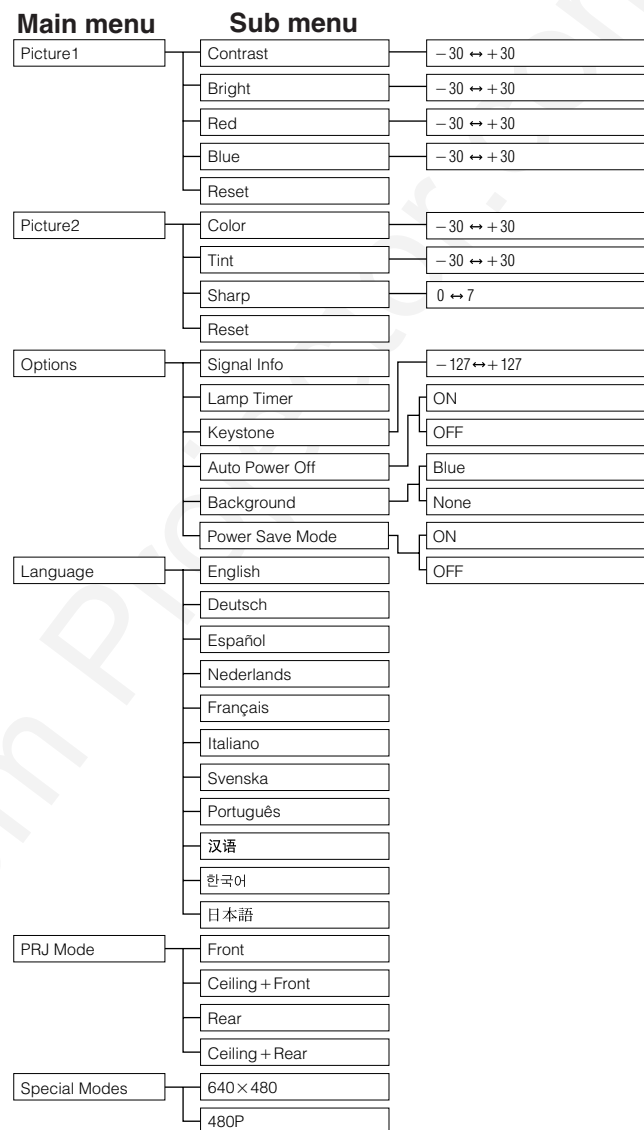



Items on the INPUT 2 (S-VIDEO) or INPUT 3 (VIDEO) Mode Menu Bar

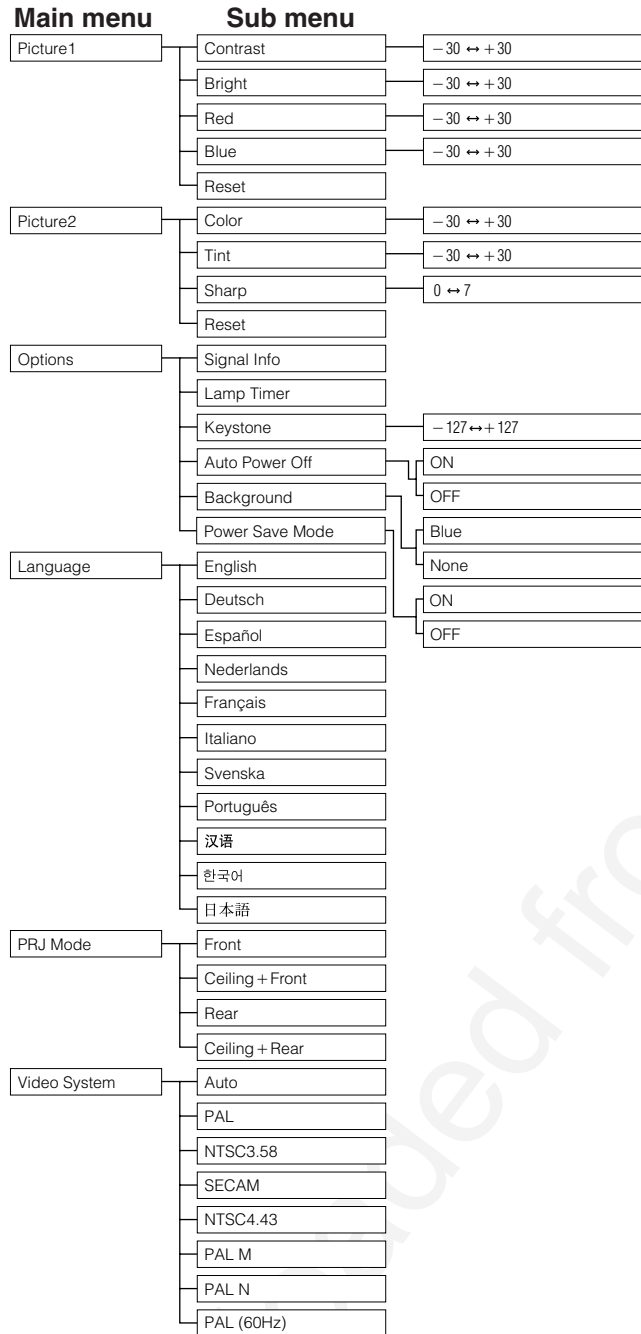


NOTE

- “Tint” does not appear when receiving “PAL”, “SECAM”, “PAL M”, “PAL N” or “PAL (60Hz)” in the INPUT 2 (S-VIDEO) or INPUT 3 (VIDEO) mode.




Selecting the On-screen Display Language

Projector

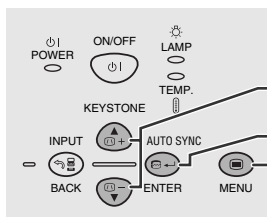

Remote control

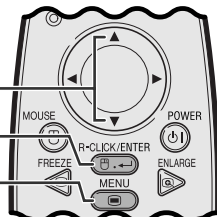

English is the preset language for the On-screen Display. The language can be set to English, German, Spanish, Dutch, French, Italian, Swedish, Portuguese, Chinese, Korean or Japanese.


- ① Press **MENU**.
- ② Press **▲/▼** to select “Language”, and then press **ENTER**.
- ③ Press **▲/▼** to select the desired language.
- ④ Press **ENTER** to save the setting. The On-screen Display is now programed to display in the language selected.
- ⑤ To exit from the GUI, press **MENU**.

(GUI) On-screen Display




Selecting the Video Input System Mode (INPUT 2 or 3 mode only)

Projector

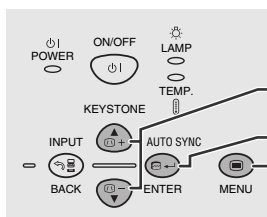


Remote control

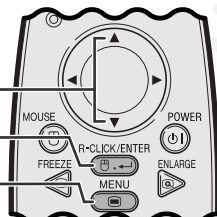

The video input system mode is preset to “Auto”; however, it can be changed to a specific system mode, if the selected system mode is not compatible with the connected audiovisual equipment.

- ① Press **MENU**.
- ② Press **▲/▼** to select “Video System”, and then press **ENTER**.
- ③ Press **▲/▼** to select the desired video system mode.
- ④ Press **ENTER** to save the setting.
- ⑤ To exit from the GUI, press **MENU**.

(GUI) On-screen Display

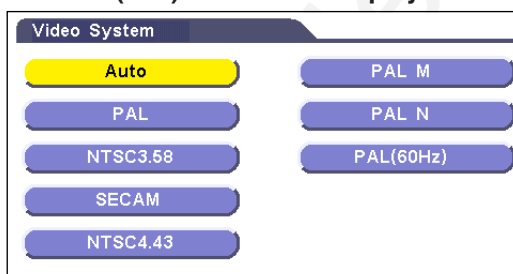

NOTE


- When the system mode is set to “Auto”, you may not receive a clear picture due to signal differences. Should this occur, switch to the video system of the source signal.






Picture Adjustments

Projector

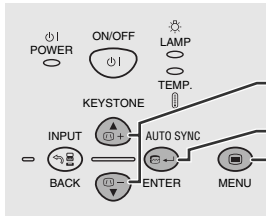


Remote control

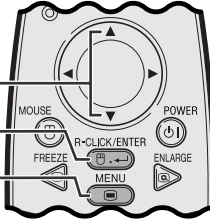



(GUI) On-screen Display INPUT 1 (RGB) mode



INPUT 1 (COMPONENT) mode

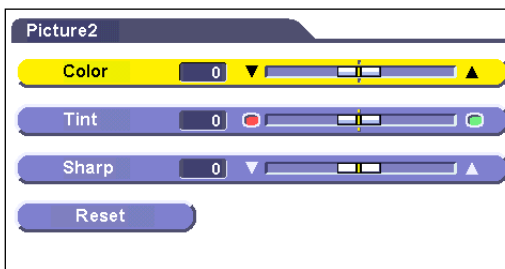

INPUT 2 (S-VIDEO) or INPUT 3 (VIDEO) mode

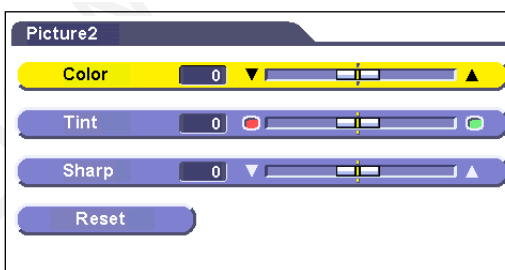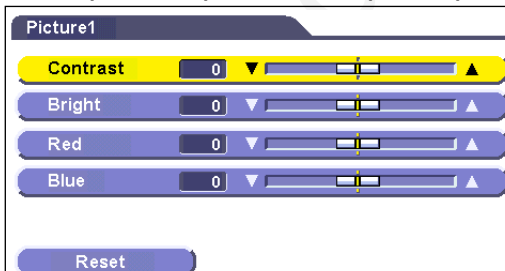


You can adjust the projector's picture to your preferences with the following picture settings.

Description of Adjustment Items

| Selected item | ▼ button | ▲ button |
|-----------------|---|----------------------------|
| Contrast | For less contrast | For more contrast |
| Bright | For less brightness | For more brightness |
| Red | For weaker red | For stronger red |
| Blue | For weaker blue | For stronger blue |
| Reset | All image adjustment items are returned to the factory preset settings. | |
| Color | For less color intensity | For more color intensity |
| Tint | Skin tones become purplish | Skin tones become greenish |
| Sharp | For less sharpness | For more sharpness |

NOTE

- "Color", "Tint" and "Sharp" do not appear in the INPUT 1 (RGB) mode.
- "Tint" does not appear when receiving "PAL", "SECAM", "PAL M", "PAL N" or "PAL (60 Hz)" in the S-VIDEO or VIDEO mode.

- ① Press **MENU**.
- ② Press ▲/▼ to select "Picture" in INPUT 1 (RGB) mode, or to select "Picture1" or "Picture2" in INPUT 1 (COMPONENT), INPUT 2 (S-VIDEO) or INPUT 3 (VIDEO) mode, and then press **ENTER**.
- ③ Press ▲/▼ to select a specific adjustment item, and then press **ENTER**.
- ④ Press ▲/▼ to move the  mark of the selected adjustment item to the desired setting.
- ⑤ To exit from the GUI, press **MENU**.

NOTE


- To reset all adjustment items, select "Reset", and then press **ENTER**.
- The adjustments can be stored separately in the INPUT 1, INPUT 2 and INPUT 3 modes.






Computer Image Adjustments (INPUT 1 mode only)

Projector

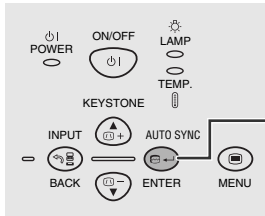

Remote control

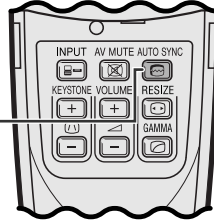

Auto Sync Adjustment

- Used to automatically adjust a computer image.
- Auto Sync adjustment can be made manually by pressing **AUTO SYNC**.

NOTE

- The sync adjustment is automatically made each time the projector is turned on while connected to a computer or the input selection is changed.

- ① Press **AUTO SYNC**.

During Auto Sync adjustment, "Adjusting The Image" is displayed as shown on the left.

NOTE


- Auto Sync adjustment may take some time to complete, depending on the image of the computer connected to the projector.
- When the optimum image cannot be achieved with Auto Sync adjustment, use manual adjustments. (See page 29.)

On-screen Display







Projector

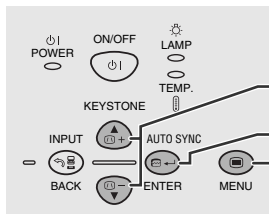

Remote control

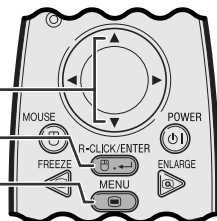

(GUI) On-screen Display

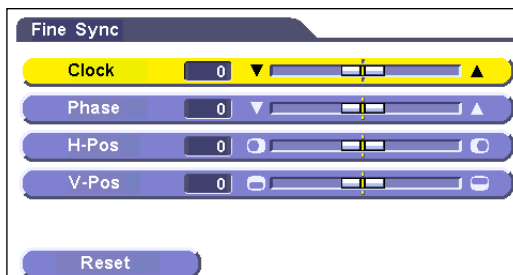

Adjusting the Computer Image

When displaying computer patterns which are very detailed (tiling, vertical stripes, etc.), interference may occur between the LCD pixels, causing flickering, vertical stripes, or contrast irregularities in portions of the screen. Should this occur, adjust “Clock”, “Phase”, “H-Pos” and “V-Pos” for the optimum computer image.


Description of Adjustment Items

| Selected item | Description |
|---------------|--|
| Clock | Adjusts vertical noise. |
| Phase | Adjusts horizontal noise (similar to tracking on your VCR). |
| H-Pos | Centers the on-screen image by moving it to the left or right. |
| V-Pos | Centers the on-screen image by moving it up or down. |

NOTE

- Computer image adjustments can be made easily by pressing **AUTO SYNC** (). See page 28 for details.


(Select the desired computer input mode with **INPUT**.)

- Press **MENU**.
- Press **▲/▼** to select “Fine Sync”, and then press **ENTER**.
- Press **▲/▼** to select a specific adjustment item, and then press **ENTER**.
- Press **▲/▼** to move the  mark of the selected adjustment item to the desired setting.
- To exit from the GUI, press **MENU**.


NOTE

- To reset all adjustment items, select “Reset” on the “Fine Sync” menu screen and press **ENTER**.



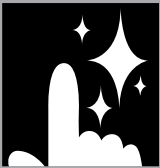


Useful Features

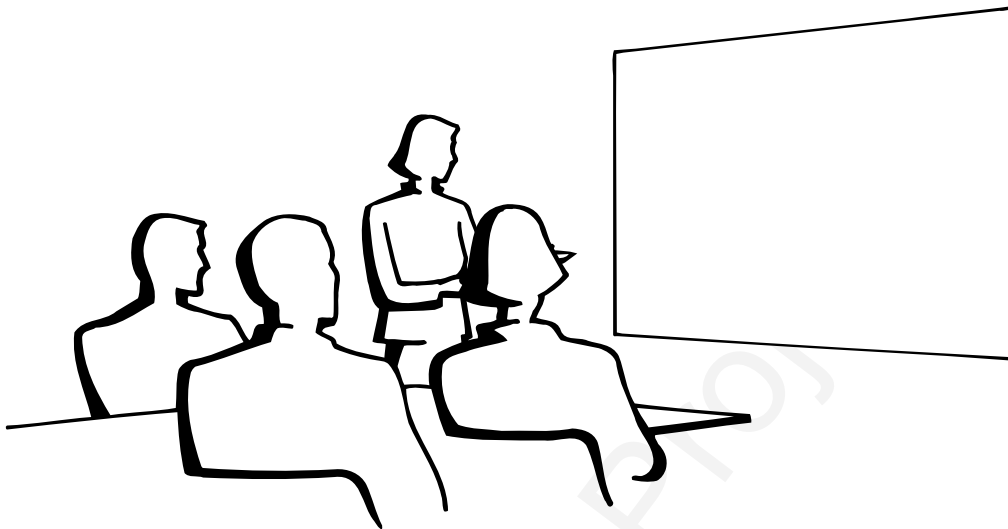

Freeze Function

Remote control

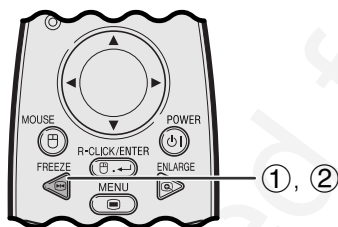

On-screen Display



This function allows you to instantly freeze a moving image. This is useful when you want to display a still image from a computer or video, giving you more time to explain the image to the audience.

You can also use this function to display a still image from a computer while you make preparations for the next computer images to be presented.


- ① Press **FREEZE** on the remote control to freeze the image.
- ② Press **FREEZE** again to return to the moving image.





Digital Image Magnification



Remote control

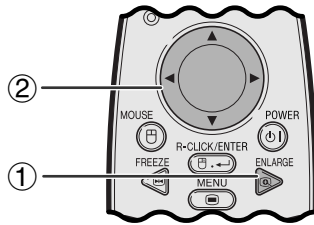

This function allows you to magnify a specific portion of an image. This is useful when you want to display a detailed portion of the image.

- ① Press **ENLARGE** on the remote control. Each time **ENLARGE** is pressed, the image will be magnified.
- ② When the image is magnified, you can pan and scan around the image by using **▲/▼** or **◀/▶**.

On-screen Display

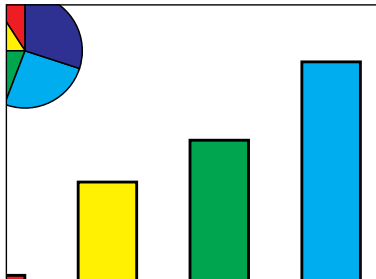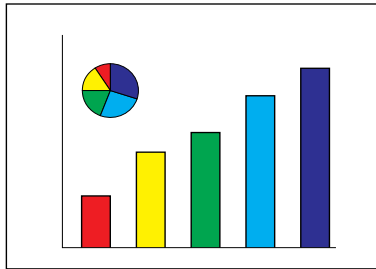

NOTE

- To return to $\times 1$, press **BACK**.
- Each time **ENLARGE** is pressed, image magnification toggles as shown below.

$\times 1 \rightarrow \times 2 \rightarrow \times 3 \rightarrow \times 4 \rightarrow \times 6 \rightarrow \times 8$


- If the input signal is changed during digital image magnification, the image will return to $\times 1$. The input signal is changed
 - (a) when **INPUT** is pressed,
 - (b) when the input signal is interrupted, or
 - (c) when the input resolution and refresh rate changes.






Gamma Correction

Remote control

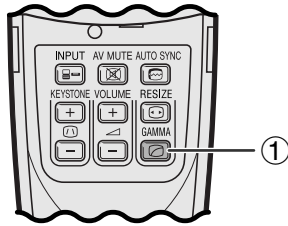


On-screen Display


STANDARD

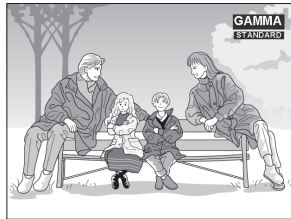

GAMMA 1

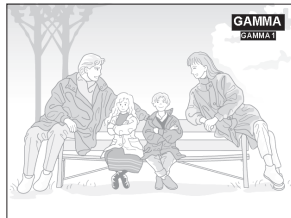

GAMMA 2

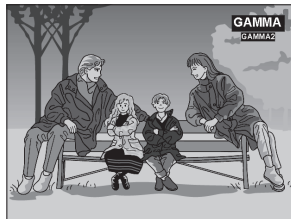

- Gamma is an image quality enhancement function that offers a richer image by brightening the darker portions of the image without altering the brightness of the brighter portions.
- Three gamma settings are available to allow for differences in the images displayed and in the brightness of the room.
- When you are displaying images with frequent, dark scenes, such as a film or concert, or when you are displaying images in a bright room, this feature makes the dark scenes easier to see and gives the impression of greater depth in the image.

Gamma Modes

| Selected Mode | Gamma mode |
|---------------|--|
| STANDARD | For a highly defined image emphasizing high contrast and color reproduction. |
| GAMMA 1 | Most suitable when viewing images in a brightly lit room. |
| GAMMA 2 | For a warm and moist image controlling contrast and brightness. |


- ① Press **GAMMA** on the remote control. Each time **GAMMA** is pressed, the gamma level toggles as shown on the left.





Selecting the Picture Display Mode

Remote control

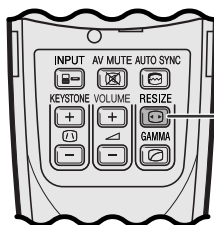

This function allows you to modify or customize the picture display mode to enhance the input image. Depending on the input signal, you can choose the picture display mode preferred.

- 1 Press **RESIZE** on the remote control. Each time **RESIZE** is pressed, the picture mode changes as shown below.

COMPUTER

EXAMPLE

| | | NORMAL | DOT BY DOT |
|---------------------|--------------------|------------|-------------|
| 4:3 aspect ratio | SVGA (800 × 600) | 1024 × 768 | 800 × 600 |
| | XGA (1024 × 768) | 1024 × 768 | – |
| Other aspect ratios | SXGA (1280 × 1024) | 1024 × 768 | 1280 × 1024 |

| | Input Signal | Output screen image | |
|----------------|-------------------------|---------------------|------------|
| | | NORMAL | DOT BY DOT |
| VGA, SVGA, XGA | 4:3 aspect ratio | | |
| SXGA | Other aspect ratios | | |

VIDEO/DTV

EXAMPLE

| | | NORMAL | STRETCH | BORDER |
|--|-----------|------------|------------|-----------|
| 4:3 aspect ratio 480I/P, NTSC, PAL, SECAM | 4:3 | 1024 × 768 | 1024 × 576 | 768 × 576 |
| | Letterbox | 1024 × 768 | 1024 × 576 | 768 × 576 |
| | Squeeze | 1024 × 768 | 1024 × 576 | 768 × 576 |


| | Input Signal | Output screen image | | |
|--------------------------|----------------------|---------------------|---------|--------|
| | | NORMAL | STRETCH | BORDER |
| 480I/P, NTSC, PAL, SECAM | 4:3 aspect ratio | | | |
| | Letterbox | | | |
| | Squeeze | | | |






Checking the Input Signal and the Lamp Usage Time

Projector

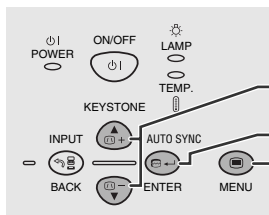

Remote control

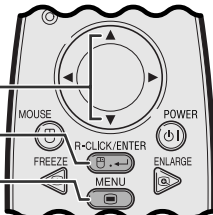

This function allows you to check the current input signal information and the accumulated lamp usage time.

- ① Press **MENU**.
- ② Press **▲/▼** to select "Options", and then press **ENTER**. The current input signal information and the lamp usage time will be displayed.

NOTE


- It is recommended that the lamp be replaced after approximately 900 hours of usage. See pages 40 and 41 for lamp replacement.

(GUI) On-screen Display




Automatic Power Shutoff Function

Projector

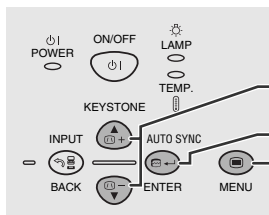

Remote control

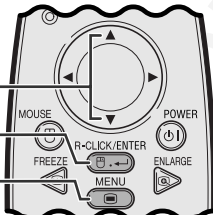

When no input signal is detected for more than 15 minutes, the projector will automatically shut off.

Description of Automatic Power Shutoff

| | |
|------------|--|
| ON | Power automatically shuts off after 15 minutes without a signal being input. |
| OFF | Automatic Power Shutoff disabled. |

- ① Press **MENU**.
- ② Press **▲/▼** to select "Options", and then press **ENTER**.
- ③ Press **▲/▼** to select "Auto Power Off", and then press **ENTER**.
- ④ Press **▲/▼** to select "ON" or "OFF".
- ⑤ To exit from the GUI, press **MENU**.

NOTE

- "Auto Power Off" is factory preset to "ON".


(GUI) On-screen Display






Selecting a Background Image

Projector

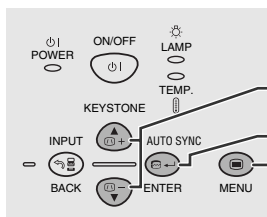

Remote control

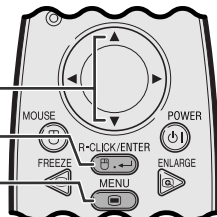

This function allows you to select the image displayed when no signal is being sent to the projector.

Description of Background Images

| | |
|-------------|--------------|
| Blue | Blue screen |
| None | Black screen |

(GUI) On-screen Display




- 1 Press **MENU**.
- 2 Press **▲/▼** to select "Options", and then press **ENTER**.
- 3 Press **▲/▼** to select "Background", and then press **ENTER**.
- 4 Press **▲/▼** to select "Blue" or "None".
- 5 To exit from the GUI, press **MENU**.




Power Save Mode Function

Projector

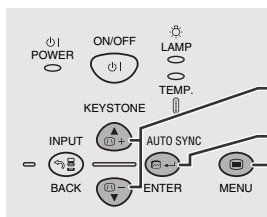

Remote control

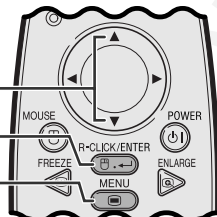


Function with toggle switch to control the quantity of projected light. Select "ON" or "OFF" to decrease or increase brightness, power consumption and fan noise.

Description of Power Save Modes

| | |
|------------|---|
| ON | Quantity of light is 70%. Power consumption is 200 W. |
| OFF | Quantity of light is 100%. Power consumption is 230 W. |

(GUI) On-screen Display

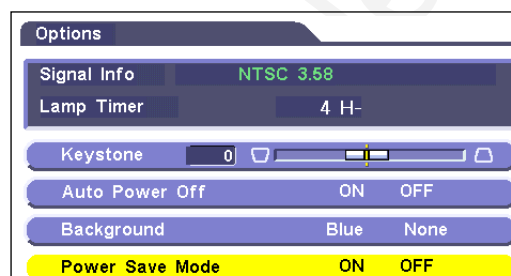

- 1 Press **MENU**.
- 2 Press **▲/▼** to select "Options", and then press **ENTER**.
- 3 Press **▲/▼** to select "Power Save Mode", and then press **ENTER**.
- 4 Press **▲/▼** to select "ON" or "OFF".
- 5 To exit from the GUI, press **MENU**.


NOTE

- "Power Save Mode" is factory preset to "ON".
- When selecting "OFF" in "Power Save Mode", fan noise is increased.
- Even when selecting "ON" in "Power Save Mode", fan noise may increase if internal temperature rises enough to activate the cooling function.




Reverse/Invert Image Function

Projector

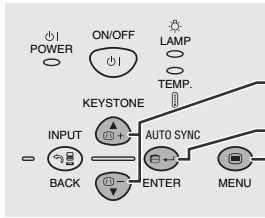

Remote control

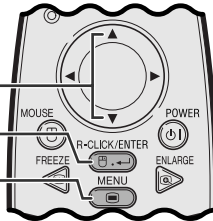


This projector is equipped with a reverse/invert image function which allows you to reverse or invert the projected image for various applications.

Description of Projected Images

| Selected item | Projected image |
|-----------------|-----------------------------|
| Front | Normal image |
| Ceiling + Front | Inverted image |
| Rear | Reversed image |
| Ceiling + Rear | Reversed and inverted image |

(GUI) On-screen Display

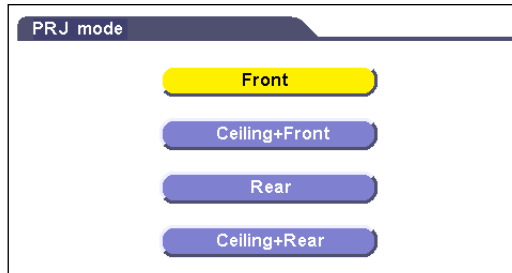

- ① Press **MENU**.
- ② Press **▲/▼** to select "PRJ Mode", and then press **ENTER**.
- ③ Press **▲/▼** to select the desired projection mode, and then press **ENTER**.
- ④ To exit from the GUI, press **MENU**.


NOTE

- This function is used for the reversed image and ceiling-mount setups. See page 19 for these setups.




Special Mode Adjustment

Projector

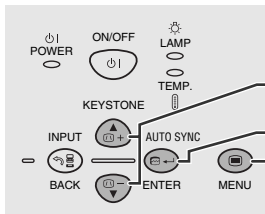


Remote control

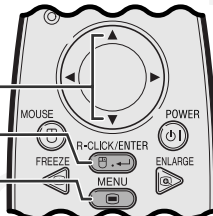

Ordinarily, the type of input signal is detected and the correct resolution mode is automatically selected. However, since the projector cannot distinguish 640×480 signal resolution on computers or 480P on DTVs, select an appropriate mode on "Special Modes."

(GUI) On-screen Display

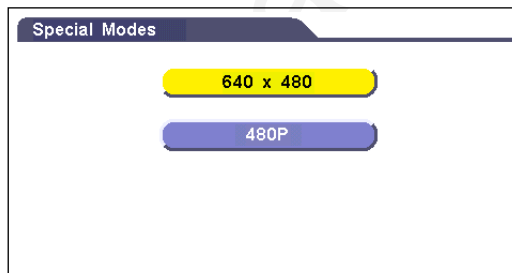

- ① Press **MENU**.
- ② Press **▲/▼** to select "Special Modes", and then press **ENTER**.
- ③ Press **▲/▼** to select the optimal resolution mode.
- ④ Press **ENTER** to save the setting.
- ⑤ To exit from the GUI, press **MENU**.


NOTE

- When inputting DTV 480P signals, select "480P" in step ③ above.






Maintenance & Troubleshooting

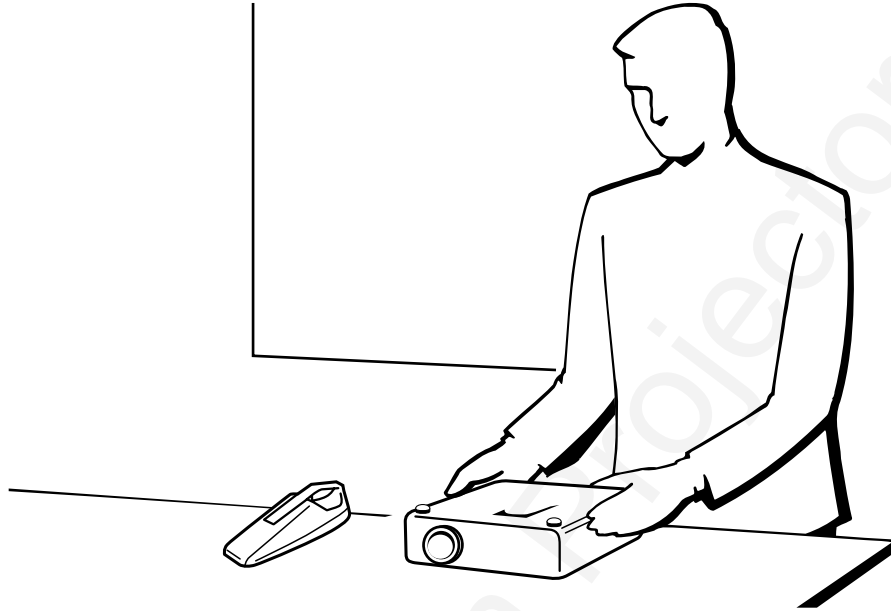

Air Filter Maintenance

Right Side View

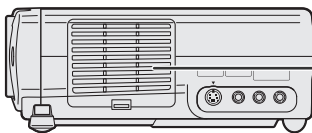


Air filter

- This projector is equipped with an air filter to ensure the optimal operating condition of the projector.
- The air filter should be cleaned every 100 hours of use. Clean the filters more often when the projector is used in a dusty or smoky location.
- Have your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center exchange the filter (PFILD0123CEZZ) when it is no longer possible to clean it.

Cleaning the air filter


1 Disconnect the power cord.

Unplug the power cord from the AC socket.



2 Remove the filter cover.


Turn over the projector. Press the tab and remove the filter cover in the direction of the arrow.

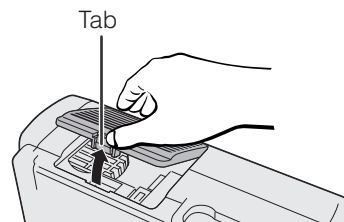




3 Clean the air filter.

Clean the dust off the air filter and cover with a vacuum cleaner extension hose.

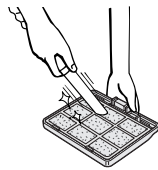

4 Replace the filter cover.


Insert the tab on the end of the filter cover into the filter cover opening and press the filter cover into position.

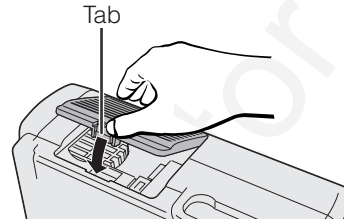

Replacing the air filter


1 Disconnect the power cord.

Unplug the power cord from the AC socket.




2 Remove the filter cover.

Turn over the projector. Press the tab and remove the filter cover in the direction of the arrow.

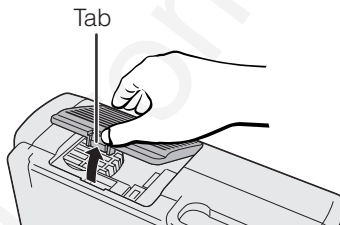


3 Remove the air filter.

- ① Remove the air filter stopper.
- ② Remove the air filter.

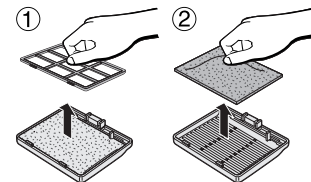


4 Replace the air filter.

- ① Put the new air filter into position.
- ② Put the air filter stopper back into position.

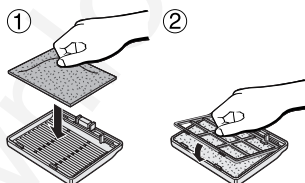

5 Replace the filter cover.

Insert the tab on the end of the filter cover into the filter cover opening and press the filter cover into position.

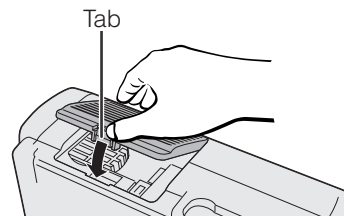

NOTE


- Be sure the filter cover is securely installed. The power will not turn on unless it is correctly installed.





Lamp/Maintenance Indicators

Maintenance Indicators

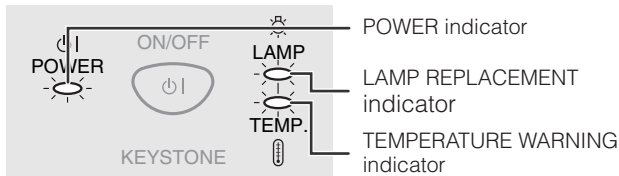

- The warning lights on the projector indicate problems inside the projector.
- There are two warning lights: a TEMPERATURE WARNING indicator which warns that the projector is too hot, and a LAMP REPLACEMENT indicator which lets you know when to change the lamp.
- If a problem occurs, either the TEMPERATURE WARNING indicator or the LAMP REPLACEMENT indicator will illuminate red. After turning off the power, follow the procedures given below.

| Maintenance Indicator | Condition | Problem | Possible Solution |
|-------------------------------|--|---|--|
| TEMPERATURE WARNING indicator | The internal temperature is abnormally high. | • Blocked air intake. | • Relocate the projector to an area with proper ventilation. |
| | | • Clogged air filter. | • Clean the filter. (See pages 37 and 38.) |
| | | • Cooling fan breakdown. • Internal circuit failure. | • Take the projector to your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center for repair. |
| | The indicator flashes in red. | • Cooling down. | • Wait until the indicator stops flashing and turns off. |
| LAMP REPLACEMENT indicator | The lamp does not illuminate. | • Burnt-out lamp. • Lamp circuit failure. | • Carefully replace the lamp. (See pages 40 and 41.) |
| | The lamp requires replacement. | • Lamp has been used for over 900 hours. | • Take the projector to your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center for repair. |
| POWER indicator | The indicator flashes in red when the projector is on. | • The filter cover is open. | • Securely install the filter cover. |

NOTE

- If the TEMPERATURE WARNING indicator illuminates, follow the solution listed above and then wait until the projector has cooled down completely before turning the power back on. (At least 5 minutes.)
- If the power is turned off and then turned on again, as during a brief rest, the LAMP REPLACEMENT indicator may be triggered, preventing the power from going on. Should this occur, remove the power cord from the wall outlet and plug it in again.

Lamp

The lamp in this projector operates for approximately 1,000 cumulative hours, depending on the usage environment. It is recommended that the lamp be replaced after 900 cumulative hours of use or when you notice a significant deterioration of the picture and color quality. The lamp usage timer can be checked with the On-screen Display. (See page 34.)

CAUTION

- Intense light hazard. Do not attempt to look into the aperture and lens while the projector is operating.

NOTE

- As the usage environment can vary significantly, the projector lamp may not operate for 1,000 hours.
- "1,000 hours" above indicates average life span and should be used for reference only. This is different than the warranty period.
- For safety, the power will not be turned on from the fourth times when turning on the power without changing the lamp after use for 1,000 hours.

| Condition | Problem | Possible Solution |
|---|--|--|
| The LAMP REPLACEMENT indicator illuminates red, and "LAMP" will appear in yellow in the lower-left corner of the picture. | • Lamp has been used for over 900 hours. | • Purchase a replacement lamp unit (lamp cage/module) of the current type BQC-PGC20X//1 from your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center. |
| A significant deterioration of the picture and color quality occurs. | | |
| The power will automatically turn off and the projector will enter standby mode. | • Lamp has been used for over 1,000 hours. | • Replace the lamp. (See pages 40 and 41.) If you wish, you may have the lamp replaced at your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center. |
| "LAMP" will appear in red in the lower-left corner of the picture, and the power will turn off. | | |





Replacing the Projection Lamp

CAUTION:

- **Potential hazard of glass particles if lamp ruptures. Please have Authorized Sharp Industrial LCD Products Dealer or Service Center replace lamp if rupture occurs.**
- **Do not remove the lamp cage directly after operation of the projector. The lamp may be extremely hot. Wait at least one hour after the power cord is disconnected to allow the surface of the lamp cage to fully cool before removing the lamp cage.**

It is recommended that the lamp be replaced after approximately 900 cumulative hours of use or when you notice a significant deterioration of the picture and color quality. Carefully change the lamp by following the steps below. If the new lamp does not light after replacement, take your projector to the nearest Authorized Sharp Industrial LCD Products Dealer or Service Center for repair. Purchase a replacement lamp unit (lamp/cage module) of the current type BQC-PGC20X//1 from your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center. Then carefully change the lamp by following the instructions below. If you wish, you may have the lamp replaced at your nearest Authorized Sharp Industrial LCD Products Dealer or Service Center.

IMPORTANT NOTE TO U.S. CUSTOMERS:







The lamp included with this projector is backed by a 90-day parts and labor limited warranty. All service of this projector under warranty, including lamp replacement, must be obtained through an Authorized Sharp Industrial LCD Products Dealer or Service Center. For the name of the nearest Authorized Sharp Industrial LCD Products Dealer or Service Center, please call toll-free: 1-888-GO-SHARP (1-888-467-4277).

U.S.A. ONLY

Removing and installing the lamp unit

CAUTION

- Be sure to remove the lamp cage by the handle. Be sure not to touch the glass surface of the lamp cage or the inside of the projector.
- To avoid injury to yourself and damage to the lamp, be sure to carefully follow the steps below.
- Be sure to change the air filter during lamp replacement. The air filter comes packaged with the lamp unit.
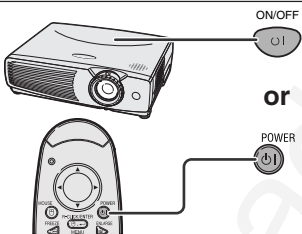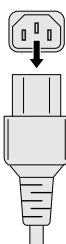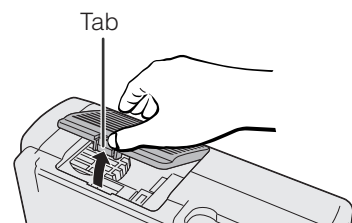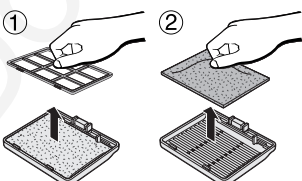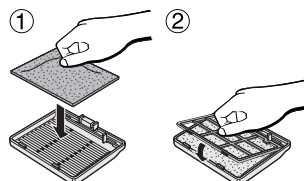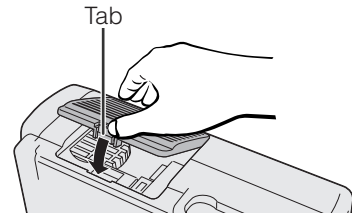
| | | |
|--|--|--|
| 1 Turn off the power. Press ON/OFF on the projector or POWER on the remote control. Wait until the cooling fan stops.  | 2 Disconnect the power cord. Unplug the power cord from the AC socket.  | 3 Remove the filter cover. Turn over the projector. Press the tab and remove the filter cover in the direction of the arrow.  |
| 4 Remove the air filter. ① Remove the air filter stopper. ② Remove the air filter.  | 5 Replace the air filter. ① Put the new air filter into position. ② Put the air filter stopper back into position.  | 6 Replace the filter cover. Insert the tab on the end of the filter cover into the filter cover opening and press the filter cover into position.  |






Replacing the Projection Lamp


7 Remove the lamp cage cover.

Turn over the projector and loosen the user service screw that secures the lamp cage cover. Then lift open the cover in the direction of the arrow.

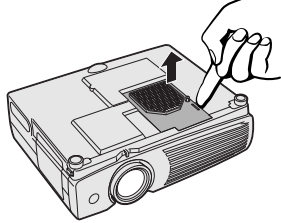


8 Remove the lamp cage.

Loosen the securing screws on the lamp cage. Hold the lamp cage by the handle and pull it towards you.

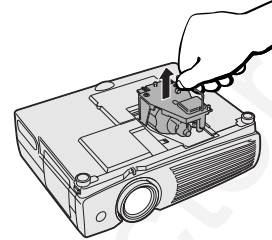


9 Insert the new lamp cage.

Press the lamp cage firmly into the lamp cage compartment. Fasten the securing screws.

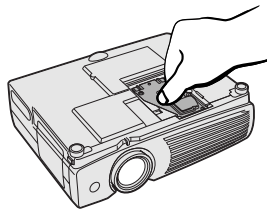

10 Attach the lamp cage cover.


Slide the lamp cage cover in the direction of the arrow. Then tighten the user service screw.

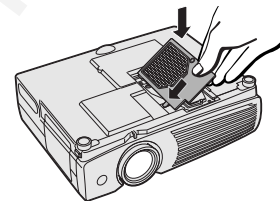

Resetting the lamp timer


1 Connect the power cord.

Plug the power cord into the AC socket of the projector.




2 Reset the lamp timer.

- ① Press **KEYSTONE ▲** and **KEYSTONE ▼** on the projector at the same time.
- ② Press **INPUT** and **AUTO SYNC** on the projector at the same time.
- ③ Press **AUTO SYNC** and **MENU** on the projector at the same time.

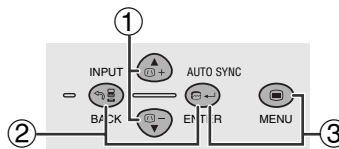

"LAMP 0000H" is displayed, indicating that the lamp timer is reset.

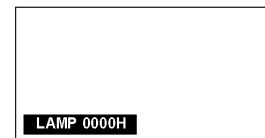


NOTE

- Reset the lamp timer only after replacing the lamp.





Using the Kensington Lock

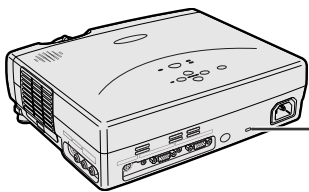

Kensington Security Standard connector

This projector has a Kensington Security Standard connector for use with a Kensington MicroSaver Security System. Refer to the information that came with the system for instructions on how to use it to secure the projector.




Troubleshooting

| Problem | Check |
|--|---|
| No picture and no sound. | <ul style="list-style-type: none"> • Projector power cord is not plugged into the wall outlet. • The filter cover is not securely installed. • Selected input is wrong. (See page 17.) • Cables incorrectly connected to side and rear panels of the projector. (See pages 12–15.) • Remote control batteries have run down. (See page 9.) |
| Sound is heard but no picture appears. | <ul style="list-style-type: none"> • Cables incorrectly connected to side and rear panels of the projector. (See pages 12–15.) • "Contrast" and "Bright" adjustments are set to minimum position. (See page 27.) |
| Color is faded or poor. | <ul style="list-style-type: none"> • "Color" and "Tint" adjustments are not correct. (See page 27.) |
| Picture is blurred. | <ul style="list-style-type: none"> • Adjust the focus. (See page 17.) • Projection distance is too long or too short to allow for proper focus. (See page 18.) |
| Picture appears but no sound is heard. | <ul style="list-style-type: none"> • Cables incorrectly connected to side and rear panels of the projector. (See pages 12–15.) • Volume is set to minimum. (See page 17.) |
| An unusual sound is occasionally heard from the cabinet. | <ul style="list-style-type: none"> • If the picture is normal, the sound is due to cabinet shrinkage caused by temperature changes. This will not affect operation or performance. |
| Maintenance indicator illuminates. | <ul style="list-style-type: none"> • Refer to "Lamp/Maintenance Indicators" on page 39. |
| Picture noise appears. | <ul style="list-style-type: none"> • Adjust the "Phase" setting. (See page 29.) |
| 480P images do not appear. | <ul style="list-style-type: none"> • Set the resolution mode to 480P. (See page 36.) |








Appendix

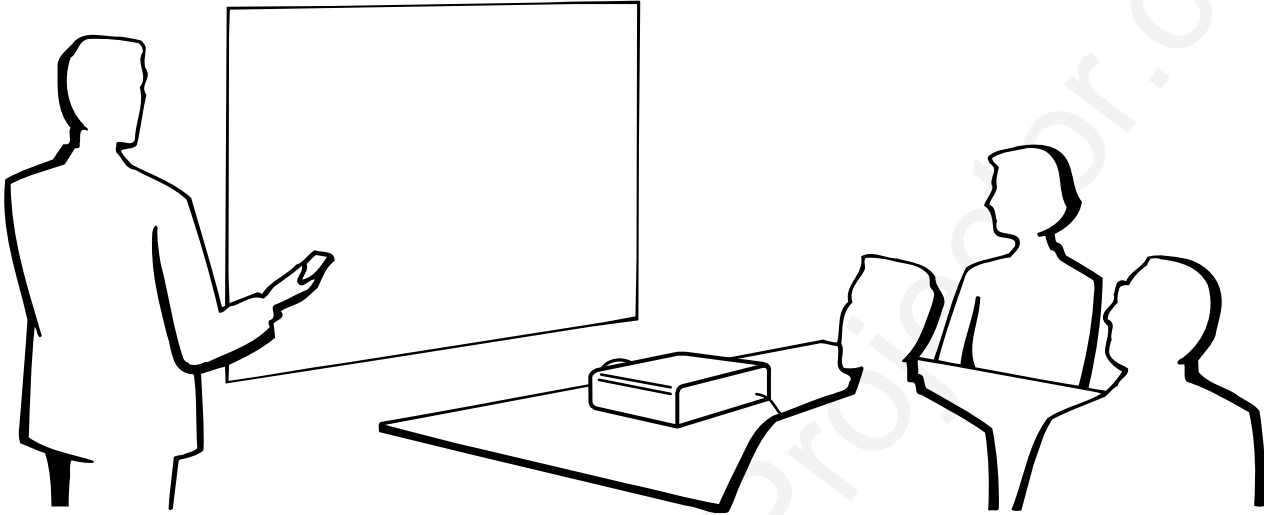

Attaching the Lens Cap

Put on the lens cap to prevent damage to the lens when transporting the projector. A lens cap strap is provided to prevent the loss of the lens cap.
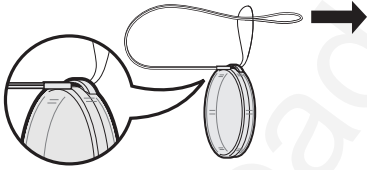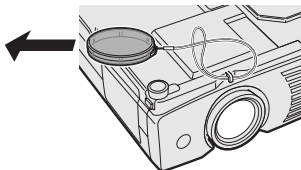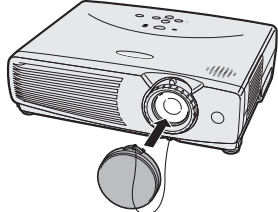
| | | |
|---|---|---|
| 1 Attach the lens cap strap to the lens cap. | 2 Attach the lens cap strap to the projector. | 3 Attach the lens cap to the projector with the lens cap eyelet facing up. |
|  |  |  |

CAUTION

- Do not lift or carry the projector by the lens or the lens cap as this may damage the lens.

NOTE


- You can also use the end of a mechanical pencil or other pointed object to feed the lens cap strap through the openings.






Connection Pin Assignments

COMPUTER INPUT 1 Port: 15-pin mini D-sub female connector

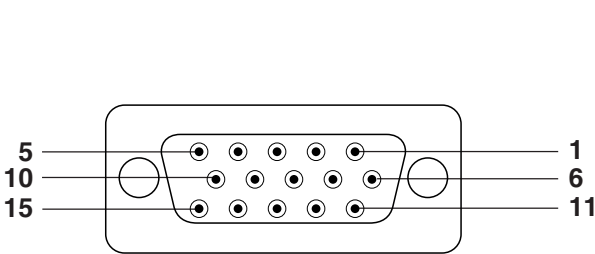


| Computer Input | |
|--------------------------------------|----------------------------|
| Analog | |
| 1. Video input (red) | 9. Not connected |
| 2. Video input (green/sync on green) | 10. Not connected |
| 3. Video input (blue) | 11. GND |
| 4. Not connected | 12. Bi-directional data |
| 5. Composite sync | 13. Horizontal sync signal |
| 6. GND (red) | 14. Vertical sync signal |
| 7. GND (green/sync on green) | 15. Data clock |
| 8. GND (blue) | |

RS-232C Port: 9-pin D-sub male connector of the DIN-D-sub RS-232C cable

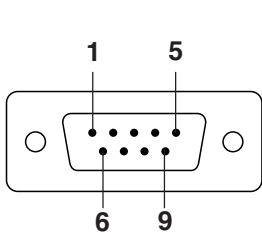

| Pin No. | Signal | Name | I/O | Reference |
|---------|--------|---------------|--------|-------------------------------|
| 1 | | | | Not connected |
| 2 | RD | Receive Data | Input | Connected to internal circuit |
| 3 | SD | Send Data | Output | Connected to internal circuit |
| 4 | | | | Not connected |
| 5 | SG | Signal Ground | | Connected to internal circuit |
| 6 | | | | Not connected |
| 7 | | | | Not connected |
| 8 | | | | Not connected |
| 9 | | | | Not connected |

RS-232C Terminal: 9-pin Mini DIN female connector

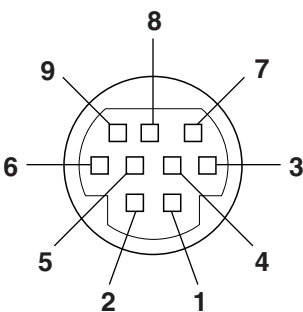

| Pin No. | Signal | Name | I/O | Reference |
|---------|--------|---------------|--------|-------------------------------|
| 1 | | | | Not connected |
| 2 | RD | Receive Data | Input | Connected to internal circuit |
| 3 | SD | Send Data | Output | Connected to internal circuit |
| 4 | | | | Not connected |
| 5 | SG | Signal Ground | | Connected to internal circuit |
| 6 | | | | Not connected |
| 7 | | | | Not connected |
| 8 | | | | Not connected |
| 9 | | | | Not connected |





RS-232C Port Specifications

PC control

A computer can be used to control the projector by connecting an RS-232C cable (null modem, cross type, sold separately) to the projector. (See page 15 for connection.)

Communication conditions

Set the serial port settings of the computer to match that of the table.

Signal format: Conforms to RS-232C standard.

Baud rate: 9,600 bps

Data length: 8 bits

Parity bit: NON


Stop bit: 1 bit

Flow control: None

Basic format

Commands from the computer are sent in the following order: command, parameter, and return code. After the projector processes the command from the computer, it sends a response code to the computer.

Command format



Response code format

Normal response



Problem response (Failure due to incorrect command/parameter or the other communication errors)



When more than one code is being sent, send each command only after the OK response code for the previous command from the projector is verified.

NOTE

- When using the computer control function of the projector, the projector operating status cannot be read to the computer. Therefore, confirm the status by transmitting the display commands for each adjustment menu and checking the status with the On-screen Display. If the projector receives a command other than a menu display command, it will execute the command without displaying the On-screen Display.







RS-232C Port Specifications

Commands

EXAMPLE

- When "BRIGHT" of INPUT 1 (RGB) IMAGE ADJUSTMENT is set to -10.

| Computer | | | | | | | | | Projector | | |
|----------|---|---|---|---|---|---|---|---|-----------|---|---|
| R | A | B | R | - | - | 1 | 0 |  | O | K |  |

| CONTROL ITEM | COMMAND | | | | PARAMETER | | | | CONTROL CONTENTS |
|---|---------|----|----|----|-----------|----|----|----|------------------------|
| | C1 | C2 | C3 | C4 | P1 | P2 | P3 | P4 | |
| SPECIAL MODE | S | P | M | D | _ | _ | _ | 0 | 640×480 |
| | S | P | M | D | _ | _ | _ | 1 | 480P |
| AUTO POWER OFF | A | P | O | W | _ | _ | _ | 0 | AUTO POWER OFF (OFF) |
| | A | P | O | W | _ | _ | _ | 1 | AUTO POWER OFF (ON) |
| POWER SAVE MODE | T | H | M | D | _ | _ | _ | 0 | POWER SAVE MODE OFF |
| | T | H | M | D | _ | _ | _ | 1 | POWER SAVE MODE ON |
| POWER SETTING | P | O | W | R | _ | _ | _ | 0 | POWER OFF (STANDBY) |
| | P | O | W | R | _ | _ | _ | 1 | POWER ON |
| INPUT SWITCHING | I | R | G | B | _ | _ | _ | 1 | INPUT1 (RGB) |
| | I | R | G | B | _ | _ | _ | 2 | INPUT1 (COMPONENT) |
| | I | V | E | D | _ | _ | _ | 1 | INPUT2 (S-VIDEO) |
| | I | V | E | D | _ | _ | _ | 2 | INPUT3 (VIDEO) |
| INPUT CHECK | I | C | H | K | _ | _ | _ | 0 | INPUT CHECK |
| VOLUME ADJUSTMENT | V | O | L | A | _ | _ | * | * | VOLUME (00 - 60) |
| AV MUTE | I | M | B | K | _ | _ | _ | 0 | AV MUTE OFF |
| | I | M | B | K | _ | _ | _ | 1 | AV MUTE ON |
| KEYSTONE ADJUSTMENT | K | E | Y | S | * | * | * | * | KEYSTONE (-127 - +127) |
| INPUT1 (RGB) IMAGE ADJUSTMENT | R | B | P | I | _ | * | * | * | CONTRAST (-30 - +30) |
| | R | B | B | R | _ | * | * | * | BRIGHT (-30 - +30) |
| | R | B | B | R | D | _ | * | * | RED (-30 - +30) |
| | R | B | B | E | _ | * | * | * | BLUE (-30 - +30) |
| | R | B | R | E | _ | _ | _ | 1 | RESET |
| INPUT2(S-VIDEO)/ INPUT3(VIDEO) IMAGE ADJUSTMENT 1 | V | A | P | I | _ | * | * | * | CONTRAST (-30 - +30) |
| | V | A | B | R | _ | * | * | * | BRIGHT (-30 - +30) |
| | V | A | B | R | D | _ | * | * | RED (-30 - +30) |
| | V | A | B | E | _ | * | * | * | BLUE (-30 - +30) |
| | V | A | R | E | _ | _ | _ | 1 | RESET |
| INPUT2(S-VIDEO)/ INPUT3(VIDEO) IMAGE ADJUSTMENT 2 | V | A | C | O | _ | * | * | * | COLOR (-30 - +30) |
| | V | A | T | I | _ | * | * | * | TINT (-30 - +30) |
| | V | A | S | H | _ | _ | _ | * | SHARPNESS (0 - 7) |
| | V | A | R | E | _ | _ | _ | 2 | RESET |
| INPUT1 (COMPONENT) IMAGE ADJUSTMENT 1 | R | A | P | I | _ | * | * | * | CONTRAST (-30 - +30) |
| | R | A | B | R | _ | * | * | * | BRIGHT (-30 - +30) |
| | R | A | R | D | _ | * | * | * | RED (-30 - +30) |
| | R | A | B | E | _ | * | * | * | BLUE (-30 - +30) |
| | R | A | R | E | _ | _ | _ | 1 | RESET |
| INPUT1 (COMPONENT) IMAGE ADJUSTMENT 2 | R | A | C | O | _ | * | * | * | COLOR (-30 - +30) |
| | R | A | T | I | _ | * | * | * | TINT (-30 - +30) |
| | R | A | S | H | _ | _ | _ | * | SHARPNESS (0 - 7) |
| | R | A | R | E | _ | _ | _ | 2 | RESET |
| INPUT AUTO SYNCHRONIZATION | A | D | J | S | _ | _ | _ | 1 | AUTO SYNC START |

| CONTROL ITEM | COMMAND | | | | PARAMETER | | | | CONTROL CONTENTS |
|--|---------|----|----|----|-----------|----|----|----|------------------|
| | C1 | C2 | C3 | C4 | P1 | P2 | P3 | P4 | |
| VIDEO SYSTEM SELECTION | M | E | S | Y | _ | _ | _ | 1 | AUTO |
| | M | E | S | Y | _ | _ | _ | 2 | PAL |
| | M | E | S | Y | _ | _ | _ | 3 | NTSC 3.58 |
| | M | E | S | Y | _ | _ | _ | 4 | SECAM |
| | M | E | S | Y | _ | _ | _ | 5 | NTSC 4.43 |
| | M | E | S | Y | _ | _ | _ | 6 | PAL (M) |
| | M | E | S | Y | _ | _ | _ | 7 | PAL (N) |
| | M | E | S | Y | _ | _ | _ | 8 | PAL (60 Hz) |
| BACKGROUND SELECTION | I | M | B | G | _ | _ | _ | 3 | BLUE |
| | I | M | B | G | _ | _ | _ | 4 | NONE |
| LANGUAGE SELECTION | M | E | L | A | _ | _ | _ | 1 | ENGLISH |
| | M | E | L | A | _ | _ | _ | 2 | DEUTSCH |
| | M | E | L | A | _ | _ | _ | 3 | ESPAÑOL |
| | M | E | L | A | _ | _ | _ | 4 | NEDERLANDS |
| | M | E | L | A | _ | _ | _ | 5 | FRANÇAIS |
| | M | E | L | A | _ | _ | _ | 6 | ITALIANO |
| | M | E | L | A | _ | _ | _ | 7 | SVENSKA |
| | M | E | L | A | _ | _ | _ | 8 | PORTUGUÊS |
| | M | E | L | A | _ | _ | _ | 9 | 汉语 |
| | M | E | L | A | _ | _ | _ | 10 | 한국어 |
| | M | E | L | A | _ | _ | _ | 11 | 日本語 |
| INPUT1 (RGB) GAMMA SELECTION | G | A | M | R | _ | _ | _ | 1 | STANDARD |
| | G | A | M | R | _ | _ | _ | 2 | GAMMA1 |
| | G | A | M | R | _ | _ | _ | 3 | GAMMA2 |
| INPUT2(S-VIDEO)/ INPUT3(VIDEO) GAMMA SELECTION | G | A | M | V | _ | _ | _ | 1 | STANDARD |
| | G | A | M | V | _ | _ | _ | 2 | GAMMA1 |
| | G | A | M | V | _ | _ | _ | 3 | GAMMA2 |
| INPUT1 (COMPONENT) GAMMA SELECTION | G | A | M | V | _ | _ | _ | 1 | STANDARD |
| | G | A | M | V | _ | _ | _ | 2 | GAMMA1 |
| | G | A | M | V | _ | _ | _ | 3 | GAMMA2 |
| INPUT1 (RGB) RESIZE | R | B | S | R | _ | _ | _ | 1 | NORMAL |
| | R | B | S | R | _ | _ | _ | 2 | DOT BY DOT |
| INPUT2(S-VIDEO)/ INPUT3(VIDEO) RESIZE | R | A | S | V | _ | _ | _ | 1 | NORMAL |
| | R | A | S | V | _ | _ | _ | 2 | STRETCH |
| | R | A | S | V | _ | _ | _ | 3 | BORDER |
| INPUT1 (COMPONENT) RESIZE | R | A | S | R | _ | _ | _ | 1 | NORMAL |
| | R | A | S | R | _ | _ | _ | 2 | STRETCH |
| | R | A | S | R | _ | _ | _ | 3 | BORDER |
| SCREEN SETTING | I | M | R | E | _ | _ | _ | 0 | REVERSE OFF |
| | I | M | R | E | _ | _ | _ | 1 | REVERSE ON |
| | I | M | I | N | _ | _ | _ | 0 | INVERT OFF |
| | I | M | I | N | _ | _ | _ | 1 | INVERT ON |

NOTE

- If an underbar (_) appears in the parameter column, enter a space. If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.





Computer Compatibility Chart

Horizontal Frequency: 15–80 kHz

Vertical Frequency: 43–85 Hz

Pixel Clock: 12–108 MHz

Compatible with sync on green and composite sync signals

SXGA (1,280 × 1,024) compatible in intelligent compression

| PC/ MAC/ WS | Resolution | | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | VESA Standard | Display |
|-------------------|------------|-------------|----------------------------------|-------------------------------|------------------|---------|
| PC | VGA | 640 × 350 | 27.0 | 60 | | Upscale |
| | | | 31.5 | 70 | | |
| | | | 37.9 | 85 | × | |
| | | 720 × 350 | 27.0 | 60 | | |
| | | | 31.5 | 70 | | |
| | | | 27.0 | 60 | | |
| | | 640 × 400 | 31.5 | 70 | × | |
| | | | 37.9 | 85 | × | |
| | | | 27.0 | 60 | | |
| | | 720 × 400 | 31.5 | 70 | × | |
| | | | 37.9 | 85 | × | |
| | | | 27.0 | 60 | | |
| | SVGA | 800 × 600 | 26.2 | 50 | | Upscale |
| | | | 31.5 | 60 | × | |
| | | | 34.7 | 70 | | |
| | | | 37.9 | 72 | × | |
| | | | 37.5 | 75 | × | |
| | | | 43.3 | 85 | × | |
| | | 800 × 600 | 31.3 | 50 | | |
| | | | 35.1 | 56 | × | |
| | | | 37.9 | 60 | × | |
| | | | 44.5 | 70 | | |
| | | | 48.1 | 72 | × | |
| | | | 46.9 | 75 | × | |
| | XGA | 1,024 × 768 | 53.7 | 85 | × | |
| | | | 35.5 | 43 | × | True |
| | | | 40.3 | 50 | | |
| | | | 48.4 | 60 | × | |
| | | | 56.5 | 70 | × | |
| | | | 60.0 | 75 | × | |
| | | | 68.7 | 85 | × | |

| PC/ MAC/ WS | Resolution | | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | VESA Standard | Display |
|-------------------|------------|-------------|----------------------------------|-------------------------------|------------------|----------------------------|
| PC | SXGA | 1,152 × 864 | 55.0 | 60 | | Intelligent Compression |
| | | | 66.2 | 70 | | |
| | | | 67.5 | 75 | × | |
| | | 1,152 × 882 | 54.8 | 60 | | |
| PC/ MAC 13" | VGA | 640 × 480 | 65.9 | 72 | | Upscale |
| | | | 64.0 | 60 | × | |
| PC/ MAC 19" | XGA | 1,024 × 768 | 48.4 | 60 | × | Intelligent Compression |
| | | | 60.0 | 75 | × | |
| MAC 16" | SVGA | 832 × 624 | 49.7 | 75 | | |
| | | | 68.7 | 75 | | |
| MAC 21" | SXGA | 1,152 × 870 | 68.7 | 75 | | |

NOTE

- This projector may not be able to display images from notebook computers in simultaneous (CRT/LCD) mode. Should this occur, turn off the LCD display on the notebook computer and output the display data in "CRT only" mode. Details on how to change display modes can be found in your notebook computer's operation manual.
- This projector can receive 640 × 350 VESA format VGA signals, however, "640 × 400" will appear on the screen.





Specifications

| | |
|---------------------------|---|
| Product type | LCD Projector |
| Model | PG-C20XU |
| Video system | PAL/PAL 60/PAL-M/PAL-N/SECAM/NTSC 3.58/NTSC 4.43/DTV 480P |
| Display method | LCD panel × 3, RGB optical shutter method |
| LCD panel | Panel size: 0.9" (13.9 [H] × 18.5 [W] mm) Display method: Translucent TN liquid crystal panel Drive method: TFT (Thin Film Transistor) Active Matrix panel No. of dots: 786,432 dots (1,024 [H] × 768 [V]) |
| Lens | 1–1.2× zoom lens, F2.3–2.6, f = 36.0–43.2 mm |
| Projection lamp | DC 150 W lamp |
| Contrast ratio | 500:1 |
| Video input signal | RCA Connector: VIDEO, composite video, 1.0 Vp-p, sync negative, 75 Ω terminated RCA Connector: AUDIO, 0.5 Vrms more than 22 kΩ (stereo) |
| S-video input signal | 4-pin Mini DIN connector Y (luminance signal): 1.0 Vp-p, sync negative, 75 Ω terminated C (chrominance signal): Burst 0.286 Vp-p, 75 Ω terminated |
| Horizontal resolution | 580 TV lines (video input) |
| Audio output | 1.0 W (monaural) |
| Computer RGB input signal | 15-PIN MINI D-SUB CONNECTOR (COMPUTER INPUT 1 port, COMPUTER OUTPUT port): RGB separate/composite sync/sync on green type analog input: 0–0.7 Vp-p, positive, 75 Ω terminated STEREO MINIJACK: AUDIO, 0.5 Vrms, more than 22 kΩ (stereo) HORIZONTAL SYNC. SIGNAL: TTL level (positive/negative) or composite sync (Apple only) VERTICAL SYNC. SIGNAL: Same as above |
| Pixel clock | 12–108 MHz |
| Vertical frequency | 43–85 Hz |
| Horizontal frequency | 15–80 kHz |
| Computer control signal | 9-pin Mini DIN female connector (RS-232C port) |
| Speaker system | 1 7/64" (2.8 cm) round |
| Rated voltage | AC 100–240 V |
| Input current | 2.6 A |
| Rated frequency | 50/60 Hz |
| Power consumption | 230 W (Selecting "OFF" in the "Power Save Mode".) 200 W (Selecting "ON" in the "Power Save Mode".) |
| Operating temperature | 41°F to 95°F (+5°C to +35°C) |
| Storage temperature | –4°F to 140°F (–20°C to +60°C) |
| Cabinet | Plastic |
| I/R carrier frequency | 38 kHz |
| Dimensions (approx.) | 10 15/64" (W) × 2 29/32" (H) × 8 5/32" (D) (260 × 74 × 207 mm) (main body only) 10 15/64" (W) × 3 15/64" (H) × 8 5/32" (D) (260 × 82 × 207 mm) (including adjustment feet and projecting parts) |
| Weight (approx.) | 5.73 lbs. (2.6 kg) |
| Supplied accessories | Remote control, Two AAA size batteries, Power cord (11' 10", 3.6 m), Computer RGB cable (9' 10", 3 m), Computer audio cable (9' 10", 3 m), PS/2 mouse control cable (3' 3", 1 m), USB mouse control cable (4' 11", 1.5 m), DIN-D-sub RS-232C cable (6 45/64", 15 cm), Remote mouse receiver, Extra air filter, Lens cap (attached), Lens cap strap, CD-ROM, LCD projector operation manual, LCD projector quick reference guide |
| Replacement parts | Lamp unit (Lamp/cage module) (BQC-PGC20X/1), Remote control (RRMCG1613CESA), AAA size batteries, Power cord (CACC05013DE01), Computer RGB cable (QCNWG0002CEZZ), Computer audio cable (QCNW-4870CEZZ), PS/2 mouse control cable (QCNW-5113CEZZ), USB mouse control cable (QCNW-5680CEZZ), DIN-D-sub RS-232C cable (QCNW-5288CEZZ), Remote mouse receiver (RUNTK0694CEZZ), Air filter (PFILD0123CEZZ), Lens cap (PCOVZ1095CEKA), Lens cap strap (UBNDT0013CEZZ), CD-ROM (UDSKA0029CEN1), LCD projector operation manual (TINS-7204CEZZ), LCD projector quick reference guide (TINS-7205CEZZ) |

This SHARP projector uses LCD (Liquid Crystal Display) panels. These very sophisticated panels contain 786,432 pixels (× RGB) TFTs (Thin Film Transistors). As with any high technology electronic equipment such as large screen TVs, video systems and video cameras, there are certain acceptable tolerances that the equipment must conform to.

This unit has some inactive TFTs within acceptable tolerances which may result in illuminated or inactive dots on the picture screen. This will not affect the picture quality or the life expectancy of the unit. If you have any questions about this matter, please call toll free 1-888-GO-SHARP (1-888-467-4277). [U.S.A. ONLY]


Specifications are subject to change without notice.







Dimensions


Rear View

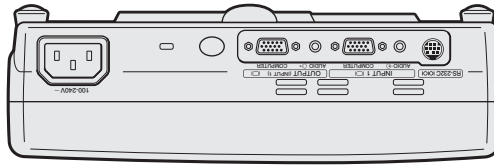

Top View

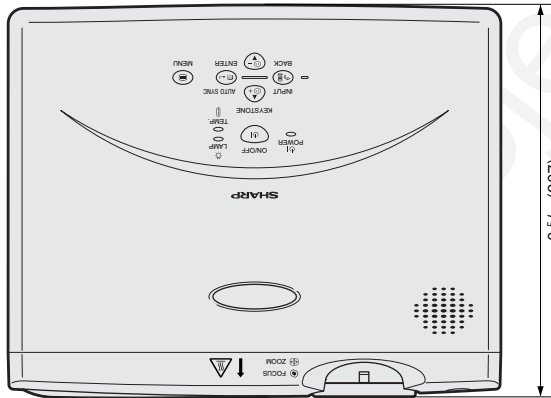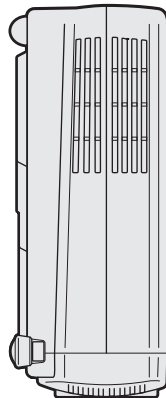


8 5/32 (207)

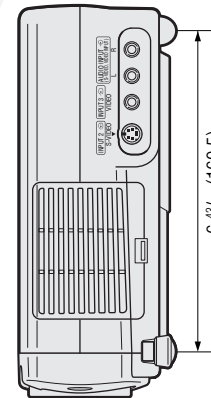


6 43/64 (169.5)

Side View

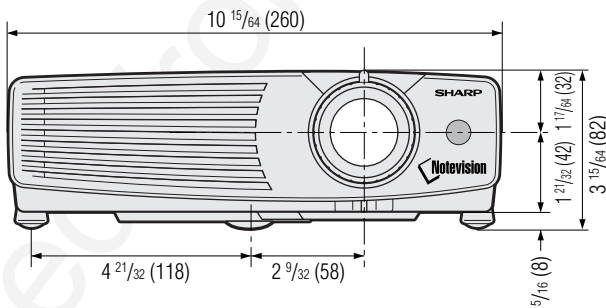

Front View

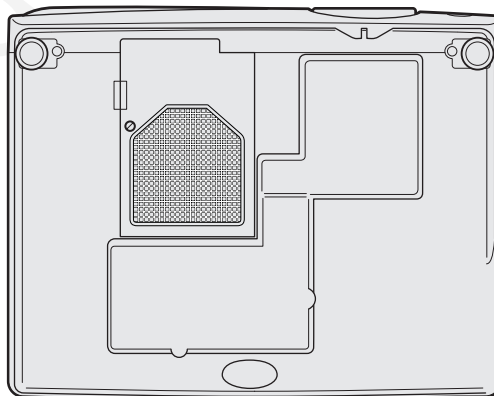

Bottom View



Glossary

Active digital keystone correction

Corrects keystone distortion caused when the projected image is not perpendicular to the screen. This method provides not only horizontal correction, but vertical as well, thus maintaining the original 4:3 aspect ratio and eliminating jag lines.

Aspect ratio

Width and height ratio of an image. The normal aspect ratio of a computer and video image is 4 : 3. There are also wide images with an aspect ratio of 16 : 9 and 21 : 9.

Auto sync

Optimizes projected computer images by automatically adjusting certain characteristics.

Background

Initial setting image projected when no signal is being input.

Clock

Clock adjustment is used to adjust vertical noise when clock level is incorrect.

Compatibility

Ability to use with various image signal modes.

Composite sync

Signal combining horizontal and vertical sync pulses.

Dot by dot

Mode that projects images in their native resolution.

Freeze

Function to freeze a moving image.

Gamma correction

Offers richer image viewing with dark scene phase and contrast correction according to image and room brightness. Three gamma settings are available.

GUI

Graphical User Interface. User interface with graphics that allow easier operation.

Intelligent compression and expansion

High quality resizing of lower and higher resolution images to fit the projector's native resolution.

Magnification

Digitally zooms in on a portion of an image.

Power save mode function

Function with toggle switch to control the quantity of projected light. Select "ON" or "OFF" to decrease or increase brightness, power consumption and fan noise.

PDF

Portable Document Format. Documentation format used to transfer text and images from the CD-ROM.

Phase

Phase shift is a timing shift between isomorphic signals with the same resolution. When phase level is incorrect, the projected image typically displays horizontal flicker.

RS-232C

Function to control the projector from the computer by using the RS-232C ports on the projector and computer.

Sync on green

Video signal mode of a computer which overlaps horizontal and vertical sync signal to green color signal pin.

Wireless mouse

Function to operate the mouse control of a computer with the supplied remote control.

XGA resolution

Resolution with 1,024 × 768 pixels that uses the signal of an IBM/AT compatible (DOS/V) computer.





Index

A

| | |
|--|----|
| Active digital keystone correction | 4 |
| AC socket | 12 |
| Adjustment buttons | 23 |
| Air filter | 37 |
| Aspect ratio | 33 |
| AUDIO INPUT terminals | 13 |
| AUDIO INPUT 1 terminal | 12 |
| AUDIO OUTPUT terminal for INPUT 1 | 14 |
| Automatic power shutoff function | 34 |
| Auto sync adjustment | 28 |
| AUTO SYNC button | 28 |
| AV MUTE button | 17 |

B

| | |
|-------------------|----|
| BACK button | 23 |
| Background | 35 |

C

| | |
|--|----|
| Ceiling-mount | 19 |
| Ceiling + Rear | 36 |
| Clock | 29 |
| Computer audio cable | 12 |
| COMPUTER INPUT 1 port | 12 |
| COMPUTER OUTPUT port for INPUT 1 | 8 |
| Computer RGB cable | 12 |
| Cooling fan (Exhaust vent) | 6 |
| Cooling fan (Intake vent) | 37 |

D

| | |
|-----------------------------------|----|
| Digital image magnification | 31 |
| DIN-D-sub RS-232C cable | 15 |
| Dot by dot | 33 |

E

| | |
|---------------------------------|----|
| ENLARGE button | 31 |
| ENTER button | 23 |
| Extra air filter | 37 |
| Eyelet for lens cap strap | 43 |

F

| | |
|---------------------|----|
| Flip cover | 9 |
| FOCUS ring | 17 |
| Foot releases | 19 |
| FREEZE button | 30 |

G

| | |
|--------------------------------------|----|
| GAMMA button | 32 |
| GUI (Graphical User Interface) | 23 |

I

| | |
|---|----|
| INPUT button | 17 |
| Intelligent compression and expansion | 4 |

K

| | |
|--|----|
| Kensington Security Standard connector | 42 |
| KEystone buttons | 20 |

L

| | |
|----------------------------------|----|
| LAMP REPLACEMENT indicator | 39 |
| Lamp timer | 34 |
| LEFT-CLICK button | 22 |
| Lens cap | 43 |

M

| | |
|---------------------|----|
| MENU button | 23 |
| MOUSE button | 22 |
| Mouse buttons | 22 |

O

| | |
|----------------------------------|----|
| ON/OFF button | 17 |
| On-screen display language | 26 |

P

| | |
|--------------------------------|----|
| PDF | 7 |
| Phase | 29 |
| Picture adjustments | 27 |
| Picture display mode | 33 |
| POWER button | 17 |
| Power cord | 12 |
| Power save mode | 35 |
| POWER indicator | 16 |
| PS/2 mouse control cable | 21 |

R

| | |
|-----------------------------|----|
| Rear projection | 19 |
| Remote control | 22 |
| Remote control sensor | 22 |
| Remote mouse receiver | 21 |
| RESIZE button | 33 |
| RIGHT-CLICK button | 22 |
| RS-232C port | 15 |

S

| | |
|--------------------------------|----|
| Signal info | 34 |
| Speaker | 8 |
| S-VIDEO INPUT 2 terminal | 13 |
| Sync on green | 44 |

T

| | |
|-------------------------------------|----|
| TEMPERATURE WARNING indicator | 39 |
|-------------------------------------|----|

U

| | |
|-------------------------------|----|
| USB mouse control cable | 21 |
|-------------------------------|----|

V

| | |
|------------------------------|----|
| VIDEO INPUT 3 terminal | 13 |
| VOLUME buttons | 17 |

W

| | |
|----------------------|----|
| Wireless mouse | 21 |
|----------------------|----|

X

| | |
|----------------------|---|
| XGA resolution | 4 |
|----------------------|---|

Z

| | |
|-----------------|----|
| ZOOM knob | 17 |
|-----------------|----|

SHARP CORPORATION

PLEASE READ

This manual is provided as a free service by Projector.com.

We are in no way responsible for the contents of the manual. We do not guarantee its accuracy and we do not make any claim of copyright. The copyright remains the property of their respective owners.

ABOUT PROJECTOR.COM

Projector.com (<http://www.projector.com>) is your review and buying guide resource for DLP and LCD video projectors.

Visit the site to read the latest projector news and reviews, read and comment on projector specifications, download user manuals and much more.