

D-Link *AirPlus* DI-614+

**Enhanced 2.4GHz Wireless
Broadband Router**

Manual

D-Link[®]

Building Networks for People

Contents

Package Contents 3

Introduction 4

Wireless Basics 6

Getting Started 9

Using the Configuration Menu 10

Troubleshooting 50

Networking Basics 55

Technical Specifications 68

Contacting Technical Support 70

Warranty 71

Registration 74

Package Contents



Contents of Package:

- **D-Link AirPlus DI-614+** Enhanced 2.4GHz Wireless Broadband Router
- Power Adapter – 5V DC, 2.5A
- Manual on CD
- Quick Installation Guide

Note: Using a power supply with a different voltage rating than the one included with the DI-614+ will cause damage and void the warranty for this product.

If any of the above items are missing, please contact your reseller.

System Requirements For Configuration:

- Computer with a Windows, Macintosh, or Linux based operating system with an installed Ethernet adapter
- Internet Explorer or Netscape Navigator, version 6.0 or above, with JavaScript enabled

Introduction

The D-Link *AirPlus* DI-614+ Wireless Broadband Router is an enhanced 802.11b high-performance, wireless router. It is an ideal way to extend the reach and number of computers connected to your wireless network.


Unlike most 802.11b routers, the DI-614+ is capable of data transfer speeds up to 22 Mbps (compared to the standard 11 Mbps) when used with other D-Link *AirPlus* products such as the DWL-520+ Wireless PCI Adapter.

After completing the steps outlined in the *Quick Installation Guide* (included in your package) you will have the ability to share information and resources, such as files and printers, and enjoy the freedom that wireless networking delivers.


The DI-614+ is compatible with most popular operating systems, including Macintosh, Linux and Windows, and can be integrated into a large network. This Manual is designed to help you connect the Router and the D-Link *AirPlus* 2.4GHz Wireless Adapters into a network in Infrastructure mode. *Please take a look at the **Getting Started** section in this manual to see an example of an Infrastructure network using the DI-614+.*

This manual provides a quick introduction to wireless technology and its application as it relates to networking. Please take a moment to read through this manual and get acquainted with wireless technology.

Connections

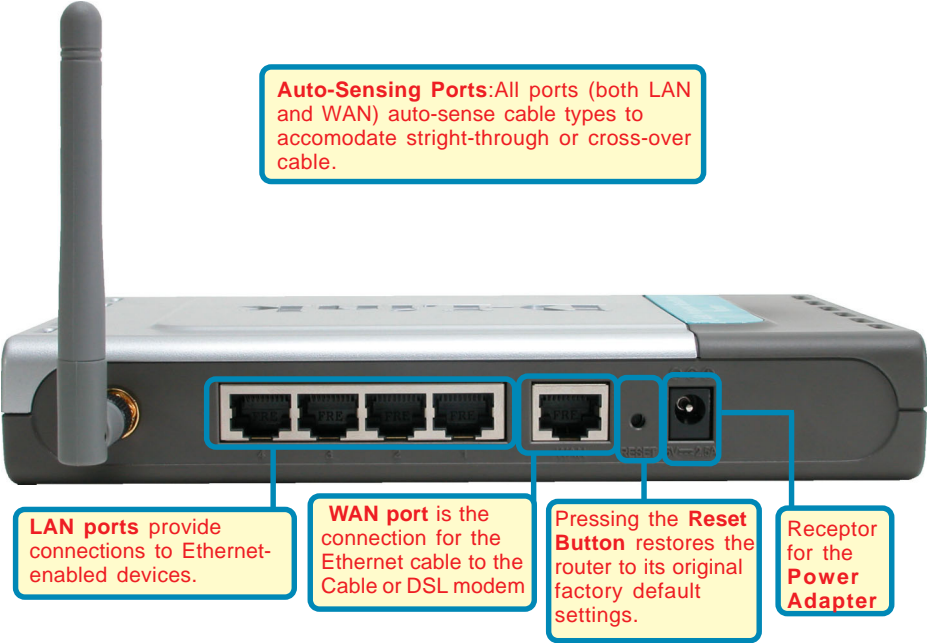

LEDs

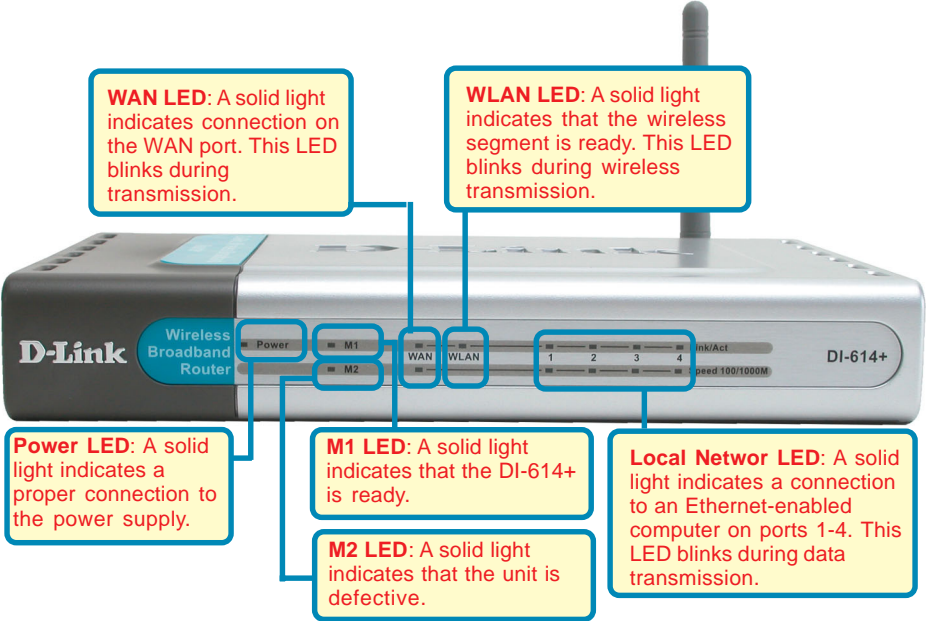

Wireless Basics

D-Link *AirPlus* wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link *AirPlus* wireless family of products will allow you to access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems, support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Access Point (AP) is a device used to provide this link.

People use wireless LAN technology for many different purposes:

Mobility - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

Low Implementation Costs – WLANs (Wireless Local Area Networks) are easy to set up, manage, change and relocate. Networks that frequently change, both physically and logically, can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation Speed and Simplicity - Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

Network Expansion - Wireless technology allows the network to go where wires cannot go.

Reduced Cost-of-Ownership - While the initial investment required for wireless LAN hardware might be higher than the cost of wired LAN hardware, overall installation expenses and life-cycle costs will be significantly lower. Long-term cost benefits are greatest in dynamic environments requiring frequent moves, adds, and changes.

Wireless Basics

small number of users to full infrastructure networks of thousands of users that allow roaming over a broad area.

D-Link AirPlus Wireless Family of LAN products include:

- Enhanced 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-650+)
- Enhanced 2.4GHz Wireless PCI cards used with desktop computers (DWL-520+)
- Enhanced 2.4GHz Wireless Router and Access Point (DI-614+, DWL-900AP+)

The DI-614+ is also compatible with the D-Link Air 802.11b family of products, which include:

- 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-650)
- 2.4GHz Wireless PCI cards used with desktop computers (DWL-520)
- Wireless Router/Access Point/Print Servers (DI-713P)
- Wireless Access Points (DWL-1000AP, DWL-900AP)

Standards - Based Technology

The IEEE standard-based technology assures that the D-Link AirPlus Products are interoperable with existing compatible 2.4GHz wireless technology. This means you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. The technology works by using multiple frequencies in the 2.4GHz range at speeds up to 22 Mbps. D-Link AirPlus products will automatically sense the best possible connection speed to ensure the greatest speed and range possible with the technology.

Installation Considerations

Designed to go up to 1,312 feet (400 meters) outdoors and up to 328 feet (100 meters) indoors, the D-Link AirPlus DI-614+ lets you access your network with your laptop computer from virtually anywhere. Keep in mind, however, that the number, thickness and location of walls, ceilings or other objects that the wireless signals must pass thru may limit range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing range is to follow these basic guidelines:

Wireless Basics

1. Keep the number of walls and ceilings between the wireless Access Point and your receiving device (e.g., the DWL-650+) to a minimum - Each wall or ceiling can reduce your D-Link *AirPlus* Wireless product's range from 3-90 feet (1-30 meters.) Position your Access Points, Residential Gateways, and computers so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between Access Points, Residential Gateways (routers) and computers. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Try to make sure that the Access Points and adapters are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. Building Materials make a difference - A solid metal door or aluminum studs may have a negative effect on range. Try to position Access Points, and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
4. Make sure that the device's antenna is positioned for best reception by using the software signal strength tools included with your product.
5. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that may generate extreme RF noise.

For the average home, signal range should not be an issue. If you experience low or no signal strength in areas of your home that you wish to access, consider positioning the Access Point in a location directly between the computers with wireless adapters. Additional Access Points can be connected to provide better coverage in rooms where the signal does not appear as strong as desired.

The **Infrastructure Network** example shown on the following page contains the following D-Link network devices:

A wireless Broadband Router - **D-Link *AirPlus* DI-614+**

A laptop computer with a Wireless Adapter - **D-Link *AirPlus* DWL-650+**

A desktop computer with a Wireless Adapter - **D-Link *AirPlus* DWL-520+**

A Cable Modem - **D-Link DCM-201**


Getting Started

With its default settings, the DI-614+, when activated, will connect with other D-Link *Air* or *AirPlus* products, right out of the box.

Please refer to the following sections of this manual for additional information about setting up a network:

Networking Basics - learn how to check and assign your IP Address; share printers and files.

Using the Configuration Menu - learn the settings for the DI-614+, using the web-based interface.

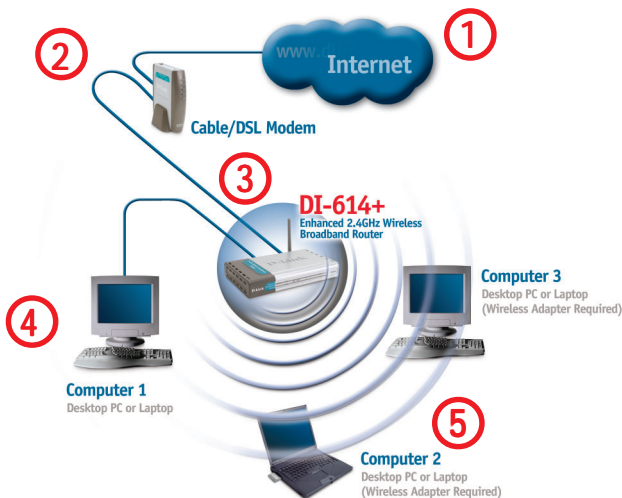


For a typical network setup at home (as shown above), please do the following:

- 1** You will need broadband Internet access (a Cable or DSL subscription line into your home or office).
- 2** Consult with your Cable or DSL provider for proper installation of the modem.
- 3** Connect the Cable or DSL modem to the DI-614+ wireless broadband router (see the *Quick Installation Guide* included with the DI-614+).
- 4** If you are connecting a desktop computer to your network, you can install the D-Link *DFE-530TX+* ethernet adapter into an available PCI slot. (See the *Quick Installation Guide* included with the *DWL-530TX+*.)
- 5** If you are connecting a laptop computer to your network, install the drivers for the Ethernet Cardbus adapter (e.g., D-Link *DWL-650+*) into a laptop computer. (See the *Quick Installation Guide* included with the *DWL-650+*.)

Using the Configuration Menu

Whenever you want to configure your network or the DI-614+, you can access the Configuration Menu by opening the web-browser and typing in the IP Address of the DI-614+. The DI-614+ default IP Address is shown below:


- Open the web browser
- Type in the **IP Address** of the DI-614+

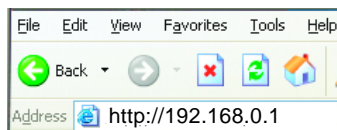

Note: if you have changed the default IP Address assigned to the DI-614+, make sure to enter the correct IP Address.

The factory default **User name** is **admin** and the default **Password** is blank (empty). It is recommended that you change the admin password for security purposes. Please refer to **Tools>Admin** to change the admin password.

Home > Wizard

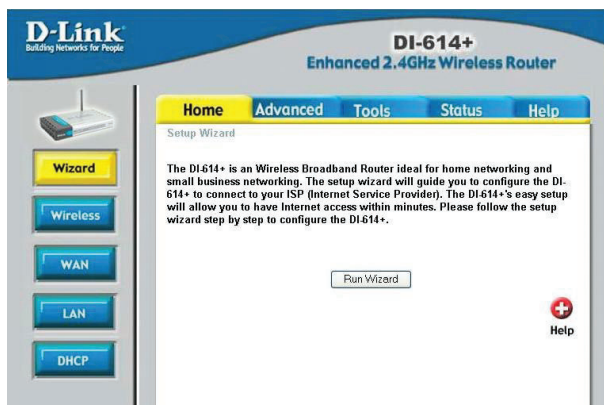

The **Home>Wizard** screen will appear. Please refer to the *Quick Installation Guide* for more information regarding the Setup Wizard.



Apply

Clicking **Apply** will save changes made to the page.



Cancel

Clicking **Cancel** will clear changes made to the page.



Help


Clicking **Help** will bring up helpful information regarding the page.




Clicking **Restart** will restart the router. (Necessary for some changes.)

Using the Configuration Menu

Home > Wireless





Wizard

Wireless

WAN

LAN

DHCP

DI-614+Enhanced 2.4GHz Wireless Router

HomeAdvancedToolsStatusHelp

Wireless Settings

These are the wireless settings for the AP(Access Point)Portion.

☒ Enabled☐ Disabled

SSIDdefault

Channel6☐ Auto Scan

WEP☒ Open System☐ Shared Key☐ WPA☐ WPA-PSK

WEP☒ Enabled☐ Disabled

WEP Encryption64Bit




Key TypeHEX

Key1☐ 0000000000

Key2☐ 0000000000

Key3☐ 0000000000

Key4☐ 0000000000



ApplyCancelHelp

Wireless Settings are settings for the (Access Point) Portion of the Wireless Router. It allows you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Enabled or Disabled By default, Wireless is Enabled. If you do not want to use the Wireless feature on the DI-614+, you can disable it by selecting Disabled.

SSID Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID’s factory default setting is “**default**”. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

Channel Indicates the channel setting for the DI-614+. By default the channel is set to **6**. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.

Auto Scan Click the check box to enable Auto Scan. Enabling this will allow the device to detect the best wireless channel to use.

Using the Configuration Menu

Home > Wireless (Continued)

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. On the left is a sidebar with navigation buttons: Wizard, Wireless (highlighted in yellow), WAN, LAN, and DHCP. The main content area is titled 'DI-614+ Enhanced 2.4GHz Wireless Router' and has tabs for Home, Advanced, Tools, Status, and Help. The 'Home' tab is selected, and the 'Wireless Settings' section is active. It contains the following fields and options:

- Wireless Settings**
These are the wireless settings for the AP(Access Point)Portion.
- ☒ **Enabled** ☐ **Disabled**
- SSID:
- Channel: ☐ **Auto Scan**
- WEP: ☒ **Open System** ☐ **Shared Key** ☐ **WPA** ☐ **WPA-PSK**
- WEP: ☐ **Enabled** ☒ **Disabled**
- WEP Encryption:
- Key Type:
- Key1: ☒
- Key2: ☐
- Key3: ☐
- Key4: ☐
- Buttons:

WEP

Wired Equivalent Protocol (WEP) is a wireless security protocol for Wireless Local Area Networks (WLAN). WEP provides security by encrypting the data that is sent over the WLAN. The DI-614+ supports 3 levels of WEP Encryption: 64Bit encryption, 128Bit encryption, and 256Bit encryption. WEP is disabled by default. The WEP setting can be changed to fit an existing wireless network or to customize your wireless network.

Shared Key

In this mode, in order to access the DI-614+ on the network, the device must be listed in the MAC Address Control List.

Open System

The DI-614+ will be visible to all devices on the network. This is the default setting.

Key Type

The Key Types that are supported by the DI-614+ are HEX (Hexadecimal) and ASCII (American Standard Code for Information Interchange.) The Key Type can be changed to fit an existing wireless network or to customize your wireless network.

KEYS

Keys 1-4 allow you to easily change wireless encryption settings to maintain a secure network. Simply select the specific key to be used for encrypting wireless data on the network.

Using the Configuration Menu

Home > Wireless > WPA

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The left sidebar contains navigation buttons: Wizard, Wireless (highlighted), WAN, LAN, and DHCP. The main content area is titled 'Wireless Settings' and includes a sub-header 'These are the wireless settings for the AP(Access Point)Portion.' Below this, there are radio buttons for 'Enabled' (selected) and 'Disabled'. The 'SSID' field is set to 'default'. The 'Channel' is set to '6' with an 'Auto Scan' checkbox. The 'WEP' section has radio buttons for 'Open System', 'Shared Key', 'WPA' (selected), and 'WPA-PSK'. Below this, there are fields for 'RADIUS Server 1' (IP: 0.0.0.0, Port: 1812, Shared Secret:) and 'RADIUS Server 2 (Optional)' (IP: 0.0.0.0, Port: 0, Shared Secret:). At the bottom right, there are three buttons: 'Apply' (green checkmark), 'Cancel' (orange X), and 'Help' (red plus).

Wi-Fi Protected Access authorizes and authenticates users onto the wireless network. WPA uses stronger security than WEP and is based on a key that changes automatically at a regular interval. This mode requires a RADIUS server in the network.

Radius Server 1 **IP** - Enter the IP Address of the RADIUS server.

Port - Enter the port number that your RADIUS server uses for Authentication. The default setting of 1812 is the port setting for many RADIUS servers.

Shared Secret - Enter the Shared Secret. The Shared Secret must be the same as the Shared Secret on your RADIUS server.

Radius Server 2 Optional. If you have a second RADIUS server, you will input the same information as shown above.

Using the Configuration Menu

Home > Wireless > WPA-PSK

The screenshot shows the configuration interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The left sidebar contains navigation buttons: Wizard, Wireless (highlighted in yellow), WAN, LAN, and DHCP. The main content area is titled 'Wireless Settings' and includes a sub-header 'These are the wireless settings for the AP(Access Point)Portion.' Below this, there are radio buttons for 'Enabled' (selected) and 'Disabled'. A text field for 'SSID' contains the word 'default'. A 'Channel' dropdown menu is set to '6', and an 'Auto Scan' checkbox is present. Under the 'WEP' section, there are radio buttons for 'Open System', 'Shared Key', 'WPA', and 'WPA-PSK' (selected). Below these are two text input fields labeled 'Passphrase' and 'Confirmed Passphrase'. At the bottom right of the settings area are three buttons: 'Apply' (with a green checkmark icon), 'Cancel' (with an orange X icon), and 'Help' (with a red plus icon).

Wi-Fi Protected Access - Pre-Shared Key mode means that the wireless client and the router must have the same passphrase in order to establish the wireless connection. A RADIUS server is **not** required with PSK.

Passphrase Enter a passphrase for the router. The RADIUS server should use the same passphrase (secret key) as the router.

Confirmed Passphrase Enter the Passphrase again to confirm.

Using the Configuration Menu

Home > WAN

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home Advanced Tools Status Help

WAN Settings
Please select the appropriate option to connect to your ISP.

☒ Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)

☐ Static IP Address Choose this option to set static IP information provided to you by your ISP.

☐ PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)

☐ Others PPTP, L2TP and BigPond Cable

☐ PPTP (for Europe use only)

☐ L2TP (for specific ISPs use only)

☐ BigPond Cable (for Australia use only)

Dynamic IP

Host Name (optional)

MAC Address - - - - - (optional)

Primary DNS Address

Secondary DNS Address (optional)

MTU

Choose WAN Type

WAN stands for **Wide Area Network**. In this case WAN represents the mode in which you connect to the Internet. If you are uncertain, please ask your ISP which of the following represents your connection mode to the Internet:

Dynamic IP Address Obtain an IP address from your ISP automatically (mainly for Cable users).

Static IP Address Your ISP assigns you a Static IP Address.

PPP over Ethernet Some ISPs require the use of PPPoE to connect to their services (mainly for DSL users).

Others

PPTP For use in Europe only.

L2TP For specific ISP's use only.

Big Pond Cable For use in Australia only.

Using the Configuration Menu

Home > WAN > Dynamic IP Address

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The left sidebar contains navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area is titled 'WAN Settings' and includes a sub-header 'Please select the appropriate option to connect to your ISP.' There are four radio button options: 'Dynamic IP Address' (selected), 'Static IP Address', 'PPPoE', and 'Others'. The 'Dynamic IP Address' option has a description: 'Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)'. The 'Static IP Address' option has a description: 'Choose this option to set static IP information provided to you by your ISP.' The 'PPPoE' option has a description: 'Choose this option if your ISP uses PPPoE. (For most DSL users)'. The 'Others' option has a description: 'PPTP, L2TP and BigPond Cable (for Europe use only)'. Below these are three sub-options: 'PPTP' (for specific ISPs use only), 'L2TP' (for specific ISPs use only), and 'BigPond Cable' (for Australia use only). The 'Dynamic IP' section includes fields for 'Host Name' (DI-614+), 'MAC Address' (00 - 10D - 1 - 88 - 85 - E1 - 72), 'Primary DNS Address' (0.0.0.0), 'Secondary DNS Address' (0.0.0.0), and 'MTU' (1500). At the bottom right are 'Apply', 'Cancel', and 'Help' buttons.

Most Cable modem users will select this option to obtain an IP Address automatically from their ISP (Internet Service Provider).

Host Name This is optional, but may be required by some ISPs. The host name is the device name of the Router.

MAC Address The default MAC Address is set to the WAN's physical interface MAC address on the Router.

Clone MAC Address This feature will copy the MAC address of the Ethernet card, and replace the WAN MAC address of the Router with this Ethernet card MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

Primary DNS Address Input the primary DNS address provided by your ISP

Secondary DNS Address (Optional) Input the Secondary DNS address provided by your ISP.

MTU *Maximum Transmission Unit*; default is 1500; you may need to change the MTU to conform to your ISP.

Using the Configuration Menu

Home > WAN > Static IP Address

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The left sidebar contains navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area is titled 'WAN Settings' and 'Please select the appropriate option to connect to your ISP.' It features several radio button options: Dynamic IP Address, Static IP Address (selected), PPPoE, and Others. Under 'Others', there are checkboxes for PPP, L2TP, and BigPond Cable. The 'Static IP' section contains input fields for IP Address, Subnet Mask, ISP Gateway Address, MAC Address (with a 'Clone MAC Address' button), Primary DNS Address, Secondary DNS Address, and MTU.

Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four IP octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

IP Address

Input the IP Address provided by your ISP.

Subnet Mask

Input the Subnet Mask provided by your ISP.

ISP Gateway

Input the Gateway address provided by your ISP.

MAC Address

The default MAC Address is set to the WAN's physical interface MAC address on the Router.

Clone MAC Address

This feature will copy the MAC address of the Ethernet card, and replace the WAN MAC address of the Router with this Ethernet card MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

Primary DNS Address

Input the primary DNS address provided by your ISP.

Secondary DNS Address

(Optional) Input the Secondary DNS address provided by your ISP.

MTU

Maximum Transmission Unit; default is 1500; you may need to change the MTU to conform to your ISP.

Using the Configuration Menu

Home > WAN > PPPoE

The screenshot shows the D-Link configuration interface for a DI-614+ router. The left sidebar contains navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area is titled 'WAN Settings' and 'Please select the appropriate option to connect to your ISP.' It lists several connection options: Dynamic IP Address, Static IP Address, PPPoE (selected with a green dot), and Others (PPTP, L2TP, BigPond Cable). Below these, the 'PPPoE' section is expanded, showing fields for User Name, Password, Retype Password, Service Name (optional), IP Address (0.0.0.0), MAC Address (00-0D-88-85-E1-72, optional), Primary DNS Address (0.0.0.0), Secondary DNS Address (0.0.0.0, optional), Maximum Idle Time (0 minutes), MTU (1492), and Auto-reconnect (Enabled).

Most DSL users will select this option to obtain an IP address automatically from their ISP through the use of PPPoE.

User Name Your PPPoE username provided by your ISP.

Password Your PPPoE password is provided by your ISP.

Service Name (Optional) Check with your ISP for more information if they require the use of service name.

IP Address (Optional) Enter in the IP Address if you are assigned a static PPPoE address.

MAC Address The default MAC Address is set to the WAN's physical interface MAC address on the Router.

Clone MAC Address This feature will copy the MAC address of the Ethernet card, and replace the WAN MAC address of the Router with this Ethernet card MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

Using the Configuration Menu

Home > WAN > PPPoE (Continued)

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. On the left is a sidebar with navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the 'Home' tab, the 'WAN Settings' section is active, displaying the title 'Please select the appropriate option to connect to your ISP.' Below this are radio button options: Dynamic IP Address, Static IP Address, PPPoE (selected), and Others. The 'Others' section includes PPTP, L2TP, and BigPond Cable options. The PPPoE section is expanded, showing fields for User Name, Password, Retype Password, Service Name (optional), IP Address (0.0.0.0), MAC Address (00-0D-88-85-E1-72 optional) with a 'Clone MAC Address' button, Primary DNS Address (0.0.0.0), Secondary DNS Address (0.0.0.0 optional), Maximum Idle Time (0 Minutes), MTU (1492), and an Auto-reconnect checkbox (checked).

- Primary DNS Address

You will get the DNS IP automatically from your ISP but you may enter a specific DNS address that you want to use instead.
- Secondary DNS Address

(Optional) Input the secondary DNS address.
- Maximum Idle Time

Enter a maximum idle time during which Internet connection is maintained during inactivity. To disable this feature, enable *Auto-reconnect*.
- MTU

Maximum Transmission Unit; default is 1492; you may need to change the MTU to conform to your ISP.
- Auto-reconnect

If enabled, the Broadband Router will automatically connect to your ISP after your system is restarted or if the connection is dropped.

Using the Configuration Menu

Home > WAN > PPTP

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. On the left is a sidebar with navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the 'Home' tab, the 'WAN Settings' section is active, displaying a message: 'Please select the appropriate option to connect to your ISP.' Below this are five radio button options: Dynamic IP Address, Static IP Address, PPPoE, Others (selected), and BigPond Cable. The 'Others' option is expanded, showing three sub-options: PPTP (selected with a green dot), L2TP, and BigPond Cable. Below the 'PPTP Client' section, there are input fields for IP Address (0.0.0.0), Subnet Mask (0.0.0.0), and Server IP (0.0.0.0). There are also fields for PPTP Account, PPTP Password, and PPTP Retype password, all masked with dots. A 'Maximum Idle Time' field is set to 0 minutes. The 'MTU' field is set to 1400. At the bottom, the 'Auto-reconnect' option is selected with a green dot, with 'Enabled' and 'Disabled' radio buttons.

Point-to-Point Tunneling Protocol (PPTP) is a WAN connection used in Europe.

IP Address Enter the IP Address.

Subnet Mask Enter the Subnet Mask.

Server IP Enter the Server IP Address.

PPTP Account Enter the PPTP account name.

PPTP Password Enter the PPTP password.


Maximum Idle Time Enter a maximum idle time during which Internet connection is maintained during inactivity. To disable this feature, enable *Auto-reconnect*.

MTU *Maximum Transmission Unit*; default is 1400; you may need to change the MTU to conform to your ISP.

Auto-reconnect If enabled, the Broadband Router will automatically connect to your ISP after your system is restarted or if the connection is dropped.

Using the Configuration Menu

Home > WAN > L2TP

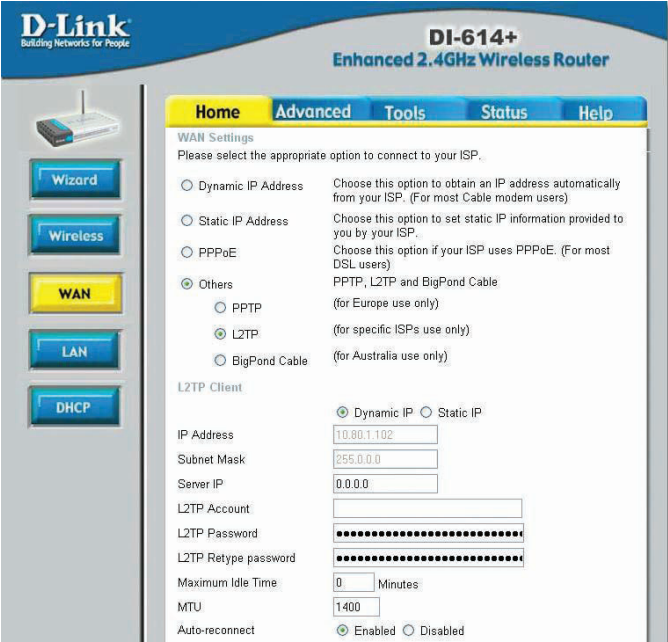

Layer 2 Tunneling Protocol (L2TP) is a WAN connection.

IP Address Enter the IP Address.

Subnet Mask Enter the Subnet Mask.

Server IP Enter the Server IP Address.

L2TP Account Enter the PPTP account name.

L2TP Password Enter the PPTP password.

Maximum Idle Time Enter a maximum idle time during which Internet connection is maintained during inactivity. To disable this feature, enable *Auto-reconnect*.

MTU *Maximum Transmission Unit*; default is 1400; you may need to change the MTU to conform to your ISP.

Auto-reconnect If enabled, the Broadband Router will automatically connect to your ISP after your system is restarted or if the connection is dropped.

Using the Configuration Menu

Home > WAN > BigPond Cable

The screenshot shows the D-Link configuration interface for a DI-614+ Enhanced 2.4GHz Wireless Router. On the left is a sidebar with navigation buttons: Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the 'Home' tab, the 'WAN Settings' section is active, displaying instructions to select a connection option. Four radio buttons are present: Dynamic IP Address, Static IP Address, PPPoE, and Others (selected). The 'Others' section includes three sub-options: PPTP (for Europe use only), L2TP (for specific ISPs use only), and BigPond Cable (for Australia use only). Below this, the 'BigPond' section contains input fields for User Name, Password, Retype Password, and Auth Server (a dropdown menu currently showing 'sm-server'). There are also fields for Login Server IP (with a '0.0.0.0' placeholder and '(optional)' label) and MAC Address (with a segmented input for 00-0D-88-85-E1-72 and an '(optional)' label). A 'Clone MAC Address' button is located below the MAC Address field. At the bottom right, there are three icons: a green checkmark, a yellow 'X', and a red plus sign, with the labels 'Apply', 'Cancel', and 'Help' respectively.

Dynamic IP Address for BigPond is a WAN connection used in Australia.

User Name Enter in the username for the BigPond account.

Password Enter the password for the BigPond account.

Auth Server Select the auth server for the BigPond account.


Login Server IP (Optional) Enter the Login Server name if required.

MAC Address The default MAC Address is set to the WAN's physical interface MAC address on the Router.

Clone MAC Address This feature will copy the MAC address of the Ethernet card, and replace the WAN MAC address of the Router with this Ethernet card MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

Using the Configuration Menu

Home > LAN

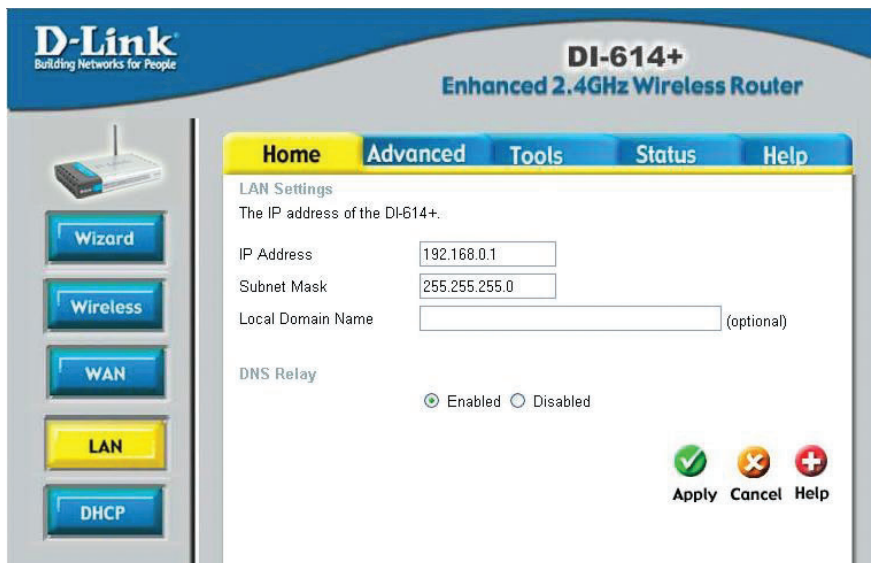

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The top navigation bar includes tabs for Home, Advanced, Tools, Status, and Help. The left sidebar contains buttons for Wizard, Wireless, WAN, LAN (highlighted in yellow), and DHCP. The main content area is titled 'LAN Settings' and contains the following fields and options:

- The IP address of the DI-614+:**
 - IP Address: 192.168.0.1
 - Subnet Mask: 255.255.255.0
 - Local Domain Name: (optional)
- DNS Relay:**
 - ☒ Enabled ☐ Disabled

At the bottom right, there are three buttons: Apply (with a green checkmark icon), Cancel (with a red X icon), and Help (with a red plus icon).

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DI-614+. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

IP Address

The IP address of the LAN interface.
The default IP address is: **192.168.0.1**.

Subnet Mask

The subnet mask of the LAN interface.
The default subnet mask is **255.255.255.0**.

Local Domain Name (Optional) The name of your local domain.


DNS Relay


You may choose to enable or disable DNS Relay. If disabled, the DNS address received on the WAN port will pass through to the LAN clients.

Using the Configuration Menu

Home > DHCP

DHCP stands for Dynamic Host Control Protocol. The DI-614+ has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to “Obtain an IP Address Automatically.” When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DI-614+. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.


Building Networks for People


Wizard
Wireless
WAN
LAN
DHCP

DI-614+
Enhanced 2.4GHz Wireless Router

HomeAdvancedToolsStatusHelp

DHCP Server

The DI-614+ can be setup as a DHCP Server to distribute IP addresses to the LAN network.

DHCP Server☒ Enabled☐ Disabled

Starting IP Address192.168.0.100

Ending IP Address192.168.0.199

Lease Time1 Week

Static DHCP

Static DHCP is used to allow DHCP server to assign same IP address to specific MAC address.




☐ Enabled☒ Disabled

Name

IP192.168.0.

MAC Address

DHCP Clientpm,00-02-96-03-A9-F1Clone



ApplyCancelHelp

Static DHCP Client List

Host Name	IP Address	MAC Address	
Dynamic DHCP Client List			
Host Name	IP Address	MAC Address	Expired Time
pm	192.168.0.100	00-02-96-03-A9-F1	Apr/08/2002 00:07:45

DHCP Server

Enable or disable the DHCP service.

Starting IP Address

The starting IP address for the DHCP server's IP assignment.

Ending IP Address

The ending IP address for the DHCP server's IP assignment.

Lease Time

The length of time for the DHCP lease.

Static DHCP

Used to allow the DHCP server to assign the same IP address to a specific MAC address. Enter the name, IP address, and MAC address into the fields. Select which DHCP client to clone.

Name

The name to be used to reference the specific static DHCP client.

MAC Address

The MAC address of the static DHCP client.

DHCP Client

Drop down list of all currently connected DHCP clients.

DHCP Clients List


Lists the DHCP clients connected to the DI-614+. Click **Refresh** to update the list. The table will show the Host Name, IP Address, and MAC Address of the DHCP client computer.

24

Using the Configuration Menu

Advanced > Virtual Server


Building Networks for People



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

Performance

DI-614+

Enhanced 2.4GHz Wireless Router

Home

Advanced

Tools

Status

Help

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

☐ Enabled ☐ Disabled

Name

Private IP

Protocol Type

Private Port

Public Port

Schedule ☐ Always



☐ From time : AM to : AM

day to



Apply Cancel Help

Virtual Servers List

Name	Private IP	Protocol	Schedule	
<input type="checkbox"/> Virtual Server FTP	0.0.0.0	TCP 21/21	always	
<input type="checkbox"/> Virtual Server HTTP	0.0.0.0	TCP 80/80	always	
<input type="checkbox"/> Virtual Server HTTPS	0.0.0.0	TCP 443/443	always	
<input type="checkbox"/> Virtual Server DNS	0.0.0.0	UDP 53/53	always	
<input type="checkbox"/> Virtual Server SMTP	0.0.0.0	TCP 25/25	always	
<input type="checkbox"/> Virtual Server POP3	0.0.0.0	TCP 110/110	always	
<input type="checkbox"/> Virtual Server Telnet	0.0.0.0	TCP 23/23	always	
<input type="checkbox"/> IPSec	0.0.0.0	UDP 500/500	always	
<input type="checkbox"/> PPTP	0.0.0.0	TCP 1723/1723	always	
<input type="checkbox"/> NetMeeting	0.0.0.0	TCP 1720/1720	always	
<input type="checkbox"/> DCS-1000	0.0.0.0	TCP 80/80	always	
<input type="checkbox"/> DCS-2000	0.0.0.0	TCP 80/80	always	
<input checked="" type="checkbox"/> i2eye	192.168.0.112	TCP 1720/1720	always	

The DI-614+ can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DI-614+ firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DI-614+ are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling *Virtual Server*. Depending on the requested service, the DI-614+ redirects the external service request to the appropriate server within the LAN network.

- Enable

Select to activate the policy.
- Name

You can name the Virtual Server.
- Private IP

The IP address of the internal computer that will be using the virtual service.
- Protocol Type

Select the protocol the Virtual Server will use.
- Private/ Public Ports

Enter in the private and public port or ports to be used. A range of ports can be specified with a hyphen. (e.g., 20-21)
- Schedule

Select **Always**, or choose **From** and enter the time period during which the virtual service will be available.

Using the Configuration Menu

Advanced > Applications



Some applications require multiple connections, such as Internet gaming, video conferencing, and Internet telephony. These applications have difficulties working through NAT (Network Address Translation). **Special Applications** makes some of these applications work with the DI-614+. If you need to run applications that require multiple connections, specify the port normally associated with an application in the **Trigger** field, then enter the public ports associated with the trigger port into the **Incoming Ports** field.

At the bottom of the screen, there are already defined special applications. To use them, select one from the drop down list and select an ID number you want to use. Then click the “Copy to” button and the router will fill in the appropriate information to the list. You will then need to enable the service. If the mechanism of Special Applications fails to make an application work, try using DMZ host instead.

Note! Only one PC can use each Special Application tunnel.

- Enabled or Disabled

Select to activate or deactivate the policy.
- Name

You can name the defined special applications.
- Trigger Port

This is the port used to trigger the application. It can be either a single port or a range of ports.
- Trigger Type

Select the trigger protocol you would like to initiate. To chage the selection, use the drop down arrow and other choices will be listed.
- Public Ports

This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.
- Public Type

Select the public type the special application will use.

Using the Configuration Menu

Advanced > Filters > IP Filter

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The 'Advanced' tab is selected, and the 'Filters' menu item is highlighted. The 'IP Filters' section is active, showing options to enable or disable filters, a 'Clear' button, and fields for IP range, port range, protocol type, and schedule. Below these fields is a table titled 'IP Filter List' with columns for IP Range, Protocol, and Schedule. The table contains two entries: one for TCP 20-21 and another for TCP 80, both with a schedule of 'always'. At the bottom right of the table are buttons for 'Apply', 'Cancel', and 'Help'.

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home **Advanced** Tools Status Help

Filters

Filters are used to allow or deny LAN users from accessing the Internet.

☒ IP Filters ☐ MAC Filters

IP Filters

Use IP Filters to deny LAN IP addresses access to the Internet.

☐ Enabled ☐ Disabled

IP -

Port -

Protocol Type

Schedule ☐ Always

☐ From time : : AM to : : AM

day Sun to Sun

☒ ☐ ☐

IP Filter List:

IP Range	Protocol	Schedule	
<input type="checkbox"/> *	TCP 20-21	always	<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Help"/>
<input type="checkbox"/> *	TCP 80	always	<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Help"/>

Use IP (Internet Protocol) filters to allow or deny computers access to the Internet based on their IP address.

Enabled or Disabled

Click **Enabled** to apply the filter policy or click **Disabled** to enter an inactive filter policy. (You can reactivate the policy later.)

IP Address

Enter the IP address range of the computers that you want the policy to apply to. If it is only a single computer that you want the policy applied to, then enter the IP address of the computer in the Start Source IP and leave the End Source IP blank.

Port Range

Enter in the port range of the TCP/UDP ports that you want the policy to apply to. If it is only a single port that you want the policy applied to, then enter the port number in the Start Port field and leave the End Port field blank. If you want to use all the ports, you can leave the port range empty.

Protocol Type

Select the protocol type to allow or deny certain types of IP addresses.

Schedule

Select **Always**, or choose **From** and enter the time period during which the IP filter policy will be in effect.

Using the Configuration Menu

Advanced > Filters > MAC Filters

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The left sidebar contains navigation buttons: Virtual Server, Applications, Filters (highlighted), Parental Control, Firewall, DMZ, and Performance. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the Advanced tab, the 'Filters' section is active. It explains that filters are used to allow or deny LAN users from accessing the Internet. There are two radio buttons: 'IP Filters' and 'MAC Filters' (selected). Below this, the 'MAC Filters' section explains that MAC addresses are used to allow or deny computer access to the network. There are three radio buttons: 'Disabled MAC Filters' (selected), 'Only allow computers with MAC address listed below to access the network', and 'Only deny computers with MAC address listed below to access the network'. A 'Name' field with a 'Clear' button is present. Below it is a 'MAC Address' field with six input boxes separated by hyphens. A 'DHCP Client' dropdown menu shows 'pm,00-02-96-03-A9-F1' with a 'Clone' button. At the bottom, there is a 'MAC Filter List' table with columns 'Name' and 'MAC Address'. To the right of the table are three buttons: a green checkmark (Apply), an orange X (Cancel), and a red plus sign (Help).

MAC (Media Access Control) Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet and network by their MAC address.

At the bottom of the screen, there is a list of MAC addresses from the DHCP client computers connected to the DI-614+. To use them, select one from the drop down list and select an IP number you want to use. Then click the “Copy to” button and the DI-614+ will fill in the appropriate information in the list.

Disabled MAC Filter Select this option if you do not want to use MAC filters.

Only allow computers with MAC address listed below to access the network
Select this option to only allow computers that are in the list to access the network and Internet. All other computers will be denied access to the network and Internet.

Only deny computers with MAC address listed below to access the network
Select this option to only deny computers that are in the list to access the network and Internet. All other computers will be allowed access to the network and Internet.


Name Enter a name to create a profile for the associated computer(s) on the network.

MAC Address Enter the **MAC Address** of the client that will be filtered.

DHCP Client Select from the DHCP Client list and click the Clone button to automatically clone that computer's MAC address to the MAC address field.

Using the Configuration Menu

Advanced > Parental Control > URL Blocking

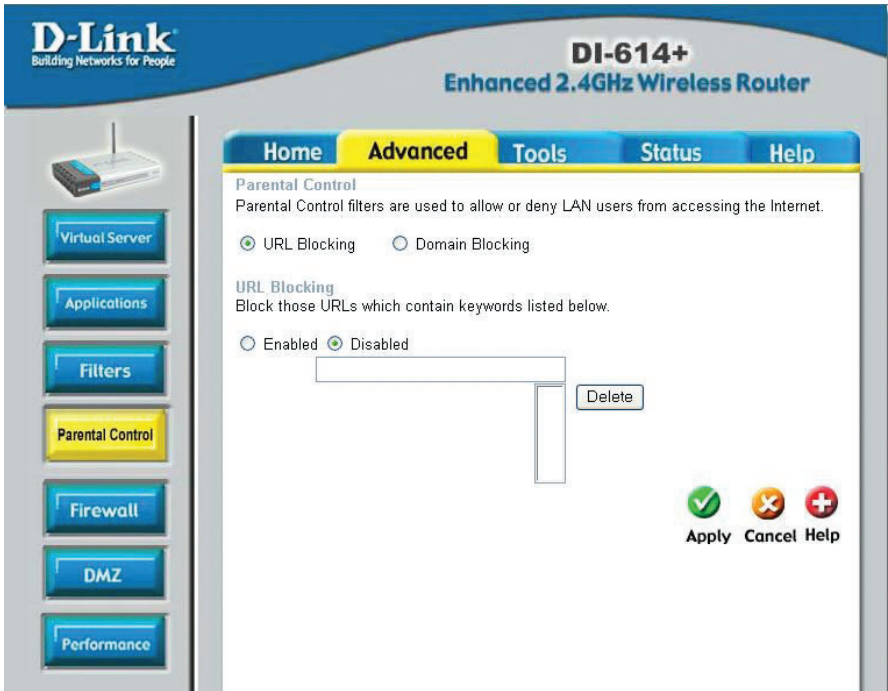


Use URL Blocking to deny LAN computers from accessing specific web sites by its URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display.

Disabled URL Blocking

Select this option if you do not want to use URL Blocking.

Using the Configuration Menu

Advanced > Parental Control > Domain Blocking

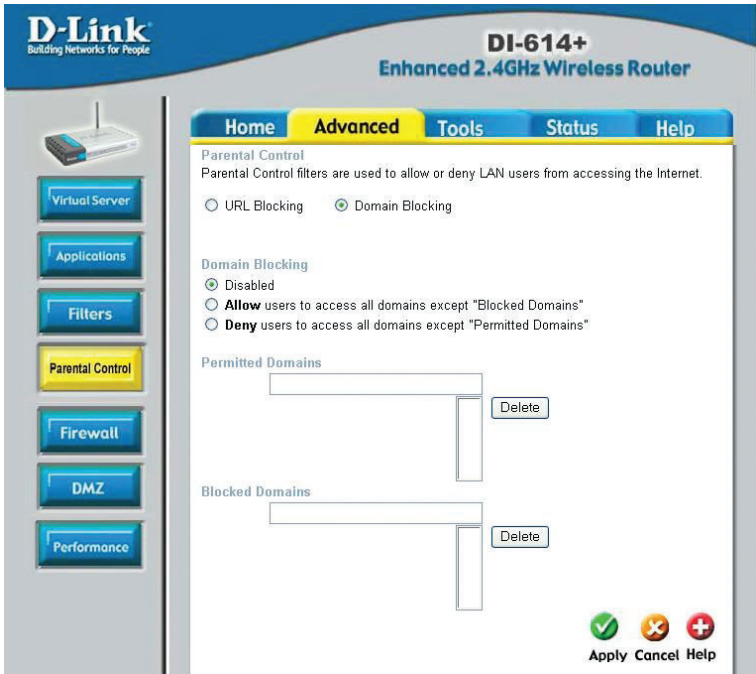

Use Domain filters to allow or deny computers access to specific Internet domains whether it is through www, ftp, SNMP, etc. Domain filters apply to both wired computers connected to one of the four Ethernet LAN ports and to wireless clients connected wirelessly to the DI-614+.

Disabled Domain Filter Select this option if you do not want to use Domain filters.

Allow users to access the following domains and block all other domains

Select this option to allow users to access the specified Internet domains listed below. Users will be denied access to all other Internet domains.

Deny users to access the following domains and permit all other domains

Select this option to deny users access to the specified Internet domains listed below. Users will be allowed access to all other Internet domains.

Permitted/Blocked Domains

This is a list of domain suffixes of the Internet domain you want to permit or block. (Example: shopping.com, sports.net.)

Using the Configuration Menu

Advanced > Firewall


Building Networks for People



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

Performance

DI-614+
Enhanced 2.4GHz Wireless Router

HomeAdvancedToolsStatusHelp

Firewall Rules

Firewall Rules can be used to allow or deny traffic from passing through the DI-614+.

☐ Enabled ☐ Disabled

Name

Action ☐ Allow ☐ Deny

Interface

IP Range Start

IP Range End

Protocol

Port Range

Source *

Destination * TCP -

Schedule ☐ Always

☐ From time

: AM

to

: AM

day

Sun

to

Sun

☒ ☒ ☒

Firewall Rules List

ActionName	SourceDestination	Protocol
<input checked="" type="checkbox"/> Allow Allow to Ping WAN port	WAN,*LAN,192.168.0.1	ICMP,8
<input checked="" type="checkbox"/> Allow msmgs (192.168.0.100:15427) 36	WAN,*LAN,192.168.0.100:15427-36860	TCP,15427-36860
<input checked="" type="checkbox"/> Allow msmgs (192.168.0.100:8222) 539	WAN,*LAN,192.168.0.100:8222-53984	UDP,8222-53984
<input checked="" type="checkbox"/> Deny Default	*,* LAN,*	IP (0),*
<input checked="" type="checkbox"/> Allow Default	LAN,* *,*	IP (0),*

Firewall Rules is an advance feature used to deny or allow traffic from passing through the device. It works in the same way as IP Filters with additional settings. You can create more detailed rules for the device.

Enabled or Disabled

Click **Enabled** to apply the filter policy or click **Disabled** to enter an inactive filter policy (You can reactivate the policy later).

Name

Enter the name of the Firewall Rule.

Action

Select Allow or Deny to allow or deny traffic to pass through the DI-614+.

Interface Source

Choose between a LAN or WAN source. An asterisk signifies the selection of both sources.

Interface Destination

Choose between a LAN or WAN destination. An asterisk signifies the selection of both destinations.

IP Start

The starting IP address for the filter policy. Leaving the field blank selects all IPs.

IP End

The ending IP address for the filter policy. Leaving the field blank sleects all IPs.

Using the Configuration Menu

Advanced > Firewall (Continued)

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

Performance

HomeAdvancedToolsStatusHelp

Firewall Rules

Firewall Rules can be used to allow or deny traffic from passing through the DI-614+.

Enabled

Disabled

Name

Clear

Action

Allow

Deny

Interface

IP Range Start

IP Range End

Protocol

Port Range

Source

*

Destination

*

Schedule

Always

From time

00

:

00

AM

to

00

:

00

AM

day

Sun

to

Sun

Apply

Cancel

Help

Firewall Rules List

ActionName	SourceDestination	Protocol
<input checked="" type="checkbox"/> Allow Allow to Ping WAN port	WAN,*LAN,192.168.0.1	ICMP,8
<input checked="" type="checkbox"/> Allow mmsgs (192.168.0.100:15427) 36	WAN,*LAN,192.168.0.100	TCP,15427-36860
<input checked="" type="checkbox"/> Allow mmsgs (192.168.0.100:8222) 539	WAN,*LAN,192.168.0.100	UDP,8222-53984
<input checked="" type="checkbox"/> Deny Default	*,* LAN,*	IP (0),*
<input checked="" type="checkbox"/> Allow Default	LAN,* *,*	IP (0),*

Protocol
Select one of the following protocols: TCP, UDP, or ICMP.


Port Range
Enter in the port range of the TCP/UDP ports that you want the policy to apply to. If it is only a single port that you want the policy applied to, then enter the port number in the Start Port field and leave the End Port field blank. If you want to use all the ports, you can leave the port range empty.

Schedule
Select **Always**, or choose **From** and enter the time period during which the virtual service will be available

32

Using the Configuration Menu

Advanced > DMZ

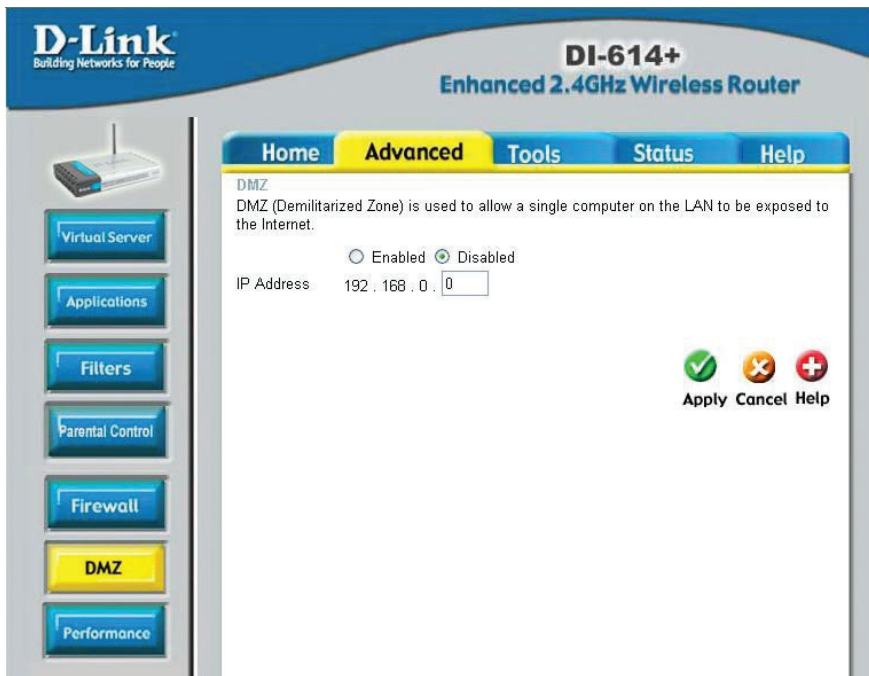

If you have a computer that cannot run Internet applications properly from behind the DI-614+, then you can allow that computer to have unrestricted Internet access. Enter the IP address of that computer as a DMZ (Demilitarized Zone) host with unrestricted Internet access. Adding a client to the DMZ may expose that computer to a variety of security risks, so only use this option as a last resort.

Using the Configuration Menu

Advanced > Performance

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home **Advanced** Tools Status Help

Wireless Performance
These are the Wireless Performance features for the AP (Access Point) Portion.

Beacon interval : 100 (msec, range:1~1000, default:100)

DTIM interval : 3 (range: 1~255, default:3)

Basic Rates : ☐ 1-2(Mbps) ☒ 1-2-5.5-11(Mbps) ☐ 1-2-5.5-11-22(Mbps)

TX Rates : ☐ 1-2(Mbps) ☐ 1-2-5.5-11(Mbps) ☒ 1-2-5.5-11-22(Mbps)

Preamble Type : ☒ Short Preamble ☐ Long Preamble

SSID Broadcast : ☒ Enabled ☐ Disabled

Antenna transmit power : 100% 17dBm

Antenna Selection : Diversity Antenna

4X Mode : ☒ Enabled ☐ Disabled

☒ Apply ☐ Cancel ☐ Help

Beacon Interval Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. **100** is the default setting and is recommended.

DTIM interval (**D**elivery **T**raffic **I**ndication **M**essage) **3** is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.


Basic Rates Select the data rate. Default is **1-2-5.5-11-22Mbps**.

TX Rates Select the data rate. Default is **1-2-5.5-11-22Mbps**.

Preamble Type **Long preamble** is the default setting. (High traffic networks should use the shorter preamble type.) The preamble defines the length of the CRC block used in communication between the Access Point and the roaming wireless Network adapters.(Cyclic Redundancy Check is a common technique for detecting data transmission errors)

Using the Configuration Menu

Advanced > Performance (Continued)

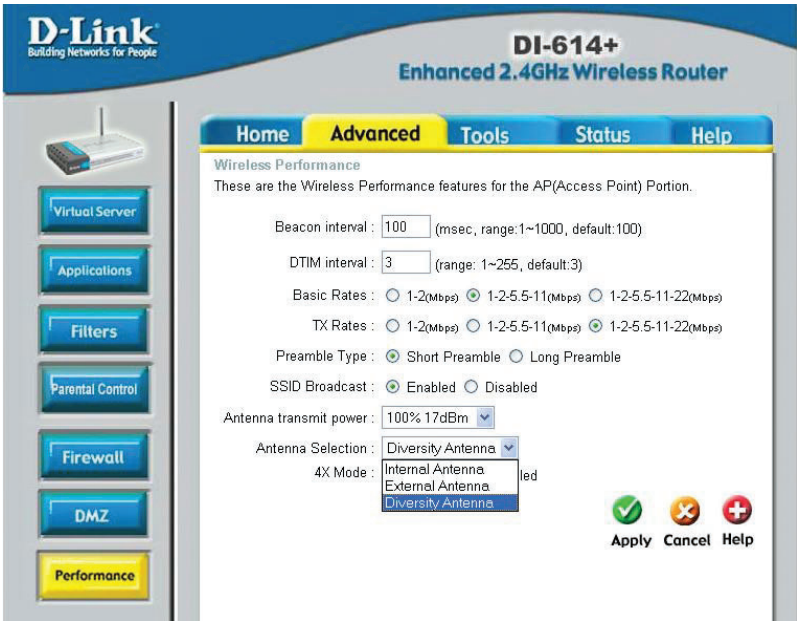

SSID Broadcast

Enabled is the default setting. Choose **Enabled** to broadcast the SSID across the network. All devices on a network must share the same SSID (Service Set Identifier) to establish communication. Choose **Disabled** if you do not wish to broadcast the SSID over the network.

Antenna transmit power

The DI-614+ has the option to adjust its wireless transmit power. Limiting transmit power can help in situations where you do not want the same signals overlapping one another.

Antenna Selection

Select Internal Antenna, External Antenna, or Diversity Antenna.

Internal

In this mode, the DI-614+ only uses the internal antenna for short distance coverage.

External

In this mode, the DI-614+ only uses the external antenna and extends wireless coverage.

Diversity

In this mode, the DI-614+ uses both the internal and external antenna and then uses the antenna that picks up the strongest signal.

4X Mode

4x Mode allows for higher speed wireless performance. Only other devices that support **4x Mode** will be able to take advantage of the higher performance.

Using the Configuration Menu

Tools> Admin

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The top navigation bar includes Home, Advanced, Tools (selected), Status, and Help. The left sidebar contains buttons for Admin (selected), Time, System, Firmware, DDNS, Misc., and Cable Test. The main content area is titled 'Administrator Settings' and contains the following sections:

- Administrator Settings**
Administrators can change their login password.
- Administrator (The Login Name is "admin")**
New Password: [password field]
Confirm Password: [password field]
- User (The Login name is "user")**
New Password: [password field]
Confirm Password: [password field]
- Remote Management**
☐ Enabled ☒ Disabled
IP Address: [text field]
Port: [dropdown menu showing 8080]

At the bottom right, there are three icons: a green checkmark, an orange 'X', and a red plus sign, with the labels 'Apply', 'Cancel', and 'Help' respectively.

There are two accounts that can access the Broadband Router's Web-Management interface. They are **admin** and **user**. **Admin** has read/write access while **user** has read-only access. **User** can only view the settings but cannot make any changes. It is recommended that you change the admin password from the default setting. The default password is blank (no password).

Password

To change the admin and user passwords, enter in the old password, and enter the new password twice to confirm.

Remote Management

Remote Management allows the device to be configured through the WAN (Wide Area Network) port from the Internet using a web browser. A username and password is still required to access the browser-based management interface.

IP Address

Internet IP Address of the computer that has access to the DI-614+. If the IP Address is set to 0.0.0.0, this allows all Internet IP addresses to access the DI-614+.

Port

The port number used to access the DI-614+.
E.g., <http://x.x.x.x:80>, where x.x.x.x. is the WAN IP address of the DI-614+ and 80 is the port used for the Web Management interface.

Using the Configuration Menu

Tools> Time

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. The 'Tools' tab is selected, and the 'Time' sub-tab is active. The page title is 'DI-614+ Enhanced 2.4GHz Wireless Router'. The left sidebar contains navigation buttons: Admin, Time (highlighted), System, Firmware, DDNS, and Misc. The main content area is titled 'Time' and contains the following settings:

- Set the DI-614+ system time.**
- Local Time:** Apr/01/2002 01:30:39
- Time Zone:** (GMT-08:00) Pacific Time (US & Canada) [dropdown menu]
- Daylight Saving:** ☐ Enabled ☒ Disabled
Start: Jan [dropdown] 01 [dropdown] End: Jan [dropdown] 01 [dropdown]
- Get the Time Automatically via Network Time Protocol(NTP)**
Default NTP Server: [text input] (optional)
- Set the Time**
Year: 2002 [dropdown] Month: Apr [dropdown] Day: 01 [dropdown]
Hour: 01 [dropdown] Minute: 30 [dropdown] Second: 39 [dropdown] [Set Time button]

At the bottom right, there are three buttons: Apply (green checkmark), Cancel (orange X), and Help (red plus).

Set the time here by entering it manually or by using NTP (Network Time Protocol.) NTP is a standard protocol on the Internet that synchronizes the time settings accurately for all the computers on your network.

Time Zone Select your time zone from the pull-down menu.

Daylight Saving Select to enable or disable Daylight Saving. If you choose to enable this, enter the start and end date and the system time will automatically adjust on those dates

Default NTP Server (Optional.) If you are enabling NTP to synchronize the time settings on your network using an NTP server, please enter the link to the default server.

Set Device Date and Time If you are entering the time manually, select the correct Year, Month, Day, Hour, Minute, and Second.

Using the Configuration Menu

Tools > System



The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file created by the DI-614+ can be uploaded to the unit. To reload a system settings file, click on **Browse** to search the local hard drive for the file to be used. The device can also be reset back to factory default settings by clicking on the **Reset to Default** button. Use the restore feature only if necessary. This will erase previously saved settings for the unit. Make sure to save your system settings to the hard drive before doing a factory restore.

Save Settings to Local Hard Drive

Click **Backup Setting** to save the current settings to the local Hard Drive.

Load Settings from Local Hard Drive


Click **Browse** to find the settings file, then click **Load**.

Restore to Factory Default Settings

Click **Reset to Default** to restore the factory default settings.

Using the Configuration Menu

Tools > Firmware

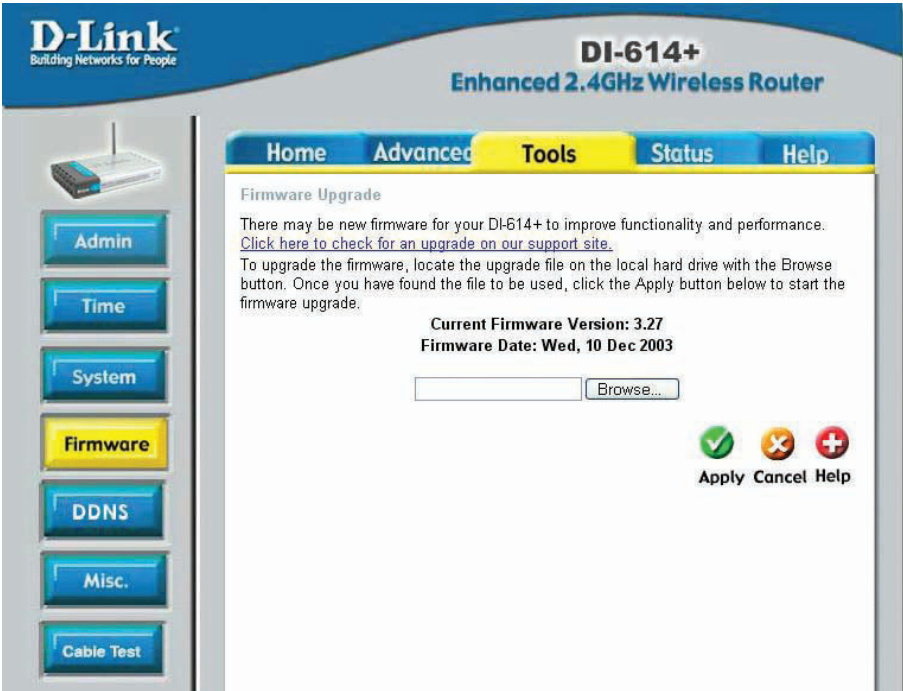

You can upgrade the firmware by using this tool. First, check the D-Link support site for firmware updates at <http://support.dlink.com>. Make sure that the firmware you want to use is saved on the local hard drive of your computer. Click on **Browse** to search the local hard drive for the firmware that you downloaded from the D-Link website to be used for the update. Upgrading the firmware will not change any of your system settings but it is recommended that you save your system settings before doing a firmware upgrade.

Browse


After you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive. Click **Apply** to complete the firmware upgrade.



Note: Do not power off the unit when it is being upgraded. When the upgrade is complete, the unit will automatically restart.

Using the Configuration Menu

Tools > DDNS

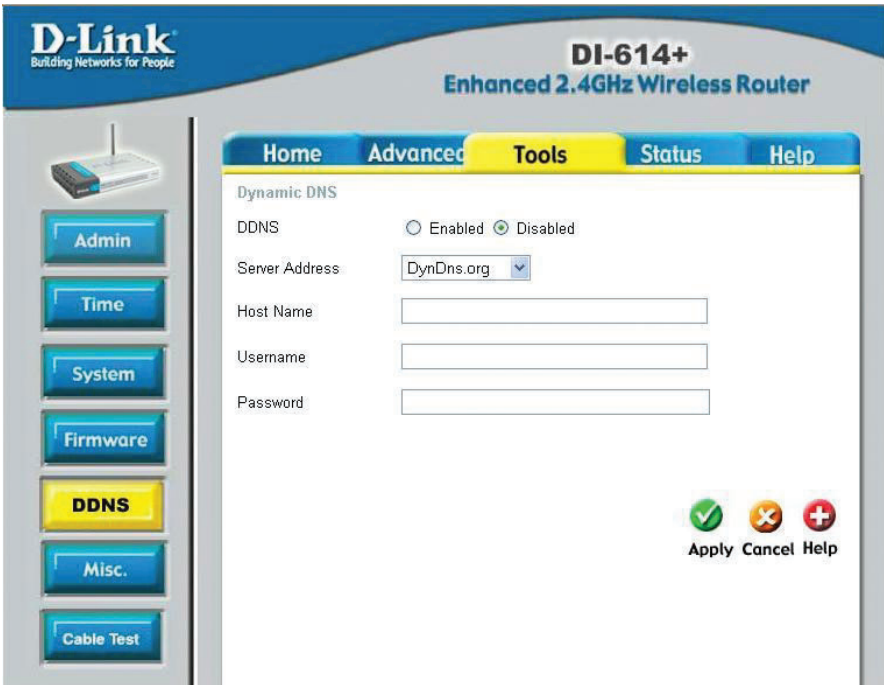

DDNS (Dynamic Domain Name System) keeps dynamic IP addresses (e.g., IP addresses assigned by a DHCP capable router or server) linked to a domain name. Users who have a Dynamic DNS account may use this feature on the DI-614+.

- DDNS

When an IP address is automatically assigned by a DHCP server, DDNS automatically updates the DNS server. Select **Disabled** or **Enabled**.
- Server Address

Select from the pull-down menu.
- Host Name


Enter the Host name.
- Username

Enter the username.
- Password


Enter the password.

Using the Configuration Menu

Tools > Misc



DI-614+
Enhanced 2.4GHz Wireless Router



Admin

Time

System

Firmware

DDNS

Misc.

Cable Test

HomeAdvancedToolsStatusHelp

Ping Test

Ping Test is used to send "Ping" packets to test if a computer is on the Internet.

Host Name or IP address

Ping

Restart Device

Reboots the DI-614+.

Reboot

Block WAN Ping

When you "Block WAN Ping", you are causing the public WAN IP address on the DI-614+ to not respond to ping commands. Pinging public WAN IP addresses is a common method used by hackers to test whether your WAN IP address is valid.

Discard PING from WAN side ☐ Enabled ☒ Disabled

UPNP Settings

☒ Enabled ☐ Disabled

Gaming Mode

☒ Enabled ☐ Disabled

VPN Pass-Through

Allows VPN connections to work through the DI-614+.

PPTP




☒ Enabled ☐ Disabled

IPSec

☒ Enabled ☐ Disabled

WAN select to 10/100 Mbps

☐ 100Mbps ☐ 10Mbps ☒ 10/100Mbps Auto



ApplyCancelHelp

41

Using the Configuration Menu

Tools > Misc (Continued)

Ping Test

This useful diagnostic utility can be used to check if a computer is on the Internet. It sends ping packets and listens for replies from the specific host.

Restart Device

Click reboot to restart the unit.

Block WAN Ping

Click **Enable** to block the WAN ping. Computers on the Internet will not get a reply back from the DI-614+ when it is being “ping”ed. This may help to increase security.

UPnP Setting

Universal Plug and Play is a feature that is preset to allow certain popular applications such as MSN messenger to be functional using the router without making any configurations. By default UPnP setting is set to enable. It is recommended to keep UPnP Setting on enable.

Gaming Mode

Click Enable to enable Gaming Mode. This feature allows many online games to work with the DI-614+.

VPN Pass Through

For users who telecommute or use Virtual Private Network (VPN), you can select PPTP or IPSec to be used with this router.

WAN select to 10/100 Mbps

This option allows the user to select 10Mbps, 100 Mbps, or 10/100Mbps Auto for the WAN port. You may need to change the WAN port speed if you are experiencing connection problems with your Cable or DSL modem.

Using the Configuration Menu

Tools > Cable Test




Diagnostic Cable Tester is an advanced feature that integrates a LAN cable tester on every Ethernet port on the router. Through the graphical user interface (GUI), Cable Tester can be used to remotely diagnose and report cable faults such as opens, shorts, swaps, and impedance mismatch. The Cable Tester feature significantly reduces service calls and returns by allowing users to easily troubleshoot their cable connections.

- Ports

The Ethernet port names associated to the physical ports.
- Link Status

The current link status of the Ethernet cable connected to the respective Ethernet port.

Click on **More Info** for detailed information about the cable link status. The following window will appear.

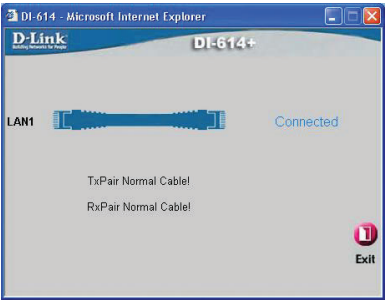

Click on **Refresh** to run the cable test. Allow the router a few seconds to complete the test.

Using the Configuration Menu

Status > Device Info




This screen displays information about the DI-614+.

DHCP Release Click to release IP addresses sent from the DHCP server.

DHCP Renew Click to renew IP addresses sent from the DHCP server.

Using the Configuration Menu

Status > Log

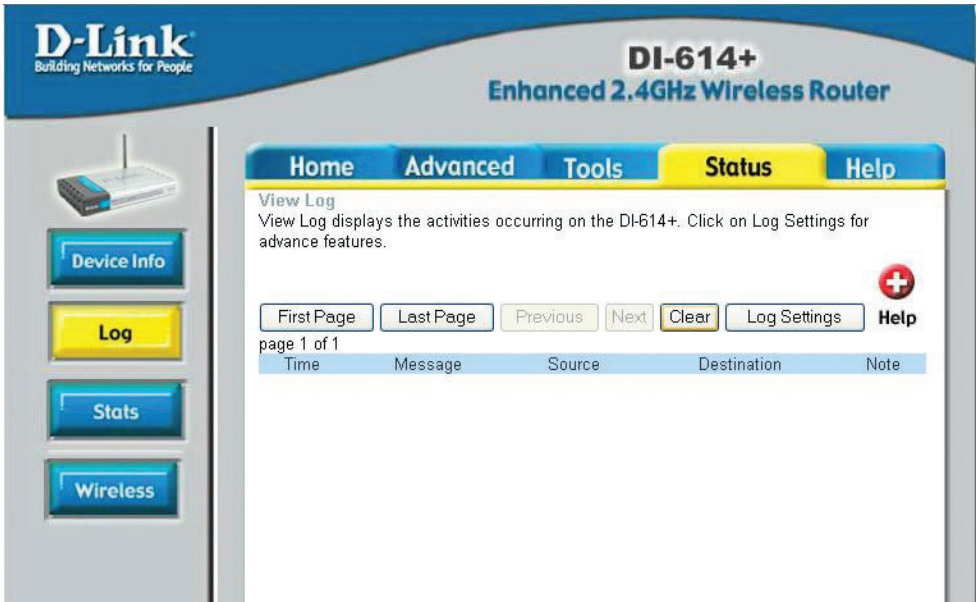

This screen displays activities occurring on the DI-614+.

First Page- Click **First Page** to go to the first page of the log.

Last Page- Click **Last Page** to go to the last page of the log.

Previous- Click **Previous** to go to the previous page of the log.

Next- Click **Next** to go to the next page of the log.

Clear- Click **Clear** to clear the log.

Log Settings- Click for advanced features (see next page.)

Using the Configuration Menu

Status > Log > Log Settings

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router configuration interface. On the left is a sidebar with a router icon and buttons for 'Device Info', 'Log' (highlighted in yellow), 'Stats', and 'Wireless'. The main area has tabs for 'Home', 'Advanced', 'Tools', 'Status' (highlighted in yellow), and 'Help'. Under the 'Status' tab, the 'Log settings' section is active. It contains the text 'Logs can be saved by sending it to an admin email address.' followed by input fields for 'SMTP Server / IP Address' and 'Email Address', and a 'Send Mail Now' button. Below these is a 'Save Log File To Local Hard Drive' section with a 'Save' button. The 'Log Type' section has five checkboxes: 'System Activity' (checked), 'Debug Information' (unchecked), 'Attacks' (checked), 'Dropped Packets' (unchecked), and 'Notice' (checked). At the bottom right are three icons (green checkmark, orange X, red plus) and the text 'Apply Cancel Help'.

E-Mail Alert

The DI-614+ can be set up to send the log files to a specific email address.

SMTP Server IP

Enter in the IP address of the mail server.

Email Address

Enter in the email address of the recipient who will receive the email log.

Send Mail Now

Click to send mail immediately.

Save Log File to Local Hard Drive


Selecting this allows you to save the log to a local hard drive. A window will appear prompting you to save the file to a specific location.

Log Type

Select the types of activity to log.

Using the Configuration Menu

Status > Stats

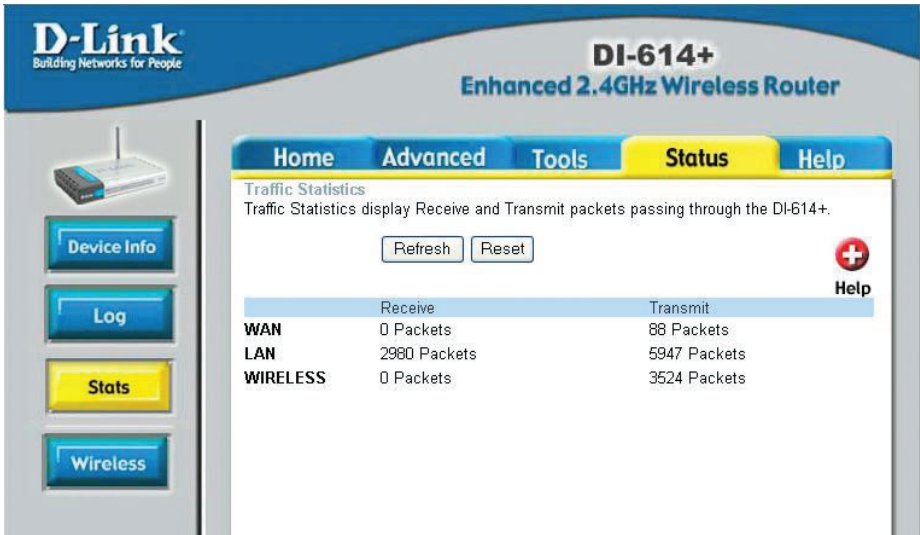

In Stats section, traffic statistics are displayed.

Refresh This will update the page.

Reset This will reset the packet counter to zero.


WAN Displays Received / Transmitted packets from the WAN port.

LAN Displays Received / Transmitted packets from the LAN port.

WIRELESS Displays received and transmitted packets from the wireless network.

Using the Configuration Menu


Status > Wireless

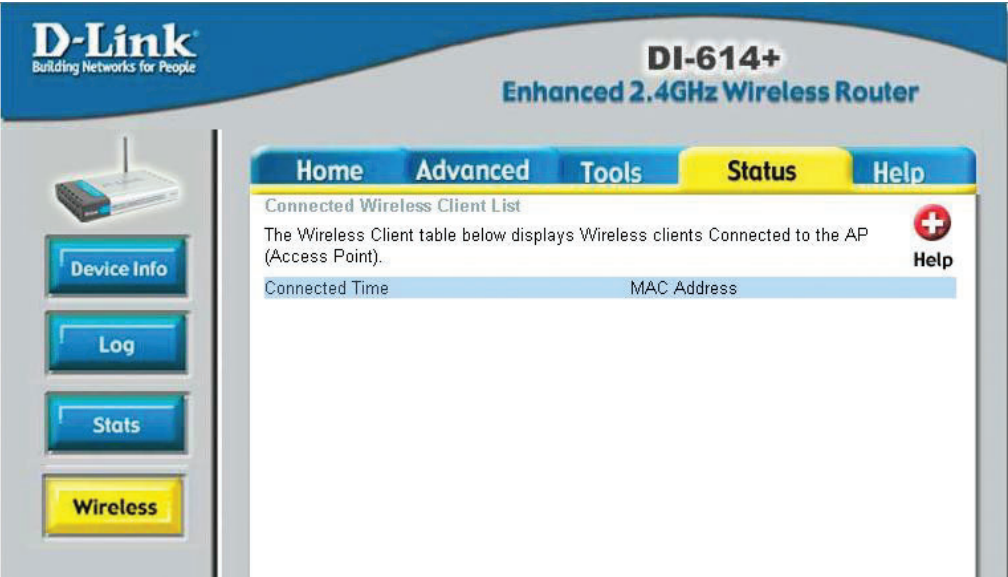

The wireless client table displays a list of current connected wireless clients. This table also displays the time and MAC address of the wireless client connected.

Using the Configuration Menu

Help

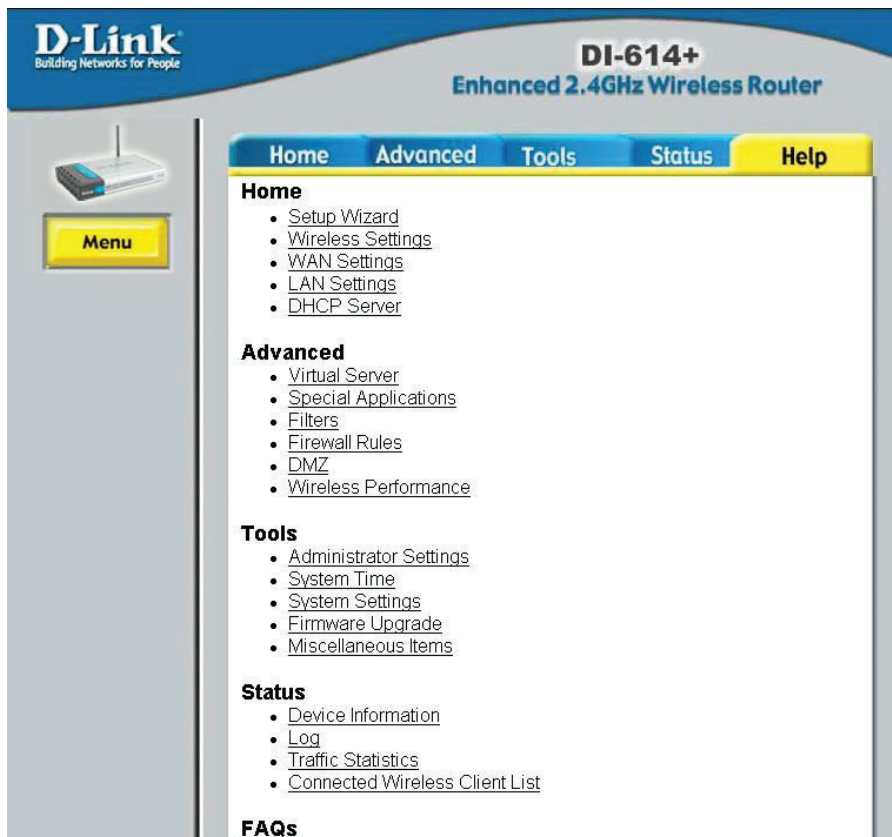

This screen displays the complete **Help** menu. For help at anytime, click the **Help** tab in the Configuration menu.

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DI-614+ Wireless Access Point. We cover various aspects of the network setup, including the network adapters. Please read the following if you are having problems.


(Note: It is recommended that you use an Ethernet connection to configure the DI-614+ Access Point.)

1. The computer used to configure the DI-614+ cannot access the Configuration menu.

- Check that the **Ethernet LED** on the DI-614+ is **ON**. If the **LED** is not **ON**, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 6 (**Check that the drivers for the network adapters are installed properly**) in this **Troubleshooting** section to check that the drivers are loaded properly.
- Check that the **IP Address** is in the same range and subnet as the DI-614+. Please see **Checking the IP Address in Windows XP** in the **Networking Basics** section of this manual.

Note: *The IP Address of the DI-614+ is 192.168.0.1. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. and a Subnet Mask of 255.255.255.0. Any computers that have identical IP Addresses will not be visible on the network.*

- Do a **Ping test** to make sure that the DI-614+ is responding. Go to **Start>Run>Type Command>Type ping 192.168.0.1**. A successful ping will show four replies.


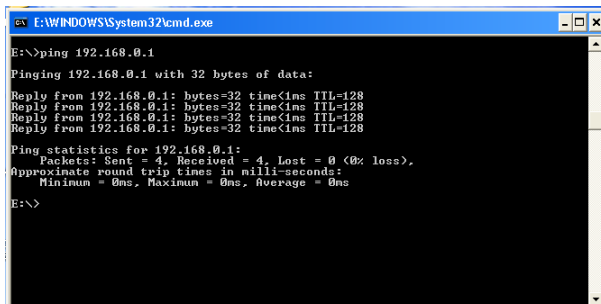


```
ex t:WINDOWS\system32\cmd.exe
E:\>ping 192.168.0.1
Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
E:\>
```

Troubleshooting

2. The wireless client cannot access the Internet in the Infrastructure mode.

- Make sure the wireless client is associated and joined with the correct router. To check this connection: **Right-click** on the **Local Area Connection icon** in the taskbar> select **View Available Wireless Networks**. The **Connect to Wireless Network** screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

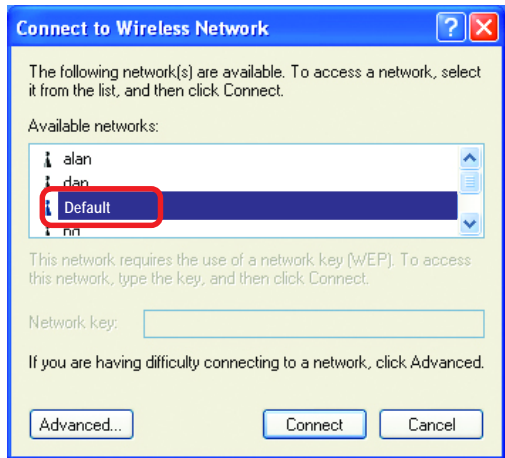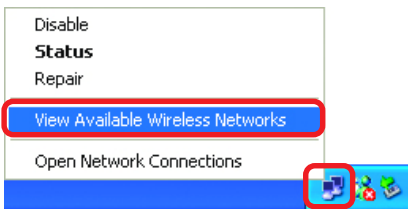

- Check that the **IP Address** assigned to the wireless adapter is within the same **IP Address range** as the gateway. (Since the DI-614+ has an IP Address of 192.168.0.1, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.) To check the **IP Address** assigned to the wireless adapter, **double-click** on the **Local Area Connection icon** in the taskbar > select the **Support** tab and the **IP Address** will be displayed. (Please refer to **Checking the IP Address** in the **Networking Basics** section of this manual.)
- If it is necessary to assign a **Static IP Address** to the wireless adapter, please refer to the appropriate section in **Networking Basics**. If you are entering a **DNS Server address** you must also enter the **Default Gateway Address**. (Remember that if you have a DHCP-capable router, you will not need to assign a Static IP Address. See **Networking Basics: Assigning a Static IP Address**.)


Troubleshooting

3. Check that the drivers for the network adapters are installed properly.


You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.

- Go to **Start**.
- **Right-click** on **My Computer**.
- Click **Properties**.

NOTE: Screen shots taken using Windows XP. If you are using a different Operating System your screen may look different.

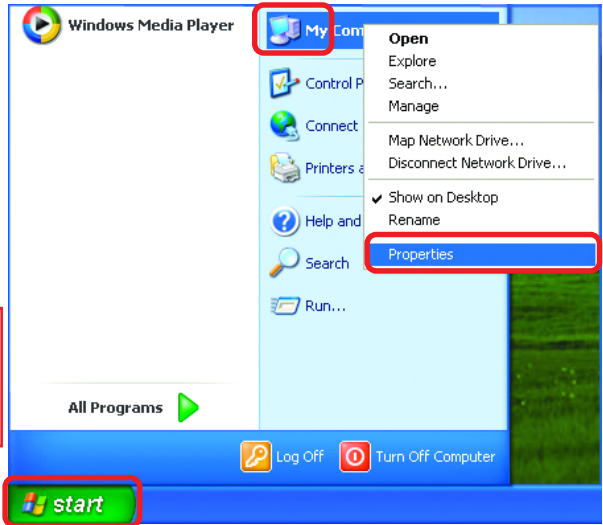


- **Select the Hardware Tab.**
- Click **Device Manager**.

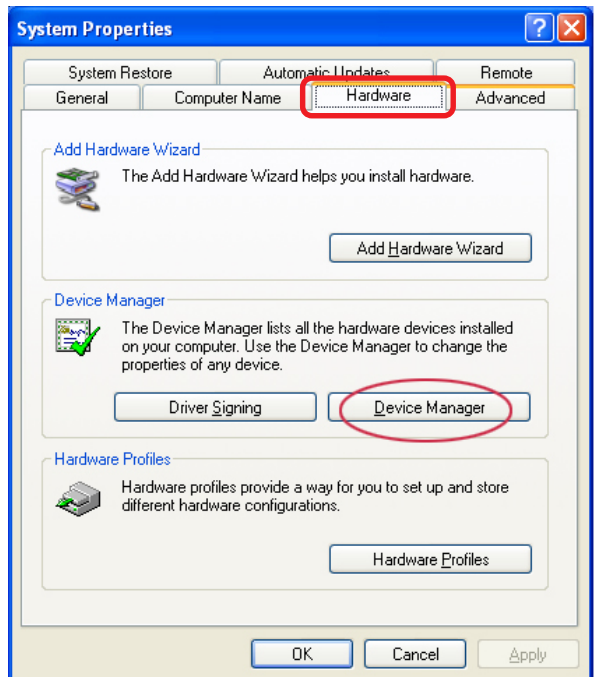


Troubleshooting

- Double-click on **Network Adapters**.
- Right-click on **D-Link AirPlus DWL-650+ Wireless Cardbus Adapter**.
- Select **Properties** to check that the drivers are installed properly.

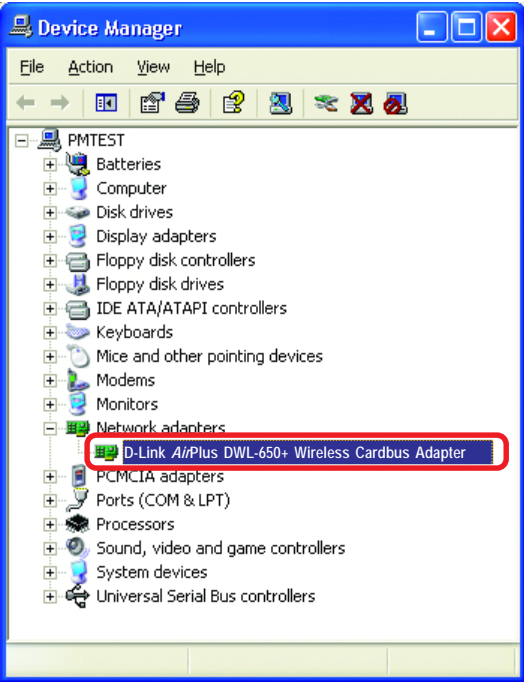

- Look under **Device Status** to check that the device is working properly.

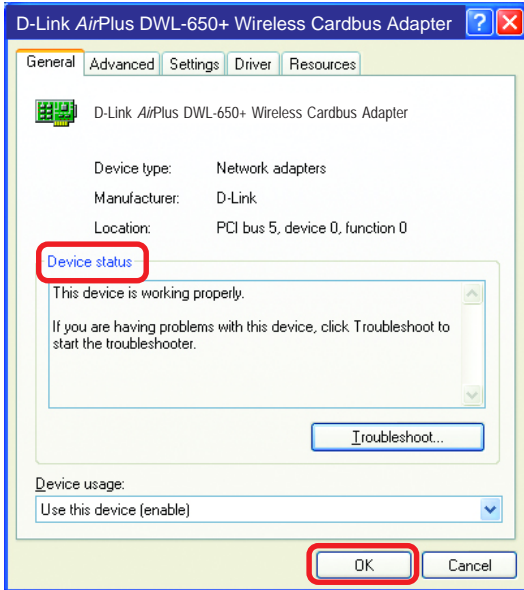

- Click **OK**.

Troubleshooting

4. Resetting the DI-614+ to Factory Default Settings

After you have tried other methods for troubleshooting your network, you may choose to **Reset** the DI-614+ to the factory default settings. Remember that D-Link *AirPlus* products network together, out of the box, at the factory default settings.



To hard-reset the D-Link *AirPlus* DI-614+ to Factory Default Settings, please do the following:

- Locate the **Reset** button on the back of the DI-614+.
- Use a paper clip to press the **Reset** button.
- Hold for about 10 seconds and then release.
- After the DI-614+ reboots (this may take a few minutes) it will be reset to the factory **Default** settings.

Networking Basics

Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, Me or 98.


Go to **Start>Control Panel>Network Connections**
Select **Set up a home or small office network**



When this screen appears, Click **Next**.


Networking Basics

Please follow all the instructions in this window:

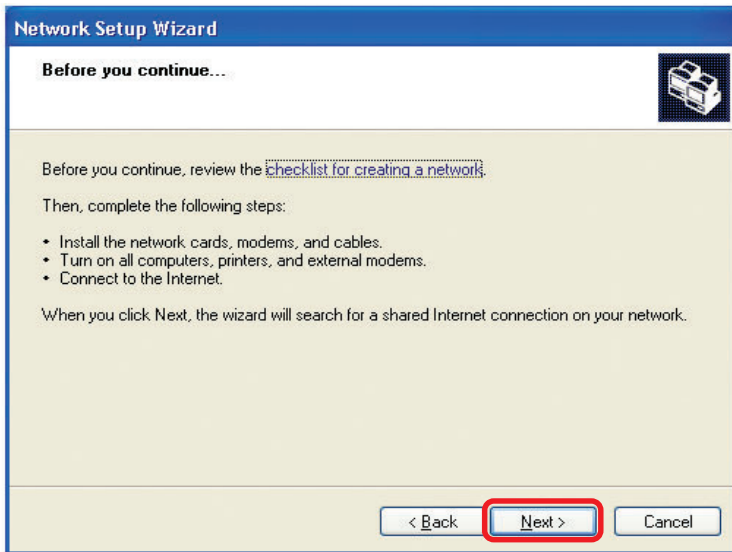

Click **Next**.


In the following window, select the description that best fits your computer. If your computer connects to the internet through a gateway/router, select the second option as shown.

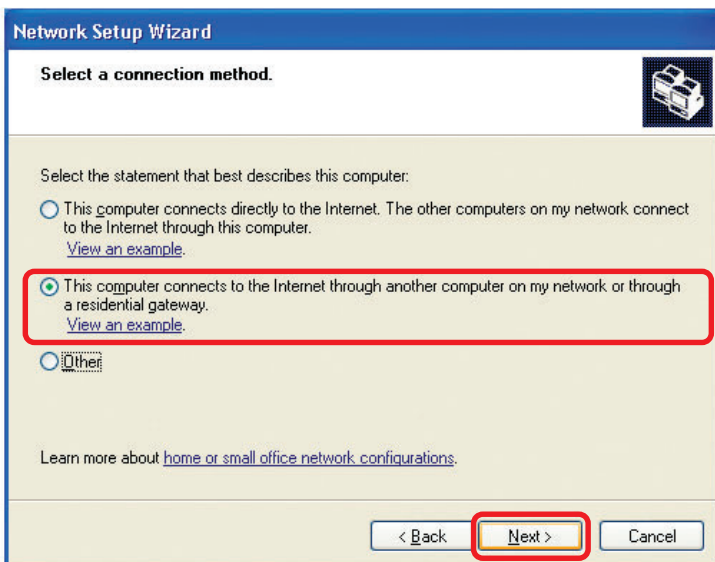

Click **Next**.

Networking Basics


Enter a **Computer description** and a **Computer name** (optional).

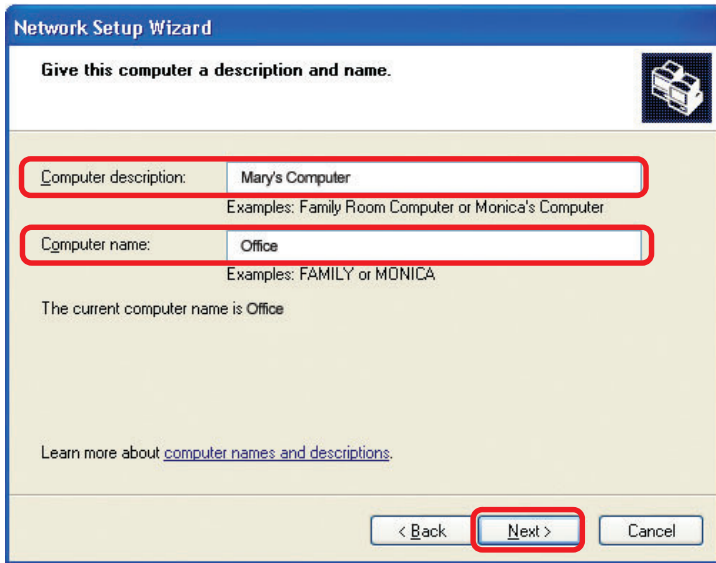

The screenshot shows the 'Network Setup Wizard' window with the title 'Give this computer a description and name.' It contains two text input fields. The first field is labeled 'Computer description:' and contains the text 'Mary's Computer'. Below it, examples are listed: 'Examples: Family Room Computer or Monica's Computer'. The second field is labeled 'Computer name:' and contains the text 'Office'. Below it, examples are listed: 'Examples: FAMILY or MONICA'. A line of text states 'The current computer name is Office'. At the bottom, there is a link that says 'Learn more about [computer names and descriptions](#).' and three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.

Click **Next**.

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup** name.

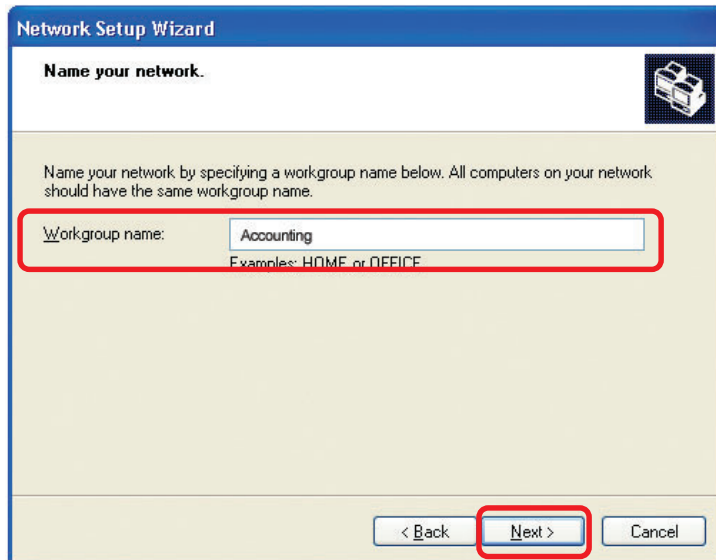


The screenshot shows the 'Network Setup Wizard' window with the title 'Name your network.' It contains a text input field labeled 'Workgroup name:' with the text 'Accounting'. Below it, examples are listed: 'Examples: HOME or OFFICE'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.

Click **Next**.


Networking Basics

Please wait while the **Network Setup Wizard** applies the changes.

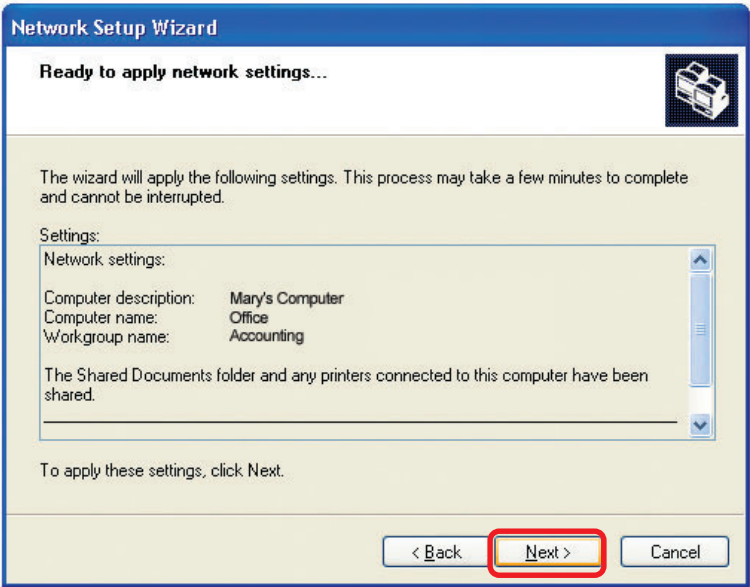


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

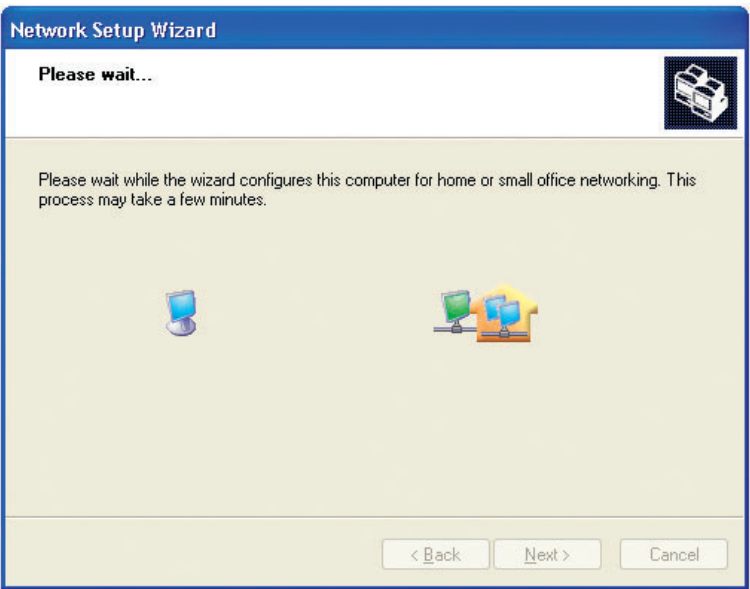


Networking Basics


In the window below, select the option that fits your needs. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

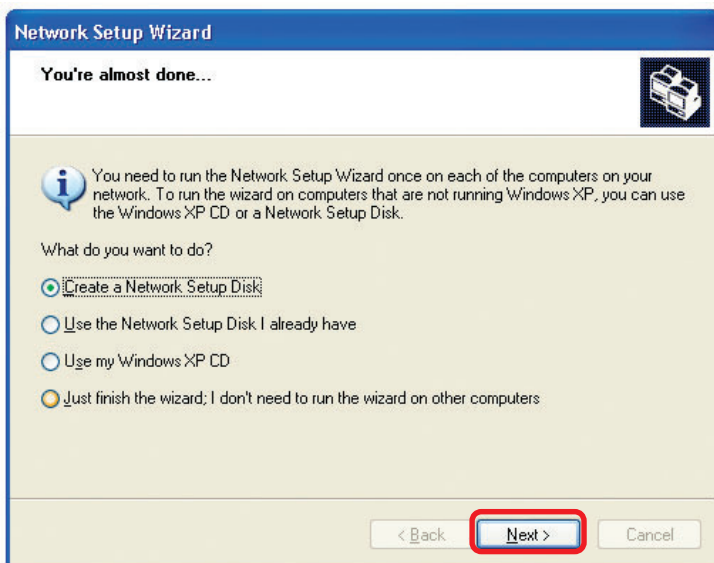


Insert a disk into the Floppy Disk Drive, in this case drive **A**.

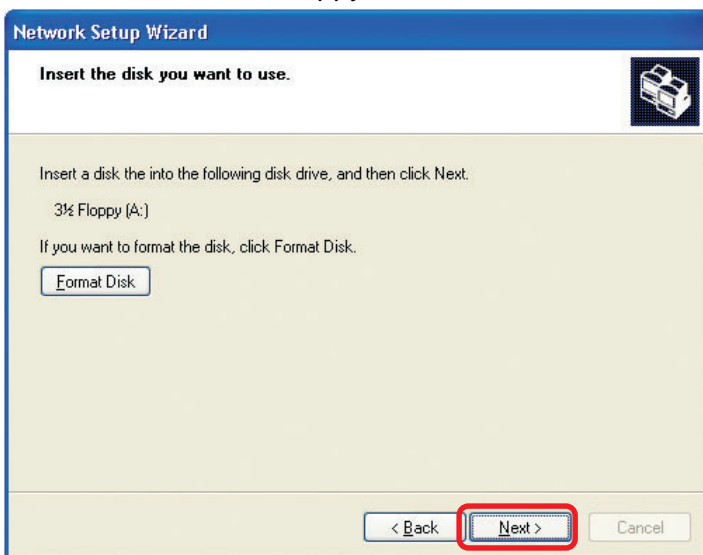

Networking Basics

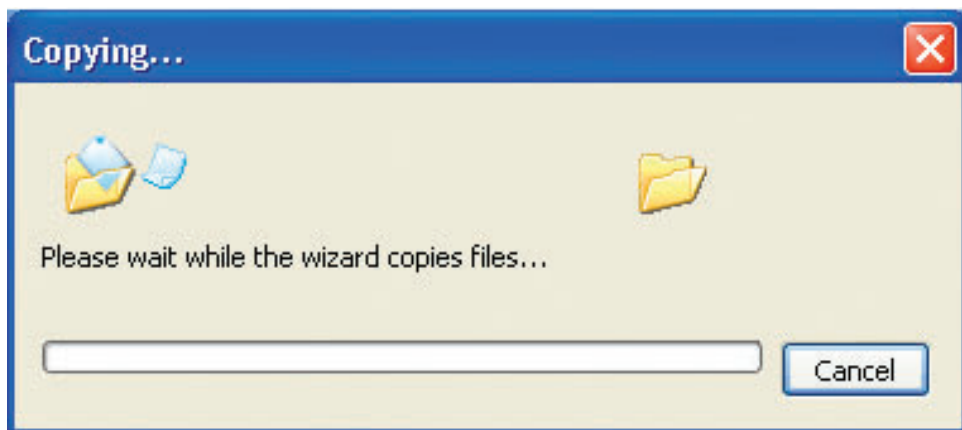


Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue click **Next**.

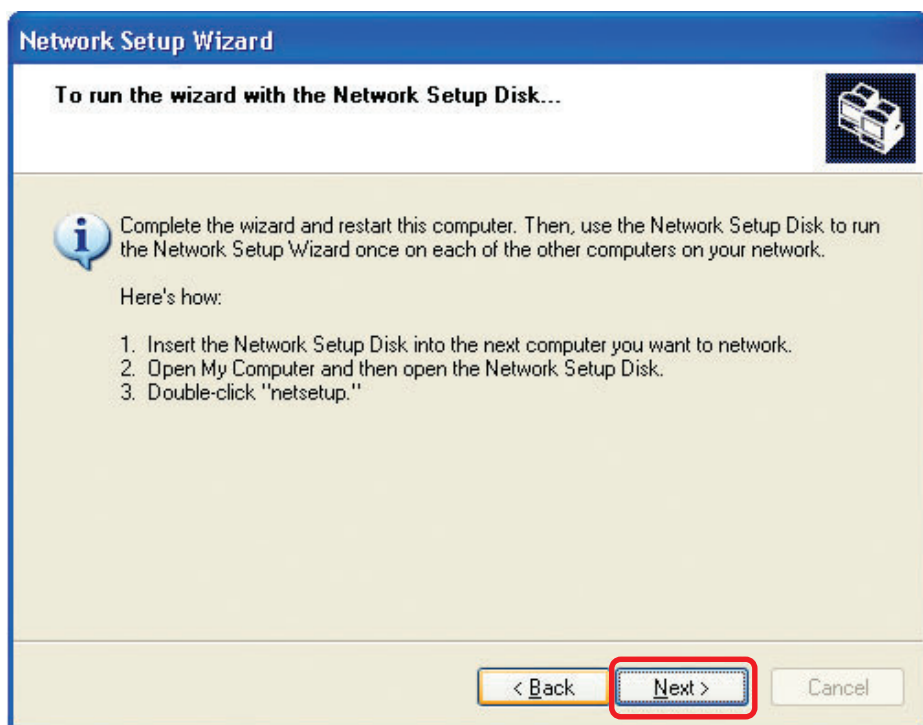


Networking Basics

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

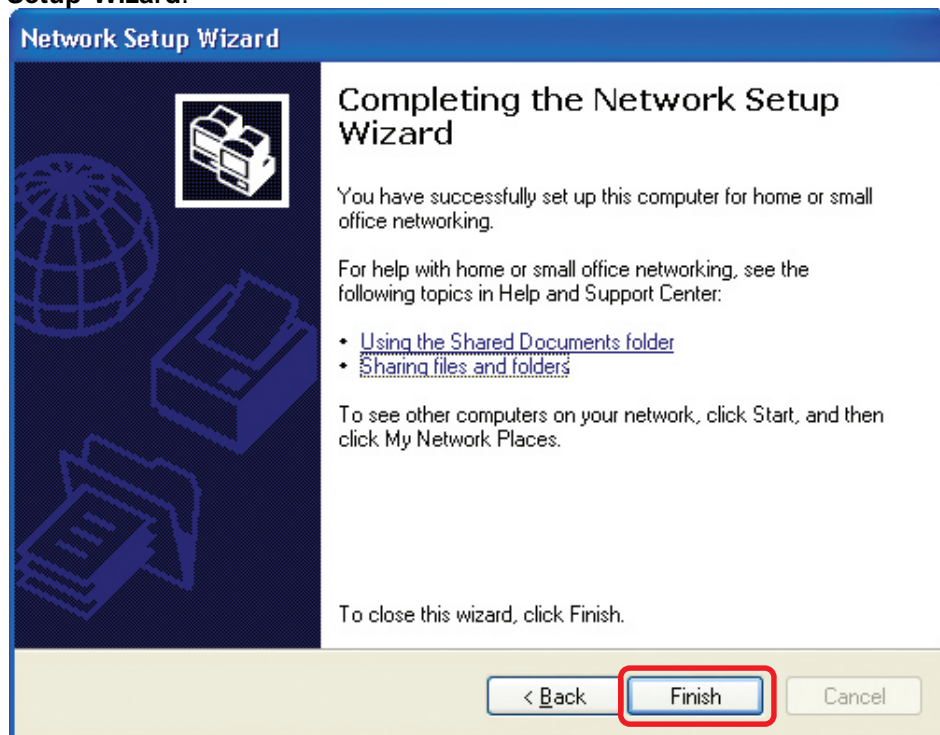

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.

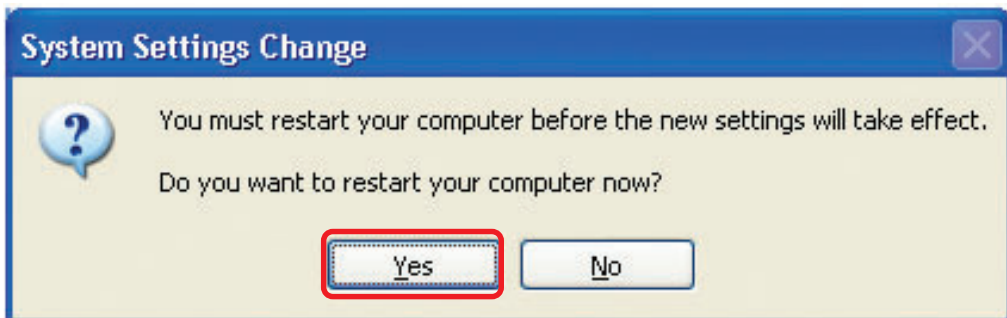

You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.

Networking Basics


Naming your Computer

To name your computer, please follow these directions. In **Windows XP**:

- Click **Start** (in the lower left corner of the screen).
- **Right-click** on **My Computer**.
- Select **Properties** and click.



- Select the **Computer Name Tab** in the System Properties window.

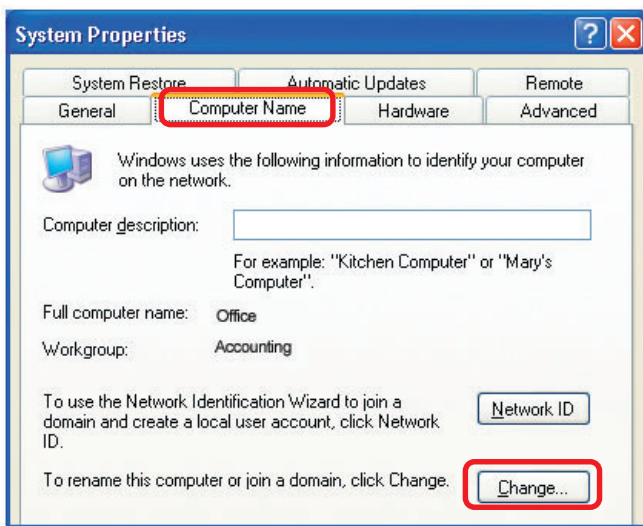


- You may enter a **Computer Description** if you wish; this field is optional.
- To rename the computer and join a domain, Click **Change**.

Networking Basics

Naming your Computer

- In this window, enter the **Computer name**.
- Select **Workgroup** and enter the name of the **Workgroup**.
- All computers on your network must have the same **Workgroup** name.
- Click **OK**.

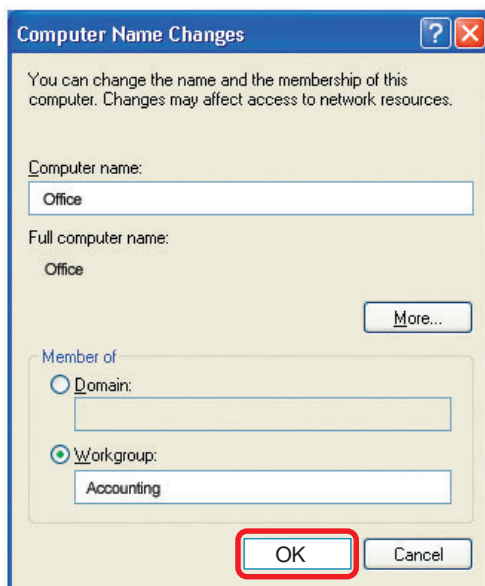


Assigning a Static IP Address in Windows XP/2000

Note: Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**.
- Double-click on **Control Panel**.

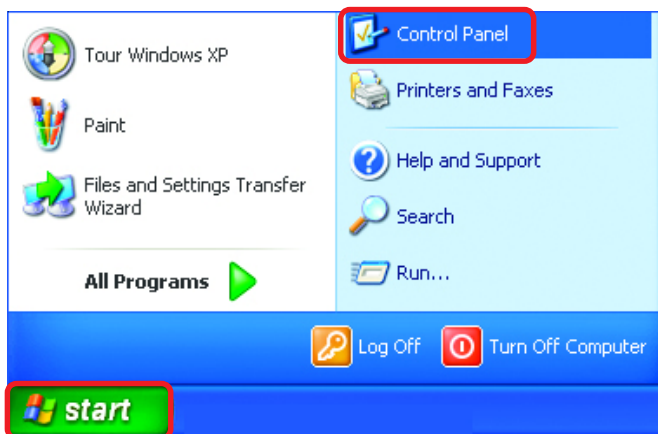

Networking Basics


Assigning a Static IP Address in Windows XP/2000

- Double-click on **Network Connections**.

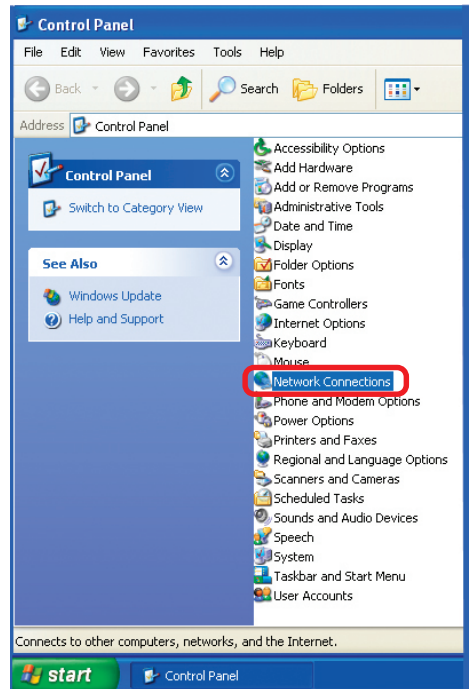

- Right-click on **Local Area Connections**.


- Double-click on **Properties**.

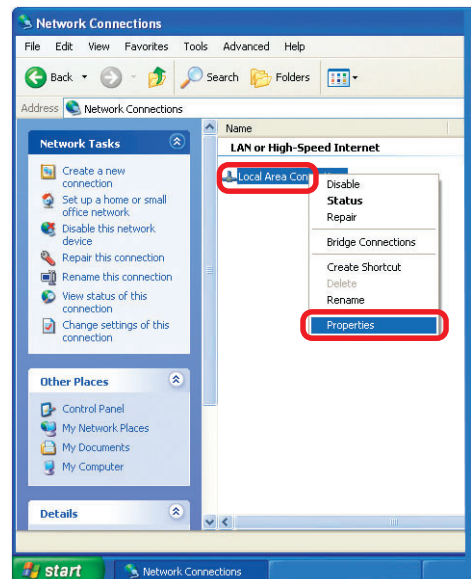

Networking Basics

Assigning a Static IP Address in Windows XP/2000


- Click on **Internet Protocol (TCP/IP)**.
- Click **Properties**.

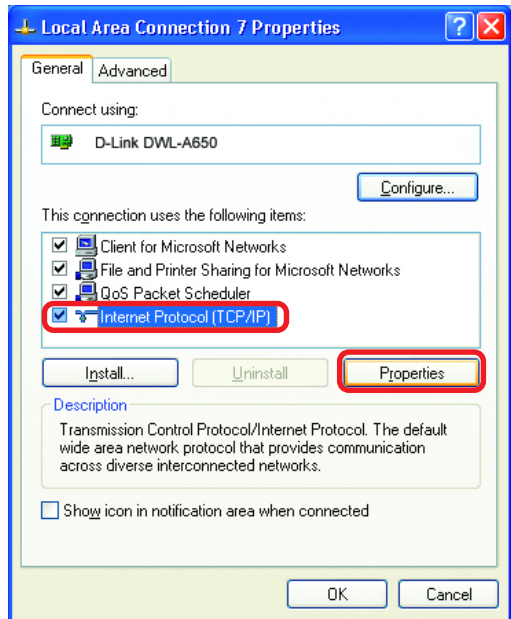

- Enter the LAN IP address of the Wireless Router. (D-Link wireless routers have a LAN IP address of 192.168.0.1.)

The DNS server information will be supplied by your ISP (Internet Service Provider).


- Click **OK**

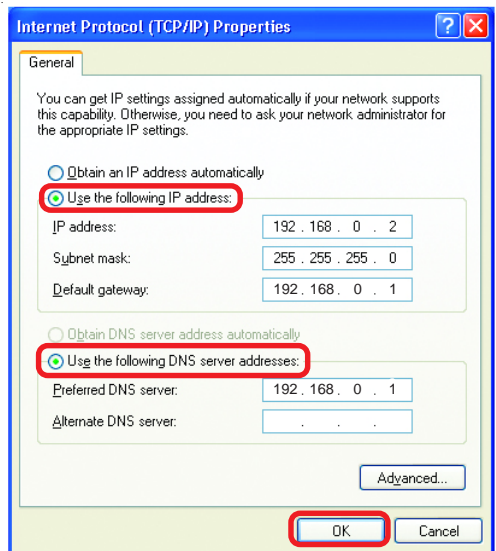


Networking Basics

Assigning a Static IP Address with Macintosh OSX


- Go to the **Apple Menu** and select **System Preferences**.
- Click on **Network**.

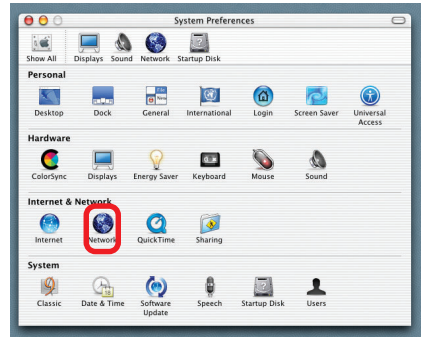

- Select **Built-in Ethernet** in the **Show** pull-down menu.
- Select **Manually** in the **Configure** pull-down menu.

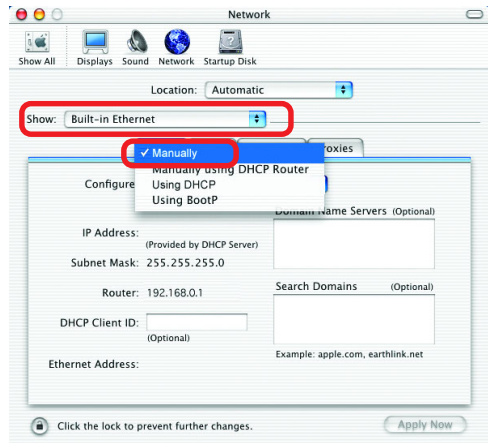

- Input the **Static IP Address**, the **Subnet Mask**, and the **Router IP Address** in the appropriate fields.

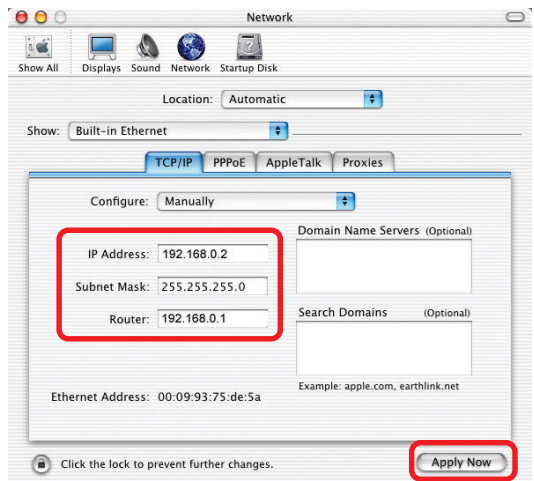


- Click **Apply Now**.


Networking Basics

Selecting a Dynamic IP Address with Macintosh OSX


- Go to the **Apple Menu** and select **System Preferences**.
- Click on **Network**.

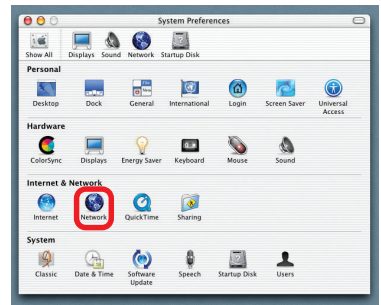

- Select **Built-in Ethernet** in the **Show** pull-down menu.
- Select **Using DHCP** in the **Configure** pull-down menu.

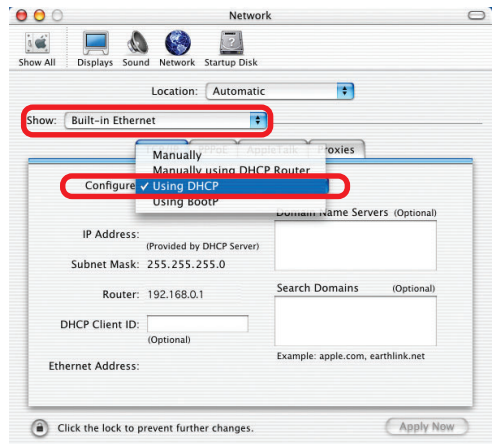

- Click **Apply Now**.
- The **IP Address**, **Subnet mask**, and the **Router's IP Address** will appear in a few seconds.

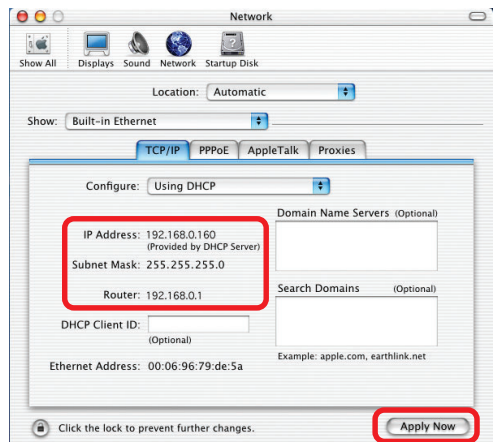

Technical Specifications

Standards

- IEEE 802.3 10BASE-T Ethernet
- IEEE 802.3u 100BASE-TX Fast Ethernet
- IEEE 802.11b

VPN Pass Through Function

- PPTP
- IPSec

Advanced Firewall Features

Device Management

- Web-Based – Internet Explorer 6.0 or later; Netscape Navigator 6 or later; or other Java- enabled browsers.

Wireless Data Rates With Automatic Fallback

- 22Mbps
- 11Mbps
- 5.5Mbps
- 2Mbps
- 1Mbps

Encryption

- 64/128/256-bit RC4

Media Access Control

- CMTA/CA with ACK

Wireless Frequency Range

- 2.4GHz to 2.46GHz

Wireless Operating Range

- Indoors: Up to 328 feet (100 meters)
- Outdoors: Up to 1,312 feet (400 meters)

Wireless Modulation Technology

- PBCC - Packet Binary Convolutional Coding
- DSSS - Direct Sequence Spread Spectrum
- 11-chip Barker sequence

Technical Specifications

Modulation Technique

- Barker (1Mbps/0db)
- Barker (2Mbps/3db)
- CCK (5.5Mbps/5.5db)
- PBCC (5.5Mbps/1.4db)
- CCK (11Mbps/8.6db)
- PBCC (11Mbps/4.5db)
- PBCC (22Mbps/8.5db)

Wireless Transmit Power

- 15dBm \pm 2dB

External Antenna Type

- Single detachable reverse SMA

LEDs

- Power
- M1
- M2
- WAN
- Local Network - 10/100
- WLAN (Wireless Connection)

Operating Temperature

- 32°F to 131°F (0°C to 55°C)

Humidity

- 95% maximum (non-condensing)

Power

- DC 5V 2.5A

Safety & Emissions

- FCC
- UL

Dimensions

- L = 7.56 inches (192mm)
- W = 4.65 inches (118mm)
- H = 1.22 inches (31mm)

Weight

- ~10.8 oz. (0.3kg)

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

<http://support.dlink.com>

[email:support@dlink.com](mailto:support@dlink.com)

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

<http://support.dlink.ca>

[email:support@dlink.ca](mailto:support@dlink.ca)

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

3-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) Three (3) Years
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.

- The original product owner must obtain a Return Material Authorization (“RMA”) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

Copyright Statement: No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least eight inches (20 cm) from all persons.

This transmitter must not be operated in conjunction with any other antenna.

Registration

Register online your D-Link product at <http://support.dlink.com/register/>