

KAWAI

Concert Performer Series Digital Piano

Owner's Manual


Model: CP175/CP155

All descriptions and specifications in this manual are subject to change without notice.

Important Safety Instructions

SAVE THESE INSTRUCTIONS


INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

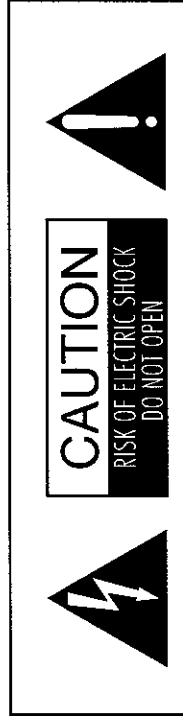

WARNING
TO REDUCE THE RISK OF
FIRE OR ELECTRIC
SHOCK, DO NOT EXPOSE
THIS PRODUCT TO RAIN
OR MOISTURE.

AVIS : RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

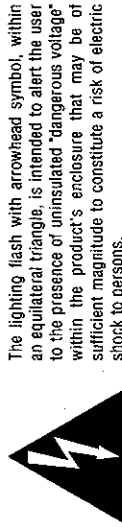

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Examples of Picture Symbols



denotes that care should be taken.
The example instructs the user to take care not to allow fingers to be trapped.



denotes a prohibited operation.
The example instructs that disassembly of the product is prohibited.



denotes an operation that should be carried out.
The example instructs the user to remove the power cord plug from the AC outlet.

Read all the instructions before using the product.

WARNING - When using electric products, basic precautions should always be followed, including the following.



WARNING

Indicates a potential hazard that could result in death or serious injury if the product is handled incorrectly.

Do not use this product near water - for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.



Do not touch the power plug with wet hands. There is a risk of electrical shock. Treat the power cord with care as well. Stepping on or tripping over it can break or short-circuit the wire inside.


Pulling the AC power cord itself may damage the cord, causing a fire, electric shock or short-circuit.



When disconnecting the AC power cord's plug, always hold the plug and pull it to remove it.



The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.




Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.



This product in combination with an amplifier and headphones or speakers, may be capable of producing sound level that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ear, you should consult an audiologist.



This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

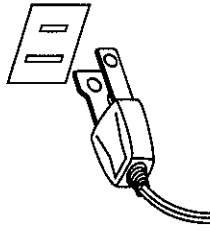

⚠ CAUTION

Indicates a potential hazard that could result in injury or damage to the product or other property if the product is handled incorrectly.

Do not use the product in the following areas.


- Areas, such as those near windows, where the product is exposed to direct sunlight
- Extremely hot areas, or close to heat sources such as radiators, heat registers, or other products that produce heat.
- Extremely cold areas, such as outside
- Extremely humid areas
- Areas where a large amount of sand or dust is present
- Areas where the product is exposed to excessive vibrations

Using the product in such areas may result in product breakdown.


Always turn the power off when the instrument is not in use. The product is not completely disconnected from the power supply even when the power switch is turned off. The power supply cord of the product should be unplugged from the outlet when left unused for a long period of time.



Before connecting cords, make sure that the power to this product and other devices is turned OFF. Failure to do so may cause breakdown of this product and other devices.

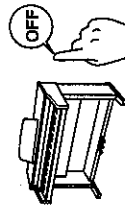


Do not stand on the product or exert excessive force. Doing so may cause the product to become deformed or fall over, resulting in breakdown or injury.

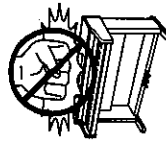


The product should be located so that its location or position does not interfere with its proper ventilation.

Keep the instrument away from electrical motors, neon signs, fluorescent light fixture, and other sources of electrical noises.

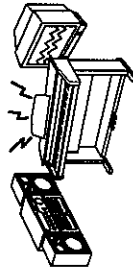


Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings. The product shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the product.

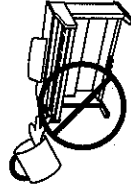

When connecting the AC power cord and other cords, take care not to get them tangled. Failure to do so may damage them, resulting in fire, electric shock or short-circuit.




Take care not to drop the product. Please note that the product is heavy and must be carried by more than one person. Dropping the product may result in breakdown.

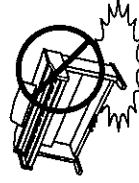

Do not lean against the keyboard. Doing so may cause the product to fall over, resulting in injury.



Do not wipe the product with benzene or thinner. Doing so may result in discoloration or deformation of the product.
When cleaning the product, put a soft cloth in lukewarm water, squeeze it well, then wipe the product.



To reduce the risk of injury, close supervision is necessary when a product is used near children.

This product should be used only with the stand that is provided by the manufacturer.

The product should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the product.
- The product has been exposed to rain.
- The product does not appear to operate normally or exhibits a marked change in performance.
- The product has been dropped, or the enclosure damaged.

Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power cord plug, and then contact the shop from which the product was purchased.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Instruction for AC power cord (U.K.)

Do not plug either terminal of the power cord to the ground of the AC outlet on the wall.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different electrical circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Radio Interference Regulations

This instrument complies with the limits for a class B digital apparatus, pursuant to the Radio Interference Regulations, C.R.C., c. 1374.

Introduction

Thank you for purchasing the Kawai Concert Performer (CP) Series Ensemble Digital Piano.

The CP Series piano has been designed to provide you with the ultimate musical experience, no matter your skill level. Featuring superbly realistic instrument tones and the most finely crafted keyboard in its class, the CP is a unique musical instrument resulting from the combination of Kawai's seventy-plus years experience in making acoustic pianos, along with cutting-edge digital music technologies.

With over 900 different instrument and drum sounds at your disposal, you will have the flexibility to perform any kind of music ranging from traditional to contemporary. The Auto-accompaniment Styles provide the enjoyment of playing rich, fully orchestrated music in hundreds of musical genres. Thanks to the Song Stylist feature, you will never have to worry about finding the best sounds and style to perform a particular song.

The Concert Performer incorporates many professional features, such as a 16-track Recorder, Microphone Input, and a 3.5-inch Floppy Disk Drive. For the non-player, Kawai's unique Concert Magic feature creates the thrill of being a performing musician simply by tapping any key on the keyboard.

Finally, the CP175 is the world's first ensemble piano with a CD-R drive, allowing anyone to make their own audio CD recordings right on the instrument. The Concert Performer offers tremendous opportunities for anyone who is interested in learning, playing, and listening to music. Please read this manual thoroughly and keep it handy as a reference so that you can get the most out of this incredible instrument.


We hope you enjoy every moment that you spend with your Concert Performer.

Table of Contents

<i>Parts and Names</i>	2
<i>Overview</i>	
<i>LCD Screen</i>	6
<i>Select Buttons</i>	6
<i>Dial</i>	8
<i>Basic Controls</i>	
<i>Selecting a Part to Play</i>	9
<i>Splitting the keyboard</i>	10
<i>Selecting Sounds</i>	11
<i>Mixer</i>	13
<i>Effects</i>	15
<i>Effect Types</i>	19
<i>Effect Priority Guidelines</i>	20
<i>Transpose and Octave Shift</i>	22
<i>Metronome</i>	24
<i>Piano Only</i>	25
<i>Using a Style</i>	
<i>Selecting and Playing a Style</i>	26
<i>Fill-In and Variation</i>	28
<i>Auto Accompaniment System</i>	28
<i>Bass Inversion</i>	29
<i>1-2 Play</i>	30
<i>Registration</i>	31
<i>Registration Groups</i>	31
<i>Style Lock</i>	35
<i>Song Stylist</i>	36
<i>Harmony</i>	40
<i>Recording a Song</i>	
<i>Easy Recording</i>	42
<i>Part Status</i>	44
<i>Saving the song</i>	45
<i>Erasing the song</i>	45
<i>Advanced Recording</i>	47
<i>Real-time Recording</i>	48
<i>Mixer</i>	49
<i>Track Settings</i>	51
<i>Loop Settings</i>	52
<i>Style Paste</i>	53

<i>Punch-In Recording</i>	54	<i>Power Up Settings</i>	143
<i>Step Recording</i>	57	<i>Soft Reset</i>	144
<i>Song Edit</i>	60	<i>Software Version</i>	145
<i>Bar Editing</i>	61	<i>Display Control</i>	146
<i>Event Edit</i>	74		
<i>Creating Your Own Styles</i>		<i>Mic Harmony and Effect</i>	
<i>Conductor</i>	76	<i>Mic Harmony</i>	148
<i>Making a New Style</i>	82	<i>About Mic Harmonies</i>	150
<i>Auto-accompaniment System</i>	86	<i>Mic Effect</i>	152
<i>Making a Style with Phrase Combination</i>	89	<i>Floppy Disk Operations</i>	
<i>Style Convert</i>	92	<i>Disk Menu</i>	156
<i>Editing Sounds</i>		<i>Saving Data to a Floppy Disk</i>	157
<i>Editing the Preset Effect Settings</i>	96	<i>Loading Data from a Floppy Disk</i>	160
<i>Making a User Sound</i>	98	<i>Erasing Data from a Floppy Disk</i>	163
		<i>Formatting a Floppy Disk</i>	164
<i>Playing Songs from a Floppy Disk</i>		<i>CD-R Operations (CP175 only)</i>	166
<i>About songs on Floppy Disk</i>	102	<i>Playing an audio CD</i>	167
<i>Selecting a Song from Disk</i>	103	<i>Recording onto a CD</i>	169
<i>Controlling Playback of a Song</i>	105	<i>Closing (Finalizing) Your CD</i>	171
<i>Playing with Concert Magic</i>		<i>Getting Assistance: Using Help and Demo</i>	
<i>Selecting a Concert Magic Song</i>	108	<i>Using the Help</i>	172
<i>Performing a Concert Magic Song</i>	109	<i>Using the Demonstrations</i>	174
<i>Concert Magic Song Arrangements</i>	113	<i>Playing Piano Music</i>	177
<i>Creating a Concert Magic Song</i>	114		
<i>System Menu</i>	116	<i>Appendices</i>	
<i>Tuning</i>	118	<i>Preset Sounds</i>	180
<i>Touch Curve</i>	119	<i>Preset Styles</i>	185
<i>System EQ</i>	122	<i>Song Stylists</i>	187
<i>Virtual Voicing</i>	124	<i>Concert Magic Songs</i>	192
<i>Resonance</i>	125	<i>Table of Chord Types</i>	196
<i>Concert Magic Sound</i>	126	<i>Example of Connection</i>	198
<i>Pedal Assign</i>	127	<i>USB</i>	200
<i>Fill-in Mode</i>	130	<i>Program Change Numbers</i>	202
<i>Solo Settings</i>	131	<i>Drum/SFX Kit Mapping</i>	208
<i>Video Out</i>	132	<i>MIDI Implementation Chart</i>	210
<i>Effect for Sound</i>	133	<i>Specifications</i>	211
<i>Temperament</i>	134		
<i>MIDI Menu</i>	138		

Parts and Names

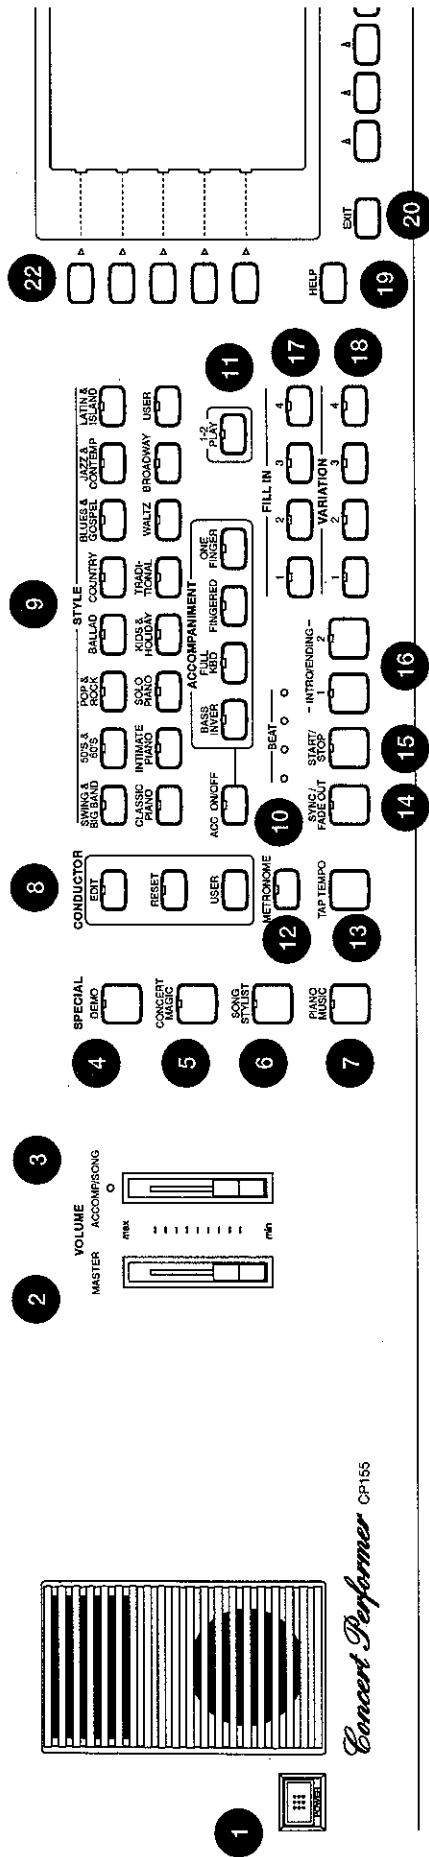

1. Power

Turns the piano on/off.

2. Master Volume Slider

This slider is used to adjust the overall volume level of the instrument.

3. Accomp/Song Volume Slider

This slider is used to adjust the volume level of the Auto Accompaniment Styles. Also used to adjust the volume level of a song played from the CP Recorder or directly from a floppy disk. This slider does not affect the Master Volume Slider setting.

4. Demo (page 174)

This button is used to select the built-in demo songs and function demos which explain important features of the CP piano.

5. Concert Magic (page 108)

This button is used to select the built-in Concert Magic songs.

6. Song Stylist (page 36)

This button is used to select the Song Stylist Registrations.

7. Piano Music (page 177)

This button is used to select the built-in piano music.

8. Style Conductor (page 76)

These buttons are used to modify or create your own Accompaniment Styles.

9. Style (page 26)

These buttons are used to select an Accompaniment Style to play along with.

10. Accompaniment (page 28)

These buttons are used to turn the Auto-Accompaniment function on/off, and select the Auto-Accompaniment mode.

11. 1-2 Play (page 30)

This button is used to automatically choose an appropriate sound and setup for the selected style.

12. Metronome (page 24)

This button is used to turn the Metronome on/off.

13. Tap (page 24, 26)


This button is used to tap in the desired tempo for a song or Style.

14. Sync/Fade out (page 27)

When active, the accompaniment style will start as soon as you play a note or chord on the keyboard. Press this button while a Style is playing to fade in or out of the Style.

15. Start/Stop (page 27)

This button is used to start and stop the accompaniment style.

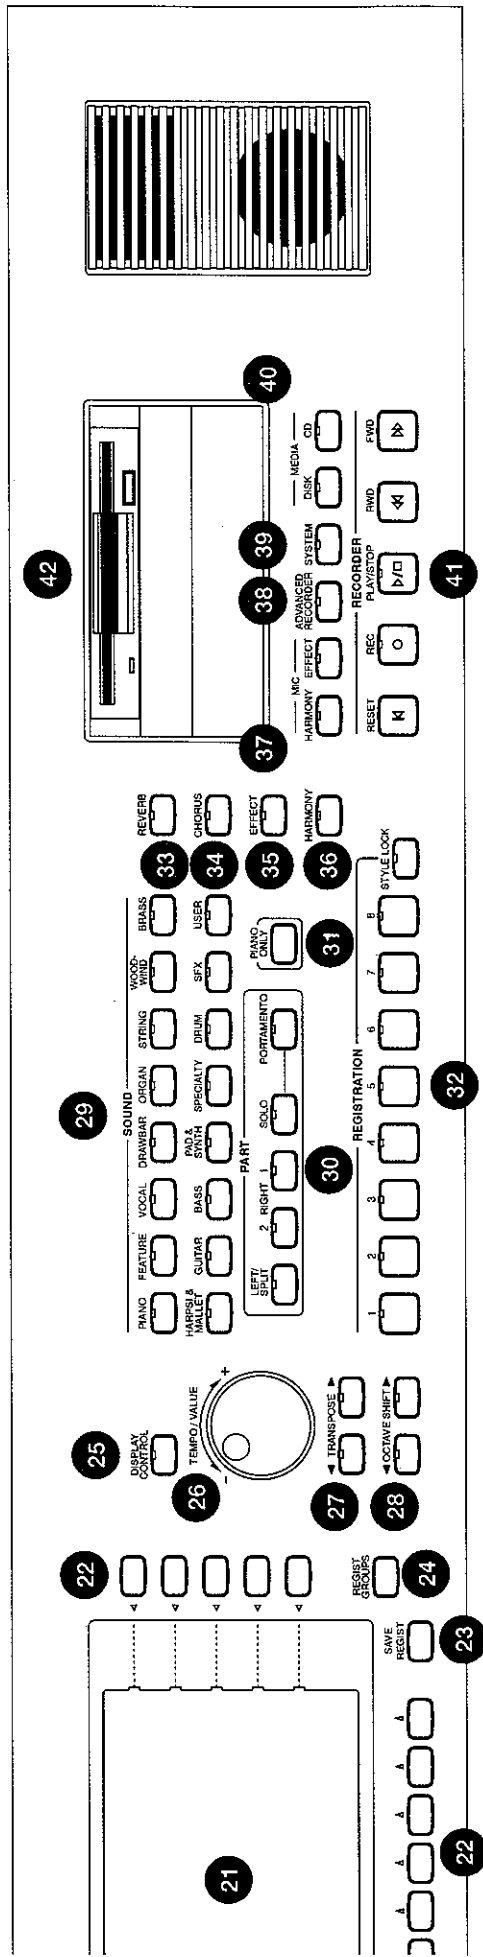

16. Intro/Ending (page 27)

These buttons are used to play an intro section that leads into the style. If you press this button while the style is playing an ending section will be played before stopping.

17. Fill-in (page 28)

These buttons are used to select one of the four short fill-in sections that embellish the style and lead into the different variation sections of the Style.

18. Variation (page 28)

These buttons are used to select one of the four variation sections within the chosen Style.

19. Help (page 172)

These buttons are used to access Help menus which contain explanations of the CP piano's features.

20. Exit

This button is used to back up to the next-higher screen level. Repeatedly pressing the Exit button from any screen on the CP will bring you back to the CP's main play screen.

21. LCD Screen

Displays information about the CP's current sound selections, settings, options, etc.

22. Select Buttons

These buttons are used to select items displayed on the LCD screen.

23. Save Regist

This button is used to save up to 160 of your own favorite panel settings.

24. Regist Groups (page 31)

This button is used to select one of the 20 groups of preset and user sound registrations.

25. Display Control (page 146)

This button is used to access and adjust settings for the LCD screen.

26. Tempo/Value Dial (page 8)

This dial is used to adjust tempo, scroll through different selections, and adjust data values for items on the LCD screen.

27. Transpose (page 22)

This button is used to change the overall pitch of the CP in half-note steps.

28. Octave Shift (page 22)

These buttons are used to change the overall pitch of the CP in octave steps.


29. Sound Selection (page 11)

These buttons are used to select the desired sound category. Use the SELECT buttons or the DIAL to select a sound within the category.

30. Part (page 9)

Selects which of the four parts (Left/Right, Right 1, Right 2, Solo) are active and ready to be played with the sounds assigned to them.

Pedals

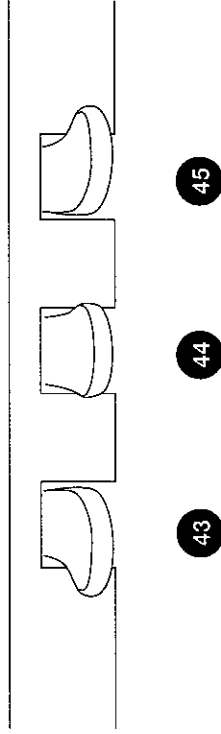

31. Piano Only (page 25)

This button is used to automatically assign the Concert Grand sound to the Right 1 part.

32. Registrations (page 31)

These buttons are used to recall one of the eight panel settings available in the currently selected Registration group.

33. Reverb (page 15)

This button turns on/off the Reverb. Press and hold the button to select the Reverb settings menu.

34. Chorus (page 16)

This button turns on/off the Chorus. Press and hold the button to select the Chorus settings menu.


35. Effects (page 18)

This button turns on/off the Effects. Press and hold the button to select the Effect settings menu.

36. Harmony (page 40)

This button turns on/off the Harmony for the instrument sounds. Press and hold the button to select the Harmony settings menu.

Front Terminals

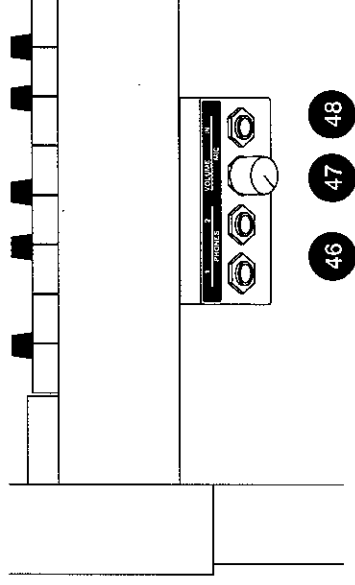

37. MIC Harmony/Effect (page 148)

This button turns on/off the MIC Harmony/Effect for the Microphone jack. Press and hold the button to select the MIC Harmony/Effect settings menu.

38. Advanced Recorder (page 47)

This button is used to access the Advanced Recorder functions.

39. System (page 116)

This button is used to access the system settings menu.

40. Media Disk/CD (page 102, 156, 166)

These buttons are used to access the Floppy Disk functions and CD-R Drive functions (CP175 only).

41. Recorder (page 42)

Used to record and play back a song.


42. Disk Drive

Reads and writes data to a standard 3.5" floppy disk..

43. Soft Pedal

Depressing this pedal softens the sound and reduces its volume. This pedal can also be assigned to control other functions. (See page 127)

Rear Terminals

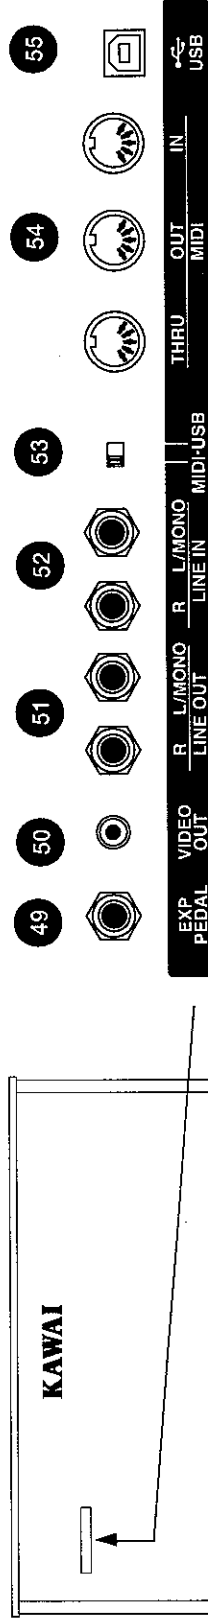

44. Sostenuto Pedal

Depressing this pedal after playing the keyboard and before releasing the keys sustains the sound of only the keys just played. This pedal can also be assigned to control other functions. (See page 127)

45. Sustain Pedal

Sustains the sound after lifting your hands from the keyboard. The sustain pedal is capable of responding to half pedaling.

46. Headphone Jacks

These jacks are used to connect up to two headphones to the CP piano.

47. Mic In Volume

This knob adjusts volume level of the microphone input.

48. Microphone Jack

This jack is used to connect a microphone or other comparable mic-level sound source.

49. EXP Pedal

This jack is used to connect an optional expression pedal.

50. Video Out

This jack is used to connect the CP to a TV set or external monitor display.

51. Line Out Jacks

These jacks are used to provide stereo output of the CP's sound to amplifiers, tape recorders or similar equipment. The audio signal coming through the LINE IN jacks is also routed to these jacks.

52. Line In Jacks

These jacks are used to connect stereo outputs from other audio equipment or electronic instruments to the CP's speakers. The audio signal coming through these jacks bypasses the CP's volume control.

53. MIDI-USB Switch

Switches between the MIDI jacks and USB jack.

54. MIDI Jacks

These jacks are used to connect external MIDI devices to the CP. Enabled only when the MIDI-USB switch is set to MIDI.

55. USB Jacks

This jack is used to connect a personal computer to the CP. Enabled only when the MIDI-USB switch is set to USB.

Overview

This manual provides you with all the information you will need in order to take full advantage of the Concert Performer's potential. Before you begin learning how to use the specific features, it is important to understand some of the basic ideas behind the instrument's design.

The Concert Performer has been designed to have an easy and intuitive user interface. However, the instrument has so many

features that it is simply impractical to have a dedicated button for every single one. As a result, many features and functions are selected by choosing them from lists, or "menus", that are presented to you on the CP's large display screen. Often times selecting an item from a menu may access another "sub-menu" of options specific to that item. This system of menus and sub-menus keeps everything logical and straightforward and becoming familiar with how to make your way through them is very easy.

LCD Screen

The LCD Screen is the window through which the Concert Performer communicates with you. The large display size allows many items to be clearly displayed at the same time, allowing for not only words but graphics to be shown as well.

Select Buttons

Most of the buttons on the front panel are used to directly select a function on the CP that you would like to work with. In most cases, the specific function name is printed on the front panel directly above the button. For example, there are buttons labeled 1-2 PLAY, FILL-IN, and so on. In this manual, references to these buttons are always printed in capital letters for clarity. Most of these buttons have an LED Indicator (small light) on them. This Indicator will be turned ON when a function is in use so that you can quickly see if that function is active.

There are 17 SELECT buttons surrounding the LCD screen that do not have labels printed next to them because they do not have predetermined functions. Instead, they are used to select whatever items are currently displayed next to them on the LCD screen. For example, a SELECT button might be used to select an instrument sound on one screen, while on another screen the same SELECT button might serve to activate a feature related to Floppy Disk or CD-R Drive operation.

To keep things simple, this manual will refer to the five SELECT buttons along the left side of the LCD screen as **L1-L5**. Likewise, the five SELECT buttons along the right side of the screen will be referred to as **R1-R5**. The seven SELECT buttons along the bottom of the screen, which are also known as **function buttons**, will be referred to as **F1-F7**.

In some cases when you see an item displayed on the screen and press the L or R button next to it, that item on the screen will become highlighted (shown in reverse color) to indicate you have selected that item. Sometimes a submenu screen relating to that item will be displayed and present you with further options.

When you press one of the F buttons, the corresponding function on the LCD screen will be highlighted to indicate that it has been selected.

L1

Selects Style. Use the F2,F3 buttons, Style buttons, or the Dial to change the active Style.

L2

Selects Tempo. Use the Dial or the TAP TEMPO button to change the Tempo

L3

Selects the LEFT Part. Use the F6, F7buttons, Sound buttons, or the Dial to change the Sound.

No functions are assigned to the L4 and L5 buttons on this screen.

R1

Selects the SOLO Part. Use the F6, F7 buttons, Sound buttons, or the Dial to change the Sound.

R2

Selects the RIGHT1 Part. Use the F6, F7 buttons, Sound buttons, or the Dial to change the Sound.

R3

Selects the RIGHT2 Part. Use the F6, F7buttons, Sound buttons, or the Dial to change the Sound.

No functions are assigned to the R4 and R5 buttons on this screen.


"RIGHT1" is highlighted to indicate that this Part is now selected.

F1 Takes you to the MIXER settings screen.

F2, F3 Selects a Style.

F4, F5 Adjusts the volume level for the Part currently selected.

F6, F7 Selects a sound for the selected Part. "Sound" is highlighted to indicate this graphic button is active.

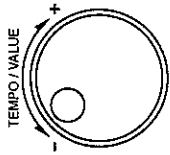

Dial

The Dial is used to change data values and scroll through options that are displayed on the LCD screen.

When you turn the Dial, you will notice that whatever item on the LCD screen is currently selected (highlighted) will be affected. Or in some cases when the screen presents you with a list of choices, turning the Dial will allow you to quickly scroll through the list until you arrive at your choice. It can also be used instead of the L, R, and F buttons as another way of selecting or changing an item or value on the LCD screen.

Basic Controls

This chapter discusses the basic operations that are used to play the Concert Performer, such as sound selection, Part configuration and effect settings.

Selecting a Part to Play


When the CP's main play screen is displayed (For example, when the CP is first turned on), you are presented with four sound Parts that can be played from the keyboard. These four Parts are named LEFT/SPLIT, RIGHT 1, RIGHT 2, and SOLO, and each one has an instrument sound assigned to it. You can selectively turn on/off any combination of these four Parts, allowing you to have up to four different sounds at the same time across the keyboard.

Sounds assigned to Parts RIGHT 1, RIGHT 2 and SOLO will be layered on top of each other when all three Parts are active at the same time. Activating the LEFT/SPLIT Part automatically splits the keyboard so that only the sound that is assigned to the LEFT/SPLIT Part is heard when you play in the lower octave keys. Each Part has a dedicated button on the front panel that selects and turns on/off that Part. You can also select a Part by pressing the appropriate L or R button.

Selecting a Part is easy:

- 1) Press the **PART** button for the Part you wish to activate. The **PART** button LED will light.
- 2) Press the **PART** button again to turn that Part off.

- If the LCD screen is currently showing the main play screen, you can tell which Parts are active by looking at the name of the sound assigned to it. If the name of a sound is in large typeface, then the Part it is assigned to is active. If the sound name is displayed in small typeface, then the Part is not active.

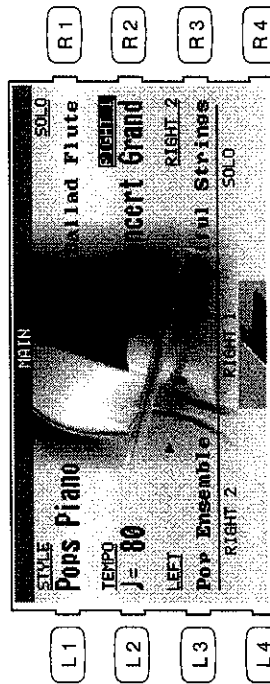

This example indicates:

RIGHT1 is currently active


SOLO, RIGHT2, LEFT are inactive.

Splitting the keyboard.

When the LEFT/SPLIT Part is activated, the CP automatically splits the keyboard and only the sound assigned to the LEFT/SPLIT Part will be heard when you play below a specified key (split point) on the keyboard. The default split point is between F2 and F#2 but you can freely change the split point to any key on the keyboard.

To change the split point:

- 1) Press the LEFT/SPLIT button to activate the LEFT/SPLIT Part. The LEFT/SPLIT button LED will light and the LCD screen will display a diagram of the CP's 88 note keyboard.
 - 2) Press the LEFT/SPLIT button again, and while holding it down, press the desired key on the keyboard that you want to serve as the split point. The key you press will become the lowest note the Right hand Parts will play (RIGHT1, RIGHT2, and SOLO). The LEFT/SPLIT sound will be heard when keys below the split point are played.
- You may also use the L4 and R4 buttons to move the split point. On the LCD screen the split point marker will move across the 88 note keyboard diagram as you press these buttons.

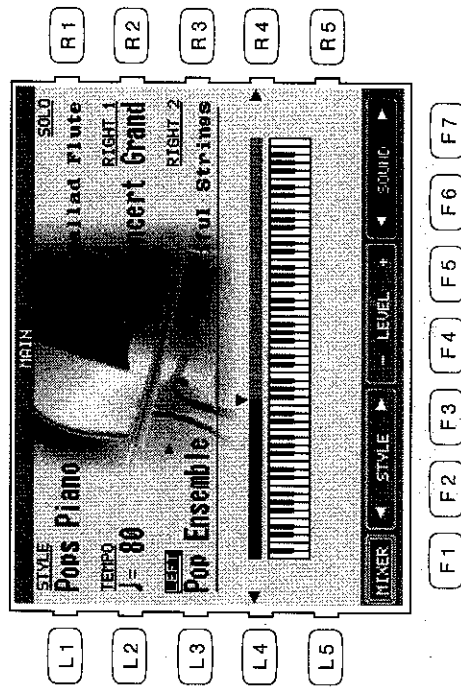

L4 Lowers the split point.

R4 Raises the split point.

- Moving the split point completely to the LEFT end of the keyboard will allow the LEFT/SPLIT Part to function as a layer with the three right hand Parts. In this manner you can create a four-part layer across the entire keyboard.

Portamento for the Solo Part

The Solo Part is monophonic (only plays one note at a time) regardless of which sound is assigned to it. You can use Portamento on this Part. Portamento is a gradual slide in pitch from one note to the next, and is useful for adding very expressive qualities to many instruments.

To use Portamento:

- 1) Press the **PORTAMENTO** button. The **PORTAMENTO** button **LED** will light.
- 2) Press the button again to turn Portamento off.

You can adjust the Portamento Time, which determines how quickly the pitch will slide from one note to the next. You can also set the note priority for Portamento. (See "Solo Settings" on page 131).


Selecting Sounds

The Concert Performer has over 900 instrument and drum sounds available from the front panel. You can freely assign any of these sounds to the four Parts. Remember that there is always a sound assigned to each of the Parts, even if some of the Parts are not currently active.

The sounds span a tremendous variety of instruments, ranging from traditional acoustic sounds to modern electronic tones. To help you quickly find the sound that you want, the sounds have been organized into 15 categories. Each category has a dedicated Sound Selection button on the front panel.


To select a Sound:

- 1) In the main play screen, select the Part to which you wish to assign a new sound using the **L3**, or **R1-R3** buttons. The selected Part will become highlighted.

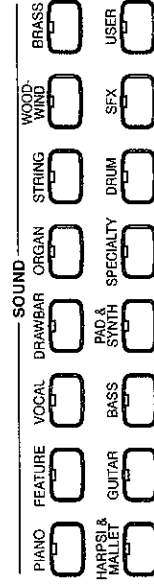

The **USER** button lets you select any sounds that may be stored in the User Sound category.

- 2) Press the **SOUND** button for the sound category that you are interested in. The first page of sounds in that category will be displayed. There are at least three pages of sounds in each category (except User). Use the F1-6 buttons to view the other pages in a category.
- 3) Select a sound by pressing the L or R button that is next to the displayed name.
- 4) Press the F1-F6 buttons to show the Sounds on the other pages for the same category.
- 5) You can also use the Dial to scroll through all of the categories and sounds one by one.

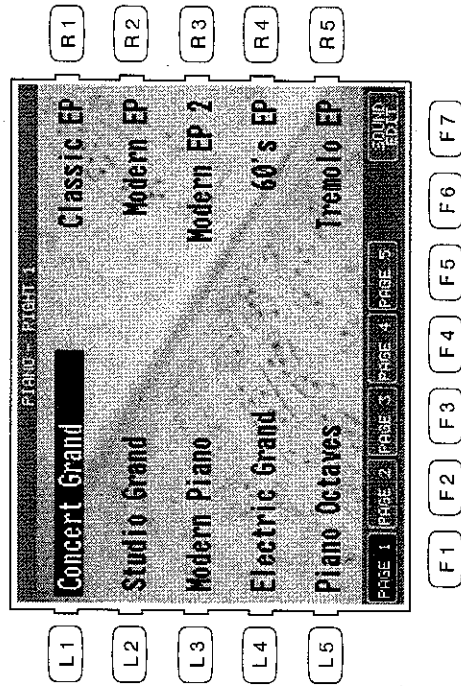

Use the L or R buttons to select your desired Sound.

F1-F6 Selects the different pages of Sounds within a category.


F7 Takes you to the Sound Edit menu. (See "Editing Sounds" on page 96.)

Mixer

This Mixer screen allows you to change the volume, panning, reverb and chorus levels, as well as turn the effect on/off for each Part.

To use the Mixer:

- 1) Press the MIXER button (F1) while on the main play screen.
- 2) Use the F2-F7 buttons to select which Part you wish to adjust.
- 3) Use the L and R buttons to select a setting to change.
- 4) Use the Dial to change the value.

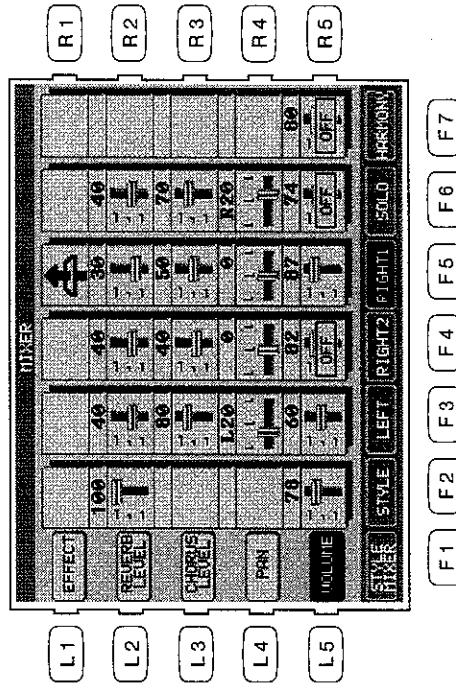

- L1 Selects the Effect On and Off.
- L2 Selects reverb level.
- L3 Selects chorus level.
- L4 Selects Panning.
- L5 Selects volume level.

After you make your desired selection, use the Dial to change the value.


- F1 Takes you to the next page of the Mixer.
- F2-F6 Selects the part to change.
- F7 Adjusts the volume level for the Harmony.

- Volume level can be also adjusted from the main play screen, using the VOLUME buttons (F4, F5).

The Mixer not only lets you set the overall volume level for the Style, but set individual volume levels for the 6 Sections within a Style.

To adjust the individual Section level:

- 1) On the Mixer screen, press the **STYLE MIXER** button (F1). The **Style Mixer** screen will be selected.
- 2) Use the F2-F7 buttons to choose a Section, then use the Dial to change the volume.
- 3) Press the **BACK** button (F1) to go back the previous Mixer screen, or press the **EXIT** button to go back to the main play screen.

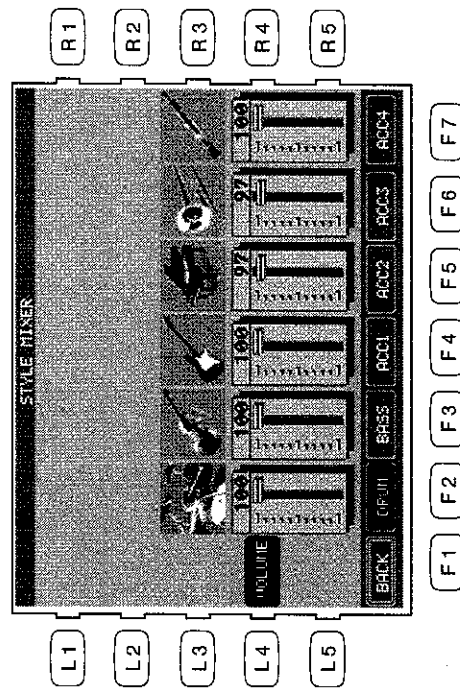

- F1 Takes you to the previous Mixer screen.
 F2-F7 Selects the Section that you wish to change.

Effects

You might have noticed that when you select some of the sounds, the LED indicator for the REVERB, CHORUS, or EFFECTS button is turned on. The reason for this is some of the sounds are set up with one or more of these effects on as part of their initial setting.



Adding an effect to the sound enhances tonal quality and improves acoustical realism. The CP piano is provided with three separate groups of effects. The first is REVERB, the second is CHORUS, and third group EFFECTS contains other useful effects such as Delay, Phaser, Rotary Speaker etc. There is a dedicated button on the front panel for each Effects group and each of the three Effect groups can be turned on/off separately or used in combination for each part. The Concert Performer has a selection of 27 different Reverb, Chorus, and Effect types that can be used to enhance or even dramatically alter the instrument sounds. Each of the over 900 instrument and drum sounds has already been assigned a REVERB and CHORUS setting and an additional EFFECT that suits that particular type of instrument. For example, a moderate Delay effect is used on the Church Organ to recreate the sense of being in a large church, and a Rotary speaker effect is used on the Drawbar organ to give it an authentic, vintage feel.

If you wish, you can change any of these effect settings to suit your tastes separately for each sound save them as the new Preset effect settings for that Sound (See Sound Edit on page 96). In addition, by setting the Effect For Sound function in the System to "Panel" the CP will ignore the preset effects settings for each Sound (see Effect For Sound on page 133). (The CP piano can also remember your Effect settings as part of a Registration. See Registration on page 31.)


To add Reverb :

- 1) Press the REVERB button. The REVERB button LED will light.
- 2) If you wish to edit the settings, hold down the REVERB button for a moment until the Reverb Settings screen is displayed.
- 3) Use the F3-F7 buttons to select the Part you want to edit.
- 4) Use the L2-L4 buttons to select the specific setting that you wish to change.
- 5) Use the Dial to change the value.
- 6) Press the EXIT button to leave the Reverb Settings menu.
- 7) If you wish to turn the reverb effect off, press the REVERB button again.

L2 Selects the Reverb type. Use the Dial to choose one of the 7 Reverb types.

L3 Selects Reverb on/off. Use the Dial to turn the Reverb on/off for the selected Part.

L4 Selects Reverb depth. Use the Dial to change the Reverb depth for the selected Part.

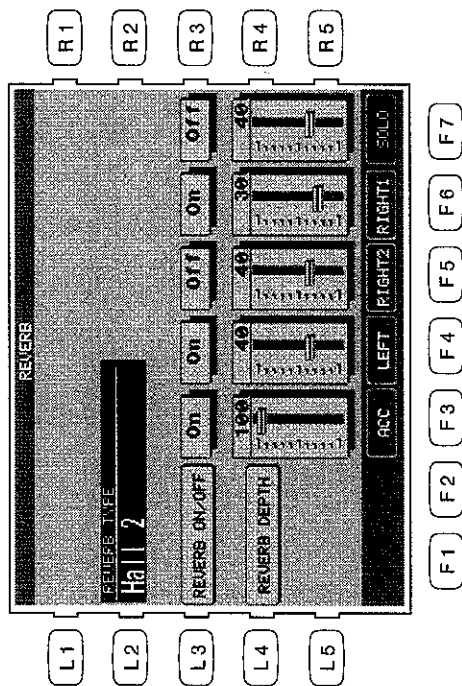

F3-F6 Selects the Part you want to change. Repeatedly pressing the appropriate button also turns the Reverb on/off for that Part.

Type of Reverb

Hall 1, Hall 2

Simulates the ambiance of a concert hall or theater.

Stage 1, Stage 2

Simulates the ambiance of a small hall or live house.

Room 1, Room 2

Simulates the ambiance of a living room or small rehearsal room.

Plate


Simulates the sound of a metallic plate reverb.

- The LED Indicator on the REVERB button will be lit whenever Reverb is turned on for the any Part except ACC (regardless of each part's Effect Priority). See "Effect Priority Guidelines" later in this chapter for an explanation of Effect Priority.

To add Chorus:

- 1) Press the CHORUS button. The CHORUS button LED will light.
- 2) If you wish to edit the settings, hold down the CHORUS button for a moment until the Chorus Settings screen is displayed.
- 3) Use the F3-F6 buttons to select the Part you want to edit
- 4) Use the L2-L4 buttons to select the specific setting that you wish to change.

- 5) Turn the Dial to change the value.
- 6) Press the EXIT button to leave the Chorus Settings menu.
- 7) If you wish to turn the chorus off, press the CHORUS button again.

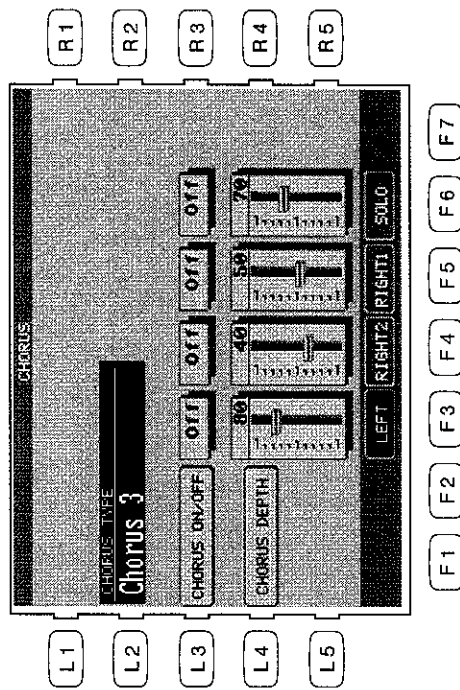


- L2 Selects the Chorus type. Use the Dial to choose one of the 4 Chorus types.
- L3 Selects Chorus on/off. Use the Dial to turn the Chorus on/off for the selected Part.
- L4 Selects Chorus depth. Use the Dial to change the Chorus depth for the selected Part.

F3–F6 Selects the Part you want to change. Repeatedly pressing the appropriate button also turns the Chorus on/off for that Part.

- The Indicator light on the CHORUS button will be lit only when Chorus is turned on for the active “Priority Part”. See “Effect Priority Guidelines” later in this chapter for an explanation of this.
- You can select from four chorus types when in the Chorus Settings menu. There is a fifth chorus type which is assigned as an Effect from the Effect Settings menu. In this way, you can actually have two chorus effects active if so desired.

To add an Effect:

- 1) Press the EFFECT button. The EFFECT button LED will light.
- 2) If you wish to edit the settings, hold down the button for a moment until the Effect Settings screen is displayed.
- 3) Use the F3-F6 button to turn ON/OFF the Effect for each part.
- 4) Use the L2-L5, R3 buttons to select the specific setting that you wish to change.
- 5) Turn the Dial to change the value.
- 6) Press the EXIT button to leave the Effect Settings screen.
- 7) If you wish to turn the Effect off, push the EFFECTS button again.

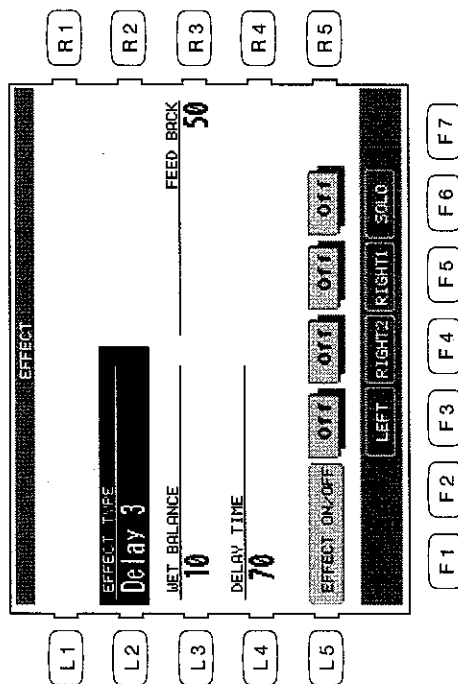

- L2 Selects Effect type. Use the Dial to choose one of the 16 Effect types.
- L3 Selects Wet Balance. Use the Dial to change the value.
- L4 Selects a different editable setting for each Effect type. Use the Dial to change the value.

R3 Selects a different editable setting for each Effect type. Use the Dial to change the value.

F3-F6 Turns the Effect on/off for each Part.

Effect Types

Chorus	Simulates the rich character of a vocal choir or string ensemble, by layering a slightly detuned version of the sound over the original to enrich it.
Flanger	Creates a shifting comb-filter, which adds motion and a “hollow” tone to the sound.
Celeste	A three-phase chorus without modulation.
Ensemble	A three-phase chorus with a slight modulation to each phase.
Delay 1-3	Adds echoes to the sound. The three types differ in the length of time between the echoes.
Auto Pan	Moves the sound left and right across the stereo field at a variable rate.
Tremolo	Modulates the volume of the sound. This is a vibrato type effect.
Tremulant	A combination of Tremolo and Vibrato. It simulates the tremulant pipes of a church organ.
Phaser	Creates a phase change, adding motion to the sound.
Rotary 1-2	This effect simulates the sound of the Rotary Speaker cabinet commonly used with electric organs. Rotary 2 adds distortion. The soft pedal is used to change the speed of the rotor between SLOW and FAST.
Auto Wah	Sweeps a tone filter up and down at the beginning of a note, recreating the popular vintage wah wah pedal sound.
Enhancer	Emphasizes high frequencies to make a sound more easily discernible in a mix.
Distortion	Adds frequencies that were not present in the original sound, resulting in a “fuzzy” or warmer tone.

Effect Priority Guidelines

Reverb and Chorus are global effects. In other words, all of the Parts and the Accompaniment Style must share the same Reverb and Chorus type. However each of these Parts can have a different amount of Reverb and Chorus applied to them. In addition Reverb and Chorus can be independently turned on/off for each part. However, since the CP's EFFECT section can only have one Effect turned on at a time (in addition to the REVERB and CHORUS), what happens if you have two (or more) Parts active, with entirely different sounds, each with a different Effect setting? In these cases, the CP's Effects section can only use the Effect settings for one of the Parts. The EFFECT section chooses which Effect settings to use based upon a predetermined priority order for each of the Parts. The Priority order is SOLO > RIGHT 1 > RIGHT 2 > LEFT/SPLIT. The preset effect settings for the Priority Part will be used and the other Parts will either share these settings or may have their Effects automatically turned off.

This “**Priority Part**” depends on the current situation. If you only have one Part active, regardless of which Part it is, the preset effect settings for that sound will be used. If you have two or more Parts active, then the CP will treat one of them as the Priority Part, and ignore the settings of the other(s).

If the the Effect For Sound is set to “Panel” in the System then the Preset effect settings for each Sound will be ignored and the Part Priority will be ignored. (See Effect For Sound on page 131).

Here are some guidelines for Effect Priority:

- Priority is given to the Parts in the following order: SOLO>RIGHT1>RIGHT2>LEFT. This means that anytime the SOLO Part is active, its Effect settings will be used, not only for its sound but for any sound in any other Part, that you want to add effects to. Likewise, the only time an active LEFT Part's settings will be applied is if the other 3 Parts are inactive.
- Unless you change them, the Effect settings will only change in response to a change in the Priority Part being activated/deactivated, or a new sound is assigned to an active Priority Part. In the latter case, the new Effect settings will reflect the Preset effect settings for the new sound.
- When the Effect settings change for the Priority Part, the Effects will be automatically turned off for the other Parts. (This is so that your Flute sound on RIGHT2 doesn't suddenly get effected by the Distortion settings of the Electric Guitar that you've just assigned to the SOLO Part!)
- You can, however, turn the effect on for any Part by adjusting the Effect On/Off option in the display for that Part.

- The LED Indicator on the EFFECT and CHORUS buttons will be on only when the active Priority Part has these effects turned on.

Example

Assume that your CP is set up according to the following chart:

	SOLO	RIGHT1	RIGHT 2	LEFT	INDICATOR
Part	Inactive	Active	Inactive	Active	
Effect	On	On	Off	On	On

If you then select a different sound for RIGHT1, the Effect setting for the SOLO, RIGHT2, LEFT will be turned off automatically. This is because RIGHT1 is the Priority Part (note that the SOLO Part is NOT the Priority Part because it was inactive).

The chart would now look like this:

	SOLO	RIGHT1	RIGHT 2	LEFT	INDICATOR
Part	Inactive	Active	Inactive	Active	
Effect	Off	On	Off	Off	On

Even if you now assign a new sound to the SOLO Part, the Effect settings for the other Parts won't change, because SOLO is still inactive, so therefore would not have priority.

Once you make the SOLO Part active, however, it would now be considered the Priority Part. The Effect settings for the other Parts will again be turned off. The Indicator light on the EFFECT button will now reflect the Effect status for the sound assigned to SOLO.

	SOLO	RIGHT1	RIGHT 2	LEFT	INDICATOR
Part	Active	Active	Inactive	Active	
Effect	Off	Off	Off	Off	Off

At this point, if the Effect that has been called up along with the SOLO sound is one that you'd like to use for the other Parts, simply select Effect On in the LCD display for those Parts.

Transpose and Octave Shift

Transpose raises or lowers the CP's pitch in half-step increments. Octave Shift does the same but in octave increments.

Transpose can be especially useful when you have learned a song in one key and have to play it in another key. The transpose feature allows you to play the song in the original key, but hear it in another key. You can transpose the Concert Magic songs, the Accompaniment Styles, any songs played back by the Easy/Advanced Recorder and any of the over 900 instrument and drum sounds available in the CP. Songs recorded on the CD-R Drive cannot be transposed once they have been recorded.


Octave shift can be very useful when you are playing multiple sounds across the keyboard. You may want to use the octave shift to adjust a bass sound assigned to the LEFT/SPLIT Part to play in the proper pitch range, or to set one sound in a layer to play in a different octave so that it mixes well with other sounds in the layer. Octave shift is only available for the four Parts: LEFT/SPLIT, RIGHT1, RIGHT 2, and SOLO.


To Transpose:

- 1) Press either the ◀ or ▶ TRANSPOSE buttons. The LCD screen shows you a number telling you how many half steps up or down you have transposed the piano. -5, for example, represents a transposition that is 5 half steps lower.
- 2) To cancel the Transpose setting, press both the ◀ and ▶ buttons at the same time. The transpose amount will disappear from the LCD screen, indicating that the CP is now back to its original setting.

To use the Octave Shift:

- 1) Select the Part that you would like to apply the shift to.
- 2) Press either the ◀ or ▶ OCTAVE SHIFT buttons. The number of shifted octaves (up or down) will be displayed with an "◀" in the LCD screen.
- 3) To cancel the octave shift, press both the ◀ and ▶ buttons at the same time. The symbols will disappear from the screen, indicating that the selected Part is back to its normal octave range.

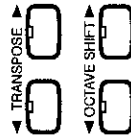

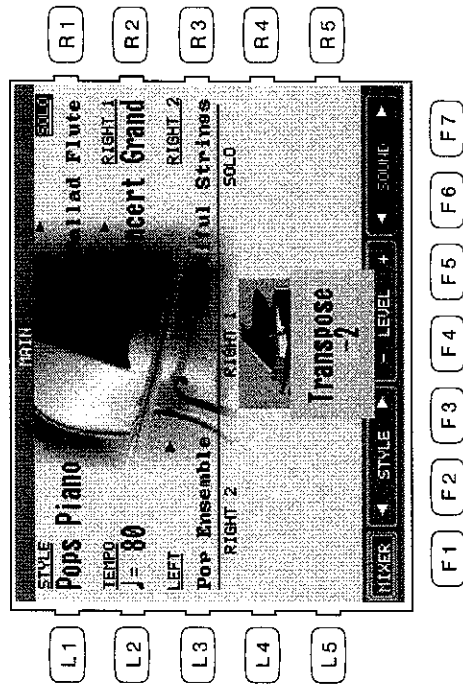

L3 Selects the LEFT Part to be Transposed or Octave Shifted.

R1 Selects the SOLO Part to be Transposed or Octave Shifted.

R2 Selects the RIGHT1 Part to be Transposed or Octave Shifted.

R3 Selects the RIGHT2 Part to be Transposed or Octave Shifted.

The number of octaves shifted is represented by the number of triangles shown above the sound name for each Part.

Transpose amount is shown at the bottom of the screen.

- The Octave Shift has a range of four octaves in each direction. However, some on board sounds may have a limited range in which they play properly. If you shift too far out of this range, the instrument may sound strange or may not play at all. This has no affect on the CP's proper function though, and you should feel encouraged to use this feature as a means of getting interesting tonal variations out of the preset Sounds.


Metronome

Rhythm is one of the most important elements when learning music. It is important to practice playing the piano at the correct tempo and with a steady rhythm. The CP piano's metronome is a tool that helps you to achieve this by providing a steady beat for you play along with.

To use the Metronome:



- 1) Press the **METRONOME** button. The CP piano will start counting with an audible steady beat. You will see **Volume level**, **Beat** (time signature), as well as the **Metronome icon** appear in the LCD screen next to the **Tempo** value.
- 2) Use the **BEAT**, **VOLUME**, or **TEMPO** buttons (**F2-F7**) to select the setting you wish to change.
- 3) Use the **F** buttons (**F2-F7**) or the **Dial** to change the values.
You can also adjust the tempo by tapping on the **TAP TEMPO** button. Simply tap on the button with your finger three or more times at the desired tempo, and the CP will automatically translate that into a tempo value on the screen!
- 4) To stop the metronome, press the **METRONOME** button again.

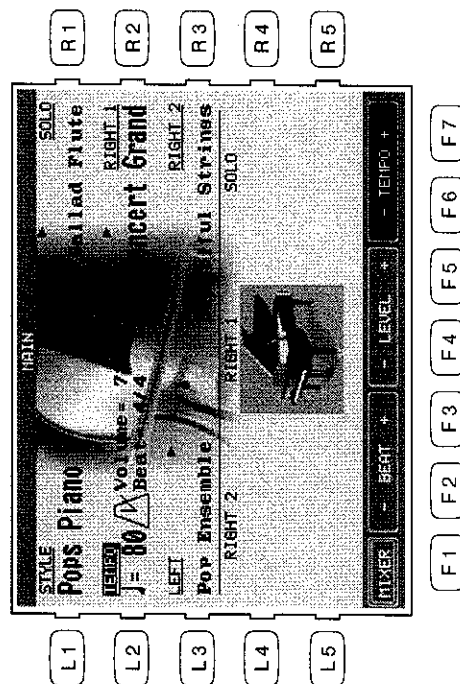

- F1 Takes you to the Mixer menu.*
F2, F3 Changes the Beat. Choose from 1/4, 2/4, 3/4, 4/4, 5/4, 6/8, 7/8, 9/8 and 12/8 time signatures.
F4, F5 Adjusts the volume level.
F6, F7 Adjusts the tempo.

Piano Only

The Piano Only button provides a way to quickly set the Concert Performer up to play the Concert Grand piano sound. Pressing the Piano Only button immediately turns off all Parts except the Right 1 part and sets the Right 1 sound to Concert Grand.



The Piano Only button also turns off all auto-accompaniment functions and stops the Easy/Advanced Recorder. Additionally, pressing the Piano Only button will cause the CP to exit any function or editing screen (except for Concert Magic) and immediately return to the Main Screen.

When you are using Concert Magic, pressing the Piano Only button will change the Concert Magic song's preset sounds to Concert Grand piano.

- You can also use the Piano Only button as a "panic button" to immediately stop any unintended accompaniment style or recording, or to quickly exit any confusing situation and return to a familiar piano sound.

To use Piano Only:

Press the PIANO ONLY button. The Main Screen is displayed and the Concert Grand sound is assigned to RIGHT1.

Using a Style

The Concert Performer contains 220 built-in Styles for you to play along with, covering a wide variety of musical genres. You can choose from a simple drum or percussion accompaniment or add in a fully orchestrated arrangement. In addition to the Full Styles which provide a full musical arrangement including Drums, Bass, and other accompanying instruments, there are Intimate Styles with simpler more "Intimate" arrangements. There is also a selection of


Solo Piano Styles if you just want to play along with a piano accompaniment. If the on board variety of styles is not enough, or if you have creative ideas of your own, the CP contains other features such as Style Maker and Conductor to help you edit or create your own custom Styles. These features are explained in the section of this manual "Creating Your Own Styles", page 76.

Selecting and Playing a Style

The Styles are organized into 15 categories, each with a dedicated STYLE SELECT button on the front panel.

To select a Style:

- 1) Press the STYLE button for the category of your choice. The LCD screen will display the the first Style Selection page for that category.
- 2) Press the L or R button next to the on-screen name of the Style you wish to select.
- 3) Each Style category has two pages of styles. If you don't see your desired Style on the currently displayed page, you can use the F1- F2 buttons to select the other page. Press another STYLE button to jump to another category, or turn the Dial to scroll through all the Styles one by one.
- 4) If you wish play the selected Style, press either the START/STOP button to start the Style playing immediately, or the INTRO/ENDING button to start the Style with an Intro pattern. You can also press the SYNC/FADE OUT button before starting a Style or pressing the INTRO/END buttons. When the SYNCFADE OUT button is pressed, the Style will not start until you play a note or chord on the keyboard.
- 5) To adjust the tempo of the Style, select Tempo on the main play screen and use the Dial to change the Tempo. You can also use the TAP TEMPO button. Tap the button three or more times at the desired tempo, and the CP will automatically translate your taps into an on-screen Tempo value.
- 6) To stop the Style, press either, the START/STOP button to stop the Style immediately, or the INTRO/ENDING button to stop with an ending pattern. You can also press the SYNC/FADE OUT button and have the Style fade out gradually.

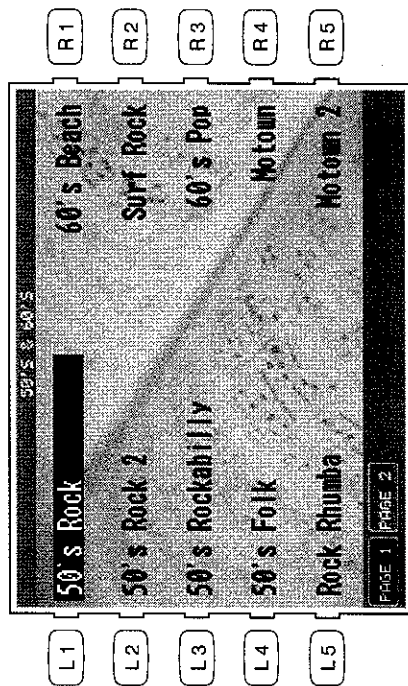

Use the L or R buttons to select your desired Style.



F1, F2 Select the different pages within a Style category.



When this button is pressed before starting a Style or before pressing the INTRO/ENDING button, the Style will not start until you play a note or chord on the keyboard. When this button is pressed while the Style is running the Style will gradually fade out. When this button is pressed during a fade out the Style will gradually fade back in and you may resume playing the Style. You can press the SYNC/FADE OUT button at any time while any of the patterns (Intro, Variation, Ending) in the Style are running to fade in or out of the Style.



Starts or stops the Style immediately.



When one of these buttons is pressed to start a Style the selected Intro pattern will be played before the selected Variation pattern plays. There are both major and minor versions for each Intro. The Auto-accompaniment System will decide which Intro to use based upon the first Chord you play (major or minor). The LCD screen will display a countdown in bars to show how many bars you have until the the variation begins playing. When one of these buttons is pressed while the Style is running the selected Ending pattern will be played before the Style stops. There are major and minor versions for each Ending.

- When you are in the main play screen, you can select a Style by just using the Dial. Press the L1 button or F2-F3 (STYLE) and "Style" will become highlighted. Use the Dial or press the F2-F3 button to select another Style.

- The CP remembers the last Style selection that you made within each category while the power is on. When you press a STYLE button, the CP will automatically select the Style previously chosen in the same category.
- When you switch from one Style to another while it is running, the new Style will wait until the beginning of the next measure before it begins to play.

Fill-In and Variation

Each Style is made of four Variation patterns and four Fill-in patterns.

Fill-ins are short patterns that temporarily embellish the Style. Fill-ins can add excitement and rhythmic change to the Style and be used as a musical lead in between the Variations. To use a Fill-in, just press one of the FILL IN buttons. You will hear the fill-in begin playing immediately from a musically appropriate spot.


Fill-ins can also be used as a short intro. First press the SYNC/FADE OUT button then press one of the FILL-IN buttons to select a desired Fill-in. Press any key on the keyboard to start the style. After the Fill-in plays, the selected Variation will play.

To select a Variation, press one of the four VARIATION buttons to select the desired Variation. The Selected VARIATION button LED will light.

- You can set the CP to automatically play a Fill-in anytime you press a VARIATION button as you switch from one Variation to another. Select your preferred option in the Fill-in mode. (See page 130)

Auto Accompaniment System

The Auto-accompaniment System (ACC) is a powerful feature that determines how the Styles will interact with you as you play. The ACC System analyzes your playing and adjusts the notes the Style plays to follow the Chords that you play on the keyboard. The ACC System is capable of recognizing single finger as well as more complex chord voicings. The CP recognizes 61 chord types as well as most of their inversions. (See page 196 for a chord table.) There are three modes of key recognition—One Finger, Fingered, and Full Keyboard. Your choice of which mode to use depends on your skill level and the selected musical style.

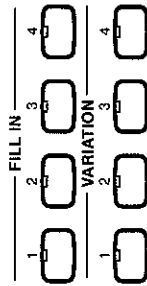

Fingered

The player must play at least three notes of a chord below the split point (LEFT/SPLIT Part) before the ACC System will recognize the chord type. (See page 196 for chord table.)

One Finger

Uses a simplified chord method that allows beginners to specify a chord type by playing only one or two notes below the split point. The types of chords that can be recognized in this manner are limited to Major, Minor, 7th and Major 7th. While the player can trigger basic chords with as little as one finger, the ACC System will recognize more complex chord types if you play them, even you are in the One Finger mode.

Full Keyboard

The player must play at least three notes of a chord anywhere across the 88 keys before the ACC System will recognize the chord type. This mode is similar to Fingered however, Full Keyboard recognizes chord types from three or more notes played anywhere across the 88 keys not just below the split point.

Bass Inversion

When Bass Inversion is on, the Bass Section of the Style will follow the lowest note of the chord voicing played on the keyboard. With Bass Inversion on it is possible to specify a chord over a certain bass note by the chord voicing you play. For example, a C chord over a G bass, or a Bb7 chord over a C Bass. Bass Inversion will work with all three key recognition modes but when in One Finger mode, you play at least two notes of a chord for Bass Inversion to function.

To turn Auto-accompaniment (ACC) on:

- 1) Select a Style that you would like to play.
- 2) Press one of the **ACCOMPANIMENT** buttons to select the **Key Recognition** mode. The selected Key recognition mode will be displayed at the bottom of the LCD screen if you're on the main play screen.
- 3) Press the **BASS INVERSION** button if you would like to turn it on.
- 4) Press the **ACC ON/OFF** button to activate the Auto-accompaniment System (ACC).
- 5) Press the **START/STOP** button to start the Style, and play some chords in the **LEFT/SPLIT** Part. You will hear the Style start and also change keys and chord types as you play different chords.
- 6) If you want to cancel or stop the Auto-accompaniment, press the **ACC ON/OFF** button again. If you turn the ACC off without stopping the Style the drum rhythms will continue to play.

- When you play along with the Auto-accompaniment using the Fingered or Full Keyboard modes, you may hear two sounds playing the chords: one is selected by the front panel and the other is pre programmed for the Style. This is because the sounds used by the Auto-accompaniment Style are independent of the Left and Right Part sound settings. Therefore you will hear the instrument sounds played by your hand as well as those generated by the accompaniment.

In most cases, these are just duplicate notes being played using different sounds. In some cases however, you may hear different notes or an unexpected chord inversion. If the overall musical effect is undesirable, try turning the LEFT/SPLIT Part off and let the accompaniment play alone.

- You can use the Auto-accompaniment (ACC) System without the Style running. In this way you can make use of the chord recognition without having the pre programmed rhythms or patterns playing. Just turn the ACC on and play without starting the Style. You will hear the bass and chord parts only. This may be useful when you play a musical piece that is not played with drums. The accompaniment sounds are pre programmed to best suit the different Styles, and you cannot alter them. When playing in One Finger mode, however, you can replace the chord sound with the sound chosen for the LEFT/SPLIT Part. Assign your preferred sound and make the LEFT/SPLIT Part active.

You can also start a Style without the ACC on. In this way you can have just drums and percussion accompany you.

1-2 Play

If you want to play using an Accompaniment Style, but have no idea as to what sounds you should use for the right and left-hand parts, try using the 1-2 Play feature. This feature gives you a preprogrammed panel setup with appropriate sounds and settings for the Style you have chosen.

To use 1-2 Play:



- 1) Select the Style you would like to play.
- 2) Press the 1-2 PLAY button. The 1-2 Play indicator will become lit, and the words "1-2 Play" are displayed in the Main Screen. The SYNC button is activated as well.
- 3) Activate one of the INTO/ENDING buttons if you want the Style to begin with an introduction. Start the Style by playing a key on the left side of the keyboard, or by pressing the START/STOP button.
- 4) Press the 1-2 PLAY button again to turn it off.

- Among the settings contained in the 1-2 Play setting are the Sounds assigned to the keyboard Parts (Solo, Right 1/2, Left), Tempo, and Mixer settings.

Registration

A Registration is a setup that remembers the panel settings along with many other performance functions so that you can recall them at the touch of a button. This lets you begin to play quickly instead of spending a lot of time programming all the settings and values manually.

There are 8 Registration buttons on the panel of the Concert Performer. Each button contains a different registration. Pressing any of the Registration buttons activates the setup stored there. Pressing another Registration button changes to the registration stored in that button. Pressing the active Registration button again deactivates the registration and returns you to the original panel setup.

Registration Groups

There are 20 Registration Groups in the Concert Performer. Each group contains settings for the 8 Registration buttons on the panel. Each group represents a “family” of settings for the CP. The sound and performance capability of the Concert Performer is remarkable, and each registration group is designed to take full advantage of certain types of sounds available in the instrument. Switching from one Registration Group to another instantly changes the Registration buttons from Pipe Organ settings to Orchestra settings, for example.


- The default Registration Group is “American Pop”, a family of registrations designed to play popular music from the 1940’s through today.

With 8 Registration buttons and 20 Registration Groups, you have a total of 160 preprogrammed Registrations available. Plus, you can overwrite any registration with your own unique setups.

To use a Registration:

- 1) Press the **REGIST GROUP** button. Ten Registration Groups will be displayed.
- 2) Press the F1 and F2 buttons to view the Registration Groups on the other page.
- 3) Highlight any Group from the list by using the L and R buttons.
- 4) Press one of the eight **REGISTRATION** buttons to activate a Registration from your selected Registration Group.
- 5) To return to the Main Screen, press the **EXIT** button.



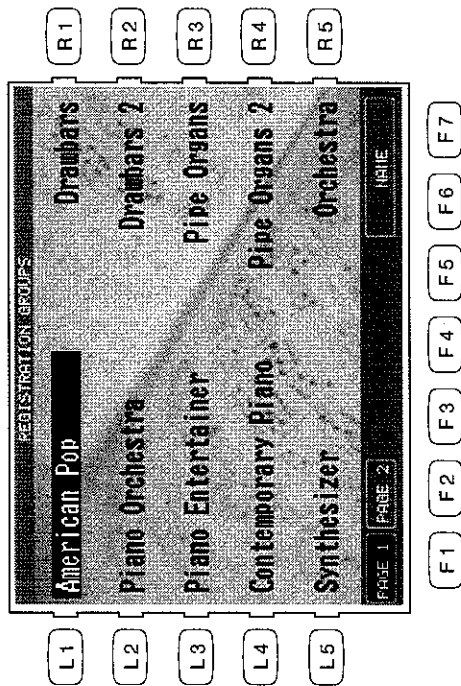


Use the L and R buttons to select the Group. Then press one of eight REGISTRATION buttons to call the desired setup.

F1, F2 Searches for the Registration Groups on the other pages.
F6, F7 Takes you to the Registration Group Name screen.

- The CP remembers how the front panel was setup before you chose a Registration so that after exiting the Registration, the prior settings will be restored.
- It is not necessary to always begin with the REGIST GROUP button when selecting a Registration. If the group you want to use is already selected, pressing one of the REGISTRATION buttons will activate a setup from that group. The CP will remember the Registration Group last chosen as long as the power remains on.
- You cannot use the 1-2 Play function and Registrations at the same time. Choosing one always cancels the other.

To create your own Registration:

- 1) Set up the panel and functions in the way that you'd like to save them.
- 2) Press the SAVE REGIST button. Use the R1 – R4 buttons to select the Registration Group in which to save your setup. Use the F1 – F4 buttons to view the 20 Registration Groups in sets of five.
- 3) Press one of the 8 REGISTRATION buttons to specify which location you'd like to save your Registration to.

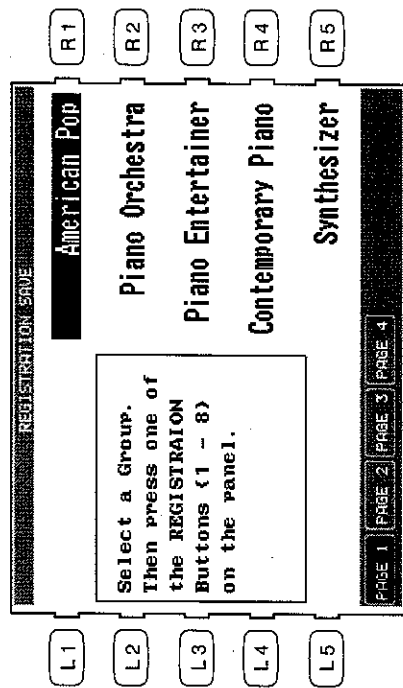

R1–R5 Selects the Registration Group to save in.


Press the F1–F4 buttons to display the Registration Groups on the other pages.

Press the specific REGISTRATION button where you'd like to save to.

- The following settings can be stored in a Registration: Sounds (Solo, Right1, Right2, Left), Split Point, Style and Variation, Fill-in mode, Tempo, Accompaniment settings, Mixer settings, Chorus settings, Effect settings, Harmony settings, Voicing, Detune, Resonance, Left Pedal functions, Mic Harmony, and Mic Effect
- You can save your Registrations on a floppy disk and load them into the CP later. (See page 156.)

To rename the Registration Group:

- 1) Press the REGIST GROUPS button.
- 2) Use the F1, F2, L and R buttons to select the Group to rename.
- 3) Press the NAME (F6, F7) button.

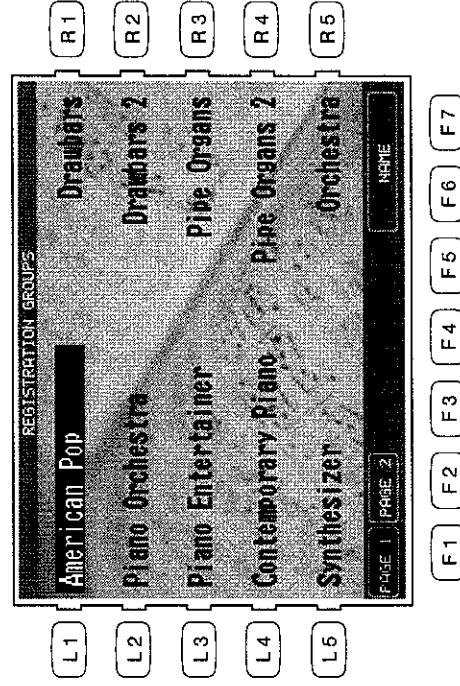

Use the F1, F2, L and R buttons to select the Group to rename.

- 4) In the Registration Group Name screen, use the CURSOR (F2, F3) buttons and the CHARACTER (F4, F5) buttons to change the name. You can also use the Dial to change the characters.
- 5) Press the SAVE (F6, F7) button to confirm the name.

REGISTRATION GROUP NAME

SAVE TO
1 American Pop

NAME
American Pop

BACK CURSOR CHARACTER SAVE

L1 L2 L3 L4 L5

R1 R2 R3 R4 R5

F1 F2 F3 F4 F5 F6 F7

- F1 Takes you to the previous menu.
- F2, F3 Moves the cursor over the characters in the name.
- F4, F5 Selects a character.
- F6, F7 Saves the name.

Style Lock

Pressing the STYLE LOCK button keeps the current Style, even if another Registration is selected. This allows you to change Sounds and settings by the Registration button while keeping the Style as-is. As long as the STYLE LOCK button is on, changing registrations will not change the style. However, you can always manually change the style, even if the Style Lock is on.

Press the STYLE LOCK button again to turn it off.





Song Stylist


With over 900 Sounds and 220 Styles, it can sometimes be difficult to decide the best settings with which to play a song. Even if you are very familiar with the Concert Performer, you may want a quick way to change the CP's setup to play another song. The Song Stylist feature was created to handle this situation for you. You simply pick the name of the song you want to play and the Concert Performer sets up everything for you.

The Song Stylist contains a list of 700 popular song titles. In the Song Stylist, there is an appropriate setup for each of those songs. You may search for your favorite title either alphabetically by song name, or by category of musical genre. Once you've found the song you want to play, simply press one button and the CP is immediately setup for that song and ready for you to begin.

- The Song Stylist contains no prerecorded music, only the setup to play the chosen song. You must play the actual music yourself.

To use the Song Stylist:


- 1) Press the **SONG STYLIST** button. The Category list appears, showing the different musical genres for the **SONG STYLIST**.
- 2) Use the **SEARCH BY CATEGORY** buttons (F1, F2) to display the Category choices on the other page. When you have found the category you want, use the L and R buttons to select it. A list of songs within that musical category appears.

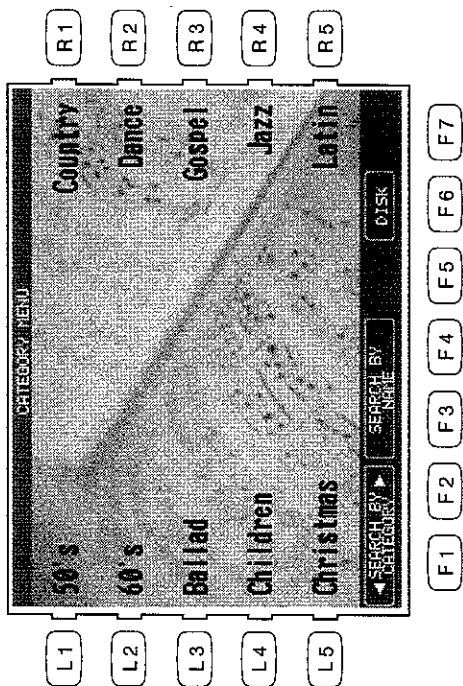

Use the L, R buttons to select your desired category.

- F1, F2 Shows the other categories.
- F3, F4 Shows the song list in alphabetical order.
- F6 Searches for a title from a floppy disk.

- 3) Use the PAGE buttons (F1, F2) to display the Song Titles on the other pages in the same category.
- 4) Use the L and R buttons to select one of the ten songs displayed in the screen. The CP automatically returns to the Main Screen ready with all of the settings for that song.
- 5) You may start and play the song in your usual manner. You can operate the CP normally and make any changes to the Song Stylist setup that you wish.
- 6) To play another song, press the Songlist (F7) button. To exit, press the SONG STYLIST button again or press the EXIT button.

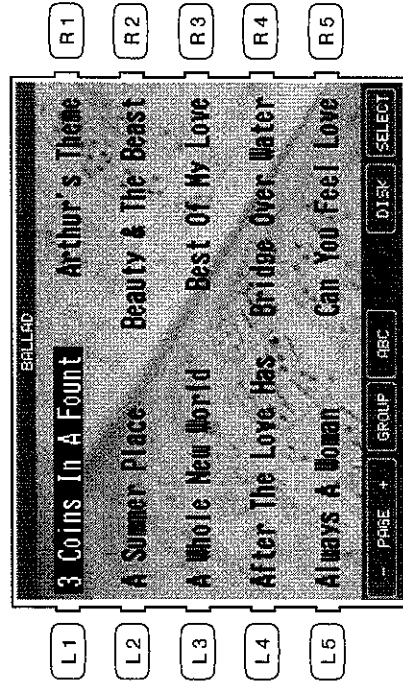

Use the L or R buttons to select your desired song.

F1 F2 F3 F4 F5 F6 F7

- F1, F2 Searches for a title on the other pages.
- F3 Jumps to the Song Stylist Category menu.
- F4 Searches for a title listed in alphabetical order.
- F6 Searches for a title from a floppy disk.
- F7 Selects the song.




Selecting a song from a floppy disk.

F1 F2 F3 F4 F5 F6 F7

- F1, F2 Searches for a title on the other page.
- F4 Starts the Chain Play.
- F6 Searches for a title from the internal presets.
- F7 Selects the song.

- L1 Highlights the Style.
- L2 Adjusts the Tempo.
- L3 Highlights the LEFT Part.
- L4 Changes the split point.

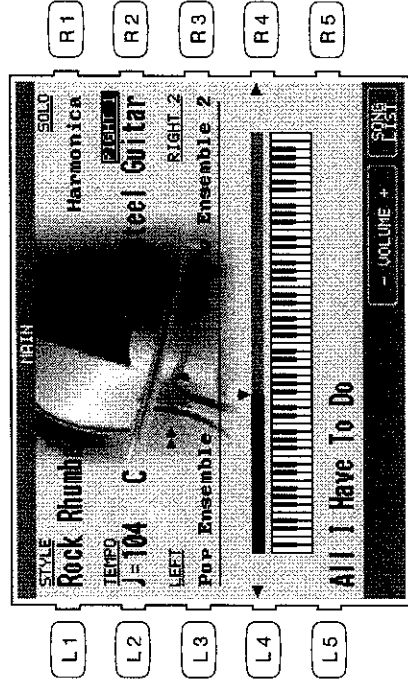

- R1 Highlights the SOLO Part.
- R2 Highlights the RIGHT 1 Part.
- R3 Highlights the RIGHT 2 Part.
- R4 Changes the split point.

- F1, F2 Turns on the Auto Chord Progression (if available).
- F3, F4 Turns on the Melody part (if available).
- F5, F6 Adjusts the volume level for the sound.
- F7 Takes you back to the Song Stylist menu.

- You may use different Sounds, Styles, Tempo and other settings to customize to your taste.
- When choosing a Song Stylist created by you (or someone else) and saved to floppy disk, there may be a recorded melody and chord track available. The chord track, called the Auto Chord Progression, will provide you with the chord changes to the song.

You may also find a song title by searching the list alphabetically.

To search the Song Stylist by Song Title:

- Press the SONG STYLIST button. The Category list appears, showing the different musical genres for the SONG STYLIST.
- Press the SEARCH BY NAME (F3, F4) buttons. In the Name Menu, press the L or R buttons to take you to the first letter of the name of the song. For example, if your song title starts with "G", press the L4 button.
- Use the PAGE (F1, F2) to search for the name of your song. When you find the song, press the corresponding L or R button. The CP automatically returns to the Main Screen ready with all of the settings for that song.



Harmony


When the Auto-Accompaniment is on, you can use Harmony function. The Harmony function automatically adds notes to your right hand (melody) part to help you sound more professional. This function analyzes the notes you play and automatically adds notes from the Accompaniment chord (shown in the Main Screen when the Accompaniment is on), creating a "harmony" part (even if you are only playing single notes in the left and right hands).

There are 10 types of Harmony.

- | | |
|--------------------|---|
| Block | Adds three or four notes based on the chord. |
| Open | Adds three or four notes based on the chord. Harmony notes may extend over one octave below the lowest right-hand note. |
| Jazz | Adds three or four notes based on the chord. |
| Rockn' | Adds a note at a fifth (or fourth) interval to the lowest note played in the RIGHT Part. |
| Dynamic | Adds three or four notes based on the chord. Harmony notes are played within one octave below the lowest note played in the right hand. |
| Duet | Adds a note according to the lowest note played in the right hand and based on the chord. |
| Octave | Takes the highest note played in the right hand and doubles it an octave down. |
| Octave Duet | Adds an Octave note and a Duet note. |
| Vocal 1 | Adds a single note above the top note of the right hand based on the chord. |
| Vocal 2 | Adds three notes based on the chord. The lowest note will always be the root of the chord. |

To use Harmony:

- 1) Press the **HARMONY** button. The button will be lit to show that it is active. The Harmony symbol will also appear in the Main Screen.
- 2) To change the Harmony type, hold down the Harmony button for a moment until the Harmony Select menu is displayed.
- 3) Choose the Harmony type using the L and R buttons.
- 4) Press the EXIT button to leave the Harmony Select menu.
- 5) To turn off the Harmony, press the **HARMONY** button again.

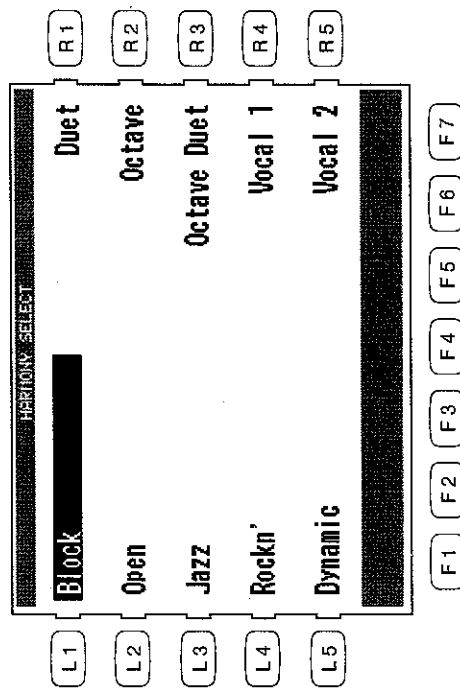

- The additional notes created by Harmony are added to the RIGHT 1 Part, if that part is on. If the RIGHT 1 Part is off, the additional notes are added to the RIGHT 2 Part. If both parts are off, there will be no Harmony even though the HARMONY button is lit. The Harmony notes are played with the same sound as the part they are added to.
- You can volume mix the Harmony separately in the MIXER screen.
- If the Accompaniment is not on, you will not be able to activate Harmony

Recording a Song

The CP has built-in recording capabilities that allow you to record and play back your performances. Since the CP records your performances as digital data, not audio data, you can easily edit your performances after recording them. There are two ways to use the CP's recording feature:

Easy Recorder records your playing much like a tape recorder and is just as easy to use. The CP will record all of your playing as well as any changes you make to the front panel settings during the recording.

Advanced Recorder is useful for creating more complex recordings. Advanced Recorder gives you the ability to record on up to 16

independent tracks separately. In addition, with Advanced Recorder you can edit your recorded data one measure or even one note at a time. There is also a step recording mode in which you can enter notes or other MIDI data events one step at a time for even more accurate control.

Song data created on other instruments in the Standard MIDI File format (SMF) can also be loaded into the CP's recorder to be played or edited. The CP's recorder can read both Type 1 and 0 SMF files.

Please read the following sections carefully to learn more about the capabilities of the Easy and Advanced recorder.

Easy Recording


The Easy Recorder will record all of your playing as well as any settings you have made on the front panel or in the mixer screen at the touch of a button. Simply press the REC button and the CP will begin recording with the first note you play. You can also record a Style along with your playing if you like. Before you begin recording it's a good idea to select your desired sound(s) and make any panel settings you would like to record.

To record:



- 1) Press the REC button. The REC button LED will blink and the LCD screen will show Rec Ready. If you want to, you can still change sounds or panel settings before proceeding.
- 2) Start recording in one of the following ways:
 - A. Play the keys and the CP will automatically start recording with the first note you play.
 - B. If you are recording with a Style, press the START/STOP button to start the recorder with the Style. Pressing the INTRO/ENDING button will include an Intro phrase at the beginning of the recording.
 - C. You can also press the SYNC button to begin recording the Style and your own playing together.
 - D. Press the PLAY/STOP button to start with a 2-bar countdown to help you get ready.
- 3) When you are finished recording, press the PLAY/STOP button. You may resume recording from the point where you stopped by repeating these steps from step 2.

The current bar number is displayed.

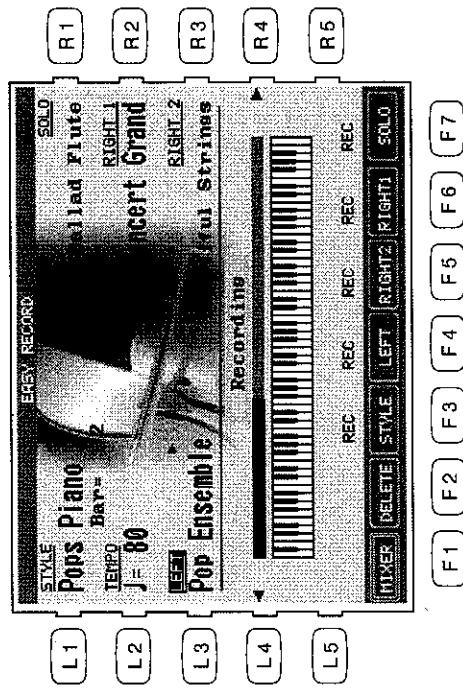

You can make changes to the panel settings before and during recording using the L and R buttons.

- F1 Takes you to the Mixer menu.
- F2 Deletes the recorded song data
- F3-F7 Changes the part status.

- You may resume recording from the bar where you stopped by repeating these steps. You can also change sounds, tempo, and make other changes to the panel settings before you continue recording.
- To Re-record or make other changes to a previously recorded section of a song, please read the section titled "Re-recording or adding another Part" on page 44.

To play back the recorded song:

- 1) Press the RESET button in the RECORDER section of the front panel to return to the first bar of the song.
- 2) Press the PLAY/STOP button to play back the song.
- 3) Press the PLAY/STOP button again to stop at any time.
- 4) Pressing the PLAY/STOP button again resumes the playback from the bar where you stopped.
- 5) Use the RWD or FWD buttons to rewind or fast-forward through the recording.



Part Status

The playback and record status for the RIGHT/LEFT Parts and the Style are displayed at the bottom of the LCD screen. Whether you are in the process of recording or playing back your song it is helpful to know the status for each of these Parts.

The LCD screen will show the following Part status messages at the bottom of the screen:

- REC** This Part is ready to be recorded. This message is only displayed after the REC button has been pressed.
- PLAY** This Part has been recorded and will be heard both on playback and while recording.
- MUTE** This Part has been recorded but will be silent both on playback and while recording.
- This part has not been recorded.

After you have recorded a song you can change the status for a Part by pressing the appropriate button, F3-7 below the LCD screen. Pressing the F buttons during playback will select PLAY or MUTE. REC can only be selected after you press the REC button but before you begin recording. During recording you can however set any Part to PLAY or MUTE by pressing the appropriate F button.

You can record all RIGHT/LEFT Parts as well as the Style simultaneously or only certain Parts as you choose. When you first record a song all Parts and the Style will be automatically set to REC but only the active Parts and the Style will be recorded. When you are finished recording the status for any active Parts and the Style will automatically change from REC to PLAY. After recording, the status for any RIGHT/LEFT Parts that were not active during recording will be automatically changed to -- to show they have not been recorded yet.

When you press the PLAY/STOP button to listen to your song any Parts set to PLAY status will be heard.

Re-recording or adding another Part

After you have recorded a song you can Re-record a Part or add (overdub) other Parts if you like with the following procedure. Re-recording a Part completely erases the previous performance for that Part automatically.

To Re-record or add a Part:

- 1) **Make sure the Part(s) you wish to Re-record are active, then select any sounds or change panel settings as desired.**

- 2) Press the REC button.
- 3) Press the appropriate F button(s) below the LCD screen to set the desired Part(s) to REC.
- 4) Begin recording by following step 2 in the "To Record" section on page 42.

Remember Re-Recording a Part completely erases the previously recorded performance for that Part. You can Re-record or add any of the RIGHT/LEFT Parts as many times as you like but you can only have one performance/sound for each RIGHT/LEFT Part.

Saving the song

Once you finish recording a song you should save it to disk before you turn the power OFF. Once the power is turned OFF your song data will be lost.

See the section titled "Saving Data to a Floppy Disk" on page 157.

- If you press the EXIT button to get out of the Easy Recorder, the CP will automatically prompt you to save your work.


Erasing the song

Whenever a Part is selected for recording, the new performance is written right over any existing one that may be there for that Part. In this sense, the Easy Recorder is just like a tape machine. A new song will simply erase the old song during the recording process.

However, if you wish to simply erase all the Parts and the Style in a song at once you can use the Delete function.

To delete a song:

- 1) Press the DELETE button (F2) while the Recorder is not recording or currently ready to record. The CP will ask if you are sure.
- 2) Use either the YES (F7) button to proceed or NO (F1) to cancel.

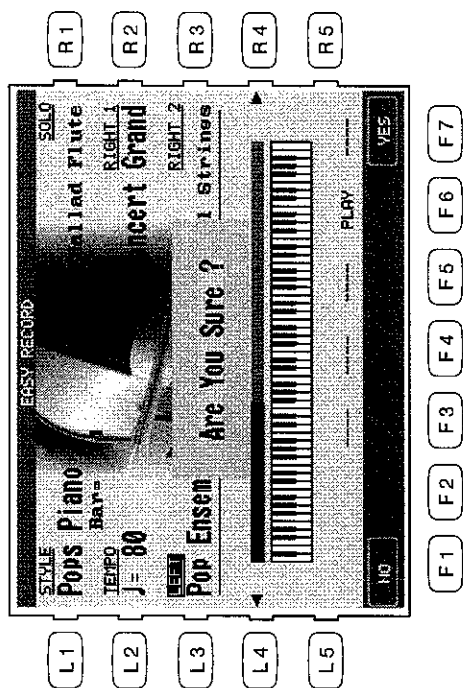

F1 Cancels erasing the song.
 F7 Proceeds with erasing the song.

- DELETE erases all of the performance data for all Parts and the Style in the song. The panel setup, such as Style, Tempo, and Sound settings are not erased by the DELETE function.

Advanced Recording

The Advanced Recorder is a full featured sixteen track MIDI recorder that includes many of the same professional features found on dedicated MIDI sequencing (recording) devices. In addition to sixteen MIDI tracks the CP Advanced recorder provides a separate Style, chord, and tempo track for even more flexibility.

Even though you can create recordings of great musical complexity using the Advanced recorder you will find that it is still very straightforward and easy to use.

Using the Advanced Recorder allows you much greater control over the recording and compositional process than that offered by the Easy Recorder. However, songs created using the Easy Recorder can also be edited using the Advanced Recorder by simply pressing the ADVANCED RECORDER button.



To go to the Advanced Recorder Menu:

Press the ADVANCED RECORDER button. The recording options will be displayed on the screen.

L1	Mixer	Loop Settings	R1	R1	Edit loop settings for the song.
L2	Real Time Rec	Song Edit	R2	R2	Edit the general settings for the song.
L3	Punch In/Out	Bar Edit	R3	R3	Edit the song by bars.
L4	Step Recording	Event Edit	R4	R4	Edit the song by MIDI events.
L5	Track Settings	Style Maker	R5	R5	Create your own new user Style.

Below the menu, there are two rows of function keys: F1 through F7 and a 'STYLE PASTE' button.

F1 Converts recorded Style data into MIDI note data that can then be edited in the Advanced Recorder. Style Paste will only be displayed if the current song was recorded using a Style.

Real-time Recording

With Real-time record, the CP records your performance as you are playing it, in real-time. You can select any of the sixteen instrument tracks or the Style and tempo tracks to record, but you can only record on one track at a time. Since the Advanced Recorder only records on one track at a time, only the RIGHT 1 Part is active in the Advanced Recorder. Any other active Parts are automatically turned OFF when the ADVANCED RECORDER button is pressed. In addition to selecting the desired track to record, the Real-time recording screen provides many other useful Real-time recording functions.

To use Real-time recording:

- 1) From the Advanced Recorder menu, press the L2 button to select "Real Time REC", or simply press the REC button. The REC button LED will blink and the LCD screen will display the "Real Time REC" screen.
- 2) Use the F, L and R buttons to select a function to edit. Use the Dial to change the values.
- 3) If necessary, you can go to the Mixer and Track Settings screens by pressing the appropriate F buttons.

- L1 Selects the track on which you want to record. There are 16 Instrument tracks, 1 Tempo track, and 1 Style track.
- L2 Selects the sound or Style that you want to record with.
- L3 Shows the current bar and beat number.
- L4 Selects the starting bar for the Loop feature. This function is available only when Loop is turned ON.

The screenshot shows the 'REAL TIME REC' screen with the following elements:

- REC TIME:** 1
- REC SOUND:** Concert Grand
- BAR:** 1-1
- TEMPO:** 80
- REC MODE:** REPLACE
- LOOP START:** 1
- LOOP END:** 5
- Buttons:** L1, L2, L3, L4, L5, R1, R2, R3, R4, R5, F1, F2, F3, F4, F5, F6, F7.
- Bottom Bar:** MENU, MIXER, TRACK SETTINGS, LOOP ON, LOOP OFF.

- R1 Changes the time signature.
- R2 Changes the tempo.
- R3 Selects the recording mode. REPLACE erases the previous data and records the new data in its place. OVERDUB mixes the new data with the previous data so that both are heard together. Repeatedly pressing the R3 button switches between the REPLACE and OVERDUB.
- R4 Selects the ending bar for the Loop feature. This function is available only when Loop is turned on.

- F1 Cancels the real-time recording setup and returns you to the Advanced Recorder menu.
- F2 Takes you to the Mixer menu.
- F4, F5 Takes you to the Track Settings menu.
- F6 Turns the Loop feature on/off

4) Start recording by pressing the **PLAY/STOP** button while the **REC** button LED is blinking. There is an automatic two bar count in before the CP begins recording. If you are recording on the **Style** track you must press the **START/STOP** or **INTRO** buttons instead of the **PLAY/STOP** button. When recording a **Style** there is no two bar count in, recording begins immediately. You can cancel recording at anytime by pressing the **REC** button again or by pressing the **F1** button to return to the **Advanced Recorder** menu.

- When you select a **Style** to record the default tempo for that **Style** is ignored. The **Style** will use the current tempo setting for the song instead. You can set the desired tempo on the **Real-time** record screen before recording or change the tempo after you have recorded in **Song Edit** or on the tempo track in **Event Edit**.
- When you are recording on the **Style** track only the **Style** will be recorded. The **Style** track will record any chords (to the chord track) you play but the actual notes you are playing will not be recorded.
- When the recording is done, the **Mixer** screen will automatically be displayed.

To play back the recorded song:

- 1) Press the **RESET** button in the **RECORDER** section of the front panel to return to the first bar of the song.
- 2) Press the **PLAY/STOP** button to play back the song.
- 3) Press the **PLAY/STOP** button again to stop at any time.
- 4) Pressing the **PLAY/STOP** button again resumes the playback from the bar where you stopped.
- 5) Use the **RWD** or **FWD** buttons to rewind or fast-forward through the recording.

Mixer

On the **Mixer** screen, you can change the following settings for each of the 16 tracks: **Reverb** level, **Chorus** level, **Effect** on/off, **Panning**, **Track** mute, **Volume** level.

To use the Mixer:

- 1) Use the **TRACK** buttons (**F2**, **F3**) to select which of the 16 tracks you wish to make changes to.
- 2) Use the **L1** and **L5** buttons to choose the track setting that you want to change.
- 3) Use the **Dial** to change the value.


4) At this point, you can start recording or go to another menu to continue setting up.

- You can make changes on the Mixer screen at any time except while the CP is busy recording. The Mixer screen is accessible from the Advanced Recorder menu, Track Settings screen and Real-time Rec screen.
- You can save any changes you have made to the settings on the Mixer screen at any bar or beat in your song. Simply play back the song or press the FWD/RWD buttons until you reach the exact bar and beat where you want to make changes to the Mixer settings and stop the song. Make any changes on the Mixer screen, then press the SAVE button (F7). You can do this as many times and in as many places within your song as you wish.

Note

“Saving” here only means any changes you made on the Mixer screen were saved as part of the song. Once you finish recording a song or after you make any important changes you should save it to disk before you turn the power OFF. Once the power is turned OFF your song data and any changes you have made will be lost.

See the section titled “Saving Data to a Floppy Disk” on page 157.

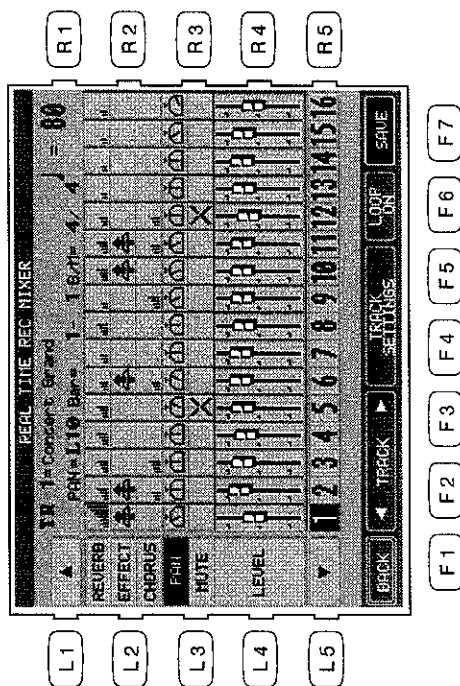

L1, L5 Used to select the track setting you want to change. Use the Dial to change the value.

- F1 Returns you to the Advanced Recorder menu.
 F2, F3 Selects the track that you wish to edit.
 F4, F5 Takes you to the Track Settings menu.
 F6 Turns Loop ON/OFF.
 F7 Saves the Mixer settings as part of the song.

Track Settings

The Track Settings screen shows you the Play, Record, and Mute status for each track. In addition it shows you what sound is assigned for the sixteen instrument tracks. You can change the track status or select a different sound for each track.


The Track Status screen will show the following Status messages.

Rec	This track is ready to be recorded.
Play	This track has been recorded and will be heard both on playback and while recording.
MIDI Rec	MIDI Rec enables the CP to record incoming MIDI data from an external MIDI instrument connected to the MIDI jacks. You can set more than one track to MIDI Rec, enabling the CP to record on several tracks simultaneously over MIDI.
Mute	This track has been recorded but will be silent both on playback and while recording.
Empty	This track has not been recorded.

After you have recorded a song you can change the status for a track by pressing the STATUS button (F3) below the LCD screen. Pressing the STATUS button during playback will select Play or Mute. Pressing the STATUS button after entering Real-time record but before recording begins, will select Play, MIDI Rec, or Mute. Rec can only be selected from the Real-time Record screen. The Track settings screen cannot be accessed during recording.

To use the Track Settings screen:

- 1) Press the **TRACK SETTINGS** button (L5) on the Advanced Recorder menu.
- 2) Press the L3 and L4 buttons to select the track that you wish to edit. If you wish to select tracks 10-16, the Style, or Tempo tracks, press the L5 button to jump to these tracks. Press the L2 button to return to tracks 1-9.
- 3) Press the **STATUS** button (F3) to change the status to **PLAY**, **MUTE** or **MIDI REC**.
- 4) If you wish to change the sound assigned to the track, press the **SOUND** buttons (F5, F6). You can also select sounds by pressing any of the **SOUND** buttons.
- 5) When you are finished, press the **MENU** button (F1) to return to the Advanced Recorder menu or press the **MIXER** button (F2) to go to the Mixer menu.

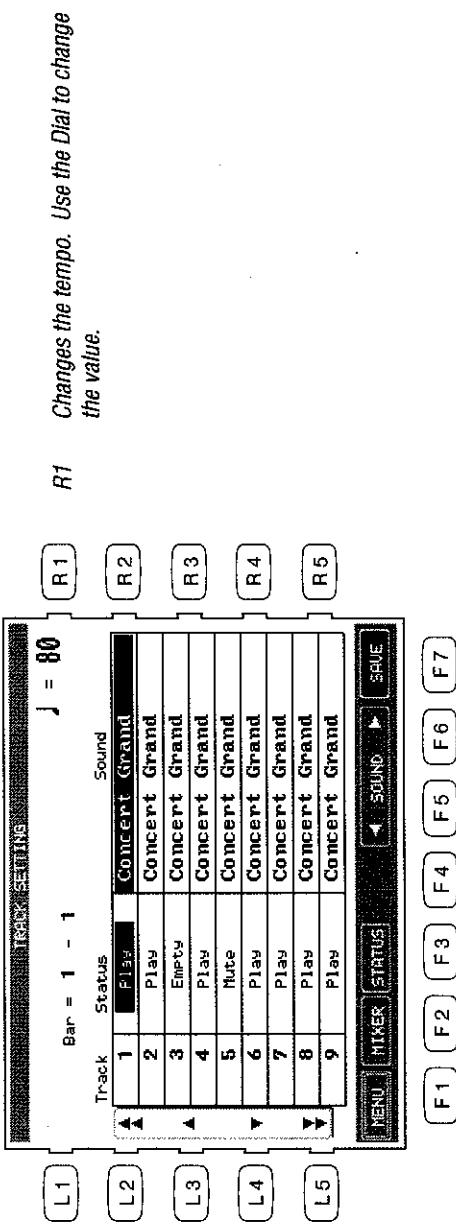

R1 Changes the tempo. Use the Dial to change the value.

L2 Jumps to tracks 1-9.

L3, L4 Selects the tracks one at a time.

L5 Jumps to tracks 10-16, Tempo, and Style.

- F1 Returns you to the Advanced Recorder menu.
- F2 Takes you to the Mixer.
- F3 Changes the track's status.
- F5, F6 Selects a different sound for the track.
- F7 Saves the Track settings as part of the song.

- As discussed in the above section, MIDI Rec enables the CP to record incoming MIDI data from an external MIDI instrument connected to the MIDI jacks. You can set more than one track to MIDI REC, enabling the CP to record on several tracks simultaneously over MIDI. Each MIDI Rec track will record on the incoming MIDI channel that corresponds to its track number. Track 1 records MIDI channel 1 and so on.

Loop Settings


The Loop function lets you specify certain bars or your entire song to repeat over and over. Loop is a global function and all tracks will be looped equally. You cannot have different loop settings for each track.

To set the Loop:

- 1) Go to the Loop Settings screen by pressing the R1 button in the Advanced Recorder menu.
- 2) Use the L2-L4 buttons to select the different settings, then use the Dial to change the values.
- 3) Press the L2 button to turn the Loop ON/OFF.
- 4) Press the L3 button to specify the bar where you want the Loop to start.

- L2 Turns the Loop ON/OFF.
- L3 Specifies the starting bar.
- L4 Specifies the ending bar.

- 5) Press the L4 button to specify the bar where you want the Loop to end.
- 6) Press the MENU button (F1) to return to the Advanced Recorder menu when you are finished.

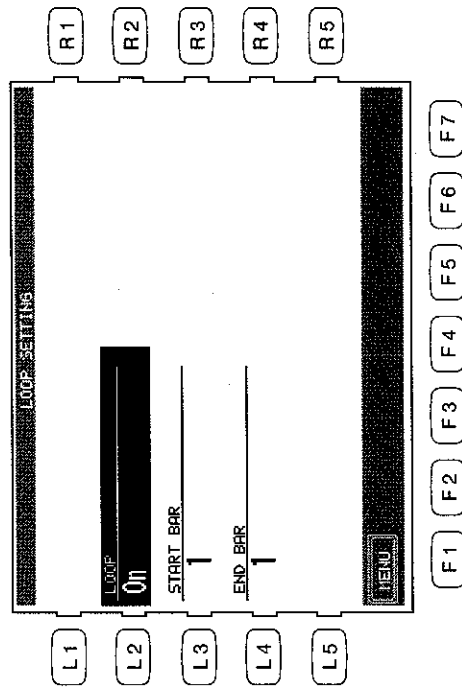

F1 Takes you back to the Advanced Recorder menu.

- You can turn looping on and off in the Mixer menu. However, you still have to set the Start and End Bar from the Loop Settings menu.
- You can set up looping for recording in the Real-time REC menu as well. In the Real-time REC menu, when you turn on the looping, the Start Bar and End Bar information will be automatically copied from the Loop Settings menu.


Style Paste

When you record a Style as part of your song, the Style data is automatically recorded on the Style track. This data is unique to the CP, and cannot be used with any other musical instruments. Additionally the instrument tracks that are part of the Style cannot be edited individually. Style Paste converts any Style data recorded on the Style track into MIDI note and event data and places it on separate tracks (Trks 9-16). Once the Style data is converted into actual note data, you can view and edit the individual Style tracks as if you had recorded the data yourself. Also your song including the Style can now be played back by any other MIDI instrument that reads Standard MIDI File (SMF) format song data.

- Before you use Style Paste, you need to make sure Tracks 9-16 are empty or don't contain important data. When the Style is pasted, the data from the Style track will be pasted into these tracks and will replace any existing data.

To use Style Paste:

- 1) Press the **STYLE PASTE** button (F1) while you are in the **Advanced Recorder** menu. The **LCD** screen will prompt you for confirmation.
- 2) If you would like to proceed, press the **YES** button (F7), or press the **NO** button (F1) to cancel.

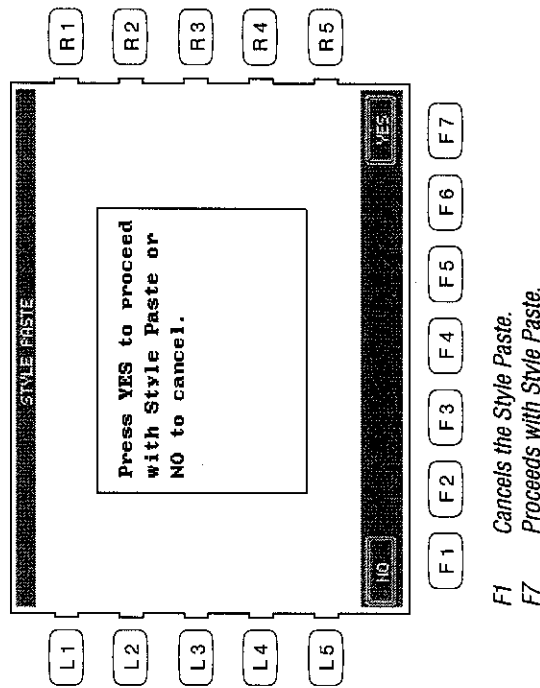

F1 Cancels the Style Paste.

F7 Proceeds with Style Paste.

Punch-In Recording

Punching In means being able to automatically start recording right in the middle of a track that is playing back, continue recording new data on that track for a specified number of measures, and then automatically stop recording at a specific measure and hear the rest of the track play to the end. This tool is very valuable if you wish to record over some misplayed notes in the middle of a track, but would like to preserve the music in the measures leading up to, and following, the trouble spot.

To use Punch-in recording:

- 1) Select Punch In/Out in the Advanced Recorder menu.
- 2) Use the L and R buttons to select the options and change their values using the Dial. Select AUTO with the R5 button to have the CP automatically handle the punching in/out while you play.
- 3) Press the REHEARSAL button (F4, F5) to listen to the song for rehearsal. If you need to adjust mixing or if you would like to loop the song, use the MIXER (F2) or LOOP ON/OFF (F6) button.
- 4) When you are ready to record, press the REC button and then the PLAY button. The music will start immediately from the Start Bar that you have chosen. Once the song reaches the Punch In Bar, any notes that you play on the keyboard will be recorded.
Recording will stop when the song reaches the Punch-Out Bar, but the CP will keep playing back the song to the end unless you press the STOP button.
You can repeat the punch-in/out section by turning the looping on with the F6 button.
- 5) Listen to what you have recorded and re-record if necessary.

L1	Selects the track to Punch in on.	REC. TENDIT	1	R1	Changes the time signature.
L2	Selects the measure in the song from where you want the CP to start playing.	BAR	1-1	R2	Changes the tempo.
L3	Selects the measure where the CP will punch-in and start recording.	START BAR	1	R3	Selects the recording mode. REPLACE erases the previous data and records the new data in its place. OVERDUB mixes the new data with the previous data so that both are heard together. Repeatedly pressing the R3 button switches between the REPLACE and OVERDUB.
L4	Selects the measure where the CP will punch-out and stop recording.	PUNCH IN BAR	1	R4	
L5		PUNCH OUT BAR	5	R5	Selects the Punch-in method, Auto or Pedal. Repeatedly pressing the R5 button switches between the Auto and Pedal.

REC. TENDIT: 1

BAR: 1-1

START BAR: 1

PUNCH IN BAR: 1

PUNCH OUT BAR: 5

REC. MODE: REPLACE

AUTO/PEDAL: AUTO

REHEARSAL

LOOP ON

F1

F2

F3

F4

F5

F6

F7

- F1 Takes you to the Advanced Recorder menu.
 F2 Takes you to the Mixer Settings menu.
 F4, F5 Plays the song for rehearsal.
 F6 Turns Loop on/off.

- If you set the CP to Punch-In at the very first measure of the song, the metronome will automatically play a two-measure intro to assist you with the timing. These "ticks" will not be recorded as part of the track.

Punch-In recording using the pedal

Instead of specifically setting an automatic Punch-In and Punch-Out Bar, you can use the center pedal to manually Punch In and Out.

- You can punch in and out with pedal one time for each pass over the track that you make.

To use the pedal to Punch-In/Out:

- 1) Use the R5 button to select Pedal in the Punch In/Out menu.
- 2) Use the L and R buttons to set up other recording options.
- 3) Press the REC button to start. The song will start playing.
- 4) When the song reaches the bar where you wish to punch in, press the center pedal and play the keyboard.
- 5) When you reach the bar where you wish to punch out, press the pedal again to stop recording. Notice that the song keeps playing to the end (it's just no longer recording) or until you press STOP.

L1 Selects the track to Punch in.

L3 Selects the measure in the song from where you want the CP to start playing.

REC TRACK 1

BAR 1-1

START BAR 1

PUNCH IN/OUT (PEDAL)

BAT 4/4

TEMPO J=80

REC MODE REPLACE

AUTO/PEDAL PEDAL

R1 R2 R3 R4 R5

L1 L2 L3 L4 L5

F1 F2 F3 F4 F5 F6 F7
 F1 Takes you to the Advanced Recorder menu.
 F2 Takes you to the Mixer Settings menu.
 F4, F5 Plays the song for rehearsal.
 F6 Turns Loop on/off.

R1 Changes the time signature.

R2 Changes the tempo.

R3 Selects the recording mode. REPLACE erases the previous data and records the new data in its place. OVERDUB mixes the new data with the previous data so that both are heard together. Repeatedly pressing the R3 button switches between the REPLACE and OVERDUB.

R5 Selects Auto or Pedal as the Punch-In method. Repeatedly pressing the R5 button switches between the Auto and Pedal.

Step Recording

Step Recording is a method of recording a song by manually entering notes one after another as data, instead of playing the keyboard in real-time. This method may be useful when trying to create a phrase with a precise rhythm, or when recording a phrase that is beyond your playing skill level.

To set up Step recording:

- 1) In the Advanced Recorder menu select Step Rec (L4). The Step Record menu will be displayed.
- 2) Use the L and R buttons and the Dial to set up recording options.
- 3) Press the START button (F7). You will be presented with the data entry screen.

L1	Selects the recording track.	L1	Changes the time signature.
L2	Selects which sound is assigned to the track.	R1	Selects recording mode. REPLACE erases the previous data and records the new data in its place. OVERDUB mixes the new data with the previous data so that both are heard together. Repeatedly pressing the R3 button switches between the REPLACE and OVERDUB.
L3	Selects which measure you'd like to start recording at.	R2	
		R3	
		R4	
		R5	

The screenshot shows the 'STEP REC STAND-EV' menu. The 'REC TRAC' is set to 1, 'B.M' is 4/4, 'REC SOUND' is 'Concert Grand', 'START BAR' is 1, and 'REC MODE' is 'REPLACE'. The 'MENU' and 'START' buttons are at the bottom.

- F1 Cancels Step recording and takes you to the Advanced Recorder menu.
 F7 Proceeds to the data entry screen of the Step Record menu.

To use the Step Recorder:

- 1) Use the F1-F3 buttons to select a setting (Note value, Note length, Velocity) and use the Dial to change its value. The value will be displayed above the buttons at the bottom of the screen. Velocity value can be entered by actually hitting a key on the keyboard. To enable this, select "Key" for the Velocity value instead of a number.

2) To enter a note event, play the note using the keyboard. The note data will be displayed on the screen. Continue entering as many notes as you wish; notice how previously entered notes continue to be displayed as a list, screen room permitting. The graphic navigator near the bottom of the screen gives you feedback as to what bar you are in.

3) If you enter a wrong note and wish to delete it, press the L2 button. When you are using the REPLACE mode for recording, every time you press L2 the list of your entered notes on the screen scrolls back one event, and that event is erased immediately. Therefore, if you scroll back to the first beat of bar 5 of a 10-bar list of notes, everything from bar 5 on will be erased. In OVERDUB mode, however, you can delete only the most recently added note, and scrolling back over the list using L2 will not automatically erase events. When using OVERDUB, you need to press the Delete button (R1) to erase the event.

L2, L3 Moves the cursor up and down the list of entered notes in OVERDUB mode.

L1

L2

L3

L4

L5

STEP REC RUN

DELETE

Edit Track = 1

Bar	Beat	Clock	Note	Velocity	Length
3	2	0	A	2	96
3	3	0	A	2	48
3	3	48	B	2	48
3	4	0	C	3	48
3	4	48			

Bar

3

|

|

|

.

.

.

.

y

NOTE VALUE

100

NOTE LENGTH

127

R1

R2

R3

R4

R5

F1

F2

F3

F4

F5

F6

F7

NOTE VALUE

NOTE LENGTH

VELO

TIE

REST

NEXT BAR

STOP

R1 Deletes the last note entered in OVERDUB mode.

- F1 Selects the note value.
- F2 Adjusts the note length.
- F3 Selects the velocity value. Values are from 1-127 or Key.
- F4 Enters Tied note values.
- F5 Enters a rest.
- F6 Takes you to the beginning of the next measure.
- F7 Stops recording.


P. 58

Kawai Concert Performer Series Digital Piano

- 4) If you would like to enter a rest, press the REST button (F5). This moves the cursor to the next beat without entering any data. The rest value is same as the note value selected for the F1 button. If you would like to enter a rest for the remainder of the measure, press the NEXT BAR button (F6). This will bring the cursor to the top of the next measure.
- 5) When you like to tie notes, press the TIE button (F4) while holding down the key. This doubles the length of the note. If you press the TIE button twice while holding down the key, the length of the note is tripled.
- 6) In OVERDUB mode, if you go back to certain point to enter a note, use the L2 and L3 buttons to move the cursor up and down to get to the event time where you want to insert the new data.
- 7) Press the STOP (F7) button or the PLAY/STOP button to stop recording.

- Transpose and Octave Shift can be in effect as you are entering notes. The transposed pitches are the note values that are recorded.
- The navigator graphic represents the current bar that you are recording. The partitions represent each beat, and thus the number of partitions matches the time signature of the music. For example, there would be 4 partitions if the time signature is 4/4, and 6 partitions if it is 6/8. Each partition consists of a number of spaces where dots (•) will be displayed to mark time. Each space represents 24 clock pulses. Therefore the number of displayed spaces per partition represents the duration of the beat.

For example, if you choose the 4/4 time signature in the Step Recording settings, the navigator should look as illustrated below.

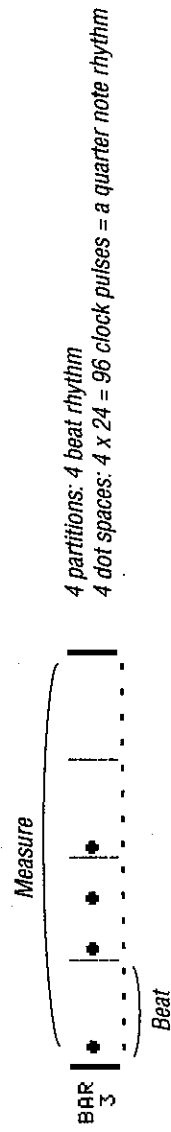

The dots do not represent the duration of the notes. They just tell you where they are. For a further explanation of the CP's Clock, and what is meant by "clock pulses" see the Clock Move description in the Bar Edit section.


Note	Rest	Clock value
○	—	384
♩	—	192
♪	♪	96
♫	(♫)	64
♬	♬	48
♭	(♭)	32
♮	♮	24
♯	(♯)	16
♭	♭	12
♯	(♯)	8

Song Edit

Song Edit lets you name, transpose, and change initial tempo settings for your song.

To edit the song:

- 1) Select Song Edit from the Advanced Recorder menu. The Song Edit screen is displayed.
- 2) Use the L and R buttons to select the setting that you wish to change, then use the Dial to change the value.
- 3) To name to the song, use the F2 and F3 buttons to move the cursor over the characters in the name, then use the Dial to select characters.
- 4) Press the L3 button to set the transpose amount. You can transpose your song +/- 24 in half step increments.
- 5) Press L4 to change the initial tempo setting of the song.
- 6) When you are finished, press the MENU button (F1) to return to the Advanced Recorder menu.

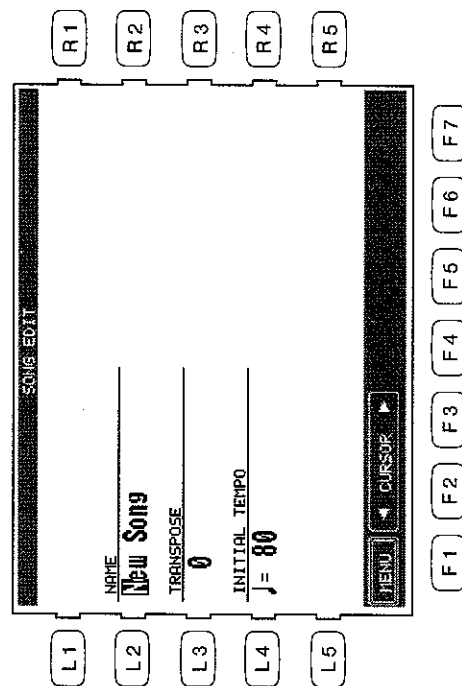

F1 Takes you to the Advanced Recorder menu.
F2, F3 Moves the cursor over the characters when naming the song.


- L2 Names the song.
- L3 Adjusts transposition.
- L4 Sets the initial tempo of the song.

Bar Editing

Bar Edit contains many useful editing functions. You can edit your song one bar or any number of bars at a time.

To use Bar Edit:

- 1) In the Advanced Recorder menu select Bar Edit (R3). The Bar Edit screen will be displayed.
- 2) Use the L and R buttons to select the desired editing function. The editing screen for that function will be displayed.

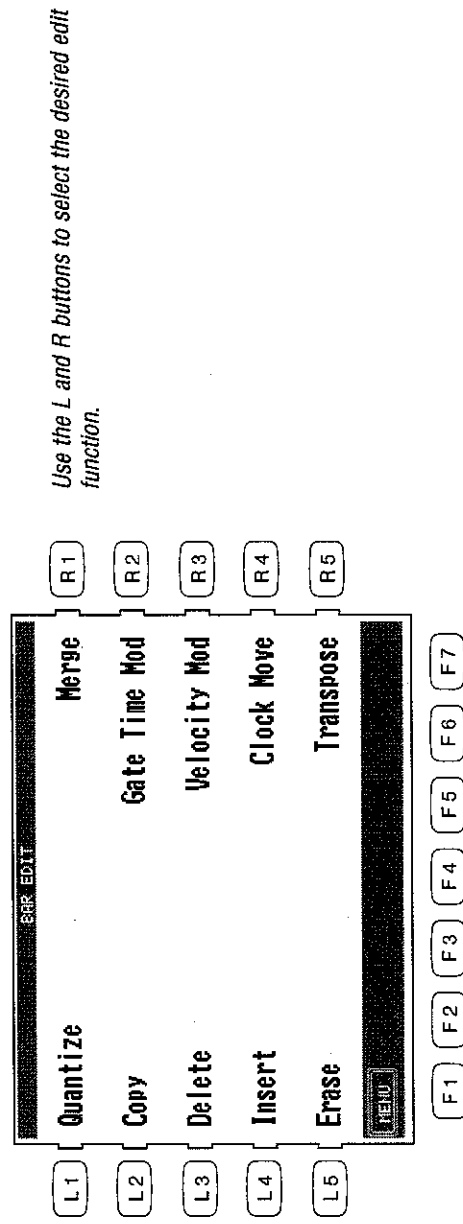

F1 Takes you to the Advanced Recorder menu.

Quantize

Quantize automatically shifts the timing of a note. This can be used to correct imperfect timing in a performance by shifting notes that were played either too early or too late so they will fall exactly on the correct beat. For example, you can accurately align any out of time notes to the nearest 8th- or 16th-note beat depending on the type of song you are quantizing. Sometimes quantizing all of your notes to exactly the same beat can make your playing sound too stiff. The Advanced Recorder quantize function allows you to set a quantize "Range" so only the notes that were very early or late are quantized. Notes that were almost perfect are not quantized thus keeping more of the original feeling in your music.

L1 Selects the track that you wish to quantize.

L2, L3 Selects the bar range that you want to quantize. Use the Dial to set the bar numbers.

L4 Selects the lowest note that you want to quantize. Use the Dial to change the note value.

L5 Selects the highest note that you want to quantize. Use the Dial to change the note value.

TRF1

QUANTIZE

L1

L2

L3

L4

L5

START BAR

RESOLUTION

R1

END BAR

RANGE LOW

R2

NOTE LOW

RANGE HIGH

R3

NOTE HIGH

R4

R5

BACK

UNDO

EXEC


R2 Selects the note Resolution for quantization. Use the Dial to change the value.

R3, R4 Sets the Low and High Range for quantization. Use the Dial to change the value.


- F1 Returns you to the Advanced Recorder menu.
- F2 Undoes the quantization which was just applied. This option is not always available.
- F7 Applies the quantization to your recording.

- Resolution determines the timing value the quantize function will use to shift the notes you want to quantize. For example, setting a quarter note resolution will shift all of the quantized notes to the nearest quarter beat. Setting an eighth note resolution will shift all of the quantized notes to the nearest eighth beat and so on. In the Advanced Recorder, quantize values are expressed in note values and as a number that indicates how many clock beats each note value contains. The Advanced Recorder divides each beat in a bar into 96 smaller clock beats. A Quarter note is 96 clock beats, an eighth note is 48 clock beats, and a sixteenth note is 24 clock beats and so on. The quantize resolution range is from quarter notes (96 clocks), to 64th note triplets (4 clocks).


- Range sets up timing “borders” around the Resolution value you specify. Notes within these borders will not be quantized and notes outside the borders will be moved to the nearest beat specified by the resolution value (Quarter note, Eighth note, etc.). The negative value represents the placement of the “border” before the beat, and the positive value represents the placement the “border” after the beat. Together, these two “borders” form a timing “range” around the specified beat.

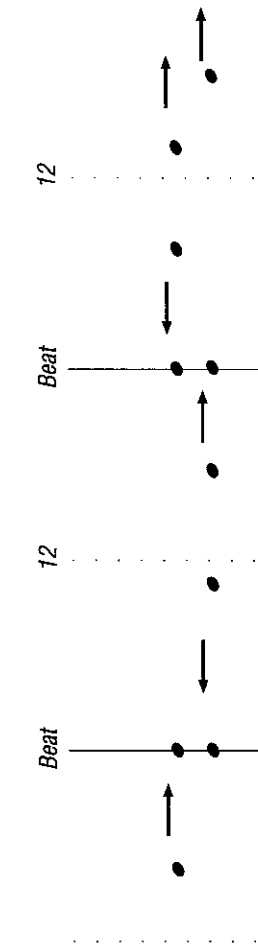

Selecting zero Range results in no “range”, and all notes are shifted to the precise beat.

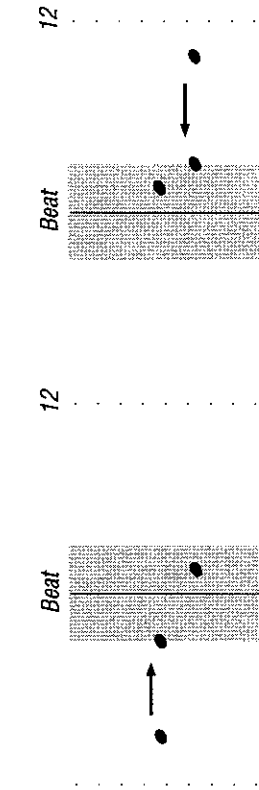

The notes that fall beyond the Range are moved to the closest “border” of the Range.

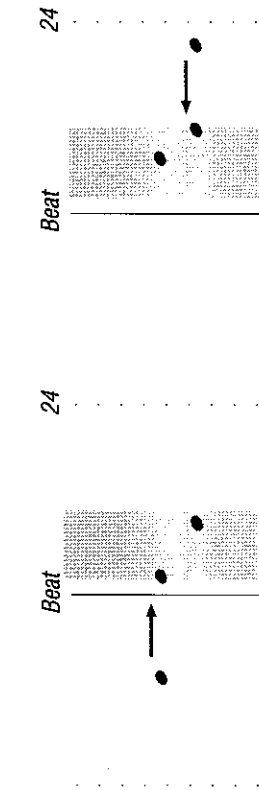

The notes that fall inside the Range are not shifted at all.

By experimenting with Resolution and Range settings, you can correct the timing of the notes in your recording while still allowing for a natural, human feel.

Copy

The Copy function allows you to copy a section or all of the data on a track to another location. The destination may be on the same track, or it can be on another track.

- The destination of the copied data must either be:
 - 1) A location that already has data in it.
 - 2) The first blank bar after the end of a track (Bar 1 if the destination track is empty).

For example, if a track only has 10 bars in it, you cannot copy data onto bar 20. You can, however, copy data to bars 1 through 11.

- Copied data replaces any current data that may be at the destination.

The screenshot shows a 'COPY' function dial. It has two rows of five buttons each, labeled L1-L5 and R1-R5. The L2 button is highlighted. In the center, there are four input fields: 'FROM TRACK' (value 1), 'TO TRACK' (value 1), 'START BAR' (value 1), and 'END BAR' (value 5). At the top of the dial is the word 'COPY'. At the bottom are three buttons: 'BACK', 'UNDO', and 'EXEC'. To the right of the dial are seven function keys labeled F1, F2, F3, F4, F5, F6, and F7.

L2 Selects the track to be copied. Use the Dial to select the track numbers 1-16, Tempo, or Chord.

L3 Selects the bar where the data that you are copying starts. Use the Dial to change the bar number.

L4 Selects the bar where the data that you are copying ends. Use the Dial to change the bar number.


R2 Selects the destination track. Use the Dial to select the track number 1-16, Tempo, or Chord.

R3 Selects the bar in the destination track where the copied data will be placed.

- F1** Returns you to the Advanced Recorder menu.
F2 Undoes the copying. This option is not always available.
F7 Proceed with copying.

Delete

Delete completely erases and removes the bars that you specify.

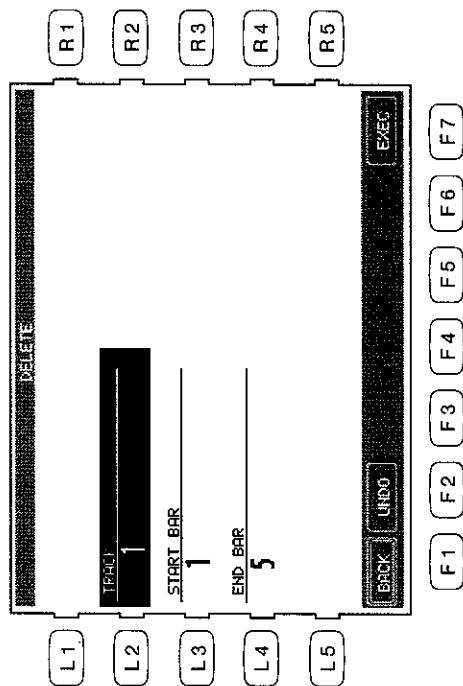

- L2 Selects the track to be deleted. Use the Dial to choose 1-16, Tempo, Chord or All.
- L3 Selects the first bar that has the data you want to delete. Use the Dial to change bars.
- L4 Selects the last bar that contains the data that you want to delete. Use the Dial to change bars.

- F1 Returns you to the Advanced Recorder menu.
- F2 Undoes the deletion. This option is not always available.
- F7 Proceed with the deletion.

Insert

The Insert function duplicates data from specified bars and copies it to a certain location. However, the current data at the destination is not erased, but instead is pushed back to make room for the copied data.


L1	INSERT				R1
L2	FROM TRACK 1	TO TRACK 1			R2
L3	START BAR 1	BAR 1			R3
L4	END BAR 5				R4
L5	BACK UNDO INSERT BAR EXEC				R5
F1 F2 F3 F4 F5 F6 F7					

- L2 Selects the track that contains the data you wish to duplicate. Choose from 1-16, Tempo, Chord or All.
- L3 Selects the first bar that has the data you want to duplicate.
- L4 Selects the last bar that has the data you want to duplicate.

- R2 Selects the destination track where you want this data inserted. Choose from 1-16, Tempo, Chord or All.
- R3 Selects the bar in the destination track where you want this data inserted.

- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the Insert. This option is not always available.
- F3, F4 Takes you to the Insert Bar menu.
- F7 Proceeds with the Insert.

- If you just wish to insert empty bars into a track, select INSERT BAR (F3 or F4), and a sub-menu will be displayed. You can insert empty bars into a track between bars that have data, or at the first blank bar at the end of the track.

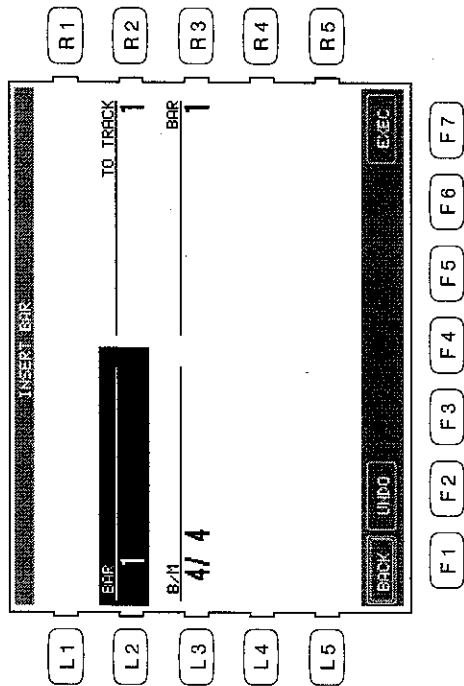

L2 Selects the number of empty bars you wish to insert. Use the Dial to change the value.

L3 Selects the time signature for the bars that are going to be inserted. Use the Dial to change the value.

R2 Selects the track where the empty bars are going to be inserted. Choose 1-16, Tempo, Chord or All.


R3 Selects the location in the destination track where you want the empty bars inserted. Use the Dial to choose the location.

- F1 Takes you to the previous menu.
- F2 Undoes the Insert. This option is not always available.
- F7 Proceeds with the Insert.

Erase

Erases data in the bars that you specify, and leaves them as empty bars.

- L2 Selects the track that has the bars you want to erase. Choose 1-16, Tempo or Chord.
- L3 Selects the first bar to be erased. Use the Dial to change the bar.
- L4 Selects the last bar to be erased. Use the Dial to change the bar.

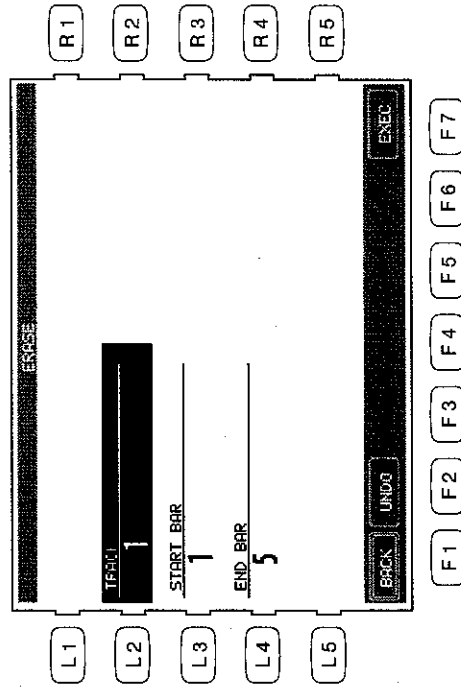


- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the Erase. This option is not always available.
- F7 Proceeds with the Erase.

Merge

Merge combines data from two tracks. You can make complex musical phrases using several tracks, then combine them together on one track. Remember that there can only be one instrument sound assigned to each track, so the resulting merged track will play all the combined data using one instrument sound. Merge can be useful for making rhythm patterns by first recording different drum/percussion parts using the same drum kit on several tracks for easy editing of each instrument, or recording the right and left hand parts of a piano piece and combining them later on one track to free up extra tracks for more recording.

- Merge does not automatically erase the track from where you copied the data.

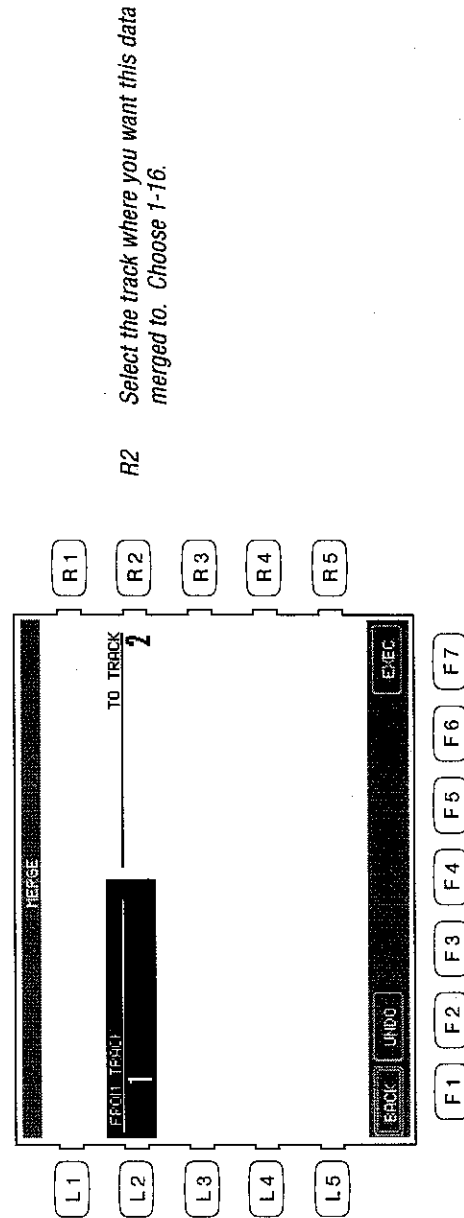

L2 Selects the track from where you want to copy data. Choose 1-16.

R2 Select the track where you want this data merged to. Choose 1-16.

- F1 Takes you to the Advanced Recorder menu.
 F2 Undoes the Merge. This option is not always available.
 F7 Proceed with the Merge.

Gate Time Modify

Gate time refers to the length of a note as a percentage. Whatever the length of a note is when it is first recorded, this value is considered as its Gate time of 100%. By editing the length of the note, you can shorten it to 10% or lengthen it to 300% of the original value.

L1	GATE TIME MODIFY		R1
L2	TRACK 1	MODIFY 50%	R2
L3	START BAR 1		R3
L4	END BAR 5		R4
L5			R5

BACK UNDO EXEC

F1 F2 F3 F4 F5 F6 F7

L2 Selects the track in which you want to modify Gate times. Use the Dial to choose the track.

L3 Selects the first bar of the data that you want to modify Gate times for. Use the Dial to change bars.

L4 Selects the last bar of the data that you want to modify Gate times for. Use the Dial to change bars.

R2 Adjusts the Gate time in 10% increments. Use the Dial to select a value from 10%-300%.

- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the Gate time adjustment. This option is not always available.
- F7 Proceeds with applying the Gate time adjustment.

Velocity Modify

Velocity refers to how hard a key is struck, which translates into the dynamics of how loud the produced sound is.

A note's Velocity is a numerical value from 1-127. When editing the note Velocities in your recording, you can change them within a +/-100 range of their original values.

L1		L2		L3		L4		L5		R1		R2		R3		R4		R5	
VELOCITY MODIFY TEMP 1 MODIFY -10																			
START BAR 1																			
END BAR 5																			
BACK UNDO EXEC																			
F1		F2		F3		F4		F5		F6		F7							

L2 Selects the track in which you want to adjust Velocity.

L3 Selects the bar where the data you want to adjust starts.


L4 Selects the bar where the data you want to adjust ends.

- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the Velocity adjustment. This option is not always available.
- F7 Proceeds with adjusting the Velocity values.

Clock Move

In the Resolution section of this manual we learned that the CP Advanced recorder divides each beat in a bar into 96 clock beats, also expressed as a quarter note. Therefore there are 48 clocks per eighth note, and 24 clocks per sixteenth note and so on. This relationship holds true regardless of the song's tempo.

On the CP, you can shift the timing of all notes in a track by shifting the entire track ahead (negative values) or behind (positive values) the beat by a certain clock value. Clock move is useful for adjusting the overall timing of a track. For example, if a certain sound you recorded responds slowly and sounds behind the beat, you could shift the timing of the notes ahead of the beat to compensate for the sounds slow response and make its timing feel more natural.

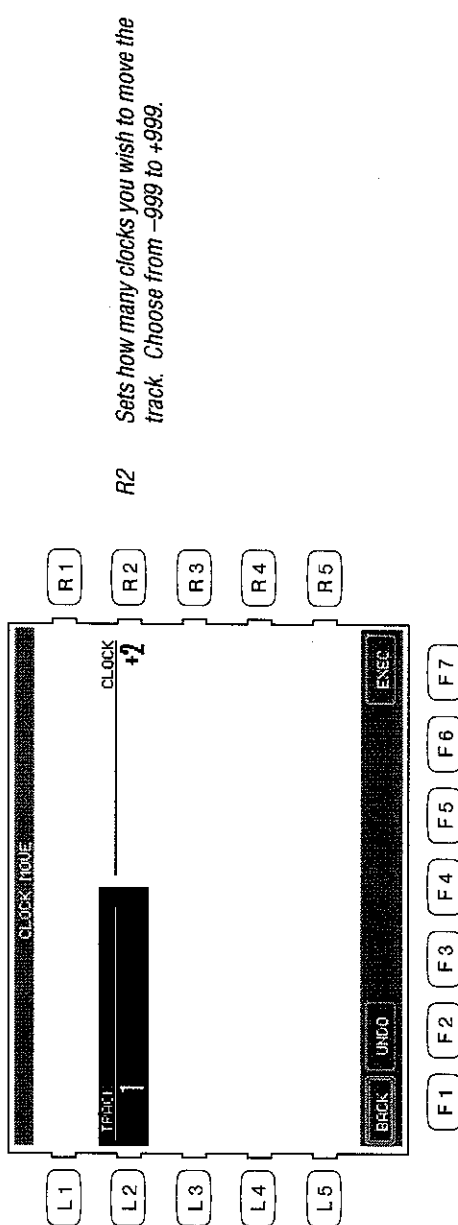

L2 Selects the track that you wish to move. Choose from 1-16.

R2 Sets how many clocks you wish to move the track. Choose from -999 to +999.

- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the clock move. This option is not always available.
- F7 Proceeds with applying the clock move.

Transpose

This will transpose the notes within a specified bar(s) up or down in half-step increments.

L1		R1
L2	TRACK TRANSPOSE +3	R2
L3	START BAR 1	R3
L4	END BAR 5	R4
L5		R5

BACK

UNDO

EXEC

F1

F2

F3

F4

F5

F6

F7

L2 Selects the track that has the notes you want to transpose. Choose from 1-16.

L3 Selects the bar where the notes you want to transpose start.

L4 Selects the bar where the notes you want to transpose end.

R2 Adjusts transposition amount in half-step increments from -24 to 24.

- F1 Takes you to the Advanced Recorder menu.
- F2 Undoes the transposition. This option is not always available.
- F7 Proceeds with applying the transposition.

Event Edit

Event Edit enables you to examine and edit your performance note by note.

To use Event Edit:

- 1) Select Event Edit in the Advanced Recorder menu. The Event Edit screen will be displayed.
- 2) Choose the track that you want to edit using the TRACK buttons (F3, F4). Note that Style, Chord, and Tempo track can be edited as well.
- 3) Use the L buttons to scroll up or down the event list until you find the specific event that you want to edit. You can also use the Dial to scroll through the event list. You will hear the individual events being played as you scroll over them.
- 4) Use the CURSOR buttons (F5, F6) buttons to determine how you want to scroll through the event list. Selecting Bar scrolls through the event list bar by bar, selecting Beat scrolls through the event list beat by beat and so on. The selection will become highlighted.

The screenshot shows the 'Event Edit' screen with a table of event data. The table has columns for Bar, Beat, Clock, Event, Velocity, and Length. The data is as follows:


Bar	Beat	Clock	Event	Velocity	Length
3	1	0	Note A	2	127
3	2	0	Note A	2	127
3	3	0	Note A	2	127
3	3	48	Note B	2	127
3	4	0	Note C	3	127
5	4	95	Data End		

Below the table are buttons for L1 through L5, R1 through R5, and F1 through F7. The F1-F7 buttons are labeled with their functions: F1 (Menu), F2 (Track), F3 (Cursor), F4 (Play), F5 (Delete), F6 (Insert), F7 (Repeat).

- L2 Moves the cursor to the previous bar.
- L3 Moves the cursor up the event list.
- L4 Moves the cursor down the event list.
- L5 Moves the cursor to the next bar.

- F1 Takes you to the Advanced Recorder menu.
- F3, F4 Selects the track to work with.
- F5, F6 Moves the cursor across the columns in the event list.
- F7 Starts playing the Track.

- 5) Select the function that you would like to apply to this event. You can select DELETE (R1) to remove the event, INSERT (R2) to create a new event at any specified location, or REPLACE (R3) to change the existing event. Enter new values in the pop up Entry Box when you select INSERT or REPLACE. When Inserting or Replacing an event, use the CURSOR buttons to select the specific part of the event you want to edit. Use the Dial to change the value.
- 6) Press the EXEC (F7) button to proceed, or press CANCEL (F2). The CP will prompt you for confirmation.
- 7) Use the MENU button (F1) to return to the Advanced Recorder menu when you are done editing.

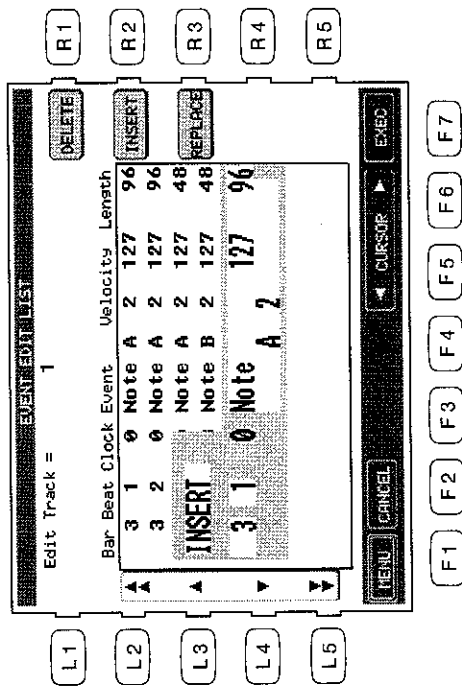

- F1 Takes you to the Advanced Recorder Menu.
 F2 Cancel the edit.
 F5, F6 Moves the cursor across the columns in the event list.

Creating Your Own Styles

The Concert Performer contains 220 built-in Styles covering a wide variety of musical genres. There are two powerful features that allow you to edit any of these Styles to better suit your musical tastes, or even create your own Style entirely from scratch! These are the Conductor and the Style Maker.

The Conductor allows you to edit the Style data and personalize it to your taste. The Conductor offers two ways to edit: Easy Edit and Advanced Edit.

The Style Maker allows you to create Styles of your own. There are three ways of using this feature: Make a New Style, Edit an Existing Style, and Phrase Combination.

The CP can store up to 20 User Styles on board at one time. However since you can also save your original Styles onto a floppy disk, your library of Styles is virtually unlimited.

Thanks to the Style Convert Software developed by EMC Software, you can also convert style data from many other manufacturers for use on the CP. That way you can take advantage of the hundreds of Style disks that are available on the market!

Conductor

The Conductor is used to edit Preset or User Style data. There are two editing methods offered by the Conductor.


Easy Style Edit

This is an easy way to edit the Style data. The CP built-in styles are comprised three different types, Full, Intimate, and Solo Piano Styles. A Full Style consists of six instrument tracks called Sections. These are the Drums, Bass, and four Accompaniment tracks. The Intimate Styles have four Sections, Drum, Bass, And Two Accompaniment tracks. The Solo piano Styles have two Accompaniment Tracks (Right and Left hand) and no Drum or Bass tracks.


When you play a Style, each of these sections plays a musical Phrase composed for that type of instrument. Each section can play one of four different musical phrases, one for each of the four variations within a Style. Easy Edit lets you assign which of these four Phrases will be played by each section for each of the four variations within the style. This means you can mix and match the different phrases for each section to create your own unique arrangements. Once you are satisfied with your edits, you can save your Easy Style edits to the PRESET STYLE.

Advanced Style Edit This allows you to edit the finer details within a Style. You have control over each Section's Sound Assignment, volume level, panning, chorus, and reverb settings. Once you are satisfied with your edits, you can save your Advanced Style edits to the **USER CONDUCTOR**.

To use Easy Edit:



- 1) Select the Style and the Variation (1-4) that you would like to edit.
- 2) Press the **EDIT** button. The LCD screen will display the **Easy Style Edit** screen.
- 3) Use the **F2-F7** buttons to select a Section to edit.
- 4) Use the **L** buttons to select the desired Phrase (1-4) for each Section. You can edit while the Style is running to hear your changes.
- 5) To mute a Section, press the corresponding **F** button. Pressing the **F** button again will un-mute the section.
- 6) If you would like to save your edits, press the **SAVE TO PRESET (R1)** button. The saved contents will be written to the **PRESET STYLE**. If you don't save your edits, they will be lost when you turn the power OFF.
- 7) Press the **MORE (F1)** button to go to the **Advanced Style Edit** screen.
- 8) Press the **EXIT** button to leave the **Easy Style Edit** screen.

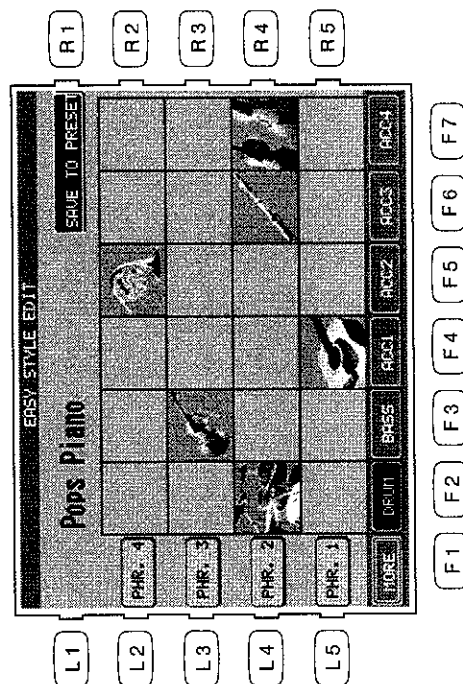

L2-L5 Selects a Phrase for the Section.

R1 Saves the changes to the Preset Style.

*F1 Go to Advanced Edit section.
F2-F7 Selects which Section is being changed. Pressing again will mute the Section.*

- Pressing the SAVE button will save all Styles at one time. You cannot save individually.
- For Intimate Styles the ACC 3/4 Sections are not used and cannot be edited.
- For Solo Piano Styles the Drum, Bass, and ACC 3/4 Sections are not used and cannot be edited.

Resetting the Style

The CP always remembers the original Preset Style settings. If you wish to restore those factory settings before saving your edits, simply press the RESET button in the Conductor.


- If you would like to revert all Styles back to their original factory settings, after you have pressed the SAVE button, use reset Conductor on the Soft Reset screen. See the section titled "Soft Reset" on page 144.

Note:

Easy Edit doesn't allow you to edit the Intro, Ending and Fill-ins. However, muting a Section in the Style will result in automatic muting of the same Section in the Intro, Ending and Fill-ins. If you mute a certain Section, you need to consider what effect it will have on the overall Style.

To use Advanced Edit:

- 1) Select the Style and the Variation (1-4) that you would like to edit.
- 2) In the EASY STYLE EDIT screen, press the MORE button (F1). The Advanced Style Edit screen will be displayed.
- 3) Use the F2-F7 buttons to select a Section to edit.

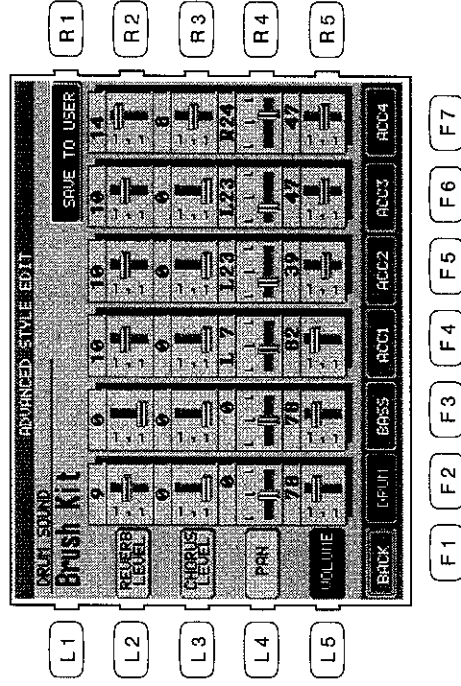

- L1 Selects a sound for the Section.
- L2 Adjusts the Reverb level.
- L3 Adjusts the Chorus level.
- L4 Adjusts panning.
- L5 Adjusts the volume level.

R1 Saves the changes to the User Conductor.


F1 Back to the EVENT STYLE EDIT settings.

F2-F7 Selects the Section to change. Pressing again will mute the Section.

- 4) Use the L buttons to select a setting and use the Dial to change its value. You can make your edits while the Style is playing to hear your changes.
- 5) Press the BACK (F1 button) to return to the Easy Style Edit screen.

- 6) If you would like to save your edits, press the **SAVE TO USER (R1)** button. Your edits will be written to the **USER CONDUCTOR**. If you don't save your edits, they will be lost as soon as you exit the Advanced Style Edit screen.

- 7) Press the **EXIT** button to exit the Advanced Style Edit screen.

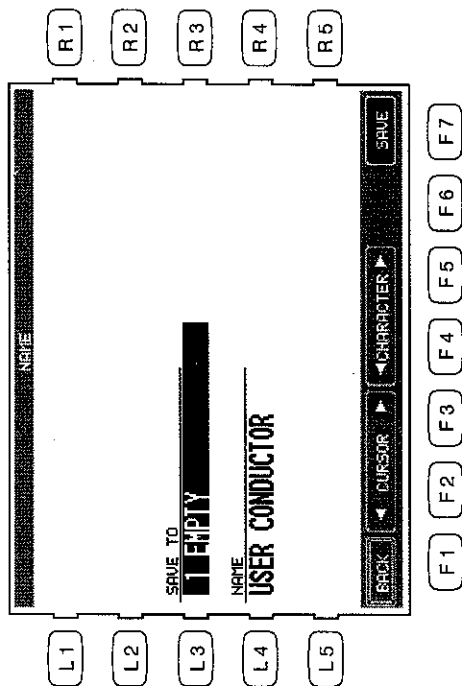

L3 Selects the memory location (1 through 40) where you wish to save your User Conductor Style.

L4 Names your Style.

- F1 Back to the Advanced Style Edit
 F2, F3 Moves the cursor over the characters in the Style name.
 F4, F5 Selects a character to enter as part of the name.
 F7 Proceeds with saving the Style.

Important Note:

If you are using a User Style as the Source Style of your User Conductor, that User Style must always be kept at the same location in the CP, or else the User Conductor will not be able to locate it.




Resetting the Style

You can restore the original Style settings by pressing the RESET button. This will completely clear the changes made to the Styles except any data already saved as a User Conductor Style. You can also instantly discard the current changes by pressing the EXIT button to leave the Advanced Edit screen.

To use a saved User Conductor Style:

- 1) Press the USER CONDUCTOR button. If there are any User Conductor Styles available, they will be displayed.
- 2) Use the F1-F4 buttons to select the page that contains your desired User Conductor Style.
- 3) Use the L or R button to select the desired User Conductor Style.

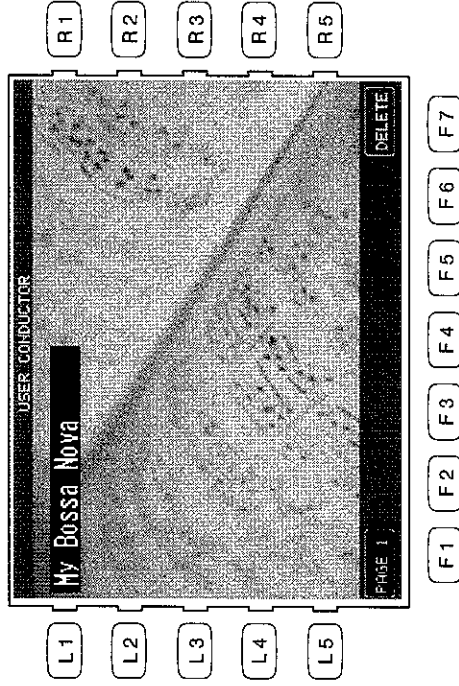

Use the L or R buttons to select your desired User Conductor Style.

F1-F4 Search for User Conductor Styles on the other pages.
F7 Deletes the selected User Conductor Style.

Making a New Style

This is the most flexible way to create a new Style.

You can make a completely new style from scratch or edit an existing style. First, read the explanation below about the configuration of a style and understand how a style is made.

Configuration of a Style

A complete Style consists of the following patterns:

Basic pattern	4 patterns (Variation 1-4)	Max 16 measures
Fill-in	4 patterns (Fill-In 1-4)	1 or 2 measures
Intro Major	2 patterns	Max 16 measures
Intro Minor	2 patterns	Max 16 measures
Ending Major	2 patterns	Max 16 measures
Ending Minor	2 patterns	Max 16 measures

- Each of these patterns in a Full Style is made up of six Sections—Drum, Bass, ACC1, ACC2, ACC3 and ACC4. In an Intimate Style there are four Sections—Drum, Bass, ACC1, ACC2. In a Solo Piano Style there are two Sections—ACC1, ACC2. You can use up to six sections in a User Style but you don't necessarily have to use all of the sections to create a Style. For example, just like the Intimate and Solo Piano Styles you may not need to use some Variations or Sections to accomplish your musical idea. These unused sections or variations may be left blank.
- The different Sections can be of varying bar lengths as long as they stay within the limit. Having them all the same length may make the Style easier to use in a song, but you may find that having uneven bar lengths among the Sections can create interesting musical results.
- For simplicity's sake it is advisable to record your new style in the key of C.

To create a Style:

- 1) Press the **ADVANCED RECORDER** button. The LCD screen will display the **Advanced Recorder** menu.
- 2) In the **Advanced Recorder** menu, press the **Style Maker** button (R5). The LCD screen will display the first **Style Maker** screen.
- 3) To make a completely new Style, press the **Make New Style** button (L1) and use the Dial to select the time signature for the style you are going to make. To edit an existing style, press the **Edit Existing Style** button (L3) and use the Dial to select the style you want to edit.

- 4) Press the ENTER button (F7). The Style Maker Record screen will be displayed.

L1	Make New Style	STYLE MAKER	BERLINERS	4/4	R1	Changes the Time Signature.
L2					R2	
L3	Edit Existing Style	EDIT STYLE	Fast Big Band		R3	Selects the Style you want to edit.
L4					R4	
L5	Phrase Combination	INITIAL STYLE	Fast Big Band		R5	Selects the Initial Style.

ENTER

MENU

F1

F2

F3

F4

F5

F6

F7

- L1** *Selects Make New Style.*

- L3** *Selects Edit Existing Style.*

- L5** *Selects Phrase Combination.*

- R1 Changes the Time Signature.*

- R3** *Selects the Style you want to edit.*

- R5** *Selects the Initial Style.*

- F1** Go to the Advanced Recorder menu.

- F7** Enters the selected Style Maker menu.

- 5) Use the L and R buttons to select which pattern to record.

- 6) Press the Bar Length button (R1) and use the Dial to change the bar length of the pattern.

- 7) Press the REC button (F7). The Style Maker Record screen will be displayed.

STYLE MAKER

B/M: 4/4 **NEW STYLE** **EDGE LENGTH 4**

EDIT PATTERN

INTRO1	INTRO2	ENDING1	ENDING2
Ma j min	Ma j min	Ma j min	Ma j min

VARIATION

1	2	3	4
1	2	3	4

FILL

1	2	3	4
1	2	3	4

SAVE **BACK** **REC**

L1 **L2** **L3** **L4** **L5** **R1** **R2** **R3** **R4** **R5** **F1** **F2** **F3** **F4** **F5** **F6** **F7**

Changes the bar length.

Selects an Intro and Ending to record.

Selects a Variation and Fill-in to record.

Saves the new Style to User Style.

- L3** *Selects an Intro and Ending to record.*

- L4** *Selects a Variation and Fill-in to record*

- L5** Copies a phrase from another pattern.

- R1 Changes the bar length.

- P3** *Selects an Intro and Ending to record.*

- R4** *Selects a Variation and Fill-in to record.*

- R5 Saves the new Style to User Style.

- F1** Takes you to the Style Maker menu.

- F7 Takes you to Style Maker Record screen.**


- 8) Use the L, R and F buttons to select the different record functions. Use the Dial to change the values.
- 9) Press the REC START button (R4) to start recording. There will be an automatic 2-bar count in.
- 10) Start playing on the keyboard. The recording is looping, which means when it comes to the end of the last bar, it automatically goes back to the beginning of the first bar. In the Edit Existing Style, the existing style will play.

L1	L2	L3	L4	L5	R1	R2	R3	R4	R5
Selects the Part to be recorded.	Sets the recording tempo.			Takes you to the Detail Setting menu.	Selects the Sound for the selected Part.	Selects the Quantize resolution. This is input Quantize and your playing will automatically be Quantized as you play.		Starts the recording.	Saves the Style to User Style.

Note:

Press the Detail Setting button (L5) to edit the detail settings for the Auto-accompaniment system. See page 87 for an explanation of the Detail Settings.


- 11) To erase any unnecessary or incorrect notes, use the ERASE (F1) button. While the pattern is still recording the notes will be erased as long as you press and hold the button.
- 12) When finished recording, press the REC STOP button (R4).
- 13) Follow the above procedure to record any other desired patterns as needed.
- 14) To save the recorded Style, press the SAVE button (R5). The Style Save screen will be displayed.

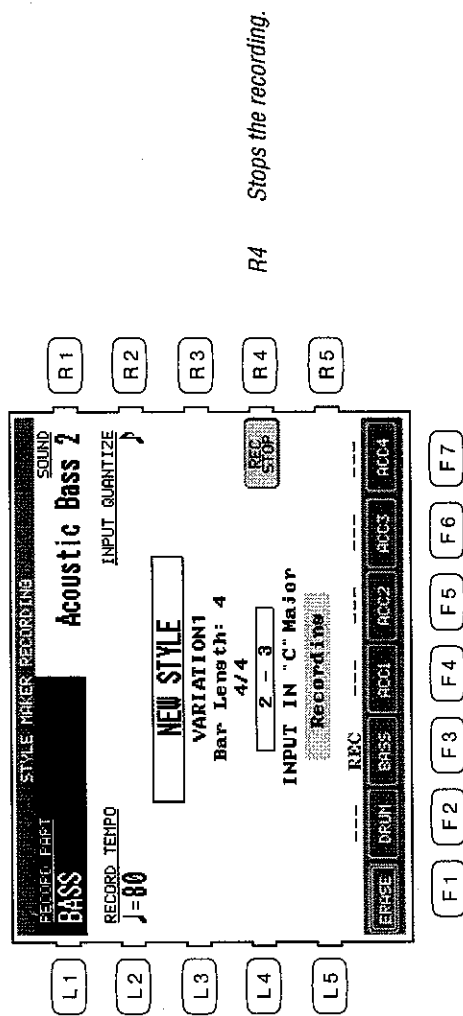

F1 Erases the recorded notes.

R4 Stops the recording.

- 15) Press the PRESET TEMPO button (L1) and use the Dial to set the default tempo for the style.
- 16) Press the SAVE TO button (L3) and use the Dial to select the location to save your new Style.
- 17) Press the NAME button (L4). Use the F2 and F3 buttons to move the cursor and use the F4 and F5 buttons or the Dial to select the characters to name the style.
- 18) Press the SAVE button (F7).

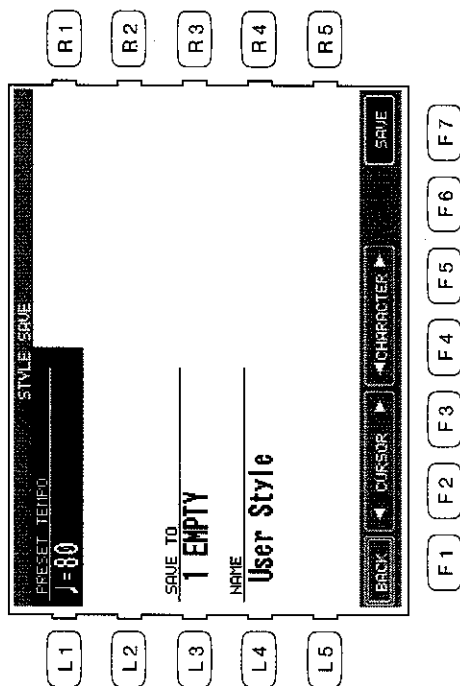

L1 Sets the default tempo for the style.

L3 Selects the location to be saved.

L4 Names the style.

F1 Takes you to the Style Maker Record screen.

F2, F3 Moves the cursor.

F4, F5 Selects the characters.

F7 Saves the style to User Style.

Auto-accompaniment System

The Concert Performer Auto-Accompaniment System (ACC) analyzes your playing and adjusts the note data recorded in the different Phrases in a pattern to match the root key and chord type you are playing. The ACC System also shifts the octave for each phrase to keep each section playing within its musically useful range. To get the most out of this System, any new Style you create can benefit from some fine tuning of these settings.

When you press the **DETAIL SETTINGS** button (L5) on the Style Maker Record screen, the Style Maker Detail Settings screen will be displayed.

Accompaniment Type (ACC Type)

This setting determines how Phrases being played by a particular section in a pattern will be analyzed by the Auto-accompaniment (ACC) System. There are Two Accompaniment Types: Chordal and Scalic (melodic). Chordal Phrases usually consist of block chords or arpeggiated chords. You should set this kind Phrase to Chordal. Scalic Phrases usually play melodic phrases that serve to add interest to the style as well as provide counter melodies and riffs. Melodic Phrases or Phrases that contain chromatic passages should be set to Scalic. Scalic Phrases can also contain chords but they will be analyzed differently than chords in a Chordal Phrase. The Bass section is automatically set to Scalic since it will rarely if ever play chords.

The terms **Open** and **Close** apply to Chordal Phrases, and refer to how the CP will regulate the voicing of a Chordal Phrase. Setting a Section to Open will allow for open-voiced chords, which might be good for guitar and string sounds. Setting a Section to Close maintains closed voiced chords, which are better suited to piano parts and other chording or comping instruments.

Range

This determines the chord inversions that a Chordal Phrase will play.

The term "range" here has nothing to do with the span of actual chord notes. It selects which note in the chord will serve as the basis of the chord inversion.

HI is the initial setting and is recommended as a starting point. MID plays an inversion based on the next lower note in relation to HI, while LO plays an inversion based two-notes lower.

Crossover

This determines the point where a Scalic Phrase will be transposed to keep the notes in a musically useful range. When notes in a Scalic Phrase fall below the Crossover point you select they will be transposed up one octave by the Accompaniment System. For example if you set the Crossover

point to E, the Phrase would begin to be transposed up one octave whenever you play a chord with an E as the root.


Experiment with the different Chordal and Scalic settings to find the one that works best with each Phrase.

Bass Limit

This is an option for the Bass section and sets the limit for the lowest note the Bass will play. If a note in a Bass Phrase falls below the limit, it will automatically be transposed up an octave.

To adjust the auto-accompaniment system:

- 1) Use the L2-L4 buttons to select the setting you wish to change.
- 2) Use the F3-F7 buttons to select the Section.
- 3) Use the Dial to select or change a value.
- 4) When done, press the BACK button (F1) to go back the previous menu. Then save the Style if necessary.

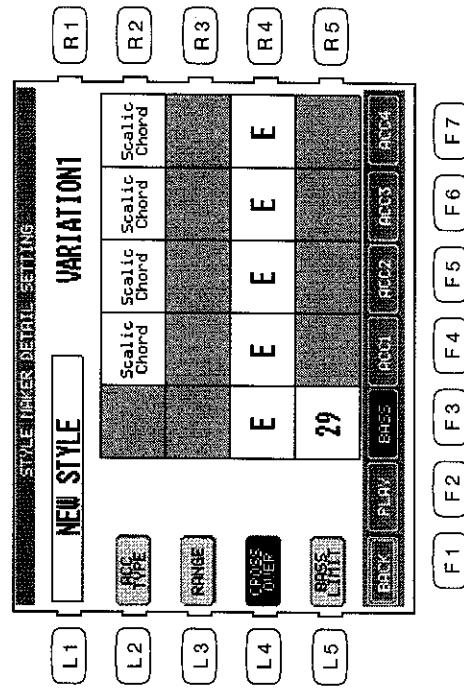

- F1 Takes you to the previous menu.
 F2 Plays the style.
 F3-F7 Selects the Section.

- L2 Changes ACC Type.
 L3 Changes RANGE.
 L4 Changes CROSS OVER.
 L5 Changes BASS LIMIT.

Making a Style with Phrase Combination

Phrase Combination is similar to Easy Style Edit in the Conductor. Phrase Combination however, lets you not only combine Phrases from within the selected Style but you can also combine Phrases from any of the Styles in the CP to create a new Style. Additionally you can edit Fill-ins and basic patterns (Variations).

- You cannot change the Intro and Ending Phrases. These will remain the same as in your selected Style.

To use Phrase Combination:

- 1) In the Advanced Recorder menu, press the Style Maker button (R5). The LCD screen will display the first Style Maker screen.
- 2) Press the Phrase Combination button (L5) and use the dial to select the initial style.
- 3) Press the ENTER button (F7) to proceed to the next screen.
- 4) Use the L2 and L3 buttons to select which of the four Fill-ins and Variations you would like to change.
- 5) Use the L3 and L5 buttons to select the Section to change.
- 6) Use the F4 and F5 buttons to move the cursor between the Style and Phrase column.
- 7) Use the Dial to change the current Style or Phrase. You can jump to the desired Style category by pressing the Style select buttons directly.
- 8) Press the PLAY button (F2) to listen to the new Style.
- 9) Press the SAVE button (F7) to save the new Style.

Initial Style: Pops Piano

EDIT PATTERN

VARIATION	1	2	3	4	1	2	3	4
1								
2								
3								
4								

DRUM **STYLE** **PHRASE**

BASS	Pops Piano	VARI 1
ACC1	Pops Piano	VARI 1
ACC2	Pops Piano	VARI 1
ACC3	Pops Piano	VARI 1
ACC4	Pops Piano	VARI 1

BACK **PLAY** **CURSOR** **SAVE**

L1 L2 L3 L4 L5 R1 R2 R3 R4 R5

- L2 Selects the pattern to change. Choose Variation 1-4 or Fill-in 1-4.
- L3, L5 Selects the Section to be modified.

- R2 Selects the pattern to change. Choose Variation 1-4 or Fill-in 1-4.

- F1 Takes you to the previous menu.
 F2 Plays the new style.
 F4, F5 Moves the cursor between the Style and Phrase columns.
 F7 Saves the modified data as a new Style.

- 10) Press the PRESET TEMPO button (L1) and use the dial to set the default tempo for the style.
 11) Press the SAVE TO button (L3) and use the Dial to select the location to be saved.
 12) Press the NAME button (L4). Use the F2 and F3 buttons to move the cursor and use the F4 and F5 buttons or the Dial to select the characters to name the style.
 13) Press the SAVE button (F7).

L1 Sets the default tempo for the style.

L3 Selects the location to be saved.

L4 Names the style.

The screenshot shows a screen titled "STYLE MAKE". At the top, there are five buttons labeled L1, L2, L3, L4, and L5. Below these, there are three input fields: "PRESET TEMPO" with the value "J=80", "SAVE TO" with the value "1 EMPTY", and "NAME" with the value "User Style". To the right of these fields are five buttons labeled R1, R2, R3, R4, and R5. At the bottom of the screen, there is a row of seven buttons: F1, F2, F3, F4, F5, F6, and F7. On the left side of the screen, there is a vertical bar with buttons labeled "BACK", "CURSOR", "CHARACTER", and "SAVE".

F1 Takes you to the Style Maker Record screen.

F2, F3 Moves the cursor.

F4, F5 Selects the characters.


F7 Saves the style to User Style.

Style Convert

Style Convert is a technology originally developed for personal computers by EMC Software. Kawai is proud to have licensed it for use in our musical instruments. This software reads many of the commercially available Style data disks made by several popular keyboard manufacturers and converts them for use with the Concert Performer. This conversion process is extremely easy, and once converted the Style can be re saved in The CP's own Style format.

To use the Style Convert Program:

- 1) Make sure that there is an empty location in the User Style area to hold the converted Style. The Style Convert program will automatically save the converted Style there.
- 2) Press the DISK button. The LCD screen will display the Disk Menu.
- 3) Press the STYLE CONVERT button (R4) on the DISK menu. The Style Convert screen will be displayed and prompt you to insert the Style Convert program disk in the floppy drive.
- 4) Insert the program disk in the drive and then press the F7 button to continue. Press the F1 button to cancel the Style Convert process.

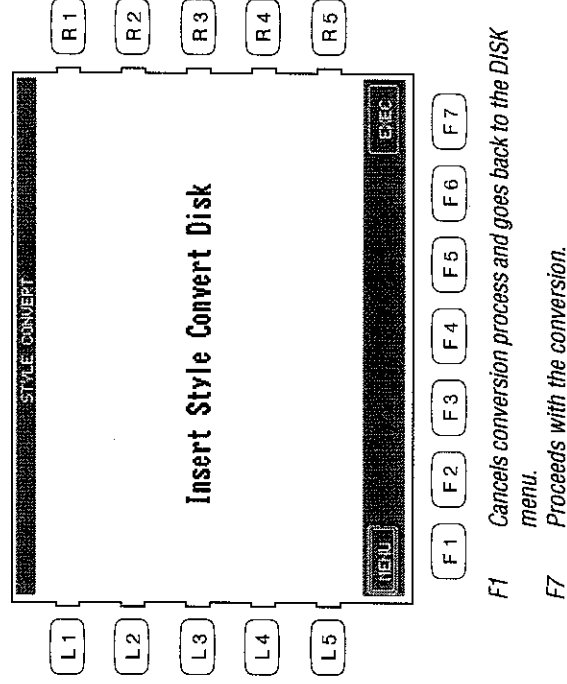

- 5) After the CP reads the program, it will display a list of the manufacturers Style formats that can be converted. Use the L2 and L4 buttons to select the format you would like to convert. Press the F7 button to continue.

STYLE CONVERT SELECT

Select convert module.

▲
 KAWATA/GR
 GEN_WX2
 KORG
 GEN_WS2
 SOLLON
 ROLAND
 TECHNICS
 WERSI
 ▼


BACK EXEC

L1 L2 L3 L4 L5 R1 R2 R3 R4 R5 F1 F2 F3 F4 F5 F6 F7

L2, L4 Selects a Style format.

- F1 Takes you to the previous screen.
 F7 Proceeds with the conversion.

- 6) Insert the appropriate manufacturers Style disk when you are asked to do so. Press the EXEC button to proceed.
- 7) Select the desired Style to convert and press EXEC button. The CP will begin converting that Style.

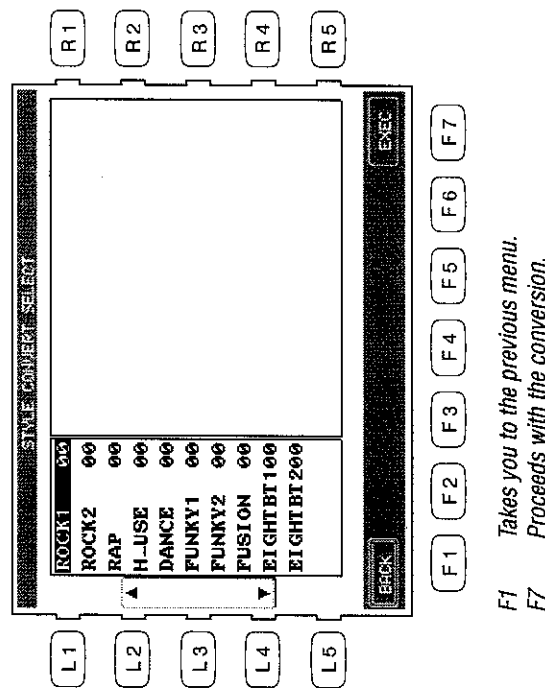

L2, L4 Selects the desired Style from the disk.

- 8) When the conversion is complete, the **SAVE USER STYLE** screen will be displayed. Save the new converted Style using the same procedure as saving a new User Style.
- You have just learned the basic procedure to convert other manufacturers Style formats. For detailed information on the Style Convert program, read the instruction sheet that comes with the software. There you will find a list of which manufacturers' formats are supported. For technical information contact EMC Software directly at the location listed on the instruction sheet.
 - An optional style conversion software package for use with a personal computer is also available from EMC software. It is called "Style Works 2000 Kawai". It offers more features than the internal conversion program. To inquire about obtaining it, contact your local Kawai dealer or distributor.

Editing Sounds

Even though the Concert Performer has over 900 high quality instrument and drum sounds built-in, there may be times when you would like to change some of the qualities of a sound to really get the tonal character that you have in mind. The CP allows you edit certain settings for individual sounds. You can choose to change subtle nuances of the sound or even drastically change the sound's

character to the point where you can no longer recognize what it was originally! Once you have made these changes, you can save up to 20 User Sounds in the User Sound Category, or a virtually unlimited number onto floppy disks.

Editing the Preset Effect Settings


Each of the CP instrument Sounds has preset Chorus and Effect settings that are applied automatically whenever that sound is selected. You can change these settings to suit your tastes and save them so they become the preset settings for that Sound.

To adjust the settings:

- 1) Select the sound you want to edit and press the **SOUND EDIT** button (F7). The LCD screen will display the Sound Edit Menu.
- 2) Press the L2 button to select Edit Preset Sound Settings. The Preset Sound Settings screen will be displayed.

L2 Selects Edit Preset Effect Settings

L3 Selects Make User Sound.

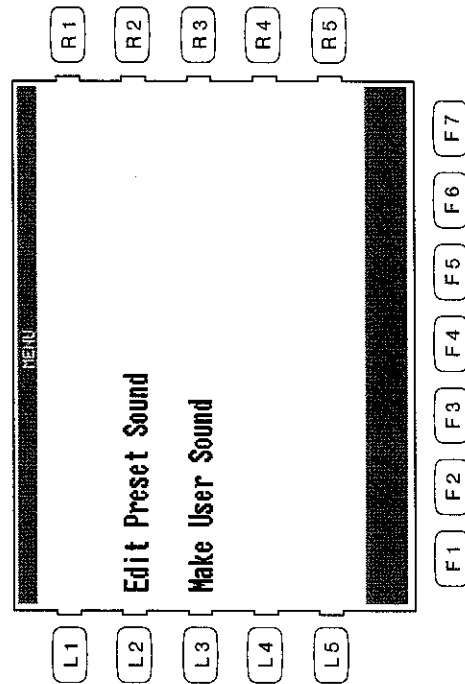

- L1 Selects the preset sound to edit.
- L2 Turns the Chorus on/off.
- L3 Turns the Effect on/off.
- L4 Selects an effect type.
- L5 Adjusts the effect setting.

- 3) Press the L1 button and then turn the Dial to select which preset sound you wish to modify.
- 4) Use the L and R buttons to select the different effect settings and use the Dial to change their value.
- 5) When you are finished, press the SAVE button (F7) to save your settings.

SOURCE NAME		PRESET SOUND	
L1	Plunger Trumpet	R1	
L2	CHORUS Off	R2	Adjusts the chorus level.
L3	EFFECT Off	R3	
L4	EFFECT TYPE Delay 3	R4	R4, R5 Adjusts the effect setting.
L5	DELAY TIME 70	R5	

LEVEL 50

WET BALANCE 10

FEED BACK 50

BACK

SAVE

F1
F2
F3
F4
F5
F6
F7

F1 Takes you to the previous menu.
F7 Saves the settings.

- Pressing the SAVE (F7) button will save all changes made in the Preset Effect Settings menu. If you exit the Preset Effect Settings menu without saving your changes, the settings will remain unchanged.

Making a User Sound

There are two steps to making a User Sound: Editing the effect settings—same as described in the previous section—and editing the sound's character.

You can adjust six parameters of the sound character: Vibrato Depth, Brightness, Attack, Decay, Sustain, and Release.

Vibrato Depth controls the depth of the Vibrato effect. Positive values produce a deeper Vibrato. Negative values produce a shallower Vibrato. The actual speed of the vibrato is preset for each sound.

Brightness controls the Strength of the high frequencies. Higher values produce a brighter sound, lower values produce a darker sound.

Attack determines how quickly a sound reaches its maximum volume after you press a key. Positive values produce a slower attack that is more gradual and smooth, while negative values produce a faster attack that is more percussive in nature.

Decay determines how quickly the volume of the sound decreases after it reaches its maximum volume while the key is still held down. Positive values produce a slower decay, while negative values produce a faster decay.

Sustain determines the volume level of the sound after the decay portion of the sound is complete. Positive values produce a louder volume, while negative values produce a softer volume.


Release determines how long it takes for the sound to fade away to silence after you release the key. Positive values produce a slower fade, while negative values produce a faster fade.

Note:

For some sounds, changing the values for these parameters may have no effect. Each sound has a pre-programmed setting for each of these parameters. When you change the values you are increasing or decreasing the value from the pre-programmed setting. If the setting for a certain sound parameter is 0 for example, then changing the value will have no effect.

To make a User Sound:

- 1) Select the sound you want to edit and press the **SOUND EDIT** button (F7). The LCD screen will display the **Sound Edit Menu**.
- 2) In the **Sound Edit menu**, select **Make User Sound (L3)**. The **User Sound Settings** screen will be displayed.
- 3) You can edit the settings for **Vibrato, Brightness, Attack, Decay, Sustain and Release**.
- 4) Use the **F3** and **F4** buttons to select a setting and use the **Dial** to change its value. You can always play the keys as you edit the sound, enabling you to hear what changes are being made.
- 5) Press the **MORE** button (F2) to edit the **Effect Settings** for your new sound, which is the same screen as described in the previous section.
- 6) If you would like to save the changes you have made, press **SAVE** (F7). Otherwise press **BACK** (F1) to return to the previous menu or use the **EXIT** button to go back to the main **Sound Edit** menu.

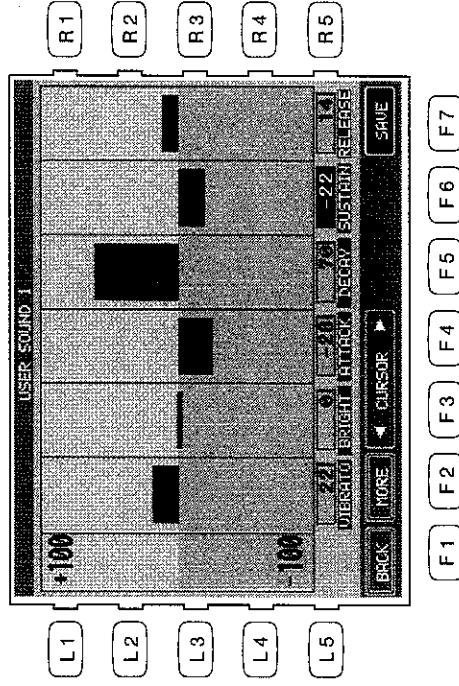

F1 Takes you to the previous menu.

F2 Takes you to the Preset Effect Settings menu.


F3, F4 Move the cursor.

F7 Proceeds with saving the sound.

- 7) If you press **SAVE** (F7), the **Save To User Sound** screen will be displayed. Use the **L3** button to select **Save to User Sound** on the screen. Use the **Dial** to select the **User Sound** location number where you want to save your new Sound. You can name the sound by using the **F2-F5** buttons. Pressing the **SAVE** button (F7) one more time will save the sound.

L3 Selects the location where the sound will be saved.

L4 Names the Sound

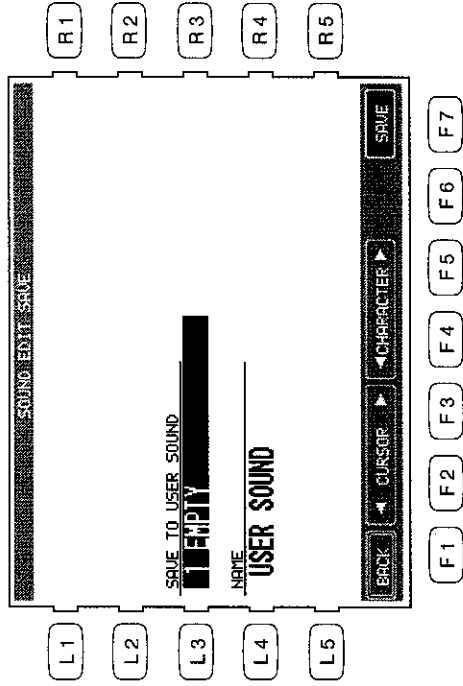

F1 Takes you to the previous menu.

F2, F3 Moves the cursor.

F4, F5 Selects the character.

F7 Saves the edited sound to User Sound.

- To select and play your new User Sound, press the USER SOUND button located in the SOUND section of the front panel, then select the desired User Sound.

Playing Songs from a Floppy Disk

The Concert Performer's floppy disk drive provides a convenient way to playback songs recorded in the CP's Internal Format or Standard MIDI File (SMF) format. Songs in the CP's internal format typically are ones that you have recorded on your own instrument. There are many sources of SMF songs, including disks for sale from professional musicians and publishers, songs shared among musicians and hobbyists, and Internet sites that feature SMF songs available for download.

If you wish to play a song without any intentions to make permanent changes or additional recordings, you can use the CP's Disk Song Play function to load the song very quickly for playback. Using the disk drive in this way makes the Concert Performer an enjoyable source of entertainment for parties and other social events, as well as a great tool for the professional musician or music educator.

About songs on Floppy Disk

If you will use a blank disk to store and play your own compositions made on the Concert Performer, there isn't much to worry about. The CP can format the disk (if it isn't already formatted), and the CP's internal song format remembers everything about your song, including which sounds to use with the recorded tracks. However, if you wish to purchase a disk of songs from your music store or publisher, play a disk given to you by someone else, or play songs downloaded from the Internet, you will need to remember a few simple points:

- The CP reads only DOS formatted disks, either double-sided double-density (720KB) or high density (1.4MB). These are the most commonly used disk formats in both computers and musical instruments.
- The CP recognizes song files written in the Standard MIDI File format as long as they have DOS file names ending with ".MID". There are two types of Standard MIDI File formats, Format 0 and 1. The CP can read the song data of both formats, however it will only display the lyrics of a song written as format 0.
- Songs that have been composed with the General MIDI (GM) standard will sound fine without any additional work, because data in the files will inform the CP as to what sounds to use when playing the song. If the song was not composed to the GM standard, you may find it necessary to edit the song to assign the correct sounds to the various tracks. Fortunately, almost all commercially available MIDI files adhere to the General MIDI standard.


- The CP can also recognize most songs formatted for the PianoDisc player piano system and songs formatted for Yamaha's Disk Orchestra Collection. (Please check with your Kawai dealer or distributor for further information).


Selecting a Song from Disk

A single floppy disk can store dozens of song files at one time, depending on the length of the songs.

To select a song:

- 1) Put the disk in the Floppy Disk Drive and press the DISK button. In the Disk menu, select Song Play (R3). After the CP searches the disk it will display the first ten available songs. If there are more than ten songs on the disk, use the SEARCH buttons (F2, F3) to list the additional songs.
- 2) Use the L and R buttons to select the song you want to hear. You can also select a song by using the Dial.
- 3) Once your desired song is highlighted, press PLAY/STOP to have the CP load the song and automatically start playing. You may also press SELECT (F7) to have the CP load the data and wait for you to start it manually.
- 4) Press the SONG CHAIN (F4, F5) buttons to have the CP automatically play all songs, one after another.
- 5) When your selected song is ready to play, the Disk Song Play screen is displayed. Use the Recorder control buttons on the left side of the panel to control the playback of the song.



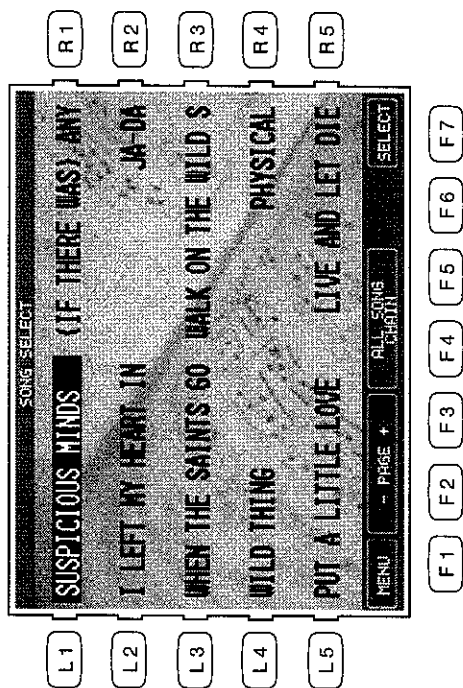

The L and R buttons select the song you want to hear.

- F1 Takes you to the Disk menu.
- F2, F3 Lists the next or previous ten titles.
- F4, F5 Starts the Chain Play.
- F7 Selects the song and takes you to the Disk Song Play screen.

Controlling Playback of a Song

As the song plays, you can adjust the tempo, play or sing along with on the keyboard, and even turn on/off the different instrument parts (tracks) in the song.


The status of the song parts is displayed at the bottom of the LCD screen. You will see the parts referred to as the CP's four Parts + Style if the song was created on the CP, or as Channels (ch 1-16) if the song is a MIDI file. Displayed above each part is its current status:

PLAY	The part will be heard when you play the song.
MUTE	The part has data, but it won't be heard when you play the song.
-- --	The part has no data to play.

- Transpose and Octave Shift are available when a song is playing. Octave Shift affects only the notes you play "live" on the keyboard, not the music playing from the song file. Transpose can be applied separately to the keyboard sound and the song sounds. This lets you play the keyboard in your preferred key along with a song recorded in a different (or more difficult) key. Use the front panel's dedicated TRANSPOSE buttons to affect the keyboard sound. Use the Song Transpose option (R4 and R5) in the Disk Song Play menu to affect the song data.
- The Song Transpose option is available only for the song data in Standard MIDI file.

To make adjustments to the song:

- 1) In the Disk Song Play screen, use the R1, R2, R3, and L3 buttons to highlight and assign sounds to the CP's four keyboard Parts. These will be the sounds that you can play live from the keyboard as the song is playing. Once a Part is highlighted, press any of the Sound category buttons to select a new sound.
- 2) Use the F buttons to play and mute any of the song's instrument parts.
- 3) Press the L4 button to use the Mixer to make adjustments to the song's instrument parts. (See page 49 for the Mixer function.)
- 4) Use the R4 and R5 buttons to transpose the song data.
- 5) Use the panel TRANSPOSE and OCTAVE SHIFT buttons to adjust the CP's keyboard Parts.
- 6) Press the PLAY/STOP button to start the song.
- 7) To adjust the tempo, press the L2 button and use the Dial to change values.
- 8) Press the PLAY/STOP button again to stop the song.

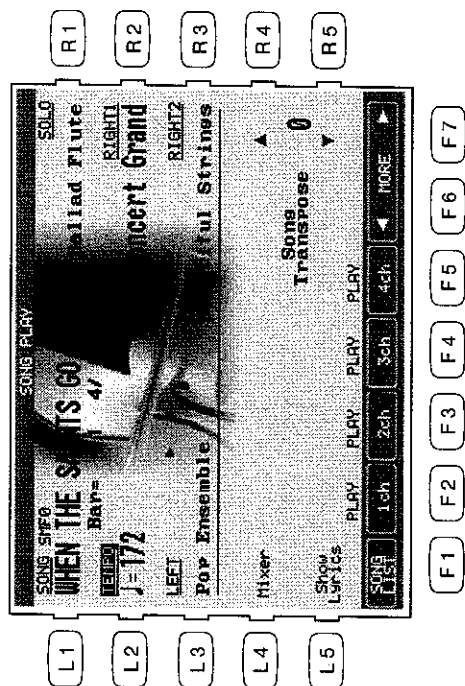


- L2 Adjusts the song's tempo.
- L3 Highlights the LEFT Part.
- L4 Takes you to the Mixer screen.
- L5 Displays the song's lyrics (if available in the data).

- R1 Highlights the SOLO Part.
- R2 Highlights the RIGHT1 Part.
- R3 Highlights the RIGHT2 Part.
- R4, R5 Transposes the song (but not the keyboard).

- F1 Takes you to the Disk Song Select menu.
- F2-F5 Turns the song part on/off.
- F6, F7 Displays the status of the next set of 4 song parts. (Ch 5-8, Ch9-12, Ch 13-16).

If the song you are playing has lyrics included in the data, the Show Lyrics (L5) button will appear on the Song Play screen. If you press the Show Lyrics button, the song's lyrics will then appear inside a box. You can follow a ball moving over the lyrics as the song plays. Press the Full Screen (R5) button to expand the lyrics display to the full screen. Press the Normal Screen (F1) button to return to the normal lyrics screen.

In the normal lyrics screen, press the F1 button to return to the Song Play screen

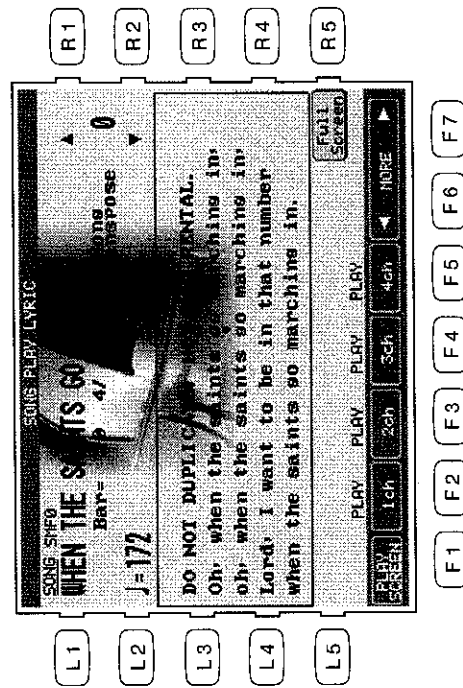

R1, R2 Transposes the song.

R5 Displays the lyrics on the full screen.

L2 Adjusts tempo.

F1 Returns to the Song Play screen.

F2-F5 Turns the song parts on/off.

F6, F7 Displays the status of the next set of 4 song parts (Ch 5-8, Ch9-12, Ch 13-16).

- You cannot record or permanently edit the song while using the Disk Song Play function. If you would like to record your live performance along with the song from the disk, or if you want to make detailed and permanent edits to the song, you will need to load the song's data into the Recorder using the Disk Load function. See the chapter "Recording a Song" (page 42) for details on how to record a song, and "Floppy Disk Operations" (page 156) for an explanation of how to load a song into the Recorder.

Playing with Concert Magic

Thanks to Kawai's innovative CONCERT MAGIC (CM) feature, absolutely anyone can sit at the Concert Performer and experience the joy of being a real performing musician... even if they have never touched a musical instrument in their life!

Concert Magic allows you to play a song by simply tapping any key on the keyboard. Regardless of what keys you play, the notes that are heard will be the correct ones for the song. However, what makes this really exciting is that you control the timing of the notes, as well as their dynamics. This lets you add a level of expressiveness and individuality to the song that makes it real musical performance.

As you play a CM song, a handy Note Navigator display helps you keep track of where you are in the music, as well as suggesting how the rhythm of the song should be tapped out on the keys.

Many of the CM songs have lyrics that can be displayed as the song is being performed. As the song is played, a Bouncing Ball makes its way over the lyrics, following the player's performance and encouraging everyone around the instrument to sing along.

The Concert Performer can also automatically play any of the Concert Magic songs. Listening to the song first can make it easier to play. There is also a Chain Play mode, giving you options to listen to groups of CM songs.

Selecting a Concert Magic Song

The 176 on-board Concert Magic songs are divided into eight groups by song category: Children's Songs, American Classics, Patriotic Songs, Christmas Songs, Hymns, Classics, Special Occasions, and International songs.


- In addition, you can create and play your own Concert Magic songs using the floppy disk drive.

To select a song:

- 1) Press the **CONCERT MAGIC** button. The song selection menu will be displayed.
- 2) Ten song titles from the Children's Songs category will be displayed. The category name is displayed at the very top of the screen. If you want to go to another song category, press **SEARCH BY CATEGORY** (F1, F2). You can also search for a specific title by using **SEARCH BY NAME** (F3, F4), which will list all 176 song titles in alphabetical order. You may also use the Dial to scroll through all the titles one after another.



- If you wish to play a CM song from floppy disk, press the **DISK** button (F6) to see the list of songs on disk.
- 3) When you have found the song that you want to play, use the **L** or **R** buttons to move the box over the title. Press the **SELECT** button (F7) to choose it. The Note Navigator screen will be displayed, and you are ready to perform!

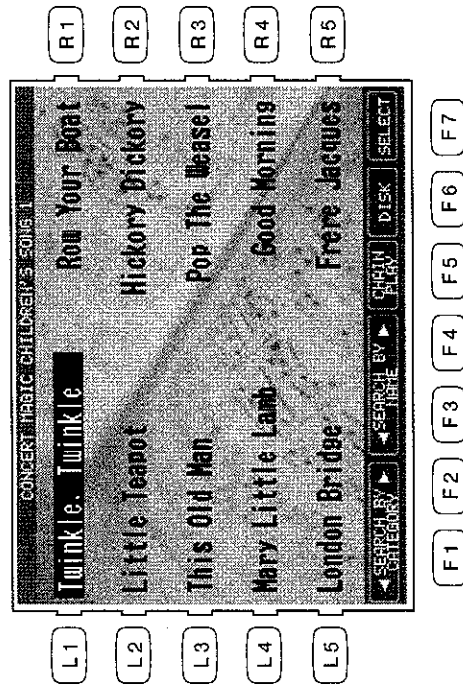

The L and R buttons select the desired song.

F1, F2 Searches by song category.

F3, F4 Searches by song name.

F5 Enters the Chain Play mode of the Concert Magic.

F6 Searches for a song on floppy disk.

F7 Can also select the song.

Performing a Concert Magic Song


Playing the Concert Magic song you've selected is very easy. Just begin tapping any key on the keyboard and the song will play. Concert Magic plays the correct notes of the song, but you must provide the rhythm. Being familiar with how a particular song sounds does make it easier, but watching the Note Navigator screen can help you play a song that you've never heard before.

The Note Navigator provides an outline of the song's rhythm that looks a lot like the real music. The dots (•) in the display are the notes that you play. The spacing of the notes gives a clue to the timing (rhythm) of the notes. Notes that are closer together are played faster; notes that are farther apart are played longer. Notes that are evenly spaced are played evenly, and so on.


Up to four lines of music are displayed. After you've played past a note in the song, the dot becomes a cross (+) to help you keep track of where you now are. When you get to the bottom of the screen, the top lines change to show the next lines of music, as if you had turned the page. When you get to the end of the song you will see a double line, and then the song will reset to the beginning.

To play a selected CM song:

- 1) In the Note Navigator screen press **START (F4)** if you want to first listen to the song. The CP will play the song. Press the **STOP (F4)** button to stop. Notice how the Note Navigator displays the rhythm as the song is playing.
- 2) If you wish to play the CM song yourself, start tapping any of 88 keys while the song is stopped, and the song will play.
- 3) Press the **RESET (F4)** button at any time to start at the beginning of the song again.
- 4) To play another song, press the **SONG LIST** buttons (F6, F7) to display the list.
- 5) If you have selected a song that has lyrics, you may view them by pressing the **LYRICS** button (F1, F2)
- 6) If you would like to play any song by steady tapping (instead of following the original rhythm), press the **STEADY BEAT** button (F3).
- 7) To exit Concert Magic, simply press the **CONCERT MAGIC** button again.

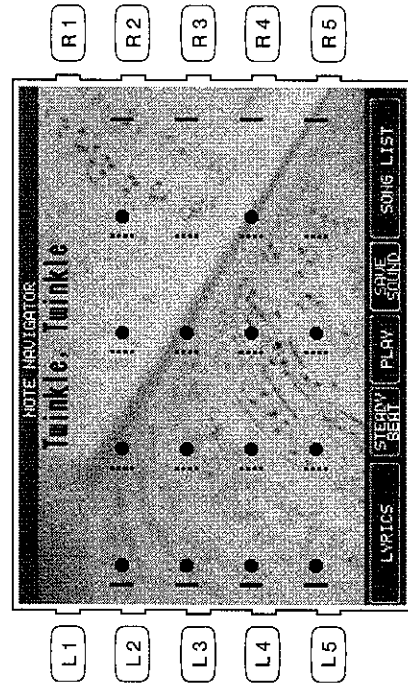

- F1 F2 F3 F4 F5 F6 F7
- F1, F2 Displays the selected song's lyrics, if available.
 F3 Allows you to play any song by steady tapping.
 F4 Starts and stops the song. Also used to reset the song when performing.
 F5 Saves the changed Sounds.
 F6, F7 Selects another song.

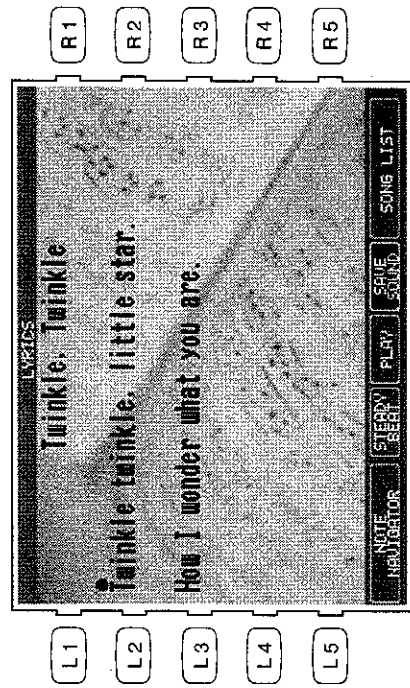

- F1, F2 Returns to the Note Navigator screen.*
F3 Allows you to play any song by steady beat tapping.
F4 Starts and stops the song. Also used to reset the song when performing.
F5 Saves the changed Sounds.
F6, F7 Selects another song.


- When you reach the end of the song, press any key one more time. This will not produce sound, but instead resets the song to the beginning for another performance.
- The Bouncing Ball only works with song files that are specifically designed for Concert Magic to take advantage of this feature.
- A Concert Magic song is made of two parts - a melody part and accompaniment part. Many of the songs have different instrument sounds assigned each part to make the music more interesting. You can select different sounds for each part separately. The RIGHT1 Part plays the melody. To change its sound, press any Sound category button and select a new sound. The LEFT Part handles the accompaniment. To change its sound, first turn off the RIGHT1 Part and then press any Sound category button to select a new sound. Don't forget to turn the RIGHT1 Part back on before you begin to play.
- You can use the PLANO ONLY button to quickly change the sound for both parts to the Concert Grand piano.

- You can also activate the RIGHT2 Part to use as a layer (additional sound) for the melody. In addition, if you know the melody to a Concert Magic song you can play along by activating the SOLO Part. Remember, you must play the notes of the melody when the SOLO sound is active. You can also select any new sound for the RIGHT2 and SOLO parts. Turn off all Parts except the one you wish to change, and then select the new sound. Don't forget to turn all necessary Parts back on before you begin to play.
- You can save your new sound settings by pressing the SAVE button (F4). The Soft Reset function will be required to return the sounds to their original settings (see page 144).
- You can transpose the song by pressing the TRANSPOSE buttons.



To enter the Chain Play mode of the Concert Magic:

- 1) Press the **CONCERT MAGIC** button. The song selection menu will be displayed.
- 2) Press the **CHAIN PLAY** button (F4). The Chain Play menu will be displayed.
- 3) Use the L and R buttons to highlight a setting, then turn the Dial to change that setting. You can choose to play songs from any one category, or to play all 176 CM songs. You can also choose to use each song's preset sounds, or to play the songs using the Concert Grand piano sound only.
- 4) Press the **PLAY** button (F4) to start playing the songs.
- 5) To exit Concert Magic, press the **CONCERT MAGIC** button again.

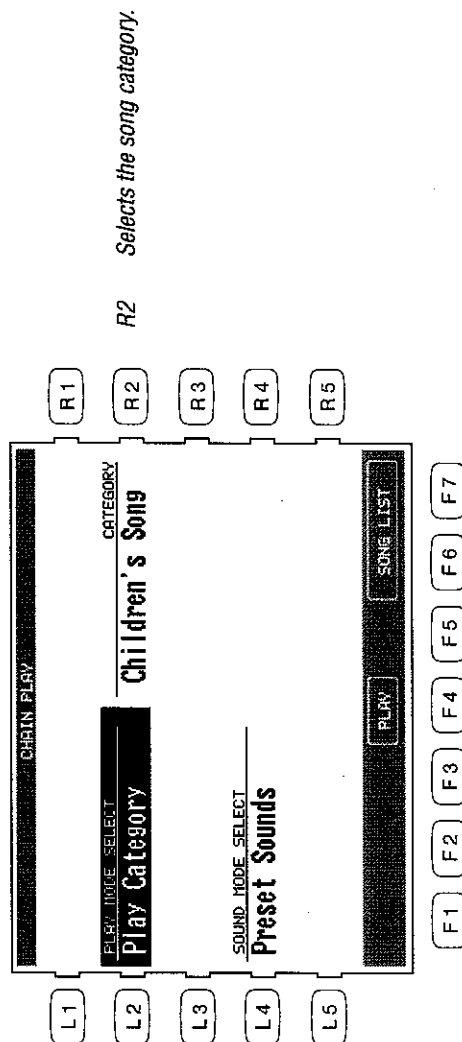

L2 Selects Play mode.

L4 Selects Sound mode.

F4 Starts the chain play.
F6, F7 Returns to the song list.

Concert Magic Song Arrangements

Concert Magic songs are specially arranged so that they will work well with your key tapping. Each of the 176 CM songs falls into one of three categories of musical arrangements of varying difficulty.

EASY BEAT

These are the easiest songs to play. To perform them, simply tap any key with a constant beat. You can easily see which songs are Easy Beat songs when you look at the Note Navigator. The dots will line up at a constant interval in the screen, indicating a constant beat.

MELODY PLAY

These songs are also quite easy to play, especially if you are familiar with them. To perform them, tap the keys to the rhythm of the melody (as if you were singing).

SKILLFUL

These songs are more challenging. To perform them, carefully follow the rhythm as shown in the Note Navigator. It may require some practice to successfully play these songs. Even skilled players will enjoy the challenge that these songs offer.

Steady Beat Play

After you choose a song, you can press the STEADY BEAT button (F3) to play the song by steady tapping instead of the original rhythm. You can play any song from any arrangement category by tapping steady beats.

Creating a Concert Magic Song

You can also use Concert Magic to play a song that isn't one of the 176 built-in titles. You can record a new song using the Concert Performer's Recorder and then save on a floppy disk as a Standard MIDI File (SMF). The song can now be selected by pressing the DISK button when you are in the Concert Magic song selection screen.

- You can also record a song for Concert Magic by using an external sequencer. Remember to save it to a floppy disk as a Standard MIDI File.

As you might imagine, getting your song to sound exactly the way you want it to in Concert Magic may require a few adjustments to the original arrangement. The most important consideration is to keep the musical arrangement as simple as possible. Concert Magic "pauses" the song after every note as it waits for you to tap the next key. If there are complex rhythm patterns that have many notes per beat, the song may become overly difficult to play. Here are some suggestions for creating a Concert Magic song:

- 1) Record the melody first using the **RIGHT 1 Part in the Easy Recorder (or Track 2 in the Advanced Recorder)**.
- 2) Then record the accompaniment using the **LEFT Part in the Easy Recorder (or Track 4 in the Advanced Recorder)**.
- 3) Arrange the accompaniment so that its notes fall on the same beats as the melody. (This creates a Melody Play arrangement.)
- 4) If you want to be a little more adventurous, insert a few carefully placed accompaniment notes in between melody notes. (This creates a Skillful arrangement.)
- 5) If you are recording your song using an external sequencer, record the melody on channel 2 and the accompaniment on channel 4.
- 6) For best results, you should quantize your parts.

- Of course, these are merely suggestions. There are no steadfast rules for how to compose your CM song. In fact, very rewarding musical experiences may come out of simple trial and error.

System Menu

The System Menu contains all of the functions that affect the overall performance of the CP piano. This includes functions such as the System settings, tuning, and MIDI Setup. By adjusting these settings you can tailor the CP's performance to your taste.



To use the System menu:

- 1) Press the **SYSTEM** button. The **SYSTEM** button LED will light and the System menu is displayed.
 - 2) Use the **F1** and **F2** buttons to access the System Menu pages.
 - 3) Use the **L**, **R** and **F** buttons to select the function you wish to change. A sub-menu with further options for that function will be displayed.
 - 4) Use the **L**, **R** and **F** buttons to choose a setting from the sub-menu and use the Dial to change its value.
- If you would like to have the CP remember your settings and have them immediately applied every time you turn the instrument on, select Power Up Setting (Page 2-R1) from the System menu, and choose "Save Current Settings" (L2).
 - For further details on resetting data, see page 144.

	SYSTEM MENU									
L1	Selects the overall tuning of the CP.	L1	Tuning	R1	Selects the Concert Magic Sound mode.					
L2	Selects the Touch Curve (Key velocity sensitivity).	L2	Touch Curve	R2	Selects the Pedal functions.					
L3	Selects the Equalizer settings for the CP.	L3	System EQ	R3	Selects the Fill-In mode for the Accompaniment Styles.					
L4	Selects the Voicing settings.	L4	Voicing	R4	Selects the SOLO part settings.					
L5	Selects the Resonance effect for the sustain pedal.	L5	Resonance	R5	Selects Video Out settings.					
			Video Out							
			PAGE1 PAGE2							
			F1 F2 F3 F4 F5 F6 F7							

F1, F2 Selects the different System Menu pages.

	SYSTEM MENU									
L1	Selects the Effect priority settings.	L1	Effect For Sound	R1	Selects the Power up mode settings					
L2	Selects the Temperament settings.	L2	Temperament	R2	Restores the initial factory settings.					
L3	Selects the MIDI settings.	L3	MIDI	R3	Displays the software version.					
		L4		R4						
		L5		R5						
			Power Up Settings							
			Soft Reset							
			Software Version							
			PAGE1 PAGE2							
			F1 F2 F3 F4 F5 F6 F7							

F1, F2 Selects the different System Menu pages.

Tuning

Tuning allows you to adjust the CP's pitch. You may need to adjust the tuning when you play with other instruments.

The master pitch is displayed in Hertz. The range of adjustment is from 427.0 to 453.0 Hz. The factory preset value is set to the modern standard A = 440.0 Hz.

- You can also adjust the tuning for each Part separately. This can be used to simulate a chorus-like effect by layering the same sound in RIGHT1 and RIGHT2 and slightly detuning them. Each Part can be raised or lowered by up to 50 cents. (50 cents = 1/4 tone).

TUNING			
L1			R1
L2	MASTER TUNE 440.0 Hz		R2
L3	LEFT 0 cents	RIGHT 0 cents	R3
L4	SOLO 0 cents	RIGHT2 0 cents	R4
L5			R5

F1

F2

F3

F4

F5

F6

F7

Take you to the System menu.

- L2 Selects the master pitch.
- L3 Selects the pitch for the LEFT Part.
- L4 Selects the pitch for the SOLO Part.

- R3 Selects the pitch for the RIGHT1 Part.
- R4 Selects the pitch for the RIGHT2 Part.

Touch Curve

When playing a piano, the volume of the sound produced increases in direct relation to how hard a key is struck. The CP's Normal Touch curve offers the standard feel of an acoustic piano for practicing music. The CP offers six other touch curves ranging from light to heavy. You can also create your own touch curves tailored to your personal playing style.

Normal

This is the standard touch of an acoustic piano.

Light 1, 2

For those still developing finger strength, such as a child, a louder sound is produced even when the piano is played with a soft touch. Light 2 is lighter than Light 1.

Heavy 1, 2

Perfect for those with strong fingers. Requires a heavier touch to produce a loud volume. Heavy 2 is heavier than Heavy 1.


Off

A constant volume is produced regardless of how hard the keys are struck. This setting is suitable for sounds that have a fixed dynamic range such as Organ or Harpsichord.

User 1, 2

You can create two of your own custom touch curves.

- LIGHT and HEAVY do not represent the physical weight of the keys. These are settings that affect the sensitivity of the keys, which determines the volume level in response to the key movement.

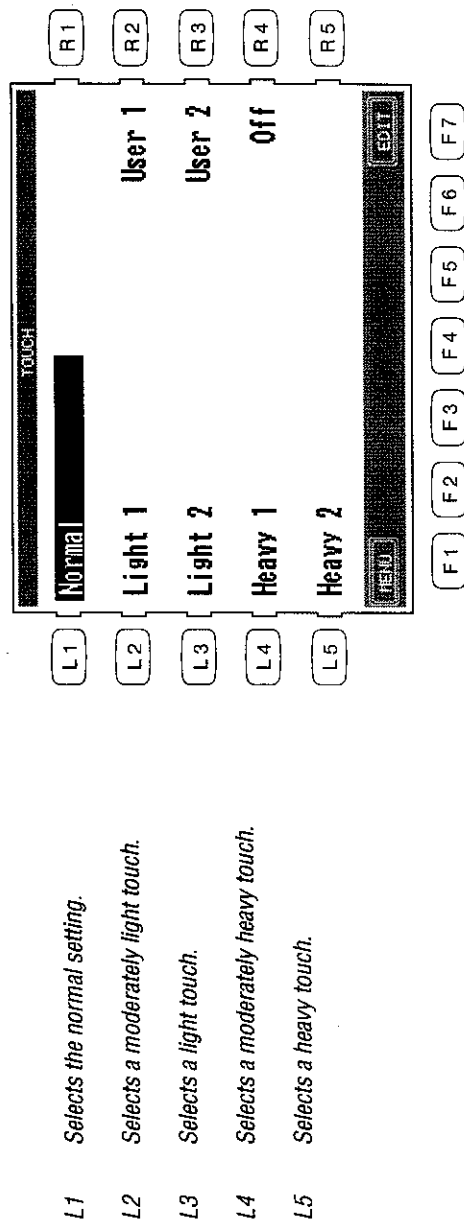

L1 Selects the normal setting.

L2 Selects a moderately light touch.

L3 Selects a light touch.

L4 Selects a moderately heavy touch.

L5 Selects a heavy touch.

R2 Selects the User 1 touch.

R3 Selects the User 2 touch.

R4 Turns off the Touch sensitivity entirely.

F1 Takes you to the System menu.


F7 Takes you to the User Touch Curve screen.

User Touch Curve

You can create your own custom touch curve to fit your playing style. Two User Touch curves can be saved.

To create a User Touch Curve:


- 1) Press the EDIT button (F7) in the Touch Curve screen. The LCD screen will display the User Touch screen.
- 2) Now start playing dynamically from soft to loud in order to let the CP analyze your playing style. While you are playing, a musical note  will blink in the right corner of the LCD display.
- 3) Press the CREATE button (F7) when you finish playing. The CP will analyze your playing and create a custom touch curve for you based upon your playing style. The User Touch Exec screen will be displayed.

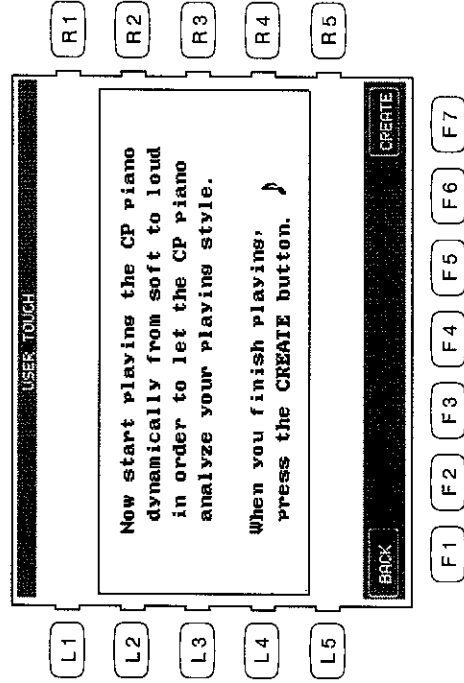

F1 Takes you to the previous menu.

F7 Creates a user touch curve.

- 4) Use the Dial to select either User 1 or User 2 as the location for your new touch curve.
- 5) Press the EXEC button (F7) to save your new touch curve.
- 6) The CP will ask for your confirmation. Press YES (F7) to confirm.

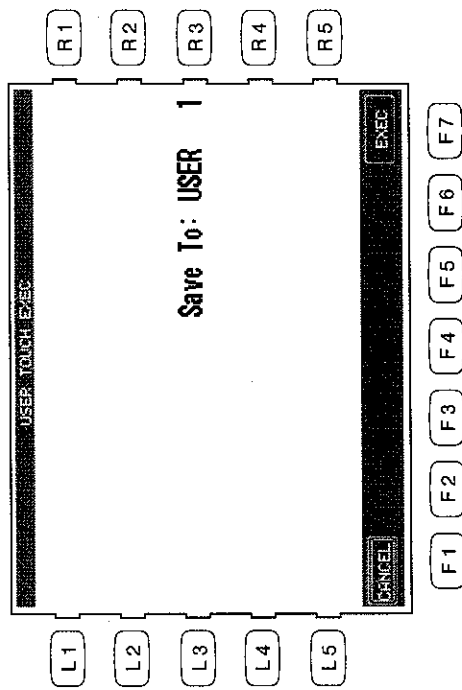

Use the Dial to select either User 1 or User 2 as the location for your new touch curve.


- F1 Cancels the saving procedure.
 F7 Proceeds with saving procedure.

- The user touch curve data is saved automatically even after the power is turned off. However, You must re select the user touch curve each time the power is turned on unless you make your User touch curve the default by selecting "Save Current Settings" from the Power Up Settings screen (See Power Up settings on page 143).

System EQ

The System EQ allows you to adjust the tone character of the CP piano to your taste. In addition to a Flat EQ setting (no EQ), there are four special EQ settings optimized for each of the CP models and four general purpose EQ settings. There is also a User EQ, that allows you to edit the existing EQ settings or create your own EQ settings.

- The System EQ affects the overall tone character of the CP speakers and the Line Out Jacks (The CD-R Drive is not affected by the System EQ). The special CP EQ's are optimized for the speaker systems on different CP models. When connecting the Line Out Jacks to an external source the Flat EQ setting is recommended.
- The Flat EQ setting is the default. If you want to save a different EQ setting as the default you must select the "Save Current Settings" on the Power Up Settings screen (See Power Up Settings, page 143).

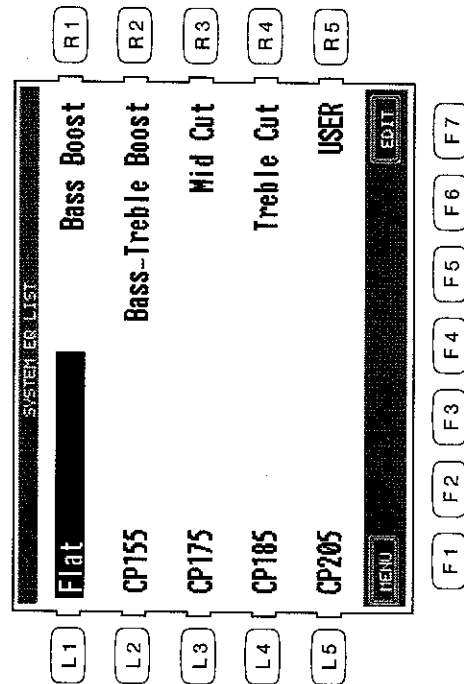


Use the L and R buttons to select your desired EQ setting.

- F1 Takes you to the previous menu.
F7 Takes you to the User System EQ screen.

To create a User EQ:

- 1) Select one the ten EQ settings to edit and press the EDIT button (F7). The LCD screen will display the User System EQ screen.
- 2) Use the F2, F3 buttons to move the cursor and use the Dial to change the value.
- 3) Press the SAVE button (F7) to save the edited EQ settings to the User EQ.

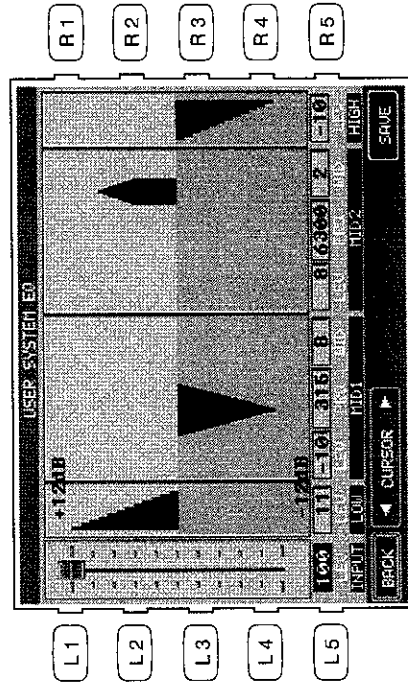


- F1 Takes you to the System EQ menu.
- F2, F3 Moves the cursor.
- F7 Saves the edited EQ settings to User EQ.

Virtual Voicing

Voicing is a technique used by piano technicians to mold the character of a piano's sound. The Voicing function lets you change the CP piano's tone quality by choosing one of four types of voicings.

- Normal** Produces the normal timbre of an acoustic piano throughout the entire dynamic range. This is the default setting.
- Bright** Produces a brighter tone throughout the entire dynamic range.
- Mellow** Produces a mellow tone throughout the entire dynamic range.
- Dynamic** The tone will change dramatically from mellow to bright according to your playing.

- The current voicing selection is global for all the instrument Sounds. You can not have an individual setting for each Sound.
- While voicing is a technique used for optimizing the tone of an acoustic piano, this function can be used on all the Sounds on the CP piano.

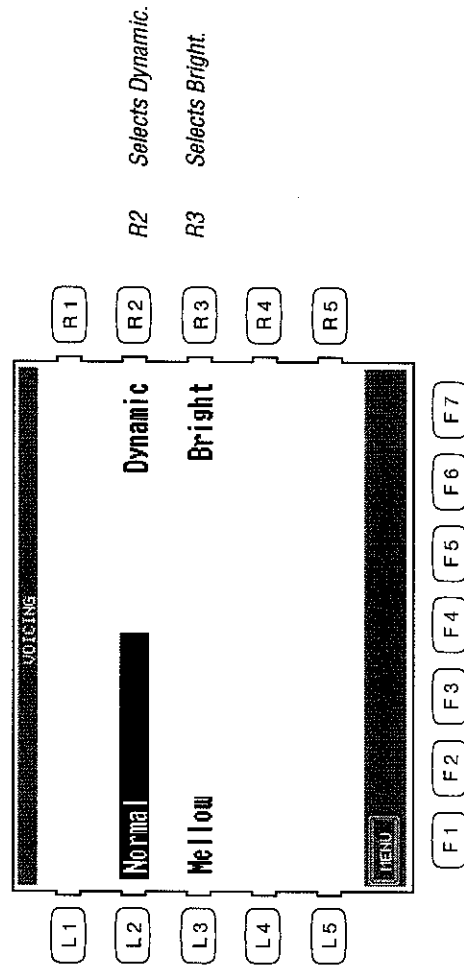

L2 Selects Normal.


L3 Selects Mellow.

F1 Takes you to the System menu.

Resonance

When the sustain pedal is depressed on an acoustic piano, all the dampers are lifted up allowing the strings to vibrate freely. In this condition, when you play a note not only will the strings for the note you played vibrate but other strings will vibrate due to sympathetic resonance. The Resonance function simulates this phenomenon. You can select from three levels of Resonance.

- Off** No resonance.
- Normal** Simulates the natural resonance characteristics of an acoustic piano.
- Deep** Produces a more intense resonance.

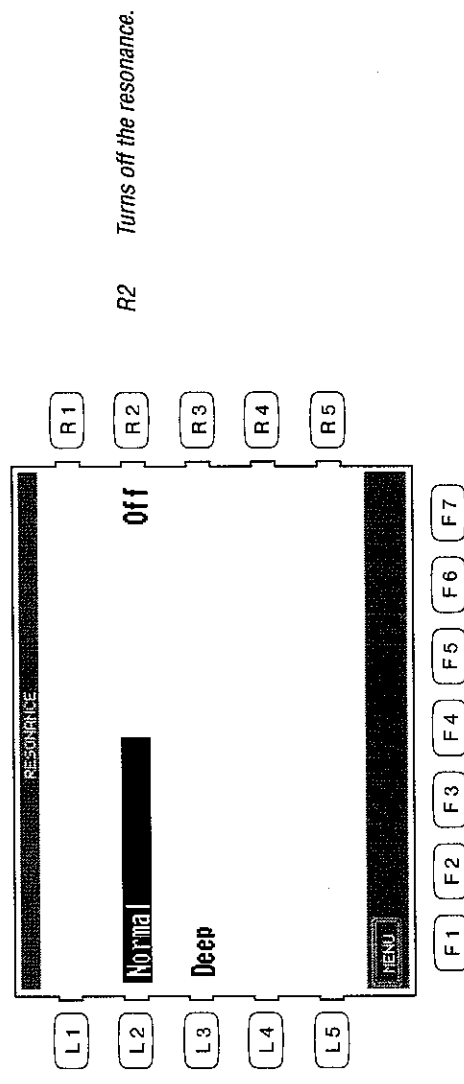

- L2 Selects normal resonance.
- L3 Selects deep resonance.


R2 Turns off the resonance.

F1 Takes you to the System menu.

Concert Magic Sound

This function determines which sounds the Concert Magic songs will be played with.

- Preset** Plays all the Concert Magic songs with the Preset Sounds assigned to each song.
- Piano** Plays all the Concert Magic songs with the Concert Grand piano.

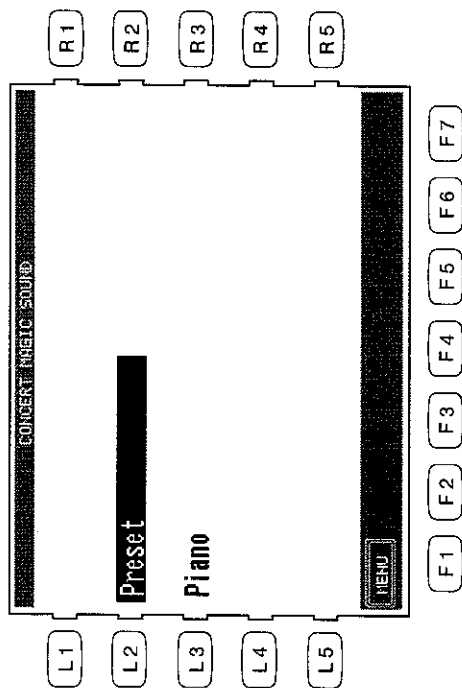

- L2 Selects Preset sounds.
- L3 Selects Piano sound.

F1 Takes you to the System menu.

Pedal Assign

The Soft and Sostenuto pedals on the Concert Performer function as much more than just traditional piano pedals. These pedals can be assigned to control various other functions on the CP piano. With an optional expression pedal connected to the EXP pedal jack, you can also control the volume for each Part.

Damper Pedal (Right)

Sustain only

Can be activated or deactivated separately for each Part.

Pedal assignment options for Soft Pedal (Left) and Sostenuto Pedal (Center)

Soft

Softens the sound and reduces its volume.

Sostenuto

Sustains only notes that were held when pedal was depressed.

Start/Stop

Controls start/stop for Styles and Songs.

Harmony on/off

Turns the instrument Harmony function on/off.

Registration

Switches from one Registration to another. You may choose the order, 1 to 8 or 8 to 1.

Style Variation

Switches from one Style Variation to another. You may choose the order, 1 to 4 or 4 to 1.

Intro/Ending

Plays the Intro or Ending.

Fill In

Plays the Fill-in currently selected.

Break

Interrupts the whole Style.

Drums Only

Interrupts the Style except Drum part.

Sync/Fade Out

Controls the SYNC/FADE OUT button.

Glide

Bends the pitch up and down as programmed by you.

Modulation

Applies programmable vibrato to the sound.

Rotary Fast/Slow

Controls the speed of rotary speaker effect. This function will be automatically assigned to the Soft Pedal (Left) when a sound that has the rotary effect turned on is selected as the Priority Part.

Left Hand Hold

Holds the notes played in the LEFT/SPLIT Part as long as the pedal is depressed.

Panel Lock

Locks all buttons on the panel to prevent them from being tampered with or pressed accidentally while you are playing. Press the assigned pedal once to lock the panel buttons. Press the assigned pedal again to unlock the panel buttons.


EXP Pedal (Optional)

Expression

The Expression pedal controls the volume of Parts. Expression can be activated or deactivated separately for each Part.

- The pedal assignments made to the Left pedal will be saved as part of a Registration. The pedal assignments made to the Center pedal are global and are not saved as part of a Registration.


1) Select the **Pedal Assign (R2)** option in the **System menu** (page 1). The LCD screen will display the **Pedal Assign** screen. Use the **L** buttons to select which pedal you want to make assignments for.

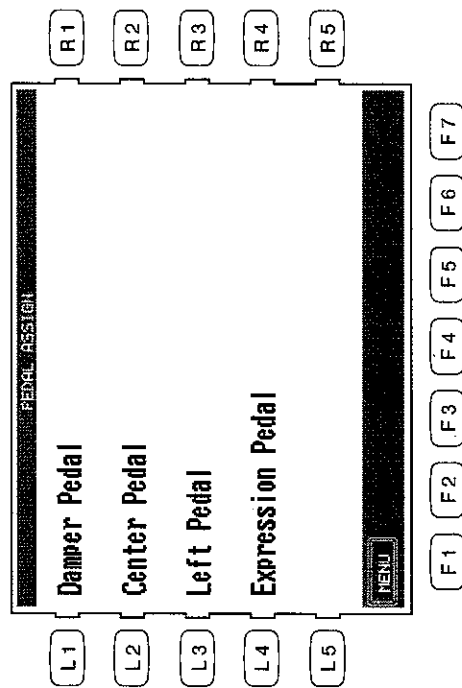

F1 Takes you to the System menu.

- L1 Selects the Right pedal (Damper).
- L2 Selects the Center pedal (Sostenuto).
- L3 Selects the Left pedal (Soft).
- L4 Selects the Expression pedal.

2) Use the L and R buttons to select the setting and use the Dial to change its value.

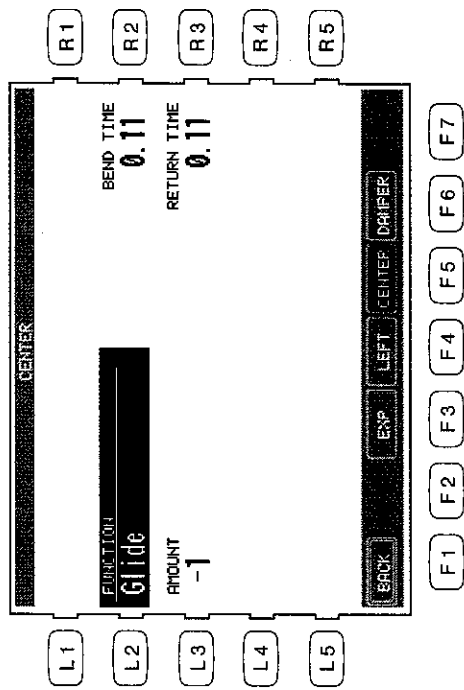

L2 Selects a function to assign to the pedal.

Use the other L and R buttons to adjust parameters.

F1 Back to the pedal Assign menu.
F3-F6 Selects the different pedals.

Fill-in Mode

This determines whether or not a Fill-in will be automatically played each time a VARIATION button is pressed.


There are two options.

Normal

A Fill-in will not be automatically played each time a VARIATION button is pressed. Fill ins will only be played if a FILL button is pressed.

Auto

A Fill-in will be played each time a VARIATION button is pressed. The Fill-in that is played will be the one that accompanies the Variation that you are leaving. For example, if Variation 1 is currently active, and you select Variation 2, the Fill-in for Variation 1 will be played.

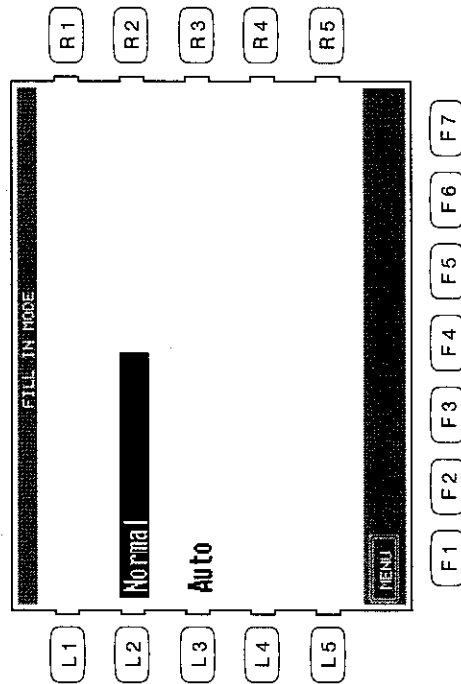

F1 Takes you to the System menu.

L2 Selects Normal mode.

L3 Selects Auto mode.

Solo Settings

This configures the special settings for the Solo part.

Since the Solo part allows you to play only one note at a time (monophonic), it is important to select which note will be played by the SOLO Part when more than one key is played at a time. There are three options.

Top Note

The SOLO Part plays only the highest note among the notes played at one time.

Last Note

The SOLO Part plays only the last key played among the notes played at one time. When the last key is released, the SOLO Part will play the last previous key played and so on.


No Retrigger

The SOLO Part plays only the last key played among the notes played at one time, but when that key is released the SOLO Part will stop playing.

When using Portamento, you can adjust **Portamento Time** which determines how long it takes for the pitch to slide up or down from one note to the next.

L2 Selects the note priority.

L3 Adjusts Portamento time.

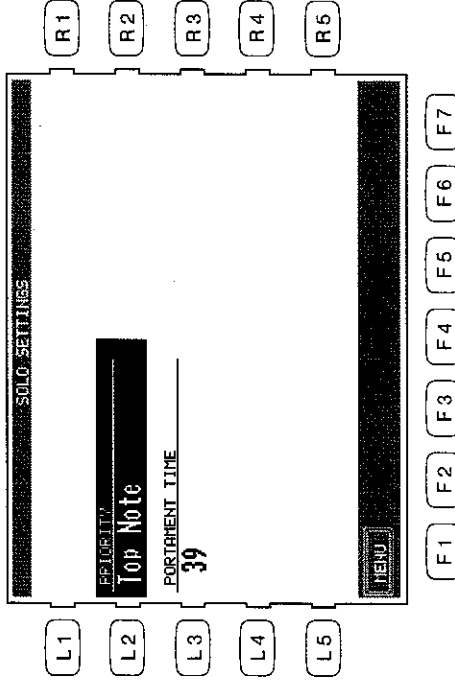

F1 Takes you to the previous menu.

- You can access this screen by holding down the PORTAMENTO button for a few seconds.

Video Out

This function is used select the type of video signal that will be output by the Video Out Jack.

NTSC


The TV video signal system mainly used in North American countries and Japan.

PAL

The TV video signal system mainly used in the European countries.

OFF

The video signals are not output.

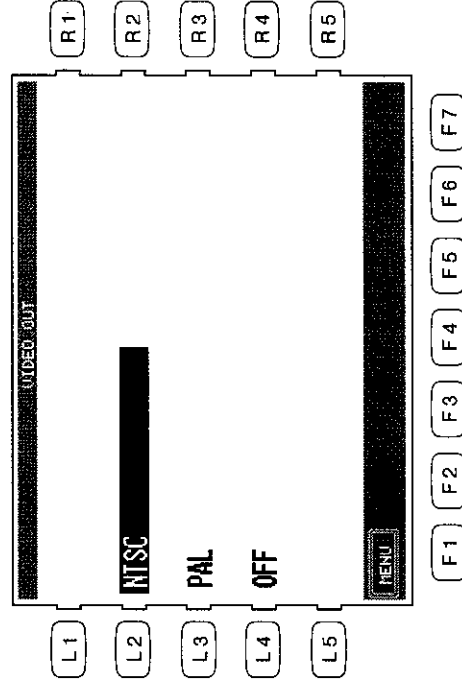

L2 Selects NTSC.

L3 Selects PAL.

L4 Selects OFF.


F1 Takes you to the System menu.

Effect for Sound

This function determines whether or not the Preset Effects settings assigned to each Sound will be used or not.

Preset Panel

The Preset Effect settings for each Sound will be used. This is the default setting.
The Preset Effect settings for each Sound will not be used. In other words, changing the Sounds will not change the Effect types and other settings for the Effects. This allows you to set each Effect section (REVERB, CHORUS, and EFFECTS) to your own taste and use your Effect settings for all sounds. The Panel setting is very useful if you only want to use certain Effects at all times or if you want to prevent the Effects from constantly changing each time you select a new Sound.

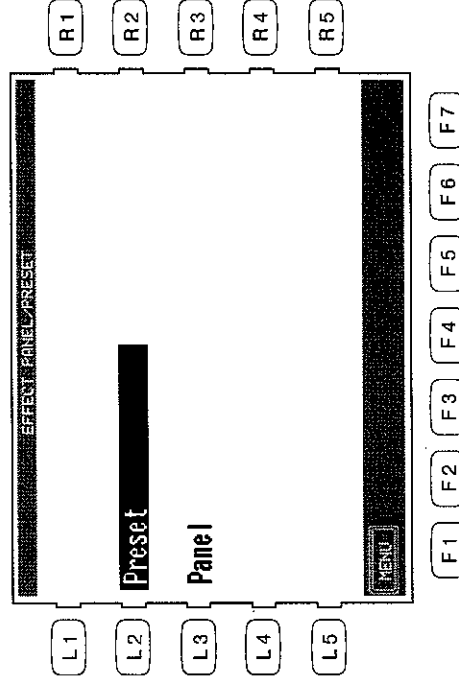

L2 Selects Preset.

L3 Selects Panel.

F1 Takes you to the System menu.

Temperament

The CP offers not only equal temperament (the modern standard) but also immediate access to temperaments popular during the Renaissance and Baroque periods. You can also create your own User tuning Temperament as well.

- 1) Select Temperament from the System Menu. The LCD screen will display the Temperament screen.
- 2) Select your desired Temperament with the L and R buttons.
- 3) Set the Temperament Key with the F2 and F3 buttons.
- 4) If you select Equal temperament, use the F5 and F6 buttons to set Stretch Tuning to On, Off, or Piano Only. (For an explanation of Equal and Equal Stretched tuning see page 135).
 Stretch=On: Applies the Stretched Tuning to all Instrument Sounds.
 Stretch=Off: Stretched Tuning is turned Off for all the instrument Sounds Off.
 Stretch=Piano (only): Applies the Stretched Tuning only to the Piano Sound. The tuning for any other active sounds layered with a piano sound will be stretched to match the piano. If no piano sound is active the tuning for any active sounds will not be stretched.

L1	Selects Equal.	Equal	Werckmeister	R1	Selects Werckmeister.
L2	Selects Meantone.	Meantone	Kirnbberger	R2	Selects Kirnbberger.
L3	Selects Pure Major.	Pure Major	Arabic 1	R3	Selects Arabic 1.
L4	Selects Pure minor.	Pure minor	Arabic 2	R4	Selects Arabic 2.
L5	Selects Pythagorean.	Pythagorean	User	R5	Selects User.

F1 F2 F3 F4 F5 F6 F7

F1 F2 F3 F4 F5 F6 F7

- F1 Takes you to the System menu.
 F2, F3 Selects the Temperament Key.
 F5 Selects the Stretch tuning type On/Off/Piano.
 F7 Takes you to the User Temperament screen.

Brief explanation of temperaments

Temperament Keys

Limitless modulation of the key became available only after the invention of Equal temperament. When you use a temperament other than Equal temperament, you must carefully choose the key to play in. For example, if the song you are going to play is written in D major, choose "D" to set the temperament key.

Equal Temperament (Flat)

This is an "unstretched" equal temperament that divides the scale into twelve equal semitones. This produces the same chordal intervals in all twelve keys, and has the advantage of limitless modulation of the key. However the tonality of each key becomes less characteristic and no chord is in pure consonance.

Equal Temperament (Stretched)

This is the most popular piano temperament and is the initial setting. The hearing ability of a human is uneven and is not as accurate with high frequency and low frequency as it is with the middle range. This temperament's tuning is stretched to compensate for this so the sound will be heard naturally to the ears. This "Stretched" equal temperament is a practical variation of the "unstretched" equal temperament which was invented on a mathematical basis.

Pure Temperament

This temperament, which eliminates dissonances for thirds and fifths is still popular for choral music because of its perfect harmony.

You need to be aware what key you are playing in with this temperament. Any key modulation will result in dissonances. When you play music in a particular key, you need to match the key of the temperament as well.

Pythagorean Temperament

This temperament, which uses mathematical ratios to eliminate dissonance for fifths, is very limited for use with chords, but it produces very characteristic melodic lines.

Meantone Temperament

This temperament, which uses a mean between a major and minor whole tone to eliminate dissonance for thirds, was devised to eliminate the lack of consonance's experienced with certain fifths for the Pure temperament. It produces chords that are more beautiful than those with the equal temperament.

Werckmeister III, Kirnberger III Temperament


These two temperaments are placed in between Meantone and Pythagorean. For music with few accidentals, this temperament produces the beautiful chords of the mean tone, but as accidentals increase, the temperament produces the characteristic melodies of the Pythagorean temperament. It is used primarily for classical music written in the Baroque era to revive the original characteristics.

Arabic

Some oriental scales, including the Arabic, are characterized for "quarter-tone" which is half of a half-tone (50 cents). This makes the music sound very different from traditional western music. The CP Piano provides two of the most popular Arabic scales, although you can create more variations with the User Temperament function. With Arabic 1, the notes B and E are a quartertone lower than the Occidental Scale, while the notes A and E are lower with Arabic 2.

To create a User Temperament:

- 1) On the Temperament screen, press the EDIT button (F7). The User Temperament screen will be displayed.
- 2) Use the KEY buttons (F3, F4) to select the note to edit.
- 3) Use the Dial or TUNE buttons (F5, F6) to change the value. The value is represented in cents above or below Equal temperament and ranges from -50 to +50.
- 4) Press the SAVE button (F7) to save the User Temperament.

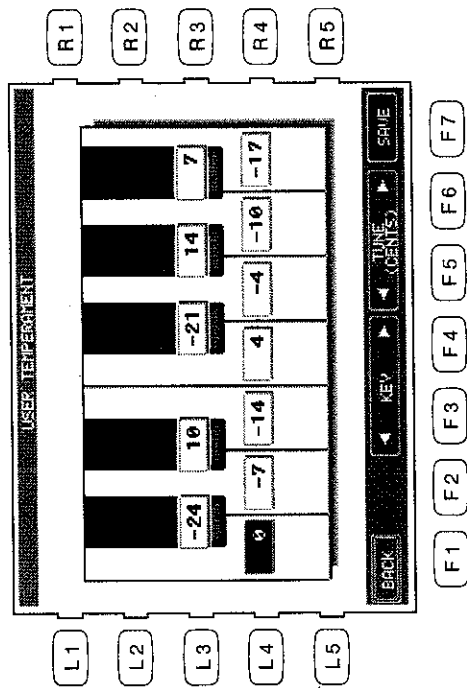

F1 Takes you to the Temperament menu.

F3, F4 Selects the note to edit.

F7 Saves the User Temperament.

- The User Temperament alters the tuning for each octave equally. In other words, you cannot alter the tuning of different sections of the CP's keyboard range separately.

MIDI Menu

The letters MIDI stand for Musical Instrument Digital Interface, an international standard for connecting MIDI equipped synthesizers, drum machines, and other electronic instruments so that they can exchange data. Personal computers can also be equipped for MIDI communication. Electronic instruments equipped with MIDI can transmit and receive performance data such as, notes, what sound to play, pedal information, volume, etc. through the MIDI In/Out/Thru Jacks. This data can be recorded with a device like a sequencer or a computer.

- In this manual we will only discuss the basic MIDI functions that pertain directly to the CP. For detailed literature on MIDI, please visit the music department of your local bookstore.

On page one of the MIDI Settings menu you can configure the following settings.

Right Transmit Channel

Sets the MIDI Transmit Channel for the RIGHT hand Parts. You can select MIDI Channels 1-16.

Left Transmit Channel

Sets the MIDI Transmit Channel for the LEFT/SPLIT Part. You can select MIDI Channels 1-16.

Chord Transmit Channel

Sets the MIDI Transmit channel the Chord data created by the Accompaniment System when it analyzes the notes you play in the lower section of the keyboard. You can select MIDI Channels 1-16 and OFF. OFF disables MIDI transmission of the chord data.

Chord Detect Channel

Sets the MIDI receive channel for chord data being sent to the CP. The Accompaniment System can be controlled remotely on this MIDI channel by an external MIDI controller. You can select MIDI channels 1-16, OFF, All, or MIDI Accordion. When set to ALL the Accompaniment System will respond to any chord data it receives on ANY MIDI channel.

Local Control ON/OFF

This determines whether the CP's sound will be played from the piano's keyboard ("ON") or only from an external MIDI instrument ("OFF"). Even with local control "off" the CP's keyboard will still transmit to an external MIDI instrument or personal computer.

Clock

Clock is a data code that a MIDI instrument uses as the reference for its Tempo settings as well as Style Start/Stop commands. When it is set to INTERNAL, the CP uses its own built-in clock to control tempo settings. When set to EXTERNAL, the CP reads the clock data that it receives via MIDI and uses this data to control the Tempo.

To configure the MIDI Settings:

- 1) On page 2 in the System menu, press the MIDI (L3) button. The LCD screen will display the first MIDI page.
- 2) Use the L and R buttons to select the setting and use the Dial to change the values.

L2	Selects Transmit channel for the RIGHT Part. Choose 1-16.	L1		R1	
L3	Selects Transmit channel for the LEFT Part. Choose 1-16.	L2	RIGHT TRANSMIT CH	R2	Turns Local Control on/off.
L4	Selects Transmit channel for the chord data. Choose 1-16 or OFF.	L3	LEFT TRANSMIT CH	R3	Selects the Clock source.
L5	Selects the chord detect Receive channel. Choose 1-16, OFF, All, or MIDI Accordion.	L4	CHORD TRANSMIT CH	R4	
		L5	CHORD DETECT CH	R5	

The screenshot shows the MIDI SETTINGS screen with the following values: RIGHT TRANSMIT CH is 1, LEFT TRANSMIT CH is 4, CHORD TRANSMIT CH is Off, and CHORD DETECT CH is Off. The LOCAL CONTROL is set to On. The screen is titled MIDI SETTINGS. Navigation buttons PAGE1, PAGE2, PAGE3, PAGE4 are at the bottom. Function buttons F1-F7 are at the bottom right.

F1-F4 Selects the other MIDI Settings pages.

Transmit MIDI Data

On page two of the MIDI Setting menu you can determine what MIDI data will be transmitted from the CP.

"Keyboard = On/Off" Determines whether or not note data that is generated by the keys being played will be transmitted.

"Program = On/Off" Determines whether or not the CP piano will transmit program change information when a Sound is selected on the CP.

"Control = On/Off" Determines whether or not changes in controllers (such as the pedals being depressed) will be transmitted.

"Expression = Key/Acc/Both" Determines whether or not the Expression data (CC# 11) for notes played on the keyboard, by the Auto Accompaniment System, or both should be transmitted.

"System Exclusive = On/Off" Determines whether or not all of the CP's settings will be transmitted in a special format that is understood by another CP.

"Clock = On/Off" Determines whether or not the CP's Clock data will be transmitted.

"ACC = On/Off" Determines whether or not the data from the Auto Accompaniment System will be transmitted.

L1	L2	L3	L4	L5	R1	R2	R3	R4	R5
	SELECTED	PROGRAM (8BANK)	CONTROL EXCEPT BANK	EXPRESSION	SYSTEM EXCLUSIVE	CLOCK (START/STOP)	REC		
	On	On	On	Key	On	On	On		
L2	Selects whether note data is transmitted.	L3	Selects whether Bank and Program Change data is transmitted.	L4	Selects whether Controller data is transmitted.	L5	Selects whether Expression data is transmitted	R2	Selects whether System Exclusive data is transmitted.
								R3	Selects whether Clock data is transmitted.
								R4	Selects whether Auto-accompaniment data is transmitted.

PAGE1 PAGE2 PAGE3 PAGE4

F1 F2 F3 F4 F5 F6 F7

F1-F4 Selects the other MIDI Settings pages.

On page three of the MIDI Settings menu, you can determine which MIDI channels the CP will receive MIDI data on. The CP can receive MIDI data on all 16 MIDI channels at once or only certain MIDI channels.

Channel Receive On/Off

Each of the 16 MIDI channels can be set separately to On or Off.

The screenshot shows a menu titled "CHANNEL RECEIVE ON/OFF". It contains two columns of 8 channels each. The first column (channels 1-8) has the following settings: 1 On, 2 On, 3 On, 4 On, 5 On, 6 On, 7 On, 8 On. The second column (channels 9-16) has the following settings: 9 On, 10 On, 11 Off, 12 On, 13 On, 14 On, 15 On, 16 Off. Navigation buttons are shown around the menu: L1, L2, L3, L4, L5 on the left; R1, R2, R3, R4, R5 on the right; F1, F2, F3, F4, F5, F6, F7 at the bottom; and PAGE1, PAGE2, PAGE3, PAGE4 at the top.

Channel	Setting
1	On
2	On
3	On
4	On
5	On
6	On
7	On
8	On
9	On
10	On
11	Off
12	On
13	On
14	On
15	On
16	Off

Use the L2, R2, L4 and R4 buttons to select the channel and use the Dial to change the setting, On and Off.

F1-F4 Selects the other MIDI Settings pages.

MIDI Accordion

On page four of the MIDI Settings Menu you can configure the CP to be played from a MIDI Accordion.

L1		R1
L2	SOLO CH. (SOLO) 4	R2
L3	MELODY CH. (RIGHT1) 1	R3
L4		R4
L5		R5

MIDI ACCORDION SETTING						
BASS CH. (RIGHT2) 3	CHORD CH. (LEFT2) 2					
PAGE1 PAGE2 PAGE3 PAGE4						
F1	F2	F3	F4	F5	F6	F7

L2 Selects receive channel for the Solo (Solo) part. Choose 1-16.
 L3 Selects receive channel for the Melody (Right1) part. Choose 1-16.
 R2 Selects receive channel for the Bass (Right2) part. Choose 1-16.
 R3 Selects receive channel for the Chord (Left) part. Choose 1-16.

F1-F4 Selects the other MIDI Settings pages.


Power Up Settings

This determines whether the CP stores your preferred panel and system settings as the default settings and applies them automatically when the instrument is turned on.

Select Save Current Settings (L2) in the Power Up Setting menu to save the current panel settings automatically as the default settings when the CP is turned on.

Select Restore Factory Settings (L3) to return the CP to the factory default settings. The original factory settings will now be used by the CP when it is turned on.

- The CP never automatically stores Panel and System settings. If you make any new changes that you want to save, you must use the Save Current Settings (L2) command.

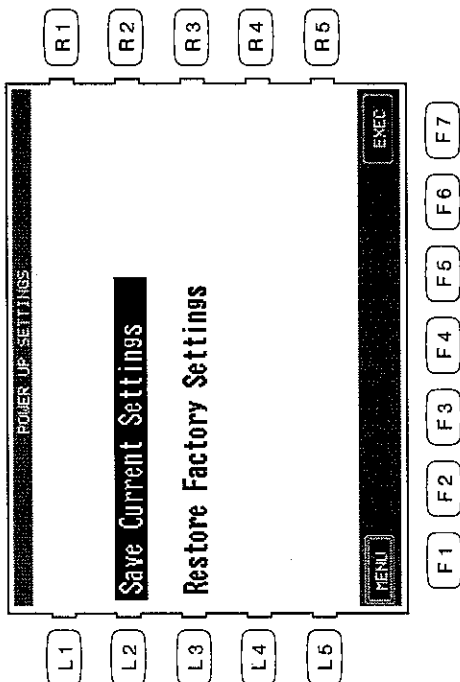

L2 Saves the current settings.

L3 Restores the initial factory settings.

- F1 Takes you to the System menu.
- F7 Applies the selected settings.

Soft Reset

The Soft Reset function allows you to return all of the User Settings back to the original Factory Settings. You can instantly reset all of the user settings or only the ones you want to Reset at the touch of a button.

To perform a Soft Reset:

- 1) Press **SOFT RESET** button (R2) on Page two in the System menu. The Soft Reset screen will be displayed.
- 2) Use the L and R buttons to choose type of data you want to reset.
- 3) Press **EXEC** button (F7).
- 4) Press **YES** (F7) to proceed, or **NO** (F1) to back out.

L1	Regist Groups	User Sounds	R1	Selects User Sounds.
L2	Conductor	User Styles	R2	Selects User Styles.
L3	Sound Settings	User Conductor	R3	Selects User Conductor.
L4	Concert Magic		R4	
L5	System Settings	All	R5	Selects ALL.


F1 F2 F3 F4 F5 F6 F7
 F1 Takes you to the System menu without resetting data.
 F7 Proceeds with the Reset.

Software Version

This function is used to show what system software version is currently installed in the CP.

To show the software version:

- 1) Press the Software Version button (R3) on page two in the System menu.
- 2) The software version will appear in the LCD screen.

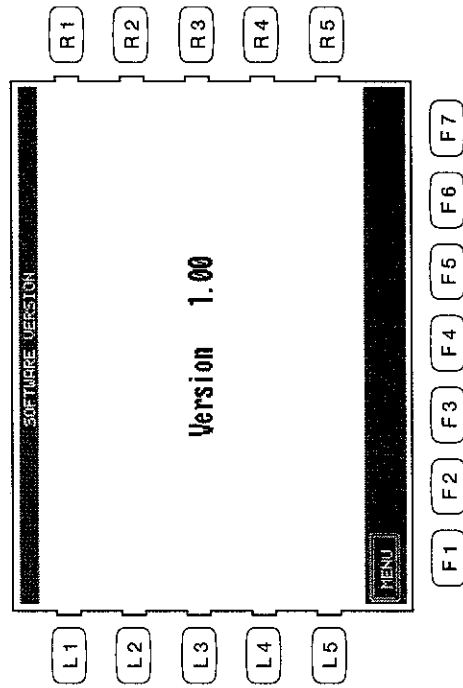

F1 Takes you to the System menu.

Display Control

This function controls the background screen design, brightness and Screen Hold of the display.

Screen Hold

Most of the on-screen menus that you work with on the Concert Performer will remain displayed until you select something or press a particular button. However, some screens may be displayed only temporarily, switching back to a main screen if you allow the CP to sit idle without pressing any buttons. You can adjust a time setting for how long these screens stay displayed before switching, or even choose to have them hold without switching.

This adjustable time function is effective with the following menus:

- Sound Select menu
- Style Select menu
- Solo Settings menu called up by holding down the PORTAMENTO button.
- Effect Settings menu called up by holding down the EFFECT button.
- Chorus Settings menu called up by holding down the CHORUS button.
- Harmony Settings menu called up by holding down the HARMONY button.

- 1) Press the **DISPLAY CONTROL** button on the panel.
- 2) Use the **L** and **R** buttons and the **Dial** to change the settings.

L1-L3 Selects the background screen design.

L4 Adjusts the brightness of the screen (0-9).

R1-R3 Selects the background screen design.

R4 Turns the Screen Hold On and Off.

R5 Adjusts the time before switching when the Screen Hold is Off (5-20 seconds).

The diagram shows a central control panel with a dial and several buttons. The dial has three main sections: 'SCREEN TYPE' with options 1, 2, 3, 4, 5, 6; 'BRIGHTNESS' with a slider from 0 to 9; and 'SCREEN HOLD' with 'On' and 'Off' settings. The 'Off' setting has a time value of 20. Surrounding the dial are buttons labeled L1, L2, L3, L4, L5 on the left and R1, R2, R3, R4, R5 on the right. Below the dial is a row of function buttons labeled F1, F2, F3, F4, F5, F6, F7.

Mic Harmony and Effect

The Concert Performer has a microphone input jack. You can plug in a microphone and sing while playing on the CP. You can also "mic" other instruments or plug other electric instruments into the microphone input. The Mic Harmony and Effect buttons add various harmonies and effects to your mic input.

Mic Harmony

This function adds many types of harmony to your mic input coming into the microphone input of the CP.


Type of Harmony

Vocoder	Trio (Sub)	Octave Duet (Sub)
Gender Male to Female	Trio Mix (Sub)	Octave Duet Up (Sub)
Gender Female to Male	Duet	Octave Up
Quartet	Duet Spread	Octave Down
Quartet Mix	Duet Close	Octave Up (Sub)
Quartet with Bass	Duet Up	Octave Down (Sub)
Jazzy Quartet	Duet (Sub)	2 Octaves Down
Jazzy Quartet Mix	Duet Spread (Sub)	2 Octaves Down (Sub)
Chorale	Duet Close (Sub)	Double
Trio	Duet Up (Sub)	Stereo Double
Trio Mix	Octave Duet	Double (Sub)
Trio Up	Octave Duet Up	Lead Substitution


To add Mic Harmony:

- 1) Press the **MIC HARMONY** button. The button's indicator light will show that it has been activated.
- 2) If you wish to change the Harmony type, hold down the **MIC HARMONY** button for a moment until the Mic Harmony types are listed in the LCD display.
- 3) Use the L and R buttons to choose Harmony type. If you want to edit the settings, press **EDIT (F7)** button. Use the L buttons and the Dial to change the settings.
- 4) Use the F1-F4 buttons to list more Harmony types on the other pages.



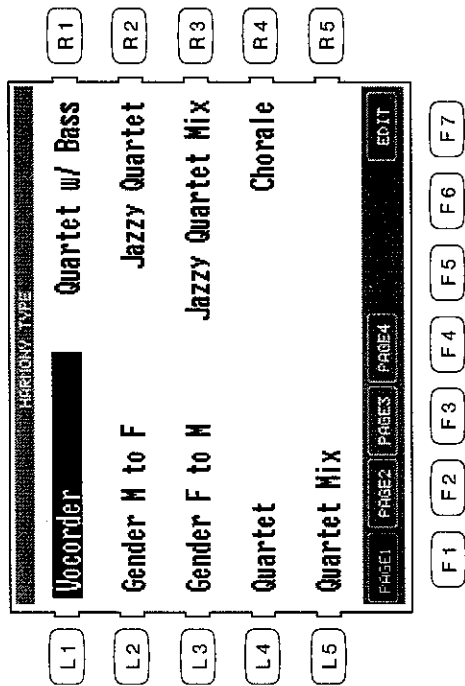

F1-F4 Searches for a Harmony type on the other pages.
F7 Enters the detailed settings.

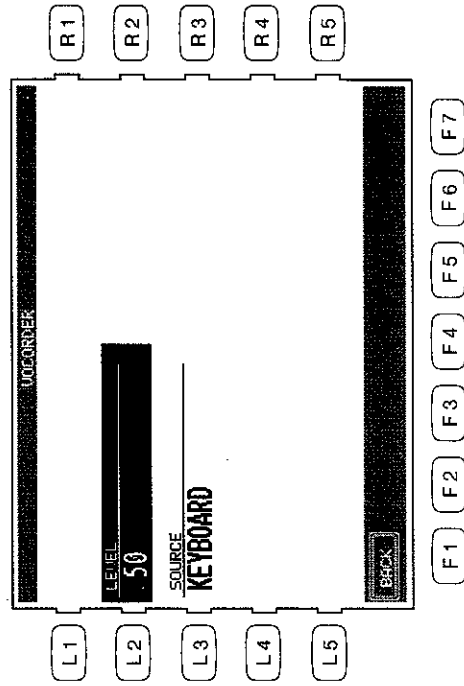

F1 Back to Mic Harmony menu.

L2 Adjusts the Harmony level.

L3 Selects the source of chord recognition if the Vocoder harmony is selected.

About Mic Harmonies

Many of the microphone harmonies rely upon chord information generated by the Auto-Accompaniment style system. For these harmonies to operate, the ACC button must be ON. Other harmonies do not rely on the Auto-Accompaniment system for chordal information. These harmonies will operate whether or not the ACC is ON.

Non-Chordal Harmonies

These harmonies do not rely on chordal information from the ACC system. They include the Vocodor, Gender, Octave, Double, and Lead Substitution harmonies. In the case of the Vocodor, the harmonies created are taken from the notes actually played on the keyboard, or the notes actually found in a chosen sequencer track.

Use the EDIT button to choose the KEYBOARD or SEQUENCER TRACK to use as the harmony source.

The Gender Male to Female and Gender Female to Male harmonies actually change the pitch and quality of your voice as indicated by the harmony names. The various Octave harmonies add a voice up or down as indicated by the harmony names.

The Double harmonies add a recording studio quality effect to your voice to make it thicker and smoother sounding. The effect is similar to the "double-tracking" vocal technique performed in professional recordings. The Lead Substitution harmony replaces your voice with one that has been pitch-corrected.

Chordal Harmonies

All other harmonies rely on chordal information from the Auto-Accompaniment system to operate. If the ACC button is ON, then you will hear harmony based upon the note that you are singing, chord you are playing and the harmony that is chosen. The active chord will be indicated in the upper left-hand portion of the display. You can play chords in the Single Finger, Fingered, or Whole Kybd Modes of the ACCOMPANIMENT system.

Duet Harmonies create one harmony note in addition to the lead note. Trio harmonies create two harmony notes in addition to the lead note. Quartet harmonies create three harmony notes in addition to the lead note. Octave Duet harmonies create one harmony note and one octave note in addition to the lead note.

The lead note will be your own voice, unless the harmony name contains the word (Sub). In this case, your voice will be substituted with one that is pitch-corrected.

Note:

If you have chosen a chordal harmony but do not turn on the ACC ON/OFF button, the instrument will substitute the Vocoder harmony. Once you turn on the ACC ON/OFF button, the harmony will switch to the one you have actually chosen.

Tips and Suggestions

Don't be afraid to experiment with different harmony types. After a little trial and error, you will begin to learn which harmony type will be most appropriate for a particular musical setting. The Harmony names will help you find the appropriate harmony type. For a fuller harmony effect, choose one of the Quartet harmonies. For lighter harmonies, choose a Trio or Duet harmony. Words such as "Mix", "Up", and "Spread" will give you further clues to the function and sound of the harmony.

Make sure to adjust both your mic input volume (found beside the Mic Input Jack) and the Mic Level parameter in the Mic Effects menu. Also, adjust the Harmony Level (found by pressing the EDIT button in the Harmony Type screen) for the best results.

All Mic Harmony and Effects settings are saved in a Registration. This makes recalling any Mic Harmony and Effects quick and easy.

Mic Effect

There are six different Mic Effects available to enhance the audio signal (Voice or instrument sound) coming from the microphone jack. All effects, except the Echo/Vibrato, operate independently of one another. The Mic Effect function is separate from the Effects assigned to the keyboard Parts. Therefore, you can use different effects on the keyboard sounds and on Vocal/instrument sounds from the microphone.

Type of Effect

Equalizer

The equalizer allows you to adjust the tonal Character of the Mic input (voice, instrument, etc) by raising or lowering the volume level of the High, Mid and Low frequencies separately. Raising the Values increases the level of the frequency. Lowering the values reduces the level of the frequency.

Gate

This effect mutes the signal from the Mic input (Voice, Instrument, etc) when the input level (volume) falls below a specified setting. This is useful for cutting out softer, extraneous background noise (cars, air conditioners, etc) while still allowing the desired, louder signal (Vocal, instrument etc.) to be heard. This can be very useful for recording to the CD-R in a noisy room.

Higher Gate settings cut out more background noise. 0 - All sounds are heard. 100 - Almost no sound is heard.

Compressor

This effect reduces the volume of very loud input levels above the specified threshold. Reducing the loud input levels can enhance soft signal levels that are weak and helps to smooth out the overall volume level of a performance.

Threshold - Determines how loud the input must be before it is compressed. Higher settings provide less compression. 0 - All input levels are compressed. 100 - No input level is compressed. Setting Threshold to 50 will compress only the louder input levels for more natural compression.

Ratio - Determines how much the input level will be compressed (reduced). Higher values produce more compression. Compression ratios between 1.6 and 5 are best for Vocals.

Note:

The suggestions given for the Gate and Compressor should be considered starting points. By experimenting you will find the settings that work best for you. Remember often times it is not necessary to use any Gating or Compression at all.

Echo

Adds delay or echoes to the sound.

Time - Determines the delay time between each echo. Higher values add longer delays.

Level - Determines the volume of the first echo. Each echo will become softer after that. Higher values create louder echoes.

Feedback - Determines how many echoes will be heard after the first echo. Higher settings produce more echoes.

Vibrato

Adds a controlled vibrato to the sound.

Rate - Determines how fast the vibrato will be. Higher values produce faster vibrato.

Depth - Determines how strong the vibrato effect will be. Higher values produce deeper vibrato.


Note:

Echo and Vibrato cannot be used together.

Reverb

Adds reverberation to the sound simulating the ambience of a stage or concert hall. Reverb can be used along with the above effects. Higher settings add more Reverb.

Mic Effect Parameters

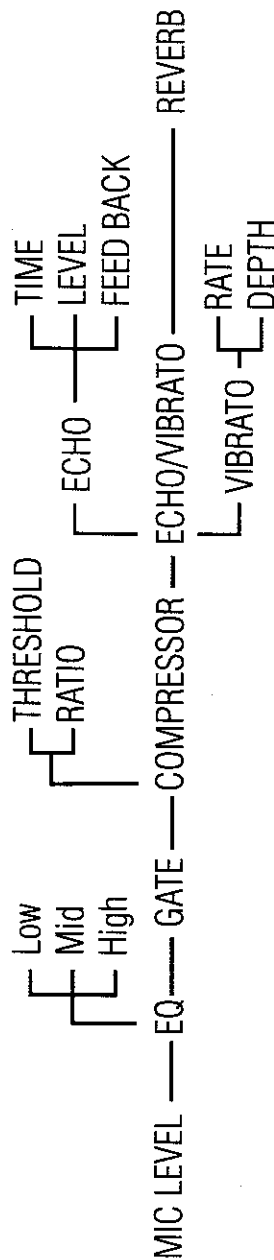

To add Mic Effect:


- 1) Press the MIC EFFECT button. The button's indicator light will show that it has been activated. Any effect that is active in the Mic Effect menu will be turned on.
- 2) If you wish to change or edit the effect types, hold down the MIC EFFECT button for a moment until the Mic Effect menu is displayed.
- 3) Use the L and R buttons to highlight the Effect types. Use the DIAL to adjust the value of the highlighted effect.
- 4) If you want to edit the settings of a highlighted effect, press EDIT (F7) button. Use the L buttons and the Dial to change the settings.



L1	L2	L3	L4	L5	R1	R2	R3	R4	R5
EFFECT									
MIC LEVEL 50					COMPRESSOR Off				
EQ Off					ECHO/VIBRATO Off				
GATE 25					REVERB 50				
EDIT									
F1	F2	F3	F4	F5	F6	F7			

- L2 Adjusts the Mic level.
- L3 Turns the EQ On and Off.
- L4 Adjusts the Gate time.
- R2 Turns the Compressor On and Off.
- R3 Turns the Echo/Vibrato On and Off.
- R4 Adjusts the Reverb level.

F7 Edits the chosen Effect.

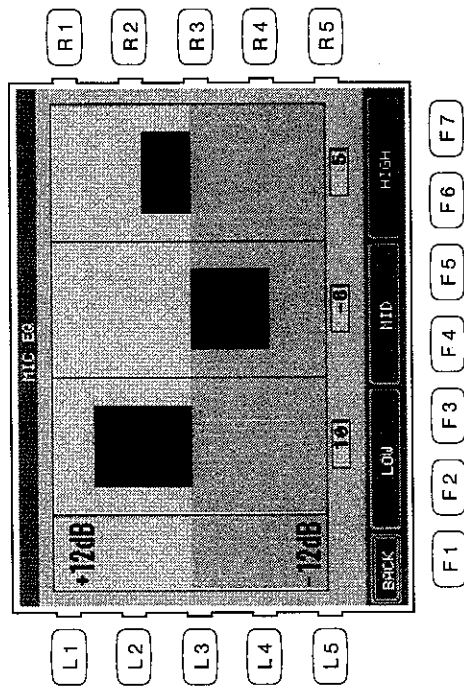

- F1 Back to Mic Effect menu.
- F2, F3 Selects Low Range.
- F4, F5 Selects Mid Range.
- F6, F7 Selects High Range

Floppy Disk Operations

The Concert Performer has a built-in 3.5" floppy disk drive that can read and write to double-density (720KB) or high-density (1.4MB) disks. These are the exact same disks that are used with your personal computer. You can use floppy disks to quickly and easily build up an extensive library of Concert Performer data that can be shared with other CP owners.

There are many companies who specialize in just making MIDI song files of popular and traditional tunes that can be purchased on floppy disk. In fact, these days almost any popular song that you can think of has probably been turned into a MIDI file by someone! Many publishers of piano lesson books now provide the music on floppy

disk so the student may play along. This can greatly assist the learning process. Finally, there are numerous sites on the World Wide Web dedicated to the sharing and selling of MIDI music that can be downloaded and played on your Concert Performer instrument. For instructions on how to use one of these Song Disks on your CP, see "Playing Songs from a Floppy Disk" on page 102.

The CP comes with a special program called Style Converter on a floppy disk. This allows you to convert Styles that were made for a number of other manufacturers' machines, and use them as if they were designed for the CP. See the separate instructions that came with the Style Converter disk for additional information.


Disk Menu

The Disk menu is where you can work with various disk operations. There are six functions that you can choose from, including access to the Style Converter feature.

To work with a disk:

- 1) Press the **DISK** button. The Disk menu will be displayed.
- 2) Use the **L** and **R** buttons to select the preferred function.



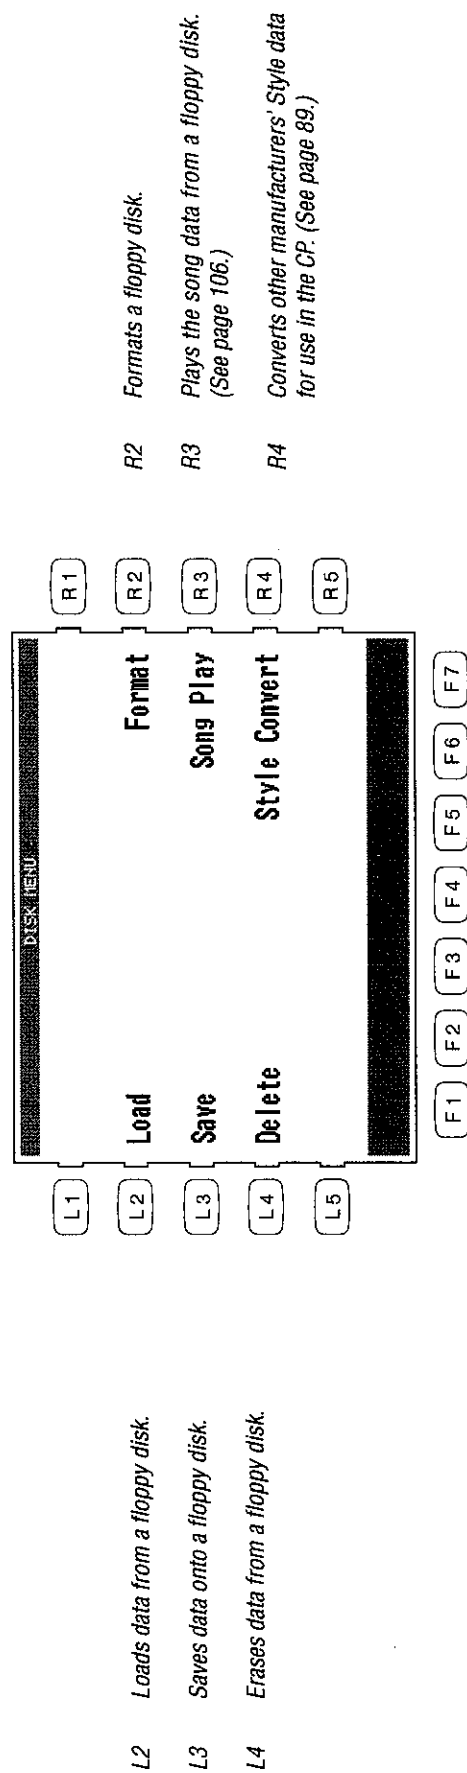

Saving Data to a Floppy Disk

This important function stores your custom data to disk so that you can retrieve it at a later time. You can save the following data:

Song

Song data currently in the Recorder. You can save it as the CP's own unique format (Internal) or as Standard MIDI File format (SMF) or Stylist format (Internal format plus Registration setting).

User Style

Each User Style or all 20 User Styles at once.

User Conductor

Each User Conductor setting or all 40 User Conductor settings at once.

User Sound

Each User Sound or all 20 User Sounds at once.

Regist Group

Each Registration Group, containing 8 Registrations, or all 20 Registration Groups at once.

User Touch

Two User Touch Curve settings.

User System EQ

One User System EQ setting.

Temperament


One User Temperament setting.

All Settings

This allows you to save the current settings of all 8 of the above data types at once, as a single file.

To save your data:

- 1) In the Disk menu, select **SAVE (L3)**. The Disk Save menu will be displayed.
- 2) Use the L and R buttons to select the type of data to save. Then the particular sub-menu for that data type will be displayed.

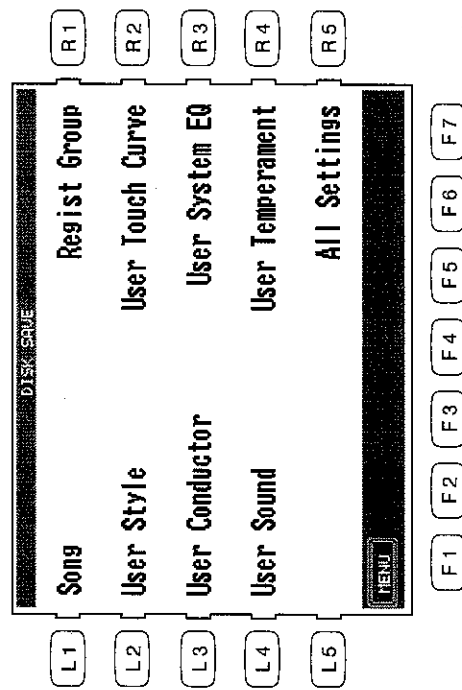

F1 Takes you to the Disk menu.

- 3) Use the appropriate L button, **CURSOR** buttons (F2, F3) and **CHARACTER** buttons (F4, F5) to give the data file a name.
When saving a Song, use the L3 button and the Dial to select whether the song data file will be in the **INTERNAL** (CP's unique) format, or **SMF** (Standard MIDI File) format or **Stylist** format.
- The data saved in Stylist format can be called up only in Song Stylist mode.
- When you select SMF format, data in the style track will be automatically pasted to tracks 9-16. This will erase any existing data on tracks 9-16.
- 4) Make sure that a formatted floppy disk is in the drive. Then press the **SAVE** button (F6, F7) to save the selected data to the disk.

Example: Saving a Style

- L3 Selects which file you would like to save, or if all files are to be save as a single "all" file.
- L4 Names the data file.

- F1 Takes you to the previous menu.
- F2, F3 Moves the cursor over the characters in the name.
- F4, F5 Selects a character to use in the name.
- F7 Saves the data file to floppy disk.

Example: Saving a Song

- L2 Names the data file.
- L3 Selects which format the data should be saved as.


Loading Data from a Floppy Disk

This function allows you to retrieve the stored data from disk.


Song	One Song can be loaded into the Recorder from disk.
User Style	Up to 20 Styles can be loaded from disk. This number varies depending on the size of the data contained in the Styles.
User Conductor	Up to 40 User Conductor setups can be loaded from disk.
User Sound	Up to 20 User Sounds can be loaded from disk.
Regist Group	Up to 20 Groups, containing 8 Registrations each, can be loaded from disk.
User Touch	Two User Touch Curves can be loaded from disk.
User System EQ	One User System EQ can be loaded from disk.
Temperament	One User Temperament can be loaded from disk.
All Settings	Loads the "All Settings" file on disk.

To load the data from a disk:

- 1) In the Disk menu, press LOAD (L2). The Disk Load menu will be displayed.
- 2) Insert your floppy disk into the drive.
- 3) Use the L and R buttons to select the type of data to load. Then a sub-menu will be displayed that lists all available files of that type.

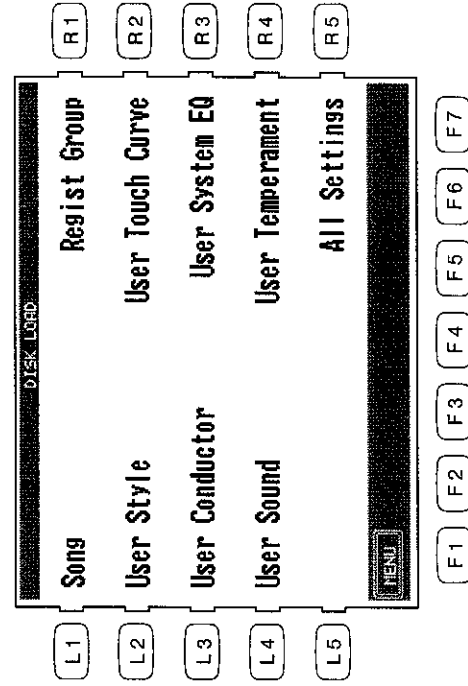

- 4) When loading User Style, User Conductor, User Sound or Registration data, you can choose whether to load data that was stored individually or to load all the data that was saved as an "All" file. Press ALL (F4) to load data that was saved as an "All" file. Press EACH (F5) if data files were saved individually.
- 5) Use the L and R buttons to select the data to load. Use the PAGE (F1, F2) buttons to display more data, if available.
- 6) Press the EXEC (F7) button to proceed. The screen will display the destination where the data will be loaded.

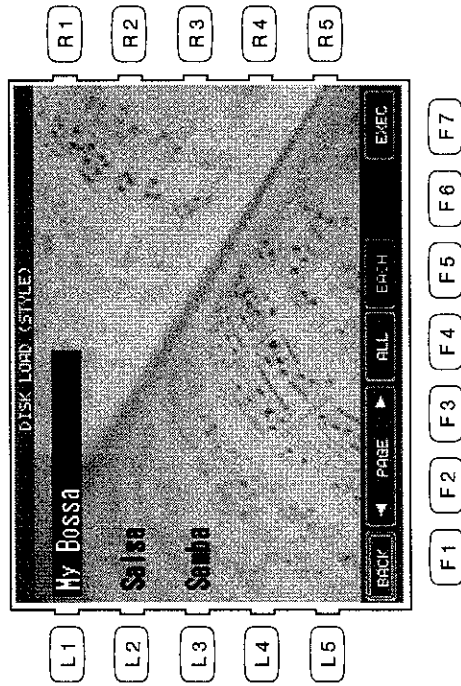

Use the L and R buttons to select the data to load.

- F1 Takes you to the previous menu.
- F2, F3 Displays more selections.
- F4 Selects the "All" file type if that is how the files were saved.
- F5 Displays data files that were saved individually.
- F7 Proceeds to the next screen.

- 7) When loading an individual data file, use the L3 button and the Dial to select the preferred destination.
- 8) Then press the EXEC button to load the selected data into the CP. Press BACK (F1) to cancel loading.

The screenshot shows the 'DISK LOAD (STYLE)' menu on a digital piano. At the top, there are two rows of buttons: L1, L2, L3, L4, L5 on the left and R1, R2, R3, R4, R5 on the right. The main display area has two fields: 'TO' with the value '1 EMPTY' and 'NAME' with the value 'My Bossa'. At the bottom of the display area are two buttons: 'BACK' and 'EXEC'. Below the display area is a row of seven function keys: F1, F2, F3, F4, F5, F6, and F7.

L3 Selects the destination to load individually a Style, Conductor, Sound or Registration.

F1 Takes you to the previous menu.
F7 Loads the data.


Erasing Data from a Floppy Disk

This lets you erase unnecessary data from the floppy disk.

You can erase Song, User Style, User Conductor, User Sound, Registrations, User Temperament and ALL.

To erase the data from a disk:

- 1) In the Disk menu press DELETE (L4). The Disk Delete menu will be displayed.
- 2) Insert the floppy disk into the drive.
- 3) Use the L and R buttons to select the type of data to erase. A sub-menu of file names will be displayed.
- 4) When you erase User Style, User conductor, User Sound or Registration, determine whether you are going to erase individual data files by pressing EACH (F5) or the "All" data file by pressing ALL (F4).
- 5) Press EXEC (F7) to erase the selected data from the disk. Or press BACK (F1) to cancel erasing and go back to the previous menu.

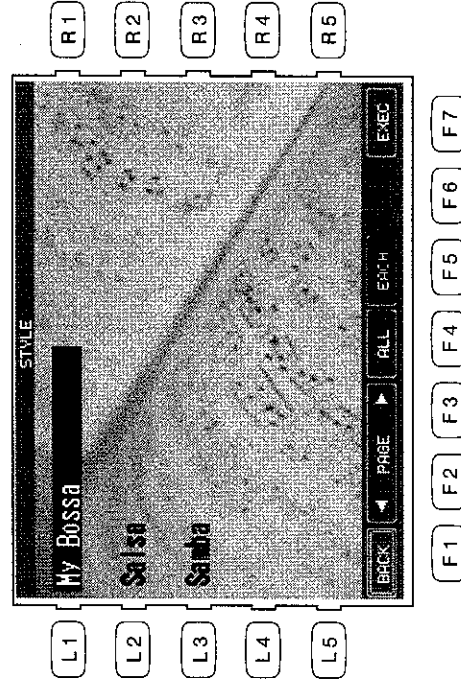

Use the L and R buttons to select the data.

- F1 Takes you to the previous menu.
- F2, F3 Displays more selections.
- F4 Displays the "All" data file if present.
- F5 Displays individual files.
- F7 Proceeds to the next screen.

Formatting a Floppy Disk

Before a floppy disk can be used to save data for the first time, it will need to be formatted. This simply means that the disk must be "prepared" to hold data.

The Concert Performer can read and write to MS-DOS formatted disks. You can purchase pre-formatted floppy disks from any computer or office supply store. Floppy disks may also be formatted on a PC computer, or the CP can format them itself. There are two types of 3.5" floppy disk in the market, 2DD (which can hold 720KB of data) or 2HD (which can hold 1,440KB or 1.44MB of data). Both can be used in the exact same fashion with the Concert Performer.


- You can always re-format a disk at any time. Keep in mind, though, that every time you format a disk, all data that is currently on it will be erased. Re-formatting is a good way to completely erase a disk that might have been used previously on a computer, since there may be all sorts of irrelevant data files left on it otherwise.

To format a disk:

- 1) In the Disk menu, press **FORMAT (R2)**. The Disk Format menu will be displayed.
 - 2) Insert the floppy disk into the drive.
 - 3) Use the L2 or L3 buttons to select the size of disk you are using, 2HD or 2DD.
 - 4) Press **EXEC (F7)** to proceed. The screen prompts you for confirmation.
 - 5) Press **YES (F7)** again to start formatting. Or press **NO (F1)** to cancel formatting and go back to the previous menu.
- It takes about a minute to format a floppy disk. Once the formatting is complete, the LCD screen returns to the Disk menu automatically.

L2 Formats a 2HD disk.

L3 Formats a 2DD disk.

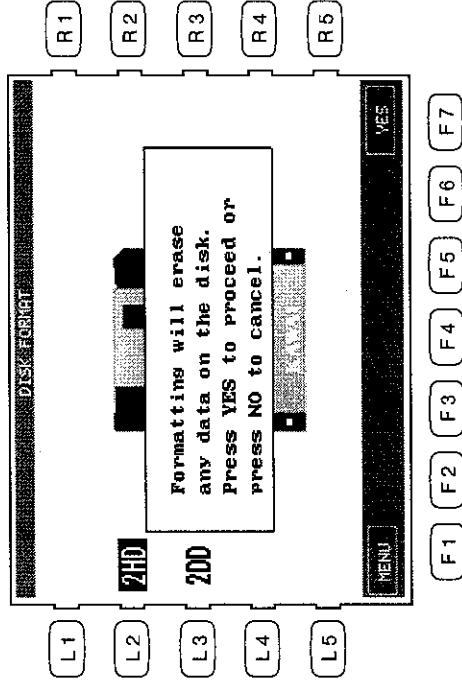

F1 Cancels formatting and takes you to the Disk menu.

F7 Starts formatting the disk.


CD-R Operations (CP175 only)

With the Concert Performer's built-in CD-R drive, you can record your performances to CD-R and CD-RW discs. You can record a "live" keyboard performance, a pre-recorded song from the Recorder, or both. Even your live vocal performance can be recorded to CD. Your finished CD can be played in any audio CD player.

The Concert Performer can also playback CD-R and CD-RW discs, along with any regular audio CD, including commercial CD's.

- 1) Insert a blank CD-R or CD-RW into the CD-R drive and press the CD button on the panel.
- 2) The LCD screen shows the CD menu.
- 3) Use the L and R buttons to select your desired function.


- When you insert a blank CD into the drive, only the Record option will be available in the menu. Unavailable options will be shown in gray. After your first recording, all options will be available.
- When a Closed (finalized) audio CD is in the CD drive, pressing the CD button will automatically jump to the CD Play menu in the LCD screen. You can return to the CD menu by pressing the MENU button.

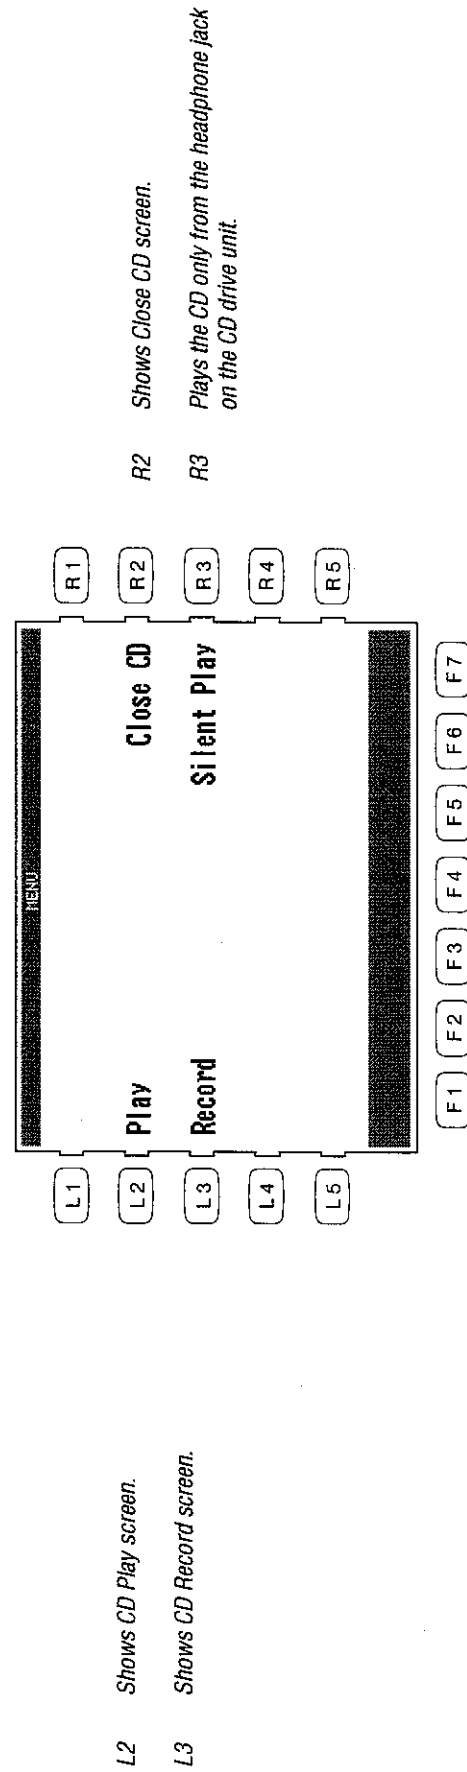

Playing an audio CD

The operation of the Concert Performer's CD is similar to a regular CD player.

- 1) Insert an audio CD in the CD drive and press the CD button on the panel. If the CD is closed (finalized), then the LCD screen will jump to the CD Play screen. If the CD is open (not finalized), then press the Play (L2) button in the menu to go to the Play screen.
- 2) Press the F3 button to start the CD.
- 3) Use the L, R and F buttons to select the various CD songs and functions. Use the Dial to change the value.

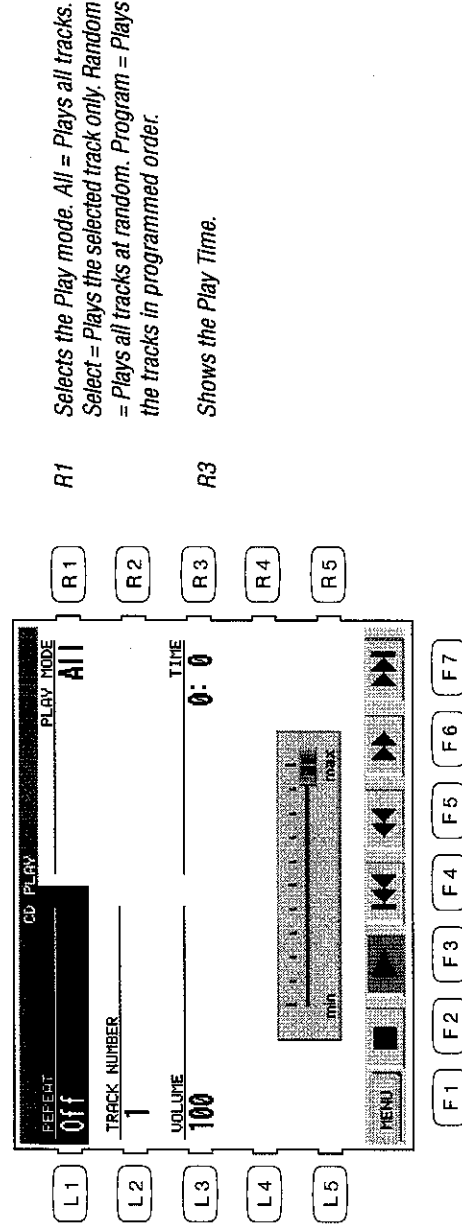

- L1 Turns the Repeat mode On and Off.
- L2 Selects the track number.
- L3 Adjusts the CD volume.

- F1 Returns to the CD menu.
- F2 Stops the CD.
- F3 Plays the CD.
- F4 Returns to the beginning of the playing track or goes back to the previous track.
- F5 Rewinds the CD.
- F6 Forwards the CD.
- F7 Skips to the next track.

- Some of the copy protected CD's may not play in the CD drive of the Concert Performer.

Use the F7 button and the Dial to program.

- Select "Program" with the Dial.

Recording onto a CD

You can record any performance on the Concert Performer directly onto a CD-R or CD-RW disc. Your performance can be "live" playing with or without auto-accompaniment styles. It can also be a previously recorded song playing from the Easy or Advanced Recorder, and even a voice or instrument from the Mic input. Any, and all, of these performances can be recorded onto the CD. You must record vocals, or any instrument using the Mic Input, directly to the CD. (The Easy/Advanced Recorder cannot record from the Mic Input)

Multiple songs (tracks) can be recorded onto CD, up to the full time capacity of the disc. Once a song is recorded to CD, the Concert Performer cannot erase it.

- 1) Insert a blank or open CD in the CD drive and press the Record button (R3) in the CD menu. The CD Record screen will be displayed in the LCD screen.
- 2) The Concert Performer will check the CD and automatically set the recording track number.
- 3) Press the REC button (F3). The CD is ready to start recording.
- 4) If you start an Accompaniment Style, or start the Recorder, the CD recording will automatically start.
- 5) You can manually start the recording by pressing the PLAY button (F5) in the screen.

L1	Shows the recording track number.	L1	Shows the remaining time available for recording.
L2	Adjusts the volume for the Style.	R1	Adjusts the volume for the SOLO Part.
L3	Adjusts the Tempo.	R2	Adjusts the volume for the RIGHT 1 Part.
L4	Adjusts the volume for the LEFT Part.	R3	Adjusts the volume for the RIGHT 2 Part.
		R4	
		R5	

The screenshot shows the 'CD RECORD' screen. At the top, it says 'TRACK NUMBER 1' and 'TIME REMAINING 0:00'. Below that, it shows 'STYLE 50's Rock', 'TEMPO J=116', and 'LEFT 60's EP'. The bottom section shows 'SOLO Concert Grand', 'RIGHT 1 Mellow Grand', and 'RIGHT 2 Piano Octaves 2'. On the right side, there are five buttons labeled R1 through R5. At the bottom of the screen, there are seven function buttons labeled F1 through F7. A 'MENU' button is located at the bottom left of the screen.

- F1 Takes you to the CD menu.
 F2 CD Record button (Record Ready)
 F4 Stops the recording.
 F5 Starts the CD recording.


Recording Tips and Suggestions

- Anyone can have fun making CD recordings and sharing them with family and friends. You do not have to be a professional musician to record your own CD. If you are not a great player, you can first record your song using the Concert Performer's Easy Recorder. You can record the song slowly and speed it up later. You can even re-record it if you make a mistake. Advanced users can edit mistakes and add extra tracks in the Advanced Recorder. When your song is perfect, set the CD to Record and press Play on the Recorder. Your perfected performance will be recorded to the CD.
- If you want to begin your CD recording with live playing or vocals, you will need to press the PLAY button (F5) to manually start the recording. (See steps #4 and #5 above). If you want to begin with a Style or Recording, press the Play or Start button in the corresponding areas of the panel.
- Vocals can be sung along with the Easy/Advanced Recorded songs and/or live keyboard performances while recording onto the CD. In other words, you can play up to a 16-part sequence (from the Easy/Advanced Recorder), play along with the sequence on the keyboard, and sing into the microphone at the same time. All of this will be recorded to the CD.
- The Style Start/Stop and Recorder Play/Stop functions are independent from the CD Record Start/Stop functions. You can start and stop Styles and Recordings while continuing to record to CD.
- While recording to CD, the panel of the Concert Performers operates normally. You can add and change sounds, balance the volumes, and change accompaniment styles during your CD recording. Highlight a Part or Style field with the L and R buttons, then turn the Dial to change the volume. Press any SOUND category button to change the sound for a highlighted part. Press any STYLE category button to change the Style.
- You can also change Registrations while recording to CD. This is a quick and easy way to make lots of changes to sounds and styles while recording to CD.
- Advanced Users with computer sequencers can even record an external sequence into the CD using the Concert Performer's internal sounds.
- It may take a few experimental recordings to get volumes mixes and settings perfected for a good result. This is especially true if you plan to sing and play or play "live" along with the Easy/Advanced Recorder.

Closing (Finalizing) Your CD

To listen to your recorded CD in a regular (audio) CD player, you must first Close (finalize) the CD. Until you close the CD, you can listen to it only with the CD drive on the Concert Performer. Once you close the CD, you cannot record on it any more.

- 1) Press the Close CD button (R2) in the CD menu.
- 2) Press the EXEC button (F7) to close the CD. Press the MENU button (F1) to cancel and go back to the CD menu.

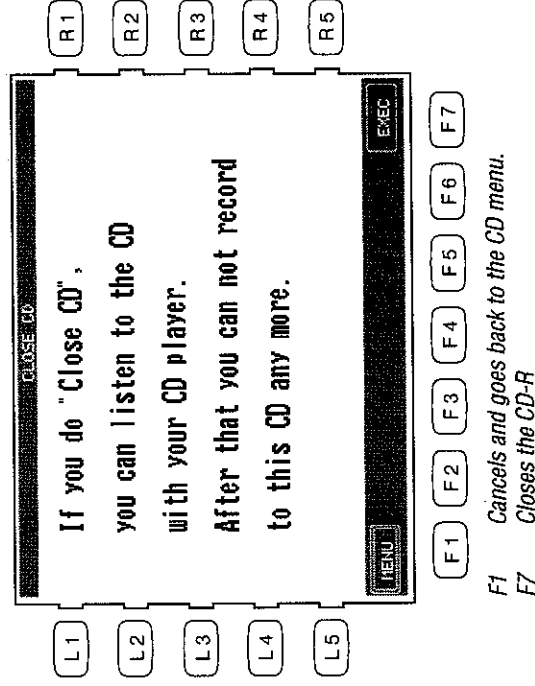

Tips and Suggestions

- A Closed CD can be played on any audio CD player, including car stereo and personal computers. You can give your CD to friends, family, or anyone.
- If you have a personal computer with the appropriate CD drive and software, you can save your CD recordings to computer. You can then make duplicate CD copies to send to others, deleting any bad tracks (songs), or mixing and matching songs from other CD's that you've recorded.
- The Concert Performer's CD drive records and plays audio CD's only. You cannot play or record other forms of CD's, including CD-ROM's and data CD's.
- A song recorded on a CD-RW disc can be erased by a personal computer with the appropriate CD drive and software, or by a stand-alone CD-RW recorder/player.

Getting Assistance: Using Help and Demo

The first time you sit at the Concert Performer, you may feel overwhelmed by the wealth of features and options that it offers. You will find, though, that if you keep this Owner's Manual handy you can learn to use the different functions as you need them, at your own pace. And, there is certainly nothing wrong with only using a few basic features, and thoroughly enjoying them. After all, the Concert Performer is first and foremost a musical instrument, and its whole purpose is to provide you with the tools for musical expression and fun no matter your skill level.

There are times when you might not have the Owner's Manual at your side, and you need an explanation of a button or feature. Fortunately, there are built-in Help guides to give you a hand. The Help function provides a basic introduction and overview of most of the features found in the CP.

There are also many built-in Demonstration songs that really show of the musical potential of the Concert Performer. These songs were composed by some of the top musicians in the music industry, and will undoubtedly impress and inspire you.


Using the Help

To get Help, simply press the HELP button to the left of the display. The display will show an explanation on the function or feature that you are presently working on. Help is available at any time, except when the CP is busy recording your performance or accessing a floppy disk.

To use the Help:




- 1) Press the HELP button. The Help text will be displayed in the LCD screen.
- 2) If the text is not what you are looking for, press the INDEX (F1) button to list the HELP topics. Use the F1 and F2 buttons to list more topics on the other pages.
- 3) Use the appropriate L or R button to select the topic, and the text will be displayed.
- 4) Use the F3 or F4 button to change the language. English, German, French, and Spanish are available.
- 5) To leave Help, press the EXIT button.

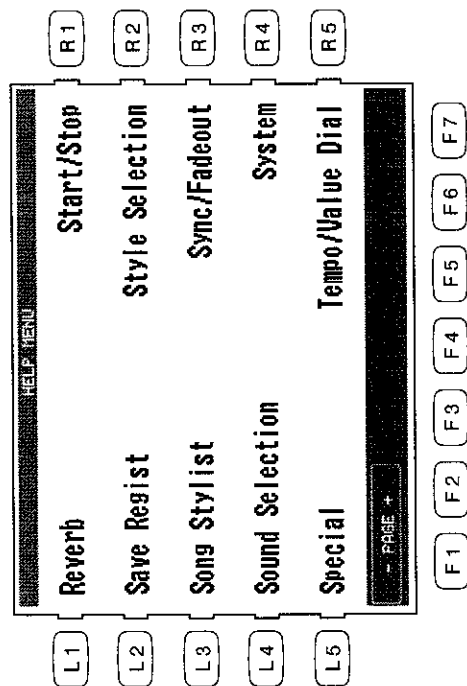

Use the L and R buttons to select a Help topic.

F1, F2 Searches for more Help topics on the other pages.

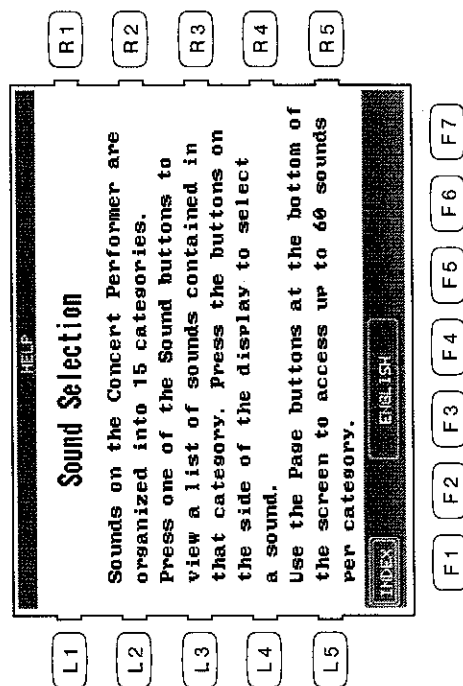

F1 Takes you to the Help menu.
F3, F4 Selects the language.

Using the Demonstrations

There are five types of Demonstrations programmed in the CP piano.

Main Demo

An exciting and entertaining long song that shows off the CP's musical potential as a whole.

Function Demos

Songs, Text, and Graphics that help explain the most important features and functions of the Concert Performer.

Sound Category Demos

Each Sound category has a song, or songs, that demonstrate the sound choices and capabilities found in the category.

Style Category Demos

Each Style category has a song, or songs, that demonstrate how the Auto-Accompaniment Styles can be used.


Piano Music

The initial DEMO menu screen will play Classical and Contemporary piano music as long as you remain in that screen. The songs are randomly selected from the Piano Music feature.

To listen to a Main/Sound/Style Demo:



- 1) Press the DEMO button. The Demonstration menu will be displayed.
- 2) Select your preferred Demo piece by either,
pressing the Main Demo Song button (F2.F3) to select the Main Demo,
or pressing any of the SOUND category buttons to select a Sound Demo,
or pressing any of the STYLE category buttons to select a Style Demo.
Sound or Style categories may have more than one demo songs played in sequence. Press the
Sound or Style button repeatedly to skip to the next demo song.
- 3) To exit, press the EXIT, PLAY/STOP or the DEMO button.

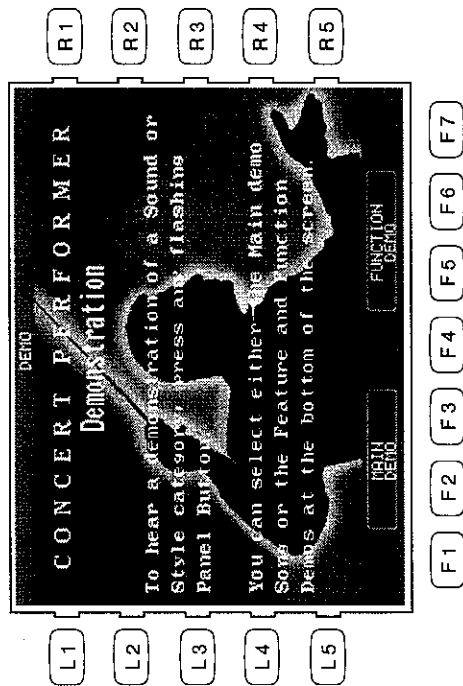

F2, F3 Plays the Main Demo.

F5, F6 Enters the Function Demo menu.

SOUND									
PIANO	FEATURE	VOCAL	DRUMBAR	ORGAN	STRING	WOOD-WIND	BRASS		
HARPS & MALLET	GIUITAR	BASS	PAD & SYNTH	SPECIALTY	DRUM	SFX	USER		

The SOUND category buttons are used to select the demo for that sound category.


STYLE									
SWING & BIG BAND	SO'S & 80'S	POP & ROCK	BALLAD	COUNTRY	BLUES & SOBBEL	JAZZ & CONTEMP	LATIN & ISLAND		
CLASSIC PIANO	INTIMATE PIANO	SOLO PIANO	KIDS & HOLIDAY	TRADITIONAL	WALTZ	BROADWAY	USER		

The STYLE category buttons are used to select the demo for that Style category.

- When a selected Demo song ends, another song of the same type will be randomly chosen from another category and played. You can select another demo song at any time by pressing the appropriate button.

To listen to a Function Demo:


- 1) Press the DEMO button. The Demonstration menu will be displayed.
- 2) Enter the Function Demo menu by pressing the Function Demo button (F4 or F5).
- 3) Use the L and R buttons to select the topic you want to see. The selected topic's text and graphics are displayed in the LCD screen.
- 4) To exit, press the EXIT, PLAY/STOP or the DEMO button.

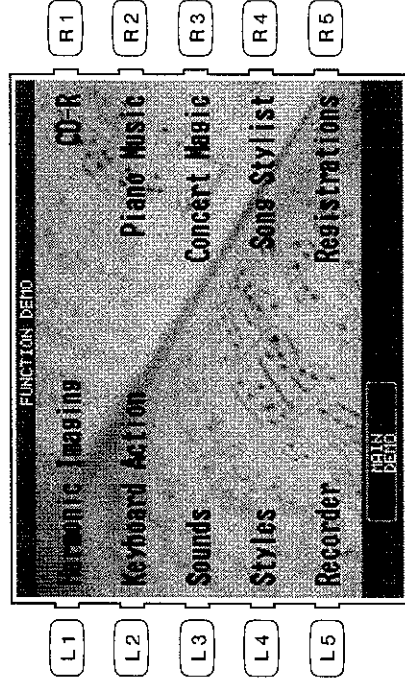

Use the L and R buttons to select the topic you like to see.

F1 F2 F3 F4 F5 F6 F7

F2, F3 Plays the Main Demo.

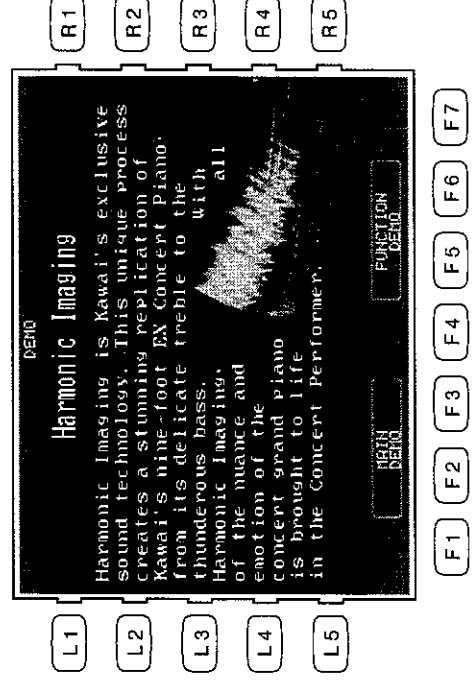

F1 F2 F3 F4 F5 F6 F7


Playing Piano Music

The Concert Performer has over five hours of prerecorded Piano Music available for your listening pleasure. The Piano Music is divided into three sections: Classical, Contemporary, and Holiday

music. You can listen to all selections in a category, or you can program a list of your favorite ten selections from each category.

To listen to the Piano Music:

- 1) Press the **PIANO MUSIC** button. The Piano Music menu will be displayed.
- 2) Select your preferred category, **CLASSICAL** (F1, F2), **CONTEMPORARY** (F3, F4) or **HOLIDAY** (F5, F6).

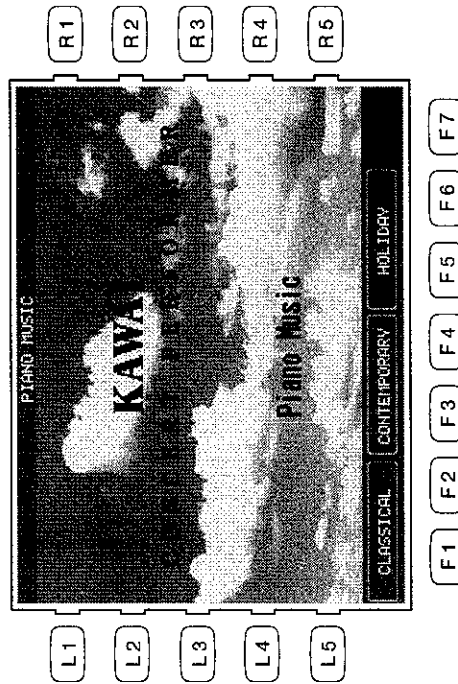


F1, F2 Selects the Classical category.

F3, F4 Selects the Contemporary category


F5, F6 Selects the Holiday category.

- 3) Use the **L** and **R** buttons to select the song you like to listen.
- 4) Use the **F1** and **F2** buttons to search more songs on the other pages.
- 5) Press the **PLAY** button (**F7**) to start the song. When the song is finished, another song from that will be played at random. Songs from the category will continue to play randomly until you exit the screen.
- 6) Press the **F7** button to pause the song. Press the **F5** and **F6** buttons to return to category's song list.
- 7) To exit, press the **EXIT**, **PLAY/STOP**, or **PIANO MUSIC** button.

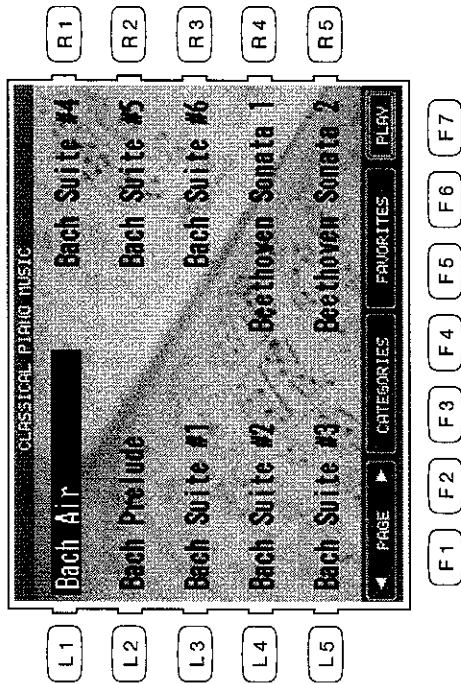

Use the L and R buttons to select the song you like to listen.

- F1, F2 Searches more songs on the other pages.
- F3, F4 Takes you to the category selection menu.
- F5, F6 Enters the Favorites menu.
- F7 Plays the selected song.

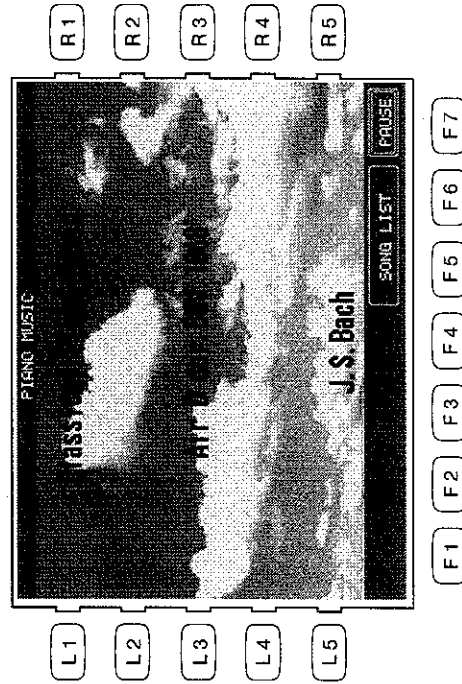

- F5, F6 Displays the song list.
- F7 Pauses the playback.

Making your Favorites list


You can make your Favorites list for each Piano Music category. Ten songs can be programmed in the order of playback.

NOTE:

You cannot select between songs in different categories.

To make your Favorites list:

- 1) Select one of the three Piano Music categories. Press the FAVORITES button (F5 or F6) in the Category song screen. A default list is displayed in the LCD screen.
- 2) Use the L and R buttons to highlight one of the ten locations. Use the Dial or the SELECT SONG buttons (F2, F3) to select a new song for that location.
- 3) Repeat step #2 to program your ten favorite songs in any order you wish.
- 4) Press the SAVE button (F1) to save the edited list.

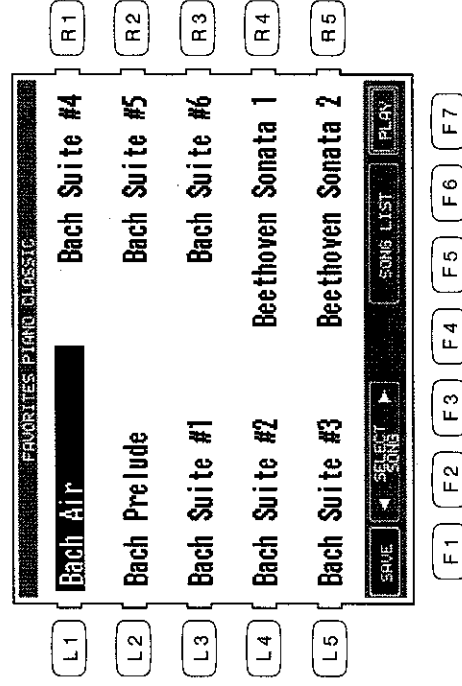

Use the L and R buttons to select a location to edit.

- F1 Saves the edited list.
- F2, F3 Selects a song.
- F5, F6 Goes back to the song list in the selected category.
- F7 Plays the song.

Preset Sounds

PIANO

PAGE 1

Concert Grand
Studio Grand
Modern Piano
Electric Grand
Piano Octaves
Classic EP
Modern EP
Modern EP 2
60's EP
Tremolo EP

PAGE 2

Mellow Grand
Rock Grand
Hony Tonk
Electric Grand 2
Piano Octaves 2
Classic EP 2
Classic EP 3
Modern EP 3
EP Legend
EP Phase

PAGE 3

Jazz Grand
Crystal EP
Piano & Guitar
Mono Grand
Wide Honky Tonk
Piano & EP
Piano & EP 2
Piano & EP 3
Piano & Organ
Piano & Organ 2

PAGE 4

New Age Piano
New Age Piano 2
New Age Piano 3
New Age EP
New Age EP 2
New Age EP 3

PAGE 5

Piano & Vibes
Piano & Guitar 2
Piano & Organ 3
EP Dolce
Toy Piano

FEATURE

PAGE 1

Plunger Trumpet
Trumpet Shake
Lead Trombone
Exp Guitar
Exp Nylon Guitar
Exp Flute
Soft Alto
Ballad Tenor
Passionate Violin
Passionate Cello

PAGE 2

Lead Trumpet
Harmon Mute Tpt
Ballad Trumpet
Exp Trombone
Ballad Trombone
Lead Soprano
Exp Alto
Exp Tenor
Breathy Tenor
Growl Tenor

PAGE 3

Lead Flugel Horn
Exp Trumpet
Closed Mute Tpt
Plunger Trombone
Closed Mute Bone
Ballad Flute
Flute Overblow
Flute Flutter
Lead Alto

PAGE 4

Exp Guitar 2
Ballad Guitar
Pick Nylon Gtr
Finger Nylon Gtr
Ac Gtr Harmonics
Classical Violin
Dolce Violin
Classical Cello
Dolce Cello
Quartet

PAGE 5

Flugel & Tenor
Mute Tpt & Bone
Flugel & Mute Tpt
Soft Tpt & Bone
Medium Tpt & Alto
Soft Tenor & Alto
Med Tenor & Alto
Lead Tenor & Alto
Lead Bone & Tenor
Tpt & Bone & Tenor

PAGE 6

Cello Up Bow
Cello Down Bow
Violin Upbow
Violin Downbow
Exp Brass
Exp Saxes

VOCAL

PAGE 1

Jazz Ensemble
Female Scat
50's Ensemble
50's Females
Jazz Auto
60's Ensemble
60's Ensemble 2
Pop Ensemble
Pop Ensemble 2
Contemp Ensemble

PAGE 2

40's Auto
50's Auto
Jazz Doo Dao
Jazz Doo Bop
Jazz Bah Bop
Contemp Males
60's Ooh Wah
50's Doo Wop
50's Ooh Aah
40's Doo Bee

PAGE 3

40's Dah Bah
40's Doo Dah
Slow Choir
Choir & String
Ooh
Bass Vocal
Choir Aahs
Breathy Choir
Voice Oohs
Humming

PAGE 4

Male Aah
Male Ooh
Male/Female Aah
Male/Female Ooh
60's Ooh
Pop Ooh
Pop Aah
Pop Wah
60's Wah
60's Bop

PAGE 5

50's Shoo
50's Bee
50's Doo
50's Hey
50's La
50's Ooh
50's Aah
Female Doo
Female Dao
Female Duya

PAGE 6

40's Doo
40's Dah
40's Bee
40's Bah
40's Shoo
Choir Aahs 2
Choir Aahs 3
Choir Aahs Sfz
Voice
Choir

DRAWBAR

PAGE 1

Be 3
Jazzier
Hi-Lo
Full Organ
Mellow
Drawbar
Percussive Organ
Percussive Organ 2
4' percussion
2 2/3' percussion

PAGE 2

Be More
Be Nice
Odd Man
Screamin'
Hollow
Drawbar 2
Percussive Organ 3
Drawbar 3
Soft Solo
Key Click

PAGE 3

Drawbar Bass
16' Drawbar
8' Drawbar
5 1/3' Drawbar
4' Drawbar
2 2/3' Drawbar
2' Drawbar
1 3/5' Drawbar
1 1/3' Drawbar
1' Drawbar

PAGE 4

Jazz Organ
Jazz Organ 2
Rock Organ
Pedal Percussion
Pedal Percussion 2

ORGAN

PAGE 1

Full Pipes
Small Ensemble
8' Celeste
Church Organ
Church Organ 2
Electronic Organ
Mixer
Theater Organ
Theater Organ 2
Reeds

PAGE 2

Baroque Mix
8' Diapason
Church Organ 3
Puff Organ
Electronic Organ 2
60's Organ
Reed Organ
Theater Organ 3
Theater Organ 4
8' Diapason 2

PAGE 3

8' Reed
8' Flute Celeste
8' Flute Chiff
2 2/3' Flute Chiff
8' Flute
8' & 2' Flute
4' & 2' Flute
2 2/3' Flute
1 3/5' Flute
8' Diapason 3

PAGE 4

Stopped Pipe
Principal Pipe
Principal Choir
8' & 4' Diapason
Small Ensemble 2
Reed Pipes
Posaune
Bass Pipe
Bass Pipe 2
Cornopean

PAGE 5

Pipe Ensemble
Resultant
Contra Gambe
Kinura
Post Horn
Vox Celeste 8
Chiffy Tibia
Full Pipes 2
Baroque
Pump Organ

PAGE 6

Pedal Mixer
Pedal
Pedal 2
Pedal 3
Pedal 4
Theater Organ 5
Theater Full
Theater Tibia
Theater Vox

STRING

PAGE 1

Beautiful Strings
String Ensemble
String Ensemble 2
Synth Strings
Synth Strings 2
Passionate Violin
Passionate Cello
Full Orchestra
Small String Ens
Harp

PAGE 2

String Quartet
Strings & Brass
Warm Strings
Synth Strings 3
60's Strings
Violin
Viola
Cello
Contrabass
Pizzicato

PAGE 3

Violin Ensemble
Cello Ensemble
String Bass Ens
Mono Strings
Octave Strings
Strings & Bell
Strings & Piano
Strings & Piano 2
Slow Cello
Synth String Orch

PAGE 4

Harp Sweep Up
Harp Sweep Down
Harp Cascade Up
Harp Cascade Down
String & Harp
Slow Violin
Tremolo Strings
String Quartet 2
Orchestra Hit

PAGE 5

Warm Strings 2
Warm Strings 3
Strings Sustaining
Strings Sforzando

WOODWIND

PAGE 1	PAGE 2	PAGE 3	PAGE 4	PAGE 5	PAGE 6
Ballad Tenor	Alto Sax	Flute & Mute Tpt	Classic Alto Sax	Recorder 2	Pan Flute
Exp Alto	Tenor Sax	Flute & Strings	Alto Sax 2	Oboe & Bassoon	Slow Pan Flute
Baritone Sax	Soft Alto Sax	Octave Saxes	Alto Sax Bend	Bassoon & Euphonium	Pan Flute 2
Soprano Sax	Soft Tenor sax	Big Band Winds 2	Tenor Sax 2	Clarinet & Bassoon	Recorder 3
Big Band Winds	Breathy Tenor Sax	Orchestral Flute	Tenor Sax 3	Jazz Clarinet 2	Piccolo 2
Exp Flute	Jazz Flute	Orch Clarinet	Piccolo	Flute & Clarinet	Clarinet 3
Flute	Jazz Clarinet	Orchestral Winds 2	Clarinet 2	Oboe & Clarinet	Flute Key Click
Clarinet	Recorder	Reeds Ensemble	Bass Clarinet		
Oboe	English Horn	Reeds Ensemble 2	Oboe 2		
Orchestral Winds	Bassoon	Sax Section	Bassoon 2		

BRASS

PAGE 1	PAGE 2	PAGE 3	PAGE 4	PAGE 5
Trumpet Shake	Flugel Horn	Bright Solo Tpt	Cornet	Brass Section 3
Lead Trombone	Muted Trumpet 2	Trumpet Ensemble	Classic Trumpet	Brass Section 4
Solo Trumpet	Cup Mute Trombone	Trumpet & Alto	Dixieland Trumpet	Synth Brass 3
Muted Trumpet	Bright Trombone	Trombone & Tenor	Trumpet 2	Synth Brass 4
Cup Mute Trumpet	Trombone 2	Brass & Sax	Sentimental Bone	Trombone & Tpt
French Horns	Warm French Horn	Brass Pad	Euphonium	Trombone & Tpt 2
Tuba	Jump Brass	Mute Brass Ens	Sousaphone	Wide Horn Section
Trumpet	Brass Section 2	Brass & Synth	Tuba 2	
Trombone	Synth Brass	Brass & Synth 2		
Brass Section	Synth Brass 2	French Horn & Strg		

HARPSI & Mallet

PAGE 1	PAGE 2	PAGE 3	PAGE 4
Harpichord	Harpichord Octave	Soft Marimba	Harpsi & Strings
Clavi	Synth Clavi	Wide Marimba	Harpsi & Strings 2
Celeste	Glockenspiel	Wide Vibraphone	Harpsi & Pipes
Handbells	Carillon	Harpichord 2	Harpsi & Pipes 2
Church Bells	Tubular Bells	Wide Harpichord	Bells
Steel Drums	Rolling Steel Drum	Muted Handbells	Bell Lyra
Vibraphone	Rolling Vibes	Vibes & Guitar	Handbells 2
Marimba	Rolling Marimba	Octave Vibes	Music Box 2
Xylophone	Synth Mallet	Steel Drums 2	
Music Box	Hard Marimba		

GUITAR

PAGE 1

Exp Guitar
Exp Nylon Guitar
Nylon Acoustic
Nylon Acoustic 2
Steel Guitar
Pedal Steel
Country Lead
Jazz Guitar
Electric Guitar
Muted Electric

PAGE 2

Nylon Acoustic 3
Steel String 2
12 String
Electric Guitar 2
Electric Guitar 3
Hawaiian Guitar
Rhythm Guitar
Ukulele
Cutting Guitar
Elec Gtr Harmonics

PAGE 3

Mellow Steel Strg
Lazz Guitar 2
Nylon Electric
Guitar & Strings
Guitar Pad
Guitar Feedback
Dynamic Overdrive
Dist Feedback
Dist Rhythm
Gtr Fret Noise

PAGE 4

Spanish Guitar
Folk Guitar
Folk Guitar 2
Delayed Folk Gtr
Pedal Steel 2
Delay Pedal Steel
Jazz Guitar 3
Muted Guitar 2

PAGE 5

Electric Guitar 4
Electric Guitar 5
Delayed Elec Gtr
Overdrive
Distortion
Gtr Cutting Noise

BASS

PAGE 1

Acoustic Bass
Electric Bass
Finger Bass
Pick Bass
Fretless Bass
Ac Bass & Ride
Slap Bass
Synth Bass
Synth Bass 2
Attack Bass

PAGE 2

Acoustic Bass 2
Finger Slap Bass
Warm Synth Bass
Clavi Bass
Hammer Bass
Elec Bass & Ride
Slap Bass 2
Synth Bass 3
Synth Bass 4
Rubber Bass

PAGE 3

Octave Fretless
Poly Synth Bass
Clavi Bass 2
Electric Bass 2
Finger Bass 2
Ac Bass & Piano
Elec Bass & Piano
Acoustic Bass 3
Acoustic Bass 4
Ac Bass Slap

PAD & SYNTH

PAGE 1

Itopia
Warm Pad
Brightness
Atmosphere
New Age
Sweep
Polysynth
Sine Pad
Halo
Synth Vocal

PAGE 2

Bowed
Metallic
Soundtrack
Analog Voice
Halo 2
Bright Warm Pad
Metallic Pad 2
Polysynth 2
New Age 2
Brightness 2

PAGE 3

Classic Synth
Classic Synth 2
Square
Sine
Chiff
Bass & Lead
Wire Lead
Crystal
Rain Pad
Analog Brass

PAGE 4

Classic Synth 3
Fifth
Square 2
Sequenced Analog
Charang
Lead
Soft Wire Lead
Echo Bell
Caliope
Analog Brass 2

PAGE 5

Multi Sweep
Warm Sweep
Bowed 2
Saw Pad
Analog Brass 3
Big Saw
Octave Saw
Clean Square
Square Lead
Square Pad

PAGE 6

Echoes
Sci-Fi
Goblin
Echo Pan
New Age 3
New Age 4
Saw Comp
Square Comp
Saw Comp 2
Chiff Comp

SPECIALTY

PAGE 1

Strumming Ac Gtr
Strumming Ac Gtr 2
Picking Ac Gtr
Picking Ac Gtr 2
Mandolin
Banjo
Picking Banjo
Harmonica
Fiddle
Strumming Elec Gtr

PAGE 2

Picking Elec Gtr
Pick/Strum Gtr
Pick/Strum Gtr 2
Strumming Mandolin
Strumming Banjo
Blues Harmonica
Wah Harmonica
Wah Harmonica 2
Dulcimer
Slow Fiddle

PAGE 3

Accordion
French Accordion
Tango Accordion
French Accordion 2
Accordion 2
Celtic Harp
Mellow Mandolin
Hammer Dulcimer
Banjo 2
Whistle

PAGE 4

Shakuhachi
Sitar
Blown Bottle
Koto
Kalimba
Ocarina
Shamisen
Sitar 2
Shanai
Taisho Koto

PAGE 5

Bag Pipe
Balalaika
Ryuteki
Nokan
Biwa
Kenban Harmonica
Mandolin 2
Celtic Harp 2
Cordovox
Whistlers

PAGE 6

Kokyu
Sho
Hichiriki
Atarigane
Mokugyo
Tsuzumi
Ainote
Euro Hit
6th Hit
Bass Hit Plus

DRUM

PAGE 1

Standard Kit
Jazz Kit
Brush kit
Room Kit
Power Kit
Analog Kit
Dance Kit
Electric Kit
Orchestra Kit
Standard Kit 2

PAGE 2

Marching Set
Nogaku Set
Taiko Drums
Melodic Toms
Concert Bass Drum
Woodblock
Agogo
Tinkle Bell
Castanet
Reverse Cymbal

PAGE 3

Sleigh Bells
Triangle
Repeating Castanet
Cym & Bass Drum
Snare Roll
Melodic Tom 2
Synth Drum
Rhythm Box Tom
Electric Drum
Snare Roll 2

PAGE 4

Timpani
Rolling Timpani
Soft Timpani
Soft Timpani Roll
Orch Cymbal & BD
Finger Snap
Hand Clap
Metronome
Conga
Tambourine

PAGE 5

Bass Drum
Talking Drum
Slit Drum
Room Tom
Brush Tom
Cymbal Roll
Ride Cymbal
Crash Cymbal
Splash Cymbal
Crash Cymbal Mute

SFX

PAGE 1

SFX Kit
SFX Kit 2
Nature
Transportation
War Games
Animal Farm
Mystery Theatre
Game Show
Counting
Trip to Japan

PAGE 2

Applause
Seashore
Stream
Rain
Thunder
Wind
Bird Tweet
Laughing
Screaming
Telephone

PAGE 3

Helicopter
Gunshot
Explosion
Machine Gun
Siren
Foot Step
Door Slam
Dog Barking
Telephone 2
Wind Chime

PAGE 4

Car Passing
Car Stopping
Breath Noise
Cat
Horse Gallop
Crow
Plane
Door Creak
Car Engine
Car Crash

PAGE 5

Train
Jet plane
Crickets
Crickets 2
Cu-Coo
Starship
Punch
Heartbeat
Laser Gun
Kiss

PAGE 6

Latin "Huh"
Scratch
Rooster
Trolley Bell
Typewriter
Whistle Down
Whistle Up
Organ Bell
Cow
Bubble

Preset Styles

SWING & BIG BAND

PAGE 1	PAGE 2
Fast Big Band	Night Club
Fast Big Band 2	Jitterbug
Medium Big Band	Big Band Samba
Sing It	Big Band Cha Cha
Jump Swing	Big Band Foxtrot
Medium Swing	Slow Big Band
Nice and Easy	Medium Swing 2
Slow Swing	Slow Swing 2

50'S & 60'S

PAGE 1	PAGE 2
50's Rock	50's Rock 3
50's Rock 2	60's Rock
50's Rockabilly	60's Rock 2
50's Folk	60's Folk Rock
Rock Rhumba	60's Pop 2
60's Beach	60's R&B
Surf Rock	60's R&B 2
60's Pop	
Motown	
Motown 2	

BALLAD

PAGE 1	PAGE 2
Cont R&B Ballad	Modern Ballad 2
Modern Ballad	Modern Ballad 3
Pop Ballad	Pop Ballad 2
R&B Ballad	R&B Ballad 2
70's Pop Ballad	70's Rock Ballad
Mod Country Ballad	Country Ballad
Country Pop Ballad	Rock Ballad
6/8 Ballad	Folk Rock Ballad
50's Ballad	50's Ballad 2
50's Orch Ballad	

COUNTRY

PAGE 1	PAGE 2
Country Shuffle	Bluegrass
Country Stomp	Texas Swing
Boot Scootin	Country Pop
Train Beat	Country Two Beat
Mod Country Shuffle	Country Rock 2
Redneck Rock	
Country Rock	
Modern Train Beat	

JAZZ & CONTEMP

PAGE 1	PAGE 2
Smooth Jazz	Smooth Jazz 3
Smooth Jazz 2	Jazz R&B
Jazz / Pop	Latin Jazz 2
Latin Jazz	Cont 16 Beat 2
Cont 16th Shuffle	Cont 8 Beat
Cont 16 Beat	Cont 8 Beat 2
Jammin Organ	
5/4 Jazz	

LATIN & ISLAND

PAGE 1	PAGE 2
Bossa Nova	Modern Bossa
Bossa Nova 2	Bolero
Salsa	Salsa 2
Samba	Salsa 3
Beguine	Balenato
Hawaiian	Bachata
Reggae	Reggae 2
Calypso	Gypsy
Mambo	
Rhumba	

POP & ROCK

PAGE 1	PAGE 2
Philly Soul	Disco
70's R&B	Disco 2
70's R&B 2	Disco 3
Cont Pop	80's Dance
Pop / Funk	80's Dance 2
Latin Rock	Classic Rock
80's Rock	70's Country Rock
Pop / Rock	Rock Shuffle
Folk Rock	Pop Shuffle
Slow Rock	70's Pop

BLUES & GOSPEL

PAGE 1
KC Blues
Slow R&B
Fast R&B
Blues / Rock
Slow Blues
Gospel Shuffle
Southern Gospel
Fast Gospel
Slow Gospel
6/8 Gospel

CLASSIC PIANO

PAGE 1
Showman
Pops Piano
Table for Two
Ragtime
Country Piano
Rock Legend
Toons
Boogie

INTIMATE PIANO

PAGE 1

Pop Ballad
Rock Ballad
Country Ballad
Swing Ballad
Pop / Rock Shuffle
Pop 3/4
Bossas
Medium Swing

PAGE 2

Rock
Blues
Pop
Country Ballad
Swing Ballad
Pop / Rock Shuffle
Pop 3/4
Bossas
Pop
Pop Ballad
3/4 Standard
Dixieland
New Age

SOLO PIANO

PAGE 1

Swing
Two Beat
Two Beat Shuffle
Bossas
Boogie
Pop
Pop Ballad
3/4 Standard
Dixieland
New Age
6/8 Pop / Rock

PAGE 2

Fast Show
Swing Standard
Standard Ballad
Pop Waltz
Jazz Waltz
Country Ballad
Country Waltz
New Age 2
New Age 3
6/8 Pop / Rock

KIDS & HOLIDAY

PAGE 1

Kids March
Kids 6/8 March
Kids 2 Beat
Kids 2 Beat Shuffle
Kids 3/4
Kids Folk 2 Beat
3/4 Lullaby
4/4 Lullaby

PAGE 2

Holiday 4/4
Holiday Two Beat
Holiday Shuffle
Holiday Rock
Holiday Waltz
Holiday Waltz 2
Holiday Waltz 3
Holiday Waltz 4

TRADITIONAL

PAGE 1

Foxtrot
Soft Shoe
Polka
Cha Cha
Dixieland
Ballroom
Tango
Jive
March 1
March 2

PAGE 2

Foxtrot 2
Polka 2
Polka 3
Cha Cha 2
Tango 2
Dixieland 2
March 3
Alps March

WALTZ

PAGE 1

Orchestral Waltz
Classic Waltz
Traditional Waltz
French Waltz
European Waltz
Country Waltz
Country Waltz 2
Modern Waltz
Jazz Waltz
Vienna Waltz

BROADWAY

PAGE 1

Medium Show Beat
Fast Show Beat
Fast Show Beat 2
Medium Show Swing
Medium Show Beat 2
Slow 12/8
Slow Show
Dixieland 4/4
3/4 Show
Fast 6/8

Song Stylists

16 Tons
3 Coins In A Fount
76 Trombones

A

A Summer Place
A Whole New World
Achy Breaky Heart
Across the Alley
After The Love Has
Ain't Misbehavin'
Ain't No Woman
Ain't Too Proud
All I Have To Do
All I Wanna Do
All Of Me
All Shook Up
Alley Cat
Aloha Oe
Always A Woman
Always On My Mind
Amapola
Amazing Grace
American Pie
Annie's Song
Anniversary Waltz
Anything Goes
April Showers
Around The World
Arrivederci Roma
Arthur's Theme
As Long As He Need
As Tears Go By
As Time Goes By
At The Hop
Auld Lang Syne
Autumn Leaves
Away In A Manger

B

Baby Face
Bad Leroy Brown
Ballad Davy Crockett
Beautiful Morning
Beauty & The Beast
Beer Barrel Polka
Begin The Beguine
Behind Closed Door
Benny And The Jets
Best Of My Love
Bewitched
Bill Bailey
Billie Jean
Bingo
Blue Bayou
Blue Bossa
Blue Moon
Blue Suede Shoes
Blue Velvet
Blueberry Hill
Body And Soul
Boogie Bugle Boy
Boot Scootin'
Boy From NY City
Breeze & I
Brick House
Bridge Over Water
Brown Eyed Girl
Brown Eyes Blue
But Beautiful
Button Up Overcoat
By The Time I Get
Bye Bye Love

C

Cabaret
California Dreamin'
California Girls

Can You Feel Love
Canadian Sunset
Candle In The Wind
Candy
Can't Get Enough
Can't Get Started
Can't Help Falling
Can't Hurry Love
Can't Smile
Can't Stop Loving
Cara Mia
Careless Whisper
Celebration
C'est Si Bon
Chain Of Fools
Chances Are
Change The World
Chantilly Lace
Chapel of Love
Chatahoochee
Chatt. Choo Choo
Cherish
Cherry Pink & Apple
Chicago
Christmas Song
Clementine
Climb Ev'ry Mtn
Close To You
Colors Of The Wind
Come In From Rain
Come Rain Or Shine
Comin Up Roses
Consider Yourself
Copacabana
Corcovado
Could I Have Dance
Could It Be I'm
Could've Been
Country Roads
Coward Of County

Cracklin Rose
Crazy
Crazy Little Thing
Cruisin Down River
Crusin'
Cry
Cry Me A River
Crying In Chapel
D
Daddy
Dance To The Music
Dancin' In Street
Daniel
Daydream
Days Of Wine Roses
Deck The Halls
Deep Purple
Deja Vu
Desafinado
Desparado
Didn't We Almost
Do Re Mi
Do Your Ears Hang
Dock Of The Bay
Domonique
Don't Be Cruel
Don't Cry For Me
Don't Fall In Love
Don't Fence Me In
Don't Get Around
Don't Let The Sun
Don't Worry B Hapy
Downtown
Dream
Dueling Banjos
Dust In The Wind

E

Earth Angel
Ebony & Ivory
Edelweiss
Elvira
End Of The Road
Endless Love
Evergreen
Every Breath You
Every Rose Has Its
Everybody Plays
Everything I Do
Everything Is Beau
Evil Ways
Exodus Song, The
Eyes Of Love

F

Falling In Love
Farmer In The Dill
Fascinating Rhythm
Fascination
Fast Car
Feelings
Feels So Good
Feels So Right
Ferry Cross Mersey
Fever
Fields Of Gold
Fire & Rain
First Time Ever I
Flashdance
Fly Me To The Moon
Foggy Day, A
Folsom Prison
For All We Know
Forever And Ever
Free Bird
Free Ride
Freeway Of Love

Friends Are For

Friends Low Places
Friends See Me Now
From A Distance
Frosty The Snowman
Fun, Fun, Fun

G

Gambler, The
G'bye Yellow Brick
Georgia On My Mind
Georgy Girl
Get Down Tonight
Getting To Know U
Gimme Some Lovin'
Girl From Ipanema
Give My Regards To
Glory Of Love, The
Glow Worm
God Bless Child
Goin Out Of My Hed
Good Golly MsMolly
Good Morning
Good Thing
Got My Mind Set
Granpa's Farm
Great Balls O Fire
Green Door, The
Greatest Love

♫ The Greatest Love
Green Green Grass
Green Onions
Groovin
Guitars, Cadillacs

H

Handy Man
Hang On Sloopy
Happy Birthday
Happy Together

Happy Trails

Harbor Lights
Hard Days Night
Hard Habit
Harlem Nocturne
Have I Told You
Hawaiian Wedding
Heard It Grapevine
Heart Will Go On
Heartbreak Hotel
Heat Is On
Heatwave
Heaven
Hello Dolly
Hello Mary Lou
Help

Help Me Make It
Here Comes Santa
Here's Rainy Day
Hey Jude
Hold Your Hand
Holly Jolly Xmas
Home For Holidays
Honesty
Honey
Honeysuckle Rose
Honky Tonk Man
Honky Tonk Woman
Hound Dog

How Am I Supposed
How Are Thing In
How Can You Mend
How Deep Is Love
How Great Thou Art
How High The Moon
How Insensitive
How Sweet It Is
Hurts So Good
Hustle

♫ The Hustle

Imagine
Imagine
In The Mood

I

I Believe
I Could Have Dance
I Could Write Book
I Don't Know How
I Don't Want 2 Set
I Fall To Pieces
I Get Around
I Got A Name
I Got Rhythm
I Just Called To
I Love Paris
I Love Rock n Roll
I Love You
I Need Your Lovin
I Only Have Eyes
I Saw Mommy Kiss
I Shot The Sheriff
I Talk To Trees
I Walk The Line
I Want To Know
I Will Always Love
I Will Survive
I Write The Songs
If I Had A Hammer
If I Were Carpentr
If You Don't Know
I'll Be Around
I'll Be Home Xmas
I'll Be Loving You
I'll Be There
I'll Fly Away
I'll Remember April
I'm A Believer
I'm A Country Boy
I'm A Little Teapt
I'm Beginning 2See
Imagination
Imagine
In The Mood

- Islands In Stream
 Isn't It Romantic
 Isn't She Lovely
 It Had To Be You
 It's A Grand Night
 It's A Small World
 It's All In Game
 It's Beginning To
 Its Matter Of Time
 It's My Party
 It's Not For Me
 It's Not Unusual
 It's Now Or Never
 It's Too Late
 It's Unusual Day
 Itsy Bitsy Spider
 I've Been Working
- J**
 Jailhouse Rock
 Jambalaya
 Jingle Bell Rock
 Jingle Bells
 Jive Talkin'
 John Jacob Jingle
 Johnny B. Goode
 Joy To The World
 Juke Box Sat. Nite
 Jump
 June Is Bustin'
 Just a Closer Walk
 Just a Gigolo
 Just As I Am
 Just In Time
 Just My Imagine...
 Just Once
 Just The Two Of Us
 Just Way You Are
- Kansas City
 King Of The Road
 Knock 3 Times
 Kokomo
- K**
- La Bamba
 Lady
 Lady Is A Tramp
 Last Dance
 Last Date
 Last Time Saw Pari
 Laughter In Rain
 Lay Down Sally
 Layla
 Leaving Jet Plane
 Let It Be
 Let It Snow!
 Lets Get It On
 Let's Stay Togethr
 Light My Fire
 Lilli Marlene
 Little Dog Gone
 Little Green Apples
 Locomotion
 Lollipop
 London Bridge
 Long Winding Road
 Look Of Love
 Lose My Faith
 Lost In Your Eyes
 Love Boat
 The Love Boat
 Love First Degree
 Love Is A Many
 Love In Blue
 Love Me Tender
 Love Will Keep Us
 Loves Me... Rock
- L**
- Love's Theme
 Lovin' Feeling
 Luchenbach Texas
 Lucille
 Lyin Eyes
- M**
 Macho Man
 Mack The Knife
 Maizry Doats
 Mammass Don't Let
 Man In The Mirror
 Managua Nicaragua
 Mandy
 Maniac
 Margaritaville
 Mary Little Lamb
 Me And Bobby McGee
 Me And My Shadow
 Meditation
 Memory
 Mercy Mercy Me
 Merry Little Xmas
 Miami Vice
 Midnight Hour
 Midnight Train-GA
 Misty
 Monday Monday
 Moon River
 Moonlight In VT
 More
 Morning Dance
 Most Wonderful Time
 Mr. Bojangles
 Mr. Wonderful
 Mrs. Robinson
 Muffin Man
 Music Box Dancer
 Music Music Music
 Music Of The Night
- M**
- My Cherie Amore
 My Coloring Book
 My Cup Runneth Ovr
 My Favorite Things
 My Funny Valentine
 My Girl
 My Life
 My Love
 My Wild Irish Rose
- N**
 Na Na Hey Hey Gbye
 Nadia's Theme
 New Kid In Town
 New York, New York
 Night And Day
 Night Fever
 Nightingale Sang
 Nights In White Satin
- O**
 Oh My Pa-Pa
 Oklahoma
 Old Cape Cod
 Old Devil Moon
 Old Lamplighter
 Old MacDonald
 Old Rugged Cross
 Old Soft Shoe
 Old Time R & R
 Old Time Religion
 On Street Where U
 On The Road Again
 On Top Ole Smoky
 One (Chorus Line)
 One More Try
 One Tin Soldier
 Only You
 Ooh Baby Baby
 Open Arms
 Opus One
- O**

Orange Blossom
Our Day Will Come
Over The Rainbow

P

Paper Roses
Party's Over, The
Peace in Valley
Peaceful Easy Feel
Peanuts' Theme
Peg
Penn. 6-5000
People
People Will Say
Physical
Piano Man
Pink Panther

🎵 The Pink Panther

Please Mr. Postman
Please Please Me
Poinciana
Polka Dots Moonbms
Pop Goes Weasel
Precious Memories
Pretty Woman
Proud Mary
Puff Magic Dragon

Q

Quando, Quando
Que Sera, Sera

R

Rag Mop
Rainbow Connection
Red Red Wine
Red Roses
Red Sails Sunset
Release Me
Rescue Me

Respect
Reunited
Rhinstone Cowboy
Rock A Bye Baby
Rock Around Clock
Rock This Town
Rocket Man
Rockin' Xmas Tree
Rocky Mtn High
Rocky Top
Rose
🎵 The Rose
Rose Garden
Row Your Boat
Rudolf

S

Sailing
Saints Go Marching
San Francisco
Sara
Sara Smile
Sat Nile Is Loneli
Satin Doll
Satisfaction
Save Best For Last
Seasons In The Sun
Seems Like Old Tms
Sentimental Reason
September
SF Flowers In Hair
Shadow Your Smile
Shake Your Booty
Shake, Rattle, Roll
Sh-Boom
She Believes in Me
She Loves You
She'll Be Coming
She's In Love
She's Like Wind

Shoo Fly Pie
Shop Around
Show Business
Signed Sealed Del.
Silent Night
Silly Love Songs
Silver Bells
Singing In Rain
Sleigh Ride
Smile
Smoke Gets In Eyes
Smooth Operator
Snow Bird
So In Love
Soldier Of Love
Some Day My Prince
Some Enchanted Eve
Something
Something To Talk
Sometimes When We
Somewhere
Somewhere Out Ther
Song Sung Blue
Soul Man
Sound Of Music
Spanish Eyes
Spanish Harlem
Speak Low
St. Elmo's Fire
St. Thomas
Stand By Me
Stand By Your Man
Stangers In Night
Stardust
Starting Over
Stayin Alive
Stompin' Savoy
Stormy Weather
Street Where U Liv
String Of Pearls

Summer Breeze
Summer Samba
Summertime
Summertime Blues
Sunday Kind Love
Sunny
Sunny Gets Blue
Sunny Side Street
Sunrise, Sunset
Surfin USA
Surrey With Fringe
Sweet Caroline
Sweet Home Alabama
Swingin On A Star

T

Take Five
Take It Easy
Take Me Out
Take The A Train
Take This Job And
Takin' Care Of
Tammy
Tea For Two
Tears In Heaven
Tell Her About It
Tempted
Tennessee Waltz
Tequila
Tequila Sunrise
Thanks For Memory
That Kind Of Girl
That'll Be The Day
That's Amore
That's Life
That's The Way
The Christmas Song
The Greatest Love
The Hustle
The Love Boat

The Pink Panther
 The Rose
 The Way We Were
 The Way You Do
 Then Came You
 There Must Be Way
 There'll Be Sad
 These Dreams
 They Call The Wind
 Things
 Things We Did Last
 Think
 Third Man Theme
 This Masquerade
 This Ole Man
 Those Were The Days
 Three Times A Lady
 Through The Years
 Tico Tico
 Time After Time
 Time In A Bottle
 Tiny Bubbles
 To All The Girls
 Tom Dooley
 Tomorrow
 Tonight
 Top Of The World
 Total Eclipse
 Trouble
 True Love
 Try To Remember
 Turn Turn Turn
 Tutti Frutti
 Tuxedo Junction
 Twinkle Twinkle
 Twist & Shout
 Twist, The

U

Unchained Melody

Under Boardwalk
 Unforgettable
 Up On Housetop
 Up Up & Away
 Up Where We Belong
V
 Vaya Con Dios
 Ventura Highway
W
 Wake Little Susie
 Wake Me Up
 Walk On By
 Walkin' Midnight
 Wasted Days and
 Watch What Happens
 Wave
 Way We Were
^{was} The Way We Were
 Way You Do
^{was} The Way You Do
 Wayward Wind, The
 We Are Family
 We Are The World
 We Built This City
 We Didn't Start
 We Wish You
 We're In This Love
 We've Got Tonight (Rock Ballad)
 We've Got Tonight (Modern Country)
 We've Only Begun
 What A Friend
 What Child Is This
 What I Did 4 Love
 What Kind Of Fool
 What Would U Think
 Wheel Of Fortune
 Wheels On The Bus
 When A Man Loves A

When Can I See You
 When I Fall n Love
 When I'm 64
 When Irish Eyes
 When You're Smiling
 Where Did Love Go
 Where Flowers Gone
 White Christmas
 Whiter Shade Pale
 Who Can I Turn To
 Whole New World
 Why Do Fools Fall
 Wide Open Spaces
 Wind Beneath Wings
 Winter Wonderland
 Wipe Out
 Wish Upon A Star
 With A Little Help
 With Or Without U
 Woman
 Wonderful Wonderful
 Wonderful World
 Wooden Heart
 World On A String
 Wunderbar

Y

Yakety Sax
 Yesterday
 Yesterday When I
 YMCA
 You Can't be True
 You Don't Bring Me
 You Light Up Life
 You Make Me Young
 You Needed Me
 You Send Me
 You'd Be So Nice
 You'll Never Walk
 Young At Heart

Your Cheatin Heart
 Your Song
 You're 16
 You're So Vain
 You've Got Friend

Concert Magic Songs

The words in bold type are the title displayed in the LCD screen.

Song Title	Type	Lyrics	Song Title	Type	Lyrics
Children's Songs					
<i>Twinkle, Twinkle, Little Star</i>	MP	✓	Christmas Songs		
<i>I'm A Little Teapot</i>	MP	✓	<i>Hark The Herald Angels Sing</i>	MP	✓
<i>This Old Man</i>	MP	✓	<i>Jingle Bells</i>	MP	✓
<i>Mary Had A Little Lamb</i>	MP	✓	<i>Deck The Halls</i>	MP	✓
<i>London Bridge</i>	MP	✓	<i>O Come All Ye Faithful</i>	MP	✓
<i>Row, Row, Row Your Boat</i>	MP	✓	<i>Joy To The World</i>	MP	✓
<i>Hickory Dickory Dock</i>	MP	✓	<i>The First Noel</i>	MP	✓
<i>Pop Goes The Weasel</i>	MP		<i>Silent Night</i>	MP	✓
<i>Good Morning To You</i>	MP	✓	<i>We Wish You A Merry Christmas</i>	MP	✓
<i>Frère Jacques</i>	MP	✓	<i>What Child Is This?</i>	MP	✓
<i>The Farmer In The Dell</i>	MP	✓	<i>Angels We Have Heard On High</i>	MP	✓
<i>Bingo</i>	MP	✓	<i>It Came Upon A Midnight Clear</i>	MP	✓
<i>Itsy, Bitsy Spider</i>	MP	✓	<i>Away In A Manger</i>	MP	✓
<i>Where, O Where Has My Little Dog Gone?</i>	EB	✓	<i>O Holy Night</i>	EB	✓
<i>The Muffin Man</i>	MP	✓	<i>O Tannenbaum (O Christmas Tree)</i>	MP	✓
<i>Three Blind Mice</i>	MP	✓	<i>The Twelve Days Of Christmas (12 Days of Christmas)</i>	MP	✓
<i>Old MacDonald Had A Farm</i>	MP	✓	<i>We Three Kings Of Orient Are</i>	MP	✓
<i>Did You Ever See A Lassie?</i>	MP	✓	<i>O Little Town Of Bethlehem</i>	MP	✓
<i>Ten Little Indians</i>	MP		<i>Ave Maria</i>	SK	
<i>Brahm's Lullaby</i>	SK	✓	Patriotic Songs		
<i>Rock A Bye Baby</i>	MP	✓	<i>My Country 'Tis Of Thee</i>	MP	✓
<i>Here We Go Round The Mulberry Bush</i>	MP	✓	<i>Battle Hymn Of The Republic</i>	MP	✓
<i>Little Brown Jug</i>	MP	✓	<i>America The Beautiful</i>	MP	✓
<i>She'll Be Comin' Around The Mountain</i>	EB	✓	<i>Yankee Doodle</i>	MP	✓
<i>Whistler And His Dog</i>	SK		<i>Hail To The Chief</i>	MP	✓
<i>Polly Wolly Doodle</i>	MP	✓	<i>Washington Post March</i>	SK	

Song Title	Type	Lyrics	Song Title	Type	Lyrics
<i>You're A Grand Old Flag</i>	EB	✓	<i>Beautiful Dreamer</i>	EB	✓
<i>Stars And Stripes Forever</i>	SK		<i>Ta Ra Ra Boom De Ay</i>	MP	✓
<i>Anchors Aweigh</i>	SK	✓	<i>Turkey In The Straw</i>	SK	
<i>Under The Double Eagle</i>	SK		<i>Blue Bells Of Scotland</i>	MP	✓
American Classics					
<i>Danny Boy</i>	EB	✓	<i>Down By The Riverside</i>	SK	✓
<i>Down In The Valley</i>	EB	✓	<i>By The Light Of The Silvery Moon</i>	SK	✓
<i>Let Me Call You Sweetheart</i>	EB	✓	<i>Shine On Harvest Moon</i>	SK	✓
<i>Home Sweet Home</i>	EB	✓	<i>American Patrol March</i>	MP	
<i>My Bonnie Lies Over The Ocean</i>	MP	✓	<i>Dixie</i>	SK	✓
<i>In The Good Old Summertime</i>	EB	✓	<i>Yellow Rose Of Texas</i>	SK	✓
<i>For He's A Jolly Good Fellow</i>	MP	✓	<i>I Love Coffee, I Love Tea (Java Jive)</i>	MP	✓
<i>Bill Bailey Won't You Please Come Home</i>	EB	✓	<i>Arkansas Traveler</i>	MP	✓
<i>Give My Regards To Broadway</i>	SK	✓	<i>Old Kentucky Home</i>	SK	✓
<i>Clementine</i>	MP	✓	<i>Red River Valley</i>	EB	✓
<i>Fascination</i>	SK		<i>The Entertainer</i>	SK	
<i>Home On The Range</i>	MP	✓	<i>Old Folks At Home</i>	SK	✓
<i>Take Me Out To The Ballgame</i>	EB	✓	<i>Maple Leaf Rag</i>	SK	
<i>Auld Lang Syne</i>	MP	✓	<i>After The Ball Is Over</i>	SK	✓
<i>Michael Row The Boat Ashore</i>	MP	✓	<i>After You've Gone</i>	EB	✓
<i>Oh, Susanna</i>	SK	✓	<i>Thunder And Blazes</i>	SK	
<i>On Top Of Old Smokey</i>	EB	✓	<i>Annie Laurie</i>	MP	✓
<i>Bicycle Built For Two</i>	EB	✓	<i>Wabash Cannonball</i>	SK	✓
<i>The Camptown Races</i>	MP	✓	<i>I've Been Working On The Railroad</i>	EB	✓
<i>The Band Played On</i>	EB	✓	<i>Grandfather's Clock</i>	EB	✓
<i>When Johnny Comes Marching Home</i>	MP	✓	<i>(continue)</i>		
<i>When The Saints Go Marching In</i>	EB	✓			

EB: Easy Beat, MP: Melody Play, SK: Skifull

Concert Magic Songs

Song Title	Type	Lyrics	Song Title	Type	Lyrics
Favorite Hymns					
<i>Fairest Lord Jesus</i>	MP	✓	<i>Savior Like A Shepherd Lead Us</i>	MP	✓
<i>Amazing Grace</i>	MP	✓	<i>Stand Up, Stand Up For Jesus</i>	MP	✓
<i>Doxology</i>	MP	✓	<i>Onward Christian Soldiers</i>	MP	✓
<i>For The Beauty Of The Earth</i>	MP	✓	<i>All Hail The Power Of Jesus Name</i>	MP	✓
<i>O Worship The King</i>	MP	✓	<i>To God Be The Glory</i>	MP	✓
<i>The Old Rugged Cross</i>	MP	✓	Classical Selections		
<i>Holy, Holy, Holy</i>	MP	✓	<i>Andante from Symphony No. 94 by Haydn</i>	MP	
<i>What A Friend We Have In Jesus</i>	MP	✓	<i>Fur Elise by Beethoven</i>	EB	
<i>Rock Of Ages</i>	MP	✓	<i>An Die Freude (Ode To Joy)</i>	MP	
<i>Trust And Obey</i>	MP	✓	<i>Clair De Lune by Debussy</i>	SK	
<i>Sweet Hour Of Prayer</i>	MP	✓	<i>Skater's Waltz</i>	SK	
<i>Just As I Am</i>	MP	✓	<i>Peter And The Wolf</i>	SK	
<i>Jesus Loves The Little Children</i>	MP	✓	<i>Minuet In G by J.S. Bach</i>	SK	
<i>How Great Thou Art</i>	MP	✓	<i>Romeo And Juliet</i>	SK	
<i>Great Is Thy Faithfulness</i>	MP	✓	<i>Blue Danube Waltz</i>	SK	
<i>A Mighty Fortress</i>	MP	✓	<i>Sleeping Beauty Waltz</i>	EB	
<i>Christ The Lord Is Risen Today</i>	MP	✓	<i>Gavotte by Gossec</i>	SK	
<i>It Is Well With My Soul (When Peace Like)</i>	MP	✓	<i>Waltz Of The Flowers</i>	SK	
<i>Crown Him With Many Crowns</i>	MP	✓	<i>Toreador Song from "Carmen" by Bizet</i>	SK	
<i>Blest Be The Tie That Binds</i>	MP	✓	<i>"Fledermaus" by J. Strauss</i>	EB	
<i>Come Thou Almighty King</i>	MP	✓	<i>Norwegian Dance by Grieg</i>	SK	
<i>My Jesus, I Love Thee</i>	MP	✓	<i>William Tell Overture</i>	SK	
<i>The Church's One Foundation</i>	MP	✓	<i>Can Can</i>	SK	
<i>Gloria Patri</i>	MP	✓	<i>Emperor Waltz</i>	SK	
<i>The Solid Rock</i>	MP	✓	<i>March Militaire by Chopin</i>	SK	
<i>Standing On The Promises</i>	MP	✓	<i>Grand March from "Aida" by Verdi</i>	SK	
<i>I Need Thee Every Hour</i>	MP	✓	<i>Gymnopedie by Sati</i>	SK	
			<i>Gypsy Chorus from "Carmen" by Bizet</i>	SK	

Song Title	Type	Lyrics
<i>Largo</i> from <i>Symphony No. 9</i> by Dvorák.....	SK	
<i>Prelude In A</i> by Chopin	MP	
<i>Pizzicato Polka</i>	SK	
<i>Rondeau</i> by Mouret	SK	
<i>Voice Of Spring</i>	EB	
<i>Allegro Moderato</i> from <i>Symphony Nr. 8</i> by Schubert	SK	

Special Occasions

<i>Bridal Chorus</i> from "Lohengrin" by Wagner	MP	✓
<i>Wedding March</i> from "Midsummer Night's Dream"		
by Mendelssohn	SK	
<i>Pomp And Circumstance</i>	SK	
<i>Mazel Tov</i>	EB	

International Songs

<i>When Irish Eyes Are Smiling</i>	EB	✓
<i>Hatikvah</i>	MP	✓
<i>My Wild Irish Rose</i>	MP	✓
<i>Hava Nagilah</i>	EB	✓
<i>Ich Bin Ein Musikant</i>	SK	
<i>Chiapenacas</i>	SK	
<i>Funiculi Funicula</i>	SK	✓
<i>La Marseillaise</i>	MP	✓
<i>La Paloma</i>	SK	✓
<i>Santa Lucia</i>	SK	✓
<i>Habanera</i>	SK	
<i>La Bamba</i>	SK	


























EB: Easy Beat, MP: Melody Play, SK: Skilfull

Table of Chord Types

This table describes the fingering of 61 types of chords, including inversions, that the CP piano recognizes. All these are represented here in the key of C, but of course any transposition of these chords to other keys apply.

Entries on the chart with an asterisk (*) are easy fingerings that can be recognized in the One-Finger mode.

C Maj						
C7						
C Δ7						
C6						
C6 9						
C9						
C11						
C7 sus4						
C7 b5						
C7 b9						
Cm						
Cm7						
Cm6						


Cm9							
Cm add9							Cm9 11
C7 #9							
C7 b9 11							C7 #9 #11
C9 13							C7 b9 13
C7 b9 11 13							C9 b13
C7 #9 b13							
Cm7 b5							Cm7 b5 b9
Cm7 b5 11							
CΔ7 #5							CΔ9 13
CΔ7 b5							CΔ9 #11
CΔ9							
CΔ7 13							CΔ9 #11 13
Cm9							
C dim							C dim b13
C dim 9							

Connection Examples

A. Using External Speakers


The Concert Performer has an amplifier and built-in speakers and together, they produce a powerful sound. However, for larger venues or outdoor performances, you may need to use additional amplification and speaker systems.

Standard 1/4-inch audio cables can be plugged into the CP's stereo Line Out jacks for this purpose. The CP's Master Volume will affect the signals levels output from the Line Out Jacks.

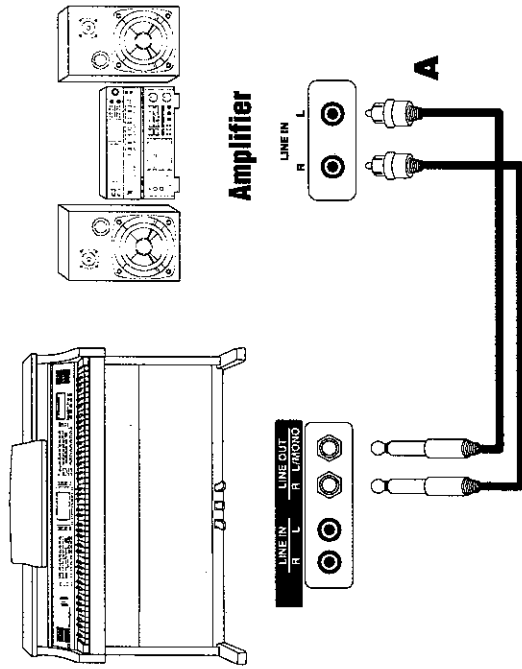

B. Using the Concert Performer with Your Home Audio System

You can connect audio cables from your stereo system or another source to the CP's Line In jacks. The sound of your stereo playing a tape, CD, or even radio will be heard through the CP's speaker system and mixed in with any sounds from the CP itself, enabling you to play along with your favorite songs! Connect the CP with your CD player or other device as illustrated.

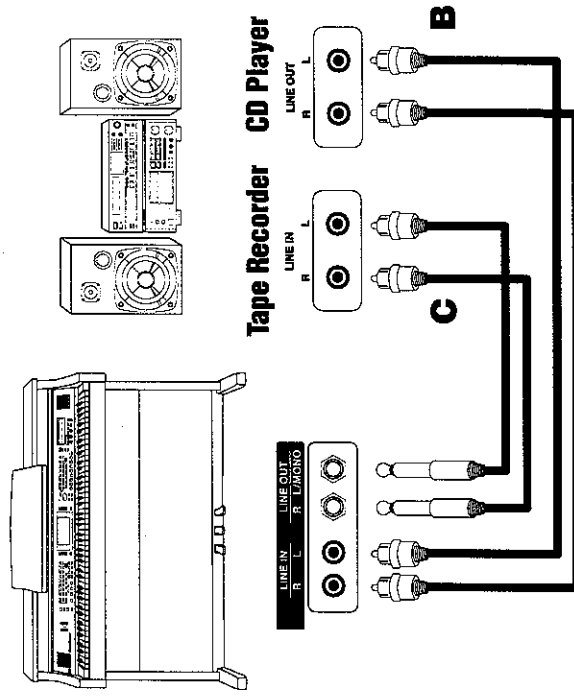



C. Recording Your Performance with Your Tape Recorder

Even though the CP155 do not have a CD-R Drive you can still make a recording from your CP using the Line out Jacks. Simply connect an external CD-R recorder or other recording device (Cassette, Audio software from a personal computer etc.) to the CP's Line Out Jacks. Everything that you hear coming out of the CP's built-in speaker system is also sent out through the Line Out Jacks and can be recorded. You can also record anything that is connected to the Line In Jacks along with anything being played by the CP.

D. Using the Concert Performer with an External MIDI Instrument

MIDI lets you expand the creative possibilities of the CP by connecting it to an external MIDI device or personal computer.

Use a MIDI cable to connect the CP's MIDI Out jack to the other device's MIDI In. Likewise, connect the MIDI Out jack of the other device to the CP's MIDI In.

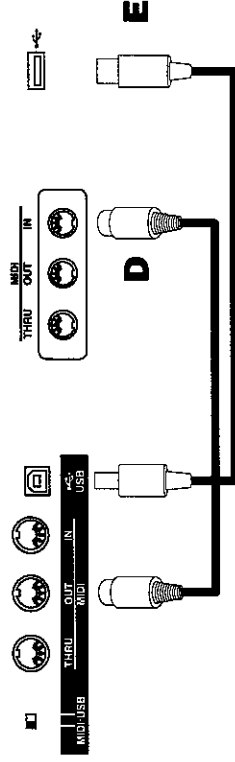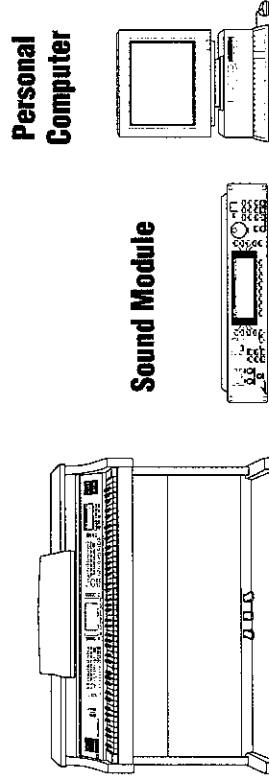

E. Using The Concert Performer with Your Personal Computer

Your personal computer can be used as a MIDI device as well. In order to connect your computer to the CP you will need a MIDI interface. Check with your local music store or computer dealer for more information about particular models of these interface devices. Once you have your computer connected to your Concert Performer, you can think of it as a powerful extension of the CP's own music processing abilities. There are hundreds of software programs available that you can use to do everything from learn the basics of piano playing, to creating film scores for your home movies, to composing the next great digital symphony.

If you don't wish to purchase a MIDI interface device for your computer, the Concert Performer has a special type of interface built in to it that may make the connection easier. The CP can be connected directly to the back of your computer via a USB cable.

In order for the CP and your computer to properly communicate over this USB cable, you first need to set the MIDI-USB switch located next to the MIDI jacks to USB. Also your computer must have a USB driver installed. Please read the instruction on the next page for the details about the USB driver.

USB

The Concert Performer can be connected with a personal computer with a USB cable for exchanging MIDI data. You need a USB driver installed in your computer.

[For Windows XP/Me users]

A standard USB driver is already installed in your computer. You don't need to install a new driver.

[For Windows 2000/98SE users]

You need to install the designated driver in your computer. Visit the KAWAI web site at <http://www.kawai.co.jp/english/Download1.html> and download the program.

[For Macintosh users]

Currently we don't have a USB driver available for Macintosh computers. Please use an appropriate MIDI interface and MIDI cables when connecting the Concert Performer to a Macintosh computer.

NOTE:

When both MIDI jacks and USB jack are connected, USB has priority.

When connecting USB cable to the Concert Performer, first connect the USB cable and then turn the power of the Concert Performer on. It may take some time to start communication when the Concert Performer is connected to the computer via USB.

When USB communication is unstable with connection via hub, connect the USB cable directly to the USB port of the computer.

Turning the power of the Concert Performer on/off or disconnecting the USB cable while the following actions may cause unstable communication.

- while installing USB driver
- while booting up the computer
- while MIDI application is working
- while communicating with the computer
- while the computer is in energy saver mode

* If you have any problem with USB communication, consult the instruction manual of your computer and check your computer set up.

* Windows is registered trademark of Microsoft Corporation.

* Macintosh is registered trademark of Apple Computer, Inc.

Program Change Numbers

Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank	
			MSB	LSB				MSB	LSB				MSB	LSB
PIANO	Concert Grand	1	121	0	FEATURE	Plunger Trumpet	57	95	7	VOCAL	Jazz Ensemble	54	95	2
	Studio Grand	1	121	1		Trumpet Shake	57	95	6		Female Scat	54	95	22
	Modern Piano	2	121	0		Lead Flugel Horn	57	95	14		50's Ensemble	54	95	3
	Electric Grand	3	121	0		Exp Guitar	26	95	5		50's Females	54	95	27
	Piano Octaves	1	95	1		Exp Nylon Guitar	25	95	2		Jazz Auto	54	95	48
	Classic EP	5	121	0		Exp Flute	74	95	12		60's Ensemble	54	95	5
	Modern EP	6	121	0		Ballad Tenor	67	95	6		60's Ensemble 2	54	95	6
	Modern EP 2	6	121	1		Growl Tenor	67	95	4		Pop Ensemble	54	95	7
	60's EP	5	121	3		Passionate Violin	41	95	2		Pop Ensemble 2	54	95	8
	Tremolo EP	1	95	1		Passionate Cello	43	95	3		Contemp Ensemble	54	95	10
	Mellow Grand	2	121	2		Exp Trumpet	57	95	12		50's Auto	54	95	46
	Rock Grand	2	121	1		Harmon Mute Tpt	60	95	5		Jazz Doo Dao	54	95	19
	Honky Tonk	4	121	0		Ballad Trumpet	57	95	13		Jazz Doo Bop	54	95	20
	Electric Grand 2	3	121	1		Exp Trombone	58	95	8		Jazz Bah Bop	54	95	21
	Piano Octaves 2	3	121	1		Plunger Trombone	58	95	4		Contemp Males	54	95	9
	Classic EP 2	1	95	2		Lead Soprano	65	95	1		60's Ooh Wah	54	95	49
	Classic EP 3	5	121	1		Exp Tenor	67	95	9		50's Doo Wop	54	95	26
	Modern EP 3	6	121	2		Breathy Tenor	67	95	5		50's Ooh Aah	54	95	4
	EP Legend	6	121	3		Exp Alto	66	95	6		40's Doo Bee	54	95	16
	EP Phase	6	121	4		Soft Alto	66	95	7		40's Dah Bah	54	95	17
	Jazz Grand	1	95	8		Exp Guitar 2	26	95	11		40's Doo Dah	54	95	18
	Crystal EP	6	95	1		Ballad Guitar	26	95	6		Slow Choir	53	95	2
	Piano & Guitar	2	95	4		Pick Nylon Gtr	25	95	3		Choir & String	53	95	3
	Mono Grand	1	95	3		Finger Nylon Gtr	32	95	4		Ooh	54	95	1
	Wide Honky Tonk	4	121	1		Ac Gtr Harmonics	41	95	1		Bass Vocal	54	95	31
	Piano & EP	2	95	1		Classical Violin	41	95	3		Choir Aahs	53	95	0
	Piano & EP 2	2	95	2		Dolce Violin	43	95	6		Breathy Choir	53	95	1
	Piano & EP 3	2	95	3		Classical Cello	43	95	4		Voice Oohs	54	121	1
	Piano & Organ	1	95	6		Dolce Cello	43	95	7		Humming	54	121	1
	Piano & Organ 2	1	95	7		Quartet	49	95	11		Male Aah	54	95	43
	New Age Piano	1	95	9		Lead Trumpet	57	95	5		Male Ooh	54	95	42
	New Age Piano 2	1	95	10		Closed Mute Tpt	60	95	4		Male/Female Aah	54	95	45
	New Age Piano 3	1	95	11		Lead Trombone	58	95	2		Male/Female Ooh	54	95	44
	New Age EP	6	95	2		Ballad Trombone	58	95	3		60's Ooh	54	95	37
	New Age EP 2	6	95	3		Closed Mute Bone	58	95	9		Pop Ooh	54	95	39
	New Age EP 3	6	95	4		Ballad Flute	74	95	13		Pop Oohs	54	95	40
	Piano & Vibes	1	95	12		Flute Overblow	74	95	9		Pop Aah	54	95	41
	Piano & Guitar 2	1	95	13		Flute Flutter	74	95	10		Pop Wah	54	95	38
	Piano & Organ 3	1	95	14		Lead Alto	66	95	2		60's Wah	54	95	36
	EP Dolce	5	95	2		Exp Brass	62	95	8		60's Bop	54	95	36
	Toy Piano	11	95	1		Flugel & Tenor	57	95	18		50's Shoo	54	95	28
				Mute Tpt & Bone	57	95	16	50's Bee	54	95	29			
				Flugel & Mute Tpt	58	95	12	50's Doo	54	95	30			
				Soft Tpt & Bone	57	95	17	50's Hey	54	95	32			
				Medium Tpt & Alto	57	95	19	50's La	54	95	33			
				Soft Tenor & Alto	66	95	10	50's Ooh	54	95	34			
				Med Tenor & Alto	66	95	9	50's Aah	54	95	35			
				Lead Tenor & Alto	66	95	8	Female Doo	54	95	23			
				Lead Bone & Tenor	58	95	10	Female Dao	54	95	24			
				Tpt & Bone & Tenor	58	95	11	Female Duya	54	95	25			
				Cello Up Bow	43	95	6	40's Doo	54	95	12			
				Cello Down Bow	43	95	5	40's Dah	54	95	13			
				Exp Saxes	66	95	11	40's Bee	54	95	14			
				Violin Upbow	41	95	5	40's Bah	54	95	15			
				Violin Downbow	41	95	4	40's Shoo	54	95	11			
								Choir Aahs 2	53	121	1			
								Choir Aahs 3	53	95	5			
								Choir Aahs Sfx	53	95	4			
								Voice	86	121	0			
								Choir	92	121	0			

Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank	
			MSB	LSB				MSB	LSB				MSB	LSB				MSB	LSB
DRAWBAR	Be 3	17	95	1	ORGAN	Full Pipes	20	95	9	STRING	Beautiful Strings	45	95	1					
	Jazzier	18	95	1		Small Ensemble	20	95	8		String Ensemble	49	121	0					
	Hj-Lo	17	95	3		8' Celeste	20	95	5		String Ensemble 2	50	121	0					
	Full Organ	18	95	4		Church Organ	20	121	0		Synth Strings	51	121	0					
	Mellow	17	95	5		Church Organ 2	20	121	1		Synth Strings 2	52	121	0					
	Drawbar	17	121	0		Electronic Organ	17	95	9		Violin	41	121	0					
	Percussive Organ	18	121	0		Mixer	18	95	5		Viola	42	121	0					
	Percussive Organ 2	18	121	1		Theater Organ	20	95	1		Contrabass	43	121	0					
	4' percussion	18	95	3		Theater Organ 2	20	95	2		Harp	44	121	0					
	2 2/3' percussion	18	95	2		Reeds	20	95	10		String Quartet	47	121	0					
	Be More	17	95	2		Baroque Mix	20	95	7		String & Brass	49	95	2					
	Be Nice	17	95	7		8' Diapason	20	95	6		Warm Strings	49	121	1					
	Odd Man	17	95	6		Church Organ 3	20	121	2		Synth Strings 3	51	121	1					
	Screamini'	17	95	4		Puff Organ	21	121	1		60's Strings	49	121	2					
	Hollow	18	95	6		Electronic Organ 2	17	95	10		Slow Violin	41	121	1					
	Drawbar 2	17	121	3		60's Organ	17	121	2		Tremolo Strings	45	121	0					
	Percussive Organ 3	18	121	2		Reed Organ	21	121	0		Pizzicato	46	121	0					
	Drawbar 3	17	121	1		Theater Organ 3	20	95	3		Orchestra Hit	56	121	0					
	Soft Solo	17	95	8		Theater Organ 4	20	95	4		String & Harp	49	95	6					
	Key Click	122	95	1		8' Diapason 2	18	95	7		Violin Ensemble	41	95	1					
	Drawbar Bass	18	95	8		8' Reed	21	95	1		Cello Ensemble	43	95	2					
	16' Drawbar	19	95	1		8' Flute Celeste	21	95	9		String Bass Ens	44	95	1					
	8' Drawbar	19	95	2		8' Flute Chiff	21	95	7		Mono Strings	49	95	3					
	5 1/3' Drawbar	19	95	3		2 2/3' Flute Chiff	21	95	8		Octave Strings	49	95	4					
	4' Drawbar	19	95	4		8' Flute	21	95	2		Strings & Bell	49	95	5					
	2 2/3' Drawbar	19	95	5		8' & 2' Flute	21	95	3		Strings & Piano	1	95	4					
	2' Drawbar	19	95	6		4' & 2' Flute	21	95	4		Strings & Piano 2	1	95	5					
	1 3/5' Drawbar	19	95	7		2 2/3' Flute	21	95	5		Slow Cello	43	95	1					
	1 1/3' Drawbar	19	95	8		1 3/5' Flute	21	95	6		Synth String Orch	51	95	1					
	1' Drawbar	19	95	9		8' Diapason 3	20	95	20		Harp Sweep Up	47	121	0					
	Jazz Organ	18	95	11		Stopped Pipe	20	95	21		Harp Sweep Down	47	121	0					
	Jazz Organ 2	18	95	12		Principle Pipe	20	95	22		Harp Cascade Up	47	121	0					
	Rock Organ	19	121	0		Principle Choir	20	95	23		Full Orchestra	49	95	12					
	Pedal Percussion	18	95	9		8' & 4' Diapason	20	95	24		Small String Ens	49	95	13					
	Pedal Percussion 2	18	95	10		Small Ensemble 2	20	95	25		String Quartet 2	49	95	7					
						Reed Pipes	20	95	26		Warm Strings 2	49	95	8					
						Posaune	20	95	27		Warm Strings 3	51	95	2					
						Bass Pipe	20	95	28		Strings Sustaining	49	95	10					
						Bass Pipe 2	20	95	29		Strings Storzando	49	95	9					
						Cornopean	20	95	30										
						Pipe Ensemble	20	95	31										
						Resultant	20	95	32										
						Contra Gambe	20	95	33										
						Kinura	20	95	34										
						Post Horn	20	95	37										
						Voice Celeste 8	20	95	39										
						Chiffy Tibia	20	95	17										
						Full Pipes 2	20	95	18										
						Baroque	20	95	19										
						Pump Organ	20	95	40										
						Pedal Mixer	20	95	12										
						Pedal	20	95	11										
						Pedal 2	20	95	13										
						Pedal 3	20	95	15										
						Pedal 4	20	95	16										
						Theater Organ 5	20	95	14										
						Theatre Full	20	95	35										
						Theatre Tibia	20	95	36										
						Theatre Vox	20	95	38										

Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank	
			MSB	LSB				MSB	LSB				MSB	LSB
WOODWIND	Alto Sax	66	121	0	BRASS	Solo Trumpet	57	121	1	HARPSI & MALLT	Harpischord	7	121	0
	Tenor Sax	67	121	0		Muted Trumpet	60	121	0		Clavi	8	121	0
	Baritone Sax	68	121	0		Cup Mute Trumpet	60	95	1		Celesta	9	121	0
	Soprano Sax	65	121	0		Trumpet	57	121	0		Handbells	15	95	1
	Big Band Winds	74	95	2		Trombone	58	121	0		Church Bells	15	121	1
	Flute	74	121	0		French Horns	61	121	0		Steel Drums	115	121	0
	Clarinet	72	121	0		Tuba	59	121	0		Vibraphone	12	121	0
	Pan Flute	76	121	0		Brass Section	62	121	0		Marimba	13	121	0
	Orchestral Winds	69	121	0		Synth Brass	63	121	0		Xylophone	14	121	0
	Soft Alto Sax	74	95	3		Synth Brass 2	64	121	0		Music Box	11	121	0
	Soft Tenor Sax	66	95	1		Flugel Horn	57	95	1		Harpischord Octave	7	121	1
	Breathy Tenor Sax	67	95	2		Muted Trumpet 2	60	121	1		Synth Clavi	8	121	1
	Sax Section	62	95	1		Cup Mute Trombone	60	95	2		Glockenspiel	10	121	0
	Piccolo	73	121	0		Bright Trombone	58	121	2		Carillon	15	121	2
	Jazz Flute	74	95	1		Trombone 2	58	121	1		Tubular Bells	15	121	0
	Jazz Clarinet	72	95	1		Warm French Horn	61	121	1		Rolling Steel Drum	115	121	0
	Recorder	75	121	0		Jump Brass	63	121	3		Rolling Vibes	12	121	0
	English Horn	70	121	0		Brass Section 2	62	121	1		Rolling Marimba	13	121	0
	Bassoon	71	121	0		Synth Brass 3	63	121	1		Synth Mallet	99	121	1
	Flute & Mute Tpt	74	95	6		Synth Brass 4	64	121	1		Hard Marimba	13	95	1
	Flute & Strings	74	95	8		Bright Solo Tpt	57	95	3		Soft Marimba	13	95	2
	Octave Saxes	67	95	3		Trumpet Ensemble	57	95	2		Wide Marimba	13	121	1
	Big Band Winds 2	74	95	4		Trumpet & Alto	57	95	4		Wide Vibraphone	12	121	1
	Orchestral Flute	74	95	7		Trombone & Tenor	58	95	1		Harpischord 2	7	121	3
	Orch Clarinet	72	95	2		Brass & Sax	62	95	5		Wide Harpischord	7	121	2
	Orchestral Winds 2	74	95	5		Brass Pad	62	95	2		Muted Handbells	15	95	2
	Reeds Ensemble	69	95	2		Mute Brass Ens	60	95	3		Vibes & Guitar	12	95	1
	Reeds Ensemble 2	69	95	3		Brass & Synth	62	95	3		Octave Vibes	12	95	2
	Classic Alto Sax	66	95	3		French Horn & Strg	62	95	4		Steel Drums 2	115	95	1
	Alto Sax 2	66	95	4		Cornet	61	95	2		Harpisi & Strings	7	95	1
	Alto Sax Bend	66	95	5		Classic Trumpet	57	95	8		Harpisi & Strings 2	7	95	2
	Tenor Sax 2	67	95	8		Dixieland Trumpet	57	95	9		Harpisi & Pipes	7	95	3
	Tenor Sax 3	67	95	7		Trumpet 2	57	95	10		Harpisi & Pipes 2	7	95	4
	Bass Clarinet	72	95	3		Sentimental Bone	58	95	11		Bells	15	95	3
	Oboe 2	69	95	1		Euphonium	58	95	7		Beil Lyra	10	95	1
	Bassoon 2	71	95	1		Sousaphone	59	95	5		Hand Bells 2	15	95	4
	Recorder 2	75	95	1		Tuba 2	59	95	1		Music Box 2	11	95	2
	Oboe & Bassoon	69	95	1		Brass Section 3	62	95	2					
	Bassoon&Euphonium	71	95	4		Brass Section 4	62	95	7					
	Clarinet & Bassoon	71	95	2		Wide Horn Section	61	95	6					
	Jazz Clarinet 2	72	95	6		Trombone & Tpt	58	95	1					
	Flute & Clarinet	74	95	7		Trombone & Tpt 2	57	95	6					
	Oboe & Clarinet	72	95	11					15					
	Recorder 3	75	95	8										
	Slow Pan Flute	76	95	2										
	Pan Flute 2	76	95	1										
	Piccolo 2	73	95	2										
	Clarinet 3	72	95	5										
	Flute Key Click	122	121	1										

Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank	
			MSB	LSB				MSB	LSB				MSB	LSB
GUITAR	Nylon Acoustic	25	121	0	BASS	Acoustic Bass	33	95	2	PAD & SYNTH	Itopia	92	121	1
	Nylon Acoustic 2	25	121	2		Electric Bass	34	95	1		Warm Pad	90	121	0
	Steel Guitar	26	121	0		Finger Bass	34	121	0		Brightness	101	121	0
	Electric Guitar	28	121	0		Pick Bass	35	121	0		Atmosphere	100	121	0
	Jazz Guitar	27	121	0		Fretless Bass	36	121	0		New Age	89	121	0
	Pedal Steel	27	121	1		Ac Bass & Ride	33	95	1		Sweep	96	121	0
	Country Lead	29	121	3		Slap Bass	37	121	0		Polysynth	91	121	0
	Muted Electric	29	121	0		Synth Bass	39	121	0		Sine Pad	90	121	1
	Overdrive	30	121	0		Synth Bass 2	40	121	0		Halo	95	121	0
	Distortion	31	121	0		Attack Bass	40	121	3		Synth Vocal	55	121	0
	Nylon Acoustic 3	25	121	3		Acoustic Bass 2	33	121	0		Bowed	93	121	0
	Steel String 2	26	121	3		Finger Slap Bass	34	121	1		Metallic	94	121	0
	12 String	26	121	1		Warm Synth Bass	39	121	1		Soundtrack	98	121	0
	Electric Guitar 2	28	121	1		Clavi Bass	39	121	3		Analog Voice	55	121	1
	Electric Guitar 3	29	121	2		Hammer Bass	39	121	4		Halo 2	95	95	1
	Hawaiian Guitar	27	95	1		Elec Bass & Ride	34	95	2		Bright Warm Pad	90	95	1
	Rhythm Guitar	28	121	1		Slap Bass 2	38	121	0		Metallic Pad 2	94	95	1
	Ukulele	25	121	1		Synth Bass 3	39	121	2		Polysynth 2	91	95	1
	Cutting Guitar	29	121	1		Synth Bass 4	40	121	1		New Age 2	89	95	1
	Elec Gtr Harmonics	32	121	0		Rubber Bass	40	121	2		Brightness 2	101	95	1
	Mellow Steel Strg	26	95	1		Octave Fretless	36	95	1		Classic Synth	82	121	0
	Jazz Guitar 2	27	95	2		Poly Synth Bass	39	95	1		Classic Synth 2	82	121	1
	Nylon Electric	28	95	1		Clavi Bass 2	39	95	2		Square	81	121	0
	Guitar & Strings	26	95	2		Electric Bass 2	34	95	4		Sine	81	121	2
	Guitar Pad	26	95	3		Finger Bass 2	34	95	5		Chiff	84	121	0
	Guitar Feedback	32	121	1		Ac Bass & Piano	33	95	3		Bass & Lead	88	121	0
	Dynamic Overdrive	30	121	1		Elec Bass & Piano	34	95	3		Wire Lead	85	121	1
	Dist Feedback	31	121	1		Acoustic Bass 3	33	95	4		Crystal	99	121	0
	Dist Rhythm	31	121	2		Acoustic Bass 4	33	95	5		Rain Pad	97	121	0
	Gtr Fret Noise	121	121	0		Ac Bass Slap	121	121	2		Analog Brass	63	121	2
	Spanish Guitar	25	95	1							Classic Synth 3	82	121	3
	Folk Guitar	26	95	8							Fifth	87	121	0
	Delayed Folk Gtr	26	95	9							Square 2	81	121	1
	Pedal Steel 2	27	95	5							Sequenced Analog	82	121	4
	Delay Pedal Steel	27	95	4							Charang	85	121	0
	Jazz Guitar 3	27	95	3							Lead	82	121	2
	Electric Guitar 4	28	95	2							Soft Wire Lead	88	121	1
	Electric Guitar 5	28	95	3							Echo Bell	103	121	1
	Delayed Elec Gtr	28	95	4							Callope	83	121	0
	Muted Guitar 2	29	95	1							Analog Brass 2	64	121	2
	Gtr Cutting Noise	121	121	1							Multi Sweep	96	95	1
	Folk Guitar 2	26	95	12							Warm Sweep	96	95	2
											Bowed 2	93	95	1
											Saw Pad	82	95	3
											Analog Brass 3	64	95	0
											Big Saw	82	95	1
											Octave Saw	82	95	2
											Clean Square	81	95	1
											Square Lead	81	95	3
											Square Pad	81	95	2
											Echoes	103	121	0
											Sci-Fi	104	121	0
											Goblin	102	121	0
											Echo Pan	103	121	2
											New Age 3	89	95	3
											New Age 4	89	95	2
											Saw Comp	89	95	3
											Square Comp	89	95	4
											Saw Comp 2	89	95	5
											Chiff Comp	89	95	6
												89	95	7

Category	Sound Name	Prog	Bank		Category	Sound Name	Prog	Bank		Exclusive* kk=K/T No
			MSB	LSB				MSB	LSB	
SPECIALTY	Strumming Ac Gtr	26	121	0	DRUM	Standard Kit	1	120	0	1
	Strumming Ac Gtr 2	25	121	0		Jazz Kit	33	120	0	33
	Picking Ac Gtr	25	121	0		Brush Kit	41	120	0	41
	Picking Ac Gtr 2	26	121	0		Room Kit	9	120	0	9
	Mandolin	26	121	2		Power Kit	17	120	0	17
	Banjo	106	121	0		Analog Kit	26	120	0	26
	Picking Banjo	106	121	0		Dance Kit	25	120	0	27
	Harmonica	23	121	0		Electric Kit	25	120	0	25
	Fiddle	111	121	0		Orchestra Kit	49	120	0	49
	Strumming Elec Gtr	28	121	2		Standard Kit 2	1	120	0	2
	Pick/Strum Gtr	27	121	0		Marching Set	117	95	5	
	Pick/Strum Gtr 2	26	121	1		Nogaku Set	117	95	6	
	Strumming Mandolin	26	121	0		Taiko Drums	117	121	0	
	Strumming Banjo	106	121	2		Melodic Toms	118	121	0	
	Blues Harmonica	23	95	2		Concert Bass Drum	117	121	1	
	Wah Harmonica	23	95	1		Woodblock	116	121	0	
	Wah Harmonica 2	23	95	3		Agogo	114	121	0	
	Dulcimer	16	121	0		Tinkle Bell	113	121	0	
	Slow Fiddle	111	95	1		Castanet	116	121	1	
	Accordion	22	121	1		Reverse Cymbal	120	121	0	
	French Accordion	22	121	1		Sleigh Bells	113	95	1	
	Tango Accordion	24	121	0		Triangle	113	95	2	
	French Accordion 2	22	95	1		Repeating Castanet	116	121	1	
	Accordion 2	22	95	2		Cym & Bass Drum	117	95	1	
	Celtic Harp	47	121	1		Snare Roll	117	95	2	
	Mellow Mandolin	26	95	4		Melodic Tom 2	118	121	1	
	Hammer Dulcimer	16	95	1		Synth Drum	119	121	0	
	Banjo 2	106	95	1		Rhythm Box Tom	119	121	1	
	Whistle	79	121	0		Electric Drum	119	121	2	
	Shakuhachi	78	121	0		Snare Roll 2	117	95	3	
	Sitar	105	121	0		Timpani	48	121	0	
	Blown Bottle	77	121	0		Rolling Timpani	48	121	0	
	Koto	108	121	0		Soft Timpani	48	95	1	
	Ocarina	80	121	0		Soft Timpani Roll	48	95	2	
	Shamisen	107	121	0		Orch Cymbal & BD	117	95	8	
	Sitar 2	105	121	1		Finger Snap	116	95	4	
	Shanai	112	121	0		Hand Clap	116	95	3	
	Taisho Koto	108	121	1		Metronome	116	95	2	
	Bag Pipe	110	121	0		Conga	127	95	2	
	Balalaika	26	95	7		Tambourine	114	95	1	
	Ryuteki	78	95	1		Bass Drum	117	95	7	
	Nokan	78	95	2		Talking Drum	118	95	3	
	Biwa	107	95	1		Slit Drum	13	95	3	
	Kenban Harmonica	23	95	2		Room Tom	118	95	1	
	Mandolin 2	26	95	4		Brush Tom	118	95	2	
	Celtic Harp 2	47	95	10		Cymbal Roll	120	95	3	
	Cordovox	83	95	1		Ride Cymbal	120	95	2	
	Whistlers	79	95	1		Crash Cymbal	120	95	1	
	Kokyu	111	95	2		Splash Cymbal	120	95	6	
	Sho	112	95	1		Crash Cymbal Mute	120	95	7	
	Hichiriki	112	95	2						
	Atarigane	114	95	2						
	Mokugyo	116	95	1						
	Tsuzumi	117	95	4						
	Ainote	127	95	1						
	Euro Hit	56	121	3						
	6th Hit	56	121	2						
	Bass Hit Plus	56	121	1						

* For Drum Kits, send Exclusive Message (F0 40 7F 33 gg mm 10 On 7F kk F7) after Program Change/

Category	Sound Name	Prog	Bank		Exclusive* Kk=KIT No	Category	Sound Name	Prog	Bank		MSB	LSB
			MSB	LSB					MSB	LSB		
SFX	SFX Kit	57	120	0	124		Bird Tweet 2	124	121	3		
	SFX Kit 2	57	120	0			Burst Noise	126	121	9		
	Nature	123	95	2			Rain & Thunder	123	95	1		
	Transportation	126	95	10			Pop	126	95	2		
	War Games	128	95	1			Bloop	126	95	3		
	Animal Farm	124	95	11			Saw & Bow	111	95	3		
	Mystery Theatre	123	95	3			Aaogga/Claxson	126	95	4		
	Game Show	127	95	5			Chick Peep	124	95	3		
	Counting	127	95	6			Chicken	124	95	4		
	Trip to Japan	126	95	11			Game Show Correct	126	95	8		
	Applause	127	121	0			Game Show Wrong	126	95	9		
	Seashore	123	121	0			Gong	120	95	4		
	Stream	123	121	4			Gong 2	120	95	5		
	Rain	123	121	1			Pig	124	95	8		
	Thunder	123	121	2			GM2 Standard Kit	1	120	0		
	Wind	123	121	3			GM2 Room Kit	9	120	0		
	Bird Tweet	124	121	0			GM2 Power Kit	17	120	0		
	Laughing	127	121	1			GM2 Electronic Kit	25	120	0		
	Screaming	127	121	2			GM2 Analog Kit	26	120	0		
	Telephone	125	121	0			GM2 Jazz Kit	33	120	0		
	Helicopter	126	121	0			GM2 Brush Kit	41	120	0		
	Gunshot	128	121	0			GM2 Orchestra Kit	49	120	0		
	Explosion	128	121	3			GM2 SFX Kit	57	120	0		
	Machine Gun	128	121	1								
	Siren	126	121	5								
	Foot Step	127	121	5								
	Door Slam	125	121	3								
	Dog Barking	124	121	1								
	Telephone 2	125	121	1								
	Wind Chime	125	121	5								
	Car Passing	126	121	3								
	Car Stopping	126	121	2								
	Breath Noise	122	121	0								
	Cat	124	95	1								
	Horse Gallop	124	121	2								
	Crow	124	95	2								
	Plane	126	95	1								
	Door Creak	125	121	2								
	Car Engine	126	121	1								
	Car Crash	126	121	4								
	Train	126	121	6								
	Jet Plane	126	121	7								
	Crickets	124	95	5								
	Crickets 2	124	95	6								
	Cu-Coo	124	95	7								
	Starship	126	121	8								
	Punch	127	121	3								
	Heartbeat	127	121	4								
	Laser Gun	128	121	2								
	Kiss	127	95	3								
	Latin "Huh"	127	95	4								
	Scratch	125	121	4								
	Rooster	124	95	9								
	Trolley Bell	99	95	1								
	Typewriter	126	95	5								
	Whistle Down	126	95	6								
	Whistle Up	126	95	7								
	Organ Bell	99	95	2								
	Cow	124	95	10								
	Bubble	123	121	5								

Drum/SFX Kit Mapping

← : Same as Standard Kit

C1	C	24	Standard Kit	Standard Kit 2	Room Kit	Power Kit	Electric Kit	Analog Kit	Dance Kit	Jazz Kit	Brush Kit	Orchestra Kit
C#	25	Snare Roll	←	←	←	←	←	←	←	←	←	←
D	26	Finger Snap	←	←	←	←	←	←	←	←	←	←
D#	27	High Q	←	←	←	←	←	←	←	←	←	←
E	28	Slap	←	←	←	←	←	←	←	←	←	←
F	29	Scratch Push	←	←	←	←	←	←	←	←	←	←
F#	30	Scratch Pull	←	←	←	←	←	←	←	←	←	←
G	31	Sticks	←	←	←	←	←	←	←	←	←	←
G#	32	Square Click	←	←	←	←	←	←	←	←	←	←
A	33	Metronome Click	←	←	←	←	←	←	←	←	←	←
A#	34	Metronome Bell	←	←	←	←	←	←	←	←	←	←
B	35	Std BD2	Std BD2	←	Room BD2	Power BD2	Elect BD2	Analog BD2	Dance BD2	Jazz BD2	Jazz BD2	Jazz BD1
C	36	Std BD1	Std BD1	←	Room BD1	Power BD1	Elect BD1	Analog BD1	Dance BD1	Jazz BD1	Jazz BD1	Orch BD1
C#	37	Rim	←	←	Room SD1	Power SD1	Elect SD1	Analog SD1	Dance SD1	Jazz SD1	Brush Tap	Orch SD1
D	38	Std SD1	Std SD1	←	←	←	←	←	←	←	←	←
D#	39	Hand Clap	←	←	←	←	←	←	←	←	←	←
E	40	Std1 SD2	Std1 SD2	←	Room SD2	Power SD2	Elect SD2	Analog SD2	Dance SD2	Jazz SD2	Brush Swirl	Orch SD1
F	41	Std1 LowTom2	←	RoomLowTom2	PowerLowTom2	PowerLowTom2	Elect LowTom2	Analog LowTom2	DanceLowTom2	Jazz LowTom2	Brush LowTom2	Orch SD1
F#	42	Std1 HHC	Std1 HHC	←	RoomLowTom1	PowerLowTom1	Elect LowTom1	Analog LowTom1	DanceLowTom1	Jazz LowTom1	Brush LowTom1	Orch SD1
G	43	Std1 LowTom1	←	←	←	←	←	←	←	←	←	←
G#	44	Std1 HHP	←	←	RoomMidTom2	PowerMidTom2	Elect MidTom2	Analog MidTom2	DanceMidTom2	Jazz MidTom2	Brush MidTom2	Orch SD1
A	45	Std1 MidTom2	←	←	RoomMidTom1	PowerMidTom1	Elect MidTom1	Analog MidTom1	DanceMidTom1	Jazz MidTom1	Brush MidTom1	Orch SD1
A#	46	Std1 HHO	Std1 HHO	←	RoomMidTom2	PowerMidTom2	Elect MidTom2	Analog MidTom2	DanceMidTom2	Jazz MidTom2	Brush MidTom2	Orch SD1
B	47	Std1 MidTom1	←	←	RoomMidTom1	PowerMidTom1	Elect MidTom1	Analog MidTom1	DanceMidTom1	Jazz MidTom1	Brush MidTom1	Orch SD1
C	48	Std1 HiTom2	←	←	RoomHiTom2	PowerHiTom2	Elect HiTom2	Analog HiTom2	DanceHiTom2	Jazz HiTom2	Brush HiTom2	Orch SD1
C#	49	Std1 Crash1	←	←	←	←	←	←	←	←	←	←
D	50	Std1 HiTom1	←	←	RoomHiTom1	PowerHiTom1	Elect HiTom1	Analog HiTom1	DanceHiTom1	Jazz HiTom1	Brush HiTom1	Orch SD1
D#	51	Std1 Ride1	←	←	←	←	←	←	←	←	←	←
E	52	China	←	←	←	←	←	←	←	←	←	←
F	53	Cup	←	←	←	←	←	←	←	←	←	←
F#	54	Tam Bourne	←	←	←	←	←	←	←	←	←	←
G	55	Splash	←	←	←	←	←	←	←	←	←	←
G#	56	Cowbell	←	←	←	←	←	←	←	←	←	←
A	57	Crash2	←	←	←	←	←	←	←	←	←	←
A#	58	Vibra Slap	←	←	←	←	←	←	←	←	←	←
B	59	Ride2	←	←	←	←	←	←	←	←	←	←
C	60	Hi Bongo	←	←	←	←	←	←	←	←	←	←
C#	61	Low Bongo	←	←	←	←	←	←	←	←	←	←
D	62	Mute Hi Conga	←	←	←	←	←	←	←	←	←	←
D#	63	Hi Conga	←	←	←	←	←	←	←	←	←	←
E	64	Low Conga	←	←	←	←	←	←	←	←	←	←
F	65	Hi Timbale	←	←	←	←	←	←	←	←	←	←
F#	66	Low Timbale	←	←	←	←	←	←	←	←	←	←
G	67	Hi Agogo	←	←	←	←	←	←	←	←	←	←
G#	68	Low Agogo	←	←	←	←	←	←	←	←	←	←
A	69	Cabasa	←	←	←	←	←	←	←	←	←	←
A#	70	Maracas	←	←	←	←	←	←	←	←	←	←
B	71	Short Whistle	←	←	←	←	←	←	←	←	←	←
C	72	Long Whistle	←	←	←	←	←	←	←	←	←	←
C#	73	Short Guiro	←	←	←	←	←	←	←	←	←	←
D	74	Long Guiro	←	←	←	←	←	←	←	←	←	←
D#	75	Claves	←	←	←	←	←	←	←	←	←	←
E	76	Hi Wood Blk	←	←	←	←	←	←	←	←	←	←
F	77	Low Wood Blk	←	←	←	←	←	←	←	←	←	←
F#	78	Mute Cuica	←	←	←	←	←	←	←	←	←	←
G	79	Open Cuica	←	←	←	←	←	←	←	←	←	←
G#	80	Mute Triangle	←	←	←	←	←	←	←	←	←	←
A	81	Open Triangle	←	←	←	←	←	←	←	←	←	←
A#	82	Shaker	←	←	←	←	←	←	←	←	←	←
B	83	Jingle Bell	←	←	←	←	←	←	←	←	←	←
C	84	Bell Tree	←	←	←	←	←	←	←	←	←	←
C#	85	Castanets	←	←	←	←	←	←	←	←	←	←
D	86	Mute Surdo	←	←	←	←	←	←	←	←	←	←
D#	87	Open Surdo	←	←	←	←	←	←	←	←	←	←
E	88		←	←	←	←	←	←	←	←	←	←

SFX #1	SFX #1-2	Nature	Transportation	War Games	Animal Farm	Mystery Theatre	Game Show	Counting	Trip to Japan
A 21									Monster
A 22									
B 23									
C1 C 24					Horse Gallop	Rain			
D 25									Screaming
E 26									
F 27									Explosion
G 28					Horse Whinney	Thunder			
H 29									Plane
I 30									
J 31									
K 32									
L 33									Jet Plane
M 34					Pig	Wind			
N 35									Train
O 36									
P 37									Seashore
Q 38									
R 39					Cow	Applause	Applause	One	
S 40									Temple Block
T 41									
U 42									Shrine Talk
V 43									
W 44									
X 45									
Y 46									
Z 47									
AA 48									
AB 49									
AC 50									
AD 51									
AE 52									
AF 53									
AG 54									
AH 55									
AI 56									
AJ 57									
AK 58									
AL 59									
AM 60									
AN 61									
AO 62									
AP 63									
AQ 64									
AR 65									
AS 66									
AT 67									
AU 68									
AV 69									
AW 70									
AX 71									
AY 72									
AZ 73									
BA 74									
BB 75									
BC 76									
BD 77									
BE 78									
BF 79									
BG 80									
BH 81									
BI 82									
BJ 83									
BK 84									
BL 85									
BM 86									
BN 87									
BO 88									
BP 89									
BQ 90									
BR 91									
BS 92									
BT 93									
BU 94									
BV 95									
BW 96									
BX 97									
BY 98									
BZ 99									
CA 100									
CB 101									
CC 102									
CD 103									
CE 104									
CF 105									
CG 106									
CH 107									
CI 108									

MODEL: Kawai Digital Piano CP175/CP155

VERSION 1.0

[illegible]

Specifications

	CP175 / CP155
Keyboard	88 Wooden Keys, AWA PRO
Polyphony	Maximum 128
Preset Sounds	Over 900 including Drum kits, 20 User Sounds
Styles	220 Styles (4 Variations per Style) Maximum 20 User Styles
Style Controls	Start/Stop, Intro/Ending (2 per Style), Fill-in (4 per Style), Fade Out, Sync Start, Tap Tempo
Metronome	$\text{♩} = 10-300, 1/4, 2/4, 3/4, 4/4, 5/4, 6/8, 7/8, 9/8, 12/8$
Auto-Accompaniment	Fingered, One Finger, Full Keyboard, Bass Inversion, Harmony (10 types)
Song Stylist	700 Songs
Conductor	Easy Conductor, Advanced Conductor, 40 User Conductors
Effects	Chorus (5), Flanger, Ensemble, Celeste, Delay (3), Auto Pan, Tremolo, Tremulant, Phaser, Rotary Speaker (2), Auto Wah, Enhancer, Distortion, Reverb (Room1/2, Stage1/2, Hall1/2, Plate), 36 Mic Harmony and 5 Mic Effects
Temperaments	9 Types and one User Temperament
Other Features	One-Two Play, 160 Registrations, Concert Magic (176 Preset Songs), Style Convert, Help, 4 Parts (Right 1/2, Solo, Left), 3-Part Layer, Split (Selectable Split Point), Mixer, Master Volume, Accompaniment Volume, Transpose, Octave Shift, Tune, Sympathetic Resonance, Virtual Voicing, Portamento, Metronome Touch Curve Selection (Light1/2, Normal, Heavy1/2, Off, User 1/2), MIDI (16 Part Multi-Timbral Capability)
Recorder	16 Tracks and separate Style, Chord and Tempo tracks, Punch-In Recording, Step Recording, Editing capability, The total memory capacity of the recorder is approximately 50,000 notes. Disk Song Play (Reads/Writes Standard MIDI file format, Lyrics)
Pedals	Sustain (8-Step Sensitive), Sostenuto, Soft, (15 Functions can be assigned.)
Jacks	Headphones (2), LINE IN (L, R), LINE OUT (L/MONO, R), MIC IN MIDI (IN, OUT, THRU), USB for the Personal Computer, Video Out
Data Media	3.5" floppy Disk Drive (2HD/2DD, DOS format), CD-R Drive (CP175 only)
Output Power	100 W (CP175) / 80 W (CP155)
Speakers	12" x 2, <2" x 3 1/2" > x 2, 1" x 2 (CP175) / 6" x 2, 1" x 2 (CP155)
Power Consumption	145 W (CP175) / 90 W (CP155)
Finish	Real Cherry and Oak wood (CP175) / Rosewood and Mahogany (CP155)
Dimensions (W x D x H)	4' 8" x 2' 5" x 3' 2", 142 x 74 x 97 cm (CP175) / 4' 8" x 1' 11" x 3' 3", 142 x 58 x 100 cm (CP155)
Weight (without bench)	239 lbs, 108.5 kg (CP175) / 216 lbs, 98.2 kg (CP155)

KAWAI