

MOTOROLA MILESTONE™ X

LIFE.  POWERED.

Welcome

MOTOROLA MILESTONE™ X gives you a high quality imaging, video, and multimedia sharing experience. With its ultra-thin design and gorgeous 4.3 inch, high-resolution display, MOTOROLA MILESTONE X stands out from the crowd.


Capture life's moments in HD video. Stream and store multimedia on any DLNA™ certified device on your home network. No memory cards to swap, no cables to attach.



Your phone

Most of what you need is in the touchscreen and four simple keys on the front:

- **Menu:** Open menu options.
- **Home:** Go to the home screen and apps menu.
- **Back:** Go back one screen.
- **Search:** Press for text search, or hold for voice search.

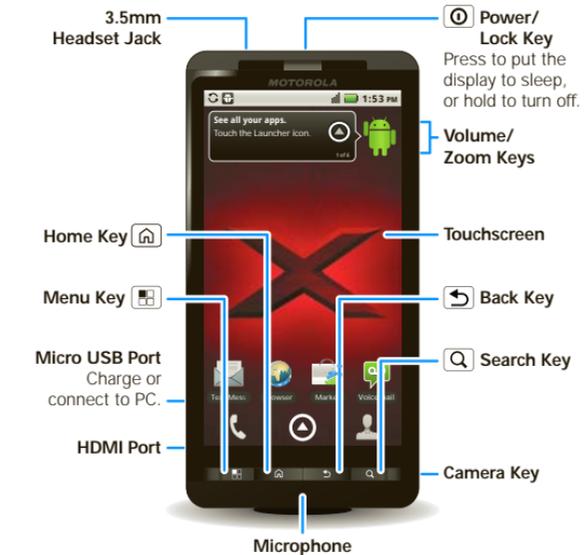

If you want a full keypad (good for texting, browsing, or searching in your **Contacts** list), just turn the phone—the screen spins to stay right-side up.

To open the touchscreen keypad, touch a text field, or press and hold Menu . To close the keypad, press Back .



Let's go

Tip: Your phone comes with a microSD memory card already installed. Make sure it's inserted.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

The first time you turn on your phone, a setup wizard guides you through signing in to your Gmail™ account. If



Touch

It's all in the touch:


- **Touch:** Choose an icon or option.
- **Touch & Hold:** Open options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Pinch-to-zoom:** Get a closer look at Google Maps™, web pages, or photos.



Home

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home  from a menu.

Use the widgets, shortcuts and panels to see what's important to you—whether it's home, work or play. To make the home screen yours, see "Personalize".

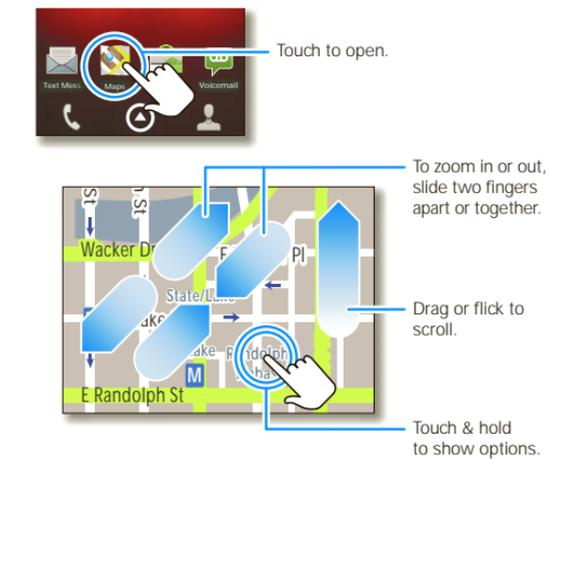

Personalize

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone, and more—make it yours.

- **Home screen:** To add something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.
- **Ringtones & sounds:** Press Menu  > **Settings** > **Sound & display** > **Phone ringtone** or **Notification ringtone**.



Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.
Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.
 Product ID: MILESTONE X (MB810)
 Manual Number: 68014666001-A



Apps

You can find all of your apps in one place. From the home screen, just touch  or press Home  to open and close the app menu.

Tip: To find an app in the menu, press Search  to open a keypad, then type the app name.

Want more? No problem: To download more apps, touch  > **Market**.

Note: You might not have some features. For details, ask your service provider.



Calls

Your dial pad and call lists are just a touch or two away—no menus needed. Just touch  **Phone** in the home screen.

Tip: During a call, press Home  or Back  to hide the active call display and use other apps. To reopen it, touch  **Phone**.



Recent Calls List
Touch to open, then touch an entry to call.

Backspace
Touch to delete digits you entered.

Call Voicemail
Touch to view voicemail.


Call
Enter a phone number & touch here to call it.

Voice Dial
Touch to activate voice dialing.

Contacts

Now you have contacts like you've never had before, downloaded from your accounts and backed up on the Google™ Server. View, search, and use them your way. Just touch  **Contacts** in the home screen.

Tip: When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster. To search the list, just press Search  and type a name.

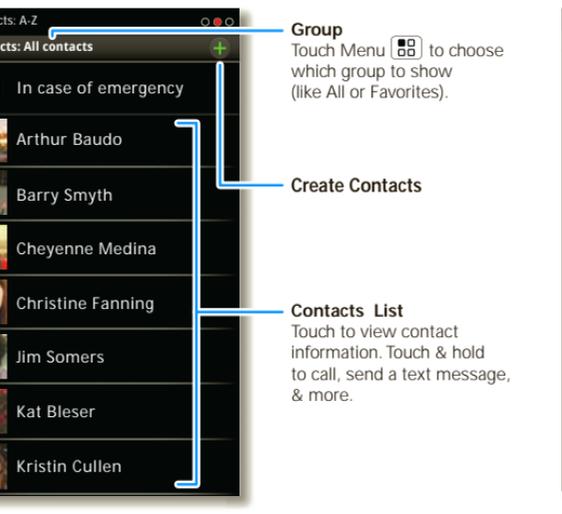

Group
Touch Menu  to choose which group to show (like All or Favorites).


Create Contacts
Touch to add a new contact.

Contacts List
Touch to view contact information. Touch & hold to call, send a text message, & more.

DLNA™ sharing

Share your media content—photos, videos, and tunes—with your friends and family over any DLNA™ certified device on your home network.

Just connect to your Wi-Fi® network (see "Wireless"), then touch  > **DLNA**. Select what you want to do, and follow the instructions you see on your phone.

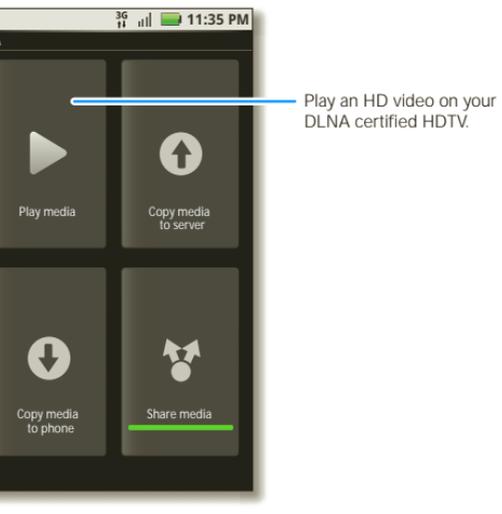


Play an HD video on your DLNA certified HDTV.

Messages

All of your messages stay in one place—text, email, Facebook, and more. Touch  > **Messaging** > **Universal Inbox**.

Tip: To type in a message, touch a text field to open the touchscreen keypad.

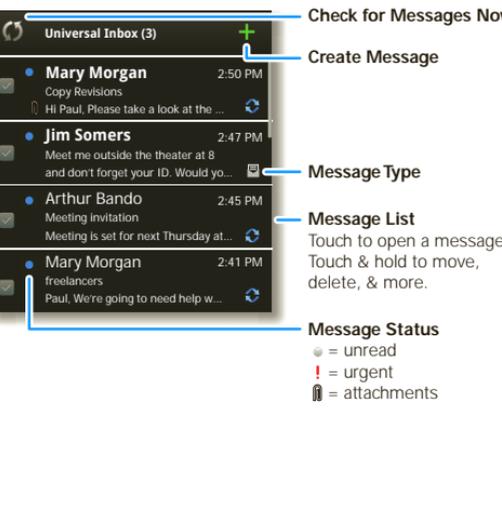

Check for Messages Now
Touch to refresh the message list.

Create Message
Touch to start a new message.

Message Type
Touch to view details of a message.

Message List
Touch to open a message. Touch & hold to move, delete, & more.

Message Status
• = unread
! = urgent
📎 = attachments

Media

See it, capture it, share it! Then, relax with some music.

- **Photos:** Touch  > **Camera**. To take the photo, press the Camera key (on the side of your phone).
- **Videos:** Touch  > **Camcorder**. To record the video, press the Camera key. To stop the video recording, press the Camera key again.
- To see the photos and videos you've taken, touch  > **Gallery**.
- **Music:** Touch  > **Music** to open your music library and select what you want to play.

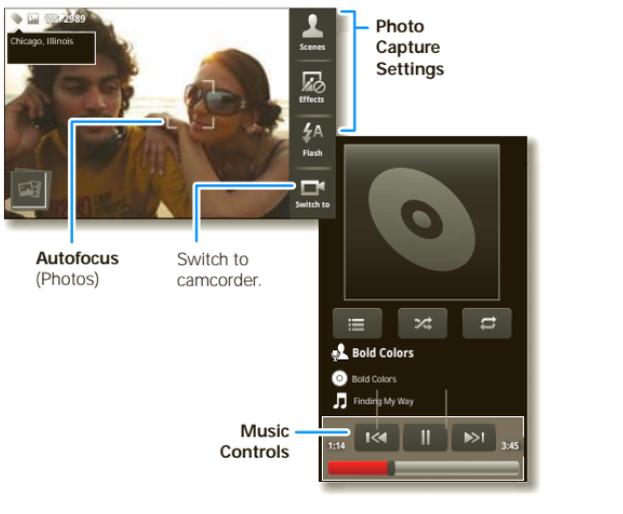


Photo Capture Settings
Touch to adjust camera settings.


Autofocus (Photos)
Touch to switch to camcorder.

Music Controls
Touch to play/pause, skip, and stop music.

Web & Google Maps™

Browse, download, and search (of course). Find out where you are or where you're going.

- **Browser:** Touch  > **Browser** and surf using the super fast 3G and Wi-Fi® connections.
 - **Google Maps:** Touch  > **Maps** to use the Google Maps you know and love.
- Note:** You might not have some features. For details, ask your service provider.

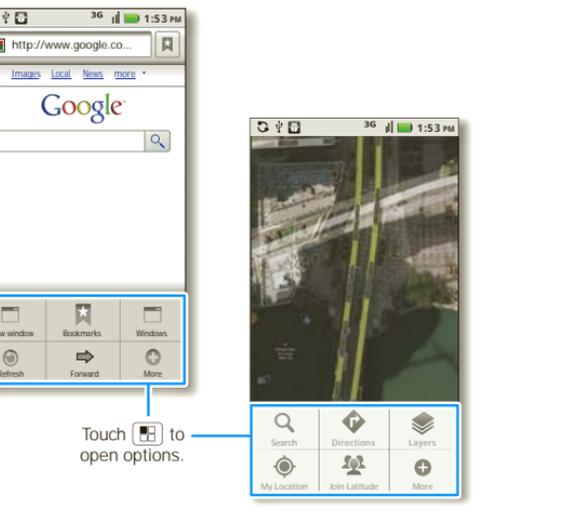


Touch  to open options.

Wireless

Lose the wires—press Menu  > **Settings** > **Wireless & networks**.

- **Bluetooth®:** For handsfree calls and wireless music, touch **Bluetooth settings** and connect to your accessory.
- **Wi-Fi®:** For fast internet access, touch Wi-Fi settings and connect to a home, office, or hotspot network. For connection details, press Menu  > **Advanced**.

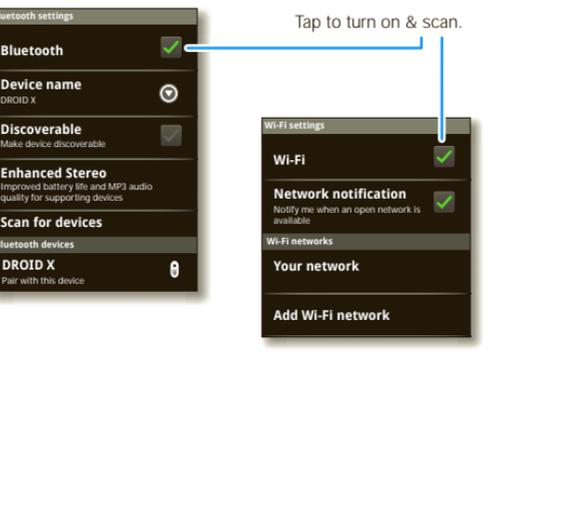


Tap to turn on & scan.

Tips

Here are some good things to know:

- **Sleep/wake phone:** Press Power/Lock .
- **Set screen timeout:** Press Menu  > **Settings** > **Sound & display** > **Screen timeout**.
- **See Recent Apps:** Press and hold Home .
- **Turn Sound On/Off:** Press and hold Power/Lock .
- **Silent mode:** Touch .
- **Search:** Touch Search .

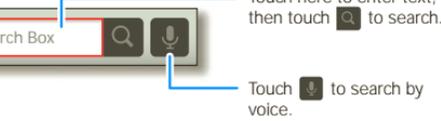

Touch here to enter text, then touch  to search.

Touch  to search by voice.

More

There's more help, more accessories, more free stuff. We're here to help.

- **Answers:** Check out the help center on your phone—touch  > **Help Center**.
- **More information:** Online help and more is available at www.motorola.com/mymilestonex.
- **Accessories:** Find more for your phone at www.motorola.com/products.

