

Div. of **Hornady**

# **Pacific** POWER 'C'™

## **METALLIC CARTRIDGE RELOADING TOOL**



Your Pacific POWER "C"™ reloading tool is an improved and strengthened design of Pacific's original patented basic "C" type tool. The heavy duty "C" type frame is of high density cast iron to assure perfect die/shell alignment and take the pressure needed for case forming and bullet swaging.

New convenient offset handle gives maximum leverage and locks out of the way in the up position when not in use.

The Power "C" uses Pacific hardened removable shell holder heads, and is designed to use the Pacific patented primer system and universal primer arm. Tool head accepts standard 7/8 x 14 dies, originally pioneered by Pacific.

To aid in your reloading operation, Pacific makes a full line of reloading accessories including scales, powder measures, and other related items.

With reasonable care, your new Pacific Power "C" will give you a lifetime of trouble-free operation.

### **LIMITED WARRANTY INFORMATION PACIFIC RELOADING TOOL AND ACCESSORIES**

#### **WARRANTY**

PACIFIC TOOL COMPANY'S PRODUCT warranty extends to the original purchaser of the reloading tool and/or accessory.

#### **WARRANTY DURATION**

Pacific reloading tools and accessories are warranted to the original purchaser for a period of one year from the original purchase date.

#### **WARRANTY COVERAGE**

Pacific reloading tools and accessories are warranted against defective materials and workmanship only. THIS WARRANTY IS VOID IF THE PRODUCT (1) has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in material or workmanship or, (2) has been altered or repairs have been made or attempted by other than authorized factory personnel (3) is used commercially or (4) has been altered or defaced in anyway.

#### **WARRANTY PERFORMANCE**

During the above one year warranty period, the reloading tool or accessory will be either repaired, reconditioned or replaced (at Pacific Tool Company's option) when the product is returned, with transportation prepaid, to Pacific Tool Company warranty repair service, P.O. Box 2048, Ordnance Plant Road, Grand Island, Nebraska 68801. The replacement will continue the warranty of the original product or 90 days, whichever is longer. Parts which by the nature of their function are subject to normal wear such as springs, pins, etc. are excluded. Parts which have been altered, abused or neglected are also excluded.

This warranty supersedes all other warranties for Pacific products whether written or oral. No other warranty is expressed or implied. If you have any questions or need assistance, write to Pacific Tool Company, P.O. Box 2048, Grand Island, Nebraska 68801. Collect telephone calls not accepted.


Manufactured in U.S.A. by

## **PACIFIC TOOL COMPANY**

BOX 2048, GRAND ISLAND, NEBR. 68801

# PACIFIC'S POWER<sup>®</sup>C<sup>™</sup>

## OPERATING INSTRUCTIONS

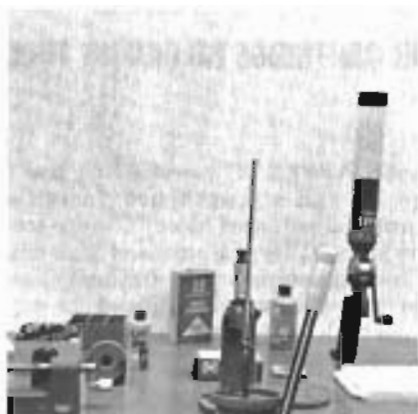

1. Mount your Power "C" Tool securely to a sturdy bench. Install shell holder in ram and fasten in place with shell holder clip. Turn holder so that opening is toward the side for ease of inserting the case.



2. If automatic priming is to be used, fill primer tube and place in automatic primer feed body. Make sure primers and primer post and cup are correct size for cartridge you are loading. Install size die and adjust according to directions supplied with die set.



3. Clean, inspect and lubricate cases with pad or rag containing Pacific Case Sizing Lubricant. Do not lubricate excessively or lubricate neck of case as it will tend to wrinkle or buckle case. Under lubrication can cause stuck case in size die.



4. Place lubricated case into shell holder and move operating lever down, forcing the ram upwards and the case into the die. This removes the old primer and resizes the case (2-die sets.) With 3-die sets, the resizing and depriming are done in separate operations.



5. With ram in full up position, push primer arm into slot of ram and lower ram so that primer seats in the cartridge case. Care should be taken so that primer is seated fully without applying excessive pressure to the primer. After cartridge is primed, raise ram slightly and return primer arm to original position. Exercise care when raising ram so that the deprime punch does not contact new primer and partially deprime case.



6. Check case length (for cases to be crimped) and trim with Pacific Case Trimmer or File Type Trimmer Die. Chamfer inside and debur outside of case mouth with Pacific Chamfering and Deburring tool, and wipe case free of all lubrication with a clean dry cloth.




7. Charge case with proper amount of powder using Pacific Deluxe powder Measure or Pacific Powder Scale. Refer to Hornady Reloading Manual or other reliable source to determine proper components and charge for your particular cartridge.



8. Replace size die with bullet seating die and adjust according to die instruction sheet. Insert charged case into shell holder and place bullet over mouth of case. Move operating lever down, raising ram upwards and forcing case into die. If die is properly adjusted, the bullet will be seated and case will be crimped. (Pacific bullet seating dies can be adjusted to crimp case or seat bullets without crimping during the seating operation.)

# PACIFIC'S POWER'C<sup>®</sup>™ PARTS & PRICE LIST

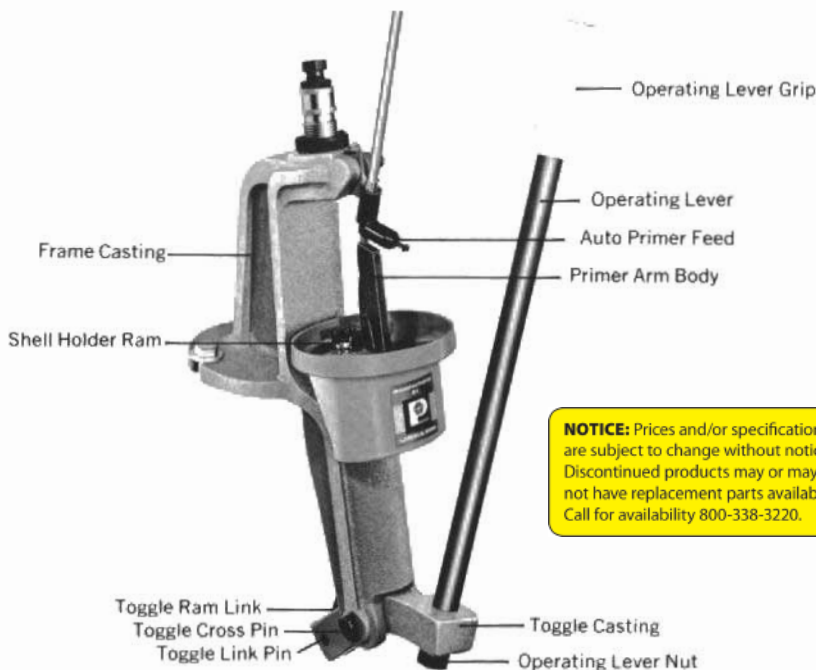

**NOTICE:** Prices and/or specifications are subject to change without notice. Discontinued products may or may not have replacement parts available. Call for availability 800-338-3220.

PART #	DESCRIPTION	PRICE
390901	Frame Casting .....	\$13.50
390902	Toggle Casting .....	4.50
390723	Primer Arm Set Screw .....	.30
390698	Shell Holder Ram .....	4.20
380045	Primer Arm Allen Wrench .....	.30
380053	Shell Holder Ram Spring .....	.30
380054	Toggle Ball Detent Screw .....	3.00
390001	Primer Arm Body .....	3.50
380038	Primer Arm Body Spring .....	.30
390003	Primer Arm Seating Punch, Small .....	.30
390004	Primer Arm Seating Punch, Large .....	.30
390005	Primer Arm Cup, Small .....	.30
390006	Primer Arm Cup, Large .....	.30

PART #	DESCRIPTION	PRICE
390007	Primer Arm Cup Spring .....	\$ .30
390081	Toggle "E" Clips (2) each .....	.20
390096	Operating Lever Nut .....	.40
390120	Primer Arm Cross Pin Clip .....	.20
390171	Shell Holder Ram Link Pin .....	.40
390172	Toggle Link Pin .....	.40
390173	Toggle Cross Pin .....	.50
390174	Operating Lever .....	2.10
390175	Auto Primer Feed Set Screw .....	.20
390176	Toggle Ram Link .....	1.20
390177	Primer Arm Cross Pin .....	.30
390179	Toggle Spacer Washer .....	.20
480004	Operating Lever Grip .....	.35

Manufactured in U.S.A. by

**PACIFIC TOOL COMPANY**

BOX 2048, GRAND ISLAND, NEBR. 68801

Form No. 680005



# **POWER 'C' RELOADING PRESS**

## **PARTS LIST**

A	.....Shell Holder .....	\$ 4.00
390908	...Primer Arm Return Spring ...	\$ 1.00
380045	...Primer Arm Allen Wrench.....	\$ .30
380053	...Shell Holder Spring.....	\$ 1.00
380054	...Toggle Ball Detent Screw.....	\$ 4.00
390001	...Primer Arm Body .....	\$ 6.00
390003	...Primer Seating Punch, Small	\$ .40
390004	...Primer Seating Punch, Large	\$ .40
390005	...Primer Cup, Small .....	\$ .40
390006	...Primer Cup, Large .....	\$ .40
390007	...Primer Cup Spring.....	\$ .50
390081	...Toggle 'E' Clip.....	\$ .20
390096	...Operating Lever Nut.....	\$ .40
390120	...Primer Arm Cross Pin Clip .....	\$ .20
390171	...Ram Link Pin .....	\$ .50
390172	...Toggle Link Pin .....	\$ .50
390173	...Toggle Cross Pin .....	\$ .80
390174	...Operating Lever .....	\$ 4.00
390175	...Auto Primer Feed Set Screw	\$ .20
390176	...Toggle-Ram Link.....	\$ 3.00
390177	...Primer Arm Cross Pin.....	\$ .50
390179	...Toggle Spacer.....	\$ .20
390698	...Ram .....	\$ 8.00
390723	...Primer Arm Set Screw .....	\$ .30
390901	...Frame Casting .....	\$21.00
390902	...Toggle Casting .....	\$10.00
480004	...Operating Lever Grip.....	\$ .50

