## **Instruction Manual**

# HI 9060

## **Portable Waterproof**

## **Microprocessor-based**

**Thermistor** 

## Thermometer



## WARRANTY

All Hanna Instruments **meters are warranted for two years** against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. **Sensors and probes are warranted for a period of six months**.

This warranty is limited to repair or replacement free of charge. Damages due to accidents, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure.

First obtain a Returned Goods Authorization number from the Customer Service department, then return the instrument with the Authorization # included along with shipment costs prepaid. If the repair is not covered by the warranty, you will be notified of the charges.

When shipping any instrument, make sure it is properly packaged for complete protection.

#### Dear Customer,

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for correct operation. Please read it carefully before using the meter.

If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com. This instrument is in compliance with the ⊂€ directives.

## PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully to make sure that no damage has occurred during shipping. If there is any noticeable damage, notify your Dealer or the nearest Hanna Office.

**Note:** Save all packing materials until you are sure that the instrument functions correctly. Any defective item must be returned in the original packaging together with the supplied accessories.


## **GENERAL DESCRIPTION**


**HI 9060** is a waterproof, microprocessor-based, thermistor thermometer, ideal for use in wet and humid environments. The meter is also provided with low battery detection and BEPS (Battery Error Preventing System), which turns the unit off when the batteries are discharged avoiding erroneous readings caused by low battery level.

**HI 9060** features include a dual-level LCD for simultaneously displaying of maximum and minimum measured temperatures,  $^{\circ}C/^{\circ}F$  selection button and hold function.

The meter is supplied complete with HI 765BL temperature probe, 4 x 1.5V AA batteries and instruction manual.

## FUNCTIONAL DESCRIPTION

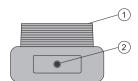

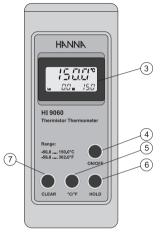

- 1. Battery cover
- 2. Temperature probe connector
- 3. Liquid Crystal Display
- 4. ON/OFF Key
- 5. Measuring unit selection key
- 6. HOLD measurement key
- 7. HI/LO values reset key



- Current temperature value
  HOLD indicator
- 3. Low Battery indicator
- 4. Minimum temperature value
- 5. Maximum temperature value
- 6. Measuring scale, °C or °F

## SPECIFICATIONS

Range	-50.0 to 150.0°C / -58.0 to 302.0°F
Resolution	0.1°C / 0.1°F
Accuracy	$\pm$ 0.4°C/ $\pm$ 0.8°F
	for 1 year, excluding probe error
Typical EMC	$\pm 1^{\circ}C/\pm 2^{\circ}F$
Deviation	with HI 765BL probe
Battery Type	4 x 1.5V AA (IEC LR6)
Life	approx. 3000 hours of continuous use
Probe (included)	HI 765BL with 1 m (3.3') cable
Environment	-10 to 50°C (14 to 122°F); RH 100%
Dimensions	196 x 80 x 60 mm (7.7x3.1x2.4")
Weight	500 g (1.1 lb.)

## **CE DECLARATION OF CONFORMITY**

<b>CE</b> <i>Declaration of conformity</i>		
DECLARATION OF CONFORMITY		
We		
Hanna Instruments Italia Srl via E.Fermi, 10 35030 Sarmeola di Rubano - PD ITALY		
herewith certify that the thermometer:		
HI 9060		
has been tested and found to be in compliance with EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC according to the following applicable normatives:		
EN 50082-1: Electromagnetic Compatibility - Generic Immunity Standard IEC 61000-+2 Electrostatic Discharge IEC 61000-+3 RF Radiated		
EN 50081-1: Electromagnetic Compatibility - Generic Emission Standard EN 55022 Radiated, Class B		
EN61010-1: Safety requirements for electrical equipment for measurement, control and laboratory use		
Date of Issue: <u>24/10/2002</u> A.Marsilio - Technical Director On behalf of Hanna Instruments S.t.I.		

#### **OPERATIONAL GUIDE**

33

#### INITIAL PREPARATION

Each meter is supplied complete with hatteries

Remove the back cover, unwrap the batteries and install them while paving attention to their polarity.

Connect the temperature probe to the connector on the top of the meter. To switch on, press the ON/OFF key on the front of the meter

If the meter does not come on, make sure that the batteries are correctly installed

The thermometer will carry out a self diagnostic test routine. the LCD will show all seaments for a few seconds (or as long as

ON/OFF is held), followed by the percentage indication of the remaining batterv life.

The thermometer then enters normal measurement mode

If a temperature probe is plugged in, the meter displays the measured temperature.

If no probe is plugged in, or if reading is over-range, the display shows flashina dashes.

If a measurement is slightly over the range of the meter specifications, the display flashes the closest full-scale value. To switch the thermometer OFF, press the ON/OFF key.

## MEASURING SCALE (°C/°F)

The instrument is factory set to the °C scale, but measurements can be performed in either the Celsius or Fahrenheit scale. Press the °C/°F button to select the desired

scale.

#### HOLD MODE

The HOLD function is activated by pressina the HOLD key. The measured temperature is held on the

display until HOLD is pressed again. The "H" tag blinks on the display to indicate the HOLD mode



Note: Although the display is frozen, internally the meter continues measuring and updating Hi and Lo values.

## **HIGH/LOW TEMPERATURES**

The maximum and minimum temperatures are continuously monitored and displayed in the lower portion of the



Note: When reading ages over-range, the Hi and Lo values display dashes until cleared.

**BATTERY REPLACEMENT** 

The instrument is powered by four 1.5 V alkaline batteries

and is provided with the Battery Error Prevention System

(BEPS), which turns the unit off when a low battery signal is

It is recommended to replace the batteries as soon as the low

Battery replacement must only take place in a nonhazardous

In order to replace rundown batteries, simply remove the two

screws on the rear cover of the instrument and replace the

four batteries with new ones paying attention to the correct

Reattach the cover and tighten the two screws.

When the remaining battery level is

less than 10%, a warning symbol

blinks on the display to indicate a low

area using four 1.5V alkaline batteries.

## **CLEAR FUNCTION**

LCD.

detected.

polarity.

battery condition.

battery condition is detected.

Upon pressing the CLEAR key, the current reading is assigned to the highest and lowest temperature values. The High/Low values may be cleared at any time during measurement.

ייר זר גר זי

250m 250

-1 - 1-1°C

100 955

#### FACTORY RECALIBRATION

All Hanna thermometers have been accurately pre-calibrated at the factory.

It is recommended to have all thermometers recalibrated at least once a year. For an accurate annual recalibration. contact your nearest Hanna Service Center.

Hanna Accuracy Test Pluas provide a auick and easy way to test the meter's accuracy by simply connecting these Test Plugs to the probe connector of the meter. If the reading differs by more than  $\pm 0.4^{\circ}$ C ( $\pm 0.8^{\circ}$ F) from the Test Plug value, the meter is due for recalibration. Choose the Test Plug closest to your measurement range to best suit your needs:

HI 765-18C Calibration test key, -18.0°C HI 765000C Calibration test key. 0.0°C HI 765070C Calibration test key, 70.0°C HI 765-004F Calibration test key, -0.4°F HI 765032F Calibration test key, 32.0°F HI 765158F Calibration test key, 158.0°F



#### Recommendations for Users

Before using these products, make sure that they are entirely suitable for the environment in which they are used.

Operation of these instruments in residential areas could cause unacceptable interference to radio and TV equipment, requiring the operator to take all necessary steps to correct interference. Any variation introduced by the user to the supplied equipment may degrade the instruments' EMC

performance To avoid electrical shock, do not use these instruments when voltage at the measurement surface

exceeds 24 Vac or 60 Vdc

To avoid damage or burns, do not perform any measurement in microwave ovens.

## **TEMPERATURE PROBES & ACCESSORIES**

Hanna offers a wide ranae of probes to meet your needs with air. liquid. penetration and surface measurements.

All Hanna temperature probes are pre-calibrated at the factory and ready-to-use. These interchangeable probes make it possible to switch from one probe to another without requiring recalibration.

Hanna probes are also available in different handle colors to avoid cross contamination during testing.

## PROBES WITH 1 m (3.3') CABLE

HI 765A	Air probe, white handle
HI 765BL	Liquid probe, black handle
HI 765L	Liquid probe, white handle
HI 765PBL	Penetration probe, blue handle
HI 765PG	Penetration probe, green handle
HI 765PR	Penetration probe, red handle
HI 765PW	Penetration probe, white handle
HI 765PWL	Long penetration probe, white handle
HI 765W	Wire probe without handle for hard-to- reach places

## PROBES WITH 10 m (33') CABLE

HI 765A/10 HI 765L/10	Air probe, white handle Liquid probe, white handle
HI 765PBL/10	Penetration probe, blue handle
HI 765PG/10	Penetration probe, green handle
HI 765PR/10	Penetration probe, red handle
HI 765PW/10	Penetration probe, white handle
HI 765W/10	Wire probe without handle for hard-to- reach places

## OTHER ACCESSORIES

HI 710021 Spare protective case HI 721317 Rugged carrying case