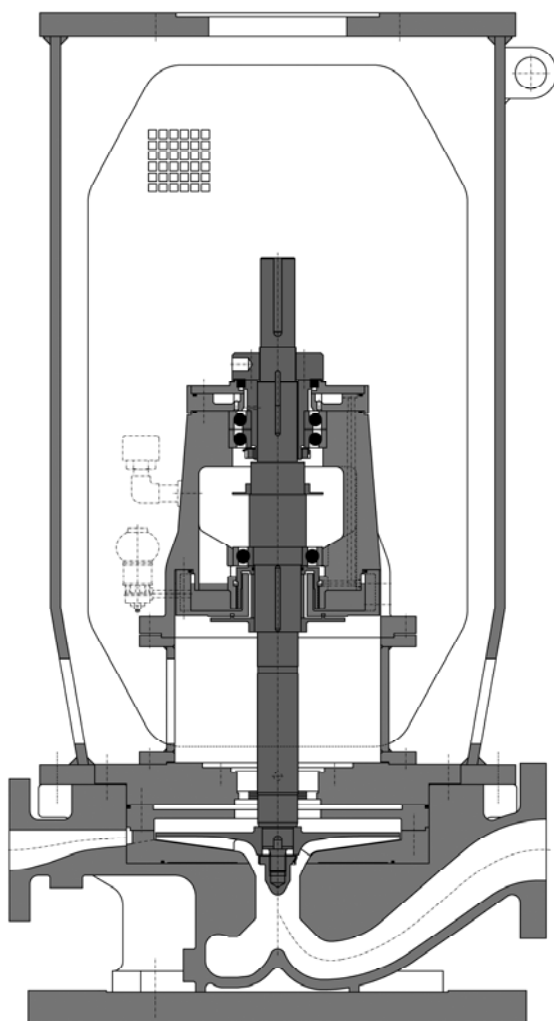


HWMA centrifugal pumps

ONE STAGE, VERTICAL-INLINE

Original Instructions

PCN= 26999922 11-10 (E)

**Installation
Operation
Maintenance**

These instructions should be read prior to installing, operating, using and maintaining this equipment.

Type:	HWMA
Size:	2x3x12 HWMA
Serial No:	
Customer:	
Customer Order No.:	
Equipment / Item No.:	
Pumped Liquid:	
Capacity:	m ³ /h
Minimum Capacity:	m ³ /h
Head:	m
Speed:	U/min ⁻¹

CONTENTS

	PAGE		
1.0 INTRODUCTION AND SAFETY	4	6.9 ASSEMBLY	27
1.1 GENERAL	4	7.0 AUXILIARIES	27
1.2 CE MARKING AND APPROVALS	4	7.1 SEAL AND SEAL SYSTEMS	27
1.3 DISCLAIMER	4	7.2 CHANGING OF MECHANICAL SEAL	29
1.4 COPYRIGHT	4	8.0 FAULTS; CAUSES AND REMEDIES	29
1.5 DUTY CONDITIONS	4	9.0 CERTIFICATION	31
1.6 SAFETY	5	10.0 OTHER RELEVANT DOCUMENTATION AND	
1.7 WARNING LABEL	9	MANUALS	31
1.8 SPECIFIC MACHINE PERFORMANCE	10	10.1 SUPPLEMENTARY USER INSTRUCTIONS	31
1.9 NOISE LEVEL	10	10.2 CHANGE NOTES	31
1.10 CE DECLARATION	12	10.3 ADDITIONAL SOURCES OF INFORMATION	31
2.0 TRANSPORT AND STORAGE	13	10.4 ABBREVIATIONS	32
2.1 CONSIGNMENT RECEIPT AND UNPACKING	13		
2.2 HANDLING	13		
2.3 LIFTING	13		
2.4 STORAGE	13		
2.5 RECYCLING AND END OF PRODUCT LIFE	13		
3.0 DESCRIPTION	14		
3.1 CONFIGURATION	14		
3.2 NOMENCLATURE	14		
3.3 DESIGN OF MAJOR PARTS	14		
3.4 PERFORMANCE AND OPERATING LIMITS	14		
4.0 INSTALLATION	14		
4.1 LOCATION	14		
4.2 PART ASSEMBLIES	14		
4.3 FOUNDATION	14		
4.4 INITIAL ALIGNMENT	15		
4.5 PIPING	16		
4.6 ELECTRICAL CONNECTIONS	16		
4.7 FINAL SHAFT ALIGNMENT CHECK	17		
5.0 COMMISSIONING START-UP, OPERATION			
AND SHUTDOWN	17		
5.1 PRECOMMISSIONING PROCEDURE	17		
5.2 PUMP LUBRICANTS	17		
5.3 IMPELLER CLEARANCE	21		
5.4 DIRECTION OF ROTATION	21		
5.5 GUARDING	21		
5.6 PRIMING AND AUXILIARY SUPPLIES	21		
5.7 STARTING THE PUMP	21		
5.8 OPERATION	22		
5.9 STOPPING AND SHUTDOWN	22		
5.10 HYDRAULIC, MECHANICAL AND ELECTRICAL DUTY			
.....	22		
6.0 MAINTENANCE	23		
6.1 GENERAL	23		
6.2 MAINTENANCE SCHEDULE	23		
6.3 SPARE PARTS	24		
6.4 RECOMMENDED SPARES	25		
6.5 FASTENER TORQUES	25		
6.6 SETTING IMPELLER CLEARANCE	26		
6.7 DISASSEMBLY	26		
6.8 EXAMINATION OF PARTS	26		

1.0 INTRODUCTION AND SAFETY

1.1 General



These Instructions must always be kept close to product's operating location or directly with the product.

Flowserve's products are designed, developed and manufactured with state-of-the-art technologies in modern facilities. The unit is produced with great care and commitment to continuous quality control, utilising sophisticated quality techniques, and safety requirements.

Flowserve is committed to continuous quality improvement and being at service for any further information about the product in its installation and operation or about its support products, repair and diagnostic services.

These instructions are intended to facilitate familiarization with the product and its permitted use. Operating the product in compliance with these instructions is important to help ensure reliability in service and avoid risks. The instructions may not take into account local regulations; ensure such regulations are observed by all, including those installing the product. Always coordinate repair activity with operations personnel, and follow all plant safety requirements and applicable safety and health laws/regulations.



These instructions should be read prior to installing, operating, using and maintaining the equipment in any region worldwide. The equipment must not be put into service until all the conditions relating to safety noted in the instructions have been met.

1.2 CE marking and approvals

It is a legal requirement that machinery and equipment put into service within certain regions of the world shall conform with the applicable CE Marking Directives covering Machinery and, where applicable, Low Voltage Equipment, Electromagnetic Compatibility (EMC), Pressure Equipment Directive (PED) and Equipment for Potentially Explosive Atmospheres (ATEX).

Where applicable the Directives, and any additional Approvals, cover important safety aspects relating to machinery and equipment and the satisfactory provision of technical documents and safety instructions. Where applicable this document incorporates information relevant to these Directives. To establish Approvals and if the product itself is CE Marked check the serial number plate and the Certification.

1.3 Disclaimer

Information in these User Instructions is believed to be reliable. In spite of all the efforts of Flowserve Corporation to provide sound and all necessary information the content of this manual may appear insufficient and is not guaranteed by Flowserve as to its completeness or accuracy.

Flowserve manufactures products to exacting International Quality Management System Standards as certified and audited by external Quality Assurance organisations. Genuine parts and accessories have been designed, tested and incorporated into the products to help ensure their continued product quality and performance in use. As Flowserve cannot test parts and accessories sourced from other vendors the incorrect incorporation of such parts and accessories may adversely affect the performance and safety features of the products. The failure to properly select, install or use authorised Flowserve parts and accessories is considered to be misuse. Damage or failure caused by misuse is not covered by Flowserve's warranty. In addition, any modification of Flowserve products or removal of original components may impair the safety of these products in their use.

1.4 Copyright

All rights reserved. No part of these instructions may be reproduced, stored in a retrieval system or transmitted in any form or by any means without prior permission of Flowserve.

1.5 Duty conditions

This product has been selected to meet the specifications of your purchaser order. The acknowledgement of these conditions has been sent separately to the Purchaser. A copy should be kept with these instructions.



The product must not be operated beyond the parameters specified for the application. If there is any doubt as to the suitability of the product for the application intended, contact Flowserve for advice, quoting the serial number.

If the conditions of service on your purchase order are going to be changed (for example liquid pumped, temperature or duty) it is requested that the user seeks Flowserve's written agreement before start up.

1.6 Safety

1.6.1 Summary of safety markings

These user instructions contain specific safety markings where non-observance of an instruction would cause hazards. The specific safety markings are:



DANGER


This symbol indicates electrical safety instructions where non-compliance will involve a high risk to personal safety or the loss of life.



This symbol indicates safety instructions where non-compliance would affect personal safety and could result in loss of life.



This symbol indicates "hazardous and toxic fluid" safety instructions where non-compliance would affect personal safety and could result in loss of life.



CAUTION

This symbol indicates safety instructions where non-compliance will involve some risk to safe operation and personal safety and would damage the equipment or property.



This symbol indicates "strong magnetic field" safety instructions where non-compliance would affect personal safety, pacemakers, instruments or stored data sensitive to magnetic fields.



This symbol indicates explosive atmosphere marking according to ATEX. It is used in safety instructions where non-compliance in the hazardous area would cause the risk of an explosion.



This symbol is used in safety instructions to remind not to rub non-metallic surfaces with a dry cloth; ensure the cloth is damp. It is used in safety instructions where non-compliance in the hazardous area would cause the risk of an explosion.



The sign is not a safety symbol but indicates an important instruction in the assembly process.



This symbol indicates potential risks connected with extremely high temperatures.



This symbol indicates potential risks connected with extremely low temperatures.

1.6.2 Personnel qualification and training

All personnel involved in the operation, installation, inspection and maintenance of the unit must be qualified to carry out the work involved. If the personnel in question do not already possess the necessary knowledge and skill, appropriate training and instruction must be provided. If required the operator may commission the manufacturer / supplier to provide applicable training.

Always co-ordinate repair activity with operations and health and safety personnel, and follow all plant safety requirements and applicable safety and health laws/regulations.

1.6.3 Safety action


This is a summary of conditions and actions to help prevent injury to personnel and damage to the environment and to equipment. For products used in potentially explosive atmospheres section 1.6.4 also applies.



CAUTION

PREVENT EXCESSIVE EXTERNAL PIPE LOAD

Do not use pump as a support for piping. Do not mount expansion joints so that their force, due to internal pressure, acts on the pump flange.



CAUTION

ONLY CHECK DIRECTION OF MOTOR ROTATION WITH COUPLING ELEMENT/ PINS REMOVED


Starting in reverse direction of rotation will damage the pump.



CAUTION

ENSURE CORRECT LUBRICATION

(See section 5 *Commissioning, startup, operation and shutdown*.)




CAUTION

START THE PUMP WITH OUTLET VALVE PART OPENED

(Unless otherwise instructed at a specific point in the user instructions.)

This is recommended to avoid the risk of overloading and damaging the pump motor at full or zero flow. Pumps may be started with the valve further open only on installations where this situation cannot occur. Pump outlet valve shall be adjusted to comply with the duty following the run-up process (See section 5 *Commissioning, startup, operation and shutdown*).




CAUTION

START THE PUMP WITH OUTLET VALVE FULLY OPEN

This is recommended to avoid the risk of overloading and damaging the pump motor where greater power is taken at low or shut off flow. Pump outlet valve shall be adjusted to comply with the duty following the

run-up process (See section 5 *Commissioning, startup, operation and shutdown*).




NEVER RUN THE PUMP DRY




INLET VALVES TO BE FULLY OPEN WHEN PUMP IS RUNNING

Running the pump at zero flow or below the recommended minimum flow continuously will cause damage to the seal.



DO NOT RUN THE PUMP AT ABNORMALLY HIGH OR LOW FLOW RATES
Operating at a flow rate higher than normal or at a flow rate with no back pressure on the pump may overload the motor and cause cavitation. Low flow rates may cause a reduction in pump/bearing life, overheating of the pump, instability and cavitation/vibration.



When ambient temperatures are likely to drop below freezing point, the pump and any cooling and flushing arrangements must be drained or otherwise protected.



HANDLING COMPONENTS

Many precision parts have sharp corners and the wearing of appropriate safety gloves and equipment is required when handling these components. To lift heavy pieces above 25 kg (55 lbs) use a crane corresponding to the mass and in accordance with current local regulations.



DANGER

NEVER DO MAINTENANCE WORK WHILST THE UNIT IS CONNECTED TO POWER



HAZARDOUS LIQUIDS

When the pump is handling hazardous liquids care must be taken to avoid exposure to the liquid by appropriate siting of the pump, limiting personnel access and by operator training. If the liquid is flammable and/or explosive strict safety procedures must be applied.

Gland Packing must not be used when pumping hazardous liquids.



DRAIN PUMP AND ISOLATE PIPEWORK BEFORE DISMANTLING THE PUMP

The appropriate safety precautions should be taken where the pumped liquids are hazardous.



FLUORO-ELASTOMERS (When fitted)

When a pump has experienced temperatures over 250 °C (482 °F), partial decomposition of fluoro-elastomers (example: Viton) will occur. In this

condition these are extremely dangerous and skin contact must be avoided.



GUARDS MUST NOT BE REMOVED WHILE PUMP IS OPERATIONAL



THERMAL SHOCK

Rapid changes in the temperature of the liquid within the pump can cause thermal shock, which can result in damage or breakage of components and should be avoided.



NEVER APPLY HEAT TO REMOVE IMPELLER

Trapped lubricant or vapour could cause an explosion.



HOT AND COLD PARTS

If hot or freezing components or auxiliary heating supplies can present a danger to operators, they must be shielded to avoid accidental contact. If complete protection is not possible, the machine access must be limited to maintenance staff only. Note: bearing housings must not be insulated and drive motors and bearings may be hot.

If the temperature is greater than 68 °C (155 °F) or below 5 °C (41 °F) in a restricted zone, or exceeds local regulations, action as above shall be taken.

1.6.4 Products used in potentially explosive atmospheres



Measures are required to:

- Avoid excess temperature
- Prevent build up of explosive mixtures
- Prevent the generation of sparks
- Prevent leakages
- Maintain the pump to avoid hazard

The following instructions for pumps and pump units when installed in potentially explosive atmospheres must be followed to help ensure explosion protection. Both electrical and non-electrical equipment must meet the requirements of European Directive 94/9/EC.

1.6.4.1 Scope of compliance



Use equipment only in the zone for which it is appropriate. Always check that the driver, drive coupling assembly, seal and pump equipment are suitably rated and/or certified for the classification of the specific atmosphere in which they are to be installed.


Where Flowserve has supplied only the bare shaft pump, the Ex rating applies only to the pump. The

party responsible for assembling the pump set shall select the coupling, driver and any additional equipment, with the necessary CE Certificate/Declaration of Conformity establishing it is suitable for the area in which it is to be installed.

The output from a variable frequency drive (VFD) can cause additional heating affects in the motor and so, for pump sets with a VFD, the ATEX Certification for the motor must state that it covers the situation where electrical supply is from the VFD. This is particular requirement still applies even if the VFD is in a safe area.

1.6.4.2 Marking

An example of ATEX equipment marking is shown below. The actual classification of the pump will be engraved on the nameplate.

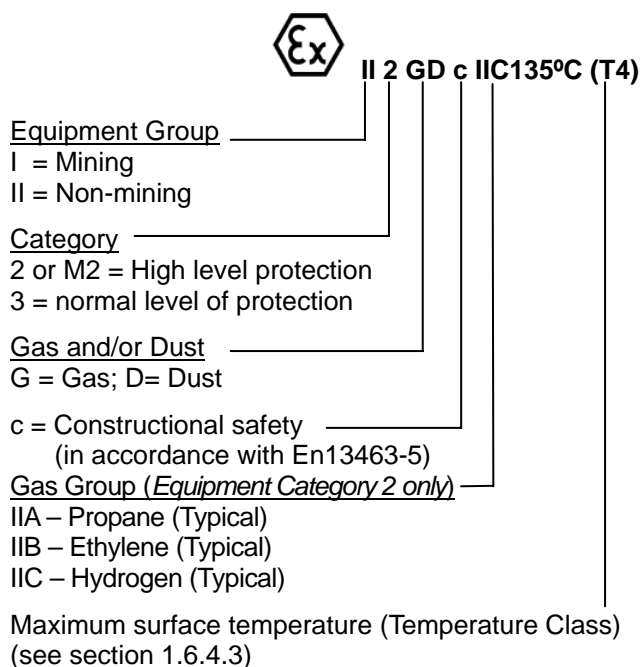

1.6.4.3 Avoiding excessive surface temperatures

 ENSURE THE EQUIPMENT TEMPERATURE CLASS IS SUITABLE FOR THE HAZARD ZONE

Pumps have a temperature class as stated in the ATEX Ex rating on the nameplate. These are based on a maximum ambient of 40 °C (104 °F); refer to Flowserve for higher ambient temperatures.

The surface temperature on the pump is influenced by the temperature of the liquid handled. The maximum permissible liquid temperature depends on the temperature class and must not exceed the values in the table that follows. The temperature rise at the seals and bearings and due to the minimum permitted flow rate is taken into account in the temperatures stated.

Temperature class to EN 13463-1	Maximum surface temperature permitted	Temperature limit of liquid handled (* depending on material and construction variant - check which is lower)
T6	85 °C (185 °F)	Consult Flowserve
T5	100 °C (212 °F)	Consult Flowserve
T4	135 °C (275 °F)	110 °C (230 °F) *
T3	200 °C (392 °F)	175 °C (347 °F) *
T2	300 °C (572 °F)	270 °C (518 °F) *
T1	450 °C (842 °F)	350 °C (662 °F) *

The responsibility for compliance with the specified maximum liquid temperature is with the plant operator.


Temperature classification “Tx” is used when the liquid temperature varies and when the pump is required to be used in differently classified potentially explosive atmospheres. In this case the user is responsible for ensuring that the pump surface temperature does not exceed that permitted in its actual installed location.

Do not attempt to check the direction of rotation with the coupling element/pins fitted due to the risk of severe contact between rotating and stationary components.

Where there is any risk of the pump being run against a closed valve generating high liquid and casing external surface temperatures it is recommended that users fit an external surface temperature protection device.

Avoid mechanical, hydraulic or electrical overload by using motor overload trips or a Power Monitor and make routine vibration monitoring. In dirty or dusty environments, regular checks must be made and dirt removed from areas around close clearances, bearing housings and motors.

1.6.4.4 Preventing the build up of explosive mixtures

 ENSURE THE PUMP IS PROPERLY FILLED AND VENTED AND DOES NOT RUN DRY

Ensure the pump and relevant suction and discharge pipeline system is totally filled with liquid at all times during the pump operation, so that an explosive atmosphere is prevented. In addition it is essential to make sure that seal chambers, auxiliary shaft seal systems and any heating and cooling systems are properly filled.

If the operation of the system cannot avoid this condition the fitting of an appropriate Dry Run protection device is recommended (eg liquid detection or a Power Monitor).

To avoid potential hazards from fugitive emissions of vapour or gas to atmosphere the surrounding area must be well ventilated.

1.6.4.5 Preventing sparks



To prevent a potential hazard from mechanical contact the coupling guard must be non-sparking and anti-static.

To avoid the potential hazard from random induced current generating a spark the earth contact on the baseplate must be used.



Avoid electrostatic charge: do not rub non-metallic surfaces with a dry cloth; ensure cloth is damp.

The coupling must be selected to comply with 94/9/EC and correct alignment must be maintained.

1.6.4.5 Preventing leakage



The pump must only be used to handle liquids for which it has been approved to have the correct corrosion resistance.

Avoid entrapment of liquid in the pump and associated piping due to closing of suction and discharge valves, which could cause dangerous excessive pressures to occur if there is heat input to the liquid. This can occur if the pump is stationary or running.

Bursting of liquid containing parts due to freezing must be avoided by draining or protecting the pump and ancillary systems.

Where there is the potential hazard of a loss of a seal barrier fluid or external flush, the fluid must be monitored.

If leakage of liquid to atmosphere can result in a hazard, the installation of a liquid detection device is recommended.

1.6.4.6 Maintenance to the centrifugal pump to avoid the hazard



CORRECT MAINTENANCE IS REQUIRED TO AVOID POTENTIAL HAZARDS WHICH GIVE A RISK OF EXPLOSION

The responsibility for compliance with maintenance instructions is with the plant operator.

To avoid potential explosion hazards during maintenance, the tools, cleaning and painting

materials used must not give rise to sparking or adversely affect the ambient conditions. Where there is a risk from such tools or materials, maintenance must be conducted in a safe area.

It is recommended that a maintenance plan and schedule is adopted (see section 6, *Maintenance*).to include the following.

- a) Any auxiliary systems installed must be monitored, if necessary, to ensure they function correctly.
- b) Gland packings must be adjusted correctly to give visible leakage and concentric alignment of the gland follower to prevent excessive temperature of the packing or follower.
- c) Check for any leaks from gaskets and seals. The correct functioning of the shaft seal must be checked regularly
- d) Check bearing lubricant level, and if the hours run show a lubricant change is required.
- e) Check that the duty condition is in the safe operating range for the pump.
- f) Check vibration, noise level and surface temperature at the bearings to confirm satisfactory operation.
- g) Check dirt and dust is removed from areas around close clearances, bearing housings and motors.
- h) Check coupling alignment and re-align if necessary.

1.7 Warning label



FLOWSERVE (Austria GmbH)
Pump Division





WARNING

ESSENTIAL PROCEDURES BEFORE STARTING!



INSTALL AND OPERATE EQUIPMENT ONLY IN ACCORDANCE WITH THE INSTRUCTION MANUAL SUPPLIED SEPERATELY!



ENSURE GUARDS ARE SECURELY IN PLACE!



ENSURE CORRECT DIRECTION OF ROTATION!



ENSURE ALL EXTERNAL CONNECTIONS TO THE PUMP/ SHAFT SEALING AND DRIVER ARE CONNECTED AND OPERATIONAL!



FILL PRIME UNIT AND SYSTEM. DO NOT RUN DRY!



ENSURE UNIT ON A FIRM FOUNDATION AND THAT COUPLING FACES ARE IN CORRECT ALIGNMENT PRIOR TO AND AFTER BOLTING BASEPLATE DOWN AND FIXING PIPEWORK.



SEE MANUAL FOR TOLERANCES.



ENSURE CORRECT DRIVER DIRECTION OF ROTATION WITH COUPLING ELEMENT/ PINS REMOVED. OTHERWISE SERIOUS DAMAGE MAY RESULT!





CAUTION



THIS MACHINE MUST BE FILLED WITH OIL BEFORE STARTING!



FAILURE IN FOLLOWING THESE PROCEDURES MAY RESULT IN PERSONAL INJURY/ OR EQUIPEMENT DAMAGE!

1.8 Specific machine performance

For performance parameters see section 1.5, *Duty conditions*. When the Contract requirement specifies these to be incorporated into user instructions these are included here. Where performance data has been supplied separately to the purchaser these should be obtained and retained with these user instructions if required.

1.9 Noise level

Attention must be given to the exposure of personnel to the noise, and local legislation will define when guidance to personnel on noise limitation is required, and when noise exposure reduction is mandatory. This is typically 80 to 85 dBA.

The usual approach is to control the exposure time to the noise or to enclose the machine to reduce emitted sound. You may have already specified a limiting noise level when the equipment was ordered, however if no noise requirements were defined, then attention is drawn to the following table to give an indication of equipment noise level so that you can take the appropriate action in your plant.

Pump noise level is dependent on a number of operational factors, flow rate, pipework design and acoustic characteristics of the building, and so the values given are subject to a 3 dBA tolerance and cannot be guaranteed.

Similarly the motor noise assumed in the “pump and motor” noise is that typically expected from standard and high efficiency motors when on load directly driving the pump. Note that a motor driven by an inverter may show an increased noise at some speeds.

If a pump unit only has been purchased for fitting with your own driver then the “pump only” noise levels in the table should be combined with the level for the driver obtained from the supplier.

Consult Flowserve or a noise specialist if assistance is required in combining the values.

It is recommended that where exposure approaches the prescribed limit, then site noise measurements should be made.

The values are in sound pressure level L_{pA} at 1 m (3.3 ft) from the machine, for “free field conditions over a reflecting plane”.

For estimating sound power level L_{WA} (re 1 pW) then add 14 dBA to the sound pressure value.

		Octave MID BAND frequency [Hz]							
3000 rpm	72	62	66	66	64	64	64	62	57
1500 rpm	66	56	60	60	58	58	58	56	51
3600 rpm	74	64	68	68	66	66	66	64	59
1800 rpm	67	57	61	61	59	59	59	57	52

Sound pressure readings are for information only and are not subject to guarantee by Flowserve/IDP.

Decibel readings do not include driver or system noise.

Pump tested at 100% of the best efficiency point at max. impeller diameter with water.

dB correction for combining noises (pump+motor)

Difference between two levels to be combined, dB	0	1	2	4	6	9	10
Add to the higher level to obtain the combined noise level, dB	3	2.5	2	1.5	1	0.5	0







Note :

- 1) The values showed are measured at a distance of 1 mt. (horizontally) from major pump surfaces and 1.5 mt. above the floor.
- 2) The values shown are expressed in dB (A)
- 3) For Noise Test Procedure refer to Works Standard L-109
- 4) The values shown have been derived from actual noise-test data and are based on the following conditions:
 - Equipment is located in a free field above a reflecting plane in which the reduction in noise level in all directions is 6db in each octave band for each doubling of distance.
 - Background noise is 10dB minimum below all noise levels in each octave band.
 - The values shown are at a distance of 1 meter (horizontally) from the major pump surface and 1,5 meters above the floor, using a standard pressure reference of 0,00002 newton per square meter.
 - Overall noise level, dB(A) is determined at points of maximum noise level and the values of all mid-band frequencies are basis A scale readings.

When the required condition flow is outside the range of 75 to 125% BEP, a part load correction (PLC) must be added to the noise level as follows:

Percent of BEP @ required impeller diameter	PLC in dB
74 to 62 or 126 to 136	+1
61 to 50 or 137 to 150	+2
49 to 38	+3
37 to 25	+4

1.10 CE Declaration

	
Austria , A-2345 Brunn am Geb., Industriestraße B Nr. 6, Tel:++43 2236 31530, Fax: ++43 2236 33430	
DECLARATION OF CONFORMITY	
<p>Section 1.0 MACHINE DESCRIPTION</p> <p>Serial No _____</p> <p>Equipment/Item _____</p> <p>Purchase Order _____</p> <p>Model / Type _____</p> <p>MAWP _____ barg</p> <p> _____</p> <p>Hydro. Pressure _____ barg</p> <p>Material _____</p> <p>Date DD/MM/YY _____</p> <p>Flow _____ m³/h</p> <p>Head _____ m</p> <p>Speed Min-1 / RPM _____</p> <p>Motor kW _____</p> <p>Hz _____</p> <p>Volts _____</p> <p>Amps _____</p> <p>Connection _____</p> <p>Country of Destination _____</p>	
<p>Section 2.0 APPLICABLE DIRECTIVES / REGULATIONS</p> <ul style="list-style-type: none"> - Machinery Directive 2006/42/EC Annex IIA - EMC Directive 2004/108/EC Low Voltage Directive 2006/95/EC (73/23/EEC text identical). Only applicable to products with electrical devices with voltage input 50-1000 VAC and not applicable to hazardous areas to 94/9/EC (ATEX). Explosive Atmospheres Directive 94/9/EC (ATEX). Only applicable when the  marking appears in section 1.0 Equipment without the  marking must not be used in potentially explosive atmospheres. - Notified Body holding the ATEX Technical Dossier - SIRA (518) Eccleston, Chester CH4 9JN, United Kingdom 	
<p>Section 3.0 APPLICABLE STANDARDS / SPECIFICATIONS</p> <ul style="list-style-type: none"> - EN809:1998+A1 :2009, EN953:1997+A1 :2009, ISO13857:2008, ISO12100-1:2003+A1 :2009, ISO12100-2:2003+A1 :2009 - EN13463-1:2009, EN13463-5:2003, EN13463-6:2004, EN13463-8:2003 (when applies for compliance with 94/9/EC) - API 610 8th, 9th or 10th ed. as applicable - API 682 1st, 2nd or 3th ed. as applicable 	
<p>Section 4.0 DECLARATION</p> <p>We, Flowserve (Austria) GmbH, at the above address, declare that under our sole responsibility for the supply of the machinery defined in SECTION 1.0 above, the said machinery complies with all the applicable Directives and Regulations set out in SECTION 2.0 above and with all the essential health and safety requirements applying to it when installed, operated and maintained in accordance with the applicable User Instruction manual(s).</p> <div style="text-align: center; margin-top: 20px;">  </div> <div style="display: flex; justify-content: space-between; margin-top: 20px;"> <div style="text-align: center;"> Signed: Dipl.Ing.Goran Rakic Authorised Techn.Manager </div> <div style="text-align: right;"> Date: 24.11.2010 </div> </div>	

2.0 TRANSPORT AND STORAGE

2.1 Consignment receipt and unpacking

Immediately after receipt of the equipment it must be checked against the delivery/ shipping documents for its completeness and that there has been no damage in transportation. Any shortage and or damage must be reported immediately to Flowserve and received in writing within one month of receipt of the equipment. Latter claims cannot be accepted.

Check any create/boxes/wrappings for any accessories or spare parts, which may be packed separately with the equipment or attached to side walls of the box or equipment.

Each product has a unique serial number. Check that this number corresponds with that advised and always quote this number in correspondence as well as when ordering spare parts or further accessories.

2.2 Handling



Boxes, crates, pallets or cartons may be unloaded using fork lift vehicles or slings dependent on their size and construction.

2.3 Lifting

Four lifting lugs are provided on the baseplate to lift the complete unit.



Take care by applying slings or ropes about auxiliary piping and seal systems.

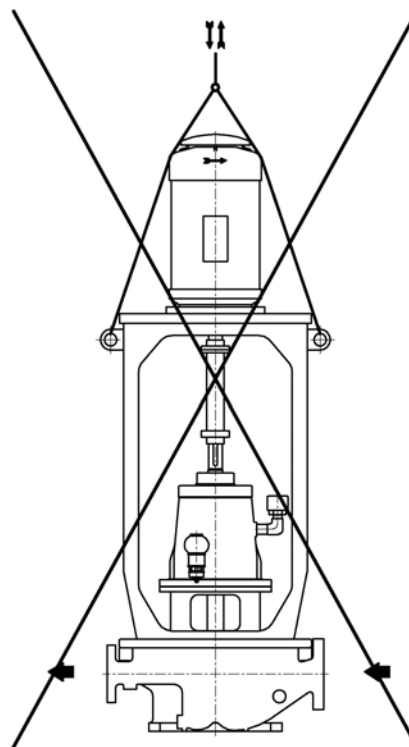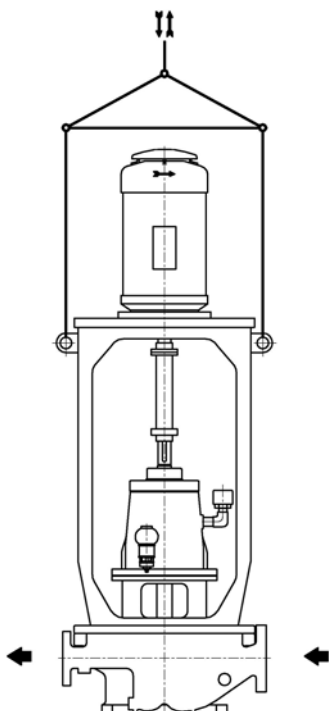

A crane must be used for all pump sets in excess of 25kg (55lb). Fully trained personnel must carry out lifting, in accordance with local regulations. The driver and pump weights are recorded on their respective nameplates.

2.4 Storage

If the unit will not be put immediately into service, it should be stored in a dry room. To avoid any damage during the storage period, the influence of any low or high frequency vibration must be totally inhibited. If the pump is delivered sealed in a plastic-wrapper, it is of max. importance to avoid any damage of that wrapper, because this will protect the pump against humidity. Therefore it must be checked if this wrapper has become cracked and if so, the wrapper must be renewed.

2.4.1 Long period storage

If the pump is delivered in a plastic bag, the preservation stands up for one year. If the storage period exceeds this time, the preservation must be checked and renewed. Also the air tight plastic bag must be changed. Moreover we recommend to order a Flowserve Service Engineer for checking the pump before the first start up.

2.5 Recycling and end of product life

At the end of the service life of the product or its parts, the relevant materials and parts should be recycled or disposed of using an environmentally

acceptable method and local regulations. If the product contains substances, which are harmful to the environment, these should be removed and disposed of in accordance with current regulations. This also includes the liquids and or gases in the "seal system" or other utilities.



Make sure that hazardous substances are disposed of safely and that the correct personal protective equipment is used. The safety specifications must be in accordance with the current regulations at all times.

3.0 DESCRIPTION

3.1 Configuration

The model HWMA belongs to Flowserve's family of API 610 vertical inline pumps. The hydraulics are designed for operating flexibility and consist of:

- a semi open radial vaned impeller to guarantee optimum performance
- a circular volute with a single caned diffuser to minimize hydraulic forces

The pump unit is available in two stage opposed impeller configuration. For low NPSHA applications an inducer is available.



The sense of rotation of the pump is counter clockwise (CCW), looking from the coupling to the shaft end of the pump.

3.2 Nomenclature

Example:

2x3x12HWMA - Ind.

2 Discharge flange in inch

3 Suction flange in inch

12 max. impeller size in inch

Ind indicates Inducer as option

3.3 Design of major parts

3.3.1 Pump casing

The pump casing is directly flanged to the motor stand, which itself is flanged to the motor. Back pull out design for easy maintenance, so the casing remains on its foundation in case of repair.

3.3.2 Hydraulics

A circular volute in combination with a single caned diffuser is inserted into the pump casing. A radial vaned semi open impeller is used to ensure optimal performance.

3.4 Performance and operating limits



In the interest of operator safety the unit must not be operated above the nameplate conditions. Such operation could result in unit failure causing injury to operating personnel. Consult instruction book for correct operation and maintenance of the pump and its supporting components.

4.0 INSTALLATION



Equipment operated in hazardous locations must comply with the relevant explosion protection regulations, see section 1.6.4, *Products used in potentially explosive atmospheres*.

4.1 Location

The pump should be located to allow room for access, ventilation, maintenance and inspection with ample headroom for lifting and should be as close as practicable to the supply of liquid to be pumped.

Refer to the general arrangement drawing for the pump set.

4.2 Part Assemblies

The pumps are delivered completely mounted and prealigned with the motor. Also the shaft seal is in the correct position. Final alignment after complete installation is necessary. If drivers and/or seal systems are delivered separately, follow the assembly procedure in section 6.8.

4.3 Foundation

The foundation shall be located on a place that allows a minimum of pipe work and that is easily accessible for inspection during operation. According to the environment the foundation may consist of concrete or of steel. It must be rigid and heavy enough to absorb normal vibrations and shocks.

4.3.1 Horizontal alignment of the baseplate

Horizontal alignment is done with levelling screws. Use a spirit level for correct horizontal alignment of the baseplate.



The max. misalignment is 0.5 mm/m baseplate length.


4.3.2 Steel foundation

When the pump unit is mounted directly on structural steel frame, it shall be well supported by structural beams. It is recommended to check the natural frequency of the steel frame, because it shall not coincide with the pump speed. The exact horizontal alignment is very important!

4.3.3 Concrete foundation


A concrete foundation must have an exact horizontal alignment and must be placed on solid ground. First a basic foundation shall be built with square shaped holes for embedding the foundation bolts. After putting the base plate into the foundation the proper alignment can be obtained by adjusting it with shims under the base plate. Now insert the foundation bolts and grout the space between the basic foundation and the base plate with grouting cement (refer to illustration)

It is very helpful to use a properly made and stable wooden frame around the base plate. So the grouting cement will not flow side. When the grouting is totally set and hardened the foundation bolts shall be tightened in a firm and symmetrical way.

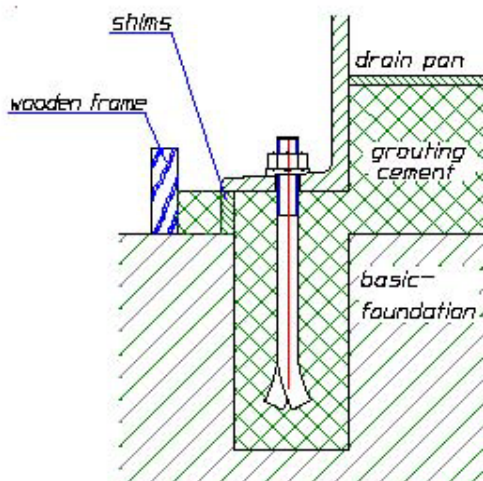

4.4 Initial alignment

The adjustment of motor and pump must be checked (if necessary, make a new adjustment) before first start up of the unit.

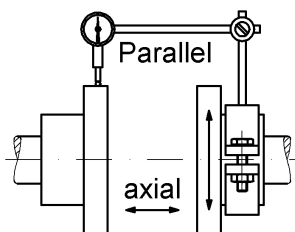

Ensure pump and driver are isolated electrically and the half couplings are disconnected.

Align the motor to the pump, not the pump to the motor. Alignment of the motor is achieved by using the adjustment screws.

4.4.1 Permissible misalignment limits at working temperature



When checking parallel alignment, the total indicator read-out (TIR) shown is twice the value of the actual shaft displacement.



The pump is only pre-aligned! Carefully check and readjust alignment before start of the unit. Take out the spacer of the coupling and check the alignment of shafts end of pump and driver. The maximum parallel offset should not exceed 0.05 mm (0.002 in.) and the axially offset can be ± 1 mm (0.04 in.).



For more details refer to the manufacturer's instruction manual of coupling.




- Parallel Offset: The median lines run parallel. The maximum allowable parallel offset depends on the size of coupling and is indicated in the instruction manual of manufacturer of coupling
- Axially Offset: Another offset is the displacement of one or both of the shafts. A typical example is thermal expansion.


Note:

The DBSE (distance between shaft ends) is shown on the General Arrangement Drawing and is larger than the length of the coupling spacer. This is necessary to compensate all manufacturing tolerances of line shafts and column pipes and to allow correct axial adjustment of the rotor (refer to 5.3.1 *Adjusting of the rotor*).

For installation of the coupling spacer the coupling hub on the pump shaft must be axially moved to match the spacer. This results in an axial clearance "x" between coupling hub and shaft end, which is taken into account by the coupling selection.

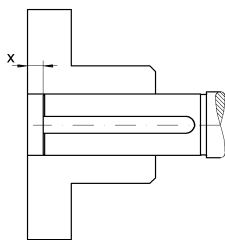

How the alignment of the coupling should be done you can see on the sketches and explanations below!

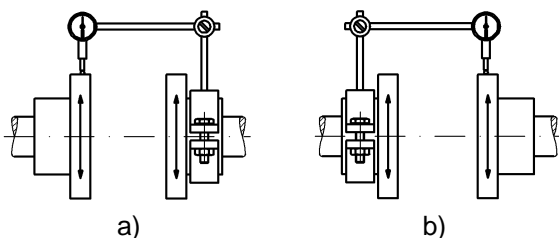

- Fix the dial gauge on the driven shaft and check the concentricity by turning of both hubs; correct it if necessary.
- Fix the dial gauge on the driving shaft and check the concentricity by turning of both hubs; correct it if necessary.

If the pump is handling hot liquid, the alignment must be rechecked in warm condition of the unit.
The alignment of the unit shall be checked again after 200 service hours.

4.5 Piping

4.5.1 General

Protective covers are fitted to the pipe connections to prevent foreign particles entering during transportation and installation. Ensure that these covers are removed from the pump before connecting any pipes.

Maximum forces and moments allowed on the pump flanges vary with the pump size and type. To minimize these forces and moments which may cause misalignment, hot bearings, worn couplings, vibration and a possible failure of the pump, the following points shall be strictly followed:

- Prevent excessive external pipe load.
- Do not connect piping by applying external force (use of wrenches, crane,...). Piping shall be aligned without residual stress.
- Do not mount expansion joints so that their force, due to internal pressure, acts on the pump flange.

Fitting an isolator and non-return valves can allow easier maintenance. Never throttle pump on suction side and never place a valve directly on the pump inlet nozzle.

A non-return valve shall be located in the discharge pipework to protect the pump from excessive back

pressure and hence reverse rotation when the unit is stopped.

Piping and fittings shall be flushed before use. To avoid damages of the pump install a Y-strainer or a strainer of 40 mesh.

Piping for corrosive liquids shall be arranged to allow pump flushing before removal of a unit.

4.5.2 Drain

This connection is used for total drainage of the pump casing. A flanged drain is standard and can be optionally equipped with various kinds of valves. Refer to GA drawing for details of the drain connection.



By pumping toxic or explosive media, provide the necessary security actions, e.g. flushing with nitrogen.

4.6 Electrical connections



Electrical connections must be made by a qualified Electrician in accordance with the relevant local national and international regulations.



It is important to be aware of the EUROPEAN DIRECTIVE on hazardous areas where compliance with IEC60079-14 is an additional requirement for making electrical connections.



It is important to be aware of the EUROPEAN DIRECTIVE on electromagnetic compatibility when wiring up and installing equipment on site. Attention must be paid to ensure that the techniques used during wiring/installation do not increase electromagnetic emissions or decrease the electromagnetic immunity of the equipment, wiring or any connected devices. If in any doubt contact Flowserve for advice.




The motor must be wired up in accordance with the motor manufacturer's instructions (normally supplied within the terminal box) including any temperature, earth leakage, current and other protective devices as appropriate. The identification nameplate should be checked to ensure the power supply is appropriate.



A device to provide emergency stopping must be fitted.

If not supplied pre-wired to the pump unit the controller/starter electrical details will also be supplied within the controller/starter.

For electrical details on pump sets with controllers see the separate wiring diagram.



See section 5.5, *Direction of rotation* before connecting the motor to the electrical supply.

4.7 Final shaft alignment check

After connecting piping to the pump, rotate the shaft several times by hand to ensure there is no seizure and all parts are free.

Recheck the coupling alignment, as previously described, to ensure no pipe strain. If pipe strain exists, correct piping.

5.0 COMMISSIONING START-UP, OPERATION AND SHUTDOWN



These operations must be carried out by fully qualified personnel.

5.1 Precommissioning procedure

- The bearing housing must be filled with the indicated oil. Check also the oil level.
- The pump must be completely filled with liquid to avoid running dry and to guarantee a correct performance of the pump.
- During filling the pump shall reach the specified temperature, so pumps for hot liquids ($T > 100^{\circ}\text{C}$ (212°F)) shall be warmed up by preflushing.
- Check the sense of rotation of the pump (Coupling spacer dismantled).
Sense of rotation is counter clockwise viewed to the drive end of the pump.
- The pump rotor and the shaft seal must be in correct axial position. Mounting plates of mechanical seal must be locked at the seal gland in open position. Drive-collar of the mechanical seal sleeve must be tightened.
- Check the readiness of all auxiliary systems (seal sys., lubrication sys.,...) for start up.
- All pipe work, including the internal and the auxiliary pipe work, must be connected correctly and must be absolutely tight. Check the tightness of all connections of the auxiliary pipe work. The suction valve must be open, the discharge valve shall be closed.
- Turn the pump by hand, if required with the help of a lever, to check the free rotation of the rotor. The rotor must turn uniformly and noiselessly. Some resistance may be felt due to friction in bearings and seals.
- Check the readiness of the driver for start up. Refer to the manual of the driver (preheating for explosion proof E-motor).

5.2 Pump Lubricants

5.2.1 Oil Lubricated Ball Bearings

The leveling rod of the oiler (see figure) must be adjusted when the oiler is installed and the bearing housing is filled with oil for the first time, and the rod should be checked for proper adjustment each time the reservoir of the oiler is replenished. To install the oiler and to establish the correct oil level which the oiler will automatically maintain, proceed as follows:

- Loosen thumb screw, and remove reservoir. Place the adjusting nut so that the edge of the reservoir will rest 0.35 to 0.39 in. (9 to 10 mm) above the centerline of the side port. This should result in the lock nut and adjusting nut being 0.08" (2) mm above the bottom of the leveling rod.
- Install short piece of $\frac{1}{4}$ in. pipe in threaded connection on side of inner bearing housing cover. Mount oiler body on free end of $\frac{1}{4}$ in. pipe, leaving it upright and level.


Note:

Use high grade turbine type mineral oil (ISO GRADE 68) which has qualities for inhibiting rust, oxidation and foam; has no free acid, chlorine or sulfur; and has no more than a trace of free alkali.

- Remove the oil breather and watch the oil sightglass on side of the inner bearing housing cover. Slowly fill housing with the specified lubricating oil (see Note above) until the oil level rises to the middle of the sightglass on side of the inner bearing housing cover. Approximately amount of oil is 40 oz. (1,2 l).



- Do not overfill bearing housing
- Fill the oiler reservoir with lubricating oil so that it is 100 percent full, install it on oiler body, and tighten thumb screws.
 - Oiler reservoir should not empty completely. It should maintain oil level set up by overfill hole.

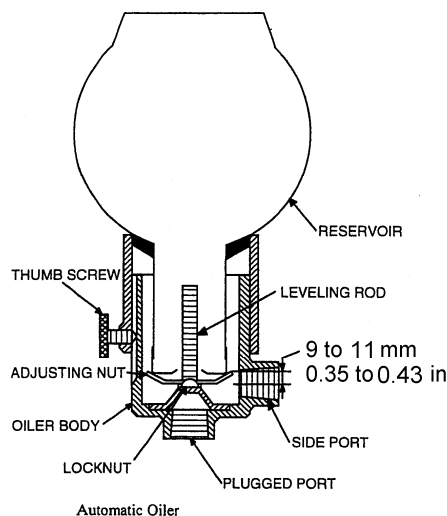

5.2.2 Purge oil mist lubrication

For preventing, that dirt or humidity get into the bearing housing, this pump is equipped with a ¼" NPT connection for air or nitrogen supply. Also at standstill the air or nitrogen supply shall be maintained.




The pressure shall be between **0.01 bar (0.14 psi) and 0.02 bar (0.29 psi)**, otherwise you have to consider an oil leakage and as a result a bearing damage.

The provided flow rate shall be 0,1 SCFM.

The supplied air or nitrogen shall be clean and dry.

5.2.3 Adjusting of DENCO Constant Level Oiler

If the pump is fitted with a Constant Level Oiler type „DENCO“, the correct oil level has to be checked after fitting the pump! Dimension **a** is the distance from the centerline of the pump to the minimum oil level (marks at the bearing housing).

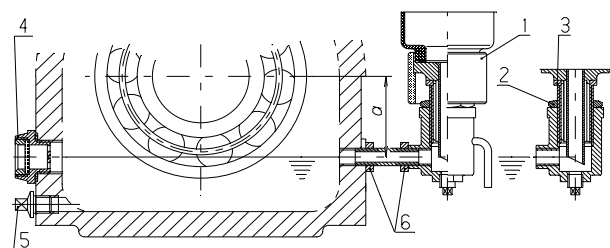

- | | | |
|--------------------|--------------|---------------------|
| 1 Denco Oiler | 2 lock nut | 3 adjusting sleeve; |
| 4 oil sight glass; | 5 oil drain; | 6 counternut; |

- The oiler body is mounted so that the required oil level is approximately level with the centre line of the side port of the body. The oil level may be „fine tuned“ by turning the adjusting sleeve (3) and finally locked into position by tightening the lock nut (2). To replenish, the reservoir and adaptor (1) may be removed by sliding it out of the body, removing the adaptor and fill the reservoir. Fully reinserting the adaptor / reservoir into the body ensures the previously adjusted oil level is maintained. The oiler is equipped with an overflow tube to avoid a rise of the oil level. This is necessary to maintain a constant level in an oil bath lubrication system, where an oil mist is used as primary lubrication.
- Additionally you can check the correct oiler adjustment by an oil sight glass (minimum oil level is the middle of the oil sight glass).

5.2.4 Oil change

After first start up, the oil shall be changed after 200 service hours.

Every further oil change shall take place after about 2000 service hours or at least every 6 month.

To change the oil use the following procedure:

- Remove the reservoir (for some type of oilers you must loose a fixing screw or lock nut, refer to section 5.2.4 *Oil level*).
- Open the oil drain on the bearing housing to remove the oil.
- Close the oil drain and fill in Oil through the oiler until the oil level reaches the bottom of the sight glass.
- Fill the reservoir and put it quickly to the body of the oiler. Observe the level in the reservoir. It will decrease until the required oil level is reached (middle of the sight glass). Ensure that enough oil remains in the reservoir.
- If necessary, the oil level can be adjusted by referring to section 5.2.4 *Oil level*.

5.2.5 Oil level

The correct oil level is in the middle of the oil sight glass and shall be checked when pump is not in operation. Periodically check if the lubricating oil is mixed with any condensed water. Careful opening of the oil drain during a stop of the pump will show any water.

Note:

Use a spirit level to check the horizontal alignment of the bearing housing.



A too high oil level will result in higher bearing temperatures and therefore poorer lubrication.

5.2.6 Oil quality

Oil used for lubrication should only be of high quality. The viscosity of the oil at working temperature must be at least 10 cSt. The pouring point of the oil must be in accordance with the lowest expected temperature of the bearing housing during a stop of the pump. For recommended lubricating oils refer to the lubrication table.

Having selected the corresponding oil quality the actual oil temperature at the bearing housing must be checked after two service hours of the pump. Considering this measured oil temperature the actual viscosity must be determined by using the data sheet of the oil, to verify the minimum required viscosity of 10 cSt. Do not forget, the oil temperature in the bearing itself is about 10 °C (50 °F) higher than the oil temperature at the bearing housing. On the following table the oil viscosity is given at 40 °C (104 °F). Determining the correct lubricating oil one must take into consideration that all bearings will have higher temperatures during the first 20 service hours. In constant operation the bearing temperature will decrease about 10 °C (50 °F). The oil temperature shall be lower than 85 °C (185 °F) after this running-

in time. The bearing outer race temperature should not exceed 95°C (204°F). If the temperature is higher, the reason may be a wrong oil quality, wrong oil level or overload of the pump because of excessive wear. If the humidity at the site is high, the roller bearings become easily rusty during stand still periods. To avoid that, we recommend to mix the lubricating oil with a corrosion inhibitor contact your lubrication oil supplier for proper additives inhibitors.

5.2.7 Lubrication Table

Oil lubrication / Recommendation						
Bearing temp.	+40 °C - +70 °C (+104 °F - +158 °F)		+70 °C - +100 °C (+158 °F - +212 °F)		+100 °C - +120 °C (+212 °F - +248 °F)	
Ambient temp.	-5 °C - +40 °C (-23 °F - +104 °F)		-5 °C - +40 °C (-23 °F - +104 °F)		-5 °C - +40 °C (-23 °F - +104 °F)	
Mobil	MOBIL SHC 624(synthetic) MOBIL DTE 24	32,4 ¹ 31 ¹	Mobil DTE 27	95 ¹	Mobil SHC 629 (synthetic)	143 ¹
BP	Energol HLP-HM 32 Energol HLP-HM 46	32 ¹ 46 ¹	Energol HLP-HM 100	94 ¹		
Shell	Shell Turbo T 46	49 ¹	Shell Turbo T 100	100 ¹	Shell Morlina 220	220 ¹
Esso	TERESSO 32 TERESSO 46	30 ¹ 43 ¹	NUTO H 100 NUTO H 150	100 ¹ 150 ¹	SPARTAN EP 220	220 ¹
Castrol	Hyspin AWS 32	32 ¹	Alpha SP 100	100 ¹	Alpha SP 220 Alphasyn T 150 (synthetic)	220 ¹ 150 ¹
OMV	OMV turb HTU 46	46 ¹	OMV gear HST 100	97,8 ¹	OMV gear HST 220	226 ¹
Aral	Aral Degol BG 46 Aral Vitam GF 46	46 ¹ 46 ¹	Aral Degol BG 100	100 ¹		

For temperatures below -5 °C (-23 °F) use lubrication oil class SAE 5W-50 or API-SJ.

	Seal System / Pumped Liquid	Quench-Oil	General Features
Barrier/Buffer Fluid for Mech. Seal	Tandem Seal to -40 °C (-40 °F) Back to back Seal with gascoffer-dam Conventional back to back Seal	- Refined Hydraulic Oil - Synthetic Oil - Mixture of water / glykol <u>ATTENTION:</u> <u>Do not use Methanol</u>	appr. 10-15 cSt at 40°C (104 °F) below -40°C (-40 °F) Pourpoint vaporization above 80°C (176 °F)
	Tandem Seal to -60°C (-76 °F)	Ethanol/Propanol	

The sequence of the suppliers of the lubricants does not represent any indication of their superiority.

¹ Viscosity at 40 °C (104 °F) in cSt [mm²/s] DIN 51562

5.3 Impeller clearance

Correct axial rotor setting is essential for trouble free operation of the pump.

5.3.1 Adjusting of the rotor

- Remove coupling spacer, coupling hub on pump shaft and fan [8161] (when delivered).
- Fix the position of the mechanical seal by putting the assembly jigs, mounted on the seal end plate, into the groove in the shaft sleeve.

Note:

No requirements for softpacking,

- Open screws from the clamping unit, located on the end of the shaft sleeve (refer to shaft seal drawing).
- Loose and remove socket head cap screws [6579.3] from the shaft nut [2910].
- Turn shaft nut upside till the rotor moves in the lowest position and cannot turned by hand.
- Measure the dimension from the shaft nut to the end of the shaft.
- Now lift the rotor by turning the shaft nut in the other direction till it is in the highest position.

Note:

For heavy pumps (rotor weight > 150 kg (331 lb.)) we recommend the following practice. The rotor is already in its lowest position. Screw in an Eyebolt into the thread at the top of the shaft. Use a lever or a crane to lift the shaft (do it slowly, the axial clearance is only a few millimetres).

- Measure again the dimension from the shaft nut to the end of the shaft.
- Take the mean value of the two dimensions and adjust the rotor to this value by turning the shaft nut.

Note:

The type of hydraulic is shown on the nameplate (refer to section 3.2 *Nomenclature*)

- Fix the shaft nut with the socket head cap screws.

Note:

Turn the shaftnut always in downwards direction to meet the whole for the socket head cap screw.

- Fix the shaft sleeve with the clamping unit and turn the tools out of the groove from the shaft sleeve and fix them on the seal end plate.
- Check if the shaft can be turned easy by hand
- Mount fan (when delivered) coupling hub and spacer again.

5.4 Direction of rotation



CAUTION

The sense of rotation of the pump is counter clockwise (CCW); looking from the coupling to the shaft end of the pump.



The rotation of the driver shall be checked.

5.5 Guarding

Be sure that the coupling guard is mounted correctly at the baseplate prior to start up.

5.6 Priming and auxiliary supplies

The pump must be completely primed prior to start up.

- The pump casing is considered as self venting, so no vent connections are provided.
- Auxiliary systems, e.g. barrier /buffer fluid systems, cooling circuits, shall be filled according to the user instructions.

5.7 Starting the pump

- Start the driver according to the specification. (Refer to driver IOM).

Note:

Pumps are usually started against closed discharge valve.

- Check the discharge and suction pressure gauge to verify the pumps delivered head. Open the discharge valve slowly, until the pump reaches the specified operation point. The pump must operate smoothly, and the vibration must be below 5 mm/s (0.2 in./sec) (API 610 vibration limits).



The discharge valve must be opened within 30 sec. after start up. Longer operation against closed discharge valve will damage the pump. If a minimum flow valve is installed, take pressure gauge readings to verify the correct operation.

Note:

If the backpressure of the discharge pipe is sufficient, pumps can be started against open valve.



Ensure that your driver is capable deliver the higher torque required by starting against open valve.



To prevent the pump from reverse rotation after shut down, the installation of a check valve is recommended.

Although the pump is not affected by reverse rotation because of spezial coupling design , it can be an issue with the driver.

Check the discharge and suction pressure gauge to verify the pumps delivered head.

The pump must operate smoothly, and the vibration must be below 5 mm/s (0.2 in./sec) (API 610 vibration limits).

If a minimum flow valve is installed, take pressure gauge readings to verify the correct operation.

- c) Check the pipe system against any leakage.
- d) Check the mechanical seal against any leakage.

Note:

Right after start up a minor leakage of the mechanical seal is quite normal. Normally this leakage disappears after few minutes of operation.

5.8 Operation

- a) Verify that the pump is operating within the specified limits, min/max flow, pressure, temperature, vibration, power
- b) The bearing housing temperature shall not exceed 80 °C (176 °F). If higher bearing temperature are observed, check the viscosity grade of the used lubrication oil.



CAUTION

The minimum viscosity is 10 cSt at the expected oil temperature.

(Oil temperature = bearing gland temperature + 10 °C (50 °F))

- c) From time to time check the pump shaft seal. Leakage of 10 - 20 drops per hour is also with a mechanical shaft seal unavoidable.
- d) Observe the power consumption of the pump to detect excessive wear.

5.9 Stopping and Shutdown

- a) Close the outlet valve, but ensure that the pump runs in this condition for no more than a few seconds.
- b) Stop the pump.
- c) Switch off flushing and/or cooling/ heating liquid supplies at a time appropriate to the process.
- d) For prolonged shut-downs and especially when ambient temperatures are likely to drop below freezing point, the pump and any cooling and flushing arrangements must be drained or otherwise protected.

Note:

For automatic start/stop operation of the pump, ensure that all steps described in chapter 5.6, 5.7, 5.8 and 5.9 are implemented in the control logic.

5.10 Hydraulic, mechanical and electrical duty

This product has been supplied to meet the performance specifications of your purchase order, however it is understood that during the life of the product these may change. The following notes will help the user to decide how to evaluate the

implications of any change. If in doubt contact your nearest Flowserve office.

5.10.1 Specific gravity (SG)

Pump capacity and total head in meters (feet) do not change with SG, however pressure displayed on a pressure gauge is directly proportional to SG. Power absorbed is also directly proportional to SG.

It is therefore important to check that any change in SG will not overload the pump driver or over-pressurize the pump.

5.10.2 Viscosity

For a given flow rate the total head reduces with increased viscosity and increases with reduced viscosity. Also for a given flow rate the power absorbed increases with increased viscosity, and reduces with reduced viscosity. It is important that checks are made with your nearest Flowserve office if changes in viscosity are planned.

5.10.3 Pump speed

Changing pump speed effects flow, total head, power absorbed, NPSHR, noise and vibration. Flow varies in direct proportion to pump speed. Head varies as speed ratio squared. Power varies as speed ratio cubed. If increasing speed it is important therefore to ensure the maximum pump working pressure is not exceeded, the driver is not overloaded, $NPSHA > NPSHR$, and that noise and vibration are within local requirements and regulations.

5.10.4 Net positive suction head (NPSHA)

NPSH available (NPSHA) is a measure of the energy available in the pumped liquid, above its vapour pressure, at the pump suction branch. NPSH required (NPSHR) - is a measure of the energy required in the pumped liquid, above its vapour pressure, to prevent the pump from cavitating. It is important that $NPSHA > NPSHR$. The margin between $NPSHA > NPSHR$ should be as large as possible. If any change in NPSHA is proposed, ensure these margins are not significantly eroded. Refer to the pump performance curve to determine exact requirements particularly if flow has changed. If in doubt please consult your nearest Flowserve office for advice and details of the minimum allowable margin for your application.

5.10.5 Pumped flow

Flow must not fall outside the minimum and maximum continuous safe flow shown on the pump performance curve and/or data sheet.

6.0 MAINTENANCE

6.1 General



It is the plant operator's responsibility to ensure that all maintenance, inspection and assembly work is carried out by authorized and qualified personnel who have adequately familiarized themselves with the subject matter by studying this manual in detail.

(See also section 1.6.2.)

Any work on the machine must be performed when it is at a standstill. It is imperative that the procedure for shutting down the machine is followed, as described in section 5.9.

On completion of work all guards and safety devices must be re-installed and made operative again.

Before restarting the machine, the relevant instructions listed in section 5, *Commissioning, start up, operation and shut down* must be observed.

Oil and grease leaks may make the ground slippery. Machine maintenance must always begin and finish by cleaning the ground and the exterior of the machine.

If platforms, stairs and guard rails are required for maintenance, they must be placed for easy access to areas where maintenance and inspection are to be carried out. The positioning of these accessories must not limit access or hinder the lifting of the part to be serviced.

When air or compressed inert gas is used in the maintenance process, the operator and anyone in the vicinity must be careful and have the appropriate protection.

Do not spray air or compressed inert gas on skin.

Do not direct an air or gas jet towards other people.

Never use air or compressed inert gas to clean clothes.

Before working on the pump, take measures to prevent an uncontrolled start. Put a warning board on the starting device with the words:

"Machine under repair: do not start".

With electric drive equipment, lock the main switch open and withdraw any fuses. Put a warning board on the fuse box or main switch with the words:

"Machine under repair: do not connect".

Never clean equipment with inflammable solvents or carbon tetrachloride. Protect yourself against toxic fumes when using cleaning agents.

6.2 Maintenance schedule



It is recommended that a maintenance plan and schedule is adopted, in line with these User Instructions, to include the following:

- Any auxiliary systems installed must be monitored, if necessary, to ensure they function correctly.
- Gland packings must be adjusted correctly to give visible leakage and concentric alignment of the gland follower to prevent excessive temperature of the packing or follower.
- Check for any leaks from gaskets and seals. The correct functioning of the shaft seal must be checked regularly.
- Check bearing lubricant level, and if the hours run show a lubricant change is required.
- Check that the duty condition is in the safe operating range for the pump.
- Check vibration, noise level and surface temperature at the bearings to confirm satisfactory operation.
- Check dirt and dust is removed from areas around close clearances, bearing housings and motors.
- Check coupling alignment and re-align if necessary.

Our specialist service personnel can help with preventative maintenance records and provide condition monitoring for temperature and vibration to identify the onset of potential problems.

If any problems are found the following sequence of actions should take place:

- Refer to section 8, *Faults; causes and remedies*, for fault diagnosis.
- Ensure equipment complies with the recommendations in this manual.
- Contact Flowserve if the problem persists.

6.2.1 Routine Inspection (daily/weekly)



CAUTION

The following checks should be made and the appropriate action taken to remedy any deviations.

- Check operating behavior; ensure noise, vibration and bearing temperatures are normal.
- Check that there are no abnormal fluid or lubricant leaks (static and dynamic seals) and that any sealant systems (if fitted) are full and operating normally.
- Check that shaft seal leaks are within acceptable limits.
- Check the level and condition of lubrication oil. On grease lubricated pumps, check running

hours since last recharge of grease or complete grease change.

- e) Check any auxiliary supplies eg. heating/cooling (if fitted) are operating correctly.
- f) Refer to the manuals of any associated equipment if routine checks needed.

surfaces (if necessary) with preservative is recommended at a 6 monthly interval.

6.2.2 Periodic Inspection (every 6 Month)



- a) Check foundation bolts for security of attachment and corrosion.
- b) Check pump operation hours to determine if bearing lubricant shall be changed.
- c) The coupling should be checked for correct alignment and worn driving elements.



Refer to the manuals of any associated equipment for periodic checks needed.

6.3 Spare parts

6.3.1 Ordering of spares

When ordering spare parts we need the following information:

1. pump type and pump size
2. serial number of the pump
3. number of the required spare parts
4. reference number and name of the part as listed in the part list or in the sectional drawing

Example: for HWMA pump:

HWMA, serial number G202222/01
1 piece impeller Pos. 2200

The serial number of each pump is indicated on the name plate. If the material should be changed from the original delivered one, additionally indicate the exact material specification. If ordered impellers shall have smaller or larger outer diameter, indicate also with your order. Without a special remark the spare impellers will be delivered with the diameter of the original impellers.

If you need the wear rings oversized or undersized, please indicate, otherwise the wear rings will be delivered with standard size.

To ensure continuous satisfactory operation, replacement parts to the original design specification should be obtained from Flowserve.

Any change to the original design specification (modification or use of a non-standard parts) will invalidate the pump's safety certification.

6.3.2 Storage of spares

Spares should be stored in a clean dry area away from vibration. Inspection and retreatment of metallic

6.4 Recommended spares

Part	Spares Recommended						
	Start up			Normal Maintenance			
No. of identical pumps	1 - 3	4 - 6	7+	1 - 3	4 - 6	7 - 9	10+
Case							1
Head (case cover and stuffing box)							1
Diffuser							1
Motor							1
Shaft (w/key)				1	1	2	1
Impeller				1	1	2	3
Mechanical seal complete (Cartridge)	1	2	3	1	2	3	3
Shaft sleeve and stage bushing (set)	1	2	3	1	2	3	3
Gaskets, O-rings (set)	1	2	3	1	2	3	3

6.5 Fastener torques

Tightening torque M _A Nm (lbf.ft)					
Size of screw	Duplex SS (S32760, S31803, 1.4462)	Carbon Steel (NACE) (A 193 Gr.B7M, A 320 Gr. L7M)	Carbon Steel (A 193 Gr. B7, A 320 Gr. L7, 8.8)	Austenitic SS (A 193Gr. B8MA) (NACE)	Austenitic SS (A 193 Gr. B8/B8M, A4-70,A2-70)
M 4	2 (1,5)	2,4 (1,8)	2,8 (2,1)	0,9 (0,7)	2 (1,5)
M 5	3,9 (2,9)	4,8 (3,6)	5,6 (4,1)	1,8 (1,4)	3,9 (2,9)
M 6	6,8 (5)	8,3 (6,1)	9,7 (7,1)	3,2 (2,3)	6,8 (5)
M 8	16,2 (12)	19,8 (14,6)	23,1 (17)	7,6 (5,6)	16,2 (12)
M 10	31,9 (23,6)	39 (28,8)	45,4 (33,5)	14,9 (11)	31,9 (23,6)
M 12	55,4 (40,9)	67,8 (50)	78,8 (58,2)	25,9 (19,1)	55,4 (40,9)
M 14	87,9 (64,9)	107,5 (79,3)	125,1 (92,3)	41 (30,3)	87,9 (64,9)
M 16	134,6 (99,3)	164,5 (121,4)	191,4 (141,3)	62,8 (46,4)	134,6 (99,3)
M 18	188 (139)	230 (170)	267 (197)	88 (65)	188 (139)
M 20	263 (194)	321 (237)	373 (276)	123 (90)	263 (194)
M 22	353 (260)	431 (318)	502 (370)	165 (121)	196 (145)
M 24	453 (334)	553 (408)	644 (475)	211 (156)	251 (186)
M 27	654 (483)	799 (590)	930 (686)	305 (225)	363 (268)
M 30	892 (658)	1090 (805)	1269 (936)	416 (307)	496 (366)
M 33	1200 (886)	1467 (1082)	1707 (1260)	560 (413)	667 (492)
M 36	1550 (1144)	1895 (1398)	2205 (1627)	723 (534)	861 (636)
M 39	1988 (1467)	2430 (1793)	2827 (2086)	928 (685)	1104 (815)
M 42	2472 (1824)	3021 (2229)	3515 (2594)	1153 (851)	1373 (1013)
M 45	3061 (2259)	3741 (2761)	4354 (3213)	1429 (1054)	1701 (1255)
M48	3703 (2732)	4526 (3340)	5266 (3886)	1728 (1275)	2057 (1518)
M64	8862 (6539)	10831 (7993)	12604 (9301)	4136 (3052)	4923 (3633)

Above mentioned torques are for all screwed unions, which works under dynamical load. For all other connections you can use a corresponding smaller torque.

6.6 Setting impeller clearance

For axial rotor setting see section 5 *Commissioning startup, operation and shutdown*.

6.7 Disassembly



Refer to section 1.6, *Safety*, before dismantling the pump.



Before dismantling the pump for overhaul, ensure genuine Flowserve replacement parts are available. Refer to sectional drawings for part numbers and identification.

6.7.1 Dismantling of pump

- 1) Remove the coupling guards [7450] and secure the mechanical seal by putting the setting plates into the groove of the shaft sleeve. Loose the drive collar to prepare further disassembly.

Note:

Refer to mechanical seal drawing for details.



Drain the seal system, if applicable.

- 2) Uncouple the motor from the pump and take off the motor.
- 3) Loose the hexagon head bolt [6577.1] and pull off the bearing lantern [3140].
- 4) Loose the stud [6572.2] and pull out the pump assembly from the casing. Eventually use hexagon head bolt [6577.2] to support this.

6.7.2 Dismantling of hydraulic section

- 1) After loosening the socket screws [6579.4], remove the insert.
- 2) Loose the impeller nut [2912] (right hand thread)

Note:

If the pump is equipped with an inducer [2215] loose inducer.


- 3) Pull the impeller from the shaft. As the impeller is fitted relatively strong on the shaft, use as support the two threads on the shroud of the impeller.
- 4) After loosening the socket head cup screws [6579.1], it is possible to remove the interstage plate [1471] of the pump casing cover [1221].

6.7.3 Dismantling for changing the mechanical seal

- 1) Loose stud [6572.3] and pull off pump casing cover [1221] including mechanical seal cartridge.
- 2) Loose hex nuts [6581.4] to remove mechanical seal cartridge from pump casing cover [1221].


6.7.4 Dismantling of the bearing housing

- 1) Loose the hexagon head bolt [6577.3] and pull off the stuffing box housing [4110].
- 2) Pull off the deflector [2540] from the shaft after loosening the grub screw [6814.2].
- 3) Unsecure shaft nut [2910] by loosening the cap screw [6579.3].
- 4) Unscrew the shaft nut [2910], the hexagon head bolt [6577.4] and remove the bearing cover [1220] and [3260]. Take care about labyrinth ring [4330].
- 5) Now you can pull out the shaft assembly from the bearing housing. Pull off the bearing adaptor sleeve [2471].



Take care of the key [6700.3].

- 6) To pull off the angular contact bearings unsecure lockwasher [6541.2] and loose bearing lock nut [3712].
- 7) Pull off the distance sleeve [2460], the pumping ring [4223] and the radial ball bearing [3011].



Take care of the key [6700.2].

6.8 Examination of parts

- 1) Check whether any part of pump casing or impeller was damaged by corrosion or erosion. Liquid channels have to be clean and clear.
- 2) All liquid channels must be cleaned and free of rust and mud on impeller! If machining of any impeller is necessary it must be rebalanced dynamically after this work. The balancing of the impellers is Q 2,5 according ISO 1940.
- 3) Check the total run out of the shaft when mounted. The maximum allowable value is 0,05 mm measured on the fit of the impeller.
- 4) Especially by pumping aggressive media pay attention to chemical corrosion on the surfaces of shaft and sleeve which are touched by the liquid. The shaft sleeves must have a clean and even surface at the area of the rotating unit of the mechanical seal, otherwise it will fail in operation.
- 5) Defective shafts and sleeves shall be replaced if a machining is impossible (in accordance with tolerances respectively with run-out of shaft).
- 6) Check the inner surface of the impeller hub, the impeller must have a proper fit on the shaft! Any loose impeller will cause vibrations and destroy shaft and bearings. The fit between shaft and impeller hub is Ø38 G5/h5 ISO.
- 7) All defective seals respectively O-rings have to be replaced.
- 8) At a complete overhaul of the pump all seals and O-rings should be renewed depending on the duration of service, all roller bearings should be renewed, too.


6.9 Assembly

To assemble the pump consult the sectional drawings.

Ensure threads, gasket and O-ring mating faces are clean. Apply thread sealant to non-face sealing pipe thread fittings.


6.9.1 Assembly of the hydraulic cartridge

- 1) Mount the mechanical seal to the casing cover [1221]. Tight hex nuts [6581.4] of studs [06572.4].



Insert O-ring [4610.6] into casing cover [1221].

- 2) Insert the O-ring [4610.2] into the interstage plate [1471] and slip it on to the shaft. Tighten the socket head cap screws [6579.1]
- 3) Put in the key [6700.1] and slip on the impeller [2200]. Now put on the liner [1649] including the O-ring [4610.10].



Tight the socket head cap screws [6579.4] to fix the assembly.

- 4) Slip on the lockwasher [6541.1]. Tight the assembly with the impeller nut [2912] and secure it with the lockwasher [6541.1].

Note:

If the pump is equipped with an inducer [2215], it replaces the shaft nut.

- 5) Now the complete motor hydraulic assembly can be put into the casing. Tight hex nuts [6581.2] of the studs [6572.2].


6.9.2 Assembly of the bearing housing

- 1) Push radial ball bearing [3011] to the shaft [2100].

Note:


Heat up the bearing with an applicable device to 110°C.

- 2) Mount the pair of thrust ball bearing [3013] to the bearing adaptor sleeve [2471] by turning the bearing lock nut [3712].



Install the lockwasher [6541.2].

- 3) Install the oil ring [3861] and secure it with the grub screw [6814.3].
- 4) Put in key [6700.3] and slip the thrust bearing assembly to the shaft [2100].
- 5) Put in the key [6700.2] and mount the pumping ring [4223] at the line bearing side.



Take care of the O-ring [4610.7].

- 6) Now you can push the shaft assembly into the bearing housing [3200].

- 7) Mount the distance sleeve [2460] and the deflector [2540]. Secure the deflector with the grub screw [6814.2].

Note:

If grease catcher [3865] have been disassembled, it must be installed before mounting the deflector [2540]. Take care of the O-ring [4610.7].

- 8) Put on the bearing cover [3260] and [1220] and tight the hexagon head bolt [6577.4].



Take care of the O-rings [4610.9] and the labyrinth ring [4330].

- 9) Install stuffing box housing [4110].
- 10) Mount shaft nut [2910] and set rotor clearance according to chapter 5.3.1 *Adjusting of the rotor*.


6.9.3 Assembly of shaft seal

- 1) Replacing the mechanical seal extreme cleanness is recommended. The sealing faces of the mechanical seal must be free of scratches or other damages and must be cleaned once again before assembly.
- 2) Before sliding the rotating parts on the shaft respectively on the shaft sleeve, the fits must be sufficiently lubricated with a molykote paste.

Note:

Take care that the sealing faces remain clean and no grease touches them.

- 3) If a mechanical seal with pump ring for medium circulation is used pay attention to the rotation of pump and pump ring.
- 4) At assembling the seal end plate [4212] pay attention to the position of piping connections for injection or quench (refer to shaft seal drawing).
- 5) For assembly of shaft seal use the reverse procedure as described in the chapter „Disassembly of shaft seal“ before. Important is the fixing of the mechanical seal by the tools. So a damage of the mechanical seal during further assembling can be avoided.



Before start up the tools must absolute turned out of the groove of the shaft sleeve!

7.0 AUXILIARIES

7.1 Seal and seal systems

7.1.1 Dual Mechanical Seal unpressurized with API-Plan 11+52

Note:

Refer to mechanical seal drawing and auxiliary piping drawing. The pump is equipped with a dual mechanical seal. The cartridge design allows to change the mechanical seal without taking it apart.



Try to turn the rotor by hand. If the rotor cannot be turned readjust it following procedure in section 5.3.1 *Adjusting of the rotor*.

The mechanical seal requires no adjustment anymore. Check if the mounting plates are already swung out.

Actions after start up:

Check all connections to the seal gland and the mechanical seal itself against leakage. Check the temperature of the seal gland. A slight increase of temperature may be observed during the run in period.

The faces of the inner mechanical seal are flushed by the product (API Plan 11). In Plan 11, product is routed from the pump discharge via an orifice to the seal chamber to provide cooling for the seal and to vent air or vapors from the seal chamber. Fluid then flows from the seal cavity back into the process stream. Between the inner mechanical seal and the outer (atmospheric) mechanical seal is a liquid buffer fluid, which is unpressurized (API Plan 52). The buffer fluid is contained in a seal pot (refer to drawing of the seal pot), which is vented to a vent system, thus maintaining the buffer fluid pressure close to atmospheric.

Inner seal leakage will be product leakage into the buffer fluid. There will always be some leakage (max. 5 ml/hour).


Plan 52 is used for flashing liquids, which have a vapour pressure higher than the buffer fluid pressure. So the product will flash in the seal pot and the vapour can escape to the vent system.

All screw / flange connections have to be proofed.

Straight screw joints made of stainless steel have to be tightened especially carefully.



Fill the seal system with a suitable buffer fluid (refer to lubrication table).



Ensure that the valve GV for the connection V is open (Barrier/buffer fluid vessel drawing).



Open the Block & Bleed valve to allow proper function of the PSH (set point 0.5 bar (7.25 psi) above flare pressure).




Open all necessary valves in the cooling and auxiliary piping and check the flow.



Disassembly of the seal cartridge is only allowed by authorized personnel. Contact Flowserve for any service of the mechanical seal. We

recommend to have a spare cartridge seal on stock for easy replacement.

7.1.2 Dual Mechanical Seal pressurized with API-Plan 53a



Refer to mechanical seal drawing and auxiliary piping drawing. The pump is equipped with a dual mechanical seal in face to back configuration, back to back configuration or face to face configuration.

Actions before first start up:

The pump will be delivered with correct vertical adjustment of the rotor.



Try to turn the rotor by hand. If the rotor cannot be turned readjust it following procedure in section 5.3.1 *Adjusting of the rotor*.

The mechanical seal requires no adjustment anymore. Check if the mounting plates are already swung out.

Actions after start up:

Check all connections to the seal gland and the mechanical seal itself against leakage. Check the temperature of the seal gland. A slight increase of temperature may be observed during the run in period.

Plan 53 pressurized dual seal systems are used in services where no leakage to atmosphere can be tolerated. A Plan 53a system consists of dual mechanical seals with a liquid barrier fluid between them. The barrier fluid is contained in a seal pot which is pressurized to a pressure of approximately 1.5 bar (23 psi) greater than the pump seal chamber. Inner seal leakage will be barrier fluid leakage into the product. There will always be some leakage (max. 5 ml/hour).

The leakage rate is monitored by monitoring the seal pot level. The product must be able to accommodate a small amount of contamination from the barrier fluid. The seal pot pressure must be maintained at the proper level. If the seal pot pressure drops, the system will begin to operate like a Plan 52, or unpressurized dual seal, which does not offer the same level of sealing integrity. Specifically, the inner seal leakage direction will be reversed and the barrier fluid will, over time, become contaminated with the process fluid with the problems that result, including possible seal failure.



Fill the seal system with a suitable barrier buffer fluid (refer to lubrication table).




Open all necessary valves in the cooling and auxiliary piping and check the flow.



Disassembly of the seal cartridge is only allowed by authorized personal. Contact Flowserve for any service of the mechanical seal. We recommend to have a spare cartridge seal on stock for easy replacement.

7.2 Changing of mechanical seal

- 1) Completely drain the pump by using the drain connection. By pumping explosive or toxic media, flush the system with Nitrogen.
- 2) Secure the mechanical seal by putting the mounting plates into the groove of the shaft sleeve [2450]. Loose the grub screws [6814.4], and disconnect the seal piping.



- Drain the seal system, if applicable.
- 3) For disassembly refer to section 6.7.1, *Dismantling of pump*.
 - 4) For assembly refer to section 6.9.1, *Assembly of pump*

8.0 FAULTS: CAUSES AND REMEDIES

FAULT SYMPTOM

Pump overheats and seizes									
↓	Bearings have short life								
↓	Pump vibrates or is noisy								
↓	Mechanical seal has short life								
↓	Mechanical seal leaks excessively								
↓	Pump requires excessive power								
↓	Pump loses prime after starting								
↓	Insufficient pressure developed								
↓	Insufficient capacity delivered								
↓	Pump does not deliver liquid								
↓	PROBABLE CAUSES					POSSIBLE REMEDIES			
	A. SYSTEM TROUBLES								
●					●	Pump not primed.	Check complete filling		
	●		●	●	●	Pump or suction pipe not completely filled with liquid.	Check and complete filling		
●	●			●	●	Suction lift too high or level too low.	Check NPSHa>NPSHr, proper submergence, losses at strainers / fittings		
				●	●	Excessive amount of air or gas in liquid.	Check and purge from pipes		
				●	●	Air or vapour pocket in suction line.	Check suction line design for pockets		
				●	●	Air leaks into suction line.	Check airtight pipe then joints and gaskets		
				●	●	Air leaks into pump through mechanical seal, sleeve joints, casing joint or pipe lugs.	Check airtight assembly then joints and gaskets		
	●				●	Foot valve too small.	Investigate replacing the foot valve		
	●				●	Foot valve partially clogged.	Clean foot valve		
	●			●	●	Inlet of suction pipe insufficiently submerged.	Check cut out system design		
				●	●	Total head of system higher than differential head of pump.	Check discharge head and head losses in discharge pipe at the valve settings. Check		

FAULT SYMPTOM

Pump overheats and seizes												
↓	Bearings have short life											
	↓	Pump vibrates or is noisy										
		↓	Mechanical seal has short life									
			↓	Mechanical seal leaks excessively								
				↓	Pump requires excessive power							
					↓	Pump loses prime after starting						
						↓	Insufficient pressure developed					
							↓	Insufficient capacity delivered				
								↓	Pump does not deliver liquid			
								↓	PROBABLE CAUSES			
									POSSIBLE REMEDIES			
									back pressure is not too high			
					●				Total head of system lower than pump design head.			
					●				Throttle at discharge valve or ask Flowserve if the impeller can be trimmed			
					●				Specific gravity of liquid different from design.			
					●	●	●		Consult Flowserve			
					●	●	●		Viscosity of liquid differs from that for which designed.			
					●				Consult Flowserve			
●	●								Operation at very low capacity.			
	●	●			●				Measure value and check minimum permitted			
									Operation at high capacity.			
									Measure value and check maximum permitted			
									B. MECHANICAL TROUBLES			
●	●	●	●	●	●				Misalignment due to pipe strain.			
		●							Check the flange connections and eliminate strains using elastic couplings or a method permitted			
									Improperly designed foundation.			
	●	●	●	●	●				Check setting of baseplate: tighten, adjust, grout base as required			
●	●	●			●				Shaft bent.			
	●	●							Check shaft runouts within acceptable values			
●	●	●			●				Rotating part rubbing on stationary part internally.			
									Check for signs of this and consult Flowserve if necessary			
●	●	●	●	●					Bearings worn			
									Replace bearings			
					●		●	●	Wearing ring surfaces worn.			
							●	●	Replace worn wear ring/ surfaces			
								●	●	Impeller damaged or eroded.		
									Replace impeller and check reason			
					●				Leakage under sleeve due to joint failure.			
									Replace joint and check for damage			
					●	●	●		Mechanical seal improperly installed.			
									Check alignment of faces or damaged parts and assembly method used			
					●	●	●		Incorrect type of mechanical seal for operating conditions.			
									Consult Flowserve			
●	●	●	●	●					Shaft running off center because of worn bearings or misalignment.			
									Check misalignment and correct if necessary. If alignment satisfactory check bearings for excessive wear			
●	●	●	●	●					Impeller out of balance resulting in vibration.			
									Check and consult Flowserve			
					●	●	●		Abrasive solids in liquid pumped.			
									Check and consult Flowserve			
					●	●			Mechanical seal was run dry.			
									Check mechanical seal condition and source of dry running and repair			
					●	●			Internal misalignment due to improper repairs causing impeller to rub.			
									Check method of assembly, possible damage or state of cleanliness during assembly			
●	●	●							Excessive thrust caused by a mechanical failure inside the pump.			
									Check wear condition of Impeller, its clearances and liquid passages			
	●	●							Excessive grease in ball bearings.			
									Check method of regreasing			
	●	●							Lack of lubrication for bearings.			
									Check hours run since last change of lubricant, the schedule and its basis			
	●	●							Improper installation of bearings			
									Check method of assembly, possible damage or state of cleanliness during assembly and type of bearing used			
	●	●							Damaged bearings due to contamination.			
									Check contamination source and replace			

FAULT SYMPTOM

Pump overheats and seizes											
↓	Bearings have short life										
↓	Pump vibrates or is noisy										
↓	Mechanical seal has short life										
↓	Mechanical seal leaks excessively										
↓	Pump requires excessive power										
↓	Pump loses prime after starting										
↓	Insufficient pressure developed										
↓	Insufficient capacity delivered										
↓	Pump does not deliver liquid										
↓	PROBABLE CAUSES								POSSIBLE REMEDIES		
									damaged bearings		
									C. ELECTRICAL TROUBLES		
•	•								Wrong direction of rotation.		
•	•								Motor running too slow,		
									Reverse 2 phases on motor terminal box		
									Check motor terminal box connections		

9.0 CERTIFICATION

Certificates determined from the contract requirements are provided with these instructions where applicable. Examples are certificates for CE marking, ATEX marking etc. If required, copies of other certificates sent separately to the Purchaser should be obtained from the Purchaser for retention with these User Instructions.

10.0 OTHER RELEVANT DOCUMENTATION AND MANUALS

10.1 Supplementary user instructions

Supplementary instructions determined from the contract requirements for inclusion into user Instructions such as for a driver, instrumentation, controller, sub-driver, seals, sealant system, mounting

component etc are included in the Data Book. If further copies of these are required they should be obtained from the supplier for retention with these user instructions.

Where any pre-printed set of user instructions are used, and satisfactory quality can be maintained only by avoiding copying these, they are included at the end of these user instructions such as within a standard clear polymer software protection envelope.

10.2 Change notes

If any changes, agreed with Flowserve, are made to the product after its supply, a record of the details should be maintained with these User Instructions.

10.3 Additional sources of information

Reference 1:

NPSH for Rotordynamic Pumps: a reference guide, Europump Guide No. 1, Europump & World Pumps, Elsevier Science, United Kingdom, 1999.

Reference 2:

Pump Handbook, 2nd edition, Igor J. Karassik et al, McGraw-Hill Inc., New York, 1993.

Reference 3:

ANSI/HI 1.1-1.5

Centrifugal Pumps - Nomenclature, Definitions, Application and Operation.

Reference 4:

ANSI B31.3 - Process Piping.

10.4 Abbreviations

Quantity	ISO unit	ISO unit abbreviation	Multiplication Factor ¹	US unit	US unit Abbreviation
Area	square meter square centimeter	m ² cm ²	10.764 0.155	square feet square inch	ft ² in. ²
Capacity or Flow rate	Cubic meter/hour	m ³ /h	4.4033	US Gallons/minute	US gpm
Force	Newton	N	0.2248	Pound force	lbf
Head	meter	m	3.28084	feet	ft
Heat Energy	kilo joule	kJ	0.9478	British thermal unit	Btu
Length	meter millimeter micrometer	m mm µm	3.28084 0.03937 0.00003937	feet inch inch	ft in. in.
Mass	kilogram gram	kg g	2.20462 0.035274	pounds ounces	lb. oz.
Moment of Inertia	kilogram square meter	kg.m ²	23.73	pounds square feet	lb.ft ²
Noise ⁴	decibel	dBA			
Power	kilowatt	kW	1.34102	horsepower	hp
Pressure ²	bar	bar	14.5	pounds/in. ²	psi
Rotational Speed	revs per minute	r/min			
Stress	Newton/square millimetre	N/mm ²	145.0	pounds/in. ²	psi
Temperature	degrees Celsius	°C	(1.8 x °C) + 32	degrees Fahrenheit	°F
Torque	Newton meter	Nm	0.7376	pound.feet	lbf.ft
Unbalance	gram millimeter	g.mm	0.001389	ounce-inch	oz-in.
Vibration ³	millimetre/second	mm/s	0.03937	inches/second	in./sec
Velocity	meter/second millimeter/second	m/s mm/s	3.28084 0.03937	feet/second inches/second	ft/sec in./sec
Viscosity	square millimetre/second or centiStoke	cSt			
Volume	cubic meter liter	m ³ l	264.2 33.81	US Gallons fluid ounce	US gal. Fl.oz.

¹ multiply the ISO unit by the multiplication factor to obtain US units

² where pressure is not stated to be absolute it is gauge

³ where not stated to be peak it is r.m.s.

⁴ sound pressure level LpA, re 1m - 20microPa, or sound power level LwA re 1 pW when sound power is applicable

AFTERMARKET DIRECTORY

OUR ADDRESS

Flowserve (Austria) GmbH
 Industriestraße B/6
 A-2345 Brunn/Geb., AUSTRIA

Tel: +43 / 2236 / 31530
 Fax: +43 / 2236 / 31940
 Mail: FPD-Brunn@flowserve.com

IF YOU NEED ANY INFORMATIONS ON PRICES, QUOTATIONS FOR PARTS, FIELD SERVICE, REPAIRS... PLEASE CONTACT DIRECTLY OUR SPECIALISTS BY DIALING OUR PHONE NUMBER AND HIS EXTENSION

MANAGER	EXT. 297
PARTS QUOTATIONS	EXT. 236
PARTS ORDER HANDLING	EXT. 237
FIELD SERVICE / REPAIRS	EXT. 205
SECRETARY	EXT. 232
EXPORT / INVOICING	EXT. 238

MESSAGES CAN BE LEFT ALSO ON OUR ANSWERING MACHINE

IMPORTANT NOTES:

PLEASE NOTE, THAT WARRANTY EXPIRES:

- USE OF NON GENUINE FLOWSERVE AUSTRIA PARTS FOR MAINTENANCE AND REPAIRS
- NO USE OF OUR SERVICE PERSONAL IN CASE OF REPAIRS DURING WARRANTY PERIOD

RECOMMENDATION:

- STARTUP AND COMMISSION SERVICE DIAL: EXT 205
- PLEASE ASK FOR OUR SPECIAL RATES
- PLEASE ALSO ASK OUR SERVICE PERSONAL ABOUT REPAIRING AND SERVICING YOUR PUMPS AFTER THE WARRANTY PERIOD

Please quote your service:

Name of Company:
 Contact person:.....
 Telephone:
 Fax:
 e-mail:
 Country:

Pumpdata:
 Type:
 Serialno.:

Customer Service Fax: +43-2236-31940

Your Flowserve factory contacts:

Flowserve (Austria) GmbH
Industriestraße B6
2345 Brunn am Gebirge
Austria

Telefon: +43 2236 31530
Fax: +43 2236 377 540
Service & Repair Fax: +43 2236 31582
E.mail: FPD-Brunn@flowserve.com

**FLOWSERVE REGIONAL
SALES OFFICES:****USA and Canada**

Flowserve Corporation
5215 North O'Connor Blvd.,
Suite 2300
Irving, Texas 75039-5421 USA
Telephone 1 972 443 6500
Fax 1 972 443 6800

Europe, Middle East, Africa

Worthing S.P.A.
Flowserve Corporation
Via Rossini 90/92
20033 Desio (Milan) Italy
Telephone 39 0362 6121
Fax 39 0362 303396

Latin America and Caribbean

Flowserve Corporation
6840 Wynnwood Lane
Houston, Texas 77008 USA
Telephone 1 713 803 4434
Fax 1 713 803 4497

Asia Pacific

Flowserve Pte. Ltd
10 Tuas Loop
Singapore 637345 Singapore
Telephone 65 67710600
Fax 65 6779 4607