

사용설명서 Operating Instructions

CRP-JH10 Fuzzy Series

1.8L(2~10Persons) / 1.8L(2~10人份)

CUCKOO
always new

happiness

NO.1 CUCKOO

CUCKOO IH PRESSURE JAR COOKER



design

Thank you very much for purchasing "CUCKOO"
IH PRESSURE JAR COOKER

Read the following instruction manual before use. Save this instruction manual for future reference. This manual will be useful if you have any questions or have problems operating the rice cooker.

저희 쿠쿠 IH 압력밥솥을 애용해 주셔서
대단히 감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오.
사용 중에 모르는 사항이 있을 때나 기능이 제대로
발휘되지 않을 때 많은 도움이 될 것입니다.

CUCKOO ELECTRONICS CO.,LTD.

CONTENTS

CONTENTS

BEFORE USING

Important safeguards	3
Specifications	4
Safety precautions	5~6
Name of each part	11
How to clean	12~13
Function operating part	14

WHEN USING

How to set or cancel voice guide function	14
How to set current time / Night voice volume Setting	15
Before cooking rice	16
How to cook	17
My mode (CUCKOO Customized taste function)	18
How to use "GABA Rice (BROWN Rice)"	19
How to Cook Supergrains	20
How to Cook Low/High Press Steam	21
How to Use Pressure Check	22
How to use Preset / Preset Reheating Function	23~24
For the best taste of rice	25~26
How to use power save/Energy Eye function	28
How to use power save screen light/lock button/ Remaining cooking time display moden	29

BEFORE ASKING FOR SERVICE

Check before asking for service	30~32
---------------------------------	-------

COOKING GUIDE

Recipe	33~34
--------	-------

目录

使用前

Important safeguards	3
产品规格	4
安全警告	9~10
产品部件名称	59
产品清洁方法	60~61
功能操作部的名称及作用	62

使用时

功能操作部的名称及作用/语音音量调节功能	62
设置现在时间/夜间语音音量设置功能	63
煮饭前准备事项	64
煮饭方法	65
调节饭味功能使用方法 / 调节煮饭功能使用方法	66
糙米发芽煮饭方法	67
超级谷物使用方法	68
低压蒸/高压蒸使用方法	69
压力检测使用方法	70
预约煮饭方法	71
预约再加热方法	71
预约煮饭时注意事项	72
保温/再加热方法	73~74

목 차

사용하기전에

Important safeguards	3
제품규격	4
안전상의 경고	7~8
각 부분의 이름	35
제품 손질 방법	36~37
기능 조작부의 이름과 역할	38

사용할 때

음성 안내 기능의 설정과 해제	38
현재시각의 설정 / 야간음성 볼륨 설정 기능	39
취사 전 준비사항	40
취사는 이렇게 하십시오	41
쿠쿠 맞춤 밥맛 / 쿠쿠 맞춤 취사 기능	42
현미발아는 이렇게 하십시오	43
슈퍼곡물은 이렇게 하십시오	44
저압찜/고압찜은 이렇게 하십시오	45
압력체크는 이렇게 하십시오	46
예약 취사 / 예약 재가열은 이렇게 하십시오	47~48
밥을 맛있게 보온하려면	49~51
절전기능 / 에너지 아이 기능	52
화면조명 절전기능/버튼잠금기능/ 취사 잔여시간 표시기능은 이렇게 하십시오	53

고장신고 전에

고장신고 전에 확인 하십시오	54~56
-----------------	-------

요리안내

요리안내	57~58
------	-------

使用时

如何做美味可口的米饭	75
省电功能 /ENERGY EYE 功能	76
画面亮度省电功能/按键锁定功能 /煮饭剩余时间显示功能使用方法	77

故障咨询前

常见故障及处理办法	78~80
-----------	-------

料理指南

料理指南	81~82
------	-------

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure Cooker Body in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
5. Unplug cord from outlet when not in use and before cleaning.
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. Fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury.
Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods.
These foods tend to foam, froth, and sputter, and may block the pressure releasing device
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced.
See "Operating Instructions."
22. Do not use this pressure cooker to fry in oil.
23. the ducts in the pressure regulator allowing the escape of steam should be checked regularly to ensure that they are not blocked.
24. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
25. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use.
Allow the unit to cool down completely first.

This appliance is intended to be used in household and similar applications such as :

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

HOW TO USE EXTENSION CORD

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- B. Extension cord should be used properly.
- C. Extension cord usage for the rice cooker:
 - (1) The correct rated voltage should be used for the rice cooker.
 - (2) If the appliance is set on the ground, the extension cord should also be set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

SPECIFICATIONS / 제품규격 / 产品规格

Model Name(모델명)		CRP-JH10 Fuzzy Series
Power Supply(전원)		AC120V, 60Hz
Power Consumption(소비전력)		1305W
Cooking Capacity (취사용량)	GLUTIN. RICE(백미)	0.36~1.8L (2~10cups)
	HIGH HEAT GLUTIN. RICE(백미고화력)	
	SUPER GRAIN(슈퍼곡물)	0.36~1.44L (2~8cups)
	MIXED RICE(잡곡)	
	HIGH HEAT MIXED RICE(잡곡고화력)	
	TURBO GLUTIN. RICE(백미쾌속)	0.36~1.08L (2~6cups)
	TURBO MIXED RICE(잡곡쾌속)	
	GABA RICE(현미발아)	
	BROWN RICE(현미)	
	HIGH HEAT BROWN RICE(현미고화력)	
	LOW PRESS GLUTIN.(백미저압)	
	NU RUNG Ji(누룽지)	0.36~0.72L (2~4cups)
	THICK PORRIDGE(된죽)	0.18~0.36L(1~2cups)
TIN PORRIDGE(묵은죽)	0.09~0.27L(0.5~1.5cups)	
Power Cord Length(전원 코드 길이)		1.2m
Pressure(사용압력)		98.0 kPa(1.0 kgf/cm ²)
Weight(중량)		9.9kg
Dimension(치수)	Width(폭)	30.5 cm
	Length(길이)	42.3cm
	Height(높이)	29.0cm



SAFETY PRECAUTIONS

- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- 'Warning' and 'Caution' are different as follows.

Warning This means that the action it describes may result in death or severe injury.

Caution This means that the action it describes may result in injury or property damage.

- This sign is intended to remind and alert that something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.

- Indicates a prohibition
- Indicates an instruction



Warning



Do not

Do not cover the automatic steam outlet or pressure weight with your hand or face.

- It can cause burns.
- Especially be careful to keep it out of children's reach.

Do not use the cooker near hot things such as stove, gas stove or direct ray of light.

- It can cause an electric shock, fire, deformation, malfunction, or discoloration. Please check the power cord and plug frequently.

Do not alter, reassemble, disassemble or repair.

- It can cause fire, electric shock or injury.
- For repair, contact dealer or the service center.

Use a single socket with the rated current above 15A.

- Using several lines in one socket can cause overheating or fire. Please check the power cord and plug frequently.
- Use an extension cord with the rated current above 15A.

Please pay careful attention against water and chemicals

- It can cause an electric shock or fire.

Do not use a rice cooker at a place where dust is trapped or chemical material is located.

- Do not use any combustible gas or flammable materials nearby a product.
- It can cause explosion or fire.

Do not use damaged power cord, plug, or loose socket.

- Please check the power cord frequently for damage.
- Serious damage can cause electric shock or fire.
- If the plug is damaged, contact the dealer or a service center.

Do not clean the product with water or pour water in the product.

- It can cause an electric shock or fire.
- If it contacts water, please separate power cord and contact dealer and service center.

Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.

- It can cause deformation or a breakdown.
- It can cause an explosion by pressure.

Do not use pots that are not designed for the cooker. Do not use abnormal pot and do not use without the inner pot.

- It can cause an electric shock or fire.

Do not bend, tie, or pull the power cord by force.

- It can cause an electric shock or short circuit resulting in fire. Please check the power cord and plug frequently.

Do not use it without the inner pot.

- It can cause electric shock or malfunction.
- Do not pour rice or water without the inner pot.
- If rice or water gets in then do not turn the product over or shake it, please contact the dealer or service center.

Do not turn the Lock/Unlock Handle to "Unlock" while cooking.

- The hot steam or any hot content within the cooker can cause burns.
- After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.

Do not over unplug and plug the power cord over and over.

- It can cause an electric shock or fire.

Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.

- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

Keep the cooker out of reach of children.

- It can cause burns, electric shock or injury.

Don't spray or put any insecticides or chemicals.

- It can cause an electric shock or fire.
- If cockroaches or any insects get inside the cooker, please call a dealer or a service center.

Don't let foreign substances such as needle, cleaning pin, or metal get in or block the in let/out let pipe or gape.

- It can cause an electric shock or fire.
- Do not put a cleaning pin in a gap or a hole of the product except when clearing a steam outlet.

Do not open the LID while in heating and cooking.

- It can cause burns.
- If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam released completely turning the pressure weight over.

Remove a foreign substance on the cord and plug with a clean cloth.

- It can cause fire. Please check the power cord and plug frequently.

Be careful that both the plug and power cord are not to be shocked by animal attack or sharp metal materials.

- Damages by impact can cause an electric shock or fire. Please check the power cord and plug frequently.



SAFETY PRECAUTIONS

! Caution

⊘ Do not

Do not use it on a rice chest or a shelf.

- Do not place the power cord between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- When using on furniture be cautious of steam release. As it can cause damage, fire and and/or electric shock.

Do not press heavy things on the power cord.

- It can cause an electric shock or fire.
- Please check the power cord and plug frequently

Do not change, extend or connect the power cord without the advice of a technical expert.

- It can cause an electric shock or fire.

Clean any dust or external substances off the temperature sensor and inner pot.

- It can cause a system malfunction or fire.

Do not plug or pull out the power cord with wet hands.

- It can cause an electric shock.

Do not move the product by pulling or using the power cord.

- Electric short might cause fire.

Please contact a dealer or service center when there is a strange smell or smoke.

- First pull out the power cord. And contact dealer or the service center.

Do not use over the maximum capacity.

- It can cause overflow or breakdown.
- Do not cook over stated capacity for cooking of chicken soup and congee.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight while and right after the cooking.

Don't use the cooker near a magnetic field.

- It can cause burns or breakdown.

Do not drop or impact the cooker.

- It can cause a safety problem.

Please surely pull out the plug when not in use.

- It can cause electric shocks or fire.
- Use AC 120V only.

Use product on a flat surface. Do not use on a cushion. Please avoid using it on an unstable location prone to falling down.

- It can cause malfunction or a fire. Please check the power cord and plug frequently.

Don't use for various purpose for inner pot. And do not heat up the inner pot on the gas stove.

- It can cause deformation of the inner pot.
- It can cause to spill the inner coating.

Please pull out the plug when not in use.

- It can cause electric shocks or fire.

Please use the cooker for it's intended purpose.

- It can cause malfunction or smell.

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.

- The hot steam or any hot content within the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.

Do not place on rough top or tilted top.

- It can cause burns or breakdowns.
- Be careful to install the power cord to pass without disruption.

Please call customer service if the inner pot coating peels off.

- Inner pot coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.

Do not hold the cooker by the inner pot handle.

- It can cause problems and danger. There are portable handles on the bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.

Always turn the Lock/Unlock Handle to "Lock" when not in use.

- It can cause deformation by remaining pressure.

Wipe off any excessive water on the cooker after cooking.

- It can cause odor and discoloration. Wipe off water that is left behind from dew.

Please contact dealer or service center when either a button of a product or a product itself is not working properly.

In case of a blackout during cooking, steam from a rice cooker will be released automatically. Thus, the quality of rice is lower than normal.

- Please start cooking with an indicated amount of rice and water.
- Water can overflow if the amount of water in a pot exceeds the indicated level of water usage.
- Please start cooking in a status that steam control cap is installed completely.

Please clean the body and other parts after cooking.

- After cooking chicken soup, multi cook dishes, and etc., the smell may be absorbed.
- Clean the oven packing, top heater plate, and inner pot every time you cook any of those.
- It can cause alteration or smell.
- Use dry kitchen cleaner or sponge to clean the inner pot, since rough scrub or metallic ones are abrasive to the coating.
- Depending on the using methods or user's circumstances inner pot coating might rise. Please call the customer service for those cases.
- Please, do not pull out the clean steam vent by force.

Be cautious when steam is being released.

- When the steam is released don't be surprised.
- Please keep the cooker out of reach of children.

If possible, only use warming function when cooking white rice. Other foods are easily discolored.

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.

- If you inflict impact on power cord, it can cause an electric shock or fire.



안전상의 경고

- ‘안전상의 경고’ 는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- ‘안전상의 경고’ 는 ‘경고’ 와 ‘주의’ 의 두가지로 구분되어 있으며 ‘경고’ 와 ‘주의’ 의 의미는 다음과 같습니다.

<p>경고 피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황</p>	<p>! 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다.</p> <p>• 위험 발생을 피하기 위해 주의깊게 읽고 지시에 따라 사용하십시오.</p>
<p>주의 피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황</p>	<p>! 이 기호는 어떤 행위를 ‘금지’ 하는 표시입니다.</p> <p>! 이 기호는 어떤 행위를 ‘지시’ 하는 표시입니다.</p>

경고 (금지)

<p>사용중 압력추 및 자동증기 배출구에는 손과 얼굴을 가까이 하지 마십시오.</p> <ul style="list-style-type: none"> • 화상의 우려가 있습니다. 취사중 나오는 증기는 매우 뜨거우므로 손이나 얼굴을 가까이 하지 마십시오. • 특히 어린이의 접근을 막아 주십시오. 	<p>변형된 내솥이나 전용 내솥이 아닌것은 사용하지 마십시오.</p> <ul style="list-style-type: none"> • 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다. • 내솥을 떨어뜨렸거나 변형된 경우에는 서비스센터로 문의해 주십시오.
<p>제품을 직사광선이 쬐는 곳, 가스레인지, 라이터, 전열기구 등의 가까이에서 사용하지 마십시오.</p> <ul style="list-style-type: none"> • 전기누전, 감전, 변형, 변색 및 화재의 원인이 됩니다. • 전원코드를 열기구 가까이 두지 마십시오. 코드피복이 녹아 화재, 감전의 원인이 됩니다. 수시로 전원코드의 상태를 꼭 확인하십시오. 	<p>내솥 없이 사용을 하지 마십시오.</p> <ul style="list-style-type: none"> • 감전 및 고장의 원인이 됩니다. • 내솥이 없는 상태에서 쌀이나 물을 넣지 마십시오. • 쌀이나 물이 들어갔을 경우에는 제품을 뒤집거나 흔들지 마시고 서비스센터로 꼭 문의 하십시오.
<p>제품을 분해하거나 개조하지 마십시오.</p> <ul style="list-style-type: none"> • 화재 및 감전의 원인이 됩니다. • 서비스기사 이외의 사람이 분해하거나 수리하지 마십시오. 수리 및 고장 상담은 서비스센터로 문의하여 주십시오. 	<p>취사나 요리가 진행중일 때 뚜껑 열림 버튼을 누르거나, 뚜껑 결합 손잡이를 절대 “옴” (열림)으로 돌리지 마십시오.</p> <ul style="list-style-type: none"> • 강제로 열 경우 압력으로 인해 화상 및 폭발의 위험이 있습니다. • 취사나 요리 완료 후 후기가 완전히 배출된 상태에서 뚜껑 결합 손잡이를 작동시키십시오.
<p>반드시 정격 15A 이상의 교류 120V 전용 콘센트에서만 사용해 주시고 한 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오.</p> <ul style="list-style-type: none"> • 여러 제품과 함께 사용하거나, 다른 기구에 사용하면 발열 및 발화, 감전의 원인이 됩니다. 수시로 콘센트 상태를 꼭 확인하십시오. • 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오. • 연장코드도 15A이상의 것을 사용하여 주십시오. 	<p>내솥 없이 분리형 커버, 찜판, 금속성 물질 등을 넣거나, 넣어서 사용하지 마십시오. (특히, 어린이 주의)</p> <ul style="list-style-type: none"> • 감전 및 화재의 원인이 됩니다. <p>어린이 혼자 사용하거나 어린이가 만질 수 있는 장소에 제품을 두지 마십시오.</p> <ul style="list-style-type: none"> • 고열에 화상을 입거나 감전이 될 수 있습니다.
<p>싱크대, 목욕탕 등 제품에 물이 들어 갈 수 있는 곳이나, 눈을 맞을 수 있는 실외에서 사용하지 마십시오.</p> <ul style="list-style-type: none"> • 전기 누전 및 감전의 위험이 있습니다. • 제품에 물이 들어 갔을 경우에는 서비스센터로 문의해 주십시오. 	<p>제품내에 살충제나 화학물질 등을 뿌리거나 투입하지 마십시오.</p> <ul style="list-style-type: none"> • 화재 발생의 우려가 있습니다. • 제품내 바퀴벌레나 벌레 등이 들어갔을 경우는 서비스센터로 문의해 주십시오.
<p>전원코드나 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고, 서비스센터로 문의바랍니다.</p> <ul style="list-style-type: none"> • 제품 사용 중 사용상의 부주의로 전원 코드의 피복이 벗겨지거나 찢힐 경우 화재 및 감전의 원인이 될 수 있으니, 수시로 전원코드와 전원플러그, 콘센트의 상태를 꼭 확인하십시오. • 전원코드나 전원플러그가 파손된 경우에는 위험이 생기지 않도록 하기 위하여 제조자나 그 판매점 또는 유자격 기술자 (서비스 기사)에 의해 코드 교환을 하십시오. • 반드시 지정된 서비스센터에서 수리하시기 바랍니다. 	<p>흙·배기구 또는 틈 사이에 바늘, 청소용 핀, 금속물 등 이물질이 들어가거나 막히지 않도록 하십시오.</p> <ul style="list-style-type: none"> • 감전 및 화재의 원인이 됩니다. • 청소용 핀을 증기배출구 청소외에 제품의 틈새나 구멍에 넣지 마십시오.
<p>제품을 싱크대에 넣고 닦거나 제품 내부에 물을 넣지 마십시오.</p> <ul style="list-style-type: none"> • 전기 누전 및 감전, 화재의 원인이 됩니다. • 제품에 물이 들어간 경우에는 사용을 중지하고 전원플러그를 뽑은 다음 서비스센터로 문의해 주십시오. 	<p>취사나 요리가 진행중일 때 절대로 뚜껑을 열지 마십시오.</p> <ul style="list-style-type: none"> • 취사나 요리가 진행중일 때는 압력에 의해 뚜껑이 열리지 않습니다. • 강제로 열면 화상 및 폭발의 위험이 있습니다. • 취사 또는 요리가 진행 중일때 부득이하게 뚜껑을 열어야 할 경우 취소 버튼을 약 2초간 누른 후 내부압력이 완전히 제거되었는지 확인을 하고 열어 주십시오.
<p>압력추 및 자동증기배출구를 막거나 증기구에 행주나 장식용 덮개, 기타물건을 올린 채 사용하지 마십시오.</p> <ul style="list-style-type: none"> • 압력에 의한 폭발의 위험이 있습니다. • 본체의 변형, 변색 및 고장의 원인이 됩니다. 	<p>전원코드를 무리하게 구부리거나, 묶거나, 잡아당기지 마십시오.</p> <ul style="list-style-type: none"> • 감전이나 쇼트로 인해 화재의 원인이 될 수 있습니다. 수시로 전원코드 상태를 꼭 확인하십시오. <p>전원플러그를 반복하여 뽑다 꽃았다 하지 마십시오.</p> <ul style="list-style-type: none"> • 감전 및 화재의 위험이 있습니다.
<p>전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.</p> <ul style="list-style-type: none"> • 화재의 원인이 됩니다. 수시로 전원 플러그 상태를 꼭 확인하십시오. 	<p>플러그 및 전원 코드부를 동물이 물어 뜯거나 못과 같이 날카로운 금속 물체로부터 충격을 받지 않도록 주의하여 주십시오.</p> <ul style="list-style-type: none"> • 충격으로 인한 파손은 합선, 감전, 화재 등의 원인이 됩니다. 수시로 전원코드와 전원 플러그 상태를 꼭 확인하십시오.



안전상의 경고



주의



(금지)

<p>쌀통 및 다용도 선반 등에 제품을 놓고 사용하지 마십시오.</p> <ul style="list-style-type: none"> 전원코드가 틈새에 눌러져 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오. 취사 또는 요리중 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다. 	<p>사용하지 않을 때는 전원플러그를 콘센트에서 뽑아 주십시오.</p> <ul style="list-style-type: none"> 절연 성능 저하로 인해 감전, 누전, 화재의 원인이 될 수 있습니다.
<p>전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품바닥에 눌러지지 않도록 주의해 주십시오.</p> <ul style="list-style-type: none"> 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오. 	<p>내술을 다른 용도로 사용하거나 불위에 올리지 마십시오.</p> <ul style="list-style-type: none"> 내술의 변형 및 코팅이 벗겨져 제품에 이상이 발생할 수 있습니다. <p>취사나 요리 완료 후 또는 보온시 뚜껑 결합 손잡이가 잘 돌리지 않을 때 강제로 돌리지 마십시오.</p> <ul style="list-style-type: none"> 화상 및 제품손상의 원인이 됩니다. 압력추를 젓혀 증기가 완전히 배출되었는지 확인 후 뚜껑 결합 손잡이를 돌려주십시오. 취사나 요리 완료후 뚜껑을 열때 증기에 의한 화상의 우려가 있으므로 주의하십시오.
<p>전원코드를 임의로 연장하거나 연결하는 등 가공하여 사용하지 마십시오.</p> <ul style="list-style-type: none"> 감전 및 화재의 위험이 있습니다. 	<p>내술 코팅이 벗겨질 경우 서비스센터로 문의해 주십시오.</p> <ul style="list-style-type: none"> 제품을 장기간 사용할 경우 내술 코팅이 벗겨질 수 있습니다. 거친 수세미나 금속성 수세미로 내술을 씻을 경우 코팅이 벗겨질 수 있으니 반드시 주방용 중성세제와 스폰지로 씻어 주십시오. 날카로운 식기류(포크, 숟가락, 젓가락) 등을 내술에 넣은 채 씻을 경우 내술 코팅이 벗겨질 수 있습니다.
<p>온도감지기, 밥솥 내부 및 열판 또는 내술 바깥 부위의 이물질(밥알, 기타음식물) 등은 반드시 제거 후 사용하십시오.</p> <ul style="list-style-type: none"> 제품 사용 전 반드시 이물질 제거 상태 확인 후 사용하십시오. 온도감지를 정확히 못하게 되므로 내술이 가열되어 이상작동 및 화재의 원인이 됩니다. 	<p>뚜껑 결합 손잡이나 내술 손잡이를 잡고 제품을 들어 올리지 마십시오.</p> <ul style="list-style-type: none"> 뚜껑 결합 손잡이나 내술 손잡이를 잡고 들어 올릴 경우 뚜껑이 열릴 우려가 있어 위험합니다. 제품 바닥 좌우측에 있는 홈을 양손으로 들어올려 안전하게 사용하십시오.
<p>전원플러그를 콘센트에서 꽂거나 뺄때는 손의 물기를 반드시 제거한 후 전원플러그를 잡고 꽂거나 빼어 주십시오.</p> <ul style="list-style-type: none"> 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다. 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다. 	<p>전원플러그를 뺐더라도 뚜껑 결합 손잡이를 항상 "움" (잠김)위치로 돌려 주십시오.</p> <ul style="list-style-type: none"> 취사나 요리 완료 후 내술이 뜨겁거나 뜨거운 밥이 남아 있을 경우 전원 플러그를 뺐더라도 뚜껑을 닫고 뚜껑 결합 손잡이를 "움" (잠김)위치로 돌리지 않으면 내부압력에 의해 제품의 변형이나 손상의 원인이 됩니다. 취사, 요리 및 보온 중에도 반드시 뚜껑 결합 손잡이를 "움" (잠김) 위치해 놓고 사용해 주십시오.
<p>제품 이동시 전원코드를 이용하여 들어올리거나 잡아당겨서 이동하지 마십시오.</p> <ul style="list-style-type: none"> 쇼트로 인한 화재의 원인이 될 수 있습니다. 	<p>취사나 요리가 끝나면 뒤에는 반드시 본체에 고인물을 닦아 주십시오.</p> <ul style="list-style-type: none"> 냄새 및 변색의 원인이 됩니다. 본체의 물받이에 고인 물을 닦아 주십시오.
<p>사용 중에 이상한 소리나 냄새 또는 연기가 나면 즉시 전원플러그를 뽑고 내부 압력을 완전히 제거후 서비스센터로 문의해 주십시오.</p>	<p>사용 전 후 버튼이 눌러지지 않거나 작동이 되지 않을 경우 서비스센터로 문의해 주십시오.</p>
<p>최대 용량 이상으로 내용물을 넣고 사용하지 마십시오.</p> <ul style="list-style-type: none"> 밥물 넘침이나 취사 불량 등 고장의 원인이 됩니다. 죽은 지정된 용량 이상은 사용하지 마십시오. 	<p>취사 또는 요리 진행 중 정전이 되면 자동증기 배출 장치가 작동하여 내용물 비산의 우려가 있습니다.</p> <ul style="list-style-type: none"> 정해진 쌀 및 물의 양으로 취사해 주십시오. 특히, 물의 양이 규정보다 많으면 내용물 넘침의 원인이 됩니다. 증기조절캡이 장착된 상태에서 취반을 하십시오.
<p>사용 중이거나 사용직후에는 내술, 내부, 열판 및 압력추 등은 뜨거운 것으로 만지지 마십시오.</p> <ul style="list-style-type: none"> 고열에 의해 화상을 입을 수 있습니다. 압력추가 젓혀져 증기에 의해 화상을 입을 수 있습니다. 	<p>요리 후에는 반드시 청소해 주십시오.</p> <ul style="list-style-type: none"> 닭뿔, 갈비뼈 등의 요리 후 취사 및 보온을 하게되면 밥에 냄새가 배어들 수도 있습니다. 내술뚜껑 세척시 거친 수세미나 금속성 수세미를 사용할 경우 코팅이 벗겨질 수 있으니 반드시 스폰지 또는 물기를 제거한 행주로 닦아주십시오. 36~37쪽을 참조하여 내술, 내술 뚜껑, 패킹 등을 깨끗이 닦아낸 후 사용하십시오. 제품의 사용환경이나 방법에 따라 내술 뚜껑의 코팅이 벗겨질 수 있습니다. 이런 경우 서비스센터로 문의해 주십시오.
<p>뚜껑 위에 자성을 지닌 물체를 올려 놓거나 자성이 강한 물체 근처에서 사용하지 마십시오.</p> <ul style="list-style-type: none"> 제품 고장 및 기능이 정상적으로 작동되지 않을 수 있습니다. 	<p>취사 또는 요리 진행 중 자동증기 배출시 주의하십시오.</p> <ul style="list-style-type: none"> 증기가 고속으로 배출되면서 '취익' 하는 소리가 나므로 눌러지 않도록 주의하십시오. 특히 어린이의 접근을 막아 주십시오. 화상의 원인이 됩니다.
<p>제품에 심한 충격을 주거나 떨어뜨리지 마십시오.</p> <ul style="list-style-type: none"> 제품 고장 및 안전상의 문제가 발생할 수 있습니다. 	<p>현밥 이외의 식품에는 변질하기 쉬운 것(팥밥,훈식,크로켓,그라탕 등)이 있으므로 가능한해 보온하지 마십시오.</p>
<p>교류 120V 이외에는 사용하지 마십시오.</p> <ul style="list-style-type: none"> 감전, 화재의 원인이 될 수 있습니다. 제품이 정상적으로 작동을 하지 않습니다. 	
<p>제품 밑에 깔판, 방석, 전기장판 등을 놓고 사용하지 마십시오.</p> <ul style="list-style-type: none"> 화재 및 변형의 원인이 됩니다. 수시로 제품 상태를 꼭 확인하십시오. 	
<p>취사, 보온, 지정된 메뉴 이외의 식혜, 미역국, 카레, 기름으로 튀기는 요리 등 다른 용도로 사용하지 마십시오.</p> <ul style="list-style-type: none"> 고장 및 냄새의 원인이 됩니다. 	
<p>경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.</p> <ul style="list-style-type: none"> 화상 및 제품 고장의 원인이 됩니다. 전원코드에 손이나 발, 기타 물체가 걸려 제품이 떨어지지 않도록 주의 하십시오. 	
<p>전원플러그를 뽑을때는 전원코드를 잡지마시고 꼭 전원플러그를 잡고 뽑아주십시오.</p> <ul style="list-style-type: none"> 전원코드에 충격이 가면 감전 및 화재의 원인이 될 수 있습니다. 	

安全警告



- “安全警告”是为了预防事故的发生，请正确使用产品，并遵守安全警告事项。
- “安全警告”有“警告”和“注意”两种区分，“警告”和“注意”有下列意义。

 警告	未遵守警告事项时，可能会发生严重人身伤害。	 • 此标记是指在特定条件下，对可能发生危险事故的符号。
 注意	未遵守注意事项时，可能会发生严重人身伤害。	 • 此符号表示“禁止”某种行为。
		 • 此符号表示“指示”某种行为。

警告 (禁止)

使用中切勿触摸或把脸靠近压力锥和蒸汽排出孔。 <ul style="list-style-type: none">会导致烫伤，特别注意勿让儿童靠近。高温蒸汽很烫，切勿将手或脸直接靠近。	切勿使用变形内锅或其他非专用内锅。 <ul style="list-style-type: none">内锅发热时会产生异常现象或引起火灾。若不小心碰撞内锅或内锅变形时，请拨打服务热线。
本产品要避免阳光直射，谨慎靠近煤气炉、电热器具等。 <ul style="list-style-type: none">有漏电、触电的危险及有变形或变色的可能。谨慎电源线靠近热器具，避免电源线融化造成火灾或触电的危险。	严禁未放内锅使用。 <ul style="list-style-type: none">触电及故障的可能。严禁无内锅时放米和水。机体内进入水或米粒时，请拨打服务热线。
严禁私自拆卸或改装。 <ul style="list-style-type: none">发生火灾或触电的可能。除专业修理人员外，请勿自行拆卸或改装。修理时请先与指定维修中心联系。	产品工作中严禁打开锅盖。 <ul style="list-style-type: none">产品工作时，因内部压力锅盖不易打开，若强行打开会发生烫伤及爆炸。煮饭结束，等蒸汽完全排除后再打开。
必须使用额定电流15A以上 120V 交流电专用插座，不宜与其他电器共用一个插座。 <ul style="list-style-type: none">会产生发热、火灾、触电的可能。电源插头上有异物时，请先清洁干净后使用。插座的延长线必须使用额定电流15A以上的。	无内锅的情况下请勿将分离式内锅盖，蒸盘，金属物质等其它物质放进产。品里使用。（特别注意儿童） <ul style="list-style-type: none">发生火灾或触电的可能。
严禁在有水的地方或户外使用。 <ul style="list-style-type: none">有漏电或触电的危险。如水渗入机体内部时，请拨打服务热线咨询。	本产品严禁儿童独自使用；请放置在儿童触及不到的地方。 <ul style="list-style-type: none">烫伤或触电的可能。
严禁在灰尘多或有化学物品的地方使用。 <ul style="list-style-type: none">严禁在产品周围使用可燃性气体或易燃物品。发生火灾或爆炸的可能。	产品内请勿喷洒或投入化学物品。 <ul style="list-style-type: none">烫伤或火灾的可能。当产品内进入蟑螂或其他昆虫时，请咨询代理店或服务中心。
电源线破损或插头松动时，请停止使用并及时更换。 <ul style="list-style-type: none">产品使用中，因使用不当电源线表皮有破损时会产生触电或发生火灾，请及时确认电源线及插座的完整状态。电源线有破损时，为避免发生危险，请停止使用并与产品销售店或指定维修中心联系更换。维修中心联系更换。	严禁用针或金属物质堵塞排气口或产品缝隙。 <ul style="list-style-type: none">烫伤或触电的可能。清洁用针除了清理蒸汽排出孔外，不得插入产品缝隙或其它孔里。
严禁用水冲洗机体或避免内部进水。 <ul style="list-style-type: none">会有漏电、触电、火灾的可能。产品内渗入水时，切断电源，停止使用，请拨打服务热线咨询。	产品工作中，严禁按开盖按钮及将结合手柄转至“开启”位置。 <ul style="list-style-type: none">产品工作中，因内部压力锅盖不易打开，若强行开盖会发生烫伤或爆炸。产品工作中，不得已打开锅盖时，按住取消键2秒以上取消已选的功能，推动压力锥等蒸汽完全排出后再打开锅盖。
严禁将抹布等异物放在压力锥和蒸汽排出口上。 <ul style="list-style-type: none">变形或变色的可能。产品故障及火灾的可能。	电源线不宜强行弯曲、捆绑或拉伸。 <ul style="list-style-type: none">触电或因短路发生火灾的可能。
请勿将电源线插头反复插拔。 <ul style="list-style-type: none">发生火灾或触电的可能。	请勿强行拽下防堵塞装置。 <ul style="list-style-type: none">卸下时有堵塞蒸汽口的危险。
	使用前请确认防堵塞装置的安装状态及是否粘有异物。 <ul style="list-style-type: none">防堵塞装置如有脱落或丢失时，请拨打售后服务热线。使用前后要始终保持清洁。
	电插头有异物时，请用干抹布擦净后使用。 <ul style="list-style-type: none">短路或发生火灾的可能。



安全警告

! 注意

注意不要让动物把插头及电源线咬断或避免受到锋利金属物体的冲击。

- 短路，触电或发生火灾的可能。

禁止将产品放在米桶及多层柜上使用。

- 电源线夹在缝隙里，可能会引起触电或发生火灾。
- 在米桶及多层柜上使用可能会导致产品损坏或引起火灾。

请勿将重物放在电源线上或避免被压到产品底部。

- 有可能会发生火灾或触电，请随时确认电源线放置状态。

勿将电源线进行加工或随意连接延长线使用。

- 触电或发生火灾的可能。

使用时如有异常响声或有异味时，请立刻切断电源，推开压力锥，待蒸汽完全排出后，咨询代理店或售后服务中心。

使用时不要超出限定容量。

- 米汤溢出或发生故障的可能。

使用中或使用后锅体温度很高，切勿触摸内锅、加热盘、产品内部及压力锥。

- 烫伤的可能。
- 产品工作中若压力锥倾斜，会被喷出的蒸汽烫伤。

切勿靠近磁性强的物体。

- 可能会产生安全上的问题。
- 发生故障的可能。

勿使产品跌落或受冲击。

- 会发生故障及安全性问题。

温度感应器、电热盘及内锅底部要保持清洁。

- 温度感应器受损，可能会发生故障及火灾。

擦干手，再插、拔插头。

- 用湿手插、拔插头时会发生触电。
- 电源插头拔出时，切勿直接拽电源线拔出。

移动产品时，请勿拽电源线移动产品。

- 短路或发生火灾的可能。

本产品只限使用AC120V 交流电源。

- 触电或发生火灾的可能。
- 产品不能正常动作。

本产品要放置于较阔的水平台面上，切勿放在坐垫或电热毯上使用。

- 变形或发生火灾的可能。

本产品只适用于做饭、保温及指定用途，严禁他用。

- 会产生异味或变色。

不使用时，请拔掉插头。

- 以避免发生触电及火灾。

除白米饭外容易变质的（杂谷，豆类饭，油炸丸子等）尽量不要进行保温。

⊘ (指示)

勿将内锅放在火源上或用于其他用途。

- 内锅变形或涂层会脱落。

煮饭完成后，结合手柄不易拧开时，不要强行拧开。

- 烫伤或产品受损的可能。
- 推动压力锥，等蒸汽完全排除后再打开。
- 煮饭完成后打开锅盖时，注意避免被蒸汽烫伤。

本产品不宜在倾斜或凹凸面上使用。

- 烫伤或发生故障的可能。
- 产品工作中，切勿碰电源线。

内锅涂层脱落时，请与售后服务中心联系。

- 长时间使用产品时，内锅涂层因老化有轻微脱落，请及时拨打服务热线进行更换。
- 用硬刷子，钢丝球清洗内锅时，涂层会脱落，要用中性洗涤剂 and 海绵清洗。

请勿用锅盖结合手柄或内锅把手移动产品。

- 会产生危险，请利用产品底部的移动凹槽移动产品。

即使拔掉电源插头，结合手柄仍应置于“⊘”（关闭）位置。

- 煮饭结束后，内锅有余热或内部有热饭时，即使拔掉电源仍要将锅盖结合手柄转至“⊘”（关闭）位置。否则因内部压力产品会发生变形或损伤。
- 煮饭或保温时，必须把结合手柄转至“⊘”（关闭）位置。

煮饭完成后，请擦净积水部的水。

- 会产生异味或变色。
- 请擦去产品积水部的水。

使用前，按键无法按动或产品不能动作时，请拨打售后服务电话咨询。

煮饭或料理中当发生停电时，自动蒸汽排出装置会自动启动，可能会有汤汁溢出现象。

- 请在安装蒸汽帽的状态下进行煮饭。
- 添加的水量超出规定容量时，会有溢出现象，请按使用说明书的煮饭方法正确煮饭。

使用完毕后产品要清洁干净。

- 料理结束后，未清理干净时，会出现异味。
- 使用硬刷子，钢丝球清洗内锅时，内锅涂层会脱落，请用中性洗涤剂和海绵清洗。
- 请参照60~61页的清洁方法，清洗产品后使用。
- 根据产品的使用环境和方法的不同，内锅涂层会有脱落现象。

蒸汽自动排出时，请注意。

- 蒸汽高速排出时，伴有较大的排气声，注意不要受到惊吓。
- 严禁儿童靠近，会烫伤。

拔插头时，必须抓住插头拔出，不要强行拽拔电源线拔出。

- 触电，漏电或发生火灾的可能。

NAME OF EACH PART



Name of each part

Soft Steam Cap

Pressure Weight

Always keep it horizontal. It stabilizes steam inside of the oven. Pressure weight is twisted, it release steam.

Automatic Steam Exhaust Outlet (Solenoid valve)

When finished cooking or during warming, steam is automatically released.

Lock/Unlock Handle (Set the handle to lock when cooking or warming the rice)

The handle has to turn to 'Lock' for operation.

Lid Clamp

Turn handle to 'Unlock', and then press Clamp knob to open.


Control Panel

Standby Power Blocking Switch

When the power is not supplied after the power cable is connected, check if the switch is (ON).

-Enabled: (ON) -Disabled: (OFF)
(The standby power is blocked, saving the energy)

※ In case of a blackout during cooking, steam from a rice cooker will be released automatically.

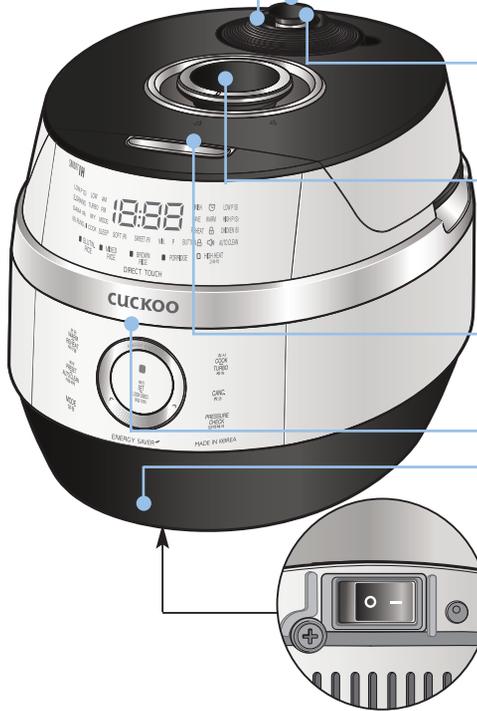

Name of each part

Pressure Packing

Lid Assy

DET. cover

Pressure Control Plate

Control Plate Packing Cover

Control Plate Packing

Pressure Sensor

DET. cover Separator

DET. cover Holder


Drain Dish

Empty the water out of a dew dish after cooking or keep warming, Leaving the water in the dew dish results in bad smell.

Power Plug

Power Cord


Temperature Sensor

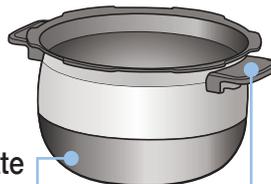

Pot Handle

Inner Pot(Oven)

Place the inner pot into the body property.

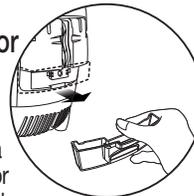

Accessories



Manual & Cooking Guide



Rice Scoop



Rice Measuring Cup



Steam Plate



Cleaning Pin
(Attached on the bottom of the unit)




HOW TO CLEAN

- To prevent foul odor clean the lid assy after the rice cooker has cooled and the rice cooker is unplugged.
- Clean the body of rice cooker and the cover with a dry towel. Do not use benzene or thinner to clean the rice cooker. The layer of starch, which is the residue from rice cooking, may appear on the detachable cover or inside of rice cooker. This layer does not cause any health risk.
- Do not put materials like screws into holes of detachable cover. Check the back cover and front cover.

Detachable cover & Pressure packing

After cleaning detachable cover, put it back on the lid

Unless detachable cover is mounted, preset cooking cannot be done. (Alarm may sound while keeping warm.)

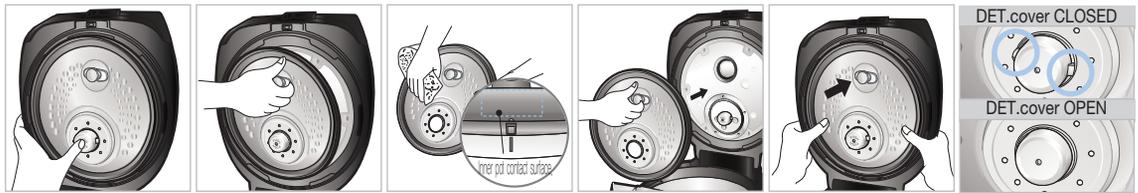

① Hold the handle of the Detachable Cover, press the center of the button, and pull the handle in the direction of the arrow, and it can be easily separated from the product to be cleaned.

※ When you separate or mount the Detachable Cover, it could easily drop, so be sure to hold the handle.


※ If you don't press the center of the button, the operation may not be carried out, so be sure to press the center of the button.

② Wash the cover with cooking purposes neutral detergent and sponge frequently, and wipe off moisture with handkerchief.

※ Please keep clean the edge of rubber packing, then the rice cooker last's longer.

③ When you mount the Detachable Cover, hold the handle of the Detachable Cover, attach it to the Cover, and push the bottom end unit of the Detachable Cover until you hear a clicking sound.

Please fir a rubber packing into the cover plate completely after washing or replacing the rubber packing.

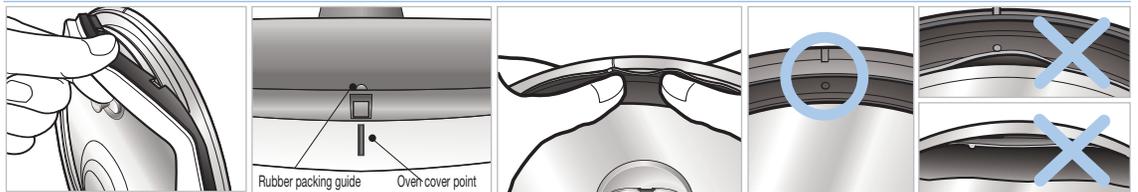

① To separate the rubber packing, please pull it out from the cover plate as shown in the picture.


② To put back the rubber packing, please fit it to each of 6 projections and holes as shown in the picture.

③ After fitting 6 projections to the holes, please press the rubber packing around the corner completely as shown in the picture.

④ Please check that the rubber packing fits into the cover plate completely. If not, steam may be released from the crack between the packing and the plate.



Make sure to clean the clean steam went after/before use. Do not try to pull out the clean steam went and safety packing, clean it with care. Make sure the clean steam went and safety packing are installed completely after/before use. If the steam vent is detached, or not attached completely, please contact customer service.

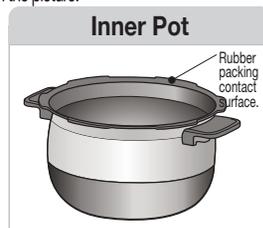

Wipe the water on the outside and bottom of the Inner Pot. A rough sponge, a brush or an abrasive can cause scratches on the coating. Use a dishwashing liquid and a soft cloth or a sponge.


※ Keeping the contact area of the Inner Pot with the pressure packing always clean, increases the product's durability.



Wipe the main unit with a wet cloth that has been extracted out of water

※ Caution

Do not clean the inner pot with any sharp cutlery inside (fork, spoon, chopsticks, etc.).
- The coating of the inner pot may peel off.

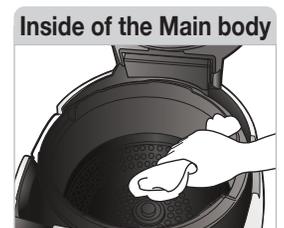

Make sure to clean the steam control went before and after use.

Detachable cover & Pressure packing

1. Handle must be turned to “”(Lock) during Cooking.

When the lamp is turned on it means that it is ready to cook.

2. After cooking, turn the handle from “”(Lock) to “”(Unlock) turn the handle to open. If there is unreleased steam in the Inner pot it might be hard to turn the handle. In this case twist the pressure weight and let the excess steam out. Do not open by force.

• Handle must be turned to “”(Unlock) when opening and closing.

• If the lamp does not turn on, it would not operate the “COOK/TURBO” button. Make sure the handle is located in “”(Lock).






HOW TO CLEAN

How to clean the pressure weight nozzle.

If the valve of the pressure part is clogged, puncture it with the cleaning pin

- The valve hole of the pressure weight allows steam to release. Check regularly to ensure that it not blocked. If the valve hole of the pressure weight is blocked, the hot steam and hot content within the cooker can cause serious injury.
- ※ Do not use the cleaning pin for any other use except to clean the valve hole of the pressure weight.

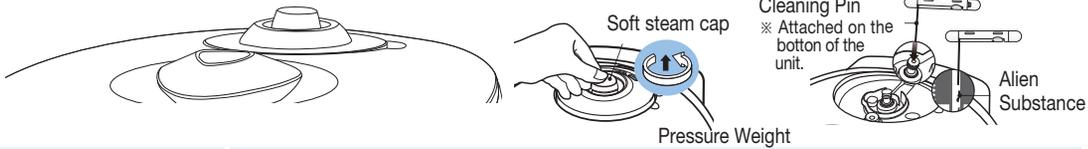

How to disassemble the pressure weight

- ▶ Under the Lock/Unlock handle is locked (located on "Lock") turn the pressure weight counter-clockwise while pulling it up, and pull it out.
- ▶ Puncture the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.


How to use cleaning pin and brush kit



- 1 Separate cleaning pin Attached on the bottom of the unit from main body as shown in picture.
- 2 Separate cover as the arrow points.
- 3 Use brush kit. You can easily clean a drain ditch and tough pat to clean.
- 4 When using cleaning pin, pull out cleaning pin and make it meet at right angles.
- 5 Only use for the valve hole of the pressure weight.


How to clean the soft steam cap

※ Do not touch the surface of the soft steam cap right after cooking. You can get burned.

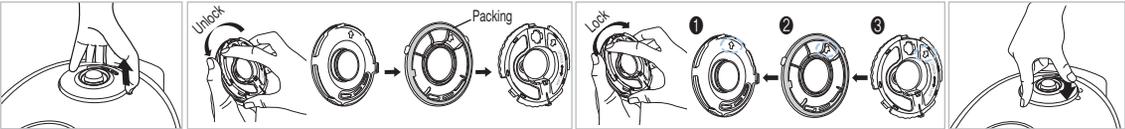

- 1 Detach the soft steam cap like the picture.
- 2 Press the hook in the back, and follow the arrow to detach and clean. Make sure you clean frequently with a sponge or a neutral detergent.
- 3 Assemble the went so that it fits into the groove perfectly.
- 4 After you attach the soft steam cap to fit into the groove, press "A" part firmly to assemble the soft steam cap into the product.

How to clean dew dish

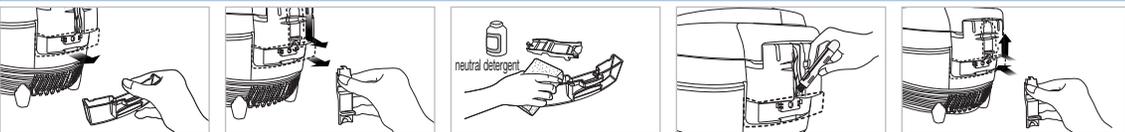

- 1 Separate dew dish
- 2 Separate the drain ditch cap by pushing it down.
- 3 Clean the drain ditch cap and dew dish with a neutral detergent.
- 4 Clean the drain ditch cap with brush
- 5 Securely put in the dew dish after cleaning.

When lid does not close perfectly

Do not try to close the lid by force. It can cause problems.



1. Check to make sure the inner pot is place correctly inside the main body.
2. To close the lid turn the handle to unlock, in shown in the picture on the right.




3. If there is excess steam inside the inner pot it might be difficult to lock the handle. Twist the pressure weight and allow the excess steam to release. Then try to turn the handle again.



FUNCTION OPERATING PART/ HOW TO SET OR CANCEL VOICE GUIDE FUNCTION

FUNCTION OPERATING PART

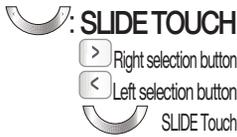

This function is used to select menu or change the time.
Used when changing the function selected by setting button.

Energy Eye
Refer to page 28

WARM/REHEAT Button
Used to warm or reheat.
(Refer to page 25)

PRESET/AUTO CLEAN Button
Used to preset Preferred cooking time
(Refer to page 23-24)
When you use automatic steam cleaning function

MODE Button
This function is used to customize Individual (Refer to page 18)
Cooking preference,
time-setting (Refer to page 15),
voice volume setting (Refer to page 14),
keep warm temperature setting
(Refer to page 25), and power saving
mode (Refer to page 28).



Display

HIGH HEAT Button
This function is used for to activate the High heat cooking mode of the cooking functions such as GLUTIN. RICE, MIXED RICE, BROWN RICE (Refer to page 17)

DIRECT TOUCH
This function is used when cooking GLUTIN. RICE/TURBO GLUTIN. RICE, MIXED RICE/TURBO MIXED RICE, , PORRIDGE

SET Button
This function is used to select a function or to button-lock function. (Refer to page 29)

COOK/TURBO Button
Used to start cooking
(Refer to page 17)

CANCEL Button
This function is used to cancel a selection or release remaining Steam in the inner pot. (Refer to page 30)
When using Power saving function (Refer to page 28)

PRESSURE CHECK Button
This function is used to pressure checking
(Refer to page 22)

※ When you an image like one in the right side on your display, it means the rice cooker is in 'Waiting' mode.

※ Press 'Cancel' button to enter the 'Waiting' mode.

※ Press the button until you hear the buzzer sound.
The image of the plate may different.



Voice guide volume control (The function which can control volume and cancel)

To enter this function, press 'MODE' button 3 times. 'MODE' button needs to be pressed for over 0.3 second at the first time.



"3" sign is displayed when entered volume control mode by pressing 'MODE' button 3 times.

▶ 'MENU/SELECTION' button blinks and 'MODE', 'SET' and 'CANCEL' buttons turn ON.



If set value became "OFF" by pressing 'SELECTION' button, "VOICE" blink and voice guide function is off.

Press 'SELECTION' button to change the volume from "1" to "5".

▶ 'SET' button blinks and 'MODE', 'CANCEL' buttons turn ON.

▶ Keep the button pressed, and the button will turn to Continuous.

▶ Set to desired voice volume, and press 'SET' button.
▶ If it is over 7sec without 'SET' button, setting time will be canceled with voice, "Function setting has been canceled with overtime."



HOW TO SET CURRENT TIME/ NIGHT VOICE VOLUME REDUCTION



How to set current time

ex)8:25am now

1 Press 'MODE' button 2 times.

- ▶ 'MODE' button needs to be pressed for over 1 second at the first time.
- ▶ A voice comes up saying "Setting mode for current time. Touch and slide to set current time then press SET button."
- ▶ 'MODE', 'SET' and 'CANCEL' buttons turn ON.



2 Set o'clock and minute as pressing 'SELECTION' button.

- ▶ 1 min up " > " button
- ▶ 1 min down " < " button
- ▶ 10 min up or down " > ", " < " keep pressing.
- ▶ Careful of setting am,pm.
- ▶ In case of 12:00 it is 12:00 pm



3 When finishing to set time you


- ▶ 'SET' button blinks and 'MODE', 'CANCEL' buttons turn ON.
- ▶ If it is over 7sec without 'SET' button, setting time will be canceled with "Function setting has been canceled with overtime.", it is canceled due to overtime.



Night Voice Volume Reduction

Set the function of night voice volume reduction, the function to reduce the volume of voice during night time (10:00PM-05:59AM) on need-to-do basis. This function works only during night time.

▶ Night Voice Volume Reduction

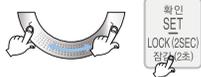

Example) 60% of voice volume

- OFF Zero volume
- 1 20% of voice volume
- 2 40% of voice volume
- 3 60% of voice volume
- 4 80% of voice volume
- 5 100% of voice volume

Night voice volumes by the setting of process progress

1. Press 'MODE' button 12 times in standby status, and you will enter Night Voice Volume Reduction mode. When pressing 'MODE' button initially, press the button for 0.3 second or longer to enter Night Voice Volume Reduction mode.
2. When you enter Night Voice Volume Reduction mode, a voice comes up saying "Setting mode for night time volume. Touch and slide to set Night time volume then press 'SET' button".
3. Press 'SELECTION' button, and as process progress bar change, voice volume will change. Select desired voice volume, and press 'SET' button.
4. Once process progress bar reach full condition through adjustment of 'SELECTION' button, a voice will come saying "Night time volume has been canceled." Inactivate the function by pressing 'SET' button.
5. If 'Set' button is pressed or no button is pressed for 7 seconds after you enter Night Voice Volume Reduction mode, the function will be inactivated along with voice "Function setting has been cancelled with overtime.", and the system will be back to standby mode.



BEFORE COOKING RICE


1 Use a dry cloth to clean inner pot.

- ▶ Use a soft scrubber to wash the inner pot.
- ▶ Do not use rough or metallic scrubber. Otherwise, coating will be pilled off.
- ▶ Do not put anything that is metallic and sharp into the inner pot while cleaning. (Fork, spoon, chopsticks, knife, and etc.)



2 Use measuring cup to measure desirable cooking amount.


- ▶ Make the rice flat to the top of measuring cup and it is serving for 1 person. (ex: for 1 servings → 1 cups, for 3 servings → 3 cups)

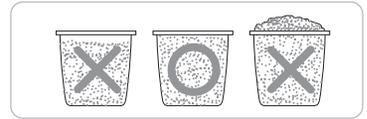

3 Use another container to wash the rice.

4 Adjust water level.

- ▶ Place inner pot on the flat surface to adjust water level.
- ▶ The marked lines in the inner pot are water level.
 - ① If you want to cook old or soft rice, pour more water than measured scale.
 - ② Overcooked rice: pour less water than measured scale.
 - ③ When rice is undercooked or firm/hard: It is caused by differences in rice varieties or water content (old rice). In this case, please add 1 ~ 10% of more water.
- ※ This model does not support SOFT GLUTIN.
- ※ The maximum capacity of each menu, refer to page 17.

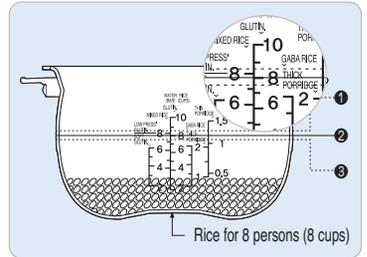

5 Please plug the power cord before inserting inner pot in the rice cooker.

- ▶ Wipe off or remove any substances on the temperature sensor or bottom of the inner pot.
- ▶ Please place the inner pot correctly into the rice cooker.

6 Plug the power cord and turn the handle to “LOCK”.

- ▶ The lamp turning on means closed perfectly.



How to use the cooking menu

GLUTIN. RICE	Used to cook sticky and nutritious rice.	LOW PRESS. GLUTIN.	It is used for soft low-pressure rice without sticking.
MIXED RICE	Used to cook a variation of mixed or brown rice.	GABA RICE	Used to cook germinated brown rice.
BROWN RICE	Used to cook variation of brown rice.	CHICKEN SOUP	This menu cooks samgyetang automatically.
Nu Rung Ji	Used to cook scorched rice when cooking is done.	SUPER GRAIN	Used to cook a variety of super grain rice.
PORRIDGE	For cooking porridge.	LOW PRESS. HIGH PRESS	Used to cook low pressure and high pressure.
AUTO CLEAN (Steam Cleaning)	This menu is used to eliminate small soaked after cooking or warming.	HIGH HEAT (GLUTIN. RICE/MIXED RICE/GABA RICE)	Use when cooking more sticky and soothing Cooked Rice. (Melanizing effect could be increased.)
TURBO GLUTIN. RICE	<ul style="list-style-type: none"> • Pressing 'COOK/TURBO' button twice will switch to quick cooking and shorten the cooking time. (It takes about 13 minutes when you cook the Glutinous rice for 2 persons.) • Use this turbo cooking function only for cooking rice for less than 6 persons. (The condition of the rice will not be good for more than 2 persons.) • If you soak the rice in water for about 20 minutes before cooking the rice and then cook the rice in turbo cooking course, the rice will taste good. 		
TURBO MIXED. RICE	<ul style="list-style-type: none"> • If selected turbo mixed rice, total cooking time will be reduced. (It takes about 26 minutes for cooking mixed rice for 2 persons.) • Turbo mixed rice cooking lessens the quality of food, so only use for less than 6 people. 		

※ After cooking in white rice turbo mode or cooking of small serving, discard water.



HOW TO COOK

1 Choose menu with 'SELECTION' button.

- Please mount detachable cover.
- Please keep "Pressure weight" horizontal.
- Each time 'MENU/SELECTION' button is pressed, the selection switches in the sequential order. LOW PRESS GLUTIN. → SUPER GRAIN → GABA RICE → NU RUNG JI → GLUTIN RICE → HIGH HEAT GLUTIN RICE → MIXED RICE → HIGH HEAT MIXED RICE → BROWN RICE → HIGH HEAT BROWN RICE → PORRIDGE → AUTO CLEAN → CHICKEN SOUP → LOW PRESS STEAM → HIGH PRESS STEAM.
- If the button is pressed, repeatedly, the menu switches continuously in sequential order.
- The one of following cooking menu modes: GLUTIN RICE, MIXED RICE, BROWN RICE, PORRIDGE will be immediately proceeded to start cooking by pressing the 'DIRECT TOUCH' button of each cooking menu mode.
- Pressing the 'HIGH HEAT' button within 5 seconds after proceeding the one of following cooking menu modes: GLUTIN RICE, MIXED RICE, BROWN RICE will initiate the high temperature cooking of each cooking menu mode.
- In the cases of GLUTIN RICE, HIGH HEAT GLUTIN RICE, MIXED RICE, HIGH HEAT MIXED RICE, LOW PRESS GLUTIN, BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE, SUPER GRAIN the menu remains memorized once each cooking is completed, so for continuous use of the same menu, no selection of menu is required.



ex) In case of selecting LOW PRESS GLUTIN.
▶ You can hear a voice, LOW PRESS GLUTIN.

2 Start cooking by pressing 'COOK/TURBO' button.

- You must turn lid handle to lock before cooking. Then press the 'COOK/TURBO' button, and sound "GLUTINUS RICE, Cuckoo starts cooking at a pressure of 2 atmosphere."
- Unless lid handle is not turned to close, you get alarm with "E01", and sound "Close the lid then turn the handle to the lock position."
- The actual cooking time may vary depending on the cooking capacity, water temperature, and cooking conditions.




ex) In case of cooking GLUTIN RICE.

3 Steaming.

- The cooktime remaining on the display is shown from cooking thoroughly.
- The cook time is different according to the menu.
- Be careful not to burn yourself from the automatic steam outlet.

ex) In case of 10 minutes left.



4 The end of cooking

- When cooking is completed, warming will start with the voice "Glutinous rice has been completed."
- If you want to stop warming, Push 'CANCEL' button for more than 0.3 seconds.
- When cooking ends, stir rice equally and immediately. If you don't stir rice at once and keep it stagnant, rice will go bad and smell bad.
- If the lid handle is not working well, take out the steam completely out of inner pot by turning over pressure weight.
- While cooking, do not press cancel button.



Cooking time by Menu																		
Menu Division	GLUTIN RICE	TURBO GLUTIN RICE	HIGH HEAT GLUTIN RICE	MIXED RICE	TURBO MIXED RICE	HIGH HEAT MIXED RICE	LOW PRESSURE GLUTIN	Nu Rung Ji	BROWN RICE	HIGH HEAT BROWN RICE	SUPER GRAIN	CHICKEN SOUP	THICK PORRIDGE	THIN PORRIDGE	LOW PRESS STEAM	HIGH PRESS STEAM	PRESSURE CHECK	AUTO CLEAN (Steam Cleaning)
CAPACITY	2~10 PERSONS	2~6 PERSONS	2~10 PERSONS	2~8 PERSONS	2~6 PERSONS	2~8 PERSONS	2~6 PERSONS	2~4 PERSONS	2~6 PERSONS	2~6 PERSONS	2~8 PERSONS	1 Chicken (About 1kg)	1~2 CUPS	0.5~1.5 CUPS	See detailed guide to cooking by the menus.		Pour water up to the line 2 for GLUTIN RICE	Pour water up to the line 2 for GLUTIN RICE
COOKING TIME	Approx. 27~38min	Approx. 13~21min	Approx. 27~39min	Approx. 40~56min	Approx. 26~34min	Approx. 41~57min	Approx. 38~47min	Approx. 37~43min	Approx. 52~60min	Approx. 53~61min	Approx. 35~49min	Approx. 71min	Approx. 68~107min	Approx. 73~112min			Approx. 18min	Approx. 20min
PRESSURE DISPLAY	2.0atm	2.0atm	2.0atm	2.0atm	2.0atm	2.0atm	1.2atm	2.0atm	2.0atm	2.0atm	2.0atm	2.0atm	2.0atm	2.0atm	1.4atm	2.0atm	Real-time pressure	2.0atm

Melanoizing phenomenon

The cooked rice can be light yellow at the bottom of the oven, because this product is designed to improve pleasant flavor and taste. Especially, melanoizing is more serious at the "Preset cooking" than just "Cooking". It does not mean malfunction.
* When mixing other rice with Glutinous, Melanoizing phenomenon could increase more than "Glutinous cook" setting.



MY MODE (CUCKOO Customized Taste Function)

What is “MY MODE”?

▶ CUCKOO’s patented technology based on variable circuit design. User can select the degree of “softness” and “glutinosity & tastiness” to meet a user’s desire.

How to Use “MY MODE”

- ▶ Longer “SOFT” Time : rice becomes soft and glutinous. (selectable in 4 steps)
- ▶ Longer “SWEET” Time : rice becomes tastier(selectable in 4 steps) [melanoizing will occur]
- ▶ Both functions above can be selected simultaneously or separately

How to Use “MY MODE”

To enter “Customized Rice Taste Setting Mode”, select the menu in which Customized Rice Taste is supported such as GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE, Nu Rung Ji, SUPER GRAIN and press the ‘MODE’ button for 0.3 second or longer.

1 “MENU” setting screen



2 “MY MODE” setting screen



To enter Customized Rice Taste Setting Mode, select desire menu and press ‘MODE’ button once for 0.3 second or longer.

3-1 Soft time control mode



Select desired swelling time by pressing the button.

3-2 Sweet time control mode



Select desired heating extension time by pressing the button, and press ‘SET’ button.

4 Setting the completed screen after



Set up desired customized rice taste. And press “SET” button. (If you press ‘CANCEL’ or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.)

Cuckoo customized cooking function

While cooking you can control the heating temperature (both high and low) depending on, your preference. Initialization is set up “ ” get step by step as the case may be.

- High step : for cooking cereals, old rice and soft-boiled rice.
- Low step : for cooking the year’s crop of rice

How to use Cuckoo Customized cooking function

1 If you press the ‘MODE’ button 6times, customized cooking function is setup.

2 “MY MODE” setting screen



4-1 High level mode



Push the ‘SELECTION’ button, then the screen will be changed as above picture.

5 Setting completed screen after



3 “MENU” setting screen



Make the menu changed by pressing ‘SELECTION’ button.

4-2 Low level mode



Push the ‘SELECTION’ button, then the screen will be changed as above picture.

If you press the ‘SET’ button to complete your customized cooking. (If you press ‘CANCEL’ or do not press a button within 7 seconds, the function will deactivate and return to the standby mode.)

1. ‘CUCKOO customized cooking function’ applies to GLUTIN. RICE, HIGH HEAT GLUTIN. RICE, TURBO GLUTIN. RICE, MIXED RICE, HIGH HEAT MIXED RICE, TURBO MIXED RICE, BROWN RICE, HIGH HEAT BROWN RICE, GABA RICE, LOW PRESS GLUTIN., SUPER GRAIN
2. Set up the step of customized cooking function to taste. The scorch can occur when cooking in high level mode.
3. Cook is subject to be set differently depending on the percentage of water content and the condition of rice.

HOW TO USE “GABA RICE (BROWN RICE)”



What is Germinated Brown rice?

Brown rice has richer nutrients than polished rice. However, brown rice is rather tough and hard to be digested. By germination, the enzymes in the brown rice are activated, generating nutrients, and are easier to digest.

Using “GABA” Menu


1 In order to promote germination, soak brown rice for 16 hours in water

Method of Pre-germination

- ▶ Put washed brown rice in an appropriate container, pour sufficient amount of water to soak the rice.
- ▶ Pre-germination shall not exceed 16 hours. Make sure to rinse the rice clean with flowing water before using “GABA” menu. Be careful not to rinse too much or else the embryos that are required to germinate may wear off.
- ▶ Unique smell may be generated according to the soaking time of pre-germination
- ▶ When pre-germination has been completed, wash the rice and insert the inner pot. Pour appropriate amount of water and use “GABA” menu.
- ▶ During summer or hot temperature environment, an odor may be generated. Reduce germination time and wash clean when cooking.

2 Turn the Cover Coupling Handle toward “” (Lock), and press the Select button to select GABA RICE.

- ▶ When GABA RICE is selected, 3H will be displayed on the display panel.

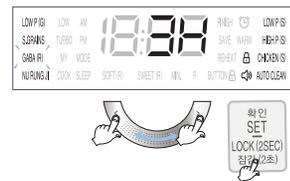

3 Press the COOK/TURBO button.

- ▶ If you press the COOK/TURBO button or the SET button and press the COOK/TURBO button, Gaba Rice mode will be activated for the set time, and it will start cooking immediately after completing germination.
- ▶ The ‘COOK’ icon will be displayed along with the remaining time.



Precautions for GABA RICE

- 1 If smaller germ is preferred, omit pre-germination process. Select “GABA RICE” menu, time, and start cooking (nutrients ingredients do not vary significantly by the size of germ).
- 2 GABA RICE cooking feeds up to 6 people.
- 3 City water can be used for germination. However, filtered or drinkable water is recommended. Germination may not be properly performed in hot or boiled water even after cooking.
- 4 Germination rate and germ growth may differ by the type of brown rice, condition, or period of storing.
 - The brown rice should be within 1 year from harvest, and not long since pounded.
- 5 In GABA mode, preset on 3H may not be possible. If you want to preset the GABA, set up BROWN RICE menu .
- 6 The taste of rice could be different depending on a kind of brown rice. Use customized taste function or control the amount of water for your taste.
- 7 Depending on the user’s environment or the condition of the rice, the sprout may not be visible.



HOW TO COOK SUPER GRAINS

What are supergrains?

Supergrains have a better nutritional balance than that of rice, and contain an abundance of various vitamins, minerals, antioxidants, and dietary fiber. It is a good alternative to rice, and is an excellent nutritional source for supplementing nutrition.

Characteristics of Supergrains

- ❶ Kamut (for antioxidant effects): Kamut contains selenium, which removes active oxygen from your body.
- ❷ Oats (for preventing constipation): Oats possess rich unsaturated fatty acids and fiber.
- ❸ Chick peas (for weight loss): Chick peas contain arginine, which helps burn fat and expand blood vessels.
- ❹ Green lentils (for recovery from fatigue): Green lentils contain rich protein, Vitamin B, and iron.
- ❺ Quinoa (for preventing adult diseases): Quinoa possesses unsaturated fatty acids, which reduce cholesterol.

How to Use Supergrain Menu

- ❶ Turn the Cover Coupling Handle toward “” (Lock), and press the Select button to select Supergrain.

▶ When the Supergrain menu is selected, 0H is displayed on the Display.



- ❷ Press the SET button, and set the time with the Select button.

- ▶ Every time you press the right Select button or the left Select button, the supergrain soaking time is repeatedly selected to be 0H (0 hour) or 3H (3 hours).
- ▶ The supergrain soaking time can be selected to be 0 hour or 3 hours.

- ❸ Press the Cook/Turbo button.

- ▶ When you press the Cook/Turbo button or the SET button and press the Cook/Turbo button, soaking begins for the set time. When the soaking is completed, cooking immediately begins.
- ▶ During soaking, 'Cook' is displayed, along with the remaining time.



Precautions for Cooking Supergrains

- ❶ When cooking supergrains, use the Mixed Grains Water Level. You can cook up to eight servings.
- ❷ There may be differences in melanizing or rice condition depending on the kind of supergrain. Adjust the water volume to suit your taste, or use the Customized Taste function.
- ❸ In case of the Supergrain menu, reservation is not available.
- ❹ When you cook hard grains, select 3H (3 hours) for soaking before cooking.
- ❺ If you want softer texture, cook by the following method.
 - ▶ When you cook 'chick peas,' soak chick peas for four to six hours at room temperature before cooking.
 - ▶ When you cook 'oats,' soak oats for 30 minutes to one hour at room temperature before cooking.
- ❻ When cooking is finished and the product has warmed, mix the cooked rice well.

Precautions for Cooking Kamut

- ❶ Separately wash kamut and rice. Put kamut in the Inner Pot (in order to soften kamut's texture), and then put rice in the Inner Pot. Then, adjust the water volume with the Mixed Grains Water Level.
- ❷ Select the Supergrain Menu, and set the soaking time to be 3H (3 hours) with the Select button, and then press the Cook/Turbo button.
- ❸ When cooking is finished and the product has warmed, mix the cooked rice well.



HOW TO COOK LOW/HIGH PRESS STEAM

HOW TO COOK LOW/HIGH PRESS STEAM

1 Coupling Handle toward “” (Lock), and press the Select button to select low-pressure steaming or high-pressure steaming.





- ▶ The SET button blinks, and the Cancel button and the Cook/Turbo button are turned on.
- ▶ When the Low-Pressure Steaming menu or the High-Pressure Steaming menu is selected, the time is displayed on the Display.

2 Press the SET button, and set the cooking time with the Select button.



- ▶ The Reserve button, the Cancel button, and the Cook/Turbo button are turned on.
- The Voice Guide will say, “Set the cooking time with the slide touch, and press the Cook button.”
- ▶ Press the SET button, and the Voice Guide will say, “Press the Cook button or the Reserve button.”

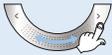1. 
Press the right Select button, and the time for low-pressure steaming/high-pressure steaming will be increased by five minutes.
▶ If you keep pressing it, the time turns into Nonstop.

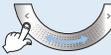2. 
Press the left Select button, and the time for low-pressure steaming/high-pressure steaming will be decreased by five minute

3. The time for low-pressure steaming/high-pressure steaming is adjustable from 10 to 120 minutes.

4. 
Select the desired time, and press the SET button. Then, the Voice Guide will say, “Press the Cook button or the Reserve button.”

3 Press the Cook/Turbo button.



- ▶ The Cook/Turbo button blinks, and the Setup button, the SET button, the Keep Warm/Reheat button, the Reserve/Auto Clean button, the Pressure Check button, and the Cancel button are all turned on. Press the Cook/Turbo button, and the low-pressure steaming or the high-pressure steaming begins.
- When low-pressure steaming or the high-pressure steaming begins, “Cook” is displayed, along with the remaining time.

4 How to Reserve Low-Pressure Steaming or High-Pressure Steaming

1. Check if the current time is correct.

2. Turn the Cover Coupling Handle toward “” (Lock), and press the Reserve/Auto Clean button.



3. Press the Select button, adjust the cooking finish time, and press the SET button.



4. Press the Select button, select the low-pressure steaming or the high-pressure steaming, and press the SET button.



5. Press the Select button, select the time for low-pressure steaming or the high-pressure steaming, and press the SET button. Then, press the Cook/Turbo button.





HOW TO USE PRESSURE CHECK

How to Use Pressure Check

This is a function to check if pressure has leaked or the steam discharge apparatus is defective by checking the pressure in the product.

1 Press the Pressure Check button in the Standby mode.

- ▶ The Voice Guide will say, "This is the Pressure Check function. Add water up to Glutin Water Level 2, and press the Cook button or the Pressure Check button."
- ▶ The Cook/Turbo button and the Pressure Check button blink, and the Cancel button is turned on.

<Standby mode>



2 Add water to the Inner Pot up to Glutin Water Level 2, put the Cover on, and turn the Cover Coupling Handle toward "☰" (Lock).

3 Press the Pressure Check button or the Cook/Turbo button, and pressure check begins.

- ▶ The Voice Guide will say, "CUCKOO begins pressure check."
- ▶ If you press the Cook/Turbo button without turning the Cover Coupling Handle toward "☰" (Lock), pressure check is not performed.
- ▶ The remaining time and the actual pressure are displayed at regular intervals.



4 When the pressure check result is good, "Good" is successively displayed.

- ▶ The Voice Guide will say, "The pressure is normal. Perform pressure check on a regular basis to ensure a great taste every time."

5 When the pressure check result is poor, "EP1 ~ EP6" blinks.

- ▶ **EP1** The Voice Guide will say, "Check the packing, perform the pressure check again, and if there is any problem, contact our Customer Service Center." It appears when the packing is aged or pressure is leaked because of foreign substances on the packing. Check the packing and perform the pressure check again. If the packing is not defective, contact our Customer Service Center.
- ▶ **EP2** The Voice Guide will say, "Check the packing, perform the pressure check again, and if there is any problem, contact our Customer Service Center." It appears when the packing is aged or pressure is leaked because of foreign substances on the packing. Check the packing and perform the pressure check again. If the packing is not defective, contact our Customer Service Center.
- ▶ **EP3** The Voice Guide will say, "Pressure check was not properly done. Please do it again in the right order." It appears when you perform the pressure check without the Cover on. Put the Cover on, turn the Cover Coupling Handle toward "☰" (Lock), and perform the pressure check again.
- ▶ **EP4** **EP5** The Voice Guide will say, "There is a problem with steam discharge. Please contact our Customer Service Center." It appears when there is a problem with the Weight. Please contact our Customer Service Center.
- ▶ **EP6** The Voice Guide will say, "Pressure check was not properly done. Please do it again in the right order." It appears when you perform the pressure check with the product heated (right after cooking is finished, right after keeping warm is finished). Please perform the pressure check again when the product has cooled down.

6 How to Turn Off Pass or Fail Display

- ▶ When Pass or Fail is displayed, this indication will automatically be turned off in one minute.
- ▶ Press the Cancel button, and it will be immediately canceled.
- ▶ Turn the power ON, and it will be canceled.

Precautions for Using Pressure Check

- Adjust water level to Glutin Water Level 2.
- Use water at a temperature of 10-30°C.
- Perform the pressure check when the product has cooled down.
No accurate pressure check can be performed when the product is heated (right after cooking is finished, right after keeping warm is finished).
- The indicated pressure may be different from the actual pressure.



HOW TO USE PRESET / PRESET REHEATING FUNCTION

How to preset timer for cooking

For example, if it is nine o'clock in the evening and you want to have warm breakfast at seven forty the next morning.

- 1 Make sure that the current time is correct.
 - ▶ Refer to page 15 for how to set the current time.
- 2 Turn the lid handle to the lock position and a lock icon will be displayed on the screen. Then press the 'PRESET/AUTO CLEAN' button.
 - ▶ The preset time is set to 06:30 AM when the product is delivered from the factory. If you want to preset reheating to this time, it is not required for you to set time.
- 3 Press the SET button, and press the SELECTION button to set the preset time.
 - ▶ The preset time is increased by 10 minutes each time you press the ">" Button
 - ▶ The preset time is decreased by 10 minutes each time you press the "<" Button
- 4 Press the SELECTION button to select the desired menu.
- 5 Press the COOK/TURBO button.
 - ▶ Once cook is completed with preset time, preset time is stored in the memory.
 - ▶ Don't need to set up time again.




- ※ Please be careful not to change from AM to PM.
- ※ When the current time is not correct, set the current time correctly.
- ※ If you press the PRESET/AUTO CLEAN button without turning the Lock/Unlock handle toward 'Lock,' the presetting will not be conducted
- ※ If you want to preset the GABA, set up BROWN RICE menu.
- ※ When it is in KEEP WARM mode, press CANCEL to exit KEEP WARM mode, then select your desired preset time.
- ※ If a small amount of rice is cooked, it could be finished earlier than time you programmed it.

How to use Preset Reheating function

- ▶ Use this function when the cooked rice is not kept warm in the rice cooker but you still want to enjoy a hot meal at your convenience.
- ▶ It takes three hours before it's fully warmed up: Please use the function at least three hours before you enjoy your meal

For example, if it is nine o'clock in the evening and you want to have warm breakfast at seven forty the next morning:

- 1 Make sure that the current time is correct.
 - ▶ Refer to page 15 for how to set the current time.
- 2 Turn the lid handle to the lock position and a lock icon will be displayed on the screen. Then press the 'PRESET/AUTO CLEAN' button.
 - ▶ If you press the PRESET/AUTO CLEAN button without turning the Lock/Unlock handle toward 'Lock,' the presetting will not be conducted.
- 3 Press the 'WARM/REHEAT' button and Preset Reheating mode begins.
- 4 PRESS the SELECTION button to preset the completion hour of reheating
 - ▶ The preset time is increased by 10 minutes each time you press the ">" button.
 - ▶ The preset time is decreased by 10 minutes each time you press the "<" button.
- 5 Press the 'SET' button.
- 6 Press the 'WARM/REHEAT' button.
 - ▶ Reheating is completed as scheduled.
 - ▶ The cooker memorizes the hour that you have preset: You may press the 'WARM/REHEAT' button directly without having to preset the time again from the beginning.

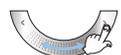

- ※ Please be careful not to change from AM to PM.
- ※ When the current time is not correct, set the current time correctly.



HOW TO USE PRESET / PRESET REHEATING FUNCTION

Precautions for PRESET / PRESET REHEATING Cooking

1 Precautions for Preset Cooking

- ▶ If the rice is old and dry, the result may not be good.
- ▶ If the rice is not well cooked, add more water by about half-scale.
- ▶ If the preset time is longer, melanization could be increased.
- ▶ Washed rice has a lot of settled starch, and crust can be made in case of preset cooking.
If you wash the washed rice in running water before cooking or make the quantity of rice small, the crust will be less.

2 Precautions for preset reheating

- ▶ When leaving cooked rice at ambient temperature for a prolonged period of time, moisture is evaporated from cooked rice. In such a case, the reheating preset may cause dehumidifying or melanizing (slightly burnt) of cooked rice.
- ▶ If there is an excessive amount of cooked rice in the pot, it may not sufficiently be reheated.
It is recommended to set reheating for no more than 5 people. (approx. half of the inner pot)
- ▶ Reheating of cold- or frozen-stored cooked rice may cause insufficient heating, dehumidifying or melanizing (slightly burnt) after completion of reheating.
- ▶ Put cold-stored cooked rice into the inner pot, beat rice with a scoop, and then reheat rice.
- ▶ Reheating of frozen-stored cooked rice shall be performed only after thawing the rice.

3 Changing preset time.

- ▶ Press 'CANCEL' button for more than 0.3 seconds and restart it to change the preset time.

4 If the preset time is shorter than available range.

- ▶ If the preset time is shorter than the available range, cooking/reheating will begin immediately.

5 In case the preset time is over 13 hours.

- ▶ “13H” will be displayed and the preset time will be changed to 13 hours automatically. If cooking is preset to AM07:00 of the following day at PM5:00 of the day, where preset time is 14 hours, “13H” will be displayed, and preset time automatically changes to AM06:00. (Maximum preset time is 13 hours)

※ If the preset time is over 13 hours, it can cause bad smell and discoloration.

The limited preset time is set up to be under 13 hours because the rice spoils easily during the summer time.

※ When you want to finish presetting at 12:00 p.m., preset the time to be 12:00 p.m.

※ Use this function when you want to finish cooking between 1 hour to 13 hours after the current time.

※ During the preset cooking, if you want to check the current time, press the SET/MODE button.

Then, the current time will appear for about two seconds.

PRESET COOKTIME

Menu Class	GLUTIN. RICE	HIGH HEAT GLUTIN. RICE	MIXED RICE	HIGH HEAT MIXED RICE	LOW PRESS GLUTIN.	NU RUNG JI	BROWN RICE	HIGH HEAT BROWN RICE	CHICKEN SOUP	Porridge	LOW/HIGH PRESS STEAM	AUTO CLEAN (Steam Cleaning)
PRESET COOK TIME	(42min+ My mode time) ~13hours	(43min+ My mode time) ~13hours	(61min+ My mode time) ~13hours	(62min+ My mode time) ~13hours	50min ~13hours	(47min+ My mode time) ~13hours	(64min+ My mode time) ~13hours	(65min+ My mode time) ~13hours	76min ~13hours	118min ~13hours	From (1minutes +My mode) to 13hours	25min ~13hours



TO KEEP COOKED RICE WARM AND TASTY

Having a Meal

- ▶ If you want to have warm rice, press the 'WARM/REHEAT' button. Then 'Reheat' function will be started and you can eat fresh rice in 9 minutes.
- ▶ To use reheating in standby status after power is applied, turn lid combining hand grip to Locked location, press 'WARM/REHEAT' button, and the cooker will convert to Heat Preservation mode. Here press 'WARM/REHEAT' button once more.

<Keep warming>



'3H' indicates the time elapsed as warming time.

<Reheating>



The lamp blinks and "0" indicator will show the reheat remaining time displayed in minutes with the mark going around clockwise.

<Finishing reheat>



When the reheat finishes with the beep sound, keep warming function will be operated and show the time elapsed.

- ▶ The frequent use of the "Reheat" function may cause the cooked rice to be discolored or dried. Use it once or twice per day.
- ▶ If a separate heating appliance or gas burner is used to cook rice, put the cooked rice into the cooker and press the 'WARM/REHEAT' button to keep the rice warm. At this time, "OH" is shown on the display. (Like this, transferring hot rice to a cold cooker may cause the rice to be discolored or develop an odor)
- ▶ After 24 hours of heat preservation, the lamp of heat preservation time lapse blinks, indicating that long time has passed in heat preservation condition.
- ▶ In case the lid combining hand grip is in open status during heat preservation, the cooker does not go for reheating. For reheating, lock the lid combining hand grip to (Locked) position, and then press 'WARM/REHEAT' button.
- ▶ If the lid combining hand grip is turned to open status during reheating, function display will show "E0!". At this time, reheating will be cancelled, and heat preservation will proceed.

Controlling Method of Warming Temperature

If the temperature in the rice cooker is not set properly, an odor or the color of the rice may change even though it is cleaned frequently and boiled up. Temperature needs to be set.



- 1 Press 'MODE' button over 1 time during warming. It displays as picture with buzzer. At the time, 74 means current warming temperature.

To raise temperature



To lower temperature



- 2-1 Press 'SELECTION' button to change the temperature as

74 → 75 → 76 → 77 → 78 → 79 → 80

- 3 Select the menu you want, then the press the 'MODE' button and set-up time will be automatically entered with a buzzer. (If you press the 'CANCEL' button or do not press a button within 7 seconds, the function will be cancelled and returned to standby mode.)

- 2-2 Press 'SELECTION' button to change the temperature as

74 → 73 → 72 → 71 → 70 → 69

※ The reference temperature programmed when the product is shipped may differ from the Instruction.

Device Temperature Control

1. When you smell bad odors and the rice is too watery: The keep warm temperature is too low. In this case, increase the "Keep Warm" temperature by 1-2°C.
2. When the rice has a yellowish color or is too dry: The Keep Warm temp is too high. In this case, decrease the "Keep Warm" temperature by 1-2°C.



TO KEEP COOKED RICE WARM AND TASTY

How to Operate My Mode Function.

Use it while opening the lid when there is too much water or rice becomes too soft.

1 In standby mode, push the 'MODE' button 5times.
The voice says that it is programmed warming mode, control the temperature you want.

2-1 Press the right select button.


2-2 Press the left select button.

3 If you set your desired temperature and press the SET button, the set temperature will be entered automatically. (When you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.)

How to activate "SLEEPING" mode.


When keeping rice warm for a long time, set up the temperature low to prevent the following quality of rice: smelly, dry, change of color; from PM10:00 ~ AM 04:00.

▶ How to set up

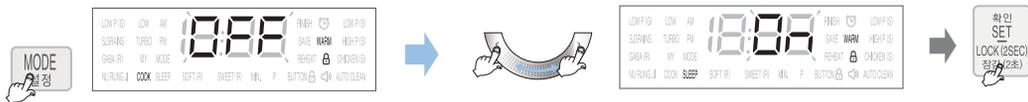

- 1 Press the MODE button in mode 7 to access the sleeping mode settings.
- 2 If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.

▶ How to release

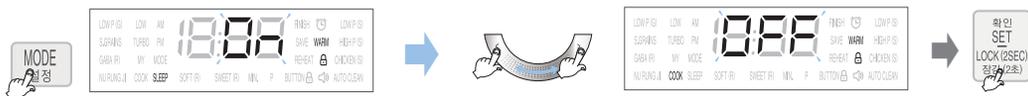

- 1 Press the MODE button in mode 7 to access the sleeping mode settings.
- 2 If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.

- ▶ If you need to keep the rice warm during sleeping, do not use this function. This function makes the rice cooler than normal. In summer, the rice can be spoiled and may smell bad because of high temperature. If possible, do not use the "Custom-made warming" mode while sleeping.
- ▶ This function is set up as cancel state.



FOR THE BEST TASTE OF RICE

Cook tasty rice with Cuckoo pressure rice cooker

For the best taste of rice, check the following points carefully.

When measuring the rice, Use the measuring cup. (The amount of the rice may vary depending on the quality of the rice.) Place the inner pot on a flat surface and adjust the water to water level in the inner pot.	When measuring the rice, use the measuring cup. (The amount of the rice may vary depending on the quality of the rice.) Place the inner pot on a flat surface and adjust the water to the water level in the inner pot.
If possible, buy a small amount of rice and keep the rice some place where it ventilates well and avoids a direct ray of light. It can prevent evaporation of rice moisture. If the rice has been unsealed for long, rice can be dry and stale. In this case, you should pour the half of water more. It's tastier.	If amount of water and amount of rice is different, the rice can be crisp or hard.
If possible, do not use the preset time function when rice is too dry and pour the half of water more. If you set "Preset" over the 10 hours or "Preset" dried rice, rice can be crisp or half cooked. Even worse condition, rice can be cooked different tastes each level.	If possible, buy a small amount of rice and keep the rice some place where it can ventilate well and avoids a direct ray of light. It can help prevent evaporation of rice moisture. If the rice has been unsealed for long, rice can be dry and stale. In this case, you should pour half of water more. It's tastier.
If rice is kept warm for a long period of time, rice color will change, as well as odor.	If the rice is too dry, rice can be crisp even though it is measured properly.
Wipe the top cover heating part well for any rice or external substance.	If possible, do not use the preset time function when rice is too dry and pour half of water more. If you set "Preset" over the 10 hours or "Preset" dried rice, rice can be crisp or half cooked. Even in worse condition, rice can be cooked with different taste on each level.
If rice is kept warm for a long period of time, rice color and the odor will change.	If the preset time is longer, the melanoizing effect could be increased.
It's better to set "warm" less than 12 hours.	Wipe the top cover heating part well for any rice or external substance.
	Especially clean the top of the cover for external substance.

Cautions for Keeping Warm

It will be hard to open the lid during warming, or right after it has finished cooking. So push the pressure weight to the side and allow the steam to release.	It will be hard to open the lid during warming or right after it has finished cooking. So push the pressure weight to the side and allow the steam to release.
Make sure the handle is in the "Lock" position during warming or reheating.	Make sure the handle is in the "Lock" position during warming or reheating.
It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm)	It would be better to warm the rice for less than 12 hours because of odors and color change. The cooked rice, which cooked by pressure cooker, is more prone to changing color than the rice cooked by general cooker. During warm mode, the rice can rise and turn white. In this case, mix the rice.
Do not keep the scoop inside the pot while warming the rice. When using a wooden scoop it can create serious bacteria and odors.	After 24 hours of heat preservation, the lamp of heat preservation time lapse blinks, indicating that long time has passed in heat preservation condition.
Do not keep the rice spatula inside the pot while warming the rice. When using a wooden rice spatula, it can create serious bacteria and odors.	It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm).
Do not mix small amount of rice or leftovers with the rice under keeping warm. Doing so may cause an odor. (Use a microwave oven for the cold rice.)	The mixed and brown rice cannot be in such good condition as white rice while in warm function due to their characteristics. Therefore, do not keep mixed and brown rice in function for a long period of time.

When Odors are Rising During the Warming Mode

- ▶ Clean the lid frequently. It can cause growth of bacteria and odors.
- ▶ Even though exterior looks clean, there might be germs and it can cause odor so please be sure to use automatic sterilization (steam cleaning) menu for cleaning. Clean the inner pot completely after automatic cleaning function is done.
- ▶ Clean the inner pot properly to prevent rice from smelling after you cook soups and steamed dishes.



HOW TO USE POWER SAVE/ ENERGY EYE FUNCTION

What is POWER SAVE mode?

If power cord is not unplugged, little bit of electricity will be still wasted. It is called standby electric power. The power SAVE mode is technology which minimizes this electricity consumption.

Manual Method

▶ How to start power saving


When 'CANCEL' is pushed for 3 seconds at waiting state, Saving power function is set up.



▶ How to end power saving

Method 1) Push any button then it will be returned to waiting mode.

Method 2) If lid handle is turned to open or close, power saving mode will be canceled and back to waiting Mode.

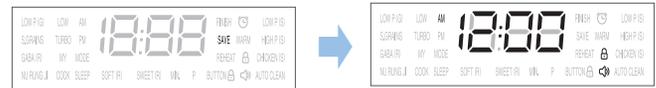

Automatic Method

If the standby time is chosen as number other than "OFF" at the automatic power saving mode, the automatic saving power function will be operative. If you move lid handle or push any button before passing waiting time, the waiting time which is reduced will go back to the setting.


▶ How to set up



1. If you push 'MODE' button 9 times at the standby state, automatic power saving mode is set up.
2. If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.

Energy Eye function

The luminance sensor automatically recognizes ambient brightness during, warming and preset timer for minimizing power consumption of the product. If you want the power saving mode to start when it's darker than the current level(Step 2), set the mode to Step 1. If you want the mode to start when it's brighter than the current level, set the mode to Step 3. (The power saving mode of CUCKOO is set to Step 2 at the factory.)

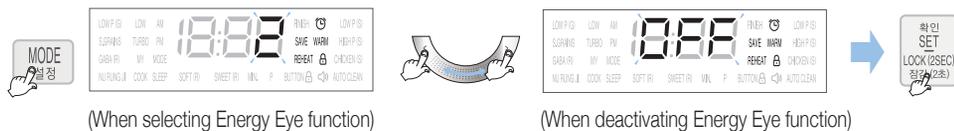

1. Press the 'MODE' button 13 times in standby status and you will enter the Energy Eye mode.
2. Each time you press the 'SELECTION', the Energy Eye shifts from OFF to Step 1 to Step 2 to Step 3. When OFF is displayed, a voice comes up saying "The Energy Eye function is canceled".
3. After selecting your desired step, press the SET button to save the set value.
4. If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will not be set but canceled.

HOW TO USE POWER SAVE SCREEN LIGHT / LOCK BUTTON / REMAINING COOKING TIME DISPLAY MODE




Display POWER SAVE SCREEN LIGHT Mode

This mode adjusts the brightness of the display during cooking, warming or reservation cooking.

▶ How to set and unset the mode

(This mode is selected 'On' when the product is delivered from the factory)



1. In the Standby mode, press the 'MODE' button 10times to activate the Display POWER SAVE SCREEN LIGHT mode.
2. When you press the 'SELECTION' button, the Screensaver function will be selected or canceled.
3. After doing your desired setting, if you press the SET button, the setting will be saved.
4. If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.

How to Set "LOCK BUTTON"

Lock can be set for touch button to prevent accidental touch during cleaning or by children.

▶ How to set up



1. Button will be locked if 'SET' button is pressed for 2 seconds or longer during cooking, presetting, warming, reheating or in standby condition.
2. When set, the Button Lock display will flicker on the screen.

▶ How to release



1. Button will be released if 'SET' button is pressed for 2 seconds or longer during cooking, presetting, warming, reheating or in standby condition.
2. When released, the Button Lock display will disappear on the screen.

- ※ Any button other than 'SET' button is pressed while button lock is set, buzzer will sound.
- ※ Desired function can be set after cancelling button lock is set, buzzer will sound.
- ※ Button lock function is cancelled automatically when the power is OFF even though the button lock function is already set.

Remaining Cooking Time Display Mode

This mode sets on or off the remaining cooking time display which appears periodically during the cooking.
(The displayed remaining cooking time may vary from the actual one depending on the cooking volume and process.)

1. In the Standby mode, press the 'MODE' button 10 times to activate the Remaining Cooking Time Display mode.
2. If you press the CANCEL button or 7 seconds have passed without any button's being pressed, the function will be canceled.



※ Remaining Cooking Time Display mode set on

※ Remaining Cooking Time Display mode set off

CHECK BEFORE ASKING FOR SERVICE

- ▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When cannot turn to "Unlock".	<ul style="list-style-type: none"> • Did you turn the "lid" handle while cooking? • Did you turn the "lid" handle before exhausting steam completely? 	<ul style="list-style-type: none"> • Don't open the lid while cooking. If you want to open lid while cooking, press the 'CANCEL' button more than 0.3 seconds and release the steam. • Pull the pressure handle to the side once and allow the steam to completely.
When the lid cannot open although the lid handle is turned to "Unlock".		<ul style="list-style-type: none"> • Because of the pressure. • Pull the pressure handle to aside once and exhaust the steam completely.
When the steam exhausted between the lid.	<ul style="list-style-type: none"> • Is there an external substance on the packing? • Is packing too old? 	<ul style="list-style-type: none"> • Clean the packing with duster. • Keep the packing clean. • If the steam is exhausted through the lid, please power off and contact the service center and dealer. • Packing life cycle is 12 month, please replace the packing per 1 year.
When the 'CANCEL' button does not operate while cooking.	<ul style="list-style-type: none"> • Is the inner pot hot? • Is currently the setting to lock mode? 	<ul style="list-style-type: none"> • Keep pressing the 'CANCEL' button for 2 seconds for safety reason if you want to cancel while cooking. • Be careful of hot steam emission or hot contents spattered from the automatic steam outlet during cancellation. • Please press 'SET' button for over 2 seconds to release.
When you hear weird noises during cooking and warming	<ul style="list-style-type: none"> • Is there a wind blowing sound when cooking the rice? • Is there a "Chi" sound when warming the rice? 	<ul style="list-style-type: none"> • Is the inner pot inserted? • Check the rated voltage?
Brown rice is not germinated properly	<ul style="list-style-type: none"> • Does the amount of rice exceed the specified maximum capacity? • Is bean(other grains) too dry? 	<ul style="list-style-type: none"> • Put the specified maximum capacity of brown rice. • Old rice or contaminated rice may not be germinated properly.
When the button cannot operate with "LJ"	<ul style="list-style-type: none"> • Is the inner pot inserted? • Check the rated voltage? 	<ul style="list-style-type: none"> • Please insert inner pot. • This product is 120V only.
When the Pressure "Cook/Turbo" Timer button does not operate with "E01"	<ul style="list-style-type: none"> • Did you turn the lid Handle to "Lock" • Is "Lock" lamp on? 	<ul style="list-style-type: none"> • Please turn the "lid" handle to "Lock".

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the button cannot operate with “ L ”	<ul style="list-style-type: none"> Is the inner pot inserted? Check the rated voltage? 	<ul style="list-style-type: none"> Please insert inner pot. This product is 120V only.
When the Pressure “Cook/Turbo” Timer button does not operate with “ E01 ”	<ul style="list-style-type: none"> Did you turn the lid Handle to “Lock” Is “Lock” lamp on? 	<ul style="list-style-type: none"> Please turn the “lid” handle to “Lock”.
When the rice is badly sticky.	<ul style="list-style-type: none"> Is there any rice or any other alien substance on the temperature sensor or the bottom surface of the inner pot? 	<ul style="list-style-type: none"> Clean all the alien substances on the temperature sensor or the bottom surface of the inner pot.
When “ E03 ” is showed on the LCD.	<ul style="list-style-type: none"> Check the rated Voltage? 	<ul style="list-style-type: none"> Cut the power and contact customer service. It is normal to get “E03” when putting only water. This is only for 120V.
When the time cannot be preset.	<ul style="list-style-type: none"> Is the current time correct? Is AM or PM set properly? Did you set the reservation time over 13 hours? 	<ul style="list-style-type: none"> Set the current time(Refer to page 15). Check the AM and PM. Maximum reservation time is 13 hours.
When the lid cannot close	<ul style="list-style-type: none"> Is the inner pot correctly inserted in the main body? Is the lid handle on the top cover set to “Lock”? Is there hot food in the inner pot? 	<ul style="list-style-type: none"> Please put in the inner pot correctly. Please turn the “lid” handle to “Lock” Pull the pressure handle to aside once.
When “ E_u ”, “ :00 ” are shown on the LCD by turns	<ul style="list-style-type: none"> Micom power is out 	<ul style="list-style-type: none"> Please cut the power and contact customer service
When “ E_p ”, “ :00 ” are shown on the LCD by turns	<ul style="list-style-type: none"> The sensor is broken 	<ul style="list-style-type: none"> Please cut the power and contact customer service
“ E_uF ” mark shows up during the product operation	<ul style="list-style-type: none"> Micom memory is out. 	<ul style="list-style-type: none"> Please cut the power and contact customer service
When “ H_H ”, “ H_H ” are shown on the LCD by turns		<ul style="list-style-type: none"> Is there power cut while in cooking?
When the rice is not cooked.	<ul style="list-style-type: none"> COOK/TURBO button is pressed? Is there power cut while in cooking? 	<ul style="list-style-type: none"> Press the COOK/TURBO button once. And check “E_” sign on the display. Re-press the ‘COOK/TURBO’ button.
When the rice is not well cooked.	<ul style="list-style-type: none"> Did you use the measuring cup for the rice? Did you put proper amount of water? Did you rinse the rice before cooking? Did you put rice in water for a long time? Is the rice old or dry? 	<ul style="list-style-type: none"> Refer to page 16~17. Add water about half the notch and then cook.

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
Bean (other grains) is half cooked.	<ul style="list-style-type: none"> Is bean (other grains) too dry? 	<ul style="list-style-type: none"> Soak or steam beans and other grains before cooking in the pressure cooker in order to avoid partially cooked beans or grains. Beans should be soaked for -2-minutes or steamed for-2-minutes prior to cooking, depending on your taste.
Rice is too watery or stiff.	<ul style="list-style-type: none"> Is the menu selected correctly? Did you properly measure water? Did you open the top cover before cooking was finished? 	<ul style="list-style-type: none"> Select the correct menu. Properly measure water. Open the top cover after cooking finished
When the water overflows.	<ul style="list-style-type: none"> Did you use the measuring cup? Did you use proper amount of water? Is the menu selected correctly? 	<ul style="list-style-type: none"> Refer to page 16~17.
When you smell odors while warming.	<ul style="list-style-type: none"> Did you close the top cover? Please check if the power cord is plugged. Did it warm over 12 hours? Is there any other substance such as rice scoop or cold rice? Is bean (other grains) too dry? 	<ul style="list-style-type: none"> Select the correct menu. Properly measure water. Open the top cover after cooking finished
"E ₁₁ ", "E _{1P} ", "E _{1t} " Signs show up.	<ul style="list-style-type: none"> Temperature sensor or fan motor does not work properly. 	<ul style="list-style-type: none"> Unplug the power cord and call the Service center.
Warming passed time mark blinks during keeping warm.	<ul style="list-style-type: none"> 24 hours has not passed yet after Keeping warm 	<ul style="list-style-type: none"> This function alarms if the rice remained warm for more than 24 hours.
Rice has gotten cold or a lot of water flow during Keeping warm	<ul style="list-style-type: none"> Keeping warm was set in "Sleeping" mode 	<ul style="list-style-type: none"> Keep warm after cancelling or setting "Sleep Keeping Warm" mode depending on the necessity.
If "E _{do} " sign is appears.	<ul style="list-style-type: none"> It shows on the display when pressing "Start" button again, or when the cooking has finished and you've never ever open turned the handle to "Unlock" 	<ul style="list-style-type: none"> It can be solved by turning handle to "Unlock" and then turn to "Lock"
"E _{co} " sign shows up	<ul style="list-style-type: none"> Detachable cover is not mounted 	<ul style="list-style-type: none"> Mount detachable cover(Refer to page 12) If "E_{co}" sign is displayed continuously even though you already installed detachable cover, please contact customer service.
The power is not on after plug in the power cord,		<ul style="list-style-type: none"> Please turn on the standby power switch button.
Alarm sounds or reheating does not work while keeping warm	<ul style="list-style-type: none"> Detachable cover is not mounted 	<ul style="list-style-type: none"> Mount detachable cover(Refer to page 12).
"E _{P1} ", "E _{P2} ", "E _{P3} ", "E _{P4} ", "E _{P5} ", "E _{P6} ", Sign shows up	<ul style="list-style-type: none"> Appears when there is an abnormality after pressure check. 	<ul style="list-style-type: none"> Refer to How to use pressure check and use it correctly.
"E _{P7} " Sign shows up	<ul style="list-style-type: none"> Appears when an overpressure occurs. 	<ul style="list-style-type: none"> Unplug the power cord and call the Service center
"E _{P8} ", "E _{P9} " Sign shows up	<ul style="list-style-type: none"> Pressure sensor does not work properly. 	<ul style="list-style-type: none"> Unplug the power cord and call the Service center



※ Please refer to our website (www.cuckoo.co.kr) for more information.
 ※ After cooking refer to page 12 of the notes upon the inner pot washing.

Recipe		Ingredients	Directions
Delicious Rice	Glutin. Rice	Rice 6 cups * The "cup" in ingredients means a measuring cup in the rice cooker. 1 cup (180cc) is for one person.	1. Put clean-washed rice in the inner pot and pour water up to the line for Glutin Rice. (Glutin Rice : 6, Pea Rice : 3) 2. Lock the lid, and push the Pressure GLUTIN. RICE button.
	Pea Rice	3 cups of rice, 1/2 cup of pea, 1 tablespoonful of sake, 1.5 teaspoonful of salt. ※ Boil pea before cooking.	
	Boiled Barly	2 cups of rice, a cup of barley	1. Put clean-washed rice and barley in the inner pot and pour water up to the line 3 for mixed rice. 2. Lock the lid and Press the Pressure MIXED RICE button.
Mixed Rice	Five-grain Rice	Rice 1.5cup, millet1/3cup, glutinous rice1/2cup, red beans 1/3cup, sorghum1/3cup and salt 1 teaspoon	1. Drain the grains after washing. 2. Put clean rice with prepared ingredients with some salt and pour water up to the line 3 for mixed rice. 3. Lock the lid and Press the Pressure MIXED RICE button.
	Boiled Fresh Germinated Brown Rice	Brown rice 4 cups	1. Wash and put brown rice and prepared ingredients into the inner pot. Pour water up to the line 4 for GABA rice. 2. Lock the lid and select the GABA RICE with the SELECTION button. Press the COOK/TURBO button. (Set time: 3Hours)
	Boiled Brown Rice with Red Beans	Brown rice 1 cup, rice 2 cups and red beans 1/3 cup	1. Wash and put brown rice into the inner pot. Pour water up to the line 3 for GABA rice. 2. Lock the lid and Press the Pressure BROWN RICE button.
Well being Rice	Green Tea Rice Blended with Chicken Chest Flesh	2 cups of brown rice, 3g of green tea leaf, 10g of green tea powder, 4 nuggets of chicken chest flesh, a little bit of olive oil, a little bit of salt, a little bit of pepper, 5g of celery, a little bit of lime, a little bit of rosemary	1. Wash and put brown rice and prepared ingredients into the inner pot. Pour water up to the line 2 for GABA rice. 2. Lock the lid and select the GABA RICE with the SELECTION button. Press the COOK/TURBO button. (Set time: 3Hours)
	Mushroom Tian	2 cups of brown rice, 20g of brown gravy sauce, a little bit of salt, 2 sheets of sesame leaves, 1/3 pieces of pumpkin, a pack of shimeji mushroom ※ Mushroom may be chosen as preferred in the family.	
	Saessak Bibimbap (rice with sprout and vegetables)	2 cups of brown rice and some sprouts and vegetables. ※ Seasoning red pepper paste : Red pepper paste 1/2cup, beef (crushed)40g, sesame oil 1tablespoon, honey 1 tablespoon and sugar 1tablespoon, 1/3 cup of water	
SUPER GRAIN	Kamut Rice	Rice 2+1/3 cups, kamut 2/3 cup (The ratio between rice and kamut is desirable to be 8:2.)	1. Separately wash kamut and rice, add kamut first into the Inner Pot, put rice in, and add water up to Mixed rice Water Level 3. 2. Put the Cover on, select the SUPER GRAIN menu with the SELECTION button, set the soaking time to be three hours, and press the COOK/TURBO button. ※ If you want kamut to become softer, soak it in water before cooking.
	Oat Rice	Rice 2 cups, oats 1 cup (The ratio between rice and oat is desirable to be 7:3.)	
	Chick Pea Rice	Rice 2+1/3 cups, chick pea 2/3 cup (The ratio between rice and chick pea is desirable to be 8:2.)	1. Wash rice and super grains, add them into the Inner Pot, and add water up to Mixed rice Water Level 3. 2. Put the Cover on, select the SUPER GRAIN menu with the SELECTION button, set the soaking time to be 0 hour, and press the COOK/TURBO button. ※ If you want super grains to become softer, soak them in water before cooking.



Recipe

Recipe		Ingredients	Directions
SUPER GRAIN	Green lentil Rice	Rice 2 cups, green lentil 1 cup (The ratio between rice and green lentil is desirable to be 7:3.)	1. Wash rice and super grains, add them into the Inner Pot, and add water up to Mixed rice Water Level 3. 2. Put the Cover on, select the SUPER GRAIN menu with the SELECTION button, set the soaking time to be 0 hour, and press the COOK/TURBO button. ※ If you want super grains to become softer, soak them in water before cooking.
	Quinoa Rice	Rice 2 cups, quinoa 1 cup (The ratio between rice and quinoa is desirable to be 7:3.)	
PORRIDGE	White Porridge	Rice 1 cup	1. Put the prepared ingredients in the inner pot and pour water up to the appropriate line depending on the quantity of food to be served. (Rice porridge: water up to the line 1 for Thick porridge, Chinese porridge: water up to the line 1 for Thin porridge) * Note: The maximum quantity for rice porridge is two cups, and the maximum quantity for Chinese porridge is 1.5cups. 2. Lock the lid and Press the Pressure PORRIDGE button.
	Pine Nut Porridge	Rice 1 cup, pine nut 1/2cup and some salt	
	Abalone Porridge	A cup of rice, 1 tablespoonful of sesame oil, 1 piece of abalone, a little bit of salt	
	Special Chicken Porridge	Rice 1cup, chicken 200g, chicken soup 600cc, green pepper 1 unit, red pepper 1 unit and some salt ※ Seasoning : Chopped scallion 1 tablespoon, crushed garlic 1 tablespoon, soy sauce 2 tablespoons, some ground sesame mixed with salt, sesame oil 2 teaspoons and some ground pepper	
	Red Bean Porridge	Rice 1 cup, 1/3 cups of red bean, 1 cups of glutinous rice	1. Put the prepared ingredients in the inner pot and pour water up to the appropriate line depending on the quantity of food to be served. (Pine Nut Porridge, Special Chicken Porridge: water up to the line 1.5 for Thick porridge, Abalone Rice Porridge, Red Bean Porridge: water up to the line 1 for Thick porridge) 2. Lock the lid and Press the Pressure PORRIDGE button.
Chicken Soup	Chicken Soup	1 chicken(1kg), 2 root of susam ginseng, 10dates, 1 cup of glutinous rice, a little bit of salt, pepper powder and garlic	1. Make cuts on the bottom and both sides of prepared chicken stomach, and punch hole. 2. Fill glutinous rice and garlic soaked for 2 hours or more in the stomach of the trimmed chicken. (If glutinous rice is not soaked, it may be under-cooked.) 3. To make the gravy thick depending on preference of taste, put half of the glutinous rice into stomach, and take out the rest half outside. 4. Insert two legs into the cut hole, and fix them. 5. Put the prepared chicken into My Caldron, and after putting in cleanly washed susam ginseng and dates, pour water up to Glutin rice water graduation 6. 6. Lock the lid, press SELECTION button, and after selecting Chicken Soup, press Pressure COOK/TURBO button.

LOW/HIGH Press Steam Cooking Time Table


COOKING	COOKING TIME		COOKING	COOKING TIME		COOKING	COOKING TIME		COOKING	COOKING TIME	
	LOW PRESS/STEAM	HIGH PRESS/STEAM		LOW PRESS/STEAM	HIGH PRESS/STEAM		LOW PRESS/STEAM	HIGH PRESS/STEAM		LOW PRESS/STEAM	HIGH PRESS/STEAM
Steamed RiceCake	45min	45min	Steamed Blue Crab	30min	30min	Steamed Eggplant	15min	15min	Boiled egg	25min	15min
Steamed Rib	55min	40min	Steamed Fish	45min	25min	Steamed Pumpkin	15min	15min	Steamed egg	20min	20min
Steamed Chicken	50min	45min	Steamed Clam	35min	35min	Steamed Chestnut	40min	25min	Rice cake gratin	20min	20min
Boiled Pork	45min	30min	Steamed Bean Curd	25min	15min	Steamed Sweet Potato	45min	25min	Shrimp letchup fried rice	15min	15min
Five-flavor Pork	55min	40min	Multi-Flavor Glutinous Rice	40min	30min	Steamed Potato	40min	40min	Rice pizza	20min	20min
Hard-boiled Cuttlefish	30min	20min	Japchae	20min	20min	Steamed Corn	55min	40min	Butter chocolate cake	45min	45min
Steak	35min	25min	Steamed Dumpling	20min	15min	Fresh Cream Cake	40min	40min	Tteokbokki	20min	15min

※ Please refer to our website (www.cuckoo.co.kr) for more information.

각 부분의 이름



각 부 명칭(외부)

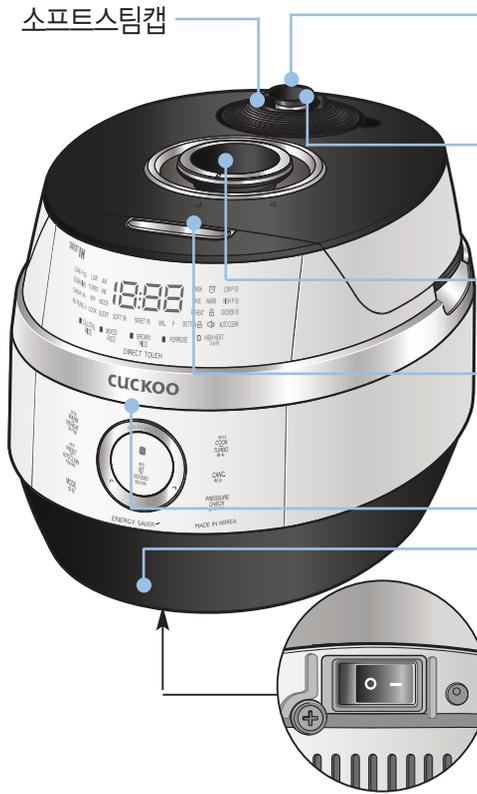

압력추

취사나 요리 전 압력추를 수평으로 맞추어 주십시오. 내부의 압력이 일정하도록 조절하며, 젓히면 수동으로 증기배출이 됩니다.

자동 증기 배출구

취사나 요리가 끝나거나 보온시 자동으로 증기를 배출시켜 줍니다. 필요할 경우 취소 버튼을 눌러 증기를 배출 시킬 수도 있습니다.

뚜껑 결합 손잡이

취사나 요리 시 손잡이 표시 (●)가 "♠" (잠김) 위치로 되어야 작동이 됩니다.

뚜껑 열림 버튼

뚜껑 결합 손잡이를 "♠" (잠김)에서 "♠" (열림)으로 돌린 후 뚜껑 열림 버튼을 누르면 뚜껑이 열립니다. (취사나 요리 중에는 뚜껑 열림 버튼을 누르지 마십시오.)

기능조작부 및 표시부

대기전력 차단 스위치

전원코드 연결 후 전원이 들어오지 않을 경우 대기전력 차단 스위치가 (ON)으로 되었는지 확인 바랍니다.

- 사용시 : (ON)
- 미사용시 : (OFF)

(대기전력이 차단되어 에너지 절전효과가 있습니다.)

※ 취사 또는 요리 진행 중 대기전력 차단 스위치가 (OFF)가 되면 자동증기 배출장치가 작동하여 내용물 비산의 우려가 있습니다.

부속품 안내



사용설명서 및 요리안내



주걱



계량컵



찜판



청소용 핀·브러쉬 키트
(실물은 본체 바닥면에 부착되어 있습니다. 37쪽을 참조하여 사용하십시오.)

각 부 명칭(내부)

패킹

패킹은 사용방법 및 횟수에 따라 1년~3년 정도 사용 후 교환하여 주십시오.

뚜껑

분리형커버

압력조절판

안전패킹 커버

안전패킹

압력센서

홀더가이드

분리형커버 손잡이

물받이

보온이나 취사, 요리 후에는 항상 물받이에 있는 물을 버려주세요. 물받이에 밥물이 고여 있을 경우 냄새의 원인이 됩니다.

전원플러그

전원코드


온도감지기



내솥 손잡이

내솥

내솥을 본체에 똑바로 넣습니다.

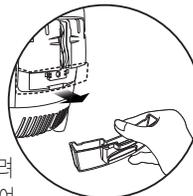




제품 손질 방법 / 뚜껑 결합 손잡이의 사용법에 관하여

- 청소를 잘하지 않으면 보온 중 냄새가 나는 원인이 됩니다. 특히 뚜껑부는 자주 청소해 주십시오.
(전원플러그를 빼고 본체의 열이 식고 난 후 손질하십시오.)
- 본체·뚜껑은 물기를 제거한 행주로 닦아 주십시오. 벤젠, 신나 등은 사용하지 마십시오.
- 분리형 커버 및 기타 스테인리스 재질 부분은 락스 또는 염소 성분이 첨가된 세제로 세척하거나 닦지 마십시오.
- 사용 중 분리형커버나 내솔내부에 밥물이 묻어 전복막이 생기는 수가 있으나, 위생상 아무런 영향이 없습니다.


분리형 커버 및 압력패킹

분리형커버 세척 후에는 반드시 뚜껑에 장착해 주십시오.
분리형커버가 장착되지 않으면 취사, 예약취사가 되지 않습니다. (보온시 경고음 발생)

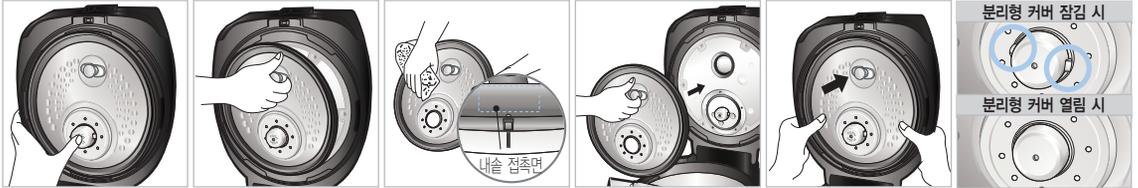


- ① 분리형 커버 손잡이를 잡고 버튼의 중압을 누른 후 손잡이를 화살표 방향과 같이 잡아 당기면 밥솥과 쉽게 분리되어 세척이 가능합니다.
※ 분리형커버를 분리 또는 장착시 떨어질 우려가 있으니 분리형커버 손잡이를 잡아주십시오.
※ 버튼의 중압을 누르지 않을 경우 동작이 되지 않을 수 있으니 버튼의 중압을 눌러 사용해 주십시오.
- ② 주방용 중성세제 및 스폰지로 자주 세척해 주시고 물기를 제거한 행주로 닦아 주십시오.
※ 압력패킹의 내솔 접촉면에는 밥알 등이 붙지 않게 닦아 주시고 청결히 관리하면 제품을 더 오래 사용할 수 있습니다.
- ③ 장착 시에는 분리형 커버 손잡이를 잡고 뚜껑에 부착한 후 분리형 커버의 하단부를 '딸깍' 소리가 나도록 밀어 완전히 결합시켜 주십시오.

압력패킹의 세척이나 교환으로 분리 후 재조립시에는 빠진곳이 없도록 완전히 끼워넣고 사용해 주십시오.

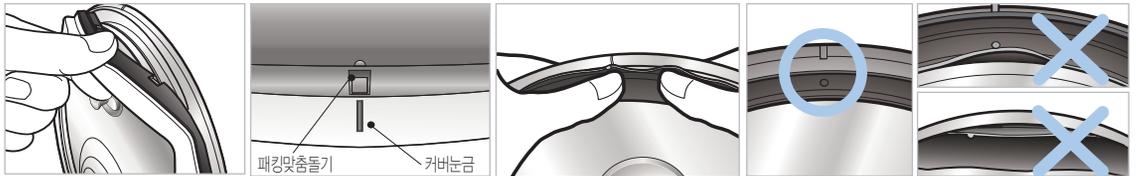

- ① 압력패킹 분리 시에는 그림과 같이 잡고 당겨 주십시오.
- ② 조립 시에는 6군데의 압력패킹 맞출돌기와 커버눈금을 먼저 맞춰 끼워주십시오.
- ③ 6군데를 끼운 후 그림과 같이 압력 패킹을 돌려가며 눌러 완전히 끼워주십시오.
- ④ 전 둘레에 그림과 같이 완전히 끼워지지 않은 구간이 있는지 확인하여 주십시오. 압력패킹이 완전히 끼워지지 않으면 증기가 누설될 수 있습니다.

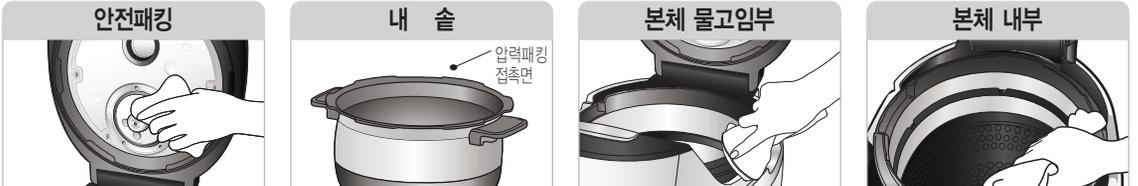

- 사용 전·후 증기배출구가 막히지 않도록 깨끗이 부드럽게 닦아 주십시오. 안전패킹은 부드럽게 닦아 주시고 강제로 빼거나 제품에서 떼어내지 마시고 사용 전·후 결합 상태를 확인해 주십시오. 결합이 불완전한 경우 반드시 서비스 센터에 문의 하십시오.
- 내솔의 바깥면이나 밀면의 이물질 및 물기를 깨끗이 닦아 주십시오. 거친 수세미, 솔, 연마제 등은 코팅이 벗겨질 수 있으므로 주방용 세제와 부드러운 천 스폰지로 닦아 주십시오.
※내솔의 압력 패킹 접촉 부위를 청결히 관리하면 제품을 더 오래 사용할 수 있습니다.
- 취사 시 발생하는 밥물은 증기배출구로 통해 이곳에 고일수 있도록 설계되어 있으므로 취사 완료 후 물기를 제거한 행주로 깨끗이 닦아 주십시오.
- 온도감지기에 이물질이 눌러 붙어 있는 경우 금속핀이 손상되지 않게 제거 하십시오.

뚜껑 결합 손잡이의 사용법에 관하여

1. 취사나 요리 시에는 뚜껑을 닫고 뚜껑 결합 손잡이를 "♣" (잠김) 방향으로 확실하게 돌려주십시오. 기능표시부에 "잠김" 표시가 나타납니다. 이는 뚜껑이 확실하게 잠겨 취사를 선택할 수 있도록 표시하여 주는 안전장치의 기능입니다.
2. 취사나 요리 완료 후 뚜껑 손잡이를 "♣" (잠김)에서 "☺" (열림) 방향으로 돌린 후, 뚜껑 열림 버튼을 눌러 뚜껑을 열어주십시오. 제품 내부에 증기가 완전히 배출되지 않으면 뚜껑 결합 손잡이가 "♣" (잠김)에서 "☺" (열림)쪽으로 쉽게 들어가지 않습니다. 이때 뚜껑 결합 손잡이를 강제로 돌리지 마시고 압력추를 젖혀 내부 증기가 완전히 배출된 후 다시 조작해 주십시오.
3. 뚜껑을 열고 닫을 때는 항상 뚜껑 결합 손잡이 위치를 "☺" (열림) 방향으로 확실하게 돌려 주십시오.
 - 기능표시부에 "잠김" 표시가 나타나지 않으면 취사, 예약/자동세척 버튼이 작동하지 않습니다. 정확하게 다시 "♣" (잠김)위치로 돌려 주십시오.
 - 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 "♣" (잠김) 방향으로 완전히 돌아갔을 때 뚜껑이 잠긴 상태입니다.
 - 뚜껑 결합 손잡이가 열림 방향으로 돌아갔을 때 "♣" 표시가 3회 점멸 후 소등되며, 잠금 방향으로 돌아갔을 때 "♣" 표시가 점등됩니다.






제품 손질 방법

압력 노즐막힘 손질 방법

압력추

이물질 등으로 압력추 증기 배출구가 막혀 있으면 제 기능을 발휘하지 못하므로 사용 전 · 후에는 아래의 압력추/증기배출구 청소방법을 참조하여 압력추를 분리한 다음 청소용 핀으로 구멍을 뚫은 후 사용해 주십시오.
증기 배출구의 구멍이 막히지 않았는지 정기적으로 점검해 주십시오.
※ 압력추의 디자인은 그림과 다를 수 있습니다.

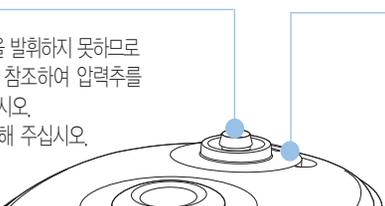

소프트 스팀캡

취사나 요리 완료 후 떼어낸 다음 주방용 중성세제 및 스펀지로 자주 세척해 주시고 제품 뚜껑에 고인물은 물을 꼭 잔 행주로 닦아 주십시오.


〈압력추/증기배출구 청소방법〉



1 뚜껑 결합손잡이를 "잠" (잠김) 방향으로 돌린후 압력추를 잡고 위로 들면서 화살표 방향 (반시계방향) 으로 돌려서 분리합니다.



3 청소후 압력추를 조립할때는 분리할 때와 반대 방향 (시계방향) 으로 돌려서 끼워 넣습니다.
4 압력추가 완전히 조립되면 추가 자유롭게 돌아 갑니다.

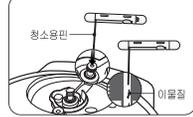


2 청소용 핀&브러쉬 킷(실물은 본체 바닥면에 부착되어 있음)으로 구멍을 뚫습니다.
※청소용 핀으로 압력추 증기 배출구만 청소하시고, 다른 구멍은 안전장치이므로 절대로 피르지 마십시오.


내술 · 부속품 ▶ 주방용 중성세제와 스펀지로 씻어 주십시오.

거친수세미	금속성수세미	연마제	쇠솔
-------	--------	-----	----


청소용 핀 & 브러쉬 킷 사용방법

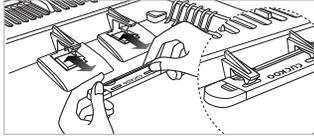


1 청소용 핀&브러쉬 킷 (제품 바닥면 부착)을 그림과 같이 분리합니다.

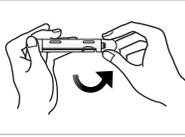


2 그림과 같이 브러쉬 뚜껑을 잡고 화살표 방향으로 힘을 주어 뚜껑을 분리합니다.

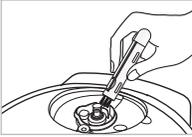

3 청소용 브러쉬로 밥물고임 방지 배수로나 행주로 닦기 어려운 부분을 깨끗이 청소 할 수 있습니다.

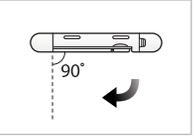

4 청소용 핀을 사용할 때에는 화살표 방향으로 청소용핀을 당겨서 청소용 핀 · 브러쉬 킷 몸체와 90° 도 맞춰 주십시오.

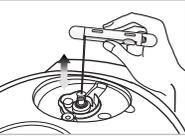


5 청소용 핀은 증기 배출구 청소시에만 사용하십시오.

소프트 스팀캡 손질 방법


취사나 요리 완료 직후에는 소프트 스팀캡이 뜨거우므로 만지지 마십시오. 화상을 입을 수 있으므로 주의하십시오.



1 소프트 스팀캡을 그림과 같이 홀 부분을 손가락으로 잡고 위로 살짝 들어 올리 면서 떼어냅니다.

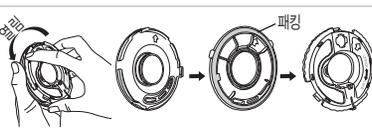

2 앞쪽에 있는 후크를 화살표 방향으로 돌려서 분해하고, 주방용 세제 및 스펀지로 자주 세척해 주십시오. 세척 후 순서대로 조립해 주십시오. ※ 패킹을 떼는 방향에 주의해서 패킹 홀을 잘 맞춘 후 끼워 주십시오.

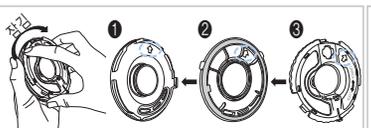


3 소프트 스팀캡을 조립하여 끼울 때에는 스팀캡 홀 부분을 맞춰 끼우고, 아래쪽의 홀과 돌기 부분을 맞춘 후, 화살표 방향으로 눌러 앞쪽의 후크를 확실하게 끼워 주십시오.



4 제품에 소프트 스팀캡을 장착할 때에는 그림과 같이 소프트스팀캡 을 안착한 후 소프트스팀캡을 눌러 단단히 고정시켜 주십시오. ※ 소프트 스팀캡을 분리 할 때 양쪽 돌기를 잡고 아래방향으로 당기면 손쉽게 분해 됩니다.


물받이/밥물고임방지배수로 손질방법

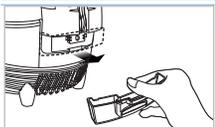


1 물받이를 분해합니다.




2 밥물고임방지배수로 캡의 손잡이를 잡고 아래방향으로 밀어서 분리합니다.

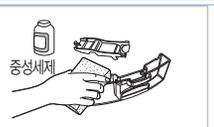

3 밥물고임방지배수로 및 물받이를 물기를 제거한 행주로 닦거나 주방용 중성세제 및 스펀지로 세척해 주십시오.

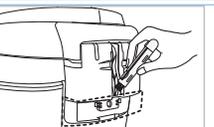

4 밥물고임방지배수로로 청소용 브러쉬를 이용하여 그림과 같이 깨끗이 청소해 주십시오.

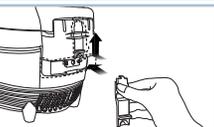

5 청소 후 그림과 같이 밥물고임방지 배수로캡을 위로 밀어서 끼워 넣은 후 물받이를 확실하게 장착합니다.

뚜껑이 닫히지 않을 때의 주의사항

뚜껑을 강제로 닫지 마십시오. 고장의 원인이 됩니다. 뚜껑이 잘 닫히지 않을 때에는 다음 사항을 확인하십시오.



1. 내술이 제품 본체에 완전히 들어가 있는지 확인합니다. (내술에 부착된 손잡이를 제품 본체 홈 부에 안착하십시오.)
2. 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 오른쪽 그림과 같이 되어 있어야 뚜껑이 닫힙니다.



3. 제품 내에 증기가 발생하는 음식물이나 뜨거운 물 등이 들어 있으면 닫는 순간 압력이 걸려서 뚜껑이 잘 닫히지 않습니다. 이때는 압력추를 쫓힌 다음 뚜껑을 닫고 뚜껑 결합 손잡이를 시계방향으로 돌려서 뚜껑을 체결 합니다.



기능 조작부의 이름과 역할 / 음성 안내기능의 설정과 해제

기능 조작부의 이름과 역할

SLIDE TOUCH
 > : 우측 선택 버튼
 < : 좌측 선택 버튼
 슬라이드부
 메뉴를 선택할 경우 사용, 시간을 변경할 경우 사용,
 설정 버튼으로 선택된 기능을 변경할 경우 사용

Energy Eye (에너지 아이)
 ▶ 52쪽 참조

보온/재가열 버튼
 보온을 할 경우나 식사 직전
 밥을 따뜻하게 데울 경우 사용
 ▶ 49쪽 참조

예약/자동세척 버튼
 예약취사를 할 경우 사용
 ▶ 47~48쪽 참조
 자동세척/자동살균세척을 할 경우 사용

설정 버튼
 음성 설정 현재 시간(39쪽),
 음성 볼륨(38쪽), 보온 온도(49쪽),
 맞춤 보온(50쪽), 맞춤 밥맛(42쪽),
 취침 보온(50쪽), 누룽지 놓을 강하
 자동 절전(52쪽), 화면조명 절전(53쪽),
 취사 잔여시간 표시(53쪽), 아간 음성 볼륨(39쪽),
 에너지아이(52쪽)를 설정할 경우 사용

SMART IH

LOW P (G) LOW AM S.GRAINS TURBO PM GABA (R) MY MODE NU RUNG JI COOK SLEEP SOFT (R) SWEET (R) MIN. P BUTTON AUTO CLEAN

FINISH SAVE WARM REHEAT CHICKEN (S) HIGH P (S) AUTO CLEAN

GLUTIN. RICE MIXED RICE BROWN RICE PORRIDGE HIGH HEAT 고화력

DIRECT TOUCH

CUCKOO

ENERGY EYE

ENERGY SAVER

MADE IN KOREA

취사 COOK TURBO 재속

CANC. 취소

PRESSURE CHECK 압력체크

기능표시부

고화력 버튼
 백미, 잡곡, 현미 메뉴의 고화력
 취사를 할 경우 사용 ▶ 41쪽 참조

DIRECT TOUCH
 백미, 백미고화력, 잡곡, 잡곡고화력,
 현미, 현미고화력, 영양죽 메뉴를 즉시
 취사 할 경우 사용

확인 버튼
 선택한 기능을 설정 하거나
 버튼잠금 기능을 설정 할 경우 사용
 ▶ 53쪽 참조

취사/재속 버튼
 취사 및 요리를 시작 할 경우 사용
 ▶ 41쪽 참조

취소 버튼
 선택한 기능을 취소 할 경우 사용하거나 자동
 으로 증기를 배출시킬 때 사용 (취사 또는 요리
 중에 취소시킬 경우 0.3초간 (배출 온도가 높으
 면 15초간) 눌러 주십시오.) ▶ 54쪽 참조
 절전기능 진입시 사용 ▶ 52쪽 참조

압력체크 버튼
 압력체크를 할 경우 사용 ▶ 46쪽 참조

※ 전원플러그를 꽂고 아무 동작을 하지 않은 경우, 그림과 같이 화면상태가 나타날 때가 대기 상태입니다.
 (대기 상태 화면의 메뉴, 시간, 음성 유무, 맞춤밥맛 단계는 사용자의 설정에 따라 다릅니다.)

※ 기능 조작 시 취소 버튼을 누르면 대기 상태로 전환됩니다.

※ 버튼은 부저음이 날 때까지 확실히 눌러 주시고 본 명판의 디자인은 실물과 다를 수 있습니다.

< 대기 상태 화면 >

음성볼륨 조절 기능

대기 상태에서 설정 버튼을 3회 누르면 진입합니다. (설정 버튼을 초기에 누를 시 0.3초 이상 눌러야 진입 가능합니다.)



설정 버튼을 3회 눌러 음성볼륨 설정모드 진입 시 표시부에 **3**이 표시됩니다.

- ▶ 설정, 확인, 취소 버튼이 켜집니다.
- ▶ “음성볼륨 설정모드 입니다. 슬라이드 터치로 볼륨을 조절한 후 확인 버튼을 눌러주세요.” 하는 음성이 나옵니다.



선택 버튼으로 **OFF**가 설정되면 **OFF** 표시가 깜빡거리며 “음성 기능이 해제되었습니다.” 하는 음성이 나옵니다.

선택 버튼으로 **1**부터 **5**까지의 음성볼륨 크기를 설정할 수 있습니다.



- ▶ 확인 버튼이 점멸하고, 설정, 취소 버튼이 켜집니다.
- ▶ 계속 누르고 있으면 연속으로 변환한다.
- ▶ 원하시는 음성볼륨을 설정하신 후 확인 버튼을 눌러 주십시오.
- ▶ 버튼을 누르지 않고 7초가 경과되면 “시간이 초과되어 기능설정이 취소 되었습니다.” 하는 음성과 함께 기능이 설정되지 않고 취소되며 대기설정으로 돌아갑니다.



현재시간의 설정 / 야간 음성볼륨 설정

현재시각은 이렇게 맞추십시오.

현재시각을 맞추려면 다음 사항을 꼭 알아두십시오. 예) 현재 시각이 오전 8시 25분일 경우

1 전원플러그를 꽂은 후 설정 버튼을 2회 누릅니다.

- ▶ 설정 버튼을 초기에 누를 시 0.3초 이상 눌러야 진입 가능합니다.
- ▶ “현재 시각 설정 모드입니다. 슬라이드 터치로 현재시각을 맞춘 후 확인 버튼을 눌러주세요” 하는 음성이 나옵니다.
- ▶ 설정, 확인, 취소 버튼이 켜집니다.



2 선택 버튼으로 시를 “8” 에 맞추고 분을 “25” 에 맞춥니다.

- ▶ > 우측 선택 버튼을 누를 때마다 1분 단위로 증가합니다.
- ▶ < 좌측 선택 버튼을 누를 때마다 1분 단위로 감소합니다.
- ▶ 버튼을 계속 누르고 있으면 10분 단위로 연속으로 변합니다.(반복기능) 반복기능을 이용하여 원하는 시를 먼저 맞춘 후, 1분 단위로 분을 맞추면 원하는 시각을 더 편리하게 설정 할 수 있습니다.
- ▶ 오전, 오후가 바뀌지 않도록 주의하여 맞춥니다.
- ▶ 낮 12:00의 경우는 오후 12:00로 표시됩니다.



3 원하는 시각으로 설정이 완료되면 확인 버튼을 눌러주십시오.

- ▶ 확인 버튼이 점멸하고 설정, 취소 버튼이 켜집니다.
- ▶ 확인 버튼을 누르지 않고 7초가 경과되면 “시간이 초과되어 기능 설정이 취소되었습니다.” 하는 음성과 함께 시각 설정이 취소됩니다.



야간 음성볼륨 설정 기능

야간 음성볼륨 줄임 기능은 야간시간(10:00 PM~05:59 AM)의 음성볼륨을 줄이는 기능으로 필요에 따라 설정하여 주십시오. 이 기능은 야간 시간 중에만 동작합니다.

▶ 야간 음성볼륨 설정방법



예) 3단계, 음성 크기의 60%

- OFF : 음성 없음.
- 1 : 음성 크기의 20%
- 2 : 음성 크기의 40%
- 3 : 음성 크기의 60%
- 4 : 음성 크기의 80%
- 5 : 음성 크기의 100%

설정 단계에 따른 야간음성 크기

1. 대기상태에서 설정 버튼을 12회 누르면 야간 음성볼륨 줄임 설정 모드로 진입합니다. 설정 버튼을 초기에 누를 시 0.3초 이상 눌러야 진입 가능합니다.
2. 야간 음성볼륨 줄임 설정 모드로 들어왔을 때 “야간 음성볼륨 설정 모드입니다. 슬라이드 터치로 야간 음성볼륨을 조절한 후 확인 버튼을 눌러주세요.” 하는 음성이 나옵니다. 이때, 설정, 확인, 취소 버튼이 켜집니다.
3. 선택 버튼을 누르면 단계가 선택되면서 음성의 크기가 바뀝니다. 원하시는 음성의 크기를 선택 후 확인 버튼을 눌러 주세요. 이때, 확인 버튼이 점멸하고, 설정, 취소 버튼이 켜집니다.
4. 선택 버튼을 조절하여 “OFF” 표시가 되면 “야간 음성 기능이 해제되었습니다.” 하는 음성이 나옵니다. 확인 버튼을 눌러 기능을 선택하여 주십시오. 이때, 확인 버튼이 점멸하고, 설정, 취소 버튼이 켜집니다.
5. 야간 음성볼륨 줄임 설정 모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 “시간이 초과되어 기능 설정이 취소되었습니다.” 하는 음성과 함께 기능이 설정되지 않고 취소되며 대기설정으로 돌아갑니다.



취사 전 준비사항


1 내솥을 깨끗이 씻은 후 물기를 닦습니다.

- ▶ 내솥을 씻을 때는 부드러운 행주를 사용하여 주십시오.
- ▶ 강한 수세미를 사용하면 내솥 안쪽 표면이 벗겨지는 경우가 있습니다.



2 계량컵을 사용하여 쌀을 인분수 만큼 별도의 용기에 담습니다.


- ▶ 쌀을 계량컵의 윗면 기준하여 평평하게 맞추면 1인분에 해당됩니다.
(예 : 1인분일 경우 → 1컵, 3인분일 경우 → 3컵)

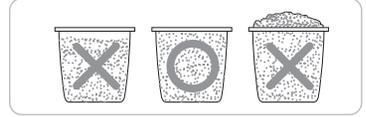

3 맑은 물이 나올 때까지 깨끗이 씻습니다.

4 메뉴에 따라 물의 양을 조절합니다.

- ▶ 바닥이 평평한 곳에 내솥을 올려 놓고, 내솥에 표시된 물눈금에 맞춰 물의 양을 조절합니다.
- ▶ 내솥에 표시된 눈금은 쌀과 물을 함께 부었을 때의 물눈금을 표시합니다.
 - ① 진밥을 원할때 : 물을 규정량보다 많이 부어 주십시오.
 - ② 쌀을 충분히 불렸을 때 또는 된밥을 원할 때 : 물을 규정량보다 적게 부어 주십시오.
 - ③ 밥이 설익거나 고들한 경우 : 쌀의 품종 차이 또는 함수율(묵은쌀) 차이로 발생합니다. 이 경우 기존 취사 물량 대비 1~10% 물량을 늘려서 취사해 주십시오.
- ※ 본 모델은 SOFT백미를 지원하지 않습니다.
- ※ 메뉴별 최대 용량은 40쪽을 참조하십시오.

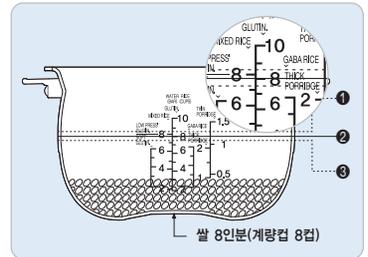

5 전원플러그를 꽂은 후 내솥을 본체에 넣어 주십시오.

- ▶ 내솥을 넣을 때 본체에 완전히 들어가도록 주의하여 넣습니다.
- ▶ 내솥의 바닥면에 쌀 등의 이물질이 붙어 있으면 취사가 잘 되지 않거나 고장의 우려가 있습니다.
- ▶ 내솥이 본체에 정확하게 들어가지 않으면 뚜껑이 닫히지 않습니다.
(내솥의 손잡이가 본체의 홈에 들어가도록 하십시오.)

6 뚜껑을 닫은 후 뚜껑 결합 손잡이를 "옴" (잠김)위치로 돌려 주십시오.

- ▶ 뚜껑 결합 손잡이의 "🔒" 표시가 점등되고, 기능표시부에 "🔒" 표시가 나타나면 뚜껑이 완전히 결합 되었음을 알 수 있습니다.



취사메뉴 사용법

백미	백미를 차지해 취사할 때 사용합니다.	백미저압	찰기없이 부드러운 1.2기압의 저압밥을 드시고자 할 때 사용합니다.
잡곡	백미를 곡류에 섞어서 취사할 경우 사용합니다.	현미발아	현미를 발아시켜 발아현미밥을 드시고자 할 때 사용합니다.
현미	현미를 발아시키지 않고, 현미밥을 드시고자 할 때 사용합니다.	삼계탕	삼계탕을 자동으로 요리해 줍니다.
누룽지	취사할 때 누룽지를 만들어 줍니다.	슈퍼곡물	다양한 슈퍼곡물(카무트, 귀리, 병아리콩 등)을 드시고자 할 때 사용합니다.
영양죽	영양죽을 끓이는 기능입니다.	저압찜, 고압찜	수동으로 찜 시간을 설정하여 저압(1.47기압) 및 고압(2.0기압)에서 요리합니다.
자동세척 (자동살균세척)	취사, 보온 또는 요리 후 배어든 냄새를 세척할 때 사용합니다.	고화력 (백미, 잡곡, 현미)	일반취사와 차별되는 구수하고 차진 밥을 드시고자 할 때 사용합니다. (멜라노이징 현상이 발생할 수 있습니다.)
백미쾌속	<ul style="list-style-type: none"> · 백미메뉴를 선택한 후 취사/쾌속 버튼을 연속하여 두번 누르면 백미쾌속 취사로 동작하여 밥짓는 시간이 단축됩니다. (백미 2인분 기준 약 13분 정도 걸림) · 백미쾌속 취사는 정상취사보다 밥상태가 좋지 않으므로 6인분 이하에서만 사용하여 주십시오. · 취사전 쌀을 20분 정도 불린 다음 백미쾌속으로 취사하시면 밥맛이 더욱 좋아집니다. 		
잡곡쾌속	<ul style="list-style-type: none"> · 잡곡메뉴를 선택한 후, 취사/쾌속 버튼을 연속하여 두번 누르면 잡곡쾌속 취사로 동작하여 밥짓는 시간이 단축됩니다. (오곡밥 2인분 기준 약26분 정도 걸림) · 잡곡쾌속 취사는 정상 취사보다 밥 상태가 좋지 않으므로 6인분 이하에서만 사용하여 주십시오. · 취사전 잡곡을 미리 불리거나 딱딱한 콩, 팥등의 경우 미리 삶아서 취사하시면 밥맛이 더욱 좋아집니다. 		

※ 백미쾌속 및 저인분을 취사할 경우 물받이에 있는 물이 많을 수 있으므로 취사 후 물을 버려 주십시오.



취사는 이렇게 하십시오

1 선택 버튼을 눌러 원하시는 메뉴를 선택합니다.

- 분리형 커버가 장착되어 있는지 확인하여 주십시오.
- 취사 전 압력추를 수평으로 맞추어 주십시오.
- 선택 버튼을 누를 때마다 백미저압 → 슈퍼곡물 → 현미발아 → 누룽지 → 백미 → 백미고화력 → 잡곡 → 잡곡고화력 → 현미 → 현미고화력 → 영양죽 → 자동살균세척 → 삼계탕 → 고압찜 → 저압찜 순으로 반복 선택됩니다.
- 버튼을 계속 누르고 있으면 메뉴 순서대로 연속으로 변합니다.
- 백미, 잡곡, 현미, 영양죽 메뉴의 경우 해당 메뉴의 DIRECT TOUCH 버튼을 누르면 선택 즉시 취사가 진행 됩니다.
- 백미, 잡곡, 현미 메뉴 취사 시작 후 5초 이내에 고화력 버튼 입력시 해당 메뉴의 고화력 취사가 진행 됩니다.
- 백미, 백미고화력, 잡곡, 잡곡고화력, 백미저압, 현미, 현미고화력, 현미발아, 슈퍼곡물 메뉴의 경우 취사가 완료되면 메뉴가 기억되므로 동일 메뉴를 연속 사용할 경우는 메뉴를 선택하지 않아도 됩니다.

예) 백미저압을 선택 할 경우
▶ "백미저압" 이라는 음성이 나옵니다.

2 취사/쾌속 버튼을 눌러 취사를 시작합니다.

- 취사를 하기전에 반드시 뚜껑 결합 손잡이를 "0" (잠김)방향으로 돌리고 취사/쾌속 버튼을 누르면 "백미, 쿠쿠가 27압으로 맛있는 취사를 시작합니다" 하는 음성과 함께 취사가 시작됩니다.
- 뚜껑 결합 손잡이를 "0" (잠김)방향으로 돌리지 않고 취사/쾌속 버튼을 누르면 경고음과 함께 "E01" 이 나타난 후 "뚜껑 결합 손잡이를 잠김으로 돌려주세요" 하는 음성이 나오고 작동되지 않습니다.
- 취사 시작 직후 1분간 취사 완료 예상 시간을 표시합니다.
- 취사 용량이나 수온, 취사 조건에 따라 실제 취사 시간은 차이가 있을 수 있습니다.
- 취사 시작 1분 후에는 일정시간 주기로 남은 취사시간과 목표압력이 표시됩니다. (압력체크 메뉴의 경우, 일정시간 주기로 남은 시간과 실제 압력이 표시됩니다.)

예) 백미를 취사 할 경우
(표시부의 "0" 가 빙글빙글 돌아가고 목표압력을 표시합니다.)

3 뜸들이기 (예 : 백미)

- 뜸 진행 부터는 "뜸들이기를 시작합니다" 하는 음성과 함께 표시부에 남은 취사시간을 표시합니다.
- 메뉴에 따라 남은 시간은 차이가 있습니다.
- 뜸완료 1~4분 전에 증기배출효과음(기차소리)이 나오고 "증기배출이 시작됩니다." 하는 음성과 함께 증기가 자동배출되므로 놀라거나 화상을 입지 않도록 주의하십시오.

예) 10분 남은 경우

4 취사완료

- 취사가 끝날 때 완성음(쿠~쿠~, 쿠쿠하세요, 새소리)이 울리고 "쿠쿠가 맛있는 백미밥을 완성하였습니다. 밥을 잘 저어주세요." 하는 음성과 함께 보온 기능을 시작합니다.
- 보온을 원하지 않을 경우 취소 버튼을 0.3초간 눌러 보온을 취소하여 주십시오.
- 취사가 끝나면 즉시 밥을 골고루 잘 섞어 주십시오.
- 섞지 않고 그냥 두면 밥이 굳고 변색되어 냄새가 발생합니다.
- 뚜껑 결합 손잡이가 잘 돌아가지 않는 경우는 압력추를 찌른 다음 내부 증기를 완전히 빼낸 후 뚜껑 결합 손잡이를 돌려 주십시오.
- 취사 중에는 취소 버튼을 누르지 마십시오. 취사가 취소됩니다.

메뉴별 취사시간																		
구분	백미	백미쾌속	백미고화력	잡곡	잡곡쾌속	잡곡고화력	백미저압	누룽지	현미	현미고화력	슈퍼곡물	삼계탕	영양죽 (원죽)	영양죽 (흰죽)	저압찜	고압찜	압력체크	자동살균세척
취사량	2인분~10인분	2인분~6인분	2인분~10인분	2인분~8인분	2인분~6인분	2인분~8인분	2인분~6인분	2인분~4인분	2인분~6인분	2인분~6인분	2인분~8인분	1마리 (약 1kg)	1컵~2컵	0.5컵~1.5컵	메뉴별 상세 요리안내를	메뉴별 상세 요리안내를	백미 물눈금 2까지	백미 물눈금 2까지
취사 시간	약27분~약38분	약3분~약21분	약27분~약39분	약40분~약56분	약26분~약34분	약41분~약57분	약38분~약47분	약37분~약43분	약52분~약60분	약53분~약61분	약35분~약49분	약7분	약68분~약107분	약73분~약112분	참조하여 주십시오.	참조하여 주십시오.	약98분	약20분
기압 표시	2.0기압	2.0기압	2.0기압	2.0기압	2.0기압	2.0기압	1.2기압	2.0기압	2.0기압	2.0기압	2.0기압	2.0기압	2.0기압	2.0기압	1.47기압	2.0기압	실시간 기압	2.0기압

멜라노이징(미세 밥 늘음) 현상

이 압력밥솥은 밥의 밑면에 얇은 누런 빛깔이 나타나는데, 이는 밥이 잔여수분을 밥 내부로 흡수시켜 밥 특유의 구수한 향기와 맛을 내는 멜라노이징 현상을 일으켜 맛있는 밥이 되도록 설계되어 있기 때문입니다. 특히 예약 취사와 같이 쌀알이 오랜 시간 침전되면 내솥 바닥에 미세전분이 가라앉아 일반 취사보다 멜라노이징(미세 밥 늘음)현상이 심하게 나타날 수도 있습니다.

※ 백미에 곡류를 섞어서 잡곡을 취사할 경우 백미만으로 취사할 때 보다 멜라노이징(미세 밥 늘음)현상이 증가할 수 있습니다.



쿠쿠 맞춤 밥맛 / 쿠쿠 맞춤 취사 기능

쿠쿠 맞춤밥맛이란

세계 최초로 쿠쿠만의 가변밥맛 기술을 개발하여 밥의 부드러운 정도와 차지고 구수한 정도를 자신의 기호에 맞게 선택하여 취사하는 기능으로 소비자가 원하는 밥맛으로 취사할 수 있는 쿠쿠만의 특허 기술입니다.

쿠쿠 맞춤밥맛기능

부드러운밥 단계 증가시 : 밥맛이 부드러워집니다. (부드러움 4단계 선택가능)
구수한밥 단계 증가시 : 밥맛이 더 구수해집니다. 멜라노이징이 발생 할 수 있습니다. (구수함 4단계 선택가능)
※ 기호에 따라 부드러운밥, 구수한밥 단계를 각각 선택하셔도 되고 두 기능을 동시에 선택하셔도 됩니다.

쿠쿠 맞춤밥맛 사용 방법

맞춤밥맛이 지원되는 메뉴(백미, 백미고화력, 잡곡, 잡곡고화력, 현미, 현미고화력, 현미발아, 누룽지, 슈퍼곡물)을 선택하신 후 설정 버튼을 0.3초 이상 누르면 맞춤밥맛 설정모드로 진입합니다.

1 메뉴 선택 화면



2 쿠쿠 맞춤밥맛 진입 화면



원하시는 메뉴를 선택하신 후 설정 버튼을 0.3초 이상 1회 누르면 맞춤밥맛 설정 모드로 진입합니다.

3-1 부드러운밥 단계 조정모드



좌측 선택 버튼을 눌러 원하시는 부드러운밥 단계를 선택하십시오.

3-2 구수한밥단계 조정모드



우측 선택 버튼을 눌러 원하시는 구수한밥 단계를 선택하신 후 확인 버튼을 눌러 주십시오.

4 설정 완료 화면



원하시는 맞춤밥맛을 설정하신 후, 확인 버튼을 누르면 설정된 값이 자동으로 입력됩니다. (취소 버튼을 누르거나 버튼입력 없이 7초가 경과하면 기능이 취소되고 대기상태로 돌아옵니다.)

쿠쿠 맞춤취사 기능(취사온도 조절기능)

취사시 가열원로 온도단계를 조절(온도의 높고, 낮음)하여 취사할 수 있는 기능으로 기존 취사시 고정되어 있던 온도단계를 소비자가 직접 조절할 수 있으므로 소비자가 원하는 기호에 맞게 취사할 수 있습니다.

초기값은 □으로 설정되어 있으며 경우에 따라 단계별 조절을 해주십시오.
- 높은단계 : 잡곡류로 취사하실 경우나 찰진밥을 좋아하실 경우에 설정해 주십시오.
- 낮은단계 : 햅쌀로 취사하실 경우나 찰진밥을 싫어하실 경우에 설정해 주십시오.

쿠쿠 맞춤취사 사용방법

1 대기상태에서 설정 버튼을 6회 누르면 맞춤취사 설정모드로 진입합니다.

2 쿠쿠 맞춤취사 설정화면



4-1 높은단계 조정모드



선택 버튼으로 표시부가 그림과 같이 변화하도록 합니다.

4-2 낮은단계 조정설정



선택 버튼으로 표시부가 그림과 같이 변화하도록 합니다.

5 설정 완료 화면



확인 버튼을 누르면 설정된 값이 자동으로 입력됩니다. (취소 버튼을 누르거나 입력없이 7초가 경과하면 기능이 취소되고 대기상태로 돌아옵니다.)

1. 쿠쿠 맞춤취사 기능은 백미, 백미고화력, 백미래속, 잡곡, 잡곡고화력, 잡곡래속, 현미, 현미고화력, 현미발아, 백미저압, 슈퍼곡물 메뉴에 일괄 적용됩니다.
2. 초기 표시 화면을 기준으로 하여 기호에 따라 맞춤취사 단계를 설정하여 주십시오. 취사단계가 높은 경우 높음현상이 발생할 수 있습니다.
3. 단계별 설정 후 취사시 쌀의 상태 및 향수유에 따라서 취반상태에서 차이가 있을 수 있습니다.



현미발아는 이렇게 하십시오

발아현미란

현미는 백미에 비해 영양가가 높은 식품이지만 먹었을 때 거칠고 딱딱하며, 소화하기 힘들다는 단점이 있으나 아주 조금만 발아 시켜도 잠자고 있던 효소가 활성화되어 영양성분이 보다 풍부하게 되고 소화 흡수가 훨씬 수월한 형태로 변화됩니다.

현미발아 메뉴의 조작방법

1 발아를 더욱 촉진 시키기 위해 현미를 미리 16시간 이내로 침수하여 예비발아를 해주십시오.

예비발아방법

- ▶일반적으로 가정에서 사용하시는 용기에 씻은 현미를 넣은 뒤, 물을 충분히 넣고 침수시킨 후 예비발아하여 주십시오.
- ▶예비발아는 16시간 이내로 하여 주시고 현미발아 메뉴 사용 전에는 반드시 흐르는 물에 세척하신 후 사용하여 주십시오. 지나치게 세게 문질러 세척하면 쌀눈(배아)이 떨어져 발아되지 않을 수 있습니다.
- ▶예비발아하실 때 침수시간에 따라 특유의 냄새가 날 수 있습니다.
- ▶예비발아가 완료된 현미는 씻은 후에 내솥에 넣고 취사량에 따라 물높이를 맞추신 후 현미발아 메뉴를 사용하여 주십시오.
- ▶기온이 높은 여름이나 보관온도 등에 따라 예비발아시에는 냄새가 날 수 있으니 가급적 예비발아시간을 줄여 주시고 더 주의해서 깨끗이 잘 씻어 주십시오.

2 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌리고, 선택 버튼을 눌러 현미발아를 선택합니다.

▶현미발아 메뉴가 선택되었을 때는 표시부에 3H가 표시됩니다.



3 취사/쾌속 버튼을 누릅니다.

- ▶취사/쾌속 버튼을 누르거나 확인 버튼을 누른 후 취사/쾌속 버튼을 누르면 현미발아를 시작하고 발아 완료 후 즉시 취사가 시작됩니다.
- ▶현미발아중에는 '취사' 표시가 나타나며 남은 시간이 표시됩니다.



현미발아 취사 시 유의사항

- 1 발아된 쌀의 크기를 키우지 않고 좀 더 빨리 드시고 싶으면 예비발아를 하지않고 취사/쾌속 버튼을 눌러 취사하십시오. (쌀의 크기에 따른 영양분의 차이는 크지 않습니다.)
- 2 현미발아 메뉴로 취사하실 경우에는 최대 6인분 이하로 하여 주십시오.
- 3 물은 수돗물을 사용하셔도 무방하나 생수를 이용하시면 더욱 좋습니다. 단, 뜨거운 물, 끓인 물은 식힌 경우라 하더라도 발아가 되지 않을수 있으니 사용을 피해주십시오.
- 4 현미의 발아율이나 쌀의 길이 등의 발아상태는 현미의 종자와 보관상태, 보관기간에 따라 차이가 있을 수 있습니다.
 - 발아현미는 현미를 싹틔운 것으로, 현미의 종자에 따라 발아율 및 발아된 후의 쌀의 길이에 차이가 있을 수 있습니다.
 - 발아시킬 현미는 반드시 수확후 1년 미만의 것을 사용해 주시고, 도정 후 보관기간이 가급적 짧은 것을 이용해 주십시오.
- 5 현미발아 메뉴의 경우 예약이 되지 않습니다. 예약을 원하실 경우에는 “현미” 메뉴로 설정하신 후, 예약해 주십시오.
- 6 현미의 종류에 따라 멜라노이징 또는 밥상태의 차이가 나타날 수 있습니다. 기호에 맞게 물량을 가감하거나 맞춤밥맛 기능을 이용해 주십시오. (42쪽 참조)
- 7 사용환경이나 현미 상태에 따라서 싹이 보이지 않을 수 있습니다.



슈퍼곡물은 이렇게 하십시오

슈퍼곡물이란

슈퍼곡물은 쌀보다 영양 밸런스가 좋고 각종 비타민과 미네랄, 항산화 성분, 식이섬유가 풍부하여 쌀 대체식으로 이용하기에 좋으며 부족한 영양 보충을 할 수 있는 훌륭한 영양원입니다.

슈퍼곡물의 특징

- ① 카무트 : 항산화 효과 - 카무트에 함유되어 있는 셀레늄이 몸속에 활성 산소를 제거합니다.
- ② 귀리 : 변비 예방 - 불포화 지방산과 섬유질이 풍부합니다.
- ③ 병아리콩 : 다이어트 효과 - 병아리콩에 함유되어 있는 아르기닌 성분이 지방연소와 혈관확장을 도와줍니다.
- ④ 그린렌틸콩 : 피로회복 효과 - 단백질, 비타민B, 철분 등이 풍부합니다.
- ⑤ 퀴노아 : 성인병 예방 - 불포화지방산으로 이루어져 있어 콜레스테롤 수치를 낮추는데 효과적입니다.

슈퍼곡물 메뉴의 조작방법

- 1 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌리고, 선택 버튼을 눌러 슈퍼곡물을 선택합니다.

▶슈퍼곡물 메뉴가 선택되었을 때는 표시부에 0H가 표시됩니다.



- 2 확인 버튼을 누르고 선택 버튼으로 시간을 설정합니다.

- ▶ > 우측 또는 < 좌측 선택 버튼을 누를 때마다 슈퍼곡물 불림시간이 0H(0시간) ↔ 3H(3시간)으로 반복 선택됩니다.
- ▶슈퍼곡물 불림시간은 0, 3시간으로 설정 가능합니다.

- 3 취사/쾌속 버튼을 누릅니다.

- ▶취사/쾌속 버튼을 누르거나 확인 버튼을 누른 후 취사/쾌속 버튼을 누르면 설정된 시간만큼 불림을 시작하고 불림 완료 후 즉시 취사가 시작됩니다.
- ▶불림 중에는 '취사' 표시가 나타나며 남은 시간이 표시됩니다.



※ 불림시간이 3시간 남아있을 때

슈퍼곡물 취사 시 유의사항

- ① 슈퍼곡물 취사 시 잡곡 물눈금을 이용하여 주십시오. 최대 8인분까지 취사 가능합니다.
- ② 슈퍼곡물의 종류에 따라 멜라노이징 또는 밥상태의 차이가 나타날 수 있습니다. 기호에 맞게 물량을 가감하거나 맞춤밥맛 기능을 이용해 주십시오.(42쪽 참조)
- ③ 슈퍼곡물 메뉴의 경우 예약이 되지 않습니다.
- ④ 딱딱한 곡물을 취사하실 경우에는 불림 3H(3시간)을 선택한 후 취사하여 주십시오.
- ⑤ 소비자 기호에 따라 더 부드러운 식감을 원하실 경우, 아래와 같이 취사하여 주십시오.
 - ▶ '병아리콩' 곡물을 취사하실 경우에는 실온에서 4~6시간 불린 후 취사하여 주십시오.
 - ▶ '귀리' 곡물을 취사하실 경우에는 실온에서 30분~1시간 불린 후 취사하여 주십시오.
- ⑥ 취사가 완료되어 보온으로 되면 밥을 잘 섞어 주십시오.

카무트 곡물 취사 시 유의사항

- ① 카무트와 쌀을 분리하여 각각 씻은 다음, 내솥에 카무트를 먼저 넣고(카무트의 식감을 부드럽게 하기 위해) 그 위에 쌀을 넣은 후 잡곡 물눈금으로 물량을 맞춰 주십시오.
- ② 슈퍼곡물 메뉴를 선택한 후, 선택 버튼으로 불림시간을 3H(3시간)으로 설정한 뒤 취사/쾌속 버튼을 눌러 주십시오.
- ③ 취사가 완료되어 보온으로 되면 밥을 잘 섞어 주십시오.



저압찜/고압찜은 이렇게 하십시오

저압찜/고압찜 사용 및 예약방법

1 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌리고, 선택 버튼을 눌러 저압찜 또는 고압찜을 선택합니다.

- ▶ 확인 버튼이 점멸하고, 취소, 취사/쾌속 버튼이 켜집니다.
- ▶ 저압찜 또는 고압찜 메뉴가 선택되었을때는 표시부에 시간이 표시됩니다. (“저압찜 확인 버튼을 눌러주세요.” 또는 “고압찜 확인 버튼을 눌러주세요.” 하는 음성이 나옵니다.)

2 확인 버튼을 누르고 선택 버튼으로 요리 시간을 설정합니다.

- ▶ 예약, 취소, 취사/쾌속 버튼이 켜집니다. “슬라이드 터치로 요리시간을 맞춘 후 취사 버튼을 눌러주세요.” 하는 음성이 나옵니다. (메뉴별 시간 설정은 요리안내를 참조하세요.)
- ▶ 확인 버튼을 누르면 “취사나 예약 버튼을 눌러주세요.” 하는 음성이 나옵니다.

<p>1. </p> <p>우측 선택 버튼을 누르면 저압찜/고압찜 시간이 5분씩 증가합니다. (90분 이후에는 10분씩 증가합니다.) ▶ 계속 누르고 있으면 연속으로 변합니다.</p>	<p>2. </p> <p>좌측 선택 버튼을 누르면 저압찜/고압찜 시간이 5분씩 감소합니다. (90분 이후에는 10분씩 감소합니다.) ▶ 계속 누르고 있으면 연속으로 변합니다.</p>	<p>3. 저압찜/고압찜 시간은 10분~120분까지 설정 가능합니다.</p>	<p>4. </p> <p>원하시는 시간을 선택 후 확인 버튼을 누르면 “취사나 예약 버튼을 눌러 주세요” 하는 음성이 나옵니다.</p>
--	--	---	--

3 취사/쾌속 버튼을 누릅니다.

- ▶ 취사/쾌속 버튼이 점멸하고, 설정, 확인, 보온/재가열, 예약/자동세척, 압력체크, 취소 버튼이 켜집니다. 취사/쾌속 버튼을 누르면 저압찜 또는 고압찜 취사가 시작됩니다. 저압찜 또는 고압찜 취사가 시작되면 취사 표시가 나타나며 남은 시간이 표시됩니다. “저압찜, 00분(설정시간) 쿠쿠가 1.4기압으로 맛있는 요리를 시작합니다.” 또는 “고압찜, 00분(설정시간) 쿠쿠가 2기압으로 맛있는 요리를 시작합니다.” 하는 음성이 나옵니다.

4 저압찜 또는 고압찜 예약은 이렇게 하십시오.

<p>1. 현재 시간이 맞는지 확인합니다.</p>	<p>2. 뚜껑 결합 손잡이를 “옴” (잠김) 방향으로 돌리고 예약/자동세척 버튼을 누릅니다.</p> <p></p>	<p>3. 선택 버튼을 눌러 취사 완료 시간을 맞춘 후 확인 버튼을 누릅니다.</p> <p></p>	<p>4. 선택 버튼을 눌러 저압찜 또는 고압찜을 선택하고, 확인 버튼을 누릅니다.</p> <p></p>	<p>5. 선택 버튼을 눌러 저압찜 또는 고압찜 요리시간을 선택하고 확인 버튼을 누른 후, 취사/쾌속 버튼을 누릅니다.</p> <p> → </p>
------------------------------------	--	--	---	--



압력체크는 이렇게 하십시오

압력체크 사용방법

밥솥 내부의 압력을 체크하여 압력 누설이 발생하는지 또는 증기 배출 장치의 이상여부를 점검할 수 있는 기능입니다.

1 대기상태(38쪽 참조)에서 압력체크 버튼을 눌러 주십시오.

- ▶ "압력체크 기능입니다. 백미 물눈금 2까지 물을 넣고 취사나 압력체크 버튼을 눌러주세요." 하는 음성이 나옵니다.
- ▶ 취사/쾌속, 압력체크 버튼이 점멸하고, 취소 버튼이 켜집니다.

(대기상태)



2 내솥에 백미 물눈금 2까지 물을 넣고 뚜껑을 덮어 뚜껑 결합 손잡이를 "ום" (잠김) 방향으로 돌려 주십시오.

3 압력체크 버튼이나 취사/쾌속 버튼을 누르면 압력체크를 시작합니다.

- ▶ "쿠쿠가 압력체크를 시작합니다." 하는 음성이 나옵니다.
- ▶ 뚜껑 결합 손잡이를 "ום" (잠김) 방향으로 돌리지 않고 압력체크 버튼이나 취사/쾌속 버튼을 누르면 압력체크가 되지 않습니다.
- ▶ 일정시간 주기로 남은 시간과 실제압력이 표시됩니다.



(표시부의 "0"가 빙글빙글 돌아가고 실제압력을 표시합니다.)

4 압력체크 결과가 합격일 때, "Good" 표시가 순차적으로 나타납니다.

- ▶ "압력이 정상입니다. 주기적인 압력 점검으로 처음처럼 맛있는 밥맛을 느껴 보세요." 하는 음성이 나옵니다.

5 압력체크 결과가 불합격일 때, "EP1 ~ EP6" 표시가 점멸합니다.

- ▶ **EP1** "패킹을 점검하고 압력체크를 다시 진행하신 후 이상이 있으면 서비스센터로 문의해주세요." 하는 음성이 나옵니다. 패킹이 노후되거나 패킹 이물질에 의한 압력 누설 발생 시 나타납니다. 패킹을 점검하고 압력체크를 다시 진행하여 주십시오. 패킹에 이상이 없을 경우, 서비스센터로 문의하십시오.
- ▶ **EP2** "내솥에 물이 있는 지 확인 후 백미 물눈금 2까지 물을 넣고 압력 체크를 다시 진행해주세요." 하는 음성이 나옵니다. 내솥에 물이 없이 압력체크를 할 경우 나타납니다. 백미 물눈금 2까지 물을 넣고 압력체크를 다시 진행하여 주십시오.
- ▶ **EP3** "정상적으로 압력체크가 진행되지 않았습니다. 압력체크 순서대로 다시 진행해주세요." 하는 음성이 나옵니다. 밥솥 뚜껑을 열어 놓은 상태에서 압력체크를 할 경우 나타납니다. 뚜껑을 닫고 뚜껑 결합 손잡이를 "ום" (잠김) 방향으로 돌린 후 압력체크를 다시 진행하여 주십시오.
- ▶ **EP4** **EP5** "증기배출에 이상이 있습니다. 서비스센터로 문의해주세요." 하는 음성이 나옵니다. 압력추에 이상이 있을 때 나타납니다. 서비스센터로 문의하십시오.
- ▶ **EP6** "정상적으로 압력체크가 진행되지 않았습니다. 압력체크 순서대로 다시 진행해 주세요." 하는 음성이 나옵니다. 밥솥이 뜨거워진 상태(취사 완료 직후, 보온 완료 직후)에서 압력체크를 할 경우 나타납니다. 밥솥이 식은상태에서 압력체크를 다시 진행하여 주십시오.

6 합격 또는 불합격 표시 해제 방법

- ▶ 합격 또는 불합격 표시가 발생한 후 1분 뒤 자동 취소됩니다.
- ▶ 취소 버튼을 누를 시 즉시 취소됩니다.
- ▶ 전원을 OFF에서 ON으로 변경 시 취소됩니다.

압력체크 사용 시 유의사항

- 1 물량은 백미 물눈금 2인분에 맞추어 사용해 주시기 바랍니다.
- 2 물온도는 10~30°C의 물을 사용해 주시기 바랍니다.
- 3 밥솥이 식은 상태에서 압력체크를 진행해 주시기 바랍니다.
 - 밥솥이 뜨거운 상태(취사 완료 직후, 보온 완료 직후 등)에서는 정확한 압력체크 진행이 되지 않습니다.
- 4 압력 표시치는 실제 압력과 차이가 있을 수 있습니다.



예약 취사 / 예약 재가열은 이렇게 하십시오

예약 취사하는 방법

현재 시각이 오후 9시이고 다음날 오전 7시 40분에 식사를 하고 싶을 경우

- 1 현재 시각이 맞는지 확인합니다.
 - ▶ 현재 시각을 맞추는 방법은 39쪽을 참조하십시오.
- 2 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌려 잠김표시가 나타나면 예약/자동세척 버튼을 누릅니다.
 - ▶ 예약/자동세척 버튼을 누르면 그림과 같이 기존에 설정되어 있는 예약 시각 표시가 나타나고, 예약표시가 깜박거립니다.
- 3 선택 버튼을 눌러 예약시간을 설정한 후 확인 버튼을 누릅니다.
 - ▶ > 우측 선택 버튼을 누를 때마다 10분 단위로 증가합니다.
 - ▶ < 좌측 선택 버튼을 누를 때마다 10분 단위로 감소합니다.
- 4 선택 버튼을 눌러 원하는 메뉴를 선택한 후 확인 버튼을 누릅니다.
- 5 취사 버튼을 누릅니다.
 - ▶ 예약 설정된 시각에 예약 취사가 완료됩니다. (취사량 및 사용조건에 따라 완료시각이 다소 차이가 날 수도 있습니다.)
 - ▶ 한번 설정되어 취사가 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞출 필요없이 예약/자동세척 버튼만 누르면 됩니다.



- ※ 오전/오후가 바뀌지 않도록 주의하십시오.
- ※ 현재 시각이 맞지 않을 경우 예약취사 시각이 맞지 않으므로 현재 시각으로 정확히 맞춥니다.
- ※ 뚜껑 결합 손잡이를 “**옴**” (잠김)방향으로 돌리지 않고 예약/자동세척 버튼을 누르면 예약이 되지 않습니다.
- ※ 현미밥/메뉴의 경우, 예약취사가 설정 되지 않았습니다. 예약을 원하실 경우, 현미 메뉴로 설정 후, 예약해 주십시오.
- ※ 보온 중일 때 예약 취사를 설정하실 경우 취소 버튼을 눌러 보온을 취소한 후 예약 시간을 설정해 주십시오.
- ※ 예약 취사 시간은 메뉴별 최대인분 기준으로 설정되어 있으므로 소량 취사시 예약시간 보다 일찍 취사가 완료될 수 있습니다.

예약 재가열 사용 방법

- ▶ 보온을 하지 않고 밥솥에 보관중인 밥을 원하시는 시각에 따뜻하게 드시고 싶을 때, 설정하십시오.
 - ▶ 예약 재가열은 3시간동안 진행되므로 밥을 드시고자 하는 시각에서 최소 3시간 전 예약 재가열을 하십시오.
- 현재 시각이 오후 9시이고 다음날 오전 7시 40분에 따뜻한 식사를 하고 싶을 경우

- 1 현재 시각이 맞는지 확인합니다.
 - ▶ 현재 시각을 맞추는 방법은 39쪽을 참조하십시오.
- 2 뚜껑 결합 손잡이를 “**옴**” (잠김) 방향으로 돌려 잠김표시가 나타나면 예약/자동세척 버튼을 누릅니다.
 - ▶ 뚜껑 결합 손잡이를 “**옴**” (잠김)방향으로 돌리지 않고 예약/자동세척 버튼을 누르면 예약이 되지 않습니다.
- 3 보온/재가열 버튼을 누르면 예약 재가열 설정 모드로 진입합니다.
- 4 선택 버튼을 눌러 예약 재가열 완료 시각을 설정합니다.
 - ▶ > 우측 선택 버튼을 누를 때마다 10분 단위로 증가합니다.
 - ▶ < 좌측 선택 버튼을 누를 때마다 10분 단위로 감소합니다.



- 5 확인 버튼을 누릅니다.
- 6 보온/재가열 버튼을 누릅니다
 - ▶ 예약 재가열 설정 시각에 예약 재가열이 완료됩니다.
 - ▶ 한번 설정되어 재가열이 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞출 필요없이 보온/재가열 버튼만 누르면 됩니다.

- ※ 오전, 오후가 바뀌지 않도록 주의합니다.
- ※ 현재 시각이 맞지 않을 경우 예약 재가열 완료 시각이 맞지 않으므로 현재 시각으로 정확히 맞춥니다.



예약 취사 / 예약 재가열은 이렇게 하십시오

예약 취사 / 예약 재가열시 유의사항

1 예약 취사시 유의 사항

- ▶ 쌀이 개봉된 지 오래되어 매우 말라버린 경우에는 증압이 되는 수도 있습니다.
- ▶ 예약취사 설정시간 또는 주변 환경조건에 따라서 밥이 되거나 질어질 수 있으므로 내솥표시의 물(水)눈금 기준에서 가감하여 물량을 조절해 주십시오.
- ▶ 예약 취사 용량이 많거나 장시간 예약취사를 설정하실 경우 멜라노이징(미세 밥 눌음)현상이 증가할 수 있습니다.
- ▶ 세척미는 침전된 전분이 많으므로 예약 취사 시 눌음이 발생할 수 있습니다. 세척미를 흐르는 물에 행궈 취사하시거나, 취사 용량을 적게 해주시면 눌음 정도가 감소합니다.

2 예약 재가열시 유의 사항

- ▶ 취사가 완료된 후 상온에서 장시간 보관 된 밥은 수분이 증발되어 예약 재가열을 하실 경우 밥이 마르거나 멜라노이징(미세 밥 눌음) 현상이 발생할 수 있습니다.
- ▶ 밥양이 많은 경우 밥이 먹기 좋은 따끈따끈한 온도까지 충분히 데워지지 않을 수 있으니 예약 재가열 설정시 밥양은 5인분(내솥의 절반 가량) 이내를 권장합니다.
- ▶ 냉장 또는 냉동 보관된 밥의 경우 보관 상태에 따라 예약 재가열 완료 후 밥이 덜 데워지거나 밥 마름 및 멜라노이징(미세 밥 눌음) 현상이 증가할 수 있습니다.
- ▶ 냉장 보관된 밥 사용시에는 내솥에 옮겨 담은 후 주걱을 사용하여 골고루 저어 뭉쳐진 밥을 잘 펼친 후 예약 재가열 하시기 바랍니다.
- ▶ 냉동 보관된 밥은 반드시 해동 후 예약 재가열 하시기 바랍니다.

3 예약 시각 변경

- ▶ 예약시각을 변경할 경우는 취소 버튼을 0.3초 이상 눌러 취소시킨 후 다시 시작하십시오.

4 예약 설정 가능 시간을 벗어난 경우

- ▶ 설정 시간이 예약 설정 가능 시간보다 짧았을 경우 즉시 취사를 시작합니다.

5 설정시간이 13시간을 초과할 경우

- ▶ “13Mo” 가 표시되고 예약 시간은 자동적으로 13시간으로 변경됩니다.
 예) 오후 5시에 내일 오전 7시 취사 완료를 예약하면 (설정시간 14시간이 됨) “13Mo” 가 표시되고 예약 시각이 오전 6시로 자동 변경됩니다. (설정시간 13시간)
- ※ 예약시간이 13시간을 초과할 경우 냄새 및 변색의 원인이 되고, 여름철에는 쌀이 쉬기 때문에 13시간 이하로 예약설정 가능시간을 설정하였습니다.
- ※ 낮 12시에 예약취사 완료를 원하실 경우 오후 12:00로 설정해 주십시오.
- ※ 예약취사 기능은 현재시각 기준 1시간 후에서 13시간 이내로 취사완료를 원하실때 사용해 주십시오.
- ※ 예약취사 진행중에 현재 시각을 확인하려면 확인 버튼을 누르면 현재 시각이 약 2초간 나타납니다.

메뉴별 취사시간

구분	메뉴	백미	백미 고화력	잡곡	잡곡 고화력	백미저압	누룽지	현미	현미 고화력	삼계탕	영양죽	저압찜 고안찜	자동세척 (지동살균세척)
취사량	(42분+맞춤 밥맛시간 ~13시간	(43분+맞춤 밥맛시간 ~13시간	(61분+맞춤 밥맛시간 ~13시간	(62분+맞춤 밥맛시간 ~13시간	50분 ~13시간	(47분+맞춤 밥맛시간 ~13시간	(64분+맞춤 밥맛시간 ~13시간	(65분+맞춤 밥맛시간 ~13시간	76분 ~13시간	118분 ~13시간	(설정시간 +1분) ~13시간	25분 ~13시간	



밥을 맛있게 보온하려면

식사하실 때

- ▶ 보온 중 식사를 하실 때 따끈따끈한 밥을 원하시면, 보온/재가열 버튼을 누르면 보온재가열이 시작되고 9분 후 밥을 드시면 금방 지은 밥처럼 따끈따끈한 밥을 드실 수 있습니다.
- ▶ 전원을 인가 후 대기상태에서 재가열을 사용하실 경우에는 뚜껑 결합 손잡이를 “ום” (잠김)위치로 돌린후 보온/재가열 버튼을 눌러 보온으로 전환되면 보온/재가열 버튼을 1회 더 눌러 주십시오.

(보온중)



표시부의 “34” 는 보온경과 시간이 3시간임을 의미합니다.

(재가열 중)



표시부의 “0” 표시가 빙글빙글 돌아가고 남은시간을 표시하며 재가열을 합니다.

(재가열 완료)



재가열이 끝나면 다시 보온을 진행하며 보온경과 시간을 표시합니다.

- ▶ 재가열 기능을 너무 자주 사용하시면 밥이 변색되거나 마르는 경우가 있습니다. 1일 1~2회만 사용하세요.
- ▶ 별도의 전열기구나 가스불로 밥을 지은 경우는 밥을 밥솥에 담은 후 보온/재가열 버튼을 1회 눌러 보온을 합니다. 이때, 표시부에는 “OH” 가 표시됩니다. (이와 같이 차가운 밥솥에 뜨거운 밥을 옮겨 담아 보온할 경우 냄새나 변색이 있을 수 있습니다.)
- ▶ 보온 24시간 경과 이후부터 보온 경과시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.
- ▶ 보온중 뚜껑 결합 손잡이가 “ום” (열림) 상태시 재가열이 진행되지 않습니다. 뚜껑 결합 손잡이를 “ום” (잠김)으로 돌린후, 보온/재가열 버튼을 눌러주십시오.
- ▶ 재가열 진행중 뚜껑 결합 손잡이를 “ום” (열림)으로 돌릴경우, 표시부에 “E01” 가 표시됩니다. 이때 보온재가열이 취소되고 보온이 진행됩니다.

보온온도 조정방법

청소를 자주하고 물을 끓여 소독을 하였는데도 냄새가 나고 물이 맷히거나 색깔이 변하는 경우는 보온 온도가 맞지 않은 경우이므로 보온 온도를 조정합니다.
보온 온도를 조정하고자 하실 때는 서비스센터로 문의 하시면 상세히 안내해 드리겠습니다.



- 1 보온중 설정 버튼을 1회 누르거나 대기 상태에서 설정 버튼을 4회 부르면 보온온도 설정모드로 진입합니다. 이때 74는 현재 보온 온도를 나타냅니다.

온도를 올릴 때



- 2-1 우측 선택 버튼을 눌러 표시부가 74 → 75 → 76 → 77 → 78 → 79 → 80와 같이 변화하도록 합니다.

온도를 내릴 때



- 3 원하는 온도를 설정한 후 확인 버튼을 누르면 설정된 온도가 자동으로 입력 됩니다. (취소 버튼을 누르거나 입력없이 7초가 경과 하면 기능이 취소됩니다.)
- 2-2 좌측 선택 버튼을 눌러 표시부가 74 → 73 → 72 → 71 → 70 → 69와 같이 변화하도록 합니다.

※ 제품 출고 시 설정된 기준온도는 설명서와 다를 수 있습니다.

온도조정치


1. 선 냄새가 많이 나고 물이 많이 맷히는(밥이 삭는)경우 : 보온 온도가 낮은 경우입니다. 보온 온도를 1~2℃정도 높여 줍니다.
2. 밥 색깔이 심하게 누렇게 밥이 마르면서 냄새가 날 경우 : 보온 온도가 높은 경우입니다. 보온 온도를 1~2℃정도 낮춰 줍니다.



밥을 맛있게 보온하려면

맞춤보온 기능 조정방법


보온 시 뚜껑을 열 때 물이 많이 흐를 경우나 밥 가장자리에 밥 퍼짐 현상이 생길 경우에 사용합니다.

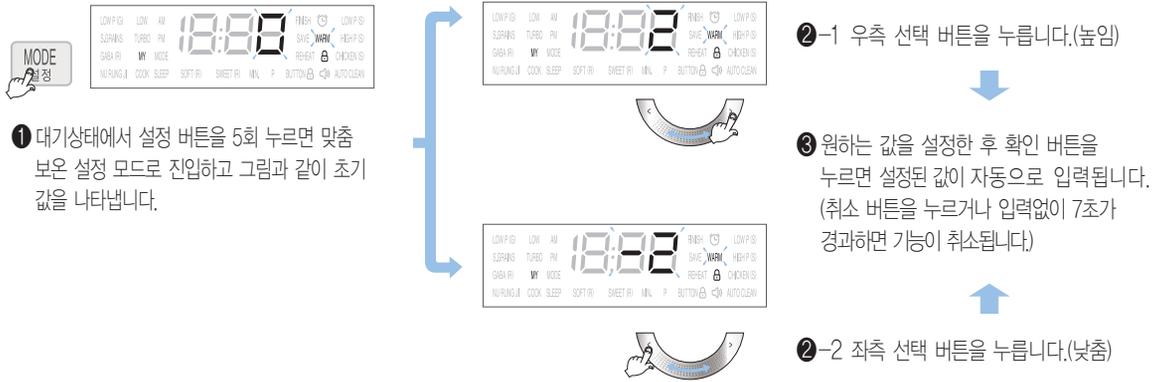

취침보온 모드 설정방법


장시간 보온을 유지할 시 밥품질(변색, 마름, 냄새등)의 저하예방을 위해 취침시간(PM 10 : 00 ~ AM 04 : 00)동안 보온온도를 저온상태로 유지하는 기능으로 필요에 따라 설정해 주십시오.

▶ 설정방법

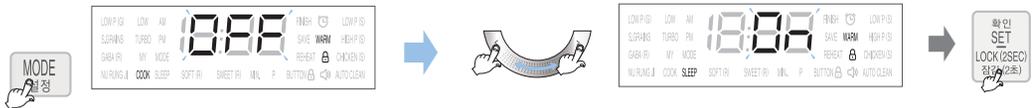

- 1 대기상태에서 설정 버튼을 7회 누르면 취침보온 설정 모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
- 2 취침보온 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 기능이 설정되지 않고 취소됩니다.

▶ 설정 상태에서 해제방법

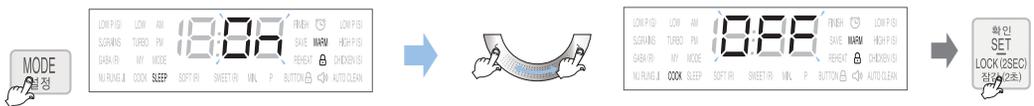

- 1 대기상태에서 설정 버튼을 7회 누르면 취침보온 설정 모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
- 2 취침보온 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 기능이 설정되지 않고 취소됩니다.

▶ 본 기능을 설정시 취침시간 동안 보온온도가 저온상태로 유지되오니 취침시간에 보온이 필요하신 분은 설정하지 마십시오.
기온이 높은 여름철에는 밥이 상해서 변색되거나 냄새가 날 수 있습니다. 여름철에는 취침보온 모드 설정을 기금적 하지 마십시오.
▶ 본 기능은 제품 출하 시 해제 상태로 되어 있으니 필요에 따라 설정해 주십시오.



맛있는 밥을 드시려면

취사할 때 주의 사항

맛있는 압력밥솥 밥을 드시려면 다음 사항을 꼭 알아 두십시오.

쌀은 반드시 계량컵을 사용하여 정확히 계량합니다. (시중에 유통되고 있는 쌀통은 제품에 따라 쌀의 양이 다소 차이가 날 수도 있습니다.) 물의 양은 내솥을 평평한 곳에 놓고 내솥의 물(水)눈금에 맞춥니다.	쌀의 양과 물의 양이 맞지 않으면 밥이 퍼석하거나 설익거나 질게 될 수가 있습니다.
쌀은 가급적이면 소량으로 구입하여 통풍이 잘되고 직사광선이 없는 서늘한 곳에 쌀의 수분이 잘 증발되지 않도록 보관합니다. 쌀이 개봉한 지 오래되어 말라 있는 경우는 물을 반눈금 정도 더 넣고 취사를 하면 좋습니다.	쌀이 많이 말라 있는 경우는 계량을 정확히 하더라도 밥이 퍼석할 수가 있습니다.
쌀이 많이 말라 있는 경우는 가급적 예약취사를 피하시고 물을 반눈금 정도 더 넣고 취사합니다. 10시간 이상 예약 취사하거나 말라 있는 쌀을 예약 취사할 경우는 밥이 퍼석하거나 설익을 수가 있으며 심한 경우는 층 밥이 될 수도 있습니다.	예약 설정 시간이 길어 질수록 멜라노이징 (미세 밥 눌음)현상이 증가할 수 있습니다.
장시간 보온을 하게 되면 밥 색깔이 변하거나 밥에서 냄새가 날 수도 있습니다.	보온은 12시간 이내로 하는 것이 좋습니다.
청소를 자주 하십시오. 청소를 자주 하지 않으면 세균이 번식하여 보온 시 밥에서 냄새가 날 수 있습니다.	특히, 뚜껑부에 이물질이 묻어 있지 않도록 자주 닦아 주십시오.

보온할 때 주의사항

취사 직후나 보온중 뚜껑을 열 때 압력에 의해 뚜껑이 잘 안 열리는 경우가 있습니다. 뚜껑을 열 때는 압력추를 젖혀 압력이 완전히 제거된 다음 열어 주십시오. 보온 또는 재가열시 반드시 뚜껑 결합 손잡이를 “옴” (잠김) 방향으로 체결하십시오. (뚜껑 열림 버튼 파손 및 보온성능에 영향을 줍니다.)	장시간 보온하면 밥이 변색되고 냄새가 날 수 있으므로 보온은 12시간 이내로 하는 것이 좋습니다. 특히, 압력밥은 특성상 일반 밥솥의 밥보다 변색이 빨리 됩니다. 보온 24시간 경과 이후부터 보온 경과 시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.
취사 완료 후 밥을 밀면까지 골고루 섞어 보온하면 밥상태가 좋습니다. (적은 밥은 내솥의 중앙에 볼록하게 모아서 보온하십시오.)	잡곡, 현미는 백미보다 보온 상태가 좋지 않으므로 가급적 보온은 피하십시오. 보온중 내솥의 가장자리나 증기 배출구 하단부는 부분적으로 밥이 하얗게 변하고 부풀어 오를 수도 있습니다. 이럴 경우는 밥을 저어서 섞어 주십시오.
보온중 내솥에 밥이 없거나 사용하지 않을 경우에는 취소 버튼을 눌러 보온을 취소하거나, 전원코드를 콘센트에서 뽑아 주십시오.	너무 적은 밥을 보온하거나 먹다 남은 밥이나 찬밥을 보온 중인 밥과 섞어서 보온하지 마십시오. 밥에서 냄새가 날 수 있습니다. (찬밥은 전자레인지로 이용하십시오.)
주걱을 넣어 둔 채로 보온하지 마십시오. 특히 나무주걱 등은 세균을 발생시켜 냄새의 원인이 됩니다.	

보온시 냄새가 날 때

- ▶ 청소를 자주 해 주십시오. 특히 뚜껑부의 청소상태가 나쁘면 세균이 번식하여 보온시 냄새가 날 수 있습니다.
- ▶ 외관상 깨끗하더라도 곳곳에 세균이 서식하여 보온시 냄새를 발생시킬 수 있으므로 냄새가 많이 날 경우는 물을 내솥의 백미 눈금 2인분 정도에 맞추고 식초를 1큰술 넣은 후, 뚜껑을 닫고 자동세척(자동살균세척)을 선택한 후, 취사/쾌속 버튼을 눌러 주십시오. 완료 후 내솥을 반드시 깨끗이 씻어 냅니다.
- ▶ 탕, 찜등의 요리를 한 후 깨끗이 씻어내지 않고 보온하면 밥에 냄새가 배어들 수 있습니다.



절전기능 / 에너지아이 기능은 이렇게 하십시오

대기모드 절전기능이란

전원코드를 뽑지 않으면 동작하지 않는 대기상태라 할지라도 약간의 전력이 소모됩니다. 이를 대기전력이라고 하는데 이를 절감하기 위해 밥솥내부의 전기회로를 외부 전원으로부터 차단시켜 전력 소모를 최소화 하는 기술입니다.

수동 사용방법

▶ 절전 시작방법

대기 상태에서 취소 버튼을 3초간 누르고 있으면 "절전모드를 시작합니다." 하는 음성과 함께 절전기능이 설정됩니다.



▶ 절전 종료방법

방법1) 아무 버튼이나 누르면 절전모드가 해제되고, 대기 상태로 돌아갑니다.
방법2) 뚜껑 결합 손잡이를 열거나 닫으면 절전모드가 해제되고, 대기 상태로 돌아갑니다.



자동 절전기능 사용방법

「자동 절전기능 설정모드」에서 대기시간을 'OFF' 가 아닌 값으로 선택하면 대기상태에서 선택된 시간이 경과한 후 자동으로 절전 기능이 시작됩니다. (* 제품출고시 설정된 값은 1분입니다.)

만약 대기시간이 경과되기 전 뚜껑 결합 손잡이를 돌리거나 버튼을 누르면 대기시간이 선택된 설정값부터 다시 감소합니다.


▶ 설정방법



1. 대기상태에서 설정 버튼을 9회 누르면 자동 절전기능 설정모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
2. 자동 절전 기능 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 기능이 설정되지 않고 취소됩니다.

에너지아이 기능

보온, 예약 중 조도센서가 자동으로 주변의 밝기를 인식하여 밥솥의 에너지 소비를 최소화 하는 기능 입니다.
현재 절전모드에 진입하는 밝기(2단계) 보다 더 어두운 곳에서 절전모드에 진입하기를 원하면 1단계를 설정하고, 더 밝은 곳에서 절전모드에 진입하기를 원하면 3단계를 설정하십시오. (제품 출고시 설정 값은 2입니다.)

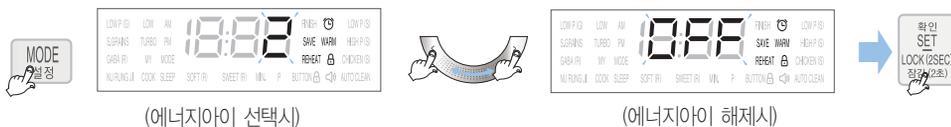

1. 대기상태에서 설정 버튼을 13회 누르면 에너지아이 기능 설정 모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
2. 선택 버튼을 누를 때마다 에너지아이 기능이 3단계 → OFF → 1단계 → 2단계 → 3단계로 선택되고 OFF가 표시되면 "에너지아이 기능이 해제되었습니다." 하는 음성이 나옵니다. 이때, 확인 버튼이 점멸하고, 설정, 취소 버튼이 켜집니다.
3. 원하시는 설정을 하신 뒤 확인 버튼을 누르면 설정이 저장됩니다.
4. 에너지아이 기능 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 기능이 설정되지 않고 취소 됩니다.




화면조명 절전기능 / 버튼 잠금기능 / 취사 잔여시간 표시기능은 이렇게 하십시오

화면조명 절전기능

대기, 취사, 보온, 예약 취사 중 화면의 밝기를 적절히 조절하는 기능입니다.
(화면조명 절전기능 On상태에서 버튼 조명이 꺼지면 화면이 어두워집니다.)

- ▶ 기능 설정 및 해제 방법
(※제품출고시 설정된 값은 On 입니다.)

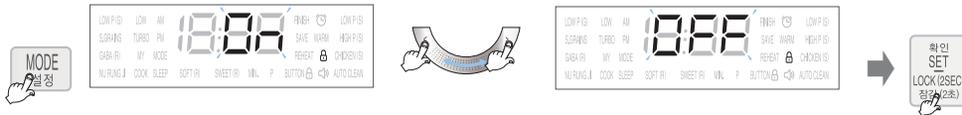

1. 대기상태에서 설정 버튼을 10회 누르면 화면조명 절전기능 설정모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
2. 선택 버튼을 누를 때마다 화면조명 절전기능이 선택 또는 해제됩니다.
3. 원하시는 설정을 하신 뒤 확인 버튼을 누르면 설정이 저장됩니다.
4. 화면조명 절전기능 설정 모드 진입 후 취소 버튼을 누르거나 아무런 입력없이 7초가 지나면 기능이 설정되지 않고 취소됩니다.

버튼 잠금기능

청소 시나 어린이 접촉에 의한 오동작을 방지하기 위해 버튼잠금(LOCK)을 설정할 수 있는 기능 입니다.

▶ 설정방법



1. 취사, 예약, 보온, 재가열 중이나 대기상태에서 확인 버튼을 2초 이상 누르면 버튼 잠금이 설정됩니다.
2. 버튼 잠금이 설정 되었을때, 화면에 버튼 잠금 표시가 깜빡거립니다.

▶ 해제방법



1. 취사, 예약, 보온, 재가열 중이나 대기상태에서 확인 버튼을 2초 이상 누르면 버튼 잠금이 해제 됩니다.
2. 버튼 잠금이 설정 되었을때, 화면에 버튼 잠금 표시가 깜빡거립니다.

- ※ 버튼 잠금이 설정된 상태에서 확인 버튼을 제외한 다른 버튼을 누를 경우, "버튼 잠금이 동작중입니다." 하는 음성과 부저음이 나옵니다.
- ※ 확인 버튼을 2초 이상 눌러 버튼 잠금을 해제한 후 원하시는 기능을 설정하실 수 있습니다.
- ※ 버튼 잠금이 설정된 상태에서 전원 OFF후 재인가시 버튼 잠금기능이 해제 됩니다.

취사 잔여시간 표시 기능

취사 진행 중 주기적으로 나타나는 취사 잔여시간 표시를 선택 또는 해제 할 수 있습니다.
(취사 중 표시되는 잔여시간은 취사 용량 및 진행 상태에 따라 실제 취사 시간과 다를 수 있습니다.)

1. 대기상태에서 설정 버튼을 10회 누르면 화면조명 절전기능 설정모드로 진입합니다.
설정 버튼을 초기에 누를시 0.3초 이상 눌러야 진입 가능합니다.
2. 취사 잔여시간 표시 설정 모드 진입 후, 취소 버튼을 누르거나 아무런 입력없이 7초가 지나면 기능이 설정되지 않고 취소됩니다.



- ※ 취사 잔여시간 표시 기능 선택시
(초기값 설정 상태로 되어 있습니다.)



- ※ 취사 잔여시간 표시 기능 해제시

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증 상	확인사항	조치사항
뚜껑 결합 손잡이가 “ 옴 ” (열림) 방향으로 움직이지 않을 때	<ul style="list-style-type: none"> • 취사 또는 요리중에 뚜껑 결합 손잡이를 돌리지 않았습니까? • 증기가 완전히 배출되지 않은 상태에서 뚜껑 결합 손잡이를 돌리지 않았습니까? 	<ul style="list-style-type: none"> • 취사 또는 요리중에는 뚜껑이 열리지 않습니다. 뚜껑을 강제로 열지 마십시오. 부득이한 경우는 취사 버튼을 0.3초간(내솔 온도가 높으면 1.5초간) 눌러 취사시킨 다음 압력추를 젖혀 증기를 완전히 빼낸 후 열어 주십시오. • 압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오.
뚜껑 결합 손잡이가 “ 옴 ” (열림) 방향으로 완전히 돌아갔는데도 뚜껑이 열리지 않을 경우		<ul style="list-style-type: none"> • 압력 때문입니다. • 압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오.
예약 취반 중 알림음과 함께 “ 옴 ” (열림) 표시가 깜빡일 때	<ul style="list-style-type: none"> • 뚜껑 결합 손잡이를 “옴” (잠김) 방향으로 완전히 돌리셨습니까? 	<ul style="list-style-type: none"> • 뚜껑 결합 손잡이를 완전히 “옴” (잠김) 방향으로 돌립니다.
뚜껑 사이로 증기가 누설되거나 “ 삐 ” 하는 휘파람 소리가 날 때	<ul style="list-style-type: none"> • 패킹에 이물질(밥알 등)이 묻어있지 않습니까? • 패킹이 낡지 않았습니까? 	<ul style="list-style-type: none"> • 패킹을 행주나 부드러운 헝겊으로 깨끗이 닦은 후 사용하십시오. • 패킹 주변은 항상 깨끗이 유지시켜 주십시오. • 증기가 누설되면 곧바로 취사 버튼을 0.3초간(내솔 온도가 높으면 1.5초간) 눌러 증기를 빼낸 후 전원플러그를 뽑아 사용을 중지하고 서비스센터로 문의하십시오. • 패킹은 사용 방법 및 횟수에 따라 1년~3년 정도 사용 후 교환하여 주십시오. 낡은 패킹을 계속하여 사용시 증기가 누설되어 압력 취사가 되지 않을 수 있습니다.
취사 또는 요리중 취사 버튼이 눌러지지 않을 때	<ul style="list-style-type: none"> • 내솔의 내부가 뜨겁지 않습니까? • 버튼잠금이 설정되어 있지 않습니까? 	<ul style="list-style-type: none"> • 취사 또는 요리 중 부득이하게 취소할 경우, 내솔 내부 온도가 높으면 안전을 위해 취사 버튼을 2초간 눌러야 취사 또는 요리가 취소됩니다. • 취사 또는 요리가 취소되면 자동증기배출장치로 증기가 배출되면서 내용물이 비산할 수 있으므로 얼굴과 손 등에 화상을 입을 수 있으니 주의하십시오. • 확인버튼을 2초 이상 눌러 버튼잠금 기능을 해제하여 주십시오.
취사나 보온시 이상한 소음이 날 때	<ul style="list-style-type: none"> • 취사시 바람부는 소리(“뽕”)가 나지 않습니까? • 취사 및 보온중 “찌” 하는 소리가 납니까? 	<ul style="list-style-type: none"> • 내부 부품의 열을 식혀주기 위해 송풍모터가 돌아가는 소리입니다. 정상입니다. • 취사 및 보온중 “찌” 하는 소리는 IH 압력밥솥이 동작 될 때 나는 소리입니다. 정상입니다.
현미가 제대로 발아되지 않을때	<ul style="list-style-type: none"> • 정격용량 이상의 현미를 넣고 발아시키지 않았습니까? • 묵은 현미를 사용하지 않았습니까? 	<ul style="list-style-type: none"> • 정격용량의 현미를 넣어주십시오. • 묵은 현미나 오염된 현미를 사용했을 때 발아율이 떨어질 수 있습니다.
버튼 입력시 “ ㄴ ” 표시가 나타날 때	<ul style="list-style-type: none"> • 내솔이 제품에 들어 있습니까? • 220V용(전원)에 사용하지 않았습니까? 	<ul style="list-style-type: none"> • 내솔이 들어 있지 않은 상태에서는 버튼조작이 되지 않습니다. 내솔을 넣어 주십시오. • 본 제품은 120V전용 제품입니다. 전원을 바르게 사용하십시오.
취사, 예약/자동세척 등의 버튼이 작동되지 않고 “ EOI ” 표시가 나타날 때	<ul style="list-style-type: none"> • 뚜껑 결합 손잡이를 “옴” (잠김) 방향으로 돌리셨습니까? • 잠김 표시가 나타나 있습니까? 	<ul style="list-style-type: none"> • 뚜껑 결합 손잡이를 완전히 “옴” (잠김) 방향으로 돌립니다. 뚜껑 결합 손잡이가 완전히 체결되지 않으면 취사, 예약/자동 세척 버튼이 작동되지 않습니다.

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증 상	확인사항	조치사항
밥이 심하게 눌을 때	<ul style="list-style-type: none"> 온도감지기, 내솔 외면에 밥알이 심하게 눌어 붙어 있거나 이물질이 있지는 않습니까? “쿠쿠 맞춤밥맛” 또는 “맞춤 취사” 기능을 설정하지 않으셨습니까? 	<ul style="list-style-type: none"> 온도감지기, 내솔외면의 이물질을 제거해 주십시오. (36쪽 참조) 필요에 따라 맞춤밥맛 또는 맞춤취사 기능을 해제 또는 설정한 후 취사하여 주십시오. (42쪽 참조)
장시간동안 취사가 완료되지 않고 “E03” 표시가 나타날 때	<ul style="list-style-type: none"> 220V용(전원)에 사용하지 않으셨습니까? 	<ul style="list-style-type: none"> 제품에 이상이 생겨(히터단선, 열량 부족 등) 장시간 밥이 완료되지 않을 때 나타나는 표시입니다. 전원을 차단후 서비스센터로 문의하십시오. 물만 넣고 장시간 가열할 경우에 “E03” 표시가 나타나는 것은 정상입니다. 본 제품은 120V 전용 제품입니다. 전원을 바르게 사용하십시오.
예약 취사 시각이 맞지 않을 때	<ul style="list-style-type: none"> 현재 시각이 맞습니까? 오전, 오후를 잘못 선택하지 않았습니까? 예약시간을 13시간 이상으로 선택하지 않았습니까? 	<ul style="list-style-type: none"> 현재시각을 맞추지 않으면 예약시각에 취사가 완료되지 않습니다. 현재시각을 맞추십시오. (39쪽 참조) 오전, 오후를 확인하십시오. 최대 예약시간은 13시간입니다. (47~48쪽 참조)
취사 직후나 보온 중 밥에서 이상한 냄새가 날 때	<ul style="list-style-type: none"> 닭찜, 갈비찜 등의 요리를 하신 후 청소를 깨끗이 하셨습니까? 	<ul style="list-style-type: none"> 36쪽을 참조하여 뚜껑부의 패킹을 깨끗이 닦아낸 후 사용하여 주십시오.
뚜껑이 닫히지 않을 때	<ul style="list-style-type: none"> 뚜껑 결합 손잡이가 (●) “슴” (열림) 방향으로 완전히 돌려졌습니까? 내솔에 밥이나 뜨거운 음식물이 들어 있지 않습니까? 내솔을 본체에 완전히 넣었습니까? 	<ul style="list-style-type: none"> 뚜껑 결합 손잡이를 “슴” (열림) 방향으로 완전히 돌리고 닫아 주십시오. 압력추를 젖힌 다음 뚜껑을 닫습니다. 내솔에 부착되어 있는 내솔 손잡이를 좌우로 돌려 본체에 완전히 안착시킵니다.
“E_u.00” 번갈아 가면서 표시가 나타날 때	<ul style="list-style-type: none"> 마이컴 전원에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
“E_P.00” 번갈아 가면서 표시가 나타날 때	<ul style="list-style-type: none"> 환경센서에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
“E_uF” 표시가 나타날 때	<ul style="list-style-type: none"> 마이컴 내부 메모리에 이상이 있을때 나타납니다. 	<ul style="list-style-type: none"> 전원을 차단후 서비스센터로 문의하십시오.
취사, 보온/재가열 버튼 입력시, 보온 동작 중 “H_H” , 취사 동작 중 “H_H” 표시가 나타날 때		<ul style="list-style-type: none"> 전원 또는 제품의 이상 점검 기능입니다. 지속적으로 표시가 나타날 경우에는 서비스센터로 문의하십시오.
밥이 되지 않을 때	<ul style="list-style-type: none"> 취사 버튼을 눌렀습니까? 취사중 정전이 되지 않았습니까? 	<ul style="list-style-type: none"> 원하는 메뉴선택 후 반드시 취사 버튼을 1회 눌러 표시부에 “C_C” 표시가 나타나는지 확인하십시오.
밥이 설익거나 퍼석할 때 또는 증밥이 될 때	<ul style="list-style-type: none"> 계량컵을 사용하셨습니까? 물 조절은 정확히 하셨습니까? 쌀을 깨끗이 씻었습니까? 쌀을 장시간 불린 후 취사하셨습니까? 쌀을 개봉한지 오래되어 너무 말라있지 않습니까? 	<ul style="list-style-type: none"> 40~41쪽을 참조하여 올바르게 사용하십시오. 물을 반눈금 정도 더 넣고 취사하십시오.

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 서비스센터로 문의하시기 전에 아래 사항을 확인해 주십시오.

증상	확인사항	조치사항
콩(잡곡/현미)이 설익을 때	• 콩(잡곡/현미)이 너무 마르지 않았습니까?	• 콩(잡곡/현미)을 불리거나 삶아서 잡곡메뉴에서 취사를 하십시오. 잡곡의 종류에 따라 설익을 수도 있습니다.
밥이 너무 질거나 된밥일 때	• 메뉴 선택은 맞게 하셨습니까? • 물 조절은 정확히 하셨습니까? • 뜸을 들이는 상태에서 뚜껑을 열지는 않았습니까?	• 원하는 메뉴를 바르게 선택하십시오. • 물 조절을 정확히 하십시오. (40~41쪽 참조) • 취사 완료음이 울린 후 압력이 완전히 제거된 다음 뚜껑을 열고 밥을 섞어주십시오.
취사 도중 밥물이 넘칠 때	• 계량컵을 사용하셨습니까? • 물 조절은 정확히 하셨습니까? • 메뉴 선택을 정확히 하셨습니까?	• 40~41쪽을 참조하여 올바르게 사용하십시오.
보온 중 냄새가 날 때	• 뚜껑을 꼭 닫았습니까? • 보온중 전원플러그가 콘센트에서 빠지지 않았습니까? • 12시간 이상 보온하였거나 너무 적은 밥을 보온하지 않았습니까? • 주걱이나 식은밥 혹은 다른 종류의 밥을 넣어서 보온하지 않았습니까?	• 뚜껑을 완전히 닫아주십시오. • 보온 중 전원플러그를 항상 꽂아 주십시오. • 보온시간은 가능한 12시간 이내로 하십시오. • 백미 이외의 메뉴와 식은밥은 보온하지 마십시오.
"E_ _", "E_P", "E_ _" 표시가 나타날 때	• 온도감지기에 이상이 있을 때 나타납니다.	• 전원을 차단 후 서비스센터로 문의하십시오.
"E_F" 표시가 깜빡일 때	• 냉각팬에 이상이 있을 때 나타납니다.	• 전원을 차단 후 서비스센터로 문의하십시오.
보온 중 보온경과시간 표시가 깜빡일 때	• 보온 후 24시간이 경과하지 않으셨습니까?	• 보온 24시간 경과 이후부터 보온 경과 시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.
보온중 밥이 많이 식었거나 물이 많이 흐를 때	• 보온을 취침보온모드로 설정하지 않으셨습니까?	• 필요에 따라 취침보온모드를 해제 또는 설정한 후 보온하여 주십시오.
"E _{do} " 표시가 나타날 때	• 취사 완료 후 전원이 인가된 상태에서 한번도 뚜껑 결합 손잡이를 "힘" (열림) 방향으로 돌리지 않고 보온이 취소된 상태(대기상태)에서 취사 버튼을 누르지 않으셨습니까?	• 뚜껑 결합 손잡이를 "힘" (열림) 방향으로 돌린 뒤 다시 "힘" (잡김) 방향으로 돌려 주십시오.
"E _{co} " 표시가 나타날 때	• 분리형 커버가 장착 되어 있습니까?	• 분리형 커버를 장착해 주십시오. (36쪽 참조) • 분리형 커버가 장착된 상태에서 "E _{co} " 표시가 계속 점멸할 경우 서비스센터로 문의하십시오.
보온 중 경고음이 울리거나 보온 중 재가열이 되지 않을 때	• 분리형 커버가 장착되어 있습니까?	• 분리형 커버를 장착해 주십시오. (36쪽 참조)
전원코드 연결 후 전원이 들어오지 않을 때	• 대기전력 차단 스위치가  (ON)으로 되어 있습니까?	• 대기전력 차단 스위치를  (OFF)에서  (ON)으로 변경해 주십시오. (35쪽 참조)
"EP1", "EP2", "EP3", "EP4", "EP5", "EP6", 표시가 나타날 때	• 압력체크 후 이상이 있을 때 나타납니다.	• 46쪽의 압력체크 사용방법을 참조하여 올바르게 사용하십시오.
"EP7" 표시가 나타날 때	• 과기압 발생 시 나타납니다.	• 전원을 차단 후 서비스센터로 문의하십시오.
"EP8", "EP9" 표시가 나타날 때	• 압력감지기에 이상이 있을 때 나타납니다.	• 전원을 차단 후 서비스센터로 문의하십시오.



※ 상세 요리 재료 손질법은 쿠크홈페이지(www.cuckoo.co.kr)를 참조하세요.

※ 취사 후 내솥 세척시 36쪽의 유의사항을 참조하여 주십시오.

카테고리	요리명	요 리 재 료	요 리 방 법
맛있는 밥	쌀밥	쌀 6컵	1. 깨끗이 씻은 쌀을 내솥에 넣고 백미 또는 백미저압 물눈금 6까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 선택 버튼으로 「백미」 또는 「백미저압」 메뉴를 선택한 후 취사/쾌속 버튼을 눌러주십시오.
	완두콩밥	쌀3컵, 완두콩 1/2컵, 정종 1T, 소금 1.5t ※ 콩은 삶아서 취사하십시오.	1. 깨끗이 씻은 쌀과 준비한 재료를 내솥에 넣고 백미 물눈금 3까지 물을 부어 주십시오. 2. 그 위에 완두콩을 얹고 뚜껑을 잠근 뒤 「백미」 버튼을 눌러 주십시오.
	보리밥	쌀 2컵, 보리쌀 1컵	1. 깨끗이 씻은 쌀과 보리쌀을 내솥에 넣고 잡곡 물눈금 3까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 「잡곡」 버튼을 눌러 주십시오.
잡곡밥	오곡밥	쌀 1.5컵, 조 1/3컵, 찹쌀 1/2컵, 팥1/3컵, 수수 1/3컵, 소금 1t ※ 팥은 삶아서 취사하십시오	1. 깨끗이 씻은 쌀과 잡곡을 내솥에 넣고 잡곡 물눈금 3까지 물을 부어 주십시오. 2. 그 위에 삶아둔 팥을 얹고, 뚜껑을 잠근 뒤 「잡곡」 버튼을 눌러 주십시오.
	Fresh 발아 현미밥	현미 4컵	1. 깨끗이 씻은 현미를 내솥에 넣고 현미/발아 물눈금 4까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 선택 버튼을 눌러 「현미발아」를 선택한 후 현미발아 시간을 3시간으로 설정한 뒤 취사/쾌속 버튼을 눌러 주십시오.
	현미팥밥	현미 1컵, 쌀 2컵, 팥 1/3컵 ※ 팥은 삶아서 취사하십시오.	1. 깨끗이 씻은 현미를 내솥에 넣고 현미/발아 물눈금 3까지 물을 부어 주십시오. 2. 그 위에 삶아둔 팥을 얹고, 뚜껑을 잠근 뒤 「현미」 버튼을 눌러 주십시오.
웰빙밥	닭가슴살 녹차밥	현미 2컵, 녹차잎 3g, 녹차가루 10g, 닭가슴살 4쪽, 올리브오일 약간, 소금 약간, 후추 약간, 샐러리 5g, 라임 약간, 로즈마리 약간	1. 깨끗이 씻어둔 쌀과 준비한 재료를 내솥에 넣고 현미/발아 물눈금 2까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 선택 버튼을 눌러 「현미발아」를 선택한 후 현미발아 시간을 3 시간으로 설정한 뒤 취사/쾌속 버튼을 눌러 주십시오. 3. 취사가 완료되면 준비해둔 양념장을 올려 비벼 드십시오. → 상세 요리 재료 손질법은 쿠크홈페이지(www.cuckoo.co.kr)를 참조하세요.
	머쉬룸 티안	현미 2컵, 브라운그레비소스 20g, 소금 약간, 깻잎 2장, 호박 1/3개, 해송이버섯 1팩	
	새싹 비빔밥	현미 2컵, 새싹채소 약간 ※ 약고추장 : 고추장 1/2컵, 다진소고기 40g, 참기름 1T, 꿀1T, 설탕 1T	
슈퍼 곡물	카무트밥	쌀 2컵+1/3컵, 카무트 2/3컵 (쌀:카무트의 비율은 8:2가 적당합니다.)	1. 카무트와 쌀을 각각 씻은 뒤 내솥에 카무트를 먼저 넣고 그 위에 쌀을 넣은 후 잡곡 물눈금 3까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 선택 버튼으로 「슈퍼곡물」 메뉴를 선택한 후 불림 시간을 3시간으로 설정한 뒤 취사/쾌속 버튼을 눌러 주십시오. ※ 카무트의 더 부드러운 식감을 원하실 경우, 불려서 취사해 주십시오.
	귀리밥	쌀 2컵, 귀리 1컵 (쌀:귀리의 비율은 7:3이 적당합니다.)	
	병아리콩 밥	쌀 2컵+1/3컵, 병아리콩 2/3컵 (쌀:병아리콩의 비율은 8:2가 적당합니다.)	1. 쌀, 슈퍼곡물을 깨끗이 씻어서 내솥에 넣고 잡곡 물눈금 3까지 물을 부어 주십시오. 2. 뚜껑을 잠그고 선택 버튼으로 「슈퍼곡물」 메뉴를 선택한 후 불림 시간을 0 시간으로 설정한 뒤 취사/쾌속 버튼을 눌러 주십시오. ※ 슈퍼곡물의 더 부드러운 식감을 원하실 경우, 불려서 취사해 주십시오.
	그린 렌틸콩밥	쌀 2컵, 그린렌틸콩 1컵 (쌀:그린렌틸콩의 비율은 7:3이 적당합니다.)	
	퀴노아	쌀 2컵, 퀴노아 1컵 (쌀:퀴노아의 비율은 7:3이 적당합니다.)	



요리안내

카테고리	요리명	요리재료	요리방법
건강죽	흰죽	쌀 1컵	1. 내솥에 준비된 재료를 넣고 용량에 따라 적당한 물눈금까지 물을 부어 주십시오. (흰죽: 흰죽 물눈금 1, 중국죽: 묽은죽 물눈금 1.5) 2. 뚜껑을 잠근 뒤 「영양죽」 버튼을 눌러 주십시오.
	젓죽	쌀 1컵, 젓 1/2컵, 소금 약간	
	전복죽	쌀 1컵, 전복 1개, 참기름 1T, 소금 약간	
	특미닭죽	쌀 1컵, 닭 200g, 닭육수 600g, 청고추/홍고추 1개씩, 소금 약간 *양념장 : 간장 2T, 다진파 1T, 다진마늘 1T, 참기름 2, 깨소금 약간, 후추 약간	
	팔죽	쌀 1컵, 팥 1/3컵, 찹쌀가루 1컵	
삼계탕	삼계탕	닭 1마리(1kg), 수삼 2뿌리, 대추 10개, 찹쌀 1컵, 소금 약간, 후추 약간, 마늘 약간	1. 준비된 닭의 배 아래쪽 양쪽에 칼집을 내어 구멍을 뚫어 주십시오. 2. 손질한 닭의 뺏속에 2시간 이상 불린 찹쌀과 마늘을 채워 넣어 주십시오. (찹쌀을 불리지 않으면 설익을 수 있습니다.) 3. 식성에 따라 걸쭉한 국물을 원하시면 찹쌀의 1/2은 닭의 뺏속에 넣고 나머지 1/2은 밖으로 꺼내 놓아 주십시오. 4. 칼집을 낸 구멍에 두다리를 엇갈리게 끼우고 고정시켜 주십시오. 5. 내솥에 준비한 닭을 넣고 깨끗이 씻은 수삼과 대추를 넣은 후 물을 백미 물눈금 6까지 부어 주십시오. 6. 뚜껑을 잠그고 선택 버튼을 눌러 「삼계탕」을 선택한 후 취사/쾌속 버튼을 눌러 주십시오.

저압찜/고압찜 요리별 시간표


요리종류	요리시간		요리종류	요리시간	
	저압찜	고압찜		저압찜	고압찜
시루떡	45분	45분	가지찜	15분	15분
갈비찜	55분	40분	호박찜	15분	15분
닭찜	50분	45분	밤찜	40분	25분
수육	45분	30분	고구마찜	45분	25분
오향장육	55분	40분	감자찜	40분	40분
갑오징어조림	30분	20분	옥수수찜	55분	40분
스테이크	35분	25분	생크림케익	40분	40분
꽃게찜	30분	30분	살은계란	25분	15분
생선찜	45분	25분	계란찜	20분	20분
대합찜	35분	35분	떡그라탕	20분	20분
두부찜	25분	15분	새우케찹볶음	15분	15분
약밥	40분	30분	밥피자	20분	20분
잡채	20분	20분	버터초콜릿케익	45분	45분
만두찜	20분	15분	떡볶이	20분	15분

— 상세 요리 손질법은 쿠키홈페이지(www.cuckoo.co.kr)를 참조하세요.



产品部件名称

产品部件名称 (外部)

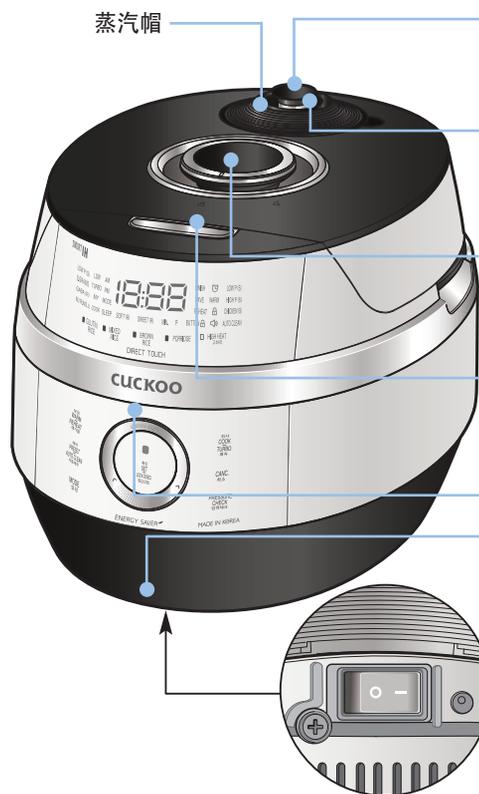

- 压力锥**
煮饭或料理前，压力锥要水平放置，若压力锥倾斜，会使蒸汽排出。
- 自动蒸汽排出口**
煮饭结束或保温时会自动排出蒸汽，若要强行取消时，按住取消键，会自动排出蒸汽。
- 结合手柄**
煮饭时，请将结合手柄 (●) 转至“⊖” (关闭) 位置才能启动。
- 开盖按钮**
将结合手柄“⊖” (关闭) 转至“⊕” (开启) 位置后，按开盖按钮可开盖。
- 功能操作部及显示部**
- 待机电源开关**
在连接好电源的情况下如发现产品无法操作。请确认电源开关是否开启。
• 使用时: [ON] (开)
• 未使用时: [OFF] (关)
(关闭待机时的电源，有助于提高能源效率)

※在煮饭过程中关闭电源开关 [OFF] (关)，有可能会因为系统的自动蒸汽排放而造成锅内的液体外泄。

产品部件名称 (内部)



密封圈
根据使用方法及使用次数，使用寿命约1~3年，请定期更换。

- 锅盖**
- 分离式内锅盖**
- 压力控制部**
- 安全密封圈**
- 安全密封圈罩**
- 压力传感器**
- 锁扣安装轴**
- 分离式内锅盖把手**
- 接水盒**
煮饭或料理结束后，请及时清理接水盒里的水。若接水盒里有水会产生异味。

内锅
(请正确放入内锅)

附属品



使用说明书及料理指导书




饭勺



量杯



蒸盘

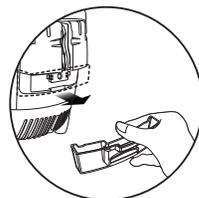

透气针·清刷洁
(实物附着于产品底部。)




产品清洁方法/锅盖结合手柄使用方法

- 清洁不干净时，保温中会产生异味，请保持锅盖清洁。(拔出电源插头，待机散热后再清洁。)
- 请用抹布将机体、锅盖上的水分擦净，严禁使用苯、冲淡剂等清洁产品。
- 请勿使用含有漂白剂或氯成分的洗涤剂清洗分离型内锅盖及其它不锈钢材质部分。
- 使用时内锅盖表面或内锅内部会形成一层淀粉膜，对卫生没有任何影响。


分离型内锅盖及压力密封圈

清洗分离型内锅盖后，请将其安装在锅盖上，
如未安装分离型内锅盖，不能进行煮饭或预约煮饭。(保温时发出警示音)

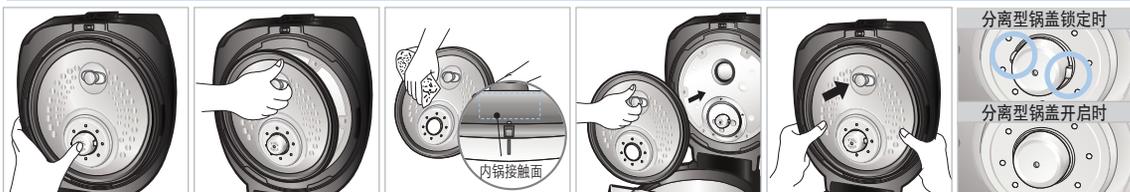

- ① 抓住分离型锅盖把手，按下按钮的中央后，将把手向箭头方向推动，即可与电饭煲分离。
※分离或安装分离型内锅盖时，可能会脱落，请抓住分离型内锅内锅盖把手。
※不按按钮中央时，可能不会正常运行。
- ② 请用厨房用中性洗涤剂及海绵清洗，用干燥的抹布擦净水渍。
※擦净压力密封圈的內锅接触面上的米粒，保持清洁可延长使用寿命。
- ③ 安装时抓住分离型内锅盖把手，安装好后，分离型内锅盖上端会发出“哒”的声音。

清洗或更换压力密封圈后再安装时，请将脱落处重新安装到位后再使用。

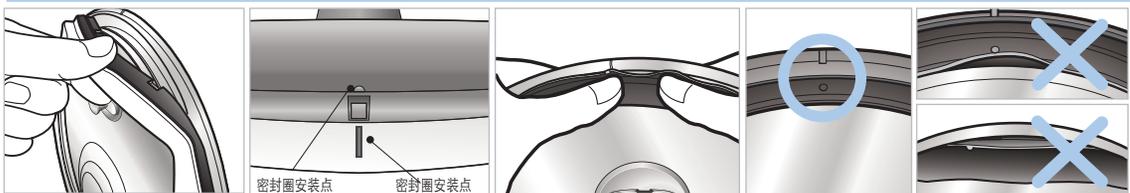

- ① 分离密封圈时如图向外拉动即可。
- ② 安装时请对准6个密封圈安装点及基准点。
- ③ 对准6个密封圈安装点及基准点后，向内按压即可安装。
- ④ 请确认安装位置是否正确，压力密封圈安装不到位时会出现漏气现象。



安全密封圈
使用前、后请用柔软的抹布擦拭蒸汽孔，注意请勿将其堵塞。用柔软的抹布擦拭安全密封圈，请勿强制摘下或使其脱落，使用前、后请确认其连接状态，如未紧密贴合时请咨询售后服务中心。



内锅
请将内锅外侧或底部的异物及水分擦净，使用钢丝球、铁刷、研磨剂等清洁内锅会导致涂层脱落，请使用洗涤剂和海绵清洗。
※保持内锅压力密封圈接触部位清洁可延长使用寿命。



机体积水部
煮饭时产生的米汤通过蒸汽排出口流入积水部，煮饭后请用干抹布擦净。



机体内部
温度感应器上粘有异物时，要轻轻擦拭金属盘避免受损，将加热盘上粘有的异物清理干净。

锅盖结合手柄使用方法

1. 煮饭或料理时，请盖好锅盖并将锅盖结合手柄转至“” (关闭) 位置。功能显示部上显示“”标识，这表示锅盖已完全关闭，可选择压力煮饭的安全装置。
2. 煮饭或料理完成后，将锅盖结合手柄从“” (关闭) 位置转至“” (开启) 位置后，按开盖键打开锅盖。产品内蒸汽未全部排出时，锅盖结合手柄不易从“” (关闭) 位置转至“” (开启) 位置。此时，请勿强行转动锅盖结合手柄，推动压力锥将内部蒸汽全部排出后再行操作。
3. 开启关闭锅盖时，请将锅盖结合手柄转至“” (开启) 位置。
· 功能显示部上如不显示“”标识，煮饭、预约/自动洗涤键无法工作，请重新转至“” (关闭) 位置。
· 从上方观察锅盖时，锅盖结合手柄完全转至“” (关闭) 位置时锅盖处于关闭状态。
· 将锅盖结合手柄转至开启方向时，“”标识闪烁3次后熄灭，转至关闭位置时，“”标识亮起。





产品清洁方法

压力喷嘴堵塞清洁方法


压力锥

如异物堵塞压力锥的蒸汽排出口，产品的功能不能正常发挥，使用前、后请参照下列的压力锥/蒸汽排出口清洁方法，将压力锥分离，用透气针清洁后再使用。请定期检查蒸汽排出口是否堵塞

※ 压力锥的图片仅供参考。

蒸汽帽

煮饭或料理结束后,要经常清洗蒸汽帽。清洗时,请用中性洗涤剂及海绵清洗,用干抹布将锅盖上的水渍擦拭干净。

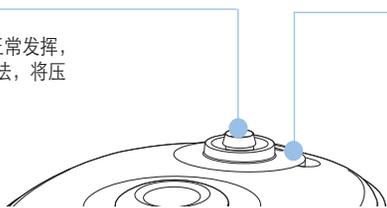


<压力锥/蒸汽排出口清洁方法>



1 锅盖结合手柄在“白”（关闭）状态下，抓住压力锥向上提起，按箭头方向（逆时针）转动，将压力锥分离。



4 压力锥完全安装到位后，才可自由转动。
3 用透气针清洁孔内异物后，将压力锥向箭头方向（顺时针）安装即可。

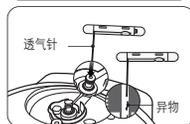

2 用透气针（附着于产品底部）清洁蒸汽排出口。
※透气针仅用于清理压力锥蒸汽排出口，其他孔是安全装置，严禁使用透气针。


内锅·配件 ▶ 请用中性洗涤剂和海绵清洗。



透气针&清洁刷使用方法




1 如图所示将透气针&清洁刷（附于产品底部）分离。

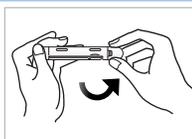


2 如图所示抓住清洁刷的盖子，按箭头方向分离。



3 用清洁刷将用抹布难以清理排水槽清理干净。

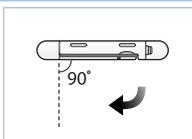

4 按箭头方向推动透气针，使透气针·清洁刷与本体成90°

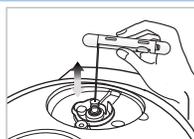


5 透气针只可用于清理蒸汽排出口。

蒸汽帽清洁方法


煮饭或料理结束后请勿触摸蒸汽帽，小心烫伤。



1 如图所示，抓住蒸汽帽后端并向上提起，即可将蒸汽帽分离。

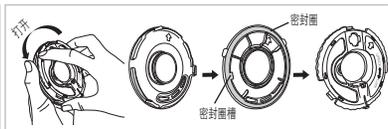

2 抓住把手逆时针方向转动使其分离，用中性洗涤剂及海绵清洗，清洗后按顺序安装即可。
※ 安装密封圈时请对准密封槽，注意安装方向

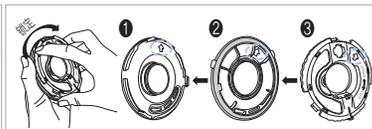


3 安装蒸汽帽时按照箭头方向对准，按顺时针方向转动即可安装。




4 安装蒸汽帽时，如图所示安装完毕后，按压蒸汽帽使其固定。

接水盒/排水槽清洁方法

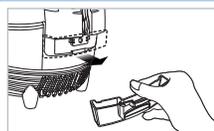


1 分离接水盒。

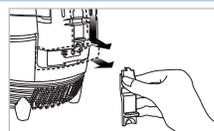


2 拖住排水槽盖的把手向下一按即可分离。



3 将排水槽与接水盒内的水清除后，用抹布擦净，或用中性洗涤剂及海绵清洗。

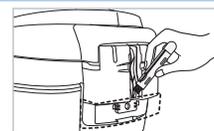

4 如图所示，用清洁刷将排水槽清理干净。

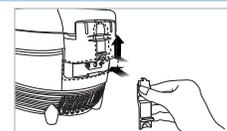

5 清洁完毕后，如图所示，将排水槽向上推动即可安装。

锅盖无法关闭时注意事项

请勿强行关闭锅盖，否则会导致产品故障，锅盖无法关闭时，请确认下列事项。



1. 确认内锅是否完全放入机体内。（请将内锅把手置于机体的凹槽处。）



2. 从上方观察锅盖时，锅盖结合手柄应如右图所示，此时锅盖关闭。

3. 机体内部有易产生蒸汽的汤或热水时，因内部压力使锅盖不能完全关闭。此时，应推动压力锥再关闭锅盖，顺时针转动锅盖结合手柄，将锅盖锁定。



功能操作部的名称及作用 / 语音音量调节功能

功能显示部名称及作用

功能显示部名称及作用

SLIDE TOUCH

- > : 右侧移动键
- < : 左侧移动键
- 滑动触摸键

选择菜单时使用, 更改时间时使用, 用设定键变更已选择的功能时使用

Energy Eye

保温/再加热键
保温或餐前热饭时使用。

预约/自动洗涤键
预约煮饭时使用
自动洗涤(自动杀菌洗涤)时使用

设置键
语音设置, 现在时间
语音音量, 保温温度
调节保温, 调节饭味
睡眠保温, 锅巴强化
自动省电, 画面亮度省电
显示煮饭剩余时间
夜间语音音量, energy eye
设置以上功能时使用

SMART IH

LOW P (G) LOW AM FINISH LOW P (S)

S.GRAINS TURBO PM SAVE WARM HIGH P (S)

GABA (R) MY MODE REHEAT CHICKEN (S)

NU RUNG JI COOK SLEEP SOFT (R) SWEET (R) MIN. P BUTTON AUTO CLEAN

GLUTIN. RICE MIXED RICE BROWN RICE PORRIDGE HIGH HEAT

DIRECT TOUCH

CUCKOO

ENERGY EYE

ENERGY SAVER

MADE IN KOREA

功能显示部

高火力键
使用白米, 杂谷, 糙米菜单
高火力时使用

DIRECT TOUCH
使用白米, 白米高火力, 杂谷,
杂谷高火力, 糙米, 糙米高火力,
营养粥菜单即刻开始煮饭时使用

确认键
设置所选功能或设置按键
锁定功能时使用

煮饭/快速键
煮饭或开始制作料理时使用

取消键
取消所选功能时使用或自动排出蒸汽
时使用(需取消煮饭或料理时请按取
消键0.3秒(内锅温度高时1.5秒))
进入省电功能时使用

压力检测键
压力检测时使用

※ 接通电源后无任何操作时, 如图所示画面显示待机状态。
(待机画面显示的菜单, 时间, 有无语音, 调节饭味阶段, 根据用户设置而不同。)

※ 功能操作时如按取消键, 则返回待机状态。

※ 按键力度以听到响声为准, 面板设计以实物为准

待机画面

语音音量调节功能(解除语音功能或调节语音音量)

待机状态下按3次设置键即可进入。(初次按设置键时需按0.3秒以上)



按3次设置键进入语音音量设置模式时显示部显示 3

- ▶ 设置、确认、取消键亮起。
- ▶ 语音提示“语音音量设置模式, 请按活动触摸键调整语音音量后按确认键。”



按选择键设置 OFF 后, 及 OFF 标识开始闪烁, 语音提示“语音功能被解除。”



按选择键可将语音音量大小设置为 1 ~ 5

- ▶ 确认键闪烁, 设置、取消键亮起。
- ▶ 连续按键时连续变化。
- ▶ 设置所需语音音量后, 按确认键。
- ▶ 7秒内无任何按键操作, 语音提示“已超时, 功能设置被取消。”同时功能被取消并返回待机模式。



设置现在时间/夜间语音音量设置功能

调整现在时间

使用须知 例) 现在时间为上午8时25分

1 接通电源后，按2次设置键。

- ▶ 初次按设置键时需按0.3秒以上才可进入。
- ▶ 语音提示“现在时间设置模式，请按滑动触摸键调整现在时间后按确认键。”
- ▶ 设置、确认、取消键亮起。



2 按选择键将小时调整为“8”，将分钟调整为“25”

- ▶ 每按1次右侧选择键，时间以1分钟为单位增加。
- ▶ 每按1次左侧选择键，时间以1分钟为单位减少。
- ▶ 连续按键，时间以10分钟为单位连续变化。(反复功能)
使用反复功能先调整所需小时后，再以1分钟为单位调整分钟，可更加便利的调整所需时间。
- ▶ 请注意区分上午、下午。
- ▶ 白天12:00时显示下午12:00。



3 设置所需时间后，按确认键。

- ▶ 确认键闪烁，设置、取消键亮起。
- ▶ 未按确认键或按键后超过7秒无任何操作时，语音提示“已超时，功能设置被取消”同时取消时间设置。



夜间语音音量设置模式

夜间音量设定功能是在夜间(10:00PM~05:59AM)减小语音音量，请根据需要进行设定。
此功能只适用于夜间。

▶ 夜间语音音量设置方法



例) 3阶段，晝間音量的60%

OFF : 无语音

1 : 语音音量20%

2 : 语音音量40%

3 : 语音音量60%

4 : 语音音量80%

5 : 语音音量100%

各设置阶段的音量大小

1. 待机状态下按12次设置键进入调低语音音量设置模式。
初次按设置键时请按0.3秒以上。
2. 进入调低夜间语音音量设置模式时，语音提示“夜间语音音量设置模式，请按滑动触摸键，调整夜间语音音量后按确认键。”此时，设置、确认、取消键亮起。
3. 按选择键选择阶段，同时更改语音音量，选择所需语音音量后按确认键。此时，确认键闪烁，设置、取消键亮起。
4. 按选择键显示部显示“OFF”，语音提示“夜间语音功能已解除。”请按确认键选择功能。此时，确认键闪烁，设置、取消键亮起。
5. 进入降低夜间语音音量设置模式后，按取消键或7秒内无任何按键操作时，语音提示“已超时，功能设置被取消”同时取消功能设置返回待机状态。



煮饭前准备事项


1 洗净内锅,擦干水分。

- ▶ 请用柔软的抹布清洗内锅。
- ▶ 使用粗质抹布清洗内锅时易使内锅表面的涂层脱落。



2 按人数用量杯计量米量后放入内锅。


- ▶ 米量以量杯水平面为基准, 1杯等于1人份。
(例: 3人份时米量为3杯, 6人份时米量为6杯)

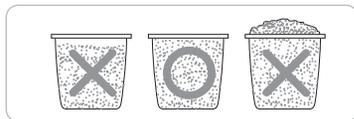

3 将洗净的米倒入内锅。

4 根据所需菜单调整水位。

- ▶ 把内胆水平放置在固定台面后、按内胆水刻度调整水位。
- ▶ 内胆水刻度为米和水同时放入时的刻度。
 - ① 陈米或煮较粘的米饭时: 比规定量多加半刻度水量。
 - ② 煮浸泡的米或较硬的米饭时: 比规定量少加半刻度水量。
 - ③ 米饭夹生或发硬时: 由于大米品种差异或大米的含水量(陈米)不同而导致此现象发生, 此时, 请加入比标准煮饭多 1~10%的水后再进行煮饭。
- ※ 该款式不提供soft白米功能。

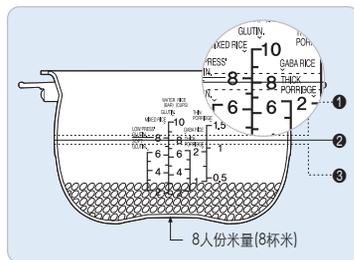

5 插入电源插头后将内胆放入产品内。

请将内胆正确放入产品内。

- ▶ 内胆外侧底部粘有米粒或异物时会影响煮饭或产品可能会受损。
- ▶ 内胆未完全放置于机体内时无法盖锅盖。
(内胆把手要放置于机体两侧的槽)

6 盖上锅盖后将结合手柄转至“” (关闭)位置。

- ▶ 功能显示器显示“” (关闭)标志时表示锅盖已盖紧。



煮饭菜单使用方法

白米	煮较粘的米饭时使用。	白米低压	在1.2个大气压下煮无粘性柔软的米饭时使用。
杂谷	将杂谷掺入白米中煮饭时使用。	糙米发芽	将糙米发芽做糙米发芽饭时使用。
糙米	不使糙米发芽, 煮糙米饭时使用。	参鸡汤	自动制作参鸡汤时使用。
锅巴	煮带锅巴的米饭时使用。	超级谷物	食用多种超级谷物(卡姆小麦, 燕麦, 鹰嘴豆)时使用。
营养粥	煮营养粥时使用。	低压蒸, 高压蒸	在低压(1.4气压)与高压(2.0气压)下手动设置蒸的时间时使用。
自动洗涤 (自动杀菌洗涤)	煮饭, 保温或料理结束后清除异味时使用。	高火力 (白米, 杂谷, 糙米)	煮比一般米饭香黏的米饭时使用。 (可能会出现糊化现象。)
白米快速	<ul style="list-style-type: none"> · 选择“白米”菜单后按2次煮饭/快速键可缩短煮饭时间。(以白米2人份为基准大约需13分钟。) · 使用白米快速煮的米饭效果不如正常煮的米饭效果好, 因此请将煮饭容量控制在6人份以下。 · 煮饭前将白米充分浸泡20分钟后用白米快速菜单煮饭效果更佳。 		
杂谷快速	<ul style="list-style-type: none"> · 选择杂谷菜单后, 按2次煮饭/快速键开始杂谷快速煮饭, 缩短煮饭时间。(以杂谷2人份为基准约需26分钟。) · 使用杂谷快速煮的米饭效果不如正常煮的米饭效果好, 因此请将煮饭容量控制在6人份以下。 · 煮饭前将杂谷提前浸泡, 或将坚硬的黄豆, 红豆煮熟后再煮饭效果更佳。 		

※ 白米快速及煮少人份米饭时接水盒中会有较多积水, 请及时清理。



煮饭方法

1

按滑动触摸键选择所需菜单。

- 确认是否安装了分离型内锅盖。
- 煮饭前请将压力锥放置水平。
- 每按1次滑动触摸键按白米低压→超级谷物→糙米发芽→锅巴→白米→白米高火力→杂谷→杂谷高火力→糙米→糙米高火力→营养粥→自定杀菌洗涤→参鸡汤→低压蒸→高压蒸的顺序依次变更。
- 如连续按键菜单将按顺序连续变化。
- 通过滑动触摸键可更加快捷地设置所需菜单。
- 在白米, 杂谷, 糙米, 营养粥菜单下, 如按DIRECT TOUCH键立即开始煮饭。
- 使用白米, 杂谷, 糙米菜单开始煮饭5秒内按高火力键, 开始进行相关菜单的高火力煮饭模式。
- 用白米, 白米高火力, 杂谷, 杂谷高火力, 白米低压, 糙米, 糙米高火力, 糙米发芽, 超级谷物菜单煮饭后, 菜单将被自动记忆, 再次使用同一菜单时无需重新选择。



例) 选择白米低压时
▶语音提示“白米低压”。

2

按煮饭/快速键开始煮饭。

- 煮饭前将结合手柄转至“0” (关闭)位置后按煮饭/快速键时, 语音提示“开始进行白米煮饭”的同时, 开始煮饭。
- 未将锅盖结合手柄转至“0” (关闭)位置就按煮饭/快速键, 警示音响起, 同时显示“E01”标识, 语音提示“请将锅盖结合手柄转至关闭位置”。
- 开始煮饭后1分钟内, 显示预计煮饭完成时间。
- 根据煮饭用量, 水温, 煮饭条件的不同, 实际煮饭完成时间可能略有差异。
- 煮饭开始1分钟后以一定时间为周期显示煮饭剩余时间和目标压力。



例) 煮白米高压饭时 (显示部“0”标识转动, 目标压力显示。)

3

焖饭(如: 白米)

- 进入焖饭阶段时, 显示部显示剩余时间并语音提示“开始焖饭”, 根据所选菜单不同, 剩余时间会有差异。
- 焖饭阶段完成前1~4分钟, 语音提示“开始排出蒸汽”同时蒸汽自动排出, 请不要受到惊吓及烫伤。

例) 剩余10分钟时



4

完成煮饭

- 煮饭完成后, 语音提示(CUCKOO~, 鸟鸣声)“煮饭已完成, 请搅匀米饭”的同时自动进入保温状态。
- 不需保温时, 按取消键0.3秒取消保温。
- 煮饭完成后请搅匀米饭, 如未搅匀米饭, 可能导致米饭变硬, 变色, 产生异味。
- 锅盖结合手柄不易转动时, 请推动压力锥待蒸汽完全排出后转动。
- 饭中请勿按取消键, 煮饭功能会被取消。



各菜单煮饭时间

菜单区分	白米	白米快速	白米高火力	杂谷	杂谷快速	杂谷高火力	白米低压	锅巴	糙米	糙米高火力	超级谷物	参鸡汤	营养粥(稠粥)	营养粥(稀粥)	低压蒸高压蒸	压力检测	自动洗涤(自动杀菌洗涤)
煮饭量	2~10人份	2~6人份	2~10人份	2~8人份	2~6人份	2~8人份	2~6人份	2~4人份	2~6人份	2~6人份	2~8人份	1只(约1Kg)	1~2杯	0.5~1.5杯	请参照料理指导书	白米水位2刻度	白米水位2刻度
煮饭时间	约27~38分钟	约13~21分钟	约27~39分钟	约40~56分钟	约26~34分钟	约41~57分钟	约38~47分钟	约37~43分钟	约35~60分钟	约53~61分钟	约35~49分钟	约70分钟	约68~107分钟	约73~110分钟		约17分	约20分

糊化现象 (米饭微黄)

用该压力饭锅煮饭时米饭底部会出现糊化现象, 这是米饭吸收残留水分后而形成的特有的香醇味道, 特别是如“预约煮饭”, 米粒经过长时间浸泡在内锅底部形成微小淀粉沉淀, 与煮“普通米饭”相比, 糊化现象更明显。

※ 将谷物掺入白米内煮杂谷饭时, 与煮白米饭相比, 糊化现象(米饭微黄)更加明显。



CUCKOO调节饭味功能使用方法

什么是调节饭味功能

“CUCKOO福库”开发了自己的可变电路，用户可根据个人喜好选择米饭的柔软程度与香粘程度，用此功能达到预期的煮饭效果，这是“CUCKOO福库”持有的专利技术。

调节饭味功能

增加柔软米饭阶段时：米饭变软。(可选择柔软米饭4阶段)

增加香醇米饭阶段时：米饭更加香醇，可能会产生糊化现象。(可选择香醇米饭4阶段)

※根据个人喜好既可选择各柔软、香粘米饭阶段，也可同时选择。

调节饭味功能使用方法

选择调节饭味支持的菜单(白米、白米高火力、杂谷、杂谷高火力、糙米、糙米高火力、糙米发芽、锅巴、超级谷物)后，按设置键0.3秒以上，语音提示“调节饭味设置功能，请按设置键或滑动触摸键选择所需饭味后按确认键”同时，进入调节饭味设置模式。下图以白米菜单的设置方法为例。

① 菜单选择画面



② 进入调节饭味模式



选择所需菜单后按设置键1次持续0.3秒以上，进入调节饭味设置模式。

③-1 柔软米饭阶段设置模式



按左侧的选择键选择所需柔软米饭阶段。

③-2 香醇米饭阶段设置模式



按右侧的选择键选择所需香醇阶段后按确认键。

④ 完成设置画面



设置所需饭味后，按确认键设置的值被保存。(按取消键或7秒内无任何按键操作功能设置被取消并返回待机状态。)

CUCKOO调节饭味使用方法 II

煮饭时完成加热调节温度阶段(温度高、低)的煮饭功能，煮饭时顾客可根据自己喜好将固定的温度阶段进行调整。初始值设置为“□”，请根据需要进行调整。

- 高阶段：煮杂谷饭或煮黏米饭时设置。 - 低阶段：用新米煮饭或煮不粘的米饭时设置。

调节煮饭功能使用方法

待机状态下按6次模式键进入调节煮饭模式，此时显示‘调节煮饭’所支持的菜单。

① 调节煮饭设置画面



② 菜单选择画面



按选择键选择所需的调节煮饭功能。

③-1 高阶段设置模式



按确认键显示部变化如图所示。

③-2 低阶段设置模式



按选择键显示部变化如图所示。

④ 完成设置画面



按确认键设置的值被自动保存。(按取消键或7秒内无任何按键操作时返回待机状态。)

1. CUCKOO调节煮饭功能用于白米、白米高火力、白米快速、杂谷、杂谷高火力、杂谷快速、糙米、糙米高火力、糙米发芽、白米低压、超级谷物菜单。
2. 以初始显示画面为基准，请根据个人口味设置调节煮饭阶段，煮饭阶段较高时会有糊化现象。
3. 设置各阶段后进行煮饭时由于大米状态及含水量不同，煮饭状态会有差异。



糙米发芽煮饭方法

什么是糙米发芽

糙米比白米营养价值高,但有口感欠佳、较硬、不易消化等缺陷。不过使糙米稍微发芽会激活其含有的营养成分,并促进吸收。

糙米发芽菜单操作方法

1 为促进发芽率,请将糙米提前浸泡16小时以内

预备发芽方法

- ▶将洗好的糙米放入容器里,倒入充足的水浸泡。
- ▶预备发芽时间应控制在16小时以内,使用糙米发芽菜单之前必须重新清洗后煮饭。
- ▶清洗时,应轻轻搓洗,若过度用力搓洗会使胚芽掉落,容易导致糙米不发芽。
- ▶预备发芽时,不同的浸泡时间会产生不同的特殊味道。
- ▶将洗好的预备发芽糙米放入内锅,按煮饭量调整水位,选择糙米发芽菜单。
- ▶受炎热的夏日或保管温度的影响糙米在预备发芽时会产生异味,请缩短浸泡时间,且淘米时多加留意。

2 将锅盖结合手柄转至“”(关闭)位置,按选择键选择糙米发芽。

- ▶选择糙米发芽菜单时显示部显示3H。



3 按煮饭/快速键。

- ▶按煮饭/快速键或按确认后,如按煮饭/快速键按照设置的时间开始进行糙米发芽,完成后立刻开始煮饭。
- ▶进行糙米发芽时显示‘煮饭’标识,并显示剩余时间。



糙米发芽煮饭时注意事项

- 1 想尽快食用糙米发芽饭时,无需浸泡做预备发芽,可直接选择糙米发芽功能设定糙米发芽时间后,按煮饭键。(芽的大小并不影响营养成分的多与少。)
- 2 在气温过高的环境下设定糙米发芽时间过长时会产生异味,此时把糙米发芽设定时间缩短为宜。
- 3 使用糙米发芽功能时,最多可做6人份。
- 4 可以使用自来水,但使用矿泉水会更好,不可使用开水或凉开水,可能会导致糙米不发芽。
- 5 糙米的发芽率或芽的长度等发芽状态根据糙米存放环境和保管时间的不同会有所差异。
-发芽糙米根据糙米种子的不同胚芽长度及发芽率会有所差异。
发芽糙米必须使用收割未满1年的糙米,尽可能使用加工后保管时间短的糙米。
- 6 糙米发芽功能设定3H时,不可预约,如需预约时,设定为‘糙米’菜单后,再预约。
- 7 根据糙米的种类不同锅底米饭出现糊化现象及米饭状态会有所差异,请根据喜好增减水量或使用调节饭味功能
- 8 根据使用环境及大米状态的不同可能会看不到芽。



超级谷物使用方法

什么是超级谷物

与白米相比超级谷物营养更加均衡，含有多种维他命及丰富的矿物质，抗氧化成分，食物纤维，超级谷物可代替白米使用，是补充营养的很好的营养元素。

超级谷物的特征

- ① 卡姆小麦：抗氧化效果 - 卡姆小麦中含有硒，能去除体内的活性氧。
- ② 燕麦：预防便秘 - 含有丰富的不保护我脂肪酸及纤维质。
- ③ 鹰嘴豆：减肥效果 - 鹰嘴豆中含有精氨酸成分，可促进脂肪燃烧及血管扩张。
- ④ 绿色红扁豆：缓解疲劳 - 含有丰富的蛋白质，维他命B，铁质。
- ⑤ 藜麦：预防成人病 - 合成不饱和脂肪酸，具有降低胆固醇指数的效果。

超级谷物菜单的操作方法

- ① 将锅盖结合手柄转至“”（关闭）位置，按选择键选择超级谷物。

▶ 选择糙超级谷物单后，显示部显示0H。



- ② 按确认键，再用滑动触摸键设置时间。

▶ 每按一次 右侧或 左侧选择键时，超级谷物浸泡时间反复选择3H(3个小时)↔0H(0个小时)。

▶ 超级谷物浸泡时间可设置为0.3个小时。



- ③ 按煮饭/快速键。

▶ 按煮饭/快速键或确认键后，再按煮饭/快速键，此时，按设定时间开始进行浸泡，浸泡完成后再开始煮饭。

▶ 浸泡中显示“煮饭”标识及剩余时间。



超级谷物煮饭时注意事项

- ① 用超级谷物煮饭时以杂谷水位为基准，最多可煮8人份。
- ② 使用不同种类的超级谷物煮饭时，糊化现象及米饭状态会略有差异。请根据个人口味增减水量或使用调节煮饭功能。
- ③ 超级谷物菜单不支持预约功能。
- ④ 煮较硬的谷物时，选择浸泡3H(3个小时)后，再进行煮饭。
- ⑤ 根据个人口味如喜食用更加柔软的米饭时，请参照下列方法进行煮饭。
 - ▶ 用‘鹰嘴豆’煮饭时，在室温下浸泡4~6个小时后再进行煮饭。
 - ▶ 用‘燕麦’煮饭时，在室温下浸泡30分钟~1个小时后再进行煮饭。
- ⑥ 保温时请搅匀米饭。

卡姆小麦煮饭时注意事项

- ① 将卡姆小麦与大米分别清洗，先将卡姆小麦放入内锅内，再将大米放到卡姆小麦上，请按杂谷水位调整水量。
- ② 选择超级谷物菜单后，用选择键设定浸泡时间为3H(3个小时)，再按煮饭/快速键。
- ③ 保温时请搅匀米饭。



低压蒸/高压蒸使用方法

低压蒸/高压蒸使用及预约方法



1 将锅盖结合手柄转至“” (关闭)位置, 按选择键选择低压蒸或高压蒸。

- ▶ 确认键闪烁, 取消, 煮饭/快速键亮起。
- ▶ 选择低压蒸或高压蒸时, 显示部显示时间。(语音提示“低压蒸, 请按确认键”或“高压蒸, 请按确认键”。)



2 按确认键, 再用滑动触摸键设置料理时间。

- ▶ 预约, 取消, 煮饭键亮起。语音提示“按滑动触摸键调整料理时间后按煮饭键”。(各菜单的时间设置请参料理指南。)
- ▶ 如按确认键, 语音提示“请按煮饭键或预约键”。




1. 低压蒸/高压蒸时间以5分钟为单位增加。(90分钟后以10分钟为单位增加)
▶持续按键则连续变化。



2. 按键时低压蒸/高压蒸时间以5分钟为单位减少。(90分钟后以10分钟为单位减少)
▶持续按键则连续变化。

3. 低压蒸/高压蒸时间设置范围为10~120分钟。
▶按滑动触摸键设置所需时间, 方便快捷。

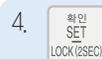

4. 选择所需时间后, 如按确认键, 语音提示“请按煮饭键或预约键”。



3 请按煮饭/快速键。

- ▶ 煮饭/快速键闪烁, 设置, 确认, 保温/再加热, 预约/自动洗涤, 压力检测, 取消键亮起。如按煮饭/快速键, 开始低压蒸或高压蒸煮饭, 并显示煮饭标识及剩余时间。语音提示“低压蒸, 00分钟(设置时间), CUCKOO开始在1.4个气压下制作料理。”或“高压蒸, 00分钟(设置时间), CUCKOO开始在2个气压下制作料理。”

4 日常蒸或高压蒸预约方法

1. 确认现在时间是否准确


2. 将锅盖结合手柄转至“” (关闭)位置, 按预约/自动洗涤键。




3. 按滑动触摸键, 调整煮饭完成后时间后按确认键。



4. 按滑动触摸键选择低压蒸或高压蒸后按确认键。

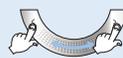

5. 按滑动触摸键选择低压蒸或高压蒸料理时间后按确认键, 再按煮饭/快速键。

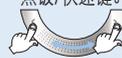



压力检测使用方法

压力检测使用方法

可检查电饭煲内部压力是否泄漏或蒸汽排出装置是否出现异常的功能。

1 在待机状态下按压力检测键。

- ▶ 语音提示“压力检测功能，请加水至白米水位2刻度，按煮饭键或压力检测键。”
- ▶ 煮饭/快速，压力检测键闪烁，取消键亮起。

< 待机状态 >



2 将内锅中加水至水位2刻度，关闭锅盖将锅盖结合手柄转至“”（关闭）位置。



3 如按压力检测键或煮饭/快速键，开始压力检测。

- ▶ 语音提示“cuckoo开始进行压力检测。”
- ▶ 未将锅盖结合手柄转至“”（关闭）位置，就按压力检测键或煮饭/快速键，无法开始压力检测。



4 压力检测结果合格时，依次显示“Good”标识。

- ▶ 语音提示“压力正常，按周期进行压力检测可享用新鲜如初的米饭”。

(显示部“”标识转动，实际压力显示。)



5 压力检测结果不合格时“EP1 ~ EP6”标识开始闪烁。

- ▶ **EP1** 语音提示“检查密封圈并再次进行压力检测后，如有异常请咨询售后服务中心。”因密封圈陈旧或粘有异物导致的压力泄漏时显示，请检查密封圈并重新进行压力检测。
密封圈无异常时，请咨询售后服务中心。
- ▶ **EP2** 语音提示“请确认内锅中是否有水，将内锅中加水至白米水位2刻度后重新进行压力检测。”内锅中未加入水就进行压力检测时显示，请将内锅中加水至白米水位2刻度后在进行压力检测。
- ▶ **EP3** 语音提示“无法正常进行压力检测，请按顺序重新进行压力检测。”在锅盖开启状态下进行压力检测时显示，请关闭锅盖，并将锅盖结合手柄转至“”（关闭）位置后重新进行压力检测。
- ▶ **EP4** **EP5** 语音提示“蒸汽排出异常，请咨询售后服务中心。”压力锥异常时显示，请咨询售后服务中心。
- ▶ **EP6** 语音提示“无法正常进行压力检测，请按顺序重新进行压力检测。”在锅体较热的状态下进行压力检测时显示，待锅体散热后再进行压力检测。

6 合格或不合格标识解除方法

- ▶ 合格或不合格标识显示1分钟后自动取消。
- ▶ 按取消键时立刻取消。
- ▶ 将电源从 OFF 变更至 ON 时可取消。

压力检测使用时注意事项

- 1 水位调至白米2刻度使用。
- 2 请使用温度为10~30℃的水。
- 3 锅体散热后再进行压力检测。
- 锅体温度较高时(煮饭完成后，保温后)无法正常进行压力检测。
- 4 压力显示值与实际压力会略有差异。



预约煮饭/预约再加热使用方法

预约煮饭使用方法

例如：现在前时间是下午9时、预约次日上午7时40分时。

- 1 确认当前时间是否正确。
▶ 调整现在时间请参照63页。
- 2 锅盖结合手柄转至“”（关闭）位置、
显示屏示“关闭”标志后按预约/自动洗涤键。
▶ 按预约/自动洗涤键时显示(如图)预约初始设定时间并预约闪烁。
- 3 按滑动触摸键调整预约时间。
▶  每按键1次增加10分钟。
▶  每按键1次减少10分钟。
- 4 按滑动触摸键选择所需菜单。
- 5 请按煮饭/快速键。
▶ 根据预约设定时间煮饭完成。
(煮饭完成时间根据煮饭容量及煮饭条件会有所差异)
▶ 完成一次预约煮饭后、预约时间会被自动记忆。
如需要更改预约时间时、按预约/自动洗涤键重新设定。



- ※ 请正确区上、下午。
- ※ 现在时间不正确时、预约煮饭完成时间也不正确。
- ※ 锅盖结合手柄未转至“”（关闭）位置时、不能预约。
- ※ 糙米发芽菜单没有预约功能、糙米菜单可以预约。
- ※ 保温状态下设定预约煮饭时、按取消键取消保温功能后预约。
- ※ 预约煮饭时间是以各菜单时最大容量为最大基准而设定、如煮少量米饭时、煮饭完成时间会提前。

预约再加热使用方法

- ▶ 剩饭不用使保温功能想吃热饭时使用。
- ▶ 预约再加热所需时间为3小时、提请前3小时设定预约再加热。
例如：现在前时间是下午9时、预约次日上午7时40分时。

- 1 确认现在时间是否正确。
▶ 调整现在时间请参照63页。
- 2 锅盖结合手柄转至“”（关闭）、
显示屏示“关闭”标志后按预约/自动洗涤键。
▶ 锅盖结合手柄未转至“”（关闭）位置时、按预约/自动洗涤键时不能预约。
- 3 如按保温/再加热键，进入预约再加热设置模式。
- 4 按滑动触摸键设置预约再加热完成时间。
▶  每按键1次增加10分钟。
▶  每按键1次减少10分钟。
- 5 请按确认键。
- 6 按保温/再加热键。
▶ 根据预约设定时间完成预约再加热。
▶ 完成一次预约再加热后，预约时间会被自动记忆。无需更改预约时间时，直接按保温/再加热键。



- ※ 请正确区上、下午。
- ※ 现在时间不正确时、预约煮饭完成时间也不正确。



预约煮饭/预约再加热使用方法

预约煮饭时注意事项

1 预约煮饭时

- ▶ 开封时间长的米比较干燥，煮饭时可能会出现夹生现象。
- ▶ 预约煮饭的时间设定及使用环境的不同米饭可能会出现夹生或过稀的现象，以水刻度为基准加减水量进行调整。
- ▶ 预约煮饭容量过多或设定预约煮饭时间过长时可能会增加米饭淡黄现象。
- ▶ 洗涤米预约煮饭时，米中淀粉沉淀锅底过多会有微糊现象。使用洗涤米预约煮饭时，将洗涤米洗净或煮少量时会减小淡黄现象。

2 预约再加热时

- ▶ 用常温下长时间保管的米饭预约再加热时米饭可能会发干或出现淡黄现象。
- ▶ 设定预约再加热时米饭容量要控制在5人份以内。
- ▶ 用保鲜或冷冻的米饭预约再加热后米饭可能会不热，发干及出现淡黄现象。
- ▶ 预约再加热前请将保鲜的米饭放入内锅后用饭勺搅散。
- ▶ 冷冻的米饭必须解冻后使用预约再加热功能。

3 变更预约时间

- ▶ 变更预约时间时，按0.3秒以上取消键取消功能后，重新设定。

4 超出预约设定时间围范时

- ▶ 设定时间比预约时间范围短时直接开始煮饭。（请参照各菜单的预约时间表）

5 设定时间超出13小时时

- ▶ 预约时间超出13小时时，显示屏显示“13Ho”，并将预约设定时间自动变更为13小时。
例如)下午5时预约次日上午7时完成预约煮饭时(预约设定时间为14小时)，显示屏显示“13Ho”并将预约设定时间自动变更为上午6时。(预约设定时间为13小时)

- ※ 预约时间超出13小时时，会导致变色或出现异味，由于夏天天气炎热请将预约时间设定控制在13小时以内。
- ※ 预约煮饭完成时间设定为白天12时时，将预约煮饭完成时间设定为下午12时。
- ※ 预约煮饭功能从现在时间为准1小时至13小时后完成时使用。
- ※ 预约煮饭中要查看现在时间时，按确认键会显示现在时间。

各菜单煮饭时间

菜单 区分	白米	白米 高火力	杂谷	杂谷 高火力	白米低压	锅巴	糙米	糙米 高火力	参鸡汤	营养粥	低压蒸 高压蒸	自动洗涤 (自动杀菌洗涤)
煮饭量	(42分+调节 饭味时间)~ 13个小时	(43分+调节 饭味时间)~ 13个小时	(61分+调节 饭味时间)~ 13个小时	(62分+调节 饭味时间)~ 13个小时	50分~ 13个小时	(47分+调节 饭味时间)~ 13个小时	(64分+调节 饭味时间)~ 13个小时	(65分+调节 饭味时间)~ 13个小时	76分~ 13个小时	118分~ 13个小时	(设置时间+1 分)~ 13个小时	25分~ 13个小时



保温/再加热方法


- ▶ 保温中若想食用热乎乎的米饭时,按保温/再加热键,语音提示“开始保温/再加热”,9分钟后可食用热乎乎的米饭。
- ▶ 接通电源后在待机状态下使用再加热时,将锅盖结合手柄转至“”(关闭)位置后,按保温/再加热键即可转换为保温状态,再按1次再加热键开始保温/再加热。



- ▶ 频繁使用再加热功能,可能会导致米饭变色或发干,1日使用1~2次。
- ▶ 保温使用其他电热器具或煤气煮的米饭时,请将米饭倒入内锅,按1次保温/再加热键。此时,显示部显示“”(将热饭倒入冷的饭锅保温时,可能会导致米饭变色或变味。)
- ▶ 保温时间超过24小时后,开始闪烁已保温时间,提示您保温时间过长。
- ▶ 保温中将锅盖结合手柄转至“”(开启)位置时,不能进行再加热。请将锅盖结合手柄转至“”(关闭)位置后再按保温/再加热键。
- ▶ 再加热过程中将锅盖结合手柄转至“”(开启)位置,显示部显示“E01”标识,此时,取消保温再加热取消,开始进行保温。

保温温度调整方法

即使经常清理或煮水消毒,保温中的米饭仍产生异味或变色是由于保温温度不正确所致,请调整保温温度。
调整保温温度时请咨询售后服务中心。

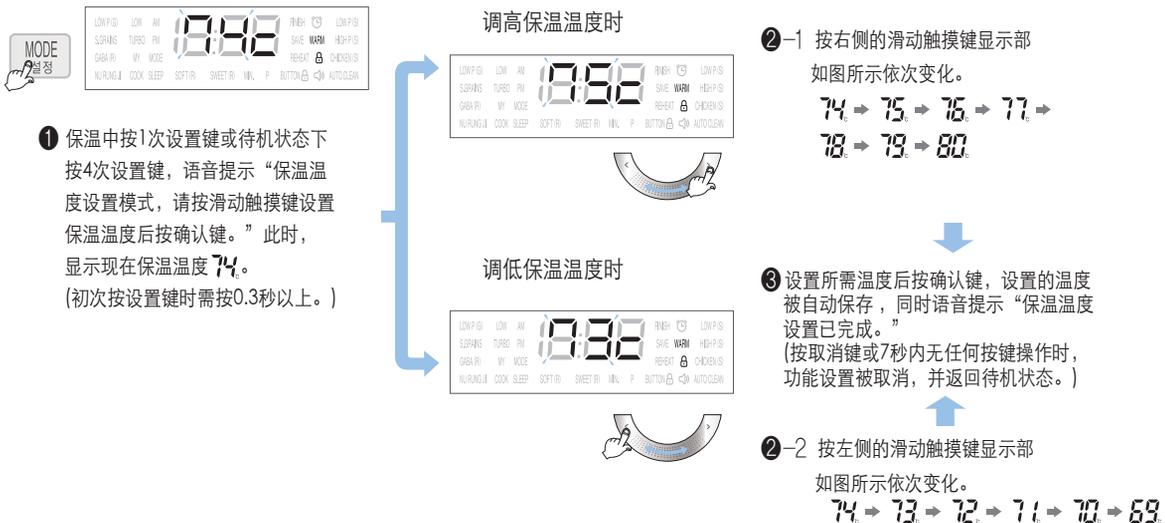

※ 产品出厂时设置的基本温度可能与说明书不符。

温度调整值


1. 有严重馊味,并有较多水珠凝结(米饭发酵)时:保温温度过低,请将保温温度调高1~2度。
2. 米饭严重发黄、糊化、干硬并有异味时:保温温度过高,请将保温温度调低1~2度。



米饭保温方法

调节保温功能设置方法


保温过程中有较多的水流出，米饭边缘处发白时使用。

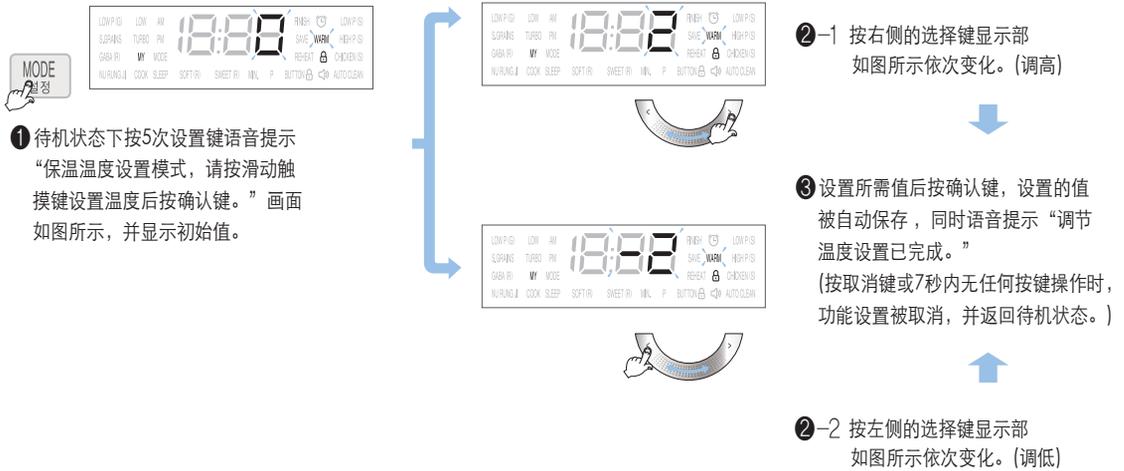

睡眠保温模式设定方法


长时间保温时，会降低保温米饭的质量(变色，发干，异味等)，因此在睡眠(PM:10:00~AM:04:00)期间设置低温保温来提高保温效果。

▶ 设定方法

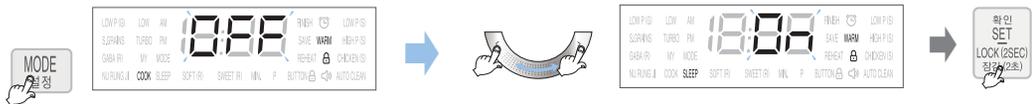

- 1** 功能设定模式“7”显示状态下按设置键，进入睡眠保温设定模式。
- 2** 进入睡眠保温设定模式后，按取消键或无任何操作7秒时，取消功能并返回待机模式。

▶ 在设定状态下解除方法

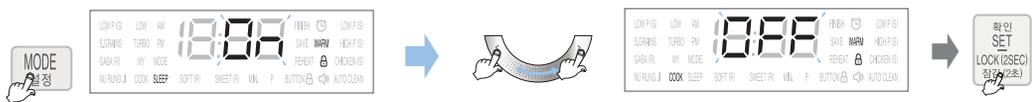

- 1** 功能设定模式“7”显示状态下按设置键，进入睡眠保温设定模式。
- 2** 进入睡眠保温设定模式后，按取消键或无任何操作7秒时，取消功能并返回待机模式。

▶ 设定此功能时，在睡眠期间会维持低温保温。如睡眠时想正常保温时，无需设定此功能。夏天米饭容易变色或出现异味，尽量不要使用“睡眠保温”功能。



如何做美味可口的米饭

如何做美味可口的米饭

使用须知

<p>请使用量杯正确量取米。</p> <p>请将内锅水平放置后调整水位。</p>	<p>若水量调整不正确,可能会出现过硬,夹生,过稀等现象。</p>
<p>建议选购小袋装的米,以免长时间放置质量变差。</p> <p>将米存放于阴凉干燥处。</p> <p>若煮开封时间较长的米时,多加半刻度水。</p>	<p>煮干硬的米时,即使使用量杯正确量取米也会出现过硬现象。</p>
<p>煮干硬的米时,应避免预约煮饭,请多加半刻度水后进行煮饭。</p> <p>预约时间超过10小时或预约干硬的米时,会有夹生及夹层现象。</p>	<p>预约时间越长锅底米饭焦黄现象更明显。</p>
<p>保温时间要控制在12小时以内。</p>	<p>长时间保温时米饭会出现异味或变色现象。</p>
<p>请经常清理本产品。</p> <p>特别是内锅盖粘有异物时应及时清理。</p>	<p>产品未经常清理时,细菌容易滋生保温时会产生异味。</p>

保温时注意事项

<p>煮饭完成后或保温中锅盖不易打开时,请推动压力锥等蒸汽完全排出后再打开。</p> <p>保温或保温再加热时必须将结合手柄转至“”(关闭)位置。</p> <p>(锅盖开启按钮可能会破损或影响保温效果)</p>	<p>长时间保温时,可能会产生变色或异味.请将保温时间控制在12小时以内。</p> <p>在特性上压力做出的米饭会比一般电饭锅做出的米饭变色要快。</p> <p>(保温24小时时显示屏保温时间会闪烁)</p>
<p>煮饭完成后,将米饭搅匀进行保温效果会更好。</p> <p>(保温少量的米饭时,请将米饭堆积在内锅中央)</p>	<p>保温杂谷,糙米时米饭质量不如白米,因此尽量不要保温。</p> <p>保温中内锅边缘或蒸汽排出口下端的米饭可能会产生白化现象,此时请将米饭搅匀。</p>
<p>保温中内锅无米饭或不使用时,请按取消键取消保温功能或切断电源。</p>	<p>请勿保温过少的米饭或请勿将剩饭与凉饭一起保温。</p> <p>保温中米饭可能会产生异味。</p>
<p>请勿将饭勺放入锅内一起保温。</p> <p>特别是放入木勺时,细菌容易滋生会产生异味。</p>	

保温时有异味时

- ▶ 请及时清理产品,特别是内锅盖清理不干净时细菌容易滋生保温时会产生异味。
- ▶ 虽然外观上干净,但仍会有细菌导致异味,有异味时,使用自动杀菌洗涤(自动洗涤)菜单进行洗涤,自动杀菌洗涤(自动洗涤)完成后,内胆必须清洗干净。
- ▶ 做汤、炖等料理后,未清理产品导致保温时会产生异味。



省电功能/Energy Eye功能使用方法

什么是待机模式省电功能

如果不切断电源，即使在待机状态下也有少量的电力消耗，被称为待机电力。为减少待机电力消耗，从外部电源开始切断产品内部的电路，使电力消耗达到最小化。

手动省电功能使用方法

▶ 开始省电方法

待机状态下按取消键3秒，语音提示“省电模式开始”同时省电功能被设置。



▶ 结束省电方法

方法1) 按任意按键语音提示“省电模式结束，请选择所需功能”同时解除省电模式，返回待机状态



方法2) 开启或关闭锅盖结合手柄时，语音提示“省电模式结束，请选择所需功能”同时解除省电模式，返回待机状态。

自动省电功能使用方法

在「自动省电功能设置模式」下，如选择除“OFF”以外的其他待机时间，在待机状态下已选择的时间结束后，自动开始运行省电功能。

如果在待机时间结束前转动了锅盖结合手柄或按动按键，时间重新从设置的值开始减少。

▶ 设置方法



① 功能设定模式“9”显示状态下按设置键，进入自动省电功能模式。


② 进入自动省电功能设定模式后，按取消键或无任何操作7秒时，取消功能并返回待机状态。

Energy Eye功能

保温、预约中温度感应器自动感应周边的亮度，使产品的电力消耗达到最小化。

进入比当前省电模式下的亮度(2阶段)更暗的环境时请设置为1阶段，进入更亮的环境时设置为3阶段。

(产品出厂设置值为2)

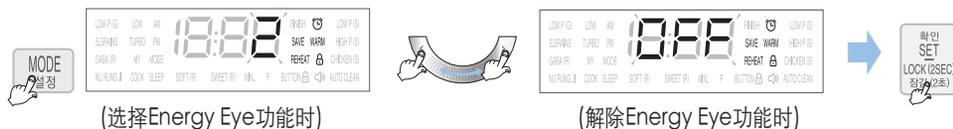

1. 待机状态下按13次设置键进入Energy Eye功能设置模式。(初次按键时需按0.3秒以上才可进入。)
2. 进入Energy Eye功能时，语音提示“Energy Eye功能设置模式，请按滑动触摸键设置或解除Energy Eye功能后，按确认键。”此时，设置、确认、取消键亮起。
3. 每按1次选择键Energy Eye功能以3阶段→OFF→1阶段→2阶段→3阶段的顺序选择，显示OFF标识时，Energy Eye提示“Energy Eye功能已解除。”此时，确认键闪烁，设置、取消键亮起。
4. 选择所需阶段后，按确认键语音提示“Energy Eye功能设置已完成。”同时设置被保存。
5. 进入Energy Eye功能设置表模式后按取消键或7秒内无任何按键操作时，语音提示“已超时，功能设置被取消。”同时取消该功能并返回待机状态。



画面亮度省电功能/按键锁定功能 /煮饭剩余时间显示功能使用方法

画面亮度省电功能

待机、煮饭、保温、预约煮饭中自动调节画面亮度的功能。
(在画面亮度省电功能On状态下，照明按键灯熄灭时画面变暗。)

- ▶ 功能设置及解除方法
(※ 产品初始设置为On)



1. 待机状态下按10次设置键进入画面亮度省电模式。
(初次按设置键时需按0.3秒以上。)
2. 进入画面亮度省电功能设置模式时，语音提示“画面照明亮度省电功能设置模式，请按滑动触摸键选择或解除画面亮度省电功能后按确认键。”
3. 每按1次选择键，选择或解除画面亮度省电功能，语音提示“画面亮度省电功能已选择，请按确认键。”或“画面亮度省电功能已解除，请按确认键。”
4. 如按确认键语音提示“画面亮度省电功能已设置完成。”同时设置被保存。
5. 进入画面亮度省电功能设置模式后按取消键或7秒内无任何按键操作时，语音提示“已超时，功能设置被取消。”同时取消该功能并返回待机状态。

按键锁定功能

为防止由于清理时或儿童接触时出现错误操作，可设置按键锁定功能。

- ▶ 设置方法



1. 煮饭、预约、保温、再加热中或待机状态下按2秒以上确认键，可设置按键锁定。
2. 设置按键锁定时，语音提示“按键锁定已选择。”此时，按键锁定标识闪烁。

- ▶ 解除方法



1. 煮饭、预约、保温、再加热中或待机状态下按2秒以上确认键，可解除按键锁定。
2. 解除按键锁定时，语音提示“按键锁定已解除。”此时，按键锁定标识消失。

- ※ 在设置了按键锁定的状态下按除确认键之外的其他按键时，语音提示“按键锁定设置中。”
- ※ 按2秒以上确认键解除按键锁定后，可设置所需功能。
- ※ 在按键锁定设置状态下，电源OFF后再重新接通时，按键锁定功能被解除。

煮饭剩余时间显示功能

进行煮饭时，可选择或解除煮饭剩余时间标识周期性显示功能。
(煮饭时根据煮饭量及状态不同，显示的剩余时间与实际煮饭时间可能略有差异。)

1. 待机状态下按11次设置键进入煮饭剩余时间显示模式。
(初次按设置键时，需按0.3秒以上才可进入。)
2. 进入显示煮饭剩余时间设置模式后，按取消键或7秒内无任何按键操作，语音提示“已超时，功能设置被取消。”同时取消该功能，并返回待机状态。



※ 选择显示煮饭剩余时间时
(显示初始设置状态)



※ 解除显示煮饭剩余时间时

常见故障及处理办法

▼ 产品出现异常时请按以下方法确认并咨询售后服务中心。

现象	确认事项	处理方法
锅盖结合手柄无法转至“  ”(开启)位置时	<ul style="list-style-type: none"> · 煮饭或料理中是否转动锅盖结合手柄？ · 是否在蒸汽未全部排出状态下转动锅盖结合手柄？ 	<ul style="list-style-type: none"> · 煮饭或料理中无法打开锅盖，请勿强行打开锅盖。需打开锅盖时请按取消键0.3秒(产品温度较高时请按1.5秒)，取消操作后推动压力锥排出蒸汽后再打开。 · 请推动压力锥全部排出蒸汽后打开锅盖。
将锅盖结合手柄转至“  ”(开启)位置后仍不能打开锅盖时		<ul style="list-style-type: none"> · 因内部有压力。 · 请推动压力锥全部排出蒸汽后打开锅盖。
预约煮饭中提示音响起“  ”(开启)标识闪烁时	<ul style="list-style-type: none"> · 锅盖结合手柄是否完全转至“”(关闭)位置？ 	<ul style="list-style-type: none"> · 请将锅盖结合手柄转至“”(关闭)位置。
锅盖周围漏气或发出“咩~”音时	<ul style="list-style-type: none"> · 密封圈上是否粘有异物(米粒)？ · 密封圈是否老旧？ 	<ul style="list-style-type: none"> · 请用干净的抹布将锅盖擦净后再使用。保持密封圈清洁。 · 蒸汽泄漏时，请按取消键0.3秒(产品温度较高时需按1.5秒)排出蒸汽后，切断电源停止使用，并咨询售后服务中心。 · 根据密封圈的使用方法和使用次数，密封圈的使用寿命约为1~3年，请及时更换。如继续使用老旧的密封圈，会因蒸汽泄漏而无法完成压力煮饭。
煮饭或制作料理中无法按取消键时	<ul style="list-style-type: none"> · 内锅内部是否很烫？ · 是否设置了按键锁定功能？ 	<ul style="list-style-type: none"> · 煮饭或料理中要打开锅盖时因内锅内部温度较高，安全起见请按取消键0.3秒(产品温度较高时需按1.5秒)取消煮饭或料理。 · 取消煮饭或料理时，蒸汽自动排出装置排出蒸汽时汤可能会飞溅，请注意安全。 · 按取消键2秒以上，解除按键锁定。
煮饭或料理中发出异常声音时	<ul style="list-style-type: none"> · 是否为煮饭时的风吹声(翁~)？ · 是否为煮饭及保温中发出的“吱~”声？ 	<ul style="list-style-type: none"> · 为使内部零件降温，散热扇转动的声音，属正常现象。 · 煮饭及保温中发出的“吱~”声是IH压力电饭锅工作是发出的声音，属正常现象。
糙米不能正常发芽时	<ul style="list-style-type: none"> · 糙米用量是否过多，导致无法正常发芽？ · 糙米是否陈旧？ 	<ul style="list-style-type: none"> · 请使用额定用量的糙米。 · 使用陈糙米或被污染的糙米会降低发芽率。
按键时显示“  ”标识	<ul style="list-style-type: none"> · 是否放入内锅？ · 是否使用了220V专用电源？ 	<ul style="list-style-type: none"> · 无内锅状态下不能操作，请先放入内锅后使用。 · 本产品只限使用120V电源。
煮饭、预约/自动洗涤等按键无法操作并显示“  ”标识时	<ul style="list-style-type: none"> · 是否将锅盖结合手柄转至“”(关闭)位置？ · 是否显示关闭标识？ 	<ul style="list-style-type: none"> · 请将锅盖结合手柄转至“”(关闭)位置，如未将锅盖结合手柄转至关闭位置，则无法操作煮饭、预约/自动洗涤键。

常见故障及处理办法

▼ 产品出现异常时请按以下方法确认并咨询售后服务中心。

现象	确认事项	处理方法
米饭严重烧焦时	<ul style="list-style-type: none"> · 温度感应器、加热盘、内锅外侧底部是否粘有烧焦的米粒或异物？ · 是否设置了“CUCKOO调节饭味”或“调节煮饭”功能？ 	<ul style="list-style-type: none"> · 请清除温度感应器、内锅外侧底部的米粒或异物。（参照60页） · 根据使用情况设定或解除调节饭味或调节煮饭功能。（参照66页）
煮饭长时间不能完成并显示“E03”时	<ul style="list-style-type: none"> · 是否使用220V电源？ 	<ul style="list-style-type: none"> · 产品异常时(加热器断线、热量不足等)长时间煮饭米饭不熟时显示，请切断电源咨询售后服务中心 · 只加入水长时间加热时显示“E03”此为正常现象。 · 本产品只适用于120V电源，请正确使用电源。
预约煮饭时间不准确时	<ul style="list-style-type: none"> · 显示时间是否不准确？ · 上午、下午选择是否正确？ · 预约时间是否设置为13小时以上？ 	<ul style="list-style-type: none"> · 现在时间不准确时预约煮饭时间也不准确，请调整现在时间。(参照63页) · 请确认上午、下午。 · 最大预约时间为13个小时。(请参照71~72页)
煮饭完成后或保温中米饭出现异味时	<ul style="list-style-type: none"> · 炖鸡汤或做排骨料理后是否清洗干净？ 	<ul style="list-style-type: none"> · 请参照13页，将锅盖周围与密封圈清洗干净后使用。
无法关闭锅盖时	<ul style="list-style-type: none"> · 锅盖结合手柄()是否转至“” (开启)位置？ · 内锅里是否有热饭或其它热食品？ · 内锅是否完全放置于机体内？ 	<ul style="list-style-type: none"> · 请将结合手柄置于“”(开启)状态。 · 请推动压力锥后盖锅盖。 · 请将内锅完全放置于机体内。
“E_U:00” 循环显示时	<ul style="list-style-type: none"> · 微电源异常时显示。 	<ul style="list-style-type: none"> · 切断电源后咨询售后服务中心。
“E_P:00” 循环显示时	<ul style="list-style-type: none"> · 环境感应器异常时显示。 	<ul style="list-style-type: none"> · 切断电源后咨询售后服务中心。
“E_W” 循环显示时	<ul style="list-style-type: none"> · 内存储器异常时显示。 	<ul style="list-style-type: none"> · 切断电源后咨询售后服务中心。
按煮饭、保温/再加热键时，保温中显示“HP_”，煮饭中显示“HP_”时		<ul style="list-style-type: none"> · 电源或产品的异常检测功能，若持续出现此标识时请咨询售后服务中心。
无法完成煮饭时	<ul style="list-style-type: none"> · 是否按了煮饭键？ · 煮饭中是否停电？ 	<ul style="list-style-type: none"> · 选择所需菜单后请按1次煮饭键，确认显示部是否显示“E_C”标识。 · 请参照17页停电记忆功能。
米饭夹生或松软时	<ul style="list-style-type: none"> · 是否使用了量杯？ · 是否正确调整水位？ · 是否将米洗净？ · 是否煮了长时间浸泡后的米？ · 米是否开封时间较长而发干？ 	<ul style="list-style-type: none"> · 请参照64~65页正确使用。 · 请加入比规定量多的水。

常见故障及处理办法

▼ 产品出现异常时请先按以下事项进行确认并咨询售后服务中心。

现象	确认事项	处理方法
豆(杂谷/糙米)类夹生时	· 豆类(杂谷/糙米)是否干硬?	· 因豆子(杂谷/糙米)的种类不同,熟的程度也不同,请将其用水充分浸泡或煮熟后再做杂谷饭。
米饭过稀或过稠时	· 是否正确选择菜单? · 是否正确调整水量? · 焖饭时是否打开了锅盖?	· 请正确选择所需菜单。 · 请正确调整水量。(参照64~65页) · 煮饭完成提示响起后,请将压力完全排出再打开锅盖。
煮饭中米汤溢出时	· 是否正确使用量杯? · 是否正确调整水量? · 是否正确选择菜单?	· 请参照64~65页,正确使用。
保温中产生异味时	· 是否盖好锅盖? · 保温中是否切断电源? · 保温时间是否超过12小时或保温米饭太少? · 是否放入饭勺或凉饭一起保温?	· 请盖好锅盖。 · 保温中请勿切断电源。 · 保温时间要控制在12小时以内。 · 请勿放入饭勺或凉饭一起保温。
“E ₁ ”、“E ₂ ”、“E ₃ ”显示时	· 温度感应器出现异常时显示。	· 切断电源后与售后服务中心联系。
“E ₄ ”闪烁时	· 冷却风扇异常时显示。	· 切断电源后与售后服务中心联系。
保温中已保温时间闪烁时	· 保温是否超过24个小时?	· 保温时间超过24个小时时,时间开始闪烁提醒您保温时间过长。
保温中米饭太凉或有较多水流出时	· 是否设置了睡眠保温?	· 根据需要解除或设置睡眠保温后再保温。
“E ₅ ”显示时	· 煮饭完成后在连接电源的状态下,未将锅盖结合手柄转至“  ”(开启)位置,在取消保温状态下(待机状态)未按煮饭键?	· 将锅盖就结合手柄转至“  ”(开启)位置后,再转至“  ”(关闭)位置。
“E ₆ ”显示时	· 是否未安装分离型内锅盖?	· 请安装分离型内锅盖。(参照60页) · 在安装了分离型内锅盖的状态下,仍持续显示“E ₆ ”标识时,请咨询售后服务中心。
保温中警示音响起,无法进行再加热时	· 是否未安装分离型内锅盖?	· 请安装分离型内锅盖。(参照60页)
连接电源后不通电时	· 是否开启电源开关  (ON)?	· 请开启电源开关。(参照59页)
“E ₇ ”、“E ₈ ”、“E ₉ ”、“E ₁₀ ”、“E ₁₁ ”、“E ₁₂ ”显示时	· 压力检测后出现异常时显示。	· 请参照第70页压力检测方法正确使用。
“E ₁₃ ”显示时	· 电压过高时显示。	· 请切断电源后咨询售后服务中心。
“E ₁₄ ”、“E ₁₅ ”显示时	· 压力感应器异常时显示。	· 请切断电源后咨询售后服务中心。



※ 详细的食材清洗方法请参照www.cuckoo.co.kr

※ 煮饭后清洗内锅时请参照60页注意事项。

名称	米饭	料理方法
美味 米饭	米饭 白米6杯	1. 把洗净的白米放入内锅后，水位调至白米刻度。 (米饭: 6, 豌豆饭: 3) 2. 关闭锅盖转动旋钮，选择[白米高压]菜单后按 煮饭/快速键 。
	豌豆饭 白米3杯，豌豆1杯半， 清酒1T，盐1.5t ※使用煮好的豌豆煮饭。	1. 洗净的米与大豆放入内锅，加水至杂谷水位3刻度。 2. 关闭锅盖转动旋钮，选择[杂谷]菜单后按 煮饭/快速键 。
	大麦饭 白米2杯，大麦1杯	1. 洗净的米与杂谷放入内锅，加水至杂谷水位3刻度。 2. 将煮好的红豆撒在上面，关闭锅盖转动旋钮 选择[杂谷]菜单后，按 煮饭/快速键 。
杂谷饭	五谷饭 白米1.5杯，小米1/3杯，糯米1/2杯， 红豆1/3杯，高粱1/3杯，盐1t	1. 洗净的米与杂谷放入内锅，加水至杂谷水位3刻度。 2. 将煮好的红豆撒在上面，关闭锅盖转动旋钮 选择[杂谷]菜单后，按 煮饭/快速键 。
	Fresh 糙米发芽饭 糙米4杯	1. 洗净的糙米倒入内锅，加水至糙米/发芽水位4刻度。 2. 关闭锅盖转动旋钮，选择[糙米发芽]菜单后，按 煮饭/快速键 。 (时间设定: 3H)
	糙米红 豆饭 糙米1杯，白米2杯，红豆1/3杯	1. 糙米洗净后放入内锅，加水至糙米/发芽水位3刻度。 2. 将煮好的红豆撒在上面，关闭锅盖转动旋钮，选择[糙米]菜单后按 煮饭/快速键 。
健康饭	鸡胸肉 绿茶饭 糙米2杯，绿茶叶3g，绿茶粉10g，鸡胸肉4块， 橄榄油少许，盐少许，胡椒少许，芹菜5g， 柠檬少许，迷迭香少许	1. 洗净的糙米与准备材料放入内锅，加水至糙米/发芽水位2刻度。 2. 关闭锅盖转动旋钮，选择[糙米发芽]菜单后，按 煮饭/快速键 。 (时间设定: 3H)
	糙米蘑 菇料理 糙米2杯，肉汁20g，盐少许，苏子叶2张， 南瓜1/3个，香菇1捆	
	嫩芽 拌饭 糙米2杯，蔬菜嫩芽少许 ※辣椒酱：辣椒酱1/2杯，牛肉末 40g， 香油1T，蜂蜜1T，白糖 1T	
超级 谷物	卡姆小 麦饭 白米2杯+1/3杯，卡姆小麦2/3杯 (白米与卡姆小麦的比例以8:2为佳)	1. 将卡姆小麦与白米分开洗净。将卡姆小麦倒入内锅，再将白米倒入卡姆小麦上，水位调至杂谷3刻度。 2. 盖好锅盖，按 选择键 选择「超级谷物」菜单，将浸泡时间设定为3小时后，按 煮饭/快速键 。 ※若想食用更加柔软的卡姆小麦时，浸泡后再煮饭。
	燕麦饭 白米2杯，燕麦1杯 (白米与燕麦的比例以7:3为佳)	
	鹰嘴 豆饭 白米2杯+1/3杯，鹰嘴豆2/3杯 (白米与鹰嘴豆的比例以8:2为佳)	
	绿扁 豆饭 白米2杯，绿扁豆1杯 (白米与绿扁豆的比例以7:3为佳)	
	藜麦饭 白米2杯，藜麦1杯 (白米与藜麦的比例以7:3为佳)	1. 将白米、超级谷物洗净倒入内锅后，水位调至杂谷3刻度。 2. 盖好锅盖，按 选择键 选择「超级谷物」菜单，将浸泡时间设定为0小时后，按 煮饭/快速键 。 ※若想食用更加柔软的超级谷物时，浸泡后再煮饭。



料理指南

名称	米饭	料理方法
粥	白米粥 白米1杯	1. 将准备好的材料放入内锅, 根据用量加水至相应刻度。 (稠粥: 稠粥水位1刻度, 稀粥: 稀粥水位1.5刻度) 2. 关闭锅盖转动旋钮, 选择[粥]菜单后, 按 煮饭/快速 键。 1. 将准备好的材料放入内锅, 根据用量加水至相应刻度。 (松子粥, 特味鸡粥: 稠粥水位1.5刻度, 鲍鱼粥, 红豆粥: 稠粥水位1刻度) 2. 关闭锅盖转动旋钮, 选择[粥]菜单后, 按 煮饭/快速 键。
	松子粥 大米1杯, 松子1/2杯, 盐少许	
	鲍鱼粥 大米1杯, 鲍鱼1个, 香油1T, 盐少许	
	特味鸡粥 大米1杯, 鸡200g, 鸡汤600g, 盐少许, 青红辣椒各1个 *调料酱: 酱油2T, 葱末1T, 蒜末1T, 香油2t 芝麻盐少许, 胡椒粉少许	
	红豆粥 白米1杯, 红豆1/3杯, 糯米粉1杯	
参鸡汤 参鸡汤 鸡1只(1kg), 水参2根, 红枣10个, 糯米1杯, 盐少许, 胡椒若干, 蒜若干	1. 在鸡肚子上切开一个口。 2. 将浸泡2个小时的糯米与大蒜塞入洗净的鸡肚子内。 (糯米如未浸泡, 可能会夹生。) 3. 根据个人口味如想食用浓汤时, 请将一半糯米塞入鸡肚子内, 另一半放入汤内即可。 4. 将鸡腿交错塞入切开的口子内。 5. 将鸡腿放入内锅中, 并放入洗净的水参、大枣, 将水位调至白米高压水位6刻度。 6. 盖好锅盖, 按 选择 键选择「参鸡汤」菜单后, 按 煮饭/快速 键。	

日常蒸/高压蒸 料理时间表

料理种类	料理种类		料理种类	料理种类	
	日常蒸	高压蒸		日常蒸	高压蒸
红 豆 糕	45分	45分	蒸 茄 子	15分	15分
炖 排 骨	55分	40分	蒸 茭 瓜	15分	15分
炖 鸡	50分	45分	蒸 栗 子	40分	25分
熟 肉	45分	30分	地 瓜	45分	25分
五 香 酱 肉	55分	40分	土 豆	40分	40分
酱 鱿 鱼	30分	20分	蒸 玉 米	55分	40分
牛 排	35分	25分	奶 油 蛋 糕	40分	40分
蒸 螃 蟹	30分	30分	煮 鸡 蛋	25分	15分
蒸 鱼	45分	25分	鸡 蛋 糕	20分	20分
蒸 大 蛤	35分	35分	奶 酪 炒 年 糕	20分	20分
蒸 豆 腐	25分	15分	番 茄 酱 炒 虾 仁	15分	15分
药 膳	40分	30分	米 饭 披 萨	20分	20分
什 锦 菜	20分	20分	奶 油 巧 克 力 蛋 糕	45分	45分
蒸 饺 子	20分	15分	炒 年 糕	20分	15分

※ 料理说明请参照网址 www.cuckoo.co.kr

MEMO



CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. P&K USA TRADING CORP. covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

MODEL#	#LABOR	PARTS	WARRANTY PERIOD	HOW SERVICE IS HANDLED
CRP-JH10	1YEAR	1YEAR		The East and the Central Districts Call : 718 888 9144 Address : 129-04 14th Avenue College Point, NY 11356, USA The West and the Central Districts. Call : 323 780 8808 Address : 1137 E. 1st Street, L.A, CA 90033, USA Canada (TORONTO) Call : 905 707 8224 Address : #D8-7398 Yonge Street Thornhill Ontario Canada L4J 8J2 Canada (VANCOUVER) Call : 604 540 1004 Address : 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- * To damages problems which result from delivery or improper installation.
- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove warranty Coverage : ► **Retain your Sales Receipt to prove date of purchase**
► **Copy of your Sales Receipt must submitted at the time warranty service is provided.**

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

The East and the Central Districts
Call : 718 888 9144
Address :129-04 14th Avenue
College Point, NY 11356, USA

The West and the Central Districts.
Call : 323 780 8808
Address : 1137 E. 1st Street, L.A,
CA 90033, USA

Canada (Toronto)
Call : 905 707 8224
Address : #D8-7398 Yonge Street
Thornhill Ontario Canada
L4J 8J2

Canada (Vancouver)
Call : 604 540 1004
Address : 103-4501 North Road
Burnaby BC Canada
V3R 4R7