


USB Setting by YVC-1000 Configurator

It is required to change the USB Mode depending on the device connected to YVC-1000.
Recommended USB mode for tested devices is shown below.

Company	Model	USB Setting by YVC-1000 Configurator
RICOH Company, Ltd.	RICOH Unified Communication System P3500	FULL-SPEED
Google Inc.	Chromebox for meetings	HI-SPEED

- Please refer to the User's Manual for YVC-1000 Configurator usage.
- Default setting for USB mode on YVC-1000 Configurator is "HI-SPEED".

[YVC-1000 Configurator setup screen]

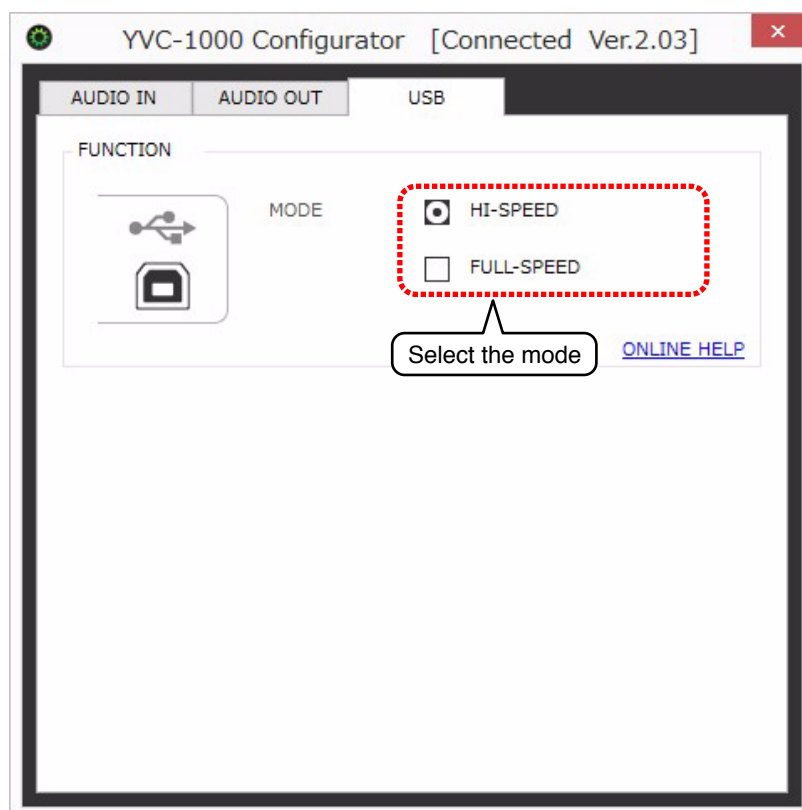


YVC-1000 Configurator による USB 設定について

YVC-1000とUSB接続する機器によっては、YVC-1000 ConfiguratorでUSBの設定を変更する必要があります。
弊社で確認済みの機器と接続する場合の推奨設定は以下のとおりです。

メーカー	機種名	YVC-1000 ConfiguratorのUSB設定
株式会社リコー	RICOH Unified Communication System P3500	FULL-SPEED
Google Inc.	Chromebox for meetings	HI-SPEED

- ・ YVC-1000 Configurator の使い方は取扱説明書を参照ください。
- ・ YVC-1000 Configurator 「USB」 の初期設定値は「HI-SPEED」です。

【 YVC-1000 Configurator 設定画面 】

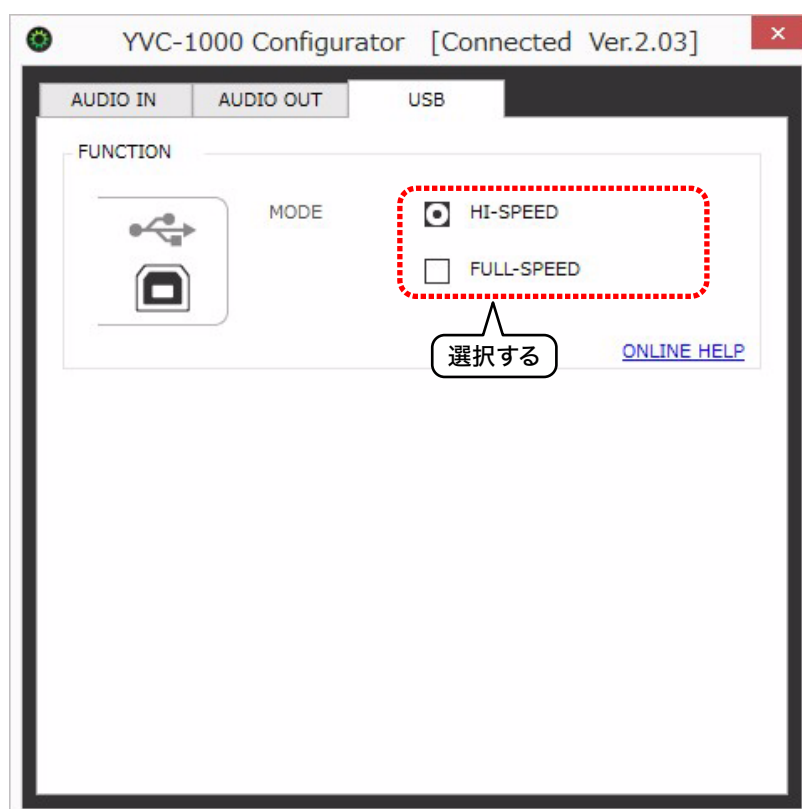


关于 YVC-1000 Configurator 上的 USB 设定

根据YVC-1000通过USB连接的设备不同，在YVC-1000 Configurator上需要调整USB的设定。
同我司认证设备连接时的推荐设定如下。

公司名	产品名	关于YVC-1000 Configurator上的USB设定
理光株式会社	RICOH Unified Communication System P3500	FULL-SPEED
谷歌	Chromebox for meetings	HI-SPEED

- 请参考 YVC-1000 Configurator 的使用说明书。
- YVC-1000 Configurator 「USB」 的初始设定值是「HI-SPEED」。

【 YVC-1000 Configurator 设定界面 】

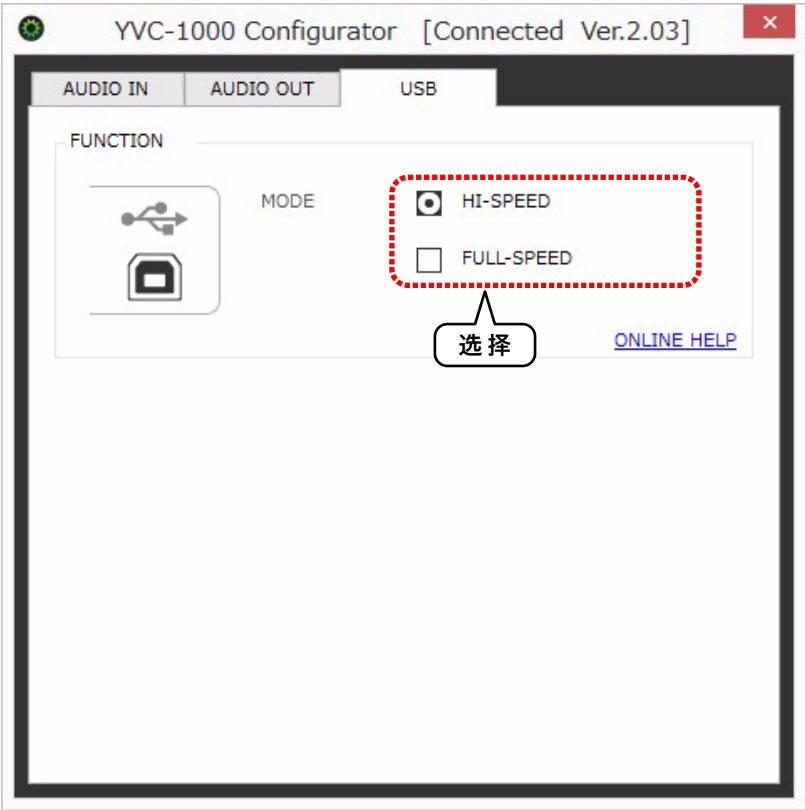

http://www.yamaha.com/products/zh/communication/communication/usb_conference_speakerphones/yvc-1000/