



LG

Life's Good

繁體中文
簡體中文
ENGLISH

使用手冊

用戶手冊


User Guide

LG-V500



使用手冊

- 畫面顯示及插圖可能與實際裝置上顯示的有所不同。
- 視乎軟體或服務供應商而定，本手冊中的部份內容可能不適用於您的平板電腦。此文件中所有資訊如有更改，恕不另行通知。
- 由於使用觸控螢幕鍵盤，此手機不適合視障人士使用。
- Copyright ©2013 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 及 Play Store™ 均為 Google, Inc. 的商標。

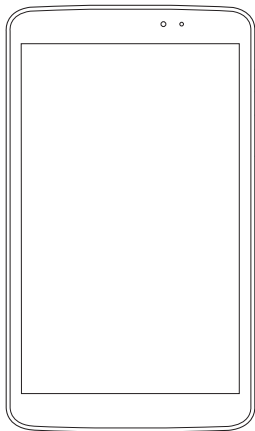

目錄

有關本使用者指南.....	5	多點觸控.....	26
有關本使用者指南.....	5	旋轉螢幕.....	27
Trademarks.....	5	桌面.....	27
DivX HD.....	6	自訂桌面.....	29
Dolby Digital Plus.....	6	返回最近使用的應用程式.....	29
安全及有效使用準則.....	7	通知.....	30
重要通知.....	14	向下掃動以取得通知及設定.....	30
了解您的平板電腦.....	18	通知面板上的快速設定.....	31
平板電腦概述.....	18	要重新排列通知面板上的快速設定項目.....	31
平板電腦充電.....	20	通知面板上的 QSlide 應用程式.....	31
延長電池壽命.....	21	使用 QSlide 應用程式.....	31
要延長您的電池壽命.....	21	狀態欄上的指示圖示.....	32
要檢視電池充電量.....	21	Plug & Pop.....	33
要監察及控制電池使用情況.....	21	擷取螢幕截圖.....	33
插入 microSD 卡.....	22	使用 QuickMemo 擷取螢幕截圖.....	33
移除 microSD 卡.....	22	使用 Capture Plus 擷取螢幕截圖.....	34
格式化 microSD 卡.....	23	螢幕鍵盤.....	34
將螢幕鎖定及解鎖.....	23	輸入重音字母.....	34
您的桌面.....	24	Google 帳號設定.....	35
觸控螢幕提示.....	24	連接到網絡及裝置.....	36
開啟螢幕.....	24	Wi-Fi.....	36
向旁邊滑動.....	25	連接至 Wi-Fi 網絡.....	36
點按或觸控.....	26	開啟 Wi-Fi 並連接至 Wi-Fi 網絡.....	36
點按並按住.....	26	藍牙.....	36
拖拉.....	26	開啟藍牙並與藍牙裝置配對您的平板電腦.....	37
掃動或滑動.....	26	經由藍牙無線功能發送資料.....	37
點按兩下.....	26	透過藍牙無線功能接收資料.....	38

SmartShare	38	錄製影片後	52
若要將平板電腦的內容傳送到 其他裝置	38	觀看已儲存的影片	52
要在平板電腦上享受來自附近裝 置（如電腦或流動裝置）的內容	39	即時放大	52
使用 USB 纜線進行 PC 連接	40	觀看影片時調整音量	53
使用 USB 大容量儲存模式傳 音樂、相片及影片	40	多媒體	54
與 Windows Media Player 同步	40	媒體匣	54
通訊錄	41	檢視圖片	54
搜尋聯絡人	41	放大及縮小	54
新增聯絡人	41	播放影片	55
常用的聯絡人	41	檢視相片和影片選項	55
建立群組	42	刪除圖片和影片	55
電子郵件	43	設定為牆紙	55
管理電郵帳號	43	影片	55
處理帳號資料夾	43	播放影片	55
編寫並發送電郵	44	音樂	56
相機	45	新增音樂檔案至平板電腦	56
了解取景器	45	使用媒體同步 (MTP) 傳輸音樂	57
使用進階設定	46	播放歌曲	57
快速拍照	47	工具	59
當拍攝相片後	48	QPair	59
檢視已儲存的相片	49	QSlide	60
視像攝錄機	50	QuickMemo	62
了解取景器	50	QuickRemote	64
使用進階設定	51	QuickTranslator	65
錄製短片	51	多個使用者	67
		鬧鐘	68
		計算機	68
		日曆	69
		檔案管理員	69

語音備忘錄	70	排程自動備份	87
工作管理員	71	還原平板電腦數據	87
POLARIS Office 5	71	平板電腦軟體更新	89
Google+	72	平板電腦軟體更新	89
Voice Search	72	透過空中下載 (OTA) 進行 LG	
下載	72	手機軟件更新	89
網絡功能	73	配件	90
互聯網	73	疑難排解	91
開啟頁面	74		
以語音搜尋網站	74		
書籤	74		
記錄	74		
使用 QSlide	74		
Chrome	74		
檢視網頁	75		
開啟頁面	75		
以語音搜尋網站	75		
與其他裝置同步。	75		
新增和檢視書籤	75		
設定	76		
存取設定功能表	76		
無線網絡	76		
裝置	77		
個人	81		
系統	83		
Accessibility	83		
LG Backup	86		
有關備份以及復原裝置的資料	86		
LG 備份平板電腦數據	87		

有關本使用者指南

有關本使用者指南

- 使用裝置前，請細心閱讀本手冊。此可確保您安全及正確運用裝置。
- 本指南中某些圖像及螢幕截圖可能與出現於您平板電腦上的有所不同。
- 您的內容可能與最終產品、或來自服務網絡或供應商的軟件有所不同，此內容可能隨時作出更改而不另行通知。如要獲取本手冊的最新版本，請前往 www.lg.com 瀏覽 LG 網站。
- 裝置應用程式及功能可能因應國家、地區或硬件規格而有所不同。因使用由非 LG 開發的應用程式而導致任何效能問題，LG 概不負責。
- 因編輯出廠設定或修改操作系統軟件而導致的效能或不兼容問題，LG 概不負責。於任何情況下嘗試對操作系統作出自行改動可導致裝置或應用程式無法運作。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體附上全部責任。
- 於使用數據服務例如訊息、上載及下載、自動同步或使用位置服務時可能被收取額外費用。要避免產生額外收費，請選擇符合您所需的數據計劃。聯絡您的服務供應商以獲取更額外詳細資料。

Trademarks

- LG 及 LG 標誌乃 LG Electronics 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。



關於 DIVX VIDEO： DivX® 是由 Rovi Corporation 的子公司 DivX, LLC 所建立的數碼影片格式。此為官方 DivX Certified® 的裝置，已通過嚴格測試，證明能夠播放 DivX 影片。有關用於將檔案轉換成 DivX 影片的軟件工具的更多資訊，請瀏覽 divx.com。

關於 DIVX VIDEO-ON-DEMAND： 這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。前往 vod.divx.com 以獲取有關如何完成註冊的更多資訊。

DivX Certified® 可播放高達 HD 720p 的 DivX® 影片，包括特級內容。

DivX®、DivX Certified® 及相關標誌乃 Rovi Corporation 或其子公司的商標並經授權下使用。

注意：開放源碼軟件

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽 <http://opensource.lge.com/>

所有授權的條款、免責聲明及通知均可連同原始碼一同下載。



Dolby Laboratories 授權製造。Dolby、Dolby Digital Plus 及 double-D 符號乃 Dolby Laboratories 的商標。

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。如果發生故障，您裝置中內置的軟件工具會建立一份故障日誌。此工具只會收集與故障相關的數據，例如訊號強度和載入的應用程式。此日誌只用作協助確定發生故障的原因。這些日誌會被加密，如您需要退回裝置進行維修，只有已授權的 LG 維修中心才可存取其內容。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

本平板電腦裝置型號 LG-V500 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率 (SAR)。SAR 測試使用標準方法進行，用裝置以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 裝置的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制為平均 10 克組織 2 瓦/千克。
- 如本使用指南中所述，此裝置配戴在身上使用時的最高 SAR 值為 0.720 W/kg。
- 在將平板電腦置於耳邊正常使用或使其距身體至少 0.00 厘米遠的情況下，此平板電腦符合關於 RF 暴露的指引。如果隨身攜帶平板電腦，所用的平板電腦套或其他裝置中不可包含金屬物品，並應使平板電腦與身體至少保持 0.00 厘米的距離。
要傳輸數據檔案，該裝置需與網絡進行有效的連接。在某些情況下，數據檔案的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，知道傳輸完成為止。

產品保護及維護

警告：

電池更換須知

- 為確保安全，請勿移除併入產品內的電池。如果需要更換電池，請帶同平板電腦前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 鋰電池是一種可能會造成人身傷害的危險元件。
- 將電池更換為不合格的產品可能會導致您的裝置受損。

警告：

請僅使用經認可適用於此特定型號裝置的電池、充電器及配件。使用其他種類的配件可能會導致裝置的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如平板電腦需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用平板電腦。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落平板電腦。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉裝置。例如，請勿在醫院內使用裝置，否則它可能會對敏感的醫療設備造成影響。

- 請勿以潮濕的雙手對充電中的裝置進行操作。這可能會引致觸電和造成裝置嚴重損壞。
- 請不要在易燃材料附近為裝置充電，因為充電期間裝置會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為裝置充電。
- 裝置應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將裝置置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對裝置造成損毀。
- 請勿將裝置暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的裝置是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理裝置時，請謹慎使用。
- 如果裝置受潮，請立即拔下平板電腦電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 裝置如果潮溼，液體會改變裝置內產品標籤的顏色。因電腦暴露於液體而做成的損壞並不受保養條款覆蓋。
- 如可能，請在介乎 0 °C 與 40 °C 的溫度中使用裝置。將裝置曝露在極低或極高的溫度下可能會導致平板電腦損壞、故障或甚至爆炸。

有效的裝置操作

電子裝置

所有平板電腦裝置均可能受訊號干擾，這可能會影響平板電腦效能。

- 請勿在未得到批准下在醫療儀器附近使用您的平板電腦裝置。避免將平板電腦放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受平板電腦裝置干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時所在地區使用平板電腦裝置的法例及規則。

- 駕駛時切勿使用手持裝置。
- 請專心一致駕駛。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

避免損害您的聽覺

注意：耳機的過大聲音壓力可能導致聽覺受損。



避免聽力受損，請不要長時間在高音量下聆聽。

- 如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉平板電腦時，不要將它放於太近耳朵。我們亦建議將音樂音量設定至合適水平。
- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

玻璃部件

您的平板電腦的部分部件以玻璃製造。如您的裝置摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的裝置，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用平板電腦。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在加油站使用平板電腦。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了平板電腦裝置及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 在登機之前，請關閉您的平板電腦。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將裝置放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。本產品亦含有一塊內置電池，如不正確使用或保養，可能會產生危險。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可降低電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同平板電腦前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在平板電腦完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

如何更新平板電腦

存取最新韌體更新、新增軟件功能以及改善地方。

- 在沒有電腦的情況下，更新平板電腦。選擇更新中心  > 軟體更新。
- 在連接電腦的情況下，更新平板電腦。

更多有關此功能的資訊，請瀏覽 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> 選擇國家及語言。

確認聲明

LG 電子產品在此聲明 LG-V500 這項產品符合 1999/5/EC 指令的基本規定和其他相關條文。確認聲明副本請見：

<http://www.lg.com/global/declaration>

重要通知

使用平板電腦前請閱讀此重要通知！

在您將平板電腦送往維修或致電服務人員前，請檢查您平板電腦出現的問題有否在此部分描述。

1. 平板電腦記憶體

您需要檢查您的平板電腦記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要解除安裝應用程式：

- 1 點按  >  > 應用程式 標籤 > 設定  > 應用程式。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按解除安裝。

2. 在安裝開放原始碼的應用程式及操作系統前

警告：

如果您安裝及使用並非由製造商提供的作業系統，可能會令您的平板電腦發生故障。此外，您的平板電腦不再受保養。

警告：

爲了保護您的平板電腦和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store™。如不正確安裝應用程式，平板電腦可能無法正常運作，或出現嚴重錯誤。您必須從平板電腦解除安裝該等應用程式及其所有相關數據和設定。

3. 使用解鎖圖形

設定解鎖圖形以保護您的平板電腦。點按  >  > 應用程式 標籤 > 設定  > 顯示 > 鎖定螢幕 > 選擇螢幕鎖定 > 圖形。此會開啟指導您如何繪畫螢幕解鎖圖形的畫面。您必須新增一個備份 PIN 作為安全措施，以防您忘記您的解鎖圖形。

警告：請於設定解鎖圖形前建立 Google 帳號，並緊記您於新增圖形鎖時所設定的備份 PIN 碼。



警告：

使用圖案鎖定的注意事項。

請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的平板電腦。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

當您記不起您的解鎖圖案、PIN 或密碼：

< 如果您忘記了您的圖形 >

如果您已用平板電腦登入至您的 Google 帳號但 5 次輸入錯誤的圖形，請按 **忘記解鎖圖形？** 按鈕。您將需要使用您的 Google 帳號登入，或輸入您於新增圖形鎖時設定的備份 PIN 碼。

如果您尚未在平板電腦上建立 Google 帳號或忘記備份 PIN，您需要進行硬性重新設定。

< 如您忘記了您的 PIN 碼或密碼 >

如您忘記您的 PIN 或密碼，您需要進行硬體重新設定。

警告：如您進行硬體重新設定，所有使用者應用程式及資料將被刪除。

注意：如您並未登入至您的 Google 帳號，及忘記了您的解鎖圖形，您需要輸入您的備份 PIN。

4. 使用硬性重新設定（原廠設定）

如您的平板電腦並無還原至其原始狀態，請使用強制重新設定（原廠設定）以初始化手機。

- 1 關閉平板電腦。
- 2 按住平板電腦右側的**電源/鎖定鍵** + **降低音量鍵**。
- 3 當屏幕顯示 LG 標誌時，放開**電源/鎖定鍵**，並繼續按住**降低音量鍵**。
- 4 立即按住**電源/鎖定鍵** + **提高音量鍵**，並同時按住**降低音量鍵**。
- 5 當顯示出廠硬性重新設定螢幕時，放開所有按鍵。
- 6 按下**電源/鎖定鍵**以繼續或其中一個**音量鍵**以取消。
- 7 再次按下**電源/鎖定鍵**以確認或其中一個**音量鍵**以取消。
- 8 您的裝置將進行硬性重新設定。

警告：

若進行硬性重新設定，所有用戶應用程式、用戶數據及 DRM 授權將被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

5. 開啟及切換應用程式

有了 Android，多任務處理變得簡易，您可以同時執行多個應用程式。開啟新的應用程式時，您無需退出原來的應用程式。

使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

- 1 觸控並按住**主頁鍵** 。將會顯示最近使用的應用程式列表。
- 2 點按要存取的應用程式。此舉不會停止之前的應用程式於平板電腦背景上執行。使用後，請確保點按**返回鍵**  以結束應用程式。
 - 若要停止應用程式，請在最近使用的應用程式列表點擊**工作管理員**，然後點擊**停止**或**停止全部**。
 - 若要從最近使用的應用程式列表移除應用程式，請向左或向右滑動應用程式預覽。若要清除所有應用程式，請點擊**全部清除**。

6. 螢幕凍結時


如果操作時螢幕凍結或平板電腦沒有回應：按住**電源/鎖定鍵**以關閉平板電腦電源。如果仍然無法運作，請聯絡服務中心。

7. 在開啟/關閉您的電腦時，請勿連接您的平板電腦

開啟或關閉電腦時，確保從電腦中斷平板電腦的連接，否則電腦可能造成錯誤。

了解您的平板電腦

平板電腦概述

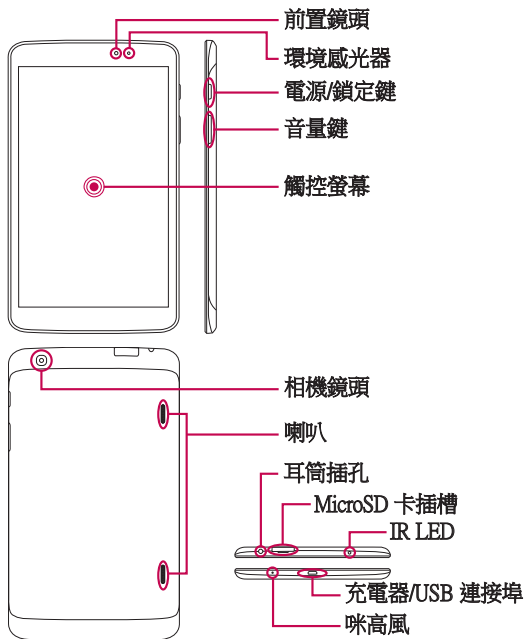

注意：務必確認錄影製短片或聲音時，咪高風未被封鎖。

前置鏡頭	用來對著自己拍照和錄影。您也可以使用此功能進行視訊交談。保持鏡頭乾淨以保持最佳效能。
MicroSD 卡插槽	插入 microSD 卡以儲存音樂、影片和相片等檔案。
耳筒插孔	方便您插入其他選購的耳機，進行免提裝置通話。您亦可以插入耳筒聆聽音樂。
環境感光器	環境感光器配備一個可以用來測量周圍光線與調整 LCD 亮度以提供擬真畫面的環境感應器。
電源/鎖定鍵	按下以鎖定或解除鎖定螢幕。按住以開啟/關閉平板電腦電源、重新啟動平板電腦、啟用/停用飛航模式，以及變更音效設定。
音量鍵	允許您調整媒體音量。
充電器/USB 連接埠	允許您連接平板電腦與 USB 纜線以使用充電器或其他相容配件。
相機鏡頭	用來拍照和錄製影片。保持鏡頭乾淨以保持最佳效能。
喇叭	來自於後置喇叭而不是耳機的音效 (如免持聽筒功能、音樂播放器功能等)。
咪高風	用來錄音及啟用聲音的功能。
IR LED	當作 QuickRemote 感應器使用。



警告：

若將較重物體置於平板電腦上，或坐在平板電腦上會損壞 LCD 和觸控畫面功能。請勿將保護貼掩蓋 LCD 的距離感應器。這可能會導致感應器出現故障。

提示！

- 每當您想點按應用程式以查看可供使用的選項時，點按**功能表鍵**
。
- 如果平板電腦已鎖上而且不能正常運作，請長按**電源/鎖定鍵**將其關閉。


平板電腦充電

充電式鋰離子電池可為平板電腦提供電力。平板電腦隨附的 USB 轉接器用作為電池充電。第一次使用平板電腦前，請確認電池已充滿電力。

注意：您的裝置裝有內置充電式電池。為確保安全，請勿移除併入產品內的電池。

警告！ 如平板電腦在充電過程中，觸控螢幕並無運作，可能是由於供電不穩定所致。因此，中斷 USB 線與裝置的連接，或者從電源插座取下 USB 轉接器。

- 1 連接 USB 轉接器和 USB 線。
- 2 將 USB 線（如下圖所示）插入平板電腦的充電器/ USB 連接埠。

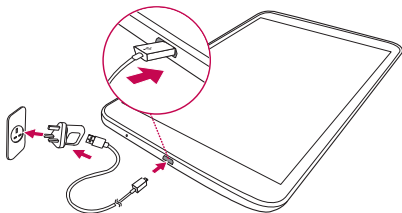

注意：第一次充電時必須將電池完全充電，以提高電池壽命。

延長電池壽命

您可關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您亦可監控應用程式及系統資源的電池電量消耗。

要延長您的電池壽命

- 關閉未使用的無線電通訊，如 Wi-Fi、藍牙或 GPS。
- 降低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 GMail™、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少電池電力。
- 使用已下載的應用程式期間，請檢查電池電量。

要檢視電池充電量

- 1 從桌面點按**應用程式**  > **設定**  > **關於 tablet > 電池**。
- 2 螢幕上方功能表會顯示電池狀態 (充電中或未充電中) 和充電量。


要監察及控制電池使用情況

- 1 從桌面點按**應用程式**  > **設定**  > **關於 tablet > 電池 > 電池使用狀況**。
- 2 螢幕會顯示使用電池電力的時間及列出使用的應用程式或服務，並根據耗用的電量由多至少排列。


插入 microSD 卡

您的裝置支援使用多達 64 GB 容量的 microSD 卡插槽蓋。多媒體內容可儲存在 microSD 卡內。

- 1 插入或移除 microSD 卡前，請先關閉平板電腦。



- 2 將您的手指指甲放在閘口，然後打開 microSD 卡插槽蓋。觸面朝下，將 microSD 卡插入插槽。小心將插槽輕輕推入裝置中。

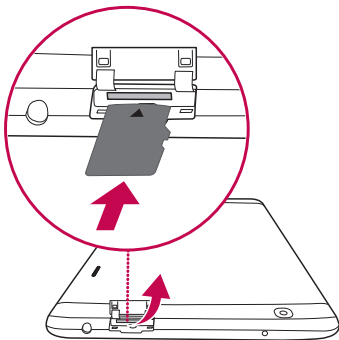

移除 microSD 卡

要從平板電腦安裝移除 microSD 卡，您首先需要將其解除安裝。

- 1 從桌面點按**應用程式**  > **設定**  > **儲存裝置** > **移除 SD 卡**。
- 2 輕輕從插槽中拉出 microSD 卡。

警告！ 請勿在解除安裝 microSD 卡之前將其移除。否則，您的 microSD 卡及平板電腦可能會損壞，而 microSD 卡內儲存的數據亦可能毀損。

格式化 microSD 卡

警告！ 格式化 microSD 卡，將會刪除 microSD 卡內儲存的所有檔案。

- 1 從桌面點按**應用程式**  > **設定**  > **儲存裝置**。
- 2 點按**清除 SD 卡**（兩次）。
- 3 如果您設定解鎖圖形，輸入圖形並點按**全部清除**。記憶咭將被格式化並且可使用。

注意：如您的 microSD 卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

將螢幕鎖定及解鎖

如果您暫時不使用平板電腦，螢幕會自動關閉及鎖定。這有助防止意外按鍵，並可節省電池電力。當您並非正使用平板電腦，按**電源/鎖定鍵**  以鎖定您的平板電腦。

如鎖定手機時正在執行程式，其於鎖定模式時可能仍在執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如：存取網絡及數據通訊）。

要喚醒平板電腦，按**電源/鎖定鍵** 。會顯示鎖定畫面。觸控並向任何方向滑動鎖定畫面，以解除鎖定桌面。您最後檢視的畫面將會開啟。


您的桌面

觸控螢幕提示

以下為如何於平板電腦上瀏覽的一些提示。

開啟螢幕

KnockON 功能可讓您點兩下螢幕，輕鬆開啟或關閉螢幕。

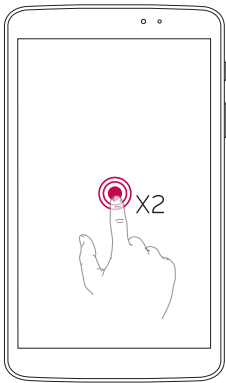


- 快速點兩下螢幕中間可開啟螢幕。
- 快速點按兩下狀態欄、桌面的空白位置或鎖定螢幕以關閉螢幕。

注意：

- 您可以在「顯示」設定此功能。
從桌面點按**應用程式**  > **設定**  > **顯示** > **開啟螢幕** > 開啟螢幕
點按核取方塊。

向旁邊滑動

使用三根手指滑動螢幕可將執行中的應用程式儲存到螢幕左邊，或將這些程式帶到顯示螢幕上。稍後若將它們帶到顯示上，有些應用程式可能會重新啟動。您最多可以儲存三個應用程式。

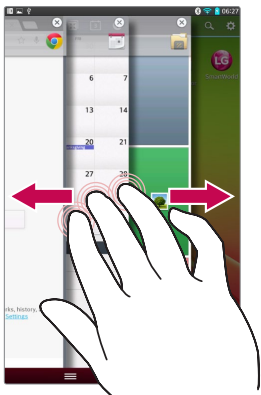

- 1 當某個應用程式開啟時，將三根手指放在螢幕上，然後向左滑動。目前的螢幕會被儲存，而桌面會出現。
- 2 要重新開啟儲存的應用程式，將三根手指放在螢幕上，然後向右滑動。點按您想開啟的應用程式。

提示！向旁邊滑動功能無法以較少的手指、其他手指或手掌辨識。

點按或觸控

用手指單次點按以選擇項目、連結、捷徑及螢幕鍵盤上的字母。

點按並按住

用手指點按項目並一直不放手，直至有其他動作產生。例如，要開啟聯絡人的可用選項，觸摸並按住通訊錄上的該聯絡人，直至開啟內容功能表。

拖拉

觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖拉項目改變其放置。

掃動或滑動

要掃動或滑動，快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。例如，您可向上或向下滑動螢幕以捲動列表，或向左或向右掃動以瀏覽不同桌面（反之亦然）。

點按兩下

輕觸兩下即可放大網頁或地圖。例如，快速雙點網頁的一部分以調整至適合螢幕的闊度。您亦可在拍照（使用相機）及使用地圖時，點按兩下進行縮放。點按兩下某個字，可以反白選取該字。點按兩下也可以啟動 KnockON 功能以開啟或關閉觸控螢幕。

多點觸控

使用瀏覽器或地圖，或瀏覽圖片時，捏緊或散開食指及拇指以放大或縮小。

旋轉螢幕

於許多應用程式及功能表，螢幕的方向會根據裝置本身的方向而作出調整。

注意：

- 要選擇一個項目，請點按圖示的正中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。
- 使用手指尖點按您需要的選項。請注意不要碰到其他按鍵。

桌面

只需將手指左右滑動便可檢視控制板。您可以自訂每個面板，包含應用程式、下載、小工具及牆紙。

注意：視乎您的所在地區而定，某些螢幕圖像可能會有差異。

於桌面上，您可以於畫面底部檢視功能表圖示。功能表圖示提供簡易的存取方法，讓您一按即能使用您最常用的功能。



狀態列 – 顯示裝置的狀態資訊，包括時間、訊號強度、電池狀態及通知圖示。

應用程式圖示 – 點按圖示（應用程式、Widget、資料夾等）以開啟並使用它。

快速按鍵 – 提供簡易的存取方法，讓您一按即能使用您最常用的功能。

功能表鍵 – 開啟影響目前螢幕或應用程式之選項的「選項」功能表。這個功能需視螢幕或應用程式而定，只在可以使用時才適用。

主頁鍵 – 返回主畫面（或從任何延伸的桌面桌布返回預設的桌面桌布），觸碰並按住此鍵可以存取「工作管理員」應用程式以查看最近使用過的應用程式。

返回鍵 – 返回上一個螢幕。同時，關閉彈出的項目（如功能表、對話方塊和螢幕鍵盤）。

自訂桌面

您可以新增應用程式、下載、小工具或牆紙，以自訂您的桌面。要更輕鬆使用平板電腦，將您最喜愛的應用程式及小工具新增至桌面。

要將項目新增至桌面：

- 1 或點按並按住桌面的空白部分。
- 2 點按**應用程式**、**小工具**或**牆紙**標籤。
- 3 將您要的項目拖動到您想要的位置並抬起手指。

要從桌面移除項目：

觸碰並按住您要移除的圖示，將後將它拖動到 ，再抬起您的手指。

提示！ 要將應用程式圖示從應用程式螢幕新增至桌面，觸摸並按住您想新增的應用程式，並將它拖動到您想要的位置。

提示！ 您可將多個應用程式圖示新增至一個資料夾內。於桌面將一個應用程式圖示放置於另一個上，就會建立一個資料夾。

返回最近使用的應用程式

- 1 觸控並按住**主頁鍵** 。畫面會顯示包含您最近使用的應用程式圖示的彈出式視窗。
- 2 點按圖示以開啟應用程式，或者點按**返回鍵**  以返回上一個畫面。


通知

通知提醒您收到新訊息、日曆事件、鬧鐘、進行中事項（如影片下載）等。

於通知面板，您可以檢視平板電腦的目前狀態及等待通知。

收到通知時，其圖示會顯示於畫面頂部。等等通知的圖示會顯示於左方，而顯示 Wi-Fi 或電力等的系統圖示則於右方。


注意：可用選項視乎不同地區或服務供應商而可能有所不同。

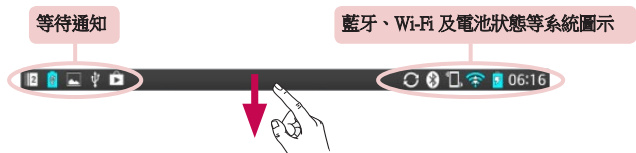

向下掃動以取得通知及設定

從狀態欄向下掃動以開啟通知面板。要關閉通知面板，向上掃動位於畫面底部的狀態欄。

注意：從「快速設定」觸碰並按住某個圖示可以檢視該功能的設定功能表。

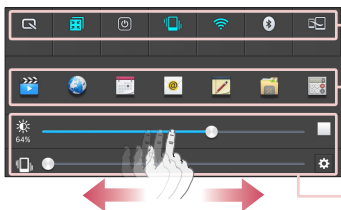

快速設定列 - 向右或向左翻閱可捲動清單。

QSlide apps 列 - 點按可啟動 QSlide 功能。

向左和向右滑動可以調整螢幕**亮度** / **音量**。

通知面板上的快速設定

使用「快速設定」輕鬆切換 Wi-Fi 等功能設定。快速設定功能位放通知面板的上方。

要重新排列通知面板上的快速設定項目

開啟通知面板並觸碰 。之後，您可以在快速設定功能表上檢視和重新排列想要的項目。

通知面板上的 QSlide 應用程式

QSlide 應用程式會顯示在快速設定列下方通知面板的某一列上。這些圖示可在同一個畫面上提供快速、方便的多工作業方法（類以於電視的子母畫面）。QSlide 會在螢幕上顯示一個小的應用程式視窗，您可以移動、調整大小或使其變透明。

使用 QSlide 應用程式

點按列上任何 QSlide 應用程式以啟動它。啟動時，QSlide 功能會在前景開啟一個應用程式視窗，讓您存取背景中其他應用程式。您可以同時開啟最多兩個 QSlide 視窗。

狀態欄上的指示圖示

於畫面頂部的狀態欄上顯示的指示圖示，報告日曆事件、裝置狀態等資訊。



顯示於畫面頂部的圖示提供有關裝置狀態的資訊。以下圖表所列出的為最常用的圖示。

圖示	說明
	飛航模式
	已連接至 Wi-Fi 網絡
	有線耳機
	藍牙開啟
	系統警告
	震動模式
	電池已完全充電
	電池充電中
	DLNA 已開啟
	數據下載
	數據上載

圖示	說明
	鬧鐘已設定
	SmartShare 音樂播放
	正在取得 GPS
	從 GPS 接收位置數據
	正在同步數據
	新 Gmail
	新 Hangouts 訊息
	正在播放歌曲
	平板電腦經 USB 傳輸線連接至 PC 或 USB 網絡連線已啟動
	節電模式已開啟
	向旁邊滑動已開啟

注意：狀態欄上的圖示位置根據功能或服務可能有所不同。

Plug & Pop

Plug & Pop 讓您在插入耳機或 On-the-Go 裝置時（例如滑鼠或鍵盤），迅速選擇要使用的應用程式。

- 1 插入耳機或 OTG (On-the-Go) 裝置（即滑鼠、鍵盤等）。
- 2 螢幕會顯示應用程式控制板，您可選擇要運行的應用程式。

備註：您可以編輯要顯示於控制板上的應用程式，並設定為不顯示應用程式控制板。

▶ 點按  >  > 設定  > 配件。

擷取螢幕截圖

同時按住 **音量調低鍵** 及 **電源/鎖定鍵** 大約 2 秒鐘以擷取螢幕截圖。

若要檢視擷取的影像，請至 **應用程式**  > **媒體匣**  > **Screenshots** 資料夾。

提示！ 您不能擷取相機/影片畫面。

使用 QuickMemo 擷取螢幕截圖

在您想擷取的螢幕上，往下拖動狀態列並選擇 QuickMemo。

或者

同時按住 **音量調高/調低鍵**。

使用 Capture Plus 擷取螢幕截圖

此功能可允許您在預設的網際網路瀏覽器上擷取螢幕影像。

- 1 連線網際網路時，點按 ，然後點按 **Capture plus**。
- 2 將藍色方塊調整到您要的大小，然後點按**確定**。所選的區域就會儲存到「媒體匣」中。

螢幕鍵盤

您可以使用螢幕鍵盤輸入文字。螢幕鍵盤在您需要輸入文字時會自動在螢幕上顯示。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤與輸入文字

-  點按一次以將您要輸入的下一個字母大寫。點按兩下即可大寫所有字母。
-  點按切換至字母及符號鍵盤。
-  點按即可使用語音輸入功能。您也可以觸碰並按住此圖示，來選取手寫和設定功能表。
-  點按以輸入一個空格。
-  點按以在訊息欄新建一行。
-  點按以刪除前一個字母。

輸入重音字母

螢幕鍵盤允許您輸入特殊字元（如 "á"）。

例如，觸碰並按住想要的鍵（例如 "a" 鍵）。等想要的字元出現後，在該字元上滑動手指並抬起手指以輸入該字元。

Google 帳號設定

第一次開啟您的平板電腦時，您可以啟動網絡，以登入至您的 Google 帳號，並選擇您想如何使用某些 Google 服務。

要設定 Google 帳號

- 於系統提示的設定畫面登入 Google 帳號。

或者

- 從桌面點按**應用程式**  > **應用程式標籤** > **設定**  > **帳號及同步處理** > **新增帳號** > **Google**。

如果您擁有 Google 帳號，觸控 **Existing**，輸入您的電郵地址及密碼，然後按 。否則，點按一下 **New**，並輸入必要資訊以建立新的 Google 帳號。於平板電腦上設定了您的 Google 帳號後，您的平板電腦會自動於網上與您的 Google 帳號進行同步。

您的通訊錄、Gmail 訊息、日曆事件及其他資訊會從網上的應用程式及服務同步至您的平板電腦。（這視乎您的同步設定。）

登入後，您可使用 Gmail™ 並在平板電腦上使用 Google 服務。

連接到網絡及裝置

Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速瀏覽互聯網。使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

連接至 Wi-Fi 網絡

要於平板電腦上使用 Wi-Fi，您需要存取無線存取點或「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或使用保安功能；在連接它們前必須先設定您的平板電腦。要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

開啟 Wi-Fi 並連接至 Wi-Fi 網絡

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **設定**  > 無線網路下的 **Wi-Fi**。
- 2 點按  以開啟此功能，並開始掃描可用的 Wi-Fi 網路。
- 3 點按**搜尋**以查看可用的清單與範圍內的 Wi-Fi 網路。
 - 已加密的網絡旁邊會有一個鎖形圖示。
- 4 點按一個網絡以開始連接。
 - 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情）
- 5 狀態列上的圖示會顯示 Wi-Fi 狀態。

藍牙

在大部分手機上，您可以透過執行相應應用程式，而非從藍牙功能表，使用藍牙傳送資料。

注意：

- LG 並不會對經藍牙無線功能傳送或接收資料而造成的資料遺失、攔截或誤用負責。
- 隨時確保透過信任且安全的裝置分享與接收您的資料。若是裝置之間有障礙物，可能需要縮短可運行的距離。
- 某些裝置（特別是經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

開啟藍牙並與藍牙裝置配對您的平板電腦

您必需先將裝置跟另一部機器配對，才可將兩者連接。

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **設定**  > 無線網路下的**藍牙**。
 - 2 點按  以開啟「藍牙」功能。您會看見顯示您平板電腦的選項。然後，點按**搜尋裝置**以檢視範圍內的裝置。
 - 3 從列表中選擇您想配對的裝置。
- 配對成功後，您的裝置就會連接到該裝置。

注意：您的平板電腦不支援免提情景模式。因此，此裝置可能無法使用通話功能與一些配件（如藍牙耳機或藍牙裝置）。

經由藍牙無線功能發送資料

- 1 開啟此項目並點按 。
或者
觸碰並按住此項目，然後選擇**分享**。
- 2 點按**藍牙**以分享藍牙。

注意：選擇選項的方式會因資料類型而有所差異。

- 3 搜尋和配對已啟動藍牙的裝置。

透過藍牙無線功能接收資料

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **設定**  > **藍牙**。
- 2 點按  以開啟藍牙，並勾選螢幕頂部的核取方塊，以在其他裝置上顯示。

注意：要選擇您裝置顯示的時間長短，點按**功能表鍵**  > **可見性逾時**。

- 3 當您收到藍牙授權要求您接受檔案時，配對裝置並點選**接受**。

SmartShare

您可以在媒體匣、音樂、影片及 Polaris Office 上盡情享用 SmartShare 功能。

若要將平板電腦的內容傳送到其他裝置

- 1 在您想播放或以 Beam 傳送的内容上，點按 。
- 2 在對話方塊中點按**播放**或 **Beam**。
 - **播放：**您可以透過電視、藍牙揚聲器等串流您的內容。
 - **Beam：**您可以傳送內容到藍牙裝置或支援 SmartShare Beam* 的 LG 手機或平板電腦。

*SmartShare Beam 會透過 Wi-Fi Direct 快速傳輸多媒體內容。

3 點按列表上的裝置以播放或接收。

- 如裝置不在列表上，請確保裝置已開啟 Wi-Fi、Wi-Fi Direct 或藍牙連接。然後點按**重新掃描**。

4 點選**發送**。

要在平板電腦上享受來自附近裝置（如電腦或流動裝置）的內容

1 要連接平板電腦附近的裝置，點按「附近裝置」。



- 確保您的平板電腦及附近裝置已連接至相同的 Wi-Fi 網絡。
- 確保附近裝置上的 DLNA 功能已開啟。

2 點按裝置以連接。

如果裝置不在列表上，點按**搜尋附近裝置**。

成功連接後，您可以盡情在平板電腦上享受來自附近裝置的內容。

使用 USB 纜線進行 PC 連接

了解如何於 USB 連接模式中以 USB 纜線將您的裝置連接到 PC。

使用 USB 大容量儲存模式傳音樂、相片及影片

- 1 使用 USB 數據線將平板電腦連接到 PC。
- 2 如您並未於 PC 上安裝 LG Android 平台驅動程式，您將需手動更改設定。選擇**系統設定 > PC 連接 > 選取 USB 連接方法**，然後選擇**媒體同步 (MTP)**。
- 3 現在您可於 PC 上檢視大容量儲存內容及傳輸檔案。

與 Windows Media Player 同步

確保電腦已安裝 Windows Media Player。

- 1 使用 USB 數據線將平板電腦連接至已安裝 Windows Media Player 的 PC。
- 2 選擇**媒體同步 (MTP)** 選項。連接完成後，電腦會出現彈出式視窗。
- 3 開啟 Windows Media Player 以同步音樂檔案。
- 4 在彈出式視窗編輯或輸入您的裝置名稱（如有需要）。
- 5 選擇並拖放要同步列表的音樂檔案。
- 6 開啟同步。
 - 必須符合以下要求以完成與 Windows Media Player 的同步。

項目	要求
OS	Microsoft Windows XP SP2、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如 Windows Media Player 版本為低於 10，請安裝版本 10 或更高版本。

通訊錄

您可在平板電腦上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

搜尋聯絡人

- 1 點按**通訊錄**  以開啟通訊錄。
- 2 點按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。您也可以點按螢幕左邊的字母，以取得所選字母開頭的名稱。

新增聯絡人

- 1 點按**通訊錄** .
- 2 點按 。選擇所需的帳號（如適用的話）。
- 3 如您希望為新聯絡人新增相片，點按 。從**拍照**選擇使用相機拍照或**從媒體匣中選取**。然後瀏覽圖片並選擇一張。
- 4 點按  以輸入更多特定名稱資訊。
- 5 輸入聯絡人的詳細資料。
- 6 點按**儲存**可儲存聯絡人項目。

常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛

- 1 點按**通訊錄**  以開啟通訊錄。
- 2 點按聯絡人以檢視詳情。
- 3 點按聯絡人名稱右邊的星星 。星星會轉為黃色，表示該聯絡人已新增到您的最愛清單中。

要從最愛清單移除聯絡人

- 1 點按**通訊錄**  以開啟通訊錄。
- 2 點按**最愛**標籤以檢視您的聯絡人。
- 3 點按聯絡人以檢視詳情。
- 4 點按聯絡人名稱的黃色星星。星號會變為灰色及聯絡人將從我的最愛移除。

建立群組

- 1 點按**通訊錄**  以開啟通訊錄。
- 2 觸碰**群組**標籤，然後觸碰 。
- 3 點按**儲存**以保存群組。

注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍將保留在您的通訊錄中。

電子郵件

您可使用電子郵件應用程式以從例如 Gmail 服務等讀取電子郵件。電子郵件應用程式支援以下帳號類型：POP3、IMAP 及 Exchange。

您的服務供應商或管理員系統可提供您所需的帳號設定。

管理電郵帳號

於首次開啟電子郵件應用程式時，設置精靈將開啟以助您設置電子郵件帳號。

初次設定完成後，電郵會顯示您的收件匣內容。如果您已新增多於一個帳戶，您可在帳戶間切換。

要新增另一個電郵帳戶：

- 開啟**電子郵件**應用程式並點選**功能表鍵**  > **設定** > 。

要更改電郵帳戶設定：

開啟**電子郵件**應用程式並點按 **功能表鍵**  > **設定** > **一般設定**。

要刪除電郵帳戶：

- 開啟**電子郵件**應用程式並點按**功能表鍵**  > **設定** > 點按**功能表鍵**  > **移除帳號** > 觸碰您想刪除的帳戶 > **移除** > 選擇**是**。

處理帳號資料夾

開啟**電子郵件**應用程式並點按**功能表鍵**  並選擇**資料夾**。每個帳戶設有收件匣、寄件匣、已發送及草稿資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的特色而定。

編寫並發送電郵

要編寫及發送訊息：

- 1 在電郵應用程式中點按**編寫** 。
- 2 輸入將會收到訊息的收件者的地址。於輸入文字時，會從您的通訊錄建議符合地址。以分號分隔多個地址。
- 3 點按**功能表鍵**  以新增副本/密件副本，如果需要，點按**附加**  以附加檔案。
- 4 輸入主旨和您的訊息
- 5 點按**傳送**  以傳送郵件。
如您並無連接至網絡，例如正處於飛行模式，您發送的訊息會儲存在寄件匣資料夾直至您再次連接至網絡。如載有任何有待處理的訊息，寄件匣會顯示於帳戶螢幕。

提示！ 當新電子郵件到達您的收件匣時，會以聲音或震動進行通知。點按電子郵件通知停止接收通知。

相機

要開啟相機應用程式，點按於桌面上的相機 。

了解取景器



- ❶ **切換鏡頭** - 在後方相機鏡頭和正面相機鏡頭之間做切換。
- ❷ **拍攝模式** - 設定拍攝模式。
- ❸ **設定** - 點按此圖示開啟設定功能表。參閱下頁的**使用進階設定**。
- ❹ **影片模式** - 可在相機模式和影片模式之間切換。
- ❺ **拍攝相片**
- ❻ **媒體匣** - 點按可觀賞您最後拍攝的相片。此讓您可於相機模式時進入媒體匣並檢視已儲存相片。

注意：於拍攝相片前請確保相機鏡頭清潔。

使用進階設定

在取景器，點按  以開啟進階選項。於拍攝相片前請確保相機鏡頭清潔。選擇選項後，請點按**返回鍵** 。

	透過聲音指令拍攝照片。
	決定並控制進入照片的光線量。
	向特定位置進行對焦。
	選擇相片解像度。如您選擇高解像度，相片大小將會增加，這代表您可於記憶體中儲存較少相片。
	ISO 等級決定相機的光線感應器的感光度。ISO 等級越高，相機對光線越敏感。當您在光線較暗環境下拍照且無法使用補光燈時，此功能非常有用。
	於不同光線環境下提高色彩質數。
	對相片添加色彩效果。
	設定於按下拍攝鍵後延遲快門。此功能最適合自拍時使用。
	啟動此功能以使用平板電腦的位置服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。 注意：此功能只可於 GPS 功能啟用時提供。
	選擇快門聲音。
	設定音量鍵以用作拍攝或縮放。

	設定相片的儲存位置。選擇內存空間或 SD 卡。
	打開說明指南，了解功能的運作方式。
	還原所有相機的預設設定。

提示！

- 當您退出相機後，某些設定將返回預設，例如白平衡、色彩效果、計時器及場景模式。拍攝下一張相片前，請先檢查這些設定。
- 設定功能表疊於取景器上，因此當您更改相片顏色或品質的設定，您會在設定功能表背後看見預覽圖像的更改。

快速拍照

- 1 開啟**相機**應用程式。
- 2 橫向握住平板電腦，將鏡頭對準拍攝的對象。
- 3 對焦方框將出現於取景器中心。您亦可點按螢幕中任何地方以進行對焦。
- 4 當對焦方塊變綠，則表示相機對焦完成。
- 5 點按  以拍攝相片。

當拍攝相片後

點按  以檢視您最後拍攝的相片。

	點按以使用 SmartShare 功能分享您的相片。
	點按以立即拍攝新相片。
	點按以將相片發送至其他人或通過社交網絡服務分享相片。
	點按以刪除相片。

提示！ 如果您擁有社交網絡帳戶並已在平板電腦設定好，您可在您的社交網絡中分享您的照片。

點按功能表鍵  以開啟所有進階選項。

將影像設定為 - 點按即可使用相片為主頁螢幕牆紙、通訊錄相片或鎖定畫面牆紙。

移動 - 點按以將相片移動至其他地點。

複製 - 點按以將以選取相片複製並保存至其他相簿。

複製至剪輯工作列 - 點按以複製相片並將其儲存於剪輯工作列。

重新命名 - 點按以編輯已選取相片的名稱。

向左/右旋轉 - 向左或向右旋轉。

修剪 - 裁剪您的相片。移動手指橫跨畫面以選擇裁剪區域。

編輯 - 檢視及編輯相片。

	對相片添加曝光效果。
	對相片添加藝術效果。
	對相片添加色彩效果。
	對相片添加額外選項。

幻燈片 - 自動逐一顯示目前資料夾中的圖像。

新增位置 - 新增位置資訊。

詳細資訊 - 了解有關內容的更多資訊。


檢視已儲存的相片

當於相機模式時您可存取已保存相片。只要點按螢幕底部的圖片預覽，就會出現「媒體匣」。

- 若要檢視更多相片，請左右捲動。
- 要放大或縮小，請在畫面上點按兩下，或放上兩隻手指，然後分開（將手指靠攏即可縮小）。

視像攝錄機

了解取景器

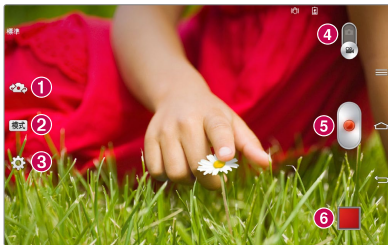

- 1 切換鏡頭** - 在後方相機鏡頭和正面相機鏡頭之間做切換。
- 2 模式** - 設定拍攝模式。
- 3 設定** - 點按此圖示開啟設定功能表。參閱下頁的**使用進階設定**。
- 4 相機模式** - 點按並向上滑動此圖示，以切換至相機模式。
- 5 錄影** - 觸碰以開始錄製影片。
- 6 媒體匣** - 點按以觀看您最後錄製的影片。此讓您可於影片模式時進入圖片集並檢視已儲存影片。

提示！ 於錄製影片時，將兩隻手指置於螢幕上並捏緊以使用縮放功能。

注意：務必確認錄影製短片或聲音時，咪高風未被封鎖。

使用進階設定

從取景器中點按  以開啟所有進階選項。

	點按以設定正錄製影片的大小（像素）。
	決定並控制進入影片的光線量。
	錄影時請避免晃動，以獲得高品質的拍攝效果。
	於不同光線環境下提高色彩質數。
	為新檢視選擇要使用的色調。
	啟動此功能以使用平板電腦的位置服務。
	設定音量鍵以用作錄製或縮放。
	設定相片的儲存位置。選擇內置記憶體或 SD 卡。
	打開說明指南，了解功能的運作方式。
	還原所有相機的預設設定。

錄製短片

- 1 開啟**相機**應用程式並點按**影片模式**圖示。
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 握住平板電腦，將鏡頭對準拍攝影片的對象。
- 4 按一下  以開始錄製。
- 5 隨即會出現顯示影片長度的計時器。
- 6 點按螢幕上的  以停止攝錄。

錄製影片後

點按  以檢視您最後拍攝的影片。

	點按以使用 SmartShare 功能分享您的影片。
	點按立即拍攝另一段影片。
	點按以將影片發送至其他人或通過社交網絡服務分享相片。
	點按以刪除影片。


觀看已儲存的影片

- 1 在取景器中，觸碰螢幕下方的圖片預覽。
- 2 您的媒體匣會顯示於螢幕上。
- 3 點按以自動播放影片。

即時放大

即時放大讓您在正在播放的影片上按比例放大或縮小，以令所需的掃描變得更大或更小。

觀看影片時，運用食指及拇指捏緊或散開以放大或縮小。

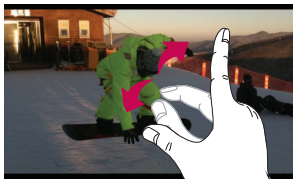

注意：

- 處於影片播放模式時，向上或向下滑動螢幕以調整亮度。
- 處於影片播放模式時，向左或向右滑動螢幕以倒退或快進影片。

注意：請勿過份用力按壓；只需輕力但準確地點按，觸控螢幕已能感應。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在平板電腦右側的音量鍵。

多媒體

媒體匣

您可在內置記憶體中儲存多媒體檔案，以便存取您所有的多媒體檔案。使用此應用程式以檢視如圖片或影片等多媒體檔案。

1 從桌面點按**應用程式**  > **應用程式標籤** > **媒體匣** .

您可以使用「媒體匣」來管理和分享所有的圖片和影片檔案。

注意：

- 視乎手機的軟件而定，可能不支援部分檔案格式。
- 視乎檔案編碼而定，某些檔案或不能正常播放。

檢視圖片

啟動媒體匣將顯示可提供的資料夾。當其他應用程式如電子郵件等保存圖片時，下載資料夾會自動建立以存放該圖片。同樣地，當擷取螢幕截圖時，會自動建立螢幕截圖資料夾。點按資料夾以開啟。

圖片會以建立日期排序顯示於資料夾。選擇圖片以進行全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

放大及縮小

使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。再次點按兩下以返回全螢幕檢視模式。
- 於任何位置將手指分開以放大。以手指捏合可以縮小。

播放影片

影片檔案的  圖示將顯示於預覽中。選擇影片並點按  以播放影片。

檢視相片和影片選項

於觀看相片或影片時，點按**功能表鍵**  並使用進階編輯選項。

刪除圖片和影片

使用以下方法：

- 於資料夾中，點按  並選擇您要刪除的相片和影片，然後點按**刪除**。
- 於觀看相片或影片時，點按 。

設定為牆紙

檢視相片時，觸碰**功能表鍵**  > 將影像設定為並選擇主頁螢幕牆紙、通訊錄相片或鎖定畫面牆紙。

注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

影片

您的平板電腦有影片播放器，可以讓您播放所有最愛的影片。要存取影片播放器，從桌面點按**應用程式**  > **應用程式標籤** > **影片** 。

播放影片

- 從桌面點按**應用程式**  > **應用程式標籤** > **影片** .
- 選擇要播放的影片。

	點按以暫停影片播放。
	點按以恢復影片播放。
	點按即可快轉 10 秒。
	點按即可倒轉 10 秒。
	點按即可控制影片音量。
	點按以更改影片螢幕比例。
	觸碰存取 QSlide 並以小視窗顯示影片。
	點按以通過 SmartShare 功能分享您的影片。
	觸拼以鎖定該視窗。

要在觀看影片時調整音量，請按平板電腦右邊的音量鍵。

觸碰並按住清單中的某個影片，以存取以下選項：

分享、刪除、裁剪和詳細資訊。

音樂

您的平板電腦有音樂播放器，可以讓您播放所有最愛的曲目。要存取音樂播放器，從桌面點按**應用程式**  > **應用程式標籤** > **音樂** 。

新增音樂檔案至平板電腦

開始傳輸音樂檔至平板電腦：

- 使用媒體同步 (MTP) 傳輸音樂。
- 從無線網路下載。
- 將平板電腦同步至電腦
- 通過接收檔案。

使用媒體同步 (MTP) 傳輸音樂

- 1 使用 USB 線將平板電腦連接到電腦。
- 2 選擇**媒體同步 (MTP)** 選項。您的平板電腦會顯示為電腦上的其他硬碟。點擊該硬碟以檢視。複製電腦的檔案至磁碟資料夾。
- 3 完成傳輸檔案後，向下掃動狀態列並觸碰 **USB 已連接 > 平板電腦充電**。您現在可以安全地移除您的裝置。

播放歌曲

- 1 從桌面點按**應用程式**  > **應用程式標籤 > 音樂** .
- 2 觸碰**歌曲**標籤。
- 3 選擇要播放的歌曲。

	點按以使用 YouTube 尋找檔案
	點按以通過 SmartShare 功能分享您的音樂。
	點按設定隨機播放模式
	點按設定重複播放模式
	點按以控制歌曲音量
	點按以暫停播放
	點按以恢復播放
	點按以跳至專輯或播放列表的下一首曲目
	點按以返回歌曲的開首。點按兩次以返回上一首歌曲
	觸碰可將目前的歌曲設定為我的最愛



點按以查看目前播放列表



觸碰以設定音效。

要在聆聽音樂時調整音量，請按平板電腦右邊的音量鍵。

觸碰並按住清單中任何一首歌，可以存取以下選項：

播放、新增至播放列表、分享、刪除、詳細資料和搜尋。

注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

注意：音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您或需要取得授權或許可，才可以複寫或複製音樂。

在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

QPair

透過 Qpair 將您的平板電腦和行動電話連接，您可在平板電腦和流動手機同步收到來電通知、訊息和 SNS 的通知。



- 1 先執行 **QPair** 並點按平板電腦上的**初始設定** > **開始**，然後在您的手機上執行相同的步驟。

提示！ 您的手機中可能未預先安裝 QPair。請至 Google Play Store，並搜尋和安裝 Qpair。

注意：QPair 可在安裝 Android 4.1 或更新版本手機上執行。根據您的手機機型，某些功能可能會受到限制。

- 2 藍牙連接將自動開啟。

QPair 功能

來電提醒 - 當手機接到來電時，平板電腦也會同時收到通知。該通知會顯示來電者的號碼，您也可以拒絕接聽。

郵件提醒 - 當手機接到郵件時，平板電腦也會同時收到通知。

SNS 通知 - 當您的手機收到社交網絡服務 (SNS) 通知，也會在您的平板電腦的狀態欄上顯示。

備註： 要啟用此功能，請先在手機功能表的**設定 > 協助工具 >**

QPairSnsNotification 開啟通知。

此選項讓您可在手機收到 SNS 通知的同時，在平板電腦上收到相關通知。

傳送 QuickMemo - 在平板電腦圖片集中儲存您目前寫 QuickMemo，然後將此圖片集與手機中的圖片集同步。

透過行動電話連接網際網路 - 透過行動電話自動將平板電腦連接網際網路（如 Wi-Fi 熱點）。使用此功能可能會產生數據費用。最近使用的應用程式列表 - 當您開啟手機時，顯示最近使用的應用程式列表。

最近使用過的應用程式館標籤 - 開啟螢幕時，顯示您最近在手機上使用的應用程式標籤。此舉讓您可在平板電腦上使用同一應用程式。您亦可在平板電腦檢查手機上的應用程式標籤。

QSlide

QSlide 功能可於您的平板電腦上覆蓋，以輕鬆進行多工處理。QSlide 視窗可以從通知面板的 QSlide 應用程式列開啟，或直接從支援 QSlide 功能的應用程式開啟。



1		點按以執行 QSlide。
2		點按以離開 QSlide 並返回至完整視窗。
3		點按以調整透明度。
4		點按以結束 QSlide。
5		點按以調整大小。

注意：QSlide 功能可同時支援最多兩個視窗。QSlide 僅適用於影片、互聯網、備忘錄、日曆、計算機、電子郵件、檔案管理員等應用程式。

- 1 開啟通知面板並從 **QSlide apps** 區段點按想要的應用程式。


或者

使用支援 QSlide 的應用程式時，點按 。此功能將持續以小視窗顯示於螢幕上。


- 2 滑動 以調整透明度。而拖動 QSlide 標題列可以將它移動到螢幕上另一個位置。

QuickMemo


QuickMemo 功能可讓您建立備忘錄並擷取螢幕截圖。有了 QuickMemo，您可擷取螢幕截圖，於上面畫圖，並與家人及朋友分享。

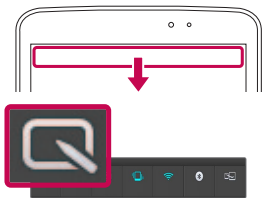

- 1 存取 QuickMemo 功能，向下滑動狀態列並觸碰 。

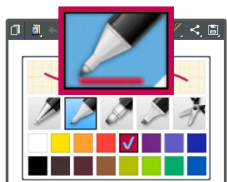

- 2 從**筆型**、**色彩**和**橡皮擦**選擇所需功能表選項。然後建立備忘錄。

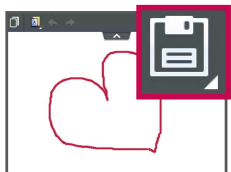

- 3 在編輯功能表中點按 ，然後選擇  以儲存備忘錄。要隨時離開 QuickMemo，點按**返回鍵** 。

注意： 使用 QuickMemo 時，請使用指尖。請勿使用指甲。

使用 QuickMemo 選項

使用 QuickMenu 時，您可輕鬆使用 QuickMemo 選項。

	點按以於螢幕上保留目前備忘錄，並同時使用平板電腦。
	選擇是否使用背景螢幕。
	允許您復原與重新執行之前的動作。
	選擇筆型及顏色。
	刪除已建立的備忘錄。
	點按以將影片發送至其他人或通過社交網絡服務分享備忘錄。
	將備忘錄儲存在 筆記本 或 媒體匣 中。

檢視已儲存的 QuickMemo

從桌面點按**應用程式**  > **媒體匣** ，並選擇 QuickMemo 相簿。

QuickRemote

QuickRemote 可將您的平板電腦變身成家中電視、DVD 或 Blu-ray 的萬用遙控器。

注意：某些裝置和區域可能無法使用 QuickRemote。

要開啟 QuickRemote 應用程式與設定 QuickRemote

- 1 從桌面點按**應用程式**  > **QuickRemote** .
- 2 觸碰  客廳 以選擇空間類型，並觸碰  以新增遠端。



- 3 選擇裝置的類型和品牌，然後按照螢幕上的說明設定裝置。

注意：QuickRemote 與您所在地區或國家使用的普通紅外線 (IR) 遙控器的操作方式相同。使用 QuickRemote 功能時，請注意不要遮蓋平板電腦頂部的紅外線感應器。視乎型號、製造商或服務供應商而定，此功能可能無法支援。

使用 QuickRemote

- 1 從桌面點按**應用程式**  > **QuickRemote**  以開啟 QuickRemote 列與所有您設定的遠端項目。
- 2 透過點按 QuickRemote 列頂部的類型/名稱，選擇您想要的遠端項目。
- 3 點按出現之遠端項目的按鈕。

注意：當您新增遠端電腦控制項時，QuickRemote 可使用 INPUT 按鈕來設定適當的遠端控制項。當您設定 INPUT 按鈕時，可以變更電視的輸入源。要重設電視的輸入源，點按 QuickRemote 上的 INPUT 按鈕幾次（依照連接到電視上的裝置數目而定）。

QuickRemote 選項


要存取 QuickRemote 選項功能表，點按**功能表鍵** （在前觸控鍵列中）以選擇所需的選項。

注意：當您在背景播放音樂時，按下任何 QuickRemote 按鈕將可以轉為靜音幾秒鐘。

QuickTranslator

只需將智慧型平板電腦相機對準想進行了解的外語句子。您便可隨時隨地取得實時翻譯。

您可從 Google Play Store 購買用作離線翻譯的附加字典。

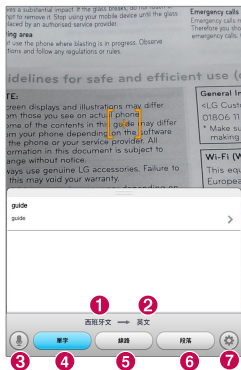

- ① 主頁語言
- ② 目標語言
- ③ 切換為語音模式。
- ④ 單字翻譯
- ⑤ 句子翻譯
- ⑥ 段落翻譯
- ⑦ 設定主頁與目標語言。

- 1 點按  > 應用程式標籤 > QuickTranslator 。
- 2 點按單字、線路或段落。
- 3 點按並選擇喜好語言。
- 4 手持平板電腦對準您想進行翻譯的主題數秒。

注意：只提供一本免費字典。額外字典需進行購買。請從以下列表選擇您想安裝作為免費贈送的字典。

注意：於辨別需翻譯的字母時所需速度可能因其大小、字型、顏色、亮度、角度而有所不同。

多個使用者

您可以為平板電腦新增使用者，讓他們設置自己的平板電腦設定，使用自己的儲存空間，並擁有自己的應用程式更新權限。

注意：

- 只有以擁有使用者的身份登入時，您才可以**新增新使用者**。
- 每位使用者可以設定及使用自己的內容或數據。不過，他們無法更改其他使用者的設定（如主頁螢幕設定、聲音設定等）。
- 使用者會與其他使用者分享電池、記憶體及數據用量。
- 只有平板電腦擁有者可以使用與 SD 卡相關的功能表。
- 其中一位使用者設置的語言設定會套用至所有其他使用者。
- 不論哪位使用者設定鬧鐘時間，鬧鐘會按設定時間響鬧。
- 事件（如訊息或日曆日程表等）只會通知相關使用者。
- 如使用者使用 Mobile Print（流動列印功能）開始列印文件，即使更換使用者，列印工作仍會繼續。
- 如更改使用者，數據傳輸或下載、多媒體播放及通訊服務會停止。

如要在平板電腦上新增新使用者

- 1 在桌面，點按**應用程式 > 設定 > 使用者 > 新增使用者**。
- 2 設定精靈會開啟，協助您完成設定。開始設定精靈。
 - 首次以新使用者身份登入平板電腦時，您應按照設定精靈的指示操作。
- 3 現在您可以於登入平板電腦時選擇使用者名稱。

鬧鐘

設定鬧鐘

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **鬧鐘/時鐘**  > 。
- 2 設定所需的鬧鈴時間。
- 3 設定**重複**、**暫停時間**、**震動**、**鬧鐘提示音**、**鬧鐘音量**、**自動應用程式啟動器**、**拼圖鎖**及**備忘錄**。
- 4 點按**儲存**。

注意：如要在鬧鐘列表畫面上改變鬧鐘設定，點按**功能表鍵**  並選擇**設定**。

計算機

使用計算機

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **計算機** 。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的功能（、、 或 ），然後按 。

注意：

- 至於較複雜的計算，點按**功能表鍵** ，選擇**科學計算器**，然後選擇想要的功能。
- 要檢視計算記錄，點按**功能表鍵**  > **計算記錄**。

日曆

新增事件至日曆

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **日曆**  **25**。
- 2 點選左上方的按鈕以變更日曆檢視方式（日、星期、月、年份、議事日程）。
- 3 點按您想新增事件的日期並點按 。
- 4 點按**事件名稱**然後輸入事件名稱。
- 5 觸碰**位置**欄位以進入地點。檢查日期，並輸入事件開始及完結的時間。
- 6 若要新增備註至您的事件，點按**說明**欄位，然後輸入詳細資料。
- 7 若要重複鬧鐘，請設定**重複**，如有需要亦可設定**提醒類型**。
- 8 點按**儲存**，將事件儲存至日曆。

檔案管理員

檔案管理員應用程式可讓您管理內部/外部儲存裝置的檔案。

要開啟檔案管理員應用程式

- 從桌面點按**應用程式**  > **檔案管理員** .

檔案管理員選項

- ：允許您執行 QSlide。
- ：允許您搜尋檔案。
- ：允許您建立新資料夾。
- ：允許您將檔案和資料夾移動到另一個資料夾。
- ：讓您可複製多個檔案。
- ：允許您刪除檔案和資料夾。

點按**功能表鍵**  以存取下列選項。

- **排序方式**：讓您按名稱、大小、日期和類型排序檔案和資料夾。
- **檢視依據**：讓您將檢視模式變更為列表或格線。
- **複製**：讓您複製檔案和資料夾，並將其貼到另一個位置。
- **分享**：讓您和其他人分享檔案和資料夾。
- **壓縮**：讓您將檔案和資料夾壓縮為 .zip 檔。
- **顯示隱藏文件/隱藏「隱藏檔案」**：讓您顯示已隱藏的檔案或隱藏檔案。
- **結束**：讓您結束應用程式。

語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他音頻檔案。

錄製聲音或語音

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **語音備忘錄** .
- 2 點按  開始錄音。
- 3 選擇  結束錄音。
- 4 點按  以聆聽錄音。

注意：觸碰  可存取您的錄音列表。您可聆聽已儲存的錄音。可供錄音時間可能與實際錄音有所不同。

發送錄音

- 1 完成錄製後，可透過點按  聲音段落。
- 2 從任何可用的分享方式選擇。

工作管理員

您可使用工作管理員管理應用程式。您可簡易查看目前正運行的應用程式數目並關閉某些應用程式。

工作管理員選項

- 觸碰**停止**以停止個別的應用程式。
- 點按**停止全部**以停止所有目前正在執行的應用程式。
- 點按**功能表鍵**  以存取「說明」、「排序方式」和「設定」等。

POLARIS Office 5

POLARIS Office 5 是專業的流動辦公室解決方案，讓使用者隨時隨地使用流動裝置輕鬆檢視不同類型的辦公室文件，包括 Word、Excel 和 PowerPoint 檔案。

建立新文件

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **POLARIS Office 5** 。
- 2 在「註冊」頁面上註冊您的電郵地址。

注意：您可以點按「跳過」忽略註冊資訊。

- 3 點按  以開啟一個新文件。
- 4 從下拉清單中點按一個文件類型，然後選擇一個範本。
- 5 使用畫面上方的工具及螢幕鍵盤將內容輸入至文件中。
- 6 當您編輯好文件時，點按 （在畫面左上角），然後點按**儲存**然後輸入文件名稱。

要檢視和編輯裝置上的文件

您現在可以直接在行動裝置上輕易檢視和編輯各式各樣的檔案類型，包括 Microsoft Office 文件和 Adobe PDF。

點選螢幕上方的 Office 文件標籤以搜尋您平板電腦中的文件。

點選您想檢視或編輯的文件。

使用 POLARIS Office 5 檢視文件時，物件和版面會保持與原始文件相同。
要編輯它，點按 。

Google+

使用此功能以通過 Google 的社交網絡服務與人們保存聯繫。

從桌面點按**應用程式**  > **應用程式標籤** > **Google+** 。

注意：此功能可能因應地區或服務供應商而未能提供。

Voice Search

使用此功能以語音搜尋網頁。

1 從桌面點按**應用程式**  > **應用程式標籤** > **Voice Search**



2 當 **Speak now** 出現於畫面時說出關鍵字或字詞。從出現的建議關鍵字中進行選擇。

注意：此功能可能因應地區或服務供應商而未能提供。

下載

使用此功能以查看已下載的檔案。

從桌面點按**應用程式**  > **應用程式標籤** > **下載** 。

網絡功能

互聯網

使用此功能以瀏覽互聯網。無論您身在何處，有何需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接在平板電腦上載入更多內容。

注意： 連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

從桌面點按**應用程式**  > **應用程式標籤** > **互聯網** 。

	點按以返回前一頁。
	點按以前往您在目前頁面後連接的一頁。此等同當您按 返回鍵  返回上一頁的相反操作方式。
	點按以前往桌面。
	點按以新增新標籤。
	點按以存取書籤。
	點按以執行 QSlide。
	點按以關閉目前的標籤。
	點按以重新整理或停止目前的頁面。

開啟頁面

- 要開啟新的頁面，點按瀏覽器工具列上的 。
- 要移到另一個網頁，點按該頁面以檢視它。

以語音搜尋網站

點按網頁地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。

注意：此功能可能因應地區或服務供應商而未能提供。

書籤

要開啟已新增書籤的網頁，點按瀏覽器工具列上的  並進行選擇。

記錄

點按瀏覽器工具列上的  並選擇**記錄**標籤以從近期瀏覽的網頁列表中開啟網頁。要清除記錄，點按**功能表鍵**  > **清除所有記錄**。

使用 QSlide

使用此功能以於無需關閉目前應用程式的情況下存取互聯網。

檢時瀏覽器上的內容時，點按 。您之後可以在平板電腦上瀏覽其他資訊。要以全螢幕檢視瀏覽器，點按 。

Chrome

使用 Chrome 以搜尋資訊及瀏覽網頁。

從桌面點按**應用程式**  > **應用程式**標籤 > **Chrome** 。

注意：此功能可能因應地區或服務供應商而未能提供。

檢視網頁

點按網頁位址欄位，然後輸入網頁位址或搜尋條件。

開啟頁面

- 要前往新頁面，點按 。
- 要移到另一個網頁，點按該頁面以選擇它。

以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。

與其他裝置同步。

於登入相同 Google 帳號時同步與 Chrome 於其他裝置一同使用的開啟標籤及書籤。

要檢視於其他裝置上的開啟標籤，點按**功能表鍵**  > Other devices。您必須在所有裝置上登入相同的 Google 帳戶。選擇要開啟的網頁。

新增和檢視書籤

要新增書籤，點按 。

要開啟已新增書籤的網頁，點按**功能表鍵**  > Bookmarks。

設定

存取設定功能表

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **設定** 。
或者
從桌面點按**功能表鍵**  > **系統設定**。
- 2 選擇設定類別並選擇選項。

無線網絡

Wi-Fi

Wi-Fi - 啟動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

提示！如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連線，您需要把平板電腦的 MAC 位址輸入到路由器。

您可以在下面的使用者介面尋找 MAC 位址：從桌面點按**應用程式**  > **設定**  > **Wi-Fi** > **功能表鍵**  > **進階的 Wi-Fi** > **MAC 位址**。

藍牙

開啟或關閉藍牙無線功能以使用藍牙。

數據用量

顯示數據用量。

更多...

允許您通過無線網絡與其他裝置分享文件夾。

飛航模式 - 勾選**飛航模式**以將它設定為開。啟動飛航模式將停用所有的無線連線。

無線儲存裝置 - 無需 USB 連接，您可在電腦管理平板電腦上的檔案，或從電腦複製檔案至平板電腦。確認平板電腦與電腦連接相同的網路。然後，在您的電腦瀏覽器位址列上輸入顯示在平板電腦上的網路位址。

Miracast - 將平板電腦畫面及音訊複製到 Miracast 加密器或電視上。

SmartShare Beam - 開啟以透過 SmartShare Beam 從 LG 手機或平板電腦接收多媒體內容。

VPN - 顯示您以前配置的虛擬專用網絡（VPN）列表。允許您新增不同類型的 VPN。

備註：使用加密儲存前，必須設定螢幕鎖定 PIN 或密碼。

裝置

聲音

聲音設定檔 - 您可以選擇聲音、僅震動或靜音。

音量 - 您可以管理通知、觸控回饋與系統、音樂、影片、遊戲和其他媒體的音量。

震動強度 - 設定通知的震動強度。

通知聲音 - 允許您設定預設的通知鈴聲。

觸控聲音 - 當您點按按鈕、圖示或者其他對您的點按作出反應的屏幕上的項目時，允許您設定平板電腦的播放按鍵音。

螢幕鎖定聲音 - 允許您設定鎖定或解鎖螢幕時播放聲音。

觸控時震動 - 允許您設定平板電腦螢幕觸碰的振動回饋。

顯示

<桌面>

主題 - 設定裝置的螢幕主題。

牆紙 - 設定桌面上使用的牆紙。

螢幕效果 - 當您掃動螢幕進行變更時，設定掃動的效果。

允許主頁螢幕循環 - 勾選此選項可以設定桌面不斷捲動，刪除在頁面到底端時向反方向捲動的功能。

僅為縱向檢視 - 勾選此選項可以一直以縱向檢視方式顯示桌面。

主頁備份與還原 - 您可以備份及還原應用程式和 Widget 的設定和主題。

Do you know? - 啟用此選項可以在顯示新功能 **Do you know?**（以其他桌面顯示）。

說明 - 顯示桌面操作相關資訊。

<鎖定螢幕>

選擇螢幕鎖定 - 設定螢幕鎖定類型以保護平板電腦安全。開啟一系列畫面，以指導您繪畫螢幕解鎖圖案。如果您已啟用圖形鎖類型，當您開啟平板電腦或螢幕時，系統會要求您畫出解鎖圖形以解鎖螢幕。

螢幕效果 - 設定螢幕效果選項。

天氣動畫 - 勾選此選項可顯示目前位置或在「天氣」中根據自動日期更新設定之主要城市的天氣動畫。

牆紙 - 設定您的鎖定畫面牆紙。從**媒體匣**或**牆紙圖庫**中選擇它。

捷徑 - 讓您更改鎖定螢幕的捷徑。

擁有者資訊 - 勾選以設定在鎖定螢幕上顯示的裝置擁有者名稱。點按以輸入顯示為擁有者資訊的文字。

僅為縱向檢視 - 勾選此選項可以一直以縱向檢視方式顯示鎖定螢幕。

鎖定時計 - 設定螢幕逾時後自動鎖定的時間。

電源按鈕立即鎖定 - 勾選以在按下電源/鎖定鍵時立即鎖定螢幕。此設定覆蓋安全鎖計時器的設定。

< 亮度 >

調校螢幕亮度。

< 螢幕逾時 >

設定螢幕逾時的時間。

< 開啟螢幕 >

勾選以啟用開啟螢幕，以開啟或關閉螢幕。快速點按兩下螢幕中心以開啟。點按兩下狀態欄、桌面的空白位置或鎖定螢幕以關閉螢幕。為達至最佳效果，使用 KnockON 功能時請勿移動平板電腦。

< 螢幕關閉效果 >

設定螢幕關閉效果。

< 自動旋轉螢幕 >

設定旋轉平板電腦時自動切換方向。

< 休眠模式 >

點按「休眠模式」以切換為開啟或關閉。開啟讓手機在插在機座時及/或充電時的休眠期間顯示已設定的螢幕保護。選擇時鐘、colors、照片相框或相片台。

備註：螢幕保護程式開啟時，充電過程可能較慢。

< 字體類型 >

變更顯示字型的類型。

< 字體大小 >

變更顯示字型的大小。

< 智慧螢幕 >

當裝置檢測到您的眼睛正看著螢幕時，使螢幕保持開啟狀態。

< 智慧影片 >

勾選以在裝置偵測不到您的眼睛看著螢幕時，暫停影片。

< 前觸控按鈕 >

設定所有螢幕底部顯示的前觸控鍵。設定要顯示哪些鍵、它們在欄上的位置以及樣式。選擇按鍵和次序、主題以及透明背景。

< 長寬比修正 >

讓您更改已下載的應用程式長寬比，以解決螢幕扭曲的問題。

< 運動感應器校正 >

改善傾斜的精準度及感應器的速度。

儲存裝置

內存空間 - 顯示裝置記憶體의總空間容量，並列出已用空間的資料類型為何。

SD 卡 - 顯示 microSD 卡的總記憶體空間。

安裝/移除 SD 卡 - 安裝和移除平板電腦上的 microSD 卡，以便您存取其中的數據、格式化記憶卡或安全地移除記憶卡。若沒有安裝 microSD 卡，或您已移除記憶卡或電腦上的 microSD 卡已安裝，則此設定將無法使用。

清除 SD 卡 - 永久清除 microSD 卡上的所有內容，並準備與平板電腦使用。

電池

電池資訊 – 查看裝置活動所用的電池電量有多少。電池電量會以百分比形式顯示。剩餘可用時間亦會顯示。

電池百分比 – 在狀態欄顯示電池存量百分比。

省電 – 管理省電項目的電量。點選此開關  以開啟此功能。點按**省電**將顯示以下選項。

- **自動同步處理**：關閉自動同步處理。
- **Wi-Fi**：沒有使用數據時關閉 Wi-Fi。
- **藍牙**：沒有連接時關閉藍牙。
- **觸控時震動**：關閉觸控回饋。
- **亮度**：調整亮度。
- **螢幕逾時**：調整螢幕的逾時。

省電提示 – 觸控以存取一些省電模式提示。

應用程式

顯示應用程式清單 (如目前正在已下載或執行)。

向旁邊滑動

您可以使用三根手指滑動螢幕可將執行中的應用程式儲存到螢幕左邊，或將這些程式帶到顯示屏幕上。

個人

帳號及同步處理

允許應用程式在背景中同步資料，而不論您是否啟動它們。取消勾選此設定會幫助節省電量，同時亦會降低 (但不會消除) 數據用量。

使用者

網路設定名稱 - 讓您設定目前的使用者名稱。

暱稱 - 讓您設定平板電腦的暱稱。

擁有者資訊 - 勾選以設定在鎖定螢幕上顯示的裝置擁有者名稱。點按



以輸入顯示為擁有者資訊的文字。

新增使用者 - 讓您新增平板電腦的新帳戶，以讓多名使用者使用。

位置存取

存取我的位置 - 讓要求您授權的應用程式使用您的位置資訊。

GPS 衛星 - 讓應用程式使用 GPS 衛星定位，以確定您所處的位置，準確程度可達您身處的街道。

Wi-Fi 與流動網絡位置 - 讓應用程式使用 Google 定位服務以更快估計出您的位置。匿名位置數據會被收集並發送至 Google。

安全

加密 Tablet - 讓您可加密平板電腦上的資料，以保安全。每次開機時，您需要輸入 PIN 碼或密碼以解鎖平板電腦。

加密 SD 卡儲存器 - 讓您可加密 MicroSD 上的資料，以保安全。

密碼鍵人為可見 - 輸入密碼時，顯示上一個輸入的字元。

裝置管理員 - 檢視或禁用平板電腦管理員。

未知的來源 - 安裝非 Play Store 應用程式的預設設定。

確認應用程式 - 在安裝可能會造成危害的應用程式之前禁止或警告。

可信認證 - 顯示受信任的 CA 證書。

從儲存裝置中安裝 - 選擇安裝加密證書。

清除憑證 - 移除所有憑證。

語言與輸入裝置

使用語言與輸入設定以選擇您平板電腦文字的語言，包括您新增至字典的字詞，並設定您的螢幕鍵盤。

備份與重設

備份我的數據 - 設定在 Google 伺服器上備份您的設定及應用程式數據。

備份帳號 - 設定您想備份資料的帳戶。

自動還原功能 - 設定當應用程式重新安裝在裝置時，還原您的設定及應用程式數據。

LG Backup 服務 - 為裝置上的所有資料備份，以便於數據遺失或取代時可進行還原。

重設為原廠設定 - 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設您的平板電腦，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

系統

日期及時間

使用**日期及時間**設定以設定顯示日期的方式。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

Accessibility

您可使用**可存取性**設定，以設定已安裝到平板電腦的可存取性外掛程式。

附註：需要其他外掛程式，才可選擇此選項。

TalkBack - 讓您設定 TalkBack 功能，此功能可以透過口語反饋來協助視力受損者。點選 **TalkBack** 切換螢幕右上角的 ，以開啟此功能。點按螢幕底部的**設定**以調整 TalkBack 設定。

安裝網頁指令碼 - 讓您啟用（或停用）安裝網頁指令碼。

大字體 - 勾選此選項以放大文字。

反轉色彩 - 反轉螢幕和內容色彩。

放大手勢 - 讓您可以點按螢幕三下來縮小或放大螢幕。

除影 - 設定螢幕的暗影。

單聲道音訊 - 勾選此選項讓耳聲音路由到左、右聲道。

觸摸及按住延遲 - 設定點按並按住屏幕的識別時間。

輔助觸控 - 切換  以在開啟和關閉之間切換。通用觸控可以取代所有硬體按鈕。

自動旋轉螢幕 - 勾選以設定裝置根據裝置方向（縱向或橫向）而旋轉螢幕。

說出密碼 - 勾選此選項，以便您用說的方式登入密碼（而不是用輸入的方式）。

單觸輸入 - 讓您輸入利用觸碰 LG 鍵盤來輸入字母。

輕鬆存取 - 讓您點三下桌面鍵時可以設定功能。

文字轉換語音輸出 - 文字轉語音輸出提供可以語音讀出的文字，例如，簡訊內容。

PC 連接

選取 USB 連接方法 - 設定所需模式：平板電腦充電、媒體同步 (MTP), LG 軟體或傳送圖片 (PTP)。

連接時詢問 - 連接至電腦時詢問 USB 連接模式。

說明 - USB 連接說明。

PC Suite - 勾選此方框即可透過 Wi-Fi 連接使用 LG PC Suite。請注意，Wi-Fi 網絡應透過 Wi-Fi 連接為 LG PC Suite 進行連接。

On-Screen Phone - 勾選此方框即可接收來自 On-Screen Phone 的 Wi-Fi 連線要求。

說明 - LG 可通過說明。

配件

Quick cover - 啟動此功能，可以自動開啟或關閉此功能。

USB 儲存 - 為 USB 儲存設定 Plug & Pop 功能。勾選應用程式面板選項，可於連接 OTG (On-the-Go) USB 纜線時自動顯示應用程式面板。點按**編輯應用程式面板**以變更您想顯示的應用程式。

耳機 - 為耳機設定 Plug & Pop 功能。勾選應用程式面板選項以於連接耳機時自動顯示應用程式面板。點按**編輯應用程式面板**以變更您想顯示的應用程式。

底座 - 為固定面板設定 Plug & Pop 功能。勾選應用程式面板選項以於連接固定面板時自動顯示應用程式面板。點按**編輯應用程式面板**以變更您想顯示的應用程式。

關於 tablet

檢視法律資訊，檢查裝置狀態和軟件版本。

有關備份以及復原裝置的資料

建議定期於內置儲存記憶體中建立與儲存備份檔案，尤其是更新任何軟件之前。在儲存記憶體保存目前的備份檔案，能讓您在遺失裝置、裝置被盜或突發令裝置損壞之問題的情況下，修復裝置資料。

此 LG 備份應用程式可於 LG 智慧型手機和平板電腦、其他軟體或操作系統版本間提供支援。因此，當您購買新的 LG 智慧型手機和平板電腦時，您可將目前的裝置數據備份至新的裝置。

如果您的智慧型手機和平板電腦已預先安裝備份應用程式，您可以備份和還原大部份的數據，包括已下載和預先安裝的應用程式、書籤、行事曆項目、通訊錄、桌面設定和系統設定等。您還可以：

- 以手動方式執行裝置的 LG 備份。
- 排定裝置的自動備份時程。
- 復原您的裝置數據。

備註：請留意備份功能並不支援用戶及媒體數據（圖片/影片/音樂）備份。請使用媒體同步 (MTP) 對該類檔案進行備份。使用數據線將平板電腦連接至電腦並點按媒體同步 (MTP)。

警告！要防止因電源不足而導致於備份或還原過程中突發關機，您應時常保持電源充足。

LG 備份平板電腦數據

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **LG Backup**  > **備份**。
- 2 選擇要備份項目旁的勾選方框，然後選擇**下一頁**。
- 3 在備份位置畫面上點按**內存空間**或**SD 卡**，然後點按 **開始**。
- 4 當所選檔案已全部備份後，您會看到「**備份完成**」。

排程自動備份

您亦可根據安排日程表設定自動備份平板電腦的資料。請按照下列步驟完成此工作：

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **LG Backup**  > **行程表備份**。
- 2 點按**備份項目**，然後選擇您要備份之項目旁的核取方塊。
- 3 點按**備份位置**，觸碰 **內存空間**或**SD 卡**。
- 4 點按**設定時間**以設定**星期**、**每兩星期**、**每月**的重複間隔並點按 **開啟**。
- 5 點選此開關  以開啟此功能。

還原平板電腦數據

注意：還原備份檔案前，將會刪除儲存在平板電腦的所有檔案。

- 1 從桌面點按**應用程式**  > **應用程式標籤** > **LG Backup**  > **還原**。
- 2 在**還原**畫面中選擇載有要還原資料的備份檔案。
- 3 選擇要備份項目旁的勾選方框，然後選擇**下一頁**以還原平板電腦。

注意：請留意，平板電腦資料將被備份的內容覆寫。

- 4 如果備份檔案經過加密，輸入設定加密的密碼。
- 5 當所選檔案已全部還原後，平板電腦會自動重新啟動。

注意：您可設定啟用加密，為備份檔案加密，提供額外保護。

於 **LG Backup** 畫面點按 ，輸入密碼及提示，以防您忘記密碼。當您設定密碼後，每次想進行備份/還原時，您需要輸入密碼。

平板電腦軟體更新

平板電腦軟體更新

有了這項功能，您無須親臨服務中心，就可透過互聯網將平板電腦軟體更新為最新版本，十分方便。如需更多使用此功能的資訊，請造訪：

<http://www.lg.com>

由於行動裝置軟體更新需要使用者在更新過程中全神貫注，進行更新前請確認查看每一個步驟所有的說明及附註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的平板電腦造成嚴重損害。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 將平板電腦軟體更新為較新版本。LG 推出適合您裝置軟體的較新版本時，此功能才可使用。首先，您可以檢查平板電腦上的軟體版本：

從桌面點按**功能表鍵**  > **系統設定** > **關於 tablet** > **軟體資訊**。

要執行平板電腦軟體更新，從桌面點按**功能表鍵**  > **系統設定** > **關於 tablet** > **更新中心** > **軟體更新** > **現在檢查更新**。


注意：LG 保留權利，可酌情決定只為選定型號提供軟體更新，並不保證所有手機型號均有軟體的較新版本。

注意：您的個人資料，包括有關您的 Google 帳戶及任何其他帳戶資訊、系統/應用程式數據及設定、任何已下載應用程式及 DRM 授權—在更新裝置軟體的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新平板電腦軟體。LG 對於個人資料的任何遺失概不責任。

配件

這些配件可搭配平板電腦使用。（下述配件為可選購配件。）

旅行充電器



數據線



快速入門指南



注意：

- 只可使用原裝 LG 配件。若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

疑難排解

本章節列出一些使用平板電腦時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
並無可設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。
充電錯誤	電池並無充電。	為電池充電。
	外界溫度太高或太低。	確保於正常溫度下為平板電腦充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接至平板電腦。
	無電壓	將充電器插入不同的插座。
	充電器故障	更換充電器。
	使用不當充電器	請只使用原裝 LG 配件。
無法接收/發送相片	記憶體已滿	刪除平板電腦的部分圖片。


訊息	可能起因	可用解決方法
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式。
沒有聲音	震動模式	檢查聲音功能表的設定狀態以確保您並非使用震動或靜音模式。
死機或停止運作。	軟件間歇性問題	透過網站嘗試進行軟件更新。



简体中文

用户手册

- 屏幕显示和说明可能与在实际设备上看到的不同。
- 本手册中的部分内容可能不适用于您的设备，具体视您手机的软件和服务提供商而定。本指南的所有信息如有更改，恕不另行通知。
- 此手机采用触摸屏键盘，不适合视障人士使用。
- 版权所有 ©2013 LG Electronics, Inc。
保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 和 Play Store™ 是 Google, Inc. 的商标。

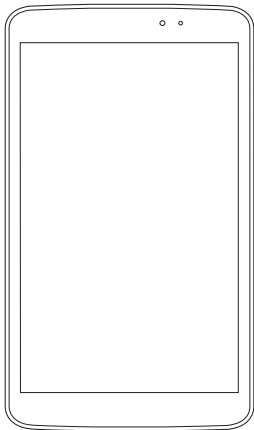

目录

关于此用户手册	5	双指缩放	27
关于此用户手册	5	旋转屏幕	27
商标	5	主屏	27
DivX HD	6	自定义主屏	28
Dolby Digital Plus	6	返回到最近使用的应用程序	29
关于安全有效使用的准则	7	通知	29
重要注意事项	14	向下滑动可看到通知和设置	30
开始了解您的设备	18	通知面板上的快速设置	31
平板电脑概述	18	重新设定通知面板上的快速设置项目	31
为平板电脑充电	20	通知面板上的 QSlide 应用程序	31
优化电池使用寿命	21	使用 QSlide 应用程序	31
延长电池使用寿命	21	状态栏上的指示器图标	31
查看电池电量水平	21	Plug & Pop	33
监视并控制使用电池的项目	21	抓拍屏幕	33
插入 microSD 卡	22	使用快捷备忘录抓拍屏幕	33
取出 microSD 卡	22	使用 Capture plus 抓拍屏幕	34
格式化 microSD 卡	23	屏上键盘	34
屏幕锁定和解锁	23	输入带注音的字母	34
主屏	24	Google 帐户设置	35
触摸屏提示	24	连接到网络和设备	36
轻敲唤醒	24	WLAN	36
滑控界面	25	连接 WLAN 网络	36
轻触或点触	26	打开 WLAN 并连接 WLAN 网络	36
点触并按住	26	蓝牙	36
拖动	26	打开蓝牙，将平板电脑与蓝牙设备配对	37
滑动	26	使用蓝牙无线功能发送数据	37
轻触两次	26	使用蓝牙无线功能接收数据	38

SmartShare.....	38	观看保存的视频.....	52
从平板电脑发送内容至其他设备...	38	实时缩放.....	52
体验附近设备（如计算机或您 平板电脑上的移动设备）的内容...	39	观看视频时调节音量.....	53
使用 USB 数据线的 PC 连接.....	39	多媒体.....	54
使用 USB 大容量存储模式传输音 乐、照片和视频.....	39	图片库.....	54
与 Windows Media Player 同步.....	40	查看图片.....	54
联系人.....	41	放大和缩小.....	54
搜索联系人.....	41	播放视频.....	54
添加新联系人.....	41	查看照片和视频选项.....	55
常用电话本.....	41	删除图像和视频.....	55
创建群组.....	42	设置为墙纸.....	55
电子邮件.....	43	视频.....	55
管理电子邮件帐户.....	43	播放视频.....	55
使用帐户文件夹.....	43	音乐.....	56
撰写和发送电子邮件.....	44	将音乐文件添加至平板电脑.....	56
照相机.....	45	使用媒体同步 (MTP) 传输音乐.....	57
了解取景器.....	45	播放歌曲.....	57
使用高级设置.....	46	工具.....	59
快速拍照.....	47	QPair.....	59
拍照后.....	48	QSlide.....	60
查看保存的照片.....	49	快捷备忘录.....	62
摄像机.....	50	Quick 遥控.....	64
了解取景器.....	50	Quick 翻译.....	65
使用高级设置.....	51	多个用户.....	67
快速录制视频.....	51	闹钟.....	68
录制视频后.....	52	计算器.....	68
		日历.....	69
		文件管理器.....	69
		录音机.....	70

任务管理器.....	71	平板电脑软件更新.....	89
POLARIS Office 5.....	71	平板电脑软件更新.....	89
Google+.....	72	通过空中下载 (OTA) 的 LG	
语音搜索.....	72	手机软件更新.....	89
下载内容.....	72	配件.....	90
网络.....	73	故障排除.....	91
互联网.....	73		
打开网页.....	73		
使用语音搜索网络.....	74		
书签.....	74		
历史记录.....	74		
使用 QSlide.....	74		
Chrome.....	74		
查看网页.....	75		
打开网页.....	75		
使用语音搜索网络.....	75		
与其他设备同步.....	75		
添加并查看书签.....	75		
设置.....	76		
访问“设置”菜单.....	76		
无线网络.....	76		
设备.....	77		
个人.....	81		
系统.....	83		
LG Backup.....	86		
关于备份和恢复设备数据.....	86		
LG 备份平板电脑数据.....	87		
计划自动备份.....	87		
恢复平板电脑数据.....	87		

关于此用户手册

关于此用户手册

- 使用设备前，请仔细阅读本手册。阅读本手册后，您可以安全无误地使用设备。
- 本手册中提供的一些图像和抓拍图片在您的平板电脑上显示可能不同。
- 您的内容可能与最终产品或者服务提供商或运营商提供的软件有所不同。内容如有更改，如不另行通知。要获取本手册的最新版本，请访问 LG 网站 www.lg.com。
- 您设备的应用程序和各自的功能可能因国家/地区或硬件规格不同而有所差异。因使用 LG 之外的提供商开发的应用程序而导致任何性能问题，LG 概不负责。
- 因编辑已编辑好的注册表设置或修改操作系统软件而导致性能或不兼容问题，LG 概不负责。一旦尝试自定义操作系统，即可能导致设备或设备的应用程序无法正常运作。
- 仅可限制性地使用您手机提供的软件、音频、墙纸、图像和其他多媒体。如果您将这些材料抽取一部分或整体用于商业或其他用途，您可能会侵犯版权法。此时用户会因非法使用媒体而承担相应的全部法律责任。
- 发送信息、上传下载、自动同步或使用定位服务等数据服务可能会造成额外费用。为避免额外费用，请选择一项适合您自身需求的数据计划。联系您的服务提供商以获取更多详细信息。

商标

- LG 和 LG 徽标是 LG Electronics 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。



关于 DIVX 视频：DivX® 是由 DivX, LLC (Rovi Corporation 的子公司) 开发的一种数码视频格式。这是 DivX Certified® 官方设备，通过了有关 DivX 视频播放的严格测试。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 divx.com。

关于 DIVX VIDEO-ON-DEMAND：要播放购买的 DivX Video-on-Demand (VOD) 电影，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。转到 vod.divx.com 以获取有关如何完成注册的详细信息。

DivX Certified® 可播放高达 HD 720p 的 DivX® 视频，包括额外付费内容。DivX®、DivX Certified® 及相关徽标是 Rovi Corporation 或其子公司的商标，使用必须经过许可。

注意：开源软件

要获取 GPL、GPL、MPL 及其他开源证书下的相应源代码，请访问 <http://opensource.lge.com/>

可使用源代码下载所有相关许可条款、声明和通知。



由 Dolby Laboratories 许可生产。Dolby、Dolby Digital Plus 和 double-D 符号是 Dolby Laboratories 的商标。

关于安全有效使用的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

如果发生故障，设备内置的软件工具会收集故障记录。此工具仅收集特定于故障的数据，如信号强度和加载的应用程序。该记录仅用于帮助确定故障原因。该类记录已加密，如果您需要将退回设备以进行维修，仅 LG 授权维修中心可查看它们。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。

此款 LG-V500 型平板电脑设备已设计为遵循有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率” (SAR) 的测量单位。SAR 测试是在所有用到的频带中以设备的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 设备型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 g 重的人体组织吸收的能量平均值不超过 2 W/Kg。
- 此设备佩戴在人体上的最高 SAR 值为 0.720 W/kg，如本用户指南所述。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 0.00 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套佩戴在身上进行操作时，不得包含金属并且产品应至少距身体 0.00 厘米。为了传输数据文件，此设备需要高质量的网络连接。某些情况下，数据文件传输可能会延迟，直至此类连接可用。确保遵照以上间隔距离说明直到完成发送。

产品保养和维护

警告

电池更换注意事项

- 为了安全起见，不要取出融合到产品中的电池。如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 锂离子电池是一种危险元件，它可能会导致伤害。
- 资质不符的专业人士更换电池可能会导致设备受损。

警告

仅使用经核准可用于此特定设备型号的电池、充电器和配件。使用任何其它类型可能导致适用于此设备的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将设备送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 切勿跌落设备。
- 切勿让本机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭设备。例如，请勿在医院使用设备，因为它可能影响敏感的医疗装置。

- 设备充电时，切勿用湿手操作它。这可能会导致电击或设备严重受损。
- 请勿在靠近易燃物体的位置充电，因为设备可能因过热而引发火灾。
- 使用干布清洁本机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果平板电脑置于柔软物体之上，切勿充电。
- 应将设备放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放本机。
- 不要将设备放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏平板电脑。
- 切勿将设备暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 此平板电脑为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的设备时，应特别小心。
- 如果设备弄湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿设备内的液体会改变设备内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。
- 如果可能，请在介于 0 °C 与 40 °C 温度之间使用平板电脑。将设备放置在过低或过高的温度的环境下可能会导致损坏、故障、甚至爆炸。

有效的设备操作

电子设备

所有平板电脑设备都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用平板电脑设备。不要将平板电脑放在心脏起搏点上，即胸前的口袋内。
- 平板电脑设备可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用平板电脑设备的本地法律法规。

- 切勿在驾驶时使用手持式设备。
- 将注意力完全集中在驾驶上。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

防止损伤您的听力

备注：耳机声音压力过大可能导致听力受损。



为防止听力可能受损，请勿长时间高音量倾听。

- 如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将平板电脑置于耳边。同时，我们还建议您将音乐音量设置为合理的音量级别。
- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

玻璃部分

平板电脑设备的部分零件由玻璃制成。如果设备摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用设备，在授权的服务提供商处更换玻璃。

爆破区域

切勿在正进行爆破的地区使用平板电脑。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 切勿在加油站内使用平板电脑。
- 切勿在靠近燃料或化学制品处使用平板电脑。
- 切勿在放有平板电脑设备和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关闭平板电脑。
- 未经机务人员允许，不得在地面上使用本机。

儿童

将设备放在儿童接触不到的安全地方。平板电脑中包含细小零件，如果脱落可能导致窒息危险。此设备也包含内置电池，如果设备使用或维护不当，电池可能造成危险。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 切勿将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
切勿将设备存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 平板电脑充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入设备内触碰电池。这可能引发火灾。

如何更新平板电脑

访问最新的固件版本、新的软件功能和改进。

- 无需 PC 即可更新平板电脑。选择更新中心  > 软件更新。
- 将平板电脑连接到 PC 后更新。

有关此功能的更多信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> 选择国家/地区和语言。

确认声明

特此，LG Electronics 宣布此 LG-V500 产品符合指令 1999/5/EC 的核心要求和其它相关规定。有关《遵循声明》的副本，请访问 <http://www.lg.com/global/declaration>

重要注意事项

使用平板电脑前，请阅读本用户指南！

请查看本节是否介绍了您平板电脑遇到的任何问题，然后再将平板电脑拿去维修或者致电服务代表。

1. 平板电脑内存

您需要检查平板电脑存储器并删除一些数据（如应用程序或信息），以便有更多内存可用。

卸载应用程序：

- 1 轻触  >  > 应用程序选项卡 >  设置 > 应用程序。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。
- 3 轻触**卸载**。

2. 安装开源应用程序和操作系统之前



警告

如果安装并使用非制造商提供的操作系统，可能导致平板电脑无法正常工作。此外，您的平板电脑也不再享受保修。



警告

为保护您的平板电脑和个人数据，请仅从信任的来源（如 Play Store™）下载应用程序。如果平板电脑上存在未正确安装的应用程序，平板电脑可能无法正常工作，甚至可能发生严重错误。必须从平板电脑中卸载那些应用程序及所有关联的数据和设置。

3. 使用解锁图案

设置保护平板电脑的解锁图案。轻触  >  > 应用程序选项卡 >  设置 > 显示屏 > 锁定屏幕 > 选择屏幕锁定 > 图案。此时将打开一个屏幕，指导您如何绘制屏幕解锁图案。您必须创建一个备份 PIN 以作为安全措施，以免忘记了解锁图案。

注意：设置解锁图案之前，请先创建一个 Google 帐户，并记住创建图案锁定时设置的备份 PIN。

警告

使用图案锁定时的预防措施。

请务必记住您设置的解锁图案。如果 5 次使用了不正确的图案，您将无法访问您的平板电脑。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法记起解锁图案、PIN 或密码时：

<如果您忘记图案>

若要在平板电脑上登录 Google 帐户，但连续 5 次输错图案，请轻触 **忘记了图案？** 按钮（屏幕底部）。随后，您需要使用 Google 帐户登录或输入创建图案锁定时设置的备份 PIN。

如果未在平板电脑上创建 Google 帐户或者忘记了备份 PIN，则需要执行硬重置。

<如果您忘记 PIN 或密码>

如果您忘记 PIN 或密码，您需要进行一次硬重置。

注意：如果执行硬重置，所有用户应用程序和用户数据都将被删除。

备注：如果您未登录 Google 帐户且忘记了解锁图案，您需要输入备份 PIN。

4. 使用硬重置（恢复出厂设置）

如果平板电脑未恢复到原始条件，请使用硬重置（恢复出厂设置）初始化平板电脑。

- 1 关闭平板电脑。
- 2 按住平板电脑右侧的**电源/锁定键 + 音量调低键**。
- 3 显示 LG 徽标时，仅释放**电源/锁定键**，继续按住**音量调低键**。
- 4 按住**音量调低键**不放，同时立即按住**电源/锁定键 + 音量调高键**。
- 5 在显示出厂硬重置屏幕时释放所有按键。
- 6 按下**电源/锁定键**继续，或者按下任一**音量键**取消。
- 7 再次按下**电源/锁定键**确认，或者按下任一**音量键**取消。
- 8 设备将执行一次硬重置。

警告

如果执行硬重置，则所有用户应用程序、用户数据和 DRM 许可将被删除。在执行硬重置之前，请记得备份任何重要数据。

5. 打开和切换应用程序

多任务可在 Android 中轻松实现，您可同时运行多个应用程序。打开其他应用程序之前，无需退出当前应用程序。

使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

- 1 点触并按住**主屏键** 。屏幕将显示最近使用的应用程序列表。
- 2 轻触要访问的应用程序。这不会停止在平板电脑后台运行的上一个应用程序。确保在使用应用程序后轻触**返回键**  以退出该应用程序。
 - 要停止应用程序，从最近的应用程序列表中轻触**任务管理器**，然后轻触**停止或全部停止**。
 - 要从最近的应用程序列表中删除应用程序，向左或向右滑动应用程序预览。要清除所有应用程序，轻触**全部清除**。

6. 屏幕冻结时


如果屏幕冻结或您尝试操作时平板电脑无响应：按住**电源/锁定键** 12 秒可关机。如果这仍不起作用，请联系服务中心。

7. 请勿在 PC 开机/关机时连接平板电脑

确保打开或关闭 PC 时断开平板电脑与 PC 的连接，否则可能造成 PC 错误。

开始了解您的设备

平板电脑概述

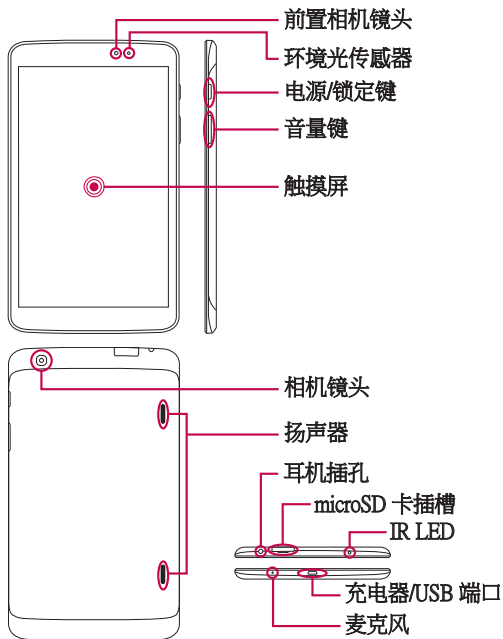

备注：录制视频或音频剪辑时，确保麦克风未堵塞。

前置相机镜头	用于自拍和录制自己的视频。还可以使用此镜头进行视频聊天。请保持其清洁以便获得最佳性能。
microSD 卡插槽	插入 microSD 卡以存储文件，比如音乐、视频和照片。
耳机插孔	用于插入选配耳机以进行方便的免提通话。您也可以插入耳机以收听音乐。
环境光传感器	环境光传感器采用环境传感器，用后者测量周围的光线并调节 LCD 的亮度以提供生动的屏幕。
电源/锁定键	按下可锁定/解锁屏幕。按住可开关、重启平板电脑，激活/停用飞行模式，以及更改声音设置。
音量键	用于调节媒体音量。
充电器/USB 端口	用于连接平板电脑和 USB 数据线，以便使用充电器适配器或其他兼容配件。
相机镜头	用于拍照和录制视频。请保持其清洁以便获得最佳性能。
扬声器	声音从后扬声器发出，而不是听筒（例如，免提功能、音乐播放器功能等）。
麦克风	用于录制语音和声控功能。
IR LED	作为 Quick 遥控传感器。

警告

在平板电脑上放置重物或坐在上面可能会损坏平板电脑的 LCD 屏幕及触摸屏的功能。不要在 LCD 近程传感器上使用保护膜。这可能会影响传感器的感应度。

提示！

- 当打开应用程序以检查可用选项时，请轻触**菜单键** 。
- 如果设备锁定而无法使用，请按住**电源/锁定键**  12 秒以关机。


为平板电脑充电

平板电脑由可充电锂电池供电。平板电脑附带的 USB 适配器用于为电池充电。首次使用平板电脑前，请确保电池已充满电。

备注：设备具有内置可充电电池。为了安全起见，不要取出融合到产品中的电池。

警告！如果在平板电脑充电过程中无法使用触摸屏，可能是由于电源不稳定造成的。因此，请将 USB 数据线及设备断开，或者从电源插座上拔下 USB 适配器。

- 1 连接 USB 适配器和 USB 数据线。
- 2 将 USB 数据线（如下所示）插入平板电脑的充电器/USB 端口。

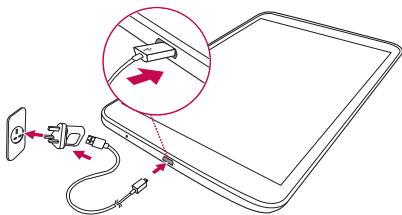

备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

优化电池使用寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您也可以监控应用程序和系统资源如何节省电池电量。

延长电池使用寿命

- 关闭未使用的无线电通信，如 WLAN、蓝牙或 GPS。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Gmail™、日历、联系人及其他应用程序的自动同步功能。
- 下载的一些应用程序可能会导致电池电量降低。
- 使用下载的应用程序时，检查电池电量水平。

查看电池电量水平

- 1 在主屏上轻触**应用程序**  > **设置**  > **关于平板电脑** > **电量使用情况**。
- 2 电池状态（充电或放电）和电量显示在屏幕的顶层菜单。


监视并控制使用电池的项目

- 1 在主屏上轻触**应用程序**  > **设置**  > **关于平板电脑** > **电量使用情况** > **电量使用情况**。
- 2 屏幕底部显示电池使用时间，还列出了从最大量到最小量使用电池电源的应用程序或服务。


插入 microSD 卡

本设备支持使用容量高达 64 GB 的 microSD 存储卡。多媒体内容可保存在 microSD 卡中。

- 1 在插入或取出 microSD 卡之前，请关闭平板电脑。



- 2 将指甲放入缺口中，然后将 microSD 卡托盘拉出。将 microSD 卡插入插槽，金属触点面朝下。小心地将托盘轻轻推入设备。

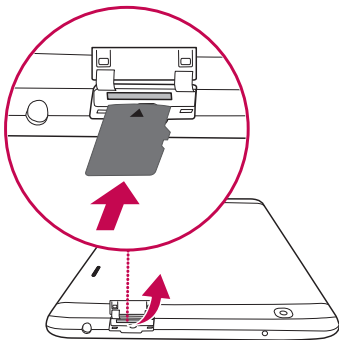

取出 microSD 卡

要安全地从平板电脑中取出 microSD 卡，首先需要卸载此卡。

- 1 在主屏上轻触**应用程序**  > **设置**  > **存储** > **卸载 SD 卡**。
- 2 轻轻地将 microSD 卡从槽中拉出。

警告！ 尚未卸载 microSD 卡之前，请勿取出该卡。否则，可能损坏 microSD 卡以及平板电脑，并且 microSD 卡上存储的数据也可能会损坏。

格式化 microSD 卡

警告！ 格式化 microSD 卡时，将删除卡上存储的所有文件。

- 1 在主屏上轻触**应用程序**  > **设置**  > **存储**。
- 2 轻触**格式化 SD 卡**（两次）。
- 3 如果设置了解锁图案，将其输入并轻触**清除所有内容**。存储卡完成格式化，现在，您可以使用了。

备注：如果 microSD 卡中包含内容，由于格式化后将删除所有文件，因此文件夹结构可能会有所不同。

屏幕锁定和解锁

如果在一段时间内未使用平板电脑，屏幕将自动关闭和锁定。这有助于防止意外点触，节省电池电量。不使用平板电脑时，按**电源/锁定键**  可锁定平板电脑。

如果在您锁定屏幕时有程序正在运行，它们可能在锁定模式下继续运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，网络访问、数据通信）。

要唤醒平板电脑，请按**电源/锁定键** 。“锁定”屏幕将会显示。点触并向任意方向滑动锁定屏幕即可解锁主屏。您最后查看的屏幕将会打开。


主屏

触摸屏提示

以下是关于如何在平板电脑上导航的一些提示。

轻敲唤醒

KnockON 功能允许您双击屏幕，轻松开启或关闭屏幕。

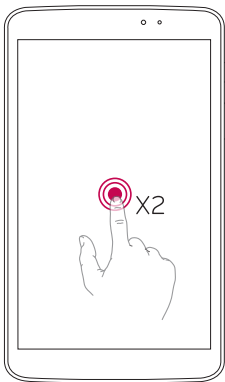

- 快速双击屏幕中心可开启屏幕。
- 快速双击状态栏、主屏幕上的空白区域或锁定屏幕，可关闭屏幕。


备注：

- 可以在“手势”设置中禁用此功能。

从主屏幕轻触应用程序 >  > 设置  > 轻敲唤醒 > 轻触轻敲唤醒复选框。

滑控界面

使用三指滑动，将运行中的应用程序保存到左侧或让其恢复显示。之后要让它们恢复显示，某些应用程序可能会重启。最多可保存三个应用程序。

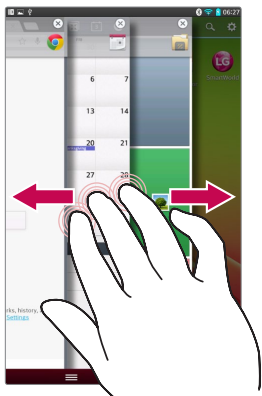

- 1 当应用程序处于打开状态时，将三根手指放在屏幕上，然后向左滑动。此时，当前屏幕会保存，主屏会显示出来。
- 2 要重新打开保存的应用程序，请将三根手指放在屏幕上并向右滑动。轻触要打开的所需应用程序。

提示！ “滑控界面”功能无法识别更多、更少的手指，或者手掌。

轻触或点触

手指轻触一下，选择项目、链接、屏上键盘的快捷方式和字母。

点触并按住

点触并按住项目，方法是点触屏幕上的某个项目，并且在动作发生前不抬起手指。例如，要打开一个联系人的可用选项，请在“联系人”列表中点触并按住联系人，直至打开上下文菜单。

拖动

点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

滑动

滑动的方法是手指点触屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。例如，将屏幕向上或向下滑动可滚动浏览列表，或从左向右滑动浏览不同的主屏（反之亦然）。

轻触两次

轻触两次可放大网页或地图。例如，快速轻触两次网页的局部，以调整局部来适应屏幕的宽度。在使用相机拍照和使用地图时，也可轻触两次以放大和缩小。轻触两次某个字可高亮显示它。轻触两次还可以激活 KnockON 功能来开关触摸屏。

双指缩放

使用浏览器或地图时，或者在浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

旋转屏幕

可通过多个应用程序和菜单将屏幕的方向调整为设备的实际方向。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。 请注意不要触碰到其它键。

主屏

向左或向右轻轻滑动手指以查看面板。 您可以使用应用程序、下载内容、小工具和壁纸，自定义每个面板。

备注：一些屏幕图像可能因地区而不同。

在主屏中，您可以查看屏幕底部的菜单图标。 通过菜单图标，您点触一次即可轻松进入经常使用的功能。



状态栏 - 显示设备状态信息，包括时间、信号强度、电池状态和通知图标。

应用程序图标 - 轻触图标（应用程序、小工具、文件夹等）可打开并使用它。

快速键 - 提供对最常用功能的一触式轻松访问。

菜单键 - 可打开一个“选项”菜单，其中包括可影响当前屏幕或应用程序的选项。仅在在有选项可用时适用，具体取决于屏幕或应用程序。

主屏键 - 返回主屏（或从任何主屏扩展画布返回默认主屏画布）。点触并按住它可显示常用应用程序，并可访问“任务管理器”应用程序。

返回键 - 返回上一屏幕。同时关闭弹出项目，比如菜单、对话框和屏上键盘等。

自定义主屏

您可以通过添加应用程序、下载、小工具或墙纸来自定义主屏。为更方便地使用平板电脑，请在主屏上添加您喜爱的应用程序和小工具。

在主屏上添加项目：

- 1 点触并按住主屏的空白部分。
- 2 轻触**应用程序**、**窗口小部件**或**壁纸**选项卡。
- 3 将所需项目拖至所需位置，然后抬起手指。

从主屏中移除项目：

点触并按住要删除的图标，将其拖至 ，然后抬起手指。

提示！ 要将应用程序图标从“应用程序”屏幕添加到主屏，请点触并按住要添加的应用程序，然后将其拖至所需位置。

提示！ 可以将几个应用程序图标添加到一个文件夹中。在主屏上将一个应用程序图标放至另一个应用程序图标上，将会创建一个文件夹。

返回到最近使用的应用程序

- 1 点触并按住**主屏键** 。屏幕将显示一个弹出窗口，其中包含您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回键**  以返回上一个屏幕。

通知

通知可提醒您接收到新信息、日历事件和闹钟，以及事件进度，如视频下载。

可以从通知面板查看平板电脑的当前状态和未读通知。

当收到通知时，屏幕顶部将出现其图标。未读通知的图标显示在左侧，WLAN 强度或电池电量等系统图标显示在右侧。


备注：可用选项可能因地区或服务提供商而异。



向下滑动可看到通知和设置

从状态栏向下滑动可打开通知面板。要关闭通知面板，请向上滑动屏幕底部的那一栏。

备注：从快速设置点触并按住图标可查看相关功能的设置菜单。

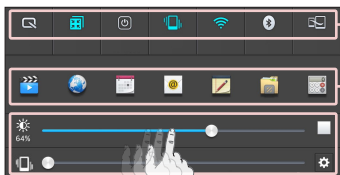

快速设置栏 - 向右或向左轻弹可滚动浏览该列表。

Quick 多任务应用程序 - 轻触可激活 QSlide 功能。

向左和向右滑动可调节屏幕**亮度/音量**。

通知面板上的快速设置

使用快速设置可轻松切换功能设置，例如 WLAN。快速设置位于通知面板的顶部。

重新设定通知面板上的快速设置项目

打开通知面板并点触 。然后可以查看并重新设定快速设置菜单上的所需项目。

通知面板上的 QSlide 应用程序

QSlide 应用程序显示在快速设置栏下通知面板上的一栏中。使用这些图标可方便快速地在同一屏幕上进行多任务操作（类似于电视上的画中画）。QSlide 会在屏幕上显示一个小应用程序窗口，该窗口可以移动、调整大小或变透明。

使用 QSlide 应用程序

轻触栏中的任意 QSlide 应用程序可激活它。激活后，QSlide 功能会在前景中打开该应用程序，以便您能在背景中访问其他应用程序。一次最多可打开两个 QSlide 窗口。

状态栏上的指示器图标

指示器图标显示在屏幕顶部的状态栏上，可报告日历事件、设备状态等。



屏幕顶部显示的图标可提供有关设备状态的信息。下表仅列示了最常见的图标。

图标	说明
	飞行模式
	已连接到 WLAN 网络
	有线耳机
	蓝牙开启
	系统警告
	振动模式
	电池已充满电
	电池正在充电
	DLNA 开启
	正在下载数据
	正在上传数据

图标	说明
	已设置闹钟
	正在播放 SmartShare 音乐
	GPS 正在采集
	正在从 GPS 接收位置数据
	数据正在同步
	新 Gmail
	新环聊信息
	正在播放歌曲
	平板电脑已通过 USB 数据线 与 PC 连接或 USB 绑定 已激活
	省电模式开启
	向旁边滑动开启

备注：图标在状态栏中的位置可能因功能或服务而异。

Plug & Pop

Plug & Pop 使您可以在插入耳机或移动设备（例如鼠标或键盘）时快速选择要使用的应用程序。

- 1 插入耳机或 OTG（移动）设备（例如鼠标、键盘等）。
- 2 将显示应用程序面板，您可以选择要运行的应用程序。

备注：您可以编辑要在面板上显示的应用程序，并设置为不要显示应用程序面板。

► 轻触  >  > 设置  > 系统轻触 > 附件。

抓拍屏幕

同时按住**音量调低键**和**电源/锁定键**约 2 秒可抓拍屏幕。

要查看抓拍的图像，请访问**应用程序**  > **图片库**  > **Screenshots** 文件夹。

提示！ 无法抓拍相机/视频屏幕。

使用快捷备忘录抓拍屏幕

在要抓拍的屏幕上向下拖动状态栏，然后选择快捷备忘录。

或者

同时按住**音量调高/调低键**。

使用 Capture plus 抓拍屏幕

使用此功能可在默认的 Internet 浏览器中抓拍屏幕的一部分。

- 1 联网后，轻触 ，然后轻触 **全页面截图**。
- 2 将蓝色框调整至所需大小，然后轻触**确定**。选定区域将保存到图片库。

屏上键盘

您可以使用屏上键盘输入文本。在您需要输入文本时，屏上键盘会自动显示在屏幕上。要手动显示键盘，只需点触要输入文本的文本字段。

使用键盘并输入文本

-  轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。
-  轻触以切换为数字和符号键盘。
-  轻触以使用声音输入功能。您也可以点触并按住此图标以选择手写和设置菜单。
-  轻触以输入空格。
-  轻触以在信息字段新建一行。
-  轻触以删除上一字符。

输入带注音的字母

使用屏上键盘可输入特殊字符（如，“a”）。

例如，点触并按住所需键（例如“a”键）。当所需字符出现后，将手指滑到其上面然后抬起可输入该字符。

Google 帐户设置

首次打开平板电脑时，您有机会激活网络，登录 Google 帐户，并选择要如何使用某些 Google 服务。

设置您的 Google 帐户

- 从提示的设置屏幕登录 Google 帐户。

或者

- 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **设置**  > **帐户与同步** > **添加帐户** > **Google**。

如果您具有 Google 帐户，请点触**现有**，输入您的电子邮件地址和密码，然后点触 。否则，请点触**新建**并输入所需信息来创建新 Google 帐户。在平板电脑上设置了 Google 帐户后，平板电脑将自动与网络上的 Google 帐户同步。

您的联系人、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的平板电脑同步。（这将取决于您的同步设置。）

登录后，可在平板电脑上使用 Gmail™ 收发邮件和利用 Google 服务。

连接到网络和设备

WLAN

使用 WLAN，您可在无线接入点 (AP) 覆盖区内高速访问互联网。使用 WLAN 尽情享受无线互联网，而且无需额外付费。

连接 WLAN 网络

要在平板电脑上使用 WLAN，需要访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安全功能，因此您必须配置平板电脑才能进行连接。禁用不使用的 WLAN，以延长电池使用寿命。

打开 WLAN 并连接 WLAN 网络

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **设置**  > “无线网络”中的 **WLAN**。
- 2 轻触  将其打开，开始扫描可用的 WLAN 网络。
- 3 轻触**搜索**以查看范围内的有效 WLAN 网络列表。
 - 锁图标表示受到安全保护的网络。
- 4 点触某个网络进行连接。
 - 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息）
- 5 状态栏显示了可指明 WLAN 状态的图标。

蓝牙

与大多数手机不同，您可以通过运行对应的应用程序而不是通过蓝牙菜单，来使用蓝牙发送数据。

备注：

- LG 对经蓝牙无线功能发送或接收的数据的丢失、拦截或误用不承担任何责任。
- 随时确保您与之共享和接收数据的设备可靠且安全。如果设备间存在障碍物，则需要缩短操作距离。
- 某些未经 Bluetooth SIG 测试或认可的设备可能与您的设备不兼容。

打开蓝牙，将平板电脑与蓝牙设备配对

您必须将您的设备与另一设备配对方可与其连接。

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **设置**  > “无线网络”中的**蓝牙**。
 - 2 轻触  将蓝牙打开。您将看见将您的平板电脑设置为可见的选项。然后轻触**搜索设备**以查看范围内的设备。
 - 3 从列表中选择您要配对的设备。
- 一旦配对成功，您的设备将连接到该设备。

备注：您的平板电脑不支持免提情景模式。因此，本设备无法通过蓝牙耳机或启用了蓝牙的设备等附件使用呼叫功能。

使用蓝牙无线功能发送数据

- 1 打开项目，然后轻触 。
或者
点触并按住项目，然后选择**分享**。
- 2 轻触**蓝牙**以通过蓝牙共享。

备注：选择选项的方法可能会因数据类型的不同而有所变化。

- 3 搜索并配对已启用蓝牙的设备。

使用蓝牙无线功能接收数据

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **设置**  > **蓝牙**。
- 2 轻触  打开蓝牙，勾选屏幕顶部的复选框，以在其他设备上可见。

备注：要选择您的设备可见的时间长度，请轻触**菜单键**  > **可见超时**。

- 3 将设备配对，并在收到蓝牙授权请求以接受文件时轻触**接受**。

SmartShare

您可以在图片库、音乐、视频以及 Polaris Office 上体验 SmartShare 功能。

从平板电脑发送内容至其他设备

- 1 在希望播放或放送的内容上，轻触 。
- 2 在对话框中轻触**播放**或 **Beam**。
 - **播放**：可以通过 TV、蓝牙扬声器等播放内容。
 - **Beam**：可以将您的内容发送至蓝牙设备或支持 SmartShare Beam* 功能的 LG 手机或平板电脑。


*SmartShare 通过 WLAN Direct 快速传输多媒体内容。

- 3 轻触设备以在列表上播放或接收。
 - 如果设备不在列表上，请确保设备的 WLAN、WLAN Direct 或蓝牙连接已开启。并轻触**重新扫描**。
- 4 轻触**发送**。

体验附近设备（如计算机或您平板电脑上的移动设备）的内容

1 要将附近设备连接至平板电脑，请轻触附近设备。

<图片库>

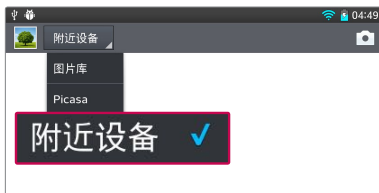

- 请确保您的平板电脑和附近设备连接到相同的 WLAN 网络。
- 请确保附近设备上的 DLNA 功能已开启。

2 轻触设备进行连接。

如果列表中没有该设备，请轻触**搜索附近设备**。

连接后，可以在平板电脑上体验附近设备上的内容。

使用 USB 数据线的 PC 连接

了解在 USB 连接模式下，如何使用 USB 数据线将您的设备与 PC 相连。

使用 USB 大容量存储模式传输音乐、照片和视频

1 使用 USB 数据线将平板电脑连接到 PC。

2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**系统设置 > PC 连接 > 选择 USB 连接方法**，然后选择**媒体同步 (MTP)**。

3 现在，您可以在 PC 中查看大容量存储内容，然后传输文件。

与 Windows Media Player 同步

确保 Windows Media Player 已安装在您的 PC 上。

- 1 使用 USB 数据线将平板电脑连接到安装有 Windows Media Player 的 PC。
- 2 选择**媒体同步 (MTP)** 选项。连接后，PC 上显示弹出窗口。
- 3 打开 Windows Media Player 以同步音乐文件。
- 4 在弹出窗口中编辑或输入设备的名称（如有必要）。
- 5 选中并拖动所需音乐文件至同步列表。
- 6 开始同步。
 - 要与 Windows Media Player 同步，必须满足以下要求。

项目	要求
操作系统	Microsoft Windows XP SP2、Vista 或更高
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如果 Windows Media Player 版本低于第 10 版，请安装第 10 版或更高版本。

联系人

您可以在平板电脑上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

搜索联系人

- 1 在主屏上轻触**联系人**  以打开联系人。
- 2 轻触**搜索联系人**框，然后使用键盘输入联系人姓名。还可以轻触屏幕右侧的一个字母，以访问以所选字母开头的姓名。

添加新联系人

- 1 在主屏上轻触**联系人** .
- 2 轻触 。选择所需帐户（如适用）。
- 3 如果您要为新联系人添加图片，请点触 。从**拍照**选择使用相机拍照或从**图片库中进行选择**。然后浏览到一张图片并选择它。
- 4 轻触  以输入更具体的姓名信息。
- 5 输入关于您联系人的详细信息。
- 6 轻触**保存**以保存联系人条目。

常用电话本

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 在主屏上轻触**联系人**  以打开联系人。
- 2 轻触联系人以查看其详细信息。
- 3 轻触联系人姓名右侧的星号 。星号变为金色，表示联系人已添加到收藏夹。

从收藏夹列表中删除联系人

- 1 在主屏上轻触**联系人**  以打开联系人。
- 2 轻触**收藏**选项卡以查看您的常用联系人。
- 3 轻触联系人以查看其详细信息。
- 4 轻触联系人姓名右侧的金色星号。星号变为灰色，联系人已从收藏夹中删除。

创建群组

- 1 在主屏上轻触**联系人**  以打开联系人。
- 2 点触**群组**选项卡，然后 。
- 3 点触**保存**以保存群组。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。

电子邮件

您可以使用电子邮件应用程序阅读 Gmail 等服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。

您的服务提供商或系统管理员可提供您需要的帐户设置。

管理电子邮件帐户

首次打开电子邮件应用程序时，将打开一个设置向导，帮助您设置电子邮件帐户。

在初始设置后，电子邮件显示收件箱的内容。如果添加了多个帐户，您可以在帐户之间切换。

添加另一个电子邮件帐户：

- 打开**电子邮件**应用程序，然后轻触**菜单键**  > **设置** > 。

更改电子邮件帐户设置：

打开**电子邮件**应用程序，然后轻触**菜单键**  > **设置** > **常规设置**。

删除电子邮件帐户：

- 打开**电子邮件**应用程序，然后轻触**菜单键**  > **设置** > 轻触**菜单键**  > **删除帐户** > 点触要删除的帐户 > **删除** > 选择**是**。

使用帐户文件夹

打开**电子邮件**应用程序，然后轻触**菜单键**  并选择**文件夹**。每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

撰写和发送电子邮件

要撰写和发送邮件：

- 1 在电子邮件应用程序中，轻触**写邮件** 。
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址将从您的联系人中建议。用分号分隔多个地址。
- 3 如果需要，轻触**菜单键**  添加抄送/密送，然后轻触**附加**  附加文件。
- 4 输入主题和邮件
- 5 轻触**发送**  发送邮件。
如果未连接到网络，例如如果在飞行模式下工作，发送的邮件将存储到“发件箱”文件夹中，直到重新连接到网络。如果发件箱包括任何未发送的邮件，发件箱就会显示在帐户屏幕上。

提示！ 当新电子邮件到达“收件箱”时，您将通过声音或振动收到通知。轻触电子邮件通知可停止接收通知。

照相机

要打开相机应用程序，请轻触主屏上的照相机 。

了解取景器



- ❶ **切换相机** - 在后置相机镜头与前置相机镜头之间切换。
- ❷ **拍摄模式** - 定义拍摄方式。
- ❸ **设置** - 点触此图标可以打开“设置”菜单。请参阅下一页上的**使用高级设置**。
- ❹ **视频模式** - 轻触（或滑动）可在相机模式和视频模式之间切换。
- ❺ **拍照**
- ❻ **图片库** - 点触以查看最近拍摄的照片。在相机模式下，使用它可访问图片库并查看保存的照片。

备注：拍照前，请确保相机镜头清洁干净。

使用高级设置

从取景器中轻触  以打开高级选项。通过滚动浏览列表，您可以更改相机设置。选择该选项后，轻触**返回键** 。

	通过语音指令拍照。
	定义并控制进入照片的光量。
	对焦特定点。
	选择照片分辨率。如果您选择高分辨率，文件大小会增大，这意味着内存中可存放的照片数量会减少。
	ISO 评级决定相机的光传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。
	提高不同光照条件下的颜色质量。
	对图片应用艺术效果。
	设置按下拍摄按钮后的延迟。如果要为自己拍摄照片，此功能是理想之选。
	激活以使用平板电脑基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。 备注： 此功能仅在激活了 GPS 时可用。
	选择快门声音。
	将音量键设置为是否用于拍摄或变焦。

	设置照片的存储位置。从内存和 SD 卡中选择。
	打开帮助指南以了解某功能的操作方式。
	恢复所有相机默认设置。

提示！

- 退出相机时，部分设置将返回默认值，如白平衡、色彩效果、计时器和场景模式。拍摄下一张照片之前，请先查看这些设置。
- 设置菜单层叠在取景器之上。因此，当您更改照片颜色或质量元素时，您将在“设置”菜单下预览到图像更改效果。

快速拍照

- 1 打开**照相机**应用程序。
- 2 水平拿稳平板电脑，将镜头对准您要拍摄的物体。
- 3 对焦框将显示在取景器屏幕的中间。您还可轻触屏幕上的任何位置以对焦特定点。
- 4 对焦框变绿时，表示相机已对焦好。
- 5 点触  以拍照。

拍照后

点触  以查看拍摄的上一张照片。

	点触以使用 SmartShare 功能共享照片。
	点触可以立即拍摄其它照片。
	点触即可发送照片给他人或通过社交网络服务共享照片。
	点触以删除照片。

提示！ 如果您拥有一个社交网络帐户并在平板电脑上设置了该帐户，您可以将您的照片共享到社交网络社区。

点触菜单键  以打开所有高级选项。

将图像设置为 - 点触以将照片用作**联系人照片**、**主屏墙纸**或**锁定屏幕墙纸**。

移动 - 点触以将照片移至其他位置。

复制 - 点触以复制所选照片并将其保存在另一个相册。

复制至剪切任务栏 - 轻触以复制并将照片保存在剪切任务栏。

重命名 - 点触以编辑选定照片的名称。

向左或向右旋转 - 向左旋转或向右旋转。

裁切 - 裁切照片。使用手指移过屏幕以选定待剪裁的区域。

编辑 - 查看和编辑照片。

	对照片应用亮度效果。
	对照片应用艺术效果。
	对照片应用色彩效果。
	将更多选项应用到您的照片中。

幻灯片 - 自动逐张显示当前文件夹中的图像。

添加位置 - 添加位置信息。

详细信息 - 查找有关此内容的更多信息。


查看保存的照片

您可以在相机模式下访问保存的照片。只需在屏幕底部轻触图像预览，然后就会显示图片库。

- 要查看更多照片，请向左或向右滚动。
- 要放大或缩小，请轻触两次屏幕或将两个手指放在屏幕上，然后分开（使两根手指靠近可将其缩小）。

摄像机

了解取景器

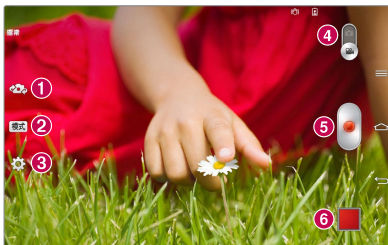

- 1 切换相机** - 在后置相机镜头与前置相机镜头之间切换。
- 2 模式** - 定义拍摄方式。
- 3 设置** - 点触此图标可以打开“设置”菜单。请参阅下一页上的**使用高级设置**。
- 4 相机模式** - 点触并向上滑动此图标以切换到相机模式。
- 5 录制** - 点触以开始录制视频。
- 6 图片库** - 点触以查看最近录制的视频。在视频模式下，使用它可访问图片库并查看保存的视频。

提示！ 录制视频时，将两根手指放在屏幕上并缩放手指，即可使用缩放功能。

备注： 录制视频或音频剪辑时，确保麦克风未堵塞。

使用高级设置

从取景器中点触  以打开所有高级选项。

	轻触以设置正在录制的视频的大小（以像素为单位）。
	定义并控制进入视频的光量。
	录制视频时防止抖动以实现高视频质量。
	提高不同光照条件下的颜色质量。
	选择用于新视图的色调。
	激活以使用平板电脑基于位置的服务。
	将音量键设为是否用于录制或变焦。
	设置照片的存储位置。从内存和 SD 卡中选择。
	打开帮助指南以了解某功能的操作方式。
	恢复所有相机默认设置。

快速录制视频

- 1 打开**照相机**应用程序并点触**视频模式**图标。
- 2 屏幕上将显示摄像机的取景器。
- 3 拿稳平板电脑，将镜头对准您要摄像的物体。
- 4 点触  一次，开始录制。
- 5 屏幕上会出现显示视频长度的计时器。
- 6 点触屏幕上的  停止录制。

录制视频后

点触  以查看最近拍摄的视频。



点触以使用 **SmartShare** 功能共享视频。



点触立即录制其他视频。



点触即可发送视频给他人或通过社交网络服务共享照片。



点触以删除视频。


观看保存的视频

- 1 在取景器中，点触屏幕底部的图像预览。
- 2 屏幕上将显示您的图片库。
- 3 轻触视频，可自动播放。

实时缩放

实时缩放可以放大或缩小正在播放的视频的某一部分，以使所需的区域变大或变小。

观看视频时，将食指和拇指并拢或张开，即可放大或缩小。

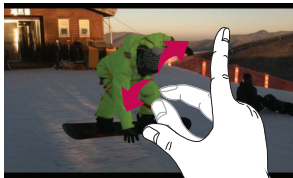

备注：

- 当在视频播放模式下时，上下滑动屏幕可调整屏幕亮度。
- 当在视频播放模式下时，左右滑动屏幕可回放或快进。

备注：无需大力按，触摸屏非常敏感，仅需点触即可。

观看视频时调节音量

要在播放视频时调节音量，请使用平板电脑右侧的音量键。

多媒体

图片库

您可以将多媒体文件保存在内存中，以便轻松访问所有多媒体文件。使用此应用程序查看图片和视频等多媒体文件。

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **图片库** 。
可以使用图片库管理和共享所有图片和视频文件。

备注：

- 某些文件格式不受支持，具体取决于设备已安装的软件。
- 某些文件可能无法正常播放，具体取决于它们的编码方式。

查看图片

启动图片库后，会显示可用的文件夹。当另一个应用程序（如电子邮件）保存一张图片时，会自动创建下载文件夹以包含该图片。同样，抓拍屏幕后，会自动创建抓拍图片文件夹。轻触一个文件夹将其打开。

图片按创建日期显示在文件夹中。选择一张要全屏查看的图像。向左或向右滚动以查看下一张或上一张图像。

放大和缩小

使用以下一种方法放大图像：

- 在任何位置轻触两下以放大。再次轻触两次以返回至全屏视图。
- 在任何位置划开两根手指可放大。捏拢手指可缩小。

播放视频

视频文件在预览时显示  图标。选择视频，然后轻触  进行播放。

查看照片和视频选项

查看照片或观看视频时，轻触**菜单键** ，并使用高级编辑选项。

删除图像和视频

使用以下一种方法：

- 在文件夹中，轻触  并选择要删除的照片和视频，然后轻触**删除**。
- 浏览照片或观看视频时，轻触 。

设置为墙纸

当查看照片时，点触**菜单键**  > **将图像设置为**并选择**联系人照片**、**主屏墙纸**或**锁定屏幕墙纸**。

备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

视频

您的平板电脑拥有视频播放器，可让您播放所有喜爱的视频。要访问视频播放器，请在主屏上轻触**应用程序**  > **应用程序选项卡** > **视频** 。

播放视频

- 在主屏上轻触**应用程序**  > **应用程序选项卡** > **视频** .
- 选择您要播放的视频。

	点触可以暂停播放视频。
	点触可以继续播放视频。
	点触可以前进 10 秒。
	点触可以后退 10 秒。
	点触可以管理视频音量。
	点触可以更改视频屏幕的比率。
	点触可以访问 QSlide 并在小窗口中显示视频。
	点触可以使用 SmartShare 功能共享视频。
	点触可以锁定窗口。

要在观看视频时调节音量，请按下平板电脑右侧的音量键。

点触并按住列表中的视频可访问以下选项：

分享、删除、剪辑和详细信息。

音乐

平板电脑中有音乐播放器，您可以播放所有喜爱的曲目。要访问音乐播放器，请在主屏上轻触**应用程序**  > **应用程序**选项卡 > **音乐** 。

将音乐文件添加至平板电脑

首先将音乐文件传输至平板电脑：

- 使用媒体同步 (MTP) 传输音乐。
- 从无线 Web 下载。

- 将平板电脑与电脑同步。
- 通过蓝牙接收文件。

使用媒体同步 (MTP) 传输音乐

- 1 使用 USB 数据线将平板电脑连接到 PC。
- 2 选择**媒体同步 (MTP)** 选项。您的平板电脑将出现在电脑的另一个硬盘驱动器上。单击该驱动器进行查看。将 PC 中的文件复制到驱动器文件夹。
- 3 完成文件传输后，将状态栏向下滑动并点触 **USB 已连接 > 为平板电脑充电**。现在，您可以安全地拔下设备。

播放歌曲

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **音乐** .
- 2 点触**歌曲**选项卡。
- 3 选择您要播放的歌曲。

	点触以通过 YouTube 查找文件
	点触以使用 SmartShare 功能共享音乐。
	点触以设置随机播放模式
	点触以设置重复模式
	点触以管理音乐的音量
	点触可暂停播放
	点触可恢复播放

	点触可跳至唱片或播放列表中的下一个曲目
	点触以返回到歌曲的开头。点触两次以返回到上一首歌曲
	点触以将当前歌曲放入收藏夹
	点触可查看当前播放列表
	点触以设置音频效果。

要在听音乐时调节音量，请按下平板电脑右侧的音量键。

点触并按住列表中的任何歌曲可访问以下选项：

播放、添加到播放列表、分享、删除、详细信息和搜索。

备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

备注：音乐文件的版权可能受国际条约和国家版权法保护。

因此，可能需要获得许可或许可证才能复制音乐。

在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。

QPair

通过 QPair 连接平板电脑和手机后，可以同步两者之间的来电、消息和 SNS 提示。



- 1 先在平板电脑上运行 QPair 并轻触**初始设置** > **启动**，然后在手机上运行相同的步骤。

提示！ 手机上可能不会预装 QPair。访问 Google Play Store 并搜索 Qpair，然后安装。

备注：QPair 适用于运行 Android 4.1 或更高系统的手机。根据手机型号，某些功能可能受限。

- 2 蓝牙连接将自动打开。

QPair 功能

呼叫提醒 - 当手机来电时，向平板电脑发送通知。该通知会显示呼叫方的号码，并允许您拒绝通话。

信息提醒 - 当手机收到信息时，向平板电脑发送通知。

SNS 通知 - 当 SNS 通知到达您的手机时，将在您的平板电脑的状态栏进行显示。

备注：要启用此功能，请首先在您的手机上打开**设置 > 辅助工具 >**

QPair SNS 通知。此选项使您能够在您的平板电脑上收到到达您的手机的 SNS 通知。


发送快捷备忘录 - 将当前的快捷备忘录保存在平板电脑的图片库中，然后将此图片库与手机上的图片库同步。

通过手机连接 Internet - 通过手机自动将平板电脑连接到 Internet（作为 WLAN 热点）。使用此功能可能会产生数据费用。为保存手机上的数据使用情况，手机会自动连接到范围内任何可信的 WLAN 热点。

近期的应用程序贴纸 - 打开屏幕时显示您近期在手机上使用过的应用程序贴纸。它使您能够在平板电脑上使用相同的应用程序。您也可以在您的手机上查看您在平板电脑上使用过的应用程序贴纸。

QSlide

使用 QSlide 功能可在平板电脑的显示屏上显示一个叠加窗口，以便轻松进行多任务操作。可以从通知面板上的 QSlide 应用程序栏，或直接从支持 QSlide 功能的应用程序打开 QSlide 窗口。

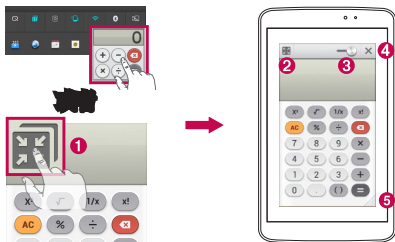

1		轻触以运行 QSlide。
2		轻触以退出 QSlide 并返回全屏模式。
3		轻触以调整透明度。
4		轻触以结束 QSlide。
5		轻触以调整大小。

备注：QSlide 功能可同时支持两个窗口。QSlide 仅适用于视频、Internet、备忘录、日历、计算器、电子邮件、文件管理等应用程序。

- 1 打开通知面板，然后从 **Quick 多任务应用程序** 部分轻触所需的应用程序。


或者

在使用支持 QSlide 的应用程序时，轻触 。该功能将在屏幕上持续显示为小窗口。


- 2 滑动 以调节透明度。然后拖动 QSlide 标题栏，将其移至屏幕上的另一个位置。

快捷备忘录


使用**快捷备忘录**功能可创建备忘录和抓拍屏幕。捕捉屏幕，在上面画图，并使用快捷备忘录与亲朋好友分享。

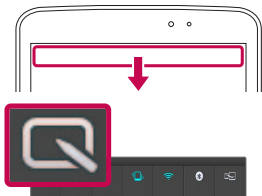

- 1 访问快捷备忘录功能，向下滑动状态栏，然后轻触 。

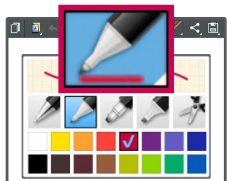

- 2 从**笔型**、**颜色**和**橡皮擦**中选择所需的菜单选项。然后创建备忘录。

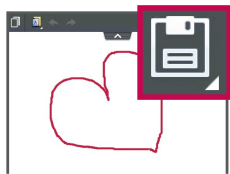

- 3 在编辑菜单中轻触 ，然后选择  以保存该备忘录。要随时退出快捷备忘录，请轻触**返回键** 。

备注：使用**快捷备忘录**时请使用指尖。不要使用指甲。

使用快捷备忘录选项

使用快捷备忘录时，您可轻松使用 QuickMenu 选项。

	点触以在屏幕上保留当前备忘录，同时使用平板电脑。
	选择是否使用背景屏幕。
	用于撤销或重做之前的操作。
	选择笔型和颜色。
	擦除您创建的备忘录。
	点触即可发送备忘录给他人或通过社交网络服务共享备忘录。
	在 笔记本 或 图片库 中保存备忘录。

查看保存的快捷备忘录

在主屏上轻触**应用程序**  > **图片库**  并选择**快捷备忘录**相册。

Quick 遥控

Quick 遥控将您的平板电脑变成家庭电视、DVD 或蓝光的万能遥控器。

备注：Quick 遥控可能不适用于某些设备和区域。

打开 Quick 遥控应用程序并设置 Quick 遥控

- 1 在主屏上轻触应用程序  > Quick 遥控 。
- 2 点触  起居室，以选择房间类型，然后点触  以添加设备。



- 3 选择设备类型和品牌，再按照屏幕上的说明配置设备。

备注：Quick 遥控的工作方式与您所在地区或国家的普通红外 (IR) 遥控器相同。当使用 Quick 遥控功能时，注意不要遮盖平板电脑顶部的红外传感器。某些型号、制造商或服务公司可能不支持此功能。

使用 Quick 遥控

- 1 在主屏上轻触**应用程序**  > **Quick 遥控**  以打开 Quick 遥控栏，其中显示所有已设置的遥控。
- 2 在 Quick 遥控栏的顶部轻触所需遥控的类型/名称，将其选中。
- 3 轻触所显示遥控上的按钮。

备注：当添加电视遥控时，Quick 遥控可能使用输入按钮配置相应的遥控。当配置输入按钮时，电视的输入源可能更改。要重置电视的输入源，请轻触 Quick 遥控上的输入按钮几次（取决于电视上连接的设备数）。

Quick 遥控选项


要访问 Quick 遥控选项菜单，请轻触**菜单键** （在前触摸键栏中）以选择所需选项。

备注：当背景中在播放音乐时，按下任意 Quick 遥控按钮将短暂静音。

Quick 翻译

只需将智能平板电脑的相机对准您要理解的外语句子。您可以随时随地获得实时翻译。

您可以从 Google Play Store 购买更多字典以用于脱机翻译。

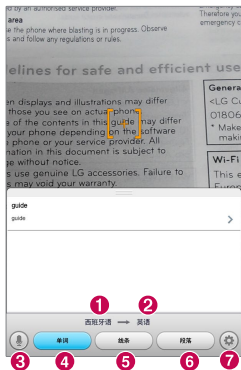

- ❶ 母语
- ❷ 目标语言
- ❸ 切换至语音模式。
- ❹ 字词翻译
- ❺ 翻译句子
- ❻ 字块翻译
- ❼ 设置源语音和目标语言。

- 1 点触  > 应用程序选项卡 > Quick 翻译 。
- 2 点触单词、线条或段落。
- 3 点触并选择所需语言。
- 4 拿稳平板电脑，对准要翻译的对象几秒钟。

备注：仅免费提供一个字典。必须购买附加字典。请从下列列表中选择要作为免费字典安装的字典。

备注：识别率可能有所差别，具体取决于需要翻译的字幕的大小、字体、颜色、亮度和角度。

多个用户

您可以将新用户添加至平板电脑，以允许他们配置他们自己的平板电脑设置，使用他们自己的存储空间并拥有他们自己的应用程序更新权限。

备注:

- 仅当以所有者用户的身份登录时，才能添加新用户。
- 每个用户都可以配置和使用他们自己的内容或数据。但是，他们不能更改其他用户的设置（例如，主屏设置、声音设置等）。
- 用户与其他用户共享电池、内存和数据使用情况。
- 只有平板电脑所有者能够使用与 SD 卡相关的菜单。
- 一个用户设置的语言设置将应用于所有其他用户。
- 无论是哪个用户设置了闹钟，闹钟都不会响起。
- 诸如消息或日历时间表之类的事件只向相关用户通知。
- 用户使用“手机打印”开始打印文档之后，打印作业将会继续，即使切换了用户也是如此。
- 一旦切换用户，数据传输或下载、多媒体播放和通信服务都会停止。

在平板电脑上添加新用户

- 1 在主屏上，轻触**应用程序 > 设置 > 用户 > 添加用户**
- 2 设置向导将会打开以帮助您进行设置。启动设置向导
 - 当您以新用户的身分第一次登录平板电脑时，应该按照“设置向导”的提示操作。
- 3 现在，您可以在登录平板电脑时选择用户名。

闹钟

设置闹钟

- 1 在主屏上轻触**应用程序**  > 应用程序选项卡 > **闹钟/时钟**  > 。
- 2 设置所需的闹钟时间。
- 3 设置**重复、再响间隔、振动、铃声、闹钟音量、自动应用程序启动器、拼图锁和备忘录**。
- 4 点触**保存**。

备注：要更改闹钟列表屏幕上的闹钟设置，请点触**菜单键** ，然后选择**设置**。

计算器

使用计算器

- 1 在主屏上轻触**应用程序**  > 应用程序选项卡 > **计算器** 。
- 2 点触数字键输入数字。
- 3 对于简单计算，请点触要执行的功能（、、 或 ），然后点触 。

备注：

- 对于更复杂的计算，请点触**菜单键** ，选择**科学计算器**，然后选择所需功能。
- 要查看计算历史记录，请轻触**菜单键**  > **计算历史记录**。

日历

将事件添加到日程表中

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **日历** 。
- 2 轻触左上按钮以更改日历视图（日、周、月、年、日程）。
- 3 轻触要添加事件的日期，再轻触 。
- 4 点触**活动名称**字段，然后输入事件名称。
- 5 点触**位置**字段，然后输入位置。查看日期并输入事件开始和结束的时间。
- 6 如要为事件添加备注，请点触**说明**字段，然后输入详细信息。
- 7 如果要重复闹钟，请设置**重复**，并必要时设置**提醒**。
- 8 点触**保存**以在日历中保存事件。

文件管理器

使用**文件管理器**应用程序可管理内部/外部存储设备中的文件。

打开文件管理器应用程序

- 在主屏上轻触**应用程序**  > **文件管理器** 。

文件管理器选项

- ：用于运行 QSlide。
- ：用于搜索文件。
- ：用于创建新的文件夹。
- ：用于将文件和文件夹移至另一个文件夹。
- ：允许您复制多个文件。
- ：用于删除文件和文件夹。

轻触菜单键  可访问以下选项。

- **排序方式**：用于按名称、大小、日期和类型排序文件和文件夹。
- **查看方式**：用于将视图模式改为列表或网格。
- **复制**：用于复制文件和文件夹，然后将其粘贴到另一个位置。
- **分享**：用于与他人共享文件和文件夹。
- **压缩**：用于将文件和文件夹压缩为 .zip 文件。
- **显示隐藏文件/隐藏"隐藏文件"**：用于显示隐藏的文件或隐藏文件。
- **退出**：用于退出应用程序。

录音机

使用录音机录制录音机或其他音频文件。

录制声音或语音

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **录音机** .
- 2 点触  开始录音。
- 3 选择  结束录音。
- 4 点触  收听录音。

备注：点触  以访问录音列表。您可以收听保存的录音。可用的录音时间可能会因实际录音时间而异。

发送录音

- 1 录音完成后，您可以点触  以发送音频剪辑。
- 2 从可用的共享方法中做出选择。

任务管理器

您可以使用任务管理器管理应用程序。您可以轻松检查当前运行的应用程序数量和关闭特定应用程序。

任务管理器选项

- 点触**停止**可停止单个应用程序。
- 点触**全部停止**可停止所有当前运行的应用程序。
- 轻触**菜单键**  可访问帮助、排序方式和设置。

POLARIS Office 5

POLARIS Office 是专业的移动办公解决方案，让用户可使用移动设备随时随地方便地查看各种类型的办公文档，如 Word、Excel 和 PowerPoint 文件。

创建新文档

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **POLARIS Office 5** .
- 2 在注册页面上注册您的电子邮件地址。

备注：可以轻触“跳过”忽略注册信息。

- 3 轻触  以打开一个新文档。
- 4 从下拉列表中轻触一个文档类型，然后选择模板。
- 5 使用屏幕顶部的工具和屏上键盘在文档中输入内容。
- 6 完成文档操作后，请轻触 （屏幕的左上角），然后轻触**保存**并输入文件名称。

在设备上查看和编辑文档

现在，您可以在移动设备上轻松查看和编辑各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。

在屏幕顶部轻触 Office 文件选项卡，以搜索平板电脑上的文档。

轻触要查看或编辑的文档。

使用 POLARIS Office 5 查看文档时，对象和布局与原始文档相同。

要编辑文档，请轻触 。

Google+

使用此应用程序可与他人通过 Google 社交网络服务保持联系。

在主屏上轻触**应用程序**  > **应用程序**选项卡 > **Google+** 。

备注：此应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

语音搜索

通过此应用程序可使用语音搜索网页。

1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **语音搜索** 。

2 当**请开始说话**出现在屏幕上时，说一个关键词或词组。从显示的关键词建议中选择一项。

备注：此应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

下载内容

使用此应用程序可查看已下载的文件。

在主屏上轻触**应用程序**  > **应用程序**选项卡 > **下载内容** 。

网络

互联网

使用此应用程序浏览互联网。浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过平板电脑访问。畅行无阻、精彩无限。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

在主屏上轻触**应用程序**  > **应用程序**选项卡 > **互联网** 。

	轻触可返回上一页。
	轻触可前进到当前页之后的下一页。这正好与点触 返回键  的效果相反，按“返回”键将转到上一页。
	轻触可返回主页。
	轻触可添加新选项卡。
	轻触可访问书签。
	轻触可运行 QSlide。
	轻触可关闭当前选项卡。
	轻触可刷新或停止当前页面。

打开网页

- 要打开新网页，请轻触浏览器工具栏上的 。
- 要转至另一个网页，请轻触要查看的页面。

使用语音搜索网络

轻触地址栏，轻触 ，说一个关键词，然后在显示的建议关键词中选择一个。

备注：此功能可能无法使用，具体取决于您所在的地区或您的服务提供商。

书签

要打开带书签的网页，请轻触浏览器工具栏上的 ，然后选择一项。

历史记录

在浏览器工具栏上轻触 ，然后选择**历史记录**选项卡可从最近访问的网页列表中的打开网页。要清除历史记录，请轻触**菜单键**  > **清除所有历史记录**。

使用 QSlide

使用此功能可以在不关闭当前应用程序的情况下访问互联网。

当查看浏览器上的内容时，轻触 。然后可以在平板电脑上浏览其他信息。要全屏查看浏览器，轻触 。

Chrome

使用 Chrome 可搜索信息和浏览网页。

在主屏上轻触**应用程序**  > **应用程序**选项卡 > **Chrome** 。

备注：此应用程序可能无法使用，具体取决于您所在的地区和您的服务提供商。

查看网页

点触网址栏，然后输入网址或搜索标准。

打开网页

- 要转至新页面，请轻触 。
- 要访问另一个网页，请轻触所需网页以选择它。

使用语音搜索网络

点触地址栏，点触 ，说一个关键词，再选择一个显示的关键词建议。

与其他设备同步

使用同一个 Google 帐户登录时，与另一部设备上的 Chrome 同步打开的选项卡和书签。

要查看其他设备上打开的选项卡，请点触**菜单键**  > **其他设备**。必须在所有设备上登录同一个 Google 帐户。选择一个网页以打开它。

添加并查看书签

要添加书签，轻触 。

要打开带书签的网页，请轻触**菜单键**  > **书签**。

设置

访问“设置”菜单

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **设置** 。
或者
在主屏上轻触**菜单键**  > **系统设置**。
- 2 选择设置类别和选项。

无线网络

WLAN

WLAN - 打开 WLAN 以连接到可用的 WLAN 网络。

提示！如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，可能需要在路由器中输入平板电脑的 MAC 地址。

您可以在下列用户界面中找到 MAC 地址：在主屏上轻触**应用程序**  > **设置**  > **WLAN** > **菜单键**  > **高级 WLAN** > **MAC 地址**。

蓝牙

打开或关闭蓝牙无线功能以使用蓝牙。

数据使用情况

显示数据使用情况。

更多...

允许您通过无线连接与其他设备共享文件夹。

飞行模式 - 勾选**飞行模式**以启用。激活飞行模式会禁用所有无线连接。

无线存储器 - 无需 USB 连接，即可在电脑上管理平板电脑中的文件或者从电脑上将文件复制到平板电脑上。请确保平板电脑和电脑连接到同一网络。然后，在电脑浏览器的地址栏中输入平板电脑上显示的网址。

Miracast - 以无线方式将平板电脑屏幕和声音镜像到 Miracast 适配器或电视上。

SmartShare Beam - 打开以通过 SmartShare Beam 接收来自 LG 手机或平板电脑的多媒体内容。

VPN - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

备注：您必须设置锁定屏幕 PIN 或密码才能使用凭据存储。

设备

声音

声音模式 - 选择“声音”，“仅振动”或“静音”。

音量 - 管理通知声音、触摸反馈与系统、音乐、视频、游戏和其他媒体的音量。

振动强度 - 设置通知的振动强度。

通知声音 - 允许您设置默认通知铃声。

触摸声音 - 用于将平板电脑设置为在点触按钮、图标和其他可响应点触的屏上项目时播放提示音。

屏幕锁定提示音 - 用于将平板电脑设置为在锁定和解锁屏幕时播放声音。

触摸时振动 - 用于设置点触平板电脑屏幕时的振动反馈。

显示屏

<主屏>

主题 - 设置设备的屏幕主题。

壁纸 - 设置用于主屏上的壁纸。

屏幕点击效果 - 设置滑动以更改屏幕时的效果。

允许主屏幕循环 - 勾选以将主屏设置为持续滚动，从而在一个方向上滚动到底后，无需朝反方向回滚。

仅为纵向视图 - 勾选以始终纵向显示主屏。

主页备份与还原 - 用于备份和恢复应用程序和小工具配置及主题。

Do you know? - 启用此选项可显示帮助页面 **Do you know?**，以显示额外主屏。

帮助 - 显示有关主屏操作的信息。

<锁定屏幕>

选择屏幕锁定 - 设置屏幕锁定类型以保护平板电脑。打开一组屏幕，它们可指导您绘制屏幕解锁图案。如果在打开平板电脑或唤醒屏幕时已启用图案锁定类型，系统会提示您绘出解锁图案以解锁屏幕。

屏幕点击效果 - 设置屏幕滑动效果选项。

天气动画 - 勾选以根据自动数据更新，显示“天气”中所设置当前位置或主要城市的天气动画。

壁纸 - 设置锁定屏幕壁纸。从**图片库**或**壁纸图库**中进行选择。

快捷方式 - 允许您更改**滑动**锁定屏幕上的快捷方式。

拥有者信息 - 勾选以设置要在锁定屏幕上显示的设备用户的名称。轻触以输入要显示为所有者信息的文本。

仅为纵向视图 - 勾选以始终纵向显示锁定屏幕。

锁定计时器 - 设置屏幕超时后屏幕自动锁定前的时间。

电源按钮立即锁定 - 勾选后，可在按下电源/锁定键后立即锁定屏幕。此设置将覆盖安全锁定计时器设置。

<亮度>

调节屏幕亮度。

<屏幕超时>

设置屏幕超时时间。

<轻敲唤醒>

勾选以启用 KnockON 来开关屏幕。快速双击中心屏幕将打开屏幕。双击状态栏、主屏幕上的空白区域或锁定屏幕将关闭屏幕。为获得最佳效果，请勿在使用 KnockON 功能时移动平板电脑。

<屏幕关闭效果>

设置屏幕关闭效果。

<自动旋转屏幕>

设置为在旋转平板电脑时自动切换方向。

<互动屏保>

轻触互动屏保开关以打开或关闭此功能。如果打开，屏幕将在平板电脑处于睡眠模式（靠接和/或充电）时显示屏保程序。选择时钟、色彩、相框或照片台。

备注：屏幕保护程序正在运行时，充电速度可能会慢一些。

<字体类型>

更改显示字体的类型。

<字体大小>

更改显示字体的大小。

<智能屏幕>

可让屏幕在设备检测到您的双眼看着屏幕时始终保持打开。

<智能视频>

勾选以在未检测到您的双眼看着屏幕时暂停视频。

<系统菜单键>

设置在所有屏幕底部显示的前触摸按钮键。设置要显示的按钮、其在栏中的位置和外观。选择按键和顺序、主题和背景。

<宽高比校正>

用于更改下载的应用程序的宽高比，以解决屏幕变形情况。

<运动传感器校准>

用于提高倾斜精确度和传感器速度。

存储

内部存储器 - 显示设备存储器的总空间大小，并列出了哪些类型的数据占用了空间。

外置 SD 卡 - 显示 microSD 卡上的总内存空间大小。

安装/卸载 SD 卡 - 安装或从平板电脑卸载 microSD 卡，以便能访问其中存储的数据、格式化该卡或安全移除它。如果没有安装 microSD 卡、已卸载它或已在电脑上安装 microSD 卡，则此设置不可用。

格式化 SD 卡 - 永久清除 microSD 卡上的全部内容，并准备好供平板电脑使用。

电量使用情况

电池信息 - 查看设备活动消耗了多少电池电量。电池电量以百分比显示。此外，还会显示剩余使用时间。

电池百分比 - 在状态栏中显示电池百分比。

省电 - 管理电池的省电项目。轻触开关  将此功能打开。轻触**省电**以显示下列选项。

- **自动同步**：关闭自动同步。
- **WLAN**：不使用数据时关闭 WLAN。
- **蓝牙**：如果未连接，则关闭蓝牙。
- **触摸时振动**：关闭点触反馈。
- **亮度**：调节亮度。
- **屏幕超时**：调整屏幕超时。

省电提示 - 点触以访问一些省电提示。

应用程序

显示应用程序列表，比如当前运行或下载的应用程序。

滑控界面

可以使用三指滑动，将运行中的应用程序保存到左侧或让其恢复显示。

个人

帐户与同步

允许应用程序在后台同步数据，无论您当前是否正在使用。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

用户

配置文件名 - 用于设置当前用户的姓名。

昵称 - 用于设置您平板电脑的昵称。

拥有者信息 - 勾选以设置要在锁定屏幕上显示的设备用户的名称。轻触



以输入要显示为所有者信息的文本。

添加用户 - 用于添加新的平板电脑帐户并使用多用户功能。

位置访问

访问我的位置 - 让已要求您权限的应用程序使用您的位置信息。

GPS 卫星 - 让应用程序使用 GPS 卫星确定您的位置并精确到街道级别。

WLAN 与移动网络位置 - 让应用程序可使用 Google 定位服务更快速地确定您的位置。Google 将收集和接收匿名的定位数据。

安全性

加密平板电脑 - 用于加密平板电脑数据以保护安全性。您将需要在每次开机时输入 PIN 或密码来解密平板电脑。

加密 SD 卡存储 - 用于加密 MicroSD 上的数据以保护安全性。

密码键入为可见 - 在您键入密码时，显示隐藏的密码的最后一个字符。

平板电脑管理员 - 查看或停用平板电脑管理员。

未知源 - 将设置默认为安装非 Play Store 应用程序。

验证应用程序 - 安装可能引起危害的应用程序之前进行禁用或警告。

可信凭据 - 显示可信 CA 证书。

从存储器上安装 - 选择并安装已加密的证书。

清除存储 - 删除所有证书。

语言和输入设备

使用语言和输入设置为平板电脑上的文本选择语言以及配置屏上键盘（包括已添加到词典中的文字）。

备份与重置

备份我的数据 - 设为将您的设置和应用程序数据备份至 Google 服务器。

备份帐户 - 设置要将数据备份至的帐户。

自动还原 - 设置为在您的设备上重新安装应用程序时恢复您的设置和应用程序数据。

LG 备份服务 - 备份设备上的所有信息并在出现数据丢失或更换时进行恢复。

重置出厂数据 - 将您的设置重置为出厂默认值，然后删除所有数据。如果以此方式重置平板电脑，首次启动 Android 时，将提示您重新输入相同的信息。

系统

日期和时间

使用**日期和时间**设置可设置日期的显示方式。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

辅助工具

使用**辅助工具**设置可配置您在平板电脑上安装的辅助功能插件。

注意：需要额外的插件才能变成可选。

TalkBack - 用于设置 TalkBack 功能来通过言语反馈协助视觉有障碍的人。轻触屏幕右上角的 **TalkBack** 开关  可将其打开。轻触屏幕底部的**设置**可调整 TalkBack 设置。

安装网站脚本 - 用于启用（或禁用）网站脚本安装。

大号字体 - 勾选以增大文本大小。

反色 - 勾选以反转颜色。

放大手势 - 允许您通过三点轻触屏幕来进行缩放。

阴影 - 将屏幕设置为黑色的阴影。

单声道音频 - 勾选以允许耳机声音同时通过左右声道。

触摸并保持延迟 - 设置触摸并保持延迟（短、中、长）。

辅助触控 - 切换  以在打开和关闭之间切换。通用点触可以替代所有硬件按钮。

自动旋转屏幕 - 勾选以允许设备根据设备方向（纵向或横向）旋转屏幕。

读出密码 - 勾选以便可以语音输入登录密码（而不是键入密码）。

单触输入 - 允许您通过手指单次点触 LG 键盘来输入字母。

轻松访问 - 允许您三次轻触主屏键来设置功能。

文本-语音输出 - 文本到语音输出能有声读出文本（例如文本信息的内容）。

PC 连接

选择 USB 连接方法 - 设置所需模式：**平板电脑充电、媒体同步 (MTP)**、**LG 软件或发送图像 (PTP)**。

连接时询问 - 手机连接到计算机时询问 USB 连接模式。

帮助 - 有关 USB 连接的帮助。

PC Suite - 选中此复选框以在具有 WLAN 连接时使用 LG PC Suite。请注意，应通过 WLAN 连接将 WLAN 网络连接至 LG PC Suite。

On-Screen Phone - 选中此功能以从屏幕手机接收 WLAN 连接请求。

帮助 - 有关 LG 软件的帮助。

附件

Quick Cover - 激活 Quick Cover 以自动打开或关闭。

USB 存储设备 - 设置 USB 存储设备的 Plug & Pop 功能。勾选应用程序面板选项可在连接 OTG（移动）USB 数据线时自动显示应用程序面板。轻触**编辑应用程序面板**以更改要提供的应用程序。

耳机 - 设置耳机的 Plug & Pop 功能。勾选应用程序面板选项以在连接耳机时自动显示应用程序面板。轻触**编辑应用程序面板**以更改要提供的应用程序。

底座 - 设置底座的 Plug & Pop 功能。勾选应用程序面板选项以在连接底座时自动显示应用程序面板。轻触**编辑应用程序面板**以更改要提供的应用程序。

关于平板电脑

查看法律信息，并检查设备状态和软件版本。

关于备份和恢复设备数据

建议您定期在内部存储器上创建和保存备份文件，尤其是在更新任何软件之前。当设备丢失、被盗或因无法预料的问题受损时，在存储卡上保留最新备份文件也许能让您恢复设备数据。

此 LG 备份应用程序支持 LG 智能手机和平板电脑、其他软件或操作系统版本。因此，当购买新的 LG 智能手机和平板电脑后，可以将当前设备的数据备份到新设备中。

如果在智能手机和平板电脑上预加载了备份应用程序，则可以备份和恢复大多数的数据，包括下载的和预安装的应用程序、书签、日历条目、联系人、主屏设置及系统设置。还可以：

- 执行设备的手动 LG 备份。
- 计划设备的自动备份。
- 恢复设备数据。

备注：请注意，备份功能不支持备份用户数据和媒体数据（图片/视频/音乐）。请使用媒体同步 (MTP) 备份这些文件。使用 USB 数据线将平板电脑连接至计算机并点触媒体同步 (MTP)。

警告！要预防在备份或恢复操作中出现因电池电量不足引起的意外关机，您应始终为电池充满电。

LG 备份平板电脑数据

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **LG Backup**  > **备份**。
- 2 选中要备份的复选框，然后选择**下一步**。
- 3 在“备份位置”屏幕上，点触**内部存储器**或**外置 SD 卡**，然后轻触**启动**。
- 4 备份完所有选定文件后，您将看到信息**备份已完成**。

计划自动备份

也可以根据您的计划设置，安排平板电脑数据的自动备份。要执行此操作，请完成下列步骤：

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **LG Backup**  > **计划备份**。
- 2 轻触**备份项目**，然后选中要备份的项目旁的复选框。
- 3 轻触**备份位置**，点触**内部存储器**或**外置 SD 卡**。
- 4 轻触**设置时间**以设置**每周**、**每两周**、**每月**等重复间隔，然后轻触**打开**。
- 5 轻触开关  将此功能打开。

恢复平板电脑数据

备注：在恢复备份文件之前，存储在平板电脑上的所有文件都将被删除。

- 1 在主屏上轻触**应用程序**  > **应用程序**选项卡 > **LG Backup**  > **恢复**。
- 2 在**恢复**屏幕中，选择包含要恢复数据的备份文件。
- 3 选中要恢复的项目旁边的复选框，然后选择**下一步**以将其恢复至平板电脑。

备注：请注意，平板电脑数据将被备份内容覆盖。

- 4 如果备份文件被加密，请键入创建的加密密码。
- 5 恢复完所有选定文件后，平板电脑将会自动重新启动。

备注：可以设置“启用加密”来加密备份文件，以提供额外保护。

在 **LG Backup** 屏幕中点触 ，然后输入密码，如果忘记密码，请输入密码提示。设置密码之后，每次要执行备份/恢复时，都需要输入该密码。

平板电脑软件更新

平板电脑软件更新

使用此功能可方便地从互联网将平板电脑固件更新为最新版本，而无需去到服务中心。有关使用此功能的详细信息，请访问：<http://www.lg.com>。由于移动设备固件更新要求用户在更新过程期间保持全部注意力，因此，请注意每一个步骤中出现的所有说明和提示，然后再继续执行操作。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的平板电脑。

通过空中下载 (OTA) 的 LG 手机软件更新

使用此功能可通过空中下载 (OTA) 方便地将平板电脑的固件更新为最新版本，而无需连接 USB 数据线。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。首先，可以检查平板电脑上的软件版本：

在主屏上轻触**菜单键**  > **系统设置** > **关于平板电脑** > **软件信息**。

要执行平板电脑软件更新，请在主屏上轻触**菜单键**  > **系统设置** > **关于平板电脑** > **更新中心** > **软件更新** > **现在检查更新**。


备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

备注：您的个人数据（包括有关您的 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在设备软件的更新过程中遗失。因此，LG 建议您在更新平板电脑软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

配件

以下配件可与您的平板电脑一起使用。（以下配件为可选配件。）

旅行适配器



数据线



快速入门指南



备注：

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

故障排除

本章列出了您在使用平板电脑过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

消息	可能原因	可行解决措施
无应用程序可供设置	服务提供商不支持或需要注册。	请与服务提供商联系。
充电错误	电池未充电。	为电池充电。
	外部温度太热或太冷。	确保平板电脑在常温下充电。
	触点问题	检查充电器以及与平板电脑的连接。
	无电压	将充电器插入其他插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
无法接收/发送照片	内存已满	从平板电脑中删除一些图像。

消息	可能原因	可行解决措施
文件无法打开	不受支持的文件格式	检查受支持的文件格式。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	尝试通过网站执行软件更新。



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual device.
- Some of the contents of this guide may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

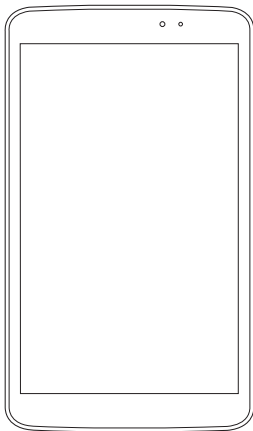


Table of contents

About this user guide	5	Double-tap.....	29
About this user guide	5	Pinch-to-Zoom	30
Trademarks	5	Rotate the screen.....	30
DivX HD	6	Home screen	30
Dolby Digital Plus	6	Customizing the Home screen	32
Guidelines for safe and efficient use.....	7	Returning to recently-used applications	32
Important notice	15	Notifications	33
Getting to know your device	20	Swipe down for notifications & settings.....	33
Tablet Overview.....	20	Quick Settings on Notification Panel	34
Charging your tablet	22	To rearrange Quick Setting items on the Notification Panel.....	34
Optimizing Battery Life	23	QSlide apps on the Notifications panel	34
To extend the life of your battery	23	Using the QSlide apps.....	34
To view the battery charge level.....	24	Indicator icons on the Status Bar	35
To monitor and control what uses the battery.....	24	Plug & Pop	36
Inserting a microSD card.....	24	Capturing a Screenshot.....	37
Removing the microSD card.....	25	Using QuickMemo to capture a screenshot	37
Formatting the microSD card	26	Using Capture plus to capture a screenshot	37
Locking and unlocking the screen.....	26	Entering Text.....	37
Your Home screen	27	Entering accented letters.....	38
Touch Screen tips	27	Google account setup.....	39
KnockON.....	27	Connecting to Networks and Devices	40
Slide aside.....	28	Wi-Fi	40
Tap or touch.....	28		
Touch and hold.....	29		
Drag.....	29		
Swipe or slide.....	29		

Connecting to Wi-Fi networks.....	40	Getting to know the viewfinder.....	50
Turning Wi-Fi on and connecting to a Wi-Fi network.....	40	Using the advanced settings.....	51
Bluetooth	41	Taking a quick photo	52
Turning on Bluetooth and pairing up your tablet with a Bluetooth device.....	41	Once you've taken a photo	53
Send data using the Bluetooth wireless feature.....	42	Viewing your saved photos.....	54
Receive data using the Bluetooth wireless feature.....	42	Video camera	55
SmartShare	43	Getting to know the viewfinder.....	55
To send content from your tablet to other devices.....	43	Using the advanced settings.....	56
To enjoy content from nearby devices such as a computer or mobile device on your tablet.....	43	Recording a quick video	56
PC connections with a USB cable	44	After recording a video	57
Transferring music, photos and videos using the USB mass storage mode	44	Watching your saved videos.....	57
Synchronize with Windows Media Player	44	Live Zooming	57
Contacts	46	Adjusting the volume when viewing a video.....	58
Searching for a contact	46	Multimedia	59
Adding a new contact	46	Gallery	59
Favorite Contacts.....	46	Viewing pictures	59
Creating a group.....	47	Zooming in and out	59
E-mail	48	Playing videos.....	60
Managing an E-mail account.....	48	Viewing photo and video options.....	60
Working with account folders	49	Deleting images and videos.....	60
Composing and sending E-mail	49	Setting as wallpaper	60
Camera	50	Videos	61
		Playing a video	61
		Music	62
		Add music files to your tablet.....	62
		Transfer music using Media sync (MTP)	62
		Playing a song.....	62
		Tools	65
		QPair	65

QSlide	66	PERSONAL	89
QuickMemo	68	SYSTEM	91
QuickRemote	69	LG Backup	94
QuickTranslator	71	About backing up and restoring	
Multiple Users	73	device data	94
Alarm	74	LG Backup your tablet data	95
Calculator	74	Scheduling automatic backups	95
Calendar	75	Restoring tablet data	95
File Manager	75	Tablet software update	97
Voice Recorder	76	Tablet software update	97
Task Manager	77	LG Tablet Software update via	
POLARIS Office 5	77	Over-the-Air (OTA)	97
Google+	78	Accessories	99
Voice Search	79	Troubleshooting	100
Downloads	79		
The Web	80		
Internet	80		
Opening a page	81		
Searching the web by voice	81		
Bookmarks	81		
History	81		
Using QSlide	81		
Chrome	82		
Viewing webpages	82		
Opening a page	82		
Searching the web by voice	82		
Syncing with other devices	82		
Adding and Viewing bookmarks	82		
Settings	83		
Access the Settings menu	83		
WIRELESS NETWORKS	83		
DEVICE	84		

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your device safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your tablet.
- Your content may differ from the final product, or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your device's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This tablet device model LG-V500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this device when worn on the body, as described in this user guide, is 0.720 W/kg.

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 0.00 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 0.00 cm away from your body.

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

WARNING

Only use batteries, chargers and accessories approved for use with this particular device model. The use of any other types may invalidate any approval or warranty applying to the device and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a device near flammable material as the device can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the tablet when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the device next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the tablet.
- Do not expose the device to liquid or moisture.

- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your tablet is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet device, changes the color of the product label inside your device. Damage to your device as a result of exposure to liquid is not covered under your warranty.
- Use your tablet in temperatures between 0°C and 40°C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Efficient device operation

Electronics devices

All tablet device may receive interference, which could affect performance.

- Do not use your tablet device near medical equipment without requesting permission. Avoid placing the tablet over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by tablet device.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of tablet device in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.



To prevent possible hearing damage, do not listen at high volume levels for long periods

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the tablet close to your ear. We also recommend that music volumes are set to a reasonable level.
- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

Glass Parts

Some parts of your tablet device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the tablet where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your tablet at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your tablet device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your tablet off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached. This device also contains an internal battery that can be hazardous if the device is not used or maintained properly.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
Do not leave the device in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the tablet is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

How to update your tablet

Access to latest firmware releases, new software functions and improvements.

- **Update your tablet without a PC. Select Update Center  > Software Update.**
- **Update your tablet by connecting it to your PC.**

For more information about using this function, please visit

<http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp>
select country and language.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-V500** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at **<http://www.lg.com/global/declaration>**

Important notice

Please read this before you start using your tablet!

Please check to see whether any problems you encountered with your tablet are described in this section before taking the tablet in for service or calling a service representative.

1. Tablet Memory

You need to check your tablet memory and delete some data, such as applications to make more memory available.

To uninstall applications:

- 1 Tap  >  > **Apps** tab > **Settings**  > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

2. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your tablet to malfunction. In addition, your tablet will no longer be covered by the warranty.

WARNING

To protect your tablet and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your tablet, the tablet may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the tablet.

3. Using an unlock pattern

Set an unlock pattern to secure your tablet. Tap  >  > **Apps** tab > **Settings**  > **Display** > **Lock screen** > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

Caution: Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.

WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your tablet if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN or Password:

< If you have forgotten your pattern >

If you logged in to your Google account on the tablet but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock. If you have not created a Google account on the tablet or you forgot Backup PIN, you have to perform a hard reset.

< If you have forgotten your PIN or Password >

If you forget your PIN or Password, you will need to perform a hard reset.

Caution: If you perform a hard reset, all user applications and user data will be deleted.

NOTE: If you have not logged into your Google Account and have forgotten your Unlock Pattern, you will need to enter your Backup PIN.

4. Using the Hard Reset (Factory Reset)

If your tablet does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.

- 1 Turn the tablet off.
- 2 Press and hold the **Power/Lock key + Volume Down key** on the right side of the tablet.
- 3 Release only the **Power/Lock Key** when the LG logo is displayed and keep pressing the **Volume Down Key**.
- 4 Immediately press and hold the **Power/Lock Key + Volume Up Key** at the same time while maintaining the **Volume Down Key** pressed.

- 5 Release all keys when the Factory hard reset screen is displayed.
- 6 Press the **Power/Lock Key** to continue or either of the **Volume Keys** to cancel.
- 7 Press the **Power/Lock Key** once more to confirm or either of the **Volume Keys** to cancel.
- 8 Your device will perform a hard reset.



WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

5. Opening and switching applications

Multi-tasking is easy with Android, you can keep more than one application running at the same time. There is no need to quit an application before opening another one.

Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

- 1 Touch and hold the **Home Key** . A list of recently used applications will be displayed.
- 2 Tap the application you want to access. This does not stop the previous app running in the background on the tablet. Make sure to tap **Back Key**  to exit an app after using it.

- To stop applications, tap **Task Manager** from the recent apps list, then tap **Stop** or **Stop all**.
- To remove an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

6. When the screen freezes


If the screen freezes or the tablet does not respond when you try to operate it: Press and hold the **Power/Lock key** for 12 seconds to turn your tablet off. If it still does not work, please contact the service center.

7. Do not connect your tablet when you power on/off your PC

Make sure to disconnect your tablet from the PC when powering your PC on or off as it might result in PC errors.

Getting to know your device

Tablet Overview

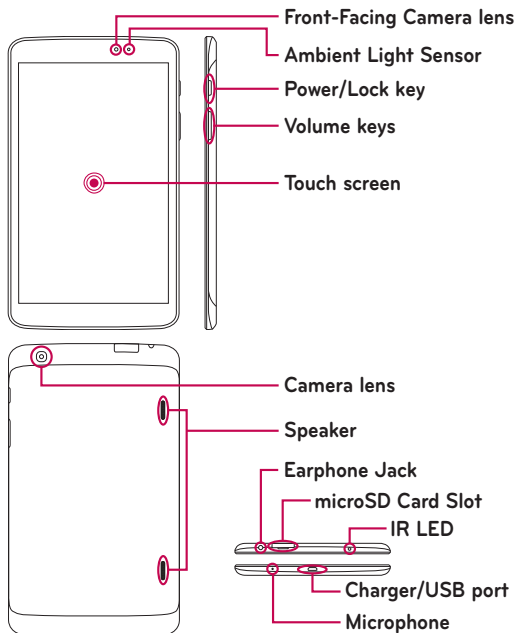

NOTE: Ensure the microphone is not blocked when recording a video or audio clip.

Front-Facing Camera lens	Use to take pictures and record videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance.
microSD Card Slot	Insert microSD Card for storing files such as music, videos and photos.
Earphone Jack	Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
Ambient Light Sensor	Measures the surrounding light and adjusts the LCD brightness to provide a vivid screen.
Power/Lock key	Press to lock/unlock the screen. Press and hold to turn the tablet on/off, restart it, activate/deactivate airplane mode, and change the sound settings.
Volume keys	Allow you to adjust the media volumes.
Charger/USB port	Allows you to connect the tablet and the USB Cable for use with the charger adapter, or other compatible accessories.
Camera lens	Use to take photos and record videos. Keep it clean for optimal performance.
Speaker	Sound comes from the rear speaker instead of the earpiece (e.g., the speakerphone function, music player function, etc.).
Microphone	Record your voice and is used for voice-activated functions.
IR LED	Used as a sensor for the QuickRemote app.

WARNING

Placing a heavy object on the tablet or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

TIP!

- Tap the **Menu Key**  whenever you open an application to check what options are available.
- If the device is locked and does not work, press and hold the **Power/Lock Key**  for 12 seconds to reboot it.


Charging your tablet

A rechargeable Li-ion battery is used to power your tablet. A USB adapter, which is included with your tablet, is used to charge the battery. Before using your tablet for the first time, make sure the battery is fully charged.

NOTE: Your device has an internal rechargeable battery. For your safety, do not remove the battery incorporated in the product.

Warning! If the touch screen does not function while the tablet's in the process of charging, this may be due to an unstable power supply. As a result, disconnect the USB cable from the device or unplug the USB adapter from the power outlet.

- 1 Connect the USB adapter and USB cable.
- 2 Plug the USB cable (as shown below) into the tablet's Charger/USB port.
- 3 Plug the charger into an electrical socket.

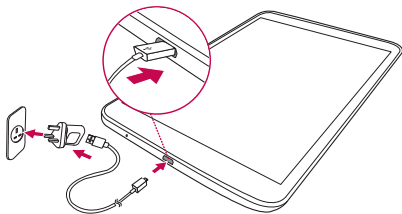

NOTE: The battery must be fully charged initially to improve battery lifetime.

Optimizing Battery Life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.
- Lower screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.

- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charged level.

To view the battery charge level

- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery**.
- 2 The battery status (charging or discharging) and level are displayed on the top menu of the screen.

To monitor and control what uses the battery

- 1 From the Home screen, tap **Apps**  > **Settings**  > **About tablet** > **Battery** > **Battery use**.
- 2 The bottom of the screen displays battery usage time and also lists applications or services using battery power from greatest amount to least.


Inserting a microSD card

Your device supports the use of microSD memory cards of up to 64 GB capacity. Multimedia contents can be saved in the microSD card.

- 1 Turn the tablet off before inserting or removing the microSD card.



- 2 Place your fingernail in the cutout and pull the microSD card tray out. Insert the microSD card into the slot with the contacts facing down. Carefully push the tray gently into the device.

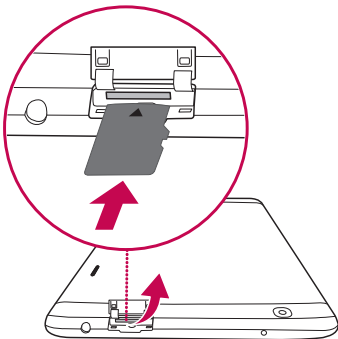

Removing the microSD card

To safely remove the microSD card from your tablet, first you need to unmount it.

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage** > **Unmount SD card**.
- 2 Gently pull the microSD card from the slot.

Warning! Do not remove the microSD card without unmounting it first. Otherwise, it may damage the microSD card as well as your tablet, and the data stored on the microSD card may be corrupted.

Formatting the microSD card

Warning! All files stored on your microSD card are deleted when you format the card.

- 1 From the Home screen, tap **Apps**  > **Settings**  > **Storage**.
- 2 Tap **Erase SD card** (twice).
- 3 If you set an unlock pattern, enter it and tap **Erase everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your microSD card, the folder structure may be different after formatting since all the files will have been deleted.

Locking and unlocking the screen

If you do not use the tablet for a while, the screen will be automatically turned off and locked. This helps to prevent accidental touches and saves battery power. When you are not using the your tablet, press the **Power/Lock Key**  to lock your tablet.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. web access, data communications).

To wake up your tablet, press the **Power/Lock Key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.


Your Home screen

Touch Screen tips

Here are some tips on how to navigate on your tablet.

KnockON

The KnockON feature allows you to double-tap the screen to easily turn the screen on or off.

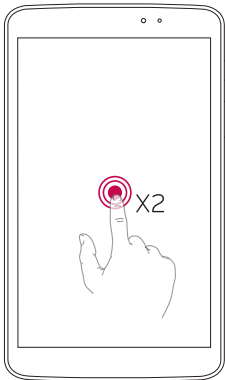


- Quickly double-tap the center of the screen to turn the screen on.
- Quickly double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off.

NOTE:

- You can disable this feature in the **Display settings**.
From the Home screen, tap **Apps**  > **Settings**  > **Display** > **KnockON** > tap the **KnockON** checkbox.

Slide aside

Use three-finger swipe to save running apps to the left or bring them back to the display. To bring them back later, some apps may restart. You can save up to three apps.

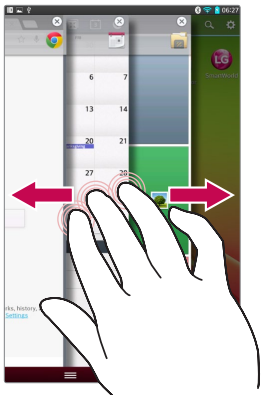

- 1 While an application is open, place three fingers on the screen and slide to the left. The current screen is saved and the Home screen appears.
- 2 To re-open the saved apps, place three fingers on the screen and slide to the right. Tap the desired app you want to open.

Tip! The **Slide Aside** feature does not recognize fewer fingers, additional fingers, or your palm.

Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold

Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap

Double-tap to zoom on a webpage or a map. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out after taking a picture (using the Camera), and when using Maps. Double-tap a word to highlight it. Double-tap can also activate the KnockON feature to turn the touchscreen on or off.

Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.

Rotate the screen

From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

NOTE:

- To select an item, touch the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home screen

Simply swipe your finger to the left or right to view the panels. You can customize each panel with apps, downloads, widgets and wallpapers.

NOTE: Some screen images may be different depending on your region.

On your Home screen, you can view menu icons at the bottom of the screen. Menu icons provide easy, one-touch access to the functions you use the most.



Status bar – Shows device status information, including the time, signal strength, battery status, and notification icons.

Application icons – Tap an icon (application, widget, folder, etc.) to open and use it.

Quick keys – Provide easy, one-touch access to the functions used most often.

Menu key – Opens an Options menu with options that affect the current screen or application. This only applies when available, depending on the screen or application.

Home key – Returns to the Home screen (or returns to your default Home screen canvas from any of the Home screen extension canvases). Touch and hold it to display recently used applications with access to the Task Manager application.

Back key – Returns to the previous screen. Also closes pop-up items such as menus, dialog boxes, and the on-screen keyboard.

Customizing the Home screen

You can customize your Home screen by adding apps, downloads, widgets or wallpapers. For more convenience using your tablet, add your favorite apps and widgets to the Home screen.

To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 Tap the **Apps, Widgets** tab.
- 3 Drag the desired item to the desired location and lift your finger.

To remove an item from the Home screen:

Touch and hold the icon you want to remove, drag it to , and lift your finger.

TIP! To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add and drag it to the desired location.

TIP! You can add several app icons in a folder. Drop one app icon over another one on a Home screen, and a folder will be created.

Returning to recently-used applications

- 1 Touch and hold the **Home Key** . The screen displays a pop-up containing the icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back Key**  to return to your previous screen.

Notifications

Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as video downloads.

From the Notifications Panel, you can view your tablet's current status and pending notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like Wi-Fi or battery strength on the right.

NOTE: The available options may vary depending on the region or service provider.

Pending notifications


System icons like Bluetooth, Wi-Fi & battery status



Swipe down for notifications & settings

Swipe the Status Bar down to open the Notifications Panel. To close the Notifications Panel, swipe the bar that is at the bottom of the screen upwards.

NOTE: Touch and hold an icon from the Quick Settings to view the function's settings menu.

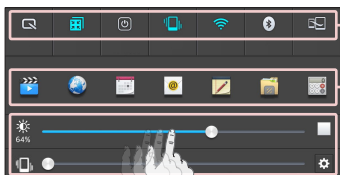

Quick Settings Bar – Flick right or left to scroll through the list.

QSlide Apps Bar – Tap to activate a QSlide feature.

Slide to the left and right to adjust the **Brightness** of the screen / **Volume**.

Quick Settings on Notification Panel

Use Quick Settings to easily toggle function settings like Wi-Fi. The Quick Settings are located at the top of the Notifications Panel.

To rearrange Quick Setting items on the Notification Panel

Open the Notifications Panel and touch . You can then view and rearrange the desired items on the Quick Settings menu.

QSlide apps on the Notifications panel

QSlide apps are displayed in a bar on the Notifications panel below the Quick settings bar. These icons provide a quick, convenient way to multitask on the same screen (similar to picture-in-picture on a TV). QSlide displays a small application window on the screen that can be moved, resized, or made transparent.

Using the QSlide apps

Tap any of the QSlide apps in the bar to activate it. When activated, the QSlide feature opens the application in a window in the foreground, allowing you to access other applications in the background. You can open up to two QSlide windows at a time.

Indicator icons on the Status Bar

Indicator icons appear on the Status Bar at the top of the screen to report calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Bluetooth is on
	System warning
	Vibrate mode
	Battery fully charged
	Battery is charging

Icon	Description
	Alarm is set
	SmartShare music playing
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail
	New Hangouts message
	Song is playing

	DLNA is on		Tablet is connected to PC via USB cable or USB tethering is active
	Downloading data		Power saving mode is on
	Uploading data		Slide aside is on

NOTE: The location of the icons in the Status Bar may differ depending on the features, apps, and services being used.

Plug & Pop

Plug & Pop allows you to quickly choose apps to use when plugging in an earphone or On-the-Go device, such as a mouse or keyboard.

- 1 Plug in earphone or OTG (On-the-Go) device (i.e., mouse, keyboard, etc.).
- 2 The applications panel will display and you can select an app to run.

NOTE: You can edit the applications to display on the panel and set not to show the applications panel.

► Tap  >  > **Settings**  > **Accessory**.

Capturing a Screenshot

Press and hold the **Volume Down key** and **Power/Lock Key** at the same time for around 2 seconds to capture a screenshot.

To view the captured image, go to **Apps**  > **Gallery**  > **Screenshots** Folder.

TIP! You cannot capture a camera/video screen.

Using QuickMemo to capture a screenshot

On the screen you want to capture, drag the status bar downward and select QuickMemo.

OR

Press and hold the **Volume Up/Down Key** at the same time.

Using Capture plus to capture a screenshot

This feature allows you to capture a portion of the screen in the default Internet browser.

- 1 While connected to Internet, tap , and then tap **Capture plus**.
- 2 Adjust the blue box to the desired size, and then tap **OK**. The selected area is saved to the Gallery.

Entering Text

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text



Tap once to capitalize the next letter you type. Double-tap for all caps.



Tap to switch to the numbers and symbols keyboard.



Tap to use the voice input function. You can also touch and hold this icon to select the handwriting and settings menu.



Tap to enter a space.



Tap to create a new line in the message field.



Tap to delete the previous character.

Entering accented letters

The on-screen keyboard allows you to enter special characters (e.g. "á").

For example, touch and hold the desired key (for example, the "a" key). After the desired character appears, slide your finger over it and lift it off to enter it.

Google account setup

When you first turn on your tablet, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

To set up your Google account

- Sign into a Google Account from the prompted set-up screen.

OR

- From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Accounts & sync** > **Add account** > **Google**.

If you have a Google account, touch **Existing**, enter your email address and password, then touch . Otherwise, touch **New** and enter the necessary information to create a new Google Account.

Once you have set up your Google account on your tablet, your tablet automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your tablet. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your tablet.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your tablet, you need to access a wireless access point or 'hotspot'. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your tablet to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Wi-Fi** from the WIRELESS NETWORKS.
- 2 Tap  to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap **Search** to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The Status Bar displays icons that indicate Wi-Fi status.

Bluetooth

You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your tablet with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Bluetooth** from the WIRELESS NETWORKS.
- 2 Tap  to turn Bluetooth on. You will see the option to make your tablet visible. Then tap **Search for devices** to view the devices in range.
- 3 Choose the device you want to pair with from the list.

Once the pairing is successful, your device will connect to the device.

NOTE: Your tablet doesn't support Handsfree Profile. Therefore, the use of call features with some of accessories such as Bluetooth headsets or Bluetooth-enabled devices may not be available for this device.

Send data using the Bluetooth wireless feature

- 1 Open the item and tap .

OR

Touch and hold the item and select **Share**.

OR

Open the item and tap the **Menu Key**  > **Share**.

- 2 Tap **Bluetooth** to share via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings**  > **Bluetooth**.

- 2 Tap  to turn Bluetooth on and mark the checkbox at the top of the screen to visible on other devices.

NOTE: To select the length of time that your device will be visible, tap the **Menu Key**  > **Visibility timeout**.

- 3 Pair the devices and tap **Accept** when you receive a Bluetooth Authorization Request to accept the file(s).

SmartShare

You can enjoy SmartShare feature on Gallery, Music, Video, and Polaris Office.


To send content from your tablet to other devices

- 1 On the content you want to play or beam, tap .
- 2 Tap **Play** or **Beam** in the dialog box.
 - **Play:** You can stream your content via TV, Bluetooth speaker, etc.
 - **Beam:** You can send your content to Bluetooth devices or SmartShare Beam*-supported LG phones or tablets.

*SmartShare Beam quickly transfers multimedia contents through Wi-Fi Direct.
- 3 Tap the device to play or receive on the list.
 - If the device is not on the list, make sure on the device that Wi-Fi, Wi-Fi Direct, or Bluetooth connection is turned on. And tap **Rescan**.
- 4 Tap **Send**.

To enjoy content from nearby devices such as a computer or mobile device on your tablet

- 1 To connect the nearby devices to your tablet, tap Nearby devices.

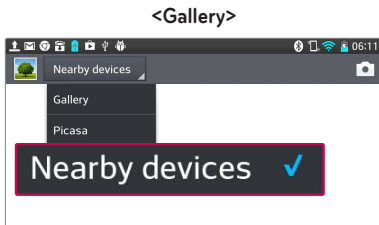

- Ensure that your tablet and nearby devices are connected to the same Wi-Fi network.
- Make sure DLNA feature on the nearby device is turned on.

2 Tap the device to connect.

If the device is not on the list, tap **Search nearby devices**.

After connection, you can enjoy the contents from the nearby device on your tablet.

PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

Transferring music, photos and videos using the USB mass storage mode

- 1 Connect your tablet to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. Choose **System settings > PC connection > Select USB connection method**, then select **Media sync (MTP)**.
- 3 You can now view the mass storage content on your PC and transfer the files.

Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

- 1 Use the USB cable to connect the tablet to a PC on which Windows Media Player has been installed.
- 2 Select the **Media sync (MTP)** option. When connected, a pop-up window will appear on the PC.

- 3 Open Windows Media Player to synchronize music files.
 - 4 Edit or enter your device's name in the pop-up window (if necessary).
 - 5 Select and drag the music files you want to the sync list.
 - 6 Start synchronization.
- The following requirements must be satisfied to synchronize with Windows Media Player.

Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is lower than 10, install version 10 or higher.

Contacts

You can add contacts on your tablet and synchronize them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Tap the **Search contacts** box and enter the contact name using the keypad. You can also tap a letter along the right side of the screen to access names starting with the chosen letter.

Adding a new contact

- 1 From the Home screen, tap **Contact** .
- 2 Tap the . Select the desired account (if applicable).
- 3 If you want to add a picture to the new contact, tap . Choose from **Take photo** to take a picture using the camera or **Select from Gallery**. Then browse for an image and select it.
- 4 Tap  to enter more specific name information.
- 5 Enter the details about your contact.
- 6 Tap **Save** to save the contact entry.

Favorite Contacts

You can classify frequently called contacts as favorites.

To add a contact to your favorites

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Tap a contact to view its details.

- 3 Tap the star  to the right of the contact's name. The star turns gold and the contact is added to your favorites.

To remove a contact from your favorites list

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Tap the **Favorites** tab to view your favorite contacts.
- 3 Tap a contact to view its details.
- 4 Tap the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Creating a group

- 1 From the Home screen, tap **Contacts**  to open your contacts.
- 2 Touch the **Groups** tab, then touch .
- 3 Touch **Save** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

E-mail

You can use the E-mail application to read emails from services like Gmail. The E-mail application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide you with the account settings you need.

Managing an E-mail account

The first time you open the E-mail application, a set-up wizard opens to help you to set up an E-mail account.

After the initial setup, E-mail displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To add another E-mail account:

- Open the **E-mail** application and tap the **Menu Key**  > **Settings** > .

To change an E-mail account's settings:

Open the **E-mail** application and tap the **Menu Key**  > **Settings** > **General settings**.

To delete an E-mail account:

- Open the **E-mail** application and tap the **Menu Key**  > **Settings** > tap the **Menu Key**  > **Remove account** > touch an account you want to delete > **Remove** > select **Yes**.

Working with account folders

Open the **E-mail** application and tap the **Menu Key**  and select **Folders**. Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending E-mail

To compose and send a message:

- 1 While in the E-mail application, tap **Write** .
 - 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
 - 3 Tap **Menu Key**  to add a Cc/Bcc and tap **Attach**  to attach files, if required.
 - 4 Enter the subject and your message
 - 5 Tap the **Send**  to send the message.
- If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send will be stored in your Outbox folder until you connect to a network again. If it contains any pending messages, the Outbox will be displayed on the Accounts screen.

TIP! When a new E-mail arrives in your Inbox, you will be notified by a sound or vibration. Tap the E-mail notification to stop receiving notifications.

Camera

To open the Camera application, tap Camera  on the Home screen.

Getting to know the viewfinder



- 1 Swap camera** – Switch between the camera lens and the front-facing camera lens.
- 2 Shot mode** – Defines how the shot will be taken.
- 3 Settings** – Touch this icon to open the settings menu. See **Using the advanced settings** on the following page.
- 4 Video mode** – Tap (or slide) to toggle between Camera mode and Video mode.
- 5 Taking a photo**
- 6 Gallery** – Touch to view the last photo you captured. This enables you to access your Gallery and view saved photos while in camera mode.

NOTE: Please ensure the camera lens is clean before taking pictures.

Using the advanced settings

In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap the **Back Key** .

	Take photos by voice command.
	Defines and controls the amount of sunlight entering the photo.
	Focuses on a specific spot.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your tablet's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geo tagging, you can see the pictures displayed on a map. NOTE: This function is only available when the GPS function is active.

	Selects a shutter sound.
	Set the Volume Key whether to use for the capture or zoom.
	Set the storage location for your pictures. Choose from Internal memory and SD card.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

TIP!

- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the tablet horizontally, point the lens towards the subject you want to photograph.
- 3 A focus box will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Touch  to capture the photo.

Once you've taken a photo

Touch  to view the last photo you took.

	Touch to share your photo using the SmartShare function.
	Touch to take another photo immediately.
	Touch to send your photo to others or share it via social network services.
	Touch to delete the photo.

TIP! If you have a social networking account and set it up on your tablet, you can share your photo with your social networking community.

Touch the Menu Key  **to open all advanced options.**

Set image as – Touch to use the photo as a **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.

Move – Touch to move the photo to another place.

Copy – Touch to copy the selected photo and save it to another album.

Copy to Clip Tray – Tap to copy the photo and store in the Clip Tray.

Rename – Touch to edit the name of the selected photo.

Rotate left/right – To rotate left or right.

Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Edit – View and edit the photo.

	Applies a brightness effect to your photo.
	Applies artistic effects to your photos.
	Applies color effects to your photos.
	Applies additional options to your photos.

Slideshow – Automatically shows you the images in the current folder one after the other.

Add location – To add the location information.

Details – Find out more information about the contents.


Viewing your saved photos

You can access your saved photos when in camera mode. Just tap the image preview in the bottom of the screen and your Gallery will be displayed.

- To view more photos, scroll left or right.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Video camera

Getting to know the viewfinder

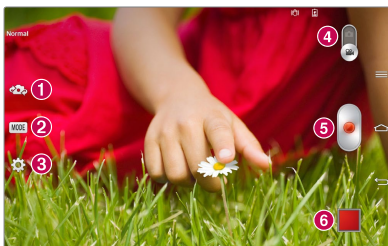

- 1 Swap camera** – Switch between the camera lens and the front-facing camera lens.
- 2 Shot mode** – Defines how the shot will be taken.
- 3 Settings** – Touch this icon to open the settings menu. See **Using the advanced settings** on the following page.
- 4 Camera mode** – Touch and slide up this icon to switch to camera mode.
- 5 Record** – Touch to start recording a video.
- 6 Gallery** – Touch to view the last video you recorded. This enables you to access your Gallery and view your saved videos while in video mode.

TIP! When recording a video, place two fingers on the screen and pinch to use the Zoom function.

NOTE: Ensure the microphone is not blocked when recording a video or audio clip.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Tap to set the size (in pixels) of the video you are recording.
	Defines and controls the amount of sunlight entering the video.
	Prevent shaking while video recording to get high video quality.
	Improves color quality in various lighting conditions.
	Choose a color tone to use for your new view.
	Activate this to use your tablet's location-based services.
	Set the Volume Key whether to use for the record or zoom.
	Set the storage location for your pictures. Choose from Internal memory and SD card.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.

Recording a quick video

- 1 Open the **Camera** application and touch the **Video mode** icon.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the tablet, point the lens towards the subject you wish to capture in your video.
- 4 Touch  once to start recording.

- 5 A timer showing the length of the video will appear.
- 6 Touch  on the screen to stop recording.

After recording a video

Touch  to view the last video you took.

	Touch to share your video using the SmartShare function.
	Touch to record another video immediately.
	Touch to send your video to others or share it via social network services.
	Touch to delete the video.



Watching your saved videos

- 1 In the viewfinder, touch the image preview in the bottom of the screen.
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.

Live Zooming

Live Zooming allows you to zoom in or zoom out on a portion of a video that is being played to make the desired scan appear larger or smaller.

When viewing the video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

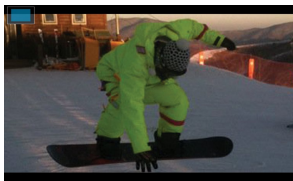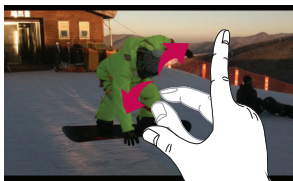

NOTE:

- When in video playback mode, slide the screen up or down to adjust the screen brightness.
- When in video playback mode, slide the screen left or right to rewind or fast-forward.

NOTE: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the Volume Keys on the right side of the tablet.

Multimedia

Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.

1 From the Home screen, tap **Apps**  > **Apps** tab > **Gallery** .

You can manage and share all your image and video files with Gallery.

NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

Viewing pictures

Launching Gallery displays your available folders. When another application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Tap a folder to open it.

Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Zooming in and out

Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in. Double-tap again to return to fullscreen view.
- Spread two fingers apart on any place to zoom in. Pinch in to zoom out.

Playing videos

Video files show the  icon in the preview. Select a video and tap  to play it.

Viewing photo and video options

When viewing a photo or video, tap the **Menu Key**  and use the advanced editing options.

Deleting images and videos

Use one of the following methods:

- In a folder, tap  and select the photos and videos you want to delete, then tap **Delete**.
- When viewing a photo or video, tap .

Setting as wallpaper

When viewing a photo, touch the **Menu Key**  > **Set image as** and select **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

Videos

Your tablet has a video player that lets you play all of your favorite videos. To access the video player, from the Home screen tap **Apps**  > **Apps** tab > **Videos** .

Playing a video

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Videos** .
- 2 Select the video you want to play.

	Touch to pause video playback.
	Touch to resume video playback.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.
	Touch to change the ratio of the video screen.
	Touch access QSlide and display the video in small window.
	Touch to share your video via the SmartShare function.
	Touch to lock the window.

To change the volume while watching a video, press the Volume Keys on the right side of the tablet.

Touch and hold a video in the list to access the following options:

Share, **Delete**, **Trim** and **Details**.

Music

Your tablet has a music player that lets you play all your favorite tracks. To access the music player, from the Home screen, tap **Apps**  > **Apps** tab > **Music** .

Add music files to your tablet

Start by transferring music files to your tablet:

- Transfer music using Media sync (MTP).
- Download from the wireless Web.
- Synchronize your tablet to a computer.
- Receive files via Bluetooth.

Transfer music using Media sync (MTP)

- 1 Connect the tablet to your PC using the USB cable.
- 2 Select the **Media sync (MTP)** option. Your tablet will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.
- 3 When you're finished transferring files, swipe the Status Bar down and touch **USB connected** > **Charge tablet**. You may now safely unplug your device.

Playing a song

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Music** .
- 2 Touch the **Songs** tab.
- 3 Select the song you want to play.

	Touch to find the files with YouTube
	Touch to share your music via SmartShare function.
	Touch to set shuffle mode
	Touch to set repeat mode
	Touch to manage the music volume
	Touch to pause playback
	Touch to resume playback
	Touch to skip to the next track on the album or in the playlist
	Touch to go back to the beginning of the song. Touch twice to return to the previous song
	Touch to set the current song as a favorite
	Touch to see the current playlist
	Touch to set the audio effect.

To change the volume while listening to music, press the Volume Keys on the right side of the tablet.

Touch and hold any song in the list to access the following options:

Play, Add to playlist, Share, Delete, Details and **Search**.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

QPair

By connecting your tablet and mobile phone via QPair, you can sync incoming calls, messages, and SNS notifications between your tablet and mobile phone.



- 1 Run QPair  and tap **Initial setup** > **Start** on your tablet first and then run the same steps on your phone.

TIP! QPair may not be pre-installed on the phone. Go to Google Play Store and search for Qpair and install.

NOTE: QPair works with phones running Android 4.1 or later. Some features may be limited depending on your phone model.

- 2 Bluetooth connection will be turned on automatically.

QPair features

Call notification – Sends the tablet a notification when the phone receives a call. The notification displays the caller's number and allows you to decline the call.

Message notification – Sends the tablet a notification when the phone receives a message.

SNS Notifications – Displays SNS notifications on your tablet's Status bar when it arrives on your phone.

NOTE: To enable this feature, turn on **Settings > Accessibility > QPair SNS notification** on your phone first. This option allows you to be notified SNS notifications come to your phone on your tablet.


Send QuickMemo – Saves your current QuickMemo in the tablet's Gallery, and then syncs this Gallery with the Gallery on your phone.

Internet connection via mobile phone – Automatically connects your tablet to the Internet through your mobile phone (as a Wi-Fi hotspot). Using this feature may incur data charges. To save data usage on the phone, the phone automatically connects to any trusted Wi-Fi hotspots within range.

Recent app sticker – When the tablet screen is unlocked, a sticker will display the last app used on the phone. Tap the sticker to run the app. Make sure that the app is installed on the phone and tablet.

QSlide

The QSlide function enables an overlay window on your tablet's display for easy multitasking. QSlide windows can be opened from the QSlide apps bar on the Notifications panel, or directly from the applications that support the QSlide function.

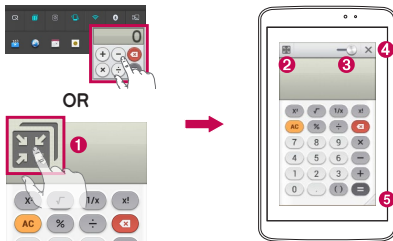

1		Tap to run QSlide.
2		Tap to exit the QSlide and return to full window.
3		Tap to adjust transparency.
4		Tap to end the QSlide.
5		Tap to adjust the size.

NOTE: The QSlide function can support up to two windows at the same time. QSlide only supports the following applications: Videos, Internet, Memo, Calendar, Calculator, Email, File Manager.

- 1 Open the Notifications Panel and tap the desired app from the **QSlide apps** section.


OR

While using an application that supports QSlide, tap . The function will be displayed continuously as a small window on your screen.


- 2 Slide to adjust the transparency level. And drag the QSlide title bar to move it to another position on the screen.

QuickMemo


The **QuickMemo** feature allows you to create memos and capture screen shots. Capture screens, draw on them, and share them with family and friends with QuickMemo.

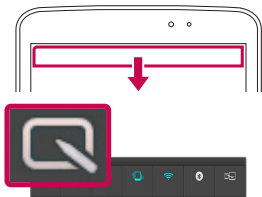

- 1 Access the QuickMemo feature, slide the Status Bar downwards and touch .

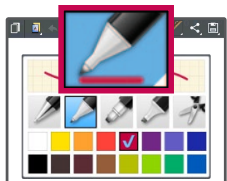

- 2 Select the desired menu option from **Pen type**, **Colour**, and **Eraser**. Then create a memo.

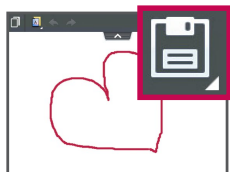

- 3 Tap  in the Edit menu and select  to save the memo. To exit QuickMemo at any time, tap the **Back Key** .

NOTE: Please use a fingertip while using the **QuickMemo**. Do not use your fingernail.

Using the QuickMemo options

The following options are available when using QuickMemo.

	Touch to keep the current memo on the screen and use the tablet simultaneously.
	Selects whether to use the background screen or not.
	Allows you to undo and redo previous actions.
	Selects the pen type and the color.
	Erases the memo that you created.
	Touch to send your memo to others or share it via social network services.
	Saves the memo in the Notebook or Gallery .

Viewing the saved QuickMemo

From the Home screen, tap **Apps**  > **Gallery**  and select the **QuickMemo** album.



QuickRemote

QuickRemote turns your tablet into a Universal Remote for your home TV, DVD, or Blu-ray.

NOTE: QuickRemote may not be available for some devices and areas.

To open the QuickRemote application and set up your QuickRemote(s)

- 1 From the Home screen, tap the **Apps**  > **QuickRemote** .
- 2 Touch  to select a room type and touch  to add the device.

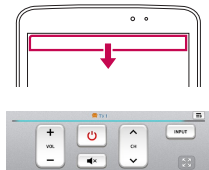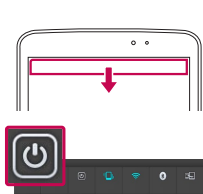

- 3 Select the type and brand of device, then follow the on-screen instructions to configure the device(s).

NOTE: The QuickRemote operates the same way as an ordinary infrared (IR) remote control in your region or country. Be careful not to cover the infrared sensor at the top of the tablet when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

Using QuickRemote

- 1 From the Home screen, tap the **Apps**  > **QuickRemote**  to open a QuickRemote bar with all of the remotes you set up.
- 2 Select the remote you want by tapping its type/name at the top of the QuickRemote bar.
- 3 Tap the buttons on the displayed remote.

NOTE: When adding remote control of TV, QuickRemote could use the INPUT button to configure appropriate remote control. When configuring the INPUT button, input source of TV could be changed. To reset input source of your TV, tap the INPUT button on QuickRemote several times (depending on the number of devices connected to the TV).


QuickRemote options

To access the QuickRemote Options menu, tap the **Menu Key**  (in the Front Touch Keys bar) to select the desired option.

NOTE: While playing music in the background, pressing any QuickRemote button will mute the sound for a second.

QuickTranslator

Simply aim the camera of your smart tablet at the foreign sentence you want to understand. You can get the real-time translation anywhere and anytime. You can buy additional dictionaries for offline translation from the Google Play Store.

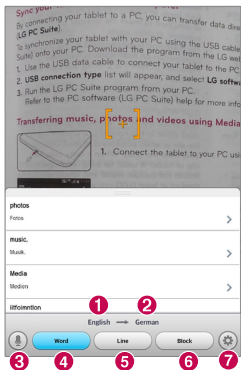

- ① Home language
- ② Destination language
- ③ Switch to Voice mode.
- ④ Translation of word
- ⑤ Translation of sentence
- ⑥ Translation of block
- ⑦ Sets the home and destination language.

- 1 Touch  > **Apps** tab > **QuickTranslator** .
- 2 Touch **Word**, **Line** or **Block**.
- 3 Touch and select the desired language.
- 4 Hold the tablet toward the subject you want to translate for a few seconds.

NOTE: Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select from the list below the dictionary you would like to install as your complimentary dictionary.

NOTE: There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

Multiple Users

You can add new users to the tablet to allow them to configure their own tablet settings, use their own storage space, and have their own app update privileges.

NOTE:

- You can only add a new user when you logged in as **Owner User**.
- Each user can configure and use their own content or data. However, they cannot change other users' settings (e.g.: Home Screen settings, Sound settings, etc.).
- The users share the battery, memory, and data usage with other users.
- Only the tablet owner can use the menus related to the microSD card.
- The language settings set by one user apply to all other users.
- The alarm goes off at a set time regardless of the user who set the alarm time.
- Events such as an message or calendar schedule are only notified to the relevant user.
- Once a user starts printing a document using Mobile Print, the print job will continue even if the user is changed.
- Data transfer or download, multimedia play, and communication services stop once the user is changed.

To add a new user on your tablet

- 1 From the home screen, tap **App > Settings > Users > Add user**.
- 2 Set-up wizard opens to help you to set up. Start Set-up wizard.
 - You should follow Setup Wizard when you first log in to your tablet as a new user.
- 3 Now you can choose a user name when you log in your tablet.

Alarm

Setting your alarm

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Alarm/Clock**  > .
- 2 Set the desired alarm time.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**.
- 4 Touch **Save**.

NOTE: To change alarm settings in the alarm list screen, touch the **Menu Key**  and select **Settings**.

Calculator

Using your calculator

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calculator** .
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want to perform (, ,  or ) followed by .

NOTE:

- For more complex calculations, touch the **Menu Key** , select the **Scientific calculator**, then choose the desired function.
- To view the calculation history, tap **Menu Key**  > **Calculation history**.

Calendar

Adding an event to your calendar

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Calendar** .
- 2 Tap the left-top button to change the calendar view (Day, Week, Month, Year, Agenda).
- 3 Tap on the date for which you wish to add an event and tap .
- 4 Touch the **Event name** field and enter the event name.
- 5 Touch the **Location** field and enter the location. Check the date and enter the time you wish your event to start and finish.
- 6 If you wish to add a note to your event, touch the **Description** field and enter the details.
- 7 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.

File Manager

The **File Manager** application allows you to manage files in your internal/external storage.

To open the File Manager application

- From the Home screen, tap **Apps**  > **File Manager** .

File Manager Options

- : Allow you to run QSlide.
- : Allows you to search for files.
- : Allows you to create a new folder.

- : Allows you to move files and folders to another folder.
- : Allows you to copy multiple files.
- : Allows you to delete files and folders.

Tap the **Menu Key**  to access the following options.

- **Sort by:** Allows you to sort files and folders by Name, Size, Date, and Type.
- **View by:** Allows you to change the view mode to List or Grid.
- **Copy:** Allows you to copy files and folders and paste them in another location.
- **Share:** Allows you to share files and folders with others.
- **Zip:** Allows you to compress files and folders into a .zip file.
- **Show/Hide hidden files:** Allows you to show hidden files or hide them.
- **Exit:** Allows you to exit the application.

Voice Recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Voice Recorder** .
- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: Touch  to access your list of recordings. You can listen to the saved recordings. The available recording time may differ from actual recording time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching .
- 2 Choose from any of the available methods for sharing.

Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications.

Task Manager Options

- Touch **Stop** to stop individual apps.
- Tap **Stop all** to stop all currently running apps.
- Tap the **Menu Key**  to access Help, Sort by, and Settings.

POLARIS Office 5

POLARIS Office 5 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

To create a New Document

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **POLARIS Office 5** .
- 2 Register your email address on the Registration page.

NOTE: You can tap Skip to ignore the registration information.

- 3 Tap  to start a new document.
- 4 Tap a document type from the drop-down list, then choose a template.
- 5 Enter contents in the document using the tools at the top of the screen and the on-screen keyboard.
- 6 When you're done working on the document, tap  (in the top left corner of the screen), then tap **Save** and Enter the document name.

To view and edit a document on your device

You can now easily view and edit a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices.

Tap an office document tab at the top of the screen to search for documents on your tablet.

Tap the document that you want to view or edit.

When viewing documents using POLARIS Office 5, the objects and layout remain the same as in the original documents.

To edit it, tap .

Google+

Use this application to stay connected with people via Google's social network service.

From the Home screen, tap **Apps**  > **Apps** tab > **Google+** .

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search web pages using voice.

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **Voice Search** .
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded.

From the Home screen, tap **Apps**  > **Apps** tab > **Downloads** .

The Web

Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your tablet wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

From the Home screen, tap **Apps**  > **Apps** tab > **Internet** .

	Tap to go back one page.
	Tap to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the Back Key  , which takes you to the previous page.
	Tap to go to the Home page.
	Tap to add a new tab.
	Tap to access your bookmarks.
	Tap touch to run QSlide.
	Tap to close the current tab.
	Tap to refresh or stop the current page.

Opening a page

- To open a new page, tap .
- To go to another webpage, tap the page to view it.

Searching the web by voice

Tap the web address field, tap , speak a keyword, and then select one of the suggested keywords that appear.

NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To open a bookmarked webpage, tap  on the Browser toolbar and select one.

History

Tap  on the Browser toolbar and select the **History** tab to open a webpage from the list of recently-visited webpages. To clear the history, tap the **Menu Key**  > **Clear all history**.

Using QSlide

Use this feature to access the Internet without closing the current application.

While viewing content on the Browser, tap . You can then browse other information on your tablet. To view the browser in full screen, tap .

Chrome

Use Chrome to search for information and browse webpages.

From the Home screen, tap **Apps**  > **Apps** tab > **Chrome** .

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the web address field, and then enter a web address or search criteria.

Opening a page

- To go to a new page, tap .
- To go to another webpage, tap the page you want to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap the **Menu Key**  > **Other devices**. You must be signed in to the same Google account on all devices. Select a webpage to open.

Adding and Viewing bookmarks

To add bookmarks, tap .

To open a bookmarked webpage, tap the **Menu Key**  > **Bookmarks**.

Settings

Access the Settings menu

1 From the Home screen, tap **Apps**  > **Apps** tab > **Settings** .

OR

From the Home screen, tap the **Menu Key**  > **System settings**.

2 Select a setting category and select an option.

WIRELESS NETWORKS

Wi-Fi

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your tablet in the router.

You can find the MAC address in the following user interface: From the Home screen, tap **Apps**  > **Settings**  > **Wi-Fi** > **Menu Key**  > **Advanced Wi-Fi** > **MAC address**.

Bluetooth

Turn the Bluetooth wireless feature on or off to use Bluetooth.

Data usage

Displays the data usage.

More...

Allows you to share folders with other devices via wireless connection.

Airplane mode – Checkmark the **Airplane mode** to set on. Activating Airplane mode disables all wireless connections.

Wireless storage – You can manage files on your tablet in the computer or copy files to the tablet from the computer without a USB connection. Make sure that the tablet and computer are connected to the same network. Then, enter the web addresses shown on your tablet in the address bar of the browser on your computer.

Miracast – Allows you to wirelessly mirror your tablet screen and sound onto a Miracast dongle or TV.

SmartShare Beam – Allows you to receive multimedia content via SmartShare Beam from LG phones or tablets.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

NOTE: You must set a lock screen PIN or password before you can use credential storage.

DEVICE

Sound

Sound profile – Choose the Sound, either Vibrate only or Silent.

Volumes – Manage the volume of Notification sound, Touch feedback & system, Music, video, games and other media.

Vibrate strength – Set vibrate strength for notifications.

Notification sound – Allows you to set your default notification ringtone.

Touch sounds – Allows you to set your tablet to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your tablet to play a sound when locking and unlocking the screen.

Vibrate on touch – Allows you to set the vibration feedback when the tablet screen is touched.

Display

< Home screen>

Theme – Sets the screen theme for your device.

Wallpaper – Sets the wallpaper to use on your Home screen.

Screen swipe effect – Sets the effect when you swipe to change screens.

Allow Home screen looping – Checkmark to set the Home screens to scroll continuously, eliminating the need to scroll back in the opposite direction when you reach one end.

Portrait view only – Checkmark to always display the Home screen in portrait view.

Home backup & restore – Allows you to backup and restore app and widget configurations and themes.

Do you know? – Enable this option to display the help page **Do you know?** onto display an additional homescreen.

Help – Displays information about the operation of the Home Screen.

< Lock screen >

Select screen lock – Set a screen lock type to secure your tablet. Opens a set of screens that guide you through drawing a screen unlock pattern. If you have enabled a Pattern lock type when you turn on your tablet or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Screen swipe effect – Sets the screen swipe effect options.

Weather animation – Checkmark to show weather animation for current location or primary city set in Weather based on auto data updates.

Wallpaper – Sets your Lock screen wallpaper. Select it from **Gallery** or **Wallpaper gallery**.

Shortcuts – Allows you to change the shortcuts on the **Swipe** Lock screen.

Owner info – Checkmark to set the device owner's name to be displayed on the Lock screen. Tap to enter the text to be displayed as the Owner info.

Portrait view only – Checkmark to always display the Lock screen in portrait view.

Lock timer – Sets the amount of time before the screen automatically locks after the screen has timed-out.

Power button instantly locks – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the Security lock timer setting.

< **Brightness** >

Adjust the screen brightness.

< **Screen timeout** >

Set the time for screen timeout.

< **KnockON** >

Checkmark to enable KnockON to turn the screen on and off. Quickly double-tap center screen to turn it on. Double-tap the Status Bar, an empty area on the Home screen, or the Lock screen to turn the screen off. For the best results, do not move the tablet while using the KnockON feature.

< **Screen-off effect** >

Sets the screen-off effect.

< Auto-rotate screen >

Set to switch orientation automatically when you rotate the tablet.

< Daydream >

Tap the Daydream switch to toggle it On or Off. On allows the set screen saver to be displayed when the phone is sleeping while docked and/or charging. Choose from Clock, Colors, Photo Frame, and Photo Table.

NOTE: Charging might be slow while the screen saver is on.

< Font type >

Change the type of display font.

< Font size >

Change the size of the display font.

< Smart screen >

Keep screen on when device detects your eyes looking at the screen.

< Smart video >

Checkmark to pause the video when it doesn't detect your eyes looking at the screen.

< Front touch buttons >

Set the Front Touch Keys displayed at the bottom of all of the screens. Set which ones are displayed, their position on the bar, and what they look like. Select the keys and order, the theme, and the background.

< Aspect ratio correction >

Allows you to change the aspect ratio of a downloaded application to fix screen distortion.

< Motion sensor calibration >

Allows you to improve the accuracy of the tilt and speed of the sensor.

Storage

INTERNAL STORAGE – Displays the total amount of space in the device's memory and lists what type of data is using up space.

SD CARD – Displays the total amount of memory space on the microSD card.

Mount/Unmount SD card – Mounts and unmounts the microSD card from your tablet so that you can access the data stored in it, format the card, or safely remove it. This setting is dimmed if there's no microSD card installed, if you've already unmounted it, or if you've mounted the microSD card on your computer.

Erase SD card – Permanently erases everything on the microSD card and prepares it for use with your tablet.

Battery

BATTERY INFORMATION – See how much battery power is used for device activities. The battery level displays in a percentage. The remaining time of use is also displayed.

Battery percentage – Displays the battery percentage on the Status Bar.

Battery saver – Manage the battery for the power saving items. Tap the switch  to turn this feature on. Tap **Battery saver** for the following options.

- **Auto-sync:** Turns off Auto-sync.
- **Wi-Fi:** Turns off Wi-Fi if data is not in use.
- **Bluetooth:** Turns off Bluetooth if not connected.
- **Vibrate on touch:** Turns off touch feedback.
- **Brightness:** Adjust the brightness.
- **Screen timeout:** Adjust the screen timeout.

Power saver tips – Touch to access some tips for Power saver.

Apps

Display the list of applications such as currently running or downloaded.

Slide Aside

You can use three-finger swipe to save running apps to the left or bring them back to the display.

PERSONAL

Accounts & sync

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

Users

Profile name – Allows you to set current user's name.

Nickname – Allows you to set the nickname for your tablet.

Owner info – Checkmark to set the device owner's name to be displayed on the Lock screen. Tap  to enter the text to be displayed as the Owner info.

Add user – Allows you to add new account for tablet and use Multi-user feature.

Location access

Access to my location – Lets apps that have asked your permission use your location information.

GPS satellites – Lets apps use GPS satellites to determine your location to street-level accuracy.

Wi-Fi & mobile network location – Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.

Security

Encrypt tablet – Allows you to encrypt data on the tablet for security. You will be required to enter a PIN or password to decrypt your tablet each time you power it on.

Encrypt SD card – Allows you to encrypt data on the MicroSD for security.

Password typing visible – Show the last character of the hidden password as you type.

Tablet administrators – View or deactivate tablet administrators.

Unknown sources – Default setting to install non-Play store applications.

Verify apps – Disallow or warn before installation of apps that may cause harm.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

Language & input

Use the Language & input settings to select the language for the text on your tablet and to configure the on-screen keyboard, including words you've added to its dictionary.

Backup & reset

Backup my data – Set to backup your settings and application data to the Google server.

Backup account – Set the account to which you want to backup data to.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

LG Backup service – Backs up all information on the device and restores it in the event of data loss or replacement.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the tablet this way, you are prompted to re-enter the same information as when you first started Android.

SYSTEM

Date & time

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your tablet.

NOTE: Requires additional plug-ins to become selectable.

TalkBack – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback. Tap the **TalkBack** switch  at the top right corner of the screen to turn it on. Tap **Settings** at the bottom of the screen to adjust the TalkBack settings.

Install web scripts – Allows you to enable (or disable) installation of web scripts.

Large text – Checkmark to increase the size of the text.

Invert colour – Checkmark to invert colour.

Magnification gestures – Allows you to zoom in and out by triple-tapping the screen.

Shades – Set the screen to be shade of black.

Mono audio – Checkmark to allow headset sound routed both right and left channel.

Touch & hold delay – Sets the touch and hold delay (short, medium, or long).

Universal touch – Switch  to toggle between on and off. Universal touch can replace all hardware buttons.

Auto-rotate screen – Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).

Speak passwords – Checkmark so that you can say your log in passwords (instead of typing your passwords).

One-touch input – Allows you to enter letters by each finger touch on LG keyboard.

Easy access – Allows you to set functions when you tripe-tap home key.

Text-to-speech output – Text-to-speech output provides audible readout of text, for example, the contents of text messages.

PC connection

Select USB connection method – Set the desired mode: **Charge tablet**, **Media sync (MTP)**, **LG software** or **Send images (PTP)**.

Ask upon connecting – Ask in USB connection mode when connecting to a computer.

Help – Help for USB connection.

PC Suite – Check this to use LG PC Suite with your Wi-Fi connection. Please note that Wi-Fi network should be connected to LG PC Suite via a Wi-Fi connection.

On-Screen Phone – Check this to receive Wi-Fi connection request from On-Screen Phone.

Help – Help for LG software.

Accessory

Quick Cover – Activate the Quick Cover to turn on or off automatically.

USB storage – Sets the Plug & Pop feature for USB storage. Checkmark the app panel option to automatically display the app panel when connecting an OTG (On-the-Go) USB cable. Tap **Edit app panel** to change the applications you want to make available.

Earphone – Sets the Plug & Pop feature for earphones. Checkmark the app panel option to automatically display the app panel when connecting an earphone. Tap Edit app panel to change the applications you want to make available.

Dock – Sets the Plug & Pop features for Dock. Checkmark the app panel option to automatically display the app panel when connecting a dock. Tap **Edit app panel** to change the applications you want to make available.

About tablet

View legal information and check your device status and software version.

About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.

This LG Backup application is supported between LG smartphones and tablets, other S/W or OS versions. As a result, when you buy the new LG smartphones and tablets, you can backup the current device data to your new device.

If you have the Backup application preloaded on your smartphones and tablets, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings. You may also:

- Perform a manual LG Backup of your device.
- Schedule automatic backups of your device.
- Restore your device data.

NOTE: Please note that the Backup function does not support the backup of User data & Media data (Picture/Video/Music). Please backup those files using the Media sync (MTP). Connect your tablet to your computer using a USB cable and touch Media sync (MTP).

Warning! To protect against unexpected shutdown during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

LG Backup your tablet data

- 1 From the Home screen, tap **Apps**  > Apps tab > **LG Backup**  > **Backup**.
- 2 Select the check box you want to backup and select **Next**.
- 3 On the Backup Location screen, touch **Internal storage** or **SD card**, then tap **Start**.
- 4 When all selected files have been backed up, you will see the message **Backup completed**.

Scheduling automatic backups

You can also program automatic backups for the data on your tablet according to your schedule setting. To do this, complete the following steps:

- 1 From the Home screen, tap **Apps**  > Apps tab > **LG Backup**  > **Scheduled backup**.
- 2 Tap **Backup items** and select the check box next to the item you want to backup.
- 3 Tap **Backup location**, touch **Internal storage** or **SD card**.
- 4 Tap **Set time** to set repeat interval among **Weekly**, **Every two weeks**, **Monthly** and tap **Done**.
- 5 Tap the switch  to turn this feature on.

Restoring tablet data

NOTE: All files that are stored on your tablet are deleted before the backup file is restored.

- 1 From the Home screen, tap **Apps**  > **Apps** tab > **LG Backup**  > **Restore**.
- 2 On the **Restore** screen, select a backup file that contains the data you wish to restore.
- 3 Select the check box next to the item you wish to restore and select **Next** to restore it to your tablet.

NOTE: Please note that your tablet data will be overwritten with the content of your backup.

- 4 If the backup file is encrypted, type the password that you created to encrypt it.
- 5 When all selected files have been restored, the tablet will automatically be restart.

NOTE: You can set Enable encryption to encrypt your backup files for extra protection.

Touch  from the **LG Backup** screen, and enter a password and hint in case you forgot your password. Once you have set up a password, you need to enter it every time you want to do backup/restore.

Tablet software update

Tablet software update

This feature allows you to update the firmware of your tablet to the latest version conveniently from the internet without the need to visit a service center. For more information on how to use this function, please visit: <http://www.lg.com>

As the mobile device firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your tablet.

LG Tablet Software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your tablet to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device. First, you can check the software version on your tablet:

From the Home screen, tap the **Menu Key**  > **System settings** > **About tablet** > **Software information**.

To perform the tablet software update, from the Home screen, tap the **Menu Key**  > **System settings** > **About tablet** > **Update Center** > **Software Update** > **Check now for update**.


NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

NOTE: Your personal data—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence —might be lost in the process of updating your device's software. Therefore, LG recommends that you back up your personal data before updating your tablet's software. LG does not take responsibility for any loss of personal data.


Accessories

These accessories are available for use with the your tablet. **(Items described below may be optional.)**

Travel adaptor



Data cable



Quick Start Guide



NOTE:

- Always use genuine LG accessories. Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your tablet. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure tablet is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the tablet.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Impossible to receive / send photos	Memory full	Delete some images from your tablet.

Message	Possible causes	Possible corrective measures
Files do not open	Unsupported file format	Check the supported file formats.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.



CE0168!