

Einhell GE-WS 18 Cordless Pressure Sprayer Instruction Manual

Contents

1 Einhell GE-WS 18 Cordless Pressure Sprayer
2 Product Information
3 Product Usage Instructions
4 Safety regulations
5 Layout and items supplied
6 Intended use
7 Technical data
8 Before starting the equipment
9 Operation
10 Cleaning, maintenance, and ordering spare parts
11 Disposal and recycling
12 Storage and transport
13 Troubleshooting guide
14 Charger indicator
15 Warranty certificate
16 Declaration Of Conformity
17 Documents / Resources
17.1 References
18 Related Posts

Einhell GE-WS 18 Cordless Pressure Sprayer



Product Information

Specifications:

- **Operating Instructions:** Original operating instructions
- **Type:** Cordless pressure sprayer
- **Art.-№:** 34.252.40 (Solo)
- **I.-№:** 21012

Product Usage Instructions

Safety Precautions:

- Read the user manual carefully before using the product.
- Wear a protective mask.
- Wear safety goggles.
- Wear suitable protective gloves.
- Observe all safety instructions provided, including packaging and transportation safety measures (if applicable).
- Keep the user manual for future reference.

Technical Specifications:

- **Sound pressure level LpA:** 68.6 dB(A)
- **Uncertainty KpA:** 3 dB
- **Sound power level LWA:** 79.6 dB(A)
- **Uncertainty KWA:** 3 dB

- **Vibration emission value (ah) for the handle:** 2.5 m/s²
- **Uncertainty K:** 1.5 m/s²

Before Operation:

- Check if the product is in good condition and all parts are properly assembled.
- Ensure that the battery is fully charged before use.

Battery Usage:

- Insert the battery into the designated battery compartment.
- Make sure the battery contacts are properly aligned.
- If the battery does not fit or the contacts are not aligned, contact our customer service.
- **LED indicators on the product:**
  - **All 3 LEDs are lit:** The battery is fully charged.
  - **1 LED is blinking:** The battery is empty, charge the battery.
- **Note:** The consistency of LED blinking may vary.

Operation:

- Turn on the device by pressing and holding the power button (Abb. 1/Pos. 2).
- Aim the sprayer at the plants or other objects to be sprayed.
- Adjust the spray intensity as desired using the control settings.
- To turn off the device, release the power button.

Cleaning, Maintenance, and Spare Parts:

- Clean the sprayer after each use.
- Detach the motor unit from the container.
- Rinse both parts with clear water.
- Reassemble the motor unit onto the container.
- For maintenance and spare parts, visit www.Einhell-Service.com for current prices and information.

Storage and Transport:

- Store the product in a safe and dry place.
- When transporting the product, remove the battery.
- Use suitable protective covers or cases to prevent damage during transport.
- Avoid strong vibrations, especially during vehicle transport.
- Avoid tipping or tilting the product.

Disposal and Recycling:
Dispose of the product according to local regulations. Do not dispose of the household waste.

Frequently Asked Questions (FAQ):

- **Q: What should I do if the battery does not fit or the contacts are not aligned?**

  A: Contact our customer service for assistance.
- **Q: How do I know if the battery is fully charged?**

  A: All 3 LEDs on the product will be lit when the battery is fully charged.
- **Q: How do I turn off the device?**

  A: Release the power button to turn off the device.
- **Q: How should I clean the sprayer after each use?**

  A: Detach the motor unit from the container and rinse both parts with clear water.
- **Q: Where can I find maintenance and spare parts information?**

  A: Visit www.Einhell-Service.com for current prices and information on maintenance and spare parts.

Danger!
When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents that arise due to a failure to follow these instructions and the safety instructions.

Explanation of the symbols used (see Fig. 11)

1. **Danger!** – Read the operating instructions to reduce the risk of injury.
2. **Caution!** Wear a protective mask.
3. **Caution!** Wear safety goggles.
4. **Caution!** Wear suitable protective gloves!



Safety regulations

The corresponding safety information can be found in the enclosed booklet.

Warning!

Read all the safety information, instructions, illustrations, and technical data provided on or with this power tool. Failure to adhere to the following instructions may result in electric shock, fire, and/or serious injury.

Keep all the safety information and instructions in a safe place for future use.

- Wear suitable, close-fitting clothing. Wear an impermeable head covering when working overhead.
- Never leave the sprayer standing in the sun.
- Do not spray any toxic substances. Note the safety data sheets for chemical substances and preparation. Contact the manufacturer if in doubt.
- Keep away from third parties and animals while spraying.

Children are not allowed to use this equipment. Children should be supervised so that they do not play with the equipment. Children are not allowed to carry out cleaning or maintenance. This equipment is not allowed to be used by people with limited physical, sensory, or mental capacities or by those with insufficient knowledge or experience unless they are supervised or instructed by a person who is responsible for them.

Layout and items supplied

Layout (Fig. 1)

1. Adjustable spray head
2. On/Off switch
3. Motor component
    - **3a** Handle
4. Battery mount
5. Tank fastener
6. Spray container
7. Clip
8. Counterholder



Items supplied
Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

Danger!
The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suff ocating!

- Pressure sprayer
- Original operating instructions
- Safety information

Intended use

The pressure sprayer is designed exclusively for spraying the following liquids at home, in the garden or in greenhouses:

- Water
- Pesticides
- Weedkillers
- Natural oils dissolved in water (e.g. neem oil, rapeseed oil)
- Fertilizers dissolved in water

Liquids to be sprayed, particularly natural oils dissolved in water, must have a water-like consistency. Liquids of greater viscosity cannot be sprayed, or only with lesser power. Only liquid fertilizers, weedkillers, and pesticides that are approved by the local licensing authority in the country of use may be sprayed. At the time of manufacture, no harmful effects on the materials used are known to be caused by these approved substances or natural oils dissolved in water. The fertilizers, pesticides, and weedkillers are only allowed to be sprayed in the concentrations specified by the manufacturer of the spray solutions. If in doubt, please contact the relevant manufacturer.

The pressure sprayer is not designed to be used with foodstuff s or to spray liquids that exceed the maximum permitted operating temperature of 40°C. Similarly, it is prohibited to spray acidic, caustic, and flammable liquids whose flash point is below 55 °C. Similarly, it is prohibited to spray any impregnating agents, paints, varnishes, greases, mineral oils, and synthetically manufactured oils. Important! Atomized flammable liquids with a flash point over 55 °C are also highly combustible.

Never use the pressure sprayer

- as a flame gun
- for storing liquids

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this. Please note that our equipment has not been designed for use in commercial, trade, or industrial applications. Our warranty will be voided if the machine is used in commercial, trade, or industrial businesses or for equivalent purposes.

Technical data

- Power supply: ……. 18 V DC
- Pump type: …… Membrane pump
- Motor speed: …….. 2,100 min-1
- Tank capacity approx.: …… 1.1 l
- Filling capacity max.: …… 1.0 l
- Flow rate, Vmax: ……. 9.6 l/h
- Spray pressure: …….. 0.13 MPa (1.3 bar 19 psi)
- Residual quantity: …….. < 5 ml
- Permissible maximum operating temperature: …….. + 40 °C
- Protection type: ……. IPX1
- Weight (without battery): ……. 0.63 kg

Important!

- The equipment is supplied without batteries and without a charger and is allowed to be used only with the lithium-ion batteries of the Power X-Change series!
- The lithium-ion batteries of the Power X-Change series are allowed to be charged only with the Power X-Charger.

Danger!

Sound and vibration
Sound and vibration values were measured by EN 62841.

- LpA sound pressure level …… 68.6 dB(A)
- KpA uncertainty ……3 dB
- LWA sound power level …… 79.6 dB(A)
- KWA uncertainty ……3 dB

Total vibration values (vector sum of three directions) determined by EN 62841.

Handle

- Vibration emission value ah ≤ 2.5 m/s2
- K uncertainty = 1.5 m/s2

The stated vibration emission levels and stated noise emission values were measured per a set of standardized criteria and can be used to compare one power tool with another. The stated vibration emission levels and stated noise emission values can also be used to make an initial assessment of exposure.

Warning:
The vibration and noise emission levels may vary from the level specified during actual use, depending on how the power tool is used, especially the type of workpiece it is used for.

Keep the noise emissions and vibrations to a minimum.

- Only use appliances that are in perfect working order.
- Service and clean the appliance regularly.
- Adapt your working style to suit the appliance.
- Do not overload the appliance.
- Have the appliance serviced whenever necessary.
- Switch the appliance off when it is not in use.
- Wear protective gloves.

Caution!

Residual risks
Even if you use this electric power tool under instructions, certain residual risks cannot be ruled out. The following hazards may arise in connection with the equipment’s construction and layout:

1. Lung damage if no suitable protective mask is used.
2. Contact with hazardous substances. Spray materials can be harmful if inhaled or swallowed or if allowed to come into contact with the skin or eyes. Follow the instructions and wear suitable protective equipment.
3. Health damage is caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.

Before starting the equipment

Warning!
Always remove the battery before making adjustments to the tool.


Installing the battery

Note:

The tool is supplied without a battery and a charger!
Press the pushlock button (Item C) of the battery pack as shown in Fig. 2 and push the battery pack into the mount provided. When the battery pack is positioned as in Fig. 2, make sure that the push lock button latches in place! To remove the battery pack, proceed in reverse order.

Caution!
Protect your battery pack against moisture, rain, and high humidity. Make sure that no water runs over the battery pack or its contacts during operation.


Use the separately available PXC battery protector (Fig. 3a) if required. First insert the battery in your PXC device (Fig. 2). As you do so, make sure that the contacts on the equipment and on the battery are dry. Now pull the PXC battery protector (D) over the battery (Fig. 3b). Make sure that the cover is not damaged, is correctly seated and seals every contact surface with the equipment. Always remove the PXC battery protector before you take the battery out of the equipment.

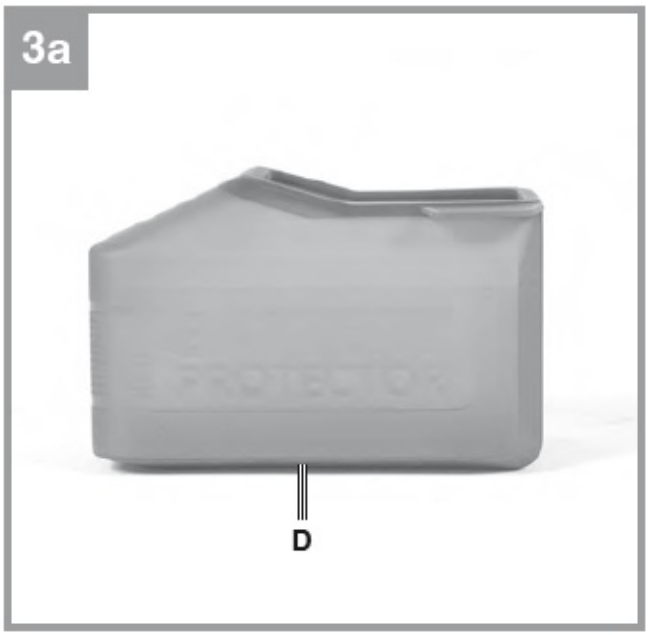



Charging the battery

1. Take the battery pack out of the equipment. To do so, press the pushlock button (Fig. 2/Item C).

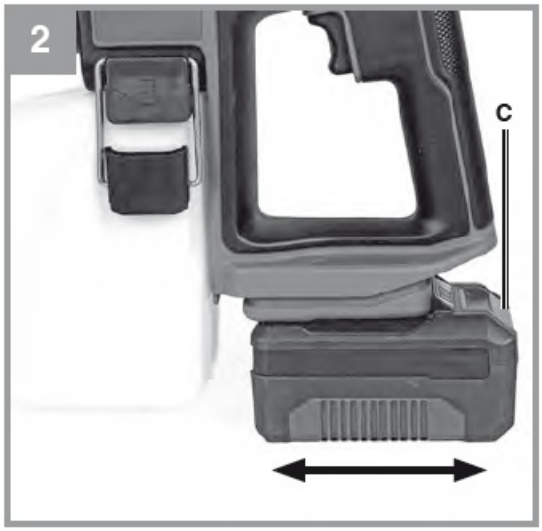

2. Check that your mains voltage is the same as that marked on the rating plate of the battery charger. Insert the power plug of the charger into the socket outlet. The green LED will then begin to flash.
3. Insert the battery pack into the charger (Fig. 4).



4. In the section entitled „Charger indicator, “ you will find a table with an explanation of the LED indicator on the charger.

The battery pack can become a little warm during the charging. This is normal.

If the battery pack fails to charge, check:

- whether there is voltage at the socket outlet
- whether there is good contact at the charging contacts


If the battery pack still fails to charge, send

- the charger
- and the battery pack to our customer service center.

To ensure that items are properly packaged and delivered when you send them to us, please contact our customer service or the point of sale at which the equipment was purchased. When shipping or disposing of batteries and cordless tools, always ensure that they are packed individually in plastic bags to prevent short circuits and fires.

To ensure that the battery pack provides long service, you should take care to recharge it promptly. You must recharge the battery pack when you notice that the performance of the device drops. Never allow the battery pack to become fully discharged. This will cause it to develop a defect.

Battery charge level indicator (Fig. 5)
Press the button for the battery charge level indicator (Item A). The battery charge level indicator (Item B) shows the charge status of the battery using 3 LEDs.

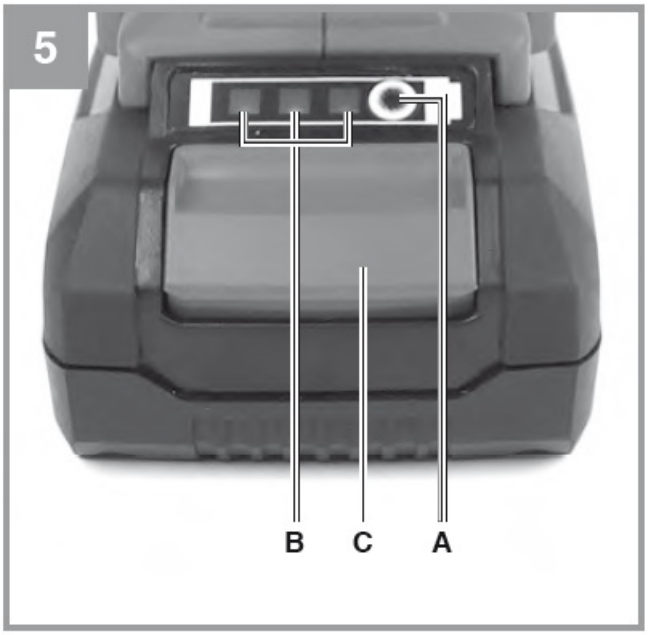

- **All 3 LEDs are lit:**
  The battery is fully charged.
- **2 or 1 LED(s) are lit:**
  The battery has an adequate remaining charge.
- **1 LED flashes:**
  The battery is empty, recharge the battery.
- **All LEDs blink:**
  The battery temperature is too low. Remove the battery from the equipment, and keep it at room temperature for one day. If the fault reoccurs, this means that the rechargeable battery has undergone exhaustive discharge and is defective. Remove the battery from the equipment. Never use or charge a defective battery.

Preparing the spray solution and filling the tank
Switch off the tool and remove the battery pack.

Note:

- Always prepare and use the spray solution according to the instructions issued by the solution manufacturer. Fill the tank only with the amount of solution you intend to use.
- The consistency of the spray solution must be similar to that of water.
- The spray solution tank has a maximum capacity of 1.0 liter of solution.
- Never use pesticides in living quarters, stables, or storage rooms for food and animal feed. Pesticides are allowed to be used only outdoors.
- Spray solution can be prepared and thoroughly mixed in a separate container before it is filled into the tank of the pressure sprayer.
- If you intend to use organic spray solutions, they must be filtered before you fill them into the sprayer.
- Clean the tool immediately after each use. This is the only way to keep the solution-carrying components clean and prevent clogging. Clogged components can result in defects.

1. Place the pressure sprayer on a level surface. Flip up the tank fasteners (Fig. 6/Item 5) and lift the motor component to the spray solution tank. The spray solution tank has a maximum capacity of 1 liter.

2. Fill the fully prepared spray solution into the spray solution tank. Do this with the help of a suitable funnel if necessary. Place the motor component back on the spray solution container.
3. Attach the name of the current spray solution to the spray solution tank.

Operation

Switching on
Press the On/Off switch (Fig. 1/Item 2).

Switching off
Let go of the On/Off switch (Fig. 1/Item 2).

Spraying

WARNING!
Read the enclosed booklet containing the safety information.

- Spray the plants or other objects directly with a moderately wide spray jet.

Adjusting the spray jet
At the nozzle, you can adjust the shape of the spray jet from dot-shaped (concentrated spray on a small area) to fan-shaped (finely atomized spray over a large area).

1. Interrupt the spraying.
2. Turn the adjustable spray head (Fig. 7/Item 1) counter-clockwise to obtain a narrow to dot-shaped spray jet.



3. Turn the adjustable spray head clockwise to obtain a wider spray jet.

Transport
Carry the tool by its handle (Fig. 1 / Item 3a).

Cleaning, maintenance, and ordering spare parts

Hazard!

Always pull out the battery pack before starting any cleaning work. Never use flammable solvents to clean the equipment.


Cleaning (outside)

- Keep all safety devices, air vents, and motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device. The ingress of water into an electric tool increases the risk of an electric shock.

Cleaning the inside of the container.
After use, clean the equipment and leave the container open to dry. Note the cleaning instructions in the directions for use that came with the chemical in addition to these cleaning instructions.

Remove any remaining liquid from the tank through the container's filler opening and store the liquid properly for subsequent use or dispose of it under the applicable regulations.


1. Flip the container caps (Fig. 6/Item 5) up and remove the motor part from the container.

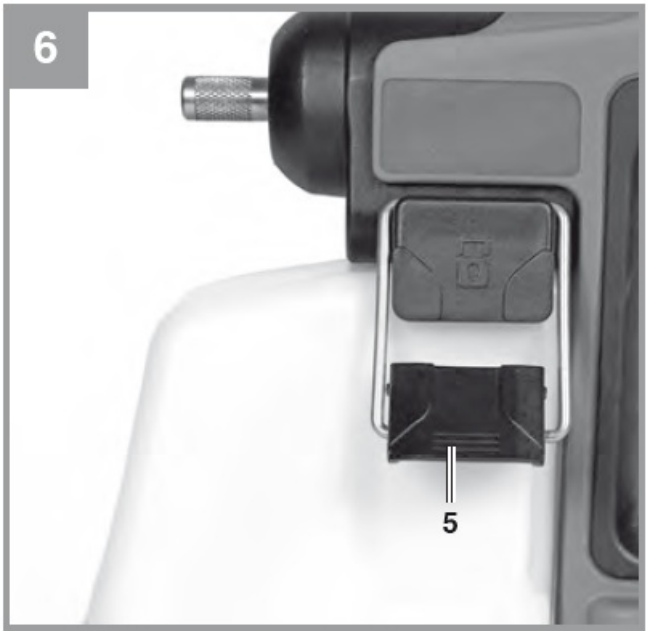


2. Empty the container completely.
3. Pour about 0,5 liters of clear water into the empty container.
4. Fit the motor part back onto the container and close the container by hooking the caps on the motor part and flipping them down.
5. Shake the pressure spray vigorously several times.
6. Spray the contents onto the area just treated or an area reserved for this purpose.
7. Repeat this process.
8. The container can now be drained through the filler opening as described above.
9. Allow the container to dry out completely before attaching it to the motor part again.

Cleaning the nozzle and adjustable spray head
If foreign bodies have collected in the nozzle and clogged it up, clean the nozzle as follows (never blow it out with your mouth!):

1. Turn the adjustable spray head counterclockwise as far as it will go (Fig. 8).

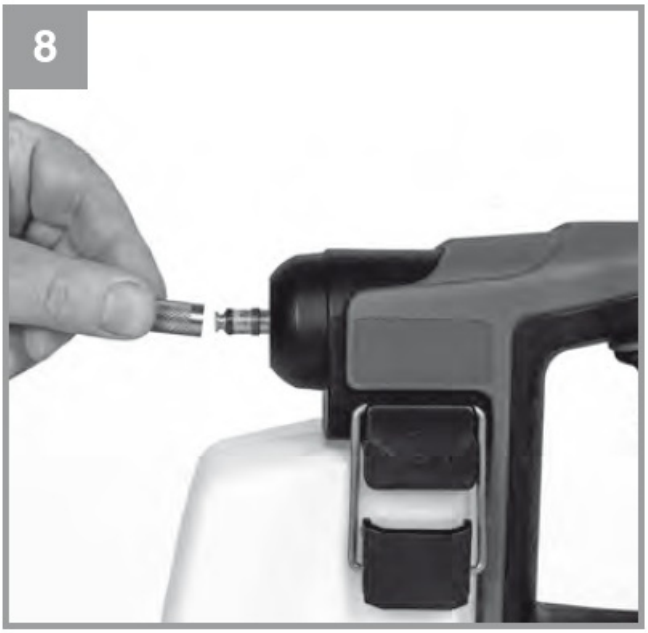


2. Clean the exposed nozzle (Fig. 9a) and the hole in the spray head (Fig. 9b) of residue using a thin wire.

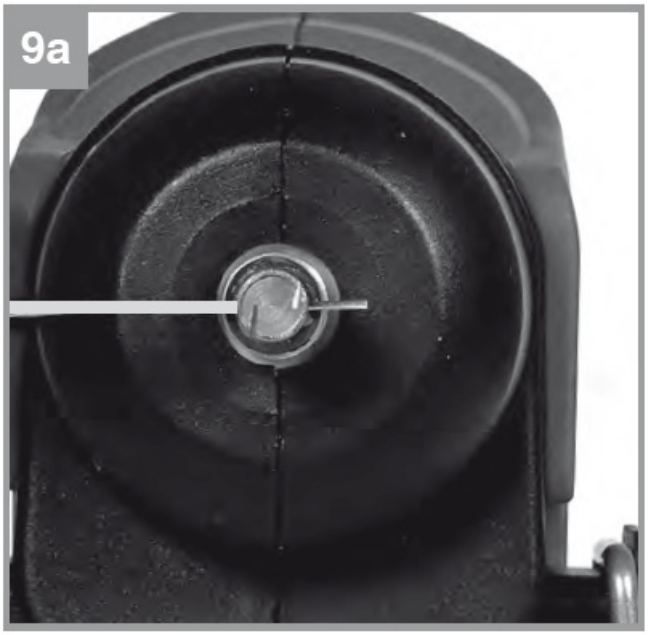



3. Flush the nozzle and spray the head with clear water.
4. Allow the nozzle and spray head to dry.

Cleaning the intake filter (Fig. 10)
Clean the intake filter in the tank at least once a year, as soon as you notice a reduction in the sprayed quantity of solution, or when problems arise (see section 10).

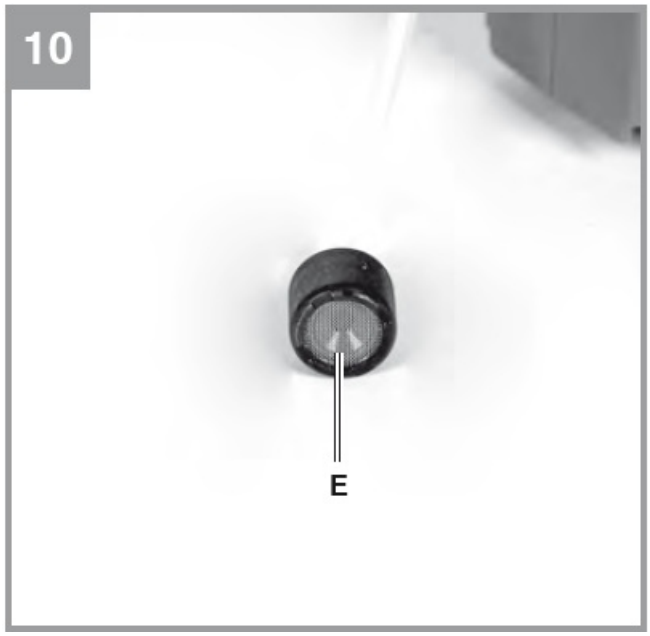

1. Remove the motor component from the tank (see section 5.4).
2. Clean the intake filter (Item E) with a brush in clear water.
3. Place the motor component back on the tank (see section 5.4)

Maintenance
There are no parts inside the equipment that require additional maintenance.

Ordering replacement parts:
Please quote the following data when ordering replacement parts:

- Type of machine
- Article number of the machine
- Identification number of the machine
- Replacement part number of the part required

For our latest prices and information please go to **www.Einhell-Service.com**.

Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse. The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.

Storage and transport

Storage

- Store the equipment and its accessories in a dark and dry place at above-freezing temperature.
- The ideal storage temperature is between 5 and 30 °C. Store the electric equipment in its original packaging.
- Equipment must always be stored completely dry and clean.

Transport

- Switch off the equipment and remove the battery.
- Fit the shipping protectors, if any.
- Protect the machine from damage and the strong vibrations that can occur particularly when transporting in vehicles.
- Secure the machine

Troubleshooting guide

Fault	Possible cause	Remedy
The motor does not start	a) Equipment not switched on b) Connections on the motor loose c) Battery not correctly inserted	a) Press the On/Off switch (see section 6.) b) Have the tool checked by a customer service workshop c) Remove the battery pack and insert it again (see section 5.)
The equipment does not spray, or only sprays at reduced power, even though the tank is full	a) The nozzle is fully or partially clogged b) The intake filter in the spray solution tank is fully or partially soiled c) The solution has too high a viscosity and therefore unsuitable	a) Clean the nozzle (see section 7.3) b) Clean the intake filter (see section 7.4) c) Remove the solution and clean the tool and the tank (see section 7.)
Too much spray mist	a) Distance from an object is too great b) Spray width too great	a) Reduce the spraying distance b) Reduce the spraying width (see section 6.3.1)
Motor stops suddenly	Battery spent	Insert a charged battery pack (see section 5.1)

Charger indicator

Indicator status		Explanations and actions
Red LED	Green LED	

Off	Flashing	**Ready for use** The charger is connected to the mains and is ready for use; there is no battery pa ck in the charger
On	Off	**Charging** The charger is charging the battery pack in quick charge mode. The char- ging ti mes are shown directly on the charger. Important! The actual charging times may vary slightly from the stated charging times depending on the existing battery charge.
Off	On	**The battery is charged and ready for use. (READY TO GO)** The unit then changes over to gentle charging mode until the battery is fully charged. To do this, leave the rechargeable battery on the charger for approx. 15 minutes l onger. **Action:** Take the battery pack out of the charger. Disconnect the charger from the main su pply.
Flashing	Off	**Adapted charging** The charger is in gentle charging mode. For safety reasons, the charging is performed less quickly and takes more time. The reasons can be: – The rechargeable battery has not been used for a very long time. – The battery temperature is outside the ideal range. **Action:** Wait for the charging to be completed; you can still continue to charge the battery pack.
Flashing	Flashing	**Fault** Charging is no longer possible. The battery pack is defective. **Action:** Never charge a defective battery pack. Take the battery pack out of the charger.
On	On	**Temperature fault** The battery pack is too hot (e.g. due to direct sunshine) or too cold (below 0° C). **Action:** Remove the battery pack and keep it at room temperature (approx. 20° C) for one day.

For EU countries only

- Never place any electric power tools in your household refuse.
- To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the return request:

- As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment by the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.
- Please note that batteries and lamps (e.g. light bulbs) must be removed from the tool before it is disposed of.
- The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of Einhell Germany AG.

Subject to technical changes

Service Information
We have competent service partners in all countries named on the guarantee certificate whose contact details can also be found on the guarantee certificate. These partners will help you with all service requests such as repairs, spare and wearing part orders, or the purchase of consumables.

Please note that the following parts of this product are subject to normal or natural wear and that the following parts are therefore also required for use as consumables.

Category	**Example**
Wear parts*	Nozzle
Consumables*	
Missing parts	

- Not necessarily included in the scope of delivery!

In the eff ect of defects or faults, please register the problem on the internet at **www.Einhell-Service.com**. Please ensure that you provide a precise description of the problem and answer the following questions in all cases:

- Did the equipment work at all or was it defective from the beginning?
- Did you notice anything (symptom or defect) prior to the failure?
- What malfunction does the equipment have in your opinion (main symptom)? Describe this malfunction.

Warranty certificate

Dear Customer,

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the service number shown. Please note the following terms under which guarantee claims can be made:

1. These guarantee terms apply to consumers only, i.e. natural persons intending to use this product neither for their commercial activities nor for any other self-employed activities. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory rights of guarantee. Your statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.
2. The warranty services cover only defects due to material or manufacturing faults on a product that you have bought from the manufacturer mentioned below and are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer.
   Please note that our devices are not designed for use in commercial, trade, or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.
3. **The following are not covered by our guarantee:**
   - Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
   - Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
   - Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.
4. The guarantee is valid for 24 months starting from the purchase date of the device. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.
5. To claim the guarantee, please register the defective device at: **www.Einhell-Service.com**. Please keep your bill of purchase or other proof of purchase for the new device. Devices that are returned without proof of purchase or without a rating plate shall not be covered by the guarantee, because appropriate identification will not be possible. If the defect is covered by our guarantee, then the item in question will either be repaired immediately and returned to you or we will send you a new replacement.

Of course, we are also happy off er a chargeable repair service for any defects that are not covered by the scope of this guarantee or for units that are no longer covered. To take advantage of this service, please send the device to our service address. Also refer to the restrictions of this warranty concerning worn parts, consumables, and missing parts as set out in the service information in these operating instructions.

Declaration Of Conformity

Declaration of conformity: We declare conformity in accordance with the EU directive and standards for article

Akku-Drucksprühgerät* GE-WS 18/10 Li (Einhell)

- ☐ **2014/29/EU**
- ☐ **2005/32/EC_2009/125/EC**
  - ☐ **(EU)2015/1188**
- ☐ **2014/35/EU**
- ☐ **2006/28/EC**
- ☒ **2014/30/EU**
- ☐ **2014/32/EU**
- ☐ **2014/53/EU**
- ☐ **2014/68/EU**
- ☐ **(EU)2016/426**
  Notified Body:
- ☐ **(EU)2016/425**
- ☒ **2011/65/EU_(EU)2015/863**

- ☐ **2006/42/EC**
  - ☐ **Annex IV**
    Notified Body:
    Reg. No.:
- ☐ **2000/14/EC_2005/88/EC**
  - ☐ **Annex V**
  - ☐ **Annex VI**
    Noise: measured L_{WA} = dB (A); guaranteed L_{WA} = dB (A)
    P = kW; L/Ø = cm
    Notified Body:
- ☐ **2012/46/EU_(EU)2016/1628**
  Emission No.:

Standard references: EN 62841-1; EN 50580; EN IEC 55014-1; EN IEC 55014-2

ISC GmbH · Eschenstraße 6 · D-94405 Landau/Isar

Landau/Isar, den 07.12.2022

Andreas Weichselgartner/General-Manager

Shao Wei/Product-Management

First CE: 22
Art.-No.: 34.252.40 **I.-No.:** 21012
Subject to change without notice

Archive-File/Record: NAPR024619
Documents registrar: Josef Landauer
Wiesenweg 22, D-94405 Landau/Isar

* *GB* Cordless pressure sprayer · *F* Pulvérisateur à pression sans fil · *I* Spruzzatore a pressione a batteria · *DK/N* Akku-tryksprøjte · *S* Batteridriven tryckspruta · *CZ* Akumulátorový tlakový postřikovač · *SK* Akumulátorový tlakový postrekovač · *NL* Accu druksproeier · *E* Pulverizador a presión inalámbrico · *FIN* Akku-paineruisku · *SLO* Akumulatorska tlačna škropilnica · *H* Akkumulátoros-nyomáspermetező · *RO* Pulverizator sub presiune cu acumulator · *GR* Συσκευή ψεκασμού πίεσης, με μπαταρία · *P* Pulverizador de pressão sem fio · *HR/BIH* Akumulatorski tlačna prskalica · *RS* Akumulatorski uređaj za prskanje pod pritiskom · *PL* Akumulatorowy opryskiwacz ciśnieniowy · *TR* Akülü ilaçlama pompası · *RUS* Аккумуляторный опрыскиватель · *EE* Akuga aiaprits · *LV* Akumulatora spiediena smidzinātājs · *LT* Akumuliatorinis slėginis purkštuvas · *BG* Пръскачка със зарядно · *UKR* Акумуляторний розпилювач під тиском · *MK* Прскалка со притисок на батерии

UK CA Declaration of conformity

We, Einhell UK Ltd

Champions Business Park, First Floor Unit 10, Arrowe Brook Rd, Upton, Wirral CH49 0AB, United Kingdom

declare the conformity to UK standards and legislation was assessed for:

Cordless Pressure Sprayer GE-WS 18/10 Li (Einhell)

UK legislation

- ☐ **Simple Pressure Vessels (Safety) Regulation**
- ☐ **Electrical Equipment (Safety) Regulation**
- ☐ **Radio Equipment Regulation**
- ☐ **Personal Protective Equipment Regulation**
- ☐ **The Ecodesign for Energy-Related Products and Energy Information Regulation**
- ☒ **The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulation**
- ☐ **Noise Emission in the Environment by Equipment for use Outdoors Regulation**
  - ☐ **Annex V**
  - ☐ **Annex VI**
    Noise: measured L_{WA} = dB (A); guaranteed L_{WA} = dB (A)
    P = kW; L/Ø = cm
    UK Approved Body:
- ☐ **Supply of Machinery (Safety) Regulation**
  - ☐ **Annex IV**
    UK Approved Body:

    UKTE Certificate No.:
- ☒ **Electromagnetic Compatibility Regulation**
- ☐ **Measuring Instruments Regulation**
- ☐ **Pressure Equipment (Safety) Regulation**

Standards: BS EN 62841-1; BS EN 50580; BS EN IEC 55014-1; BS EN IEC 55014-2

Wirral, 2022.12.07

Tom Chambers, Managing Director Einhell UK Ltd.

Article Number: 34.252.40 **I.-No.:** 21012
Subject to change without notice

Archive-File/Record: NAPR024619
Documents registrar: Josef Landauer
Wiesenweg 22, 94405 Landau/Isar, Germany

Documents / Resources

	Einhell GE-WS 18 Cordless Pressure Sprayer [pdf] Instruction Manual GE-WS 18 Cordless Pressure Sprayer, GE-WS 18, Cordless Pressure Sprayer, Pressure Sprayer, Sprayer

References

- Einhell Service
- Einhell Service
- User Manual

Manuals+, Privacy Policy