USER MANUAL

Pocket Arcade

With more than 600 timeless games !




NEO LEGEND
ARCADE 2.0

PREMIUM ARCADE MACHINES

Table of contents

Presentation	1
Getting started	2
Navigation	3
Miscellaneous settings	5
Technical specifications	12
Maintenance and safety warnings	14
Warranty service	16

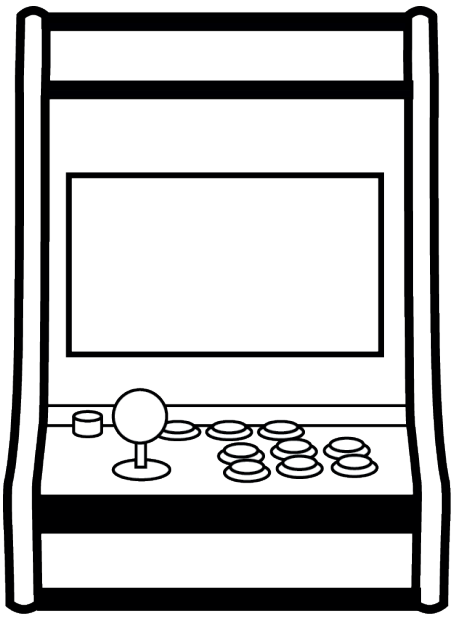

Presentation

About the user manual

Congratulations on your purchase of the Neo Legend system !
Your Pocket Arcade is equipped with the **ARKADOR** system with more than 680 games.

The following advice will help you get the most out of your arcade game for years to come. If it's not covered by the manual, we recommend getting the help of a qualified technician.


Safety warning

DO NOT PLACE the Pocket© is an area that is damp or dusty. The terminal should be kept at an ambient temperature of between 5˚C (41˚F) et 35˚C (95˚F). The console must be kept in an area with good air circulation. It must be placed on a level and stable surface.
For security reasons, ensure that the doors and other access areas of the console are kept closed. Open doors can easily be snagged by passing objects, causing serious damage.
DO NOT USE the console in proximity to a heat source such as a stove or fireplace, in the proximity of flammable gas, explosives or chemicals or other flammable products.
Immediately discontinue use of the console if you notice an abnormal smell or smoke emitting from it.

TRANSPORT PRECAUTIONS. To prepare your console for transport, you should shut it down and unplug the device, in order to avoid damage to the connections. You must not transport it whilst it is switched on.
Before moving the console, ensure that you protect the screen and the panel. WARNING ! Any strikes to the screen can cause permanent damage to the console. During transport, wherever possible, the console should be kept upright, and shaking should be avoided. For transport in a vehicle, the console must be properly secured to prevent falls.

Mise en route

- Plug the power cable provided at the back of the console. Then, press the switch key to make the console start.

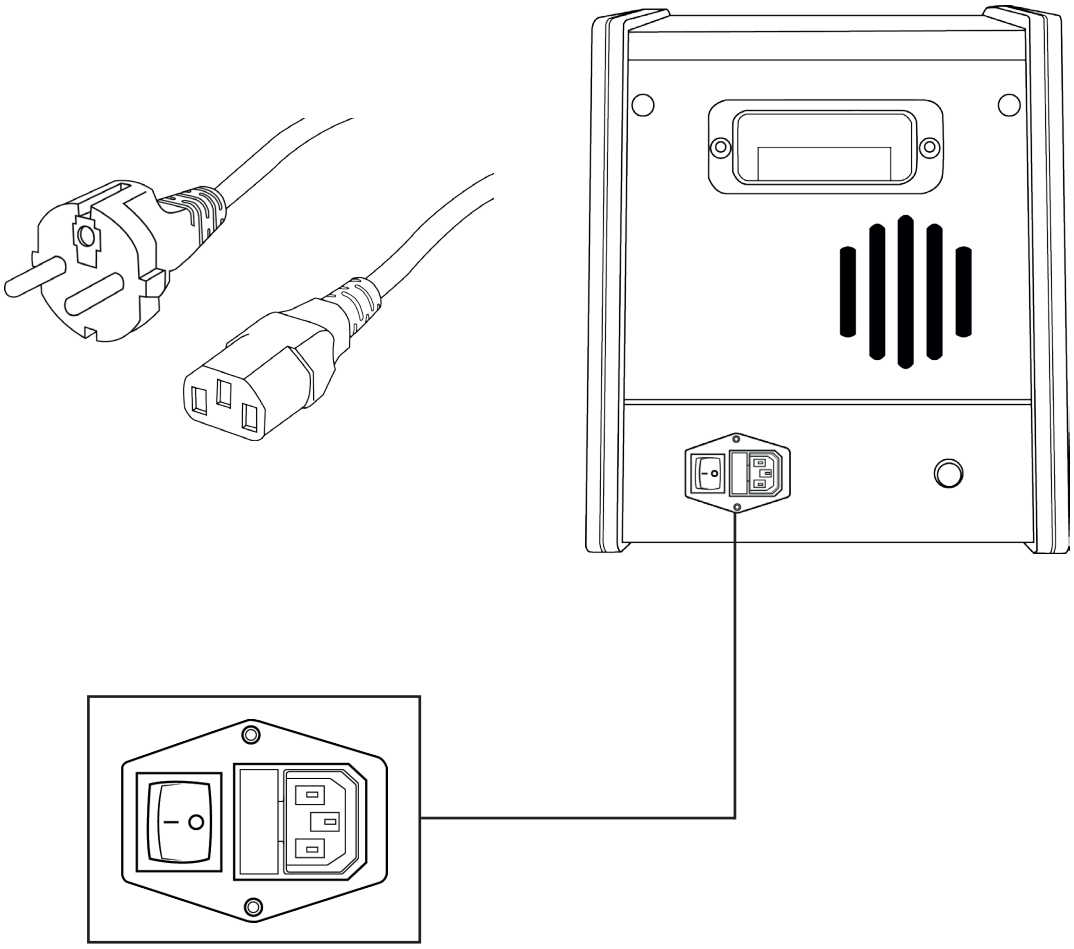


Navigation

- Once the introduction video is finished, the game selection screen will show :



- Using the **PLAYER 1** controller, choose a game with the directions ↑ or ↓.
  You can access previous or next pages with the directions ← or →.

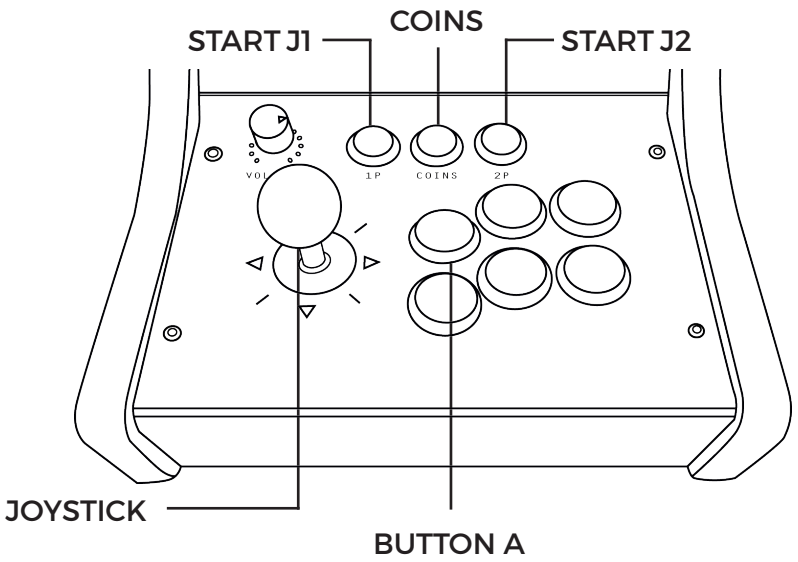

- Press on **CREDIT/COIN** to credit the game (except when the Freeplay mode is active)

- Select the game of your choice with button **A(1)** of **PLAYER 1**.




- Press **PLAYER 1 START** to start the game.
- You can put more credit onto the machine at any point during the game by pressing **CREDIT/COIN**.
- To return to the menu, press the **START** and **CREDIT/COIN** buttons simultaneously from **PLAYER 1** for at least three seconds.

You can switch off your console with the help of the switch on the back, at the bottom right.

Miscellaneous settings


Sound adjustment

You can adjust the volume using the external control knob located at the top left of the panel.

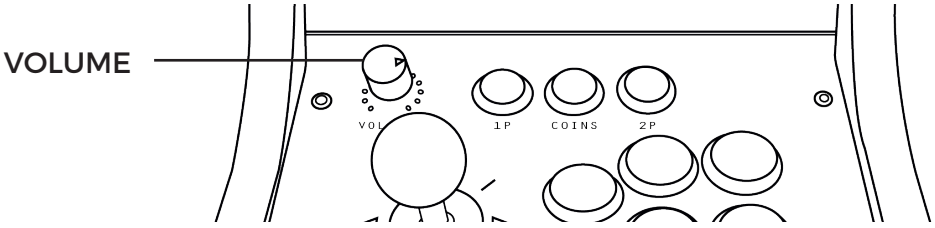


Setting calibration

By pressing the **SYSTEM SETUP** button at the back of the Pocket©, you access the system settings of the game card.

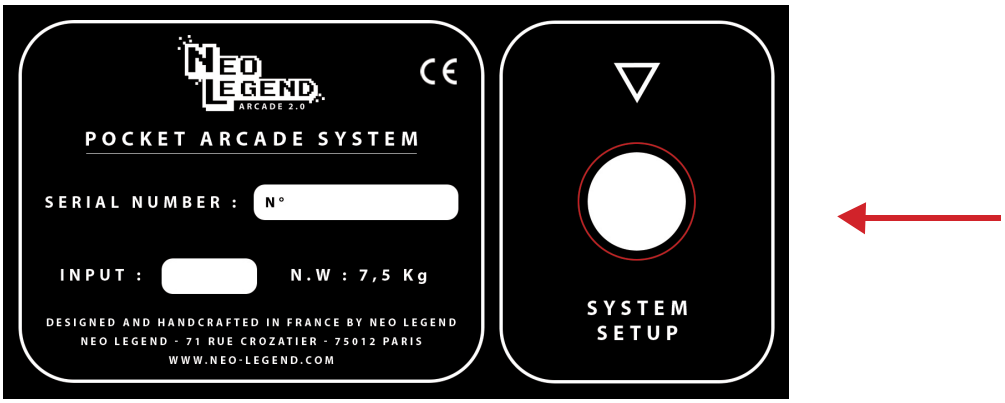



IO TEST : This option allows you to test card connections (credit, joystick, buttons). Before the test, the function will appear bright blue. After the test, it will be highlighted in red. Whilst pressing button **A(1)**, the function will appear in yellow.

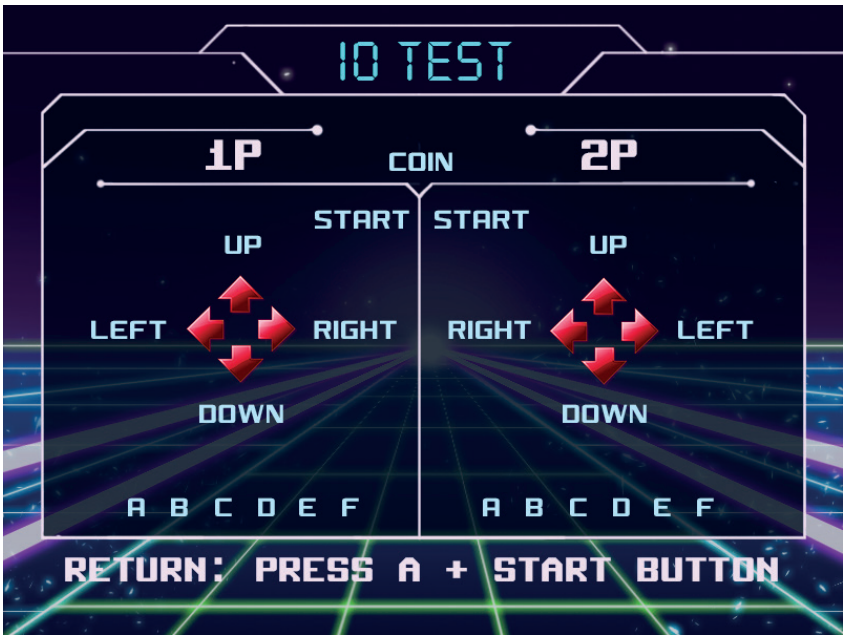

CHANGE COINS SET : Press **A(1)** button to change the way in which credits are handled. Example : 1:1 (one coin gives one credit) or 2:1 (two coins give one credit, etc).

EXIT GAME MODE : Press on **B(2)** button to change the way of exiting the game.

- o **START+COINS** : Press and hold **PLAYER 1 START** button whilst putting in a credit to quit the game.
- o **MENU** : Press and hold **PLAYER 1 START** until the menu appears. Next, select « Continue » to put a credit on the game, or « Exit » to re-enter the game selection menu.

AUTO EXIT : Press **A(1)** button to activate or deactivate the automatic exit from games.


- o **AFTER 3 MINUTES** : Automatic exit from the game after 3 minutes without playing.
- o **OFF** : No **AUTO EXIT** management.

SELECT GAME MODE : Press **A(1)** button to change the game selection mode


- o **WITH COINS** : Select a game only with the insertion of a credit
- o **ANY** : Select a game without the need for credit

No matter which parameter is selected, a credit will always be needed to start the game.

SYSTEM SETTINGS : Press A(1) button to enter into the parameters

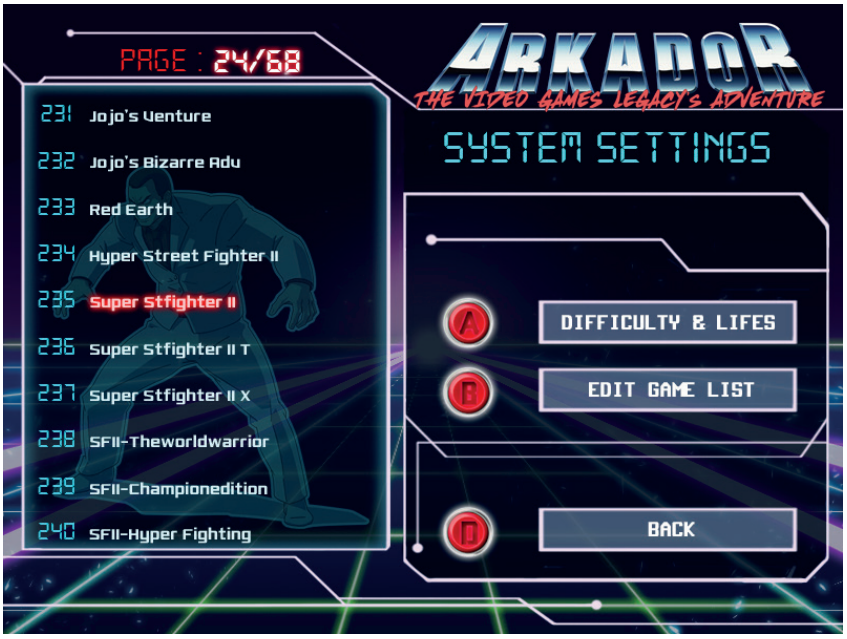

· *Difficulty & Lifes :*
Press A(1) to enter the settings screen for the difficuly and the number of lives.

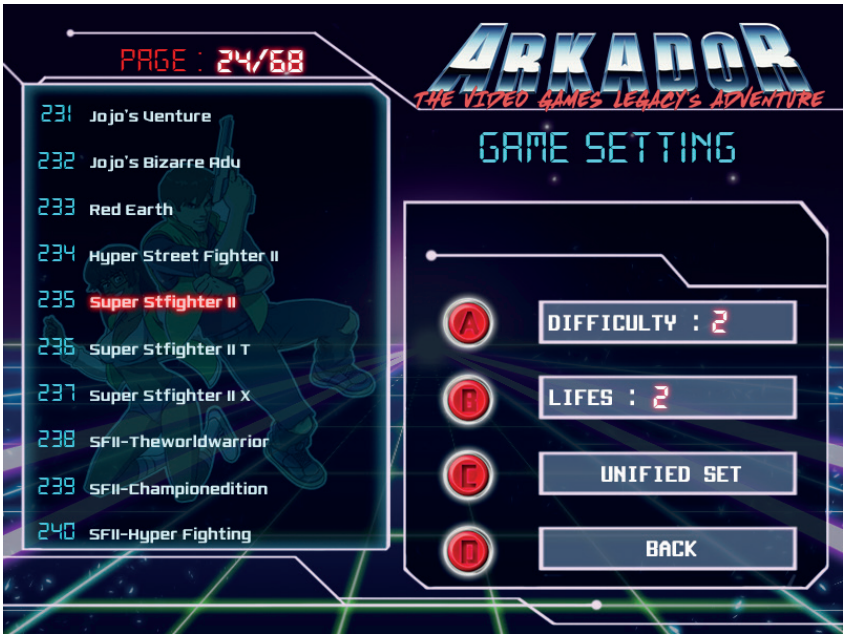


Use the joystick to select the game settings for which you want edit.

- Press **A(1)** of **PLAYER 1** to change the difficulty level.
- Press **B(2)** to change the number of lives
  (Warning, not all games benefit from this option)
- Press **C(3)** to apply the parameters of the current game to all the games on the card.
- Press **D(4)** to exit the parameters screen.

• *Display/Hide :*

Press **B(2)** to enter the game settings screen

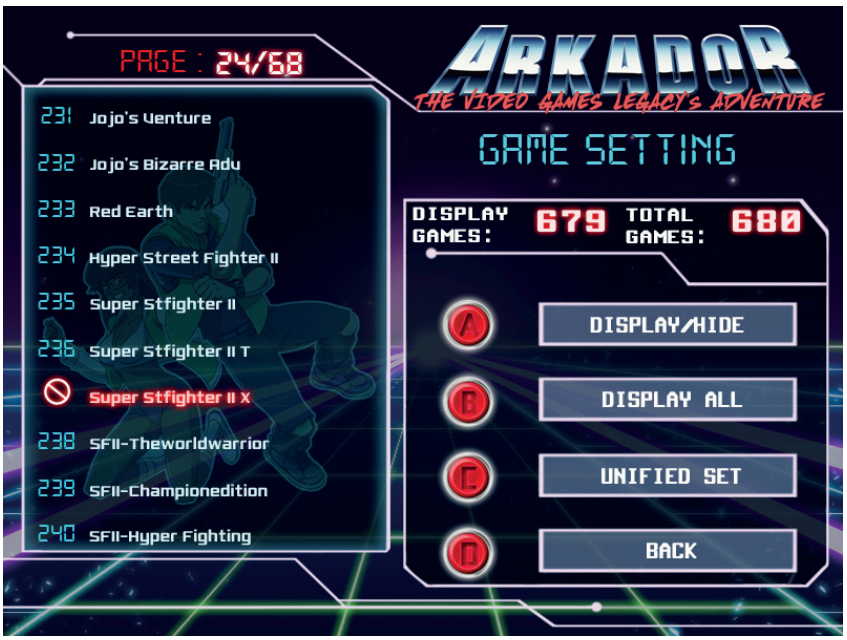

Move the joystick to select the game which you wish to configure.

- Press **A(1)** of **PLAYER 1** to show/hide the selected game.
- Press **B(2)** to show all games.
- Press **C(3)** to hide all games.
- Press **D(4)** to leave this settings screen.


BOOK KEEPING : The games card can save the number of credits (coins) used, the total being shown on the top right of the menu «**BOOK KEEPING**».

If you wish to reset de credit (coins) counter, you must enter the password in the boxes on the left. By default, this is set to **55555555**.

With the joystick, move up or down to change the number, and right or left to select the next or previous number.



Once confirmation of the password is complete, you can restart the credit counter (Coin Clear) or change the password (Change Password).

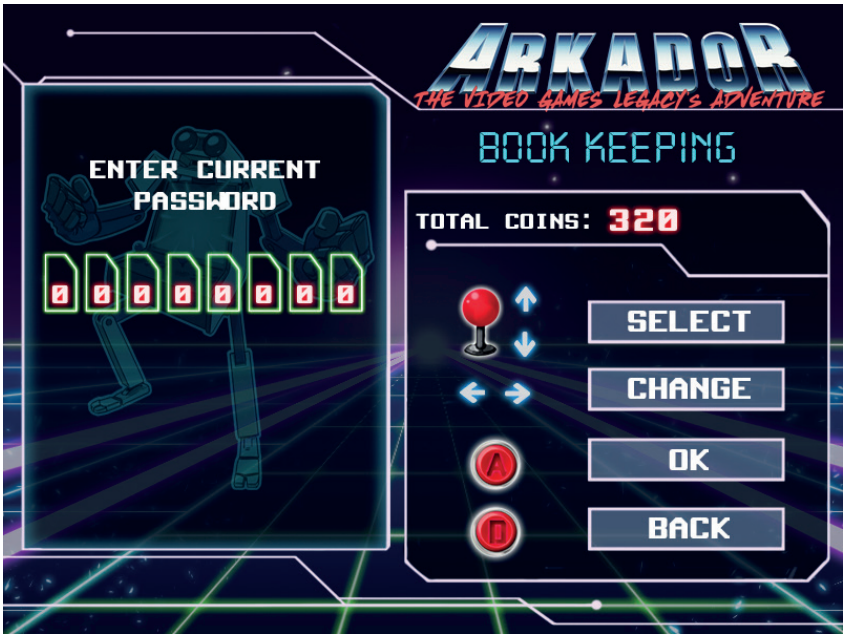


SAVE SETTINGS & REBOOT : Press **A(1)** to save the parameters to see bring up the following screen.



FACTORY SETTINGS & REBOOT : Press **A(1)** to reset the factory settings on the card.

Technical Specifications

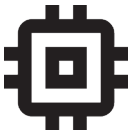

- Pro monitor « wideview » 178° viewing angle.
- 10 inches (25 cm diagonally) – Format 16/10
- 1280 x 800 HD resolution (no latency) « Lag Free » Pixel Match Technology.
- Integrated mono amplifier 5 watts
- 1 Loudspeakers 10 cm in diameter
- Potentiometer volume setting accessible at the control panel
- 8 Watts White Neon Ligh 3400K
- ON/OFF switch with fuse protection « safe protect »
- 240 volts, voltage on demand
- 15 watts.
- CE certified
- Power Cable with a 1m80 length



- Markless metal panel with high quality serigraphy
- Melamine wood structure
- Parsol bronze tinted glass 4 mm to a better contrast and a better reflects management
- Original « T-molding » rubber
- Plexiglas Marquee 4mm
- Securit glass
- 39 cm (H), 29 cm (L), 34 cm (P).
- 7,5 Kg.



- 6 Sanwa Denshi, 30 mm.
  1 million clicks guaranteed.

- 1 joystick SEIMITSU LS 32, 8 directions.

- 1 Sanwa Denshi balltop, 35 mm.

- 1 Sanwa Denshi credit button, 24 mm.
  1 million clicks guaranteed.

- 2 Sanwa Denshi Start button, 24 mm.
  1 million de clicks guaranteed.



- ARKADOR SYSTEM including 680 arcade games from the 80s and 90s

Maintenance and safety warnings

Maintenance of the console

To maintain your console, you must : regularly dust the surfaces, clean the screen and the panel with a soft cloth, regularly clear the fans of accumulated dust. Do not use any cleaning products that contain alcohol, ammonia, petroleum or any abrasive substances. If cleaning is necessary, use a mild product with a soft cloth. You can use a cloth dampened with water or a very weak soap solution.

Electromagnetic signals

Like all electronic equipment, the consoles can give off and receive electromagnetic signals. Neo Legend takes all necessary safety measures for its products, conforming to all existing safety norms regarding EMF at the time of manufacture of the products.

CE Mark

With this document, Neo Legend declares that the equipment conforms to the essential norms, and to the other dispositions pertaining to directive 1999/5/CE.
This equipment conforms to the directives 2004/108/EC of the « Electromagnetic Compatibility » and 2006/95/EC on « Low Voltages ».

Recycling

How should you dispose of your product at the end of its life ? Your product is conceived and made with high quality materials and components, which can be recycled and reused. This product is covered by the European Directive 2002/96/EC. Local facilities for recycling electric and electronic products vary. Please follow those guidelines of your local area and do not dispose of your used product with household waste. At the end of its life, dispose of your product in a center that is equipped to reduce potential negative consequences to the environment or to human health.

Service and maintenance

For all questions relating to the function of your console, contact your reseller or Neo Legend at the following email : sav@neo-legend.com or on +33 (0)1 44 63 06 23.

Warning : Photosensivity / Epilepsy seizures

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. These conditions may trigger previously undetected epileptic symptoms or seizures in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family has an epileptic condition or has had seizures of any kind, consult your physician before playing

- Avoid playing when you are tired or need sleep.
- Use in a well-lit area and keep as far away as possible from the screen.
- Take a 15-minute break during each hour of play.

Warranty Service

Exclusions from the guarantee :

- The product has been examined, taken apart, repaired or modified by non-authorised persons ;
- The serial number has been altered, cancelled, removed or erased ;
- The guarantee seals have been broken, removed or altered ;
- The damage has been caused by an external electric failure ; of an incorrect use of the product, whether intentional or accidental, in the case of abuse, of negligence or of an inappropriate maintenance, or of use in abnormal conditions ;
- Damage caused by the use of components that are not made or sold by Neo Legend ;
- Damage which is caused by third-party software or viruses ;
- Software or settings which have been lost following a repair or a replacement which was not carried out by Neo Legend personnel ;

The return of the Pocket Arcade© to your reseller during the guarantee period does not mean that the repairs will automatically be carried out free of charge. In effect, Neo Legend reserves the right, on receipt of the product, to verifiy the validity of your guarantee as well as the legitimacy of your repair request.

Neo Legend is in no way responsible for the return of peripherals that are contained with the returned product.
Neo Legend is in no way responsible for the loss of personal data or damage caused to removable personal stands.

NEO LEGEND
ARCADE 2.0

PREMIUM ARCADE MACHINES

DESIGNED AND HANDCRAFTED
IN FRANCE
BY NEO LEGEND
71 RUE CROZATIER - 75012 PARIS
+33 (0) 1 44 63 06 23

WWW.NEO-LEGEND.COM