
LCD-I Instructions

LCD Button Instructions

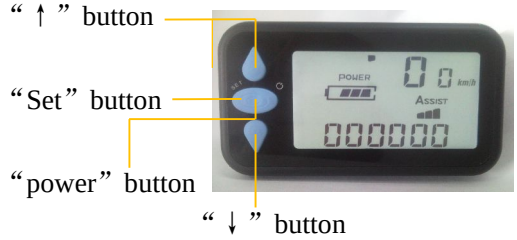

Brightness Adjustment

Press“set”button into backlight adjustment mode.

Adjust brightness through “ ↑ ” button and “ ↓ ” button.

Five brightness levels are available at disposal.

Wheel Diameter Setting

Press “ Set ” button for six seconds into wheel diameter setting mode. (for the vehicle assembly worker).It is shown as：

When shown as , change wheel diameter and the perimeter of rim through “↑”button and “↓”button.

Setting the range of the wheel diameter :16〞～28〞(different perimeter of the rim can be selected with the same wheel diameter). Unit of the perimeter of the rim : mm.

With no further button operation within 5 seconds, the system would automatically exit “Set” mode and return back into normal working mode.

Press“Set”button and “ ↓ ”button simultaneously to display error code , which indicates the malfunction of the system due to the systematic error.

Assistance Adjustment

“ ↑ ” button：enhance assist；

“ ↓ ” button：weaken assist；

Six levels are available at disposal.

Press “ ↓ ” button until “Auto” icon is shown, the Auto Mode is shown as follows:

Ride Mileage & Time Display

Press “ Set ” button into Trip Distance Display mode(MILE/KM)

Press “ ↓ ” button to clear data

Press “ Set ” button again into trip riding time display mode

Press “ ↓ ” button to clear data.

Press “ ↑ ” button and “ ↓ ” button simultaneously for about six seconds to switch the display between Kilometer and Mile, including the speed of riding , trip distance and ODO.

Other Display

1、Battery Power display：

2、Motor power display：


3、Speed：

4、Work Mode：

5、ODO ：

6、Error Code：

Wiring Diagram

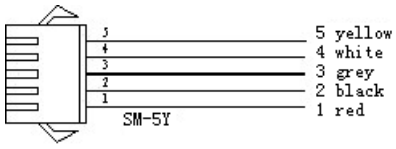

1: 24V/36V 2:GND 3:Tx 4:Rx 5:Lock wire