
Combi

i-Thruller

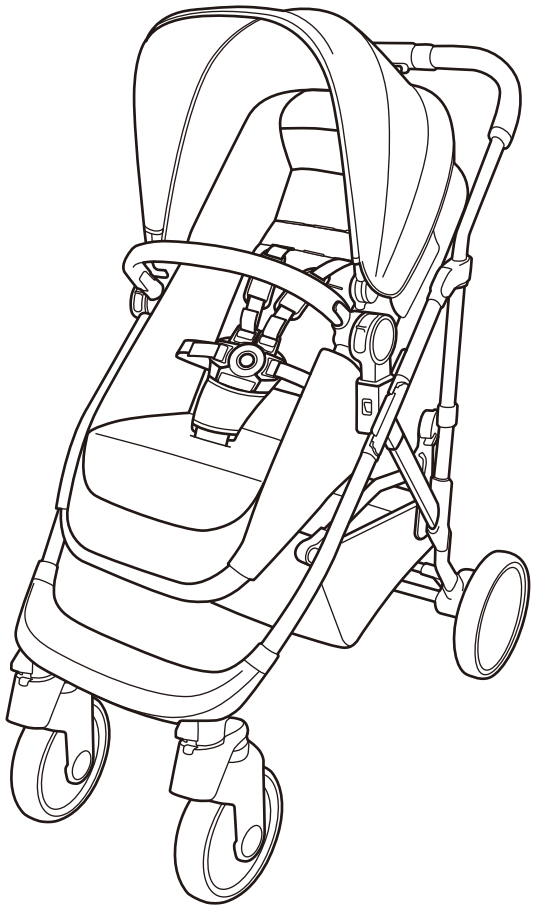

EN Instruction manual

简体中文 说明书

KOR 사용설명서


i-Thruller


ENGLISH Instruction manual 9

简体中文 使用说明书 21

KOREAN 사용설명서 31

List of components (P15)
部件名称（详见P25）

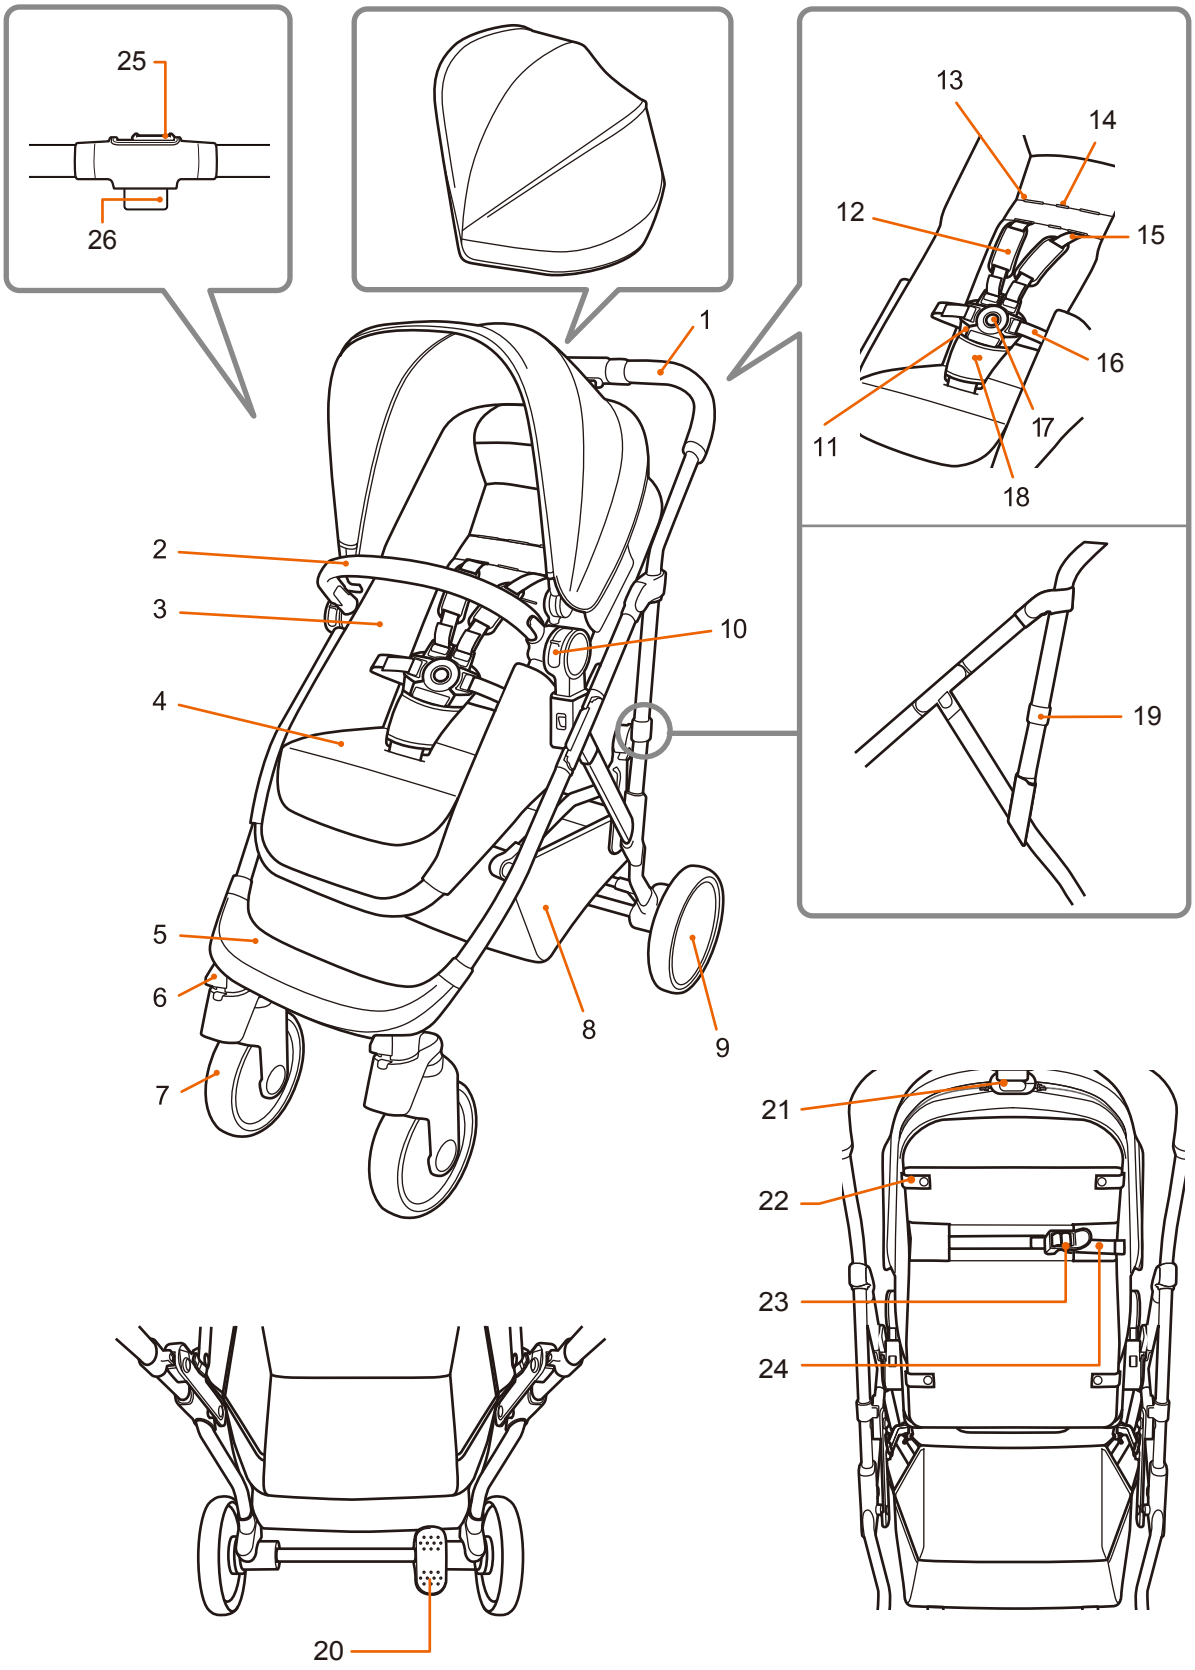


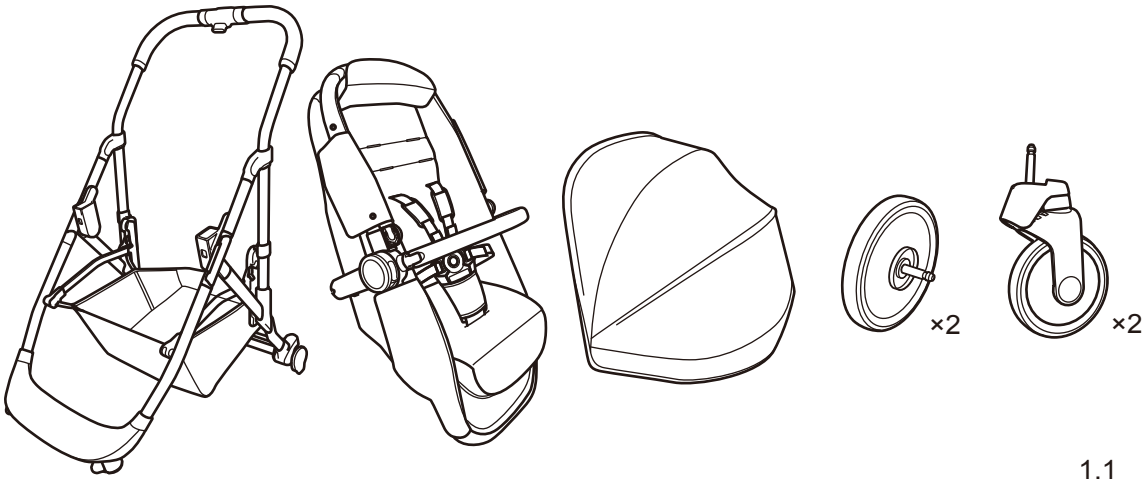


1.1



1.2

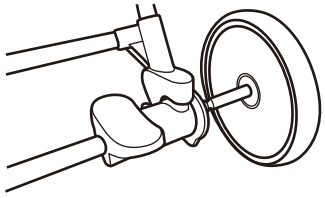


1.3

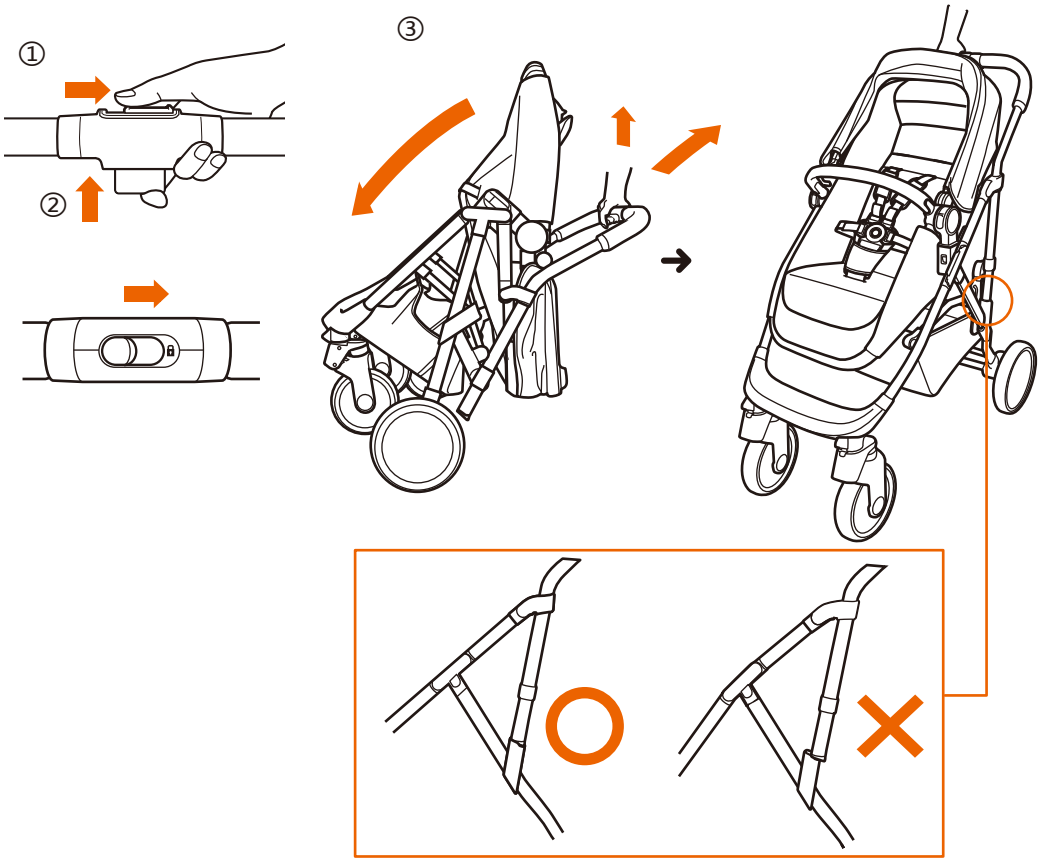


1.4


1.5

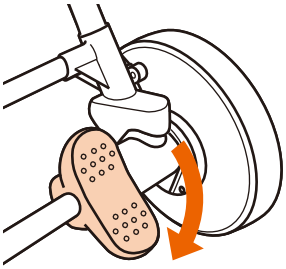

2.1

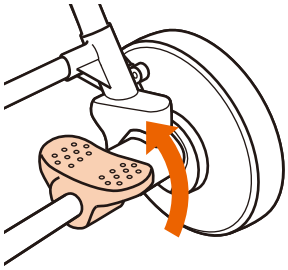


2.2

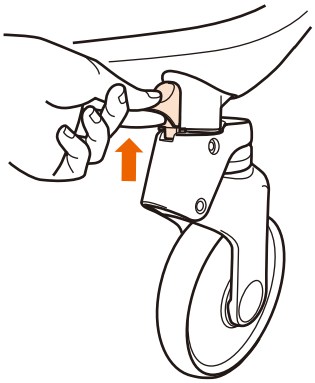

2.3




2.4

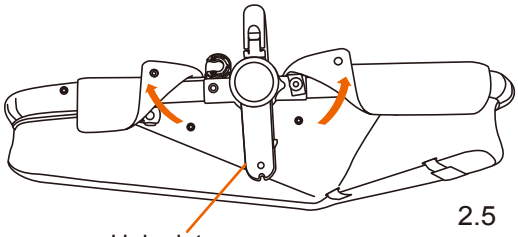


2.5

Hub slot
座席固定插座
허브 슬롯

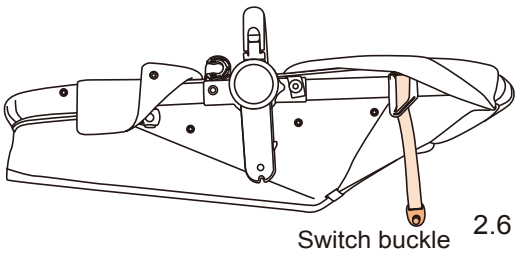


2.6


Switch buckle
坐卧转换调节扣
스위치 버클

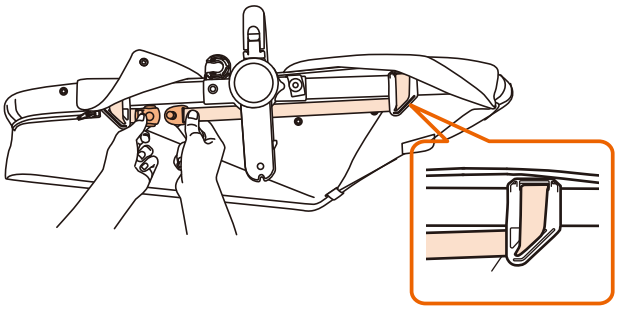


2.7

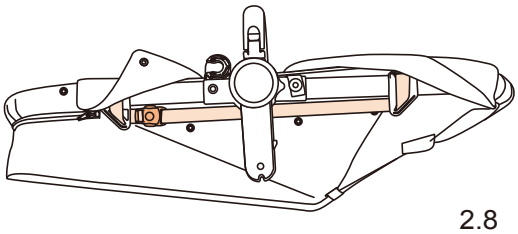


2.8

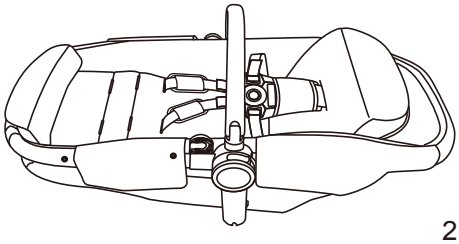


2.9

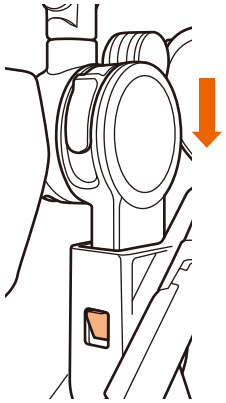

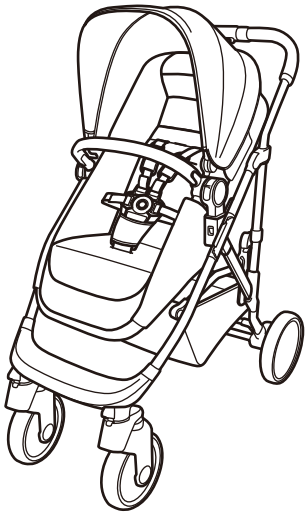


3.1


①

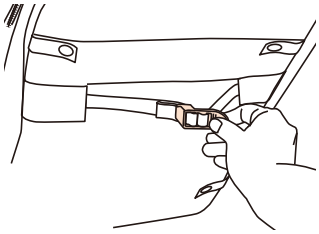


②

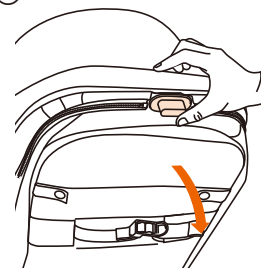


③

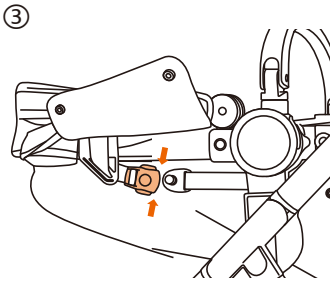

④

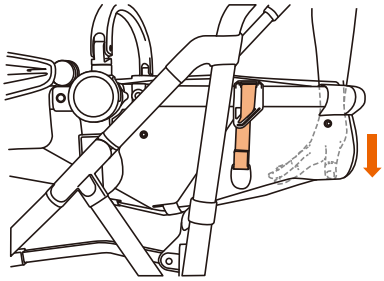


⑤

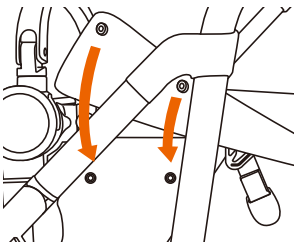





3.2

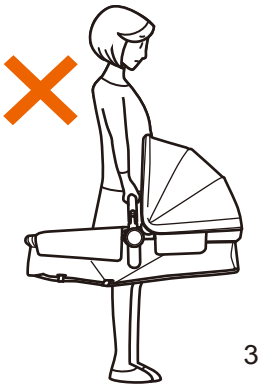


3.3

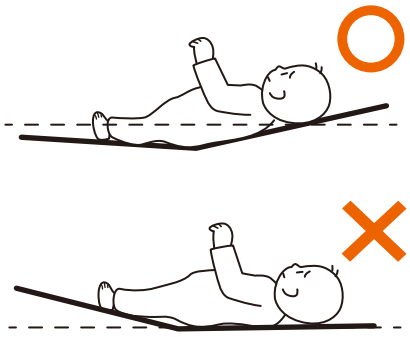


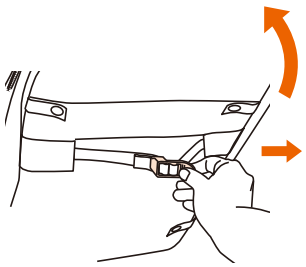


3.4

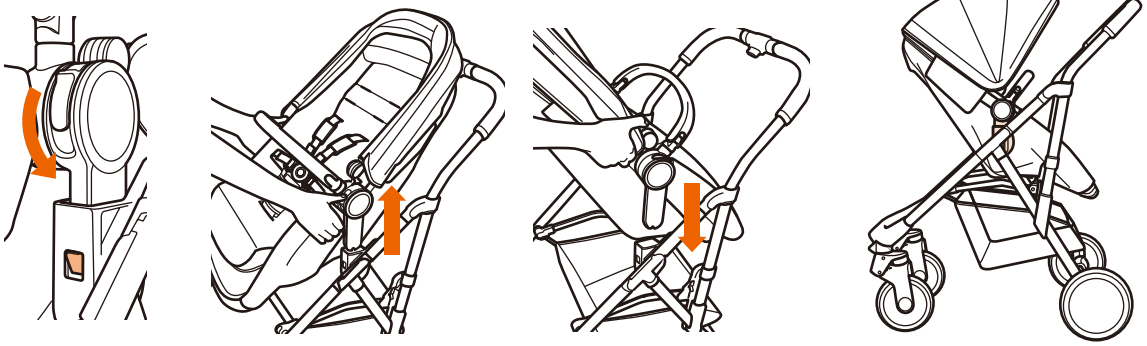


4.1

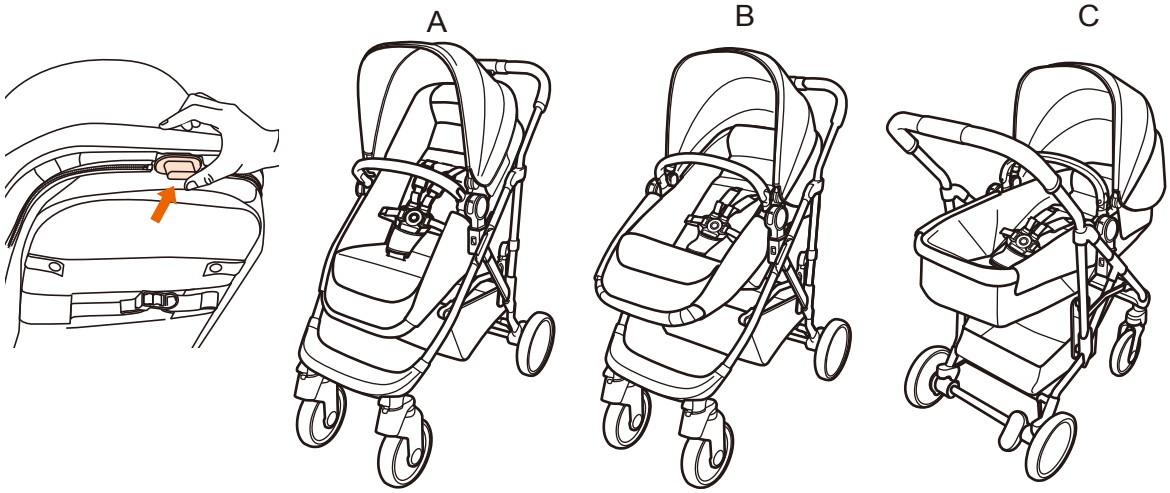


4.2

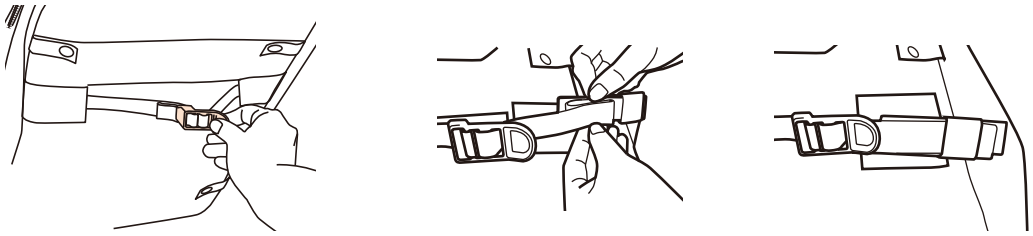


4.3

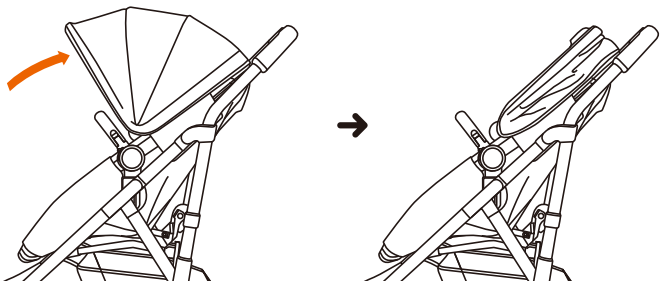


4.4

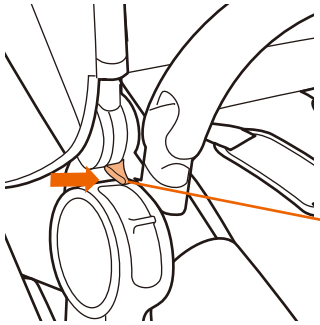



Front guard buttons
前护栏松脱掣
안전가드 버튼

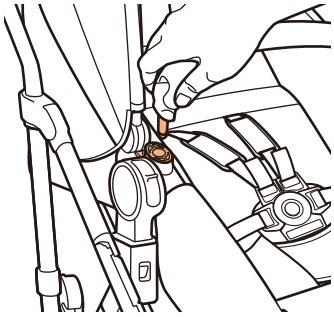


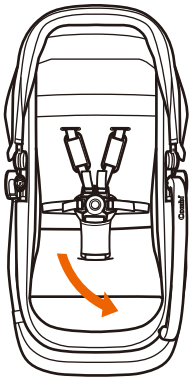


5.1

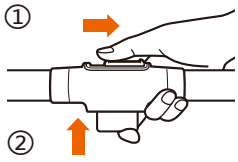




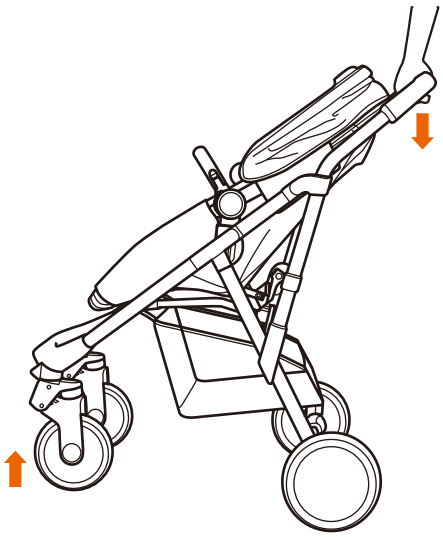


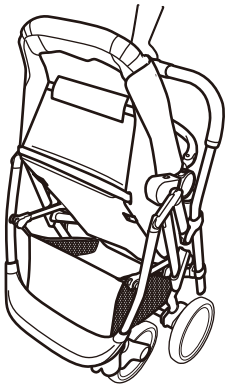


5.2

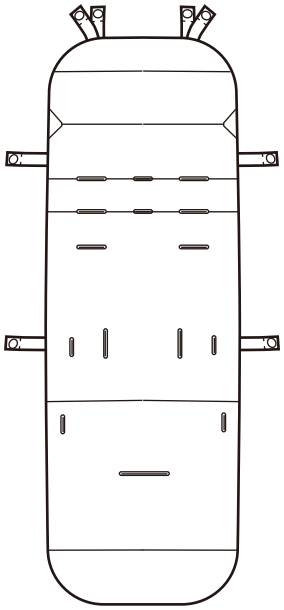


①

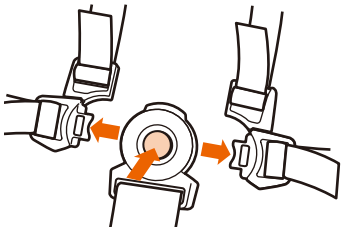


②

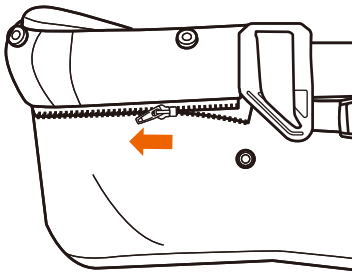


③

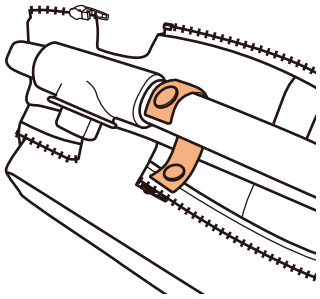

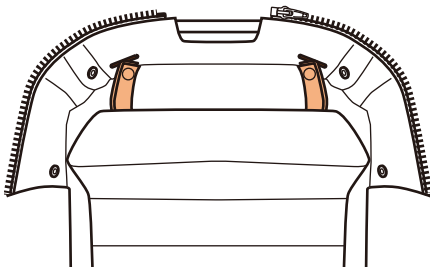


5.3

④

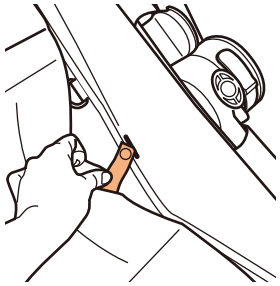



⑤

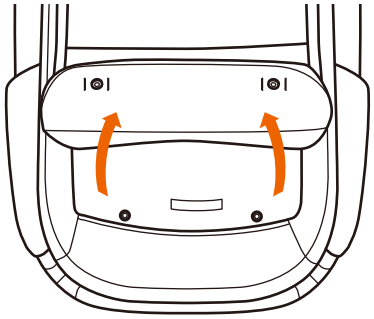


6.1

①

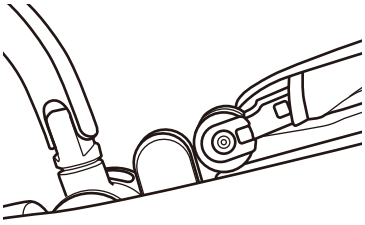


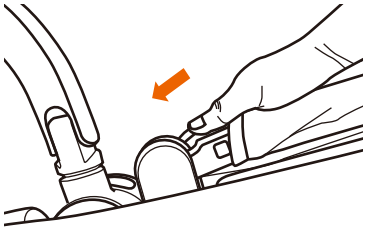


②

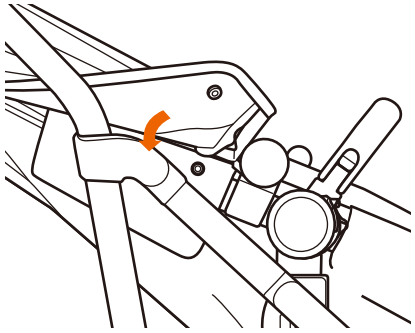


③

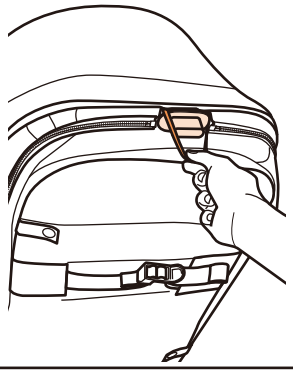


6.2

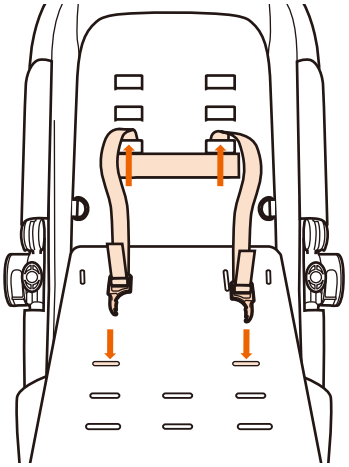


6.3

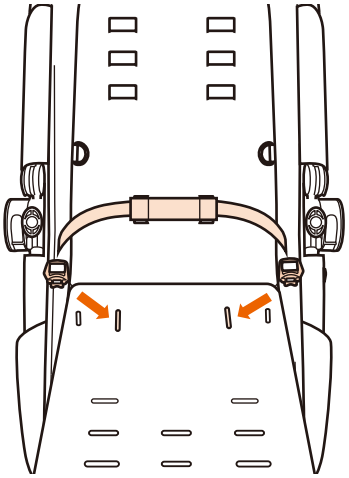


6.4

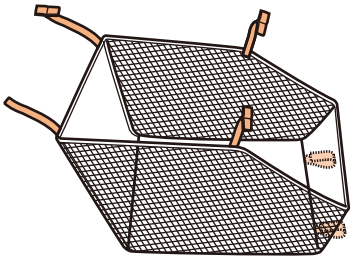


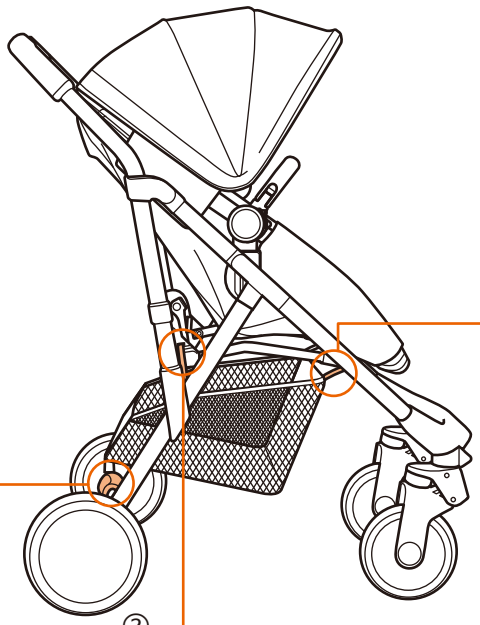


③

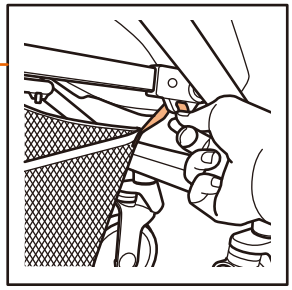


①

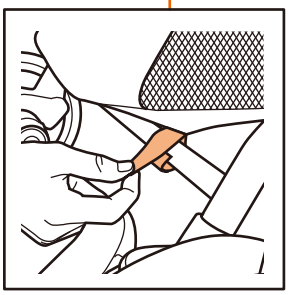


②

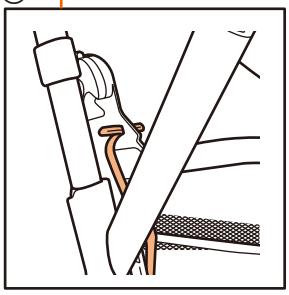



7.1

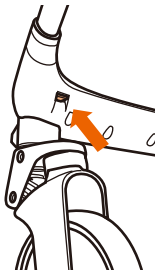

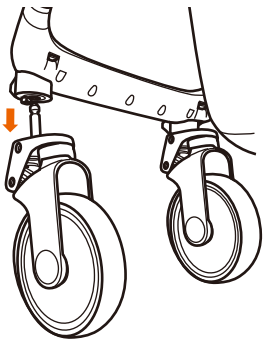



7.2

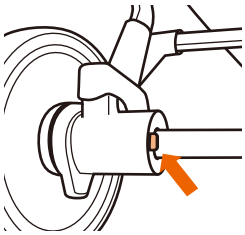

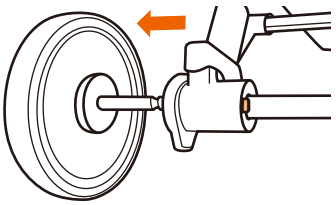


7.3

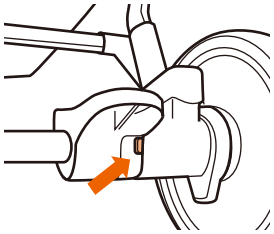


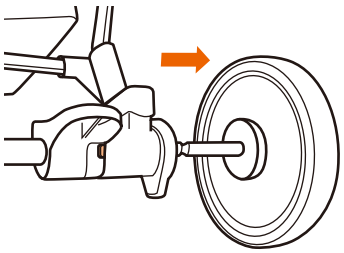


7.4

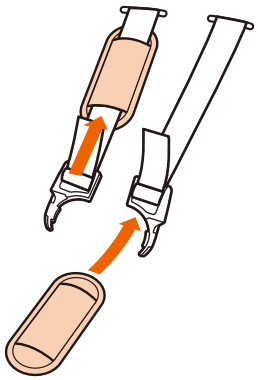


8.1

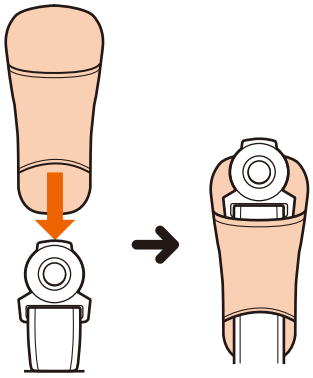


8.2

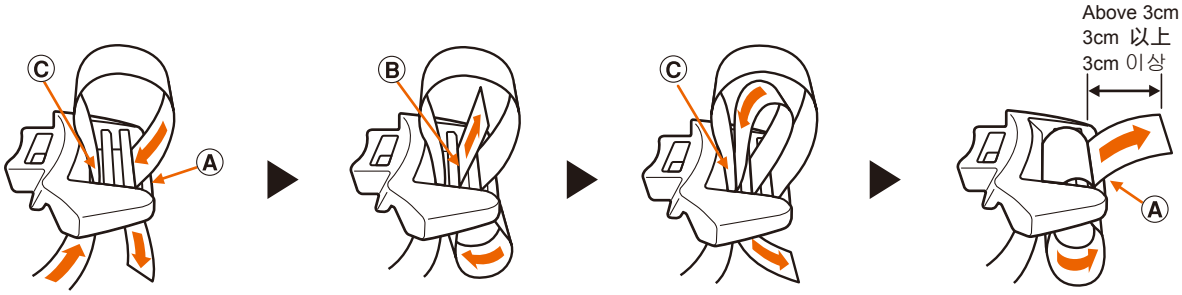

8.3

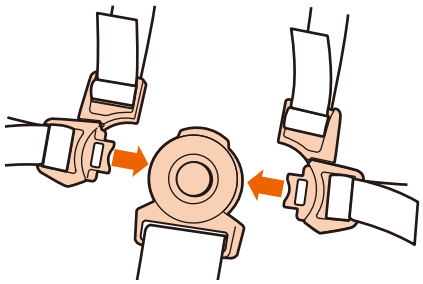

8.4

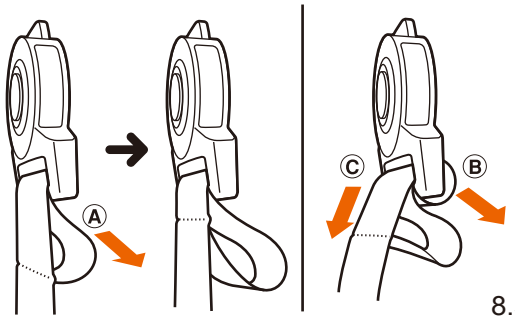

8.5

EN

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

⚠ WARNING (Incorrect operation may cause serious injury or death)

Please read this instruction manual carefully and keep it for future reference. The safety of the child may be seriously endangered if the instructions are not followed.

You are personally responsible for the safety of your child.

- **The stroller is suitable for children from newborn 1 month to 18kg (approximately 4 years old) .**
- **Always apply the parking brake when you are stationary.**
- **Do not rely too much on the stopper even when the stroller is parked empty.**
- **Even with all stopper engaged, always stay close to the stroller when it is carrying a child. Make sure to engage all stopper to avoid sudden movement or tipping over.**
- **Keep all small parts away from children as they are choking hazard.**
- **To prevent the risk of suffocation, always keep the plastic bags out of the reach of children.**
- **This product is not suitable for running or skating.**
- **Overloading, incorrect folding and the use of non-approved accessories such as buggy boards may damage or break this stroller.**
- **Always let the child wear the seat belt in the stroller to avoid any possible accident.**
- **Avoid serious injury from falling or sliding out. Always use seat belt (crotch belt, waist belt and shoulder belt). The front guard is not designed to prevent the child from standing up. Check if the seat belt fits properly, otherwise the baby may fall off from the stroller.**
- **Pay attention to child even when seat belt is in use in case of any sudden movement of child causing it to fall off.**
- **Do not cross the shoulder belts with each other when securing the shoulder belts to the insert plastic. Otherwise excessive pressure may be caused to child's neck.**
- **Do not use the seat cushion on which rift is found. Otherwise the seat cushion may not function as designed or the child may have chance to swallow the material inside the cushion.**
- **Never leave the child in a stroller without seat cushion. The child's hands or feet maybe get jammed in between the stroller frame.**
- **Do not leave the stroller when the child is seated.**
- **Make sure the open-fold lock is engaged completely before use. Otherwise the stroller may fold suddenly in use.**
- **Do not get hold of the front guard and to lift it, otherwise the stroller may accidentally slip off, or the front guard maybe detached, all of which will cause the stroller to fall down.**
- **Do not let the child operate the front guard. It may make the child to fall off from the stroller.**

IMPORTANT : KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

⚠ WARNING (Incorrect operation may cause serious injury or death)

- **Do not allow your child to stand in or on the stroller, it may be dangerous.**
- **Do not lean on or hang loads on the handle. Put any load on the handle will affect the stability of the stroller.**
- **Do not hang parcels or accessory items (except Combi original accessories) on the stroller, otherwise damage may happen to stroller.**
- **Never carry more than one child in the stroller. Do not allow a child to ride or sit on any area other than the seat.**
- **Excessive weight may cause a hazardous unstable condition exist. (Maximum load:18kg. Basket maximum load:10kg)**
- **Do not use the stroller on stairs.**
- **Do not let children operate the baby stroller to avoid accident.**
- **Be careful of those around you to avoid pinching their fingers when you are opening or folding the stroller or adjusting the seat angle.**
- **Keep your child's fingers/hands away from moving/folding parts when folding or unfolding or adjusting the stroller.**
- **Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat (infant bed mode) must be used.**
- **When pushing the stroller, please walk slowly to avoid any damage to the stroller swivel wheels or any tipping over.**
- **Open the baby stroller in clear area to avoid pinching baby's finger.**
- **Turn the swivel wheels to inner side and lock up before folding the stroller. Improper position may cause stroller become unstable after folding.**
- **Do not touch at the handle lock when folding or unfolding the stroller. Otherwise damage may be caused to the stroller.**
- **Never leave your child unattended.**

WARNING: It may be dangerous to leave your child unattended.
WARNING: Ensure that all the locking devices are engaged before use.
WARNING: Always use the restraint system.
WARNING: Any loading attached to the handle affects the stability of the stroller.
WARNING: Always use the crotch belt in combination with the waist belt.
WARNING: Check that the stroller body or seat unit attachment devices are correctly engaged before use.
WARNING: This product is not suitable for running or skating.
WARNING: Do not let your child play with this product.
WARNING: Do not place the stroller near fire, pool, or electric source.

EN

⚠ CAUTION (Incorrect operation may cause injury or component damage)

- **Make sure all snaps are secured before use. Otherwise accident or damage to stroller may happen.**
- **Loose the shoulder belts and support the backrest with the other hand before lowering the seat angle with a child seated. Do not suddenly change the seat angle while a child is seated.**
- **Adjust the length of seat belt properly after change of the backrest angle.**
- **Please do not touch the folding lever except when folding the stroller.**
- **When opening or folding up the stroller, be careful and avoid the seat cushion, seat belt, blanket and toys, etc., being pinched into the stroller body.**
- **If one gives excessive shock to the front wheels when getting over the step, stroller may fall down and cause damages. When stepping over, such as a curb, please slow down even a slight difference level, pull downward the handle and step on the foot-step, and make sure to pass the front wheels to get over the step.**
- **Never lift the stroller or use it on escalators or stairs when your child is sitting or lying in the stroller.**
- **This stroller requires regular maintenance by the user.**
- **Before use, check that the product and all its components have not been damaged during transportation.**
- **Please do not use the stroller in whatever purposes other than seating a baby. Failure to comply may result in damage of the stroller.**
- **Do not pull or twist or forcibly press down the front guard hardly. Otherwise the stroller may be damaged.**
- **Do not apply a lifted seat to baby who cannot sit straight by itself, most reclined seat (infant bed mode) must be used.**
- **Do not let an adult sit on the stroller, or add loading on the stroller to avoid any damage to it.**
- **Avoid continuous outdoor usage particularly during day time in summer.**
- **Avoid storing the stroller in save places under high temperature, near a heat source or inside a car. Exposure to high temperature may damage or deform the stroller.**
- **Check regularly that all screws, bolts and nuts are engaged tightly.**
- **For use on trains**
  This product is not designed to be used on trains. When user attempts to use the product at his /her own risk, please lock stopper in case of sudden brake or turning. Otherwise stroller may fall off.
- **Do not press on the folding lever while lift the stroller to avoid damage to the part.**

⚠ CAUTION (Incorrect operation may cause injury or component damage)

- **Make sure to release the lock before opening the stroller, misuse may damage parts.**
- **Make sure the basket is empty before folding up the stroller.**
- **Make sure the canopy is completely folded up before folding the stroller to avoid damage of the parts.**
- **Do not lay down the stroller and do not put things on the canopy to avoid deformation.**
- **Do not get hold of an opened front guard to pull the baby stroller. Please do not put the stroller near fire.**
- **Even have parking lock, this stroller may also be accidental slip or overturned.**
- **Do not leave baby stroller at road side or slope even when it is not in use.**
- **Do not use the stroller on steep slopes, stairs, escalators, rough roads, beaches, mud, etc.**
- **Make sure no oil or lubricant is left on parts such as front guard or armrest where baby may have chance to lick.**
- **Do not use the stroller in lightning days to avoid thunder stroke.**
- **In the event of damage or operation problems, stop using the stroller immediately.**
- **If damage is identified, do not use the product and keep it out of reach of children.**
- **Never leave the stroller close to stairs or steps.**
- **Only use on a flat, relatively smooth, stable and non-slippery surface.**
- **Only use original accessories and parts that have been approved by the manufacturer. Do not make any modifications to the product.**
- **Do not use the most reclined angle (infant bed mode) if the baby's head touches at the head rest.**
- **Do not use the stroller in snowy, windy days or wet road to avoid the stroller or guardian from slipping.**
- **Do not attach other accessory like buggy board on the main body during a child being carried in stroller, otherwise accident or damage to stroller may happen.**
- **Do not use in the bus trolley.**
- **Lift front wheels and pay particular attention to gaps or ditch when crossing rail road.**
- **No continuous use for a long period.**
  Continuous use for a long period of time may exhaust baby. No continuous use of more than 2 hours for a baby in a reclined seat and 1 hour in an upright seat.

EN

⚠ CAUTION (Incorrect operation may cause injury or component damage)

- **When feel jammed, please do not forcibly fold the stroller to prevent from any damage. You should reopen the stroller to check and operate again.**
- **Turn swivel wheels to inner side and lock up before folding the stroller. Improve position may cause stroller become unstable after folding.**
- **Do not put things that are too sharp or too large into the basket since it may cause damage to the basket.**
- **Please regular cleaning and checking the stroller. Only use neutral detergent to clean the stroller body.**
- **Make sure no oil or lubricant is left on parts such as front guard or armrest where baby may have chance to lick.**
- **Parking device shall be engaged when placing and removing the children.**
- **Any load attached to the handle and/or on the back of the backrest and/or on the sides of stroller will affect the stability of the stroller.**
- **Only replacement parts supplied or recommended by the manufacturer/ distributor shall be used.**

memo

EN

LIST OF COMPONENTS

1. Handle
2. Front guard
3. Seat unit
4. Seat cushion
5. Foot rest
6. Swivel wheel lock
7. Front Wheel
8. Basket
9. Rear Wheel
10. Remove seat unit knob
11. Waist belt insert outlet
12. Shoulder belt cover
13. Shoulder belt insert outlet
14. Head support insert outlet
15. Shoulder belt
16. Waist belt
17. Crotch belt buckle
18. Crotch belt cover
19. Open/Fold Lock
20. Stopper
21. Seat position adjustment button
22. Seat cushion snaps
23. Reclining buckle
24. Reclining belt
25. Safety Lock
26. Folding Lever

INSTRUCTIONS

Checking the sales package (Figure 1.1)

Make sure all snaps are complete before use.

WARNING: Don't use the stroller before the seat unit was assembled to frame.

Assembly of Front Wheels (Figure 1.2)

Line up the tab on front wheel axle with the groove in front wheel housing of the stroller. You will hear the "click" when the wheel is locked in place.

Assembly of Rear Wheels (Figure 1.3)

Line up the tab on rear wheel axle with the groove in rear wheel housing. You will hear the "click" when the wheels are locked in place. Repeat the same steps for another rear wheel.

WARNING: After assembly, please be sure to check the wheels are securely attached by pulling outwards.

Open the stroller (Figure 1.4)

Push the handle down, lift the front wheels up.

① Grip and pull the folding lever upwards simultaneously.

② Slide the safety lock as demonstrated direction and hold it in place.

③ Slightly lift the stroller and open it. Once the stroller is opened, you can release the folding lever and safety lock. (The folding lever will be locked automatically.)

Make sure the open/fold lock is engaged completely after open. (Figure 1.5)

Using the stopper

① To lock wheels, press the stopper down which is located at rear right wheel. (Figure 2.1)

Try to push the stroller back and forth slightly to ensure that the stopper is properly engaged.

Lift the stopper to unlock. (Figure 2.2)

Using the swivel wheels (Figure 2.3-2.4)

① To use the swivel wheels - Lift the swivel wheel locks (left and right) to release.

② Swivel wheels not in use - Press down the swivel wheel locks to lock.

According to age and weight of a child, there are two operating modes.

● Seat Mode

Note: Seat mode is suitable for child over 6 months to 4 years old (around 18kg). The seat unit and the frame are not assembled together when shipped.

Assembly steps

① Unfasten snap buttons as shown. (Figure 2.5)

② Pull out the strap from foot area of seat unit, make sure the strap goes as illustrated. Secure the switch buckle as show. (Figure 2.6-2.8)

③ Fasten the snaps. (Figure 2.9)

④ Lift up and insert the hubs on both sides of the seat into the hub slots on the stroller frame as shown. (Figure 3.1)

If unable to fasten switch buckle properly doing step ②, push the foot end of seat unit upwards slightly and then repeat step ② again.

EN

Note: It is recommended to adjust the seat unit before assembling with stroller frame for easy handling. Customer can also choose to adjust the seat unit after assembling with stroller frame.

Note: When the left and right hub slots are not flush with each other, adjust and make them flush with each other before attaching to the stroller.

Note: Ensure to check switch buckle is firmly secured when carrying a child.

● Infant Bed Mode

Note: Infant bed mode is restricted for use by infant who cannot sit up unaided, roll or use arms and knees to support themselves only. Maximum carrying weight: 9kg.

Note: Infant bed mode is suitable for infant from newborn to 6 months old. Please do not use infant bed if the baby's head touches at the headrest. Please do not adjust the seat position adjustment button when using as infant bed mode.

Steps of converting the seat unit into an infant bed: (Figure 3.2)

① Pull down the seat reclining buckle.

② Pull seat position adjustment button downwards until the seat unit is completely flat.

③ Unfasten the switch buckle on one side of the seat unit.

④ Smooth flat the bottom of seat unit.

⑤ Fasten the snap buttons as shown.

WARNING: For the safety of the infant, do not carry the infant bed. (Figure 3.3)

Note: When the head of the child is low, tighten the reclining belt at the back slightly to raise the backrest. (Figure 3.4)

Reversing the Seat Unit (Figure 4.1)

① Rotate the knob as shown with both hands, lift upwards and remove seat unit from the mounts.
② Turn the seat unit and re-insert into seat unit mounts.
③ Pull up the seat unit gently to check it is securely attached.

WARNING: Do not reverse the seat unit with infant in it.

Note: To keep a closer look at the infant while operating as infant bed, install seat unit in rear facing position.

EN

Reclining the Seat Unit

The seat unit can be adjusted in three different positions (ABC).Please do not adjust the seat unit to horizontal position when using as a seat mode.

① To adjust the entire seat unit, press seat position adjustment button located at the front end of seat unit. (Figure 4.2)

② To recline backrest, use the reclining buckle to adjust seat unit into desired position. When the backrest reclining belt is too long, retract the unnecessary part as shown in the figure. (Figure 4.3)

Adjusting the canopy (Figure 4.4)

Pull canopy forward or backward to adjust the canopy size.

Assembly and removal of front guard (Figure 5.1)

The stroller is equipped with a removable front guard.
① To remove, press the buttons located on both sides together to release.
② To open for the child to get in and out, press one button only.
To assemble, line up the tab on front guard with groove on both sides of the stroller.

WARNING: Do not get hold of the front guard to lift the stroller.

WARNING: Do not pull or drag the front guard when removing any side of the front guard, to avoid the child from falling off in case of stroller overturn. Make sure to lock the front guard if any child is seated.

WARNING: When removing any side of the front guard, be sure to turn the front guard downward. Otherwise it may hurt the head or eyes of the child.

Folding the stroller (Figure 5.2)

Please fold the canopy backward before folding.
① Slide to release the safety lock of direction as illustrated.
② Grip the folding lever and slightly lift up the handle, then press down the handle as illustrated to fold the stroller.

WARNING: When opening and closing the stroller, please ensure your child is not in contact with any mounting parts. Remove all items from the basket before folding the stroller.

Note: Do not fold the stroller when seat unit is in rearward - facing position.

Detaching the seat cushion (Figure 5.3-6.1)

① Press on the buckle button to release the insert plastics. Remove shoulder belt cover and crotch belt cover if fitted.
② Open fastener at front of seat unit.
③ Release the snaps located inside.
④ Loosen the snaps on both sides of the seat cushion from seat back.
⑤ Unfasten snaps at foot end of seat cushion. Remove seat cushion.
To install seat cushion, go in the steps reverse.

EN

Assembly of canopy (Figure 6.2)

① Plug the canopy joint into the canopy holder as shown.
② Fasten snap of canopy to seat unit fabrics.
③ Hang the strap at back of canopy on seat position adjustment button.
To detach canopy, go in the steps reverse.

Attaching the shoulder belt (Figure 6.3)

Pull the shoulder belts through insert outlets on the backrest and put through the seat belt insert of cushion.
Use the same level of shoulder belt insert outlets on the seat cushion as well as one the backrest.

Attaching the waist belt (Figure 6.4)

Pull the waist belts through insert outlets on the backrest and put through the seat belt insert of cushion.

Basket (Figure 7.1)

You can attach and remove the belts and snaps according to step 1 , 2 and 3.
The basket can carry a maximum weight of 10kgs.

Removal of Front Wheels (Figure 7.2)

Press the button located at lower part of foot rest and pull out the front wheel with little force.

Removal of Rear Wheels

To remove the left rear wheel, press the button as shown. (Figure 7.3)
To remove the right rear wheel, press the button at the bottom of stopper and pull out the rear wheel with little force.(Figure 7.4)

Attaching the shoulder belt cover (Figure 8.1)

Remove the safety belt from the buckle. Pull the shoulder belt through the shoulder belt cover.

Attaching the crotch belt cover (Figure 8.2)

Pull the crotch belt through crotch belt cover, pull out the buckle button.

Attaching the insert plastics (Figure 8.3)

Pull the belt in the direction as illustrated to attach the insert plastics.

Note: Always leave at least 3cm at the belt end.

EN

Using the Safety Harness (Figure 8.4)

① The shoulder buckle is under the waist buckle (left and right) and secure together into crotch buckle.

② Press the crotch buckle button to release the harness.

WARNING: Always use the restraint system.

Adjusting the crotch belt (Figure 8.5)

Tightening - Ⓐ Pull the center belt end as shown direction.

Extending - Ⓑ Follow the direction of arrow and pull out the belt to end.

Ⓒ Follow the direction of arrow and pull the belt to the end.

Hints for maintenance

• Never apply force on any mechanism or moving parts.
• To prevent mildew forming, do not store this product when wet or in a humid environment.
• Protect the product from rain, snow and prolonged exposure to sunlight.
• Clean the plastic and metal parts with a wet cloth. For stubborn stains, use a diluted mild detergent.
• You may lubricate moving parts if the operation or movement of the stroller is not smooth. Do not apply excessive lubricant as it may lead to a buildup of dirt which may cause malfunction.

Cleaning and maintaining fabrics

• Always following the washing instructions listed below as well as those attached to the various fabric parts.
• Dry the fabric parts completely before using or storing it.
• Hand wash in warm water.

Fabric care guidelines

- Hand wash in warm water.
- Do not tumble dry.
- Do not dry clean.
- Do not bleach.
- Do not iron.

使用前请详细阅读本说明书并妥善保存作日后参考之用

⚠警告（ 错误操作可能引致重大伤害或死亡 ）

不按照本使用说明书指引使用手推车，可能对幼儿造成重大伤害。

幼儿的安全是您的责任。

本产品适用于一个月初生儿至18公斤(大约四岁)的幼儿。

- 使用手推车前请确保所有的锁定装置都已处于锁定状态。
- 停止手推车时，请使用停车锁。
- 不论有否承载婴儿，停车时勿过分信赖停车锁的性能。
- 即使已使用停车锁，如载有婴儿，应随时留意手推车附近，以防任何危险发生。
- 切勿将小配件放近幼儿，以免幼儿吞下而造成窒息的危险。
- 为了防止幼儿窒息的危险，在拆开包装后，请将塑料袋之类的包装物料丢弃。
- 本产品不适用于奔跑或滑行时使用。
- 过分超载，错误折叠以及使用未经认可的附件会对手推车造成损坏。
- 为了防止孩子跌落，孩子乘坐时必须系上安全带。
- 承载幼儿时必须系上安全带，安全带包含中央带，腰带和肩带。前护栏不能防止幼儿从座垫上站起来。请确认安全带没有松脱，以免幼儿突然跌出手推车。
- 为防止幼儿突如其来的动作令其跌出手推车，即使已经扣上安全带，也请经常留意幼儿，小心使用。
- 肩带扣在插扣片上时，请勿交叉肩带，以免肩带对幼儿颈部造成压迫。
- 请勿使用磨损或破的座垫，以免座垫不能发挥其应有功能，或令幼儿误吞内里的棉花等。
- 切勿让婴幼儿乘坐未安装座垫的手推车，幼儿的手脚可能被车架夹到。
- 当儿童乘坐时，看护人不要离开。
- 使用前一定要确认开关锁已锁上，手推车已完全展开，否则手推车会有突然折起的危险。
- 切勿手执前护栏搬动手推车，以免手推车意外滑脱，或令前护栏松脱，引致手推车掉下。
- 不要让幼儿操作前护栏以免其意外跌倒。
- 切勿让幼儿单独坐在车上。
- 不可让幼儿站立在车上，这是十分危险的。
- 切勿把身体靠于或把重物挂于把手上。在把手上放置任何负载都会影响手推车的稳定性。
- 切勿悬挂物件(推车上原有的配件除外)于车篷或把手上，以免引致手推车翻倒。
- 切勿承载超过一名幼儿，或让幼儿坐在座椅以外的地方。
- 承载超重会容易产生不稳定的危险情况，最大承载量：座面18公斤，置物篮最大承载重量：10公斤 。
- 禁止于楼梯间使用手推车。
- 不要让幼儿操作手推车，以免手推车翻倒或发生其他意外。

使用前请详细阅读本说明书并妥善保存作日后参考之用

⚠警告（ 错误操作可能引致重大伤害或死亡 ）

- 开关手推车或调节座席时要注意四周旁人及小孩，以免夹伤指头。
- 开关或调节手推车时，请勿让幼儿的手接触活动零件部分。
- 对还未能坐直的幼儿，切勿使用直立角度，请调节成婴儿卧床模式使用。
- 推动手推车时请勿奔跑，应慢慢步行，以免转向轮损坏，或引致翻倒等意外。
- 打开手推车时不要让他人接触，以免意外夹伤。
- 在座席使用的肩带穿孔和座垫的肩带穿孔位置要一致。如使用座席的上方肩带穿孔，座垫亦同样要使用上方肩带穿孔，不然肩带有可能因长度不足系紧幼儿。
- 一边推行一边调整座席角度是非常危险的，请勿同时进行。

简体中文

警告：不应在无人照顾下把婴儿单独放在婴儿车内，以免发生危险。

警告：使用婴儿车前，请确保婴儿车之所有安全装置已正确安装，如安全带长度调整，座椅扣环扣上。

警告：当婴儿坐在婴儿车上，请务必使用安全带。

警告：此婴儿车座椅模式不适合6个月以下婴儿使用。

警告：任何物件负重于婴儿车把手会影响婴儿车的稳定性。

警告：使用前，请先检查婴儿车与所有附件已正确安装。

警告：此产品不宜于跑步、溜冰或进行任何运动时使用。

警告：请勿让小孩玩耍本产品。

警告：使用时应远离高温、水池或电源等邻近范围。

⚠注意（错误操作可能引致受伤或组件损坏）

- 安装座垫时，请确保所有钮扣等已经装好，以免引致意外或造成损坏。
- 在已承载幼儿的状态下调整靠背角度时，请先将肩带调松，然后以另外一只手支持着靠背调节，请注意勿让靠背角度突然改变。
- 调整座席角度后，请重新调整安全带至适当长度。
- 除开折手推车外，请勿触碰开关掣及安全锁。
- 当操作开关时，请注意及避免可装拆的座垫、手推车的安全带、被子，及玩具夹在手推车车体上。
- 当越过不同段差时，若强行附加力量于前车轮上使之与段差碰撞，可能引起手推车损坏和故障，当越过段差时，即使是微小段差区的地方应以减缓推行，并踏上后脚管及往后按下把手往前行，确保前车轮越过段差才可通行。
- 当幼儿乘坐时，请勿在自动扶梯上使用或搬动手推车。
- 使用者必须对本产品作定期保养。
- 每次使用前请检查配件是否在运输过程中被损坏。
- 请勿将手推车作承载幼儿以外的用途，否则会引致损坏。
- 请勿用力拉动、扭动、压下前护栏，以免引致损坏。
- 请勿让成年人坐上手推车，或在上面放置重物，以免损坏手推车。
- 夏天使用时，户外的天气和路面情况会令手推车温度提高，应避免连续长时间使用。
- 避免将手推车存放于高温，接近热源的地方或车厢内，因高温可使手推车变形。
- 请定期检查所有螺丝是否上紧。
- 有关火车上的使用：本产品并非以火车上的使用为目的所设计的产品。假如阁下自行决定于火车上使用，请小心注意，并锁上停车锁，以免转弯或刹车时令手推车翻倒。
- 请勿在提起手推车的状态下按下开关掣，以免引致组件损坏。
  按开关掣前请先解除安全锁。错误操作可能损坏零件。
- 收起手推车前请先确认置物篮内的物品已取出。
- 收折前请先确认车篷已经完全收起，以免引致组件损坏。
- 收起手推车时，请避免横放，或于上面置放重物，以免车篷变形。
- 请勿手执开放的护栏来拖动手推车 。
- 请勿把手推车放近火源。
- 即使已经锁上停车锁，手推车也有可能意外滑动或翻倒，故请随时注意车体及环境变化。
- 即使幼儿不在车上，也不可将手推车随意放在路旁或斜坡等危险地方。
- 不可于斜坡、阶梯、自动扶梯、颠簸坡道、沙滩、泥地等场所使用手推车。

⚠注意（错误操作可能引致受伤或组件损坏）

- 推车时请小心路上凹陷之地方，以免前轮意外陷进沟内令手推车翻倒。
- 如手推车出现损坏或操作问题，应立即停止使用。
- 如发现损坏，请勿使用本产品并将其存放在远离幼童的地方。
- 请勿将本产品放近楼梯或阶梯上。
- 只可在干燥的平地上使用。请勿使用非原厂供应的零件替换或自行改装手推车。
- 如发现手推车损坏，请联络分销商。
- 请勿于雪地和强风时或湿滑路面上使用，以免令手推车或监护者意外翻倒。
- 请勿于打雷时使用手推车，以免意外遭受雷击。
- 请勿随意改造或拆卸手推车。
- 请勿外加任何以轮板或组件于主体上承载幼儿，以免对手推车造成损坏。
- 请勿于公共汽车上使用手推车。
- 跨越火车轨和汽车道的十字道口等时，请提高前轮跨越间隙，以免前轮意外卡在沟内。
- 禁止连续长时间使用：连续长时间使用会对幼儿造成负担。躺卧姿势的连续使用时间上限为2小时，坐着姿势的则为1小时。
- 感觉有异物卡住时，请勿强行折叠，以免造成损坏。应先打开手推车，确认后再操作。
- 收折前请将转向轮翻往内侧然后锁定。如果不将转向轮锁定在内侧位置，收折后手推车将较易翻倒。
- 请勿承载太尖或太大的东西于置物篮内，以免引致损坏。
- 请定期清洁以及检查手推车。请仅使用中性的清洁剂清洁车架。
- 请注意勿让油分附在幼儿有机会舔到的地方，如前护栏等。
- 当放置和移开儿童时请锁定停车装置。
- 为了手推车的稳定性，请勿将其他任何产品连接到推把、靠背背部或车辆的侧面。
- 请勿使用未经制造商认可的附属物。

简体中文

部件名称

1. 把手
2. 前护栏
3. 座席
4. 座垫
5. 脚踏
6. 转向轮锁
7. 前轮
8. 置物篮
9. 后轮
10. 座席拆除按钮
11. 腰带穿孔
12. 肩带套
13. 肩带穿孔
14. 护头垫穿孔
15. 肩带
16. 腰带
17. 中央带扣
18. 中央带套
19. 开关锁
20. 停车锁
21. 座席角度调节按钮
22. 座垫固定扣
23. 靠背角度调节扣
24. 靠背角度调节带
25. 安全锁
26. 开关掣

使用方法

开箱确认（图1.1）

打开包装箱后请确认图中部件是否齐全。

警告： 座席未组装完整时，禁止使用该婴儿车。

安装前轮（图1.2）

将前轮轮轴对准推车前方骨架上相对应的插孔，直到听到「咔嚓」声，表示已锁定到位。
重复同样的步骤安装另一前轮。

安装后轮（图1.3）

将后轮轮轴对准推车后方骨架上相对应的插孔，直到听到「咔嚓」声，表示已锁定到位。
重复同样的步骤安装另一个后轮。

警告： 车轮安装后，请务必向外拉动前后车轮以确认车轮是否安装牢固。

打开手推车（图1.4）

请先将把手下压，抬高前轮。

①将把手下压使前轮提起，然后将把手上的安全锁向箭头方向滑动并握住。
②同时握着并提起开关掣。
③稍稍提起并打开手推车。推车打开后请松开折叠锁和安全锁。（折叠锁将被自动锁定。）

打开手推车后请确认开关锁已完全处于锁定位置。（图1.5）

停车锁的使用

①如图向下踩下停车锁按钮直到听到「咔嚓」声。（图2.1）
轻轻前后推动推车，确认停车锁已锁定。
如需解除，将停车锁上拨即可。（图2.2）

使用转向轮

①使用转向功能时，向上推起转向轮锁以解除车轮锁定。（图2.3）
②不使用转向轮锁功能时，请按下转向轮锁以锁定车轮。（图2.4）

本手推车根据小孩月龄和体重有两种不同的使用方法。

● 当作座椅使用时

注意：座椅模式适用于小孩月龄是6个月以上～4岁（约18kg）。

本产品出货时座椅和推车骨架并未组装在一起，请按照下面的步骤安装座椅。

①解开图示中的扣子。（图2.5）
②将座椅脚端的带扣用力拉出，按照图中所示的方向，将两侧的坐卧转换调节扣扣上。（图2.6-2.8 ）
③将扣子扣上。（图2.9 ）
④如图示将座椅插入车架上的嵌合孔中。（图3.1 ）
在进行步骤②中，若不能很好的将坐卧转换调节扣扣拢，请用手轻轻将座椅脚端向上推出后再操作步骤②。

小提示：为了方便客户操作调节，图中所示为单独拆下座椅并调节好后再安装到车架上的调节方式，客户也可以在车架上直接调整，但是建议拆下后调节。

注意：当载有小孩时，请务必检查坐卧转换调节扣是否已扣牢。

注意：当座席固定插座左右不是处于同一位置时，请先调成一样的位置，再安装到车上。

注意：请勿在小孩乘坐时，直接从卧床模式调整为座椅模式。

● 当作婴儿卧床使用时

注意：婴儿卧床模式仅适用于无法自行坐立、翻身及无法自行用手及膝盖支撑自己的婴儿。
最大承载重量：9 公斤。当头部顶住卧床时，请勿继续使用。

注意：婴儿卧床模式适用于小孩月龄为初生后1个月至6个月大婴儿。
婴儿卧床模式时，请勿调节角度调节按钮。

若要将座椅转换成婴儿卧床，请依照以下步骤：（图3.2）

①如图拉下靠背角度调节扣。
②按下座席上部的调整按钮，将座席调至平躺位置。
③解开座席侧面的扣子。
④将座席整理平整。
⑤将扣子扣好。

警告：为了小孩的安全，请勿手提婴儿卧床行走。(图3.3)

注意：当感觉幼儿头部较低时，请稍微拉紧背部的角度调节带以收紧椅背。(图3.4)

转换座椅方向时（图4.1）

①双手旋转图示中的旋钮并提起座椅，将之从固定插孔中拉出。
②转换方向后再插入固定插孔中。
③轻轻向上拉动座椅检查是否已经固定牢靠。

警告： 请勿在载有幼儿的情况下转换座椅的方向。

小提示：作婴儿卧床使用时，请将卧床反向安装，以便观察幼儿，有利幼儿健康成长。

调整座椅角度

本座椅可调节3种不同的倾斜角度（ABC3种）。（图4.2）
座椅模式时，请勿将座椅调成水平位置。

①若要调整整个座椅，请按下座椅上方的角度调节按钮进行调节。
②若只想调节椅背的角度可以使用椅背角度调节带进行调节。
椅背角度调节带有多余的情况，请按照图示将多余部分收纳起来。（图4.3）

注意： 座椅模式时，如若幼儿的头部已超出椅背，请收紧椅背。

车篷大小的调节

用手拉住车篷前支杆向前或向后调节，即可展开或收拢车篷。（图4.4）

可移除式前护栏的装拆（图5.1）

本推车配有可移除式的前护栏。

①若要移除，请同时按压两边的前护栏松脱掣即可拆下。
②若按其中一边的按钮即可解开前护栏，方便孩子上下推车。
安装时请将前护栏对准左右两侧的插孔插入即可。

警告： 请勿手执前护栏搬动手推车。

警告： 前护栏单边拆卸时，请不要拉拽扶手，以防车体翻倒而导致婴幼儿跌落。婴幼儿乘坐时，请务必确认扶手处于锁定状态。

警告： 前护栏单边拆卸时，请向下旋转扶手，否则有可能导致误伤婴幼儿头部或眼睛。

收折手推车（图5.2）

收折手推车前请先将车篷收拢。
①如图按箭头方向拉动安全锁作解除。
②同时握住开关掣，向后下压把手抬起前轮，推车被折叠起来。

警告： 在收折手推车前，请确保与幼儿保持安全的距离，请勿让幼儿触及活动零部件。

注意： 座椅处于反向安装位置时，请勿折叠手推车。

安装和拆除座垫（图5.3-6.1）

①按下安全带扣按钮，将插扣片从安全带扣上解下，如若佩戴了肩带套和中央带套请先一并拆下。
②解开座椅前端的拉链。
③将里侧松紧扣解开。
④将座垫两侧的带扣从椅背下解开。
⑤将座垫脚端的扣子解开，拆下座垫。
安装时请以逆序进行。

安装和拆除车篷（图6.2）

①将车篷上的接头按照图示方向插入座椅上的插孔中。
②并将车篷上的扣子扣在相应的座椅布套上。
③将车篷后方的松紧带挂在座椅角度调节按钮上。
若要拆除车篷，请以逆序进行。

安装肩带（图6.3）

请将肩带穿过背板上的穿孔，然后装到座垫上。
请使用相同高度的座垫肩带穿孔和背板肩带穿孔。

安装腰带（图6.4）

请按照图示将腰带穿过背板和座垫上适合的腰带穿孔。

置物篮的使用（图7.1）

使用安装带子并按照步骤①②③安装或拆除置物篮。
置物篮的最大载重量是10公斤。

拆除前轮（图7.2）

如图请按下前脚踏板下方的快拆按钮，并稍稍用力拉出前轮，即可拆除。

拆除后轮

拆除后侧右轮时，请按下停车锁下方的快拆按钮，稍稍用力向外拉出，即可拆除。（图7.3）
拆除后侧左轮时，请按下如图位置的快拆按钮，即可拆除。（图7.4）

安装肩带套（图8.1）

按下安全带扣按钮解开安全带，将肩带套安装到肩带上。（带套正反方向如图示）

安装中央带套（图8.2）

如图将中央带穿入中央套中。（带套正反方向如图示）

安全带插扣片的安装方法（图8.3）

将肩腰带参照图示的步骤来进行安装。

小提示：注意肩腰带末端应留下3cm以上的长度。

使用安全带（图8.4）

①将肩带扣叠在腰带扣（左右）下，叠好后插进中央的安全带扣内。
②按下安全带扣中央的按钮即可解开安全带。

警告： 幼儿乘坐时必须使用安全带。

中央带的调节（图8.5）

收紧中央带，如图 Ⓐ 拉出中央带到最末端，为最短状态。
延长时，如图 Ⓑ 箭头方向拉出中央带到末端，按照图 Ⓒ 箭頭方向拉到底，为最长状态。

保养方法

- 切勿强行拉动活动零件或装置。
- 请勿把产品存放在潮湿的地方以免产品发霉。
- 避免把产品暴露于雨水或雪霜之中。
- 请用湿布清洁金属及塑料部分。如遇顽固污垢，可使用稀释的清洁剂。
- 若感到手推车操作或运行不顺畅时，可添加适量的润滑剂。注意不要添加过多的润滑剂。否则会容易沾上灰尘，引起操作异常。

清洗及保养部品

- 请遵守缝制品上所标示的以及以下的洗涤指引。
- 在使用及存放前，请确认已干燥缝制部品。
- 请以温水手洗。
- 幼儿容易出汗，乘坐后应将座垫置于通风处或易干燥地点存放避免发霉。

简体中文

洗涤指引

- 请以温水手洗。
- 请勿烘干。
- 请勿干洗。
- 请勿漂白。
- 请勿熨烫。



产品名称及型号 ：儿童推车 i-Thruller
规格号：724275 紫色　　724276 蓝色
康贝（上海）有限公司　　www.combi.com.cn
中国（上海）自由贸易试验区英伦路38号四层414室
联系地址 ：上海市淮海中路200号23楼
咨询电话 ：021-6385 2688 邮编：200021
生产厂 ：东莞康贝童车玩具有限公司
生产厂地址：东莞市塘厦镇蛟乙塘宝石路18号
产地：广东 东莞
适用年龄：出生后1个月至48个月（根据幼儿的成长速度而各有不同）
产品最大承载重量：18公斤
置物篮最大承载重量：10公斤

●切勿近火。
●儿童乘坐时，必须使用安全带。
●座椅模式时，不适合6个月以下的幼儿使用。
●使用前请仔细阅读使用说明书并请妥善保存供以后参照，如不按本说明书使用可能会影响儿童的安全。
●使用手推车前确保所有锁定装置都已处于锁定状态。
●在把手上放置任何负载会影响车辆的稳定性。

产品执行标准：GB14748-2006

중요: 추후 사용을 위해 본 사용설명서를 잘 보관하십시오.

⚠ 경고

유모차를 사용하시기 전에 반드시 본 사용설명서를 숙지하시고, 추후 사용을 위해 잘 보관해 주십시오. 제품을 올바르게 사용하지 않을 경우 아이의 안전이 심각하게 위태로울 수 있습니다. 안전사고의 1차 책임은 사용설명서를 숙지하지 않고 사용한 부모에게 있습니다.

KOR

- 잠금장치 사용법을 숙지하시고 언제나 사용 가능한 상태로 주행해 주십시오.
- 아이가 유모차에 타고 있을 시에는 지정된 부품 이외의 물건을 올려 놓지 마십시오. 시트 쿠션이 제 기능을 하지 못할 수도 있으며, 오염될 수도 있습니다.
- 사용 전에 모든 스냅단추가 제대로 채워져 있는지 확인 하십시오. 사고나 파손의 위험이 있습니다.
- 불시의 사고를 방지하기 위하여 아이가 유모차에 타고 있을 시에는 안전 벨트를 반드시 채워 주십시오.
- 안전벨트는 아이에게 꼭 맞게 채워 주십시오.
- 어깨벨트를 교차하여 아이에게 채우지 마십시오. 질식의 위험이 있습니다.
- 아이를 태운 상태로 등받이 각도 조절 시 만일의 사고를 방지하기 위해 벨트를 느슨하게 채워 주십시오.
- 안전벨트 길이는 등받이 각도 조절을 마친 후 실시해 주십시오.
- 정차 시에는 반드시 브레이크를 채워 주십시오.
- 유모차에 장착되어 있는 작은 부품들을 아이가 입안에 넣지 않도록 주의 해 주십시오. 질식의 위험이 있습니다.
- 질식을 방지하기 위해 유모차에 앉아 있는 아이의 주변에 플라스틱 가방이나 비닐백을 아이의 손이 닿지 않는 곳에 보관해 주십시오.
- 이 제품은 달리기나 스케이팅을 위한 제품이 아닙니다.
- 유모차를 사용하기 전에 각 부위가 제대로 작동하고 있는지 확인 해 주십시오.
- 과적, 잘못된 폴딩, 버기보드 등의 호환되지 않는 액세서리 장착은 제품 고장의 원인이 될 수 있습니다.
- 정기적으로 제품의 청결 상태를 확인 해 주십시오.
- 아이가 본 제품을 가지고 놀 수 없도록 해 주십시오.
- 유모차를 사용하기 전에 모든 잠금 장치가 잘 작동되고 있는지 확인 해 주십시오.
- 부상의 방지를 위하여 유모차를 접고 펼 때나 마주보기 모드로 전환 시에는 아이와 멀리 떨어진 상태에서 진행해 주십시오.
- 폴딩 잠금 장치가 작동되지 않는다면, 캐스터가 자동으로 잠가지지 않을 수도 있습니다.
- 미국 안전 기준 관련: 풋머프를 사용하지 않을 시에는 등받이를 완전히 누운 채로 아이를 유모차에 태우지 마십시오.
  낙상이나 미끄러짐의 위험이 있습니다.
- 단차가 있는 지형을 통과 시에는 무리하게 유모차를 밀지 마십시오.
  앞 바퀴에 충격을 받게 되면 유모차가 전복 될 수 있습니다.
  단 차가 있는 지형을 통과 시에는 핸들을 두 손으로 잡고 핸들 아래쪽으로 힘을 준 상태에서 앞 바퀴를 약간 들어 주신 후 통과 해 주십시오.

중요: 추후 사용을 위해 본 사용설명서를 잘 보관하십시오.

⚠ 경고

- 잘못된 유모차의 사용은 심각한 부상이나 사망의 위험을 초래할 수 있습니다.
- 유모차의 폴딩 잠금 장치가 제대로 작동하고 있는지 확인 하신 후 사용해 주십시오. 주행 중 갑작스런 폴딩으로 부상을 입을 수 있습니다.
- 경사가 심한 지형이나, 계단, 에스컬레이터, 자갈길, 모래사장, 진흙 길 등에서 유모차를 사용하지 마십시오.
- 아이가 유모차에 타고 있는 상태에서는 유모차를 들고 이동하지 마십시오. 갑작스러운 폴딩이나 안전가드의 고장으로 낙상사고로 이어질 수 있습니다.
- 제품에 이상을 발견하신다면 그 즉시 사용을 중지해 주십시오.
- 낙상이나 전도 사고 피해의 최소화를 위해서 안전벨트를 꼭 착용해 주십시오.
- 안전벨트가 제대로 채워져 있다 해도 아이의 움직임에 따라 갑작스러운 낙상사고가 발생할 수 있으니 항상 시선을 아이에게 유지해 주십시오.
- 아이가 유모차 위에 두발로 서 있지 않도록 해주십시오. 낙상사고의 원인이 될 수 있습니다.
- 아이를 유모차에 태운 후에는 항상 아이를 지켜봐 주십시오.
- 주행 중에는 핸들에 기대거나 무거운 것을 핸들에 걸어 놓지 마십시오.
- 유모차의 핸들이나 캐노피(차양)에는 아무것도 올려 놓지 마십시오. 전도의 위험이 있습니다.
- 유모차에 지정(호환)되지 않은 액세서리를 무리하게 걸어 놓지 마십시오. 고장의 원인이 될 수 있습니다.
- 유모차에 1인 이상의 아이를 태우지 마시고, 시트 이외의 부분에 아이가 올라탄 상태로 주행하지 마십시오.
- 최대 적재 중량을 초과 하는 아이나 적재물을 유모차에 실은 채로 주행하지 마십시오.(최대 탑승 몸무게: 18kg/ 최대 적재 중량: 10kg)
- 버기보드와 같은 제품을 본 제품에 연결하여 사용하지 마십시오. 사고의 원인이 될 수 있습니다.
- 유모차는 브레이크가 채워져 있다고 해도 갑자기 움직이거나 넘어질 수 있습니다.
- 유모차를 사용하지 않을 때에도 길가나 경사진 곳에 세워두지 마십시오.
- 유모차를 폴딩할 때 이외에는 폴딩 장치를 조작하지 마십시오.
- 아무리 빈 유모차를 정차시키는 상황이라도 너무 브레이크에 의존하여 무리한 정치는 삼가 해 주십시오.
- 모든 장치가 올바르게 작동하고 있는 상황에서의 주행이라도 갑작스러운 고장이나 사고에 대비해 주의하여 주행해 주십시오.
- 안전가드는 아이가 유모차에서 일어나는 것을 방지하기 위한 장치가 아니라는 점을 인식해 주십시오.
- 아이가 안전가드를 조작하지 못하게 해 주십시오. 낙상사고의 원인이 될 수 있습니다.

KOR

KOR

⚠ 주의

- 잘못된 유모차의 사용은 아이의 부상이나 유모차 고장의 원인이 될 수 있습니다.
- 아이를 유모차의 시트에 태우고 운반하는 것 이외의 목적으로 유모차를 사용하는 것은 유모차 고장의 원인이 될 수 있습니다.
- 시트쿠션이 없는 상태에서는 아이를 유모차에 태우지 마십시오. 유모차 프레임에 아이의 손과 발이 끼어 부상이 발생 할 수도 있습니다.
- 사고의 방지를 위하여 아이가 혼자 유모차를 조작할 수 없도록 해 주십시오.
- 유모차를 접고 펼 때나 등받이 각도를 조절할 때는 아이가 주변에 없도록 해 주십시오. 아이의 손가락이 제품 사이에 끼는 사고가 발생할 수도 있습니다.
- 안전가드에 무리하게 힘을 가하지 마십시오. 고장의 원인이 될 수 있습니다.
- 낙상 사고의 방지를 위하여 아이가 유모차에 착석한 후에는 안전벨트가 제대로 채워져 있는지 확인 하시고 조임 상태도 확인 해 주십시오.
- 아이가 유모차에 타고 있는 상태에서 유모차를 마주보기로 전환할 경우 아이의 손이 다치지 않도록 특별히 주의해 주십시오.
- 혼자서 똑바로 앉아 있을 수 없는 아이를 유모차에 태울 때는 등받이 각도를 최대로 눕혀 주십시오.
- 등받이를 최대로 눕힌 상태에로 아이를 태웠을 때 시트가 좁아졌다면, 등받이 각도를 줄여 시트를 세워 주십시오. 단, 아이가 혼자서 똑바로 앉아 있을 수 있어야 합니다.
- 아이가 누웠을 때 머리가 시트의 헤드레스트보다 위에 있다면 등받이 각도를 최대하지 마십시오.
- 유모차는 성인이 탈 수 없으며, 유모차에 고장을 일으킬 만한 물건을 올려 놓지 마십시오.
- 평상시에 유모차는 느린 속도로 주행 하시어, 주변의 장애물이나 이물질이 유모차 바퀴에 닿지 않도록 해 주십시오.
- 10kg이상의 물건을 바구니에 담지 마십시오.
- 평상시 유모차를 주행 할 때는 지형에 장애물이 있는지 주의하시어, 제품이 손상되지 않도록 주의해 주십시오.
- 눈 또는 비가 오는 날이나 바람이 심하게 부는 날에는 주행을 삼가 주십시오.
- 번개가 치는 날에는 주행을 삼가 주십시오.
- 야외활동 활동이 잦은 여름철에는 반복된 사용을 지양해 주십시오.
- 고온이나 화재의 위험이 있는 곳에서의 보관을 피해 주십시오. 고온의 장소에서 유모차를 보관하실 경우 제품의 변형이나 손상의 위험이 있습니다.
- 유모차를 임의로 개조하거나 해체하지 마십시오.
- 유모차에 끼워져 있는 볼트와 너트 등은 주기적으로 조임 상태를 확인 해 주십시오.
- 대중교통 이용 시에는 유모차의 사용을 자제해 주십시오.
- 유모차 주행 시 바퀴회전 고정장치는 양쪽이 모두 동일한 위치에 있어야 합니다.
- 제품의 잘못된 사용은 제품의 오작동 및 손상을 초래할 수 있습니다.
- 지면으로부터의 높이가 3cm이상인 장애물을 통과 시에는 앞 바퀴를 살짝 들어 주십시오. 그대로 지나칠 시에는 바퀴에 충격이 가해져 제품이 손상 될 수 있습니다.

⚠ 주의

- 철길을 통과 시에는 앞 바퀴를 살짝 들어서 통과 하시고 선로 사이의 틈을 주의하여 통과 하십시오.
- 유모차의 장시간 사용을 금지합니다.
  장시간 동안 아이를 유모차에 태울 시에는 아이의 신체에 무리가 갈 수 있습니다. 아이가 누운 상태로는 2시간 이상 유모차에 태우지 마시고, 아이가 앉아 있는 상태로는 1시간 이상 유모차 에 태우지 마십시오.
- 기차에서의 유모차 사용
  이 제품은 달리는 기차 내에서는 사용할 수 없게 제작 되었습니다. 만약 위험을 감수하고서라 도 기차에서 유모차를 사용하고자 하신다면, 기차의 급정거 및 급출발에 대비할 수 있게 브레 이크를 항상 잠가두십시오.
- 주변에 장애물이 없는 공간에서 유모차를 접거나 펼쳐 주십시오. 아이의 손가락 유모차에 끼이는 사고가 발생 할 수도 있습니다.
- 유모차를 옮길 시에는 폴딩레버를 세게 누르거나 당기지 말아 주십시오. 제품이 손상될 수 있습니다.
- 유모차를 접어서 보관하실 경우 잠금 장치가 제대로 채워져 있는지 확인 하십시오.
- 접혀있는 유모차를 펼치기 전에 잠금 장치가 제대로 해제되어 있는지 확인 하십시오. 잠금 장치가 설정되어 있는 상태에서의 무리한 조작은 제품 고장의 원인 될 수 있습니다.
- 제품의 조작이 부자연스럽거나 쉽게 이루어지지 않을 때에는 제품을 강제로 조작하지 마시고, 다시 접은 상태에서 각종 부품들과 장치가 제대로 설치되어 있는지 점검해 주십시오.
- 제품을 접기 전에 반드시 바구니가 비어 있는지 확인 해 주십시오.
- 제품을 접기 전에 반드시 캐노피가 완전히 접혀 있는지 확인 하시어 파손을 방지해 주십시오.
- 제품을 접기 전에 앞 바퀴를 유모차의 안쪽으로 위치 시킨 후 회전 고정장치로 잠가 주십시오.
- 마주보기 모드로 전환 시 아이의 손가락이 핸들에 끼이지 않도록 주의해 주십시오.
- 마주보기 모드로 전환 시에는 아이를 마주보고 아이의 상태를 확인 해 주십시오.
- 유모차를 주행 중에는 마주보기 모드로 전환하지 말아 주십시오.
- 유모차를 접거나 펼 때는 잠금 장치를 설정하지 말아 주십시오. 제품이 파손 될 수 있습니다.
- 유모차에 아이가 타고 있지 않거나 정차 중에도 불시에 발생할 수 있는 사고에 대비하여 항상 브레이크를 채워 주십시오.
- 바퀴가 올바른 위치에 있지 않은 상태로의 주행은 삼가 해 주십시오.

KOR

⚠ 주의

- 유모차를 바닥에 눕힌 상태로 보관하지 마시고 캐노피 부분에는 아무것도 올려 놓지 마십시오.
- 안전가드를 풀어 유모차를 끄는데 사용하지 마십시오.
- 안전가드에 무리하게 힘을 가하지 마십시오. 고장의 원인이 될 수 있습니다.
- 시트쿠션의 설치 고리는 베이스 시트 위에 지정 된 구멍에 설치해야 합니다. (예, 베이스 시트상단 고정 구멍에는 시트쿠션 상단에 있는 고정 고리가 설치되어야 합니다.) 그렇지 않으면, 벨트 길이가 비정상적으로 짧아져 아이에게 무리를 줄 수 있습니다.
- 유모차 주행 중에 등받이 각도를 조절하는 것은 위험합니다.
- 아이가 유모차의 시트에 타고 있는 상태에서 등받이 각도를 조절하지 마십시오.
- 다른 한 손으로 유모차의 등받이를 지탱한 이후에 등받이 각도를 늘려주시어 갑작스럽게 등받이가 뒤로 넘어가는 것을 방지해 주십시오.
- 너무 날카롭거나 큰 짐을 바구니에 보관하지 마십시오. 바구니 파손의 원인이 될 수 있습니다.
- 유모차를 세척할 때는 중성세제만을 사용해 주십시오.
- 아이의 손이 닿는 위치에 윤활유나 기타 기름기가 남아 있지 않도록 해 주십시오.
- 정차 시에는 아이를 먼저 유모차에서 내린 후 유모차를 접어 보관해 주십시오.
- 무분별한 액세서리의 장착은 제품의 균형을 잃게 하여 고장의 원인이 될 수 있습니다.

안전수칙

본 제품은 한 번에 한 아이만을 태울 수 있습니다.

- 본 유모차는 1개월부터 체중 18kg 이하(대략 4세 전후)의 아이들에게 적합한 유모차 입니다.
- 유모차를 접고 펼 때에는 당신 신체의 일부분(손가락, 손 등)과 아이 신체의 일부분이 유모차에 닿을 수 없도록 해 주십시오.
- 유모차에 아이가 타고 있을 때 에스컬레이터나 계단을 사용하지 마십시오.
- 유모차의 상태를 정기적으로 체크해 주십시오.
- 제품 운반 중 파손을 방지하기 위해서 제품의 이 상태를 꼼꼼히 체크해 주십시오.
- 유모차를 복도나 계단에 방치하지 마십시오.
- 평평하고 부드러우면서 미끄럽지 않은 도로 컨디션 하에 제품을 사용해 주십시오.
- 제작사로부터 만들어진 전용 액세서리와 부품만을 사용해 주시고 제품을 임의로 개조하지 마십시오.

각 부분의 명칭

1. 핸들
2. 안전가드
3. 시트 유닛
4. 시트쿠션
5. 풋레스트
6. 회전잠금장치
7. 앞바퀴
8. 바구니
9. 뒷바퀴
10. 시트 탈부착 버튼
11. 허리벨트 삽입 구
12. 숄더벨트 커버
13. 숄더벨트 삽입 구
14. 헤드레스트 삽입 구
15. 숄더벨트
16. 허리벨트
17. 가랑이 벨트 버클
18. 가랑이 벨트 커버
19. 폴딩 고정 지지대
20. 브레이크레버
21. 시트 위치 조절 버튼
22. 시트쿠션 스냅단추
23. 등받이 조절 버클
24. 등받이 조절 벨트
25. 폴딩 잠금장치
26. 폴딩 레버

KOR

사용방법 안내

구성품 확인 (그림1.1)

사용하기 전에 모든 구성품이 있는지 확인해주십시오.

경고 : 시트를 프레임에 조립하기 전에는 유모차를 사용하지 마십시오.

앞바퀴 결합 방법 안내 (그림 1.2)

앞바퀴 상단에 있는 축을 그림과 같이 본체와 연결해 주십시오. 바퀴가 정확이 고정이 되면 "딸깍"소리가 나게 됩니다.

뒷바퀴 결합 방법 안내 (그림 1.3)

뒷바퀴 상단에 있는 축을 그림과 같이 본체와 연결해 주십시오. 바퀴가 정확이 고정이 되면 "딸깍"소리가 나게 됩니다. 조립 후 앞바퀴가 분리가 되지 않는지 한번 더 당겨봐 주십시오.

경고 : 조립 후 바퀴를 당겨서 제대로 장착되었는지 확인해주십시오.

유모차 개폐방법 (그림 1.4)

①폴딩 잠금 장치를 표기 되어 있는 방향으로 밀어서 고정시켜 줍니다.
②폴딩 레버를 잠금 장치와 동일한 방향으로 동시에 밀어줍니다.
③핸들을 천천히 두손으로 들어올려 유모차가 펼쳐짐과 동시에 레버를 풀어 줍니다.

브레이크 채우기

①유모차를 정차하고자 할 때는 그림과 같이 바퀴 양쪽에 위치해 있는 브레이크 레버를 아래로 눌러주십시오. (그림 2.1)
②브레이크가 올바르게 작동되고 있는지 유모차를 앞뒤로 가볍게 밀어 확인 해주십시오.
브레이크 레버를 들어올려서 잠금 해제 해주십시오. (그림 2.2)

바퀴 회전 잠금 장치 사용법 (그림 2.3 - 2.4)

①바퀴 회전 상태로 전환 하기 – 그림과 같이 위치해 있는 바퀴 회전 잠금 장치를 위로 올려 줍니다. (그림 2.3)

②바퀴 회전 고정 상태로 전환 하기– 그림과 같이 위치해 있는 바퀴 회전 잠금 장치를 아래로 내려 줍니다. (그림 2.4)

본 유모차는 아기의 개월 수와 체중에 따라 두 가지의 시트모드를 사용하실 수 있습니다.

● 좌석모드 사용방법

KOR

참고: 좌석모드는 6개월 이상 또는 9kg이상의 아기에게 적합합니다.

시트와 프레임은 조립되어 있지 않은 채 포장됩니다.

조립방법 안내:

①유모차를 정면으로 봤을 때 왼쪽 상단에 위치해 있는 패브릭 고정 스냅을 풀어 줍니다. (그림 2.5)

②시트 하단의 뒷부분에 위치해 있는 스트랩을 최대한 잡아 당겨 줍니다. 스트랩이 잘 당겨지지 않을경우 시트 하단의 발받침을 윗 방향으로 올려준 후 다시 스트랩을 당겨 줍니다. (그림 2.6 – 그림 2.8)

③스트랩의 끝부분을 분리 1단계 완료 후 나오게 되는 연결 스트랩과 그림과 같이 맞물려 줍니다. (그림 2.9)

④그림과 같이 좌석 양쪽의 허브(탈부착 버튼)를 유모차 프레임의 허브 슬롯에 삽입해주십시오. (그림 3.1)

팁: 시트모드 조절은 시트와 유모차 프레임을 연결하기 전이나 후에 가능 하지만 원활한 모드 조작과 안전을 위해 연결 전에 완료해 주십시오.

주의: 유모차를 사용하기 전에 각 부위의 고정 장치들과 조절장치들이 올바르게 작동하고 있는지 확인 해 주십시오.

● 침대 모드 (캐리콧 모드) 이용방법 안내

주의: 침대 모드는 아기가 스스로 앉아서 몸을 구부릴 수 없거나 팔과 무릎을 사용하여 스스로를 지탱 할수 없는 시기에만 사용해 주십시오.

최대체중: 신생아~9kg

주의: 침대 모드는 신생아 부터 6개월 이전의 아기에게만 사용해 주십시오.

침대 모드 변경 방법 안내 (그림 3.2)

① 리클라이닝 버튼을 아래로 당기십시오.

② 좌석이 완전히 평평해질 때까지 아래쪽으로 좌석 위치 조절 단추를 당깁니다.

③ 좌석의 한쪽 면에 있는 버튼을 풀어줍니다.

④ 좌석을 눌러서 바닥을 평평하게 해줍니다.

⑤ 그림과 같이 스냅을 고정시켜줍니다.

주의: 아기의 안전을 위해 아기가 탑승하고 있을 때에는 시트를 분리하여 이동하지 마십시오. (그림 3.3)

마주보기 모드 전환 방법 안내 (그림 4.1)

①그림과 같이 시트 안전가드의 양옆에 위치해 있는 노브를 그림과 같이 누른 후 시트를 프레임으로 부터 분리해 주십시오.
②시트를 마주보기 방향으로 돌려 분리의 역순으로 끼워 주십시오.
③시트를 다시 들어보고 제대로 설치 되었는지 확인해 주십시오.

주의: 마주보기 모드 전환 중에 아기가 다치지 않도록 주의해 주십시오.

KOR

등받이 각도 조절 방법 (그림 4. 2 - 그림 4.3)

등받이 각도는 총 3단계로 조절할 수 있습니다.
①시트 상단 맨 윗부분에 위치한 등받이 각도 조절버튼을 눌러 주십시오.
②세밀한 등받이 각도 조절을 위해서 등받이 뒷부분에 위치한 스트랩을 조절해 주십시오.

차양 조절 방법 (그림 4.4)

차양을 앞으로 또는 뒤로 당겨서 차양의 크기를 조절해 주십시오.

안전가드 설치 및 분리방법 안내 (그림 5.1)

이 유모차는 안전가드를 분리 또는 설치 할 수 있도록 제작 되었습니다.
①안전가드를 분리할 때는 그림과 같이 안전가드 양 옆에 있는 버튼을 누름과 동시에 안전가드를 위로 올려 분리해 주십시오.
② 아기를 유모차에 태우고 내릴 시에는 한 쪽 버튼만 눌러 그림과 같이 안전가드를 열어 주십시오. 분리된 안전가드를 재 설치 시에는 분리의 역순으로 조립해 주십시오.

유모차 폴딩방법 (그림 5.2)

유모차를 접기 전에 차양을 뒤로 젖히십시오.
①그림과 같이 폴딩 잠금 장치를 밀어 해제합니다.
②폴딩 레버를 잠금 장치와 같은 방향으로 밀어준 후 핸들을 살짝 위로 올린 후 아래로 천천히 내려 줍니다.

주의: 유모차를 펼치거나 접을 때에는 아이가 주변에 없도록 해 주시 십오. 손가락이 유모차에 끼어 부상을 당할 수 있습니다. 또한 유모차를 접을 때는 유모차 및 바구니에 어떠한 물건도 올려 놓지 마십시오. 마주보기 상태에서는 유모차를 폴딩하지 마십시오.

참고: 유모차 등받이 각도를 조절할 경우 안전벨트가 알맞은 강도로 아이를 감싸고있는지 확인 해 주세요.

KOR

시트쿠션 분리방법(그림 5.3 - 그림 6.1)

①가랑이 벨트 버클의 버튼을 눌러 벨트를 분리한 후 어깨벨트와 허리벨트를 분리해 줍니다.
②어깨벨트 커버와 가랑이벨트 커버를 분리해줍니다.
③유모차 시트 상단의 양쪽에 채워져 있는 지퍼를 연 후, 본체와 프레임과 연결되어 있는고정 고리를 분리해 주십시오.
④신생아 패드 상단 및 하단의 양옆에 있는 고정 고리를 느슨하게 분리해 주십시오.
⑤신생아 패드 맨 아랫부분에 본체와 연결되어 있는 스냅을 풀어 주십시오.
⑥신생아 패드를 분리해 줍니다.

참고: 시트의 설치는 분리의 역순입니다.

차양 설치 방법 (그림 6.2)

① 그림과 같이 캐노피 조인트를 캐노피 홀더에 꽂아넣습니다.
② 캐노피 스냅버튼을 시트에 고정합니다.
③ 차양 뒷편의 끈을 시트 위치 조절버튼에 걸어주십시오.
차양을 분리하려면 역순으로 진행해주십시오.

어깨벨트 장착 방법 (그림 6.3)

뒷판의 삽입구를 통해 어깨벨트를 당겨서 쿠션의 시트벨트 삽입구에 삽입하십시오.
뒷판 부분과 같은 위치의 어깨벨트 삽입구를 사용하십시오.

허리벨트 부착 방법 (그림 6.4)

뒷판의 삽입구를 통해 허리벨트를 당겨서 쿠션의 시트벨트 삽입구에 삽입하십시오.

장바구니 (그림 7.1)

①그림과 같은 순서로 장바구니를 설치 또는 분리해 주십시오.
장바구니의 최대 적재 중량은 10kg입니다.

앞바퀴 분리방법 안내 (그림 7.2)

앞바퀴 연결 부위에 위치해 있는 버튼을 그림과 같이 눌러 주신 후 바퀴를 잡아 당겨 분리해 주십시오.

뒷바퀴 분리방법 안내(그림7.3 - 7.4)

왼쪽 뒷바퀴를 분리하기 위해서는 바퀴연결 부위에 있는 버튼을 그림과 같이 눌러 주신 후 바퀴를 잡아당겨 분리해 주십시오.
오른쪽 뒷바퀴를 분리하기 위해서는 브레이크를 주차모드로 변경해 주신 후 바퀴연결 부위에 있는 버튼을 그림과 같이 눌러 주신 후 바퀴를 잡아당겨 분리해 주십시오.

어깨벨트 커버 씌우기(그림 8.1)

그림과 같이 안전 벨트를 분리 해 줍니다.어깨밸트를 잡고 그림과 같이 커버를 씌워 줍니다.

가랑이 벨트 커버 씌우기 (그림 8.2)

그림과 같이 가랑이 벨트를 잡고 커버를 씌워 줍니다.

삽입 클립 장착방법 (그림8.3)

그림과 같은 방향으로 벨트를 잡아 당겨 벨트 부분을 빼냅니다.

참고 : 벨트 끝 부분은 상항 최소한 3cm 남겨두십시오.

KOR

안전벨트 사용법（그림 8.4）

①어깨벨트와 허리벨트 결합 시 어깨벨트 버클이 허리벨트 버클의 아래에 위치하도록 주십시오.

②가랑이 벨트 버클의 가운데 버튼을 누르면 벨트가 풀어집니다.

가랑이 벨트 길이 조절방법(그림8.5)

벨트 길이 줄이기: 그림과 같은 방향으로 벨트를 당겨 올려 주십시오.

벨트 길이 늘리기: 그림과 같은 순서로 벨트를 풀어 주십시오.

일상에서의 관리 방법

• 바퀴나 본체 부분에 무리한 힘을 가하지 말아 주십시오.

• 시트의 곰팡이나 기타 오염을 방지하기 위하여 물에 젖은 상태나 습한 곳에 보관하지 말아 주십시오.

• 눈이나 비가 오는 날씨나 무더운 날씨에는 외출을 자제해 주십시오.

• 유모차의 플라스틱 부분이나 알루미늄 부분을 닦을 시에는 물티슈를 이용해 주시고, 심하게 오염된 부분은 희석한 중성세제를 이용해 닦아 주십시오.

• 유모차의 작동이나 주행이 원활하지 않을 때에는 해당부위에 적당량의 윤활제를 도포해 주십시오. 과도하게 도포할 경우 기능이 저하 될 수도 있으며 쉽게 오염이 될 수도 있습니다.

패브릭 세탁 방법

• 아래의 세탁방법을 참조하시어 세탁해 주십시오

• 패브릭이 완전히 건조된 상태에서 유모차를 사용하시거나 보관해 주십시오.

• 세탁 시에는 이하의 미온수에서 손 세탁을 권장 드립니다.

패브릭 관리 안내

• 미온수에서 손 세탁.

• 세탁기 탈수 및 건조 금지.

• 드라이 클리닝 금지.

• 표백제 사용금지.

• 다림질 금지.

Combi Corporation

171286090