
1. DESCRIPTION

1.1 Schematic Diagram

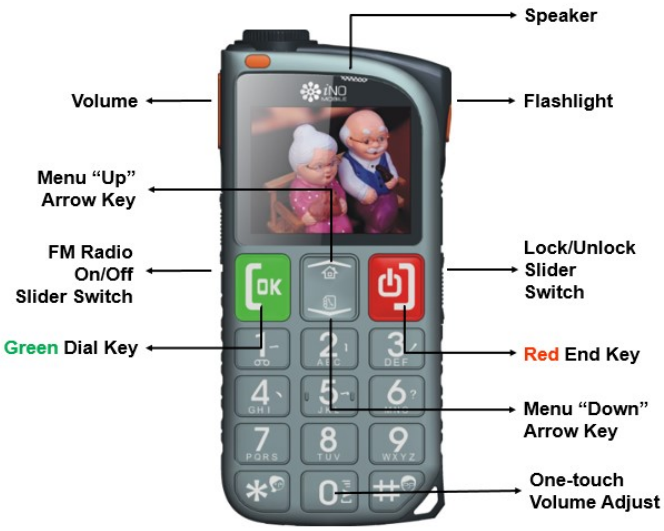

1.2 Functions At A Glance


Key Type	Features
Dial Key (green button)	After typing the phone number: Press Key to call out During incoming call: Press Key to answer call On standby mode: Press to see Call Log
End Key (red button)	To Shut Down: Long press to shut down To Start-Up phone: Long press to turn on phone On standby mode:

	Press to see Contact List On standby mode: Press to return to previous screen
Navigation Arrow Up (^)	On standby mode: Press to enter Functions list On standby mode: To scroll upwards
Navigation Arrow Down (˅)	On standby mode: Set as Shortcut key On standby mode: To scroll downwards
Numeric Key “1”	On standby mode: Press the " 1" key to enter your voice mail
Keys #, *, 1, 2 to 9	On standby mode, press " 2" to "9 ", "* ", "# " to speed dial pre-assigned contacts
Key *	Call up symbols table during text input
Key #	When messaging, pressing # allows changing between Upper and Lower case letters
One-touch Temporary Volume Increase Key “0”	During a phone call, Long Press once to quickly raise the volume; long press again to restore the volume to original level before call
FM Broadcast	Slide key up to turn on FM radio function; slide down to turn off radio
Volume Control Key	Press the volume key " +" to increase the volume, press the volume key " -" to reduce volume in the middle of a call and when listening to the radio

Flashlight switch key	Long Press for at least 3 seconds to turn on flashlight; long press again for 3 seconds to turn off flashlight
Orange SOS Emergency Button	Long press this SOS Button to activate SOS siren and send out SOS messages to a predefined recipient list, followed by automatically dialing to the same numbers

1.3 SOS Function

During an emergency, Long Pressing the orange SOS Button at the rear of the phone will emit a loud siren to alert passers-by. At the same time, the phone will send out an SOS Message, followed by dialing to a pre-set list of numbers. To enable this function, press the Navigation key to access the Tools menu.

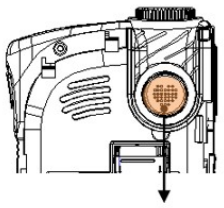

■ The SOS function can be turned off/on:
Tools → SOS Ring → turn on/off

■ Emergency numbers are set as follows:
Tools → SOS Settings → key in pre-determined numbers to receive SOS message and calls

■ The SOS Message can be user-configured:
Tools → SOS Message → proceed to edit content

1.4 Temporary One-Touch Volume Increase

You can increase the volume quickly during a phone call by Long Pressing the “0” key once to raise the volume to a maximum quickly; Long Press again during call to restore volume setting to original level.


- To enable this function, press the Navigation key to access the Tools menu:



Tool → One Key Hearing Deaf → Turn on or off.
After the call is over, the phone automatically restores the volume setting to the original level before the call was call.


1.5 Flashlight

To turn on flashlight, Long Press the flashlight button located on the right side of phone. To turn off, Long Press the same button.

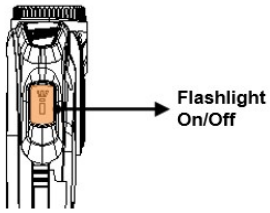

1.6 Screen Lock


In the standby mode, sliding the Power Switch “up” on the right side of phone will lock the phone to prevent unnecessary wastage of batteries.

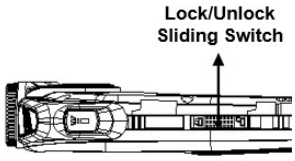

1.7 Volume keys

The volume key is an orange coloured slider key located on the left side of the phone. You can adjust the volume during a call.

1.8 FM Radio

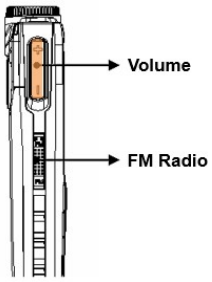

2. MENU FEATURES

Use Menu arrow up (^) key to access phone Menu functions:

2.1 Message

- **Write Message**

The top right screen shows the number of characters used, and helps you to keep tab on the current character count. The input screen is split into 2 halves: Enter recipient details on top half; the bottom half is for message text input. Options:

- Send: Send To Recipient
- Names: You can select from phonebook numbers, you can also enter the number
- Insert templates: Choose from a set of stored standard phrases
- Add Contact Info: Allows you to add the contact number of a particular person into the message
- Join Phiz: Choose from a selection of emoticons
- Save as Draft: Indicates that the SMS message will not be sent and is to be saved as Draft

➢ Exit: Exit and return to previous Menu level

■ **Inbox**

The following symbols indicates status of messages:

: Unread message

: The message have been read

: The message is locked

The following actions are available:

■ Read: view this article newsletter content with option to Delete, Reply, Forward, Call, Add sender number to Contact Book and Read details of the message

■ Delete: Erase this message

■ Delete All: Delete all the messages

■ Call: Call the sender

■ Lock: Lock the current message

■ Mark: The message is marked

■ Sort: The messages are sorted by classifications

■ Add Sender to: Add sender contact to phone or SIM card

■ Delete Repeated Number: Delete repeated messages from the same sender

➢ **Outbox**

To view the message, the following actions are available:

➢ Read: Press the numeric key " 5" and scroll down to read body text

■ Resend: Re-send the message

■ Erase: Erase current message

■ Delete All: Delete all messages in the Outbox

■ Lock: Lock the current message

➢ **Drafts**

Unsent messages are stored here.

➢ **Sentbox**

Sent messages are stored here.

➢ **Broadcast Message**

Enable the user to periodically send useful information to communities such as important phone numbers, weather forecasts and traffic information etc.

- Forward
- Delete
- Settings
  - ❖ Turn on or turn off community radio set, language* and channel settings

* Note: Language support availability depends on the network system

➢ **Voice Mail Server**

In the "Message" menu, scroll down to select "voice mail server", press "OK" to enter the function.

- ➢ Edit: Enter or modify the voice mailbox number
- ➢ Dial voicemail: With this feature, you can listen to the voicemail message Information stored within

➢ **Settings**

- Set Message Center: Choose which SIM Card is the preferred storage location for messages
- Message Capacity: View SIM card and phone memory usage rate

2.2 Contacts

You can select a phone number stored in the SIM card or on the phone. You can quickly access the Contacts by pressing the phone's Red key while in the Standby mode. The SIM card's memory capacity depends on the SIM card used.

➢ **Search**

This feature allows you to browse by name in the phone book. Use the arrow keys to scroll and find your desired phone number:

- ➢ Call: Dial this number
- Edit: Edit the number
- New: Add a new contact to selected SIM Card

- Send: Send message to this number
- Delete: Erase the contact
- Delete Multiple: Completely erase SIM card messages (press the “5” key to select individual contact number)
- Import/Export: Phone contacts can be copied to/from SD memory card
- Others:

The mobile phone allows you to set up to 4 call group and you can set a different ringtone for incoming calls for each group. Press the # key to switch between individual contact and group contact.

2.3 Settings

- **Call Settings**
- Dual SIM: Set which SIM card to used as the main card
- Call Divert: There are several call divert options in-built into phone menu
- Call Waiting: When this feature is enabled, an incoming call will be displayed on the screen
- Call Barring: You may need to contact your local telco to enable this feature. There is a standard list of barring actions built into the phone menu
- Hide ID: Your phone number will not be displayed. You may need to contact your local telco to enable this feature
- Others
  - IP Prefix

    Select IP number, press OK to complete the IP PTT settings. After setting the IP PTT, it will automatically dial the IP number when you call the phone number
  - Call Time Minute Reminder

    Select the time interval for prompts to occur
  - Automatic Redial

    Automatically redials number if previous attempt failed
  - Vibration When Connected

    Phone vibrates when the call goes through
  - Auto Record Voice Call

    Automatically record the each call

➢ **Phone Settings**

■ Date & Time

- Set the Time: Sets the phone display time
- Set the Date: Sets the display date
- Time Format: Set for 12 or 24-hour format
- Date Format: Set day, month, year format and date format settings, screen display settings and change
- Update Time Settings: You can choose manual or automatic time update
- Full Speech: Turn On/Off synthesised voice read-out of time at every half-hour intervals (at xx:00 and xx:30 moments)

❖ Language Settings

Choose to display and write in 3 language options: English/Simplified Chinese/Bahasa Melayu

■ Shortcut Setting

Certain commonly used functions can be accessed with just one touch by pressing the lower arrow (﹀) of Menu Key. To set, just choose from a pre-set list of functions

■ Auto Power On/Off

Turns on/off the phone at a preset time. To set the desired timing, press key “5” to access the time-edit screen

■ Power Management: View remaining battery life

❖ Restore the factory setting

Key in password “1234” when prompted on screen

● **Display Settings**

■ Animation Effect

Change animation of various screens

■ Wallpaper Settings

Choose desired wallpaper image from memory card storage

● Contrast

Adjust screen contrast by using the * and # keys

■ Backlight Setting (Screen)

Choose interval settings for Auto Power Save Mode

- Keypad Backlight Setting

Set the Key backlight off time and night-time (defined as interval between 6pm to 6am) to enter power-saving mode

- **Security settings**

Can be turned on/off to change the PIN code and PIN2 code. With PIN code turned on, you need to enter code to use the phone upon phone start-up.

- **Speech Setting**

This feature reads out the phone number of incoming calls in a synthesized voice

- Key Ring: Select the particular number you want phone to read out audibly
- Incoming Call Ring: Reads out number of all incoming calls

- **Connections**

Turn on/off the Internet network data connections. To prevent unplanned incurrence of data charges, it is advisable to turn off the connections when not needed.

2.4 Call Logs

Displays SIM card call records

- **Missed call**

View missed calls by using the Menu button's Up/Down arrow keys. Press the "Options" to do the following:

- View: To view this phone call time
- Details: View the details of a call
- Call: Dial this number
- Send Message: Message to this number
- Add to Address Book: Save the number to SIM card or phone .
- Delete: Erase call record
- Delete All: Erase all Missed Call List

- Mark: Mark the status

➢ **Dialled calls**

View dialed calls and its details

- **Received call**

View calls received and its details

- **Delete All**

Delete all records, including all missed, dialed, and received calls

- **Call Timers**

With this feature, you can check the duration of last call and total time expended for all calls

- **GPRS Counter**

Check internet data details of last received , last sent, total etc.

2.5 Multimedia

- **Audio Player**

Enter the music player interface to select the music list. Choose to play music list, add, set music as ringtone, shuffle/random play, repeat play, setting, read the review or exit. While at audio player interface, you can control the playback by using the following control functions: Press the up and down arrow keys to play/pause toggle key, press the "*" key to turn on a song, press the "#" key to switch to the next song, adjust volume using Volume +, - key

- **Video Player**

The following options are available:

- Play/Pause : Play the video clip
- Open: Open local player list
- Repeat: Set repeat play mode

➢ Random: set to shuffle on or off

View: View the play record history
Set: Set video playback
Set-As: Use movie as phone on/off animation
- Details: View current movie details

Exit the player: Exit function
* Note: While watching, press numeric key “4” to switch on the video, press number key “6” to jump to next video, press the Red “End” key to stop playing; * to toggle between mute

- **FM radio**

The mobile phone supports FM radio broadcast with the following functions:
- Exit: Exit form FM radio
- Auto Search and Save: Automatically search and save station frequency setting
- Channel List: List and edit the channel name
- Save: Saves the current frequency to the Channel List

Manual Search: Directly key-in the FM radio frequency to set the channel
Open Speaker: Turn on the speakers as default
- Background Play: FM background playback
- Record: Record current Channel being played
- Timing Record: You can preset frequency and time to start automatic play
- Record File List: View list of recordings
- Storage: Select the storage location to store playback
- Help: Provides general advise on correct use of earphone

* Note: To jump to next channel, use Menu Up/Down arrow keys. Press the red key to pause, Press the green key to exit; use Volume + and - buttons to adjust the play volume

- **Image (Pictures)**
- Open: Browse the picture
  - Wallpaper: Set the chosen picture as wallpaper
  - Animation: Set the chosen picture for mobile screen animation
  - Contact Picture: Assign the chosen picture to a

contact telephone number

- Delete: Erase the picture
- Tag: Tag specifies the picture
- Slide Show: Use the Slideshow Player to view the pictures.

Use Up/Down arrow to navigate to the next picture

2.6 Tools

- **SOS Ring**

Turn on/off the alarm siren

- **SOS Settings**

See Section 1.3

- **SOS Message**

See Section 1.3

- **Speed Dial**

Assign speed dialing to numeric keys 2-9 keys, " *" and "#"

- **One Key Aid (Deaf)**

See Section 1.4

- **Alarm**

Three alarm timings can be set with the following functions:
Press the numeric "5" key to set the alarm message name
Scroll down with arrow down key to set the alarm time
Scroll down further to set alarm Ringtone; press the numeric "5" to select ring tones

- Repeat Mode: Set the alarm to ring at a particular day and time

Medication Reminder

Set reminder to consume medication with reminder time, ring tones, and repeat option. Access the edit screen by pressing numeric key "5"

➢ **Calendar**

This feature allows user to view and set calender. Selecting the Option key accesses the following features:

- Add New Schedule: Enter the Subject, Date, Time, Ringtones, and option to repeat the settings
- View Schedules: Viewing today's schedule

All Schedules: View all schedules

- Clear Today's Task: Empty all schedules for today

Clear All: Clear all schedules

- Goto Date: Go to a specific date on the calender

➢ Weekly: Open up to 7-day calender view

Daily: Open up to 1-day calender view

➢ **My Files**

File storage management function

➢ **Internet**

Access webpage by keying in URL address. You need to insert a 3G SIM Card to turn on this function. To prevent any unplanned incurrence of data charges, it is advisable use the internet services only when necessary

➢ **Calculator**

Use the Up/Down arrow key to navigate between input commands

- **Recorder**

Supports 3 recording format: AMR , WAV, Mp 3 when recording audio session

- **Stopwatch**

Stopwatch function

- **Memo**

View a variety of tasks. Users have the ability to preview, add

new, edit, delete and mark the memos

2.7 Profiles

There are 5 profiles to choose from: Normal, Silent, Meeting, Indoor and Outdoor mode. Once profile is chosen, select Option to enter the following operations:

- **Activate**

Activates the chosen profile

- **Add**

Customise new option settings

- **Delete**

Delete new setting

- **Settings:**

Rename: Edit the default name of each Profile
Ring Settings: Set the ringing and message ring tone
Adjust Volume: Set volume of ringing and message ringtone

- ❖ Ring Type: Select message notification ringtone
- ■ Other Alert Ringtone: Select notification ringtone of other functions

3. INPUT

When entering text, the following input methods are available:

- ■ Press "#"key to toggle between Uppercase or Lowercase letters
- ■ Press "*" to call up a symbol table (eg. ，。：、？)

Key	Corresponding Characters
Numeric Key 1	，。：、？
Numeric Key 2	abc
Numeric Key 3	def
Numeric Key 4	ghi
Numeric Key 5	jkl

Numeric Key 6	mno
Numeric Key 7	pqrs
Numeric Key 8	tuv
Numeric Key 9	wxyz
Numeric Key 0	␣
* Key	Bring-up symbol menu
# Key	To switch input method (lower/upper case)
Left **Green** Key	Select
Right **Red** Key	Cancel

4. APPENDIX A

Troubleshooting Guide

Symptoms	**Possible Cause/s**
Phone does not power on	If the battery is adequately charged, battery may be inserted incorrectly
SIM card error	1) SIM card contacts dirty: clean SIM card contacts re-install SIM card 2) SIM card is damaged: - replace SIM card
Poor reception	Check the display signal strength indicator on the screen. This is shown by vertical bars. If only 2 vertical bars or less is shown, it indicates the network coverage in that area is poor
Unable to make outgoing call	(i) You may have set to hide your phone number and your network provider does not support call number hiding (ii) the surrounding environment may have strong external interferences

Battery is not charging	(i) The battery may have been over-discharged; there is a need to charge the battery for a longer period of time to restore it's normal performance (ii) The Battery is faulty
Unable to connect to Internet	(i) 3G signal is too weak, or wireless interference present (ii) SIM card is installed correctly, or damaged

5. APPENDIX B

Common acronyms

SMS	Short Messaging Service
EMS	Enhanced Messaging Service
SIM	Subscriber Identity Module (user ID card card)
GSM	Global System for Mobile Communication
PIN	Personal Identity Number (personal and individual code)
PUK	PIN Unblocking Key (PIN code to unlock it)
IMEI	International Mobile Equipment Identity
CB	Cell Broadcast (broadcast news)
GPRS	General Packet Radio Service
MMS	Multimedia Messaging Service

6. SAFETY & ATTENTION

In order to use your mobile phone safely and efficiently, please read your messages before using:

1. Please be careful when you are near chemical plant, gas station, tank farm and other explosive devices. Even if your mobile phone is in standby mode, it will send out RF signals. Therefore, please power off your mobile phone when in the vicinity of the above.

2. Do not use your mobile phone while driving; stop the car if you must use the phone.

3. Do not use your mobile phone in the hospital in order to avoid interference with nearby medical equipment, such as heart pacemakers, hearing aids and etc. You should obey the relevant applicable rules before use.

4. When travelling on an aeroplane, please power off your mobile phone before the plane takes off. Please follow all airline and airport regulations regarding use of mobile phones on the plane.

5. Please ensure your mobile phone and all accessories are out of reach of children.

6. Accessories and battery: Please use the dedicated accessories and battery provided to avoid damaging the phone. Please do not short, tear away, damage or adapt the battery for usage other than intended. If the phone has excessive temperature, discoloration, variance, bulking, weeping and other unusual phenomenon, please stop using the battery immediately and dispose of it properly.

7. Do not charge the phone without the battery. If you wish to remove the battery, please power off the mobile phone first.

8. The phone is NOT waterproof nor water-resistant. Please keep it dry at all times.

9. Avoid using the phone in excessive and extreme temperatures i.e. too high and too low temperatures.

10. Do not throw, drop or hit the phone as it may destroy the internal and external components of the phone.

11. Authorized Service: Approach only authorized service centers for repairs and servicing.

copyright Foresight Manufacture Pte Ltd

1. 简要说明

1.1 示意图



1.2 按键功能定义


按键名称	按键功能介绍（待机时）
拨号键（绿键）	按此键可拨打电话号码 来电时：按此键可接听电话 待机状态下按此进入通话记录列表
结束键（红键）	关机时：长按此键可开机 开机时：长按此键可关机 操作时：按此键可返回待机界面

导航上键	待机状态下：按此键进入功能表 操作时：按此键可向上移动遊标
导航下键	待机状态下：按此键进入电话簿。进入手机设置-话机设置-快捷键设置菜单可以将下功能键更换成其它快捷功能 操作时：按此键可向下移动遊标
⌐	进入拨号界面并输入 1，待机状态下，长按“1”键可进入语音信箱
0,2~9	进入拨号输入界面，并输入 0,2~9 待机状态下，如已经完成了快速拨号设置，长按“2”~“9”、“*”、“#”键可一键速播；如未进行快速拨号设置，长按“2”~“9”、“*”、“#”键，可以按照荧幕提示进行快速拨号设置。
*	拨号界面下，短按切换输入“*、＋、P、W”字元 信息编辑状況下：按此键可调用常用符号
#	短按输入“＃”字元 信息编辑状況下：按此键可切换输入法
助听键 0	通话过程中或免持状态下，长按此键可启动一键助听，使通话音量增至最大音量；再次长按可将音

	量恢复到助听前的音量，通话结束后通话音量会自动恢复默认值 待机状态下：长按此键可以切换静音模式和一般模式
调频广播	待机状态下，拨动此键可打开和关闭调频广播
音量调节键	按音量键“＋”可使音量加大；按音量键“-”可使音量减小声（分别在通话中，收音机收听中，音量调节过程中等操作界面使用） 待机时长按音量“-”进行一键报时
手电筒开关键	长按 3 秒可开启手电筒；长按 3 秒可关闭手电筒 进入 Facebook、Yahoo 界面时此键为确认键
紧急求救键	长按此键可拨打预设好的紧急号码，并发出求救信息。

1.3 紧急求救

当您处于比较危急的时刻，需得到他人的帮助时，您可以长按 SOS（紧急求助）键，系统会向您所设置的号码发送信息，这时手机会发出警报声然后再按顺序拨打电话；如所拨上一个紧急号码拨号失败（如占线或无法接通等），会自动继续

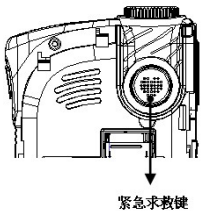

拨打下一个紧急号码。

报警音设置开关：

工具箱-SOS 报警音-设置开启或者关闭

紧急号码通过如下设置：

工具箱→紧急号码→可编多组号码

- 紧急信息通过如下设置：

工具箱→紧急信息编辑→可自行编内容

1.4 一键助听

您在通话过程中，如果觉得音量不够大声，长按助听键即可达到您满意的音量效果。

- 设置助听音量的方法：.

按导航上键进入功能表选择工具箱的一键助听并设为开启：



工具箱→一键助听


选择开启或关闭

电话结束后，手机会自动恢复初始音量

1.5 手电筒


在光线很暗或者晚上您需要照明的时候，您可以长按手电灯按键，手机将开启手电筒功能，

达到给您简单的照明作用。

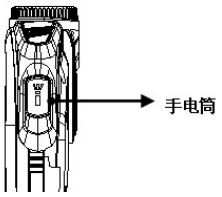

1.6 锁屏键


在待机状态下，上下推动进行荧幕关闭打开，达到省电模式。

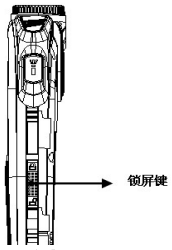

1.7 音量键

音量键位于手机左边橙色按键，你可以调整音量时使用.

1.8 FM 调频广播

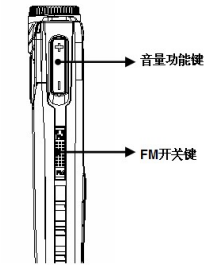

2．菜单功能

使用菜单上方向键进入手机菜单功能：

写信息

屏幕右上方显示当前已输入字符数量；并帮助你计数当前字符。输入屏幕分为两部分：输入收件人信息在上半部分，下半部分时消息文本输入。选项：

- 发送：发送至收件人
- 电话簿：可以从电话簿中选择号码，也可以输入号码
- 插入常用语：手机出厂预存的短语，允许您插入此短语。
- 加入联络人讯息：允许您将存在手机或SIM卡上的号码插入信息中。
- 加入表情符：允许您将存在手机上的表情符插入信息中。
- 保存为草稿：表示该信息未发送，保存在草稿箱。
- 退出：退出当前编辑界面，返回上一级功能表。

➢ 收件箱

下面的图示表示这条消息的状态：

：表示未读讯息。

：表示已读讯息。

：表示锁定讯息。

查看信息后可进行以下操作：

- 阅读：查看信息文本内容选删除，回复，向前，电话，发送号码添加到通讯录及阅读详细信息。
- 回复：写信息回复发送者。

- 删除：可以选择删除此封信息。
- 全部删除：可以选择全部删除信息。
- 呼叫：拨号给寄件人
- 锁定：锁定当前讯息。
- 标记：对寄件人标记群发信息回复。
- 排序：对信息进行分类排序。
- 添加发件人至：将发件人添加至手机或SIM卡。
- 同号删除：可以删除同一个寄件人信息。

➢ 发件箱

查看信息后可进行以下操作：

阅读：按数字键“5” 查看此条信息内容。

- 重发：重新发送该条信息。

删除：删除当前信息。

全部删除：可以选择全部删除信息。

- 锁定：锁定当前信息。

草稿

编辑完未发送的信息会存放在此。

➢ 已发信箱

发送过的信息会存放在此。

➢ 小区广播

广播信息是网路系统向同一社区用户定期发送的文本资讯，可以提供诸如当地区号、天气预报和交通资讯等。每类资讯都用一个资讯号来表示，通过设置资讯号，您可以接收需要的广播资讯。

- 转发
- 删除
- 设置：

设置选择接收和关闭社区资讯的资讯号。

※注意：语言支持与否取决于网路系统商。

语音信箱

■ 在“信息”功能表中，选择“语音信箱”，按“确定”进入该功能。

■ 编辑：输入或修改语音信箱号码。

■ 拨号语音信箱：利用该功能，您可以听取语音信箱内的留言资讯。

➢ 信息设置

设置讯息中心号码：可存储或修改发送信息所需的信息中心的号码，或从网路系统商处获得该号码

■ 讯息容量：查看 SIM 卡及手机记忆体使用比率

2.2 电话簿

电话号码可选择存储在 SIM 卡和话机中， SIM 卡的存储量取决于 SIM 卡。

➢ 搜索

该功能可以让您按姓名注音的顺序浏览电话簿。利用方向键向上实现该功能，您可以在电话簿中查找您所需的电话号码。

■ 呼叫：拨打此号码。

■ 编辑：编辑此号码。

■ 新建：新增联络人至手机、至 SIM 卡。

■ 发送：发送信息至此号码。

■ 删除：删除此联络人。

■ 批量删除：该功能可以完全删除本机或 SIM 卡上的所有內容（按 5 键逐个选择联系人）。

导入导出：该功能可以将 T（SD）卡的联络人

和 SIM 卡上或手机上互转。

其他：

本手机为您提供四个来电群组，您可以对每一个群组进行更改来电铃声，按#键还可以切换新建分组，管理分组成员等。

2.3 **设置**

➢ 通话设置

双卡设置：设置待机模式。

呼叫转移

根据您设置转移条件的不同（无条件转移、遇忙时转移、无应答转移、无法到达转移、取消全部转移），可将来电选择转接至语言信箱或其他电话号码。

■ 呼叫等待

呼叫等待功能开启后，当您正在通话时，有另外一个电话号码插拨进来，此时荧幕上会出现以下选项来处理插拨的电话(需把呼叫等待功能设置为启动状态)。

■ 呼叫限制

根据设置限制条件的不同（所有呼出、所有来电、漫游时来电、国际呼出、国际漫游时呼出取消全部限制、修改通话限制密码），将在相应条件下进行通话限制。

■ 隐藏本机号码

设置呼叫电话时不显示本机号码。若需获得此项功能，请与网路运营公司联系。

其他

IP 一键通

选择 IP 号码，按确认完成 IP 一键通设置。

设置了 IP 一键通后，拨打电话时自动在号码前加拨 IP 号码。

语音通话每分钟提示音

选择设置分钟通话提示时间。

❖ 自动重拨

选择后拨打电话若对方未接听，手机会自动拨打对方号码。

❖ 去电接听振动

选择后拨打电话在对方接通时，手机会振动提示本机用户。

自动通话录音

选择后每次通话时会自动将通话录音。

话机设置

时间与日期

❖ 设置时间：设置时间。

❖ 设置日期：设置日期。

时间显示格式：时间格式可设置为 12 或 24 小时制。

日期显示格式：选项有年月日、月日年、日月年，日期格式设置后，荧幕显示随设置而改变。

自动更新时间：可选择为打开、关闭自动更新时间及选择手动更新时间和使用说明。

整点报时：（选择开启或关闭。开启整点报时功能后，当时间到达整点或半点时（如 12：00 整），手机会以真人声报读当前时间点。

语言设置

显示语言可供 3 种选择，可选择输入语言 English、简体中文、马来语。

■ 快捷键设置

可设置下方向键快捷键，设置为网络通讯工具、闹钟、录音器、日程、备忘录、音频播放器、发送信息。

自动开关机

可以设置手机的自动开机和关机时间，使用定时开关机功能前，必须先将其状态开启。然后设置开机或关机选项，最后设置时间。

■ 电源管理：查看电池使用电量值。

■ 恢复出厂设置

可恢复手机原厂设置，设置密码是 1234

显示设置

■ 动画效果

可设置更改开关机动画。

■ 墙纸设置

可设置静态桌布，选择更多图片将记忆卡上存储的图片设为墙纸。

■ 荧幕背光时间

可设置荧幕显示时间达到自动省电模式

■ 按键背光时间

可设置按键背光关闭时间和夜间省电模式，夜间模式根据手机时间决定，18 点到 06 点开启有效。

安全设置

可以开启关闭和更改 PIN 码、PIN2 码。开启 PIN 码后，每次开机时要输入 PIN 码才能进入手机系统。

➢ 语音报号设置

通过设置此功能，在拨号状态下，手机亦会以真人声报读您所输入的数字和来电数字。

- 按键报号：可选择开启关闭按键报号。
- 来电报号：可选择开启关闭来电号码数字报号。

➢ 连接管理

设置互联网网络数据连接的开启、关闭。以防止意外遭受数据费用，建议在不需要时关闭连接。

2.4 通话中心

显示 SIM 卡通话记录

未接电话

利用该功能，可以查阅最近未接电话。

进入该功能后，通过上下方向键选择一个电话号码，按“选项”可做以下操作：

- 查看：查看此笔电话来电时间。
- 详情：查看此笔电话详情。
- 呼叫：拨打此号码。

发送信息：发送信息至此号码。

- 添加至通讯录：将所选号码保存至 SIM 卡或手机。

删除：从未接电话列表中删除该项。

- 全部删除：删除未接电话列表中所有记录。
- 标记：标记此笔电话。

➢ 已拨电话

查看已拨电话详细内容

➢ 已接电话

查看已接电话详细内容

➢ 删除通话记录

利用该功能，可进行未接电话、已拨电话、已

接电话和全部删除记录。

- 通话计时

利用该功能，可以查阅上次通话时间、已拨电话总计、已接电话总计及进行所有计时归零。

- GPRS 流量

利用该功能，可以查阅上次接收、上次发送、所有发送、所有接收流量总计、及进行所有上网数据归零。

2.5 多媒体

音频播放器

进入音乐播放器界面，按左绿色功能键选择音乐列表中，可选择播放音乐列表、添加、设为铃音、随机播放、重复播放、设置、开启复读、退出。音乐播放界面下：按上下方向键为播放\暂停切换键、按“*”键为切换上一首歌曲、按“#”键为切换下一首歌曲；音量调整为音量+、-键

视频播放器

进入视频播放器功能后，按选项键进入可进行下列操作：

- 播放/暂停：播放指定的影片。

打开：打开本地浏览或本地播放列表影片。

- 重复播放：设置重复播放模式，全部或单次播放。

随机播放：设置随机播放开启或关闭。

查看：查看历史播放记录。

设置：设置视频播放方式。

设为：可将影片设为开关机动画。

详情：查看当前影片详情。

退出播放器：退出当前播放器。

※注意：影片播放器界面下，按数字键 4 为切换“上一视频”、按数字键 6 为切换“下一视频”；按红色键为 “停止播放”；*键切换静音。

FM 收音机

本款手机支持 FM 收音机，按“选项”键进行如下操作：

- 退出：退出当前播放。
- 自动搜索并保存：自动搜索并保存频率。
- 电台列表：可以编辑频道、名称，显示在此清单上。
- 保存：保存当前频率到电台列表中。
- 手动搜索：直接输入 FM 电台频率。
- 启动扬声器：系统默认打开扬声器。
- 后端播放：开启 FM 背景播放功能。
- 录音：录下目前播放的频道。
- 定时录音：可预设频率和时间自动录音。
- 录音列表：查看录音列表。
- 存储位置：选择录音档存储位置手机或记忆卡。
- 帮助：查看调频广播帮助内容。

※注意：调频播放界面下，按上下方向键为上一频道、下一频道，按红色键为暂停，连续按两下绿色键为退出；调整音量大小为侧音量+和-键。

➢ 图片

进入自动搜索状态到预览，进入界面按“选项”键

- 打开：浏览指定的图片。

设为桌布：可将指定图片设为桌布。

开/关机动画：可将图片设为开关机动画。

设为联络人头像：可将已经预设了来电头像的联络人头像更改为指定图片。

- 删除：删除指定的图片。
- 标记：标记指定的图片。
- 幻灯片播放：使用幻灯片方式播放查看图片，按下方向键浏览下一张图片。

2.6 工具箱

- SOS 报警音

  可选择开启、关闭报警铃音。

- 紧急号码

  详情见 1.3 说明。

- 紧急信息编辑

  详情见 1.3 说明。

- 快速拨号

  通过对 2-9 及＊和＃对其进行设置，可以在待机界面通过长按数字键的方式快速拨号。

- 一键助听

  详情见 1.4 说明。

- 闹钟

  本款行动电话提供三个闹铃供用户使用，用户可根据自身需要进行设置,按左键设置“开启”，“关闭”。

如果选择开启，闹钟右侧有打勾图标。进入闹钟编辑。

- 按 5 键设置闹钟信息名称。
- 向下滚动设置闹铃时间。

向下滚动设置铃声：按 5 键可以选择铃声。

■ 重复方式：单次、每天、工作日（自订选择一周中的一日或几日）。

➢ 吃药提醒

设置吃药提醒，药品名，提醒时间、铃声、重复方式，访问编辑按数字键‘5’。

➢ 日历

该功能允许用户查看和编辑指定日期的日程表。打开日历，按选项键提供以下功能：

■ 新建日程：输入主题、日期、时间、铃声、类型。

■ 查看日程：查看今天的日程。

■ 所有日程：查看所有的日程。

■ 清空当日：清空当日所有日程。

■ 清空所有：清空所有日程。

■ 农历详情：查看日历当天农历详情。

■ 转到日期：将日程表的当前日期设置为指定日期。

■ 按周显示：设置按周显示查看日历方式。

■ 按日显示：设置按日显示查看日历方式。

➢ 档案管理

按*键选话机，按#键选内存卡，按选项键：打开、新档案夹、删除、详情、重命名、复制、查找、排序（名称、时间、大小、类型）、标记、容量查询。

➢ 互联网

互联网是无线通信与 Internet 相结合的应用平台，可以使您通过手机 3G SIM 获得 Internet 资讯数据资源。

打开浏览器起始页，用户可以通过界面进入输入网址、搜索、我的书签、历史记录、已存网页。

- 选择：进入已存网页列表；
- 主页：可进入服务提供商以预先设置或默认的主页，（Facebook、Youtube、LINE 等）；
- 设置：可设置网络类型参数；
- 退出：退出当前 WAP 页面

➢ 计算器

为用戶提供计算机功能，运用上下键可切换选择加、减、乘、除、等号，左功能键为确定。

➢ 录音器

本款手机支三种录音格式：AMR、WAV、Mp3，您可从选项的设置功能中选定一种格式进行录音；还可以对通话进行录音。当选择“停止”的时候自动保存；如果选择手机中原有的录音时，按选项键可进行录音、试听、重录、删除、用作和发送等操作。

➢ 秒表

为用戶提供秒表功能。

➢ 备忘录

提供了多个任务可供用户使用。用户可根据自身需要预览、新建、编辑、删除和标记（标记全部）。

2.7 情境模式

本机为您提供 5 种情境模式：一般模式、静音模式、会议模式、室內模式、户外模式。

进入情境模式--一般模式，按确定键可进行下列操作：

- 启动：启动设置模式。
- 新增：自定义选项设置。
- 删除：删除新增模式
- 设置

■ 重命名：重命名新增模式名称

■ 铃声设置：来电铃声和讯息铃声。

■ 音量调节：来电铃声、讯息铃声、闹钟日程铃声、通话音量、开关机声音。

■ 铃声方式：铃声、振动、静音、先振动后铃声、铃响并振动。

其他提示音：按键音、低电压告警音、开关机声音。

静音模式、会议模式、室内模式、户外模式操作方法同上

3. 输入法

在文本输入的界面下，通过按「#」键选择不同输入法：

■ 按「#」键选择大小写英文字母输入法

■ 按「*」键选择符号表（. ， 。 ： 、？）

□ 大写英文字母

，您可以根据要输入的英文的字母顺序按相应的数字键输入字母

□

键名	对应字元或功能
数字 1 键	,。:、？
数字 2 键	Abc
数字 3 键	Def

数字 4 键	Ghi
数字 5 键	Jkl
数字 6 键	Mno
数字 7 键	pqrs
数字 8 键	Tuv
数字 9 键	wxyz
数字 0 键	␣
* 键	调出符号
# 键	切换输入法
左绿色功能键	选择
右红色功能键	取消

4. 附录 A

常见故障诊断

故障现象	可能的原因
不能开机	电池是否有电。 电池放置是否正确。
SIM 卡出錯	SIM 卡脏汙，清洁 SIM 卡。 重新安装 SIM 卡。 SIM 卡已损坏，更换 SIM 卡。
信号不良	检查显示幕上的信号強度指示标记，在此符号的格数为满格表示信号強，2 格以下表示信叫弱。

电话不能呼出	㈠您可能设置了隐藏本机号码，但您的网路系统商并不提供该服务； ㈡可能周围环境有強烈的干扰信号； ㈢可能您启动了拨号禁止功能； ㈣可能您启动了线路 2，但您的网路系统商并不提供该服务；
电池不充电	㈠可能电池已经过度放电，需要连接充电器一段时间后才能充电； ㈡电池性能已经恶化；
无法连上网路	㈠信号太弱，或是周围有无线干扰 ㈡SIM 卡安装是否正确，是否接触不良或 SIM 卡已损坏？如 SIM 卡损坏，请您咨询网路服务系统商
不能进入服务功能表	可能是您的 SIM 卡不支援服务功能

5. 附录 B

缩略语及其解释

SMS	Short Message Service（信息业务）
EMS	Enhanced Message Service（增強型信息）
SIM	Subscriber Identity Module（用

	户识别卡）
GSM	Global System for Mobile Communication （全球数字蜂窝移动通信系统）
PIN	Personal Identity Number（个人识别码）
PUK	PIN Unblocking Key（PIN 码解锁）
IMEI	International Mobile Equipment Identity （国际移动设备识别码）
CB	Cell Broadcast （广播信息）
GPRS	通信分组无限业务
MMS	多媒体信息

6.健康与安全讯息

请仔细阅读以下简要说明，并认真遵守这些规则，以免产生危险或触犯法律。

1. 在化工厂、加油站以及其他爆炸物附近时，请您关机。

2. 在驾车时，请使用免持通话装置（需另购）以保安全；除非在紧急情况下，否则请您先停车在路旁进行通话。

3. 在医院里或在禁止使用手机的地方应关机。手机会影响电子设备和医疗仪器的正常工作，如心脏起搏器、助听器以及其他一些医疗电子设备等。

4.乘坐飞机时，请在飞机起飞前关闭你的手机，请按航空公司和机场规定使用手机。

5.请确保你的手机和配件都在儿童接触不到的地方。

6. 配件和电池：请使用提供的专用配件和电池，避免损坏手机。如果手机有过高温度、变色、膨胀等其他异常现象，请立即停止使用电池，妥善处置它。

7. 用户不能直接拆卸电池，若想移除电池，请先关闭手机。

8. 手机不防水，请保持干燥。

9. 避免在过高或过低极端温度环境下使用电话。

10. 不能扔或敲打手机，因为这样会毁坏电话内部和外部组件。

11. 授权服务：只有经过授权的服务中心修理和维修方法。

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. Th

e SAR limit stated in the international guidelines is 2.0 watts/ki logram (W/kg)*. Tests for SAR are conducted using standard o perating positions with the device transmitting at its highest c ertified well below the maximum value. This is because the de vice is designed to operate at multiple power levels so as to us e only the power required to reach the network. In general, th e closer you are to a base station, the lower the power output of the device.power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is design ed to operate at multiple power levels so as to use only the po wer required to reach the network. In general, the closer you are to a base station, the lower the power output of the devic e.

SAR values may vary depending on national reporting and testi ng requirements and the network band. Use of device accesso ries and enhancements may result in different SAR values.

* The SAR limit for mobile devices used by the public is 2.0 W/ kg averaged over 10 grams of body tissue. The guidelines incor porate a substantial margin of safety to give additional protect ion for the public and to account for any variations in measure ments. SAR values may vary depending on national reporting r equirements and the network band.

The highest SAR value for this model phone tested for use is 0.3453 W/kg.