

BRAUN Silk-épil 9 SkinSpa Wet and Dry Epilator Female Hair Removal User Manual

Silk-épil 9 SkinSpa Wet and Dry Epilator Female Hair Removal User Manual




Contents


1 Silk-épil 9 SkinSpa Wet and Dry Epilator Female Hair Removal
2 Charging
3 How to operate the appliance
4 Epilation
5 Body treatment
6 How to use the shaver head
7 Guarantee
8 Documents / Resources
8.1 References
9 Related Posts


Silk-épil 9 SkinSpa Wet and Dry Epilator Female Hair Removal


 **Type 5378**
SES 9/990
SES 9/980
SES 9/970

 **Braun Infolines**
0800 783 7010

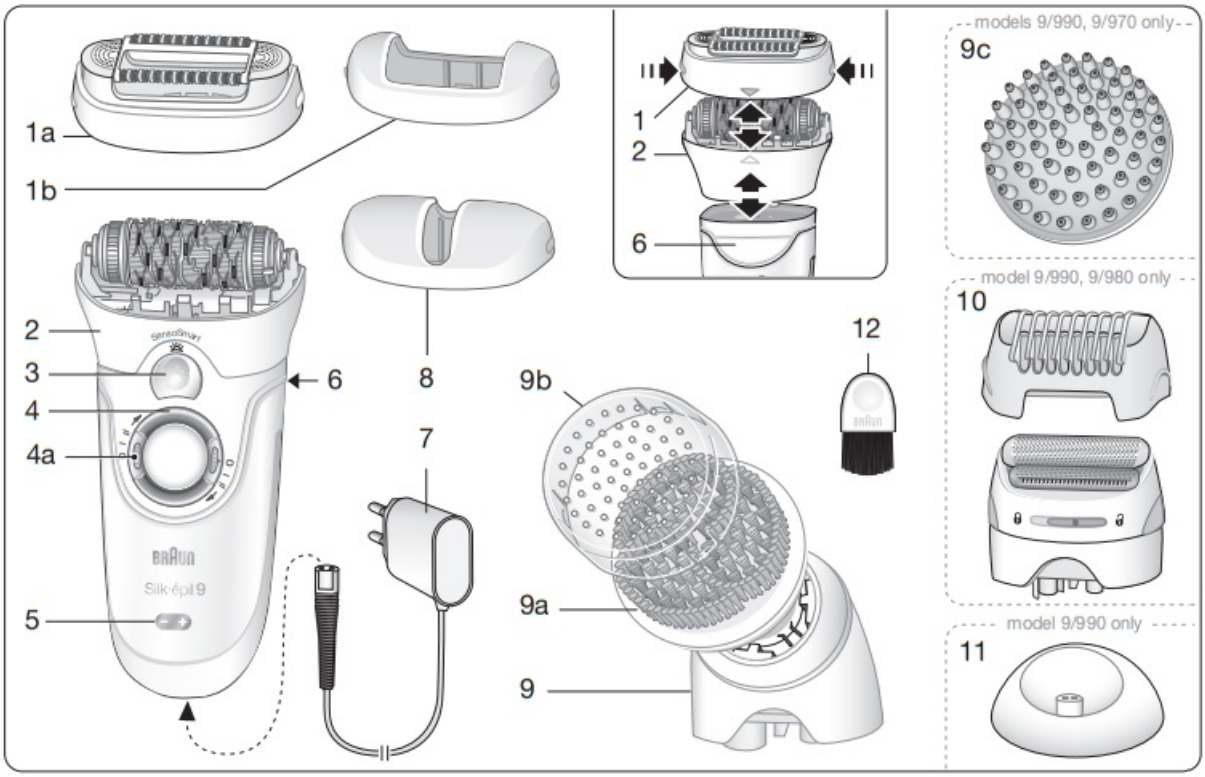
1a
1b
2
3
4
4a
5
6
7
8
9
9a
9b
12
1
2
6
models 9/990, 9/970 only
9c
model 9/990, 9/980 only
10
model 9/990 only
11
BRAUN
Silk·épil 9

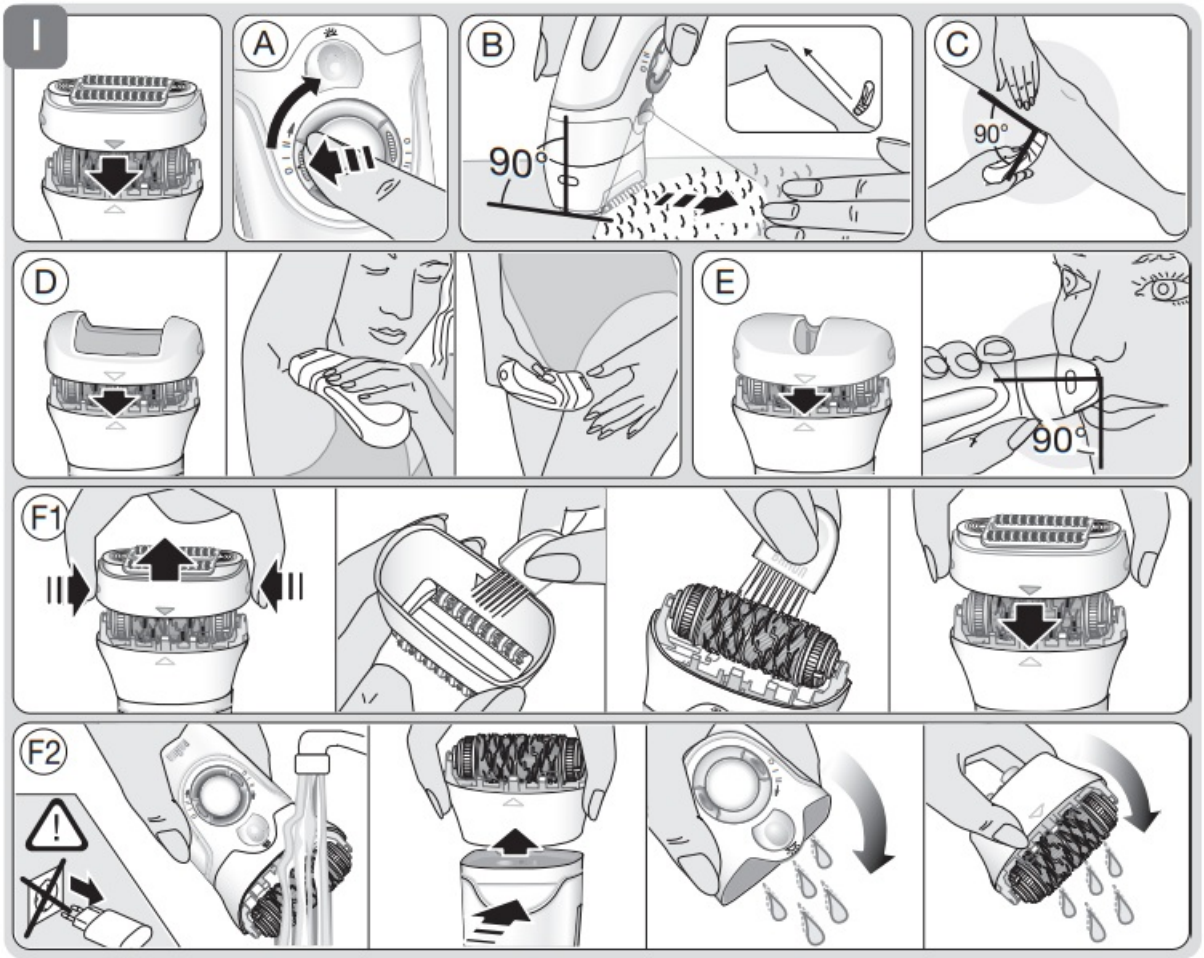
I
A
B
90°
C
90°
D
E
90°
F1
F2

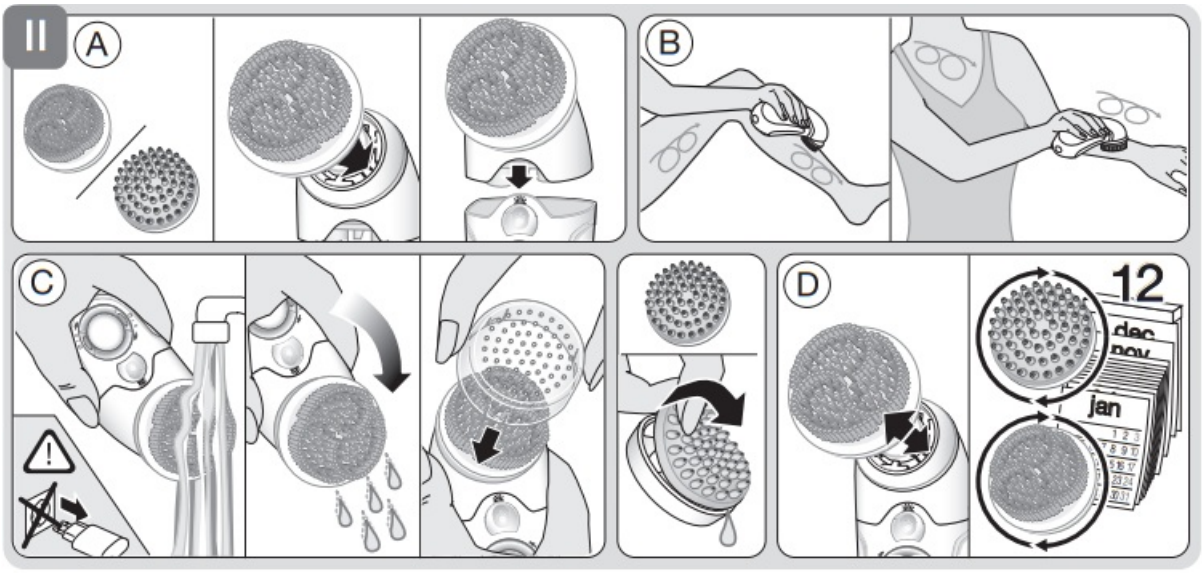

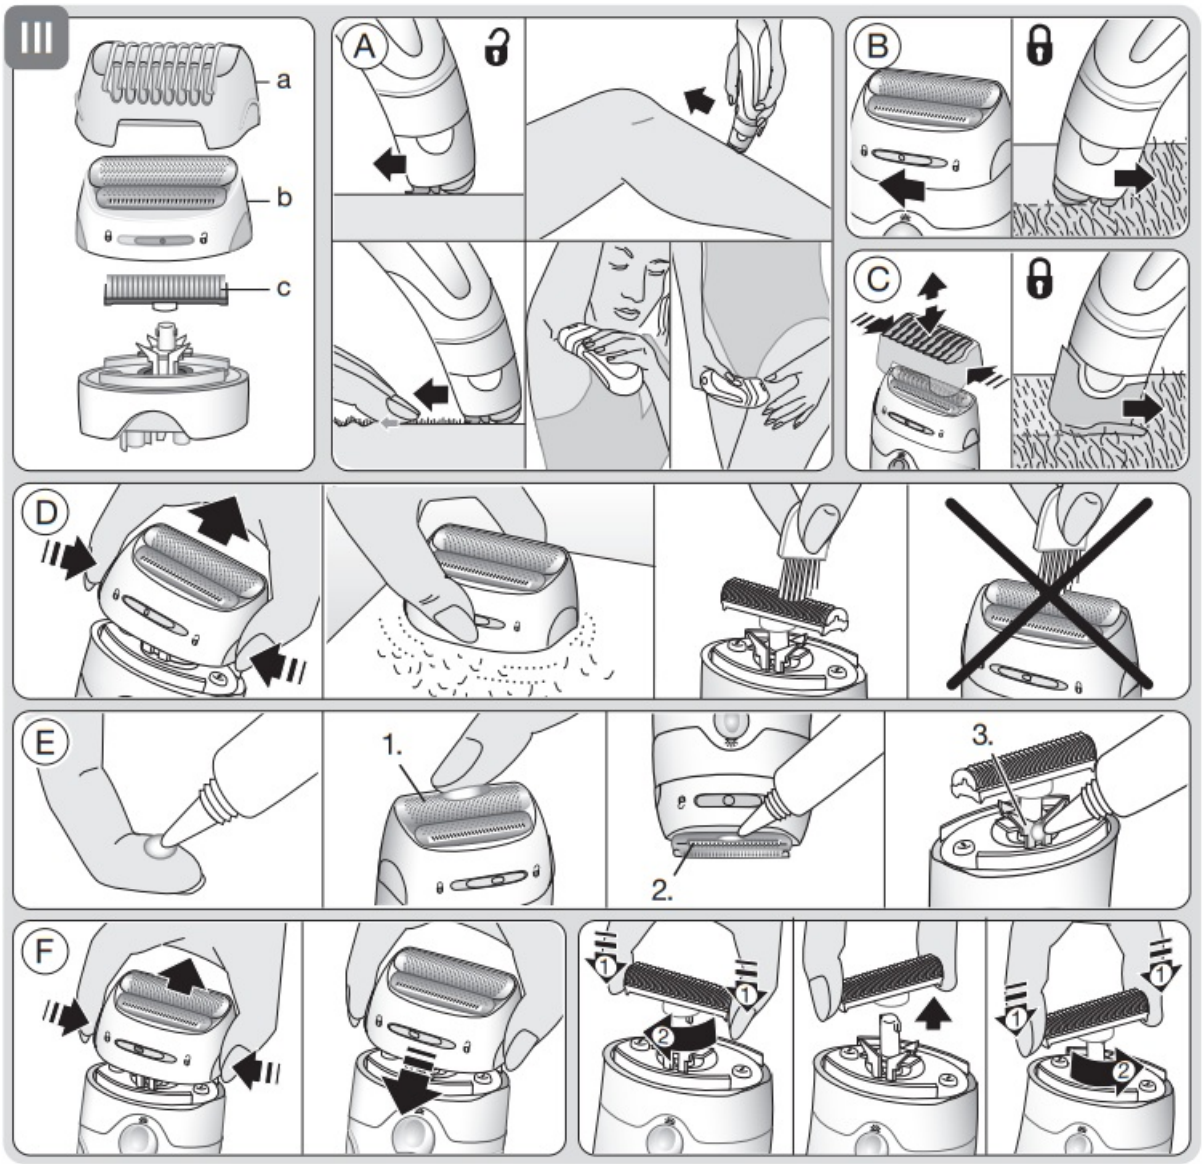

Our products are engineered to meet the highest standards of quality, functionality, and design. We hope you thoroughly enjoy using your Braun Silk·épil 9.
Please read the use instructions carefully before using the appliance and keep them for future reference.
The appliance is suitable for dry and wet usage except for the shaver head attachment which should only be used on dry skin.

Important

- For hygienic reasons, do not share this appliance with other persons.
- This appliance is provided with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise, there is a risk of electric shock.
- Only use the special cord set provided with the appliance.
- If the appliance is marked  492, you can use it with any Braun power supply coded 492-XXXX.
-  This appliance is suitable for use in a bathtub or shower. For safety reasons, it can only be operated cordlessly.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision and instructions on its safe use and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are older than 8 years and supervised.
- When switched on, the appliance must never come in contact with the hair on your head, eyelashes, textile ribbons, etc. to prevent any danger of injury as well as to prevent blockage or damage to the appliance.

Description

1a. High-frequency massage cap 1b. Skin contact cap 2. Extra wide epilation head 3. SensoSmart™ light 4. Switch with lock keys (4a) 5. Charging light 6. Release button 7. Special cord set (design can differ)	8. Facial cap 9. Brush/pad adapter 9a. Exfoliation brush (2x) 9b. Protective cover (2x) 9c. Deep massage pad* 10. Shaver head* 11. Charging stand* 12. Cleaning brush * not with all models

Charging

Using the special cord set (7) connect the appliance to an electrical outlet and charge it for 2 hours.

Charging light (5)
Flashing green: charging
Green: fully charged
Yellow: 15 min charge left
Flashing yellow: 5 min charge left

- Once fully charged, use the appliance cordless. Operation time is 50 minutes when it is used within 24 hours after charging. Recharge it when the yellow light comes on or when the motor has stopped completely. For best performance, always use a fully charged appliance.
- The best temperature range for charging, using, and storing the appliance is between 15 °C and 35 °C. In case the temperature is far beyond this range, the charging time might be longer whereas the cordless operation time might be reduced.
- At the end of its lifetime, the rechargeable battery can be replaced at an authorized Braun Service Centre.

How to operate the appliance

Pressing the lock key (4a) turn the switch (4) clockwise. You can select speed «I» or «II».

The SensoSmart™ light (3) shines as long as the appliance is switched on, thus providing good visibility of fine hairs. When you apply too much pressure, the SensoSmart™ light signals red.
To remove the epilation head (2), press the release button (6). To change caps, press their lateral ribs and pull off.

Epilation

Epilation tips

If you have not used an epilator before, or if you have not epilated for a longer period of time, it may take a short time for your skin to adapt to epilation. The discomfort experienced in the beginning will decrease considerably with repeated use as the skin adapts to the process.
When epilating for the first time, it is advisable to epilate in the evening, so that any possible reddening can disappear overnight. To relax the skin we recommend applying a moisturizing cream after epilation.
Epilation is easier and more comfortable when the hair is between 0.5–5 mm long. If hairs are longer, we recommend that you shave first and let the hair grow back to at least 0.5 mm in length.
Dry usage: Your skin must be dry and free from grease or cream.
Wet usage: Make sure your skin is very moist in order to achieve optimum gliding conditions for the appliance.

How to epilate

Make sure that the epilation head (2) is clean and provided with a cap (1a or 1b).
A. Select speed «I» for gentle epilation, and speed «II» for efficient epilation.
B. Always stretch your skin when epilating. Make sure that the epilation area is in close contact with your skin.
Guide the appliance in a slow, continuous movement without pressure against the hair growth, in the direction of the switch. As the hair can grow in different directions, it may also be helpful to guide the appliance in different directions to achieve optimal results. The massage cap (1a) ensures the best skin comfort during epilation. If you are used to the sensation of epilation, you may replace the massage cap with the skin contact cap (1b) which provides closer skin contact and an improved adaptation to all body areas. Whenever the SensoSmart light shines red, this is to remind you not to press too hard.

C. Leg epilation

Epilate your legs from the lower leg in an upward direction. When epilating behind the knee, keep the leg stretched out straight.

D. Underarm and bikini line epilation

In sensitive areas, we recommend using the skin contact cap (1b). Especially during the first applications, these areas are particularly sensitive to pain. Therefore, we recommend that you select speed «I» for the first few times. With repeated usage, the pain sensation will diminish.
Before epilating, thoroughly clean the respective area to remove residues (like deodorant).
Then carefully dab dry with a towel. When epilating the underarm, keep your arm raised up so that the skin is stretched and guide the appliance in different directions. As skin may be more sensitive directly after epilation, avoid using irritating substances such as deodorants with alcohol.

E. Facial epilation

For removing any unwanted hair from the face or other sensitive areas, use the facial cap (8) as an optional attachment to be placed on the epilation head (2). For the first few usages, we recommend that you select speed «I» in order to get used to epilation in sensitive areas.
Prior to epilation, we recommend cleaning the skin thoroughly with a disinfecting toner containing alcohol. When epilating the face, stretch the skin with one hand and slowly guide the epilator with your other hand in the direction of the switch.

F. Cleaning the epilation head

1. **Cleaning with the cleaning brush (11):**

   Remove the cap and brush it out. Thoroughly clean the tweezers from the rear side of the epilator head with the brush dipped into alcohol. While doing so, turn the tweezer element manually. This cleaning method ensures the best hygienic conditions for the epilation head.

2. **Cleaning under running water:**

   After each wet usage, clean the appliance under running water. Remove the cap and hold the appliance with the epilation head under hot running water. Then press the release button (6) to remove the epilation head. Shake the appliance and the epilation head to remove excess water and leave both parts to thoroughly dry out

before re-assembling.

General information on epilation
All methods of hair removal from the root can lead to irritation (e.g. itching, discomfort, and reddening of the skin) depending on the condition of the skin and hair. This is a normal reaction and should quickly disappear, but may be stronger when you are removing hair at the root for the first few times or if you have sensitive skin. If, after 36 hours, the skin still shows irritation, we recommend that you contact your physician. In general, the skin reaction and the sensation of pain tend to diminish considerably with the repeated use of Silk·épil.
In some cases, inflammation of the skin could occur when bacteria penetrate the skin (e.g. when sliding the appliance over the skin). Thorough cleaning of the epilation head before each use will minimize the risk of infection.
If you have any doubts about using this appliance, please consult your physician. In the following cases, this appliance should only be used after prior consultation with a physician: eczema, wounds, inflamed skin reactions such as folliculitis (purulent hair follicles) and varicose veins around moles, reduced immunity of the skin, e.g. diabetes mellitus, during pregnancy, Raynaud's disease, hemophilia, candida or immune deficiency.

Body treatment

The exfoliation brush (9a) helps avoid ingrown hairs by removing dead skin cells. The deep massage pad (9c) provides a noticeable vibration and helps improve the skin's appearance.
You may use the brush /pad alternatively on a weekly basis on wet skin during your shower routine with your preferred body scrub or shower gel. The deep massage pad may even be used more frequently with body lotion or massage oil.
When using the appliance in a bathtub, do not immerse it fully in water since this will not provide optimum results.

How to use
A. Click the adapter (9) provided with brush or pad (9a/ 9c) onto the appliance.
B. Slowly guide the appliance in circular movements over your skin to gently refine it. Avoid holding it on the same skin area for a prolonged time. Do not use it on your face. For best results, use the exfoliation brush at least 1–2 days before epilating.
C. Cleaning
After use, rinse the brush/pad (9a/9c) under running water. If needed, you may use some liquid soap to thoroughly clean them. You may remove the silicone cap from the deep massage pad (9c) in order to make sure that there is no water left inside the cap. Before storing the exfoliation brush, you may attach the protective cap (9b).
D. Replacement
With weekly use, we recommend that you replace the brush/pad after 12 months. Refills (ref. no. 79 Spa) are available from your retailer or Braun Service Centres or via **www.service.braun.com**.

How to use the shaver head

The shaver head (10) is designed for a fast and close shave of legs, underarms, and bikini line, contour trimming, and cutting hair to 5 mm in length. With the shaver head attached, only use the appliance on dry skin and with speed setting «II».
A. Shaving: select «  ».
B. Contour trimming: select «  ».
C. Trimming hair to 5 mm length: select «  » and put on the trimmer cap (a).
D. Cleaning: Do not clean the shaver foil (b) with the brush as this may damage the foil.
E. The shaving parts need to be lubricated regularly every 3 months.
F. Replace the foil frame (b) and cutter block (c) when you notice a reduced shaving performance. Replacement parts can be obtained from your retailer or Braun Customer Service Centres or via **www.service.braun.com**. Do not shave with a damaged foil.

Disposal

This product contains batteries and recyclable electronic waste. To protect the environment, do not dispose of its household waste, but take it to appropriate local collection points.
Subject to change without notice.

Guarantee

We grant a 2-year guarantee on the product commencing on the date of purchase. Within the guarantee period, we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion.
This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.
This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.
To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Braun Customer Service Centre (address information available online at www.service.braun.com).

For UK only:
This guarantee in no way affects your rights under statutory law.

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany
www.braun.com
www.service.braun.com

Documents / Resources

	BRAUN Silk-épil 9 SkinSpa Wet and Dry Epilator Female Hair Removal [pdf] User Manual Silk- pil 9 SkinSpa Wet and Dry Epilator Female Hair Removal, Silk- pil 9, SkinSpa Wet and Dry Epilator Female Hair Removal, Wet and Dry Epilator Female Hair Removal, Epilator Female Ha ir Removal, Female Hair Removal, Hair Removal, Removal

References

- Braun Electric Shavers and Razors | Braun
- P&G Türkiye
- Braun Service
- Начало - БГ-СЕРВИЗ ООД
- Braun Electric Shavers and Razors | Braun
- Produits Braun: Soins homme et femme| Braun FR
- Szőrtelenítő, szépségápoló és hajápoló termékek férfiaknak és nőknek - Braun
- Erkekler ve Kadınlar için tüy dökme, tüy alma ve saç bakımı ürünleri | Braun TR
- P&G Türkiye

- Braun Service

Manuals+,