Camera Instructions for the Kodak Playsport Zx5 Video Camera

Kit Includes: Camera, Power Plug, USB Cord, Case, Manual, 16 GB SD Card, Tripod, Remote and HDMI Cable.

1. Turn on the camera



2. Check the video settings




- Scroll down to **Video Resolution**
- Click OK (the center button inside the arrows)
- Select **WVGA (iPad compatible)**

3. Record video



- The center button starts and stops recording
- During recording, the screen will look this:

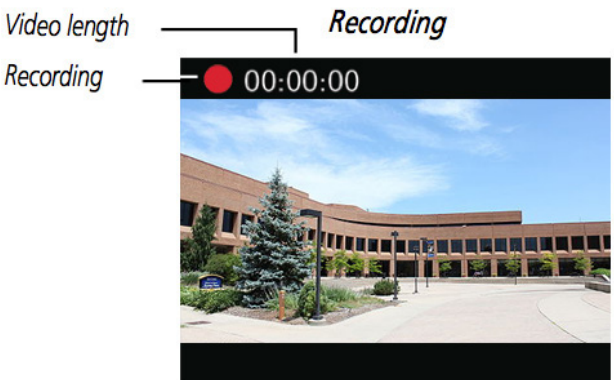

4. Review the recorded video



1. Review.
2. Previous/next video/picture.
3. OK Play/Pause. (Press and hold to Stop.)

Adjust video volume (or magnify a picture).

Delete video/pictures.

5. Using the optional remote





Contact Liz Laurel for edTPA tech support at elaurel_gst@kent.edu

For the extended user guide, go to: http://resources.kodak.com/support/pdf/en/manuals/urg01215/PLAYSPORT_Zx5_xUG_GLB_en.pdf