

JIMMY H8 Flex Vacuum Cleaner User Manual

Contents

1 JIMMY H8 Flex Vacuum Cleaner
2 Product Information
3 Parts Name
4 Packing List
5 Product Assembly
6 Use of Vacuum
7 Cleaning and Replacing Parts
8 Storage of Vacuum Cleaner
9 Safety Notes
10 Trouble Shooting
11 Technical Parameter
12 Documents / Resources
12.1 References

JIMMY

JIMMY H8 Flex Vacuum Cleaner



Product Information

Specifications

- **Model:** H8 Flex
- **Type:** Vacuum Cleaner

Parts

1. Floor head release button
2. Metal tube release button
3. Mode button
4. Battery pack release button
5. Charger
6. Crevice tool
7. Accessory holder left
8. Electric mattress head
9. Soft brush
10. Flexible metal tube
11. Dust cup release latch
12. On/off button
13. LED screen
14. Charging holder
15. Upholstery tool

16. Accessory holder right
17. Connector
18. Stretch hose

Packing List

Name	Amount
Handheld Vacuum Cleaner	1
Electric floor head	1
Electric mattress head	1
Upholstery tool	1
Crevice tool	1
Soft brush	1
Charging holder	1
Connector	1
Stretch hose	1
Flexible metal tube	1
Charger	1
Screw	4
Expansion pipe	2
Instruction manual	1
Accessory holder	2

Product Assembly

Assemble Electric Floor Head with Metal Tube
To assemble the electric floor head with the metal tube:

1. Hold the floor head with your left hand.
2. Use your right hand to insert the metal tube vertically into the floor head.
3. Align the metal tube with the conductive needle and press until a click sound is heard.
4. **Note:** Keep the handle and floor head in the same direction and ensure the conductive needle aligns with the socket.

Remove Electric Floor Head
When packing, storing, or cleaning, if the electric floor head needs to be removed:

1. Press the brush release button as shown in the picture.
2. Pull the electric floor head in the direction indicated in the picture.

Assemble Battery Pack and Handheld Vacuum Cleaner
To assemble the battery pack and handheld vacuum cleaner:

1. Hold the handheld vacuum cleaner in one hand.
2. Hold the battery pack in the other hand.
3. Aim at the guiding groove on the body and slide in the battery pack according to the arrow direction shown in the picture.
4. Pull the battery pack after installation to ensure it does not get loose.
5. **Note:** When the vacuum cleaner is not in use for a long time, please remove the battery and store it in a cool and dry place, avoiding direct sunlight or a humid environment.

Assemble Metal Tube and Handheld Vacuum
First, assemble the floor head and metal tube according to the method of assembling the electric floor head and metal tube.

To assemble the floor head with metal tube assembly and handheld vacuum cleaner:

1. Align the conductive needle of the metal tube with the coupler of the suction nozzle.
2. Push up until a click sound is heard.

Charging Holder Assembly
For charging holder assembly:

1. Attach the accessory holder right and accessory holder left to the charging holder using the screws provided.
2. Use the expansion pipes as needed for stability.


Assembly of Accessories
To assemble the accessories:

1. Connect the electric mattress head, crevice tool, upholstery tool, and soft brush to the handheld vacuum cleaner as shown in the picture.

FAQ

- **Q: How do I remove the battery pack from the handheld vacuum cleaner?**
  A: To remove the battery pack, simply pull it out after pressing the release button.
- **Q: Can I use this vacuum cleaner on wet surfaces?**
  A: No, this vacuum cleaner is designed for dry use only. Do not use it on wet surfaces to avoid damage.
- **Q: How often should I clean the dust cup?**
  A: It is recommended to clean the dust cup after each use to maintain optimal performance.
- **Q: How long does it take to fully charge the battery?**
  A: The charging time may vary, but it generally takes around 4-5 hours to fully charge the battery.

Parts Name

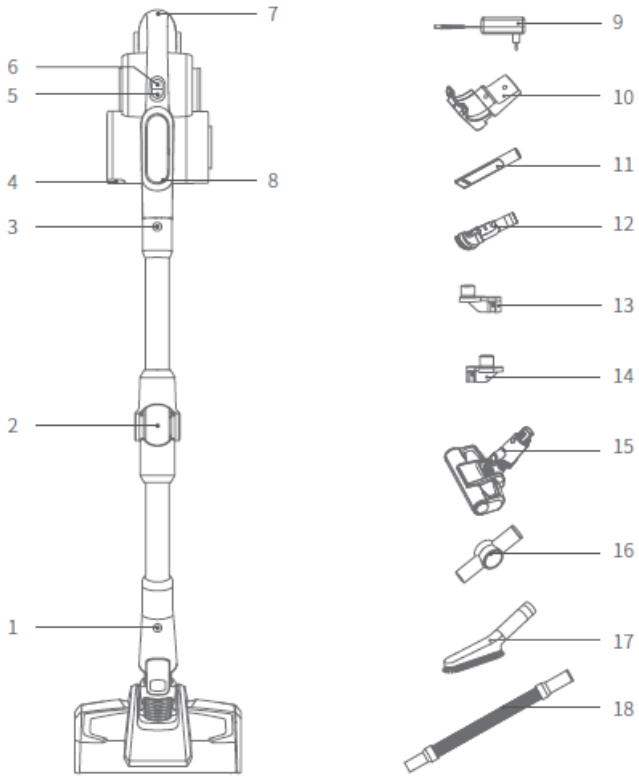

1. Floor head release button
2. Flexible metal tube
3. Metal tube release button
4. Dust cup release latch
5. Mode button
6. On/off button
7. Battery pack release button
8. LED screen
9. Charger
10. Charging holder
11. Crevice tool
12. Upholstery tool
13. Accessory holder left
14. Accessory holder right
15. Electric mattress head
16. Connector
17. Soft brush
18. Stretch hose


Packing List

Name	Handheld Vacuum Cleaner	Electric floor head	Electric mattress head	Upholstery tool	Crevice tool
Amount	1	1	1	1	1
Name	Soft brush	Charging holder	Connector	Stretch hose	Flexible metal tube
Amount	1	1	1	1	1
Name	Charger	Screw	Expansion pipe	Instruction manual	Accessory holder
Amount	1	4	2	1	2

Product Assembly

Assemble electric floor head with metal tube

- Hold the floor head with left hand, use right hand to insert the metal tube vertically into floor head, align with the conductive needle, press the tube until a “click” sound is heard.
- **Attention:Keep** the handle and floor head in the same direction, conductive needle shall align with the socket.
- When packing, storing or cleaning, if the electric floor head needs to be removed, press the brush release button as shown in the picture and pull the electric floor head in the direction shown in the picture.

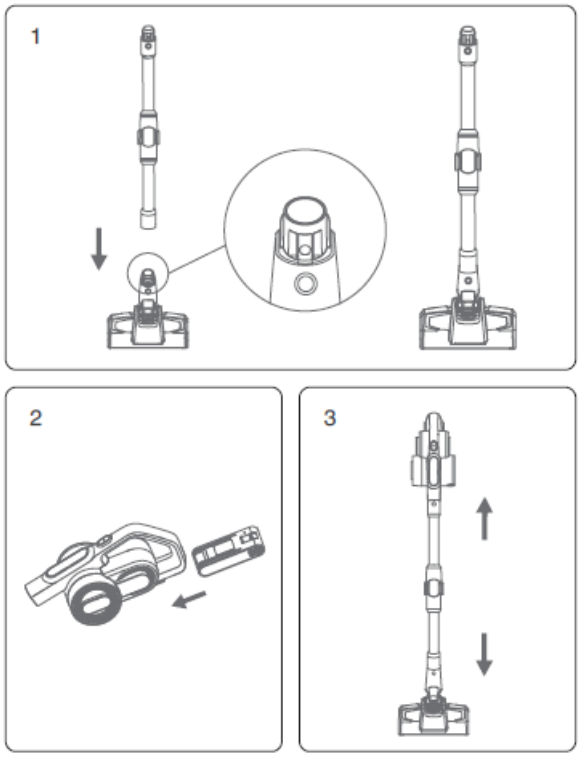

Assemble the battery pack and handheld vacuum cleaner


- Assembly of battery pack: hold the hand-held vacuum cleaner in one hand, hold the battery pack in the other hand, aim at the guiding groove on the body, slide in the battery pack according to the arrow direction shown in the picture. Pull the battery pack after installation to make sure it does not get loose.
- Attention: when the vacuum cleaner is long idled, please remove the battery, pack the product and store it in a


cool and dry place, avoid direct sunlight or humid environment.

Assemble metal tube and handheld vacuum

- First, assemble floor head and metal tube according to the method of assembling electric floor head and metal tube.
- Assemble the floor head with metal tube assembly and handheld vacuum cleaner: as shown in the picture, align the conductive needle of the metal tube with the coupler of the suction nozzle, push up until a “click” sound is heard.

Charging holder assembly
Assebmle accessory holders to the holer, then fasten accessory holders with screw. Put the vacuum cleaner in the holder, and lean the vacuum cleaner against the wall, place the holder in the position that vacuum cleaner floor head does not touch ground. Take off the handheld vacuum cleaner, place expansion pipe on the wall and place the holder to the expansion pipe position, then lock in the screw. After assembly completed, put the vacuum to charger holder to charge or store. (Attention: Do not fix the holder to bathroom or other humid wall.)

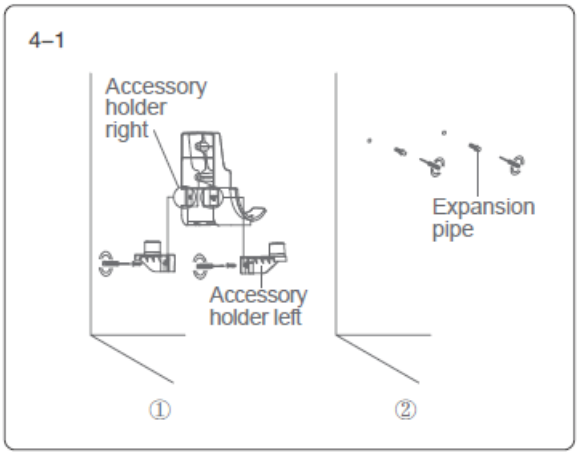

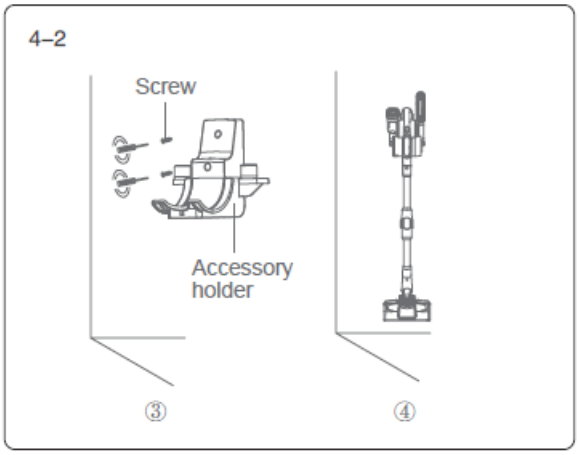


Assembly of accessories


- For the convenience of use, this product is specially equipped with some accessories for the hand-held part of the vacuum cleaner. When you use the handheld vacuum cleaner alone, you can directly connect the accessories according to your needs or connect the accessories through the stretch hose.

Name / model	H8 Flex
Electric mattress brush	
Upholstery tool	
Crevice tool	
Soft brush	
Stretch hose	
Connector	

- Connect electric mattress head,crevice tool, upholstery tool and dusting brush to handheld vacuum as the picture.

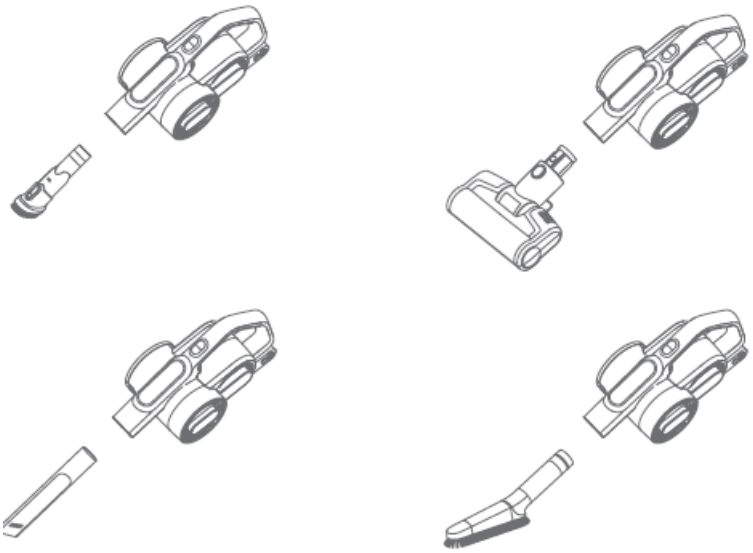


Accessories Connection List

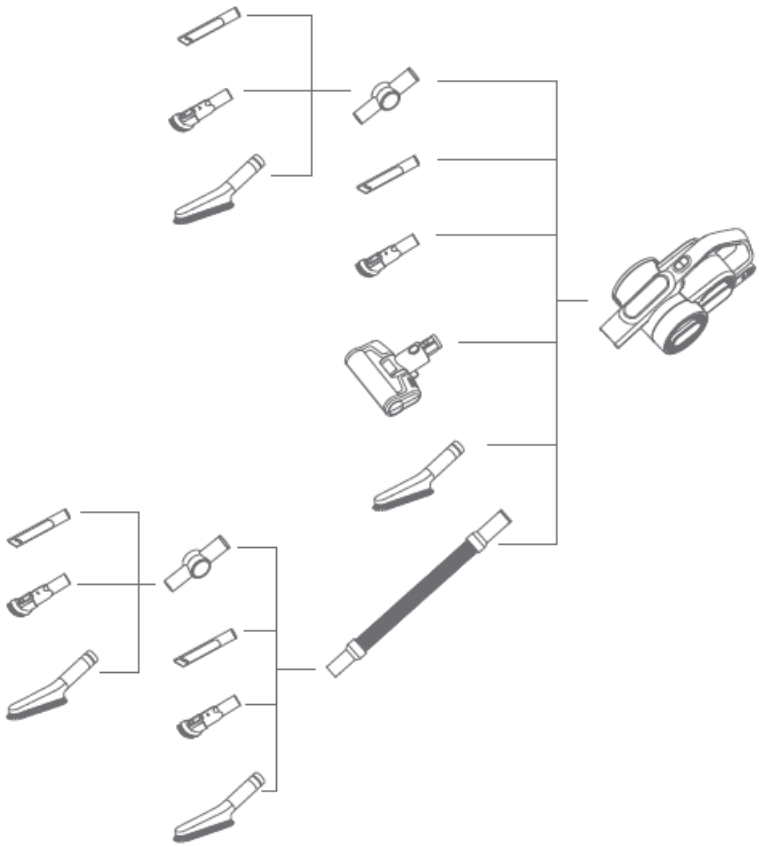


Use of Vacuum

- **Charging**

  Attention: When use the product for first time, battery power is not full. Need to charge the vacuum before using.

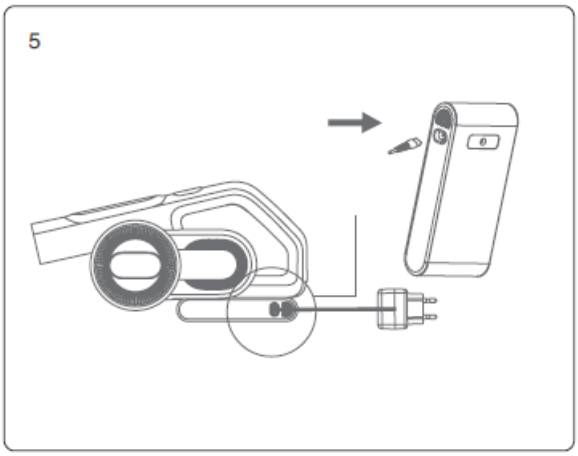


- **Charging of vacuum cleaner**
  - When the vacuum cleaner power is insufficient, charge the vacuum cleaner in time ; When the voltage is too low, to protect the battery, vacuum cleaner will be automatic power-off, at this time the vacuum cleaner need to be charged. When charging, plug the charger connector into the A/C power socket, hang the handheld vacuum cleaner on the holder to start charging. When the handheld vacuum cleaner LED display shows an increase in power, it indicates that the vacuum cleaner is charging. When charging is completed, LED display show 100% power.
  - If battery pack is charged separately without being assembled on machine, during charging, indicator in battery pack is red and turns green after charging is completed.

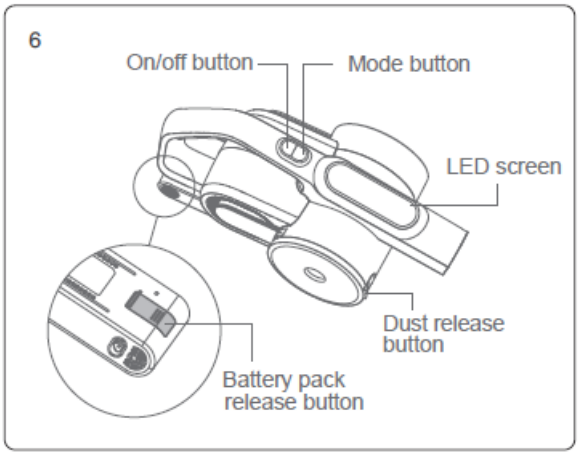

Attention:


1. When battery power is below ≤20%, if product is working in Max mode , it will change to Turbo mode automatically. When battery power runs off, product will turn off automatically.
2. **Attention:** If vacuum cleaner is long idled, charge the battery every three months to avoid battery failure.
3. After charging, please pull the charger plug off power socket and stop charging.
4. **Attention:** if power cord is damaged, to avoid danger, it must be replaced by professional staff of the manufacturer, repairing agent or similar department.

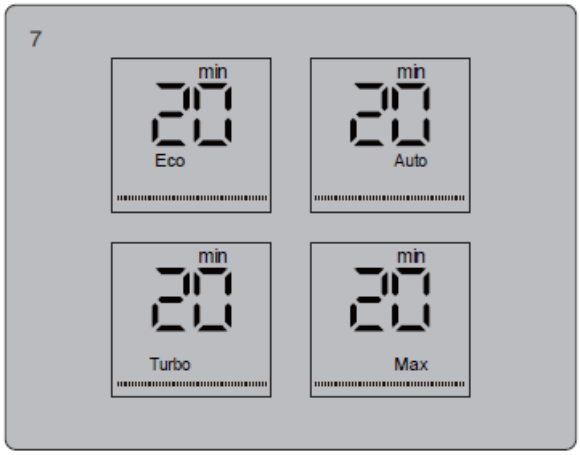


Use of handheld vacuum and LED screen contents

- Take the vacuum cleaner off the storage holder, press the on/off button to start or stop the vacuum cleaner. Mode button can adjust working mode. When machine is turned on, it works in Auto mode, press the mode button to switch to the sequence of Turbo- Max – Eco-Auto mode. During mode switch the mode will be displayed in LED screen.
- Middle of LED screen displays product run time left in current mode. When mode is changed, left run time will also change accordingly.
- When product works in Max mode and battery power drops below 20%, to extend product run time, product will automatically switch from Max to Eco mode. After battery is charged to higher than 20% power, product can work in Max mode.
- When the product is working in Auto mode, it will adjust working power basing on the dust content and the floor type it detects, in order to achieve higher cleaning efficiency.
- Under Auto mode, LED screen display Auto regardless how high the working power is.
- The product is equipped with dust content sensor. On LED screen bottom there is a light strip to display the

dust content. As dust content decreases from high to low, the red colour decreases and blue 8 colour increases. When the strip is completely blue, the cleaning surface is clean. Cleanness of the cleaning surface can be visually displayed throughLED screen.

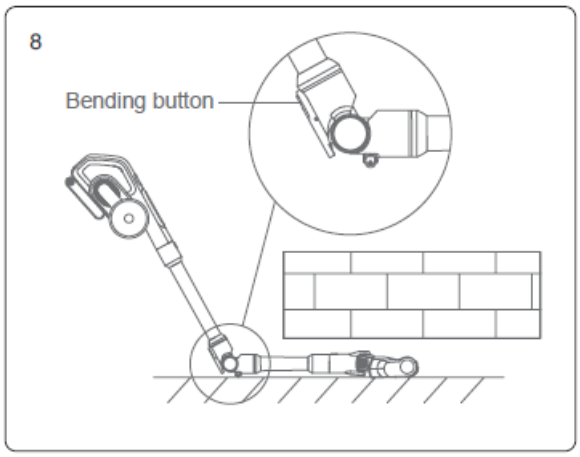

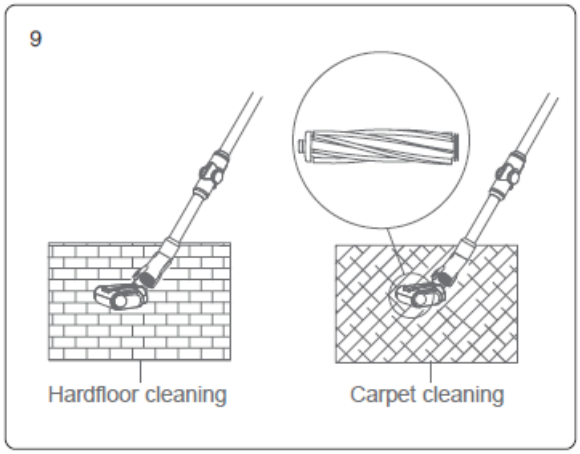


Use of flexible metal tube

The flexible metal tube has two modes: vertical and bending. The vertical mode is equivalent to the normal metal tube. The bending mode can be used for cleaning under the table bottom, bed bottom, etc. When the bending mode is needed, press the bending button as shown in the g picture, and the metal tube can achieve 0-90°bending angle.


Use of electric floor head

- Electric floor head is suitable to clean all kinds of floor like hard floor, tile and carpet etc. Product comes with an extra carpet brushroll can be replaced to the floor head to deep clean carpet.
- **Attention:** During the operation of the electric floor head, if there is a large volume of foreign matter inhaled or too much fiber wound, or even a child in the play of the machine mistakenly put his hand into the nozzle, resulting in the brushroll abnormal stop, the electric floor head
  will stop working, in order to protect personal safety and brush motor.

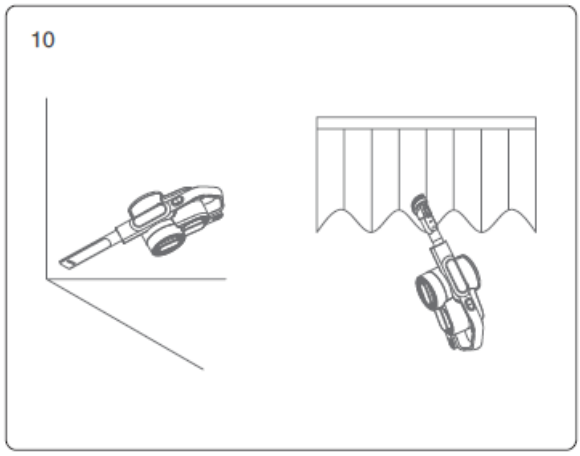

Use of accessories


- **Crevice tool:** suitable for cleaning crevice, door or window corners and other narrow gaps.
- **Upholstery tool:** suitable for cleaning closet, windowsill, sofa and table surface.
- **Soft brush:** suitable for cleaning easy to scratch furniture like bookshelf, handicraft etc.
- **Stretch hos**e: suitable for connecting with other tools to clean hard to reach areas.
- **Electric mattress head:** Suitable for sofa and bed mattress. The brushroll beats out and then cleans the dust mite and allergen from deep sofa or bed.
- **Connector:** Can be connected to other tools and bend to different angle to clean dust on top of high cabinets or dust on the roof.

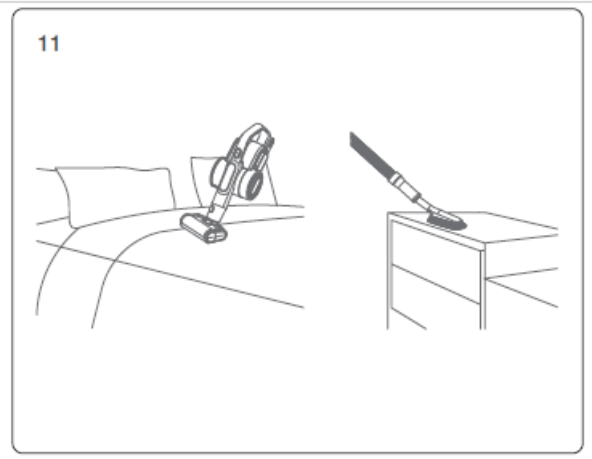

Cleaning and Replacing Parts

Attention:


1. HEPA filter is available for sale from local vacuum cleaner distributors.
2. It is recommended to clean the dust cup after each use; When the dust cup is full or the HEPA filter is clogged, it needs to be cleaned and replaced if necessary.
3. Electric floor head brushroll might be entangled with hair after long time use. It needs to be cleaned in time to keep the vacuum working more efficiently.

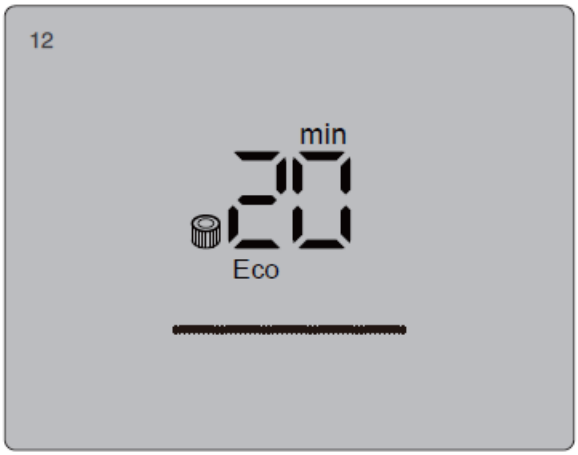


Clean dust cup and filtration system
When dust cup is full or HEPA is clogged, LED screen will display HEPA icon as the picture to remind to clean dust cup and filter. Please clean dust cup and HEPA filer in time. Replace HEPA filter if necessary.

Steps of cleaning dust cup and filtration system:


1. Press down the dust cup bottom cover, open dust cup and dump dust into trash can.
2. Hold HEPA lid and rotate anti-clockwise, remove HEPA assembly from handheld vacuum for cleaning.
3. Hold top of cyclone assembly and rotate anti-clockwise, remove cyclone assembly from handheld vacuum for cleaning.
4. If HEPA needs wash, hold the HEPA and rotate clockwise, remove it from HEPA lid for washing. HEPA needs completely dry before reuse.
5. After cleaning, assemble the parts back in the opposite sequence of disassembly.

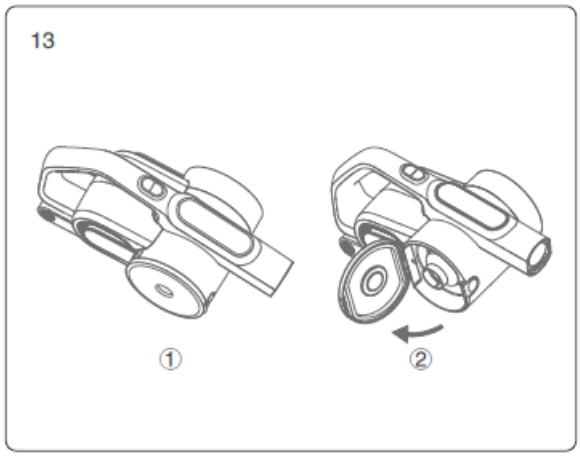

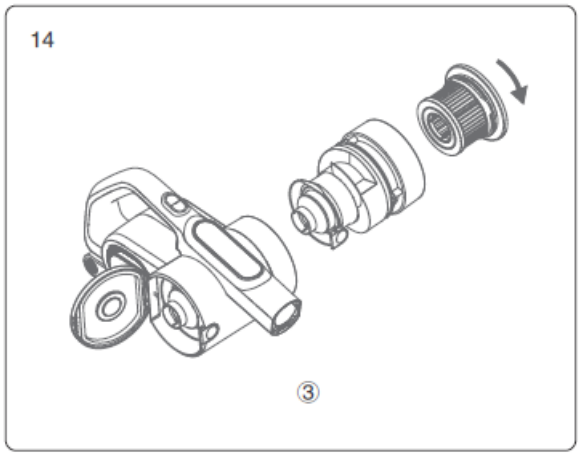


Clean brushroll


1. Move the brushroll release button along the arrow direction remove side cover.
2. Remove one end of the brushroll and take it out from nozzle for cleaning.
3. After cleaning or replacing brushroll, assemble it back in opposite sequence of disassembly.

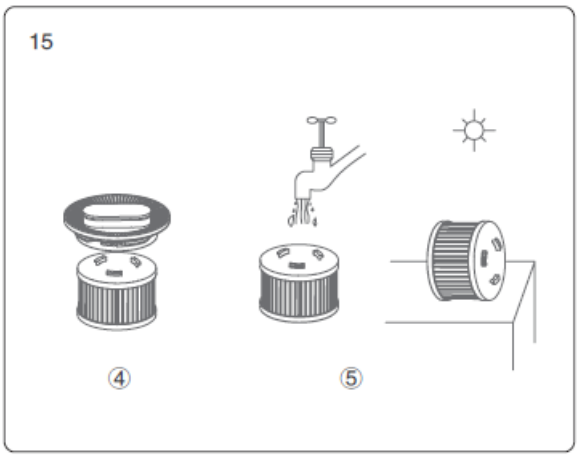

Storage of Vacuum Cleaner

- **Battery pack disassembly**
  Press the battery release button, remove the battery pack in the arrow direction and place the battery in a plastic bag, then store it in a dry place.
- **Storage of vacuum cleaner**
  When the vacuum is long idled, remove the battery, pack the product and store it in a cool and dry place, do not put in direct sunlight or humid environment.

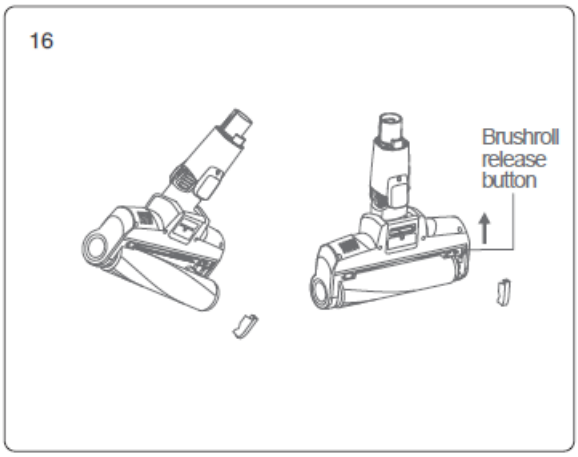

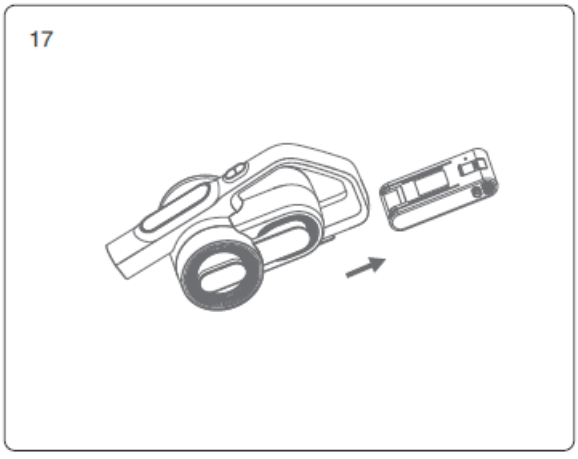

Safety Notes

- This vacuum cleaner is designed for home use. Do not use it for commercial or other purposes. Please read this instruction manual carefully before use, properly save and store it for future use.
- Do not put the vacuum close to fire or other high temperature facility.
- Do not use or store the machine under extreme bad conditions, for example, extreme temperature. It is recommended to use it indoors between the temperature of 5 °C to 40 °C.
- Store the machine in dry place and avoid direct sunlight.
- Fully charge the battery before first use or after long storage.
- Before using the vacuum, make sure brushroll is assembled, otherwise, it may lead to motor fan blockage, causing motor burn out.
- Please do not use the vacuum to pick up detergent, oil, glass slag, needle, cigarette ash, wet dust, water, matches, etc.
- Please do not use the vacuum to pick up tiny particles such as cement,gypsum powder, wall powder, or large objects such as paper balls, otherwise it will cause malfunctions such as blockage and motor burnout.
- Avoid blockage to air inlet or brushroll, it may cause motor failure.
- Do not put your hand or foot into floorhead inlet to avoid body hurt.
- Do not pour or splash water or other liquids into the machine to avoid short circuit to burn out the machine.
- If the brushroll is not working, please check whether the brushroll is entangled with hair or other long fiber, clean it in time.
- When storing the machine for a long time, ensure that the battery is fully charged before storage and charge the machine at least every three months.
- Unplug the charger to clean or repair the machine. Hold the charger when plugging or unplugging it, and do not pull the charging cord.
- Use a dry cloth to clean the machine. Liquids like gasoline, alcohol, lacquer thinner will cause crack or colour fading and cannot be used.
- If the machine is not working after fully charged, it must be checked and repaired in our designated office, please do not dismantle the machine on your own.
- Discarded machine contains batteries. They should be recycled safely. Do not discard them randomly.
- If there is damage on power cord, to avoid danger, it should be replaced or repaired by manufacturer repairing agency or professional person.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- The appliance is only to be used with the power supply unit provided.

Trouble Shooting

Please check the following issues before sending to designated repair agent.

Trouble	Possible Causes	Solutions
Motor does not work	Battery has no power	Charge the vacuum cleaner
	Metal tube,floorhead, battery pack and vaccum cleaner is not assembled correctly	Check the accessories are assembled correctly to the vacuum cleaner
Suction drops	Dust cup full	Clean dust cup
	Filter blocked	Clean or replace filter
	Floorhead air path blocked	Clean floorhead air path
Short working time after charging	Machine not fully charged	Follow instruction manual to fully charge the battery
	Battery old aging	New batteries can be bought from local distributor
Dust content indicator is always red	Dust sensor covered by dust	Clean the dust on the dust sensor which is located in the suction inlet of the handheld vacuum cleaner

When there is electric components defect,which needs professional after service person for instruction or repairing, LED screen will display the defect warning with error code of F1 to F8. Please contact after service of local agent and provide error code.

Defect of F1 to F8 is as following:


Code	Defect	Solutions
F1	Battery pack nickel strip broken	Replace or repair battery pack
F2	Charger defect	Replace charger
F3	Vacuum motor short circuit	Replace vacuum motor
F4	Battery cell defect	Replace or repair battery pack
F5	Vacuum motor 1st over current protection	Replace vacuum motor
F6	Vacuum motor 2nd over current protection	Replace vacuum motor
F7	PCB defect or PCB leadwire loose	Replace PCB or PCB leadwire
F8	Battery pack NTC abnormal	Turn off the vacuum and wait until battery pack cooled down. Turn on again.If error code still appears, replace battery pack

Attention: if there are other faults needs special tools, in order to avoid danger, must be repaired by professional people of manufacturer, repairing agent or similar agent.

Technical Parameter

Model No	H8 Flex
Rated voltage	25.2V
Rated power	550W
Charger input voltage	100-240V ~ 50/60Hz
Charger output voltage	30V 600mA
Electric floor head model No	T-EB110VE
Electric floor head rated power	30W
Battery pack capacity	2500mAh
Charge time	4-5h

Circuit Diagram

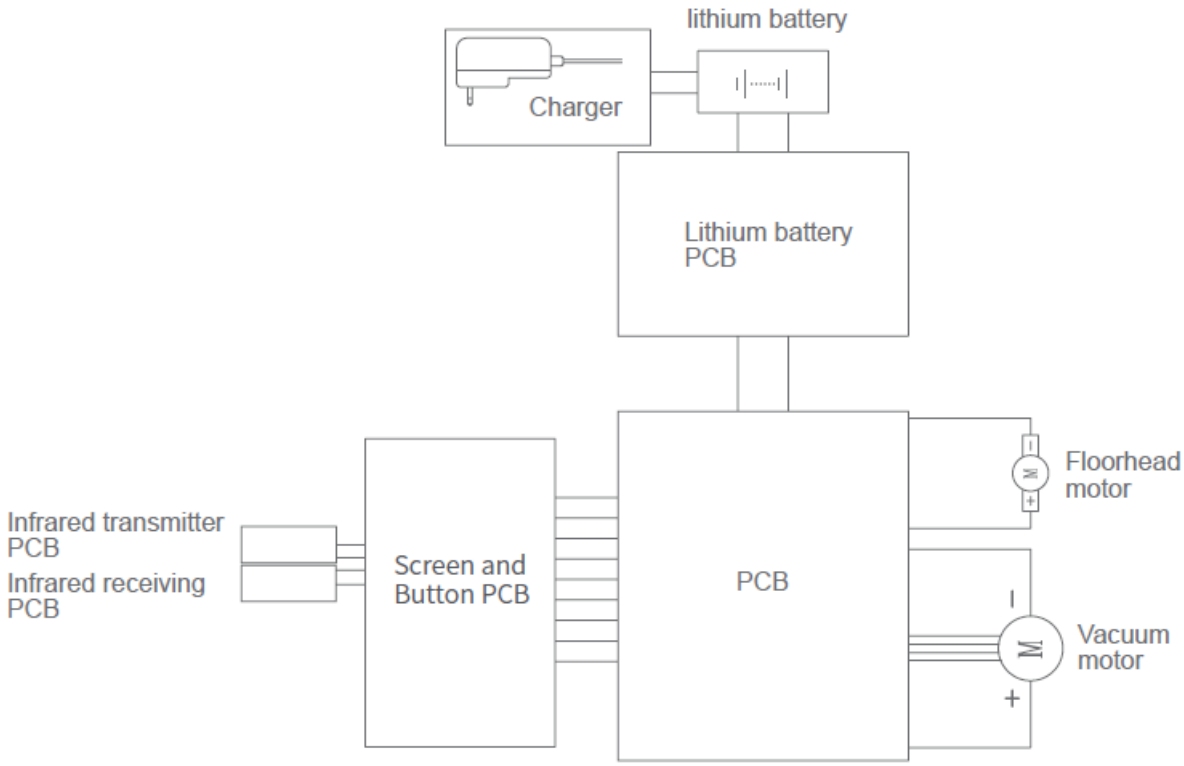

Manufacturer Information

Manufacturer	Kingclean Electric Co., Ltd
Address	No.1 Xiangyang Road, Suzhou New District, Jiangsu Province 215009, China

Disposal

- The machine, accessories and packaging should be sorted for environmental-friendly recycling.




- Do not dispose of the machine into household waste!

Contact us -we'll get back within 1 business day.

- **Web**: www.jimmyglobal.com
- **Email**: support@jimmyglobal.com

Documents / Resources

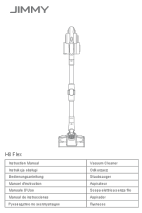	JIMMY H8 Flex Vacuum Cleaner [pdf] User Manual H8 Flex Vacuum Cleaner, H8 Flex, Vacuum Cleaner, Cleaner

References

- JIMMY cordless vacuum, JIMMY vacuum cleaners, H9 Pro powerful vacuum, JIMMY F6 hair dryer - JIMMY
- User Manual

Manuals+, Privacy Policy