

Internet Radio

To select an Internet radio station:

1. Press **SOURCE**, then select **Internet Radio**.

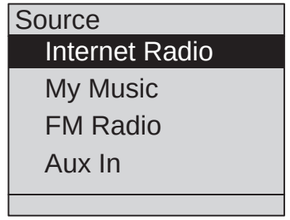


2. Highlight your desired browsing method and press **SELECT**.

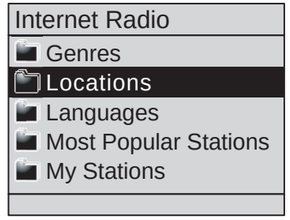

3. Continue selecting your browsing options until you reach a list of radio stations (denoted by the icon to the left of the station name) and press **SELECT** to connect.



4. Depending on the catalog of radio stations available on the Internet, your browsing experience may differ. A typical session may go through several levels of options - for example:
   - **Locations**
     - **North America**
       - **United States**
         - **California**
           - **Alternative**

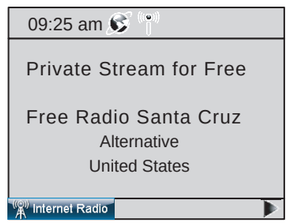

Sample of Internet radio station playing

NOTE: Stations can perform differently based on Internet conditions. If you experience problems when listening to Internet radio, try going back to re-connect to the station.


My Music

NOTE: The **My Music** feature requires additional setup for networking and file-sharing configuration on your computer. Please refer to the IS9181 user's manual for complete setup instructions.

FM Radio


To listen to FM radio:

1. Press **SOURCE**, then select **FM Radio**.
2. You can press ⏮ and ⏭ to seek stations, or use the rotary dial to manually tune into a station. Press ⏯ to mute and unmute the system.

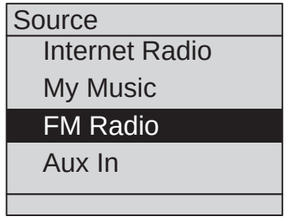


Aux In

The IS9181 Internet Radio provides the ability to listen to audio from any source that can connect through a standard headset jack. Connect one end of the supplied auxiliary audio cable to the headset jack (audio/line out) of your device, and plug the other end of the cable into the **AUX IN** port on the back of the IS9181.

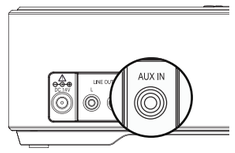


1. Press **SOURCE**, then select **Aux In**.
2. You can now listen to your external audio source through the IS9181. Please note that the IS9181 does not provide power or control to your external audio source.

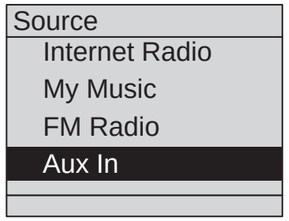

Weather forecast

After you have set up the weather settings, press **WEATHER (INFO)** and rotate the dial to view the 5-day weather forecast.

If you do not press a key within one minute, the IS9181 will return to your playing screen.

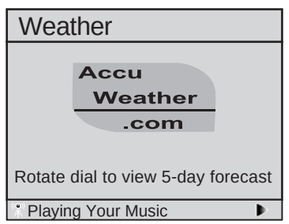

www.vtechphones.com/IS9181

VTECH TELECOMMUNICATIONS LTD.
A member of THE VTECH GROUP OF COMPANIES.
Distributed in the U.S.A. by VTech Communications, Inc.
Beaverton, Oregon

Distributed in Canada by VTech Technologies Canada, Ltd.,
Richmond, B.C.

Copyright ©2009 for VTECH TELECOMMUNICATIONS LTD.


Printed in China.

Version 3

vtech®

Designed to fit your home. And your life.SM

IS9181 WiFi Internet radio
Quick start guide

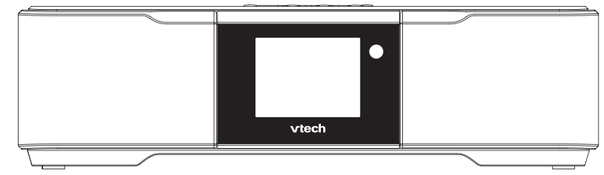


The IS9181 WiFi Internet radio allows you to:

- Listen to thousands of free Internet radio stations from around the world without turning on the computer.
- Listen to the digital music collection stored on your computer in any room of the house.
- Listen to music from an MP3 player or connect to a home audio system.

Remove the IS9181 from the box and verify that you have the following components:

- ○ IS9181 WiFi Internet Radio
- ○ Auxiliary audio cable
- ○ Remote control
- ○ Power adapter
- ○ Quick start guide
- ○ User's manual

Controls

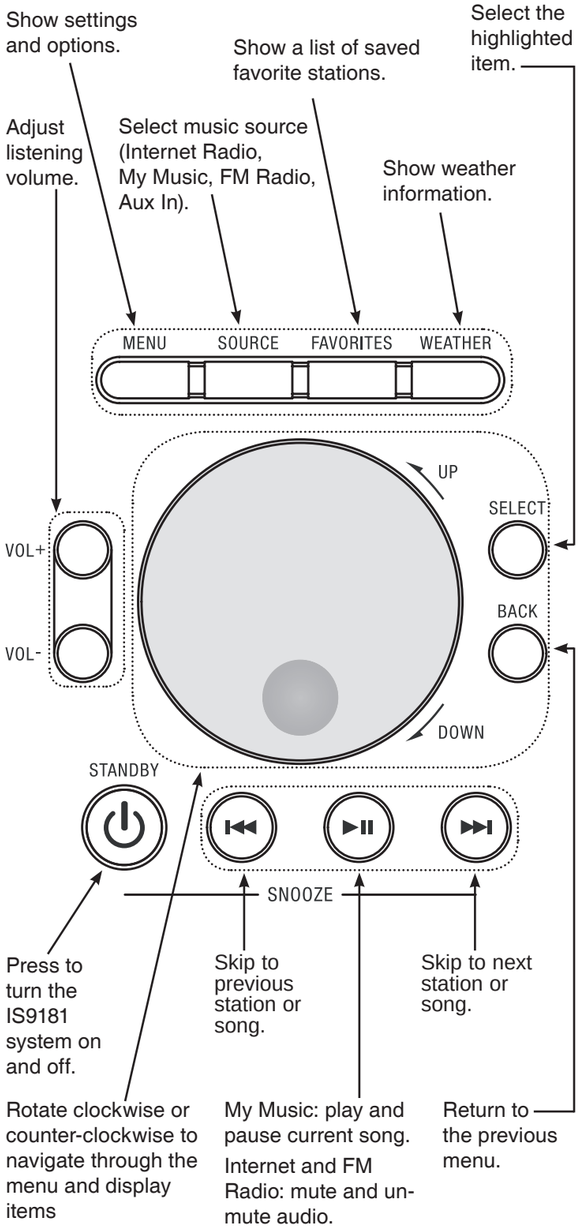

Before you begin

A wireless network with Internet access is required to complete the setup of your IS9181. For easier setup, write the required information in the table below.


Wireless Network	
Your Network Name (SSID)	
Your Password (Network Key)	
Clock	
Your Time Zone (Newfoundland, Atlantic, Eastern, Central, Mountain, Pacific, Hawaii, Alaska)	
Weather Settings	
Your 5 digit zip code (USA) or 6 character postal code (Canada)	

Getting started

1. Peel both of the clear plastic protective sheets away from the top and the display of the IS9181 WiFi Internet Radio.
2. Plug the small end of the power adapter into the jack labeled **DC 14V** on the back of the IS9181.
3. Plug the large end of the power adapter into an electrical wall outlet not controlled by a switch.

The IS9181 displays a progress bar while it initializes - this could take up to three minutes to complete.

Press **STANDBY** to activate the system. When the IS9181 system is ready, the system setup screen appears on the display. Select **YES** to continue the system setup.

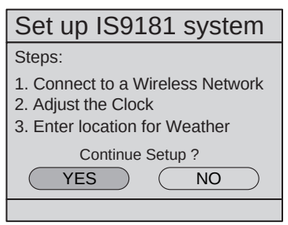


NOTE: To highlight and select items listed on the display, simply rotate the dial and press the **SELECT** key.

Connect to your wireless network

You can either allow the system to search for a wireless network, or enter the name of a known available network.

To connect to your wireless network by searching for available networks:


1. Select **CHANGE**.

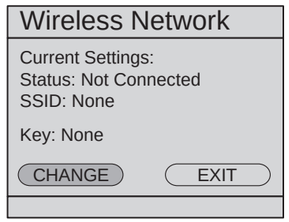

2. Select **Search for Network** and then press **SELECT**.
3. Find the name of your network in the list and press **SELECT**. If at first you do not see your network in the list, press **BACK** and try searching again. If you still do not see your network after a few tries, you may need to enter the network name manually. Please see the IS9181 manual for more instructions.
4. To enter your network password, move the rotary dial to highlight the first character of your password and press **SELECT** to add it to the entry line. Select **DELETE** to erase the last character. Repeat this character selection process until the entire password is displayed.

NOTE: Passwords are case sensitive. If capital letters or symbols are used, select **CAPS** or **SYMBOLS** to display a list of characters. Select **SPACE** to insert a blank space.

5. Move the rotary dial to highlight **DONE** and then press **SELECT**.

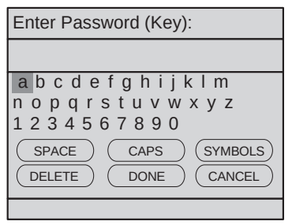


The IS9181 now attempts to connect to your wireless network (this could take up to one minute). Once connected, you will be asked to set the clock and weather.

Set the clock and weather

To complete the setup of the IS9181, you need to set the clock and weather.

Setting the clock

1. Select **CHANGE**.
2. Select **Auto (from Internet)**.
3. Select your time zone from the list.
4. Select **On** or **Off** for daylight saving.

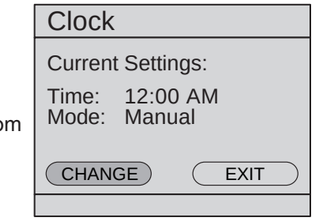


The IS9181 will automatically retrieve and update the current time for your time zone from the Internet.

NOTE: Daytime saving time adjustments must be changed manually.

Weather settings

1. Select **CHANGE**.
2. Choose your country from the list.
3. Enter your 5 digit zip code (USA) or 6 character postal code (Canada).
4. Move the rotary dial to highlight **DONE** and then press **SELECT**.

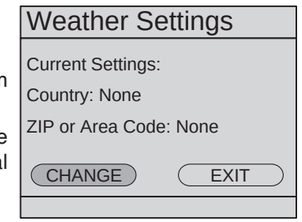

The IS9181 will automatically retrieve and update the current weather information for your zip/postal code from the Internet.

NOTE: Like a personal computer, the IS9181 is exposed to a multitude of Internet traffic and signals which can sometimes result in unexpected operations. If you find that the IS9181 is behaving abnormally we recommend that you reset it by unplugging power for a few minutes and then plugging it back in.