

(X160 Export Version)Spare Parts Atlas

Spare Parts Atlas-01

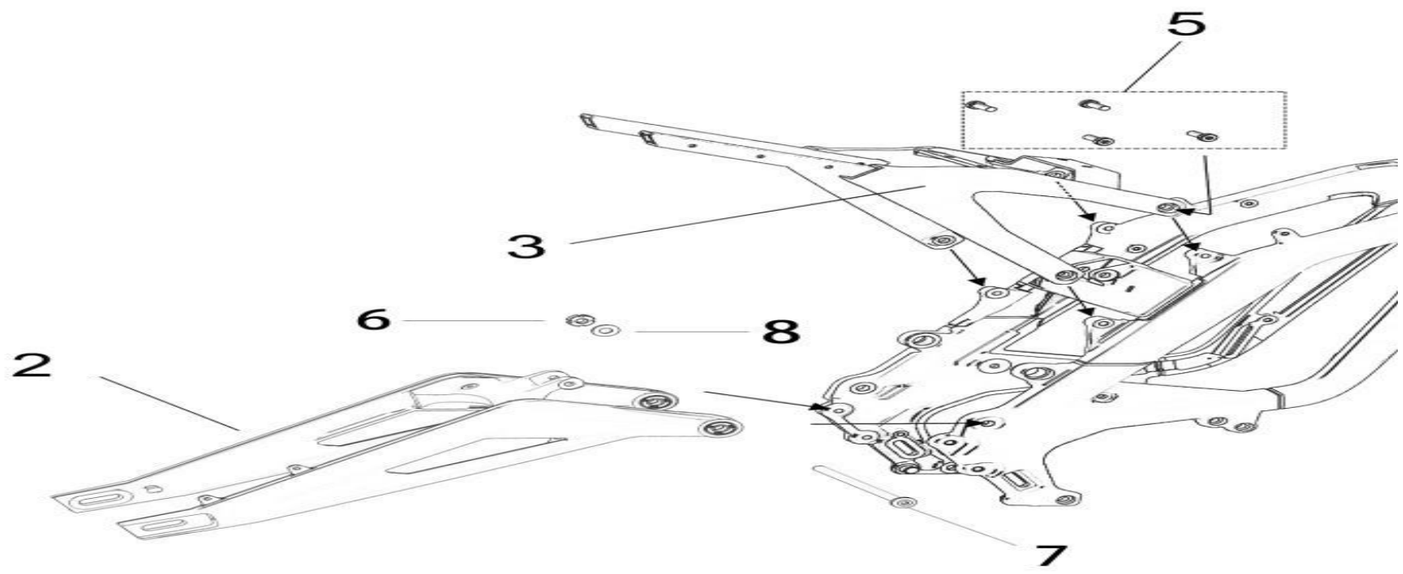



Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
1_01	41100-YQ1A-0000	41100-YQ1A-0000-Y2	车架焊接总成银色	Frame Assy. Silver	备件附贴纸
		41100-YQ1A-0000-Y4	车架焊接总成黑色	Frame Assy. Black	备件附贴纸
		41100-YQ1A-0000-Y7	车架焊接总成红色	Frame Assy. Red	备件附贴纸
		41100-YQ1A-0000-Y11	车架焊接总成蓝色	Frame Assy. Blue	备件附贴纸
1_02	61000-YQ2A-0000	61000-YQ2A-0000-Y4	平叉总成	Rear Fork Assy.	黑色，备件附贴纸
1_03	41520-YQ2A-0000	41520-YQ2A-0000	尾架总成	Seat Frame Assy.	黑色
1_05	B3-009-08-020-F0		尾架安装螺钉	Seat Frame Mounting Screws	薄形内六角圆柱头螺钉(M8*20)
1_06	B4-008-10-F0		平叉轴螺母	Rear Fork Shaft Nut	圆螺母（M10*1.0）
1_07	61260-YQ2A-0000	61260-YQ2A-0000	平叉中轴	Rear Fork Mid. Shaft	Φ10*198-M10*1.0
1_08	B4-001-10-F1		平叉轴安装垫片	Rear Fork Shaft Mounting Washer	平垫片（Φ10-Φ20-2）

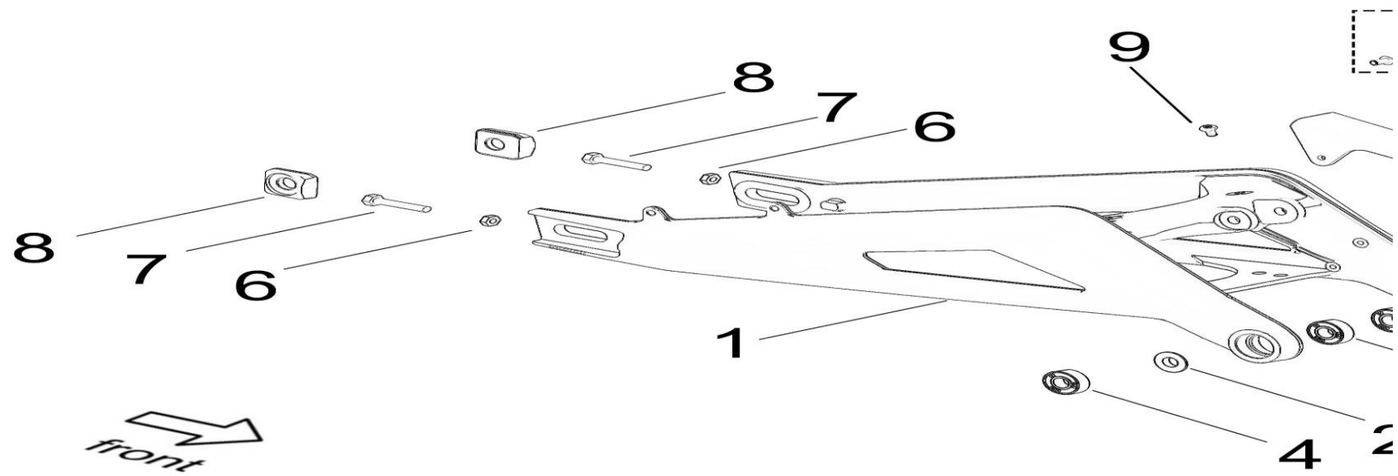


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
2_01			平叉焊接总成	Rear Fork Welding Assembly	
2_02	FB05-005-10-15-22-2	FB05-005-10-15-22-2	平叉内垫片	Rear Fork Inner Washer	台阶垫片（Φ10*Φ15*Φ22-2）
2_03	B3-002-05-010-F0		中轴套护罩安装螺钉	Protection Cover, Mid. Shaft Mounting Screws	内六角平圆头螺钉（M5*10）
2_04	Z-6000-2Z-26-10-08	Z-6000-2Z-26-10-08	平叉中轴套轴承	Rear Fork Mid. Shaft Bush Assy.	深沟球轴承6000-2Z-Φ10-Φ26-8
2_05	32120-YQ2A-0000	32120-YQ2A-0000	中轴套护罩	Protection Cover, Mid. Shaft	
2_06	B2-001-06-F2		调节器调节螺母	Tensioner Adjust Nut	六角螺母M6
2_07	B1-004-06-035-F0		调节器调节螺栓	Tensioner Adjust Bolt	六角螺栓-全螺纹-M6*35
2_08	61210-YQ2A-0000	61210-YQ2A-0000	调节器	Tensioner	
2_09	B3-002-05-010-F0		尼龙线夹2安装螺钉	Wire Clip Fixing Screw	内六角平圆头螺钉（M5*10）

零部件图册-03

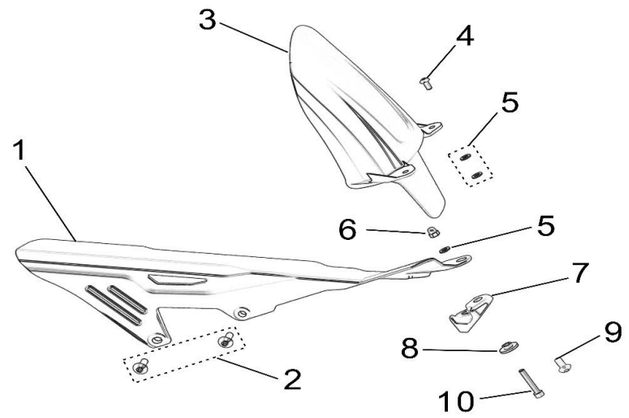

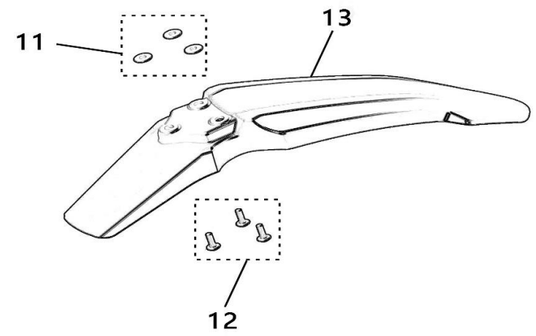


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
3_01	32223-YQ2A-0000	32223-YQ2A-0000	链盒	Chain box	
3_02	FB03-001-06-012-F0	FB03-001-06-012-F0	链盒安装螺钉A	Chain Box Mounting Screw A	内六角盘头螺钉-M6*12
3_03	31311-YQ1N-0000	31311-YQ1N-0000	后轮前挡泥	Front Fender (Rear Wheel)	
3_04	B3-002-05-010-F0		后轮前挡泥安装螺钉	Front Fender (Rear Wheel) Mounting Screws	内六角平圆头螺钉（M5*12）
3_05	B4-001-05-F1		平垫片	Plain Washer	平垫-Φ5
3_06	B2-018-05-010-F0		盖形螺母	Cover Shape Nut	M5*10
3_07	61237-YQ2A-0000	61237-YQ2A-0000	平叉防撞块	Anti-collision block, Rear Fork	
3_08	61238-YQ2A-0000	61238-YQ2A-0000	翻边衬套	Flanged Bushing	Φ18*2-Φ9*3.5-Φ6-3
3_10	B3-001-05-030-F0		安装螺钉	Mounting Screws	内六角圆柱头螺钉-M5*30
3_11	31218-YQ2B-0000	31218-YQ2B-0000	前挡泥安装翻边衬套	Front Fender Mounting Bushing	翻边衬套Φ15*2-Φ9*2-Φ6.5
3_12	FB03-001-06-012-F0	FB03-001-06-012-F0	前挡泥安装螺钉	Front Fender Mounting Screws	内六角盘头螺钉-M6*12
3_13	31211-YQ2B-0000	31211-YQ2B-0000	前挡泥板	Front Fender	

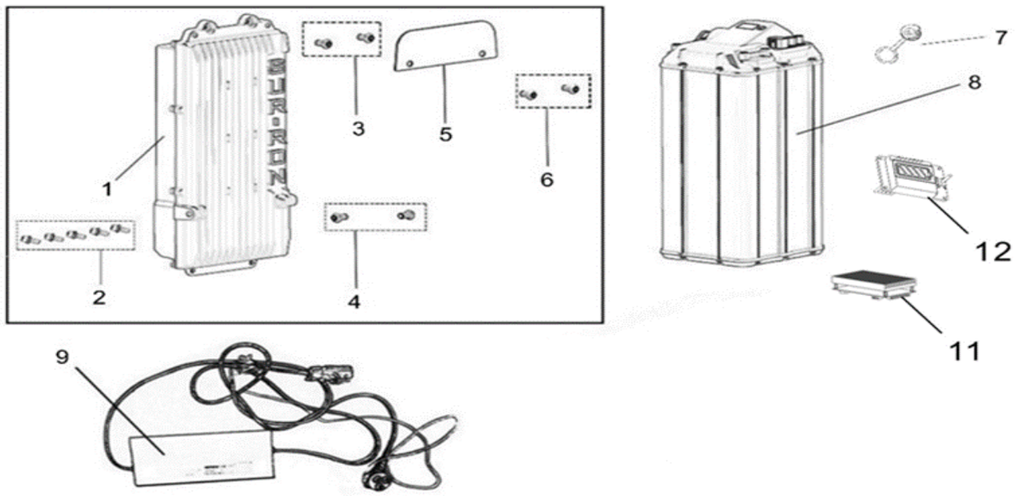

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
4_01	21100-YQ1N-0000	21100-YQ1N-0000	控制器总成	Controller	
4_02	B8-001-06-016-F2		控制器相线安装螺钉	Control Board Phase Wire Mounting Screws	内六角圆柱头自带平弹垫螺钉（M6*16）
4_03	B3-002-06-012-F1		控制器上安装螺钉	Mounting Screws On the Control Board	内六角平圆头螺钉（M6*12）
4_04	B3-002-06-010-F0		控制器左右安装螺钉	Control Board Left and Right Mounting Screws	内六角平圆头螺钉（M6*10）
4_05	21103-YQ2A-0000	21103-YQ2A-0000	控制器上装饰板	Controller Upper Decoration Plate	
4_06	B3-002-05-010-F0		控制器上装饰板安装螺钉	Decorative Plate Mounting Screws on the Control Board	内六角平圆头螺钉（M5*10）
4_07	26351-YQ2A-0000		电池充电口防水胶帽	Battery Charging Port Waterproof Rubber Cap	
4_08	26000-YQ1N-0000	26000-YQ1N-0000	锂电池总成-48V/20Ah	Lithium-ion Battery X160_（48V/20Ah）	48V/20Ah-segway，备件附贴纸
4_09	21700-YQ1N-0000	21700-YQ1N-0000	充电器	Charger	便携式-48-5A-美标110V宽电压-segway
4_11	26220-YQ1N-0000	26220-YQ1N-0000	电池保护板	Battery protection board	48V电池保护板

4_12	26310-YQ1N-0000	26310-YQ1N-0000	电量表	Electricity meter	segway状态

零部件图册-05

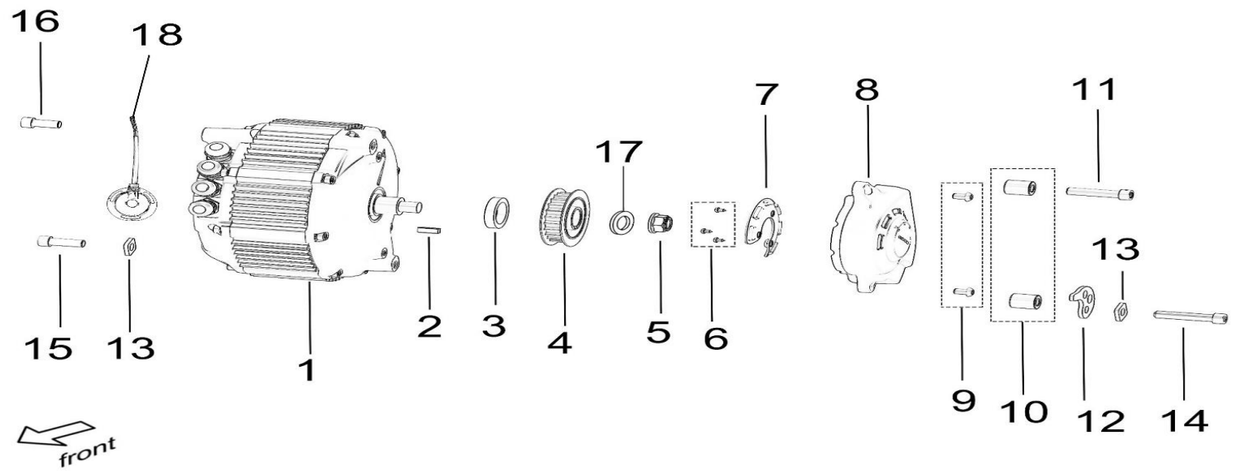


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
5_01	11100-YQ1N-0000	11100-YQ1N-0000	电机头总成	Motor Assy.	直流无刷2KW-取消亮面机加
5_02	B7-001-25-35-7	B7-001-25-35-7	电机油封	Oil Seal	TC油封Φ25-Φ35-7
5_03	B6-003-05-016		平圆键	Flat Key	C型平键-（5*5*16mm）
5_04	13201-YQ2A-0100	13201-YQ2A-0100	前皮带轮	Fr. Belt Pulley	HTD同步轮-8M
5_05	B2-006-12-F2		前皮带轮锁紧螺母	Lock Nut，Fr. Belt Pulley	六角法兰面锁紧螺母（M12*1.25）
5_06	FB03-004-006-F2		前皮带轮护罩内衬安装自攻钉	Self-Tapping Installation Screws，Bush，Fr. Belt Pulley Protection Cover	自攻钉PB3.5*6
5_07	32332-YQ2A-0000	32332-YQ2A-0000	前皮带轮护罩内衬	Bush，Fr. Belt Pulley Protection Cover	
5_08	32331-YQ2A-0000	32331-YQ2A-0000	前皮带轮护罩）	Protection Cover，Fr. Belt Pulley	
5_09	B3-002-06-010-F0		前带轮护罩安装螺栓	Bush，Fr. Belt Pulley Protection Cover Mouting Bolts	内六角平圆头螺钉M6*10

5_10	11216-YQ2A-0000	11216-YQ2A-0000	电机左安装衬套	Motor Left Mounting Bush	Φ8*Φ20-19
5_11	B3-001-08-040-F0		电机头总成左上安装螺钉	Motor Assembly Top Left Mounting Screw	内六角圆柱头螺钉M8*40

零部件图册-05

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
5_12	11171-YQ2A-0000	11171-YQ2A-0000	电机头位置调节器	Motor Position Adjuster	
5_13	11172-YQ2A-0000	11172-YQ2A-0000	电机头位置调节器压板	Motor Position Adjuster Pressure Plate	
5_14	B3-001-08-045-F0		电机头总成左下安装螺钉	Motor Assembly Lower Left Mounting Screw	内六角圆柱头螺钉M8*45
5_15	B3-001-08-020-F0		电机头总成右上安装螺钉	Motor Assembly Top Right Mounting Screw	内六角圆柱头螺钉M8*20
5_16	B3-001-08-025-F0		电机头总成右下安装螺钉	Motor Assembly Lower Right Mounting Screw	内六角圆柱头螺钉M8*20
5_17	FB05-002-23-12-1-F3		前皮带轮安装垫片	Fr. Belt Pulley Mounting Washer	蝶形垫片（Φ24*Φ10*1.6-3）
5_18	21152-YQ2A-0000	21152-YQ2A-0000	控制器霍尔传感器	Controller Hall Sensor	

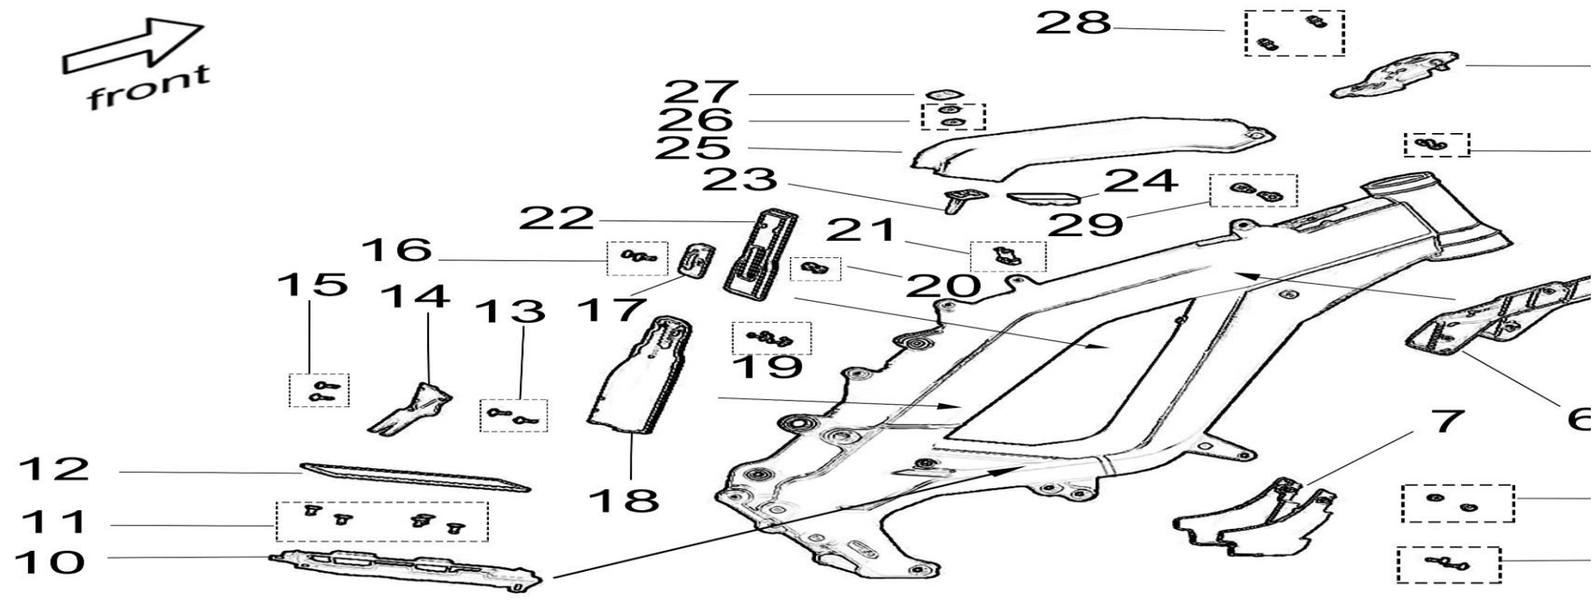

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
6_01	32340-YQ2A-0000	32340-YQ2A-0000	电控锁装饰罩	Decoration Cover, Electric Lock	
6_02	B3-003-05-010-F0		电池右限位块安装螺钉	Battery Right Limitation Stop Mounting Screw	内六角沉头螺钉（M5*10）


6_03	B4-007-05-F1		电池仓盖用开口挡圈	Battery Cabin Cover Open Retaining Ring	开口挡圈（卡簧）
6_04	32356-YQ2A-0000	32356-YQ2A-0000	电池左限位块	Battery Left Limitation Stop (Plastic)	
6_05	B3-003-05-010-F0		电池左限位块安装螺钉	Battery Left Limitation Stop Mounting Screw	内六角沉头螺钉（M5*10）
6_06	32357-YQ2A-0000	32357-YQ2A-0000	电池右限位块	Battery Right Limitation Stop (Plastic)	
6_07	32361-YQ2A-0000	32361-YQ2A-0000	控制器下装饰罩	Controller Lower Decoration Cover	
6_08	B3-002-06-010-F0		控制器下装饰罩安装螺钉A	Controller Lower Decoration Cover Mounting Screw A	内六角平圆头螺钉（M6*10）

零部件图册-06

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
6_09	FB03-003-04-013-F3		控制器下装饰罩安装螺钉B	Controller Lower Decoration Cover Mounting Screw B	十字头双线自攻钉（M4*13）
6_10	32358-YQ2A-0000	32358-YQ2A-0000	电池总成下限位	Battery Lower Limitation Stop (Plastic)	
6_11	B3-003-05-012-F0		电池总成下限位安装螺钉	Battery Lower Limitation Stop Mounting Screws	内六角沉头螺钉（M5*12）
6_12	26343-YQ2A-0000	26343-YQ2A-0000	电池下缓冲泡棉	Battery Lower Buffer Foam	
6_13	FB03-003-04-013-F3		电池总成后挡泥板下安装螺钉	Battery Assembly Rear Fender, Lower Mounting Screws	十字头双线自攻钉
6_14	32365-YQ2A-0000	32365-YQ2A-0000	带轮小挡泥板	Small Fender, Belt Pulley (Plastic)	
6_15	FB03-003-04-013-F3		带轮小挡泥板安装螺钉	Small Fender, Belt Pulley, Founting Screws	十字头双线自攻钉（M4*13）
6_16	B3-003-05-016-F0		电池前限位支撑块安装螺钉	Back Up Block Mounting Screw	内六角沉头螺钉（M5*16）
6_17	32353-YQ2A-0000	32353-YQ2A-0000	电池前限位支撑块	Back Up Block (Plastic)	
6_18	32355-YQ2A-0000	32355-YQ2A-0000	电池总成后挡泥板	Rear Fender, Battery (Plastic)	
6_19	FB03-001-06-012-F0		电池总成后挡泥板上安装螺钉	Rear Fender, Battery, Mounting Screws	内六角盘头螺钉（M6*12）
6_20	B2-006-05-F2		电池前限位支撑块安装螺母	Back Up Block Mounting Nut	六角法兰面锁紧螺母（M5）
6_21	B3-002-06-012-F0		电池锁座挂钩固定螺钉	Lock Bracket Hook, Battery, Fixing Screw	内六角平圆头螺钉（M6*12）
6_22	26341-YQ2A-0000	26341-YQ2A-0000	电池前缓冲泡棉	Battery Front Buffer Foam	

6_23	26290-YQ2A-0000	26290-YQ2A-0000	电池锁座挂钩	Lock Bracket Hook, Battery	
6_24	32233-YQ2A-0000	32233-YQ2A-0000	电池仓盖缓冲胶	Buffer Rubber, Battery Compartment Cover	
6_25	32231-YQ2A-0000	32231-YQ2A-0000	电池仓盖	Battery Compartment Cover (Plastic)	备件附贴纸
6_26	B2-001-06-F2		电池锁座挂钩固定螺母	Lock Bracket Hook, Battery, Fixing Nut	六角螺母（M6）
6_27	82129-YQ1N-0000	82129-YQ1N-0000	电池仓盖标牌	Battery Compartment Cover Signage	金属硬标-带背胶-SEGWAY标识
6_28	B3-002-06-012-F0		电控锁装饰罩安装螺钉	Electric Control Lock Decorative Cover Mounting Screw	内六角平圆头螺钉（M6*12）
6_29	41762-YQ2A-0000	41762-YQ2A-0000	电池仓盖销轴	Pin, Battery Compartment Cover	

零部件图册-07

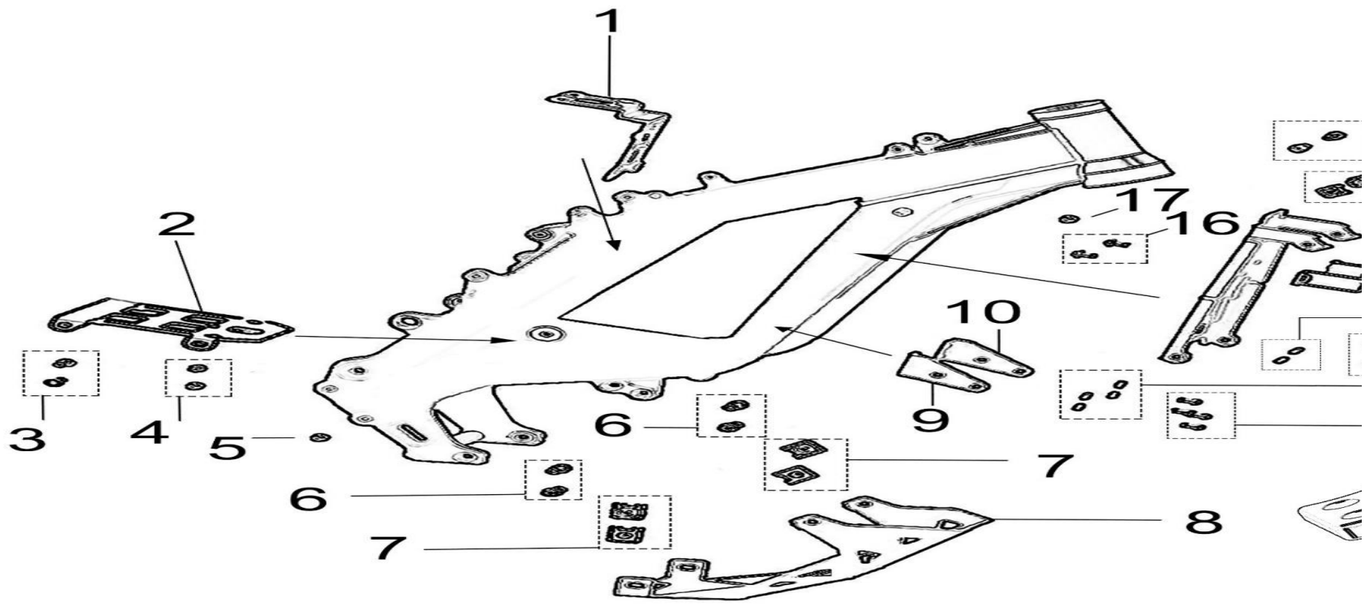

序号	零部件代码	物料代码	零部件名称		物料描述


7_01	32354-YQ2A-0000	32354-YQ2A-0000	电池总成后支撑板	Rear Back Up Block, Battery	
7_02	41690-YQ2A-0000	41690-YQ2A-0000	电池总成下支撑板	Lower Back Up Block, Battery	
7_03	FB03-001-06-016-F0		电池总成下支撑板安装螺钉A	Lower Back Up Block, Battery Mounting Screw A	内六角盘头螺钉（M6*16）
7_04	B3-001-06-010-F0		电池总成下支撑板安装螺钉B	Lower Back Up Block, Battery Mounting Screw B	内六角圆柱头螺钉（M6*10）
7_05	B4-009-06-014-F0		电机头位置调节器限位销	Motor Head Position Regulator Limit Pin	外螺纹圆柱销（M6*14）
7_06	B3-009-08-020-F0		电机防护罩安装螺钉	Motor Protection Cover Mounting Screws	薄形内六角圆柱头螺钉(M8*20）
7_07	FB02-003-08-F2		电机防护罩安装螺母夹	Motor Protection Cover Mounting Nut	螺母夹（M8）
7_08	41750-YQ2A-0000	41750-YQ2A-0000	电机防护罩	Motor Protection Cover	

零部件图册-07

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
7_09	41740-YQ2A-0000	41740-YQ2A-0000	控制器下右安装支架	Lower Right Mounting Bracket, Controller	
7_10	41730-YQ2A-0000	41730-YQ2A-0000	控制器下左安装支架	Lower Left Mounting Bracket, Controller	
7_11	B3-002-06-010-F0		控制器下安装支架安装螺钉	Lower Mounting Bracket, Controller Mounting Screw	内六角平圆头螺钉（M6*10）
7_12	B4-002-06-F2		控制器下安装支架安装垫片	Lower Mounting Bracket, Controller Mounting Washer	弹簧垫片（Φ6）
7_13	B3-001-06-012-F0		电池总成前挡板下安装螺钉	Front Fender, Battery Lower Mounting Screws	内六角圆柱头螺钉（M6*12）
7_14	41710-YQ2A-0000	41710-YQ2A-0000	控制器上安装支架	Upper Mounting Bracket, Controller	
7_15	41670-YQ2A-0000	41670-YQ2A-0000	电池总成前挡板	Front Fender, Battery	
7_16	B3-002-06-020-F0		控制器上安装支架安装螺钉	Upper Mounting Bracket, Controller Mounting Screw	内六角平圆头螺钉（M6*20）
7_17	B3-002-05-010-F0		线束前固定安装螺钉	Wire Harness Front Mounting Screws	内六角平圆头螺钉（M5*10）
7_18	FB02-001-06-F2		电池总成前挡板安装螺母夹	Front Fender, Battery Mounting Nut Clip	螺母夹(M6)
7_19	B3-001-06-016-F0		电池总成前挡板上安装螺钉	Front Fender, Battery Top Mounting Screw	内六角圆柱头螺钉(M6*16)
7_20	B4-002-06-F2		电池总成前挡板下安装弹垫	Front Fender, Battery Lower Mounting Screw	弹簧垫片(Φ6)

7_21	41755-YQ2A-0000	41755-YQ2A-0000	电机防撞块	Anti-collision block, Motor	


零部件图册-08

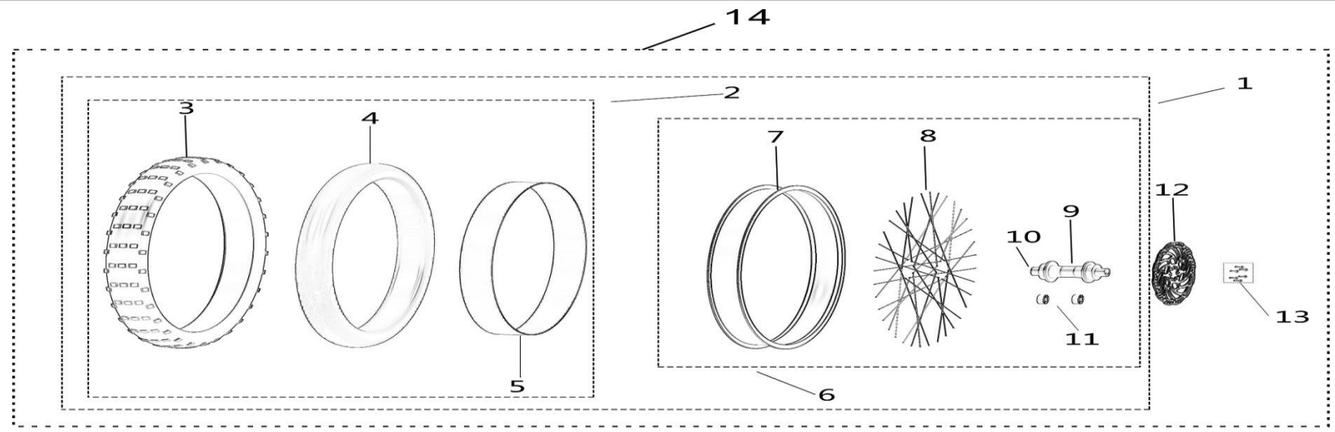

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
8_01	51200-YQ1N-0000	51200-YQ1N-0000	前轮总成	Front wheel Assy.	
8_02	51230-YQ1A-0000	51230-YQ1A-0000	轮胎组合	Tire combination	前后轮共用
8_03	51231-YQ1A-0000	51231-YQ1A-0000	外胎	Tire	前后轮共用；70/100-17
8_04	51232-YQ1A-0000	51232-YQ1A-0000	内胎	Inner tube	前后轮共用；2.00/2.25-17
8_05	51266-YQ1A-0000	51266-YQ1A-0000	轮圈垫带	Rim Band	前后轮共用；17寸

8_06	51270-YQ1N-0000	51270-YQ1N-0000	前轮圈组合	Front rim combination	含轮毂组合-轮圈-辐条组合
8_07	~~51271-YQ1A-0100~~	~~51271-YQ1A-0100~~	轮圈	Rim	前后轮共用　17寸*1.4
8_08	51290-YQ1A-0000	51290-YQ1A-0000	前辐条组合（内）	Front Spoke combination,　Inner	12G/190
	51290-YQ1A-0100	51290-YQ1A-0100	前辐条组合（外）	Front Spoke combination,　Outer	12G/190
8_09	51210-YQ1N-0000	51210-YQ1N-0000	前轮毂组合	Front Wheel Hub combination	
8_10	51261-YQ2A-0000	51261-YQ2A-0000	前轮衬套	Front Wheel Bushing	自带O形圈
8_11	Z-6804-32-20-07	Z-6804-32-20-07	前轮轴承	Front Wheel Axle	深沟球轴承61804-Φ20*Φ32*7
8_12	52171-YQ2A-0001	52171-YQ2A-0001	前碟刹盘	Front Brake Disc	Φ203mm
8_13	FB03-006-05-010-F3	FB03-006-05-010-F3	前碟刹安装螺钉	Front Brake Disc Mounting Screws	内梅花盘头螺钉M5*10(碟盘自带)
8_14	51200-YQ1N-Z1	51200-YQ1N-Z1	前轮大组合	Front wheel big combination	


零部件图册-09

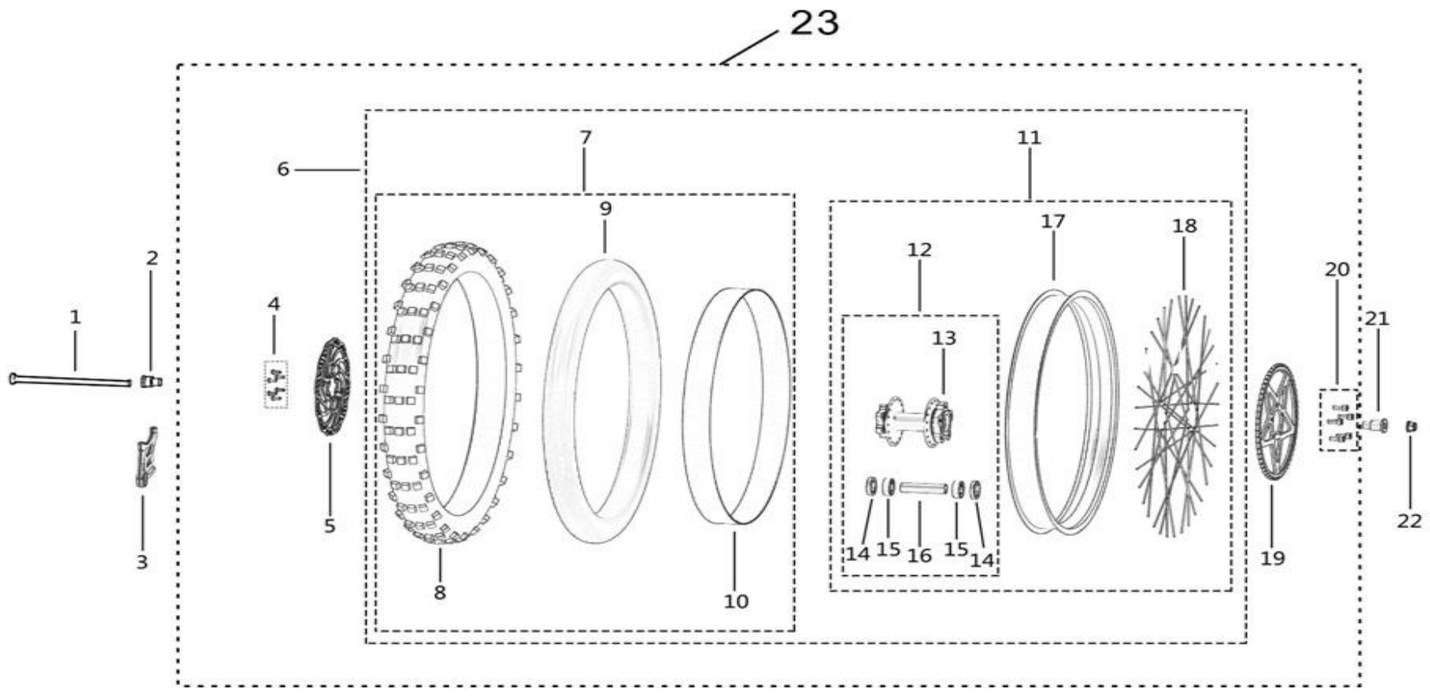

序号	零部件代码	物料代码	零部件名称		物料描述
9_01	51350-YQ2A-0000	51350-YQ2A-0000	后轮轴	Rear-Wheel Axle	Φ12*180-M12*1.25
9_02	51362-YQ2A-0000	51362-YQ2A-0000	后轮左台阶衬套	Rear-Wheel Left Setback Bushing	Φ12-Φ15-Φ20-Φ28-27
9_03	52280-YQ2A-0000	52280-YQ2A-0000	后制动钳支架	Rear Brake Clip Bracket	
9_04	FB03-006-06-013-F3	FB03-006-06-013-F3	后碟刹盘安装螺钉	Rear Brake Disc Mounting Screws	内梅花盘头螺钉M6*12(碟盘自带)
9_05	52271-YQ2A-0001	52271-YQ2A-0001	后碟刹盘	Rear Brake Disc	Φ203
9_06	51300-YQ1N-0000	51300-YQ1N-0000	后轮总成	Rear wheel Assy.	
9_07	51230-YQ1A-0000	51230-YQ1A-0000	轮胎组合	Tire combination	前后轮共用
9_08	51231-YQ1A-0000	51231-YQ1A-0000	外胎	Tire	前后轮共用；70/100-17

9_09	51232-YQ1A-0000	51232-YQ1A-0000	内胎	Inner tube	前后轮共用；2.00/2.25-17
9_10	51266-YQ1A-0000	51266-YQ1A-0000	轮圈垫带	Rim Band	前后轮共用；17寸
9_11	51370-YQ1N-0000	51370-YQ1N-0000	后轮圈组合	Rear rim combination	后轮毂组合-轮圈-辐条部装
9_12	51310-YQ1N-0000	51310-YQ1N-0000	后轮毂组合	Rear wheel combination	铝合金-锻造-带轴承-油封-内衬套
9_13	51311-YQ1N-0000	51311-YQ1N-0000	后轮毂	Rear Wheel	喷砂阳极氧化黑色
9_14	B7-001-20-37-7	B7-001-20-37-7	后轮毂油封	Rear wheel oil seal	TC油封(Φ20-Φ37-7)
9_15	Z-6202-35-15-11	Z-6202-35-15-11	后轮毂轴承	Rear Wheel Axle	深沟球轴承6202-Φ15*Φ35*11
9_16	51363-YQ2A-0000	51363-YQ2A-0000	后轮毂内衬套	Rear-Whel Hub Inner Bushing	Φ19*Φ15*74
9_17	51271-YQ1A-0000	51271-YQ1A-0000	轮圈	Rim	前后轮共用　17寸*1.4
9_18	51390-YQ1A-0000	51390-YQ1A-0000	内辐条组合	Inner Spoke combination	12G-185.5
	51390-YQ1A-0100	51390-YQ1A-0100	外辐条组合	Outer Spoke combination	12G-185.5
9_19	13204-YQ1N-0000	13204-YQ1N-0000	后链轮	Sprocket (58T)	58/420-黑色
9_20	B3-001-08-016-F0		后链轮安装螺钉	Sprocket (48T) Mounting Screws	内六角圆柱头螺钉（M8*16）

9_21	51361-YQ2A-0000	51361-YQ2A-0000	后轮右台阶衬套	Rear-Wheel Right Setback Bushing	Φ12-Φ15-Φ20-Φ28-34
9_22	B2-006-12-F2		后轮轴螺母	Rear-Wheel Shaft Nut	六角法兰面锁紧螺母（M12*1.25）
9_23	51300-YQ1N-Z1	51300-YQ1N-Z1	后轮大组合	Rear-Wheel combination	

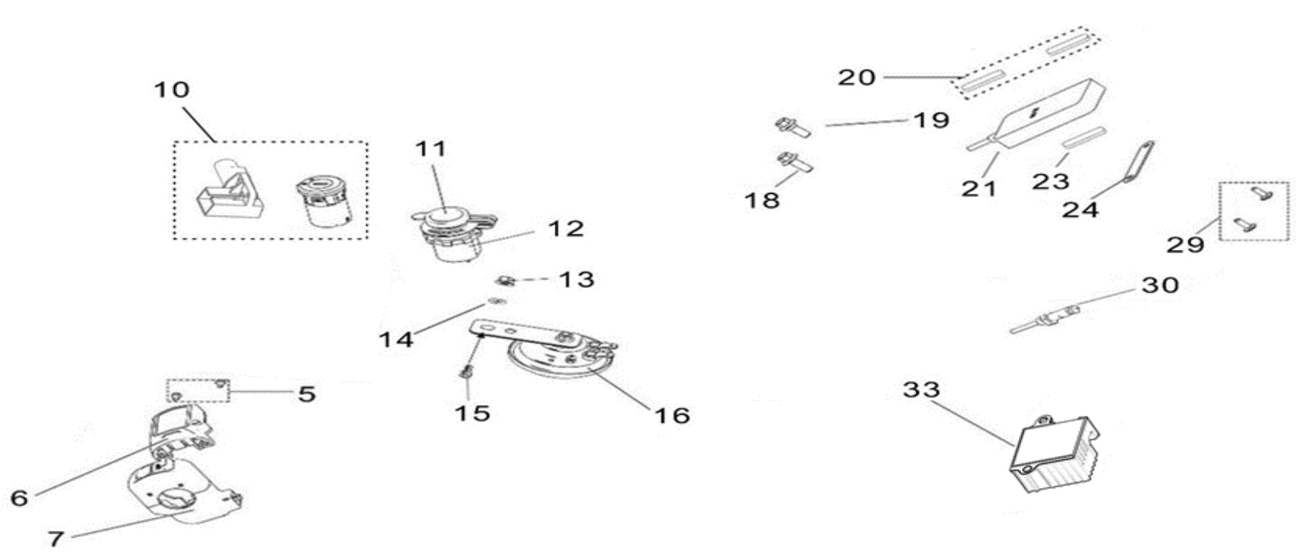


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
10_05	B3-006-002-F1		仪表固定螺钉	Speedometer Fixing Nut	十字头自攻钉(ST2.9*9.5)
10_06	25100-YQ1N-0000	25100-YQ1N-0000	仪表	Speedometer	SEGWAY
10_07	23200-YQ1N-0000	23200-YQ1N-0000	左组合开关	Left Combination Switch	喇叭按钮红色
10_10	27000-YQ1N-0000	27000-YQ1N-0000	全车锁	Vehicle Lock	带SEGWAY标识
10_11	24601-YQ2A-0000	24601-YQ2A-0000	USB防水胶帽	USB Waterproof rubber cap	
10_12	24600-YQ2A-0000	24600-YQ2A-0000	USB接口	USB Interface	
10_13	B2-006-06-F2		喇叭安装螺母	Horn Mounting Nut	六角法兰面锁紧螺母（M6）

零部件图册-10

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
10_14	B4-001-06-F1		喇叭安装平垫片	Horn Mounting Plain Washer	平垫片（Φ6）
10_15	B3-001-06-016-F0		喇叭安装螺钉	Horn Mounting Screw	内六角圆柱头螺钉（M6*16）
10_16	29310-NM1A-0000	29310-NM1A-0000	喇叭	Horn	单喇叭-1.5A/12V-3C-EC-黑色
10_18	B1-008-06-016-F2		电池锁座安装螺钉A	Battery Lock Base Mounting Screw A	六角法兰面螺栓（M6*16）
10_19	FB01-003-06-016-F2		电池锁座安装螺钉B	Battery Lock Base Mounting Screw B	六角法兰面台阶螺栓（M6*16）
10_20	81173-YQ2A-0000	81173-YQ2A-0000	上缓冲泡沫	Upper Caushion Foam	
10_21	21280-YQ1N-0000	21280-YQ1N-0000	蓝牙中控	Bluetooth Central Control	SEGWAY出口-X160蓝牙盒子-附SN单品条码
10_23	81174-YQ2A-0000	81174-YQ2A-0000	下缓冲泡沫	Lower Caushion Foam	
10_24	21230-YQ2A-0000	21230-YQ2A-0000	固定支架	Fixed Support	
10_29	FB03-003-04-013-F3		固定螺钉	Fixed Screw	十字头双线自攻钉（M4*13）
10_30	23400-YQ2A-0000	23400-YQ2A-0000	侧支架熄火开关总成	Kickstand Stop Switch Assembly	
10_33	21300-YQ2A-0000	21300-YQ2A-0000	转换器总成	Converter Assy.	


零部件图册-11

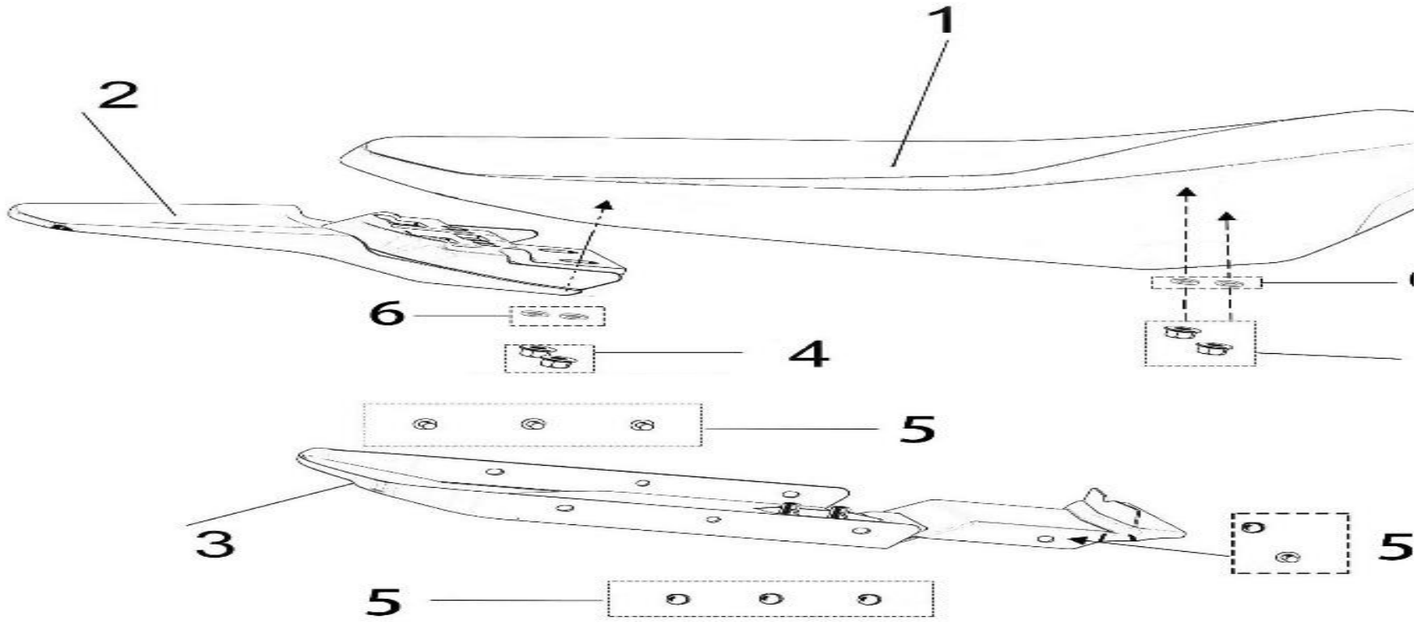

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)

11_01	32300-YQ1N-0000	32300-YQ1N-0000	座垫总成	Seat (Plastic)	皮革拼接-丝印SEGWAY标
11_02	31321-YQ2A-0000	31321-YQ2A-0000	后挡泥板	Rear Fender	备件附贴纸
11_03	31340-YQ2A-0000	31340-YQ2A-0000	后挡泥内板	Rear Fender Inner Plate (Plastic)	
11_04	B2-012-06-F2		座垫安装螺母	Seat Mounting Nut	非金属嵌件六角法兰面锁紧螺母（M6）
11_05	B5-004-R5075		后挡泥内板安装螺钉	Rear Fender Inner Plate Mounting Screws	尼龙铆钉-R5075
11_06	B4-001-6-F1		座垫安装平垫	Seat Mounting Plain Washer	平垫（Φ6）


零部件图册-12

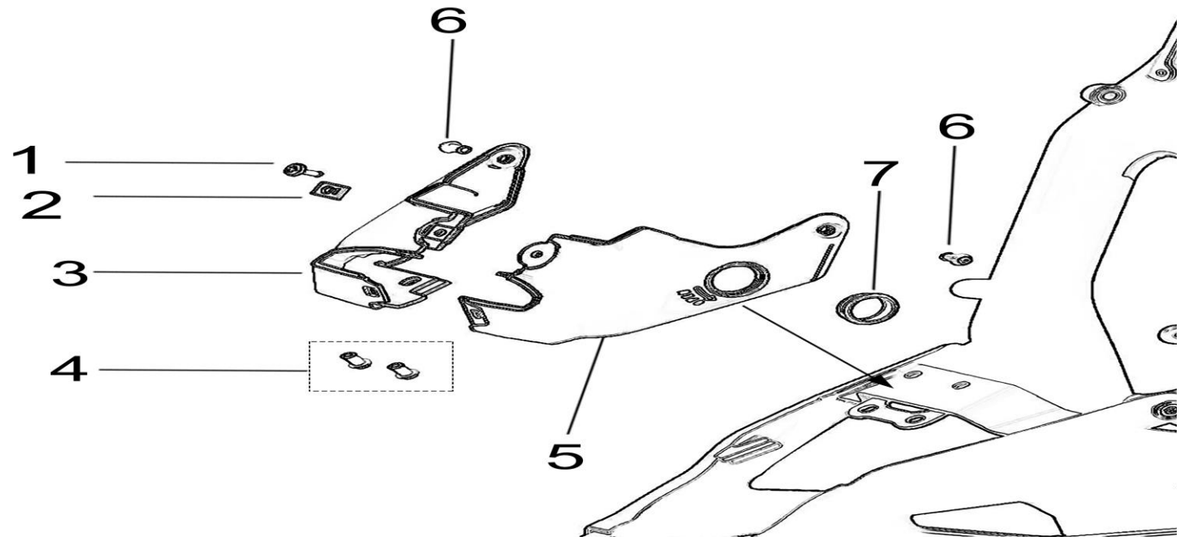

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
12_01	B3-006-003-F3		电池锁座装饰罩左右连接螺钉	Decoration Cov,Btry Lock Bracket Left and Right Connecting Screws	十字头自攻钉（ST4.2*13）
12_02	FB04-001-04-F2		电池锁座装饰罩左右连接自攻夹	Decoration Cov,Btry Lock Bracket Left and Right Connecting Self-Tapping Clip	自攻夹（M4）
12_03	32351-YQ2A-0000	32351-YQ2A-0000	电池锁座左装饰罩	L Decoration Cov,Btry Lock Bracket (P)	

12_04	FB03-001-06-012-F0		电池锁座装饰罩安装螺钉B	Decoration Cov,Btry Lock Bracket Mounting Screw B	内六角盘头螺钉(M6*12)
12_05	32352-YQ2A-0000	32352-YQ2A-0000	电池锁座右装饰罩	R Decoration Cov,Btry Lock Bracket (P)	
12_06	B3-002-06-010-F0		电池锁座装饰罩安装螺钉A	Decoration Cov,Btry Lock Bracket Mounting Screw A	内六角平圆头螺钉(M6*10)
12_07	27516-YQ2A-0000	27516-YQ2A-0000	电池箱锁装饰圈	Decoration Ring, Btry Compartment Lock	

零部件图册-13

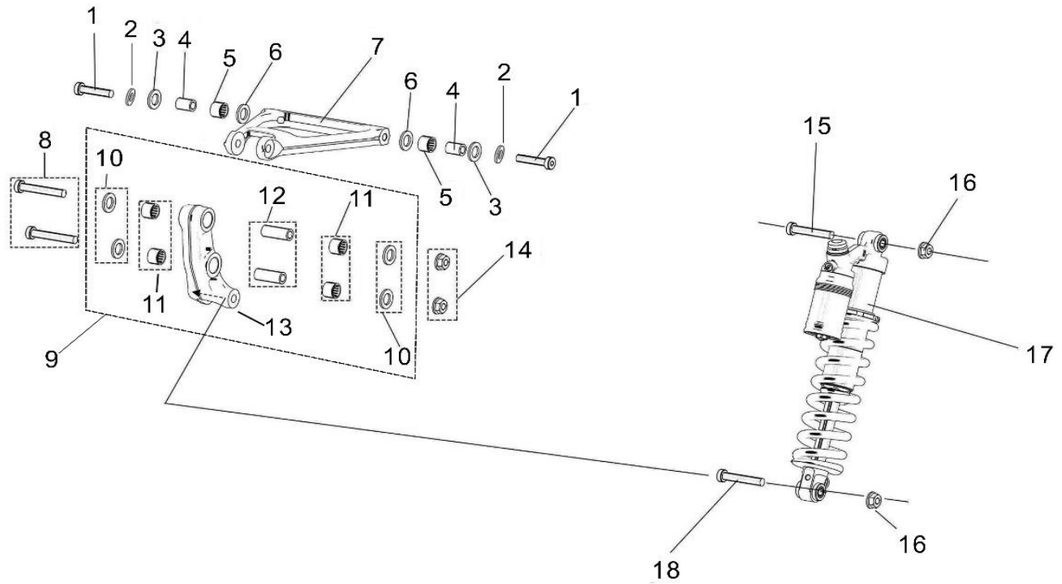


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
13_01	B3-001-08-035-F2		连杆安装螺栓	Connecting Mounting Bolts	内六角圆柱头螺钉(M8*35)
13_02	B4-001-08-F1		连杆安装平垫片	Connecting Mounting Plain Washer	平垫（Φ8）

13_03	55163-YQ2A-0000	55163-YQ2A-0000	尼龙垫片	Nylon Washer	Φ12-Φ20-2
13_04	55162-YQ2A-0000	55162-YQ2A-0000	连杆衬套	Connection Rod Bushing	Φ8-Φ12-16.5
13_05	Z-HK1212-16-12-12		摇架满针轴承	Rock Arm Full Needle Bearing	满针轴承Φ12-Φ16-12
13_06	55163-YQ2A-0000	55163-YQ2A-0000	尼龙垫片	Nylon Washer	Φ12-Φ20-2
13_07	55148-YQ2A-0000	55148-YQ2A-0000	后减连杆	Rear Absorber Connection Rod	
13_08	B3-001-08-055-F2		后减摇架安装轴	Rear Absorber Rock Arm Mounting Shaft	内六角圆柱头螺钉(半螺纹L55-M8)
13_09	55140-YQ1A-0001	55140-YQ1A-0001-Y7	后摇架总成	Rear Rock Arm	喷砂阳极红色

零部件图册-13

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
13_10	B7-001-12-16-3	B7-001-12-16-3	摇架油封	Rock Arm Oil Seal	TC油封Φ12-Φ16-3
13_11	Z-HK1212-16-12-12		摇架满针轴承	Rock Arm Full Needle Bearing	满针轴承Φ12-Φ16-12
13_12	55142-YQ2A-0000	55142-YQ2A-0000	摇架衬套	Rock Arm Bushing	衬套Φ8-Φ12-30
13_13	55141-YQ1A-0000	55141-YQ1A-0000-Y7	摇架	Rock Arm	喷砂阳极红色
13_14	B2-006-08-F2		后摇架安装螺母	Rear Rock Arm Mounting Nut	六角法兰面锁紧螺母（M8）
13_15	B3-001-08-050-F2		后减震上安装螺钉	Rear Absorber Top Mounting Screws	内六角圆柱头螺钉（M8）
13_16	B2-006-08-F2		后减震安装螺母	Rear Absorber Mounting Nut	六角法兰面锁紧螺母（M8）
13_17	55110-YQ1N-0000	55110-YQ1N-0000	后减震总成	Rear Absorber (DNM)	红色弹簧350磅/英寸
13_18	B3-001-08-045-F2		后减震下安装螺钉	Rear Absorber Bottom Mounting Screws	内六角圆柱头螺钉（M8）

零部件图册-14

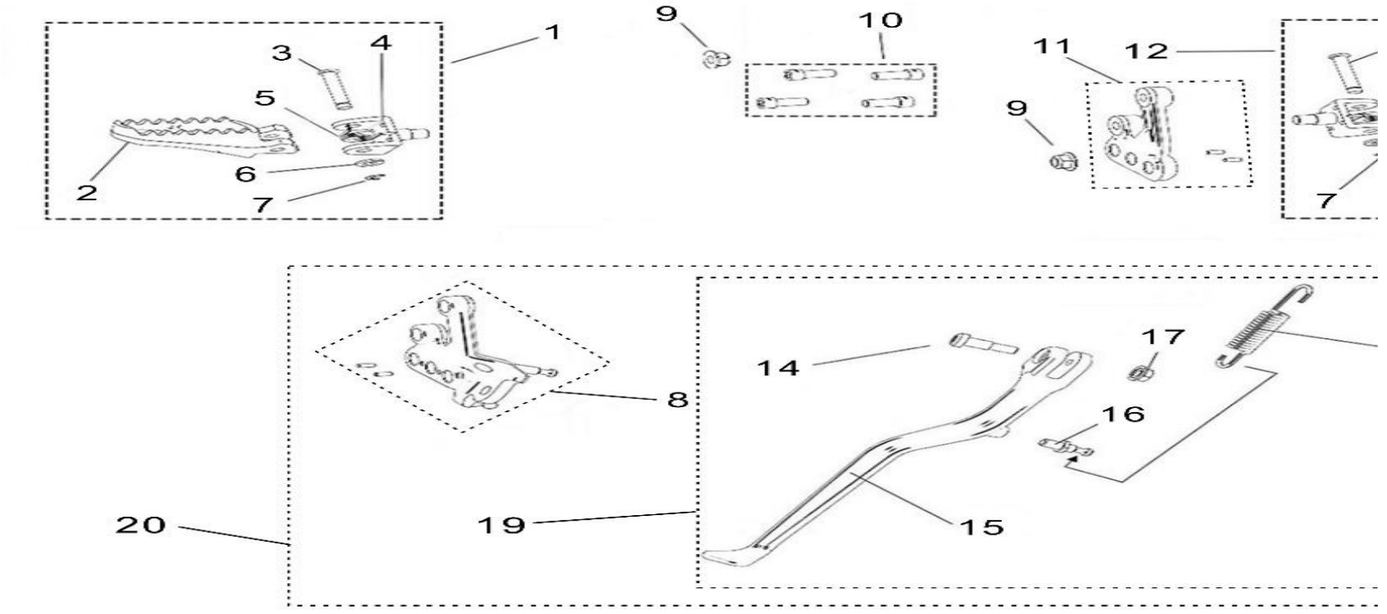


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
14_01	42100-YQ2A-0000	42100-YQ2A-0000	左脚蹬总成	Left Foot Peg Assy.	
14_02	42111-YQ2A-0000	42111-YQ2A-0000-Y5	左脚蹬	Left Foot Peg	喷砂阳极-铁灰色

14_03	42116-YQ2A-0000	42116-YQ2A-0000	脚蹬安装销	Foot Peg Mounting Pin	Φ8*37
14_04	42122-YQ2A-0001	42122-YQ2A-0001	脚蹬连接支架	Left Foot Peg Bracket	
14_05	42115-YQ2A-0000	42115-YQ2A-0000	脚蹬回位簧	Foot Peg Return Spring	
14_06	B4-001-08-F1		脚蹬平垫片	Foot Peg Plain Washer	平垫（Φ8）
14_07	B4-007-06-F1		脚蹬卡簧片	Foot Peg Clip	开口挡圈（内径Φ6）
14_08	42112-YQ2A-0000	42112-YQ2A-0000	左脚蹬支架	Left Foot Peg Bracket	

零部件图册-14

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
14_09	B2-006-10-F2		脚蹬连接支架安装螺母	Foot Peg Bracket Mounting Nut	六角法兰面锁紧螺母（M10*1.25）
14_10	B3-001-08-020-F0		脚蹬总成安装螺钉	Foot Peg Assy. Mounting Screws	内六角圆柱头螺钉（M8*20）
14_11	42212-YQ2A-0000	42212-YQ2A-0000	右脚蹬支架	Right Foot Peg Bracket	
14_12	42200-YQ2A-0000	42200-YQ2A-0000	右脚蹬总成	Right Foot Peg Assy.	
14_13	42211-YQ2A-0000-Y5	42211-YQ2A-0000-Y5	右脚蹬	Right Foot	喷砂阳极-铁灰色
14_14	41559-YQ2A-0000	41559-YQ2A-0000	侧支架安装螺钉	Side Stand Nut	台阶螺栓-M8*30
14_15	41550-YQ1A-0000	41550-YQ1A-0000	侧支架	Side Stand	
14_16	41555-YQ2A-0000	41555-YQ2A-0000	侧支架弹簧挂销B	Side Stand Spring Pin B	
14_17	B2-006-08-F2		侧支架安装螺母	Side Stand Mounting Nut	六角法兰面锁紧螺母(M8)
14_18	41556-YQ2A-0000	41556-YQ2A-0000	侧支架弹簧	Side Stand Spring	Φ3*L100-有效圈数15
14_19	41550-YQ1A-Z1	41550-YQ1A-Z1	侧支架总成	Side Stand Assy.	
14_20	41550-YQ1A-Z2	41550-YQ1A-Z2	侧支架大总成	Side Stand Big Assy.	

零部件图册-15

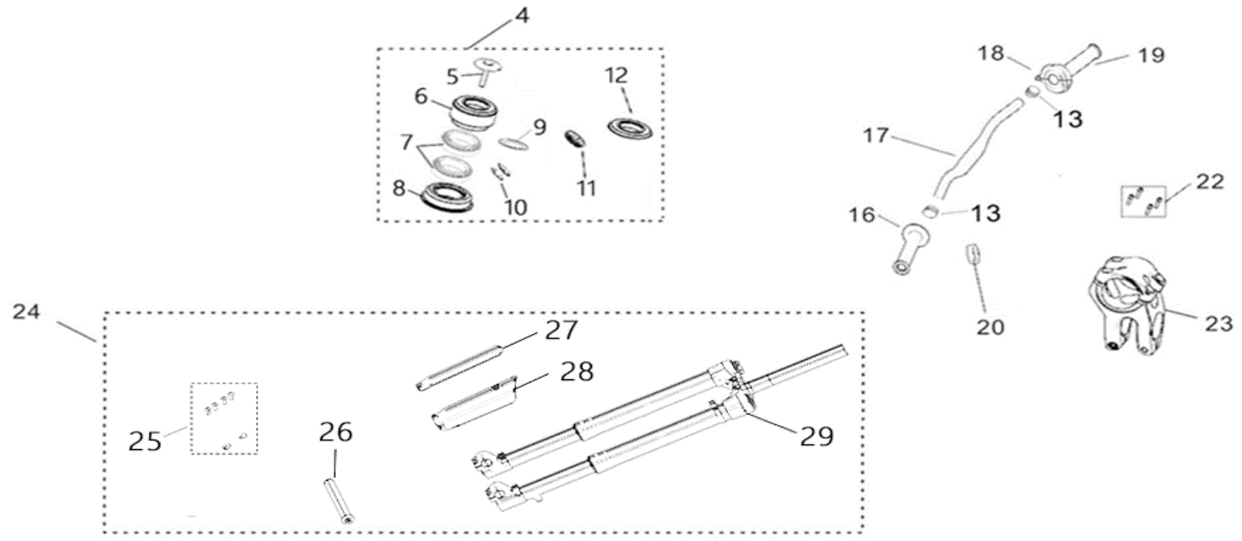

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
15_04	51180-YQ2A-0200	51180-YQ2A-0200	方向碗组总成	Steering Headset Assy.	锥度碗组套件


15_05	51185-YQ2A-0100	51185-YQ2A-0100	把立锁紧盖装饰螺钉组合	Stem Lock Cover Decorative Screw Combination	
15_06	51181-YQ2A-0200	51181-YQ2A-0200	碗组上轴承座	Upper Bearing Base of Headset	
15_08	51182-YQ2A-0200	51182-YQ2A-0200	碗组下轴承座	Lower Bearing Base of Headset	
15_09	51186-YQ2A-0001	51186-YQ2A-0001	碗组下垫圈	Lower Washer of Headset	
15_10	51187-YQ2A-0000	51187-YQ2A-0000	碗组花芯	Headset Core	
15_11	51184-YQ2A-0100	51184-YQ2A-0100	开口卡环	Open Snap Ring	
15_12	51183-YQ2A-0100	51183-YQ2A-0100	碗组上防尘盖	Upper Dust Cover of Headset	

零部件图册-15

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
15_07	HRB-32906X-47-30-12	HRB-32906X-47-30-12	锥度轴承	Taper Bearing	
15_13	51155-YQ2A-0000	51155-YQ2A-0000	手把管堵头	Handle Tube End Cap	黑色橡塑
15_16	23810-YQ1N-0000	23810-YQ1N-0000	左手把胶	Left Handlebar Grip	黑色
15_17	51150-YQ1N-0000	51150-YQ1N-0000	方向把管	Steering Bar	Φ31.8/Φ22-720mm-带调整刻度线-无SURRON标
15_18	23900-YQ1A-0000	23900-YQ1A-0000	电子油门	Electronic throttle	
15_19	23820-YQ1N-0000	23820-YQ1N-0000	右手把胶	Right Handlebar Grip	黑色
15_20	51195-YQ2A-0000	51195-YQ2A-0000	方向把立垫圈A	Handle Bar Stem Washer A	Φ34*Φ29*10
	51196-YQ2A-0000	51196-YQ2A-0000	方向把立垫圈B	Handle Bar Stem Washer B	Φ34*Φ29*15
15_22	B8-001-05-022-F0		方向把锁紧螺钉	Handle Bar Lock Screw	M5*22-带垫
15_23	51190-YQ1N-0000	51190-YQ1N-0000	方向把立组合	Handle Bar Stem combination	SEGWAY标
15_24	51000-YQ1A-0000	51000-YQ1A-0000	前叉总成	Front Fork Assy.	单肩-L550-S150
15_25	B3-002-05-006-F0	B3-002-05-006-F0	减震护板安装螺钉	Absorber Protection Plate Mounting Screws	
15_26	51250-YQ1A-0000	51250-YQ1A-0000	前轮轴总成	Front Wheel Axle Assy	

15_27	32280-YQ1A-0000	32280-YQ1A-0000	减震右护板	Absorber R. Protection Plate (DNM)	
15_28	32270-YQ1A-0000	32270-YQ1A-0000	减震左护板	Absorber L. Protection Plate (DNM)	


零部件图册-16

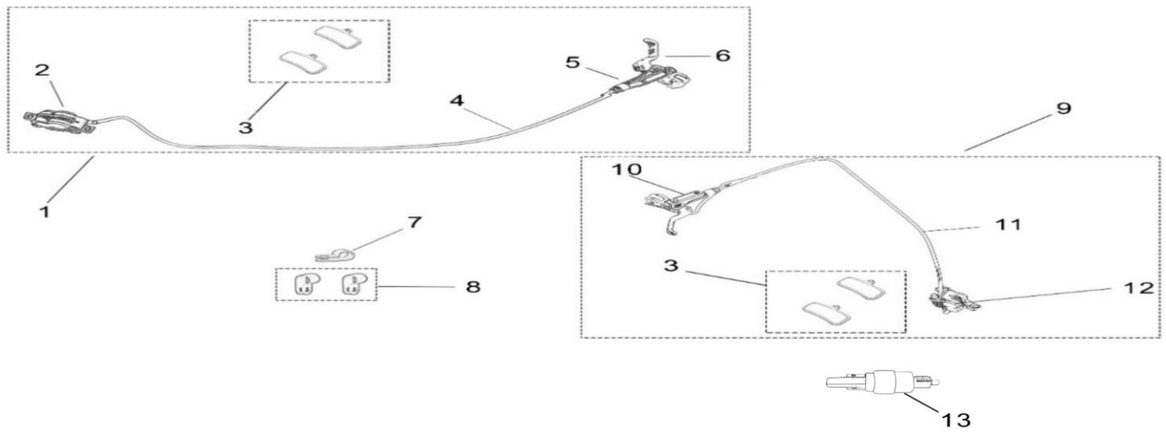

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
16_01	52200-YQ1N-0100	52200-YQ1N-0100	后制动系统	Rear Brake System	无虬龙logo
16_02	52190-YQ1N-0000	52190-YQ1N-0000	制动钳总成	Rear Brake Clip Assy.	前后轮共用，无虬龙logo（自带安装螺钉M6*18-带垫）
16_03	52191-YQ2B-0100	52191-YQ2B-0100	制动蹄片	Brake Shoe	
16_04	52240-YQ2A-0000	52240-YQ2A-0000	后制动油管	Rear brake Hose	
16_05	52210-YQ1N-0000	52210-YQ1N-0000	后制动主泵总成	Rear Brake Pump Assy.	无虬龙logo

16_06	52111-YQ2B-0000	52111-YQ2B-0000	刹车手柄	Brake Lever	
16_07	81138-YQ2A-0000	81138-YQ2A-0000	尼龙线夹2	Nylon Clip 2	
16_08	81137-YQ2A-0000	81137-YQ2A-0000	尼龙线夹1	Nylon Clip 1	
16_09	52100-YQ1N-0100	52100-YQ1N-0100	前制动系统	Front Brake Assy.	无虬龙logo
16_10	52110-YQ1N-0000	52110-YQ1N-0000	前制动主泵总成	Front Brake Pump Assy.	无虬龙logo
16_11	52140-YQ2A-0000	52140-YQ2A-0000	前制动油管	Front brake Hose	
16_12	52190-YQ1N-0000	52190-YQ1N-0000	制动钳总成	Rear Brake Clip Assy.	前后轮共用，无虬龙logo（自带安装螺钉M6*18-带垫）
16_13	52120-YQ2B-0000	52120-YQ2B-0000	刹车断电开关（含前后）	Brake power off switch	线长520mm


零部件图册-17

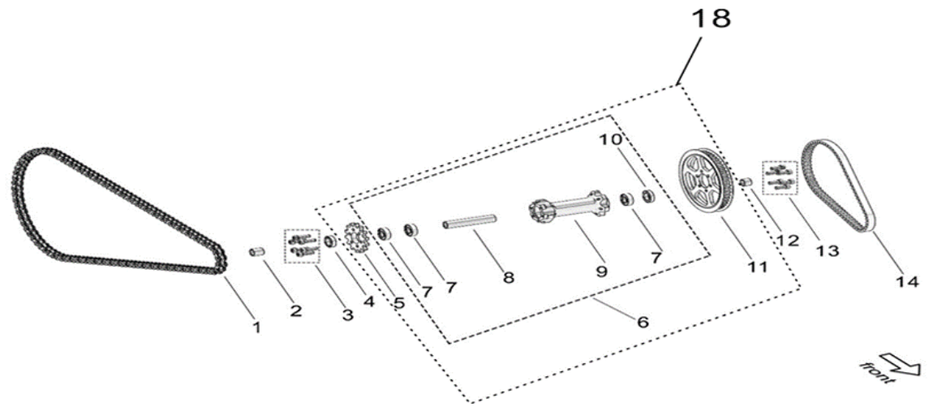


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
17_01	13114-YQ1A-0000	13114-YQ1A-0000	金色滚子链条	Golden Chain	420-112节
17_02	61234-YQ2A-0000	61234-YQ2A-0000	中轴右衬套	R. Bushing, Intermediate Shaft	Φ10-Φ15-17
17_03	B3-003-06-025-F3		输出轴链轮安装螺钉	Sprocket, Output Shaft Mounting Screw	内六角沉头螺钉（M6*25）
17_04	B7-001-15-24-7	B7-001-15-24-7	中轴套右油封	R. Oil Seal, Intermediate Shaft Sleeve	TC油封（Φ15-Φ24-7）
17_05	13105-YQ2A-0000	13105-YQ2A-0000	输出轴链轮	Sprocket, Output Shaft	14/420
17_06	61280-YQ1N-0000	61280-YQ1N-0000	中轴套组合	Intermediate Shaft Sleeve combination	无虬龙logo

17_07	Z-6000-2Z-26-10-08	Z-6000-2Z-26-10-08	平叉中轴套轴承	Rear Fork Mid. Shaft Bush Assy.	深沟球轴承6000-2Z
17_08	61282-YQ2A-0001	61282-YQ2A-0001	中轴套中衬套	Middle Bushing, Intermediate Shaft Sleeve	Φ10-Φ15-73mm
17_09	61281-YQ2A-0001	61281-YQ2A-0001	中轴套	Intermediate Shaft Sleeve	
17_10	B7-001-15-26-6	B7-001-15-26-6	中轴套左油封	L. Oil Seal, Intermediate Shaft Sleeve	TC油封（Φ15-Φ26-6）
17_11	13202-YQ2A-0100	13202-YQ2A-0100	后皮带轮	Rear Belt Pulley	HTD同步皮带轮-8M
17_12	61233-YQ2A-0000	61233-YQ2A-0000	中轴左衬套	L. Bushing, Intermediate Shaft	4Φ10-Φ15-12
17_13	B3-001-06-016-F0		大皮带轮安装螺钉	Big Belt Pulley Mounting Screw	内六角圆柱头螺钉（M6*16）
17_14	13111-YQ2A-0100	13111-YQ2A-0100	皮带	Belt	HTD 8M
17_18	61270-YQ1N-Z1	61270-YQ1N-Z1	中轴套-链轮-皮带轮组合	Inter Shaft Slv-Sprkt-Belt Pulley comb	

零部件图册-18

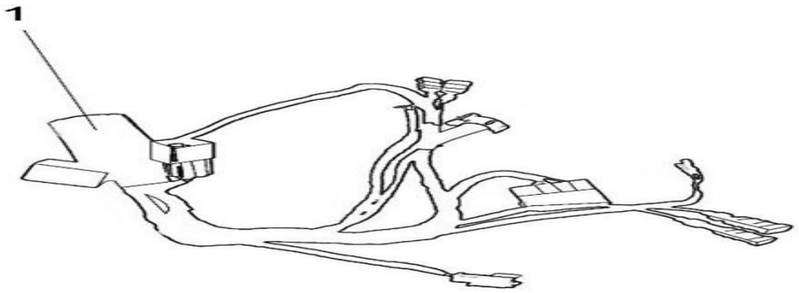


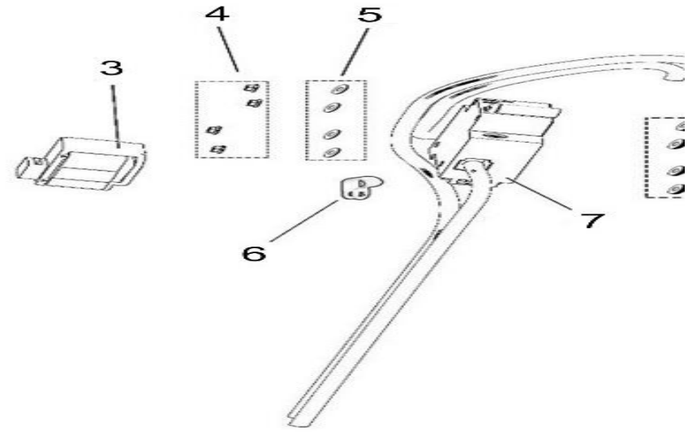

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
18_01	24100-YQ2N-0000	24100-YQ2N-0000	主电缆总成	Main Wire Assy.	
18_03	21250-YQ2A-0000	21250-YQ2A-0000	倾倒传感器	Dump Sensor	
18_04	B2-012-03-F2		空开安装固定螺母	Air Switch Mounting Fixed Nut	六角法兰面防滑螺母（M3）
18_05	B4-001-04-F1		空开安装固定垫片	Air Switch Mounting Fixed Wahser	平垫（Φ4）

18_06	81153-NM1A-0000	81153-NM1A-0000	尼龙线夹3	Nylon Clip 3	
18_07	23500-YQ2A-0000	23500-YQ2A-0000	单相断路器	Single - Phase Circuit Breaker	
18_08	81125-YQ2A-0000	81125-YQ2A-0000	隔离垫	Isolation Pad	尼龙垫片（Φ7*Φ3.2*5）
18_09	B3-001-03-040-F2		空开安装螺钉	Air Switch Mounting Screws	内六角圆柱头螺钉（M3*40）


零部件图册-19

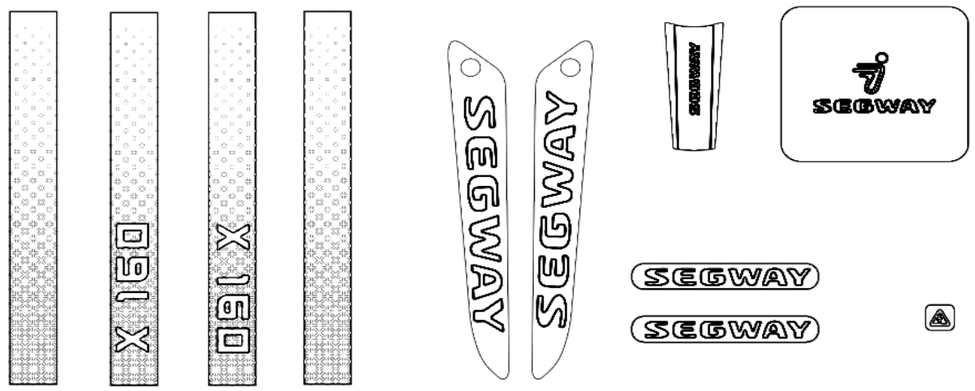

Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
19_01	82400-YQ1N-0000	82400-YQ1N-0000	全车贴花-黑车红车	Vehicle Sticker-Black&Red	A款 SGEWAY，黑、红色车型适用
	82400-YQ1N-0100	82400-YQ1N-0100	全车贴花-银车	Vehicle Sticker-Silver	B款 SGEWAY，银色车型适用

	82400-YQ1N-0200	82400-YQ1N-0200	全车贴花-蓝车	Vehicle Sticker-Blue	C款 SGEWAY，蓝色车型适用

零部件图册-20

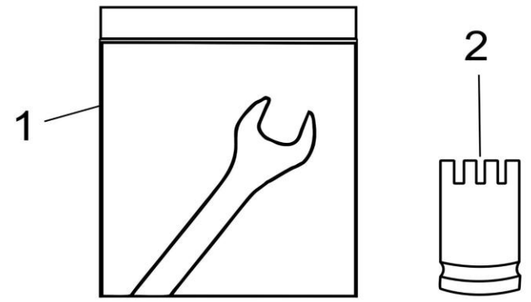


Sr. #	Spare Parts Code	Material Code	Spare Parts Name (CN)	Spare Parts Name (EN)	Material Description (CN)
20_1	82110-YQ2A-0000	82110-YQ2A-0000	随车工具套装	Free tool kit	
20_2	402140401	402140401	四爪套筒	Four-jaw sleeve	14mm


以下新增-20200224

	2020.2.24新增	51268-YQ2A-0000	前轮衬套密封圈	Front Wheel Bushing Seal	O形圈

	2020.2.24新增	51263-YQ1A-0000	前轮轴螺母-KKE	Front Axle Nut-KKE	
	2020.2.24新增	99100-YQ1N-0000	全车紧固件-X160	Whole Vehicle Fastener-X160	

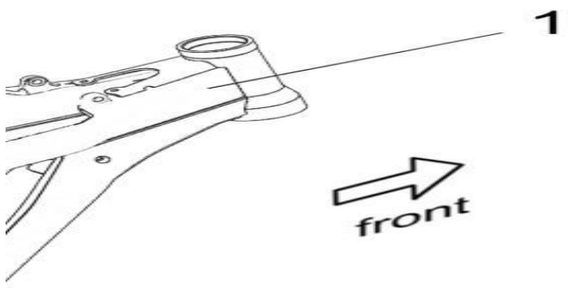

Material Description (EN)	Qty	PN	纳恩博 物料名称
Accessories with stickers	1	BB.00.0004.87	车架焊接总成银色；虬龙-41100-YQ1A-0000-Y2
Accessories with stickers	1	BB.00.0004.88	车架焊接总成黑色；虬龙-41100-YQ1A-0000-Y4
Accessories with stickers	1	BB.00.0004.89	车架焊接总成红色；虬龙-41100-YQ1A-0000-Y7
Accessories with stickers	1	BB.00.0004.90	车架焊接总成蓝色；虬龙-41100-YQ1A-0000-Y11
Black, Accessories with stickers	1	BB.00.0004.31	平叉总成；虬龙-61000-YQ2A-0000-Y4
Black	1	BB.00.0004.32	尾架总成；虬龙-41520-YQ2A-0000
Thin Hex Socket Head Cap Screws (M8 * 20)	4	CA.50.0001.46	薄形内六角圆柱头螺钉；虬龙P/N：B3-009-08-020-F0
Round nut (M10 * 1.0)	1	CA.50.0001.47	圆螺母；虬龙P/N：B4-008-10-F0
Φ10*198-M10*1.0	1	CA.00.0004.13	平叉中轴；虬龙-61260-YQ2A-0000
Plain Washer (Φ10-Φ20-2)	1	CA.50.0001.48	平垫；虬龙P/N：B4-001-10-F1

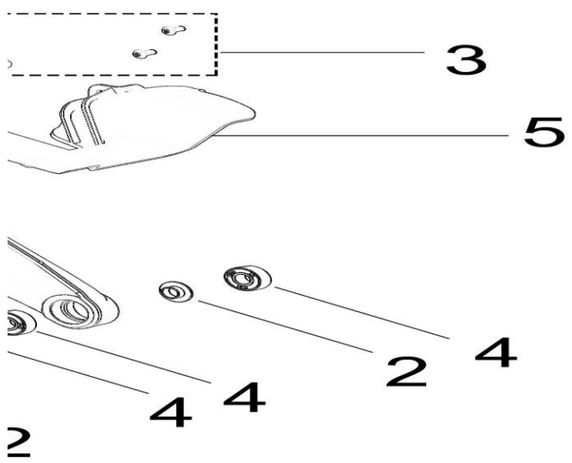

Material Description (EN)	Qty		
	1		
Step washer (Φ10 * Φ15 * Φ22-2)	2	CA.50.0001.49	台阶垫片；虬龙P/N：FB05-005-10-15-22-2
Inner Hexagon Socket Head Cap Screw (M5 * 10)	3	CA.50.0001.50	内六角平圆头螺钉；虬龙P/N：B3-002-05-010-F0
Deep groove ball bearing 6000-2Z-Φ10*Φ26*8	4	CC.00.0001.50	平叉中轴套轴承；虬龙-Z-6000-2Z-26-10-08
	1	CB.00.0008.94	中轴套护罩；虬龙-32120-YQ2A-0000
Hexagon Nut M6	2	CA.50.0001.51	六角螺母；虬龙P/N：B2-001-06-F2
Hexagon Bolt-Full Thread-M6 * 35	2	CA.50.0001.60	内六角平圆头螺钉；虬龙P/N：B3-002-06-012-F1
	2	BB.00.0004.33	调节器；虬龙-61210-YQ2A-0000
Inner Hexagon Socket Head Cap Screw (M5 * 10)	1	CA.50.0001.50	内六角平圆头螺钉；虬龙P/N：B3-002-05-010-F0


Material Description (EN)	Qty		
	1	CB.00.0008.95	链盒；虬龙-32223-YQ2A-0000
Inner Hexagon Socket Head Cap Screw -M6 * 12	2	CA.50.0001.53	内六角盘头螺钉；虬龙P/N：FB03-001-06-012-F0
	1	CB.00.0008.96	后轮前挡泥；虬龙-31311-YQ1N-0000
Inner Hexagon Rear Round Head Cap Screw (M5 * 12)	1	CB.00.0008.97	平叉防撞块；虬龙-61237-YQ2A-0000
Plain Washer-Φ5	1	CB.00.0008.98	前挡泥板；虬龙-31211-YQ2B-0000
M5*10	1	CB.00.0008.99	控制器上装饰板；虬龙-21103-YQ2A-0000
	1	CB.00.0008.97	平叉防撞块；虬龙-61237-YQ2A-0000
Φ18*2-Φ9*3.5-Φ6-3	1	CB.00.0008.99	控制器上装饰板；虬龙-21103-YQ2A-0000
Inner Hexagon Socket Head Cap Screw - M5 * 30	1	CB.00.0008.100	#N/A
Flanged Bushing Φ15 * 2-Φ9 * 2-Φ6.5	3	CB.00.0008.101	#N/A
Inner Hexagon Socket Head Cap Screw - M6 * 12	3	CB.00.0008.102	#N/A
	1	CB.00.0008.98	前挡泥板；虬龙-31211-YQ2B-0000

Material Description (EN)	Qty		
	1	BA.00.0002.48	控制器总成；虬龙-21100-YQ1N-0000
Inner Hexagon Socket Head Screw With Rear Spring Washer (M6 * 16)	5	CA.50.0001.59	内六角圆柱头自带平弹垫螺钉；虬龙P/N：B8-001-06-016-F2
Inner Hexagon Socket Rear Round Head Cap Screw (M6 * 12)	2	CA.50.0001.60	内六角平圆头螺钉；虬龙P/N：B3-002-06-012-F1
Inner Hexagon Socket Rear Round Head Cap Screw (M6 * 10)	2	CA.50.0001.60	内六角平圆头螺钉；虬龙P/N：B3-002-06-012-F1
	1	CB.00.0008.99	控制器上装饰板；虬龙-21103-YQ2A-0000
Inner Hexagon Socket Rear Round Head Cap Screw (M6 * 10)	2	CA.50.0001.50	内六角平圆头螺钉；虬龙P/N：B3-002-05-010-F0
	1	CB.50.0002.14	电池充电口防水胶帽；虬龙P/N：26351-YQ2A-0000
48V/20Ah-segway, Accessories with stickers	1	BA.00.0002.49	锂电池总成-48V/20Ah；虬龙-26000-YQ1N-0000
Portable-48-5A-American Standard 110V Wide Voltage-segway	1	BA.00.0002.50	充电器；虬龙-21700-YQ1N-0000
48V battery protection board	1	CB.00.0009.17	电池保护板；虬龙-26220-YQ1N-0000

segway status	1	CD.00.0000.35	电量表；虬龙-26310-YQ1N-0000

Material Description (EN)	Qty		
DC Brushless 2kW- Cancel Brightening Machining	1	BA.00.0002.51	电机头总成；虬龙-11100-YQ1N-0000
TC oil seal Φ25-Φ35-7	1	CC.00.0001.52	电机油封；虬龙-B7-001-25-35-7
C Type Flat Key -(5 * 5 * 16mm)	1	CA.50.0001.62	平键；虬龙P/N：B6-003-05-016
HTD synchronous wheel-8M	1	CA.00.0004.14	前皮带轮；虬龙-13201-YQ2A-0100
Hexagon Flange Face Lock Nut (M12 * 1.25)	1	CA.50.0001.63	六角法兰面锁紧螺母；虬龙P/N：B2-006-12-F2
Self-Tapping Screws PB3.5 * 6	3	CA.50.0001.69	自攻钉；虬龙P/N：FB03-004-006-F2
	1	CB.00.0009.00	前皮带轮护罩内衬；虬龙-32332-YQ2A-0000
	1	CB.00.0009.01	前皮带轮护罩；虬龙-32331-YQ2A-0000
Inner Hexagon Socket Rear Rounded Head Cap Screws M6 * 10	2	CA.50.0001.61	内六角平圆头螺钉；虬龙P/N：B3-002-06-010-F0


Φ8*Φ20-19	2	CA.00.0004.15	电机左安装衬套；虬龙-11216-YQ2A-0000
Inner Hexagon Socket Head Cap Screws M8 * 40	1	CA.50.0001.64	内六角圆柱头螺钉；虬龙P/N：B3-001-08-040-F0
Material Description (EN)	Qty		
	1	CA.00.0004.16	电机头位置调节器；虬龙-11171-YQ2A-0000
	2	CA.00.0004.17	电机头位置调节器压板；虬龙-11172-YQ2A-0000
Inner Hexagon Socket Head Cap Screws M8 * 45	1	CA.50.0001.65	内六角圆柱头螺钉；虬龙P/N：B3-001-08-045-F0
Inner Hexagon Socket Head Cap Screws M8 * 20	1	CA.50.0001.66	内六角圆柱头螺钉；虬龙P/N：B3-001-08-020-F0
Inner Hexagon Socket Head Cap Screws M8 * 20	1	CA.50.0001.67	内六角圆柱头螺钉；虬龙P/N：B3-001-08-025-F0
Butterfly-shape Washer (Φ24 * Φ10 * 1.6-3)	1	CA.50.0001.68	蝶形垫片；虬龙P/N：FB05-002-23-12-1-F3
	1	CH.00.0004.12	控制器霍尔传感器；虬龙-21152-YQ2A-0000

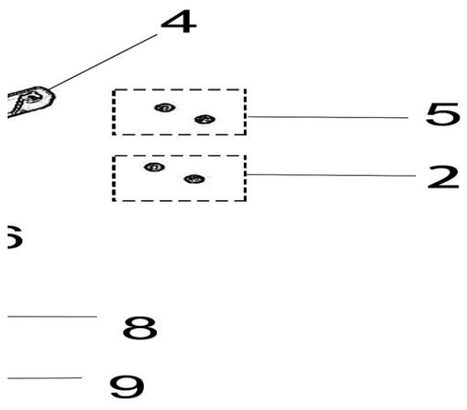

Material Description (EN)	Qty		
	1	CB.00.0008.76	电控锁装饰罩；虬龙-32340-YQ2A-0000
Inner Hexagon Socket Countersunk Head Screws (M5 * 10)	2	CA.50.0001.07	内六角沉头螺钉；虬龙P/N：B3-003-05-010-F0

Open Retaining Ring (Snap Spring)	2	CA.50.0001.08	开口挡圈；虬龙P/N：B4-007-05-F1
	1	CB.00.0008.77	电池左限位块；虬龙-32356-YQ2A-0000
Inner Hexagon Socket Countersunk Head Screws (M5 * 10)	2	CA.50.0001.07	内六角沉头螺钉；虬龙P/N：B3-003-05-010-F0
	1	CB.00.0008.78	电池右限位块；虬龙-32357-YQ2A-0000
	1	CB.00.0008.79	控制器下装饰罩；虬龙-32361-YQ2A-0000
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 10)	2	CA.50.0001.61	内六角平圆头螺钉；虬龙P/N：B3-002-06-010-F0
Material Description (EN)	Qty		
Cross Head Double Line Self-Tapping Screws (M4 * 13)	2	CA.50.0001.09	十字头双线自攻钉；虬龙P/N：FB03-003-04-013-F3
	1	CB.00.0008.80	电池总成下限位；虬龙-32358-YQ2A-0000
Inner Hexagon Socket Countersunk Head Screws (M5 * 12)	5	CA.50.0001.10	内六角沉头螺钉；虬龙P/N：B3-003-05-012-F0
	1	CB.00.0008.81	电池下缓冲泡棉；虬龙-26343-YQ2A-0000
Cross Head Double Line Self-Tapping Screws	2	CA.50.0001.09	十字头双线自攻钉；虬龙P/N：FB03-003-04-013-F3
	1	CB.00.0008.82	带轮小挡泥板；虬龙-32365-YQ2A-0000
Cross Head Double Line Self-Tapping Screws（M4*13）	2	CA.50.0001.09	十字头双线自攻钉；虬龙P/N：FB03-003-04-013-F3
Inner Hexagon Socket Countersunk Head Screws (M5 * 16)	2	CA.50.0001.11	内六角沉头螺钉；虬龙P/N：B3-003-05-016-F0
	1	CB.00.0008.83	电池前限位支撑块；虬龙-32353-YQ2A-0000
	1	CB.00.0008.84	电池总成后挡泥板；虬龙-32355-YQ2A-0000
Inner Hexagon Socket Head Cap Screws (M6 * 12)	2	CA.50.0001.53	内六角盘头螺钉；虬龙P/N：FB03-001-06-012-F0
Hexagonn Flange Face Lock Nut (M5)	2	CA.50.0001.12	六角法兰面锁紧螺母；虬龙P/N：B2-006-05-F2
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 12)	2	CA.50.0001.13	内六角平圆头螺钉；虬龙P/N：B3-002-06-012-F0
	1	CB.00.0008.85	电池前缓冲泡棉；虬龙-26341-YQ2A-0000

	1	BB.00.0004.22	电池锁座挂钩；虬龙-26290-YQ2A-0000
	1	CB.00.0008.86	电池仓盖缓冲胶；虬龙-32233-YQ2A-0000
Accessories with stickers	1	CB.00.0008.87	电池仓盖；虬龙-32231-YQ2A-0000
Hexagon Nut (M6)	2	CA.50.0001.51	六角螺母；虬龙P/N：B2-001-06-F2
Metal label-with adhesive-SEGWAY logo	1	CA.00.0004.44	电池仓盖标牌；虬龙-82129-YQ1N-0000
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 12)	2	CA.50.0001.13	内六角平圆头螺钉；虬龙P/N：B3-002-06-012-F0
	2	CA.00.0004.06	电池仓盖销轴；虬龙-41762-YQ2A-0000

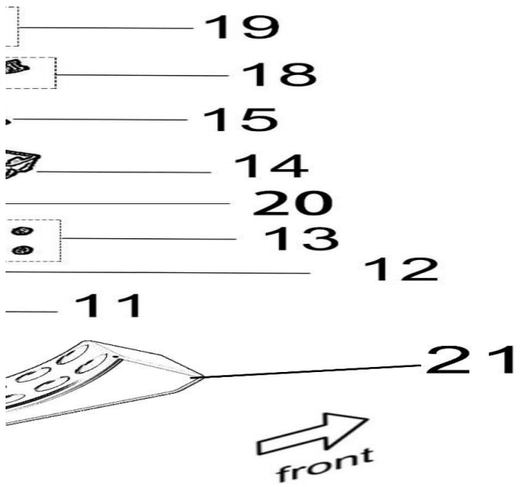

	数量		

	1	CB.00.0008.88	电池总成后支撑板；虬龙-32354-YQ2A-0000
	1	CB.00.0008.89	电池总成下支撑板；虬龙-41690-YQ2A-0000
Inner Hexagon Socket Head Cap Screws (M6 * 16)	2	CA.50.0001.14	内六角盘头螺钉；虬龙P/N：FB03-001-06-016-F0
Inner Hexagon Socket Head Cap Screws (M6 * 10)	2	CA.50.0001.15	内六角圆柱头螺钉；虬龙P/N：B3-001-06-010-F0
Externally Threaded Cylindrical Pin (M6 * 14)	1	CA.50.0001.16	外螺纹圆柱销；虬龙P/N：B4-009-06-014-F0
Thin Hexagon Socket Head Cap Screws (M8 * 20)	4	CA.50.0001.46	薄形内六角圆柱头螺钉；虬龙P/N：B3-009-08-020-F0
Nut Clamp (M8)	4	CA.50.0001.17	螺母夹；虬龙P/N：FB02-003-08-F2
	1	CA.00.0004.07	电机防护罩；虬龙-41750-YQ2A-0000
Material Description (EN)	Qty		
	1	CA.00.0004.08	控制器下右安装支架；虬龙-41740-YQ2A-0000
	1	CA.00.0004.09	控制器下左安装支架；虬龙-41730-YQ2A-0000
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 10)	4	CA.50.0001.61	内六角平圆头螺钉；虬龙P/N：B3-002-06-010-F0
Spring Washer (Φ6)	4	CA.50.0001.18	弹簧垫片；虬龙P/N：B4-002-06-F2
Inner Hexagon Socket Head Cap Screws (M6 * 12)	2	CA.50.0001.19	内六角圆柱头螺钉；虬龙P/N：B3-001-06-012-F0
	1	CA.00.0004.10	控制器上安装支架；虬龙-41710-YQ2A-0000
	1	CA.00.0004.11	电池总成前挡板；虬龙-41670-YQ2A-0000
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 20)	2	CA.50.0001.20	内六角平圆头螺钉；虬龙P/N：B3-002-06-020-F0
Inner Hexagon Socket Rear Rounded Head Cap Screw (M5 * 10)	1	CA.50.0001.50	内六角平圆头螺钉；虬龙P/N：B3-002-05-010-F0
Nut Clip (M6)	2	CA.50.0001.21	螺母夹；虬龙P/N：FB02-001-06-F2
Inner Hexagon Socket Head Cap Screws (M6 * 16)	2	CA.50.0001.22	内六角圆柱头螺钉；虬龙P/N：B3-001-06-016-F0
Spring Washer (Φ6)	2	CA.50.0001.18	弹簧垫片；虬龙P/N：B4-002-06-F2

	1	CB.00.0008.90	电机防撞块；虬龙-41755-YQ2A-0000

With hub combination-rim-spoke combination	1	BB.00.0004.93	前轮圈组合；虬龙-51270-YQ1N-0000
Available for both front and rear wheels 17inch*1.4	1	CA.00.0004.46	轮圈；虬龙-51271-YQ1A-0000
12G/190	18	BB.00.0004.94	前辐条组合（内）；虬龙-51290-YQ1A-0000
12G/190	18	BB.00.0004.95	前辐条组合（外）；虬龙-51290-YQ1A-0100
	1	BB.00.0004.36	前轮毂组合；虬龙-51210-YQ1N-0000
Has O-ring	2	CA.00.0004.18	前轮衬套；虬龙-51261-YQ2A-0000
Deep groove ball bearing 61804-Φ20*Φ32*7	2	CC.00.0001.53	前轮轴承；虬龙-Z-6804-32-20-07
Φ203mm	1	CA.00.0004.19	前碟刹盘；虬龙-52171-YQ2A-0001
Inner Torx Pan Head Screw M5 * 10 (Comes with Disc)	6		
	1	BB.00.0004.96	前轮大组合；虬龙-51200-YQ1N-Z1

	数量		
	1	CA.00.0004.20	后轮轴；虬龙-51350-YQ2A-0000
	1	CA.00.0004.21	后轮左台阶衬套；虬龙-51362-YQ2A-0000
	1	CA.00.0004.22	后制动钳支架；虬龙-52280-YQ2A-0000
Inner Torx Pan Head Screw M6 * 12 (Comes with Disc)	6		
Φ203	1	CA.00.0004.23	后碟刹盘；虬龙-52271-YQ2A-0001
	1	BB.00.0004.97	后轮总成；虬龙-51300-YQ1N-0000
Available for both front and rear wheels	1	BB.00.0004.92	轮胎组合-前后轮共用；虬龙-51230-YQ1A-0000
Available for both front and rear wheels; 70/100-17	1	CB.00.0009.18	外胎-前后轮共用；虬龙-51231-YQ1A-0000
Available for both front and rear wheels; 2.00/2.25-17	1	CB.00.0009.19	内胎-前后轮共用；虬龙-51232-YQ1A-0000
Available for both front and rear wheels; 17 inch	1	CB.00.0009.20	轮圈垫带-前后轮共用；虬龙-51266-YQ1A-0000
Rear hub combination-rim-spokes	1	BB.00.0004.98	后轮圈组合；虬龙-51370-YQ1N-0000
Aluminium Alloy-Forged-With Bearing-Oil Seal-Inner Bushing	1	BB.00.0004.40	后轮毂组合；虬龙-51310-YQ1N-0000
Sandblasted Anodized Black	1		
TC oil seal (Φ20-Φ37-7)	2	CC.00.0001.54	后轮毂油封；虬龙-B7-001-20-37-7
Deep groove ball bearings 6202 (Φ15 * Φ35 * 11)	2	CC.00.0001.55	后轮毂轴承；虬龙-Z-6202-35-15-11
Φ19*Φ15*74	1	CA.00.0004.24	后轮毂内衬套；虬龙-51363-YQ2A-0000
Available for both front and rear wheels 17inch*1.4	1	CA.00.0004.46	轮圈；虬龙-51271-YQ1A-0000
12G-185.5	18	BB.00.0004.99	内辐条组合；虬龙-51390-YQ1A-0000
12G-185.5	18	BB.00.0005.00	外辐条组合；虬龙-51390-YQ1A-0100
58/420-Black	1	CA.00.0004.48	后链轮；虬龙-13204-YQ1N-0000
Inner Hexagon Socket Head Cap Screws (M8 * 16)	5	CA.50.0001.23	内六角圆柱头螺钉；虬龙P/N：B3-001-08-016-F0

Φ12-Φ15-Φ20-Φ28-34	1	CA.00.0004.27	后轮右台阶衬套；虬龙-51361-YQ2A-0000
Hexagon Flange Face Lock Nut (M12 * 1.25)	1	CA.50.0001.63	六角法兰面锁紧螺母；虬龙P/N：B2-006-12-F2
	1	BB.00.0005.01	后轮大组合；虬龙-51300-YQ1N-Z1

Material Description (EN)	Qty		
Cross Head Self-Tapping Screw (ST2.9 * 9.5)	2		
	1	BB.00.0005.02	仪表；虬龙-25100-YQ1N-0000
Horn button red	1	BB.00.0004.46	左组合开关；虬龙-23200-YQ1N-0000
With SEGWAY logo	1	BB.00.0004.47	全车锁；虬龙-27000-YQ1N-0000
	1	CB.00.0009.02	USB防水胶帽；虬龙-24601-YQ2A-0000
	1	BB.00.0004.48	USB接口；虬龙-24600-YQ2A-0000
Hexagon Flange Face Lock Nut (M6)	1	CA.50.0001.24	六角法兰面锁紧螺母；虬龙P/N：B2-006-06-F2

Material Description (EN)	Qty		
Plain Washer (Φ6)	1	CA.50.0001.28	平垫；虬龙P/N：B4-001-6-F1
Inner Hexagon Socket Head Cap Screws (M6 * 16)	1	CA.50.0001.22	内六角圆柱头螺钉；虬龙P/N：B3-001-06-016-F0
Black	1	CH.00.0004.13	喇叭；虬龙-29310-NM1A-0000
Hexagon Flange Face Bolt (M6 * 16)	1	CA.50.0001.25	六角法兰面螺栓；虬龙P/N：B1-008-06-016-F2
Hexagon Flange Step Bolt (M6 * 16)	1	CA.50.0001.26	六角法兰面台阶螺栓；虬龙P/N：FB01-003-06-016-F2
	2		
SEGWAY Export-X160 Bluetooth Box-with SN (Single Product Barcode)	1	BA.50.0000.33	蓝牙中控-X160；虬龙-21280-YQ1N-0000
	1		
	1		
Cross head Double Line Self-Tapping Screws (M4 * 13)	2	CA.50.0001.09	十字头双线自攻钉；虬龙P/N：FB03-003-04-013-F3
	1	BB.00.0004.14	侧支架熄火开关总成；虬龙-23400-YQ2A-0000
	1	BB.00.0004.15	转换器总成；虬龙-21300-YQ2A-0000




6

4

front

Material Description (EN)	Qty		


Leather stitching-silk screen SEGWAY logo	1	BB.00.0004.16	座垫总成；虬龙-32300-YQ1N-0000
Accessories with stickers	1	CB.00.0008.70	后挡泥板；虬龙-31321-YQ2A-0000
	1	CB.00.0008.71	后挡泥内板；虬龙-31340-YQ2A-0000
Non-Metal Hexagon Flange Face Lock Nut (M6)	4	CA.50.0001.29	六角法兰面锁紧螺母；虬龙P/N：B2-012-06-F2
Nylon Rivet-R5075	8	CA.50.0001.27	尼龙铆钉；虬龙P/N：B5-004-R5075
Plain Washer（Φ6）	4	CA.50.0001.28	平垫；虬龙P/N：B4-001-6-F1

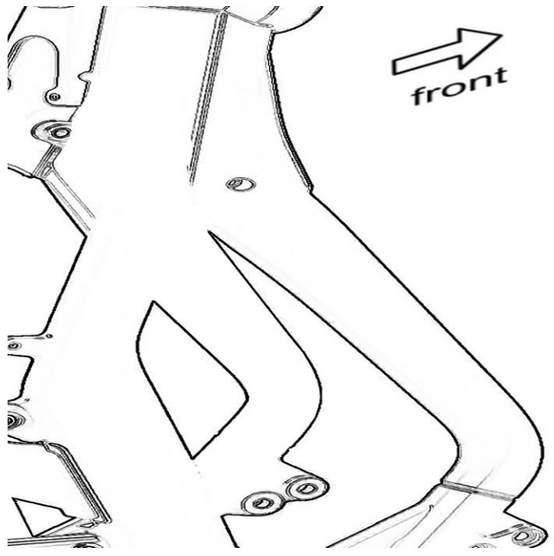


Material Description (EN)	Qty		
Cross Head Self-Tapping Screw (ST4.2 * 13)	1	CA.50.0001.30	十字头自攻钉；虬龙P/N：B3-006-003-F3
Self-Tapping Clip (M4)	1	CA.50.0001.31	自攻夹；虬龙P/N：FB04-001-04-F2
Left Decoration Cover, Battery Lock Bracket (Plastic)	1	CB.00.0008.73	电池锁座左装饰罩；虬龙-32351-YQ2A-0000

Inner Hexagon Socket Head Cap Screws (M6 * 12)	2	CA.50.0001.53	内六角盘头螺钉；虬龙P/N：FB03-001-06-012-F0
Right Decoration Cover, Battery Lock Bracket (Plastic)	1	CB.00.0008.74	电池锁座右装饰罩；虬龙-32352-YQ2A-0000
Inner Hexagon Socket Rear Rounded Head Cap Screw (M6 * 10)	2	CA.50.0001.61	内六角平圆头螺钉；虬龙P/N：B3-002-06-010-F0
	1	CB.00.0008.75	电池箱锁装饰圈；虬龙-27516-YQ2A-0000

Φ12-Φ20-2	2	CA.50.0001.34	尼龙垫片；虬龙P/N：55163-YQ2A-0000
	2	CA.00.0003.94	连杆衬套；虬龙-55162-YQ2A-0000
Full Needle Bearing Φ12-Φ16-12	2	CA.50.0001.35	满针轴承；虬龙P/N：Z-HK1212-16-12-12
Φ12-Φ20-2	2	CA.50.0001.34	尼龙垫片；虬龙P/N：55163-YQ2A-0000
	1	CA.00.0003.95	后减连杆；虬龙-55148-YQ2A-0000
Inner Hexagon Socket Head Cap Screws (Half Thread L55-M8)	2	CA.50.0001.36	内六角圆柱头螺钉；虬龙P/N：B3-001-08-055-F2
Sandblasted Anode-red	1	BB.00.0005.03	后摇架总成；虬龙-55140-YQ1A-0001-Y7
Material Description (EN)	Qty		
TC oil seal Φ12-Φ16-3	4	CC.00.0001.48	摇架油封；虬龙-B7-001-12-16-3
Full Needle Bearing Φ12-Φ16-12	4	CA.50.0001.35	满针轴承；虬龙P/N：Z-HK1212-16-12-12
Bushing Φ8-Φ12-30	2	CA.00.0003.96	摇架衬套；虬龙-55142-YQ2A-0000
Sandblasted Anode (Red)	1		
Hexagon Flange Face Lock Nut (M8)	2	CA.50.0001.38	六角法兰面锁紧螺母；虬龙P/N：B2-006-08-F2
Inner Hexagon Socket Head Cap Screws (M8)	1	CA.50.0001.37	内六角圆柱头螺钉；虬龙P/N：B3-001-08-050-F2
Hexagon Flange Face Lock Nut (M8)	2	CA.50.0001.38	六角法兰面锁紧螺母；虬龙P/N：B2-006-08-F2
Red spring 350 lbs / inch	1	BB.00.0005.04	后减震总成；虬龙-55110-YQ1N-0000
Inner Hexagon Socket Head Cap Screws (M8)	1	CA.50.0001.39	内六角圆柱头螺钉；虬龙P/N：B3-001-08-045-F2

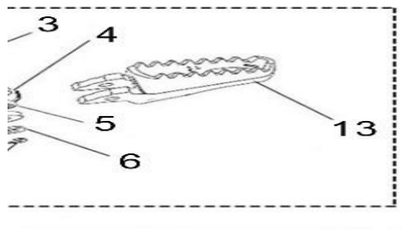

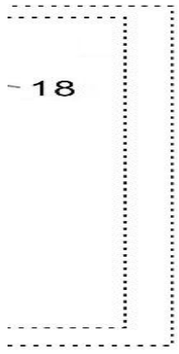

Material Description (EN)	Qty		
	1	BB.00.0004.20	左脚蹬总成；虬龙-42100-YQ2A-0000
Sandblasted Anode-Iron Grey	1	CA.00.0003.97	左脚蹬；虬龙-42111-YQ2A-0000-Y5

Φ8*37	2	CA.00.0003.98	脚蹬安装销；虬龙-42116-YQ2A-0000
	2	CA.00.0003.99	脚蹬连接支架；虬龙-42122-YQ2A-0001
	2	CA.00.0004.00	脚蹬回位簧；虬龙-42115-YQ2A-0000
Plain Washer （Φ8）	2	CA.50.0001.33	平垫；虬龙P/N：B4-001-08-F1
Opening Retaining Ring (Inner Diameter Φ 6)	2	CA.50.0001.40	开口挡圈；虬龙P/N：B4-007-06-F1
	1	CA.00.0004.01	左脚蹬支架；虬龙-42112-YQ2A-0000
Material Description (EN)	Qty		
Hexagon Flange Face Lock Nut （M10*1.25）	2	CA.50.0001.41	六角法兰面锁紧螺母；虬龙P/N：B2-006-10-F2
Inner Hexagon Socket Head Cap Screws (M8*20)	4	CA.50.0001.66	内六角圆柱头螺钉；虬龙P/N：B3-001-08-020-F0
	1	CA.00.0004.02	右脚蹬支架；虬龙-42212-YQ2A-0000
	1	BB.00.0004.21	右脚蹬总成；虬龙-42200-YQ2A-0000
Sandblasted Anode-Iron Grey	1	CA.00.0004.03	右脚蹬；虬龙-42211-YQ2A-0000-Y5
Step bolt-M8 * 30	1	CC.00.0001.49	侧支架安装螺栓；虬龙-41559-YQ2A-0000
	1	CA.00.0004.49	侧支架；虬龙-41550-YQ1A-0000
	1	CA.00.0004.05	侧支架弹簧挂销B；虬龙-41555-YQ2A-0000
Inner Hexagon Socket Head Cap Screws (M8)	1	CA.50.0001.38	六角法兰面锁紧螺母；虬龙P/N：B2-006-08-F2
Φ3 * L100-Effective number of turns 15	1	CA.00.0004.34	侧支架弹簧；虬龙-41556-YQ2A-0000
	1	BB.00.0005.05	侧支架总成；虬龙-41550-YQ1A-Z1
	1	BB.00.0005.06	侧支架大总成；虬龙-41550-YQ1A-Z2

Material Description (EN)	Qty		
Taper bowl set kit	1	BB.00.0004.60	方向碗组总成；虬龙-51180-YQ2A-0200

	1		
	1		
	1		
	1		
	1		
	1		
	1		


Material Description (EN)	Qty		
	2	CC.00.0001.59	锥度轴承；虬龙-HRB-32906X-47-30-12
Black rubber	2	CB.00.0009.08	手把管堵头；虬龙-51155-YQ2A-0000
Black	1	CB.00.0009.09	左手把胶；虬龙-23810-YQ1N-0000
Φ31.8 / Φ22-720mm-with adjustment scale-no SURRON mark	1	CA.00.0004.50	方向把管；虬龙-51150-YQ1N-0000
	1	BB.00.0004.61	电子油门；虬龙-23900-YQ1A-0000
Balck	1	CB.00.0009.10	右手把胶；虬龙-23820-YQ1N-0000
Φ34*Φ29*10	1	CA.00.0004.36	方向把立垫圈A；虬龙-51195-YQ2A-0000
Φ34*Φ29*15	1	CA.00.0004.51	方向把立垫圈B；虬龙-51196-YQ2A-0000
M5 * 22 - With Washer	4	CA.50.0001.42	内六角螺钉；虬龙P/N：B8-001-05-022-F0
SEGWAY logo	1	BB.00.0004.62	方向把立组合；虬龙-51190-YQ1N-0000
One shoulder-L550-S150	1	BB.00.0005.07	前叉总成；虬龙-51000-YQ1A-0000
	6		
	1	BB.00.0005.08	前轮轴总成；虬龙-51250-YQ1A-0000

	1	CB.00.0009.21	减震右护板；虬龙-32280-YQ1A-0000
	1	CB.00.0009.22	减震左护板；虬龙-32270-YQ1A-0000

	2	CA.00.0004.39	刹车手柄；虬龙-52111-YQ2B-0000
	2		
	2		
NO SURRON logo	1	BB.00.0004.73	前制动系统；虬龙-52100-YQ1N-0100
NO SURRON logo	1	BB.00.0004.74	前制动主泵总成；虬龙-52110-YQ1N-0000
	1	CB.00.0009.03	前制动油管；虬龙-52140-YQ2A-0000
Available for both front and rear wheels, NO SURRON logo, has screws M6 * 18- with pad	1	BB.00.0004.71	制动钳总成-前后共用；虬龙-52190-YQ1N-0000
Wire length 520mm	1	BB.00.0004.49	刹车断电开关（含前后）；虬龙-52120-YQ2B-0000

Material Description (EN)	Qty		
420-112 knots	1	BB.00.0005.09	金色滚子链条；虬龙-13114-YQ1A-0000
Φ10-Φ15-17	1	CA.00.0004.29	中轴右衬套；虬龙-61234-YQ2A-0000
Hex Socket Countersunk Head Screws (M6 * 25)	6		
TC oil seal (Φ15-Φ24-7)	1	CC.00.0001.56	中轴套右油封；虬龙-B7-001-15-24-7
14/420	1	CA.00.0004.30	输出轴链轮；虬龙-13105-YQ2A-0000
NO SURRON logo	1	BB.00.0004.51	中轴套组合；虬龙-61280-YQ1N-0000

Deep groove ball bearing 6000-2Z-Φ10*Φ26*8	4	CC.00.0001.50	平叉中轴套轴承；虬龙-Z-6000-2Z-26-10-08
Φ10-Φ15-73mm	1	CA.00.0004.31	中轴套中衬套；虬龙-61282-YQ2A-0001
	1		
TC oil seal (Φ15-Φ26-6)	1	CC.00.0001.57	中轴套左油封；虬龙-B7-001-15-26-6
HTD timing pulley-8M	1	CA.00.0004.32	后皮带轮；虬龙-13202-YQ2A-0100
4Φ10-Φ15-12	1	CA.00.0004.33	中轴左衬套；虬龙-61233-YQ2A-0000
Inner Hexagon Socket Head Cap Screws (M6*16)	6	CA.50.0001.22	内六角圆柱头螺钉；虬龙P/N：B3-001-06-016-F0
HTD 8M	1	CB.00.0009.04	皮带；虬龙-13111-YQ2A-0100
Intermediate Shaft Sleeve-Sprocket-Belt Pulley combination	1	BB.00.0004.52	中轴套-链轮-皮带轮组合；虬龙-61270-YQ1N-Z1

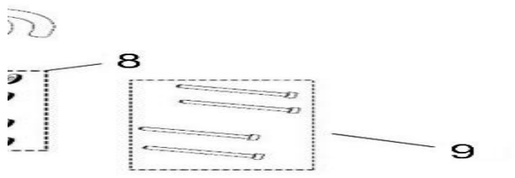

Material Description (EN)	Qty		
	1	BA.00.0002.45	主电缆总成；虬龙-24100-YQ2N-0000
	1	BB.00.0004.53	倾倒传感器；虬龙-21250-YQ2A-0000
Hexagon Flange Face Non-Slip Nut (M3)	4		
Plain Washer（Φ4）	4		

	1		
	1	BB.00.0004.54	单相断路器；虬龙-23500-YQ2A-0000
Nylon Washer (Φ7 * Φ3.2 * 5)	4		
Inner Hexagon Socket Head Cap Screws (M3*40)	4		

Material Description (EN)	Qty		
A style SGEWAY, suitable for black and red models	1	CE.00.0010.18	全车贴花-黑车红车；虬龙-82400-YQ1N-0000
B style SGEWAY, suitable for silver models	1	CE.00.0010.19	全车贴花-银车；虬龙-82400-YQ1N-0100

C style SGEWAY, applicable to blue models	1	CE.00.0010.20	全车贴花-蓝车；虬龙-82400-YQ1N-0200

	2	CC.00.0001.66	前轮轴螺母-KKE；虬龙-51263-YQ1A-0000
	1	CC.00.0001.68	全车紧固件-X160；虬龙-99100-YQ1N-0000