
marantz

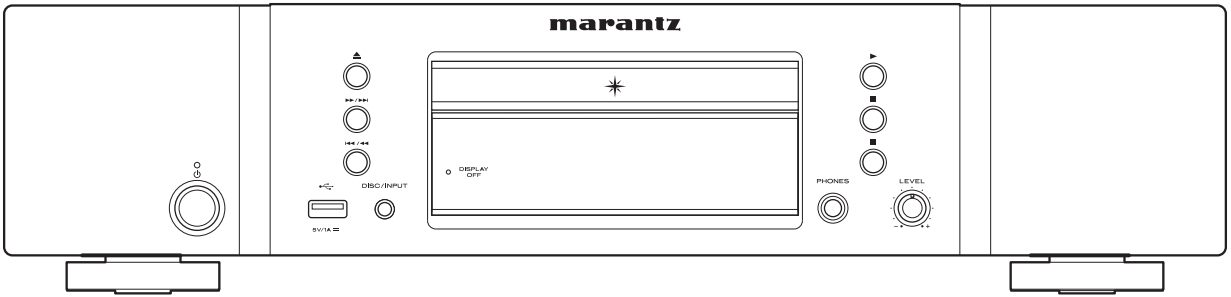

CD6007 | CD Player



QUICK START GUIDE

Welcome

Thank you for choosing a Marantz CD player. This guide provides step-by-step instructions for setting up your CD player.


Before You Begin

What's In the Box

Quick Start Guide		Power cord	
Owner's Manual		Remote control unit (RC004PMCD)	
Safety Instructions		R03/AAA batteries	
Warranty (for USA/ for CANADA)		Audio cable	
CD Player		Remote connector cable	

Setup

Required for Setup



Amplifier



Speaker systems




Speaker cables

These drawings are for illustrative purposes only and may not represent the actual product(s).


There are four steps to the setup process.

1. Install batteries in the remote control unit
2. Connect this unit to the amplifier
3. Plug the power cord into a power outlet
4. Begin CD playback


1 Install batteries in the remote control unit

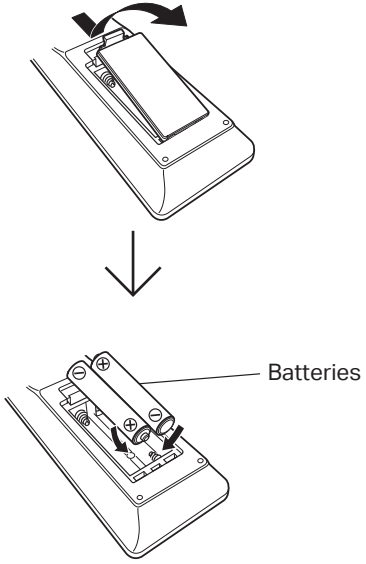

2 Connect this unit to the amplifier

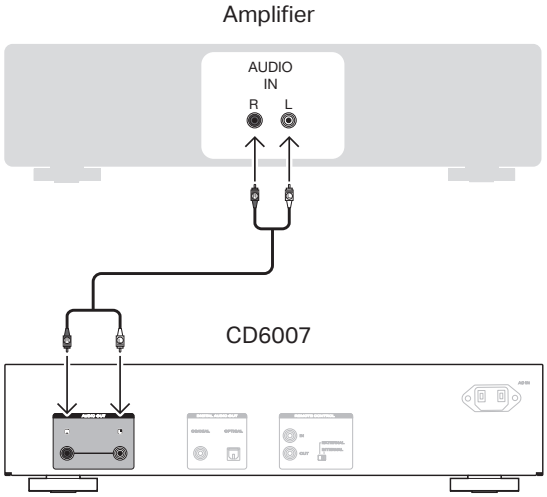

3 Plug the power cord into a power outlet

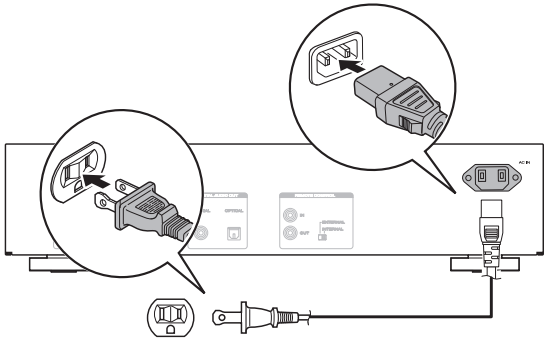


Connect to household power outlet
(AC 120 V, 60 Hz)


Power cord
(supplied)

4 Begin CD playback


1. Press POWER ⏻.

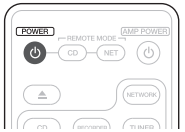

2. Press ⏏ to open the disc tray.

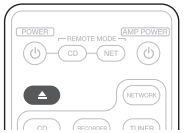

3. Place CD in the disc tray.

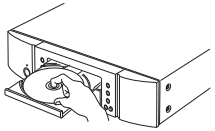


4. Press ▶/❚❚ to start playback .



Owner’s Manual

- Refer to the Online Manual for other functions information and operation procedure details.
  manuals.marantz.com/CD6007/NA/EN/

Online Manual

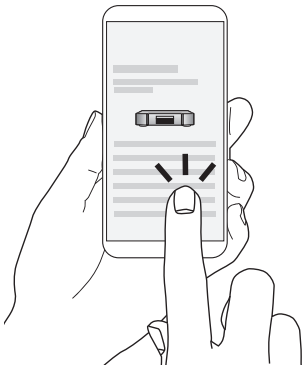

- For more information, visit **www.marantz.com**

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz is a registered trademark.

Printed in Vietnam 5411 11868 00AM

© 2020 Sound United. All Rights Reserved.