

Gudsunal WQP4-6207 Portable Countertop Dishwasher User Guide

Contents

1 Gudsunal WQP4-6207 Portable Countertop Dishwasher
2 INSTALLATION DIAGRAM
3 WATER TANK INSTALLATION
4 USE OF WATER TANK
5 MAINTENANCE AND CLEANING
6 ERROR CODE LIST
7 COMMON FAULT APPROACH
8 Documents / Resources
8.1 References
9 Related Posts






Gudsunal

Gudsunal WQP4-6207 Portable Countertop Dishwasher



WQP4-6207 Quick Guide
PLEASE READ THE USER MANUAL BEFORE USINF THE APPLIANCE.

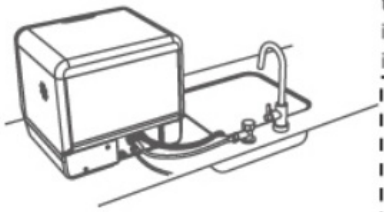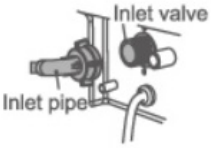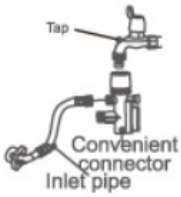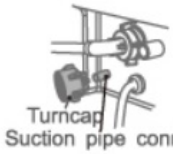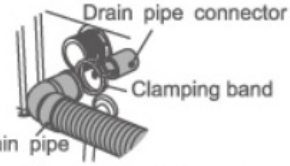
INSTALLATION DIAGRAM

Installation Steps	Installation Details
Running water inlet	 This is the default installation mode. It is recommended that this mode be selected for installation in good installation conditions. Refer to Steps 1 and 2 for installation. NOTICE:When the first time that water in ,the water in appliance turns yellow which is normal; Because the water softener in water for a long time. Please feel free to use.
Installation of inlet pipe	1  1. Find the inlet port at the back of the appliance, connect the wider end of the house on it and tighten it clockwise.  2. Please connect the narrower end of the hose on the tap.  3. For this way of injecting water, please tighten the stopper on the suction port to avoid leakage from it.
Installation of drain pipe	2  1.Connect the drain and drain port.  2.The drain pipe should be fixed by the clamping band.  3.Please put the free end of the drain pipe into the sink or sewer.

Notes:

1. Please use cold water or warm water not exceeding 120°F.
2. The inlet pipe and drain pipe can not be folded, otherwise may affect the washing effect.
3. Ensure that the appliance is situated securely on the floor; otherwise it will cause overflow and electric leakage. Take the package out from appliance.
4. After installation, please retain all documents and components for later use or for the subsequent owner.

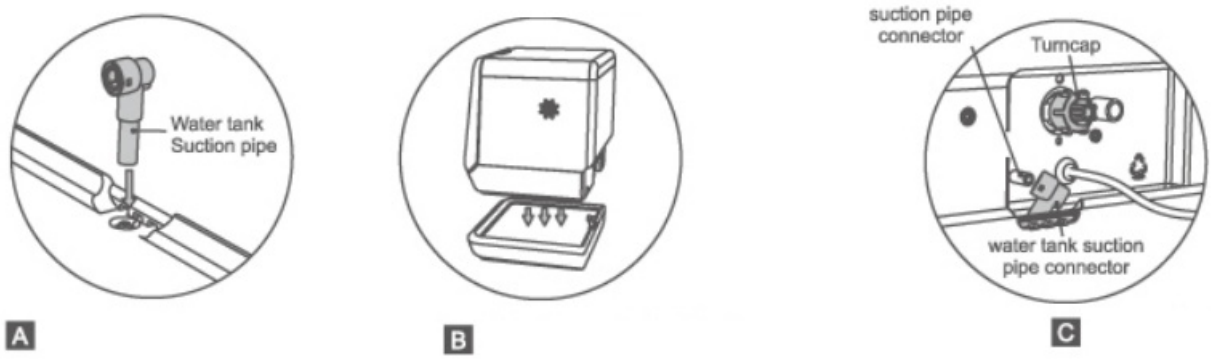WATER TANK INSTALLATION




- **A.** Insert the water tank suction pipe into the water inlet of the water tank according to the direction shown in the figure.
- **B.** After the water tank is placed horizontally on the table top, lift the machine and put it down at the groove of the water tank.
- **C.** After the water tank is placed horizontally on the table top, lift the machine and put it down at the groove of the water tank.

USE OF WATER TANK

Note: before adding water to the water tank, please check whether the power supply of the machine is connected; whether the drain pipe and water suction pipe of the water tank are connected properly.

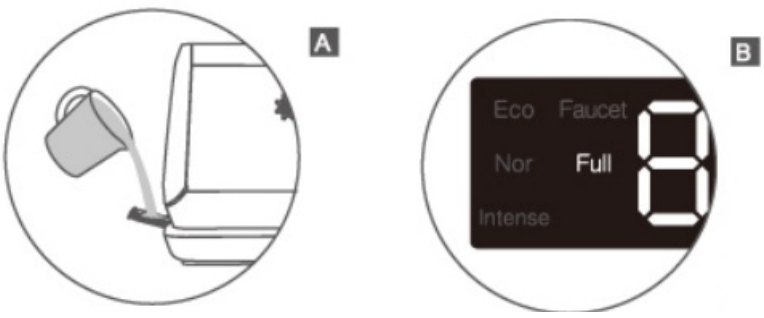- **A.** After pulling out the water drawer of the water tank, pour the water in the kettle. Pay attention not to pour water too fast to prevent water splashing.
- **B.** In the process of adding water, when the “Full” lights up on the display screen with beeping sound, it indicates that the water tank is full of water. At this time, please stop adding water and push the water drawer back to the water tank, and then press the power button to start the machine.



Warning!

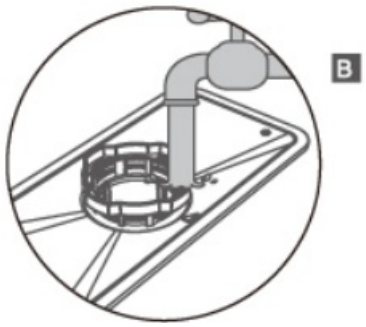
The full water icon can only be illuminated when it is normally powered on!
After the full water icon is on, please do not continue to add water, which will exceed the capacity of the water tank and cause overflow.
Please clean the water tank every month.
Please pour out the residual water in the water tank, if the water tank will not be used for a long time.

MAINTENANCE AND CLEANING

Clean the filter assembly
After appliance ran a while, there will be some residue and other things left in it.
Please clean it when you see the residue and things, also clean the appliance immediately.


- **A.** Make sure the power is off. Turn the filter assembly out with anticlockwise. And put the filter assembly back with clockwise.
- **B.** Use flowing water to flush filter assembly.Do not use steel wool or iron brush, it will cause the filter rust.





Clean the spray arms

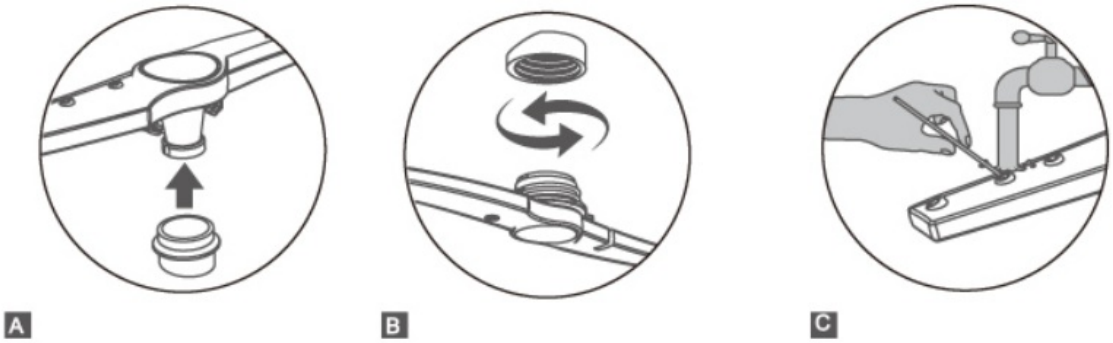- **A.** Pull the main basket out of appliance, and lift the lower spray arm a little bit for loss the clips.
- **B.** Turn the upper spray arm out with anticlockwise.
  And put the upper spray arm with clockwise.
- **C.** Check if the spray arms blocked. If it does, please use a thin wire to pull the blockages out or flush the hole with water.



ERROR CODE LIST

Error code	Cause	Remedy
E01	Thermistor short circuit	Please contact the after-sales service department.
E02	Thermistor open circuit	Please contact the after-sales service department.
E03	The machine is not heated	1. Please make sure the utensils be placed correctly. Water will be lack if it is in the plate/bow. 2. Please contact the after-sales service department.
E04	Inlet valve failure	Please contact the after-sales service department
E05	Overflow	1. Lean the appliance about 30°to 45°to pour out the water in the bottom plate. 2. Check if the drainage pipe is placed too high. 3. Check if the pipe be tired a knot, blocked or pressed. 4. Check if the appliance be placed right. 5. Exclude above cause, try to restart the appliance again. Please contact the after-sales service department.
E06	Heating function abnormal	Please contact the after-sales service department.
E10	Water inflow abnormal	1. The tap was not fully opened. 2. Small inflow and low water pressure. 3. Start-up multiple times in case of water shortage. 4. Please contact the after-sales service department.


COMMON FAULT APPROACH

Problem	Cause	Remedy
The washing powder and washing tablet have not been cleaned up	1.The holes of spray arm been blocked, the washing powder can not be fiushed out.	Clean the holes of spary arms and run the quick wash mode again to clean the utensil.
	2.Put too much washing power.	Run the quick wash mode again and put moderate washing powder as instruction next time.
	3.Used low-quality washing power.	Use specialized washing powder and washing tablet with quick wash mode to wash the utensil again.
	4.Improper placement of detegent.	Reference"Adding detergent".
Some drops in the inner of liner	It's normal and it won't impact the utensil.	
Some foam in the liner	Didn't use speciallized washing powder or put too much washing powder in it.	If there's not much foam,you can open the door and let the foam come less and less; If there's too much foam,you can remove it with tools. At last,restart any programme about 3 minutes. Redo this again and again until the foam is disappear.
Utensils is wet	1.Utensils be piled up and without lean.	Refer to utensils place rule.
	2.The washing process is still running.	Wait until process finished.
	3.Programme selected without drying.	Select programme with drying. (See overview of programmes.)
Appliance makes the noise as blowing something when is plugging. And the dispaly shows'FAN'	The air renewal system is working.	It's normal situation.
Water reduces in the water tank while the "Full" icon stays on.	The floater gets stuck.	Open the water tank and adjust the floater.

No reflection after turn on the power	1.If all the lights were off and no reflection when you press the button, there are possibilities that you didn't plug in the power or the power was blackout.	Please plug the power in and make sure the power have no issue.
	2.power or the power was blackout.	Clean plug the power in and make sure they are dry.
	3.All the light are on, it might on the childproof locking mode.	Unlock the childproof lock.
	4.The time that touch power icon is too short.	Press the power icon for 1 second.
Have no reflection when pressing any button except the power botton.	1.Have not closed the door.	Close the door.
	2.There are greasy dirt or water on the glass and hand.	Clean plug the power in and make sure they are dry.
	3.All the light are on, it might on the childproof locking mode.	Unlock the childproof lock.
	4.PCB lock of door is broken.	Please contact the after sales service department.
The water light in control panel is lighting when water comes in.	1.Check if the water supply have problem.	Make sure the water supply have no problem.
	2.The flowmeter is broken.	Please contact the after sales service department.
	3.The filling valve is broken.	Please contact the after sales service department.
The water light in control panel is lighting when water comes in from the Suction pump.	1.There is no water in the container or the suction pipe is not in the water.	Please add water to the container and make sure the suction pipe is in the water.
	2.Dirty clogging of suction pipe filter.	Clean the filter screen of the suction pipe.
	3.The filling valve is broken.	Please contact the after sales service department.
The water intake time is longer when water comes in from the suction pump	It's normal and be free to use.	/
Have crashing noise when it is working	Place the utensil in improper way ,some utensils is obstructing the spray arms; or some utensils are crashing each other.	Unload the dishwasher and replace the utensils in proper way.
The utensil was not cleaned up	1.utensils be piled up and without lean.	Refer to utensils place rule.
	2.Do not chose the right programme of washing.	Please choose the right programme of washing.
	3.Do not use pecialized washing powder or put too little of washing power.	Use specialized washing powder and put enough of it before washing.
	4.Do not install the filter in right position and the food remnants get in it.	Re-install the filter in right position.
	5.The spray arms were blocked.	Clean the inner part of spray arms.
	6.The spray arms are stuck.	Check if the spray arm is stuck by the utensil.
	7.Some food remnants are sticking on the utensil.	Soak the utensil for a while before washing.
	8.Black out when the appliance is working.	Restart the washing programme.
	9.Some food remnants are too hard to wash.	Suggest wash utensil with steel wool before put it in appliance to wash.
A lot of water were left in appliance when is not working	1.The position of drainage pipe is too high.	Refer to drainage pipe installation.
	2.The drainage pipe is tied,blocked or pressed by something heavy.	Untie the pipe and remove the heavy thing.
	3.Drainage pump is broken.	Please contact the after sales service department.
	4.The filling valve is broken.	
Overflow happens when adding more water into the water tank, but the "Full" icon is not on	1. The PCB main panel malfunctions	Please contact the after sales service department.
	2. The water level detection switch malfunctions.	
	3. The floater is stuck.	

For further using doubts or confusions,pls contact our email:
service@gudsunalkitchen.com

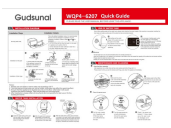Documents / Resources

	Gudsunal WQP4-6207 Portable Countertop Dishwasher [pdf] User Guide WQP4-6207 Portable Countertop Dishwasher, WQP4-6207, Portable Countertop Dishwasher, Countertop Dishwasher, Dishwasher

References

- User Manual

Manuals+,