Sandberg®
ACTIVE

Powerbank USB-C PD 130W 50000

Quick guide


420-75



Double Quality Tested


www.sandberg.world

Product preview

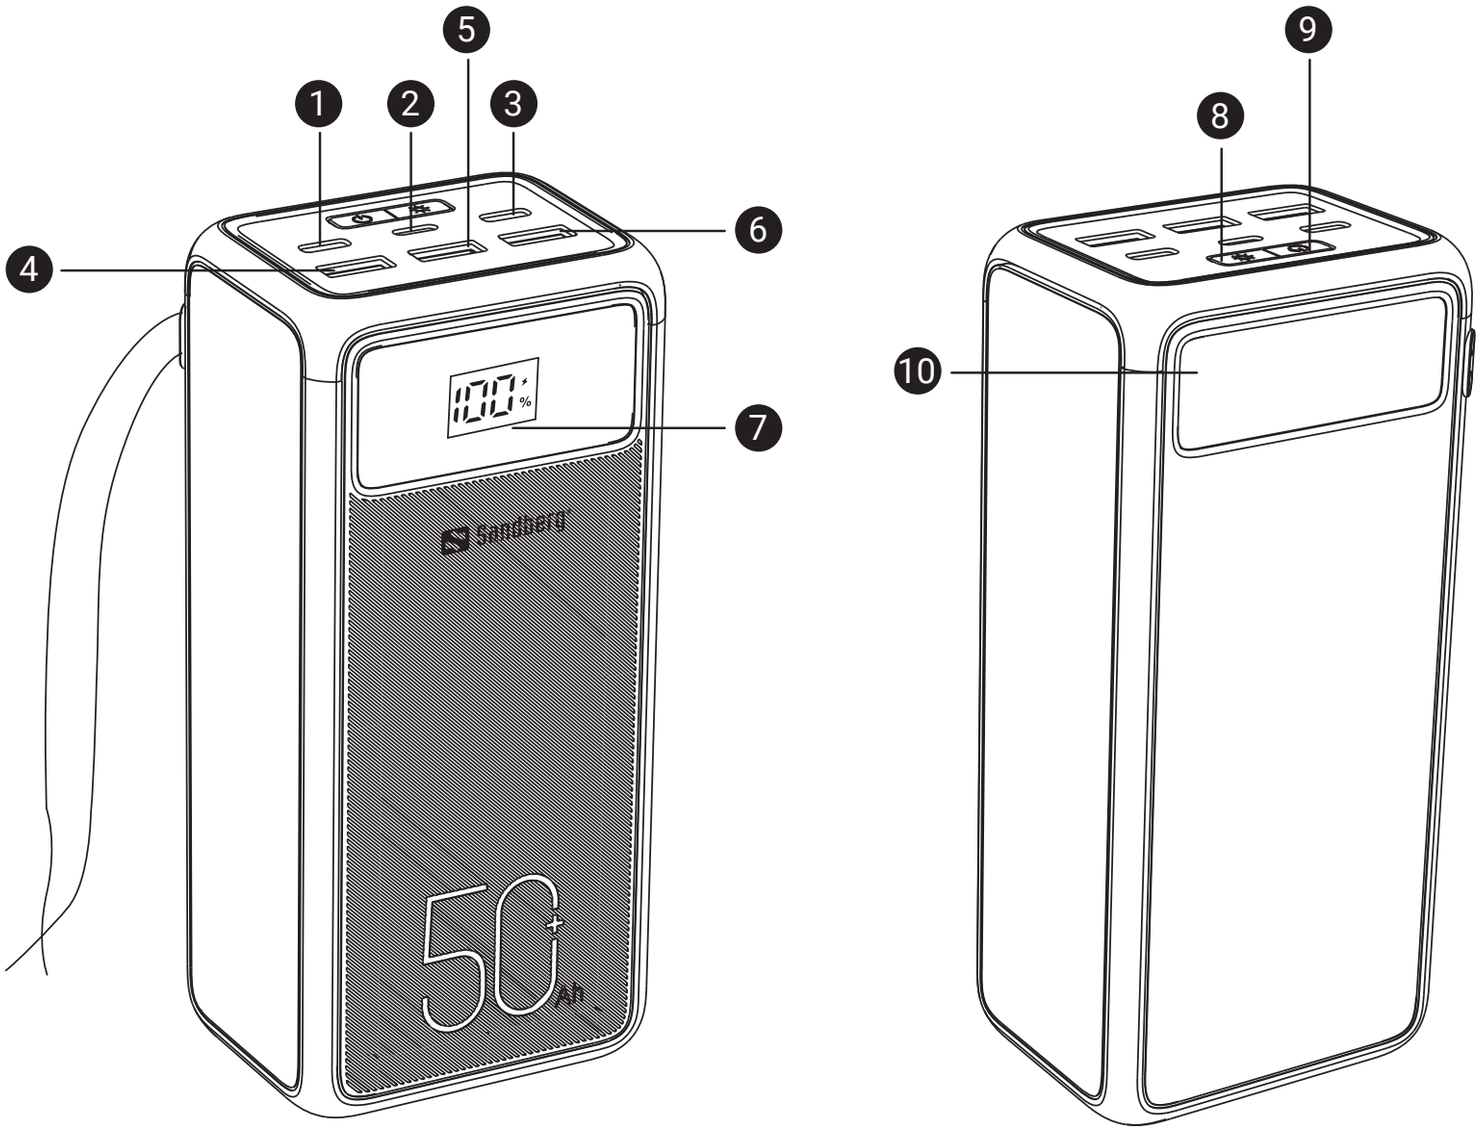



1. OUT1 (USB-C, 30W)
2. IN2 (Lightning, 18W) Input
3. IN/OUT3 (USB-C, 100W)
4. OUT4 (USB, 18W)
5. OUT5 (USB, 18W)
6. OUT6 (USB, 18W)
7. LED Digital Display
8. Lamp Button
9. Switch Button
10. Lamp

Charge Powerbank

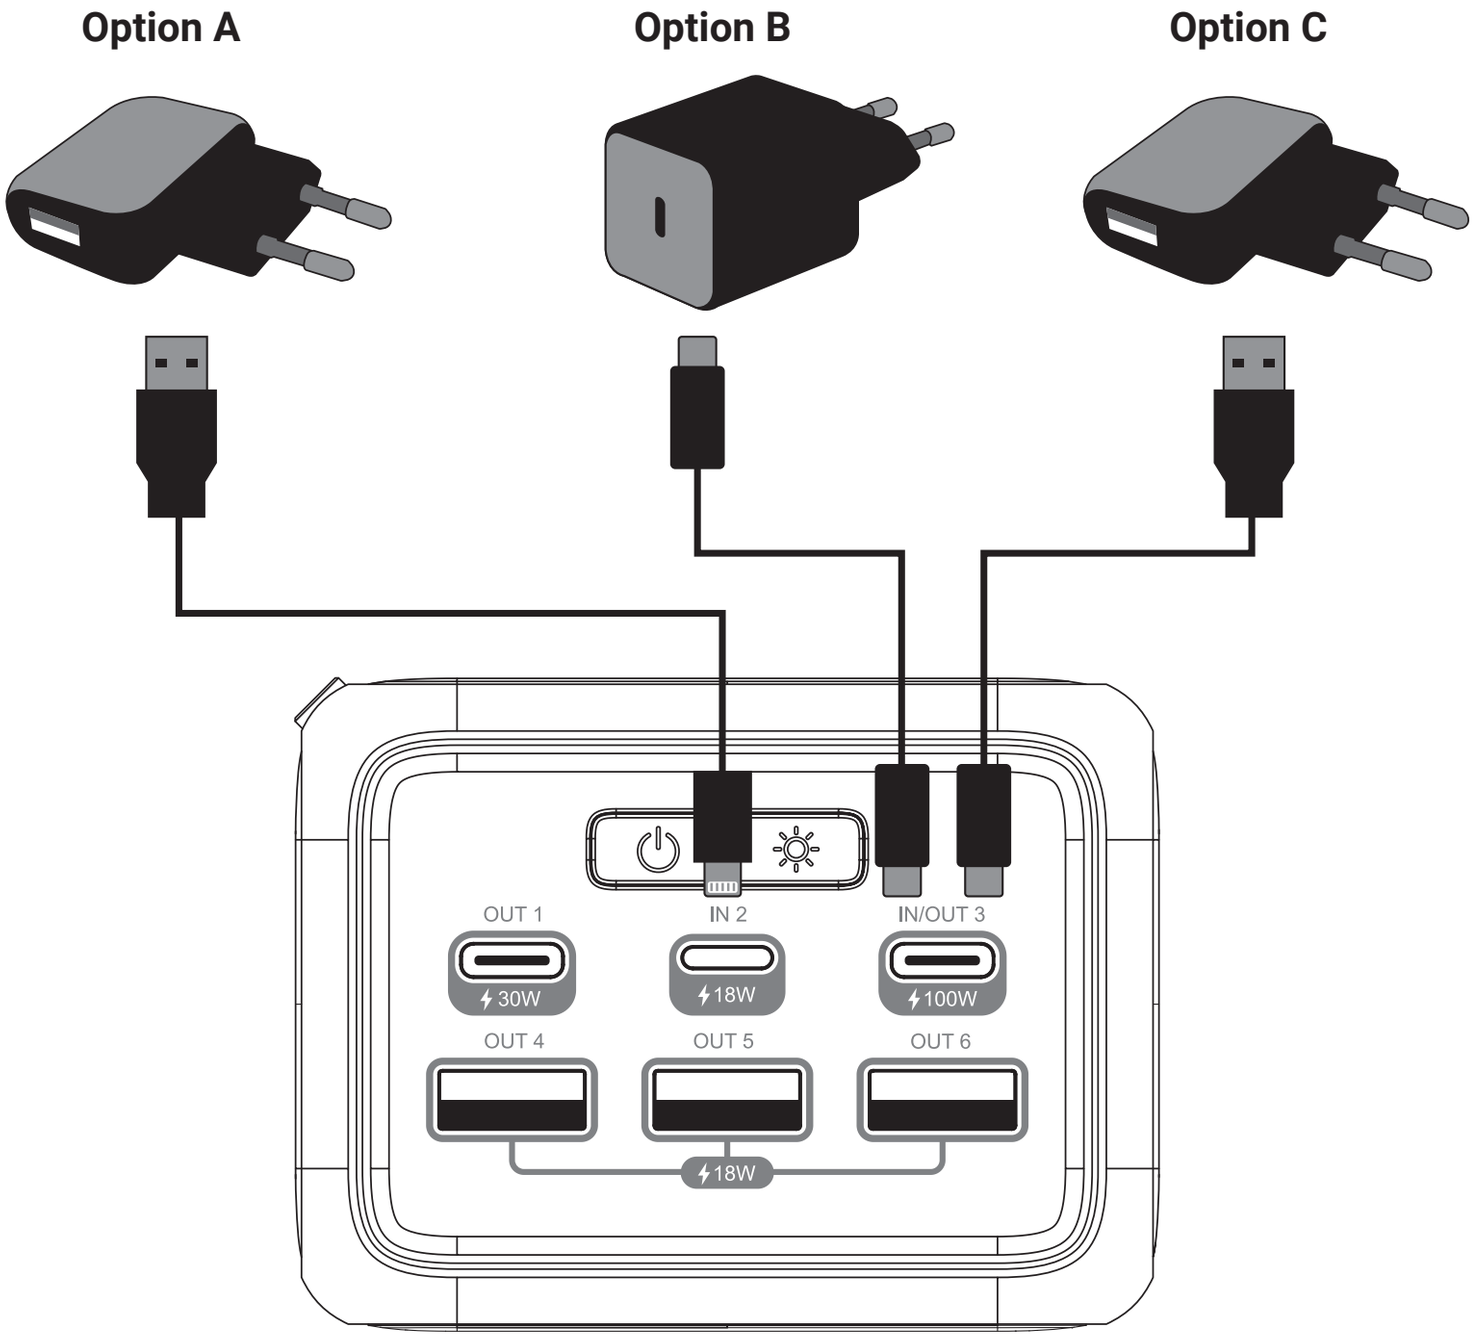


Charging status display

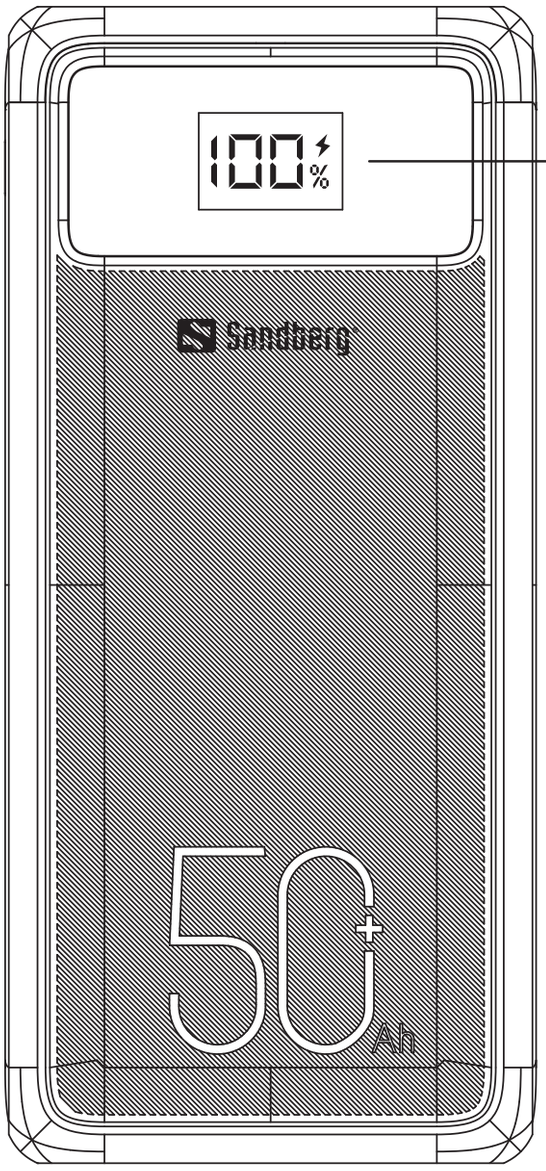

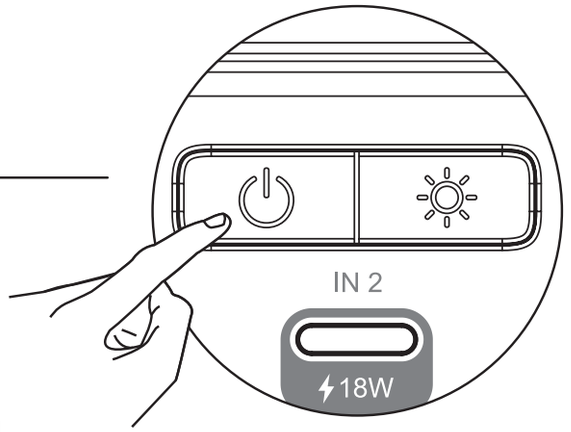


Click to check capacity status
Click twice to turn off

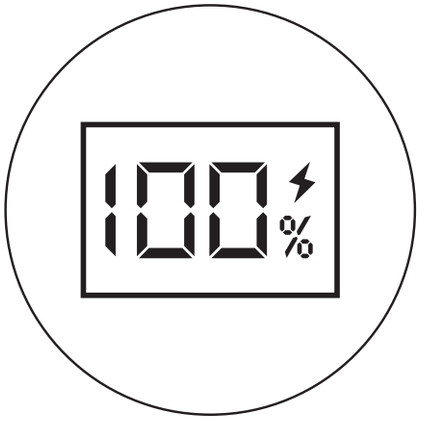


Charging status display


Charge devices

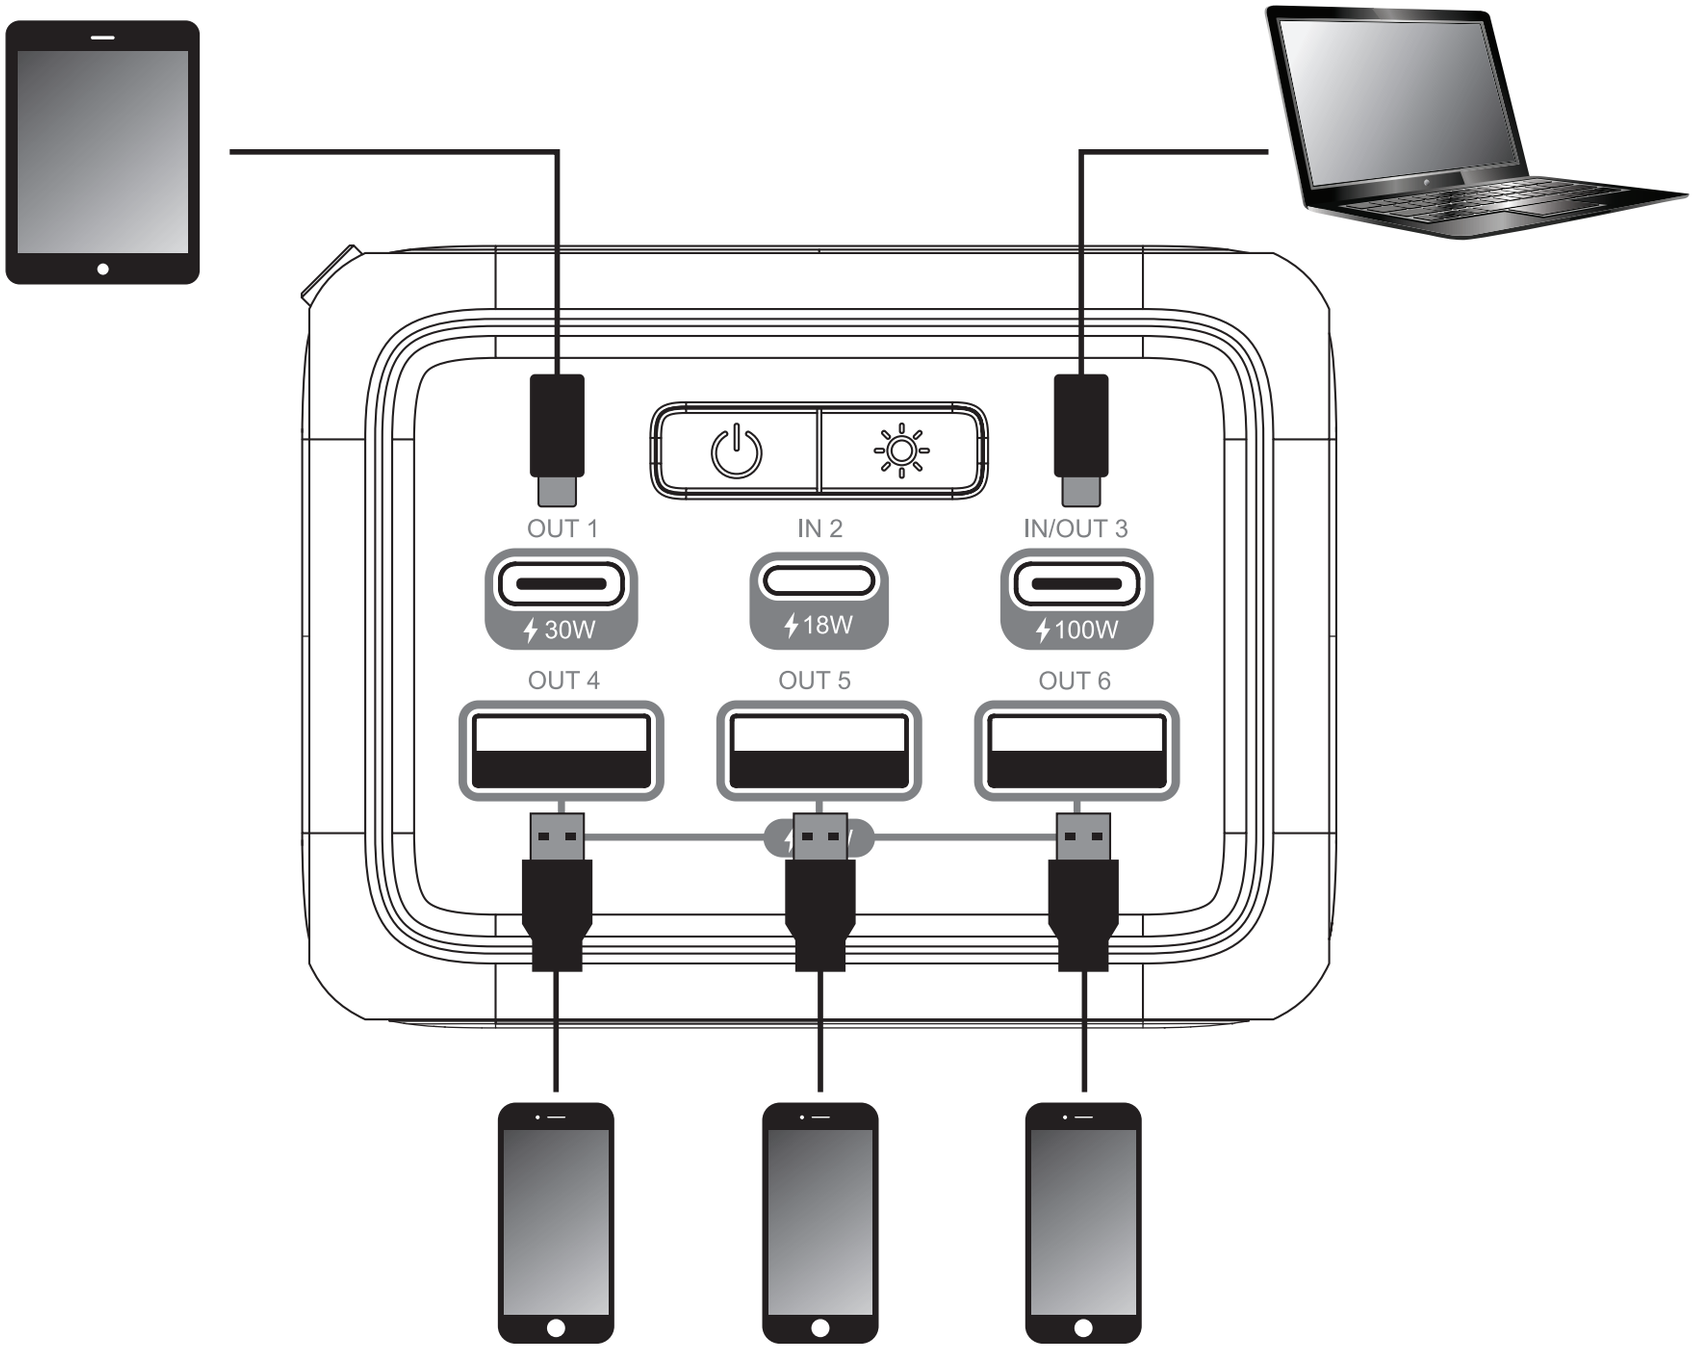


Lamp

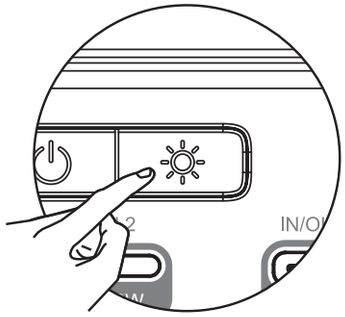
1. 


Press once

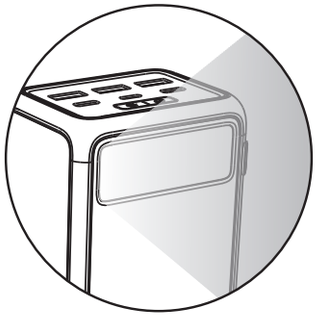

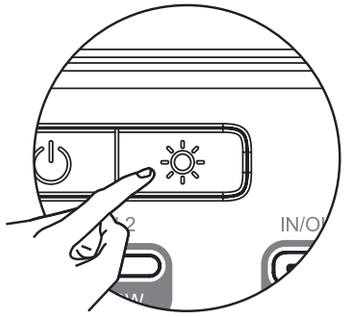
2. 


Press once more

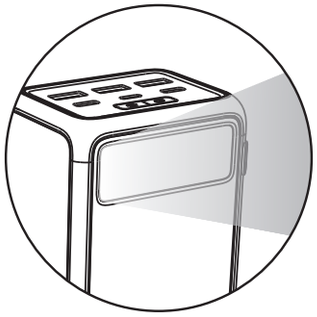

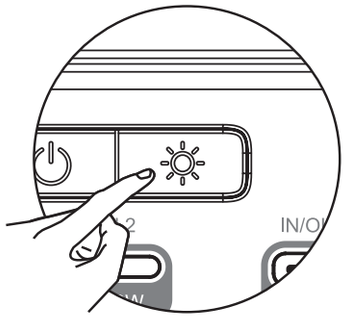
3. 

Press 4 sec to activate continuous SOS morse mode

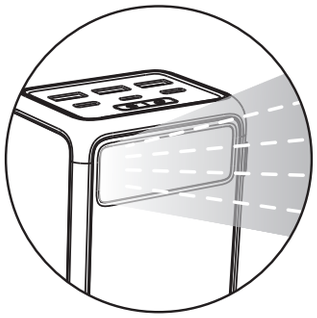

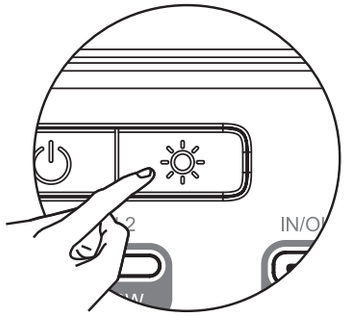
4. 

Press once

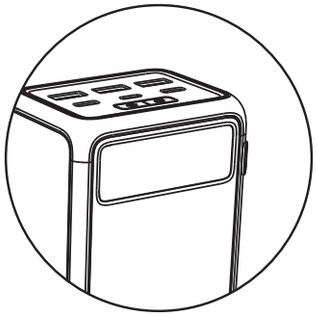

Always-ON-Mode

NOTE: The powerbank will turn off after 2 hours if no device is connected, or if a device consuming below 60 mA is connected.

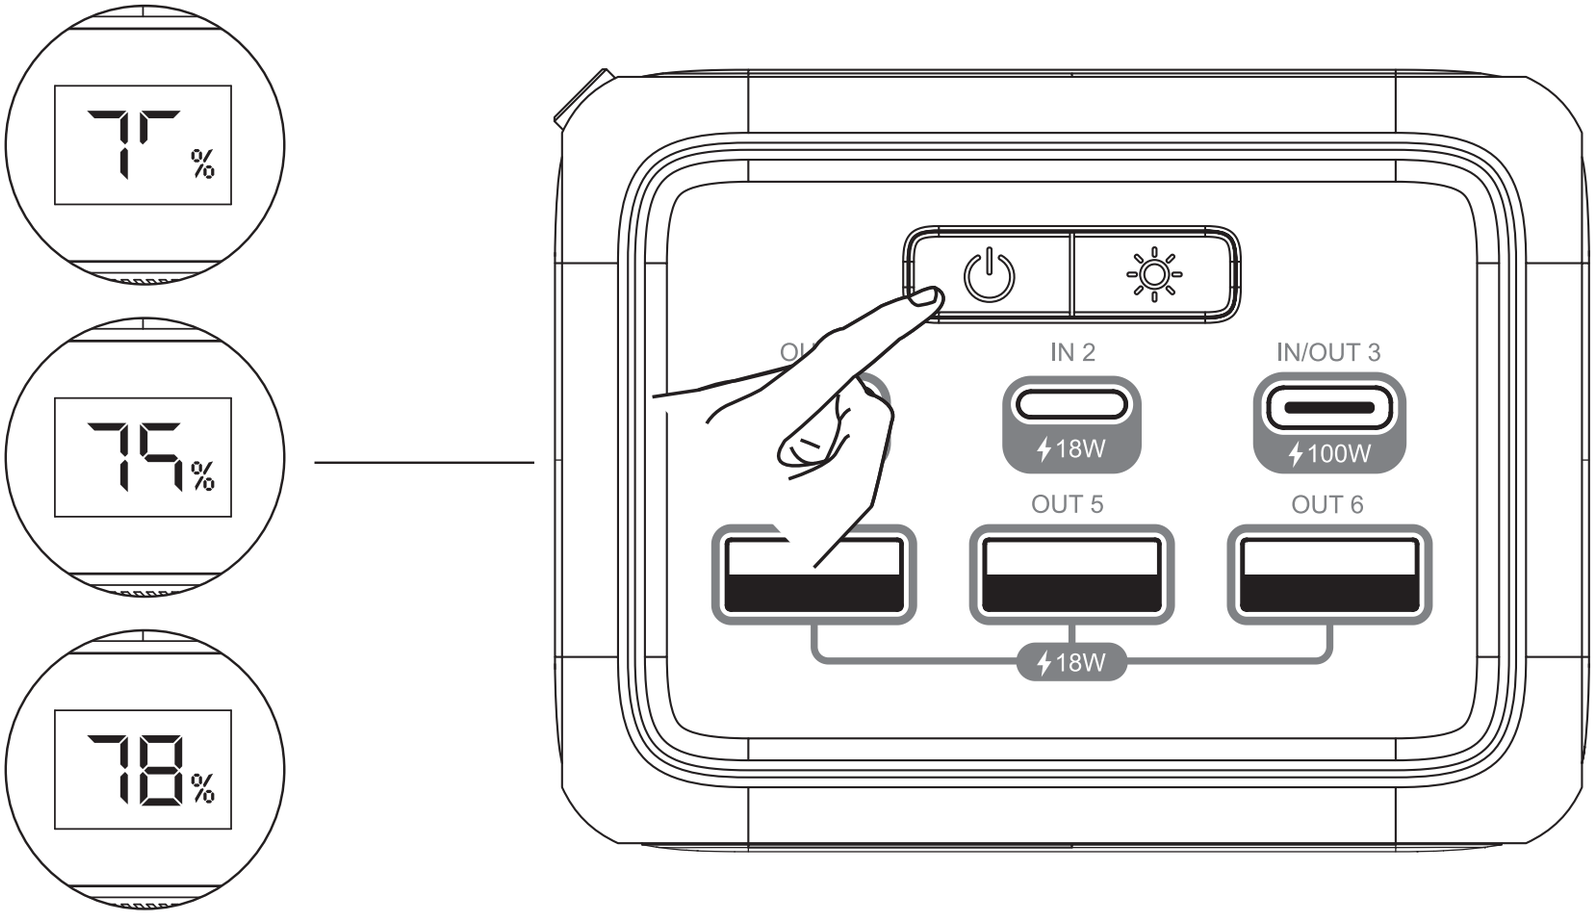

Display blinking in last digit

Press 4 seconds to activate the Always-ON-Mode

Sandberg®
ACTIVE

Support

http://helpdesk.sandberg.world

Warranty

There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new
Sandberg product at www.sandberg.world/warranty

5
Years
Warranty

For information on handling electronic waste, see www.sandberg.world/weee