Hamilton Beach
COMMERCIAL

90-CUP (240 V) RICE COOKER

Operation Manual –
Page 2

90 杯 (240 V) 電飯煲

操作手冊 –
第 6 頁

READ BEFORE USE.

使用前請閱讀。



37590 Series

Rice Cooker Safety

GB

IMPORTANT: This operation manual should be reviewed with all equipment operators as part of your operator training program.

IMPORTANT SAFETY INSTRUCTIONS


WARNING – When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
5. To protect against a risk of electrical shock do not immerse cord, plug, or base in water or other liquid.
6. Unplug from outlet when not in use. Unplug before putting on or taking off parts and allow to cool before cleaning.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids. Do not use lid handle to carry cooker when contents are hot.
13. Turn the appliance OFF (O), then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
14. Do not use appliance for other than intended purpose. Any misuse can result in fire, electric shock, or injury to persons.
15. Lift and open cover carefully to avoid scalding, and allow water to drip into the cooker.
16. **WARNING!** Risk of electric shock. Cook only in removable container.
17. Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.
18. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

– SAVE THESE INSTRUCTIONS –

Rice Cooker Safety

⚠ WARNING

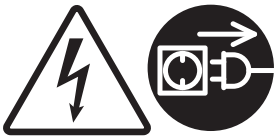

Electrical Shock Hazard

Disconnect power before cleaning base.

Failure to follow these instructions can result in death or electrical shock.



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.



Electrical Shock Hazard

Cook only in removable cooking pot.

Never place water or food directly into base.

Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ WARNING



Burn Hazard

Never use lid handle to carry cooker when contents are hot.

Failure to follow these instructions can result in burns or serious injury.

Technical Services

For assistance or replacement parts, call or email Technical Services:

866-285-1087 (USA, Canada) or +1-910-693-4277

commercial.support@hamiltonbeach.com


APAC Region: +86-400-930-2722,


hbcapac.support@hamiltonbeach.com

www.hamiltonbeachcommercial.com

For Commercial Use Only

Parts and Features

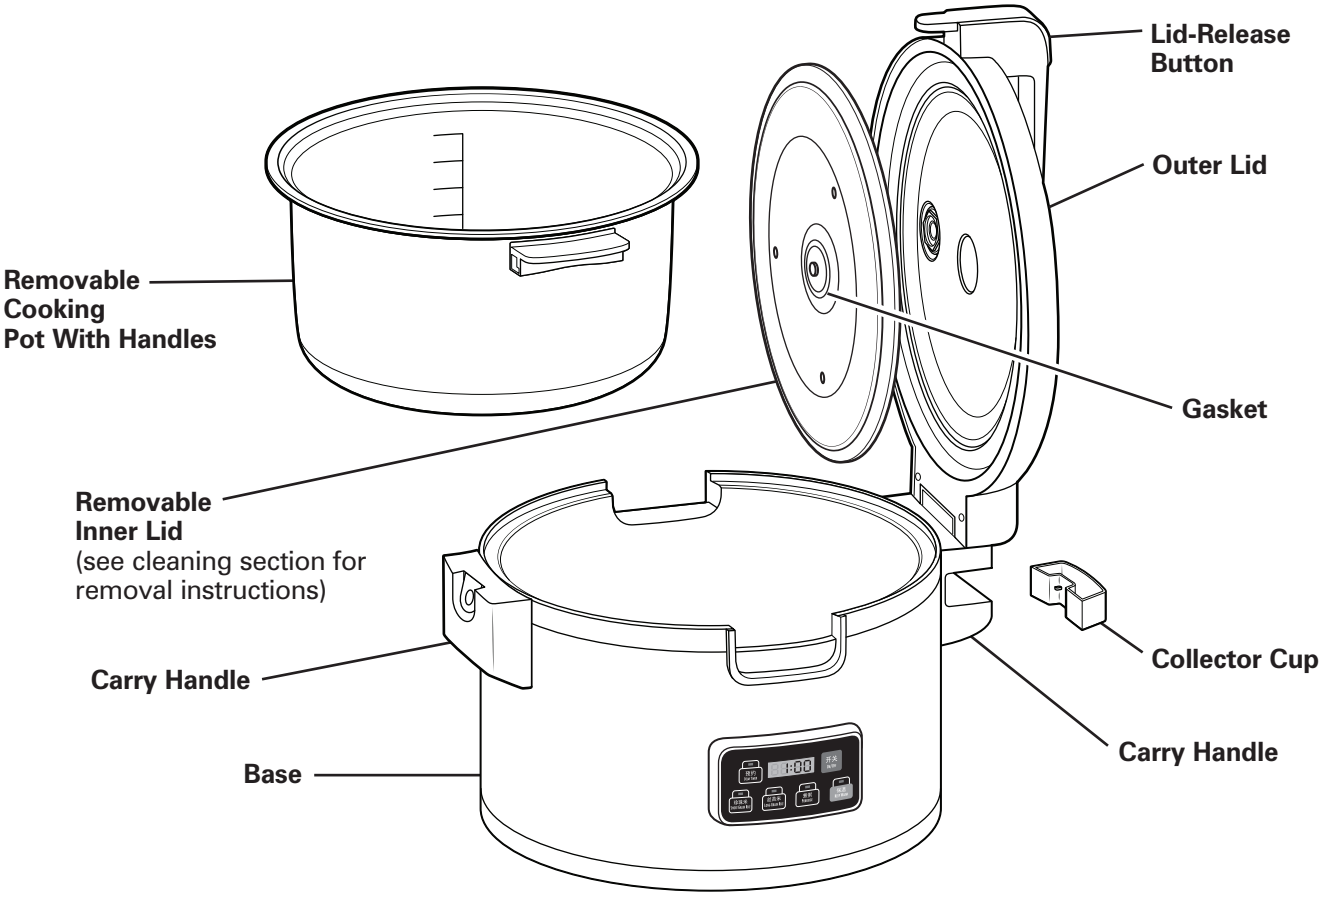

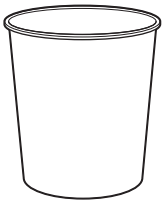


Plastic 900 ml Rice Measurer



Rice Paddle

Control Panel

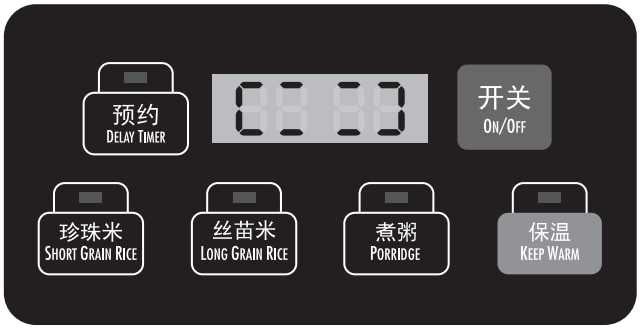






NOTE: Clean rice cooker after each use to prevent the accumulation of dirt and debris. Sanitize daily.

Sanitizing

1. Immerse cooking pot, removable lid, rice paddle, and measuring cup in sanitizing solution for 2 minutes.
2. Allow to air dry.
3. Wipe down all areas of inner lid with a clean paper towel and sanitizing solution.
4. Rinse with clean water before using.

Recommended sanitizing solution:
The sanitizing solution should consist of 1 tablespoon (15 ml) of bleach per 1 gallon (3.8 liters) of clean, cool water (60°F [16°C]) mixed according to the instructions on the bleach.

TIPS:
- Cook times and water levels will vary with other varieties of rice.
- The most important detail when cooking rice is the ratio of rice to water. Please refer to rice package directions.
- To prevent overflow and/or overheating, do not exceed the maximum 45 cup (8.2 L) fill line when both rice and water are added to cooking pot.

Rice Cooking Chart

Type of Rice	Step 1: Add uncooked rice	Step 2: Fill water to line on cooking pot	Yield (Standard 8-oz [227 g] Dry Measure Cup)	Approximate cook time
Long grain	9 Rice Measurer Cups	45	90 Cups +	65–75 minutes
Short grain	9 Rice Measurer Cups	45	90 Cups +	55–60 minutes

Troubleshooting Guide

Problem	Solution
Cooker does not turn on.	• Cooker is not plugged in. Make sure rice cooker is plugged into a properly operating electrical outlet. Press ON button.
Rice is not cooked.	• Not enough water/cooking liquid. • Place cooking pot securely into the base. **NOTE:** Make sure bottom of cooking pot is not bent or warped, or it will not conduct heat correctly. To replace cooking pot, call the toll-free customer assistance number listed on page 3 of this guide.
Rice is mushy.	• Too much liquid added to cooking pot. Reduce liquid.

電飯煲安全

ZH

重要資訊：作為操作者培訓計劃的一部份，所有設備操作者皆應閱讀本操作手冊。

重要安全說明書


警告 – 使用電器時，應時刻遵守基本的安全防範措施，以減少火災、觸電和/或人身傷害的風險，包括以下：

1. 閱讀所有說明。
2. 本電器非供用於身體、感官或精神能力衰退的人員，或缺乏經驗和知識的人員使用，包括兒童在內，除非他們是在負責其安全的人員的密切監督和指導下使用該設備。
3. 兒童使用任何電器，或在兒童身旁使用任何電器時，必須受到密切監督。請緊密監督兒童，以免他們拿本設備玩耍。
4. 請勿接觸高溫表面。使用手柄或把手。移除高溫容器時，請使用隔熱墊。
5. 為免觸電，請勿將電源線、插頭或底座浸在水或其他液體中。
6. 不使用時、請從插座上拔下插頭。在進行清潔前，請拔掉電源，並等待冷卻後才裝嵌或移除零件。
7. 切勿在供電線或插頭損壞時操作設備，也不要操作任何已故障、曾掉落或以任何形式受損的設備。供電線須由生產商、其服務代理或其他合格人士替換或維修，以免造成危險。請致電本手冊提供的客戶服務電話號碼，了解關於檢查、維修和調整的資訊。
8. 使用非本電器生產商推薦的附件可導致受傷。
9. 請勿在戶外使用。
10. 請勿讓電線搭在桌子或櫃檯的邊緣上或觸及熱表面。
11. 請勿放置在灼熱的氣體或電燃燒器上或附近，或放置在熱的焗爐中。
12. 移動盛載高溫食品、熱油或其他高溫液體的電器時必須非常謹慎。內容物為高溫時，請勿使用蓋子的手柄移動電飯煲。
13. 不使用時、安裝/移除部件前、以及清潔前，請關閉設備 (O)，然後從插座拔掉插頭。請緊握插頭，從插座拉出它。切勿拉扯電源線。
14. 請勿將電器用於其他非預期的目的。任何誤用均可導致火災、觸電或人身損害的風險。
15. 小心抬起及打開蓋子以避免灼傷，並讓水滴回飯煲內。
16. **警告！**觸電危險。只使用提供的可移除容器煮食。
17. 操作本產品時請勿把它直接置於廚櫃下，因為它會產生大量蒸汽。操作時請避免越過產品上方。
18. 本電器並非設計供透過外部計時器或獨立遙控系統運作。

– 妥善保存本說明 –

電飯煲安全

⚠ 警告

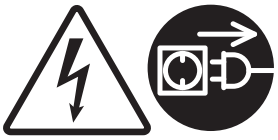

觸電危險

請拔除電源後再清潔底座。

不遵循指示可能會造成觸電甚至死亡。



觸電危險


把電源插進已接地的插座。

切勿移除接地裝置。

切勿使用轉插器。

切勿使用延長線。

不遵循指示可能會造成觸電、火災、甚至死亡。

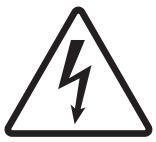

觸電危險

只使用提供的可移除煮食鍋煮食。

切勿把水或食物直接置於底座內。

不遵循指示可能會造成觸電、火災、甚至死亡。

⚠ 警告



燙傷危險

內容物為高溫時，切勿使用蓋子的手柄移動電飯煲。

不遵循指示可能會造成燙傷甚至死亡。

技術服務

如需協助或取得替換部件，請致電或寄送電郵聯絡技術服務

866–285–1087 (美國/加拿大) 或 +1–910–693–4277

commercial.support@hamiltonbeach.com


亞太地區：+86–400–930–2722，


hbcapac.support@hamiltonbeach.com

www.hamiltonbeachcommercial.com

只供商業使用

零件和功能

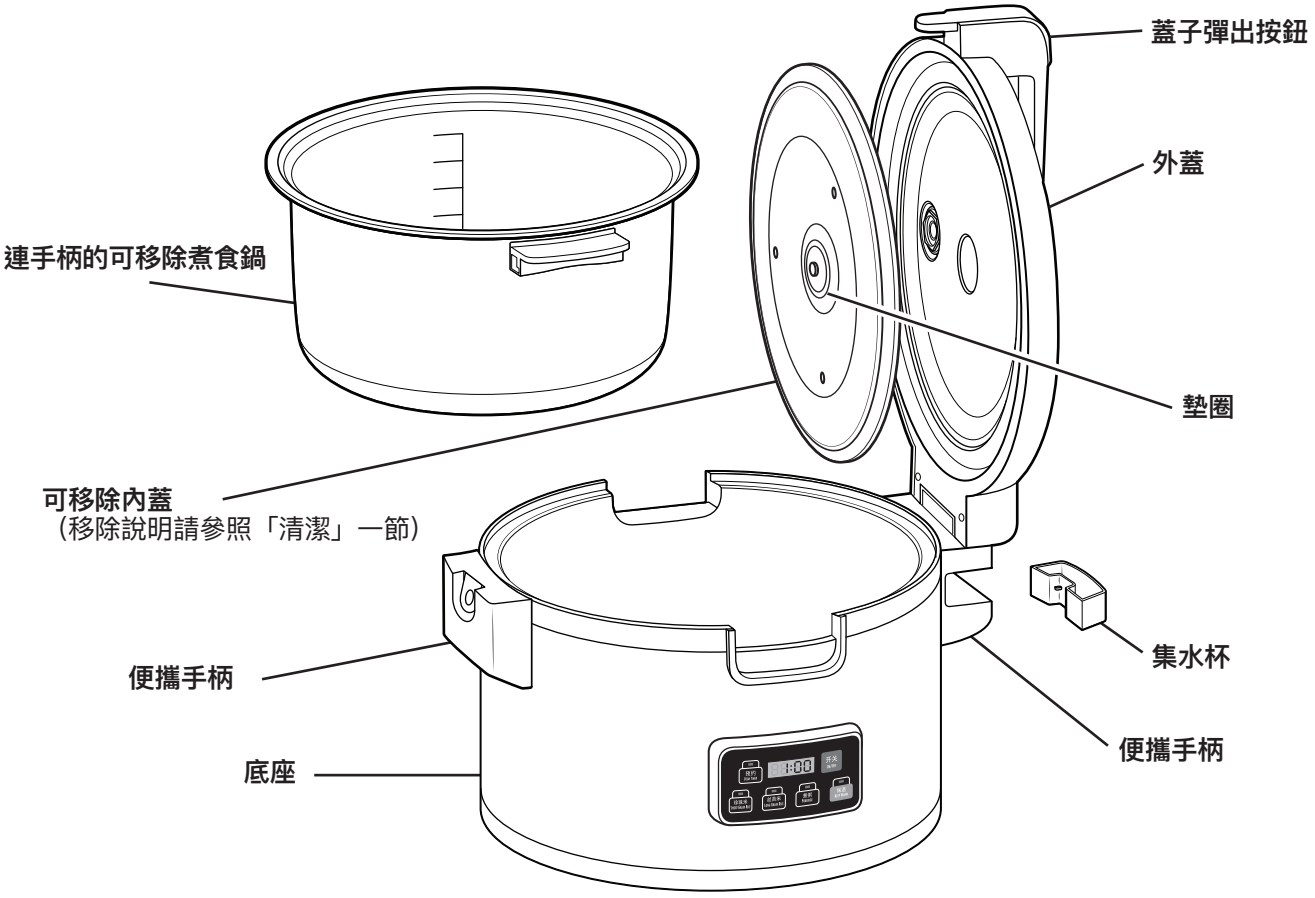

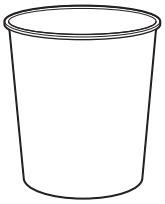


塑膠製 900 ml 量米杯



飯勺

控制板

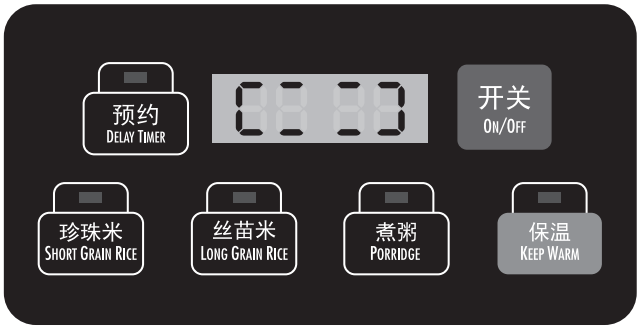






備註： 每次使用後應清潔電飯煲，避免殘渣累積。請每天消毒。

消毒

1. 把電飯煲、可移除蓋子、飯勺和量杯於消毒溶液中浸 2 分鐘。
2. 請風乾。
3. 使用乾淨的紙巾和消毒劑擦內蓋的所有區域。
4. 使用前請用清水沖洗。

建議消毒溶液：
每 1 加侖 [3.8 公升] 清水 (60˚F [16˚C]) 加 1 湯匙 [15 ml] 家用漂白劑，按漂白劑的指示混合。

實用小建議：
- 煮食時間和水位因應米粒種類而有所不同。
- 煮飯時，米與水的比例最重要。請參照米包的指示。
- 為免溢出和/或過熱，切勿讓加進煮食鍋的米和水超出 45 杯 (8.2 公升) 指示線。

電飯煲煮飯表

米粒類型	第一步：添加生米	第二步：把水加到煮食鍋的水線	飯量 (標準 8 安士 [227 g] 量杯)	大約煮食時間
絲苗米	9 個量米杯	45	90 杯 +	65–75 分鐘
粳米	9 個量米杯	45	90 杯 +	55–60 分鐘

疑難排解指南


問題	解決方法
無法啟動電飯煲。	• 電飯煲電源未插入。請確認電飯煲的電源插頭已插進正常運作的電插座。按「開」。
飯未煮熟。	• 水量不足。 • 把煮食鍋穩固置於底座內。**備註：**確認煮食鍋的底部並未彎曲或變形，否則將無法良好導熱。如需替換煮食鍋，請致電本指南第 3 頁的免費客戶支援電話。
飯煮得糊爛。	• 水量太多請減少水量。






珍珠米
SHORT GRAIN RICE



丝苗米
LONG GRAIN RICE

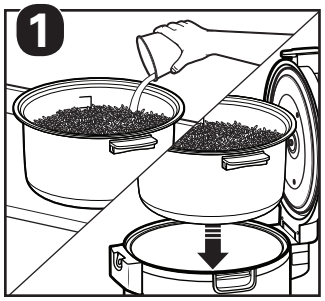




1

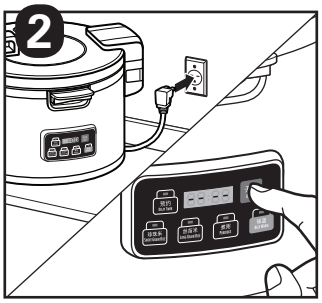

2

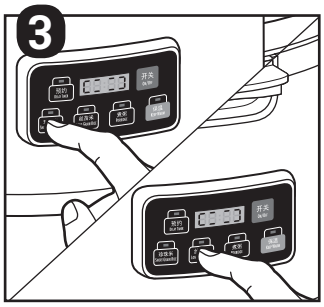
3

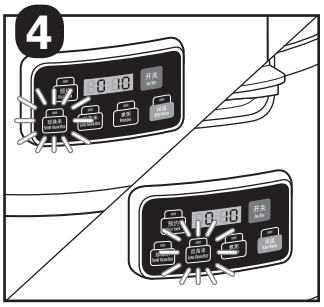
4

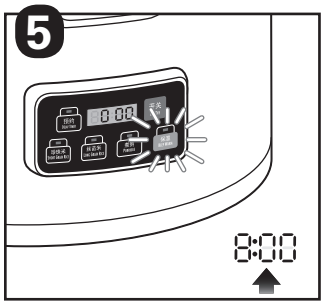
5
8:00

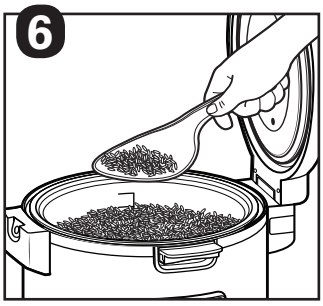

6

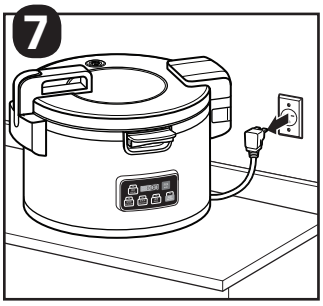

7






煮粥
PORRIDGE

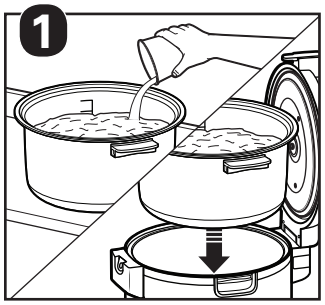



1

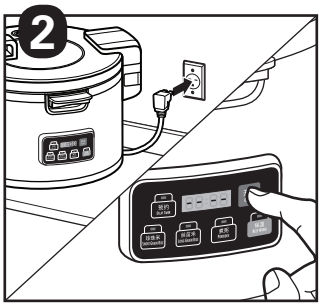

2

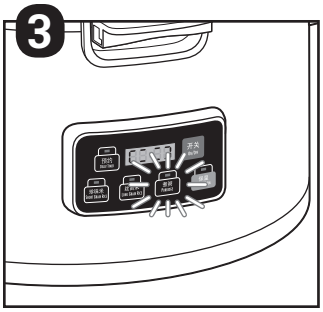
3

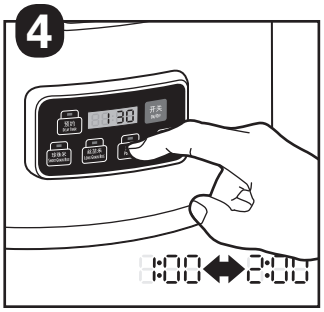

4
1:30
1:00
2:00

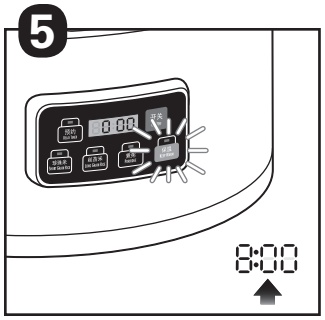
5
8:00



6

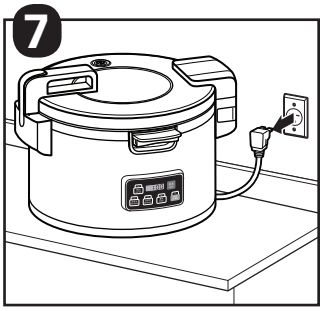
7



预约
DELAY TIMER
珍珠米
SHORT GRAIN RICE
丝苗米
LONG GRAIN RICE

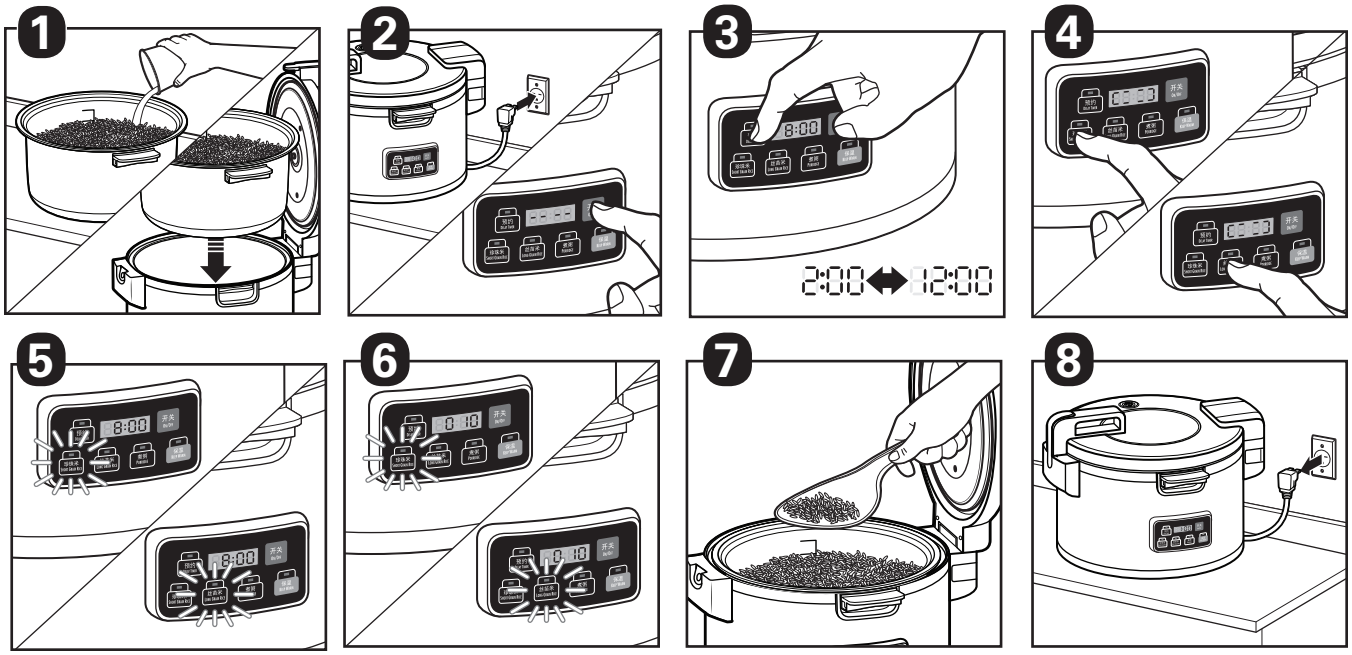

1
2
3
2:00
12:00
4
5
8:00
6
0:10
7
8


预约
DELAY TIMER
煮粥
PORRIDGE

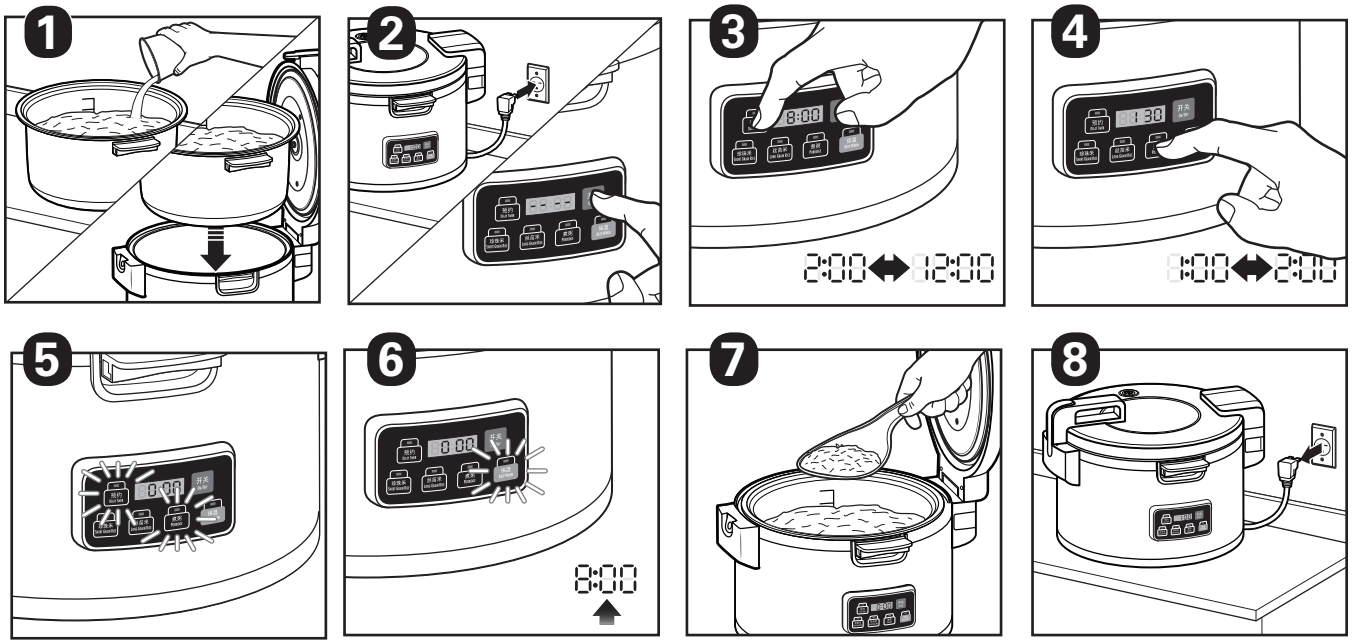
1
2
3
2:00
12:00
4
1:30
8:00
2:00
5
6
0:00
8:00
7
8



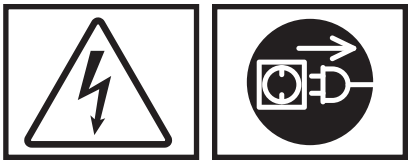

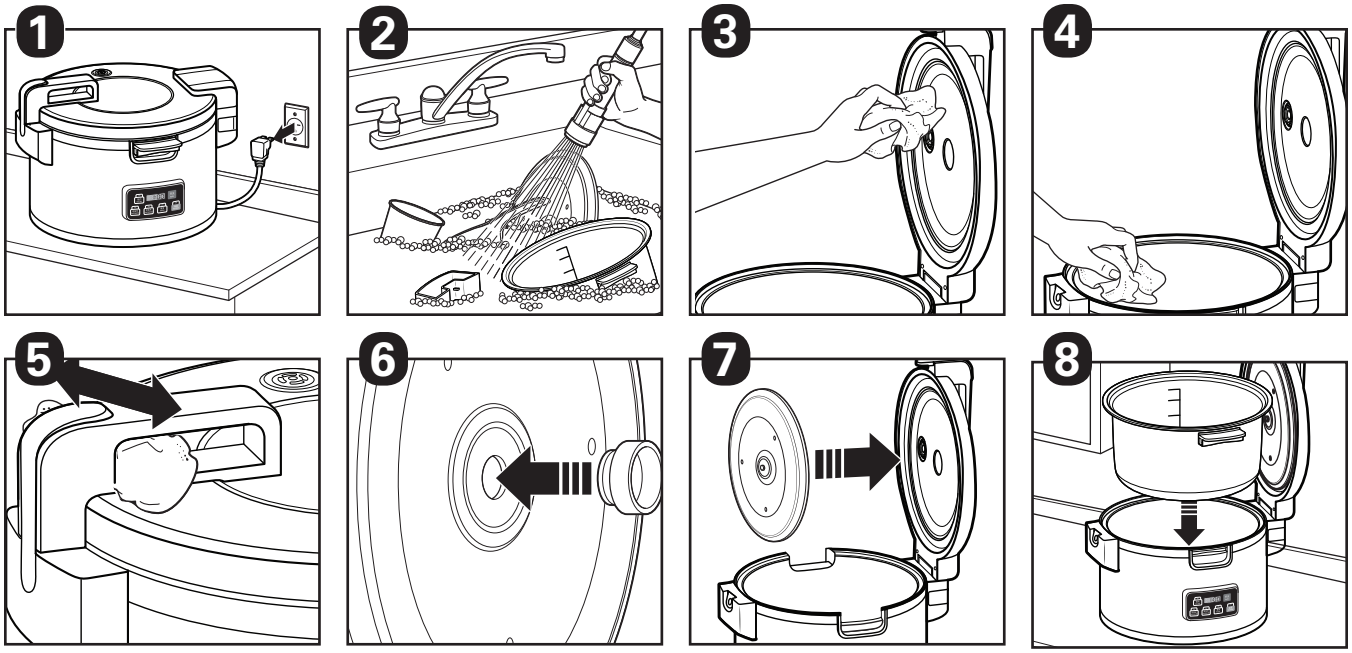

Hamilton Beach
COMMERCIAL

4421 Waterfront Drive
Glen Allen, VA 23060

840333200
10/19

www.hamiltonbeachcommercial.com