


10

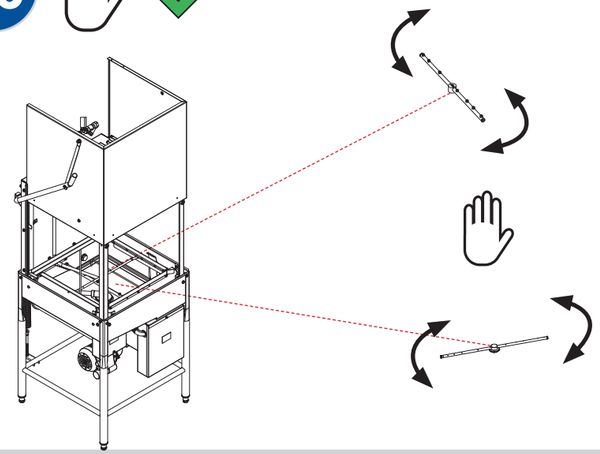


11

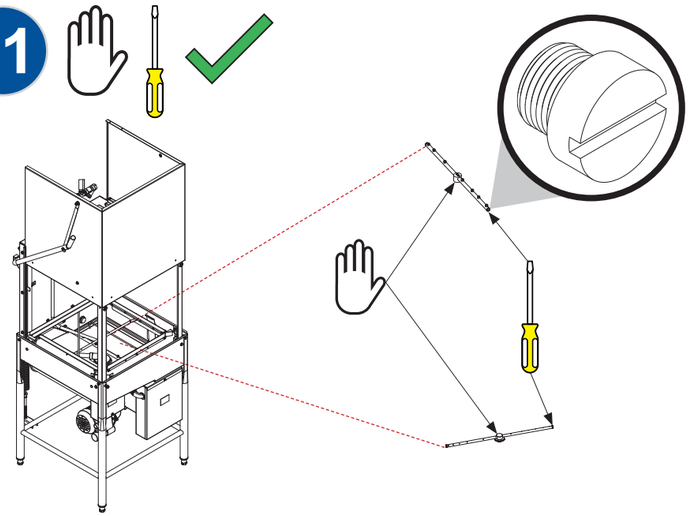

12

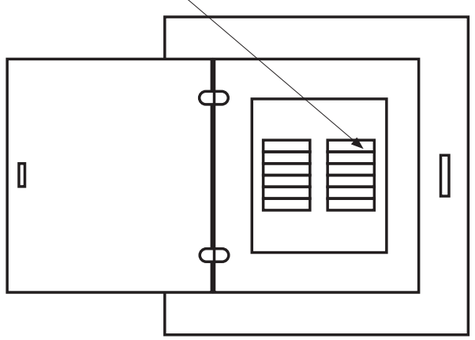

13

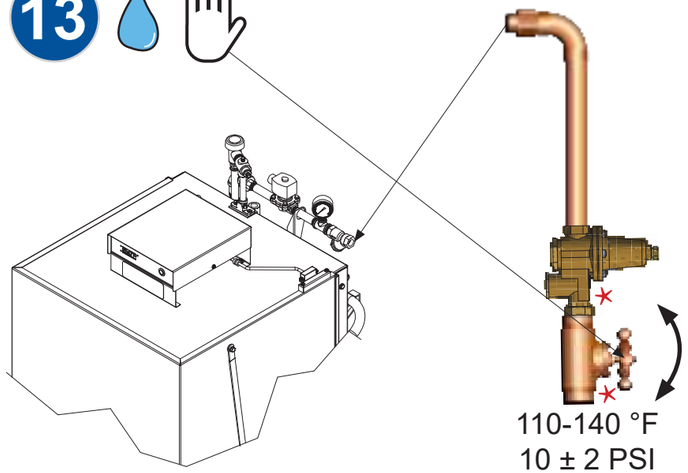


For Technical Support, call the number below.

For the NXP-HTD Manual, scan the QR Code below or go to our website.

**1.888.800.5672**
**www.jacksonwws.com**

# Jackson®
## Warewashing Systems

# INSTALL QUICK GUIDE

# NXP-HTD®



= risk of electric shock
riesgo de electrocución
risque de décharge électrique

= caustic chemicals
químicos cáusticos
produits chimiques caustiques

= ground wire
cable a tierra
fil de terre

= verify
verificar
vérifier

= use fingers/hands
utilizar los dedos/manos
utilisez vos doigts/mains


= use eyes
utiliza tus ojos
utilisez vos yeux

= reference data plate
mire la placa de datos
regarder la plaque signalétique

= water
agua
eau

= not supplied
no se suministra
non fourni


= level
nivel
niveau

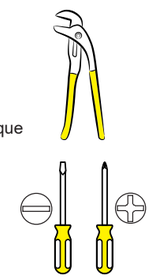




07610-004-91-84-A


1

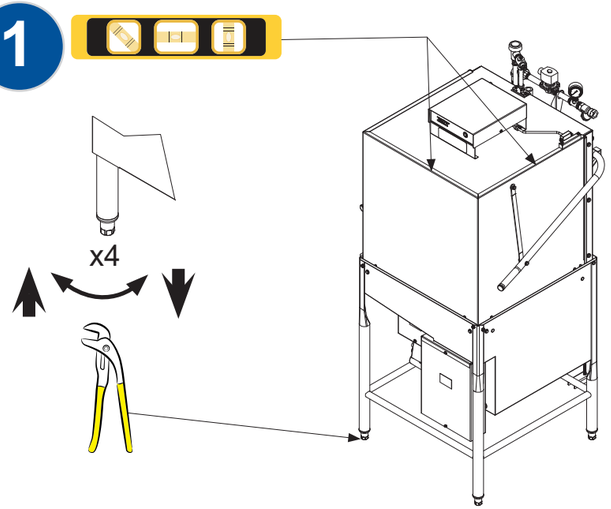



2

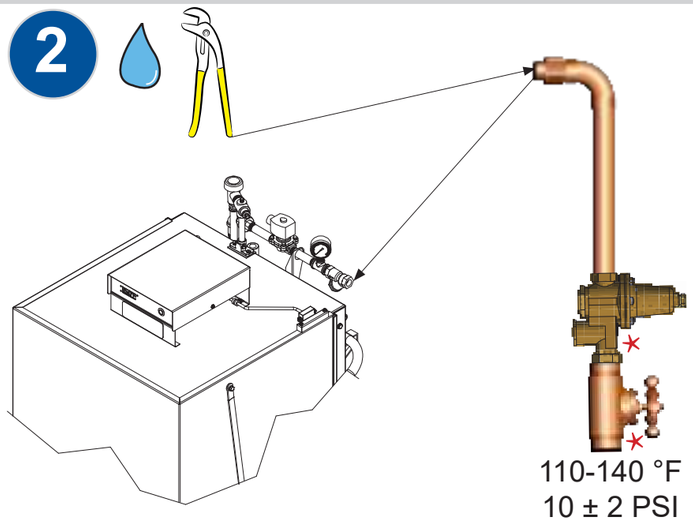


3

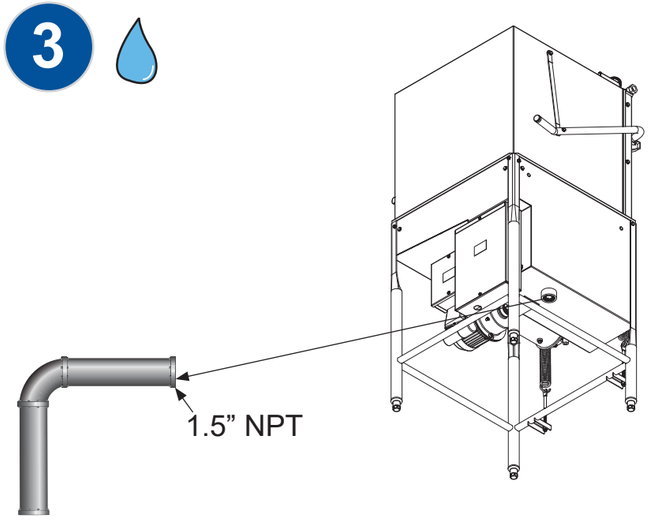



4

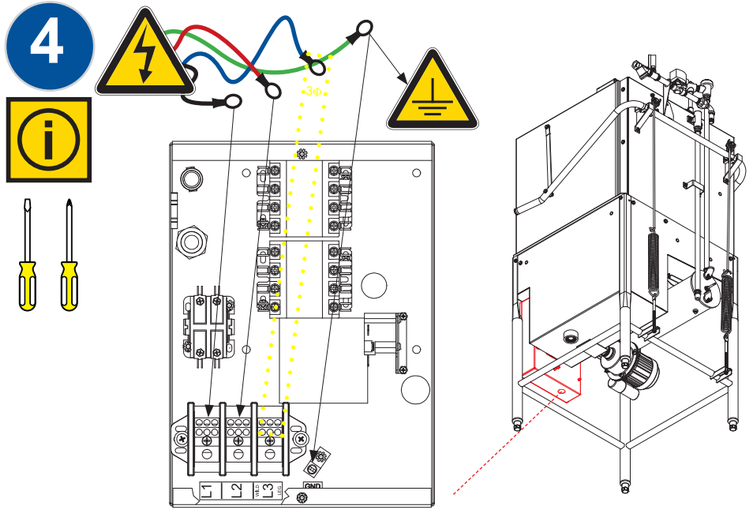


5


460 V Only

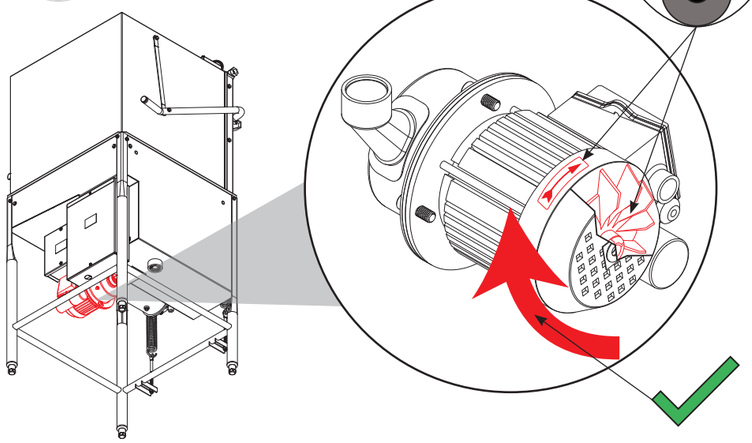

6

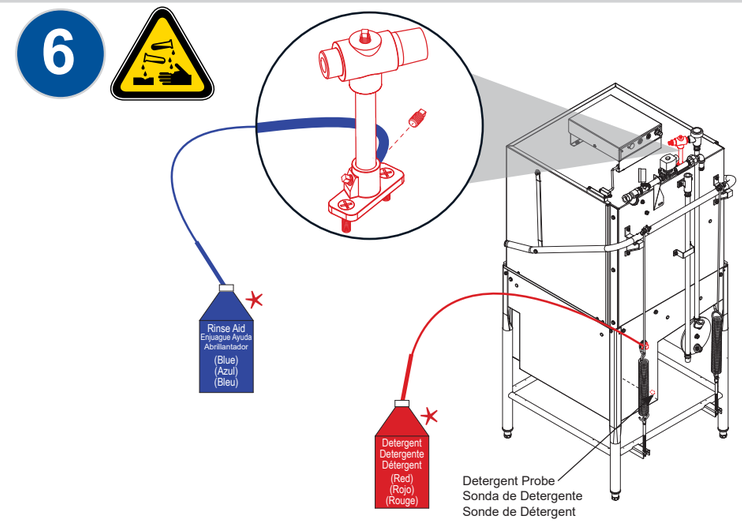



7

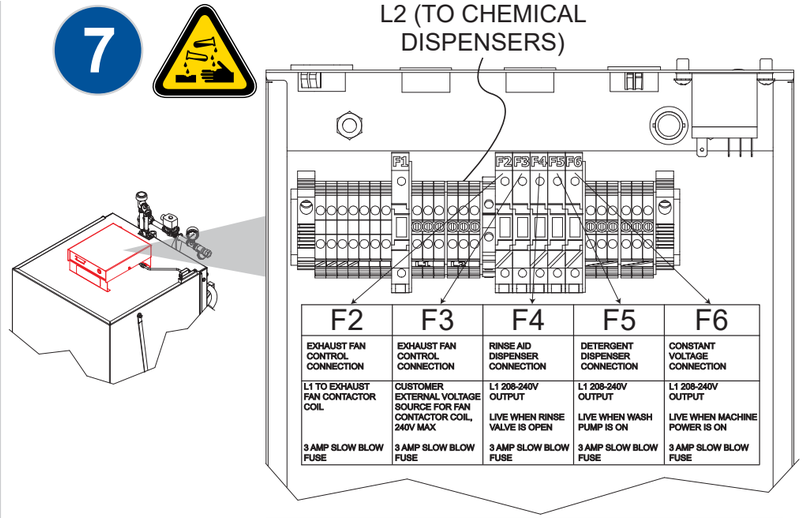


| F2 | F3 | F4 | F5 | F6 |
|---|---|---|---|---|
| EXHAUST FAN CONTROL CONNECTION | EXHAUST FAN CONTROL CONNECTION | RINSE AID DISPENSER CONNECTION | DETERGENT DISPENSER CONNECTION | CONSTANT VOLTAGE CONNECTION |
| L1 TO EXHAUST FAN CONTACTOR COIL<br>3 AMP SLOW BLOW FUSE | CUSTOMER EXTERNAL VOLTAGE SOURCE FOR FAN CONTACTOR COIL, 240V MAX<br>3 AMP SLOW BLOW FUSE | L1 208-240V OUTPUT<br>LIVE WHEN RINSE VALVE IS OPEN<br>3 AMP SLOW BLOW FUSE | L1 208-240V OUTPUT<br>LIVE WHEN WASH PUMP IS ON<br>3 AMP SLOW BLOW FUSE | L1 208-240V OUTPUT<br>LIVE WHEN MACHINE POWER IS ON<br>3 AMP SLOW BLOW FUSE |

8

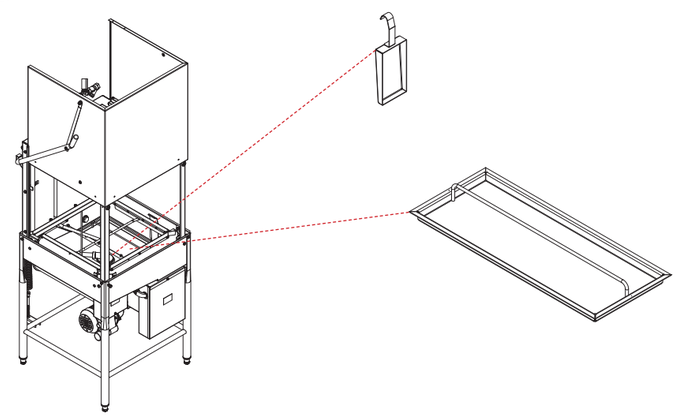

9

