ENAPART





93 S Railroad Avenue Unit C
Bergenfield NJ 07621 USA
www.enapart.com
sales@enapart.com

Friedrich-Ebert-Anlage 36, 60325
Frankfurt am Main, Germany
www.enapart.de
anfrage@enapart.de

〒584-0023　大阪府富田林市若松町
東2丁目2番16号
www.enapart.co.jp
sales@enapart.co.jp

Via del Canneto 35,
Borgosatollo, Brescia - Italia
www.enapart.it
vendite@enapart.it

4 boulevard Carnot, 95400
villiers-le-bel, Paris, France
www.enapart.fr
sales@enapart.fr

PLAZA NUESTRA SEÑORA DE LAS
NIEVES 12 ,LOCAL ,50012,ZARAGOZA
www.enapart.es
ventas@enapart.es

Barbaros Mah. Ihlamur Bul. Ağaoğlu
My Newwork No:3/15 Ataşehir / İstanbul
www.enapart.net
satis@enapart.net

65049, ОДЕСА, ВУЛИЦЯ ІВАНА
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3
www.enapart.com.ua
sales@enapart.com.ua


Складова база „Онгъл“, Склад А2, п.к.
4006, гр. Пловдив, България
www.enapart.bg
sales@enapart.bg

PRIVADA 10 B SUR #3908 COL.
ANZUREZ, C.P. 72530, PUEBLA,PUE
www.enapart.com.mx
sales@enapart.com.mx

MUNICIPIUL BUCUREŞTI, SECTOR 3,
B-DUL BASARABIA, NR.250, CORP P+5
www.enapart.ro
sales@enapart.ro

3 Austin Mews, High Street, Hemel
Hempstead, HP1 3AF , United Kingdom
www.enapart.co.uk
sales@enapart.co.uk

CAD drawing data catalog is available.

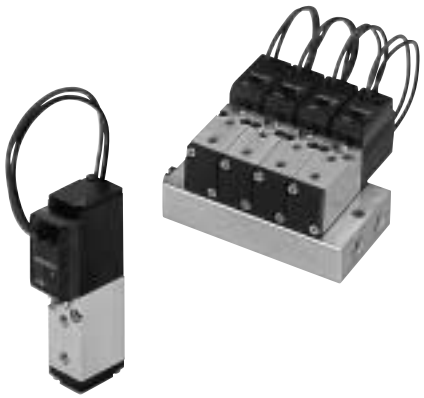

KOGANEI

VALVES GENERAL CATALOG

SOLENOID VALVES 010 SERIES

INDEX


Features — 61
Basic Models and Configuration — 62
Specifications — 63
Solenoid Valve/Manifold Order Code — 65
Operating Principle and Symbol — 66
Dimensions of Solenoid Valve — 67
Dimensions of Manifold — 69
Handling Instructions and Precautions — 71

⚠ **Caution** **Before use, be sure to read the "Safety Precautions" on p. 31.**

POWERFUL & LOW POWER CONSUMPTION

SOLENOID VALVES 010 SERIES

The Solenoid Valves 010 series achieves high reliability, powerful action, and low current with a thin-body 10mm [0.394in.] valve width.
All of these highly reliable 5-port valves incorporate flywheel diodes for surge suppression as a standard feature, to ensure highly reliable operation.
Capable of mounting valves on the manifolds for up to 20 units, this series is the optimum response to customers' requirements for both economy and diversity, enabling operation for double acting cylinders up to ϕ 16 [0.630in.] bore.

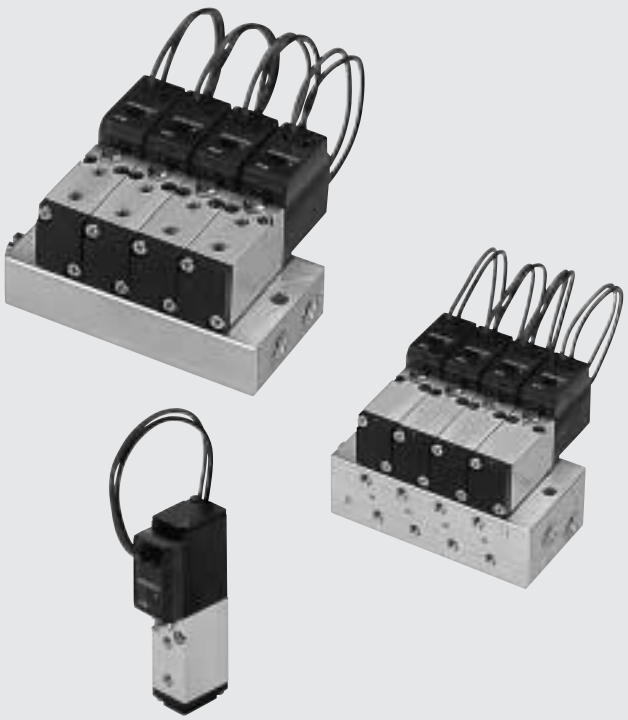

010-4E1
- Pilot type solenoid valve
- 5-port
- Effective area 0.2mm^2 [Cv:0.01]
- Power consumption 1.2W

Basic Models and Configuration

Single unit

Pilot type solenoid valve

010-4E1

5-port


Direct piping



Single solenoid

010-4E1

Sub-base piping

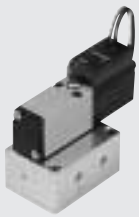

Single solenoid


A010-4E1-25

Manifold


010-4E1

Small sized manifold for 5-port valves

010MB□F—F type (P, R) manifold

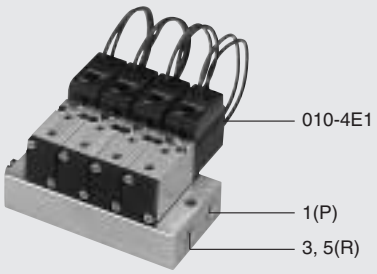

010MB□A—A type (all port) manifold

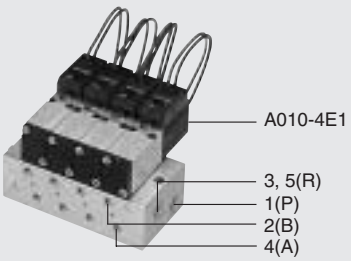

SOLENOID VALVES
010 SERIES

Basic Models and Valve Functions

Item \ Basic model	Direct piping, F type manifold	Sub-base piping, A type manifold
	010-4E1	**A010-4E1**Note
Number of positions	2 positions	
Number of ports	5 ports	
Valve function	Single solenoid	

Remark: For optional specifications and order code, see p.65.
Note: **A010-4E1**, except one with a sub-base, is for A type manifolds only. It cannot be used as a single unit.

Specifications

Item \ Basic model		Direct piping, F type manifold	Sub-base piping, A type manifold
		010-4E1	**A010-4E1**
Media		Air	
Operation type		Internal pilot type	
Effective area〔Cv〕Note1 mm²		1(P)→4(A) 0.2〔0.01〕 4(A)→5(R1), 2(B)→3(R2) 0.3〔0.02〕	
Port size Note2		M3×0.5	
Lubrication		Not required	
Operating pressure range MPa {kgf/cm²} [psi.]		0.15～0.7 {1.5～7.1} [22～102]	
Proof pressure MPa {kgf/cm²} [psi.]		1.05 {10.7} [152]	
Response time Note 3 ms ON/OFF	DC5V, DC12V	4/8 or below	
	DC6V, DC24V	4/8 or below	
Maximum operating frequency Hz		5	
Minimum time to energize for self holding ms		—	
Operating temperature range (atmosphere and media) °C [°F]		5～50 [41～122]	
Shock resistance m/s²{G}		1373.0 {140.0} (Axial direction 392.3 {40.0})	
Mounting direction		Any	

Notes: 1. For details, see the effective area on p.64.
2. For details, see the port size on p.64.
3. Values when air pressure is 0.5MPa {5.1kgf/cm²} [73psi.].


Solenoid Specifications

Item \ Rated voltage		DC5V	DC6V	DC12V	DC24V
Type		With built-in flywheel diodes for surge suppression			
Operating voltage range DC V		4.5～5.5 (5±10%)	5.4～6.6 (6±10%)	10.8～13.2 (12±10%)	21.6～26.4 (24±10%)
Current (Power consumption when rated voltage is applied) mA (W)		246 (1.2)	201 (1.2)	103 (1.2)	52 (1.2)
Maximum allowable leakage current mA		30	25	15	5
Insulation resistance MΩ		Over 100			
Wiring typeNote	Standard	Grommet type			
	Optional	Plug connector type			
Lead wire lengthNote		300 mm [11.8in.]			
Color of lead wire		Green（+） Black（−）	Blue（+） Black（−）	Brown（+） Black（−）	Red（+） Black（−）
Color of LED indicator		Red			
Surge suppression (as standard)		Flywheel diode			


Note: See made to order on p.65.

Flow Rate


1(P)→4(A)

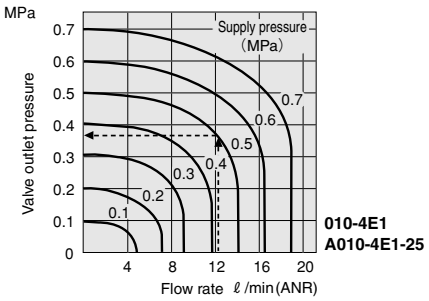

4(A)→5(R1)

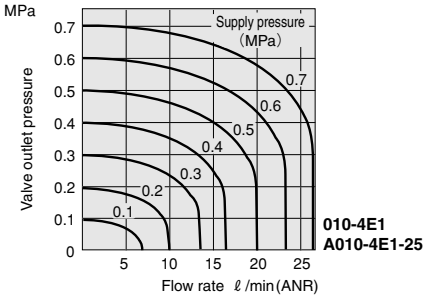

2(B)→3(R2)

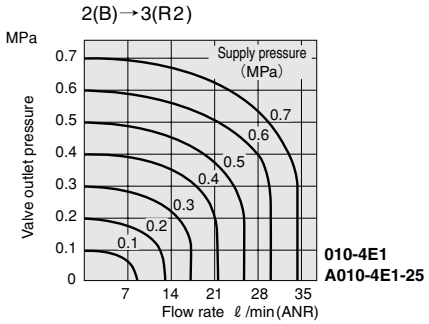

1MPa = 145psi., 1 ℓ/min = 0.0353ft.^{3}/min

How to read the graph (For 1(P)→4(A))
When the supply pressure is 0.5MPa [73psi.] and flow rate is 12 ℓ/min [0.42ft.^{3}/min] (ANR), the valve outlet pressure becomes 0.36MPa [52psi.].

Effective Area〔Cv〕

mm^2

Basic model	Standard (Single valve)	Remarks
010-4E1	1(P)→4(A) 0.2〔0.01〕 4(A)→5(R1) 0.3〔0.02〕 2(B)→3(R2) 0.4〔0.02〕	● For the case with quick fitting TSH4-M3M attached to the 1(P), 4(A), and 2(B) ports. ● Same values as for the case with quick fitting TSH4-M3M attached to the 4(A) port on F type manifold.
A010-4E1	1(P)→4(A) 0.2〔0.01〕 4(A)→5(R1) 0.3〔0.02〕 2(B)→3(R2) 0.4〔0.02〕	● For the case with quick fitting TSH4-M5M attached to the 1(P) port and quick fitting TSH4-M3M attached to the 4(A) port on A type manifold.

Solenoid Valve Mass

g [oz.]

Basic model	Mass
010-4E1	20 [0.71]
A010-4E1	20 [0.71] (38 [1.34])

Remark: Figures in parentheses ( ) are the mass with sub-base: **-25**.

Manifold Mass

g [oz.]

Manifold model	Mass calculation of each unit (n=number of units)	Block-off plate
010MB□F	(8.5×n)+13 [(0.300×n)+0.46]	3 [0.11]
010MB□A	(13.5×n)+15 [(0.476×n)+0.53]	3 [0.11]

Solenoid Valve Port Size

Basic model	Port	Port specification	Port size
010-4E1 Note	1(P), 4(A), 2(B)	Female thread	M3×0.5
A010-4E1-25	1(P)	Female thread	M5×0.8
	4(A), 2(B)	Female thread	M3×0.5
	3, 5(R)	Female thread	M5×0.8

Note: The 3(R2) and 5(R1) ports are 1.2mm diameter holes, not to be used for connecting.

Manifold Port Size

Manifold model	Port	Location of piping port	Port size
010MB□F	1(P)	Manifold	M5×0.8
	4(A), 2(B)	Valve	M3×0.5
	3, 5(R)	Manifold	M5×0.8
010MB□A	1(P)	Manifold	M5×0.8
	4(A), 2(B)		M3×0.5
	3, 5(R)		M5×0.8

010 Series Solenoid Valve Order Code

Mounting base/sub-base

Without mounting base and sub-base



With mounting base



●Attached to the valve body at shipping.


With sub-base



●Attached to the valve body at shipping.

Muffler

Without muffler

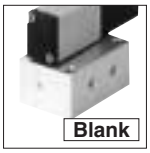

With muffler



●For sub-base piping

Wiring type

● Lead wire length: 300mm [11.8in.] is standard.

Grommet type



Straight connector with LED indicator



L connector with LED indicator



Solenoid Valve Order Code

		Basic model				Voltage
Direct piping	5-port single solenoid	**010-4E1**	**-21**		**-PSL** **-PLL**	**DC5V, DC6V DC12V, DC24V**
Sub-base piping	5-port single solenoid	**A010-4E1** Note	**-25**	**-75**		

Note : Cannot be used as a single unit.

Wiring type

● Lead wire length: 300mm [11.8in.] is standard.

Grommet type



Straight connector with LED indicator



L connector with LED indicator



Manifold Order Code

	Manifold model Number of units		Station	Basic model		Voltage
5-port single solenoid	**010MB**	**2** ⋮ **20**	**F**	**stn.□** ⋮ **stn.□**	**-010-4E1**	**-PSL** **-PLL**	**DC5V, DC6V DC12V, DC24V**
			A		**-A010-4E1**		

●Valve mounting location from the left-hand side when facing the 4(A), 2(B) ports. (□ : **1**～**20**)

●Specify the valve type for each station.
●Enter **-BP** when closing a station with a block-off plate without mounting a valve.

Additional Parts (To be ordered separately)

Muffler



●For sub-base piping

Block-off plate



● 010 MB F -BP
- **F** — For F type manifold
- **A** — For A type manifold
- **010** — For 010M

Made to Order

Grommet type with LED indicator



Lead wire length



●For plug connector
●Length (mm) **-1L**: 1000 [39in.] **-3L**: 3000 [118in.]

Locking protruding type manual override




●For **010-4E1, A010-4E1**

Operating Principle and Symbol


5-port

Single solenoid

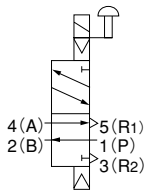

010-4E1

De-energized

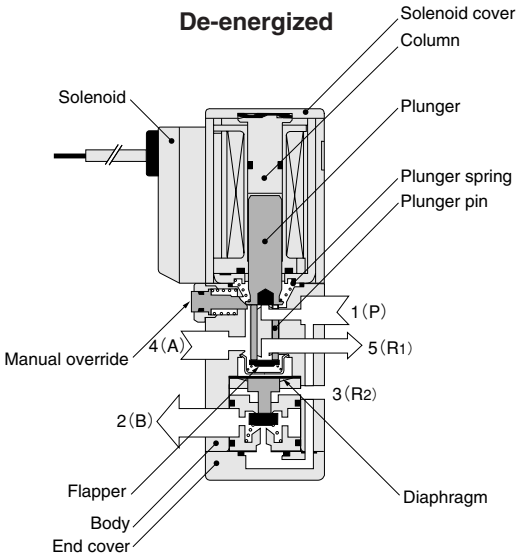


Major Parts and Materials

Parts		Materials
Valve	Body	Aluminum alloy (anodized)
	Stem	
	Flapper	Synthetic rubber
	Mounting base	Steel (zinc plated)
	Sub-base	Aluminum alloy (anodized)
	Plunger	Magnetic stainless steel
	Column	
Manifold	Body	Aluminum alloy (anodized)
	Block-off plate	Steel (nickel plated)
	Seal	Synthetic rubber

Dimensions of Solenoid Valve (mm)


010-4E1

CAD 010-4E1

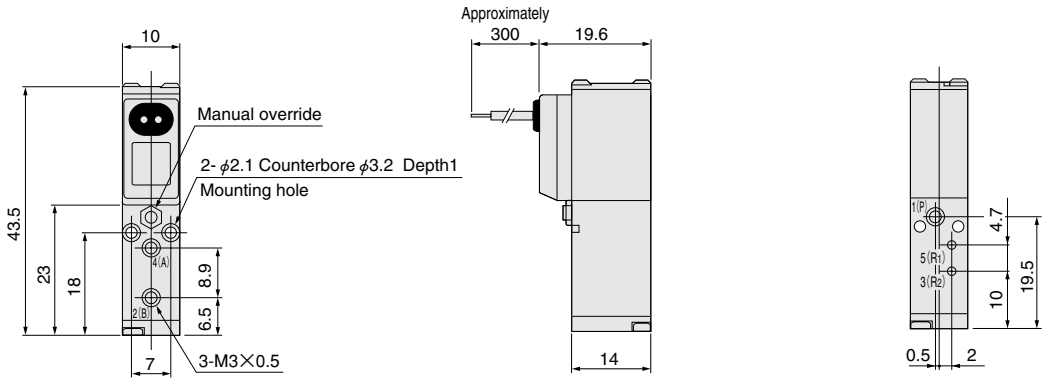


A010-4E1-25

CAD A010-4E1

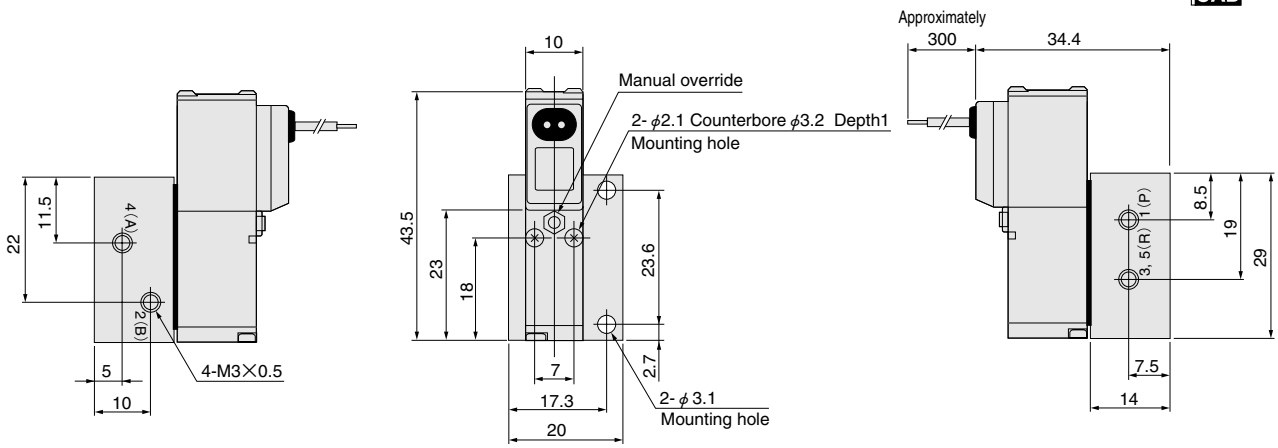


Options


●Mounting base: **-21**

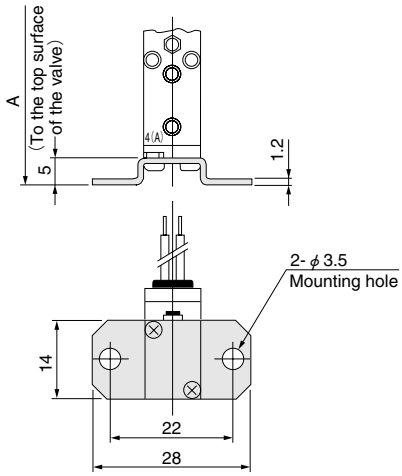


●Solenoid with straight connector: **-PSL** 010-SOL

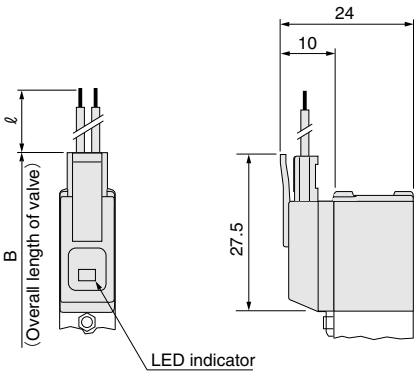

●Solenoid with L connector: **-PLL** 010-SOL

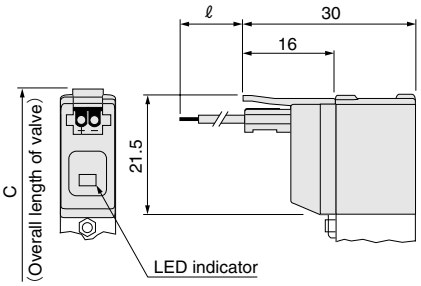

●Muffler: **-75** 010-MUFF
(Only for **A010-4E1-25**)

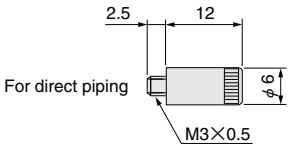


mm


Model \ Code	A	B	C	D
010-4E1	48.5	50.5	44.5	43.5

Made to Order

●Locking protruding type manual override: **-83** 010-ROCK

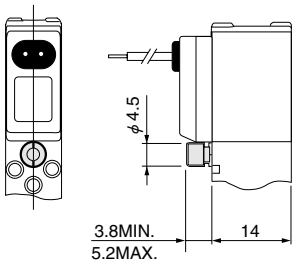

●Grommet type with LED indicator: **-L** 010-SOL

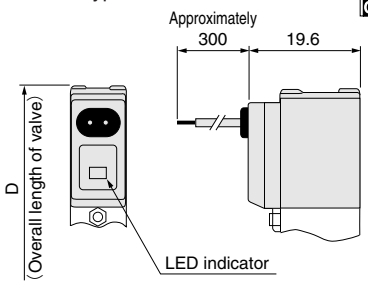



mm


Model \ Code		ℓ (Lead wire length)
-PSL, -PLL, -L (standard length)		300
Made to order	**-1L**	1000
	-3L	3000

010MB□F

010MBF

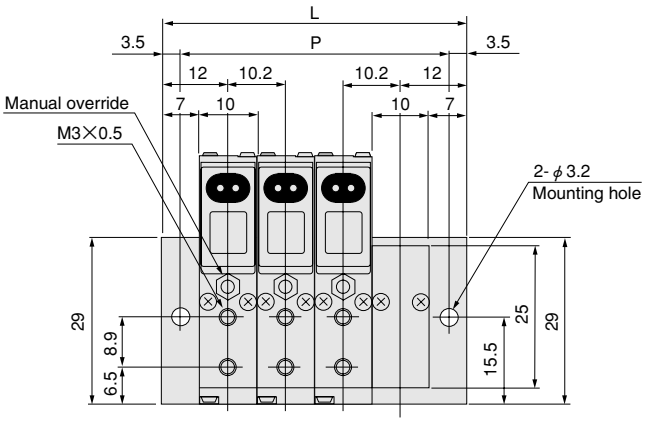

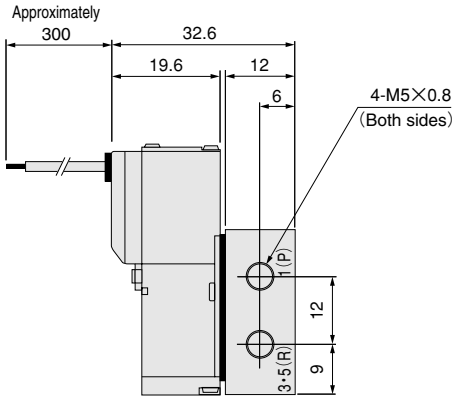

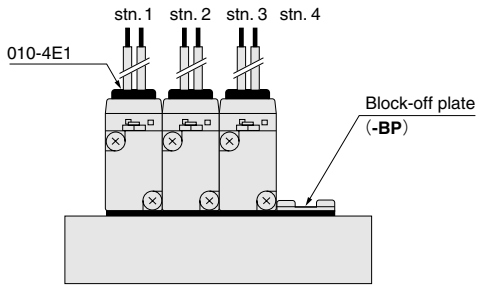

Unit dimensions


Model	P	L	Model	P	L
010MB2F	27.2	34.2	010MB12F	129.2	136.2
3F	37.4	44.4	13F	139.4	146.4
4F	47.6	54.6	14F	149.6	156.6
5F	57.8	64.8	15F	159.8	166.8
6F	68.0	75.0	16F	170.0	177.0
7F	78.2	85.2	17F	180.2	187.2
8F	88.4	95.4	18F	190.4	197.4
9F	98.6	105.6	19F	200.6	207.6
10F	108.8	115.8	20F	210.8	217.8
11F	119.0	126.0	—	—	—


For wiring options and made to order, see p.68.


Dimensions of Manifold (mm)

010MB□A

CAD 010MBA

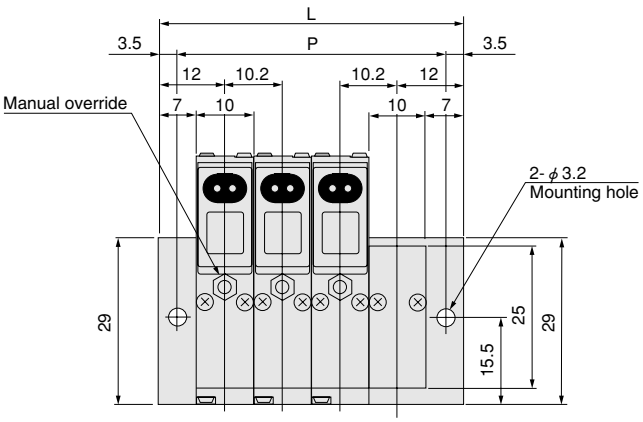

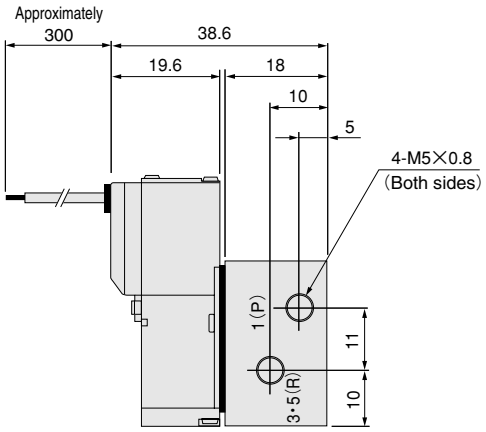

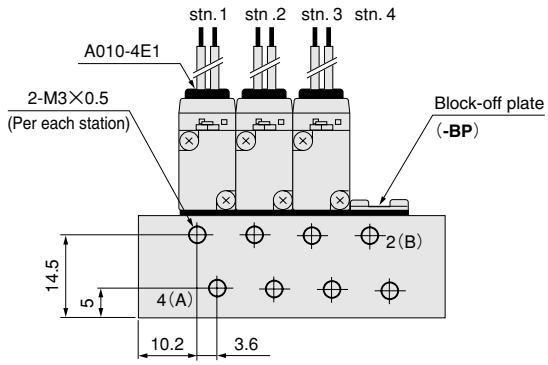

For wiring options and made to order, see p.68.

Unit dimensions


Model	P	L	Model	P	L
010MB2A	27.2	34.2	010MB12A	129.2	136.2
3A	37.4	44.4	13A	139.4	146.4
4A	47.6	54.6	14A	149.6	156.6
5A	57.8	64.8	15A	159.8	166.8
6A	68.0	75.0	16A	170.0	177.0
7A	78.2	85.2	17A	180.2	187.2
8A	88.4	95.4	18A	190.4	197.4
9A	98.6	105.6	19A	200.6	207.6
10A	108.8	115.8	20A	210.8	217.8
11A	119.0	126.0	—	—	—

Solenoid


Internal circuit

● **DC5V, DC6V, DC12V, DC24V**

Standard solenoid (Surge suppression)



Solenoid with LED indicator (Surge suppression)
Order code: -PSL, -PLL

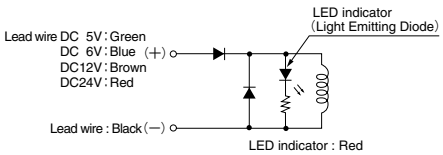


Cautions: 1. Do not apply megger between the lead wires.
2. The DC solenoid will not short circuit even if the wrong polarity is applied, but the valve will not operate.
3. Leakage current inside the circuit could result in failure of the solenoid valve to return, or in other erratic operation. Always use it within the range of the allowable leakage current. If circuit conditions, etc. cause the leakage current to exceed the maximum allowable leakage current, consult us.

Plug connector

Attaching and removing plug connector


Use fingers to insert the connector into the pin, push it in until the lever claw latches onto the protruded section of the connector housing, and complete the connection.
To remove the connector, squeeze the lever along with the connector, lift the lever claw up from the protruded section of the connector housing, and pull it out.

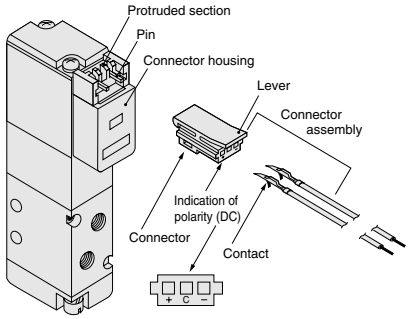

※Illustration shows the 110 series.

Crimping of connecting lead wire and contact


To crimp lead wires into contacts, strip off 4mm [0.16in.] of the insulation from the end of the lead wire, insert it into the contact, and crimp it. Be sure to avoid catching the insulation on the exposed wire crimping section.

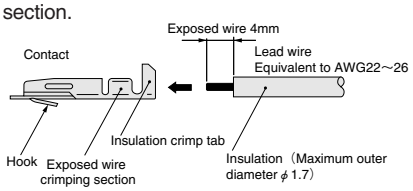

Cautions: 1. Do not pull hard on the lead wire.
2. Always use a dedicated tool for crimping of connecting lead wire and contact.
Contact: Model 702062-2M
Manufactured by Sumiko Tech, Inc.
Crimping tool: Model F1-702062
Manufactured by Sumiko Tech, Inc.

Attaching and removing contact and connector

Insert the contact with lead wire into a plug connector □ hole until the contact hook latches on and is secured to the plug connector. Confirm that the lead wire cannot be easily pulled out.
To remove it, insert a tool with a fine tip (such as a small screwdriver) into the rectangular hole on the side of the plug connector to push up on the hook, and then pull out the lead wire.

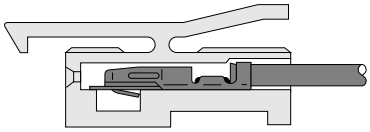


Cautions: 1. Do not pull hard on the lead wire. It could result in defective contacts, breaking wires, etc.
2. If the pin is bent, use a small screwdriver, etc. to gently straighten out the pin, and then complete the connection to the plug connector.

Manual override


Non-locking type

To operate the manual override, press it all the way down. The valve works the same as in an energized state as long as the manual override is pushed down, and returns to the rest position upon release.

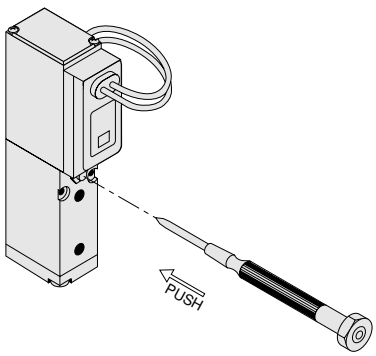

Locking protruding type

Use a small screwdriver to turn the adjusting knob several times in the clockwise direction, and lock the manual override in place. When locked, turning the adjusting knob several times in the counterclockwise direction releases a spring on the manual override, returns it to the original position, and releases the lock.
For the locking protruding type, when the adjusting knob is not turned, this type acts just like the non-locking type, the valve is energized as long as the manual override is pushed down, and it returns to the rest position upon release.

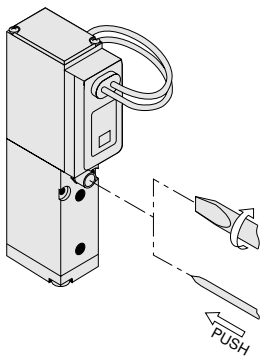

Cautions: 1. The 010 series valves are internal pilot type solenoid valves. As a result, the manual override cannot switch the main valve without air supplied from the the 1(P) port.
2. Always release the lock of the locking protruding type manual override before commencing normal operation.
3. Do not attempt to operate the manual override with a pin or other object having an extremely fine tip. It could damage the manual override button.
4. Do not turn the adjusting knob more than needed. It could result in defective operation.



Fittings

Recommended fittings

010-4E1

Parts \ Connection port		4(A), 2(B) port	1(P) port
Quick fitting		TS3-M3M TL3-M3M TLL3-M3M	TS3-M3M TL3-M3M TLL3-M3M
TAC fitting	For urethane tube	BF4BU-M3 BF3BU-M3	BF4BU-M3 BF3BU-M3
	For nylon tube	BF4-M3 BF3.2-M3	BF4-M3 BF3.2-M3
Muffler (for reference)		—	—

A010-4E1-25

Parts \ Connection port	4(A), 2(B) port	1(P) port	3, 5(R) port
Quick fitting	TS3-M3M TS4-M3M TSH4-M3M	TS3-M3M TS4-M3M TSH4-M3M	TS3-M3M TS4-M3M TSH4-M3M
Muffler (for reference)	—	—	KM-03