

vtech Disney Mickey Mouse Cafe User Guide

Parent's Guide

Mickey Mouse Café




© Disney
www.disney.com

Contents

1 INTRODUCTION
2 INCLUDED IN THE PACKAGE
3 GETTING STARTED
4 LABEL APPLICATION
5 ASSEMBLY INSTRUCTIONS
6 PRODUCT FEATURES
7 ACTIVITIES
8 ACTIVITIES
9 SONG LYRICS
10 MELODY LIST
11 CARE & MAINTENANCE
12 TROUBLESHOOTING
13 CONSUMER SERVICES
14 PRODUCT WARRANTY/CONSUMER GUARANTEES
15 Documents / Resources
15.1 References
16 Related Posts

INTRODUCTION

Thank you for purchasing the Toot-Toot Drivers ® – Mickey Mouse Café. Take Mickey Mouse and the Food Truck on a ride to pick
up food and make deliveries, triggering the three SmartPoint TM locations along the way. Plus, turn the chef's hat, spin the gears, open and close the door and windows, and move the lift up and down for even more sensory play.

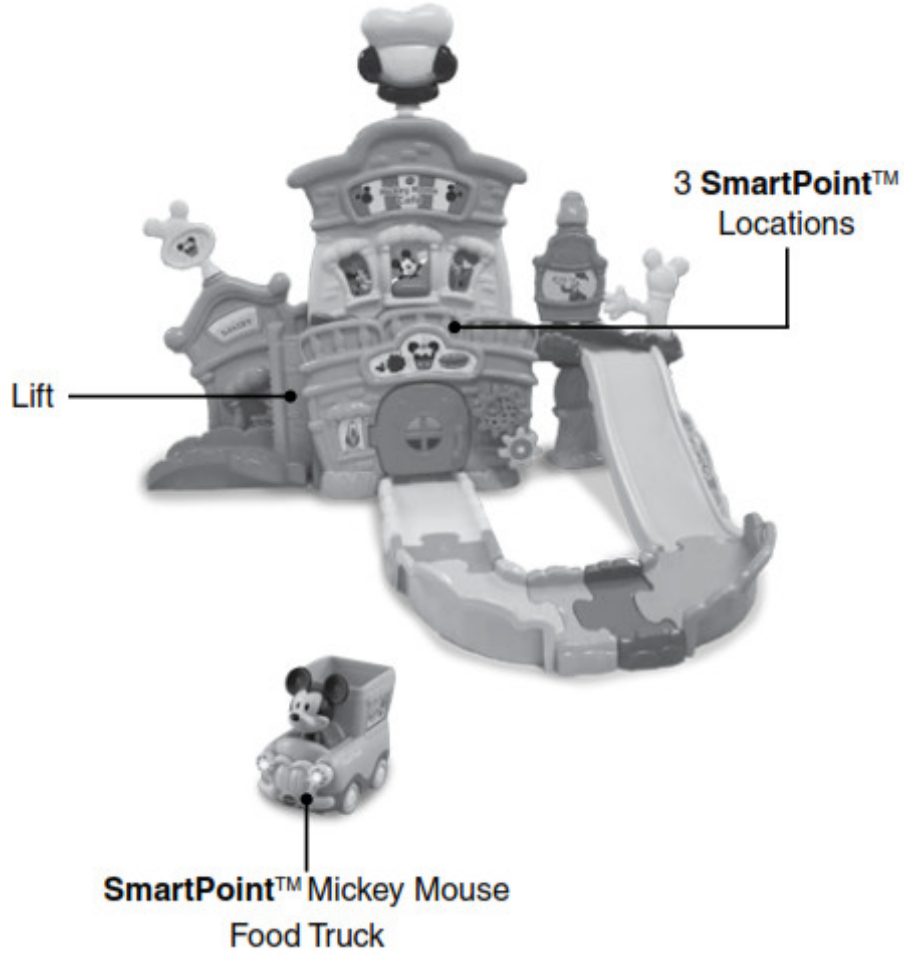

INCLUDED IN THE PACKAGE


One **SmartPoint**™ Mickey Mouse Food Truck


One chef's hat


One castle roof


One rotary sign


One left castle support


One **SmartPoint**™ lift platform



One left wall



One gate arm



One castle back support



One pickup window




One takeout bag




One **SmartPoint**™ main track



One castle

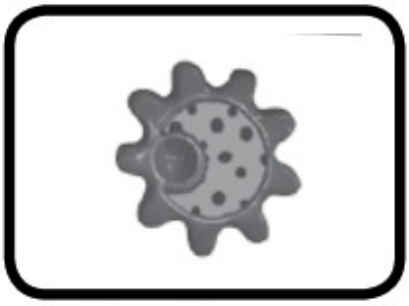

One big gear

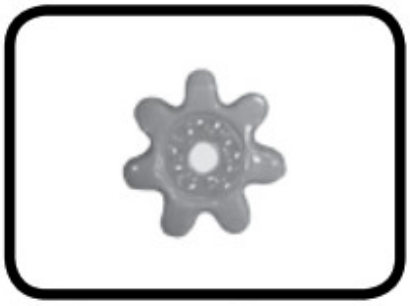

One small gear



One track support



One slide track



Two 90-degree bulge tracks



Three 1/3 length bulge tracks



One **SmartPoint**™ castle floor



One standard-length track



One castle door



One platform support




One label sheet

One Parent's Guide

WARNING
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.


Removing the Packaging Locks

1. Turn the packaging locks anticlockwise several times.
2. Pull out the packaging locks and discard them.

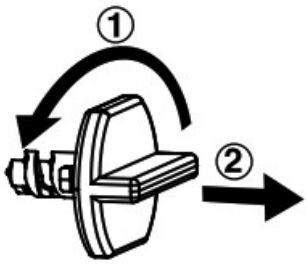

GETTING STARTED

Battery Removal and Installation
Food Truck

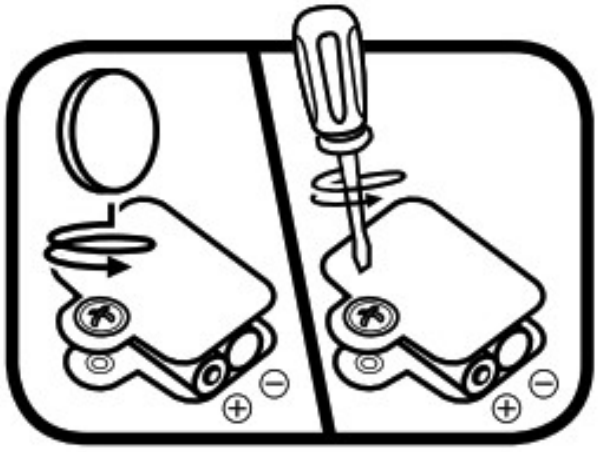

1. Make sure the unit is turned Off.
2. Find the battery cover located on the bottom of the unit, use a coin or screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

	**WARNING:** Adult assembly is required for batte Keep batteries out of reach of


VTech ®cares for the planet.
Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.
In Australia & New Zealand:

Check with your local council for curbside collections.

LABEL APPLICATION

Please securely stick the labels to the playset as indicated below:




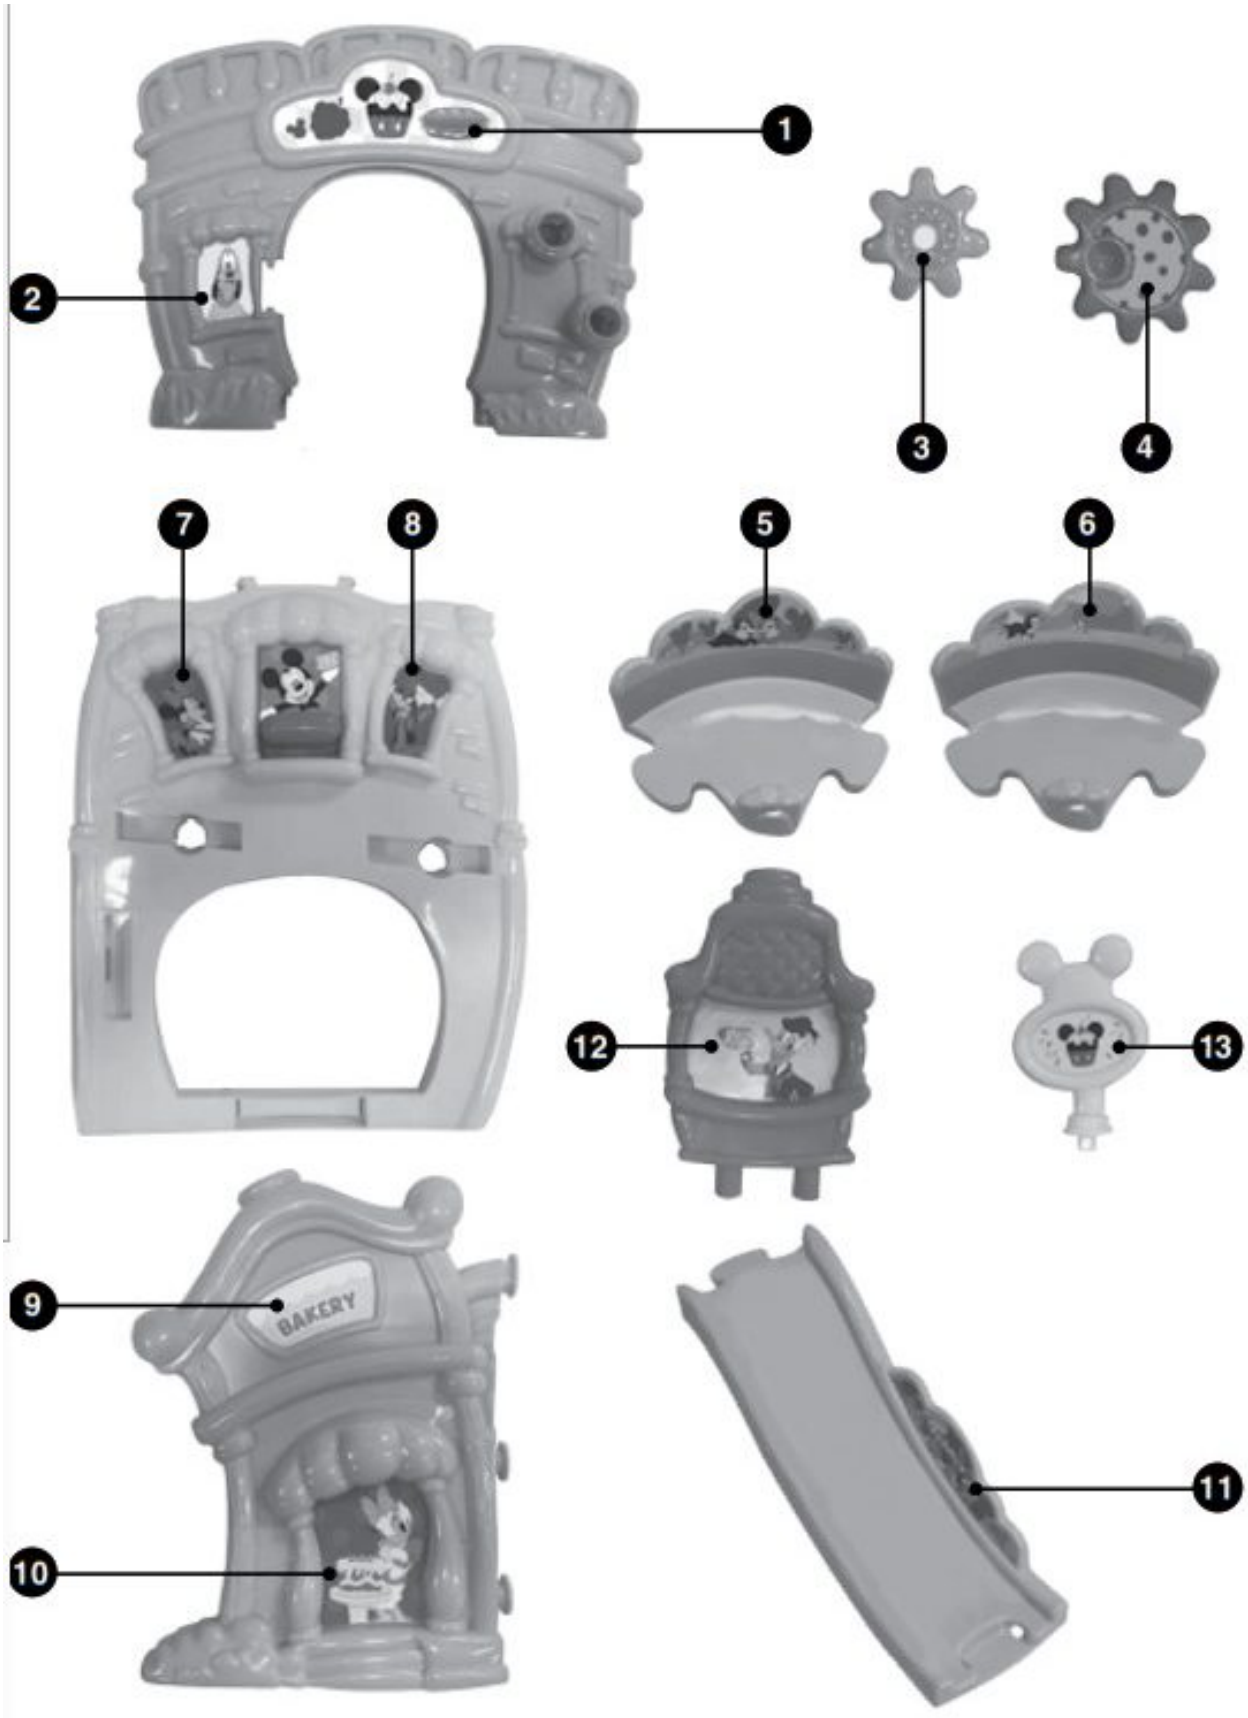


ASSEMBLY INSTRUCTIONS

Mickey Mouse Café
With the **Toot-Toot Drivers ®- Mickey Mouse Café**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Attach the Castle Door onto the front wall of the Castle. Then, attach both the Big Gear and the Small Gear onto the right side of the front wall. A click sound will indicate the pieces are secure.

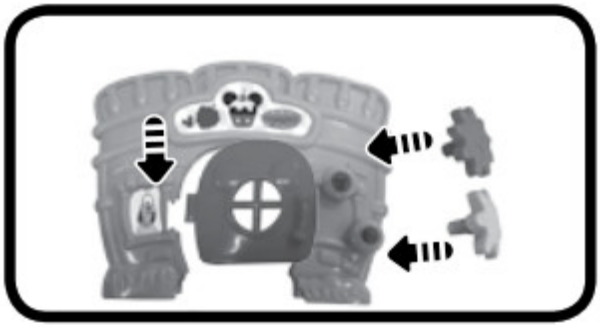


2. Attach the SmartPoint TM Main Track into the slots on the front side of the Castle Back Support. A click sound will indicate the pieces are secure.

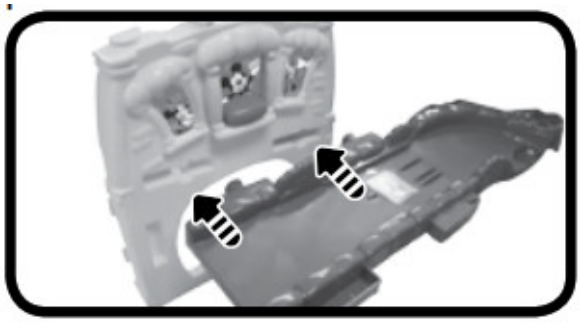


3. Set the Castle Back Support on its side. Insert the Left Wall into the slot on the left side of the Castle Back Support, beneath the SmartPointTM Main Track.

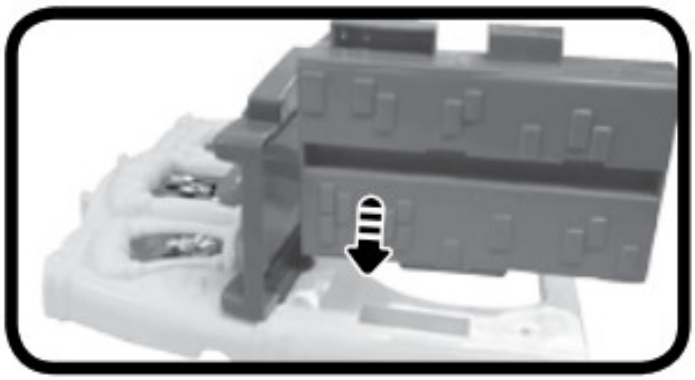


4. Turn the structure upright again and attach the Track Support beneath the right side of the SmartPoint TM Main Track.

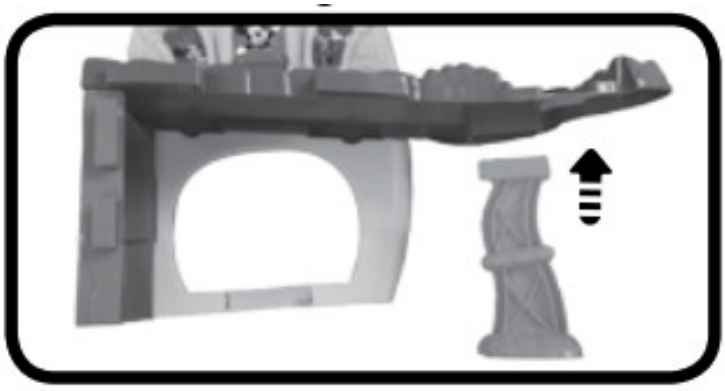

5. Connect the pegs on the Left Wall and the SmartPoint TM Main Track to the slots on the back of the Castle.

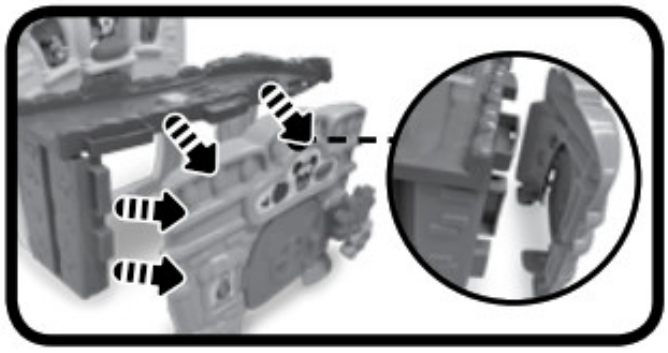


6. Connect the SmartPoint TM Castle Floor under the structure.

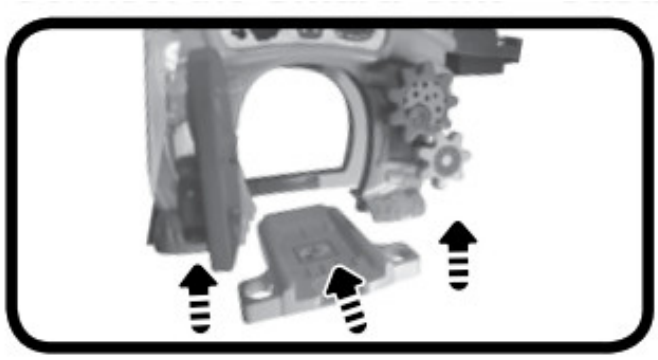


7. Attach the Platform Support to the Left Wall.



8. Attach the Left Castle Support to the Castle Back Support.

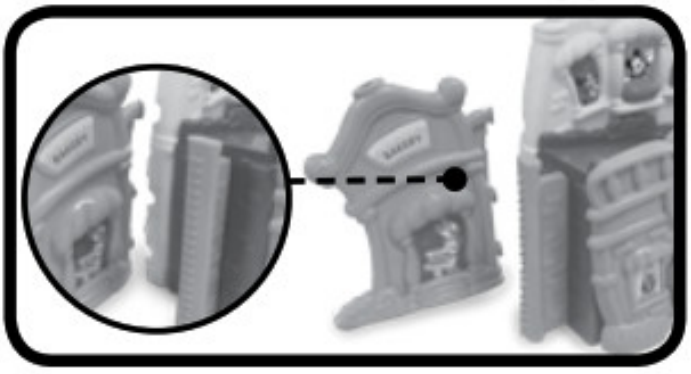


9. Attach the Castle Roof to the top of the Castle Back Support.

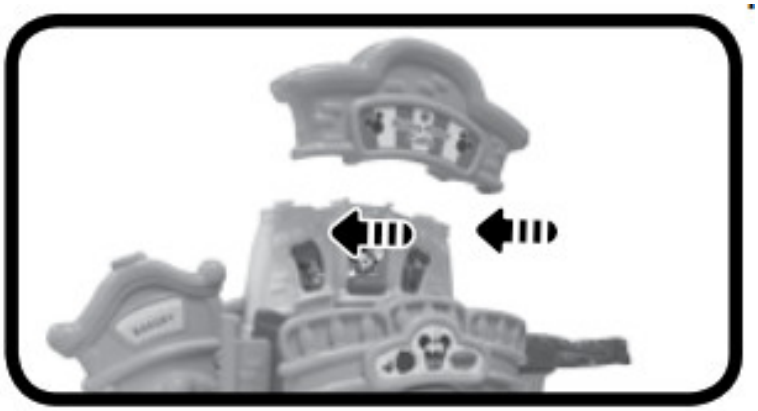


10. Connect the SmartPoint TM Lift Platform to the bottom of thePlatform Support.




11. Connect the Standard-Length Track to the front of the SmartPoint TM Castle Floor.

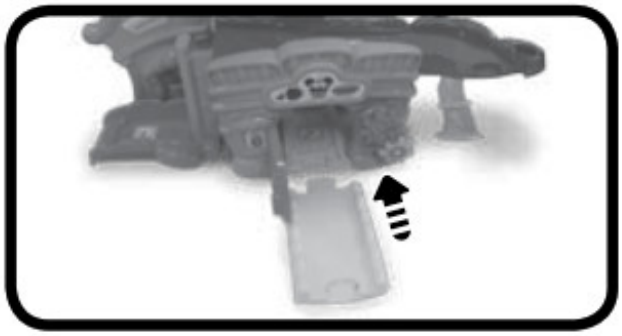

12. Link the other tracks to the Standard-Length Track in the following order: 1/3 Length Bulge Track, 90-Degree Bulge Track, two 1/3 Length Bulge Tracks, 90-Degree Bulge Track.

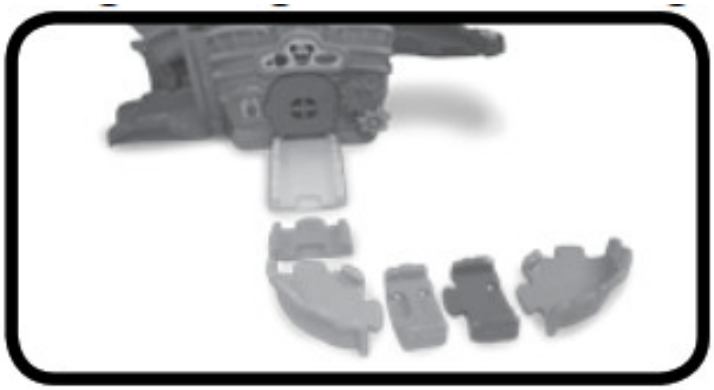

13. Use the Slide Track to link the SmartPoint TM Main Track to the second level with the 90 Degree Bulge Track on the first level.

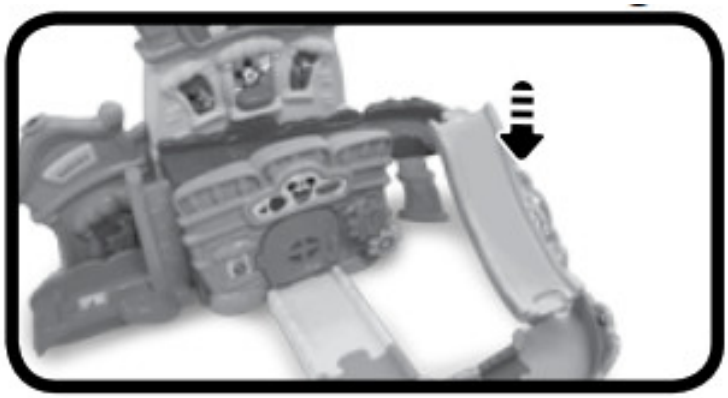


14. Insert the Rotary Sign into the top of the Left Castle Support.



15. Attach the Gate Arm to the right side of the SmartPoint TM Main Track. A click sound will indicate the pieces are secure.



16. Attach the Pickup Window next to the Gate Arm and attach the Takeout Bag to the top of the Pickup Window.

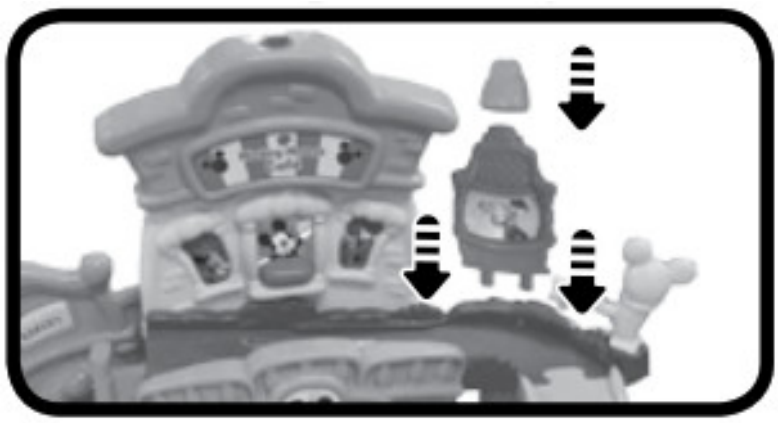

17. Insert the Chef's Hat into the top of the Castle Roof.




Once you've completed the above steps, you are ready to play! You can connect these pieces to other Toot-Toot Drivers ® play sets and tracks (each sold separately).



PRODUCT FEATURES

Mickey Mouse Food Truck

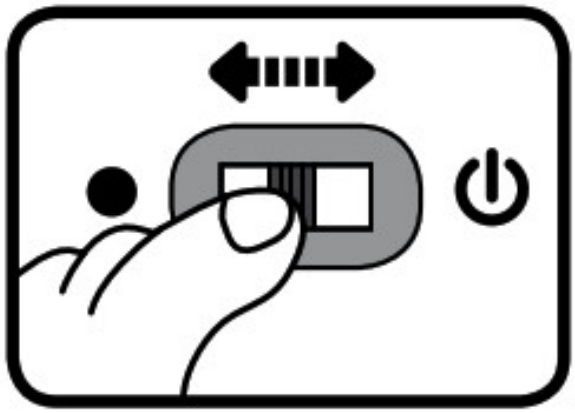

1. On/Off Switch To turn the Food Truck On, slide the On/Off Switch to the On position. To turn the Food Truck Off, slide the On/Off Switch to the Off position.
2. Automatic Shut-Off To preserve battery life, the Food Truck will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing Mickey Mouse, pushing the Food Truck quickly, or triggering a SmartPoint TM location.

Note: This product is in Try-Me mode in the packaging. After opening the package, turn the Food Truck Off and On again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.


ACTIVITIES

Food Truck

1. Character Button Press Mickey Mouse to hear fun phrases, songs, sounds and melodies. The lights will flash with sounds.



2. Sounds and Melodies Push the Food Truck to hear fun sounds and phrases. While a melody is playing, continue pushing the Food Truck to add in fun sounds on top of the melody. The lights will flash with sounds.

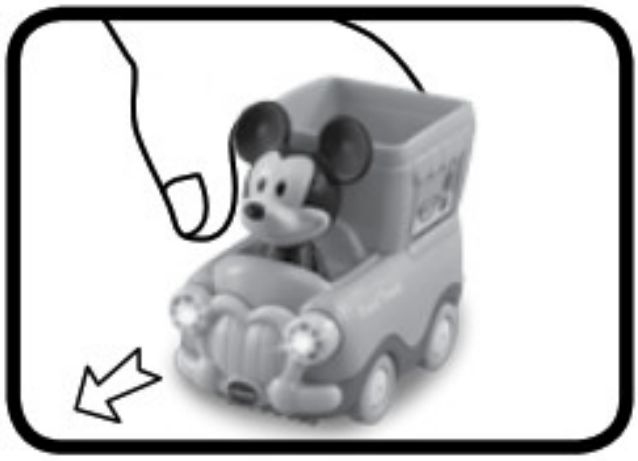

3. SmartPoint TM Locations For added fun, the Food Truck interacts with the Toot-Toot Drivers ® – Mickey Mouse Café. Simply place the Food Truck on one of the play set's three SmartPoint TM locations to see the Food Truck lights flash and hear fun sounds, short tunes, and phrases. The Food Truck even interacts with other Toot-Toot Drivers ® playsets (sold separately).



ACTIVITIES

Mickey Mouse Café

1. Lift Put the Food Truck on the SmartPoint TM Lift Platform and then move the Lift up and down.



2. Gate Turn the Gate Arm on the second floor to send the Food Truck down the Slide Track.



3. Castle Door Open the Castle Door and push the Food Truck through the tunnel for role-play fun.



4. Motor Skills Turn the Big and Small Gears on the Castle, open and close the window to see Mickey Mouse and friends, or twist the Rotary Sign and Chef's Hat on the top of the Castle for more tactile stimulation.



5. Pickup Window Remove the Takeout Bag from the top of the Pickup Window and place it in the bed of the Food Truck for more pretend play.



SONG LYRICS

Song 1
Load up my truck, all the food is to go
There's no time to waste, so let's hit the road
Delivering smiles and saying hello
To all the friends we meet as we go!
Song 2
Hey there, are you hungry?
I can cook you up something!
Song 3
My food truck is on the way,
On the way, on the way
My food truck is on the way,
Delivering meals today

MELODY LIST

1. Looby Loo
2. Do You Know the Muffin Man?
3. Pat-a-Cake
4. Dill Pickles Rag
5. Diddle, Diddle, Dumpling, My Son John
6. Hot Cross Buns

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with an entire set of new batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech ® products is accompanied by a responsibility that we at VTech ® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and

encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.
Australian Customers:
Phone: 1800 862 155
Website: **support.vtech.com.au**
NZ Customers:
Phone: 0800 400 785
Website: **support.vtech.com.au**


PRODUCT WARRANTY/CONSUMER GUARANTEES

Australian Customers:
VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia)
Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources, and more.
www.vtech.com.au

TM & © 2021 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003980-001
AU

Documents / Resources

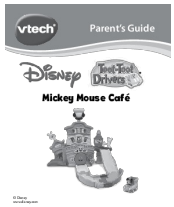	**vtech Disney Mickey Mouse Cafe** [pdf] User Guide Disney Mickey Mouse Cafe

References

- **Support : VTech Electronics**
- **Disney.com | The official home for all things Disney**
- **VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand**

Manuals+.