INSTRUCTION MANUAL


The Minirig is very simple to use... However, please take a minute to read through this manual in order to make the most of your Minirig

QUICK START GUIDE

To **turn on**, simply plug the audio cable into either jack socket - depending upon desired gain level.

To **turn off**, disconnect all audio cables.

To **charge**, connect the supplied USB charging cable to **ANY USB** port and plug the other end into the middle charging socket.

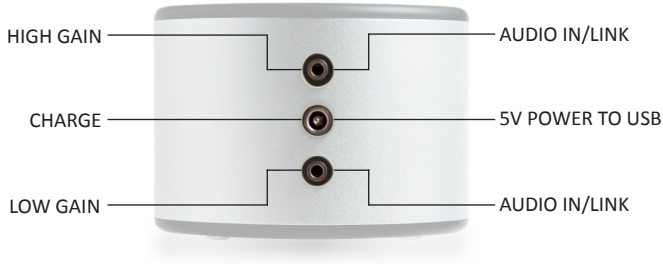

GAIN OPTIONS

The Minirig has twin inputs. These allow you to select a **LOW** or **High** gain level and to link multiple Minirigs together for a louder sound.

Plugging into the lower jack socket selects **LOW GAIN** use this input when listening at low volume or when playing audio from a computer/laptop and charging from its usb ports.

Plugging into the upper jack socket selects **HIGH GAIN** use this input when listening at maximum volume or when linking multiple Minirigs.

LED BATTERY INDICATER

The LED light on the top of the Minirig will turn on when the speaker is on or flash when it is charging.

The **COLOUR** of the LED will change to give an indication of the battery level. Use this table as a guide

GREEN	CYAN	BLUE	PURPLE	RED
100-75%	75-50%	50-25%	<25%	0%

Note that the transition from GREEN to BLUE will be a smooth colour change.

LED FLASHING

The LED will flash ON-OFF slowly when the Minirig is charging. The Flashing will stop when the Minirig is fully charged.

CHARGING

The Minirig battery has no memory effect. It is safe to charge at any time and leave on charge once charged (green). **However**, we advise against leaving permanently on charge to extend the life of the battery.

SPEAKER LIMITER

The Minirig has a built-in limiter to avoid clipping distortion at maximum volume. Try to avoid overdriving the inputs with high input signals (mainly from laptops or computers) to maintain the best audio quality.

PLACEMENT

As with any other speaker, placing the Minirig near to boundaries, such as on the floor and/or next to a wall will improve the bass responce. This is something worth experimenting with.

BATTERY

To prolong the battery life, do not store the Minirig with 0% or 100% battery for long periods of time. Instead, try to store with 50% charge (**CYAN LED** colour).

TROUBLESHOOTING

If you experience any problems with your Minirig the first thing you should do is check the cables and the USB port/music source. Most problems are fixed by replacing the cables. Also, try consulting the FAQ (news page) on the website: **www.minirigs.com**

WARRANTY

The Minirig is coverd by a 1 year warranty. Contact us directly through the website to get your Minirig repaired.

FINAL WORD

We would like to thank you sincerely for purchasing this Minirig. We really hope you like it and get years of enjoyment from it. Your great feedback, reviews and also your help in spreading the word about Minirigs is greatly appreciated. Finaly, don't forget to write your name on the bottom so it doesn't get lost when you link-up with friends. **ENJOY!**

© PASCE Ltd