
TISSOT

SWISS WATCHES SINCE 1853*


G10-212

User's Manual

Chronograph model

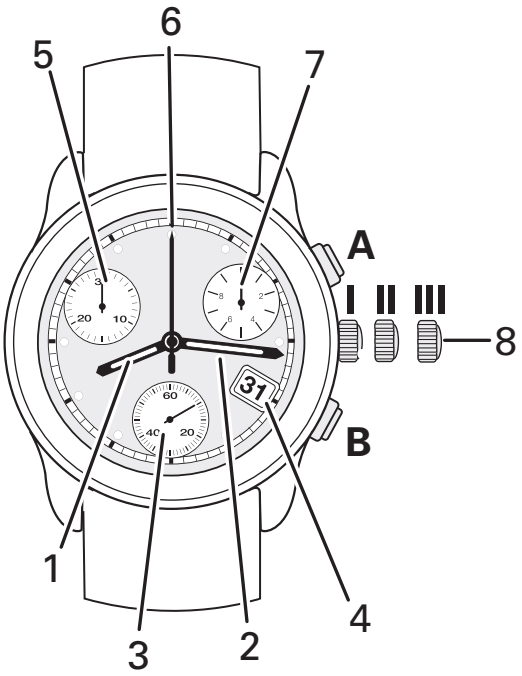

Football model

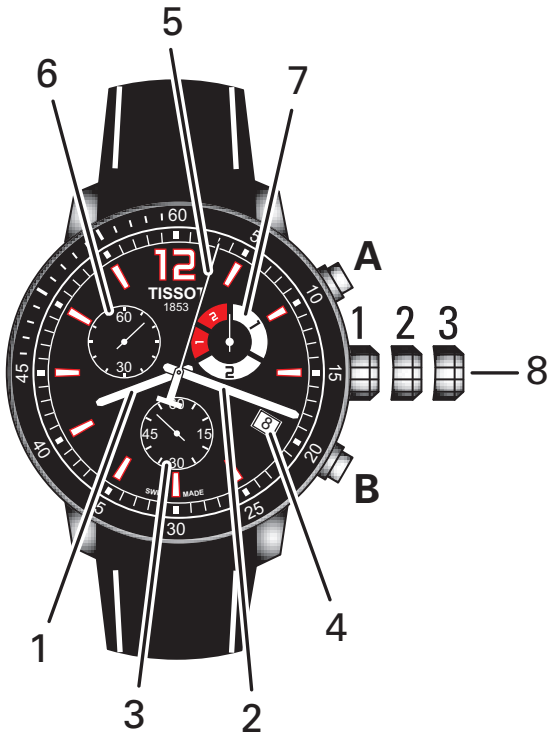

Display and functions

❶ Hour hand
❷ Minute hand
❸ Seconds hand (direct-drive)
❹ Calendar
❺ 30-minute counter
❻ 60-second counter
❼ 1/10 second counter

❽ 3-position crown
I Neutral position (screwed down*, not pulled out)
II Synchronisation and date setting position (unscrewed*, half pulled out)
III Time-setting position (unscrewed*, fully pulled out)

❶ Hour hand
❷ Minute hand
❸ Seconds hand (direct-drive)
❹ Calendar
❺ 45-minute counter
❻ 60-second counter
❼ Match phase counter

❽ 3-position crown
I Neutral position
II Date-setting position
III Time-setting position



**** Models with a screw-down crown:***
IA Neutral position (unscrewed, not pulled out)
IB Initial position (screwed down, not pulled out)