
EuropAce®

TRUSTED SINCE 1992

8KG TOP LOAD WASHING MACHINE

ETW 7800T

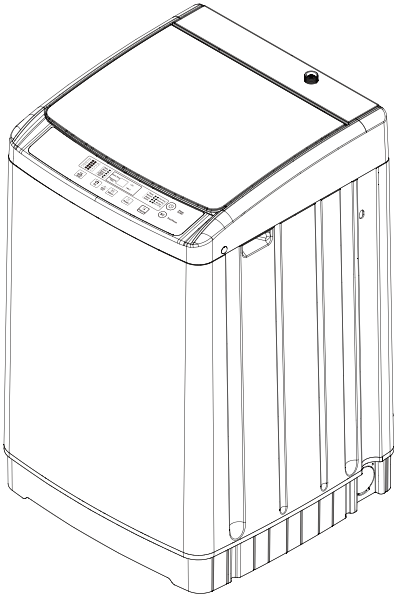

2 Years on Parts
5
Years Warranty on Motor

NO. 1 SINGAPORE BRAND OF KITCHEN & HOME APPLIANCES
EuropAce

SINCE 1992
SINGAPORE BRAND

Celebrate Fine Living!

Thank You For Purchasing EuropAce Top Load Washing Machine
For safety purpose, please read this operating instruction manual carefully before using and keep it for future reference.

Contents

Name of all components

Name of all components ---------- 2

Accessories ---------- 2

Suggestions ---------- 3

Control panel ---------- 4

Installation instructions

Installation ---------- 5

Connection of the inlet/drain hose ---------- 6

Connection of the power cord ---------- 7

Operating instructions

Preparation ---------- 8

Safety warning ---------- 12

Maintenance

Maintenance ---------- 14


Trouble shooting ---------- 15

Wiring diagram


Wiring diagram ---------- 17

Specifications ---------- 17

Name of all components

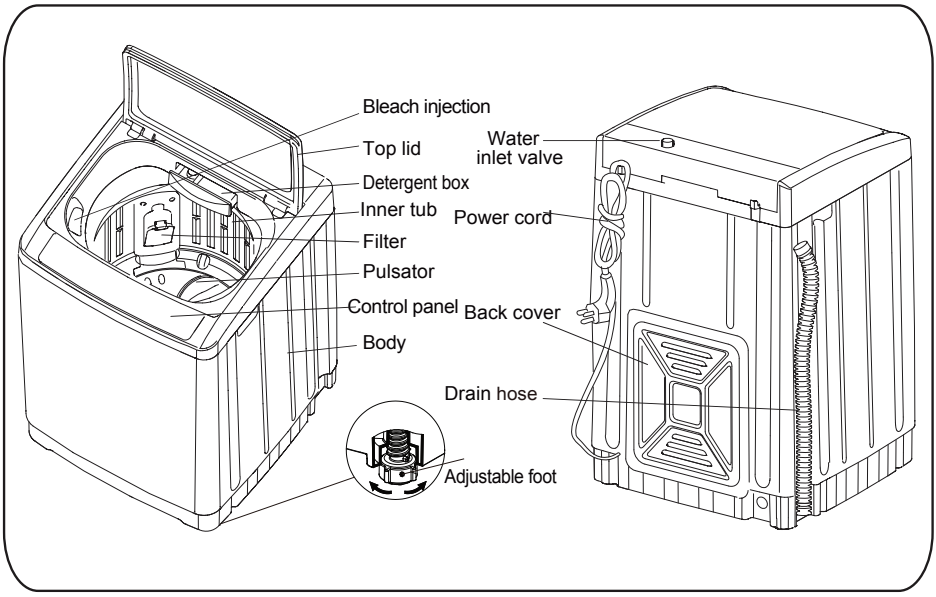

Accessories

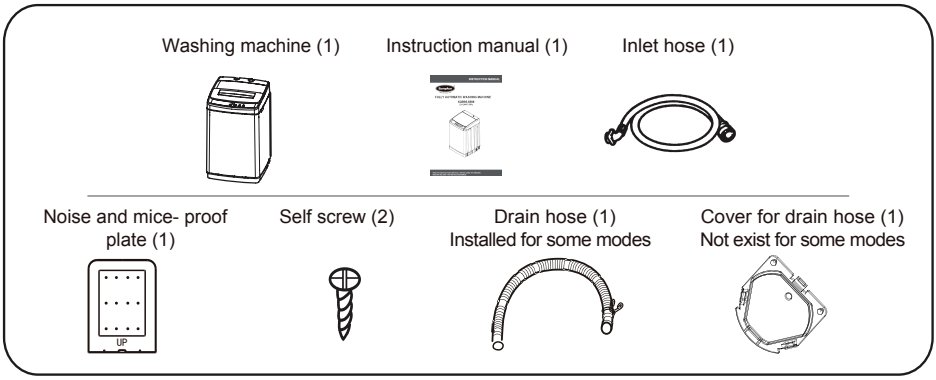

Suggestions

1 Low foam detergent is recommended.


2 . Please operate it under 0℃~40℃, as extra-high or extra-low ambient temperature may cause malfunction.

3 . If the washing machine has been stored under 0, it can be used after being placed under room temperature for about 4 hours to avoid machine damage due to residual ice in the washing machine.

4 . The washing and spinning capacity refers to the maximum weight of standard laundry during two operating fashions, which is different from that of the actual laundries. The cloth thickness, size and category of the laundries will impact the washing capacity. The volume of washing items should be appropriate for the normal turning of washing items within the washing machine.

5 . High water level should not be selected for washing volume below1.0kg to avoid water splashing during washing.

Control panel

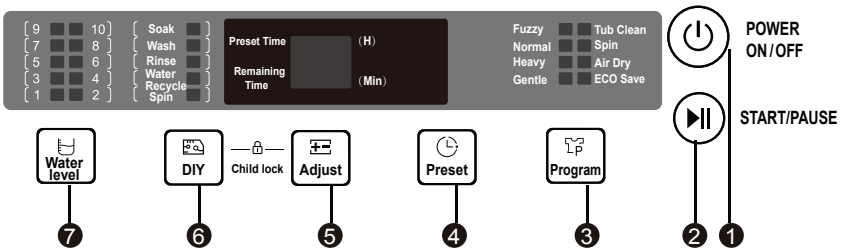

❶ Power On/Off button

Press power button to turn on or turn off the washing machine. If it is turned on beyond 5 minutes, and does not start the washing machine, or not to turn off, the power On/Off switch will be auto turned off.

❷ Start/Pause button

Press this button to start program, however press the button when machine running, the program will be paused.

❸ Program selection

Press this button to choose the program Fuzzy, Normal,Heavy,Gentle, Speedy, Single spin,Tub clean and Air dry.

Fuzzy : set the water level automatically according to the load of laundry.

Normal : to wash normal quality clothes.

Heavy: to wash the coverlet, jeans and other big clothes.

Gentle: to wash all kinds of woolens, silks and fine quality clothes.

Tub clean: to clean the tub when it is idled.

Spin: only for spin to dry the clothes faster.

Air dry: to dry the tub or clothes.

ECO Save: to save water(to wash mild dirt clothes).

❹ Preset selection

Use this button to program a delay start to the wash cycle.Each pressing can increase 1 hour for presetting time,and hold this button, time will increase rapidly.

❺ Adjust selection

After setting one process, you can press “Adjust” button to set according to your desire.

● With Soak process, press“Adjust” to choose the time for soak (min)

0 →10 →20 →30 →40 →50

* The function of Speedy,Single spin and Air dry are without soak process.
* The soak time for Tub clean cannot be changed.

● With Wash process, press “Adjust” button to choose time for wash (min).

15 → 16 → ...40 → 0 → 5 → 6 →...14

* The wash time for Tub clean and Speedy is prescriptive. Air dry and Single spin are without wash process.

● With rinse process, press “Adjust” to adjust the times for rinse.

2 → 3 → 0 → 1

* With Speedy or Tub clean, the times for rinse can not adjust.
* Air dry and Single spin are without rinse process.

● With spin process, press “Adjust” to adjust the time for spin (min).

4 → 5 → 6 → 0 → 2 → 3

* With Speedy or Tub clean,the time for spin can not be adjusted.

● With water recycle, press “Adjust” to choose yes or no.

n (no recycle) → y (recycle)

* After starting that funtion, it will remind user to keep water at last drain.

● With Single spin process, press “Adjust” to select spin time (min).

8 →12 → 4 →6

● With Air dry process,press “Adjust” to select spin time(min).

40 ⟶ 60

❻ DIY selection

After setting program or pausing the program, press “DIY” button tochoose:


soak→wash→rinse→ water recycle →spin

❼ Water level selection


Please select relevent water level according to actural laundry volum. Machine will adjust water level automatically under Fuzzy program.

Installation


Insert the mice-proof plate into the washing machine base

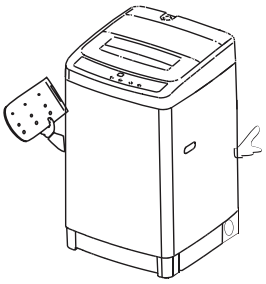


1. Remove the plastic accessory as below picture from the bottom of washing machine before using.




2. Take out mice-proof plate at the top of the machine.

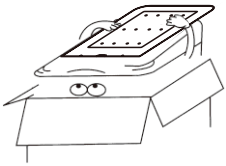

3. Lay down washing machine gently on the soft object. And insert the noise-proof plate into the base.

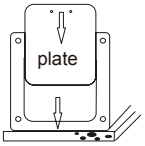


4. Fasten up the noise-proof plate with two screws.



Place washing machine on a firm and level surface, use level adjustable knob to adjust washing machine to be stable.

■ Place the washing machine at least 5cm away from the wall.

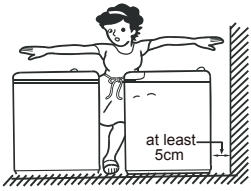








■ Alteration of adjustable foot

In order to prevent vibration during wash operation, you can loosen level adjustment knob and change the height of adjustable foot until the washing machine is stable, and then tighten it.

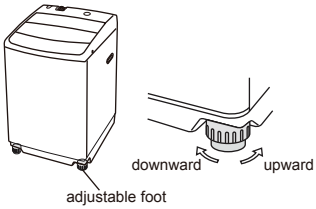

Connection of the inlet/drain hose

Connection of the inlet hose

1. Select appropriate type of outlet as shown in figure.




2. Before installation, running water through both faucet and inlet hose, to get rid of particles in water line that might clog the inlet valve screen.

3. Make sure that a seal washer is seating at the joint of inlet hose, then connect the inlet hose to fauct.


NOTE: Do not overtighten. Damage to the valve can be resulted.




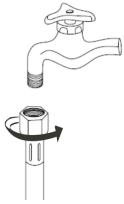

4. Make sure a seal washer seating at the joint of inlet hose, then connect the inlet hose to the water inlet valve.

NOTE: Do not overtighten. Damage to the valve can be resulted.

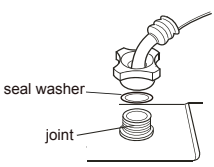

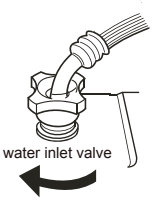


5.Check leaking

(1).Swing water inlet hose gently to confirm if it's suitable.

(2).Turn on the water faucet and check for leak.A small amount of water might enter the machine.You can drain this later.

Connection of the drain hose (some modes have been connected)


1. Press down the fix ring, and hitch it over the drain hose.

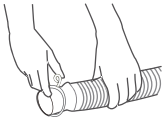


2. Press down the fix ring, and then push it to the drain outlet. Clasping the fix ring to make sure they are connected well.



3. Draw the drain hose to the outlet. Do not let the height of the drain hose exceed 6cm from the bottom to machine.

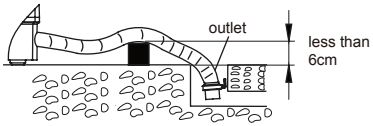


Change the direction of the drain hose (if necessary)

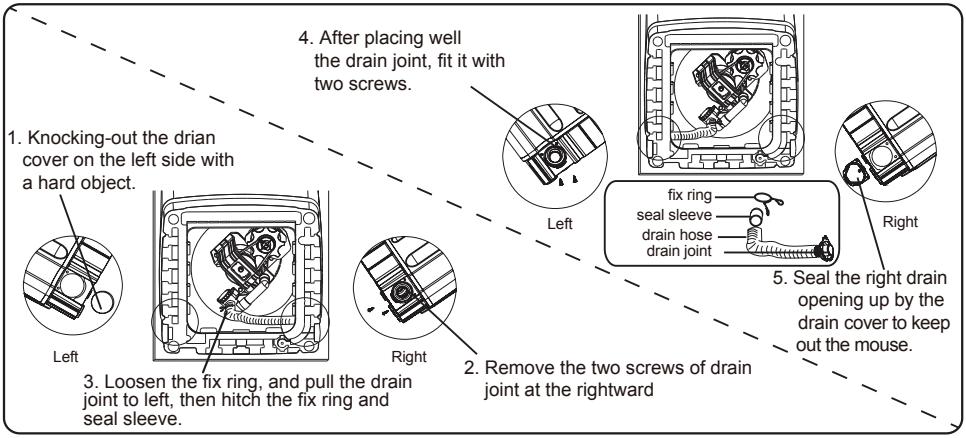


Connection of the power cord

The earthing which is indicated by yellow and green colour must be firmly connected to a special earthing.
Please call the technician to assemble.
The socket should have assembled the 3A fuse.

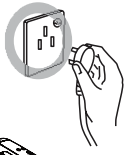


NOTE:

Never try to connect the earthing of the washing machine together with that gas pipe or water pipe, telephone cord or lightening rod.
Do not use the damaged cord because it could cause electricity leakage and fire.
In case cord is damaged, please contact the local service company , because it is removed and replaced with special tools.

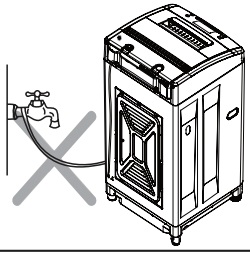


Operation

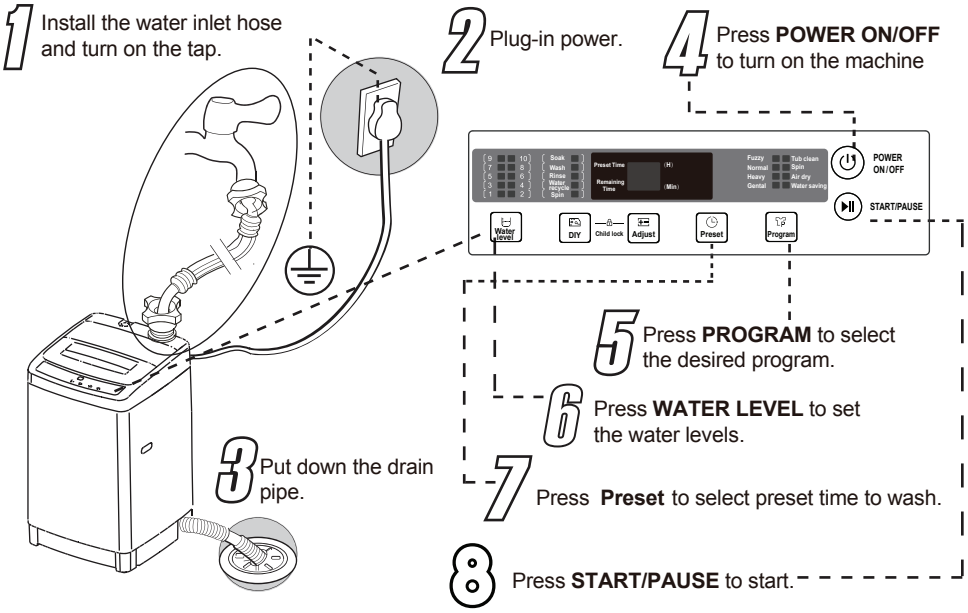

When preset operation finishes, machine will power off automatically.

2.Washing Program Selector

The model has 8 programs for different clothes quality. The default program is Fuzzy, you can select the desired program according to the need by pressing Program button.

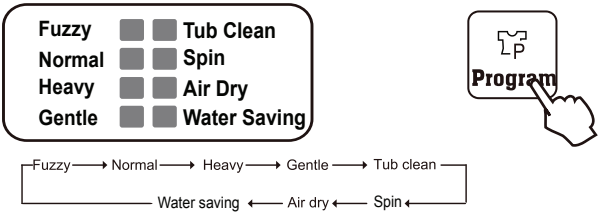

3.Water Level Switch

- Choose the water level according to the wash loading, And below table offer the quantity of the detergent or wash powder according to the wash loading.(For your reference)

Water Level	Wash Loading	Water Volume	Normal wash powder	Concentrated wash powder
			40g / 30L	25g / 30L
9-10	5.5-8.0kg	62L	83g	52g
		57L	76g	48g
7-8	4.0-5.5kg	52L	69g	43g
		47L	63g	39g
5-6	2.5-4.0kg	42L	56g	35g
		37L	49g	31g
3-4	1.0-2.5kg	32L	43g	27g
		28L	37g	23g
1-2	Less 1.0kg	24L	32g	20g
		20L	27g	17g

4.DIY Switch To Choose Suitable Wash Way

- After setting the program,you can press DIY and Adjust button to set soaking time, washing time,rinsing frequency,spinning time, or selecting water recycle according to the need.
- When the desire process has been set by pressing DIY button, its corresponding light will be on, then pressing Adjust button is available to change time for choosen process.



5.Preset selector

- Select automatic process or edit process by yourself
- Press Preset button continously, the indicating window show the needs time for washing (hr) .
  (Example: if the preset time is 3 hours, press the Preset button till the window shows 3)




- Please close wash lid completely.(otherwise machine will give alarm)
- During the process of counting down to preset time, all buttons except power switch and Preset button cannot be pressed.
- The washing machine works as program you have set and shows the left time as you preset.

6.Water recycle to save water

- Unless user set the water recycle function, the machine will not carry out that function. If need that function, press DIY until the indicator of water recycle lights on, then press Adjust until it shows “y”.
- The water recycle function only applys to the combination of “wash,rinse,spin”, “soak, wash,rinse,spin” or “rinse,spin”, the function will be skipped over by other combinations.
- When it is on,machine will not drain at last wash. It will alarm to remind the user to keep water untill the DIY button is pressed.
- During keeping water,pressing DIY button is available to stop or start draining.

7.Press Start/Pause button,start washing machine

- After pressing Start/Pause button,the washing machine starts to work.
- If it is needed to change Program,Water level,process,please press Start/Pause button to pause the washing machine and reset the model.After setting,the washing machine will start according to new setting.
- When machine is under Preset function, Start/Pause button cannot be pressed.

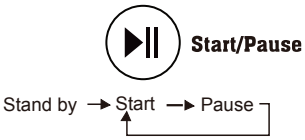

8.Wash over

- Do not open the lid during the operation, especially in spinning.
- The Buzzer will alarm after program finish, and it will power on of automatically.
- Unplug the power cord.
- Maintenance as shown page 14 at "maintenance".

9.Fuzzy function & memory function

- ***Fuzzy*** means machine can set the water level automatically according to the loading. If there is no water in the tub,press Power switch and Start/Pause button, it will start the function.
  If some water in the tub before press Start/Pause button, the Fuzzy function will fail to start up.
- Before starting Fuzzy,pressing Program,Adjust or Water level button will result in canceling the Fuzzy function; Before start the Fuzzy function, putting the laundry into the tub in advance is necessary, or the water level may be improper.
- ***Memory*** means if the operation is interrupted by cutting off electricity,and the machine can continue the unfinished program after re-power on.

10.Child lock

- The washing machine should only be used by adults. The children should not be allowed in area of machine unsupervised.To keep children from touching the control panel or playing with the appliance, Child lock function is a perfect design.
- Press and hold the two buttons (DIY & Adjust) simultaneously for 1.5 seconds to set the Child lock. If you want to deactivate this function, just repeat the above step.


Program Time Table

- Computer sequencer saves up 8 kinds of washing programs, all kinds of programs are shown as washing process form.


Program	Soak (min)	Wash (min)	Rinse (min)														Spin (min)	Tol (min)
			1st rinse						2nd rinse				3rd rinse					
Fuzzy		Inlet water 16	Drain water	spin 3	Inlet water	wash 3			Drain water	spin 3	Inlet water	wash 3					4	44
Normal		Inlet water 18	Drain water	spin 3	Inlet water	wash 3			Drain water	spin 3	Inlet water	wash 3					4	46
Heavy		Inlet water 18	Drain water	spin 3	Inlet water	wash 3			Drain water	spin 3	Inlet water	wash 3	Drain water	spin 3	Inlet water	wash 3	5	57
Gentle		Inlet water 5	Drain water	spin 2	Inlet water	wash 2			Drain water	spin 2	Inlet water	wash 2					3	28
Tub clean	Inlet water 20	Inlet water 21	Drain water	spin 4	Inlet water	wash 10											6	69
Single spin																	6	8
Air-dry																	38	40
Water saving		Inlet water 18															4	26

Safety warning


■ Never use the plug as shown.

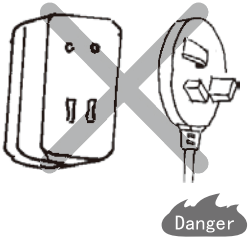


■ Do not only hold the cord while pulling out the plug.

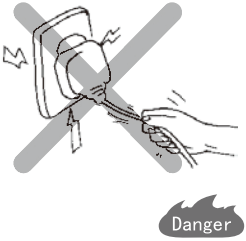


■ Do not let children play with the machine.

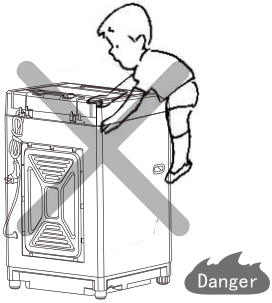


■ Do not put hands into the rotating tub.

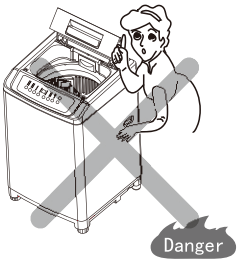


■ Keep the washing machine away from fire or heat.

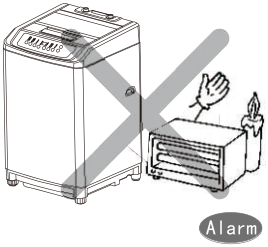


■ Do not clean the body of machine with volatile solvent such as petrol and methane. Also, do not pour these solvents into the tub for washing or drying purposes.

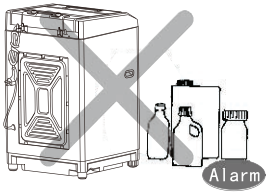


■ Do not expose washing machine under direct sunlight or rain.


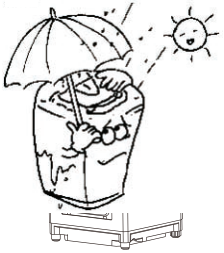


■ Do not place the washing machine in a damp place and do not pour water onto the control panel.

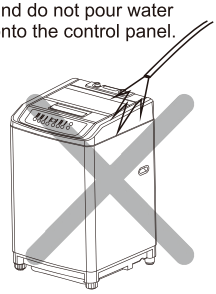

■ Never use water over 50℃

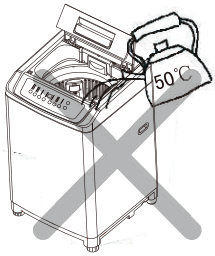


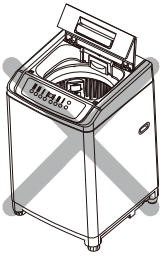■ Make sure the lid is closed especially during spin. 	■ The highest point of the drain hose must be within 6cm. 	■ Do not switch on when the water pressure isn't within 0.03MPa-0.85Mpa, so as to protect the inlet valve. 
The appliance is not intended to be use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.	If the appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. the power cord must be unplugged after using. Please use low foam powder detergent.	The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.


Maintenance

Clean the lint filter

1. Pully upward to remove the filter assy's.



2. Take the filter from the filter cover.



3. Clean and rinse it thoroughly.



4. Reinstall the filter.



Clean filter of inlet velve

■ Inlet valve filter is liable to block, clean it in time(about two months).

Clean the Machine

Note:

■ Clean the surface and tub of the washing machine with a soft cloth regularly, keep the up cover open about one hour and then close the door cover.

■ Do not pour the water to machine, or wipe with thinner, cleaner, kerosene, the essential oil, alcohol ect.

■ Wipe the dirty place with soft cloth soaking neutral soap water.



Trouble shooting

Trouble Shooting

Malfunction phenomenon / Reason

Start the washing machine from Rinse Process, the washing machine does not input the water	● The washing machine will start from the spin process in order to spin out the water and detergent from the clothes, then input the water (if there is water in the tub it will drain out the water first)
The wash process changes from Spin to Rinse	● When the clothes are not even or are on a single side of the tub, the washing machine will input the water and make the clothes balance and even.
The control button is useless to touch	● If want to change the program after the washing machine started, please touch the Start/Pause button to pause and reset.
Spin delay	● The washing machine will delay 15 to 60 seconds to enter spin process after drain or at single spin

Before maintenance


Problem	Checklist
Does not work	● Is electricity present? ● Is the tap opened? ● Is the plug loose, or fuse broken? ● Turn on the power or start button?
Fail to fill water	● Is the tap opened? ● Is the drain hose frozen? ● Is the water supply cut? ● Is the water inlet valve blocked?

Trouble Shooting Method

For some troubles, the machine buzzer will ring and alarm, and the indicator will flash.


Troubles	Indicator Light	Possible Cause	Solution
Breakdown	No indicator	The plug is badly connected to the socket or the switch is not activated.	Connect the plug properly or activate the switch
	No indicator	The socket is dead or the fuse is broken.	Contact the authorized technician
	No indicator	The current process is lost for power failure	Reuse only when power failure is eliminated
	Low voltage--no display High voltage--fuse broken	The voltage is too low or too high	Remove the plug and reuse it when the voltage comes to normality.
Standing drain	E1	The drain hose is blocked or put down,and the water cannot drain within 5 min	Check the drain hose,open the lid and then close it to continue drain process.
Spin malfunction	E2	The lid is unclosed during wash or spin process.	Close the lid.
A conflict between the tub and the cabinet during spinning	E3	The clothes are not laid evenly in the tub.The machine will try to make a automatic check and ajustment for 2 times,or if nothing available ,an alarm will be given.	Open the lid,distribute the clothes evenly in the tub and then close the lid to continue.
Insufficient water supply	E4	The tap is closed,water supply is cut off or water pressure is too low,so the water fails to reach to the desired level within 16 minutes.	Open the tap or use the machine after the water pressure comes to normal.Open the wash lid, close it and restart to input water.
Unavailable preset function	E5	The lid is unclosed during preset process(the process will pause and an alarm will be given)	Close the lid.
Abnormal water level sensor	E6	The sensor fails for short or open current,etc.and an alarm will be given.	Contact the authorized technician.
Unstoppable inlet or automatic drain	E7	Abormalities occur in PCB, inlet valve or water level sensor	Cut off the power after draining , and try to contact with the authorized technician.
Memory chips break down	E9	The chip cannot be accessed.	Turn off the machine.
Fail to power off or power on	Unending process or no indicator	PCB is broken.	Contact the authorized technician.

Wiring diagram

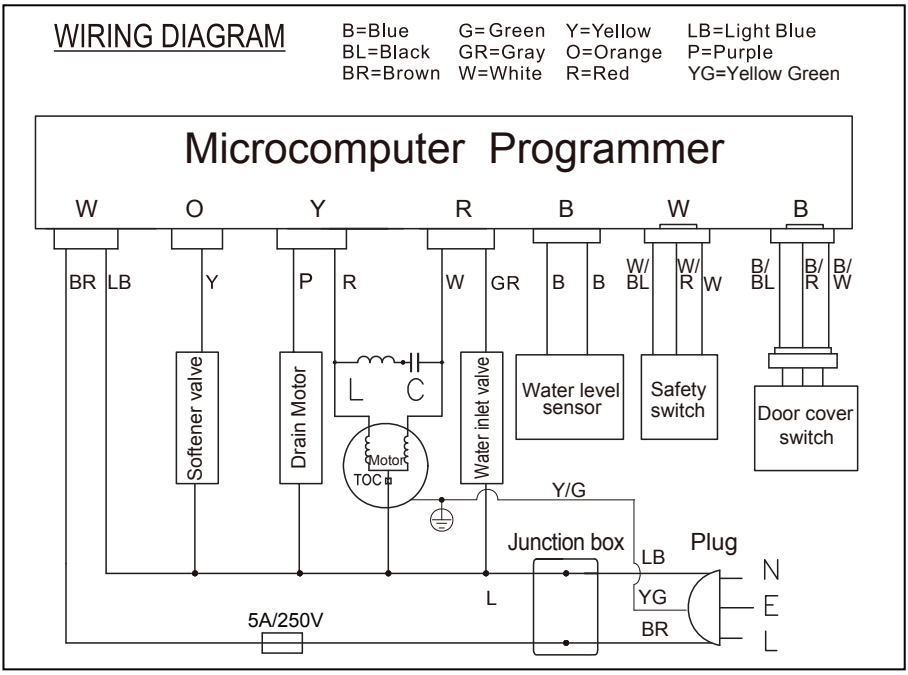

Specifications

Rated voltage	220-240V~	Rated frequency	50Hz
Wash/spin capacity	8.5kg	Net weight	33.5kg
Dimension	600mm*595mm*970mm		

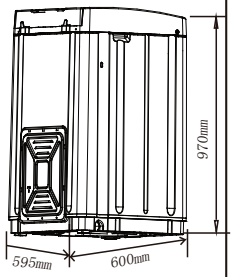

一、 注意事项：

1、 本产品属于 I 类电器，请您使用时注意用电安全：本机使用单相两极带接地的电源插座，插座必须可靠接地，而且接地端不应与煤气管道、自来水管道等公用设施连接。

2、 如果洗衣机通过插座板（接线板）或便携式电源装置连接电源，插座板（接线板）或便携式电源装置必须放置在不潮湿且不易被水溅到的位置。

3、 不要与其它电器合用一个插座，插头与插座配合松动时不要使用。

4、 电源插头的插片及插片的安装面上若有灰尘，请仔细用干布擦净。

5、 洗衣机正常使用时，电源线插头应便于用手插拔。停电、移动、不用或清理时，一定要把电源插头拔下并关掉水龙头。注意：请不要用湿手去插、拔电源线插头。

6、 不要过度弯曲、拉伸、扭转、捆扎或让重物重压电源线。

7、 本机电源线连接方式为 Y 连接，如果电源线或电源插头损坏，为避免危险必须由我司特约维修点或我司售后服务部门专职人员更换。

8、 洗衣机不能安装在浴室等潮湿的地方，绝对不能用水冲洗，也不要将湿衣物等放在洗衣机的控制板上。

9、 请避免阳光直接照射洗衣机，也不要靠近暖气等热源。

10、 本机请勿放置在地毯上使用，无上排水功能的机型也不要放置在无地漏的地方使用。

11、 此产品需要与水连接，必须尽可能使用新的水管，旧的水管是不可以再利用的。

12、 本机适用水压 0.03MPa~0.85MPa，并不要使用 50℃以上的热水。

13、 请确保水龙头与进水管接头的可靠安装，并确保进水管接头与进水管切实

1、 不要将任何热的、重的物品（如盛有热水的壶等）放在洗衣机上。

2、 无人照看的儿童或残疾体弱者不得使用此机器。

3、 请绝对不要将煤油、汽油、香蕉水、酒精等易燃性物质或沾有此类物质的洗涤物放入或接近洗衣桶。

4、 请勿洗涤雨衣、自行车罩、羽绒制品、弹力棉制品等防水性或易浮起的衣物，以免在洗涤或脱水时异常振动或损伤衣物。


5、 洗衣机在脱水过程中，请勿随意打开门盖。

6、 洗衣机在工作时，不要将手伸入运转中的洗衣机桶里面，即使转速很慢也是危险的。要特别注意不要让儿童攀爬洗衣机，以免发生危险。

7、 请绝对不要自行分解、修理或改装本机。

二、 部件说明及装箱清单：

1：部件说明

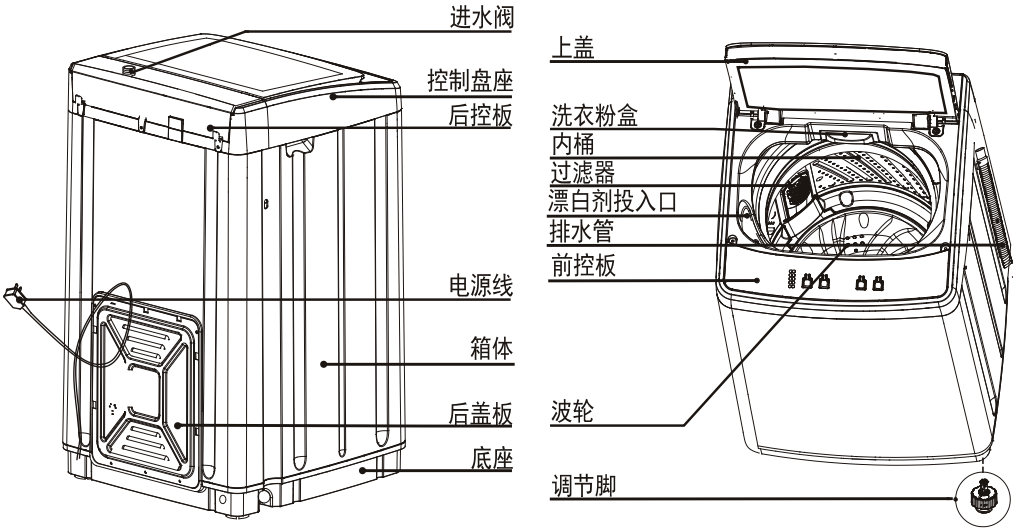

2：装箱清单

序号	装箱单	数量	备注
1	全自动洗衣机	1	
2	进水管	1	
3	底盖板	1	
4	说明书	1	
5	排水口封盖	1	部分机型无此配件
6	排水管部件	1	部分机型已随机安装
7	自攻螺钉	2	

三、 使用建议：

1、 本机使用过程中建议采用低泡洗衣粉。

2、 建议在 0℃～40℃的环境中使用本机，过低或过高的环境温度可能会引起本机故障。

3、 如果洗衣机在 0℃以下的环境中贮存过，必须在室温环境下放置约 4 小时后才能使用，以免机内残水结冰损坏整机。


4、 洗衣机的洗涤、脱水容量是指一次可洗涤、脱水干燥状态下标准洗涤物的最大重量，与实际的洗涤衣物有所不同。洗涤衣物布质的厚度、大小、种类都会影响实际洗涤容量，洗涤物的放入量请以洗涤过程中洗涤物能正常翻转为宜。

5、 1.0kg 以下的洗涤物量不应选择高档水位，以免洗涤过程中水滴飞溅。

四、 安装方法：

1、 安装注意事项：

- 选择在干燥、无阳光直射的地方放置洗衣机。
- 洗衣机要放置在平整、坚实的地面，并与墙壁保持 5cm 以上的距离，以免脱水时碰撞墙壁产生噪音。

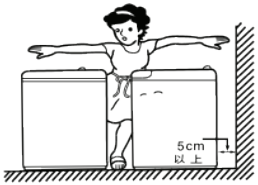


- 请勿将洗衣机放置在倾斜、凹凸不平的地面；请勿将洗衣机放置在不稳定的支架或者地台上；使用时，请取出底部泡沫及塑料销座，以免损坏洗衣机。








- 洗衣机尽量放置平稳，如有必要，可调节洗衣机正面的支撑底脚（调节脚）使洗衣机保持水平。

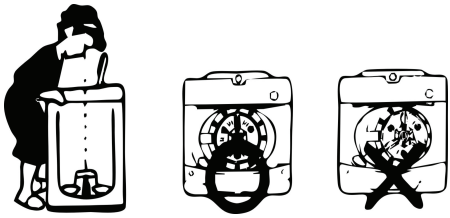


（1）、可目测洗衣机是否水平

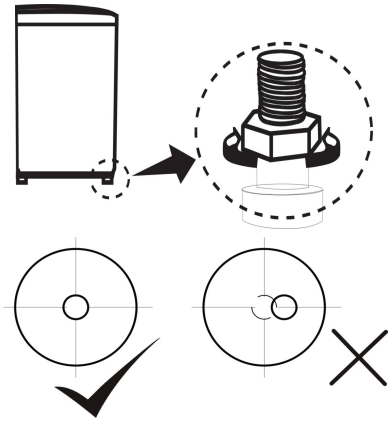

（2）、若自带水平仪，请将水平仪中的气泡置中。

2、 安装底盖板：

- 底盖板放在洗衣机包装箱顶部与泡沫之间，请拆包装时拿出。
- 请将洗衣机向侧方轻轻放倒在柔软的物体上（小心不要磕碰箱体）。
- 将底盖板沿着底座上的安装槽插入，直至其安装到位。
- 用螺钉（附件袋内）将底盖板与底座固定。
- 将洗衣机轻轻扶起，放稳。

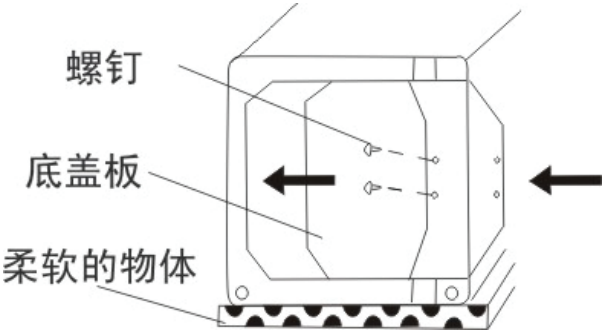

3、 安装进水管：

（1）进水管与水龙头的连接（请按实际进水管选用）

（普通进水管）

普通水龙头
的安装方法



第一步：进水管接头安装




图1

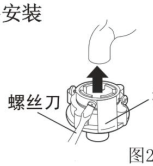


图2

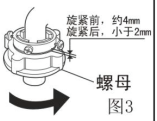


图3

1、从进水管部件上取下进水管接头，调整螺钉套在水龙头上，如水龙头口径偏大，则取下衬套;如图1
2、均等旋紧进水管接头上的四颗螺钉;如图2
3、揭下标记牌，旋紧紧固螺母。如图3
注：旋紧紧固螺母前，螺纹露出约4mm；旋紧后，螺纹露出小于2mm。

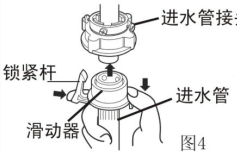


图4

第二步：连接进水管接头与进水管

压下滑动器，将进水管插入进水管接头并将锁紧杆挂住进水管接头，放下滑动器到发出“啪”的声音即可。如图4

洗衣机专用水龙
头的安装方法：



将快速接头插入合格的洗衣机专用水龙头，并向上推牢即可，同普通水龙头安装第二步。

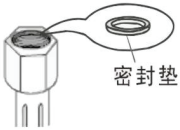


图5

（双螺纹进水管）


螺纹水龙头
的安装方法





1、确保进水软管接头内的密封垫安装平整






2、按照图示，将进水软管接头对准水龙头，安装图示方向旋紧进水软管上的螺母

（2）、进水管与洗衣机的连接


a、连接前请检查进水管螺母内的密封垫是否脱落

b、将进水管螺母套在进水阀接头上

c、拧紧进水管螺母

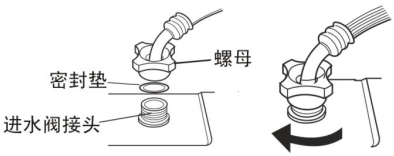


4：安装排水管（部分机型排水管出厂前已经安装好）

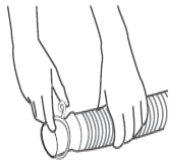

a:按下抱箍将其套在排水管上



b:按下抱箍并将其推入底座上的排水口

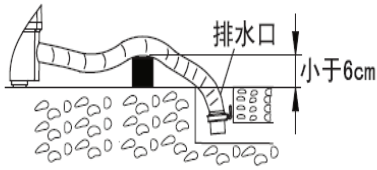

c:将排水管引入排水口，排水管不能缠绕且支撑高度应低于6cm

五、 洗衣前须知：


1. 洗前检查:

- 进水管是否接好？水龙头阀门是否打开？
- 电源线是否插接好？电源插座是否可靠接地？
- 洗衣机是否放置平稳？
- 排水管是否放下？且没有缠绕打结？
- 若将排水管挂起，则排水管挂起高度应不大于 0.9m，是否过高？

2. 洗涤物的预处理:

- 确认洗涤物有无特殊要求，是否可以水洗、机洗。
- 一定要除去钥匙、别针、硬币、发夹、砂子等坚硬物体。
- 有油污或易褪色的衣物，应分开清洗。
- 衣物上有拉链、坚硬饰物的，请将拉链拉好，并将衣物由里向外翻。
- 衣物上长带请打结、系紧，钮扣扣好。
- 有些衣物（如花边、尼龙袜、化纤镂空编织）请放入洗衣网内洗涤。（洗衣网请自备）
- 附有较多泥灰的衣物，请先除去污物，特别脏污的部位，可事先喷洒洗涤剂，这样更容易清除顽固污渍。

六， 控制面板：

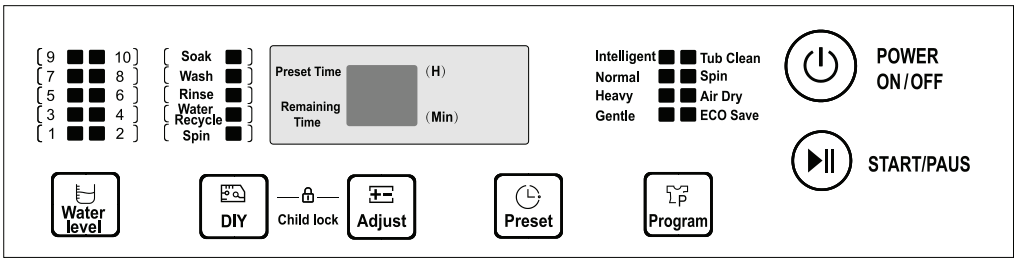

1. 指示灯状态及含义

- 一闪一亮，显示程序正在运行。
- 故障时数码管显示Ｅ1~Ｅ7，Ｅ9，表示异常。
- 程序运行时数码管显示剩余时间。
- 程序选择时显示程序默认时间。
- 预约时显示预约时间。
- 童锁时，显示童锁代码：ＣＬ。

2. 按键使用说明：

1）“电源开/关”按键：

- 按动“电源开/关”按键，接通电源或切断电源

2) “启动/暂停”按键：

- 接通电源后，按动“启动/暂停”按键，启动或暂停洗衣机程序。

3) “程序”按键：

- 智能：按照衣物多少自动调节适应水位的标准洗涤程序。
- 标准：常规洗涤程序。
- 大物：较大、较厚衣物的洗涤。
- 轻柔：毛织品或内衣洗涤。
- 洁桶：洗衣桶清洁的程序。
- 单脱：只对衣物进行脱水的程序。
- 风干：洗衣桶干燥。
- 节水：省水程序的洗涤。

4) “水位”按键：

- 根据洗涤衣物的多少，可按动“水位”按键选择合适的水位；智能程序

5) “预约”按键：

可对预约时间进行设置。

6) “洗涤”按键：

可对洗涤时间进行调节设置。

7) “漂洗”按键：

可对漂洗次数进行设置。

8) “脱水”按键：

可对脱水时间进行设定。开机后单独选择该按键可实现单脱功能。

9) “童锁”按键：


- 程序启动后，同时按住“预约”和“洗涤”按键 1.5 秒，蜂鸣一声，洗衣机进入童锁状态。重复操作可解除童锁状态。

七、 操作方法：

1.一般操作方法

1) 按动“电源”按键，开启电源。

2) 按动“程序”按键，选择合适的全自动程序。



- 开启电源后，洗衣机自动设定为“智能”程序，如需选择其它全自动程序，可按动“程序”按键至相应的程序灯亮。

3) 按动“水位”按键，选择合适的水位。

- 开启电源后，洗衣机自动设定为模糊功能，无水位显示，如需选择其他水位可按动“水位”键进行选择。
- 开启电源后，若洗衣桶内有水，则洗衣机不能进入模糊功能，直接进入程序洗衣，默认 5 水位。

4) 按动“启动/暂停”按键，系统启动

- 系统启动后，如需改变设定程序，可先按动“启动/暂停”键暂停系统运行，然后按动其它按键进行设定，最后再按动“启动/暂停”键，系统将按照新设定的程序运行。
- “预约”启动后，“启动/暂停”按键无效。

5) 关闭上盖，洗衣机进入运行状态。

- 洗衣机在运行过程中请不要随意打开上盖，特别是脱水过程中，避免发生意外。

6) 洗衣结束，自动蜂鸣并断电。

2.自编程程序操作方法

1) 按动“电源开/关”按键，开启洗衣机，按“程序”键，选择合适的程序
2) 按动 “洗涤”、“漂洗”和“脱水”、“水位”和“预约”功能按键设置合适的程序的洗涤时间、漂洗次数、脱水时间，合适的水位和合适的预约时间，有无“留水”功能。
3) 按动“启动/暂停”按键，启动系统。

4） 关闭上盖，洗衣机进入运行状态。

3.“留水”功能的操作方法

●开启电源后，本机默认设定为无留水功能，“留水”指示灯灭。如需启动此功能，可在程序运行中至最后一回排水前按“漂洗”键，使“留水”灯亮若不需也可再按“漂洗”键，使“留水”灯灭。

●选用留水功能后，在程序运行到最后一次排水时，“留水”灯闪亮，并每隔五分钟报警一次，提示用户接水。用户准备好接水容器后，按动“漂洗”键，“留水”灯灭，开始排水。此排水过程中按动“漂洗”按键可实现排水止排水切换。

●若用户在最后一次排水时不按动“漂洗”键，则“留水”灯一直闪亮，并每隔五分钟报警一次，提示用户处理，直到按下“漂洗”键，才继续下一步

4.“预约”功能的操作方法

●开启电源后，用户想启动预约程序，可以在设置好程序、水位、过程等选项后，可以按动“预约”键选择所需的预约时间再按“启动”键启动程序。“预约”启动后，数码管显示预约剩余时间（以小时计），“.”灯一闪一亮。

●预约”启动后，除“电源 开/关”键外其它键无效。


●“预约”启动后，请关闭洗衣机上盖，否则程序将暂停并报警。

●“预约”启动后，想改变运行程序或取消预约需切断电源重新设定。


八、 维护保养：

1. 清洗过滤器。

- 请按住卡勾拉出过滤器。

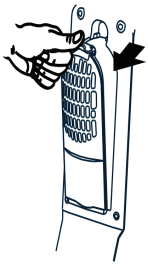


- 将过滤网从过滤器罩上取下。

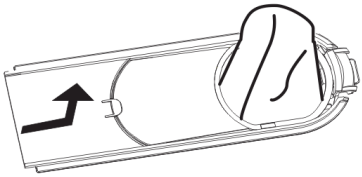

- 将过滤器网袋由内向外翻，并在水中清洗，清除线屑。




- 将过滤器安装到原位。

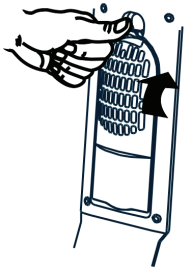

2. 清洗进水阀过滤网。

- 进水阀的过滤网易被杂物堵塞，阻碍进水，请定期（一般约 2 个月）清洗一次。

3. 泵过滤器清洁

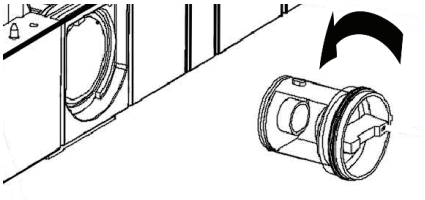

- 按逆时针方向旋转可拧下排水泵的过滤器盖即可清洗排水泵内部，再将过滤器盖清洗后装回过滤器按顺时针方向拧紧。

4. 整机清洁。

- 请用干净的软布将洗衣机表面及桶内水珠擦干净，将上盖打开一段时间（约 1 小时）风干后，再关上上盖。
- 请勿在洗衣机上直接泼水，或用稀释剂、清洁剂、煤油、挥发油、酒精等擦拭。
- 特别脏的地方可用浸有中性肥皂水的软布进行擦拭。

九、 故障检修：

1. 常见非故障现象

- 洗衣机初次使用，排水管内可能有少量的水流出，这是出厂性能检测时残存的水。
- 在洗涤或漂洗过程中，有时会有进水现象，这是由于水位下降而进行的自动补水。
- 洗衣机设置启动漂洗程序时，不注水，洗衣机默认的漂洗程序是从排水和脱水开始的。
- 脱水开始后，脱水桶时停时转，这是为达到脱水效果而设定的间歇脱水
- 脱水中途，有时会出现注水漂洗现象，这是因为脱水时衣物偏置而自动进行的平衡纠正。
- 排完水后，脱水启动延迟，这是洗衣机默认设置。
- 洗衣过程中按键操作无效，这是洗衣机默认设置，需要暂停后才可操作

2. 常见故障及排除方法：

故障种类	故障显示	原 因	解除
完全不工作	无显示	插头未插好，电源开关未按下	插紧插头，按下电源开关
	无显示	插座无电或熔断器熔断	请电工检查插座和熔断器
	无显示	停电造成程序消失，来电重新操作运行	来电后开机重新按需要操作
	电压过低时无显示、过高时可能使熔断器断路	电压过低或者过高	拔掉插头，等电压正常后使用
排水不畅	E1	排水管未放下或被堵塞,造成 5 分钟后水排不完	检查排水管并排除故障后，打开机盖再合上机盖，重新进入排水
不洗涤或不脱水	E2	洗涤时未合盖或脱水时开盖	盖好上盖
脱水时碰外壳	E3	由于桶内衣物偏置在一处,脱水不平衡碰到外壳，此时洗衣机会自动进水修正，两次无效则报警	打开上盖，人工将衣物放均匀，盖好上盖启动
注水不足	E4	水龙头未开、停水或者水压过小，16 分钟内未注到设定水位	打开水龙头或等水压正常后再用,开合上盖一次，重新进入程序
预约无效	E5	预约开盖	盖好上盖
水位传感器异常	E6	水位传感器故障，断路或短路，则自动报警	请专业人员维修
进水不止或自动排水	E7	电脑板、进水阀或者水位传感器等异常	排水并关掉电源，请专业人员维修
记忆芯片故障	E9	不能读写	请专业人员维修
不断电或不能开机	无显示	电脑板故障	请专业人员维修

注意：当您检查各项并排除故障后，再启动洗衣机，如仍有异常，请拔下电源插头并尽快拨打本公司客户服务电话。

十、规格表：

型号	ETW 7800T	
电源	220-240V/50Hz	
额定洗涤/脱水容量（kg）	8.0	
额定输入功率（W）	洗涤：420	脱水：270
使用水压（MPa）	0.03~0.85	
防水等级	IPX4	
噪音	洗涤：62dB(A)	脱水：72dB(A)
产品尺寸（mm）	600*595*940	
产品包装尺寸（mm）	650*650*990	
产品净重（kg）	33.5	
产品毛重（kg）	37	

Product Warranty

The Warranty Card is not provided in the product packaging. You can register the product warranty online at our website https://www.europace.com.sg/ewarranty/ within 7 (seven) days from the date of purchase. You will enjoy an additional 3 months of the product standard warranty when you register online. Please produce your E-warranty registration when requesting for repair and service at our Service Centres nearest to you.

In the event, if you are unable to register the product warranty online you must produce your purchase receipt/tax invoice and such other documentary proof of purchase of the appliance when requesting for repair and service.

Product Warranty Coverage

You may find out your product warranty coverage at the link below before calling our Customer Service Hotline (65) 6457 3678 or visiting our Service Centre.

http://europace.com.sg/ewarranty/src/cupload/settings_pdf/1/1-1-2c899-1563960978-WARRANTY-COVERAGE-19_0221.pdf

TERMS & CONDITIONS OF WARRANTY (THIS WARRANTY IS VALID IN SINGAPORE ONLY)

Your appliance is warranted against faulty design, workmanship or materials for a period of 12 months unless otherwise stated from the date of purchase, subject to the following terms & conditions herein below:-

1) That the owner shall register the product warranty online at our website www.europace.com.sg within 7 (seven) days from the date of purchase.
2) That the appliance shall be used solely for domestic purposes and not for commercial purposes or any other purposes whatsoever and used strictly under the instruction for operation as provided by the manufacturers or the appliance.
3) That if any time during the warranty period any part or parts of this appliance is removed, tampered, modified, adjusted, altered, handled or repaired in any way whatsoever by any persons other than those authorized by Strategic Marketing (S) Pte Ltd, this warranty shall immediately cease to be valid and become void.
4) That the owner shall produce the E-warranty registration or tax invoice/receipt and such other documentary proof of purchase of the appliance to our satisfaction as we may deem necessary when requesting for repair and service.
5) That our decision on all queries relating to complaints as to defects either of workmanship or of materials shall be conclusive and the owner shall agree to abide by such a decision. Any appliance or defective part which has been replaced shall become our property.
6) The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or removing from these terms and conditions.
7) That this warranty shall cease to be valid and void if the appliance is exported or relocated from Singapore.
8) That there shall be no removal, alteration, defacement, or made illegible/tampered or any kind of the serial number on the appliance.
9) That the owner shall be fully responsible for the due delivery and collection of the appliance for any work done according to this warranty. Transportation expenses incurred for delivery or handling the appliance are chargeable to the owner.
10) Transportation and labour charges apply after the full parts warranty expires. Refer to https://www.europace.com.sg/ewarranty/ for more information.

In addition to the above, this warranty shall be subjected to the following limitations and exclusions:-

a)The appliance shall be warranted by STRATEGIC MARKETING (S) PTE. LTD. from date of purchase only for a period of:-

10 years - Heating Element warranty applies to selected models of Storage Water Heaters.
- Tank Leakage warranty applies to selected models of Storage Water Heaters.

8 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

10 years - Compressor warranty applies to selected models of Refrigerators.

6 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).
- Compressor warranty applies only to selected models of System Air Conditioners and Portable Air Conditioners.

5 years - Compressor warranty applies to Refrigerators, Freezers, Wine Coolers, Portable Air Conditioners & Casement Air Conditioners (Outdoor warranty). Transportation is chargeable from the 2nd year to 5th year.
- Compressor warranty applies to Dehumidifiers (Walk-in warranty)
- Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

3 years - Full parts warranty applies only to selected models of Air Purifiers & selected models of Dehumidifiers (Walk-in warranty).
- Heating Element warranty applies only to selected models of Garment Steamers (Walk-in warranty).
- Motor warranty applies only to selected models of Jet Turbine Fans & selected models of Air Coolers (Walk-in warranty).

2 years - Motor and internal parts warranty applies only to selected models of Stand Fans, selected models of Oscillation Power Fans & selected models of Air Purifiers (Walk-in warranty).
- Heating Element warranty applies to selected models of Electric Ovens & selected models of Kettle Jugs. (Walk-in warranty)
- Motor warranty applies only to selected models of Jet Turbine Fans (Walk-in warranty).
- Full parts warranty applies only to Wine Coolers of 34 Bottles & above.

1 year - Full parts warranty applies to *Lifestyle Products (cash & carry items), Small Kitchen Appliances, Fans, Air Coolers, Wine Coolers of 20 Bottles & below, Mini Bar Fridge (Walk-in warranty)
- Full parts warranty apply to Refrigerators, Air Conditioners & Freezers (Outdoor warranty).

Check out the warranty coverage of your appliance at www.europace.com.sg

b) The owner waives all or any claims to compensation monetary or otherwise which he/she may be entitled to and shall agree to accept any compensation whatsoever by way of additional repairs or otherwise which we in our absolute discretion may deem fit to offer. The giving of compensation shall be subjected to the other provisions of the warranty.

c) This warranty shall not be transferable, negotiable or assignable to any third party.

d) The warranty does not include transport delivery or handling charges incurred in the transportation of the appliance to and from Strategic Marketing (S) Pte Ltd.

e) Damage caused during transit where the appliance is transported for servicing, repair, or in relation thereof or connection therewith.

f) In respect of refrigerator and air conditioner only, upon the expiry of 12 months from the date of purchase, this warranty will not cover transport, refrigerant and labour to install a new compressor.

g) This warranty will not cover chemical cleaning, maintenance service, general service and overhaul, which if confirm is chargeable.
h) Defects or fault in the appliance which has been used for commercial purposes or which have been rented/leased or which have been otherwise subject to other than household use.
i) Claims for damaged/missing parts after 3 days from the original date of goods received will not be valid.
j) This warranty and the Replacement Scheme does not particularly cover damages and/or defects arising from
• Usage of wrong electrical supply/voltage.
• Usage not according to the Instruction Manual provided by the manufacturers.
• Misuse, accidents, negligence, abuse, improper installation, or any manner of tampering.
• Normal wear and tear.
• Corrosions rusting or stains.
• Scratches, dents on the unit body, casing or paintwork of the appliance.
• Act of God, fire, flood and civil unrest.
• We shall not under any obligation, legal or otherwise to repair this appliance or one to one exchange if the same shall be required as a result of losses, damages, and malfunctions arising from any of the causes mentioned in the paragraph.
k) All accessories, external parts and extruded parts such as front panel, casing, door, glass cover, glass door, cable/cord assembly, batteries, adaptor, plug, remote control, control knob, buttons, filter, UV lamp, oven tray, wooden rack, exhaust hose, fixtures, panels, cover, lid and lever, plastic parts, fan blades, blade guard, inner pots, brushes, water tanks, attachments made of glass, plastic and/or porcelain, detachable parts, and other option items are excluded from this warranty.
All services provided after the warranty period will be chargeable at standard rates determined by STRATEGIC MARKETING (S) PTE. LTD.
The terms and conditions of this warranty shall be varied except with the written and express consent or agreement of Strategic Marketing (S) Pte. Ltd. While Strategic Marketing (S) Pte. Ltd. endeavours to repair any defects after the warranty period, it is subject to availability.
It is hereby expressly provided that any liability of Strategic Marketing (S) Pte. Ltd. for any loss or damage whatsoever arising from, relating to or in connection with the purchase of the appliance shall not exceed the purchase price (excluding installation costs) of the appliance. Similarly, Strategic Marketing (S) Pte. Ltd.'s liability for any breach of this warranty shall be limited to the purchase price (excluding installation costs) of the appliance.
* Lifestyle Products - Garment Steamer, Humidifier, Dehumidifier, Air Purifier, Mini Bar-Fridge.
* Walk-in warranty - Customers are obliged to bring the warranted products to Strategic Marketing (S) Pte. Ltd. Service Centre for repair/service during the warranty period.

Scan QR Code for the online Warranty Registration

Ver. 20 _0312

For more technical details / enquiries, please visit:

EUROPACE SERVICE CENTER

10 Changi South Street 3 #06-01 Singapore 486147
Tel: (65) 6457 3678 | Fax:((65) 6741 0728
Operating Hours: Monday - Friday: 9am - 5pm | Saturday: 9am - 12pm
Email: service@strategic.com.sg
www.europace.com.sg | www.strategic.com.sg

RELATED PRODUCTS & MAIN CONTACT HOTLINE

System Split Aircons | Tel: 6858 0801| Email: systemac@strategic.com.sg (Twin City)
Portable & Casement Aircons | Tel: 6291 0800 | Email: portableac@strategic.com.sg (Jia Yue)
Refrigerators, Washing machines, Cookers & other major appliances |
Tel: 6289 0802 | Email: mda@strategic.com.sg (TnG)

Celebrate Fine Living!

This product is distributed by Strategic Marketing (S) Pte Ltd

If there is any technical amendment for the product, it will be edited on the updated version of the instruction manual without prior notice. The pictures shown in the instruction manual is only for illustration purpose only. If the appearance or colour of the product is modified, please refer to the actual appliance as a standard.